

IMPORTANT

WARNING/CAUTION/NOTE

Please read this manual and follow its instructions carefully. To emphasize special information, the words

⚠ WARNING, **⚠ CAUTION** and **NOTE** have special meanings. Pay special attention to the messages highlighted by these signal words.

⚠ WARNING

Indicates a potential hazard that could result in death or injury.

⚠ CAUTION

Indicates a potential hazard that could result in vehicle damage.

NOTE:

Indicates special information to make maintenance easier or instructions clearer.

⚠ WARNING

This service manual is intended for authorized Suzuki dealers and qualified service technicians only. Inexperienced technicians or technicians without the proper tools and equipment may not be able to properly perform the services described in this manual.


Improper repair may result in injury to the technician and may render the vehicle unsafe for the driver and passengers.

⚠ WARNING

For vehicles equipped with a Supplemental Restraint (Air Bag) System:

- Service on and around the air bag system components or wiring must be performed only by an authorized SUZUKI dealer. Refer to “Air Bag System Components and Wiring Location View” under “General Description” in air bag system section in order to confirm whether you are performing service on or near the air bag system components or wiring. Please observe all WARNINGS and “Service Precautions” under “On-Vehicle Service” in air bag system section before performing service on or around the air bag system components or wiring. Failure to follow WARNINGS could result in unintentional activation of the system or could render the system inoperative. Either of these two conditions may result in severe injury.
 - If the air bag system and another vehicle system both need repair, Suzuki recommends that the air bag system be repaired first, to help avoid unintended air bag system activation.
 - Do not modify the steering wheel, instrument panel or any other air bag system component on or around air bag system components or wiring. Modifications can adversely affect air bag system performance and lead to injury.
 - If the vehicle will be exposed to temperatures over 93 °C (200 °F), for example, during a paint baking process, remove the air bag system components, that is air bag (inflator) modules, SDM and/or seat belt with pretensioner, beforehand to avoid component damage or unintended activation.
-

The circle with a slash in this manual means “Don’t do this” or “Don’t let this happen”.

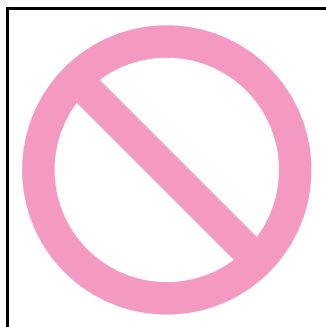

FOREWORD

This manual (Volumes 1 and 2) contains procedures for diagnosis, maintenance, adjustments, minor service operations, replacement of components (Service) and for disassembly and assembly of major components (Unit Repair-Overhaul).

VOLUME 1 contains General information, Engine, Suspension, Drive/Axle and Brakes sections (Sections 0 – 4).
VOLUME 2 contains Transmission/Transaxle, Steering, HVAC, Restraint, Body/Cab/Accessories and Control Systems sections (Sections 5 – 10).

Applicable model:
GRAND VITARA (JB627)

The contents are classified into sections each of which is given a section number as indicated in the Table of Contents on following page. And on the first page of each individual section is an index of that section.
This manual should be kept in a handy place for ready reference of the service work.
Strict observance of the so specified items will enable one to obtain the full performance of the vehicle.

When replacing parts or servicing by disassembling, it is recommended to use SUZUKI genuine parts, tools and service materials as specified in each description.

All information, illustrations and specifications contained in this literature are based on the latest product information available at the time of publication approval. And used as the main subject of description is the vehicle of standard specifications among others.

Therefore, note that illustrations may differ from the vehicle being actually serviced.

The right is reserved to make changes at any time without notice.

SUZUKI MOTOR CORPORATION

RECOMMENDATION OF GENUINE SUZUKI PARTS AND ACCESSORIES USE

SUZUKI strongly recommends the use of genuine SUZUKI parts* and accessories. Genuine SUZUKI parts and accessories are built to the highest standards of quality and performance, and are designed to fit the vehicle's exact specifications.

A wide variety of non-genuine replacement parts and accessories for SUZUKI vehicles are currently available in the market. Using these parts and accessories can affect the vehicle performance and shorten its useful life. Therefore, installation of non-genuine SUZUKI parts and accessories is not covered under warranty.

Non-Genuine SUZUKI Parts and Accessories

Some parts and accessories may be approved by certain authorities in your country.

Some parts and accessories are sold as SUZUKI authorized replacement parts and accessories. Some genuine SUZUKI parts and accessories are sold as re-use parts and accessories. These parts and accessories are non-genuine Suzuki parts and accessories and use of these parts are not covered under warranty.

Re-use of Genuine SUZUKI Parts and Accessories

The resale or re-use of the following items which could give rise to safety hazards for users is expressly forbidden:

- 1) Air bag components and all other pyrotechnic items, including their components (e.g. cushion, control devices and sensors)
- 2) Seatbelt system, including their components (e.g. webbing, buckles, and retractors)

The air bag and seat belt pretensioner components contain explosive chemicals. These components should be removed and disposed of properly by SUZUKI authorized service shop or scrap yard to avoid unintended explosion before scrapping.

*The parts remanufactured under SUZUKI's approval can be used as genuine SUZUKI parts in Europe.

TABLE OF CONTENTS

Volume 1

Precautions	00-i
Precautions	00-1
General Information	0-i
General Information	0A-1
Maintenance and Lubrication	0B-1
Engine	1-i
Precautions	1-1
Engine General Information and Diagnosis	1A-1
Aux. Emission Control Devices	1B-1
Engine Electrical Devices	1C-1
Engine Mechanical	1D-1
Engine Lubrication System	1E-1
Engine Cooling System	1F-1
Fuel System	1G-1
Ignition System	1H-1
Starting System	1I-1
Charging System	1J-1
Exhaust System	1K-1
Suspension	2-i
Precautions	2-1
Suspension General Diagnosis	2A-1
Front Suspension	2B-1
Rear Suspension	2C-1
Wheels and Tires	2D-1
Driveline / Axle	3-i
Precautions	3-1
Drive Shaft / Axle	3A-1
Differential	3B-1
Transfer	3C-1
Propeller Shaft	3D-1
Brakes	4-i
Precautions	4-1
Brake Control System and Diagnosis	4A-1
Front Brakes	4B-1
Rear Brakes	4C-1
Parking Brake	4D-1
ABS	4E-1
Electronic Stability Program	4F-1

Volume 2

Precautions	00-i
Precautions	00-1
Transmission / Transaxle	5-i
Precautions	5-1
Automatic Transmission/Transaxle	5A-1
Manual Transmission/Transaxle	5B-1
Clutch	5C-1
Steering	6-i
Precautions	6-1
Steering General Diagnosis	6A-1
Steering Wheel and Column	6B-1
Power Assisted Steering System	6C-1
HVAC	7-i
Precautions	7-1
Heater and Ventilation	7A-1
Air Conditioning System	7B-1
Restraint	8-i
Precautions	8-1
Seat Belts	8A-1
Air Bag System	8B-1
Body, Cab and Accessories	9-i
Precautions	9-1
Wiring Systems	9A-1
Lighting Systems	9B-1
Instrumentation / Driver Info. / Horn	9C-1
Wipers / Washers	9D-1
Glass / Windows / Mirrors	9E-1
Security and Locks	9F-1
Seats	9G-1
Interior Trim	9H-1
Sun Roof / T-Top / Convertible Top	9I-1
Hood / Fenders / Doors	9J-1
Body Structure	9K-1
Paint / Coatings	9L-1
Exterior Trim	9M-1
Control Systems	10-i
Precautions	10-1
Cruise Control System	10A-1
Body Electrical Control System	10B-1
Immobilizer Control System	10C-1
Keyless Start System	10E-1

00

0

1

2

3

4

5

6

7

8

9

10

Section 00

00

Precautions

CONTENTS

Precautions 00-1**Precautions..... 00-1**

Precautions for Vehicles Equipped with a

Supplemental Restraint (Air Bag) System 00-1

General Precautions 00-4

Precaution in Servicing Full-Time 4WD

Vehicle 00-7

Precaution for Vehicle Equipped with ESP®

System 00-8

Precautions for Catalytic Converter 00-9

Precaution for CAN Communication System 00-9

Precautions for Electrical Circuit Service 00-9

Precautions for Installing Mobile

Communication Equipment 00-11

Air Bag Warning 00-11

Discharge Headlight Warning 00-12

A/C System Caution..... 00-12

Fastener Caution..... 00-12

Suspension Caution 00-12

Wheels and Tires Caution 00-12

Brakes Caution and Note 00-13

Differential Gear Oil Note 00-13

Repair Instructions 00-13

Electrical Circuit Inspection Procedure 00-13

Intermittent and Poor Connection Inspection 00-15

Precautions


Precautions

Precautions for Vehicles Equipped with a Supplemental Restraint (Air Bag) System

S6JB0B0000001

⚠ WARNING

- The configuration of air bag system parts are as shown in the figure. When it is necessary to service (remove, reinstall and inspect) these parts, be sure to follow procedures described in “Precautions on Service and Diagnosis of Air Bag System in Section 8B”. Failure to follow proper procedures could result in possible air bag system activation, personal injury, damage to parts or air bag system being unable to activate when necessary.
- If the air bag system and another vehicle system both need repair, SUZUKI recommends that the air bag system be repaired first, to help avoid unintended air bag system activation.
- Do not modify the steering wheel, dashboard, or any other air bag system components.
Modifications can adversely affect air bag system performance and lead to injury.
- If the vehicle will be exposed to temperatures over 93 °C (200 °F) (for example, during a paint baking process), remove the air bag system components beforehand to avoid component damage or unintended air bag system activation.

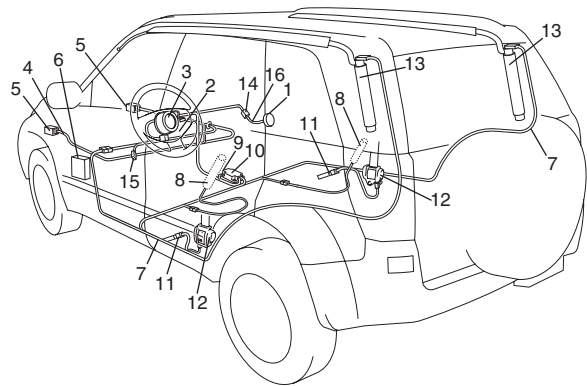

I5JB0A000003-02


1. Passenger air bag (inflator) module	9. Ground for air bag system
2. Driver air bag (inflator) module	10. SDM
3. Contact coil assembly	11. Side-sensor (if equipped)
4. Air bag harness in main harness	12. Seat belt pretensioner
5. Forward-sensor	13. Side curtain-air bag (inflator) module (if equipped)
6. "A/B" fuse in junction block assembly	14. Air bag harness in instrument panel harness
7. Air bag harness in floor harness	15. "AIR BAG" monitor coupler (if equipped)
8. Side-air bag (inflator) module (if equipped)	16. Passenger air bag harness

Diagnosis

- When troubleshooting air bag system, be sure to follow "Air Bag Diagnostic System Check in Section 8B". Bypassing these procedures may result in extended diagnostic time, incorrect diagnosis, and incorrect parts replacement.
- Never use electrical test equipment other than that specified.

⚠ WARNING

Never attempt to measure the resistance of the air bag (inflator) modules (driver, passenger, side and curtain) and seat belt pretensioners (driver and passenger). It is very dangerous as the electric current from the tester may deploy the air bag or activate the pretensioners.

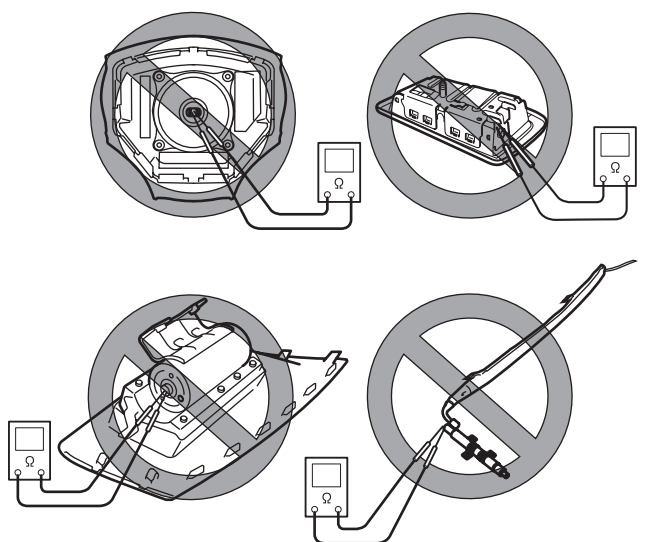

I5JB0A000001-02


Servicing and Handling

⚠ WARNING

Many of service procedures require disconnection of "A/B" fuse and all air bag (inflator) module(s) from system circuit to avoid an accidental deployment.

Driver, Passenger, Side and Curtain Air Bag (Inflator) Modules

- For handling and storage of a live air bag (inflator) module, select a place where the ambient temperature below 65 °C (150 °F), without high humidity and away from electric noise.
- When carrying a live air bag (inflator) module, make sure the bag opening is pointed away from you. In case of an accidental deployment, the bag will then deploy with minimal chance of injury. Never carry the air bag (inflator) module by the wires or connector on the underside of the module. When placing a live air bag (inflator) module on a bench or other surface, always face the bag up, away from the surface. This is necessary so that a free space is provided to allow the air bag to expand in the unlikely event of accidental deployment. Otherwise, personal injury may result.

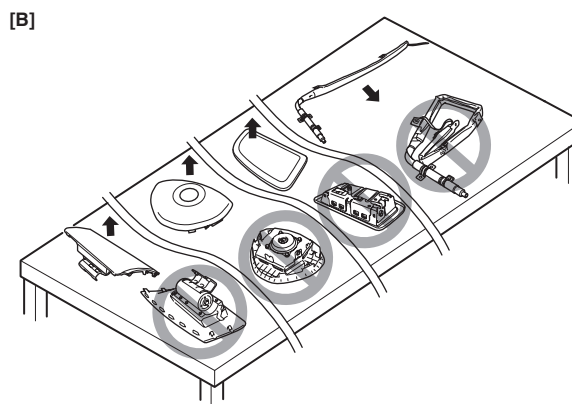

I5JB0A000002-02

[A]: Always carry air bag (inflator) module with trim cover (air bag opening) away from body.

[B]: Always place air bag (inflator) module on workbench with trim cover (air bag opening) up, away from loose objects.

- Never dispose of live (undeployed) air bag (inflator) modules (driver, passenger, side and curtain). If disposal is necessary, be sure to deploy them according to deployment procedures described in “Air Bag (Inflator) Module and Seat Belt Pretensioner Disposal in Section 8B”.
- The air bag (inflator) module immediately after deployment is very hot. Wait for at least half an hour to cool it off before proceeding the work.
- After an air bag (inflator) module has been deployed, the surface of the air bag may contain a powdery residue. This powder consists primarily of cornstarch (used to lubricate the bag as it inflates) and by-products of the chemical reaction. As with many service procedures, gloves and safety glasses should be worn.

⚠ WARNING


SDM

- During service procedures, be very careful when handling a Sensing and Diagnostic Module (SDM).
 - Never strike or jar the SDM.
 - Never power up the air bag system when the SDM is not rigidly attached to the vehicle. All SDM and mounting bracket fasteners must be carefully torqued and the arrow must be pointing toward the front of the vehicle to ensure proper operation of the air bag system. The SDM could be activated when powered while not rigidly attached to the vehicle which could cause deployment and result in personal injury.
-

⚠ WARNING

Driver and Passenger Seat Belt Pretensioners

- For handling and storage of a live seat belt pretensioner, select a place where the ambient temperature below 65 °C (150 °F), without high humidity and away from electric noise.
- Never carry seat belt pretensioner by wire or connector of pretensioner. When placing a live seat belt pretensioner on the workbench or some place like that, be sure not to lay it with its exhaust hole (1) provided side facing down. It is also prohibited to put something on its face with an exhaust hole or to put a seat belt pretensioner on top of another. Otherwise, personal injury may result.
- Never dispose of live (inactivated) seat belt pretensioners (drive and passenger). If disposal is necessary, be sure to activate them according to activation procedures described in “Air Bag (Inflator) Module and Seat Belt Pretensioner Disposal in Section 8B” before disposal.
- The seat belt pretensioner immediately after activation is very hot. Wait for at least half an hour to cool it off before proceeding the work.
- With many service procedures, gloves and safety glasses should be worn to prevent any possible irritation of the skin or eyes.

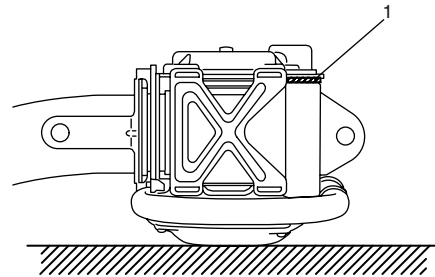

I4JA01822118-01

⚠ CAUTION

- Even when the accident was light enough not to cause air bags to activate, be sure to inspect system parts and other related parts according to instructions under “Repair and Inspection Required after Accident in Section 8B”.
- When servicing parts other than air bag system, if shocks may be applied to air bag system component parts, remove those parts beforehand.
- When handling the air bag (inflator) modules (driver, passenger, side and curtain), forward sensors, side sensors or SDM, be careful not to drop it or apply an impact to it. If an excessive impact was applied (e.g., dropped from a height of 91.4 cm (3 feet) or more), never attempt disassembly or repair but replace it with a new one.
- When grease, cleaning agent, oil, water, etc. has got onto air bag (inflator) modules (driver, passenger, side and curtain), wipe off immediately with a dry cloth.
- Air bag wire harness is included in main harness, instrument panel harness, floor harness and seat harness. Air bag wire harness can be identified easily as the part of connector side wire harness is covered with a yellow protection tube and it has yellow connectors. Be very careful when handling it.
- When an open in air bag wire harness, damaged wire harness, connector or terminal is found, replace wire harness, connectors and terminals as an assembly.
- Do not apply power to the air bag system unless all components are connected or a diagnostic flow requests it, as this will set a DTC.
- Never use air bag system component parts from another vehicle.
- When using electric welding, be sure to temporarily disable air bag system referring to “Disabling Air Bag System in Section 8B”.
- Never expose air bag system component parts directly to hot air (drying or baking the vehicle after painting) or flames.
- **WARNING / CAUTION** labels are attached on each part of air bag system components. Be sure to follow the instructions.
- After vehicle is completely repaired, perform “Air Bag Diagnostic System Check in Section 8B”.

General Precautions

S6JB0B0000002

The **WARNING** and **CAUTION** describe some general precautions that you should observe when servicing a vehicle. These general precautions apply to many of the service procedures, and they will not necessarily be repeated with each procedure to which they apply.

⚠ WARNING


- Whenever raising a vehicle for service, be sure to follow the instructions under “Vehicle Lifting Points in Section 0A”.
- When it is necessary to do service work with the engine running, make sure that the parking brake is set fully and the transmission is in Neutral (for manual transmission vehicles) or Park (for automatic transmission vehicles), Keep hands, hair, clothing, tools, etc. away from the fan and belts when the engine is running.
- When it is necessary to run the engine indoors, make sure that the exhaust gas is forced outdoors.
- Do not perform service work in areas where combustible materials can come in contact with a hot exhaust system. When working with toxic or flammable materials (such as gasoline and refrigerant), make sure that the area you work in is well-ventilated.
- To avoid getting burned, keep away from hot metal parts such as the radiator, exhaust manifold, tail pipe, muffler, etc.
- New and used engine oil can be hazardous. Children and pets may be harmed by swallowing new or used oil. Keep new and used oil and used engine oil filters away from children and pets. Continuous contact with used engine oil has been found to cause [skin] cancer in laboratory animals. Brief contact with used oil may irritate skin. To minimize your exposure to used engine oil, wear a long-sleeve shirt and moisture-proof gloves (such as dish washing gloves) when changing engine oil. If engine oil contacts your skin, wash thoroughly with soap and water. Launder any clothing or rags if wet with oil, recycle or properly dispose of used oil and filters.

00-5 Precautions:

- Be sure to observe following instructions when handling service materials such as fuel, oil, fluid, coolant, grease, sealant, thread lock cement, etc. Otherwise, your health may be ruined.
 - Whenever handling any of these service materials, wear safety glasses to protect your eyes. If it gets into your eye, it may cause inflammation.
 - Whenever handling any of these service materials, wear moisture-proof gloves to protect your skin. If it adheres to your skin, it may cause inflammation.
 - Do not swallow any of these service materials. It would cause diarrhea or nausea.
 - Keep all these materials out of children's reach.
- Make sure the bonnet is fully closed and latched before driving. If it is not, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident.


CAUTION

- Before starting any service work, cover fenders, seats and any other parts that are likely to get scratched or stained during servicing. Also, be aware that what you wear (e.g. buttons) may cause damage to the vehicle's finish.

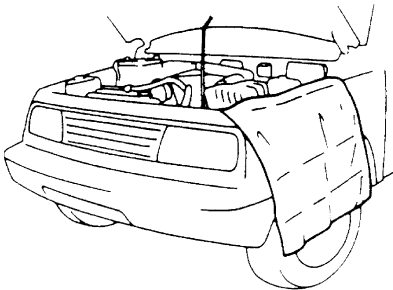


IYSQ01010004-01

- When performing service to electrical parts that does not require use of battery power, disconnect the negative cable of the battery.
- When disconnecting the negative cable from the battery, be careful to the following.
 - Check and record DTCs in ECM and TCM if necessary before disconnecting.
 - Record displayed contents of the clock and/or audio system, etc. before disconnecting and reset it as before after connecting.
 - For vehicle equipped with electric throttle body system, perform electric throttle body system calibration referring to “Electric Throttle Body System Calibration in Section 1C” after reconnecting the negative cable to the battery.
 - For vehicle equipped with power sliding roof (sunroof), initialize sliding roof position data in motor unit by performing “How to reactivate the system to prevent being pinched by the sunroof” in Sunroof section of Owner's manual.

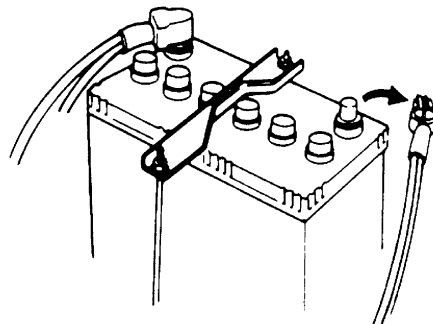


I2RH01010026-01

- When removing the battery, be sure to disconnect the negative cable first and then the positive cable. When reconnecting the battery, connect the positive cable first and then the negative cable, and replace the terminal cover.

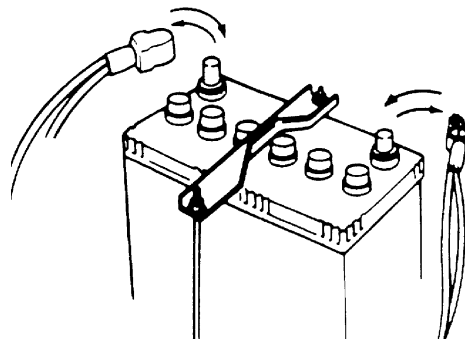


I2RH01010027-01

- When removing parts that are to be reused, be sure to keep them arranged in an orderly manner so that they may be reinstalled in the proper order and position.

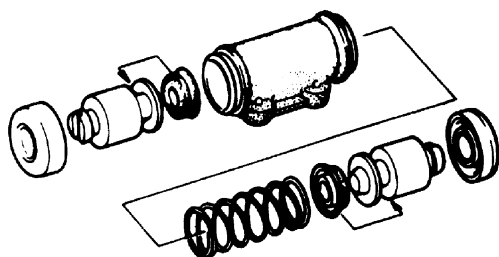

IYSQ01430019-01


- Whenever you use oil seals, gaskets, packing, O-rings, locking washers, split pins, self-locking nuts, and certain other parts as specified, be sure to use new ones. Also, before installing new gaskets, packing, etc., be sure to remove any residual material from the mating surfaces.

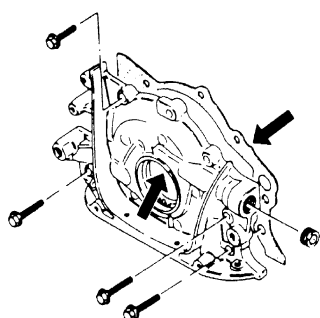

I2RH01010029-01

- Make sure that all parts used in reassembly are perfectly clean.
- When use of a certain type of lubricant, bond or sealant is specified, be sure to remove the old one thoroughly and use the specified type.

“A”: Sealant 99000-31150 (SUZUKI Bond No.1207C)

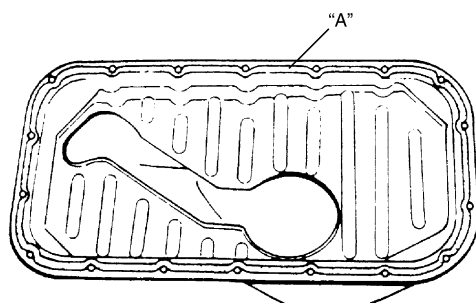


I2RH01010030-01

- Be sure to use special tools when instructed.

Special tool


(A): 09917-98221

(B): 09916-58210

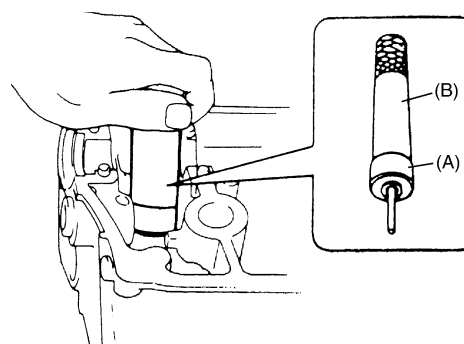


I2RH01010031-01

- When disconnecting vacuum hoses, attach a tag describing the correct installation positions so that the hoses can be reinstalled correctly.

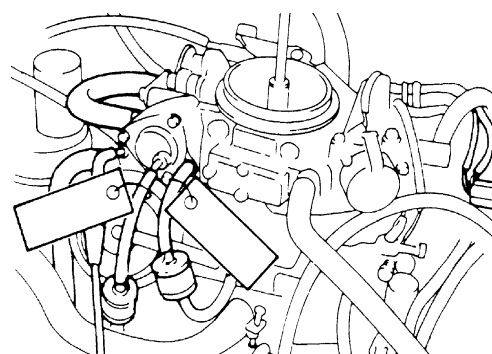


I2RH01010032-01

- After servicing fuel, oil, coolant, vacuum, exhaust or brake systems, check all lines related to the system for leaks.

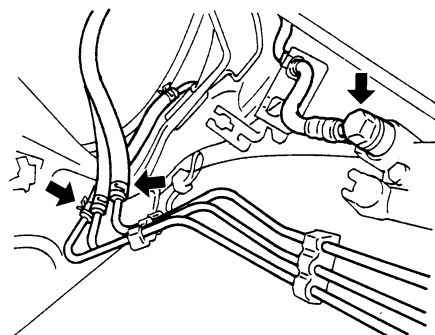

I2RH01010033-01

- For vehicles equipped with fuel injection systems, never disconnect the fuel line between the fuel pump and injector without first releasing the fuel pressure, or fuel can be sprayed out under pressure.
- When performing a work that produces a heat exceeding 80 °C in the vicinity of the electrical parts, remove the heat sensitive electrical part(s) beforehand.

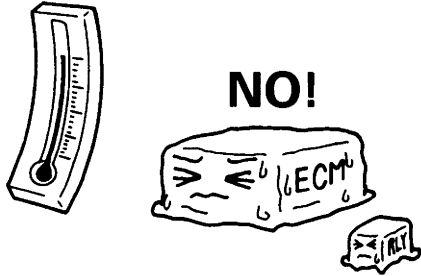


I2RH01010034-01

- Use care not to expose connectors and electrical parts to water which will be a cause of a trouble.



I2RH01010035-01

- Always be careful not to handle electrical parts (computer, relay, etc.) in a rough manner or drop them.

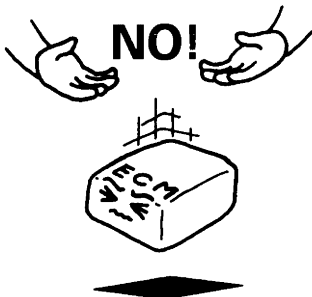

I2RH01010036-01

Precaution in Servicing Full-Time 4WD Vehicle

S6JB0B0000003

▲ WARNING

This full-time 4WD vehicle can not be converted to 2WD manually. Observe the following caution in servicing. Otherwise, front wheels drive rear wheels or vise-versa and vehicle accidents, drivetrain damage and personal injury may result.

- Never perform any of the following types of service work.

[A]:

Testing with 2-wheel chassis dynamometer, speedometer tester (which tester roller is driven by vehicle wheels).


[B]:

Driving front or rear wheels, which are jacked up.


[C]:

Towing under the condition where either front or rear wheels can not rotate.


[A]

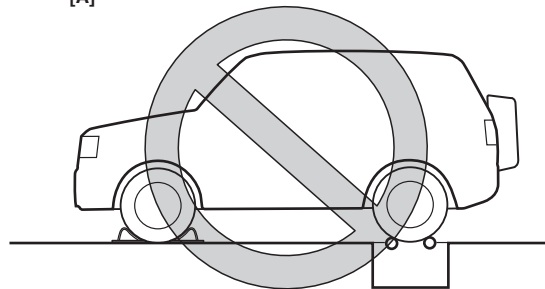

[B]

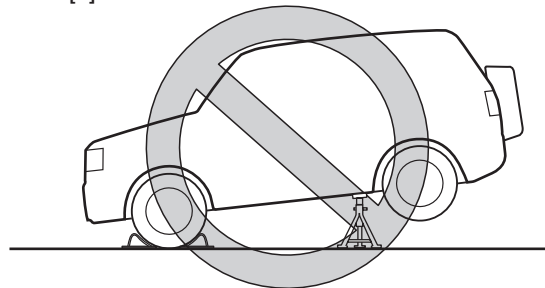


[C]

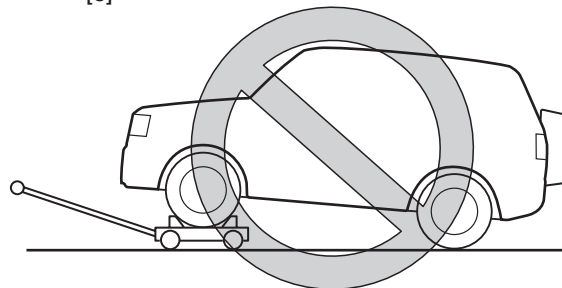


I5JB0A000004-02

- When testing with 2-wheel brake tester, be sure to observe the following instructions. Otherwise, drivetrain damage and personal injury may result.
 - Shift transmission to N (Neutral) position.
 - Shift transfer to N (Neutral) position if transfer position is selectable.
 - Run engine at specified idle speed.
 - Rotate wheels (tires) by brake tester at vehicle speed below 5 km/h (3 mile/h).
 - Do not rotate wheels (tires) for 1 min. or more.
- When testing with 2-wheel speedometer tester (which wheels are driven by tester), be sure to observe the following instructions. Otherwise, drivetrain damage and personal injury may result.
 - Set rear wheels on tester roller and front wheels on free roller.
 - Shift transmission to N (Neutral) position.
 - Shift transfer to N (Neutral) position if transfer position is selectable.
 - Rotate wheels (tires) by tester at vehicle speed below 60 km/h (37 mile/h).
 - Do not rotate wheels (tires) for 1 min. or more.
 - Ensure that vehicle does not move using wire ropes or chains.
- When testing with 2-wheel chassis dynamometer, be sure to make the vehicle as rear wheel drive by removing front propeller shaft or as front wheel drive by removing rear propeller shaft, referring to “Transfer Warning in Section 3C”. Note that speedometer of vehicle does not display vehicle speed because rear wheel speed sensor signal is not output if rear propeller shaft is removed.
- When testing with 4-wheel free chassis dynamometer or speedometer tester (which tester roller is driven by vehicle wheels), be sure to shift transfer to 4H-Lock position according to the step 4) in “Transfer Warning in Section 3C”.

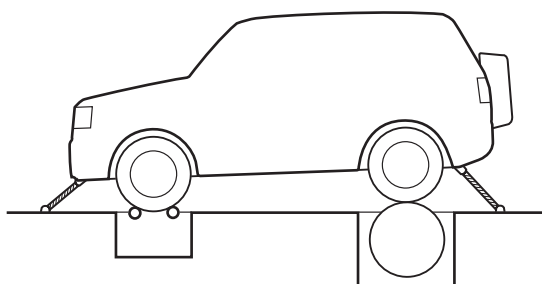

I5JB0A000006-01

- When using On-vehicle type wheel balancing equipment (1), be sure to jack up all four wheels, off the ground completely and support vehicle with safety stands (2). Be careful of the other wheels, which will rotate at the same time.

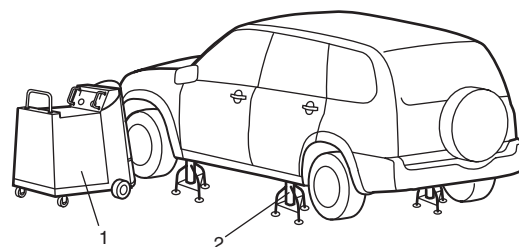

I5JB0A000005-02

⚠ CAUTION

- This vehicle should be towed under one of the following condition:
 - With all wheels on a flatbed truck.
 - With front or rear wheels lifted and a dolly under the other wheels.

Precaution for Vehicle Equipped with ESP® System

S6JB0B0000016

- When testing with any of the following equipments (when vehicle is tested by rotating wheels (tires) under vehicle stop), be sure to deactivate ESP® system referring to “Precautions in Speedometer Test or Other Tests in Section 4F” to obtain correct data. When vehicle acceleration is not sensed and wheels are rotating, ESP® control module judges that wheels are in slip condition and controls engine torque to reduce by TCS control.
 - 2 or 4-wheel chassis dynamometer
 - Speedometer tester
 - Brake tester
 - Etc.

ESP® control module

- When ESP® control module is removed / installed, do not use impact wrenches which generate shock or impact to avoid damaging sensors in ESP® control module.
- When any of the following operation is done, calibrate steering angle sensor, G sensor and master cylinder pressure sensor (in ESP® control module) referring to “Sensor Calibration in Section 4F”.
 - When battery or dome fuse is removed.
 - When steering angle sensor is replaced.
 - When ESP® control module is removed.
 - When yaw rate / G sensor assembly is removed.

Precautions for Catalytic Converter

S6JB0B0000004


For vehicles equipped with a catalytic converter, use only unleaded gasoline and be careful not to let a large amount of unburned gasoline enter the converter or it can be damaged.

- Conduct a spark jump test only when necessary, make it as short as possible, and do not open the throttle.
- Conduct engine compression checks within the shortest possible time.
- Avoid situations which can result in engine misfire (e.g. starting the engine when the fuel tank is nearly empty.)

Precaution for CAN Communication System

S6JB0B0000005


- The loose (1) in the wire harness twist of the CAN lines except around the connector (3) should be within 100 mm (3.9 in.). Refer to the wiring diagram for the CAN lines discrimination. Excessively-loosed lines may be influenced by the electric noise.

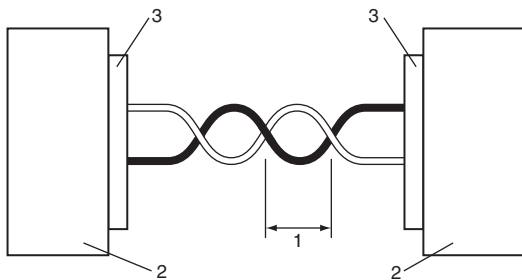

I4JA01000002-01

2. Controller

- Do not connect terminals of the CAN line using a bypass wire (1). Otherwise, the CAN line may be influenced by the electric noise.

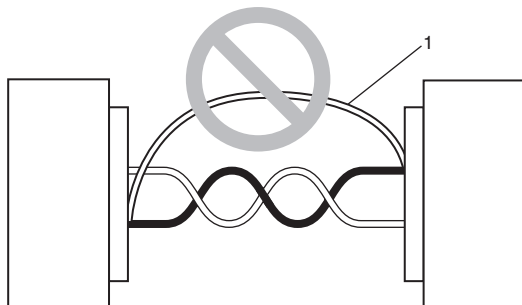


I4JA01000003-01

Precautions for Electrical Circuit Service


S6JB0B0000006

- When replacing a fuse, make sure to use a fuse of the specified capacity. Use of a fuse with a larger capacity will cause a damage to the electrical parts and a fire.

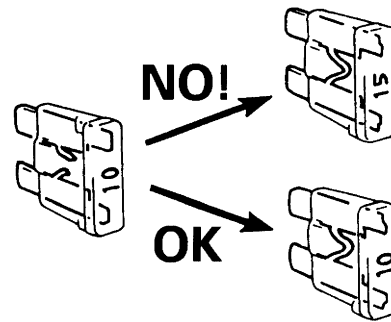


I2RH01010038-01

- When disconnecting and connecting coupler, make sure to turn ignition switch OFF, or electronic parts may get damaged.

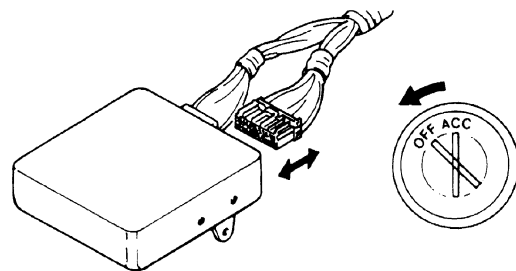


I2RH01010039-01

- When disconnecting connectors, never pull the wiring harness. Unlock the connector lock first and then pull them apart by holding connectors themselves.

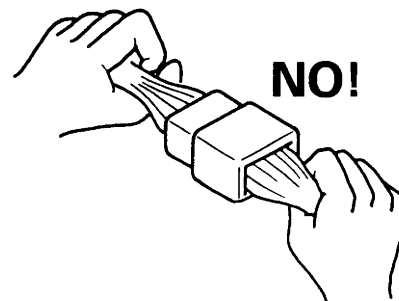


I2RH01010040-01

- When connecting connectors, also hold connectors and put them together until they lock securely (a click is heard).

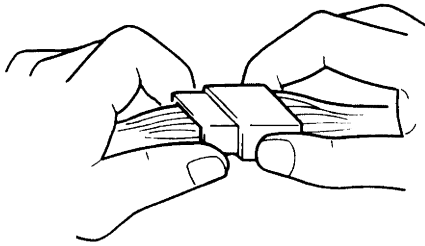


I2RH01010041-01

- When installing the wiring harness, fix it with clamps so that no slack is left.

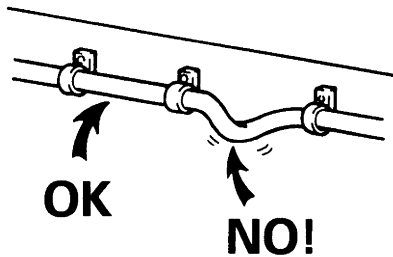


I2RH01010042-01

- When installing vehicle parts, be careful so that the wiring harness is not interfered with or caught by any other part.

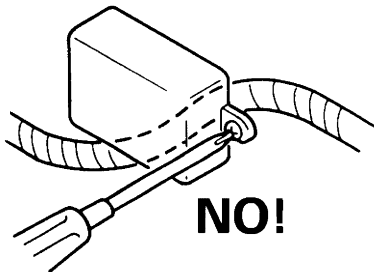


I2RH01010043-01

- To avoid damage to the harness, protect its part which may contact against a part forming a sharp angle by winding tape or the like around it.

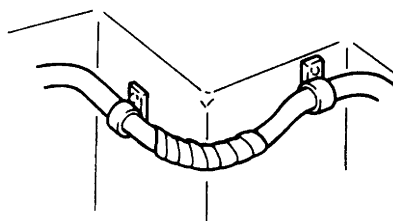


I2RH01010044-01

- Be careful not to touch the electrical terminals of parts which use microcomputers (e.g. electronic control unit like as ECM, PCM, P/S controller, etc.). The static electricity from your body can damage these parts.

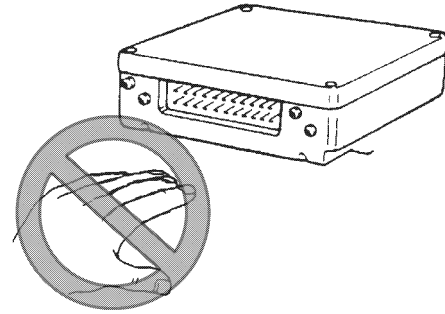

I3RM0A000004-01


- Never connect any tester (voltmeter, ohmmeter, or whatever) to electronic control unit when its coupler is disconnected. Attempt to do it may cause damage to it.
- Never connect an ohmmeter to electronic control unit with its coupler connected to it. Attempt to do it may cause damage to electronic control unit and sensors.
- Be sure to use a specified voltmeter / ohmmeter. Otherwise, accurate measurements may not be obtained or personal injury may result. If not specified, use a voltmeter with high impedance ($M \Omega/V$ minimum) or a digital type voltmeter.
- When taking measurements at electrical connectors using a tester probe, be sure to insert the probe (2) from the wire harness side (backside) of the connector (1).

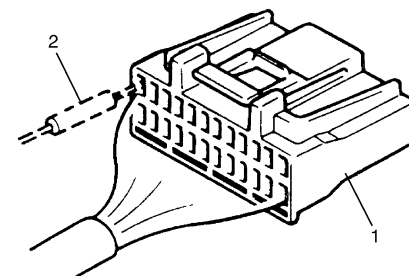

I2RH01010046-01


00-11 Precautions:

- When connecting meter probe (2) from terminal side of coupler (1) because it can't be connected from harness side, use extra care not to bend male terminal of coupler or force its female terminal open for connection.
In case of such coupler as shown connect probe as shown to avoid opening female terminal.
Never connect probe where male terminal is supposed to fit.

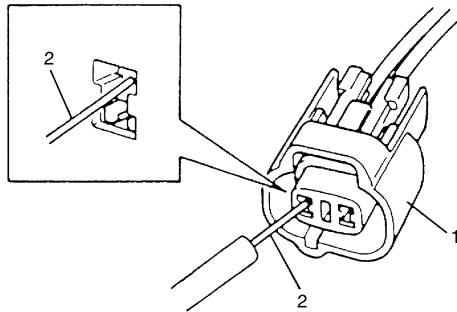

I2RH01010047-01

- When checking connection of terminals, check its male half for bend and female half for excessive opening and both for locking (looseness), corrosion, dust, etc.
- Before measuring voltage at each terminal, check to make sure that battery voltage is 11 V or higher. Such terminal voltage check at low battery voltage will lead to erroneous diagnosis.

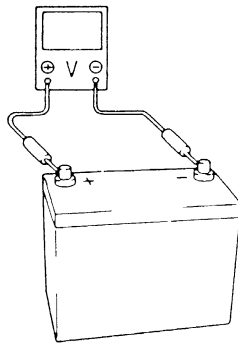

I2RH01010048-01

Precautions for Installing Mobile Communication Equipment

S6JB0B0000007

When installing mobile communication equipment such as CB (Citizens-Band)-radio or cellular-telephone, be sure to observe the following precautions. Failure to follow cautions may adversely affect electronic control system.

- Keep the antenna as far away as possible from the vehicle's electronic control unit.
- Keep the antenna feeder more than 20 cm (7.9 in.) away from electronic control unit and its wire harnesses.
- Do not run the antenna feeder parallel with other wire harnesses.
- Confirm that the antenna and feeder are correctly adjusted.

Air Bag Warning

S6JB0B00000008

▲ WARNING

For vehicles equipped with Supplemental Restraint (Air Bag) System:

- Service on and around the air bag system components or wiring must be performed only by an authorized SUZUKI dealer. Refer to "Air Bag System Components, Wiring and Connectors Location in Section 8B" in order to confirm whether you are performing service on or near the air bag system components or wiring. Please observe all "WARNING"s and "Precautions on Service and Diagnosis of Air Bag System in Section 8B" before performing service on or around the air bag system components or wiring. Failure to follow "WARNING"s could result in unintentional activation of the system or could render the system inoperative. Either of these two conditions may result in severe injury.**
- Technical service work must be started at least 90 seconds after the ignition switch is turned to the "LOCK" position and the negative cable is disconnected from the battery. Otherwise, the system may be activated by reserve energy in the Sensing and Diagnostic Module (SDM).**

Discharge Headlight Warning

S6JB0B0000009

⚠ WARNING

When performing service on and around the discharge headlight, observe "Precautions for Discharge Headlight Service (If Equipped) in Section 9B". Neglecting the warnings may result in personal injury.

A/C System Caution

S6JB0B00000010

⚠ CAUTION

The air conditioning system of this vehicle uses refrigerant HFC-134a (R-134a). None of refrigerant, compressor oil and component parts is interchangeable between two types of A/C: one using refrigerant CFC-12 (R-12) and the other using refrigerant HFC-134a (R-134a). Be sure to check which refrigerant is used before any service work including inspection and maintenance. For identification between these two types, refer to "A/C Refrigerant Type Description in Section 7B". When replenishing or changing refrigerant and compressor oil and when replacing parts, make sure that the material or the part to be used is appropriate to the A/C installed in the vehicle being serviced. Use of incorrect one will result in leakage of refrigerant, damage in parts or other faulty condition.

Fastener Caution

S6JB0B00000011

⚠ CAUTION

When fasteners are removed, always reinstall them at the same location from which they were removed. If a fastener needs to be replaced, use the correct part number fastener for that application. If the correct part number fastener is not available, a fastener of equal size and strength (or stronger) may be used. Fasteners that are not reused, and those requiring thread-locking compound, will be called out. The correct torque value must be used when installing fasteners that require it. If the above procedures are not followed, parts or system damage could result.

Suspension Caution

S6JB0B00000012

⚠ CAUTION

- All suspension fasteners are an important attaching part in that it could affect the performance of vital parts and systems, and/or could result in major repair expense. They must be replaced with one of the same part number or with an equivalent part if replacement becomes necessary. Do not use a replacement part of lesser quality or substitute design. Torque values must be used as specified during reassembly to assure proper retention of this part.
- Never attempt to heat, quench or straighten any suspension part. Replace it with a new part or damage to the part may result.

Wheels and Tires Caution

S6JB0B00000013

⚠ CAUTION

All wheel fasteners are important attaching parts in that they could affect the performance of vital parts and systems, and/or could result in major repair expense. They must be replaced with one of the same part number or with an equivalent part if replacement becomes necessary. Do not use a replacement part of lesser quality or substitute design. Torque values must be used as specified during reassembly to assure proper retention of all parts. There is to be no welding as it may result in extensive damage and weakening of the metal.

Brakes Caution and Note

S6JB0B0000014

⚠ CAUTION

All brake fasteners are important attaching parts in that they could affect the performance of vital parts and systems, and/or could result in major repair expense. They must be replaced with one of same part number or with an equivalent part if replacement becomes necessary. Do not use a replacement part of lesser quality or substitute design. Torque values must be used as specified during reassembly to assure proper retention of all parts. There is to be no welding as it may result in extensive damage and weakening of the metal.

NOTE

Before inspecting and servicing brakes for vehicle equipped with ABS, make sure that ABS is in good condition.

Differential Gear Oil Note

S6JB0B0000015

NOTE

- When having driven through water, check immediately if water has entered (if so, oil is cloudy). Water mixed oil must be changed at once.
- Whenever vehicle is hoisted for any other service work than oil change, also be sure to check for oil leakage and status of breather hoses.

Repair Instructions

Electrical Circuit Inspection Procedure

S6JB0B0006001

While there are various electrical circuit inspection methods, described here is a general method to check its open and short circuit by using an ohmmeter and a voltmeter.


Open Circuit Check

Possible causes for the open circuit are as follows. As the cause is in the connector or terminal in many cases, they need to be checked particularly carefully.

- Loose connection of connector
- Poor contact of terminal (due to dirt, corrosion or rust on it, poor contact tension, entry of foreign object etc.)
- Wire harness being open


When checking system circuits including an electronic control unit such as ECM, TCM, ABS control module, etc., it is important to perform careful check, starting with items which are easier to check.

- 1) Disconnect negative cable from battery
- 2) Check each connector at both ends of the circuit being checked for loose connection. Also check lock condition of connector if equipped with connector lock.

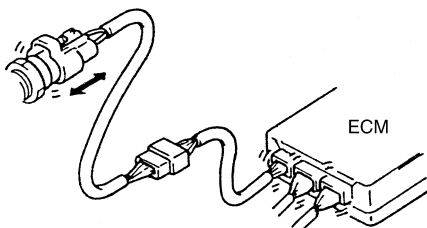

I2RH01010049-01


- 3) Using a test male terminal, check both terminals of the circuit being checked for contact tension of its female terminal. Check each terminal visually for poor contact (possibly caused by dirt, corrosion, rust entry of foreign object, etc.). At the same time, check to make sure that each terminal is locked in the connector fully.

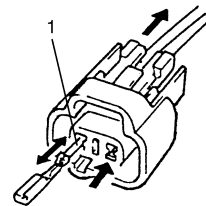

I2RH01010050-01

1. Check contact tension by inserting and removing just for once.

- 4) Using continuity check or voltage check the following procedure, check the wire harness for open circuit and poor connection with its terminals. Locate abnormality, if any.

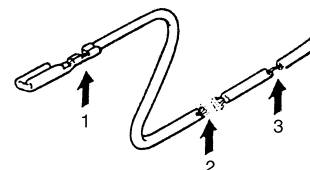


I2RH01010051-01

1. Looseness of crimping
2. Open
3. Thin wire (single strand of wire)


Continuity Check

- 1) Measure resistance between connector terminals at both ends of the circuit being checked (between "A-1" and "C-1" in the figure). If no continuity is indicated (infinity or over limit), that means that the circuit is open between terminals "A-1" and "C-1".

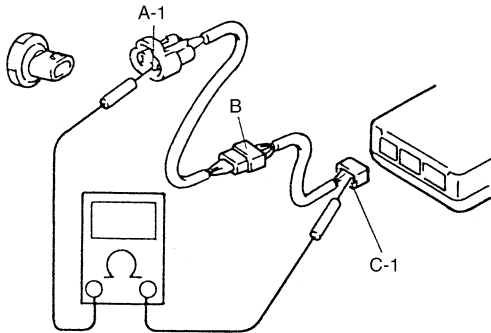

I2RH01010052-01

- 2) Disconnect the connector included in the circuit (connector-B in the figure) and measure resistance between terminals "A-1" and "B-1". If no continuity is indicated, that means that the circuit is open between terminals "A-1" and "B-1". If continuity is indicated, there is an open circuit between terminals "B-1" and "C-1" or an abnormality in connector-B.

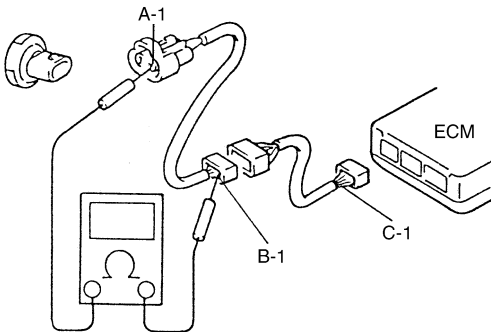

I2RH01010053-01

Voltage Check

If voltage is supplied to the circuit being checked, voltage check can be used as circuit check.

- 1) With all connectors connected and voltage applied to the circuit being checked, measure voltage between each terminal and body ground.
 - a) If measurements were taken as shown in the figure and results were as listed in the following, it means that the circuit is open between terminals "B-1" and "A-1".

Voltage between each terminal and body ground

"C-1" and body ground: Approx. 5 V

"B-1" and body ground: Approx. 5 V

"A-1" and body ground: 0 V

- b) Also, if measured values were as listed in the following, it means that there is a resistance (abnormality) of such level that corresponds to the voltage drop in the circuit between terminals "A-1" and "B-1".



Voltage between

"C-1" and body ground: Approx. 5 V

"B-1" and body ground: Approx. 5 V

"A-1" and body ground: Approx. 3 V

"A-1" and "B-1": 2V voltage drop

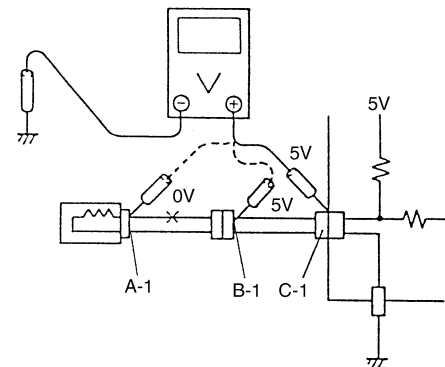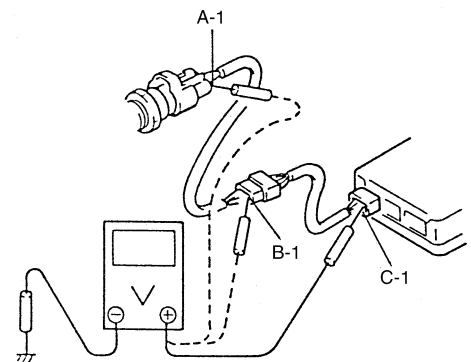

I5RH01000005-01

Short Circuit Check (Wire Harness to Ground)


- 1) Disconnect negative cable at battery.
- 2) Disconnect connectors at both ends of the circuit to be checked.

NOTE

If the circuit to be checked is connected to other parts (1), disconnect all connectors of those parts.

Otherwise, diagnosis will be misled.


- 3) Measure resistance between terminal at one end of circuit ("A-1" terminal in the figure) and body ground. If continuity is indicated, it means that there is a short to ground between terminals "A-1" and "C-1" of the circuit.

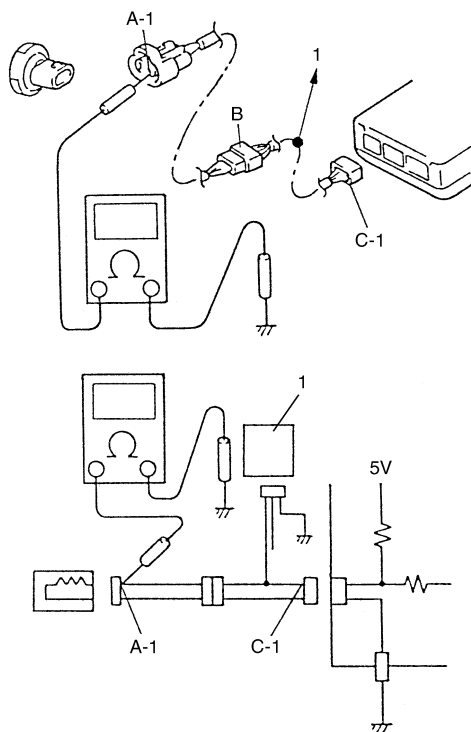

I5RH01000006-01

1. To other parts

- 4) Disconnect the connector included in circuit (connector B) and measure resistance between "A-1" and body ground. If continuity is indicated, it means that the circuit is shorted to the ground between terminals "A-1" and "B-1".

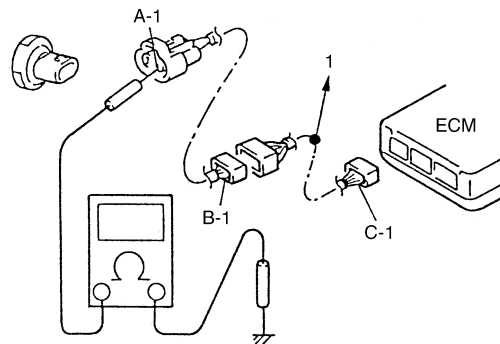

I2RH01010056-01


1. To other parts

Intermittent and Poor Connection Inspection

S6JB0B0006002


Most intermittent are caused by faulty electrical connections or wiring, although a sticking relay or solenoid can occasionally be at fault. When checking it for proper connection, perform careful check of suspect circuits for:

- Poor mating of connector halves, or terminals not fully seated in the connector body (backed out).
- Dirt or corrosion on the terminals. The terminals must be clean and free of any foreign material which could impede proper terminal contact. However, cleaning the terminal with a sand paper or the like is prohibited.
- Damaged connector body, exposing the terminals to moisture and dirt, as well as not maintaining proper terminal orientation with the component or mating connector.

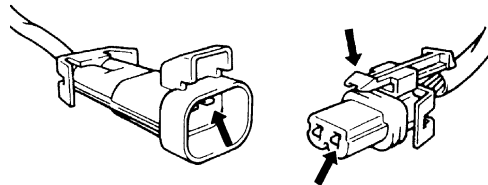

I2RH01010057-01


- Improperly formed or damaged terminals.
Check each connector terminal in problem circuits carefully to ensure good contact tension by using the corresponding mating terminal.
If contact tension is not enough, reform it to increase contact tension or replace.

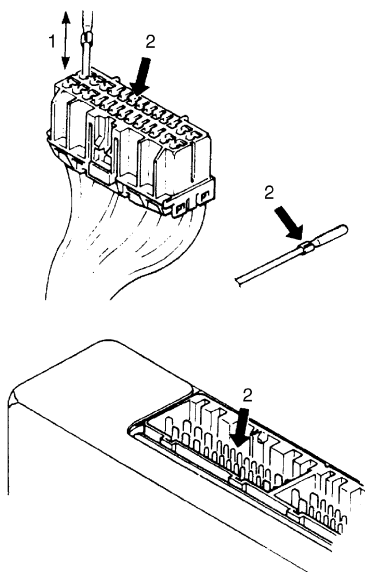

I5RH01000007-01


- | |
|---|
| 1. Check contact tension by inserting and removing just once. |
| 2. Check each terminal for bend and proper alignment. |

- Poor terminal-to-wire connection.
Check each wire harness in problem circuits for poor connection by shaking it by hand lightly. If any abnormal condition is found, repair or replace.

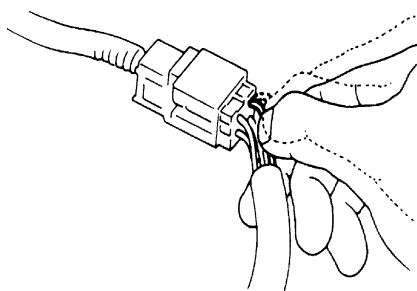

I2RH01010059-01

- Wire insulation which is rubbed through, causing an intermittent short as the bare area touches other wiring or parts of the vehicle.
- Wiring broken inside the insulation. This condition could cause continuity check to show a good circuit, but if only 1 or 2 strands of a multi-strand-type wire are intact, resistance could be far too high. If any abnormality is found, repair or replace.

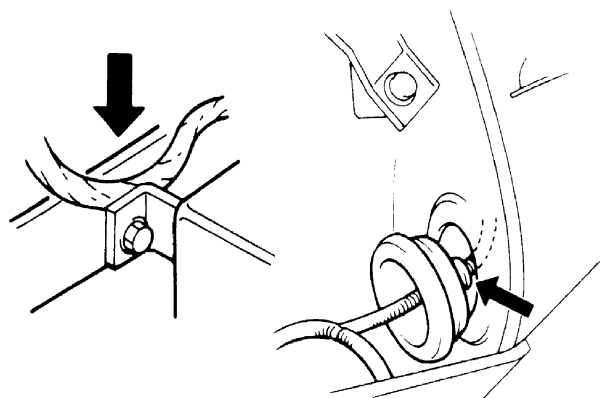

I2RH01010060-01

General Information	0A-1	Crankcase Ventilation Hoses and Connections Inspection (Vehicle without A/F Sensor).....	0B-6
General Description	0A-1	PCV Valve Inspection	0B-6
Abbreviations	0A-1	Fuel Evaporative Emission Control System Inspection.....	0B-6
Symbols	0A-2	Brake Discs and Pads Inspection	0B-6
Wire Color Symbols	0A-3	Brake Drums and Shoes Inspection.....	0B-6
Fastener Information	0A-3	Brake Hoses and Pipes Inspection	0B-7
Vehicle Lifting Points.....	0A-5	Brake Fluid Change	0B-7
Vehicle Identification Number	0A-7	Parking Brake Lever and Cable Inspection.....	0B-7
Engine Identification Number	0A-7	Clutch Fluid Inspection.....	0B-7
Transmission Identification Number.....	0A-7	Tire / Wheel Inspection and Rotation	0B-8
Component Location	0A-8	Wheel Discs Inspection	0B-8
Warning, Caution and Information Label Location	0A-8	Wheel Bearing Inspection	0B-8
Maintenance and Lubrication	0B-1	Suspension System Inspection	0B-8
Precautions	0B-1	Steering System Inspection	0B-9
Precautions for Maintenance and Lubrication.....	0B-1	Propeller Shafts and Drive Shafts Inspection....	0B-10
Scheduled Maintenance	0B-1	Manual Transmission Oil Inspection	0B-10
Maintenance Schedule under Normal Driving Conditions	0B-1	Manual Transmission Oil Change	0B-10
Maintenance Recommended under Severe Driving Conditions	0B-2	Automatic Transmission Fluid Inspection.....	0B-10
Repair Instructions	0B-3	Automatic Transmission Fluid Change	0B-10
Engine Accessory Drive Belt Inspection	0B-3	Automatic Transmission Fluid Cooler Hose Inspection.....	0B-11
Engine Accessory Drive Belt Replacement.....	0B-3	Transfer Oil Inspection (If Equipped)	0B-11
Valve Lash (Clearance) Inspection	0B-4	Differential Oil Inspection	0B-11
Engine Oil and Filter Change	0B-4	Transfer (If Equipped) or Differential Oil Change.....	0B-11
Engine Coolant Change	0B-5	Power Steering (P/S) System Inspection	0B-11
Exhaust system Inspection	0B-5	All Hinges, Latches and Locks Inspection.....	0B-12
Spark Plugs Replacement	0B-5	HVAC Air Filter Inspection (If Equipped).....	0B-12
Air Cleaner Filter Inspection.....	0B-5	HVAC Air Filter Replacement (If Equipped)	0B-12
Air Cleaner Filter Replacement.....	0B-5	Final Inspection for Maintenance Service	0B-12
Fuel Lines and Connections Inspection	0B-6	Specifications	0B-14
Fuel Filter Replacement.....	0B-6	Tightening Torque Specifications.....	0B-14
Fuel Tank Inspection.....	0B-6	Special Tools and Equipment	0B-14
		Recommended Fluids and Lubricants.....	0B-14
		Special Tool	0B-14

General Information

General Description

Abbreviations

S6JB0B0101001

A:
ABDC: After Bottom Dead Center
ABS: Anti-lock Brake System
AC: Alternating Current
A/C: Air Conditioning
A-ELR: Automatic-Emergency Locking Retractor
A/F: Air Fuel Mixture Ratio
ALR: Automatic Locking Retractor
API: American Petroleum Institute
ATDC: After Top Dead Center
ATF: Automatic Transmission Fluid
A/T: Automatic Transmission
AWD: All Wheel Drive
B:
BBDC: Before Bottom Dead Center
BCM: Body Electrical Control Module
BTDC: Before Top Dead Center
B+: Battery Positive Voltage
C:
CAN: Controller Area Network
CKP Sensor: Crankshaft Position Sensor
CKT: Circuit
CMP Sensor: Camshaft Position Sensor
CO: Carbon Monoxide
CPP Switch: Clutch Pedal Position Switch (Clutch Switch, Clutch Start Switch)
CPU: Central Processing Unit
CRS: Child Restraint System
D:
DC: Direct Current
DLC: Data Link Connector (Assembly Line Diag. Link, ALDL, Serial Data Link, SDL)
DOHC: Double Over Head Camshaft
DOJ: Double Offset Joint
DRL: Daytime Running Light
DTC: Diagnostic Trouble Code (Diagnostic Code)
E:
EBCM: Electronic Brake Control Module, ABS Control Module
EBD: Electronic Brake Force Distribution
ECM: Engine Control Module
ECT Sensor: Engine Coolant Temperature Sensor (Water Temp. Sensor, WTS)
EFE Heater: Early Fuel Evaporation Heater (Positive Temperature Coefficient, PTC Heater)
EGR: Exhaust Gas Recirculation
EGRT Sensor: EGR Temperature Sensor (Recirculated Exhaust Gas Temp. Sensor, REGTS)
ELR: Emergency Locking Retractor
EPS: Electronic Power Steering
ESP®: Electronic Stability Program
EVAP: Evaporative Emission
EVAP Canister: Evaporative Emission Canister (Charcoal Canister)

F:
FWD: Front Wheel Drive
4WD: 4 Wheel Drive
G:
GEN: Generator
GND: Ground
H:
HC: Hydrocarbons
HO2S: Heated Oxygen Sensor
HVAC: Heating, Ventilating and Air Conditioning
I:
IAC Valve: Idle Air Control Valve (Idle Speed Control Solenoid Valve, ISC Solenoid Valve)
IAT Sensor: Intake Air Temperature Sensor (Air temperature Sensor, ATS)
ICM: Immobilizer Control Module
IG: Ignition
IMT: Intake Manifold Tuning
ISC Actuator: Idle Speed Control Actuator (Motor)
L:
LH: Left Hand
LSPV: Load Sensing Proportioning Valve
M:
MAF Sensor: Mass Air Flow Sensor (Air Flow Sensor, AFS, Air Flow Meter, AFM)
MAP Sensor: Manifold Absolute Pressure Sensor (Pressure Sensor, PS)
Max: Maximum
MFI: Multiport Fuel Injection (Multipoint Fuel Injection)
MIL: Malfunction Indicator Lamp ("SERVICE ENGINE SOON" Light)
Min: Minimum
M/T: Manual Transmission
N:
NOx: Nitrogen Oxides
O:
OBD: On-Board Diagnostic System (Self-Diagnosis Function)
OCM: Occupant Classification module
O/D: Overdrive
OHC: Over Head Camshaft
O2S: Oxygen Sensor
P:
PCM: Powertrain Control Module
PCV: Positive Crankcase Ventilation
PNP: Park / Neutral Position
PSP Switch: Power Steering Pressure Switch (P/S Pressure Switch)
P/S: Power Steering
R:
RH: Right Hand

S:**SAE:** Society of Automotive Engineers**SDM:** Sensing and Diagnostic Module (Air Bag Controller, Air bag Control Module)**SFI:** Sequential Multiport Fuel Injection**SOHC:** Single Over Head Camshaft**T:****TBI:** Throttle Body Fuel Injection (Single-Point Fuel Injection, SPI)**TCC:** Torque Converter Clutch**TCM:** Transmission Control Module (A/T Controller, A/T Control Module)**TPMS:** Tire Pressure Monitoring System**TP Sensor:** Throttle Position Sensor**TVV:** Thermal Vacuum Valve (Thermal Vacuum Switching Valve, TVSV, Bimetal Vacuum Switching Valve, BVSV)**TWC:** Three Way Catalytic Converter (Three Way Catalyst)**2WD:** 2 Wheel Drive**V:****VIN:** Vehicle Identification Number**VSS:** Vehicle Speed Sensor**VVT:** Variable Valve Timing (Camshaft Position Control)**W:****WU-OC:** Warm Up Oxidation Catalytic Converter**WU-TWC:** Warm Up Three Way Catalytic Converter**Symbols**

S6JB0B0101002


Symbol	Definition
	Tightening torque
	Apply oil (engine, transmission, transfer, differential)
	Apply fluid (brake, power steering, automatic fluid)
	Apply SUZUKI SUPER GREASE A 99000-25010
	Apply SUZUKI SUPER GREASE C 99000-25030
	Apply SUZUKI SUPER GREASE E 99000-25050
	Apply SUZUKI SUPER GREASE H 99000-25120
	Apply SUZUKI SUPER GREASE I 99000-25210
	Apply SUZUKI BOND NO. 1215 99000-31110
	Apply SUZUKI BOND NO. 1207F 99000-31250
	Apply SUZUKI BOND NO. 1217G 99000-31260
	Apply SUZUKI BOND NO. 1216B 99000-31230
	Apply SUZUKI SILICONE SEALANT 99000-31120
	Apply SUZUKI SEALING COMPOUND 366E 99000-31090
	Apply THREAD LOCK 1305 99000-32100
	Apply THREAD LOCK 1322 99000-32110
	Apply THREAD LOCK 1342 99000-32050
	Do not reuse.
	Note on reassembly.

Wire Color Symbols

S6JB0B0101003

Symbol		Wire Color
B	BLK	Black
Bl	BLU	Blue
Br	BRN	Brown
G	GRN	Green
Gr	GRY	Gray
Lbl	LT BLU	Light blue
Lg	LT GRN	Light green
O, Or	ORN	Orange
R	RED	Red
W	WHT	White
Y	YEL	Yellow
P	PNK	Pink
V	PPL	Violet (Purple)

There are two kinds of colored wire used in this vehicle. One is single-colored wire and the other is dual-colored (striped) wire. As the color symbol, the single-colored wire uses only one, three or five alphabets (i.e. “G” or “GRN”); the dual-colored wire uses two color symbols combination (i.e. “G/Y” or “GRN/YEL”). The first symbol represents the base color of the wire (“G” or “GRN” in the figure) and the second symbol represents the color of the stripe (“Y” or “YEL” in the figure).

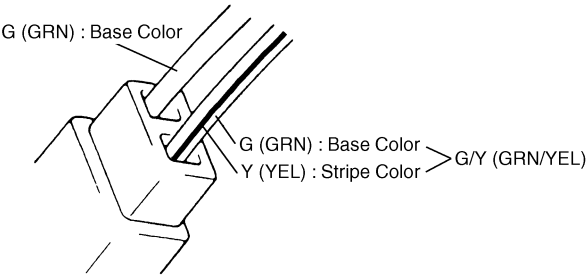

I1SQ01010037-01

Fastener Information

S6JB0B0101004

Metric Fasteners


Most of the fasteners used for this vehicle are metric. When replacing any fasteners, it is most important that replacement fasteners be the correct diameter, thread pitch and strength.

Fastener Strength Identification

Most commonly used metric fastener strength property classes are 4T, 6.8, 7T, 8.8 and radial line with the class identification embossed on the head of each bolt. Some metric nuts will be marked with punch, 6 or 8 mark strength identification on the nut face. Figure shows the different strength markings.

When replacing metric fasteners, be careful to use bolts and nuts of the same strength or greater than the original fasteners (the same number marking or higher). It is likewise important to select replacement fasteners of the correct diameter and thread pitch. Correct replacement bolts and nuts are available through the parts division.

Metric bolts: Identification class numbers or marks correspond to bolt strength (increasing numbers represent increasing strength).

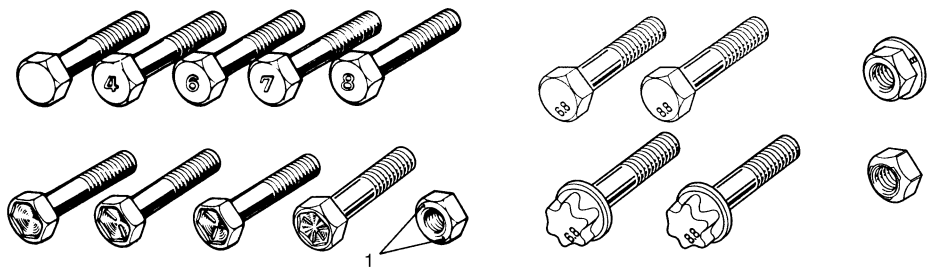

1. Nut strength identification

I1SQ01010003-01







Standard Tightening Torque

Each fastener should be tightened to the torque specified in each section of this manual. If no description or specification is provided, refer to the following tightening torque chart for the applicable torque for each fastener. When a fastener of greater strength than the original one is used, however, use the torque specified for the original fastener.

NOTE

- For the flanged bolt, flanged nut and self-lock nut of 4T and 7T strength, add 10% to the tightening torque given in the following chart.
- The following chart is applicable only where the fastened parts are made of steel light alloy.

Tightening torque chart

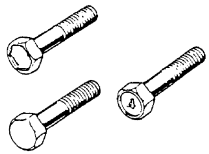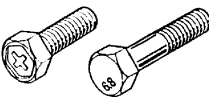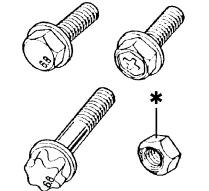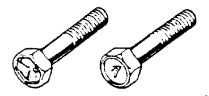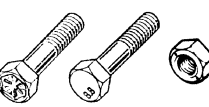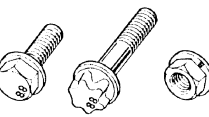
Strength	Unit	Thread Diameter (Nominal Diameter) (mm)								
		4	5	6	8	10	12	14	16	18
A equivalent of 4T strength fastener	N·m	1.5	3.0	5.5	13	29	45	65	105	160
 I1SQ01010004-01	kgf-m	0.15	0.30	0.55	1.3	2.9	4.5	6.5	10.5	16.0
	lb-ft	1.0	2.5	4.0	9.5	21.0	32.5	47.0	76.0	116.0
A equivalent of 6.8 strength fastener without flange	N·m	2.4	4.7	8.4	20	42	80	125	193	280
 I1SQ01010005-01	kgf-m	0.24	0.47	0.84	2.0	4.2	8.0	12.5	19.3	28.0
	lb-ft	2.0	3.5	6.0	14.5	30.5	58.0	90.5	139.5	202.5
A equivalent of 6.8 strength fastener with flange *: Self-lock nut (6 strength)	N·m	2.4	4.9	8.8	21	44	84	133	203	298
 I1SQ01010006-01	kgf-m	0.24	0.49	0.88	2.1	4.4	8.4	13.3	20.3	29.8
	lb-ft	2.0	3.5	6.5	15.5	32.0	61.0	96.5	147.0	215.5
A equivalent of 7T strength fastener	N·m	2.3	4.5	10	23	50	85	135	210	240
 I1SQ01010007-01	kgf-m	0.23	0.45	1.0	2.3	5.0	8.5	13.5	21	24
	lb-ft	2.0	3.5	7.5	17.0	36.5	61.5	98.0	152.0	174.0
A equivalent of 8.8 strength bolt (8 strength nut) without flange	N·m	3.1	6.3	11	27	56	105	168	258	373
 I1SQ01010008-01	kgf-m	0.31	0.63	1.1	2.7	5.6	10.5	16.8	25.8	37.3
	lb-ft	2.5	4.5	8.0	19.5	40.5	76.0	121.5	187.0	270.0
A equivalent of 8.8 strength bolt (8 strength nut) with flange	N·m	3.2	6.5	12	29	59	113	175	270	395
 I1SQ01010009-01	kgf-m	0.32	0.65	1.2	2.9	5.9	11.3	17.5	27	39.5
	lb-ft	2.5	5.0	9.0	21.0	43.0	82.0	126.5	195.5	286.0

Vehicle Lifting Points

S6JB0B0101005

⚠ WARNING

- Before applying hoist to underbody, always take vehicle balance throughout service into consideration. Vehicle balance on hoist may change depending of what part to be removed.
- Before lifting up the vehicle, check to be sure that end of hoist arm is not in contact with brake pipe, fuel pipe, bracket or any other part.
- When using frame contact hoist, apply hoist as shown (right and left at the same position). Lift up the vehicle till 4 tires are a little off the ground and make sure that the vehicle will not fall off by trying to move vehicle body in both ways. Work can be started only after this confirmation.
- Make absolutely sure to lock hoist after vehicle is hoisted up.

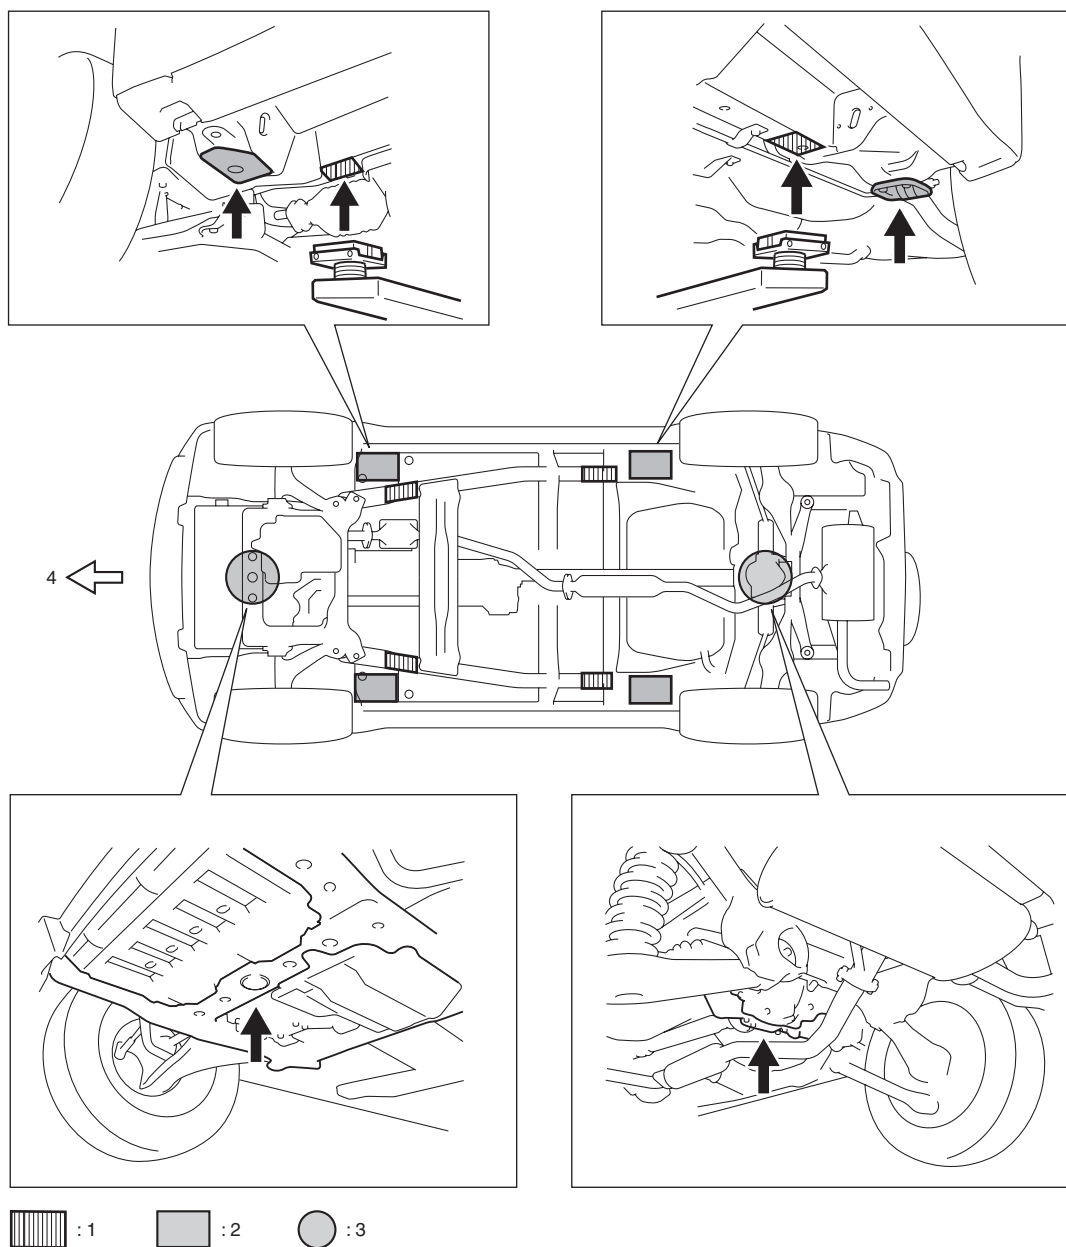

I5JB0A010002-02

1. Support position for frame contact hoist (when engine assembly is not removed) and safety stand	3. Floor jack position
2. Support position for frame contact hoist (when engine assembly is removed)	4. Vehicle front

When Using Floor Jack

⚠ WARNING



- If the vehicle to be jacked up only at the front or rear end, be sure to block the wheels on ground in order to ensure safety.

After the vehicle is jacked up, be sure to support it on stands. It is extremely dangerous to do any work on the vehicle raised on jack alone.

⚠ CAUTION



- Never apply jack against engine under cover, suspension parts (i.e., stabilizer, etc.) or vehicle floor, or it may get damaged.

In raising front or rear vehicle end off the floor by jacking, be sure to put the jack against the center portion of the front suspension frame (1) or rear differential (2).

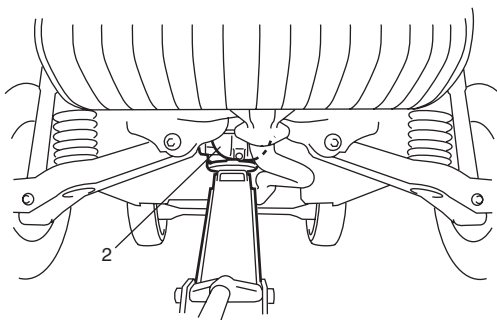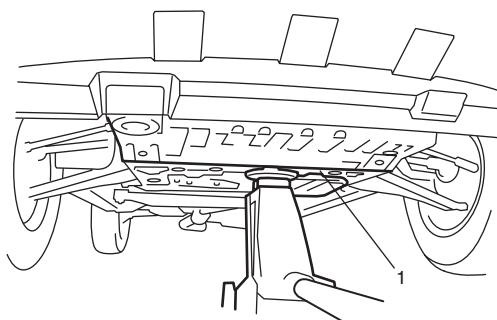

I5JB0A010003-01

To perform service with either front or rear vehicle end jacked up, be sure to place safety stands (1) under chassis frame so that body is securely supported. And then check to ensure that chassis frame does not slide on safety stands (1) and the vehicle is held stable for safety's sake.

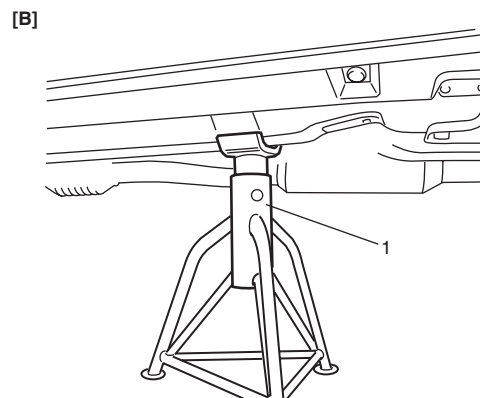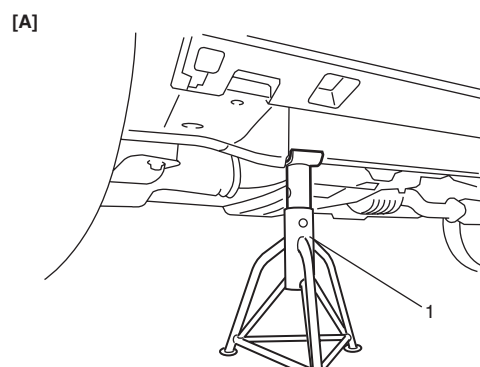

I5JB0A010004-02


[A]: Front

[B]: Rear

Vehicle Identification Number

S6JB0B0101006


The vehicle identification number is punched on the front dash panel in engine room and it is also attached on the left front top of instrument panel depending on vehicle specification.

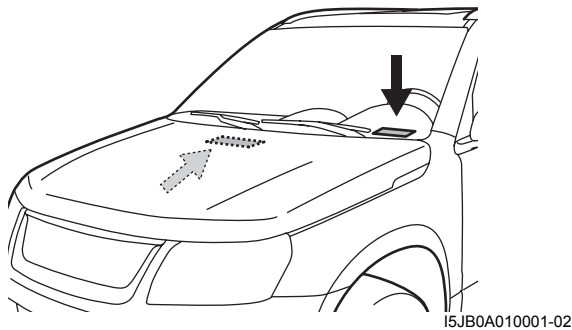

Engine Identification Number

S6JB0B0101007


The number is punched on the cylinder block.

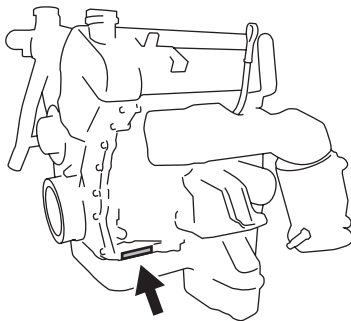

Transmission Identification Number

S6JB0B0101008

The number is located on the transmission case.

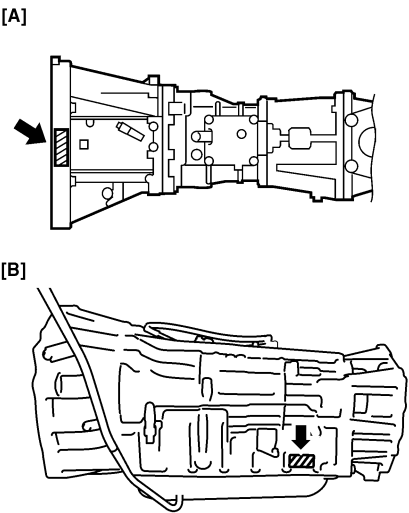

[A]: M/T	[B]: 5A/T
----------	-----------

Component Location


Warning, Caution and Information Label Location

S6JB0B0103001

The figure shows main labels among others that are attached to vehicle component parts.
When servicing and handling parts, refer to WARNING / CAUTION instructions printed on labels.
If any WARNING / CAUTION label is found stained or damaged, clean or replace it as necessary.

NOTE


Air bag labels are attached on the vehicle equipped with air bag system only.

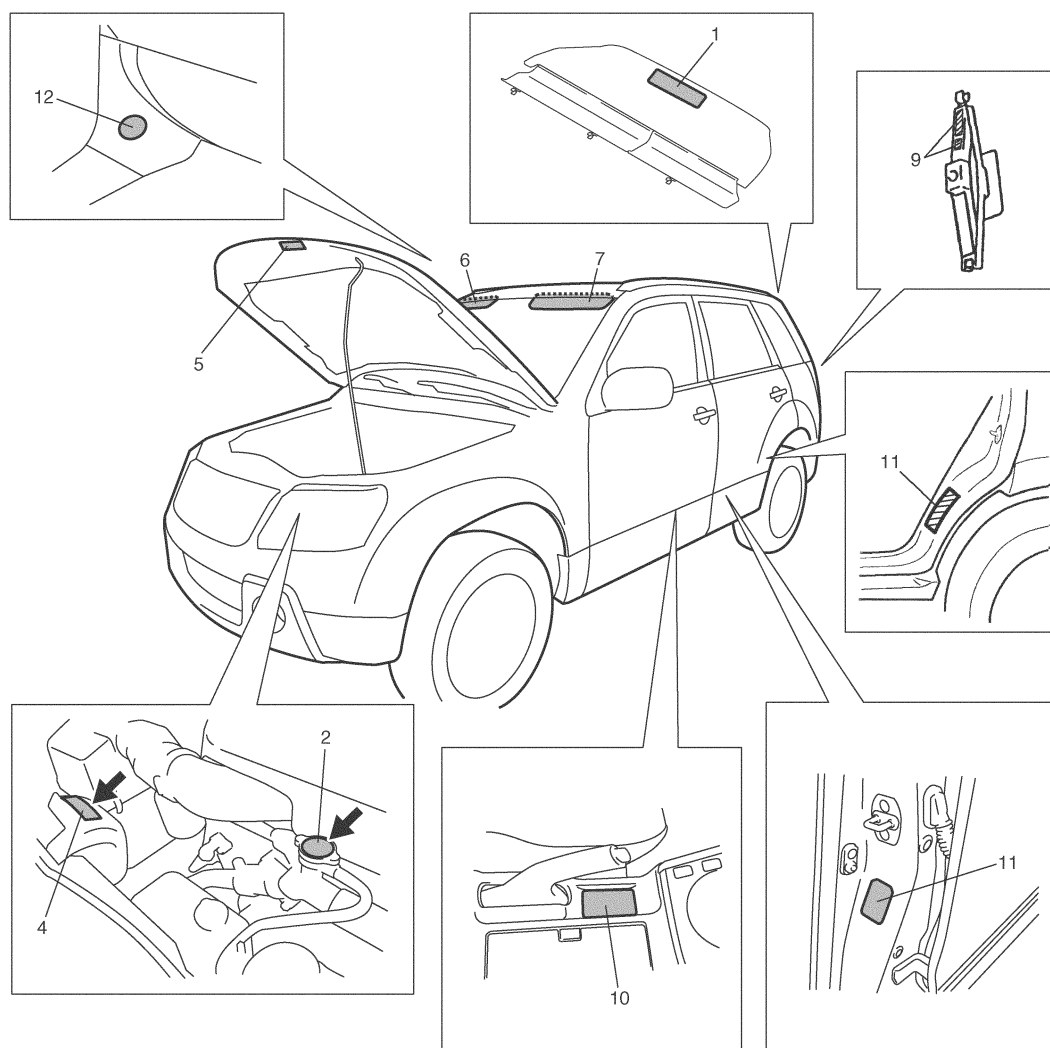

I5JB0C010002-02

1. Tonneau cover label (if equipped)	5. A/C label	9. Jacking label
2. Radiator cap label	6. Air bag label on sun visor	10. Parking (Transfer) label (if equipped)
3. Blank	7. Air bag label and utility vehicle label on sun visor	11. Side air bag label (Both RH and LH)
4. Engine cooling fan label	8. Blank	12. Child seat label on instrument panel

0A-9 General Information:

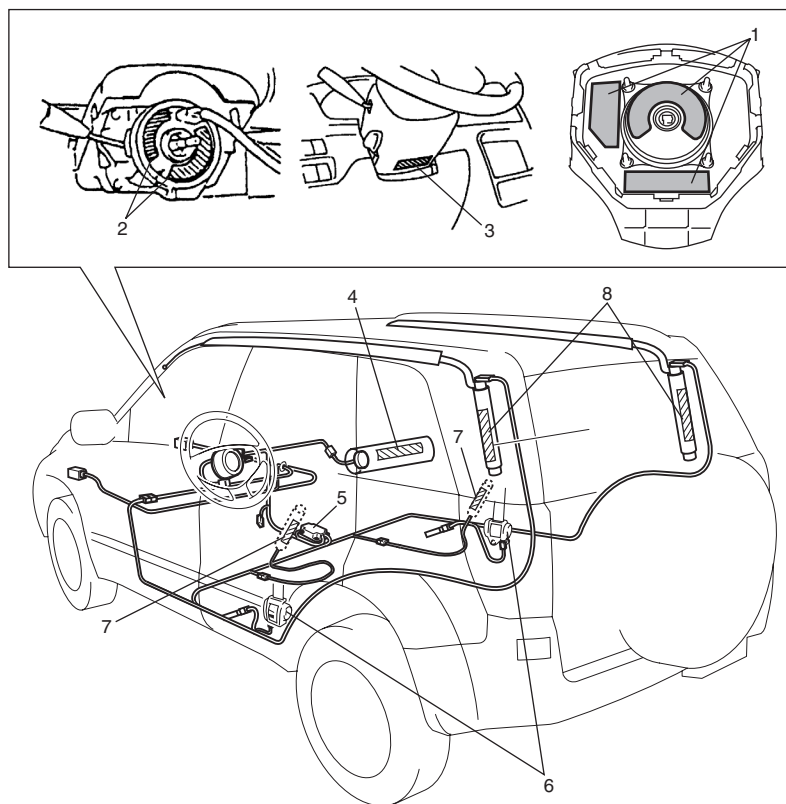

I5JB0A010009-03

1. Air bag label on driver air bag (inflator) module	4. Air bag label on passenger air bag (inflator) module	7. Air bag label on side air bag module
2. Air bag label on contact coil assembly	5. Air bag label on SDM	8. Air bag label on curtain air bag module
3. Air bag label on steering column cover	6. Pretensioner label on seat belt pretensioner	

Interval		Km (x 1,000)	15	30	45	60	75	90	
		Miles (x 1,000)	9	18	27	36	45	54	
		Months	12	24	36	48	60	72	
Engine									
Accessory drive belt (I: ⚙️, R: ⚙️)			—	—	I	—	—	R	
Valve lash (clearance) (I: ⚙️)			—	I	—	I	—	I	
Engine oil and oil filter (R: ⚙️)			R	R	R	R	R	R	
Engine coolant (R: ⚙️)			—	—	R	—	—	R	
Exhaust system (I: ⚙️)			—	I	—	I	—	I	
Ignition system									
*Spark plugs (R: ⚙️)	When unleaded fuel is used	Vehicle with A/F sensor	Nickel Plug	—	—	R	—	—	R
			Iridium Plug	Replace every 105,000 km (63,000 miles) or 84 months					
		Vehicle without A/F sensor	Nickel Plug	—	R	—	R	—	R
			Iridium Plug	—	—	—	R	—	—
	When leaded fuel is used, refer to “Maintenance Recommended under Severe Driving Conditions”.								
Fuel system									
Air cleaner filter (I: ⚙️, R: ⚙️)		Paved-road	I	I	R	I	I	R	
		Dusty conditions	Refer to “Maintenance Recommended under Severe Driving Conditions”.						
Fuel lines and connections (I: ⚙️)			—	I	—	I	—	I	
Fuel filter (R: ⚙️)			Replace every 105,000 km (63,000 miles)						
Fuel tank (I: ⚙️)			—	—	I	—	—	I	
Emission control system									
Crankcase ventilation hoses and connections (vehicle without A/F sensor) (I: ⚙️)			—	—	I	—	—	I	
*PCV valve (I: ⚙️)		Vehicle with A/F sensor	—	—	—	—	—	I	
		Vehicle without A/F sensor	—	—	I	—	—	I	
*Fuel evaporative emission control system (I: ⚙️)		Vehicle with A/F sensor	—	—	—	—	—	I	
		Vehicle without A/F sensor	—	I	—	I	—	I	
Brake									
Brake discs and pads (thickness, wear, damage) (I: ⚙️)			I	I	I	I	I	I	
Brake drums and shoes (wear, damage) (I: ⚙️)			—	I	—	I	—	I	
Brake hoses and pipes (leakage, damage, clamp) (I: ⚙️)			—	I	—	I	—	I	
Brake fluid (R: ⚙️)			—	R	—	R	—	R	
Brake lever and cable (damage, stroke, operation) (I: ⚙️)			Inspect at first 15,000 km (9,000 miles only)						
Chassis and body									

0B-2 Maintenance and Lubrication:

Interval	Km (x 1,000)	15	30	45	60	75	90
	Miles (x 1,000)	9	18	27	36	45	54
	Months	12	24	36	48	60	72
Clutch (fluid leakage, level) (I: ⚙)		—	I	—	I	—	I
Tires (wear, damage, rotation) / wheels (damage) (I: ⚙ / ⚙)		I	I	I	I	I	I
Suspension system (tightness, damage, rattle, breakage) (I: ⚙)		—	I	—	I	—	I
Steering system (tightness, damage, breakage, rattle) (I: ⚙)		—	I	—	I	—	I
Drive shaft (axle) boots / Propeller shafts (I: ⚙)		—	—	I	—	—	I
Manual transmission oil (leakage, level) (I: ⚙ 1st 15,000 km only) (R: ⚙)		I	—	R	—	—	R
Automatic transmission fluid	Fluid level (I: ⚙)	—	I	—	I	—	I
	Fluid change (R: ⚙)	Replace every 165,000 km (99,000 miles)					
	Fluid hose (I: ⚙)	—	—	—	I	—	—
Transfer oil (leakage, level) (I: ⚙)		I	—	I	—	I	—
Differential oil (leakage, level) (R: ⚙ 1st 15,000 km only) (I: ⚙)		R or I	—	I	—	I	—
Power steering (if equipped) (I: ⚙)		I	I	I	I	I	I
All latches, hinges and locks (I: ⚙)		—	I	—	I	—	I
HVAC air filter (if equipped) (I: ⚙) (R: ⚙)		—	I	R	—	I	R

NOTE

- “R”: Replace or change
- “I”: Inspect and correct, replace or lubricate if necessary
- For Sweden, items with asterisk (*) should be performed by odometer reading only.
- For spark plugs, replace every 50,000 km if the local law requires.
- Nickel spark plug: BKR6E-11 (NGK) or K20PR-U11 (DENSO)
- Iridium spark plug: IFR6J11 (NGK)

Maintenance Recommended under Severe Driving Conditions

S6JB0B0205002

If the vehicle is usually used under the conditions corresponding to any severe condition code, IT IS RECOMMENDED that applicable maintenance operation be performed at the particular interval as shown in the following table.

Severe condition code:

A: Repeated short trips

B: Driving on rough and/or muddy roads

C: Driving on dusty roads

D: Driving in extremely cold weather and/or salted roads




 
 



E: Repeated short trips in extremely cold weather

F: Leaded fuel use

G: —————

H: Towing a trailer (if admitted)

Severe Condition Code	Maintenance	Maintenance Operation	Maintenance Interval
– B C D ———	Engine accessory drive belt	⚙	Every 15,000 km (9,000 miles) or 12 months
		I	
		R	Every 45,000 km (27,000 miles) or 36 months
A – C D E F – H	Engine oil and oil filter	⚙	Every 7,500 km (4,500 miles) or 6 months
		R	
– B —————	Exhaust pipe mountings	⚙	Every 15,000 km (9,000 miles) or 12 months
		I	
– B —————	Suspension bolts and nuts	⚙	Every 15,000 km (9,000 miles) or 12 months
		T	
— C —————	Air cleaner filter *1	⚙	Every 2,500 km (1,500 miles)
		I	
		R	Every 30,000 km (18,000 miles) or 24 months

 Severe Condition Code	Maintenance		Maintenance Operation	Maintenance Interval
A B C – E F – H	Spark plugs	Nickel plug	 R	Every 10,000 km (6,000 miles) or 8 months
		Iridium plug		Every 30,000 km (18,000 miles) or 24 months
– B C D – – – H	Wheel bearings		 I	Every 15,000 km (9,000 miles) or 12 months
– B – D E – – H	Drive shaft boots and propeller shafts		 I	Every 15,000 km (9,000 miles) or 12 months
– B – – E – – H	Manual transmission oil / Transfer oil / Differential oil		 /  R	First time only: 15,000 km (9,000 miles) or 12 months
				Second time and after: Every 30,000 km (18,000 miles) or 24 months reckoning from 0 km (0 mile) or 0 month
– B – – E – – H	Automatic transmission fluid		 R	Every 30,000 km (18,000 miles) or 24 months
– – C D – – –	HVAC air filter (if equipped) *2		 I	Every 15,000 km (9,000 miles) or 12 months
			 R	Every 45,000 km (27,000 miles) or 36 months

NOTE

- “I”: Inspect and correct or replace if necessary.
- “R”: Replace or change.
- “T”: Tighten to specified torque.
- *1: Inspect more frequently if the vehicle is used under dusty conditions.
- *2: Clean more frequently if the air flow from air conditioning decreases.

Repair Instructions**Engine Accessory Drive Belt Inspection**

S6JB0B0206001

⚠ WARNING

All inspection and replacement are to be performed with ENGINE NOT RUNNING.

Water Pump and Generator Drive Belt

Inspect belt for cracks, cuts, deformation, wear, cleanliness and tension. If any defect exists, adjust or replace.

For belt inspection, refer to “Water Pump and Generator Drive Belt Inspection and Adjustment in Section 1J”.

Power Steering Pump and A/C Compressor (If Equipped) Drive Belt

Inspect belt for cracks, cuts, deformation, wear, cleanliness and tension. If any defect exists, adjust or replace.

For inspection, refer to “P/S Pump and A/C Compressor (If Equipped) Drive Belt Inspection and Adjustment in Section 6C”.

Engine Accessory Drive Belt Replacement

S6JB0B0206002

Water Pump and Generator Drive Belt

Replace belt with new one referring to “Water Pump and Generator Drive Belt Removal and Installation in Section 1J”.

Power Steering Pump and A/C Compressor (If Equipped) Drive Belt


Replace belt with new one referring to “P/S Pump and A/C Compressor (If Equipped) Drive Belt Removal and Installation in Section 6C”.

Valve Lash (Clearance) Inspection

S6JB0B0206003

Inspect intake and exhaust valve lash and adjust as necessary.

Refer to "Valve Lash (Clearance) Inspection in Section 1D" for valve lash inspection and adjustment procedure.

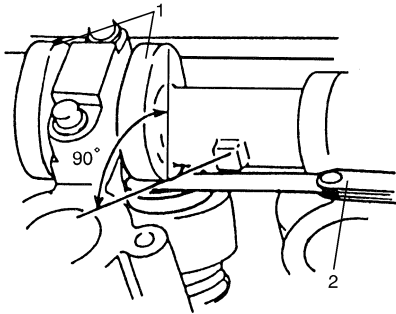

I2RH0B020003-02

1. Camshaft	2. Thickness gauge
-------------	--------------------

Engine Oil and Filter Change

S6JB0B0206004

⚠ WARNING


- New and used engine oil can be hazardous.
Be sure to read "General Precautions in Section 00" and observe what is written there.
- Steps 1) – 8) must be performed with **ENGINE NOT RUNNING**. For Step 9), be sure to have adequate ventilation while engine is running.

Before draining engine oil, check engine for oil leakage. If any evidence of leakage is found, make sure to correct defective part before proceeding to the following work.

- 1) Drain engine oil by removing drain plug.
- 2) After draining oil, wipe drain plug clean. Reinstall drain plug.

Tightening torque

Engine oil drain plug (a): 35 N·m (3.5 kgf-m, 25.5 lb-ft)

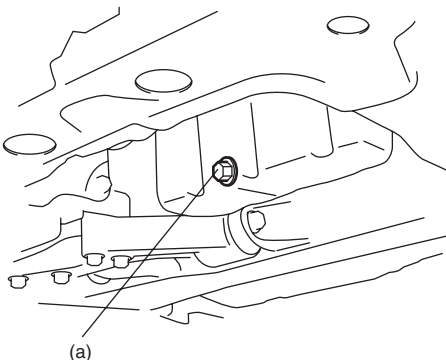


I6JB01020011-02

- 3) Loosen oil filter by using oil filter wrench (special tool) and accessing from between suspension frame and engine oil pan.


Special tool

(A): 09915-47320

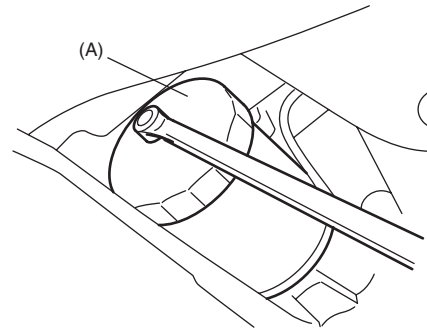

I6JB01020001-01

- 4) Apply engine oil to new oil filter O-ring.

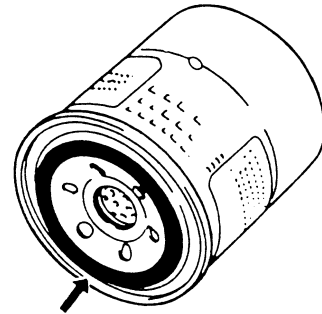

IYSQ01020009-01

- 5) Screw new filter on oil filter stand by hand until the filter O-ring contacts the mounting surface.


⚠ CAUTION

To tighten oil filter properly, it is important to accurately identify the position at which filter O-ring first contacts the mounting surface.

- 6) Tighten oil filter (1) 3/4 turn from the point of contact with the mounting surface using an oil filter wrench.

Tightening torque

Oil filter (a): 14 N·m (1.4 kgf-m, 10.5 lb-ft)

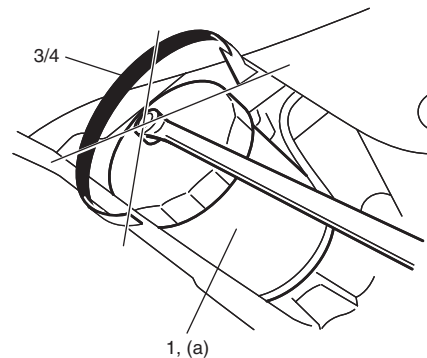

I6JB01020002-01

- 7) Replenish oil until oil level is brought to FULL level mark on dipstick. (oil pan and oil filter capacity). The filler inlet is at the top of the cylinder head cover. Use only engine oil of SG, SH, SJ, SL or SM grade. Select the appropriate oil viscosity according to the chart [A].
- It is highly recommended to use SAE 5W-30 oil. However, SAE 10W-30 oil is usable for ambient temperatures above -18°C (0°F).

NOTE

Engine oil capacity is specified below. However, note that the amount of oil required when actually changing oil may somewhat differ from the data depending on various conditions (temperature, viscosity, etc.)

Engine oil specifications


Oil pan capacity: About 4.3 liters (9.1 US pt. / 7.6 Imp pt.)

Oil filter capacity: About 0.5 liters (1.1 US pt. / 0.9 Imp pt.)


Others: About 0.5 liters (1.1 US pt. / 0.9 Imp pt.)

Total: About 5.3 liters (11.2 US pt. / 9.3 Imp pt.)

Proper engine oil viscosity chart

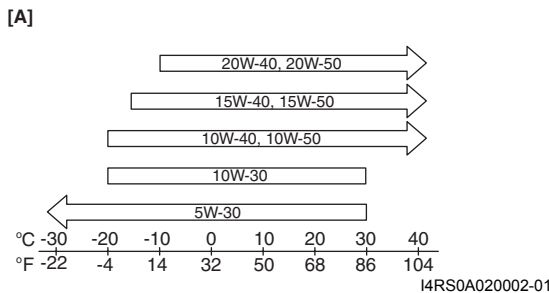

- 8) Check oil filter and drain plug for oil leakage.
- 9) Start engine and run it for 3 minutes. Stop it and wait 5 minutes before checking oil level. Add oil, as necessary, to bring oil level to FULL level mark (hole) (1) on dipstick.

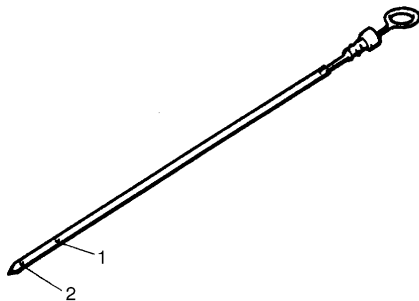

IYSQ01020012-01

2. Low level mark (hole)

Engine Coolant Change

S6JB0B0206005

Change engine coolant referring to "Cooling System Flush and Refill in Section 1F".

Exhaust system Inspection


S6JB0B0206006

⚠ WARNING

To avoid danger of being burned, do not touch exhaust system when it is still hot. Any service on exhaust system should be performed when it is cool.

When carrying out periodic maintenance, or the vehicle is raised for other service, check exhaust system as follows:

- Check rubber mountings for damage, deterioration, and out of position.
- Check exhaust system for leakage, loose connections, dents and damages.
If bolts or nuts are loose, tighten them to specification.

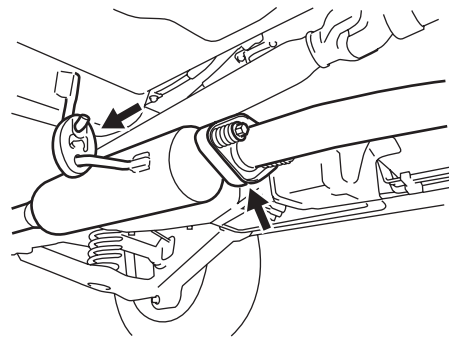

I5JB0A020022-01

- Check nearby body areas for damaged, missing, or mispositioned parts, open seams, holes, loose connections or other defects which could permit exhaust fumes to seep into the vehicle.
- Make sure that exhaust system components have enough clearance from the underbody to avoid overheating and possible damage to the floor carpet.
- Any defects should be fixed at once.

Spark Plugs Replacement

S6JB0B0206007

Replace spark plugs with new ones referring to "Spark Plug Removal and Installation in Section 1H".

Air Cleaner Filter Inspection

S6JB0B0206008

Check that filter is not excessively dirty, damaged or oily and clean filter with compressed air from air outlet side of filter.

Refer to "Air Cleaner Filter Inspection and Cleaning in Section 1D".

Air Cleaner Filter Replacement

S6JB0B0206009

Replace air cleaner filter with new one referring to "Air Cleaner Filter Removal and Installation in Section 1D".

Fuel Lines and Connections Inspection

S6JB0B0206010

Visually inspect fuel lines and connections for evidence of fuel leakage, hose cracking and damage. Make sure all clamps are secure.

Repair leaky joints, if any.

Replace hoses that are suspected of being cracked.

Fuel Filter Replacement

S6JB0B0206011

Fuel filter is installed in fuel pump assembly in fuel tank. Replace fuel filter or fuel pump assembly with new one, referring to "Fuel Pump Assembly Removal and Installation in Section 1G".

Fuel Tank Inspection

S6JB0B0206012

Check fuel tank for damage, cracks, fuel leakage, corrosion and tank bolts looseness.

If a problem is found, repair or replace.

Crankcase Ventilation Hoses and Connections Inspection (Vehicle without A/F Sensor)

S6JB0B0206013

Check crankcase ventilation hose and connections for leaks, cracks or clog. Repair or replace if necessary.

PCV Valve Inspection

S6JB0B0206014

Check crankcase ventilation hose and PCV hose for leaks, cracks or clog, and PCV valve for stick or clog. Refer to "PCV Valve Inspection in Section 1B" for PCV valve checking procedure.


Fuel Evaporative Emission Control System Inspection

S6JB0B0206015

1) Visually inspect hoses for cracks, damage, or excessive bends. Inspect all clamps for damage and proper position.

2) Check EVAP canister for operation and clog, referring to "EVAP Canister Inspection in Section 1B".

If a malfunction is found, repair or replace.

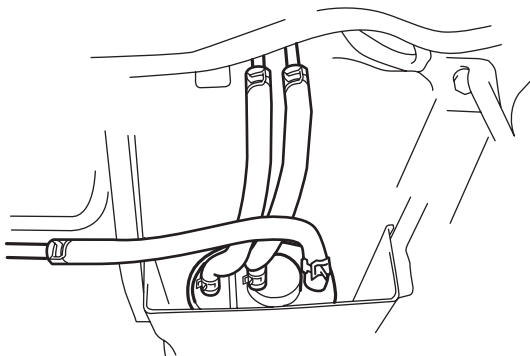


I5JB0A020005-01

Brake Discs and Pads Inspection

S6JB0B0206016

Check front disc brake pads and discs for excessive wear, damage and deflection. Replace parts as necessary. For details, refer to "Front Brake Disc and Pad Inspection in Section 4B".

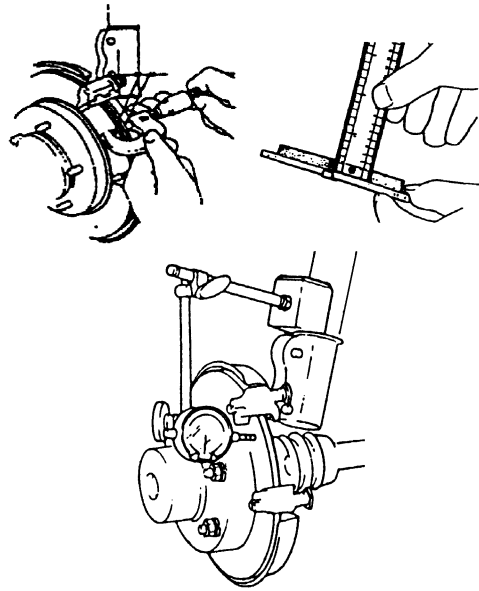


I5JB0A020006-01

Brake Drums and Shoes Inspection

S6JB0B0206017

Check rear brake drums and brake linings for excessive wear and damage, while wheels and drums are removed. At the same time, check wheel cylinders for leaks. Replace these parts as necessary.

For details, refer to "Rear Brake Drum and Shoe Inspection in Section 4C".

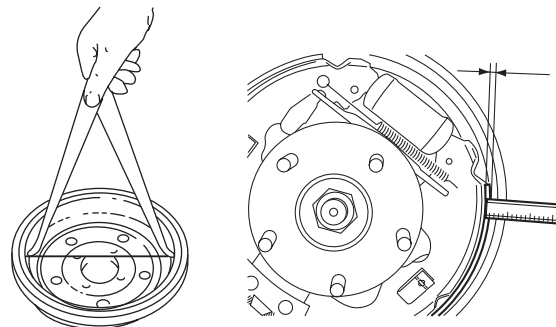

I5JB0A020007-02

Brake Hoses and Pipes Inspection


S6JB0B0206018

Perform this inspection where there is enough light and use a mirror as necessary.

Check brake hoses and pipes for proper hookup, leaks, cracks, chafing and other damage.

Check that hoses and pipes are clear of sharp edges and moving parts.

Repair or replace any of these parts as necessary.

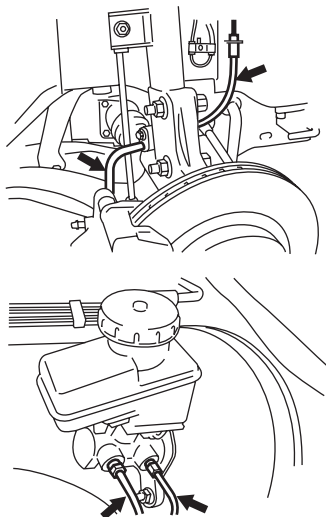

I5JB0A020008-01

Brake Fluid Change

S6JB0B0206019


Change brake fluid as follows.

- 1) Drain existing fluid from brake system completely.
- 2) Fill reservoir with specified brake fluid indicated on reservoir cap. For the details, refer to "Brake Fluid Level Check in Section 4A".
- 3) Carry out air purge operation, referring to "Air Bleeding of Brake System in Section 4A".

Parking Brake Lever and Cable Inspection

S6JB0B0206020

- 1) Inspect brake cable for damage and smooth movement.
Replace cable if it is in deteriorated condition.

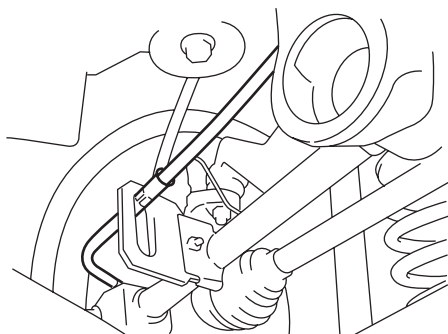


I5JB0A020023-01

- 2) Check tooth tip of each notch for damage or wear. If any damage or wear is found, replace parking lever.
- 3) Check parking brake lever for proper operation and stroke, and adjust it if necessary.
For checking and adjusting procedures referring to "Parking Brake Check and Adjustment in Section 4D".

Parking brake lever stroke

"a": 5 – 7 notches (with 200 N (20 kg, 44 lbs) of pull pressure)

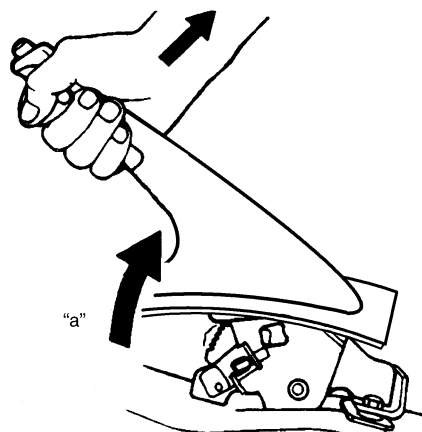


I5JB0A020024-01

Clutch Fluid Inspection

S6JB0B0206021

- 1) Check system for evidence of fluid leakage.
Repair leaky point if any.
- 2) Check reservoir for fluid level referring to "Clutch Fluid Inspection in Section 5C".

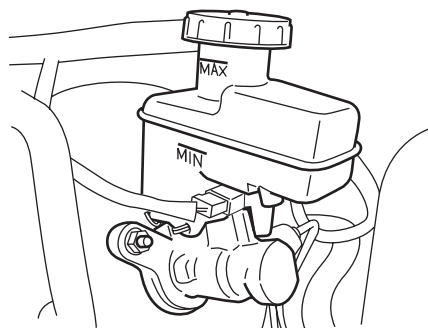


I5JB0A410005-01

Tire / Wheel Inspection and Rotation

S6JB0B0206022

- 1) Check tires for uneven or excessive wear, or damage.
If defective, replace. Refer to "Irregular and/or Premature Wear Description in Section 2D" and "Wear Indicators Description in Section 2D" for details.

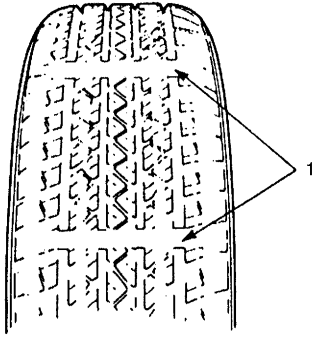

I2RH01240005-01

1. Wear indicator

- 2) Check inflating pressure of each tire and adjust pressure to specification as necessary. Refer to "Tires Description in Section 2D" for details.

NOTE

- Tire inflation pressure should be checked when tires are cool.
- Specified tire inflation pressure should be found on tire placard or in owner's manual which came with the vehicle.

- 3) Rotate tires. For details, refer to "Tire Rotation in Section 2D".

Wheel Discs Inspection

S6JB0B0206023

Inspect each wheel disc for dents, distortion and cracks. A disc in badly damaged condition must be replaced.

Wheel Bearing Inspection

S6JB0B0206024

- 1) Check front wheel bearing for wear, damage, abnormal noise or rattles.
For details, refer to "Front Wheel Hub, Disc, Nut and Bearing Check in Section 2B".
- 2) Check rear wheel bearing for wear, damage, abnormal noise or rattles.
For details, refer to "Rear Wheel Disc, Nut and Bearing Check in Section 2C".


Suspension System Inspection

S6JB0B0206025

Check suspension bolts and nuts painted with yellow for tightness and retighten them as necessary. Repair or replace defective parts, if any.

Front

- - Check stabilizer bushing for damage, wear or deformation.
- - Check stabilizer bar and joints for damage or deformation.
- - Inspect strut for damage, deformation, oil leakage and operation. If strut is found faulty, replace it as an assembly unit, because it can not be disassembled. Refer to "Front Strut Assembly Check in Section 2B" for operation check.
- - Inspect strut dust cover for damage or crack.
- - Check ball joint stud dust seal (boot) for leaks, detachment, tear or other damage.
- - Check suspension control arm bushing for damage, wear or deterioration.

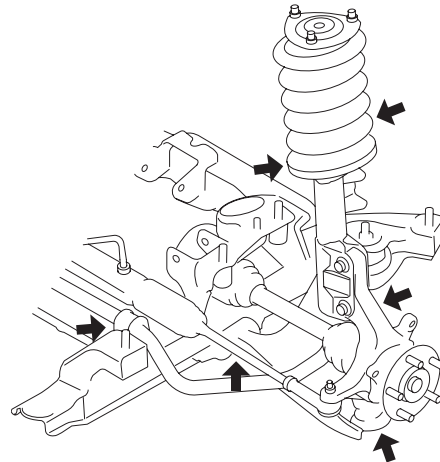


I5JB0A020009-01

- Check other suspension parts for damage, loose or missing parts; also for parts showing signs of wear or lack of lubrication. Replace any parts found defective.

Rear

- - Check shock absorber for damage, deformation, oil leakage and operation.
- - Check coil spring, upper arm, lower arm, control rod and trailing rod for deformation and damage.
 - Check bushings of each suspension part for wear, damage and deterioration.
 - Check bump stopper for damage and deterioration
 - Check ball joint stud dust seal (boot) for leaks, detachment, tear or other damage.

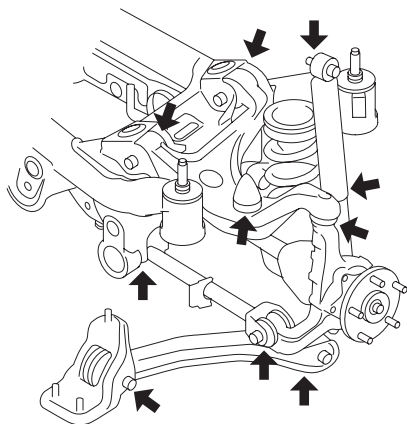


I5JB0A020010-01

- Check other suspension parts for damage, loose or missing parts; also for parts showing signs of wear or lack of lubrication. Replace any parts found defective.

Steering System Inspection


S6JB0B0206026

- 1) Check steering wheel for play and rattle, holding vehicle in straight forward condition on the ground.

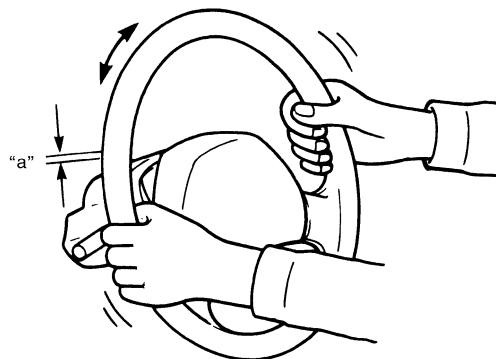Steering wheel play**"a": 0 – 30 mm (0 – 1.2 in.)**

I5JB0A630004-02

- 2) Check universal joints of steering shaft for rattle and damage. If rattle or damage is found, replace defective part with a new one.
- 3) Check steering linkage for looseness and damage. Repair or replace defective part, if any.
- 4) Check bolts and nuts for tightness and retighten them as necessary. Repair or replace defective parts, if any.
- 5) Check boots of steering linkage for damage (leaks, detachment, tear, dent, etc.). If damage is found, replace it with new one.
If any dent is found on steering rack boots, correct it to original shape by turning steering wheel to the right or left as far as it stops and holding it for a few seconds.

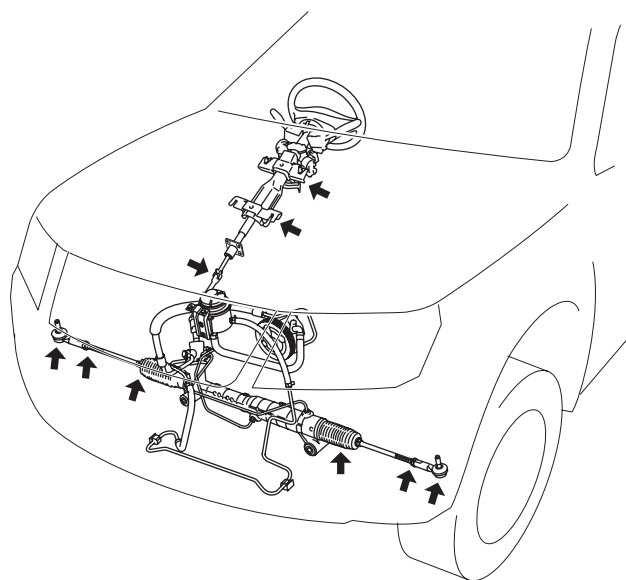

I5JB0C020001-01


- 6) Check wheel alignment referring to "Front Wheel Alignment Inspection and Adjustment in Section 2B".

Propeller Shafts and Drive Shafts Inspection

S6JB0B0206027

Propeller Shafts Inspection

- 1) Check universal joint and spline of propeller shaft for rattle. If rattle is found, replace defective part with a new one.

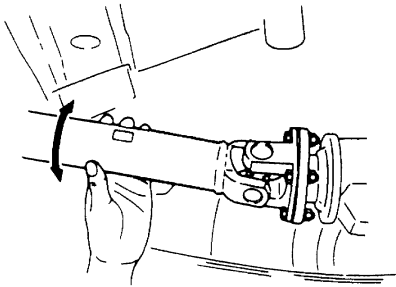


I5JB0A020019-02

- 2) Check propeller shaft (front and rear) flange yoke bolts for tightness, and retighten them as necessary. Refer to "Tightening Torque Specifications in Section 3D".

Drive Shafts Inspection

Check drive axle boots (wheel side and differential side) (1) for leaks, detachment, tear or other damage. Replace boot as necessary.

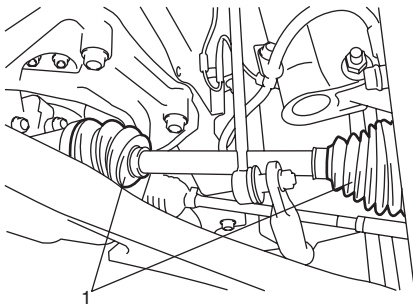


I5JB0A020012-01

Manual Transmission Oil Inspection

S6JB0B0206028

- 1) Inspect transmission case for evidence of oil leakage. Repair leaky point if any.
- 2) Make sure that vehicle is placed level for oil level check.
- 3) Remove level / filler plug (1) of transmission.
- 4) Check oil level.
Oil level can be checked roughly by means of level plug hole. That is, if oil flows out of level plug hole or if oil level is found up to hole when level / filler plug is removed, oil is properly filled.
If oil is found insufficient, pour specified amount of specified oil.

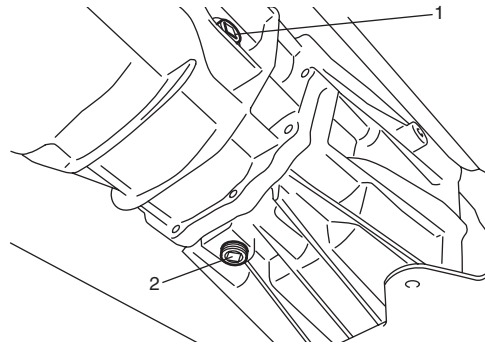

I5JB0A020013-01

2. Drain plug

- 5) Tighten level / filler plug to specified torque referring to "Manual Transmission Oil Change in Section 5B".

Manual Transmission Oil Change

S6JB0B0206029

Change transmission oil with new specified oil referring to "Manual Transmission Oil Change in Section 5B".

Automatic Transmission Fluid Inspection

S6JB0B0206030

- 1) Inspect transmission case for evidence of fluid leakage. Repair leaky point, if any.
- 2) Make sure that vehicle is placed level for fluid level check.
- 3) Check fluid level referring to "A/T Fluid Level Check in Section 5A". If fluid level is low, replenish specified fluid.

Automatic Transmission Fluid Change


S6JB0B0206031

- 1) Inspect transmission case for evidence of fluid leakage. Repair leaky point, if any.
- 2) Make sure that vehicle is placed level.
- 3) Change fluid referring to "A/T Fluid Change in Section 5A".

Automatic Transmission Fluid Cooler Hose Inspection

S6JB0B0206032

Check automatic transmission fluid cooler hose for fluid leakage, cracks, damage and deterioration. Replace hose and/or clamp if any faulty condition is found.

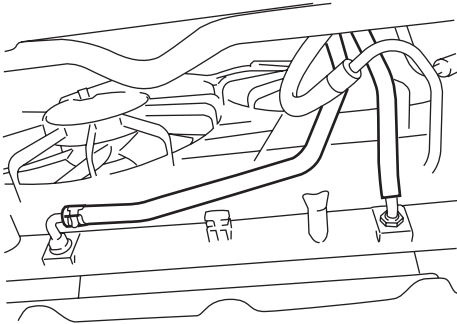

I5JB0A020025-02

Transfer Oil Inspection (If Equipped)


S6JB0B0206033

- 1) Check transfer case for evidence of oil leakage. Repair leaky point if any.
- 2) Make sure that vehicle is placed level for oil level check.
- 3) Check oil level referring to "Transfer Oil Level Check in Section 3C".

Differential Oil Inspection

S6JB0B0206034

- 1) Check differential for evidence of oil leakage. Repair leaky point if any.
- 2) Make sure that vehicle is placed level for oil level check.
- 3) Remove level / filler plug of differentials (front and/or rear) and check oil level.
Oil level can be checked roughly by means of level plug hole. That is, if oil flows out of level plug hole or if oil level is found up to hole when level / filler plug is removed, oil is properly filled.
If oil is found insufficient, pour specified amount of specified oil.

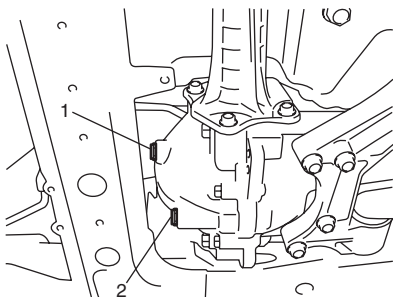

I5JB0A020015-03

- | |
|---|
| 1. Oil level / filler plug (Apply sealant.) |
| 2. Drain plug (Apply sealant.) |

- 4) Tighten level plug to specified torque.
For front differential, refer to "Front Differential Oil Change: Front in Section 3B".
For rear differential, refer to "Rear Differential Oil Change: Rear in Section 3B".

Transfer (If Equipped) or Differential Oil Change

S6JB0B0206035

Change transfer oil or differential oil (front and rear) with new specified oil respectively.

For transfer, refer to "Transfer Oil Change in Section 3C".


For front differential, refer to "Front Differential Oil Change: Front in Section 3B".

For rear differential, refer to "Rear Differential Oil Change: Rear in Section 3B".

Power Steering (P/S) System Inspection

S6JB0B0206036

- 1) Visually check power steering system for fluid leakage and hose for damage and deterioration. Repair or replace defective parts, if any.

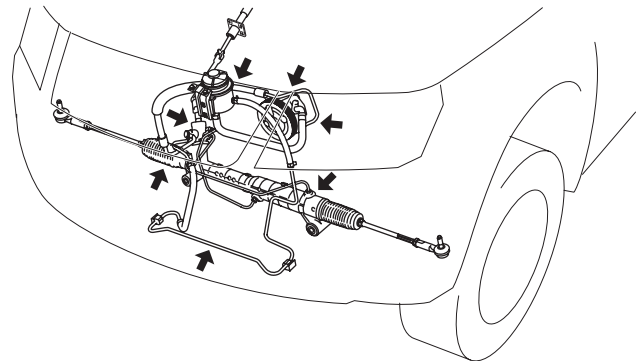


I5JB0C020002-01

- 2) Check fluid level with engine stopped. If it is lower than LOWER level line, fill fluid up to UPPER level line.

NOTE

Fluid level should be checked when fluid is cool.

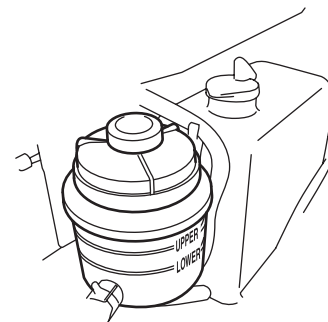

I6JB01020010-02

- 3) Visually check pump drive belt for cracks and wear and tension, referring to "P/S Pump and A/C Compressor (If Equipped) Drive Belt Inspection and Adjustment in Section 6C".
If necessary, Adjust or replace it.


All Hinges, Latches and Locks Inspection

S6JB0B0206037

Doors

Check that each door of front, rear and back (rear end) doors opens and closes smoothly and locks securely when closed.

If any malfunction is found, lubricate hinge and latch or repair door lock system.

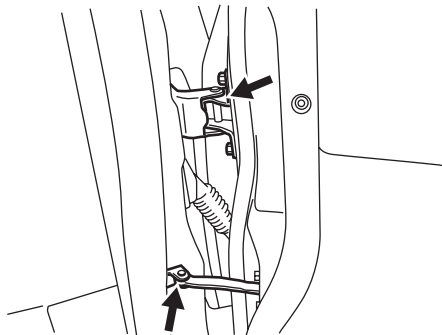

I5JB0A020026-01

Engine Hood

Check that secondary latch operates properly (check that secondary latch keeps hood from opening all the way even when pulling hood release handle inside vehicle.) Also check that hood opens and closes smoothly and properly and hood locks securely when closed.

If any malfunction is found, lubricate hinge and latch, or repair hood lock system.

HVAC Air Filter Inspection (If Equipped)

S6JB0B0206038

Check air filter for dirt and damage. Clean or replace if necessary referring to "HVAC Air Filter Inspection in Section 7B".

HVAC Air Filter Replacement (If Equipped)

S6JB0B0206039

Replace air filter with new one referring to "HVAC Air Filter Removal and Installation in Section 7B".

Final Inspection for Maintenance Service

S6JB0B0206040

⚠ WARNING

When carrying out road tests, select a safe place where no man or no running vehicle is seen so as to prevent any accident.

Seats

Check that seat slides smoothly and locks securely at any position. Also check that reclining mechanism of front seat back allows it to be locked at any angle.

Seat Belt

Inspect belt system including webbing, buckles, latch plates, retractors and anchors for damage or wear. Check that seat belt is securely locked.

Battery Check

Check battery for damage, terminal corrosion and condition.

If battery is equipped with built-in indicator, check battery condition by the indicator.

Accelerator Pedal Operation

Check that pedal operates smoothly without getting caught or interfered by any other part.

Engine Start

Check engine start for readiness.

⚠ WARNING

Before performing the following check, be sure to have enough room around the vehicle. Then, firmly apply both the parking brake and the regular brakes. Do not use the accelerator pedal. If the engine starts, be ready to turn off the ignition promptly. Take these precautions because the vehicle could move without warning and possibly cause personal injury or property damage.

On A/T vehicles, try to start the engine in each select lever position. The starting motor should crank only in "P" (Park) or "N" (Neutral).

On M/T vehicles, place the shift lever in "Neutral," depress clutch pedal fully and try to start.

Exhaust System Check

Check for leakage, cracks or loose supports.

Clutch (for Manual Transmission)

Check for the following.

- Clutch is completely released when depressing clutch pedal,
- No slipping clutch occurs when releasing pedal and accelerating.
- Clutch itself is free from any abnormal condition.

Gearshift or Select Lever (Transmission)

Check gear shift or select lever for smooth shifting to all positions and for good performance of transmission in any position.

With A/T vehicle, also check that shift indicator indicates properly according to which position select lever is shifted to.

With A/T vehicle, make sure that vehicle is at complete stop when shifting select lever to "P" range position and release all brakes.

Transfer (Motor-shift type)

Check that transfer position indicator on instrument cluster turns on properly according to transfer switch position.

Brake**Foot brake**

Check the following:

- that brake pedal has proper travel,
- that brake works properly,
- that it is free from noise,
- that vehicle does not pull to one side when brake is applied,
- and that brake do not drag.

Parking brake

Check that lever has proper travel.

⚠ WARNING

With vehicle parked on a fairly steep slope, make sure nothing is in the way downhill to avoid any personal injury or property damage. Be prepared to apply regular brake quickly even if vehicle should start to move.

Check to ensure that parking brake is fully effective when the vehicle is stopped on the safe slope and brake lever is pulled all the way.

Steering

- Check to ensure that steering wheel is free from instability, or abnormally heavy feeling.
- Check that the vehicle does not wander or pull to one side.

Engine

- Check that engine responds readily at all speeds.
- Check that engine is free from abnormal noise and abnormal vibration.

Body, Wheels and Power Transmitting System

Check that body, wheels and power transmitting system are free from abnormal noise and abnormal vibration or any other abnormal condition.

Meters and Gauge

Check that speedometer, odometer, fuel meter, temperature gauge, etc. are operating accurately.

Lights

Check that all lights operate properly.

Windshield Defroster

Periodically check that air comes out from defroster outlet when operating heater or air conditioning. Set fan switch lever to max speed position for this check.

Specifications

Tightening Torque Specifications

S6JB0B0207001

Fastening part	Tightening torque			Note
	N·m	kgf-m	lb-ft	
Engine oil drain plug	35	3.5	25.5	🔧
Oil filter	14	1.4	10.5	🔧

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Special Tools and Equipment

Recommended Fluids and Lubricants

S6JB0B0208001

Fluids / Lubricants List

Engine oil	Refer to “Engine Oil and Filter Change”.
Engine coolant (Ethylene glycol base coolant)	“Antifreeze / Anticorrosion coolant”
Brake fluid	Refer to reservoir cap of brake master cylinder.
Manual transmission oil	Refer to “Manual Transmission Oil Change in Section 5B”.
Transfer oil	Refer to “Transfer Oil Change in Section 3C”.
Differential oil (front & rear)	Refer to “Front Differential Oil Change: Front in Section 3B”, or “Rear Differential Oil Change: Rear in Section 3B”.
Automatic transmission fluid	Refer to “A/T Fluid Change in Section 5A”.
Power steering fluid	An equivalent of DEXRON®-II
Door hinges	Engine oil or water resistance chassis grease
Hood latch assembly	
Key lock cylinder	Spray lubricant

Special Tool

S6JB0B0208002

09915-47320 Oil filter wrench cap (79 mm) 🔧		
---	---	--

Section 1

Engine

CONTENTS

Precautions	1-1	Engine Symptom Diagnosis	1A-51
Precautions.....	1-1	Malfunction Indicator Lamp Does Not Come	
Precautions for Engine.....	1-1	ON with Ignition Switch ON and Engine Stop	
		(but Engine Can Be Started).....	1A-58
Engine General Information and		Malfunction Indicator Lamp Remains ON after	
Diagnosis	1A-1	Engine Starts.....	1A-60
Precautions.....	1A-1	DTC P0031 / P0032: HO2S Heater Control	
Precautions on Engine Service	1A-1	Circuit Low / High (Sensor-1, Bank-1).....	1A-61
Precautions in Diagnosing Trouble	1A-1	DTC P0037 / P0038: HO2S Heater Control	
Precautions for DTC Troubleshooting	1A-2	Circuit Low / High (Sensor-2, Bank-1).....	1A-65
Precautions of ECM Circuit Inspection.....	1A-2	DTC P0051 / P0052: HO2S Heater Control	
Precautions of Electric Throttle Body System		Circuit Low / High (Sensor-1, Bank-2).....	1A-68
Calibration	1A-2	DTC P0057 / P0058: HO2S Heater Control	
General Description	1A-3	Circuit Low / High (Sensor-2, Bank-2).....	1A-72
Statement of Cleanliness and Care	1A-3	DTC P0101: Mass Air Flow Circuit Range /	
Engine Diagnosis General Description	1A-3	Performance.....	1A-75
On-Board Diagnostic System Description.....	1A-3	DTC P0102 / P0103: Mass Air Flow Circuit	
Engine and Emission Control System		Low / High Input	1A-77
Description	1A-6	DTC P0107 / P0108: Manifold Absolute	
Air Intake System Description	1A-7	Pressure Sensor Circuit Low / High Input	1A-78
Electric Throttle Body System Description	1A-7	DTC P0111: Intake Air Temperature Sensor	
Description of Electric Throttle Body System		Circuit Performance	1A-81
Calibration	1A-8	DTC P0112 / P0113: Intake Air Temperature	
A/F Sensor Description	1A-9	Sensor Circuit Low / High Input.....	1A-82
CAN Communication System Description.....	1A-10	DTC P0116: Engine Coolant Temperature	
Electronic Control System Description.....	1A-13	Circuit Range / Performance.....	1A-84
Schematic and Routing Diagram.....	1A-16	DTC P0117 / P0118: Engine Coolant	
Engine and Emission Control System		Temperature Circuit Low / High Input	1A-86
Diagram	1A-16	DTC P0122 / P0123: Throttle Position Sensor	
Electronic Control System Diagram	1A-17	(Main) Circuit Low / High Input.....	1A-87
Electronic Control System Wiring Circuit		DTC P0133 / P2A00: O2 Sensor Circuit Slow	
Diagram	1A-18	Response / Performance (Sensor-1, Bank-	
Component Location	1A-23	1).....	1A-89
Electronic Control System Location	1A-23	DTC P0134: O2 Sensor Circuit No Activity	
Diagnostic Information and Procedures.....	1A-24	(Sensor-1, Bank-1).....	1A-91
Engine and Emission Control System Check....	1A-24	DTC P0137 / P0138: O2 Sensor Circuit Low	
Visual Inspection	1A-28	Voltage / High Voltage (Sensor-2, Bank-1).....	1A-93
Engine Basic Check	1A-29	DTC P0140: O2 Sensor Circuit No Activity	
Malfunction Indicator Lamp (MIL) Check	1A-30	Detected (Sensor-2, Bank-1)	1A-95
DTC Table.....	1A-30	DTC P0153 / P2A03: O2 Sensor Circuit Slow	
DTC Check	1A-41	Response / Performance (Sensor-1, Bank-	
DTC Clearance	1A-41	2).....	1A-97
Fail-Safe Table.....	1A-42	DTC P0154: O2 Sensor Circuit No Activity	
Scan Tool Data	1A-44	(Sensor-1, Bank-2).....	1A-99

DTC P0157 / P0158: O2 Sensor Circuit Low Voltage / High Voltage (Sensor-2, Bank-2)...	1A-101	DTC P2108: Throttle Actuator Control Module Performance.....	1A-152
DTC P0160: O2 Sensor Circuit No Activity Detected (Sensor-2, Bank-2)	1A-103	DTC P2119: Throttle Actuator Control Throttle Body Range / Performance.....	1A-152
DTC P0171 / P0172: System Too Lean / Too Rich (Sensor-1, Bank-1)	1A-105	DTC P2122 / P2123: Pedal Position Sensor (Main) Circuit Low / High.....	1A-153
DTC P0174 / P0175: System Too Lean / Too Rich (Sensor-1, Bank-2)	1A-108	DTC P2127 / P2128: Pedal Position Sensor (Sub) Circuit Low / High	1A-155
DTC P0222 / P0223: Throttle Position Sensor (Sub) Circuit Low/High	1A-111	DTC P2135: Throttle Position Sensor (Main / Sub) Voltage Correction.....	1A-157
DTC P0300 / P0301 / P0302 / P0303 / P0304 / P0305 / P0306: Misfire Detected	1A-113	DTC P2138: Pedal Position Sensor (Main / Sub) Voltage Correction.....	1A-159
DTC P0327 / P0328: Knock Sensor Circuit Low / High	1A-115	DTC P2195 / P2196: O2 Sensor Signal Stuck Lean / Stuck Rich (Sensor-1, Bank-1).....	1A-161
DTC P0335: Crankshaft Position Sensor Circuit.....	1A-117	DTC P2197 / P2198: O2 Sensor Signal Stuck Lean / Stuck Rich (Sensor-1, Bank-2).....	1A-163
DTC P0336: Crankshaft Position Sensor Circuit Range / Performance.....	1A-119	DTC P2227/ P2228 / P2229: Barometric Pressure Circuit Malfunction	1A-165
DTC P0340: Camshaft Position Sensor Circuit.....	1A-120	DTC P2237: O2 Sensor Positive Current Control Circuit / Open (Sensor-1, Bank-1)	1A-166
DTC P0341: Camshaft Position Sensor Circuit Range / Performance.....	1A-122	DTC P2238 / P2239: O2 Sensor Positive Current Control Circuit Low / High (Sensor-1, Bank-1).....	1A-168
DTC P0401 / P0402: Exhaust Gas Recirculation Flow Insufficient Detected / Excessive Detected	1A-123	DTC P2240: O2 Sensor Positive Current Control Circuit / Open (Sensor-1, Bank-2)	1A-170
DTC P0403: Exhaust Gas Recirculation Control Circuit	1A-125	DTC P2241 / P2242: O2 Sensor Positive Current Control Circuit Low / High (Sensor-1, Bank-2).....	1A-172
DTC P0420 / P0430: Catalyst System Efficiency Below Threshold (Bank-1 / -2).....	1A-127	DTC P2252 / P2253: O2 Sensor Negative Current Control Circuit Low/High (Sensor-1, Bank-1).....	1A-174
DTC P0444 / P0445: EVAP Emission System Purge Control Valve Circuit Open / Shorted .	1A-129	DTC P2255 / P2256: O2 Sensor Negative Current Control Circuit Low/High (Sensor-1, Bank-2).....	1A-176
DTC P0462 / P0463: Fuel Level Sensor Circuit Low / High	1A-131	DTC P2627 / P2628: O2 Sensor Pumping Current Trim Circuit Low / High (Sensor-1, Bank-1).....	1A-178
DTC P0480 / P0481 / P0482: Fan 1 / Fan 2 / Fan 3 Control Circuit	1A-133	DTC P2630 / P2631: O2 Sensor Pumping Current Trim Circuit Low / High (Sensor-1, Bank-2).....	1A-180
DTC P0500: Vehicle Speed Sensor.....	1A-135	DTC P2A01: O2 Sensor Circuit Performance (Sensor-2, Bank-1).....	1A-182
DTC P0532 / P0533: A/C Refrigerant Pressure Sensor Circuit Low / High	1A-136	DTC P2A04: O2 Sensor Circuit Performance (Sensor-2, Bank-2).....	1A-184
DTC P0601 / P0602 / P0607: Internal Control Module Memory Check Sum Error / Control Module Programming Error / Control Module Performance	1A-137	DTC U0073: Control Module Communication Bus Off	1A-186
DTC P0616 / P0617: Starter Relay Circuit Low / High	1A-138	DTC U0101: Lost Communication with TCM ..	1A-190
DTC P0645: A/C Clutch Relay Control Circuit	1A-140	DTC U0121: Lost Communication with Electronic Stability Program / ABS Control Module	1A-194
DTC P0661 / P0662: Intake Manifold Tuning Valve Control Circuit Low / High	1A-142	DTC U0140: Lost Communication with Body Control Module.....	1A-197
DTC P1107 / P1108: Manifold Absolute Pressure Sensor Rationality Check - Low / High.....	1A-144	Inspection of ECM and Its Circuits	1A-201
DTC P1510: ECM Back-Up Power Supply Malfunction.....	1A-145	ECM Power and Ground Circuit Check.....	1A-223
DTC P1603: TCM Trouble Code Detected	1A-146	Fuel Injector Circuit Check	1A-226
DTC P2101: Throttle Actuator Control Motor Circuit Range / Performance.....	1A-147	Fuel Pump and Its Circuit Check.....	1A-228
DTC P2102: Throttle Actuator Control Motor Circuit Low	1A-149	Fuel Pressure Check.....	1A-230
DTC P2103: Throttle Actuator Control Motor Circuit High	1A-151	A/C System Circuits Check	1A-232
		Electric Load Signal Circuit Check	1A-235

Radiator Cooling Fan Low Speed Control System Check.....	1A-237	Manifold Absolute Pressure (MAP) Sensor Removal and Installation (If Equipped)	1C-8
Radiator Cooling Fan High Speed Control System Check.....	1A-240	Manifold Absolute Pressure (MAP) Sensor Inspection.....	1C-9
Repair Instructions	1A-242	Air Fuel Ratio (A/F) Sensor On-Vehicle Inspection.....	1C-9
Idle Speed and IAC Throttle Valve Opening Inspection.....	1A-242	Heated Oxygen Sensor (HO2S-2) Heater On-Vehicle Inspection (If Equipped)	1C-10
Special Tools and Equipment	1A-243	Air Fuel Ratio (A/F) Sensor (Sensor-1) Removal and Installation.....	1C-11
Special Tool	1A-243	Heated Oxygen Sensor (Sensor-2) Removal and Installation (If Equipped)	1C-12
Aux. Emission Control Devices	1B-1	Camshaft Position (CMP) Sensor Removal and Installation	1C-12
Component Location	1B-1	Crankshaft Position (CKP) Sensor Removal and Installation	1C-13
PCV System Location	1B-1	Camshaft Position (CMP) Sensor and Crankshaft Position (CKP) Sensor Inspection.....	1C-13
Diagnostic Information and Procedures	1B-2	Knock Sensor Removal and Installation	1C-14
EGR System Inspection (If Equipped)	1B-2	Engine and Emission Control System Relay Inspection.....	1C-14
EVAP Canister Purge System Inspection	1B-2	IMT Vacuum Tank Assembly Inspection.....	1C-15
Repair Instructions	1B-3	Specifications.....	1C-17
EVAP Canister Purge Valve and Its Circuit Inspection.....	1B-3	Tightening Torque Specifications.....	1C-17
EVAP Canister Purge Valve Inspection	1B-4	Engine Mechanical	1D-1
EVAP Canister Removal and Installation.....	1B-5	General Description	1D-1
EVAP Canister Inspection.....	1B-5	Engine General Information	1D-1
Vacuum Passage Inspection	1B-5	Air Cleaner Filter Introduction	1D-2
PCV Hose Inspection	1B-5	IMT (Intake Manifold Tuning) System Description	1D-2
PCV Valve Removal and Installation	1B-6	Diagnostic Information and Procedures	1D-3
PCV Valve Inspection	1B-6	Compression Check.....	1D-3
EGR Valve Assembly Removal and Installation (If Equipped)	1B-6	Engine Vacuum Check.....	1D-4
EGR Valve Assembly Inspection (If Equipped).....	1B-7	Valve Lash (Clearance) Inspection	1D-5
Specifications.....	1B-7	Repair Instructions	1D-8
Tightening Torque Specifications.....	1B-7	Air Intake System Components.....	1D-8
Special Tools and Equipment	1B-8	Air Cleaner Filter Removal and Installation	1D-9
Recommended Service Material	1B-8	Air Cleaner Filter Inspection and Cleaning.....	1D-9
Special Tool	1B-8	Intake Collector and Intake Manifold Components.....	1D-9
Engine Electrical Devices	1C-1	Electric Throttle Body Assembly On-Vehicle Inspection.....	1D-10
Repair Instructions	1C-1	Electric Throttle Body Assembly Removal and Installation	1D-10
Engine Control Module (ECM) Removal and Installation	1C-1	IMT (Intake Manifold Tuning) Valve Removal and Installation	1D-11
Mass Air Flow (MAF) and Intake Air Temperature (IAT) Sensor On-Vehicle Inspection.....	1C-2	IMT (Intake Manifold Tuning) Valve Inspection.....	1D-11
Mass Air Flow (MAF) and Intake Air Temperature (IAT) Sensor Removal and Installation	1C-3	Intake Collector and Intake Manifold Removal and Installation	1D-12
Electric Throttle Body Assembly On-Vehicle Inspection.....	1C-3	Cylinder Head Covers Removal and Installation	1D-14
Electric Throttle Body System Calibration.....	1C-5	Engine Mounting Components.....	1D-16
Accelerator Pedal Position (APP) Sensor Assembly On-Vehicle Inspection	1C-6	Engine Assembly Removal and Installation	1D-17
Accelerator Pedal Position (APP) Sensor Assembly Removal and Installation	1C-6	Timing Chain Cover Components	1D-20
Accelerator Pedal Position (APP) Sensor Assembly Inspection	1C-7	Engine Block Heater (If Equipped) Removal and Installation	1D-20
Engine Coolant Temperature (ECT) Sensor Removal and Installation.....	1C-7		
Engine Coolant Temperature (ECT) Sensor Inspection.....	1C-8		

Engine Block Heater (If Equipped) Inspection ..	1D-21
Timing Chain Cover Removal and Installation ..	1D-21
Timing Chain Cover Inspection	1D-23
LH (No.1) Bank 2nd Timing Chain and Chain Tensioner Components	1D-23
LH (No.1) Bank 2nd Timing Chain and Chain Tensioner Removal and Installation	1D-24
LH (No.1) Bank 2nd Timing Chain and Chain Tensioner Inspection	1D-28
1st Timing Chain and Chain Tensioner Components	1D-29
1st Timing Chain and Chain Tensioner Removal and Installation	1D-30
1st Timing Chain and Chain Tensioner Inspection	1D-34
RH (No.2) Bank 2nd Timing Chain and Chain Tensioner Components	1D-35
RH (No.2) Bank 2nd Timing Chain and Chain Tensioner Removal and Installation	1D-36
RH (No.2) Bank 2nd Timing Chain and Chain Tensioner Inspection	1D-38
Camshafts, Tappets and Shims Components ..	1D-39
Camshafts, Tappets and Shims Removal and Installation	1D-40
Camshafts and Camshaft Housings Inspection	1D-42
Tappets and Shims Inspection	1D-43
Valves and Cylinder Heads Components	1D-44
Valves and Cylinder Heads Removal and Installation	1D-45
Valves and Cylinder Heads Disassembly and Reassembly	1D-47
Valves and Valve Guides Inspection	1D-49
Cylinder Head Inspection	1D-51
Valve Springs Inspection	1D-52
Pistons, Piston Rings, Connecting Rods and Cylinders Components	1D-53
Pistons, Piston Rings, Connecting Rods and Cylinders Removal and Installation	1D-54
Pistons, Piston Rings, Connecting Rods and Cylinders Disassembly and Reassembly	1D-55
Cylinders, Pistons and Piston Rings Inspection	1D-58
Piston Pins and Connecting Rods Inspection ..	1D-59
Crank Pins and Connecting Rod Bearings Inspection	1D-60
Main Bearings, Crankshaft and Cylinder Block Components	1D-64
Main Bearings, Crankshaft and Cylinder Block Removal and Installation	1D-65
Crankshaft Inspection	1D-68
Main Bearings Inspection	1D-69
Rear Oil Seal and Flywheel Inspection	1D-73
Cylinder Block Inspection	1D-73
Specifications	1D-74
Tightening Torque Specifications	1D-74
Special Tools and Equipment	1D-75
Recommended Service Material	1D-75
Special Tool	1D-75

Engine Lubrication System	1E-1
General Description	1E-1
Engine Lubrication Description	1E-1
Diagnostic Information and Procedures	1E-2
Oil Pressure Check	1E-2
Repair Instructions	1E-3
Oil Pan and Oil Pump Strainer Components	1E-3
Oil Pan and Oil Pump Strainer Removal and Installation	1E-4
Oil Pan and Oil Pump Strainer Cleaning	1E-6
Oil Pump and Oil Pump Chain Components	1E-6
Oil Pump and Oil Pump Chain Removal and Installation	1E-7
Oil Pump and Oil Pump Chain Inspection	1E-8
Oil Pump Disassembly and Reassembly	1E-8
Oil Pump Inspection	1E-9
Specifications	1E-10
Tightening Torque Specifications	1E-10
Special Tools and Equipment	1E-10
Recommended Service Material	1E-10
Special Tool	1E-10
Engine Cooling System	1F-1
General Description	1F-1
Cooling System Description	1F-1
Coolant Description	1F-1
Schematic and Routing Diagram	1F-2
Coolant Circulation	1F-2
Diagnostic Information and Procedures	1F-3
Engine Cooling Symptom Diagnosis	1F-3
Repair Instructions	1F-4
Cooling System Components	1F-4
Coolant Level Check	1F-5
Engine Cooling System Inspection and Cleaning	1F-5
Cooling System Draining	1F-6
Cooling System Flush and Refill	1F-6
Cooling Water Pipes or Hoses Removal and Installation	1F-7
Thermostat Removal and Installation	1F-7
Thermostat Inspection	1F-7
Radiator Cooling Fan Motor On-Vehicle Inspection	1F-8
Radiator Cooling Fan Relay Inspection	1F-8
Radiator Cooling Fan Assembly Removal and Installation	1F-9
Radiator On-Vehicle Inspection and Cleaning	1F-9
Radiator Removal and Installation	1F-9
Water Pump Removal and Installation	1F-10
Water Pump Inspection	1F-10
Specifications	1F-11
Tightening Torque Specifications	1F-11
Fuel System	1G-1
Precautions	1G-1
Precautions on Fuel System Service	1G-1
General Description	1G-1
Fuel System Description	1G-1

Fuel Delivery System Description	1G-1	Spark Plug Removal and Installation	1H-7
Fuel Pump Description	1G-2	Spark Plug Inspection	1H-7
Schematic and Routing Diagram	1G-2	Specifications	1H-8
Fuel Delivery System Diagram	1G-2	Tightening Torque Specifications	1H-8
Diagnostic Information and Procedures	1G-3	Special Tools and Equipment	1H-8
Fuel Pressure Inspection	1G-3	Special Tool	1H-8
Fuel Cut Operation Inspection	1G-4		
Repair Instructions	1G-5	Starting System	1I-1
Fuel System Components	1G-5	General Description	1I-1
Fuel Hose Disconnecting and Reconnecting	1G-6	Cranking Circuit Introduction	1I-1
Fuel Pressure Relief Procedure	1G-8	Starting Motor Circuit Description	1I-1
Fuel Leakage Check Procedure	1G-8	Diagnostic Information and Procedures	1I-2
Fuel Lines On-Vehicle Inspection	1G-8	Cranking System Symptom Diagnosis	1I-2
Fuel Pipe Removal and Installation	1G-9	Starting Motor Performance Test	1I-4
Fuel Injector On-Vehicle Inspection	1G-10	Repair Instructions	1I-5
Fuel Injector Removal and Installation	1G-10	Starting Motor Components	1I-5
Fuel Injector Inspection	1G-11	Starting Motor Dismounting and Remounting	1I-6
Fuel Pressure Regulator Removal and Installation	1G-12	Starting Motor Disassembly and Assembly	1I-6
Fuel Pressure Regulator Inspection	1G-13	Starting Motor Inspection	1I-10
Fuel Filler Cap Inspection	1G-13	Specifications	1I-13
Fuel Tank Inlet Valve Removal and Installation	1G-13	Starting Motor Specifications	1I-13
Fuel Tank Inlet Valve Inspection	1G-14	Tightening Torque Specifications	1I-13
Fuel Tank Removal and Installation	1G-15	Special Tools and Equipment	1I-13
Fuel Tank Inspection	1G-16	Recommended Service Material	1I-13
Fuel Tank Purging Procedure	1G-17	Special Tool	1I-13
Fuel Pump On-Vehicle Inspection	1G-17		
Fuel Pump Assembly Removal and Installation	1G-18	Charging System	1J-1
Main Fuel Level Gauge Removal and Installation	1G-19	General Description	1J-1
Fuel Pump Inspection	1G-19	Battery Description	1J-1
Sub Fuel Level Gauge Removal and Installation	1G-19	Generator Description	1J-2
Sub Fuel Level Gauge Inspection	1G-20	Diagnostic Information and Procedures	1J-3
Specifications	1G-20	Battery Inspection	1J-3
Tightening Torque Specifications	1G-20	Generator Symptom Diagnosis	1J-4
Special Tools and Equipment	1G-21	Generator Test (Undercharged Battery Check)	1J-5
Recommended Service Material	1G-21	Generator Test (Overcharged Battery Check)	1J-5
Special Tool	1G-21	Repair Instructions	1J-6
		Jump Starting in Case of Emergency	1J-6
Ignition System	1H-1	Battery Dismounting and Remounting	1J-7
General Description	1H-1	Generator Dismounting and Remounting	1J-7
Ignition System Construction	1H-1	Generator Components	1J-8
Schematic and Routing Diagram	1H-2	Generator Disassembly and Assembly	1J-9
Ignition System Wiring Circuit Diagram	1H-2	Generator Inspection	1J-12
Component Location	1H-3	Water Pump and Generator Drive Belt Inspection and Adjustment	1J-13
Ignition System Components Location	1H-3	Water Pump and Generator Drive Belt Removal and Installation	1J-14
Diagnostic Information and Procedures	1H-3	Specifications	1J-15
Ignition System Symptom Diagnosis	1H-3	Charging System Specifications	1J-15
Ignition System Check	1H-4	Tightening Torque Specifications	1J-15
Ignition Spark Check	1H-5	Special Tools and Equipment	1J-15
Repair Instructions	1H-6	Special Tool	1J-15
Ignition Timing Inspection	1H-6		
Ignition Coil Assembly (Igniter and Ignition Coil) Removal and Installation	1H-7	Exhaust System	1K-1
Ignition Coil Assembly (Igniter and Ignition Coil) Inspection	1H-7	Precautions	1K-1
		Exhaust System Caution	1K-1
		General Description	1K-1
		Exhaust System Description	1K-1

Diagnostic Information and Procedures	1K-1	Exhaust Manifold Removal and Installation	1K-3
Exhaust System Check	1K-1	Muffler Removal and Installation	1K-5
Repair Instructions	1K-2	Specifications	1K-5
Exhaust System Components	1K-2	Tightening Torque Specifications	1K-5

Precautions

Precautions

Precautions for Engine

S6JB0B1000001

Air Bag Warning

Refer to "Air Bag Warning in Section 00".

Precautions on Engine Service

Refer to "Precautions on Engine Service in Section 1A" or "Precautions on Engine Service in Section 1A".

Precautions in Diagnosing Trouble

Refer to "Precautions in Diagnosing Trouble in Section 1A" or "Precautions in Diagnosing Trouble in Section 1A".

Precautions on Fuel System Service

Refer to "Precautions on Fuel System Service in Section 1G".

Engine Cooling System Warning

Refer to "Coolant Description in Section 1F".

Engine Fuel System Service Precautions

Refer to "Precautions on Fuel System Service in Section 1G".

Exhaust System Caution

Refer to "Exhaust System Caution in Section 1K".

Precaution for CAN Communication System

Refer to "Precaution for CAN Communication System in Section 00".

Precautions for Catalytic Converter

Refer to "Precautions for Catalytic Converter in Section 00".

Precautions for Electrical Circuit Service

Refer to "Precautions for Electrical Circuit Service in Section 00".

Precautions of ECM Circuit Inspection

Refer to "Precautions of ECM Circuit Inspection in Section 1A".

Precautions of Electrical Throttle Body System Calibration

Refer to "Precautions of Electric Throttle Body System Calibration in Section 1A".

Precaution for DTC Troubleshooting

Refer to "Precautions for DTC Troubleshooting in Section 1A".

Precaution in Replacing ECM

Refer to "Precaution in Replacing ECM in Section 10C" (if equipped with immobilizer control system).

Engine General Information and Diagnosis


Precautions

Precautions on Engine Service

S6JB0B1100001

The following information on engine service should be noted carefully, as it is important in preventing damage, and in contributing to reliable engine performance.

- When raising or supporting engine for any reason, do not use a jack under oil pan. Due to small clearance between oil pan and oil pump strainer, jacking against oil pan may cause it to be bent against strainer resulting in damaged oil pick-up unit.
- It should be kept in mind, while working on engine, that 12-volt electrical system is capable of violent and damaging short circuits. When performing any work where electrical terminals could possibly be grounded, ground cable of the battery should be disconnected at battery.
- Any time the air cleaner, air intake pipe, throttle body or intake manifold is removed, the intake opening should be covered. This will protect against accidental entrance of foreign material which could follow intake passage into cylinder and cause extensive damage when engine is started.
- When disconnecting couplers, don't pull wire harness but make sure to hold coupler itself. With lock type coupler, be sure to unlock before disconnection. Attempt to disconnect coupler without unlocking may result in damage to coupler. When connecting lock type coupler, insert it till clicking sound is heard and connect it securely.

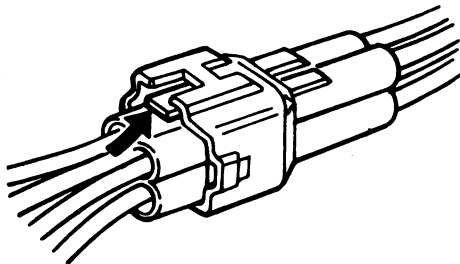

IYSQ01110001-01

Precautions in Diagnosing Trouble

S6JB0B1100002

- Don't disconnect couplers from ECM, battery cable from battery, ECM ground wire harness from engine or main fuse before confirming diagnostic information (DTC, freeze frame data, etc.) stored in ECM memory. Such disconnection will erase memorized information in ECM memory.
- Diagnostic information stored in ECM memory can be cleared as well as checked by using SUZUKI scan tool or OBD generic scan tool. Before using scan tool, read its Operator's (Instruction) Manual carefully to have good understanding as to what functions are available and how to use it.
- It is indistinguishable which module turns on MIL because not only ECM but also TCM (A/T model) turns on MIL (For details of on-board diagnostic system for A/T model, refer to "On-Board Diagnostic System Description in Section 5A"). Therefore, check both ECM and TCM (A/T model) for DTC when MIL lights on. When checking ECM for DTC, keep in mind that DTC is displayed on the scan tool as follows depending on the scan tool used.
 - SUZUKI scan tool displays DTC detected by ECM.
 - OBD generic scan tool displays DTC detected by each of ECM and TCM (A/T model) simultaneously.
- Priorities for diagnosing troubles
If two or more diagnostic trouble codes (DTCs) are stored, proceed to the flow of the DTC which has detected earliest in the order and follow the instruction in that table.
If no instructions are given, troubleshoot diagnostic trouble codes according to the following priorities.
 - a. Diagnostic trouble codes (DTCs) other than DTC P0171 / P0172 / P0174 / P0175 (Fuel system too lean/too rich), DTC P0300 / P0301 / P0302 / P0303 / P0304 / P0305 / P0306 (Misfire detected) and DTC P0401 / P0402 (EGR flow malfunction)
 - b. DTC P0171 / P0172 / P0174 / P0175 (Fuel system too lean/too rich) and DTC P0401 / P0402 (EGR flow malfunction)
 - c. DTC P0300 / P0301 / P0302 / P0303 / P0304 / P0305 / P0306 (Misfire detected)

- Be sure to read "Precaution for CAN Communication System in Section 00" before inspection and observe what is written there.
- ECM Replacement
When substituting a known good ECM, check for the following conditions. Neglecting this check may cause damage to known good ECM.
 - Resistance value of all relays, actuators is as specified respectively.
 - MAF sensor MAP sensor, TP sensor and A/C refrigerant pressure sensor are in good condition and none of power circuits of these sensors is shorted to ground.
- Communication of ECM, BCM, combination meter, keyless start control module (if equipped), ABS or ESP® control module, 4WD control module (if equipped), steering angle sensor (ESP® model) and TCM (A/T model), is established by CAN (Controller Area Network). (For more detail of CAN communication for ECM, refer to "CAN Communication System Description"). Therefore, handle CAN communication line with care referring to "Precaution for CAN Communication System in Section 00".
- Immobilizer transponder code registration after replacing ECM.
When ECM is replaced with new one or with another one, make sure to register immobilizer transponder code to ECM correctly according to "Procedure after ECM Replacement in Section 10C".

Precautions for DTC Troubleshooting

S6JB0B1100003

- Before performed trouble shooting, be sure to read the "Precautions of ECM Circuit Inspection".
- When measuring circuit voltage, resistance and/or pulse signal at ECM connector, connect the special tool to ECM and/or the ECM connectors referring to "Inspection of ECM and Its Circuits".
- Upon completion of inspection and repair work, perform "DTC Confirmation Procedure" and confirm that the trouble has been corrected.

Precautions of ECM Circuit Inspection

S6JB0B1100004

- ECM connectors are waterproofed. Each terminal of the ECM connectors is sealed up with the grommet. Therefore, when measuring circuit voltage, resistance and/or pulse signal at ECM connector, do not insert the tester's probe into the sealed terminal at the harness side. When measuring circuit voltage, resistance and/or pulse signal at ECM connector, connect the special tool to the ECM connectors. And, insert the tester's probe into the special tool's connectors at the harness side, and then measure voltage, resistance and/or pulse signal. Or, ECM and its circuits may be damaged by water.
- Wire colors of the special tool's connectors are different from the ones of the ECM connectors. However, the circuit arrangement of the special tool's connectors is same as the one of the ECM connectors. Therefore, measure circuit voltage and resistance by identifying the terminal location subject to the measurement.

Precautions of Electric Throttle Body System Calibration

S6JB0B1100005

After performing one of works described below, it is necessary to re-register the completely closed throttle valve reference position stored in memory of ECM. (For detailed information, refer to "Description of Electric Throttle Body System Calibration".) For the procedure to register such data in ECM, refer to "Electric Throttle Body System Calibration in Section 1C".

- To shut off backup power of ECM for such purposes of battery replacement or "DOME" fuse removal.
- To erase DTCs P0122, P0123, P0222, P0223, P2101, P2102, P2103, P2108, P2119 and/or P2135.
- To replace ECM.
- To replace throttle body and/or accelerator pedal position (APP) sensor assembly.


General Description

Statement of Cleanliness and Care

S6JB0B1101001

An automobile engine is a combination of many machined, honed, polished and lapped surfaces with tolerances that are measured in the thousands of an millimeter (ten thousands of inch). Accordingly, when any internal engine parts are serviced, care and cleanliness are important. Throughout this section, it should be understood that proper cleaning and protection of machined surfaces and friction areas is part of the repair procedure. This is considered standard shop practice even if not specifically stated.

- A liberal coating of engine oil should be applied to friction areas during assembly to protect and lubricate the surface on initial operation.
- Whenever valve train components, pistons, piston rings, connecting rods, rod bearings and crankshaft journal bearings are removed for service, they should be retained in order. At the time of installation, they should be installed in the same locations and with the same mating surfaces as when removed.
- Battery cables should be disconnected before any major work is performed on the engine. Failure to disconnect cables may result in damage to wire harness or other electrical parts.
- Throughout this manual, the 6 cylinders of the engine are identified by numbers; No.1 (1), No.3 (3) and No.5 (5) of LH bank (7) and No.2 (2), No.4 (4) and No.6 (6) of RH bank (8) as counted from crankshaft pulley side (9) to flywheel side (10).

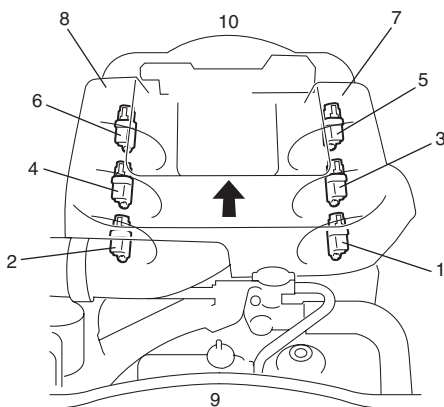

I6JB01110007-02

Engine Diagnosis General Description

S6JB0B1101002

This vehicle is equipped with an engine and emission control system which are under control of ECM. The engine and emission control system in this vehicle are controlled by ECM. ECM has an On-Board Diagnostic system which detects a malfunction in this system and abnormality of those parts that influence the engine exhaust emission. When diagnosing engine troubles, be sure to have full understanding of the outline of "On-Board Diagnostic System Description" and each item in "Precautions in Diagnosing Trouble" and execute diagnosis according to "Engine and Emission Control System Check".

There is a close relationship between the engine mechanical, engine cooling system, ignition system, exhaust system, etc. and the engine and emission control system in their structure and operation. In case of an engine trouble, even when the malfunction indicator lamp (MIL) doesn't turn ON, it should be diagnosed according to "Engine and Emission Control System Check".


On-Board Diagnostic System Description

S6JB0B1101003

ECM in this vehicle has the following functions.

- When the ignition switch is turned ON with the engine at a stop, MIL (1) turns ON to check the malfunction indicator lamp (MIL) (1) and its circuit.
- When ECM detects a malfunction which gives an adverse effect to vehicle emission while the engine is running, it makes the malfunction indicator lamp in the meter cluster of the instrument panel turn ON or flash (flashing only when detecting a misfire which can cause damage to the catalyst) and stores the malfunction area (DTC according to SAE J2012) in its memory.
(If it detects that continuously 3 driving cycles are normal after detecting a malfunction, however, it makes MIL turn OFF although DTC stored in its memory will remain.)
- As a condition for detecting a malfunction in some areas in the system being monitored by ECM and turning ON the malfunction indicator lamp due to that malfunction, 2 driving cycle detection logic is adopted to prevent erroneous detection.
- When a malfunction is detected, engine and driving conditions then are stored in ECM memory as freeze frame data. (For the details, refer to description on Freeze frame data.)

- It is possible to communicate via DLC (data link connector) (2) by using not only SUZUKI scan tool (3) but also OBD generic scan tool.

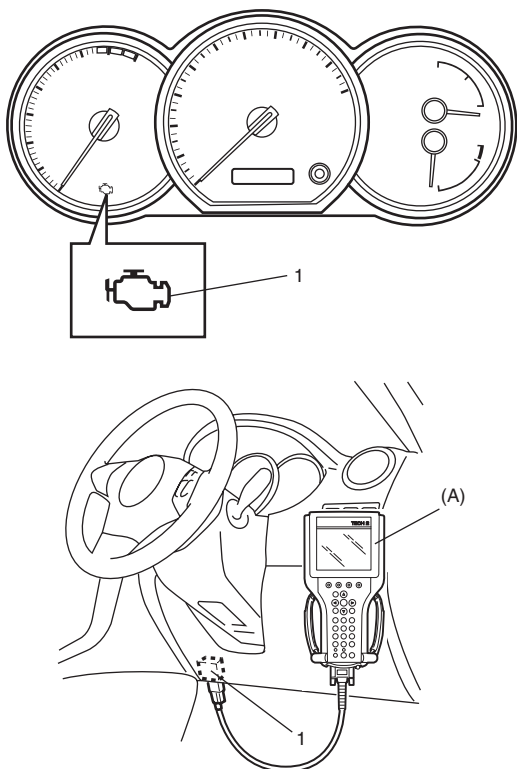

I5JB0C110019-02

Warm-Up Cycle

A warm-up cycle means sufficient vehicle operation such that the coolant temperature has risen by at least 22 °C (40 °F) from engine starting and reaches a minimum temperature of 70 °C (160 °F).

Driving Cycle

A "Driving Cycle" consists of engine startup driving mode where a malfunction would be detected if present and next engine startup.

2 Driving Cycle Detection Logic

The malfunction detected in the first driving cycle is stored in ECM memory (in the form of pending DTC and freeze frame data) but the malfunction indicator lamp does not light at this time. It lights up at the second detection of same malfunction also in the next driving cycle.

Pending DTC

Pending DTC means a DTC detected and stored temporarily at 1 driving cycle of the DTC which is detected in the 2 driving cycle detection logic.

Freeze Frame Data

ECM stores the engine and driving conditions (in the form of data as shown) at the moment of the detection of a malfunction in its memory. This data is called "Freeze frame data".

Therefore, it is possible to know engine and driving conditions (e.g., whether the engine was warm or not, where the vehicle was running or stopped, where air/fuel mixture was lean or rich) when a malfunction was detected by checking the freeze frame data. Also, ECM has a function to store each freeze frame data for three different malfunctions in the order as the malfunction is detected. Utilizing this function, it is possible to know the order of malfunctions that have been detected. Its use is helpful when rechecking or diagnosing a trouble.

An example of freeze frame data

Code List	
***** → Engine →	
Trouble Codes → Freeze Data →	
Code	Description
P0102	MAF Crt Low Input
P0102 (1)	MAF Crt Low Input
P0107 (2)	MAP / Bar Pres Crt Low Input
P0112 (3)	IAT Crt Low Input

[A]



Freeze Data	
Trouble Code	0102
Coolant Temp	84 °C
Short FT B1	-6.3 %
Long FT B1	0.0 %
Short FT B2	-3.2 %
Long FT B2	0.0 %
Engine Speed	1082 RPM
Calc Load	0.0 %
Fuel System B1	CLSD
Fuel System B2	CLSD
MAP	29 kPa
Vehicle Speed	0 km/h
Intake Air Temp	26 °C
Fuel Tank Level	0 %

Change Units

I5JA01112021-01

[A]: 1st, 2nd or 3rd in parentheses here represents which position in the order the malfunction is detected.

1A-5 Engine General Information and Diagnosis:

Priority of freeze frame data

ECM has 4 frames where the freeze frame data can be stored. The first frame stores the freeze frame data of the malfunction which was detected first. However, the freeze frame data stored in this frame is updated according to the priority described below. (If malfunction as described in the upper square "1" below is detected while the freeze frame data in the lower square "2" has been stored, the freeze frame data "2" will be updated by the freeze frame data "1".)

Priority	Freeze frame data in frame 1
1	Freeze frame data at initial detection of malfunction among misfire detected (P0300 – P0306), fuel system too lean (P0171, P0174) and fuel system too rich (P0172, P0175)
2	Freeze frame data when a malfunction other than those in "1" above is detected.

In the 2nd through the 4th frames, the freeze frame data of each malfunction is stored in the order as the malfunction is detected. These data are not updated.

Shown in the table below are examples of how freeze frame data are stored when two or more malfunctions are detected.

Frame		Frame 1	Frame 2	Frame 3	Frame 4
Malfunction detection order		Freeze frame data	1st freeze frame data	2nd freeze frame data	3rd freeze frame data
1	No malfunction detected	—	—	—	—
2	P0401 (Pending DTC)	P0401 data	P0401 data	—	—
3	No malfunction detected	P0401 data	P0401 data	—	—
4	No malfunction detected	—	—	—	—
5	P0111 (Pending DTC)	P0111 data	P0111 data	—	—
6	P0111 P0401 (Pending DTC)	P0111 data	P0111 data	P0401 data	—
7	P0300 (Pending DTC)	P0300 data	P0111 data	P0401 data	P0300 data
8	P0300	P0300 data	P0111 data	P0300 data	—

—: No freeze frame data


Freeze frame data clearance

The freeze frame data is cleared at the same time as clearance of DTC or Pending DTC.

DLC (Data Link Connector)

DLC (1) is in compliance with SAE J1962 in the shape of connector and pin assignment.

OBD serial data line (K line of ISO 9141) (3) is used for SUZUKI scan tool or OBD generic scan tool to communicate with ECM, SDM, BCM, TCM (A/T model), 4WD control module (if equipped) and ABS / ESP® control module.

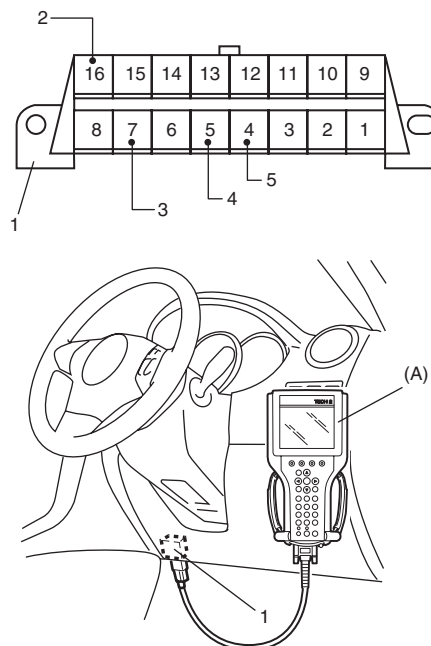

15JB0C110020-02

- | |
|--|
| 2. B + (Unswitched vehicle battery positive) |
| 4. ECM ground (Signal ground) |
| 5. Vehicle body ground (Chassis ground) |

S6JB0B1101004

Engine and Emission Control System Description


The engine and emission control system is divided into 4 major sub-systems: air intake system, fuel delivery system, electronic control system and emission control system.

Air intake system includes air cleaner, mass air flow sensor, throttle body, intake manifold tuning valve and intake manifold.

Fuel delivery system includes fuel pump, delivery pipe, fuel pressure regulator, fuel injectors, etc. Electronic control system includes ECM, various sensors and controlled devices.

Emission control system includes EGR (if equipped), EVAP and PCV systems.

When hoses are disconnected and system components are removed for service, reinstall components properly, and route and connect hoses correctly after service. Refer to the figure for proper routing of hoses.

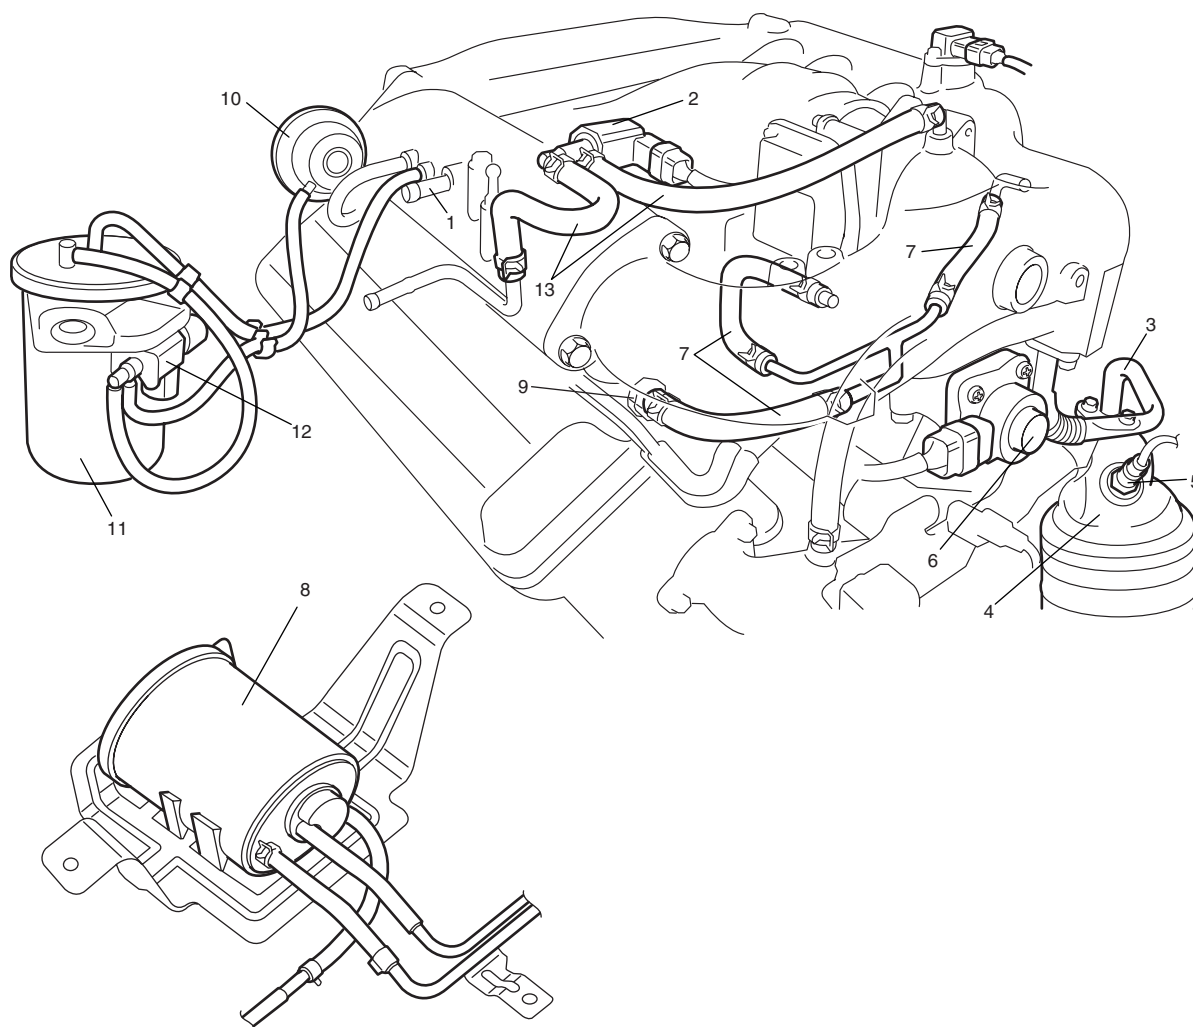

I5JB0C110001-02


1: Brake booster hose pipe	5: A/F sensor	9: PCV valve	13: EVAP canister purge hose
2: EVAP canister purge valve	6: EGR valve (if equipped)	10: IMT valve	
3: EGR pipe (if equipped)	7: PCV hose	11: IMT vacuum tank assembly	
4: Exhaust manifold	8: EVAP canister	12: IMT vacuum solenoid valve	

Air Intake System Description

S6JB0B1101005

The main components of the air intake system are air cleaner, air cleaner outlet hose, electric throttle body (for the details, refer to “Electric Throttle Body System Description”), IMT valve which adjusts the distributor pipe length of intake manifold (for the details, refer to “IMT (Intake Manifold Tuning) System Description in Section 1D”) and intake manifold.

The air (by the amount corresponding to throttle valve opening and engine speed) is filtered by the air cleaner, distributed by the intake manifold, and finally drawn into each combustion chamber. Electric throttle body is not equipped with IAC valve for idle speed control. Idle speed control is done by the throttle actuator which opens / closes the throttle valve. (For the details, refer to “Electric Throttle Body System Description”).

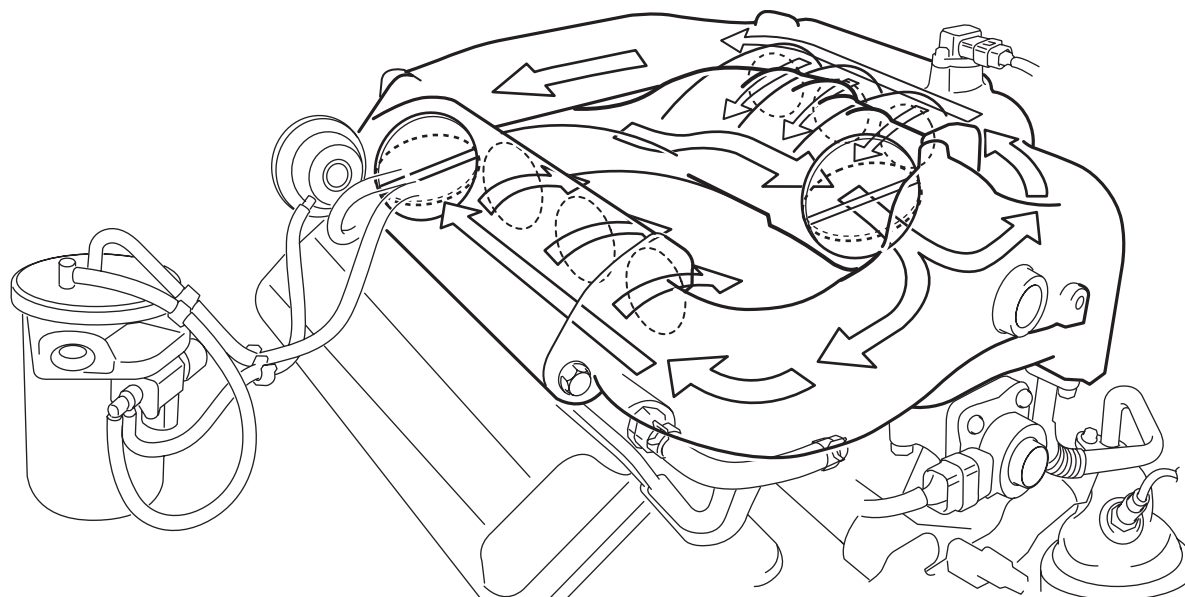

I6JB01110018-02

Electric Throttle Body System Description

S6JB0B1101006

The Electric Throttle Body System consists of electric throttle body assembly, accelerator pedal position (APP) sensor assembly, ECM and throttle actuator control relay.

Among them, assembly components are as follows.


- Electric throttle body assembly: Throttle valve, throttle actuator, 2 throttle position sensors.
- Accelerator pedal position (APP) sensor assembly: Accelerator pedal, 2 accelerator position sensors.

Operation Description

ECM (5) detects opening (depressed extent of pedal) of the accelerator pedal based on signal voltage of the accelerator pedal position (APP) sensor (1) and using that data and engine operation condition, it calculates the optimum throttle valve opening. On the other hand, it detects the throttle valve opening based on the signal voltage of the throttle position sensor (3) included in the throttle body (2) and compares it with the above calculated optimum throttle valve opening. When there is a difference between them, ECM controls the duty ratio (100% – 0%) according to this difference to drive the throttle actuator (motor) (4) included in the throttle body. When there is no difference, ECM controls the duty ratio to about 15% to maintain the throttle valve opening. In this way, the throttle valve (17) is opened and closed to achieve the optimum throttle valve opening.

In this system, as the throttle position sensor and accelerator pedal position (APP) sensor have 2 sensors (main and sub) each, highly accurate and highly reliable control and abnormality detection are assured. Also, when ECM detects an abnormality in the system, it turns off the throttle actuator control relay (8) to stop controlling the throttle actuator. When the throttle actuator control relay is turned off, the throttle valve is fixed at the opening of about 10° from its completely closed position (default opening) by the force of the return spring and open spring included in the throttle body.

This throttle body is not equipped with IAC valve for idle speed control. Idle speed control is done by the throttle actuator which opens/closes the throttle valve.

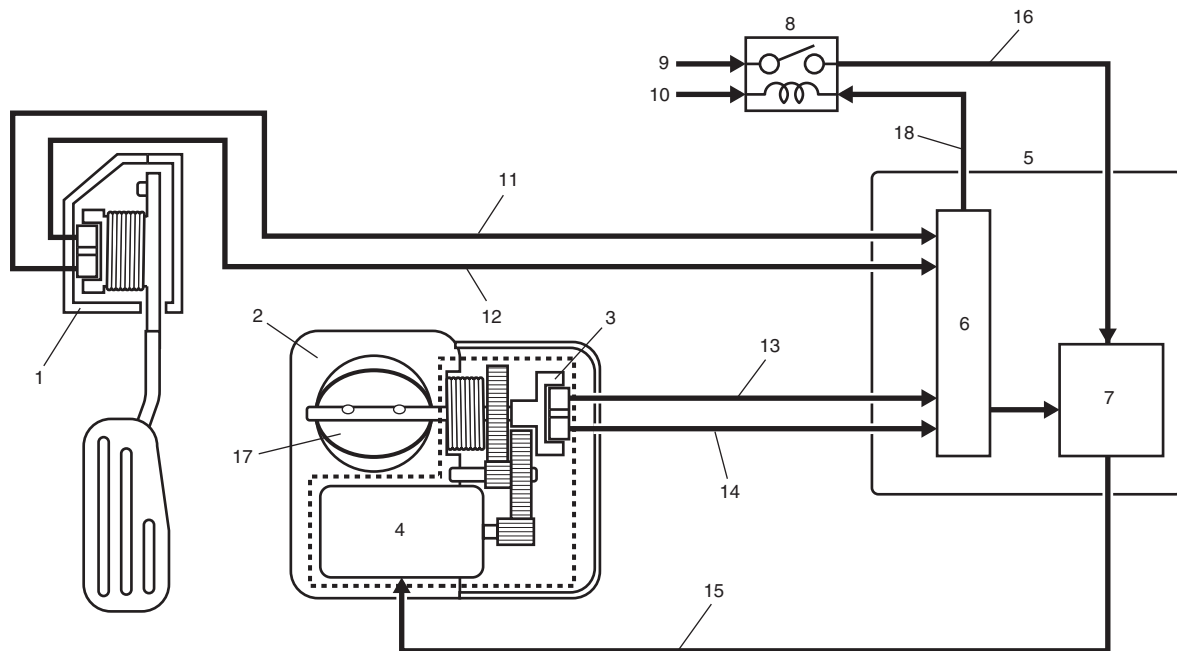

I4RS0B110007-02

6. CPU	11. Accelerator pedal position (APP) sensor (main) signal	15. Drive signal of throttle actuator
7. Drive circuit of throttle actuator	12. Accelerator pedal position (APP) sensor (sub) signal	16. Power supply of throttle actuator
9. From "THR MOT" fuse	13. Throttle position sensor (main) signal	18. Control signal of throttle actuator control relay
10. From main relay	14. Throttle position sensor (sub) signal	

Description of Electric Throttle Body System Calibration

S6JB0B1101007

ECM calculates controlled opening of the throttle valve on the basis of the completely closed throttle valve position of the electric throttle body system. The completely closed position data is saved in memory of ECM. However, the completely closed position of the throttle valve of the electric throttle body system (signal voltage from throttle position sensor when throttle is completely closed) differs one from the other depending on individual differences of the throttle valve and throttle position sensor. As such individual differences must be taken into account for controlling the throttle valve, it is necessary to register the completely closed throttle valve position data in ECM. When such data is registered in ECM, it is saved in RAM (memory) of ECM and used as the base data for controlling the throttle valve. This data is cleared, when any of the works described in "Precautions of Electric Throttle Body System Calibration" is performed.

Also, after replacement of the throttle body and/or accelerator pedal position (APP) sensor assembly, the completely closed position data in memory of ECM must be cleared once and a new one must be registered, or ECM cannot judge the complete closure position properly.

For the procedure to register such data, refer to "Electric Throttle Body System Calibration in Section 1C". (After the completely closed position data is cleared, ECM, for the first time only, opens and closes the throttle valve for about 5 seconds after the ignition switch is turned ON position, for registration of the completely closed throttle valve position. If the engine is started during this registration process, such symptom as "longer cranking time" or "slow rise of revolution speed immediately after start-up" may occur. However, turning OFF the ignition switch once and restarting will set correct registration.)

A/F Sensor Description

S6JB0B1101008

A/F sensor (1), in place of the conventional heated Oxygen sensor-1, is installed in the exhaust manifold (bank 1 and bank 2) and it consists of a zirconia element (2) which causes the output current to vary according to difference in the oxygen concentration, a heater (3) which activates the element and an adjusting resistor (4) (if equipped) which adjusts individual difference of the sensor.


A/F sensor detects oxygen concentration in exhaust gas (9) (A/F ratio of the air-fuel mixture) linearly, ranging from LEAN to RICH.

Operation

ECM (5) controls the sensor heater (3) and keeps the sensor element temperature at the specified level (about 750 °C) constantly so that the A/F sensor is activated in the specified way for accurate A/F detection. When the sensor element reaches the specified temperature (it is activated), its impedance drops to the specified value (approx. 30 Ω) by its characteristic.

When a certain voltage (about 0.4 V) is applied between sensor elements in this state, circuit current corresponding to the sensor element impedance flows in the sensor circuit. ECM detects this circuit current and judges whether the sensor is in the active state or not. At this time, sensor current is output linearly in the range of +0.01 mA to +some mA on the lean side and -0.01 mA to - some mA on the rich side. The variation in these ranges depends on the difference from the stoichiometry A/F ratio, that is, the amount of oxygen between the atmosphere side (6) and exhaust manifold (7). According to this sensor output, ECM executes A/F feedback (fuel trim) to achieve the target A/F ratio.

The A/F sensor connector (8) is provided with an adjusting resistor (4) (if equipped) ECM detects the adjusting resistance value and corrects the sensor output current value.

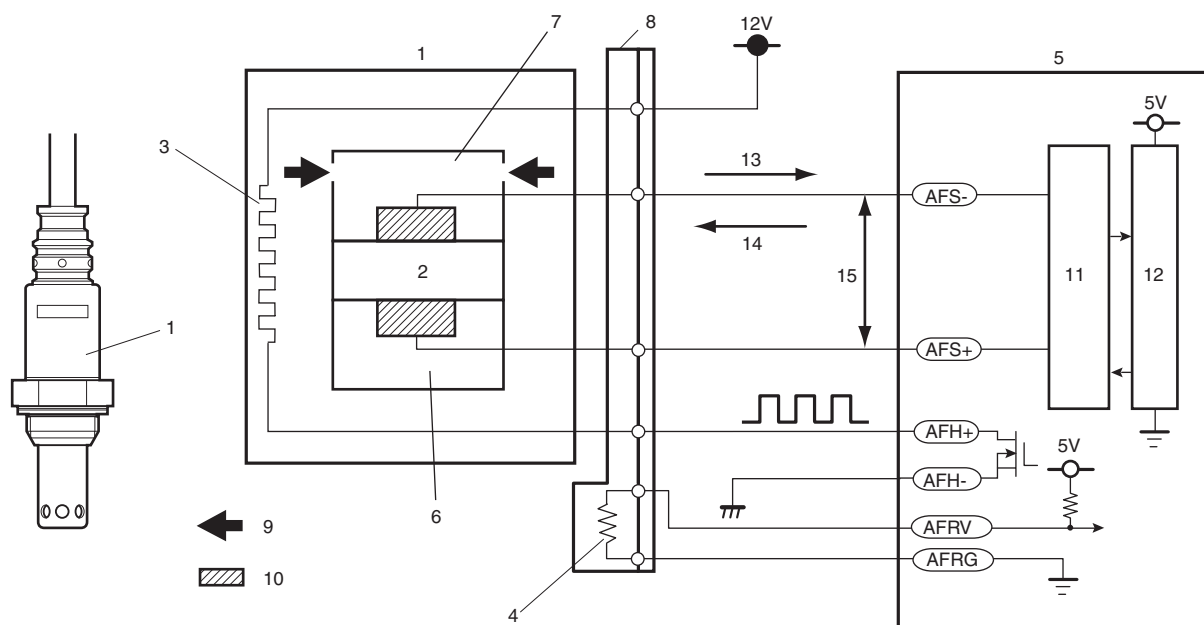

I6JB0B110001-02


10. Electrode	12. CPU	14. Rich
11. A/F signal processing circuit	13. Lean	15. 0.4 V

CAN Communication System Description

S6JB0B1101009

ECM (1), ABS or ESP® control module (2), TCM (A/T model) (3), BCM (4), 4WD control module (if equipped) (5), combination meter (6), keyless start control module (if equipped) (7) and steering angle sensor (8) (ESP® model) of this vehicle communicate control data between each control module.

Communication of each control module is established by CAN (Controller Area Network) communication system.

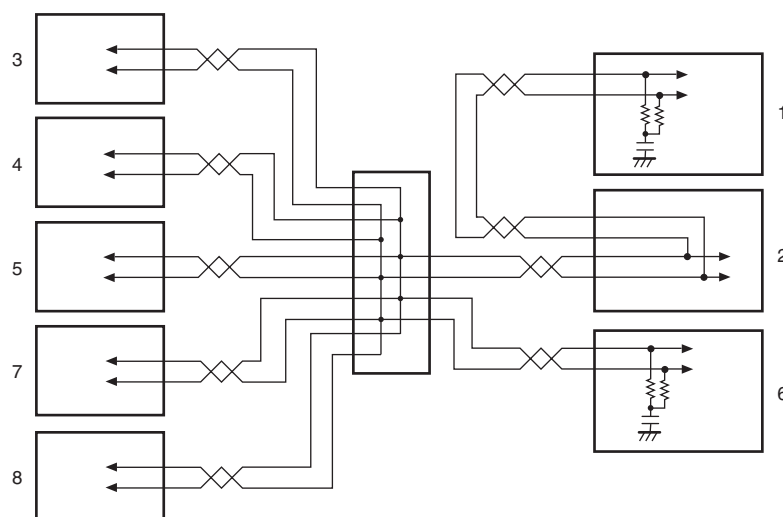

I6JB01110110-02

CAN communication system uses the serial communication in which data is transmitted at a high speed. It uses a twisted pair of two communication lines for the high-speed data transmission. As one of its characteristics, multiple control modules can communicate simultaneously. In addition, it has a function to detect a communication error automatically. Each module reads necessary data from the received data and transmits data. ECM communicates control data with each control module as follows.

ECM Transmission Data

Transmits data of ECM	TCM (A/T model)	ABS Hydraulic Unit/Control Module Assembly (if equipped)	BCM	Combination Meter	4WD control module (if equipped)	Keyless Start Control Module (if equipped)	ESP® Control Module (if equipped)
Engine torque signal	○						○
Accelerator pedal position	○						○
Engine speed	○		○	○	○		○
Throttle position	○						
Stand by to engage air conditioning compressor	○						
Top gear inhibit	○						
Torque converter clutch control inhibit	○						
Lock up / slip control inhibit signal	○						
Immobilizer indication				○			
Engine emissions related malfunction				○			
Engine coolant temperature	○		○	○			
Fuel level percent				○			
Cruise control signal (if equipped)	○						○
Cruise control system indication (if equipped)				○			
Vehicle speed	○		○	○	○	○	
Brake pedal switch active	○	○	○		○		○
Air conditioning compressor clutch engaged (if equipped with A/C)	○		○				
Distance kilometers per liter of fuel			○				

16JB0B110002-01

NOTE

In communication between ECM and combination meter, between ECM and keyless start control module (if equipped) and between ECM and 4WD control module (if equipped), data is transmitted only from ECM to combination meter, keyless start control module (if equipped) and 4WD control module (if equipped). (Combination meter, keyless start control module (if equipped) and 4WD control module (if equipped) does not transmit data to ECM.)

ECM Reception Data

Transmits data of ECM	TCM (A/T model)	ABS hydraulic unit/control module assembly (if equipped)	BCM	ESP® Control module (if equipped)	4WD control module (if equipped)
Torque reduction request	○			○	
Slip control signal	○				
Transmission malfunction indication on	○				
Transmission emissions related malfunction active	○				
Transmission gear selector position	○				
Daytime running light active (if equipped with DRL)			○		
Air conditioning switch ON (if equipped with A/C)			○		
A/T mode status			○		
Electric load active (low beam)			○		
Electric load active (high beam)			○		
Electric load active (tail light)			○		
Electric load active (rear defogger)			○		
Blower fan step			○		
Torque up request		○		○	
Torque request rolling count		○		○	
Wheel speed pulse (rear right)		○		○	
Wheel speed pulse (rear left)		○		○	
Antilock brake system active		○		○	
Electronic stability program system active				○	
Electronic stability program system OFF				○	
4WD shift position					○

Electronic Control System Description

The electronic control system consists of various sensors which detect the state of engine and driving conditions, ECM which controls various devices according to the signals from the sensors and various controlled devices.

Functionally, it is divided into the following sub systems:

- Fuel injection control system
- Heated oxygen sensor heater control system (if equipped)
- Idle air control system
- Fuel pump control system
- Evaporative emission control system
- Ignition control system
- EGR system (if equipped)
- IMT valve control system
- Electric throttle body control system
- Radiator cooling fan control system
- A/F sensor heater control system
- A/C control system (if equipped)
- Immobilizer control system (if equipped)
- Controller communication system

Especially, ECM, BCM, combination meter, TCM (A/T model), ABS control module or ESP® control module, steering angle sensor (ESP® model), 4WD control module (if equipped) and keyless start control module (if equipped) intercommunicate by means of CAN communication.

Refer to “Electronic Control System Location”, “Electronic Control System Diagram” and “Electronic Control System Wiring Circuit Diagram”.

Engine and Emission Control Input / Output Table

Function	Output	Input
Main relay control	Main relay	Ignition switch
Fuel pump control	Fuel pump relay	<ul style="list-style-type: none"> • CKP sensor • Ignition switch • Starter switch • Immobilizer control module (in ECM) (if equipped)
Injection control	Fuel Injectors	<ul style="list-style-type: none"> • CKP sensor • CMP sensor • MAF sensor • IAT sensor • TP sensor • ECT sensor • A/F sensor • HO2S (if equipped) • Barometric pressure sensor • Ignition switch • Starter switch • Immobilizer control module (in ECM) (if equipped)
A/F sensor and HO2S heater control (if equipped)	A/F sensor and HO2S	<ul style="list-style-type: none"> • Ignition switch • MAF sensor • ECT sensor • TP sensor • CKP sensor

Function	Output	Input
Idle speed control	Throttle actuator	<ul style="list-style-type: none"> • CKP sensor • MAF sensor • IAT sensor • TP sensor • ECT sensor • APP sensor • Barometric pressure sensor • Wheel speed sensor • A/C refrigerant pressure sensor (if equipped) • A/C evaporator outlet air temperature sensor (if equipped) • Ignition switch • Starter switch • Brake light switch • A/C switch (if equipped) • Blower fan switch • Rear end door defogger switch • PSP switch • Lighting switch • Transmission range sensor (if equipped)
Ignition control	Ignition coil with igniter	<ul style="list-style-type: none"> • Ignition switch • Starter switch • MAF sensor • IAT sensor • ECT sensor • TP sensor • CKP sensor • CMP sensor • Knock sensor • Immobilizer control module (in ECM) (if equipped)
EGR control (if equipped)	EGR valve	<ul style="list-style-type: none"> • Ignition switch • Wheel speed sensor • MAF sensor • IAT sensor • ECT sensor • TP sensor • CKP sensor
EVAP purge control	EVAP canister purge valve	<ul style="list-style-type: none"> • Barometric pressure sensor • Ignition switch • A/C switch (if equipped) • Wheel speed sensor • A/F sensor • MAF sensor • IAT sensor • ECT sensor • TP sensor • CKP sensor


1A-15 Engine General Information and Diagnosis:

Function	Output	Input
Radiator cooling fan control	Radiator cooling fan relay No.1, No.2 and No.3	<ul style="list-style-type: none">• Ignition switch• A/C switch (if equipped)• A/C refrigerant pressure sensor (if equipped)• A/C evaporator outlet air temperature sensor (if equipped)• Wheel speed sensor• ECT sensor
MIL control	MIL	<ul style="list-style-type: none">• Ignition switch• Barometric pressure sensor• Wheel speed sensor• A/F sensor• HO2S (if equipped)• MAF sensor• IAT sensor• TP sensor• ECT sensor• APP sensor• MAP sensor (if equipped)• CKP sensor• CMP sensor• Knock sensor• EVAP canister purge valve• Immobilizer control module (in ECM) (if equipped)
ECM main power supply control	Main relay	<ul style="list-style-type: none">• Ignition switch
Throttle actuator power supply control	Throttle actuator control relay	<ul style="list-style-type: none">• Ignition switch• TP sensor• APP sensor
IMT valve control	IMT valve vacuum control solenoid valve	<ul style="list-style-type: none">• TP sensor• ECT sensor• CMP sensor
A/C compressor control (if equipped)	A/C compressor relay	<ul style="list-style-type: none">• Ignition switch• Starter switch• A/C switch• Blower fan switch• A/C refrigerant pressure sensor• A/C evaporator outlet air temperature sensor• Wheel speed sensor• ECT sensor• TP sensor• CKP sensor

Schematic and Routing Diagram

Engine and Emission Control System Diagram

S6JB0B1102001

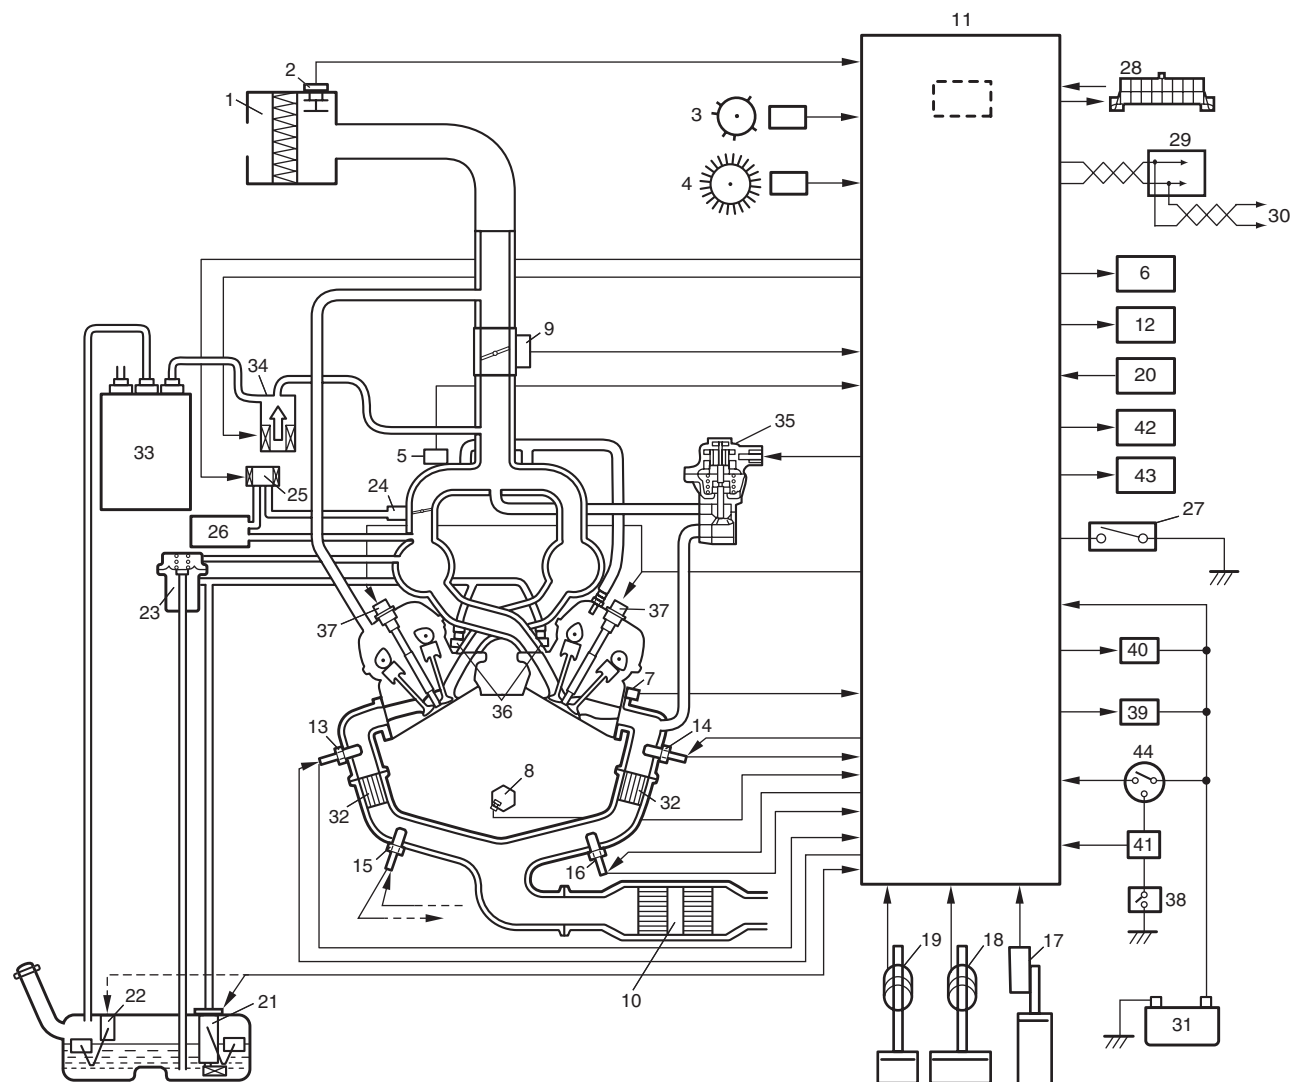


I5JB0C110008-01

1. Air cleaner	16. HO2S (bank-2) (if equipped)	31. Battery
2. MAF and IAT sensor	17. APP sensor	32. Warm-up three way catalytic converter
3. CMP sensor	18. Brake switch	33. EVAP canister
4. CKP sensor	19. Clutch switch (if equipped)	34. EVAP canister purge valve
5. MAP sensor (if equipped)	20. Cruise control switch (if equipped)	35. EGR valve (if equipped)
6. A/C refrigerant pressure sensor	21. Fuel pump with main fuel level sensor	36. Fuel injector
7. ECT sensor	22. Sub fuel level sensor	37. Ignition coil assembly
8. Knock sensor	23. Fuel pressure regulator	38. Transmission range sensor (if equipped)
9. Electric throttle body assembly with TP sensor	24. IMT valve	39. Main relay
10. Three way catalytic converter	25. IMT vacuum solenoid valve	40. Fuel pump relay
11. ECM	26. IMT vacuum tank	41. Starting motor control relay
12. HO2S heater relay	27. Power steering pump pressure switch	42. Radiator cooling fan relay
13. A/F sensor (bank-1)	28. DLC	43. A/C compressor relay (if equipped)
14. A/F sensor (bank-2)	29. ABS or ESP® control module	44. Ignition switch
15. HO2S (bank-1) (if equipped)	30. To BCM, combination meter, TCM (A/T model), 4WD control module (if equipped), keyless start control module (if equipped) and steering angle sensor (ESP® model)	


Electronic Control System Diagram

S6JB0B1102002

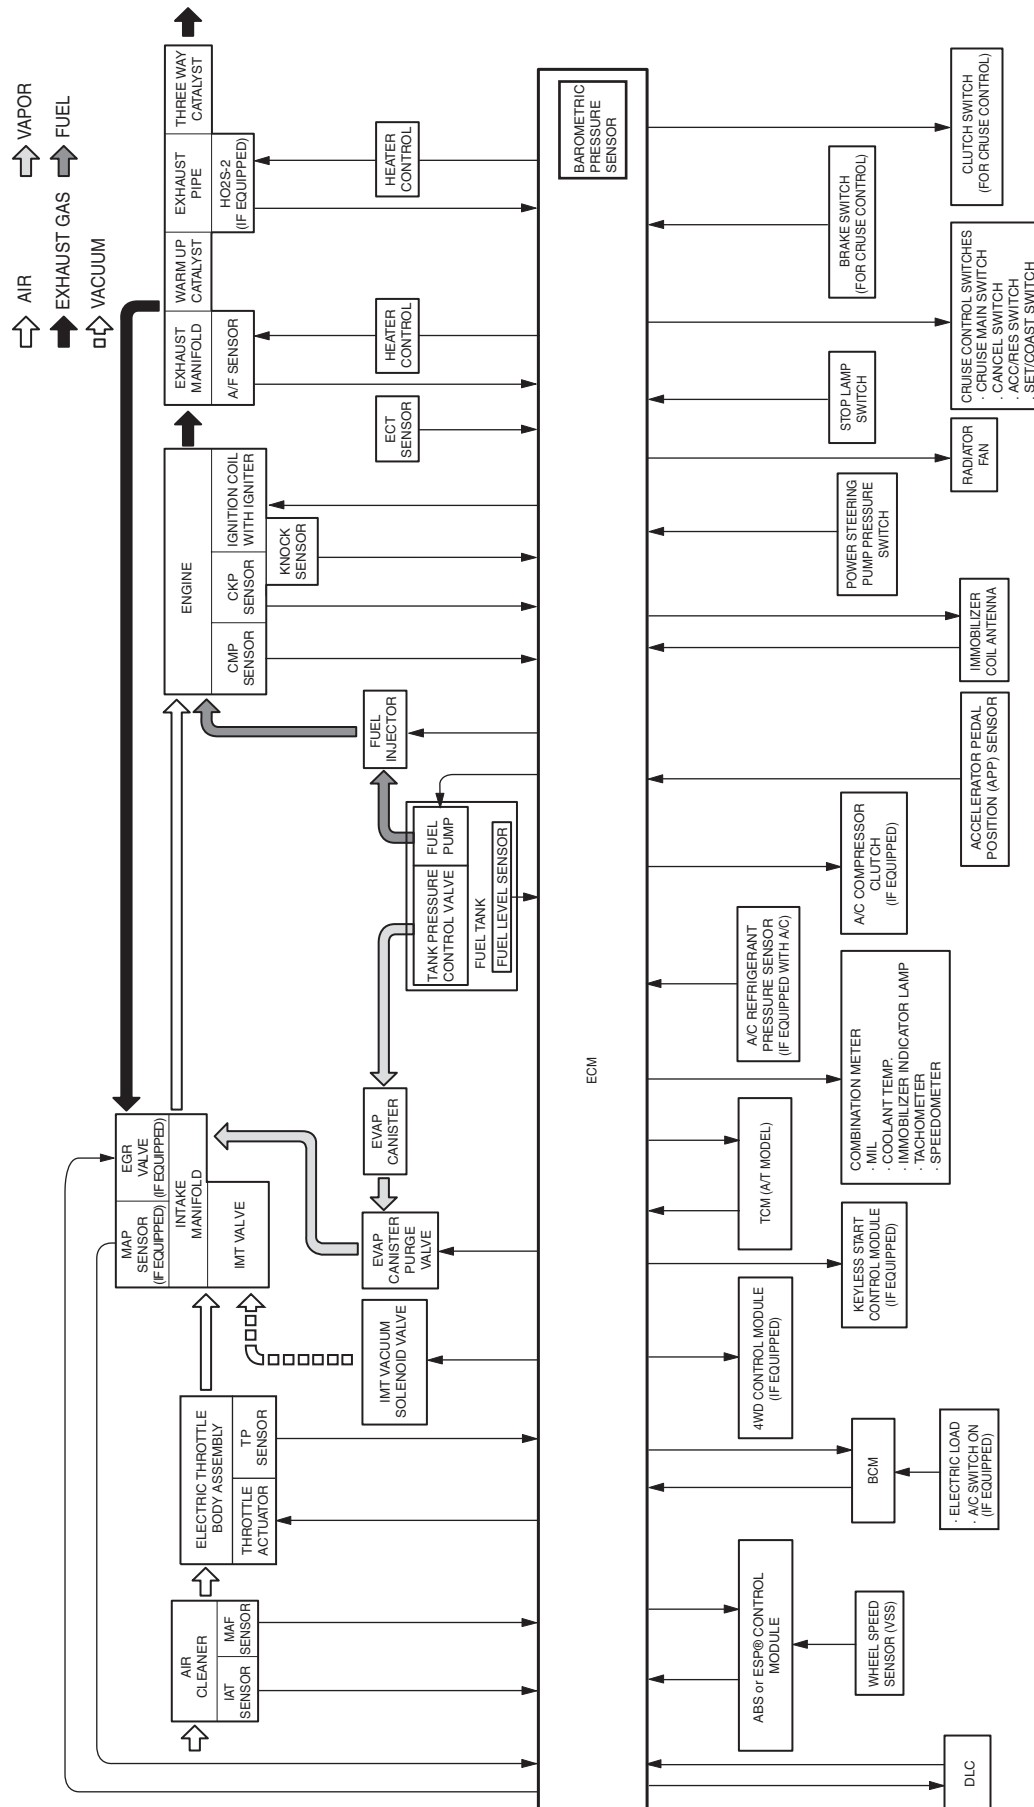


16JB0B110004-02

Electronic Control System Wiring Circuit Diagram

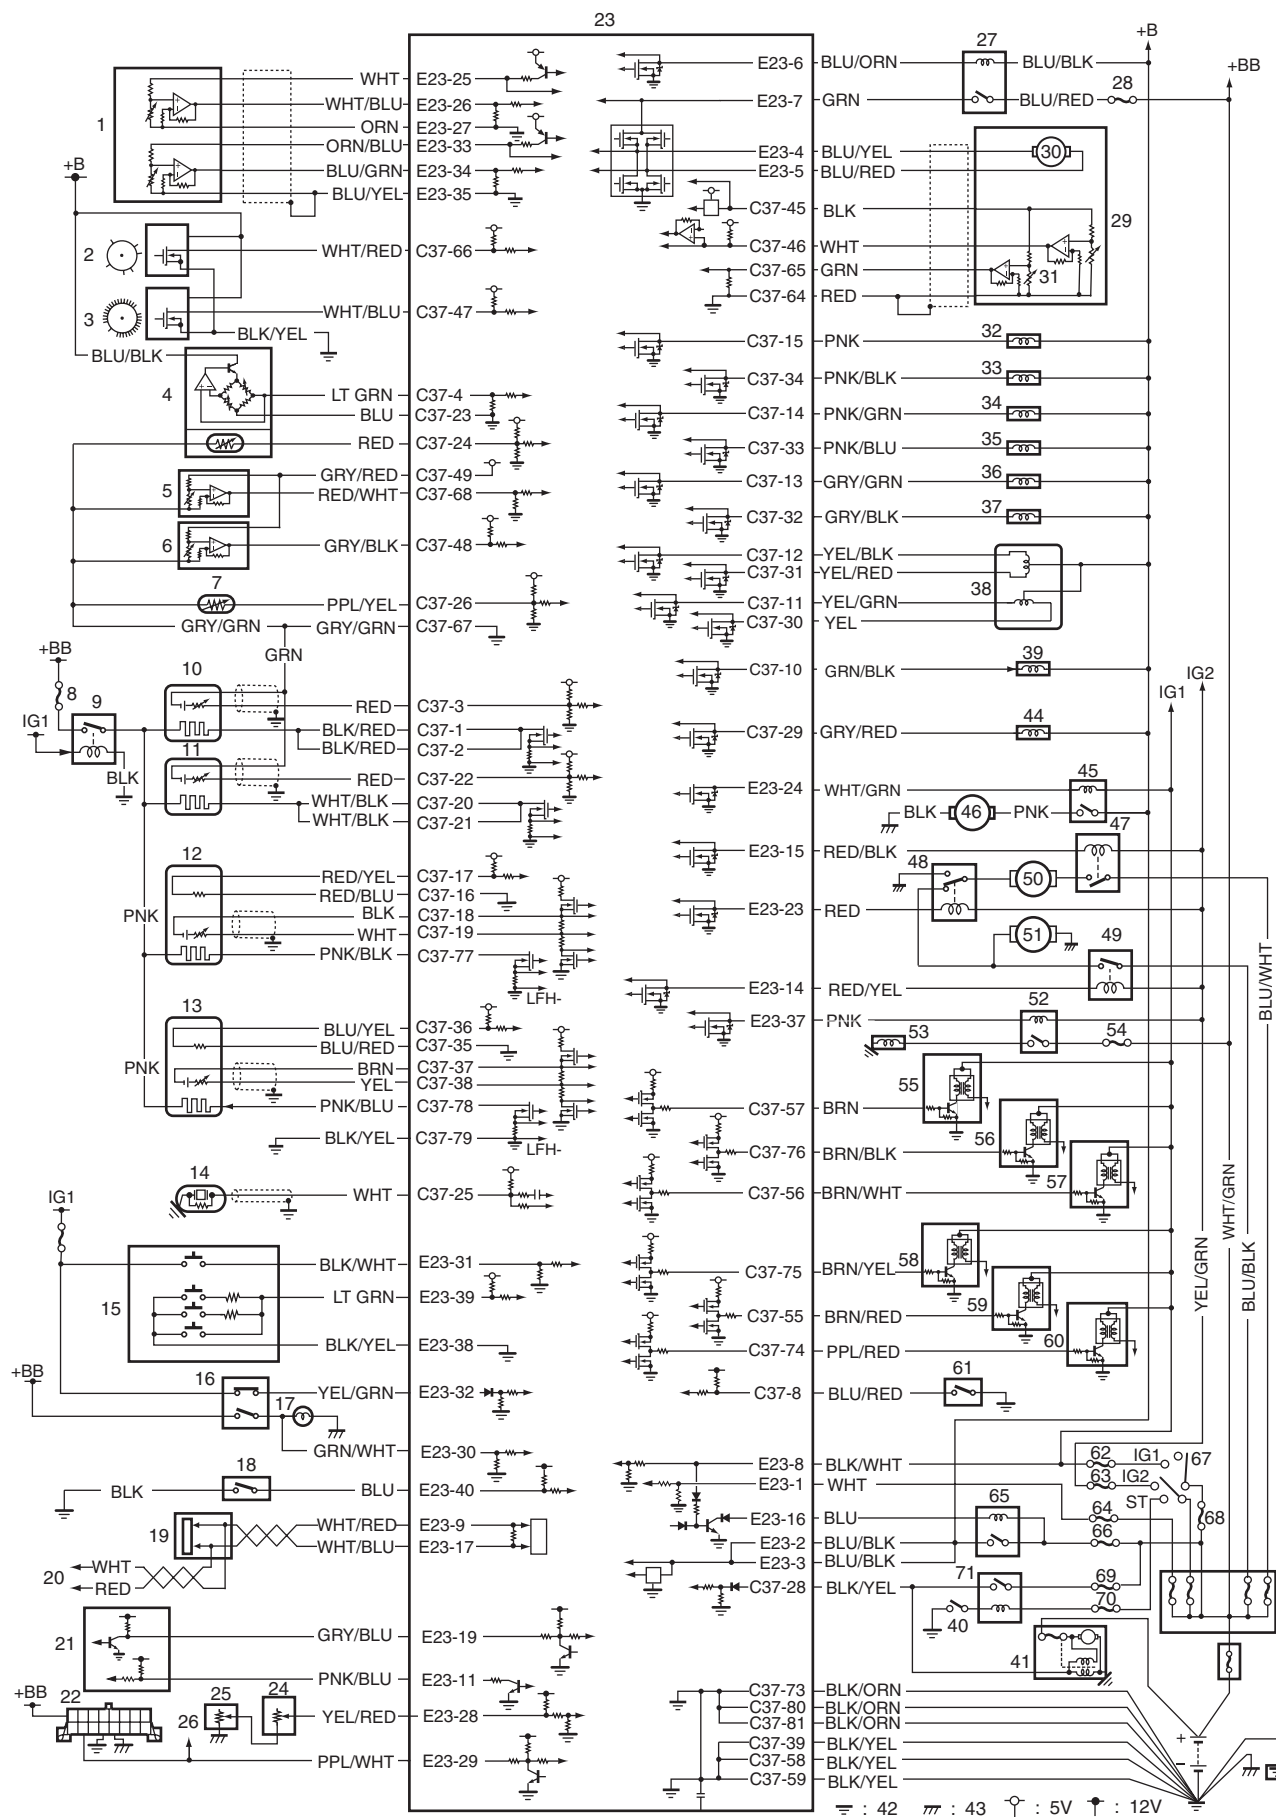

1A-19 Engine General Information and Diagnosis:

Terminal arrangement of ECM (PCM) connector (Viewed from harness side)

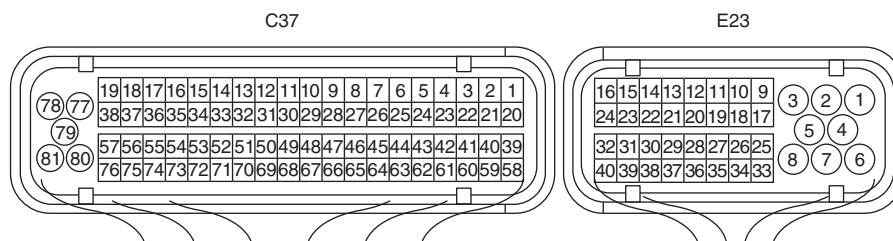

I6JB01110021-01

1. APP sensor	25. Sub fuel level sensor	49. Radiator cooling fan relay No.3
2. CMP sensor	26. BCM, TCM (A/T model), 4WD control module (if equipped), ABS or ESP® control module, and SDM	50. Radiator cooling fan motor No.1
3. CKP sensor	27. Throttle actuator control relay	51. Radiator cooling fan motor No.2
4. MAF and IAT sensor	28. "THR MOT" fuse	52. A/C compressor relay (if equipped)
5. MAP sensor (if equipped)	29. Electric throttle body assembly	53. A/C compressor
6. A/C refrigerant pressure sensor	30. Throttle actuator	54. "CPRSR" fuse
7. ECT sensor	31. Throttle position sensor	55. Ignition coil assembly for No.1 spark plug
8. "O2 HTR" fuse	32. Fuel injector No.1	56. Ignition coil assembly for No.2 spark plug
9. HO2S heater relay	33. Fuel injector No.2	57. Ignition coil assembly for No.3 spark plug
10. HO2S (bank-1) (if equipped)	34. Fuel injector No.3	58. Ignition coil assembly for No.4 spark plug
11. HO2S (bank-2) (if equipped)	35. Fuel injector No.4	59. Ignition coil assembly for No.5 spark plug
12. A/F sensor (bank-1)	36. Fuel injector No.5	60. Ignition coil assembly for No.6 spark plug
13. A/F sensor (bank-2)	37. Fuel injector No.6	61. Power steering pump pressure switch
14. Knock sensor	38. EGR valve (if equipped)	62. "IG COIL" fuse
15. Cruise control switch	39. EVAP canister purge valve	63. "IG2 SIG" fuse
16. Brake switch	40. Transmission range sensor or clutch start switch (if equipped)	64. "DOME" fuse
17. Brake light	41. Starting motor	65. Main relay
18. Clutch switch (if equipped)	42. Engine ground	66. "F1" fuse
19. ABS or ESP® control module	43. Body ground	67. Ignition switch
20. To BCM, combination meter, TCM (A/T model), 4WD control module (if equipped), keyless start control module (if equipped) and steering angle sensor (ESP® model)	44. IMT vacuum solenoid valve	68. "IGN" fuse
21. Immobilizer coil antenna (if equipped)	45. Fuel pump relay	69. "STR MOT" fuse
22. DLC	46. Fuel pump	70. "ST SIG" fuse
23. ECM	47. Radiator cooling fan relay No.1	71. Starting motor control relay
24. Main fuel level sensor	48. Radiator cooling fan relay No.2	

CM connector "C37"

Terminal	Circuit
C37-1	Heater output of heated oxygen sensor (Bank-1) (if equipped)
C37-2	Heater output of heated oxygen sensor (Bank-1) (if equipped)
C37-3	Oxygen signal of heated oxygen sensor (Bank-1) (if equipped)
C37-4	MAF sensor signal
C37-5	—
C37-6	—
C37-7	—
C37-8	Power steering pump pressure switch signal
C37-9	—
C37-10	EVAP canister purge valve output
C37-11	EGR valve (stepper motor coil 3) output (if equipped)
C37-12	EGR valve (stepper motor coil 1) output (if equipped)
C37-13	Fuel injector No.5 output
C37-14	Fuel injector No.3 output
C37-15	Fuel injector No.1 output
C37-16	Ground for A/F sensor adjusting resistor (Bank-1) (if equipped)
C37-17	A/F sensor adjusting resistor signal (Bank-1) (if equipped)
C37-18	A/F sensor signal (+) (Bank-1)
C37-19	A/F sensor signal (–) (Bank-1)
C37-20	Heater output of heated oxygen sensor (Bank-2) (if equipped)
C37-21	Heater output of heated oxygen sensor (Bank-2) (if equipped)
C37-22	Oxygen signal of heated oxygen sensor (Bank-2) (if equipped)
C37-23	Ground for MAF sensor
C37-24	IAT sensor signal
C37-25	Knock sensor signal
C37-26	ECT sensor signal
C37-27	—
C37-28	Starting motor control relay output
C37-29	IMT vacuum solenoid valve output
C37-30	EGR valve (stepper motor coil 4) output (if equipped)
C37-31	EGR valve (stepper motor coil 2) output (if equipped)
C37-32	Fuel injector No.6 output
C37-33	Fuel injector No.4 output
C37-34	Fuel injector No.2 output
C37-35	Ground for A/F sensor adjusting resistor (Bank-2) (if equipped)
C37-36	A/F sensor adjusting resistor signal (Bank-2) (if equipped)
C37-37	A/F sensor signal (+)(Bank-2)
C37-38	A/F sensor signal (–) (Bank-2)
C37-39	Ground for ECM
C37-40	—
C37-41	—
C37-42	—
C37-43	—
C37-44	—
C37-45	Output for 5 V power source of throttle position sensor
C37-46	Throttle position sensor signal (main)
C37-47	CKP sensor signal
C37-48	A/C refrigerant pressure sensor signal (if equipped)
C37-49	Output for 5 V power source of MAP sensor (if equipped) and A/C refrigerant pressure sensor (if equipped)
C37-50	—
C37-51	—
C37-52	—
C37-53	—
C37-54	—
C37-55	Ignition coil No.5 output
C37-56	Ignition coil No.3 output

1A-21 Engine General Information and Diagnosis:

Terminal	Circuit
C37-57	Ignition coil No.1 output
C37-58	Ground for ECM
C37-59	Ground for ECM
C37-60	—
C37-61	—
C37-62	—
C37-63	—
C37-64	Ground for throttle position sensor
C37-65	Throttle position sensor signal (sub)
C37-66	CMP sensor signal
C37-67	Ground for MAP sensor (if equipped), A/C refrigerant pressure sensor (if equipped), ECT sensor, IAT sensor and HOS2 (if equipped)
C37-68	MAP sensor signal (if equipped)
C37-69	—
C37-70	—
C37-71	—
C37-72	—
C37-73	Ground for ECM
C37-74	Ignition coil No.6 output
C37-75	Ignition coil No.4 output
C37-76	Ignition coil No.2 output
C37-77	Heater output of A/F sensor (Bank-1)
C37-78	Heater output of A/F sensor (Bank-2)
C37-79	Ground for A/F sensor heater
C37-80	Ground for ECM
C37-81	Ground for ECM


ECM connector "E23"

Terminal	Circuit
E23-1	Power source for ECM internal memory
E23-2	Main power supply
E23-3	Main power supply
E23-4	Output of throttle actuator (+)
E23-5	Output of throttle actuator (-)
E23-6	Throttle actuator control relay output
E23-7	Power supply of throttle actuator drive circuit
E23-8	Ignition switch signal
E23-9	CAN communication line (active high signal)
E23-10	—
E23-11	Clock signal for immobilizer coil antenna (if equipped)
E23-12	—
E23-13	—
E23-14	Radiator cooling fan relay No.3 output
E23-15	Radiator cooling fan relay No.1 output
E23-16	Main power supply relay output
E23-17	CAN communication line (active low signal)
E23-18	—
E23-19	Serial communication line for immobilizer coil antenna (if equipped)
E23-20	—
E23-21	—
E23-22	—
E23-23	Radiator cooling fan relay No.2 output
E23-24	Fuel pump relay output
E23-25	Output for 5 V power source of APP sensor (main)
E23-26	APP sensor signal (main)
E23-27	Ground for APP sensor (main)
E23-28	Fuel level sensor signal
E23-29	Serial communication line of DLC
E23-30	Brake light switch signal
E23-31	Cruise control main switch signal (if equipped)
E23-32	Brake pedal position switch signal for cruise control system (if equipped)
E23-33	Output for 5 V power source of APP sensor (sub)
E23-34	APP sensor signal (sub)
E23-35	Ground for APP sensor (sub)
E23-36	—
E23-37	A/C compressor relay output (if equipped)
E23-38	Ground for cruise control command switch (if equipped)
E23-39	Cruise control command switch signal (if equipped)
E23-40	Clutch pedal position switch signal for cruise control system (if equipped)

Component Location

Electronic Control System Location

S6JB0B1103001

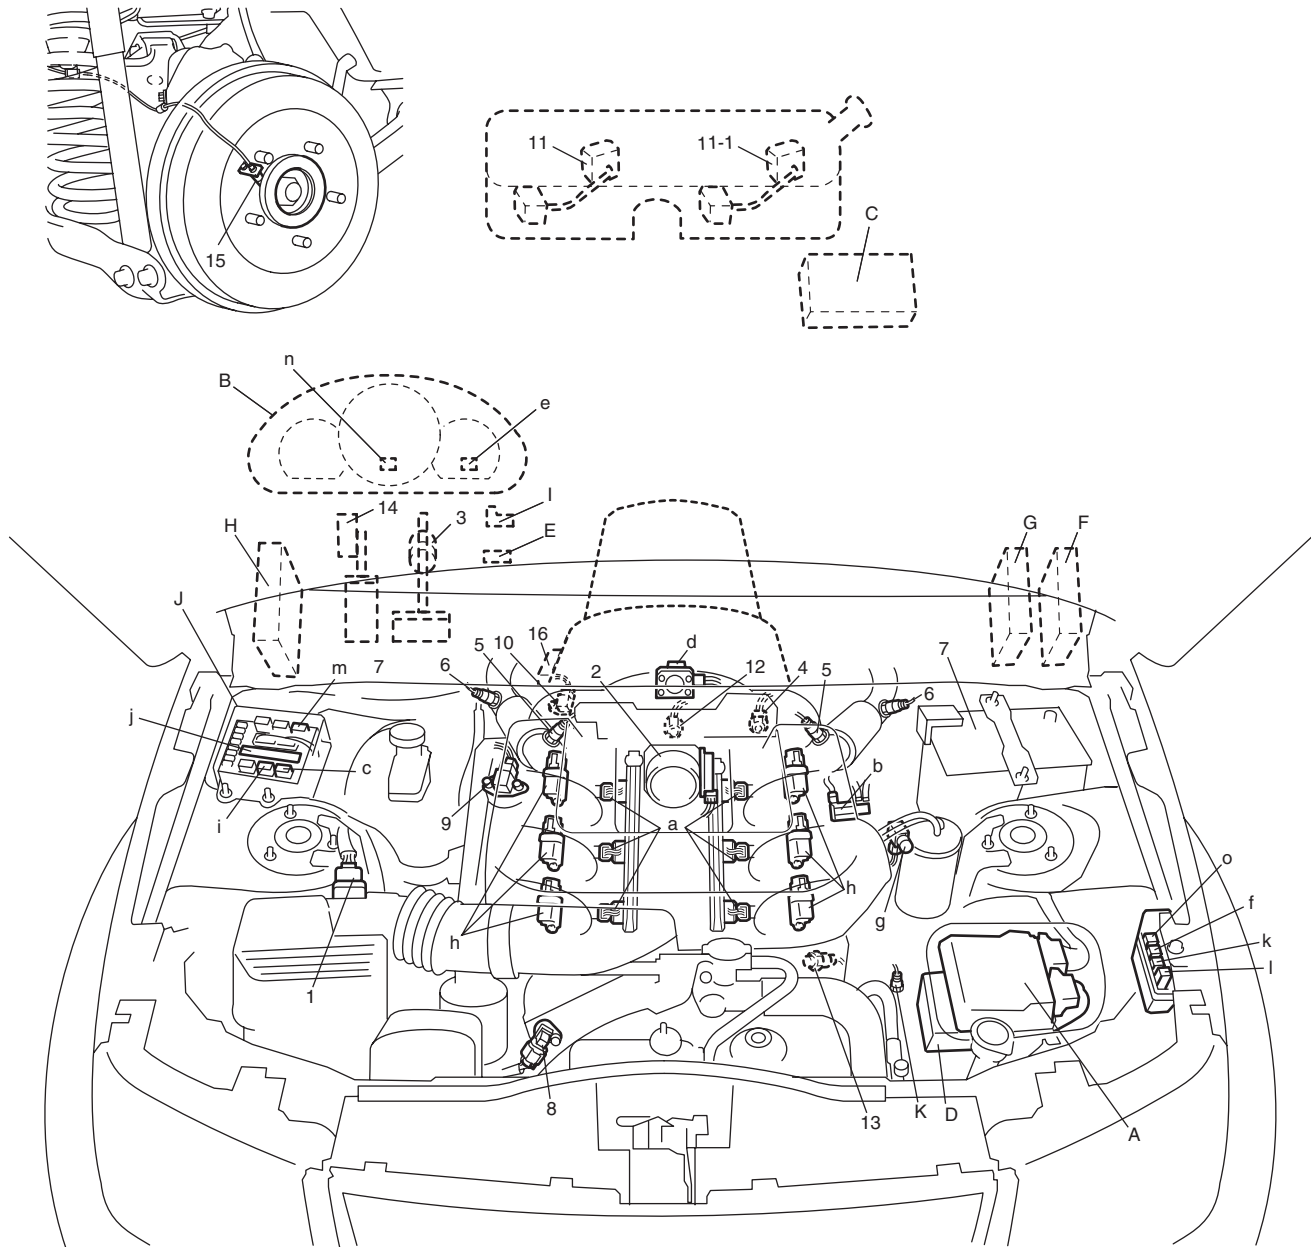

I5JB0C110005-01

Information sensors	Control devices	Others
1. MAF and IAT sensor	a: Fuel injector	A: ECM
2. Electric throttle body assembly (built-in throttle position sensor and throttle actuator)	b: EVAP canister purge valve	B: Combination meter
3. Brake light switch	c: Fuel pump relay	C: EVAP canister
4. ECT sensor	d: EGR valve (if equipped)	D: ABS or ESP® control module
5. A/F sensor (sensor-1)	e: Malfunction indicator lamp	E: Data link connector
6. HO2S (sensor-2) (if equipped)	f: Radiator cooling fan relay No.1	F: 4WD control module
7. Battery	g: IMT vacuum solenoid valve	G: TCM (A/T model)
8. CMP sensor	h: Ignition coil assembly (with ignitor)	H: BCM
9. MAP sensor (if equipped)	i: Main relay	I: Immobilizer coil antenna (if equipped)
10. CKP sensor	j: Integration relay No.2 (built-in HO2S heater relay, compressor relay and A/T relay)	J: Fuse box No.2
11. Main fuel level sensor	k: Radiator cooling fan relay No.2	K: A/C refrigerant pressure sensor (if equipped)
11-1. Sub fuel level sensor	l: Radiator cooling fan relay No.3	
12. Knock sensor	m: Starting motor control relay	
13. Power steering pump pressure switch	n: Immobilizer indicator light (if equipped)	
14. Accelerator pedal position (APP) sensor	o: Throttle actuator control relay	
15. Rear wheel speed sensor (RH, LH) (VSS)		
16. Transmission range sensor		

Diagnostic Information and Procedures

Engine and Emission Control System Check

S6JB0B1104001

Numbers of each step correspond to the numbers of the items after this table.

Refer to the following items for the detail of each step.

Step	Action	Yes	No
1	☞ Customer complaint analysis 1) Perform customer complaint analysis. <i>Was customer complaint analysis performed?</i>	Go to Step 2.	Perform customer complaint analysis.
2	☞ DTC / freeze frame data check, record and clearance 1) Check DTC (including pending DTC) referring to “DTC Check”. <i>Is there any malfunction DTC?</i>	Print DTC and freeze frame data or write them down and clear them by referring to “DTC Clearance”, and go to Step 3.	Go to Step 4.
3	☞ Visual inspection 1) Perform visual inspection referring to “Visual inspection”. <i>Is there any faulty condition?</i>	Repair or replace malfunction part and go to Step 11.	Go to Step 5.
4	☞ Visual inspection 1) Perform visual inspection referring “Visual inspection”. <i>Is there any faulty condition?</i>	Repair or replace malfunction part and go to Step 11.	Go to Step 8.
5	☞ Trouble symptom confirmation 1) Confirm trouble symptom based on customer complaint analysis, DTC / freeze frame data in Step 1. <i>Is trouble symptom identified?</i>	Go to Step 6.	Go to Step 7.
6	☞ Rechecking and record of DTC / freeze frame data 1) Recheck DTC / freeze frame data. <i>Is there any malfunction DTC?</i>	Go to Step 9.	Go to Step 8.
7	☞ Rechecking and record of DTC / freeze frame data 1) Recheck DTC / freeze frame data. <i>Is there any malfunction DTC?</i>	Go to Step 9.	Go to Step 10.

1A-25 Engine General Information and Diagnosis:

Step	Action	Yes	No
8	🔧 Engine basic inspection and engine symptom diagnosis 1) Check and repair according to “Visual Inspection” and “Engine Symptom Diagnosis”. <i>Are check and repair complete?</i>	Go to Step 11.	Check and repair malfunction part(s) and go to Step 11.
9	🔧 Troubleshooting for DTC 1) Check and repair according to the “DTC Troubleshooting” of the applicable DTC flow. <i>Are check and repair complete?</i>	Go to Step 11.	Check and repair malfunction part(s) and go to Step 11.
10	🔧 Intermittent problems check 1) Check for intermittent problems referring to “Intermittent and Poor Connection Inspection in Section 00”. <i>Is there any faulty condition?</i>	Repair or replace malfunction part and go to Step 11.	Go to Step 11.
11	🔧 Final confirmation test 1) Clear DTC if any. 2) Perform final confirmation test referring to each “DTC Confirmation Procedure”. <i>Is there any problem symptom, malfunction DTC or abnormal condition?</i>	Go to Step 6.	End.

Description for Each Step**Step 1: Customer complaint analysis**

Record details of the problem (failure, complaint) and how it occurred as described by the customer. For this purpose, use of such an inspection form will facilitate collecting information to the point required for proper analysis and diagnosis.

NOTE

The form is standard sample. It should be modified according to conditions and characteristics of each market.

Customer problem inspection form (Example)

User name:	Model:	VIN:	
Date of issue:	Date of Reg.:	Date of problem:	Mileage:

PROBLEM SYMPTOMS	
<input type="checkbox"/> Difficult Starting <input type="checkbox"/> No cranking <input type="checkbox"/> No initial combustion <input type="checkbox"/> No combustion <input type="checkbox"/> Poor starting at (<input type="checkbox"/> cold <input type="checkbox"/> warm <input type="checkbox"/> always) <input type="checkbox"/> Other _____	<input type="checkbox"/> Poor Driveability <input type="checkbox"/> Hesitation on acceleration <input type="checkbox"/> Back fire/ <input type="checkbox"/> After fire <input type="checkbox"/> Lack of power <input type="checkbox"/> Surging <input type="checkbox"/> Abnormal knocking <input type="checkbox"/> Other _____
<input type="checkbox"/> Poor idling <input type="checkbox"/> Poor fast idle <input type="checkbox"/> Abnormal idling speed (<input type="checkbox"/> High <input type="checkbox"/> Low) (r/min.) <input type="checkbox"/> Unstable <input type="checkbox"/> Hunting (r/min. to r/min.) <input type="checkbox"/> Other _____	<input type="checkbox"/> Engine Stall when <input type="checkbox"/> Immediately after start <input type="checkbox"/> Accel. pedal is depressed <input type="checkbox"/> Accel. pedal is released <input type="checkbox"/> Load is applied <input type="checkbox"/> A/C <input type="checkbox"/> Electric load <input type="checkbox"/> P/S <input type="checkbox"/> Other _____ <input type="checkbox"/> Other _____
<input type="checkbox"/> OTHERS:	

VEHICLE/ENVIRONMENTAL CONDITION WHEN PROBLEM OCCURS	
Environmental Condition	
Weather Temperature Frequency Road	<input type="checkbox"/> Fair <input type="checkbox"/> Cloudy <input type="checkbox"/> Rain <input type="checkbox"/> Snow <input type="checkbox"/> Always <input type="checkbox"/> Other _____ <input type="checkbox"/> Hot <input type="checkbox"/> Warm <input type="checkbox"/> Cool <input type="checkbox"/> Cold (°F/ °C) <input type="checkbox"/> Always <input type="checkbox"/> Always <input type="checkbox"/> Sometimes (times/ day, month) <input type="checkbox"/> Only once <input type="checkbox"/> Under certain condition <input type="checkbox"/> Urban <input type="checkbox"/> Suburb <input type="checkbox"/> Highway <input type="checkbox"/> Mountainous (<input type="checkbox"/> Uphill <input type="checkbox"/> Downhill) <input type="checkbox"/> Tarmacadam <input type="checkbox"/> Gravel <input type="checkbox"/> Other _____
Vehicle Condition	
Engine Condition	<input type="checkbox"/> Cold <input type="checkbox"/> Warming up phase <input type="checkbox"/> Warmed up <input type="checkbox"/> Always <input type="checkbox"/> Other at starting <input type="checkbox"/> Immediately after start <input type="checkbox"/> Racing without load <input type="checkbox"/> Engine speed (r/min)
Vehicle condition	<input type="checkbox"/> During driving: <input type="checkbox"/> Constant speed <input type="checkbox"/> Accelerating <input type="checkbox"/> Decelerating <input type="checkbox"/> Right hand corner <input type="checkbox"/> left hand corner <input type="checkbox"/> When shifting (Lever position) <input type="checkbox"/> At stop <input type="checkbox"/> Vehicle speed when problem occurs (km/h, Mile/h) <input type="checkbox"/> Other _____
Malfunction indicator lamp condition	<input type="checkbox"/> Always ON <input type="checkbox"/> Sometimes ON <input type="checkbox"/> Always OFF <input type="checkbox"/> Good condition
Diagnostic trouble code	First check: <input type="checkbox"/> No code <input type="checkbox"/> Normal code <input type="checkbox"/> Malfunction code ()
	Second check: <input type="checkbox"/> No code <input type="checkbox"/> Normal code <input type="checkbox"/> Malfunction code (-)

1A-27 Engine General Information and Diagnosis:

Step 2: DTC / freeze frame data check, record and clearance

First, check DTC (including pending DTC), referring to “DTC Check”. If DTC is indicated, record DTC and freeze frame data. After that clear DTC referring to “DTC Clearance”. DTC indicates malfunction that occurred in the system but does not indicate whether it exists now or it occurred in the past and the normal condition has been restored now. To check which case applies, check the symptom in question according to Step 5 and recheck DTC according to Step 6 and 7.

Attempt to diagnose a trouble based on DTC in this step only or failure to clear the DTC (including pending DTC) in this step will lead to incorrect diagnosis, trouble diagnosis of a normal circuit or difficulty in troubleshooting.

Step 3 and 4: Visual inspection

As a preliminary step, be sure to perform visual check of the items that support proper function of the engine referring to “Visual Inspection”.

Step 5: Trouble symptom confirmation

Based on information obtained in ☞ “Customer complaint analysis” and ☞ “DTC / freeze frame data check”, confirm trouble symptoms. Also, reconfirm DTC according to “DTC Confirmation Procedure” described in each diag. flow.

Step 6 and 7: DTC / freeze frame data check

Refer to “DTC Check” or checking procedure.

Step 8: Engine basic inspection and engine symptom diagnosis

Perform basic engine check according to the “Engine Basic Check” first. When the end of the flow has been reached, check the parts of the system suspected as a possible cause referring to “Engine Symptom Diagnosis” and based on symptoms appearing on the vehicle (symptoms obtained through steps of customer complaint analysis, trouble symptom confirmation and/or basic engine check) and repair or replace faulty parts, if any.

Step 9: DTC troubleshooting

Based on the DTC indicated in Step 6 or 7 and referring to the applicable DTC diag. flow, locate the cause of the trouble, namely in a sensor, switch, wire harness, connector, actuator, ECM or other part and repair or replace faulty parts.

Step 10: Intermittent problems check

Check parts where an intermittent trouble is easy to occur (e.g., wire harness, connector, etc.), referring to “Intermittent and Poor Connection Inspection in Section 00” and related circuit of DTC recorded in Step 2.

Step 11: Final confirmation test

Confirm that the problem symptom has gone and the engine is free from any abnormal conditions. If what has been repaired is related to the DTC, clear the DTC once, perform DTC confirmation procedure and confirm that no malfunction DTC (a normal code) is indicated.

Visual Inspection

Visually check the following parts and systems.

Inspection Item		Referring section
Engine oil	Level, leakage	"Engine Oil and Filter Change in Section 0B"
Engine coolant	Level, leakage	"Coolant Level Check in Section 1F"
Fuel	Level, leakage	"Fuel Leakage Check Procedure in Section 1G"
A/T fluid	Level, leakage	"Automatic Transmission Fluid Inspection in Section 0B"
Air cleaner filter	Dirt, clogging	"Air Cleaner Filter Inspection and Cleaning in Section 1D"
Battery	Fluid level, corrosion of terminal	
Engine accessory drive belt	Tension, damage	"Engine Accessory Drive Belt Inspection in Section 0B"
Throttle valve	Operating sound	"Electric Throttle Body Assembly On-Vehicle Inspection in Section 1C"
Vacuum hoses of air intake system	Disconnection, looseness, deterioration, bend	
Connectors of electric wire harness	Disconnection, friction	
Fuses	Burning	"Intermittent and Poor Connection Inspection in Section 00"
Parts	Installation, deformation	
Bolt	Looseness	
Other parts that can be checked visually		
Also add the following items at engine start, if possible		
Malfunction indicator lamp	Operation	"Malfunction Indicator Lamp (MIL) Check"
Charge warning light	Operation	"Generator Symptom Diagnosis in Section 1J"
Engine oil pressure warning light	Operation	"Oil Pressure Switch Inspection in Section 9C"
Engine coolant temp. meter	Operation	"Engine Coolant Temperature (ECT) Sensor Inspection in Section 9C"
Fuel level meter	Operation	"Fuel Level Sensor Inspection in Section 9C"
Tachometer	Operation	
Exhaust system	Leakage of exhaust gas, noise	
Abnormal air being inhaled from air intake system		
Other parts that can be checked visually		

Engine Basic Check

This check is very important for troubleshooting when ECM has detected no DTC and no abnormality has been found in "Visual Inspection".


Follow the flow carefully.

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	1) Check battery voltage. <i>Is it 11 V or more?</i>	Go to Step 3.	Charge or replace battery.
3	<i>Is vehicle equipped with keyless start control system?</i>	Go to Step 4.	Go to Step 5.
4	Check keyless start control system malfunction 1) Check keyless start control system referring to "Keyless Start System Operation Inspection in Section 10E". <i>Is check result satisfactory?</i>	Go to Step 5.	Keyless start control system malfunction.
5	<i>Is engine cranked?</i>	Go to Step 6.	Go to "Cranking System Symptom Diagnosis in Section 1I".
6	<i>Does engine start?</i>	Go to Step 7.	Go to Step 9.
7	1) Check engine idle speed referring to "Idle Speed and IAC Throttle Valve Opening Inspection". <i>Is check result as specified?</i>	Go to Step 8.	Go to "Engine Symptom Diagnosis".
8	1) Check ignition timing referring to "Ignition Timing Inspection in Section 1H". <i>Is check result as specified?</i>	Go to "Engine Symptom Diagnosis".	Check ignition control related parts referring to "Ignition Timing Inspection in Section 1H".).
9	Check immobilizer system malfunction 1) Check immobilizer control system referring to "Immobilizer Control System Check in Section 10C". <i>Is it in good condition?</i>	Go to Step 10.	Immobilizer control system malfunction.
10	Check fuel supply 1) Check to make sure that enough fuel is filled in fuel tank. 2) Turn ON ignition switch for 3 seconds and then OFF. 3) Repeat Step 2) a few times. <i>Is fuel return pressure (returning sounds) felt from fuel return hose when ignition switch is turned ON?</i>	Go to Step 12.	Go to Step 11.
11	Check fuel pump for operation <i>Was fuel pump operating sound heard from fuel filler for about 3 seconds after ignition switch ON and stop?</i>	Go to "Fuel Pressure Check".	Go to "Fuel Pump and Its Circuit Check".
12	Check ignition spark 1) Check ignition spark referring to "Ignition Spark Check in Section 1H". <i>Is it in good condition?</i>	Go to Step 13.	Go to "Ignition System Symptom Diagnosis in Section 1H".
13	Check fuel injector for operation 1) Check fuel injector referring to "Fuel Injector Circuit Check". <i>Is it in good condition?</i>	Go to "Engine Symptom Diagnosis".	Go to "Fuel Injector Circuit Check".

Malfunction Indicator Lamp (MIL) Check

S6JB0B1104004

- 1) Turn ON ignition switch (but the engine at stop) and check that MIL lights.
 If MIL does not light up (or MIL dims) but engine can be started, go to “Malfunction Indicator Lamp Does Not Come ON with Ignition Switch ON and Engine Stop (but Engine Can Be Started)” for troubleshooting.
 If MIL does not light with ignition switch ON and engine does not start though it is cranked up, go to “ECM Power and Ground Circuit Check”.
- 2) Start engine and check that MIL turns OFF.
 If MIL remains ON, and no DTC is stored in ECM, go to “Malfunction Indicator Lamp Remains ON after Engine Starts” for troubleshooting.

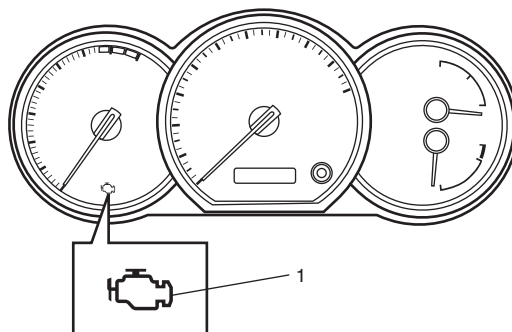

ISJB0A110018-01

DTC Table

S6JB0B1104005






 
 












DTC No.	Detected item	Detecting condition (DTC will set when detecting:)	DTC	MIL
P0031	HO2S Heater Control Circuit Low (Bank 1 Sensor 1)	Circuit current of A/F sensor (bank-1) heater is lower than 0.8 A for more than 4 sec continuously while control duty ratio of A/F sensor heater is more than 22% with engine running.	2 driving cycles	2 driving cycles
P0032	HO2S Heater Control Circuit High (Bank 1 Sensor 1)	Circuit current of A/F sensor (bank-1) heater is higher than 10.5 A on duty pulse or 0.8 A on OFF duty pulse for more than 4 sec continuously while control duty ratio of A/F sensor heater is more than 22% with engine running.	2 driving cycles	2 driving cycles
P0037	HO2S Heater Control Circuit Low (Bank 1 Sensor 2)	Circuit current of HO2S (bank-1) heater is lower than specification (0.16 – 0.28 A depending on battery voltage) for more than 1 sec continuously while control duty of HO2S sensor heater is ON with engine running.	2 driving cycles	2 driving cycles
P0038	HO2S Heater Control Circuit High (Bank 1 Sensor 2)	Circuit current of HO2S sensor (bank-1) heater is higher than 5 A at ON duty pulse or 0.2 A at OFF duty pulse for more than 1 sec continuously while control duty of HO2S sensor heater is ON with engine running.	2 driving cycles	2 driving cycles
P0051	HO2S Heater Control Circuit Low (Bank 2 Sensor 1)	Circuit current of A/F sensor (bank-2) heater is lower than 0.8 A for more than 4 sec continuously while control duty ratio of A/F sensor heater is more than 22% with engine running.	2 driving cycles	2 driving cycles

1A-31 Engine General Information and Diagnosis:

DTC No.	Detected item	Detecting condition (DTC will set when detecting:)	DTC	MIL
P0052	HO2S Heater Control Circuit High (Bank 2 Sensor 1)	Circuit current of A/F sensor (bank-2) heater is higher than 10.5 A at ON duty pulse or 0.8 A at OFF duty pulse for more than 4 sec continuously while control duty ratio of A/F sensor heater is more than 22% with engine running.	2 driving cycles	2 driving cycles
P0057	HO2S Heater Control Circuit Low (Bank 2 Sensor 2)	Circuit current of HO2S (bank-2) heater is lower than specification (0.16 – 0.28 A depending on battery voltage) for more than 1 sec continuously while control duty of HO2S sensor heater is ON with engine running.	2 driving cycles	2 driving cycles
P0058	HO2S Heater Control Circuit High (Bank 2 Sensor 2)	Circuit current of HO2S sensor (bank-2) heater is higher than 5 A at ON duty pulse or 0.2 A at OFF duty pulse for more than 1 sec continuously while control duty of HO2S sensor heater is ON with engine running.	2 driving cycles	2 driving cycles
P0101	Mass Air Flow Circuit Range/ Performance	Ratio of MAF sensor signal to estimated MAF based on engine speed and MAP signal is more than 1.3 or less than 0.8 for more than 10 sec.	2 driving cycles	2 driving cycles
P0102	Mass Air Flow Circuit Low Input	Output voltage of MAF sensor is less than 0.3 V.	1 driving cycle	1 driving cycle
P0103	Mass Air Flow Circuit High Input	Output voltage of MAF sensor is more than 5 V.	1 driving cycle	1 driving cycle
P0107	Manifold Absolute Pressure Circuit Low Input	Output voltage of MAP sensor is less than 0.1 V.	1 driving cycle	1 driving cycle
P0108	Manifold Absolute Pressure Circuit High Input	Output voltage of MAP sensor is more than 4.9 V.	1 driving cycle	1 driving cycle
P0111	Intake Air Temperature Sensor Circuit Performance	Variation of IAT sensor signal is less than 15 mV even through ECT reaches 75 °C after engine is started with ECT less than 30 °C.	2 driving cycles	2 driving cycles
P0112	Intake Air Temperature Sensor Circuit Low	Circuit voltage of IAT sensor is less than 0.16 V.	1 driving cycle	1 driving cycle
P0113	Intake Air Temperature Sensor Circuit High	Circuit voltage of IAT sensor is more than 5.0 V.	1 driving cycle	1 driving cycle
P0116	Engine Coolant Temperature Circuit Range / Performance	Variation of ECT sensor input voltage is 15 mV or less even though vehicle has been driven for 10 min or more after starting engine.	2 driving cycles	2 driving cycles
P0117	Engine Coolant Temperature Circuit Low	Circuit voltage of ECT sensor is less than 0.16 V.	1 driving cycle	1 driving cycle
P0118	Engine Coolant Temperature Circuit High	Circuit voltage of ECT sensor is more than 5.0 V.	1 driving cycle	1 driving cycle
P0122	Throttle Position Sensor (Main) Circuit Low	Output voltage of throttle position sensor (main) is lower than 0.3 V.	1 driving cycle	1 driving cycle
P0123	Throttle Position Sensor (Main) Circuit High	Output voltage of throttle position sensor (main) is higher than 4.5 V.	1 driving cycle	1 driving cycle
P0133	O2 Sensor Circuit Slow Response (Bank 1 Sensor 1)	Number of shifting times for A/F sensor signal between rich and lean is less than 13 times in 20 sec while A/F (fuel trim) is shifted from rich to lean and lean to rich with specified diagnosis frequency under specified running.	2 driving cycles	2 driving cycles















DTC No.	Detected item	Detecting condition (DTC will set when detecting:)	DTC	MIL
☞ P0134	O2 Sensor Circuit No Activity Detected (Bank 1 Sensor 1)	Impedance of A/F sensor element is higher than $67\ \Omega$ for more than 20 sec even though A/F sensor heater is turned ON for more than specified time with engine running.	2 driving cycles	2 driving cycles
☞ P0137	O2 Sensor Circuit Low Voltage (Bank 1 Sensor 2)	Circuit voltage of HO2S (bank-1) is lower than 15 mV for more than 60 sec continuously with engine running except in fuel cut condition.	2 driving cycles	2 driving cycles
☞ P0138	O2 Sensor Circuit High Voltage (Bank 1 Sensor 2)	Circuit voltage of HO2S (bank-1) is higher than 1.2 V for more than 20 sec continuously with engine running.	2 driving cycles	2 driving cycles
☞ P0140	O2 Sensor Circuit No Activity Detected (Bank 1 Sensor 2)	Circuit voltage of HO2S (bank-1) is within 0.27 V – 0.35 V for more than 120 sec continuously while A/F (fuel trim) is shifted from rich to lean and lean to rich with specified diagnosis frequency under specified running, or circuit voltage of HO2S (bank-1) is out of specified range (0.2 V – 0.45 V) during engine being started from cold (ECT less than 40 °C), then warmed up and run.	2 driving cycles	2 driving cycles
☞ P0153	O2 Sensor Circuit Slow Response (Bank 2 Sensor 1)	Number of shifting times for A/F sensor signal between rich and lean is less than 13 times in 20 sec while A/F (fuel trim) is shifted from rich to lean and lean to rich with specified diagnosis frequency under specified running.	2 driving cycles	2 driving cycles
☞ P0154	O2 Sensor Circuit No Activity Detected (Bank 2 Sensor 1)	Impedance of A/F sensor element is higher than $67\ \Omega$ for more than 20 sec even though A/F sensor heater is turned ON for more than specified time with engine running.	2 driving cycles	2 driving cycles
☞ P0157	O2 Sensor Circuit Low Voltage (Bank 2 Sensor 2)	Circuit voltage of HO2S (bank-1) is lower than 15 mV for more than 60 sec continuously with engine running except in fuel cut condition.	2 driving cycles	2 driving cycles
☞ P0158	O2 Sensor Circuit High Voltage (Bank 2 Sensor 2)	Circuit voltage of HO2S (bank-1) is higher than 1.2 V for more than 20 sec continuously with engine running.	2 driving cycles	2 driving cycles
☞ P0160	O2 Sensor Circuit No Activity Detected (Bank 2 Sensor 2)	Circuit voltage of HO2S (bank-2) is within 0.27 V – 0.35 V for more than 120 sec continuously while A/F (fuel trim) is shifted from rich to lean and lean to rich with specified diagnosis frequency under specified running, or circuit voltage of HO2S (bank-2) is out of specified range (0.2 V – 0.45 V) during engine being started from cold (ECT less than 40 °C), then warmed up and run.	2 driving cycles	2 driving cycles
☞ P0171	System Too Lean (Bank 1)	Total fuel trim (short term + long term fuel trim) is larger than 127% for more than 20 sec, or short term fuel trim is larger than 130% for more than 30 sec.	2 driving cycles	2 driving cycles
☞ P0172	System Too Rich (Bank 1)	Total fuel trim (short term + long term fuel trim) is smaller than 71% for more than 20 sec, or short term fuel trim is smaller than 70% for more than 30 sec.	2 driving cycles	2 driving cycles

1A-33 Engine General Information and Diagnosis:

DTC No.	Detected item	Detecting condition (DTC will set when detecting:)	DTC	MIL
 P0174	System Too Lean (Bank 2)	Total fuel trim (short term + long term fuel trim) is larger than 127% for more than 20 sec, or short term fuel trim is larger than 130% for more than 30 sec.	2 driving cycles	2 driving cycles
 P0175	System Too Rich (Bank 2)	Total fuel trim (short term + long term fuel trim) is smaller than 71% for more than 20 sec, or short term fuel trim is smaller than 70% for more than 30 sec.	2 driving cycles	2 driving cycles
 P0222	Throttle Position Sensor (Sub) Circuit Low	Output voltage of throttle position sensor (sub) is lower than 0.55 V.	1 driving cycle	1 driving cycle
 P0223	Throttle Position Sensor (Sub) Circuit High	Output voltage of throttle position sensor (sub) is higher than 4.82 V.	1 driving cycle	1 driving cycle
 P0300	Random/Multiple Cylinder Misfire Detected	Misfire, which causes catalyst to overheat during 200 engine revolutions, is detected at 2 or more cylinders. (MIL flashes as long as this misfire occurs continuously.) Or Misfire, which affects exhaust emission adversely during 1000 engine revolutions, is detected at 2 or more cylinders.	2 driving cycles	2 driving cycles
 P0301	Cylinder 1 Misfire Detected	Misfire, which causes catalyst to overheat during 200 engine revolutions, is detected at 1 cylinder. (MIL flashes as long as this misfire occurs continuously.) Or Misfire, which affects exhaust emission adversely during 1000 engine revolutions, is detected at 1 cylinder.		
 P0302	Cylinder 2 Misfire Detected			
 P0303	Cylinder 3 Misfire Detected			
 P0304	Cylinder 4 Misfire Detected			
 P0305	Cylinder 5 Misfire Detected			
 P0306	Cylinder 6 Misfire Detected			
 P0327	Knock Sensor Circuit Low	Output voltage of knock sensor is less than 1 V for more than 255 ignition times continuously.	1 driving cycle	1 driving cycle
 P0328	Knock Sensor Circuit High	Output voltage of knock sensor is more than 4 V for more than 255 ignition times continuously.	1 driving cycle	1 driving cycle
 P0335	Crankshaft Position Sensor Circuit	CKP sensor outputs signal of less than 15 pulses even through starting motor switch signal is inputted for more than 3 sec continuously or CKP sensor outputs signal of less than 3 pulses for more than 0.2 sec continuously within 2 pulses of CMP sensor signal.	1 driving cycle	1 driving cycle
 P0336	Crankshaft Position Sensor Circuit Range / Performance	CKP sensor outputs signal of less than 10 pulses for continuous 3 times within CKP no-teeth reference signal (120 °C crank angle).	1 driving cycle	1 driving cycle
 P0340	Camshaft Position Sensor Circuit	CMP sensor outputs signal of less than 2 pulses even through starting motor switch signal is inputted for more than 3 sec continuously CKP sensor outputs signal of less than 1 pulse for continuous 3 times within CKP no-teeth reference signal (120 °C crank angle).	1 driving cycle	1 driving cycle
 P0341	Camshaft Position Sensor Circuit Range / Performance	CMP sensor signal pattern is different from previously one 20 times or more.	1 driving cycle	1 driving cycle
 P0401	Exhaust Gas Recirculation Flow Insufficient Detected	MAP variation is 0.67 Kpa or less when EGR valve is either opened or closed.	2 driving cycles	2 driving cycles
 P0402	Exhaust Gas Recirculation Flow Excessive Detected	MAP variation is 8.7 Kpa or more when EGR valve is either opened or closed.	2 driving cycles	2 driving cycles

DTC No.	Detected item	Detecting condition (DTC will set when detecting:)	DTC	MIL
☞ P0403	Exhaust Gas Recirculation Control Circuit	EGR valve control duty pulse monitor signal is less than 0.8 V at OFF duty pulse or more than 2.2 V at ON duty pulse for more than 4 times.	1 driving cycle	1 driving cycle
☞ P0420	Catalyst System Efficiency Below Threshold (Bank 1)	Correlation coefficient that is calculated on the basis of A/F sensor signal and HO2S-2 signal exceeds specification when switched from RICH to LEAN in A/F diagnostic frequency under prescribed running condition.	2 driving cycles	2 driving cycles
☞ P0430	Catalyst System Efficiency Below Threshold (Bank 2)	Correlation coefficient that is calculated on the basis of A/F sensor signal and HO2S-2 signal exceeds specification when switched from RICH to LEAN in A/F diagnostic frequency under prescribed running condition.	2 driving cycles	2 driving cycles
☞ P0444	Evaporative Emission System Purge Control Valve Circuit Open	EVAP canister purge valve control duty (on 48% ON duty or less) is continuous 240 pulses or more and purge valve circuit voltage is 3.0 V or less during OFF duty pulse condition.	1 driving cycle	1 driving cycle
☞ P0445	Evaporative Emission System Purge Control Valve Circuit Shorted	EVAP canister purge valve control duty (on 50% ON duty or less) is continuous 240 pulses or more and purge valve circuit voltage is 8.4 V or more during OFF duty pulse condition.	1 driving cycle	1 driving cycle
☞ P0462	Fuel Level Sensor Circuit Low	Circuit voltage of fuel level sensor is less than specification calculated from battery voltage.	2 driving cycles	Not applicable
☞ P0463	Fuel Level Sensor Circuit High	Circuit voltage of fuel level sensor is more than specification calculated from battery voltage.	2 driving cycles	Not applicable
☞ P0480	Fan 1 Control Circuit	No.1 radiator cooling fan relay circuit voltage is more than 8.4 V at relay ON or less than 3.0 V at relay OFF.	1 driving cycle	1 driving cycle
☞ P0481	Fan 2 Control Circuit	No.2 radiator cooling fan relay circuit voltage is more than 8.4 V at relay ON or less than 3.0 V at relay OFF.	1 driving cycle	1 driving cycle
☞ P0482	Fan 3 Control Circuit	No.3 radiator cooling fan relay circuit voltage is more than 8.4 V at relay ON or less than 3.0 V at relay OFF.	1 driving cycle	1 driving cycle
☞ P0500	Vehicle Speed Sensor	Wheel speed signal (RL and/or RR) is 0.6 mph or less even though signal sent from CAN is 4000 rpm or less with fuel cut condition.	1 driving cycle	1 driving cycle
☞ P0532	A/C Refrigerant Pressure Sensor Circuit Low	Output voltage of A/C refrigerant pressure sensor is less than 0.15 V for more than 5 sec.	1 driving cycle	Not applicable
☞ P0533	A/C Refrigerant Pressure Sensor Circuit High	Output voltage of A/C refrigerant pressure sensor is more than 4.95 V for more than 5 sec.	1 driving cycle	Not applicable
P0565	Cruise Control On Signal	Refer to "DTC Table in Section 10A".		
P0566	Cruise Control Off Signal			
P0567	Cruise Control Resume Signal			
P0568	Cruise Control Set Signal			
P0571	Brake Switch Circuit			
☞ P0601	Internal Control Module Memory Check Sum Error	Data write error or check sum error.	1 driving cycle	1 driving cycle

1A-35 Engine General Information and Diagnosis:

DTC No.	Detected item	Detecting condition (DTC will set when detecting:)	DTC	MIL
P0602	Control Module Programming Error	Data programming error.	1 driving cycle	Not applicable
 P0607	Control Module Performance	Internal processor error.	1 driving cycle	1 driving cycle
 P0616	Starter Relay Circuit Low	No starter switch signal is inputted for 20 sec or more even though there is CMP sensor input with vehicle speed at 2 km/h or less.	2 driving cycles	2 driving cycles
 P0617	Starter Relay Circuit High	There is starter switch input for 180 sec or more even though engine operates at 600 rpm or more.	2 driving cycles	2 driving cycles
 P0645	A/C Clutch Relay Control Circuit	Monitor signal of A/C compressor relay is different from command signal.	1 driving cycle	Not applicable
 P0661	Intake Manifold Tuning Valve Control Circuit Low	Circuit voltage of intake manifold tuning vacuum solenoid valve is less than specification even if solenoid valve is turned OFF.	1 driving cycle	Not applicable
 P0662	Intake Manifold Tuning Valve Control Circuit High	Circuit voltage of intake manifold tuning vacuum solenoid valve is more than specification even if solenoid valve is turned ON.	1 driving cycle	Not applicable
 P1107	MAP Sensor Rationality Check-Low	Input voltage of MAP sensor circuit is lower than the 1 V even though vehicle runs under engine load factor of 43% or more.	2 driving cycles	2 driving cycles
 P1108	MAP Sensor Rationality Check-High	Input voltage of MAP sensor circuit is more than the specified 2.7 V even though vehicle runs under engine load factor of 27% or less.	2 driving cycles	2 driving cycles
 P1510	Back-Up Power Circuit Range Check (open)	Backup power voltage of internal circuit is lower than 3 V or more than 7 V.	1 driving cycle	1 driving cycle
 P1603	TCM Trouble Code Detected	When ECM detects invalid data in transmitted control data by means of CAN from TCM, which indicates that some problem occurred in sensor circuits and its calculated values used for operations such as idle speed control, engine power control and so on by TCM, this DTC is detected by ECM.	1 driving cycle	Not applicable
 P2101	Throttle Actuator Control Motor Circuit Range / Performance	Difference between actual throttle valve position and target throttle valve position is more than 2° for more than 2 sec.	1 driving cycle	1 driving cycle
 P2102	Throttle Actuator Control Motor Circuit Low	Power supply voltage of throttle actuator control circuit is lower than 6 V for more than 0.5 sec even if throttle actuator control relay is turned on.	1 driving cycle	1 driving cycle
 P2103	Throttle Actuator Control Motor Circuit High	Power supply current of throttle actuator control circuit is higher than specification for more than 0.5 sec.	1 driving cycle	1 driving cycle
 P2108	Throttle Actuator Control Module Performance	Throttle actuator power supply voltage is 3 V or less even though its control relay is turned OFF, or throttle actuator power supply voltage is 8 V or more even though the relay is turned ON.	1 driving cycle	1 driving cycle

DTC No.	Detected item	Detecting condition (DTC will set when detecting:)	DTC	MIL
☞ P2119	Throttle Actuator Control Throttle Body Range / Performance	Even though throttle motor control is interrupted (throttle valve default position) at the time of detecting failure in electric throttle body, TP is 12 degrees or more, or MAF is 1400 g/min or more. Even though throttle motor control is interrupted (throttle valve default position) at the time of IG OFF control, TP is 5 degrees or less, or 15 degrees or more.	1 driving cycle	1 driving cycle
☞ P2122	Pedal Position Sensor (Main) Circuit Low	Output voltage of pedal position sensor (main) is lower than 0.45 V.	1 driving cycle	1 driving cycle
☞ P2123	Pedal Position Sensor (Main) Circuit High	Output voltage of pedal position sensor (main) is higher than 4.8 V.	1 driving cycle	1 driving cycle
☞ P2127	Pedal Position Sensor (Sub) Circuit Low	Output voltage of pedal position sensor (sub) is lower than 0.23 V.	1 driving cycle	1 driving cycle
☞ P2128	Pedal Position Sensor (Sub) Circuit High	Output voltage of pedal position sensor (sub) is higher than 2.4 V.	1 driving cycle	1 driving cycle
☞ P2135	Throttle Position Sensor (Main / Sub) Voltage Correlation	Index of correlation between main throttle position sensor and sub throttle position sensor (main throttle position sensor voltage plus sub throttle position sensor voltage minus 4.9 V) is more than 0.2 V.	1 driving cycle	1 driving cycle
☞ P2138	Pedal Position Sensor (Main / Sub) Voltage Correlation	Index of correlation between the main accelerator pedal position sensor and sub accelerator pedal position sensor (1/2 main accelerator pedal position sensor voltage minus sub accelerator pedal position sensor voltage) is more than 0.28 V.	1 driving cycle	1 driving cycle
☞ P2195	O2 Sensor Signal Stuck Lean (Bank 1 Sensor 1)	Short term fuel trim is higher than 130% for 30 seconds even though HO2S (bank-1) signal voltage is higher than 0.5 V.	2 driving cycles	2 driving cycles
☞ P2196	O2 Sensor Signal Stuck Rich (Bank 1 Sensor 1)	Short term fuel trim is lower than 70% for 30 seconds even though HO2S (bank-1) signal voltage is lower than 0.5 V.	2 driving cycles	2 driving cycles
☞ P2197	O2 Sensor Signal Stuck Lean (Bank 2 Sensor 1)	Short term fuel trim is higher than 130% for 30 seconds even though HO2S (bank-2) signal voltage is higher than 0.5 V.	2 driving cycles	2 driving cycles
☞ P2198	O2 Sensor Signal Stuck Rich (Bank 2 Sensor 1)	Short term fuel trim is lower than 70% for 30 seconds even though HO2S (bank-2) signal voltage is lower than 0.5 V.	2 driving cycles	2 driving cycles
☞ P2227	Barometric Pressure Circuit Range / Performance	Difference between measured barometric pressure and estimated barometric pressure based on MAP is more than 25.3 kPa at engine start.	2 driving cycles	2 driving cycles
☞ P2228	Barometric Pressure Circuit Low	Barometric pressure sensor voltage is less than 0.1 V for more than 19 sec.	1 driving cycle	1 driving cycle
☞ P2229	Barometric Pressure Circuit High	Barometric pressure sensor voltage is more than 5.1 V for more than 5.1 V for more than 19 sec.	1 driving cycle	1 driving cycle
☞ P2237	O2 Sensor Positive Current Control Circuit / Open (Bank 1 Sensor 1)	Impedance of A/F sensor element is higher than 250 Ω for more than 5 sec even though A/F sensor heater is turned ON with engine running.	1 driving cycle	1 driving cycle
☞ P2238	O2 Sensor Positive Current Control Circuit Low (Bank 1 Sensor 1)	Circuit voltage of A/F sensor (+) terminal is lower than 0.4 V or A/F sensor circuit is shorted between (+) terminal wire and (–) terminal wire with engine running.	1 driving cycle	1 driving cycle

1A-37 Engine General Information and Diagnosis:

DTC No.	Detected item	Detecting condition (DTC will set when detecting:)	DTC	MIL
☞ P2239	O2 Sensor Positive Current Control Circuit High (Bank 1 Sensor 1)	Circuit voltage of A/F sensor (+) terminal is higher than 3.5 V with engine running	1 driving cycle	1 driving cycle
☞ P2240	O2 Sensor Positive Current Control Circuit / Open (Bank 2 Sensor 1)	Impedance of A/F sensor element is higher than 250 Ω for more than 5 sec even though A/F sensor heater is turned ON with engine running.	1 driving cycle	1 driving cycle
☞ P2241	O2 Sensor Positive Current Control Circuit Low (Bank 2 Sensor 1)	Circuit voltage of A/F sensor (+) terminal is lower than 0.4 V or A/F sensor circuit is shorted between (+) terminal wire and (–) terminal wire with engine running.	1 driving cycle	1 driving cycle
☞ P2242	O2 Sensor Positive Current Control Circuit High (Bank 2 Sensor 1)	Circuit voltage of A/F sensor (+) terminal is higher than 3.5 V with engine running.	1 driving cycle	1 driving cycle
☞ P2252	O2 Sensor Negative Current Control Circuit Low (Bank 1 Sensor 1)	Circuit voltage of A/F sensor (–) terminal is lower than 0.4 V with engine running.	1 driving cycle	1 driving cycle
☞ P2253	O2 Sensor Negative Current Control Circuit High (Bank 1 Sensor 1)	Circuit voltage of A/F sensor (–) terminal is higher than 3.5 V with engine running.	1 driving cycle	1 driving cycle
☞ P2255	O2 Sensor Negative Current Control Circuit Low (Bank 2 Sensor 1)	Circuit voltage of A/F sensor (–) terminal is lower than 0.4 V with engine running.	1 driving cycle	1 driving cycle
☞ P2256	O2 Sensor Negative Current Control Circuit High (Bank 2 Sensor 1)	Circuit voltage of A/F sensor (–) terminal is higher than 3.5 V with engine running.	1 driving cycle	1 driving cycle
☞ P2627	O2 Sensor Pumping Current Trim Circuit Low (Bank 1 Sensor 1)	Output voltage of A/F sensor adjusting resistor is less than 0.1 V for more than 4 sec continuously with engine running.	1 driving cycle	1 driving cycle
☞ P2628	O2 Sensor Pumping Current Trim Circuit High (Bank 1 Sensor 1)	Output voltage of A/F sensor adjusting resistor is more than 5 V for more than 4 sec continuously with engine running.	1 driving cycle	1 driving cycle
☞ P2630	O2 Sensor Pumping Current Trim Circuit Low (Bank 2 Sensor 1)	Output voltage of A/F sensor adjusting resistor is less than 0.1 V for more than 4 sec continuously with engine running.	1 driving cycle	1 driving cycle
☞ P2631	O2 Sensor Pumping Current Trim Circuit High (Bank 2 Sensor 1)	Output voltage of A/F sensor adjusting resistor is more than 5 V for more than 4 sec continuously with engine running.	1 driving cycle	1 driving cycle
☞ P2A00	O2 Sensor Circuit Range/ Performance (Bank 1 Sensor 1)	Amplitude index of A/F sensor signal between rich and lean is more than 1.3 or less than 0.7 while A/F (fuel trim) is shifted from rich to lean and lean to rich with specified diagnosis frequency under specified running.	2 driving cycles	2 driving cycles
☞ P2A01	O2 Sensor Circuit Range/ Performance (Bank 1 Sensor 2)	Circuit voltage of HO2S (bank-1) signal is less than 0.35 V while A/F (fuel trim) is shifted from rich to lean and lean to rich with specified diagnosis frequency under specified running, or Circuit voltage of HO2S (bank-1) signal is more than 0.2 V for more than 4 sec even though vehicle is running with fuel cut mode below 4000 rpm.	2 driving cycles	2 driving cycles

DTC No.	Detected item	Detecting condition (DTC will set when detecting:)	DTC	MIL
P2A03	O2 Sensor Circuit Range/ Performance (Bank 2 Sensor 1)	Amplitude index of A/F sensor signal between rich and lean is more than 1.3 or less than 0.7 while A/F (fuel trim) is shifted from rich to lean and lean to rich with specified diagnosis frequency under specified running.	2 driving cycles	2 driving cycles
P2A04	O2 Sensor Circuit Range/ Performance (Bank 2 Sensor 2)	Circuit voltage of HO2S (bank-2) signal is less than 0.35 V while A/F (fuel trim) is shifted from rich to lean and lean to rich with specified diagnosis frequency under specified running, or Circuit voltage of HO2S (bank-2) signal is more than 0.2 V for more than 4 sec even though vehicle is running with fuel cut mode below 4000 rpm.	2 driving cycles	2 driving cycles
U0073	Control Module Communication Bus Off	Transmission error that is inconsistent between transmission data and transmission monitor (CAN bus monitor) data is detected more than 7 times continuously.	1 driving cycle	Not applicable
U0101	Lost Communication with TCM	Reception error of communication data for TCM is detected for longer than specified time continuously.	1 driving cycle	1 driving cycle
U0121	Lost Communication With Electronic Stability Program / ABS Control Module	Reception error of communication data for ABS or ESP® control module is detected for longer than specified time continuously.	1 driving cycle	1 driving cycle
U0140	Lost Communication With Body Control Module	Reception error of communication data for BCM is detected for longer than specified time continuously.	1 driving cycle	Not applicable
P1614	Transponder Response Error	Refer to "Diagnostic Trouble Code (DTC) Table in Section 10C".		
P1615	ID Code Does Not Registered (Vehicle Equipped with Keyless Start System Only)			
P1616	Different Registration ID Codes (Vehicle Equipped with Keyless Start System Only)			
P1618	CAN Communication Error (Reception Error for Keyless Start Control Module) (Vehicle Equipped with Keyless Start System Only)			
P1621	Immobilizer Communication Line Error			
P1622	EEPROM Error			
P1623	Unregistered Transponder			
P1625	Immobilizer Antenna Error			
P1636	Immobilizer Information Registration Failure			
P1638	Immobilizer Information Mismatched			

NOTE

MIL blinks or lights up. Refer to "DTC P0300/P0301/P0302/P0303/P0304/P0305/P0306: Random Misfire/Cylinder 1 Misfire/Cylinder 2 Misfire/Cylinder 3 Misfire/Cylinder 4 Misfire/Cylinder 5 Misfire/Cylinder 6 Misfire Detected" for details.

1A-39 Engine General Information and Diagnosis:**For A/T System (Only OBD Generic Scan Tool Is Displayed on the Following DTC(s) at the Same Time)**

DTC No.	Detecting Item	Detecting Condition (DTC will set when detecting)	MIL
🔧 P0705	Transmission Range Sensor Circuit Malfunction (PRNDL Input)	Refer to "DTC Table in Section 5A".	
🔧 P0707	Transmission Range Sensor Circuit Low		
🔧 P0711	Transmission Fluid Temperature Sensor Range / Performance		
🔧 P0712	Transmission Fluid Temperature Sensor "A" Circuit Low		
🔧 P0713	Transmission Fluid Temperature Sensor "A" Circuit High		
🔧 P0717	Input / Turbine Speed Sensor Circuit No Signal		
🔧 P0722	Output Speed Sensor Circuit No Signal		
🔧 P0741	Torque Converter Clutch Circuit Performance or Stuck Off		
🔧 P0742	Torque Converter Clutch Circuit Stuck On	Refer to "DTC Table in Section 5A".	
🔧 P0751	Shift Solenoid "A" Performance or Stuck Off		
🔧 P0752	Shift Solenoid "A" Stuck On		
🔧 P0756	Shift Solenoid "B" Performance or Stuck Off		
🔧 P0757	Shift Solenoid "B" Stuck On		
🔧 P0771	Shift Solenoid "E" Performance or Stuck Off		
🔧 P0772	Shift Solenoid "E" Stuck On		
🔧 P0781	1-2 Shift		
🔧 P0797	Pressure Control Solenoid "C" Stuck On		
🔧 P0962	Pressure Control Solenoid "A" Control Circuit Low		
🔧 P0963	Pressure Control Solenoid "A" Control Circuit High		
🔧 P0966	Pressure Control Solenoid "B" Control Circuit Low		
🔧 P0967	Pressure Control Solenoid "B" Control Circuit High		
🔧 P0970	Pressure Control Solenoid "C" Control Circuit Low		
🔧 P0971	Pressure Control Solenoid "C" Control Circuit High		
🔧 P0973	Shift Solenoid "A" Control Circuit Low		
🔧 P0974	Shift Solenoid "A" Control Circuit High		
🔧 P0976	Shift Solenoid "B" Control Circuit Low		
🔧 P0977	Shift Solenoid "B" Control Circuit High		

DTC No.	Detecting Item	Detecting Condition (DTC will set when detecting)	MIL
☞ P0985	Shift Solenoid "E" Control Circuit Low	Refer to "DTC Table in Section 5A".	
☞ P0986	Shift Solenoid "E" Control Circuit High		
☞ P1702	Internal Control Module Memory Check Sum Error		
☞ P1703	CAN Invalid Data – TCM		
☞ P1723	Range Select Switch Malfunction		
☞ P1874	4WD Low switch circuit malfunction (Short)		
☞ P1875	4WD Low switch circuit malfunction (Open)		
☞ P2742	Transmission Fluid Temperature Sensor "B" Circuit Low		
☞ P2743	Transmission Fluid Temperature Sensor "B" Circuit High		
☞ P2763	Torque Converter Clutch Circuit High		
☞ P2764	Torque Converter Clutch Circuit Low		
☞ U0073	Control Module Communication Bus OFF		
☞ U0100	Lost Communication With ECM		
☞ U0140	Lost Communication With Body Control Module		

DTC Check

S6JB0B1104007


NOTE

The MIL is turned on when the ECM and/or TCM detect malfunction(s). Each ECM and TCM stores diagnostic information as the diagnostic trouble code (DTC) in its memory and outputs the DTC to the scan tool. Therefore, check both of the ECM and TCM for any DTC with the scan tool because the DTC stored in ECM and TCM is not read and displayed at a time. However, each of the ECM and TCM needs not to be checked with the generic scan tool because the DTC stored in ECM and TCM is read and displayed at a time.

- 1) Prepare OBD generic scan tool or SUZUKI scan tool.
- 2) With ignition switch OFF, connect it to DLC (1) located on underside of instrument panel at driver's seat side.

Special tool

(A): SUZUKI scan tool

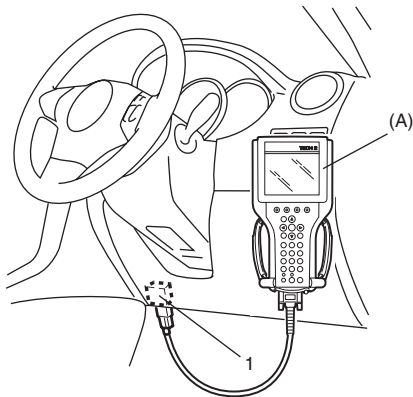

I5JB0C110021-02

- 3) Turn ignition switch ON and confirm that MIL lights.
- 4) Read DTC and freeze frame data according to instructions displayed on scan tool and print them or write them down. Refer to scan tool operator's manual for further details.
If communication between scan tool and ECM is not possible, check if scan tool is communicable by connecting it to ECM in another vehicle. If communication is possible in this case, scan tool is in good condition. Then check data link connector and serial data line (circuit) in the vehicle with which communication was not possible.
- 5) After completing the check, turn ignition switch off and disconnect scan tool from data link connector.

DTC Clearance

S6JB0B1104008

- 1) With ignition switch OFF, connect OBD generic scan tool or SUZUKI scan tool to DLC.
- 2) Turn ignition switch ON.
- 3) Erase DTC according to instructions displayed on scan tool. Freeze frame data is cleared with the DTC. Refer to scan tool operator's manual for further details.
- 4) After completing the clearance, turn ignition switch off and disconnect scan tool from data link connector.

NOTE

DTC and freeze frame data stored in ECM memory are also cleared in the following cases. Be careful not to clear them before keeping their record.

- When power to ECM is cut off (by disconnecting battery cable, removing fuse or disconnecting ECM (connectors)).
- When the same malfunction (DTC) is not detected again during 40 engine warm-up cycles (refer to Warm-Up Cycle of "On-Board Diagnostic System Description").

Fail-Safe Table

When any of the following DTCs is detected, ECM enters fail-safe mode as long as malfunction continues to exist but that mode is cancelled when ECM detects normal condition after that.

DTC No.	Detected item	Fail-safe operation
P0031	HO2S Heater Control Circuit Low (Bank 1 Sensor 1)	<ul style="list-style-type: none"> ECM stops air/fuel ratio control. ECM stops A/F sensor heater control.
P0032	HO2S Heater Control Circuit High (Bank 1 Sensor 1)	
P0051	HO2S Heater Control Circuit Low (Bank 2 Sensor 1)	
P0052	HO2S Heater Control Circuit High (Bank 2 Sensor 1)	
P2237	O2 Sensor Positive Current Control Circuit / Open (Bank 1 Sensor 1)	
P2238	O2 Sensor Positive Current Control Circuit Low (Bank 1 Sensor 1)	
P2239	O2 Sensor Positive Current Control Circuit High (Bank 1 Sensor 1)	
P2240	O2 Sensor Positive Current Control Circuit / Open (Bank 2 Sensor 1)	
P2241	O2 Sensor Positive Current Control Circuit Low (Bank 2 Sensor 1)	
P2242	O2 Sensor Positive Current Control Circuit High (Bank 2 Sensor 1)	
P2252	O2 Sensor Negative Current Control Circuit Low (Bank 1 Sensor 1)	
P2253	O2 Sensor Negative Current Control Circuit High (Bank 1 Sensor 1)	
P2255	O2 Sensor Negative Current Control Circuit Low (Bank 2 Sensor 1)	
P2256	O2 Sensor Negative Current Control Circuit High (Bank 2 Sensor 1)	
P0133	O2 Sensor Circuit Slow Response (Bank 1 Sensor 1)	<ul style="list-style-type: none"> ECM stops air/fuel ratio control.
P0134	O2 Sensor Circuit No Activity Detected (Bank 1 Sensor 1)	
P0153	O2 Sensor Circuit Slow Response (Bank 2 Sensor 1)	
P0154	O2 Sensor Circuit No Activity Detected (Bank 2 Sensor 1)	
P2195	O2 Sensor Signal Stuck Lean (Bank 1 Sensor 1)	
P2196	O2 Sensor Signal Stuck Rich (Bank 1 Sensor 1)	
P2197	O2 Sensor Signal Stuck Lean (Bank 2 Sensor 1)	
P2198	O2 Sensor Signal Stuck Rich (Bank 2 Sensor 1)	
P2A00	O2 Sensor Circuit Range/Performance (Bank 1 Sensor 1)	<ul style="list-style-type: none"> ECM stops HO2S-2 control. ECM stops A/F sensor heater control.
P2A03	O2 Sensor Circuit Range/Performance (Bank 2 Sensor 1)	
P0037	HO2S Heater Control Circuit Low (Bank 1 Sensor 2)	
P0038	HO2S Heater Control Circuit High (Bank 1 Sensor 2)	
P0057	HO2S Heater Control Circuit Low (Bank 2 Sensor 2)	<ul style="list-style-type: none"> ECM stops HO2S-2 control.
P0058	HO2S Heater Control Circuit High (Bank 2 Sensor 2)	
P0137	O2 Sensor Circuit Low Voltage (Bank 1 Sensor 2)	
P0138	O2 Sensor Circuit High Voltage (Bank 1 Sensor 2)	
P0140	O2 Sensor Circuit No Activity Detected (Bank 1 Sensor 2)	
P0157	O2 Sensor Circuit Low Voltage (Bank 2 Sensor 2)	
P0158	O2 Sensor Circuit High Voltage (Bank 2 Sensor 2)	
P0160	O2 Sensor Circuit No Activity Detected (Bank 2 Sensor 2)	
P2A01	O2 Sensor Circuit Range/Performance (Bank 1 Sensor 2)	<ul style="list-style-type: none"> ECM controls injector drive time (fuel injection volume) according to engine speed and throttle valve operation angle. ECM stops air/fuel ratio control. ECM stops EGR valve control.
P2A04	O2 Sensor Circuit Range/Performance (Bank 2 Sensor 2)	
P0101	Mass Air Flow Circuit Range/Performance	<ul style="list-style-type: none"> ECM controls injector drive time (fuel injection volume) according to engine speed and throttle valve operation angle. ECM stops air/fuel ratio control. ECM stops EGR valve control.
P0102	Mass Air Flow Circuit Low Input	
P0103	Mass Air Flow Circuit High Input	<ul style="list-style-type: none"> ECM stops EGR valve control.
P0107	Manifold Absolute Pressure Circuit Low Input	
P0108	Manifold Absolute Pressure Circuit High Input	
P1107	MAP Sensor Rationality Check-Low	
P1108	MAP Sensor Rationality Check-High	<ul style="list-style-type: none"> ECM controls actuators assuming that intake air temperature is 40 °C (104 °F). ECM stops EGR valve control.
P0111	Intake Air Temperature Sensor Circuit Performance	
P0112	Intake Air Temperature Sensor Circuit Low	
P0113	Intake Air Temperature Sensor Circuit High	

1A-43 Engine General Information and Diagnosis:

DTC No.	Detected item	Fail-safe operation
P0116	Engine Coolant Temperature Circuit Range / Performance	<ul style="list-style-type: none"> ECM controls actuators assuming that engine coolant temperature is 80 °C (176 °F) and operates radiator cooling fan is high speed. ECM stops air/fuel ratio control. ECM stops EGR valve control. ECM stops A/C control.
P0117	Engine Coolant Temperature Circuit Low	
P0118	Engine Coolant Temperature Circuit High	
P0122	Throttle Position Sensor (Main) Circuit Low	<ul style="list-style-type: none"> ECM turns off throttle actuator control relay and throttle valve is fixed at the opening of about 10° from its completely closed position (default opening). ECM controls fuel cut at specified engine speed.
P0123	Throttle Position Sensor (Main) Circuit High	
P0222	Throttle Position Sensor (Sub) Circuit Low	
P0223	Throttle Position Sensor (Sub) Circuit High	
P2101	Throttle Actuator Control Motor Circuit Range / Performance	
P2102	Throttle Actuator Control Motor Circuit Low	
P2103	Throttle Actuator Control Motor Circuit High	
P2108	Throttle Actuator Control Module Performance	
P2119	Throttle Actuator Control Throttle Body Range / Performance	<ul style="list-style-type: none"> ECM stops knock control. ECM controls ignition timing according to engine speed.
P0327	Knock Sensor Circuit Low	
P0328	Knock Sensor Circuit High	<ul style="list-style-type: none"> ECM stops EGR valve control.
P0335	Crankshaft Position Sensor Circuit	
P0336	Crankshaft Position Sensor Circuit Range / Performance	
P0340	Camshaft Position Sensor Circuit	
P0341	Camshaft Position Sensor Circuit Range / Performance	
P0500	Vehicle Speed Sensor	<ul style="list-style-type: none"> ECM controls actuators assuming that vehicle speed is 10 km/h (6 mph).
P0532	A/C Refrigerant Pressure Sensor Circuit Low	<ul style="list-style-type: none"> ECM stops A/C system control.
P0533	A/C Refrigerant Pressure Sensor Circuit High	
P1603	TCM Trouble Code Detected	<ul style="list-style-type: none"> ECM controls actuators assuming that transmission range switch is N position.
U0101	Lost Communication with TCM	
P2122	Pedal Position Sensor (Main) Circuit Low	<ul style="list-style-type: none"> ECM controls throttle valve using that pedal position sensor (sub) signal within specified range.
P2123	Pedal Position Sensor (Main) Circuit High	
P2127	Pedal Position Sensor (Sub) Circuit Low	<ul style="list-style-type: none"> ECM controls throttle valve using that pedal position sensor (main) signal within specified range.
P2128	Pedal Position Sensor (Sub) Circuit High	
P2135	Throttle Position Sensor (Main / Sub) Voltage Correlation	<ul style="list-style-type: none"> ECM controls throttle valve using that throttle position sensor (main) or throttle position sensor (sub) signal within specified range.
P2138	Pedal Position Sensor (Main / Sub) Voltage Correlation	<ul style="list-style-type: none"> ECM controls throttle valve using that pedal position sensor (main) or pedal position sensor (sub) signal within specified range.
P2227	Barometric Pressure Circuit Range / Performance	<ul style="list-style-type: none"> ECM controls actuators assuming that barometric pressure is 10 kPa (760 mmHg).
P2228	Barometric Pressure Circuit Low	
P2229	Barometric Pressure Circuit High	
P2627	O2 Sensor Pumping Current Trim Circuit Low (Bank 1 Sensor 1)	<ul style="list-style-type: none"> ECM controls A/F sensor assuming that A/F sensor adjusting resistor value is specified value.
P2628	O2 Sensor Pumping Current Trim Circuit High (Bank 1 Sensor 1)	
P2630	O2 Sensor Pumping Current Trim Circuit Low (Bank 2 Sensor 1)	
P2631	O2 Sensor Pumping Current Trim Circuit High (Bank 2 Sensor 1)	
U0121	Lost Communication with Electronic Stability Program / ABS Control Module	<ul style="list-style-type: none"> ECM stops torque reduction control

DTC No.	Detected item	Fail-safe operation
U0140	Lost Communication with Body Control Module	<ul style="list-style-type: none"> ECM stops A/C system control. ECM controls engine speed not using electric load signal. ECM stops keyless start system control.

Scan Tool Data

S6JB0B1104010

As the data values are standard values estimated on the basis of values obtained from the normally operating vehicles by using a scan tool, use them as reference values. Even when the vehicle is in good condition, there may be cases where the checked value does not fall within each specified data range. Therefore, judgment as abnormal should not be made by checking with these data alone.

Also, conditions that can be checked by the scan tool are those detected by ECM and output from ECM as commands and there may be cases where the engine or actuator is not operating (in the condition) as indicated by the scan tool. Be sure to use the timing light to check the ignition timing. (Refer to "Ignition Timing Inspection in Section 1H")

NOTE

- With the generic scan tool, only star (*) marked data in the following table can be read.
- When checking the data with the engine running at idle or racing, be sure to shift M/T gear to the neutral gear position and A/T gear to the "Park" position and pull the parking brake fully. Also, if nothing or "no load" is indicated, turn OFF A/C (if equipped with A/C), all electric loads, P/S and all the other necessary switches.

	Scan tool data	Vehicle condition	Normal condition / reference values
*	COOLANT TEMP (ENGINE COOLANT TEMP.)	At specified idle speed after warming up	82 – 100 °C, 176 – 212 °F
*	INTAKE AIR TEMP.	At specified idle speed after warming up	–5 °C (23 °F) + environmental temp. to 40 °C (104 °F) + environmental temp.
*	ENGINE SPEED	It idling with no load after warming up	Desired idle speed ± 50 RPM
	DESIRED IDLE (DESIRED IDLE SPEED)	It idling with radiator cooling fan stopped and all electrical parts turned OFF after warming up, M/T at neutral	650 RPM
*	MAF (MASS AIR FLOW RATE)	At specified idle speed with no load after warming up	1.0 – 4.0 g/s 0.14 – 0.52 lb/min.
		At 2500 r/min. with no load after warming up	4.0 – 12.0 g/s 0.53 – 1.58 lb/min.
*	CALCULATED LOAD (CALCULATED LOAD VALUE)	At specified idle speed with no load after warming up	0 – 10%
		At 2500 r/min. with no load after warming up	0 – 10%
*	MAP (INTAKE MANIFOLD ABSOLUTE PRESSURE)	At specified idle speed with no load after warming up	24 – 38 kPa, 7.1 – 11.2 in.Hg
*	THROTTLE POSITION (ABSOLUTE THROTTLE POSITION)	Ignition switch ON / warmed up engine stopped	Accelerator pedal released Accelerator pedal depressed fully
			0 – 5% 90 – 100%
	BAROMETRIC PRES	—	Barometric pressure is displayed
	FUEL TANK LEVEL	Ignition switch ON	0 – 100%
	BATTERY VOLTAGE	Ignition switch ON / engine at stop	10 – 14 V
	BRAKE SWITCH	Ignition switch ON	Brake pedal is released Brake pedal is depressed
			OFF ON
	INTAKE TUNING SOL (INTAKE MANIFOLD TUNING VALVE)	At specified idle speed after warming up	OFF
		Engine speed at 1500 rpm or more	ON

1A-45 Engine General Information and Diagnosis:

	Scan tool data	Vehicle condition	Normal condition / reference values
*	FUEL SYSTEM B1 (FUEL SYSTEM STATUS BANK-1)	At specified idle speed after warming up	CLSD (closed loop)
*	FUEL SYSTEM B2 (FUEL SYSTEM STATUS BANK-2)	At specified idle speed after warming up	CLSD (closed loop)
	O2S B1 S2 (HEATED OXYGEN SENSOR BANK-1 SENSOR-2)	At 2000 r/min. for 3 min. or longer after warming up	0.1 – 0.95 V
	O2S B2 S2 (HEATED OXYGEN SENSOR BANK-2 SENSOR-2)	At 2000 r/min. for 3 min. or longer after warming up	0.1 – 0.95 V
*	SHORT FT B1 (SHORT TERM FUEL TRIM BANK-1)	At specified idle speed after warming up	–15 – +15%
*	LONG FT B1 (LONG TERM FUEL TRIM BANK-1)	At specified idle speed after warming up	–15 – +15%
*	SHORT FT B2 (SHORT TERM FUEL TRIM BANK-2)	At specified idle speed after warming up	–15 – +15%
*	LONG FT B2 (LONG TERM FUEL TRIM BANK-2)	At specified idle speed after warming up	–15 – +15%
	TOTAL FUEL TRIM B1	At specified idle speed after warming up	–30 – +30%
	TOTAL FUEL TRIM B2	At specified idle speed after warming up	–30 – +30%
*	A/F B1 S1 CURRENT (A/F SENSOR OUTPUT CURRENT)	At specified idle speed after warming up	–0.17 – +0.10 mA
*	A/F B2 S1 CURRENT (A/F SENSOR OUTPUT CURRENT)	At specified idle speed after warming up	–0.17 – +0.10 mA
	FUEL CUT	Engine at fuel cut condition	ON
		Engine at other than fuel cut condition	OFF
	O2S B1 S2 ACT (HEATED OXYGEN SENSOR BANK-1 SENSOR-2)	At specified idle speed after warming up	ACTIVE
	O2S B2 S2 ACT (HEATED OXYGEN SENSOR BANK-2 SENSOR-2)	At specified idle speed after warming up	ACTIVE
	A/F B1 S1 ACT (A/F SENSOR BANK-1 SENSOR-1)	At specified idle speed after warming up	ACTIVE
	A/F B2 S1 ACT (A/F SENSOR BANK-2 SENSOR-1)	At specified idle speed after warming up	ACTIVE
	CANIST PRG DUTY (EVAP CANISTER PURGE FLOW DUTY)	At specified idle speed after warming up	0%
*	IGNITION ADVANCE (IGNITION TIMING ADVANCE FOR NO.1 CYLINDER)	At specified idle speed with no load after warming up	10 – 16° BTDC
	EGR VALVE OPENING	At specified idle speed after warming up	0%
	FUEL PUMP	Within 2 seconds after ignition switch ON or engine running	ON
		Engine at stop with ignition switch ON	OFF
	STARTER SW	Ignition switch is turned to ST (engine cranking) position	ON

	Scan tool data	Vehicle condition		Normal condition / reference values
	🔧 A/C PRESSURE (A/C REFRIGERANT ABSOLUTE PRESSURE)	Engine running	A/C ON (A/C is operating) at ambient temperature: 30 °C (86 °F) and humidity: 50%	1300 – 1480 kPa For more details, refer to pressure of high pressure gauge under “A/C System Performance Inspection in Section 7B”.
			A/C OFF (A/C is not operating) at ambient temperature: 30 °C (86 °F) and engine coolant temperature: 90 – 100 °C (194 – 212 °F)	600 – 1000 kPa After longer than 10 min from A/C switch turned off
	🔧 A/C SWITCH	Engine running after warming up, A/C not operating		OFF
		Engine running after warming up, A/C operating		ON
	🔧 A/C COMP RELAY	Engine running	A/C switch and blower motor switch turned ON	ON
			A/C switch and blower motor switch turned OFF	OFF
	🔧 BLOWER FAN	Ignition switch ON	Blower fan switch: 5th speed position or more	ON
			Blower fan switch: under 4th speed position	OFF
	🔧 ELECTRIC LOAD	Ignition switch ON / Headlight, small light, all turned OFF		OFF
		Ignition switch ON / Headlight, small light, turned ON		ON
	🔧 PSP SWITCH (POWER STEERING PUMP PRESSURE SWITCH)	At specified idle speed and steering wheel at straight ahead position		OFF
		At specified idle speed and steering wheel turned to the right or left as far as it stops		ON
	🔧 PNP SIGNAL (TRANSMISSION RANGR SENSOR) A/T only	Ignition switch ON / Selector lever in “P” or “N” position		P/N Range
		Ignition switch ON / Selector lever in “R”, “D”, “4”, “3” or “L” position		D Range
	🔧 RADIATOR FAN LOW (RADIATOR COOLING FAN CONTROL RELAY No.1)	Ignition switch ON	Engine coolant temp.: Lower than 95 °C (203 °F)	OFF
			Engine coolant temp.: 97.5 °C (208 °F) or higher	ON
	🔧 RADIATOR FAN NO.1 HIGH (RADIATOR COOLING FAN CONTROL RELAY NO.2)	Ignition switch ON	Engine coolant temp.: lower than 100 °C (212 °F)	OFF
			Engine coolant temp.: 102.5 °C (212 °F) or higher	ON
	🔧 RADIATOR FAN NO.2 HIGH (RADIATOR COOLING FAN CONTROL RELAY NO.3)	Ignition switch ON	Engine coolant temp.: lower than 100 °C (212 °F)	OFF
			Engine coolant temp.: 102.5 °C (212 °F) or higher	ON
	🔧 TP SENSOR 1 VOLT (THROTTLE POSITION SENSOR (MAIN) OUTPUT VOLTAGE)	Ignition switch ON after warmed up engine	Accelerator pedal released	0.5 – 1.5 V
			Accelerator pedal depressed fully	3.5 – 4.5 V
	🔧 TP SENSOR 2 VOLT (THROTTLE POSITION SENSOR (SUB) OUTPUT VOLTAGE)	Ignition switch ON after warmed up engine	Accelerator pedal released	3.5 – 4.5 V
			Accelerator pedal depressed fully	0.5 – 1.5 V
	🔧 APP SENSOR 1 VOLT (ACCELERATOR PEDAL POSITION (APP) SENSOR (MAIN) OUTPUT VOLTAGE)	Ignition switch ON after warmed up engine	Accelerator pedal released	0.6 – 0.9 V
			Accelerator pedal depressed fully	3.5 – 4.4 V

1A-47 Engine General Information and Diagnosis:

Scan tool data		Vehicle condition		Normal condition / reference values
APP SENSOR 2 VOLT (ACCELERATOR PEDAL POSITION (APP) SENSOR (SUB) OUTPUT VOLTAGE)	Ignition switch ON after warmed up engine	Accelerator pedal released		0.3 – 0.5 V
		Accelerator pedal depressed fully		1.7 – 2.2 V
ACCEL POSITION (ABSOLUTE ACCELERATOR PEDAL POSITION)	Ignition switch ON after warmed up engine	Accelerator pedal released		0 – 5%
		Accelerator pedal depressed fully		90 – 100%
TARGET THROTTLE POSI (TARGET THROTTLE VALVE POSITION)	Ignition switch ON after warmed up engine	Accelerator pedal released		0 – 5%
		Accelerator pedal depressed fully		90 – 100%
IAC THROTTLE OPENING (IDLE AIR CONTROL THROTTLE VALVE OPENING)	It idling with no load after warming up			8 – 25%
THROTTLE MOTOR VOLT	Ignition switch ON / engine at stop			10.0 – 14.0 V
CLOSED THROTTLE POS (CLOSED THROTTLE POSITION)	Throttle valve at idle position			ON
	Throttle valve opens larger than idle position			OFF
THROTTLE MOTOR RELAY	At specified idle speed after warming up			ON
* VEHICLE SPEED	At stop			0 km/h (0 mph)
INJ PULSE WIDTH B1 (FUEL INJECTION PULSE WIDTH BANK-1)	At specified idle speed with no load after warming up			1.7 – 3.5 msec.
	At 2500 r/min. with no load after warming up			2.0 – 3.6 msec.
INJ PULSE WIDTH B2 (FUEL INJECTION PULSE WIDTH BANK-2)	At specified idle speed with no load after warming up			1.7 – 3.5 msec.
	At 2500 r/min. with no load after warming up			2.0 – 3.6 msec.

Scan Tool Data Definitions**COOLANT TEMP (ENGINE COOLANT TEMPERATURE, °C, °F)**

It is detected by engine coolant temp. sensor.

INTAKE AIR TEMP. (°C, °F)

It is detected by intake air temp. sensor.

ENGINE SPEED (RPM)

It is computed by reference pulses from the camshaft position sensor.

DESIRED IDLE (DESIRED IDLE SPEED, RPM)

The desired idle speed is an ECM internal parameter which indicates the ECM requested idle. If the engine is not running, this number is not valid.

MAF (MASS AIR FLOW RATE, g/s, lb/min.)

It represents total mass of air entering intake manifold which is measured by mass air flow sensor.

CALC LOAD (CALCULATED LOAD VALUE, %)

Engine load displayed as a percentage of maximum possible load. Value is calculated mathematically using the formula: actual (current) intake air volume ÷ maximum possible intake air volume × 100%

MAP (MANIFOLD ABSOLUTE PRESSURE, in.Hg, kPa)

This value indicates how much correction is necessary to keep the air/fuel mixture stoichiometrical. It is detected by manifold absolute pressure sensor.

THROTTLE POS (ABSOLUTE THROTTLE POSITION, %)

When throttle position sensor is at fully closed position, throttle opening is indicated as 0 – 5% and 90 – 100% full open position.

BAROMETRIC PRESS (kPa, in.Hg)

This parameter represents a measurement of barometric air pressure and is used for altitude correction of the fuel injection quantity.

FUEL TANK LEVEL (%):

This parameter indicates approximate fuel level in fuel tank. As detectable range of fuel level sensor is set as 0 to 100%, however, with some models whose fuel tank capacity is smaller, indicated fuel level may be only 70% even when fuel tank is full.

BATTERY VOLTAGE (V)

This parameter indicates battery positive voltage inputted from main relay to ECM.

BRAKE SW (ON / OFF)

This parameter indicates the state of the brake switch.

INTAKE TUNING SOL (INTAKE MANIFOLD TUNING VALVE, ON / OFF)

ON: Command for intake manifold tuning valve being output.

OFF: Command for intake manifold tuning valve not being output.

FUEL SYSTEM B1 (FUEL SYSTEM BANK-1 STATUS)**FUEL SYSTEM B2 (FUEL SYSTEM BANK-2 STATUS)**

Air/fuel ratio feedback loop status displayed as one of the followings.

OPEN: Open-loop has not yet satisfied conditions to go closed loop.

CLOSED: Closed-loop using oxygen sensor(s) as feedback for fuel control.

OPEN-DRIVE COND: Open-loop due to driving conditions (Power enrichment, etc.).

OPEN SYS FAULT: Open-loop due to detected system fault.

O2S SENSOR B1 S2 (HEATED OXYGEN SENSOR**BANK-1 SENSOR-2, V) O2S SENSOR B2 S2****(HEATED OXYGEN SENSOR BANK-2 SENSOR-2, V)**

It indicates output voltage of HO2S-2 installed on exhaust pipe (post-catalyst). It is used to detect catalyst deterioration.

SHORT FT B1 (SHORT TERM FUEL TRIM BANK-1, %) SHORT FT B2 (SHORT TERM FUEL TRIM BANK-2, %)

Short term fuel trim value represents short term corrections to the air/fuel mixture computation. A value of 0 indicates no correction, a value greater than 0 means an enrichment correction, and a value less than 0 implies an enleanment correction.

**LONG FT B1 (LONG TERM FUEL TRIM BANK-1, %)
LONG FT B2 (LONG TERM FUEL TRIM BANK-2, %)**

Long term fuel trim value represents long term corrections to the air/fuel mixture computation. A value of 0 indicates no correction, a value greater than 0 means an enrichment correction, and a value less than 0 implies an enleanment correction.

**TOTAL FUEL TRIM B1 (TOTAL FUEL TRIM BANK-1, %)
TOTAL FUEL TRIM B2 (TOTAL FUEL TRIM BANK-2, %)**

The value of Total Fuel Trim is obtained by calculating based on values of Short Term Fuel Trim and Long Term Fuel Trim. This value indicates how much correction is necessary to keep the air/fuel mixture stoichiometrical.

**A/F B1 S1 CURRENT (A/F SENSOR BANK-1
SENSOR-1 OUTPUT CURRENT, mA) A/F B2 S1
CURRENT (A/F SENSOR BANK-2 SENSOR-1
OUTPUT CURRENT, mA)**

This parameter indicates output current of A/F sensor installed on exhaust manifold (pre-catalyst).

FUEL CUT (ON / OFF)

ON: Fuel being cut (output signal to injector is stopped)
OFF: Fuel not being cut

**O2S B1 S2 ACT (HEATED OXYGEN SENSOR BANK-1
SENSOR-2, ACTIVE / INACTIVE) O2S B2 S2 ACT
(HEATED OXYGEN SENSOR BANK-2 SENSOR-2,
ACTIVE / INACTIVE)**

This parameter indicates activation condition of HO2S-2
ACTIVE: Activating
INACTIVE: warming up or at stop.

**A/F B1 S1 ACT (A/F SENSOR BANK-1 SENSOR-1,
ACTIVE / INACTIVE) A/F B2 S1 ACT (A/F SENSOR
BANK-2 SENSOR-1, ACTIVE / INACTIVE)**

This parameter indicates activation condition of A/F sensor
ACTIVE: Activating
INACTIVE: warming up or at stop

**CANIST PRG DUTY (EVAP CANISTER PURGE FLOW
DUTY, %)**

This parameter indicates valve ON (valve open) time rate within a certain set cycle of EVAP canister purge valve which controls the amount of EVAP purge.

**IGNITION ADVANCE (IGNITION TIMING ADVANCE
FOR NO.1 CYLINDER, °)**

Ignition timing of No.1 cylinder is commanded by ECM. The actual ignition timing should be checked by using the timing light.

EGR VALVE OPENING (%)

This parameter indicates opening rate of EGR valve which controls the amount of EGR flow.

FUEL PUMP (ON / OFF)

ON is displayed when ECM activates the fuel pump via the fuel pump relay switch.

STARTER SW (ON / OFF)

This parameter indicates condition of starting motor relay output.

ON: Starting motor relay is ON

OFF: Starting motor relay is OFF

**A/C PRESSURE (A/C REFRIGERANT ABSOLUTE
PRESSURE, kPa)**

This parameter indicates A/C refrigerant absolute pressure calculated by ECM.

A/C SWITCH (ON / OFF)

ON: Command for A/C operation being output from ECM to HVAC.

OFF: Command for A/C operation not being output.

**A/C COMP RELAY (A/C COMPRESSOR RELAY, ON /
OFF)**

This parameter indicates the state of the A/C switch.

BLOWER FAN (ON / OFF)

This parameter indicates the state of the blower fan motor switch.

ELECTRIC LOAD (ON / OFF)

ON: Headlight, clearance light or rear defogger ON signal inputted.

OFF: Above electric loads all turned OFF.

**PSP SWITCH (POWER STEERING PUMP PRESSURE
SWITCH, ON / OFF)**

ON: PSP SW is ON (P/S high pressure switch is ON)

OFF: PSP SW is OFF (P/S high pressure switch is OFF)

PNP SIGNAL (TRANSMISSION RANGE SENSOR, P/N or D range):

Whether the transmission range switch (P/N position switch) at P or N range or at R, D, 4, 3 or L range is displayed. If at P or N range, "P/N range" is displayed and if at R, D, 4, 3 or L range, "D" range is displayed.

RADIATOR COOLING FAN LOW (RADIATOR COOLING FAN CONTROL RELAY NO.1, ON / OFF)

ON: Command for radiator cooling fan control relay No.1 operation being output.

OFF: Command for relay operation not being output.

RDTR FAN NO.1 HIGH (RADIATOR COOLING FAN CONTROL RELAY NO.2, ON / OFF):

ON: Command for radiator cooling fan control relay No.2 which changes radiator cooling fan No.1 to high speed operation being output.

OFF: Command for relay operation not being output

RDTR FAN NO.2 HIGH (RADIATOR COOLING FAN CONTROL RELAY NO.3, ON / OFF)

ON: Command for radiator cooling fan control relay No.3 which changes radiator cooling fan No.2 to high speed operation being output.

OFF: Command for relay operation not being output

TP SENSOR 1 VOLT (THROTTLE POSITION SENSOR (MAIN) OUTPUT VOLTAGE, V)

The throttle position sensor (Main) reading provides throttle valve opening information in the form of voltage.

TP SENSOR 2 VOLT (THROTTLE POSITION SENSOR (SUB) OUTPUT VOLTAGE, V)

The throttle position sensor (Sub) reading provides throttle valve opening information in the form of voltage.

APP SENSOR 1 VOLT (ACCELERATOR PEDAL POSITION (APP) SENSOR (MAIN) OUTPUT VOLTAGE, V)

The APP Sensor (Main) reading provides accelerator pedal opening information in the form of voltage.

APP SENSOR 2 VOLT (ACCELERATOR PEDAL POSITION (APP) SENSOR (SUB) OUTPUT VOLTAGE, V)

The APP Sensor (Sub) reading provides accelerator pedal opening information in the form of voltage.

ACCEL POSITION (ABSOLUTE ACCELERATOR PEDAL POSITION, %)

When accelerator pedal is at fully released position, accelerator pedal is indicated as 0 – 5% and 90 – 100% fully depressed position.

TARGET THROTTLE POSI (TARGET THROTTLE VALVE POSITION, %)

Target Throttle Valve Position is ECM internal parameter which indicates the ECM requested throttle valve position.

IAC THROTTLE OPENING (IDLE AIR (SPEED) CONTROL THROTTLE VALVE OPENING, %):

This parameter indicates throttle valve opening of idle air control in %. (100% indicates the maximum idle air flow.)

THROTTLE MOTOR VOLT (V)

This parameter indicates power supply voltage of throttle actuator (motor) control circuit (input voltage from throttle actuator control relay).

CLOSED THROTTLE POS (CLOSED THROTTLE POSITION, ON / OFF)

This parameter reads ON when throttle valve is fully closed, or OFF when it is not fully closed.

THROTTLE MOTOR RELAY (ON / OFF)

ON: Throttle actuator (motor) control activated by ECM.
OFF: Throttle actuator (motor) control stopped by ECM.

VEHICLE SPEED (km/h, mph)

It is computed based on pulse signals from rear wheel speed sensor (RH, LH).

INJ PULSE WIDTH B1 (FUEL INJECTION PULSE WIDTH BANK-1, msec.)**INJ PULSE WIDTH B2 (FUEL INJECTION PULSE WIDTH BANK-2, msec.)**

This parameter indicates time of the injector drive (valve opening) pulse which is output from ECM.

Engine Symptom Diagnosis

Perform troubleshooting referring to the following table when ECM has detected no DTC and no abnormality has been found "Visual Inspection" in and "Engine Basic Check".

Condition	Possible cause	Correction / Reference Item
Hard starting (Engine cranks OK)	Faulty ECT sensor or MAF sensor	Refer to "Engine Coolant Temperature (ECT) Sensor Inspection in Section 1C" or "Mass Air Flow (MAF) and Intake Air Temperature (IAT) Sensor On-Vehicle Inspection in Section 1C".
	Faulty ECM	Refer to "Inspection of ECM and Its Circuits".
	Low compression	Refer to "Compression Check in Section 1D".
	Compression leak from valve seat	Refer to "Valves and Valve Guides Inspection in Section 1D".
	Sticky valve stem	Refer to "Valves and Valve Guides Inspection in Section 1D".
	Weak or damaged valve springs	Refer to "Valve Springs Inspection in Section 1D".
	Compression leak at cylinder head gasket	Refer to "Cylinder Head Inspection in Section 1D".
	Sticking or damaged piston ring	Refer to "Cylinders, Pistons and Piston Rings Inspection in Section 1D".
	Worn piston, ring or cylinder	Refer to "Piston Pins and Connecting Rods Inspection in Section 1D".
	Malfunctioning PCV valve	Refer to "PCV Valve Inspection in Section 1B".
	Faulty spark plug	Refer to "Spark Plug Inspection in Section 1H".
	Faulty ignition coil with ignitor	Refer to "Ignition Coil Assembly (Igniter and Ignition Coil) Inspection in Section 1H".
	Dirty or clogged fuel hose or pipe	Refer to "Fuel Pressure Check".
	Malfunctioning fuel pump	Refer to "Fuel Pressure Check".
	Air drawn in through intake manifold gasket or throttle body gasket	Check air intake system.
	Faulty electric throttle body assembly	Refer to "Electric Throttle Body Assembly On-Vehicle Inspection in Section 1C".
	Faulty accelerator pedal position (APP) sensor assembly	Refer to "Accelerator Pedal Position (APP) Sensor Assembly Inspection in Section 1C".
	Faulty EGR system (if equipped)	Refer to "EGR System Inspection (If Equipped) in Section 1B".

Condition	Possible cause	Correction / Reference Item
Engine has no power	Engine overheating	<i>Refer to condition of "Overheating".</i>
	Defective spark plug.	<i>Refer to "Spark Plug Inspection in Section 1H".</i>
	Faulty ignition coil with ignitor	<i>Refer to "Ignition Coil Assembly (Igniter and Ignition Coil) Inspection in Section 1H".</i>
	Fuel pressure out of specification – Dirty fuel filter – Dirty or clogged fuel hose or pipe – Faulty fuel pressure regulator – Faulty fuel pump	<i>Refer to "Fuel Pressure Check".</i>
	Faulty EGR system (if equipped)	<i>Refer to "EGR System Inspection (If Equipped) in Section 1B".</i>
	Faulty injector	<i>Refer to "Fuel Injector Inspection in Section 1G".</i>
	Faulty ECT sensor or MAF sensor	<i>Refer to "Engine Coolant Temperature (ECT) Sensor Inspection in Section 1C" or "Mass Air Flow (MAF) and Intake Air Temperature (IAT) Sensor On-Vehicle Inspection in Section 1C".</i>
	Faulty ECM	<i>Refer to "Inspection of ECM and Its Circuits".</i>
	Low compression	<i>Refer to "Compression Check in Section 1D".</i>
	Dragging brakes	<i>Refer to condition: "Dragging brakes" in "Brakes Symptom Diagnosis in Section 4A".</i>
	Slipping clutch	<i>Refer to condition: "Slipping clutch" in "Clutch (Hydraulic Type) Symptom Diagnosis in Section 5C".</i>
	Faulty knock sensor	<i>Refer to "DTC P0327 / P0328: Knock Sensor Circuit Low / High".</i>
	Air drawn in through intake manifold or throttle body gasket	<i>Check air intake system.</i>
	Faulty electric throttle body assembly	<i>Refer to "Electric Throttle Body Assembly On-Vehicle Inspection in Section 1C".</i>
	Faulty accelerator pedal position (APP) sensor assembly	<i>Refer to "Accelerator Pedal Position (APP) Sensor Assembly Inspection in Section 1C".</i>
	Faulty IMT vacuum solenoid valve	<i>Refer to "IMT Vacuum Tank Assembly Inspection in Section 1C".</i>

1A-53 Engine General Information and Diagnosis:

Condition	Possible cause	Correction / Reference Item
Improper engine idling or engine fails to idle	Faulty spark plug	Refer to "Spark Plug Inspection in Section 1H".
	Faulty ignition coil with ignitor	Refer to "Ignition Coil Assembly (Igniter and Ignition Coil) Inspection in Section 1H".
	Fuel pressure out of specification	Refer to "Fuel Pressure Check".
	Engine overheating	Refer to condition of "Overheating".
	Faulty Idle air flow malfunction	Refer to "Idle Speed and IAC Throttle Valve Opening Inspection".
	Faulty evaporative emission control system	Refer to "EVAP Canister Purge Valve and Its Circuit Inspection in Section 1B".
	Faulty EGR system (if equipped)	Refer to "EGR System Inspection (If Equipped) in Section 1B".
	Faulty injector	Refer to "Fuel Injector Inspection in Section 1G".
	Faulty ECT sensor or MAF sensor	Refer to or "Engine Coolant Temperature (ECT) Sensor Inspection in Section 1C" or "Mass Air Flow (MAF) and Intake Air Temperature (IAT) Sensor On-Vehicle Inspection in Section 1C".
	Faulty ECM	Refer to "Inspection of ECM and Its Circuits".
	Low compression	Refer to "Compression Check in Section 1D".
	Malfunctioning PCV valve	Refer to "PCV Valve Inspection in Section 1B".
	Leaky intake manifold, throttle body or cylinder head gasket	Check air intake system.
	Faulty electric throttle body assembly	Refer to "Electric Throttle Body Assembly On-Vehicle Inspection in Section 1C".
	Faulty accelerator pedal position (APP) sensor assembly	Refer to "Accelerator Pedal Position (APP) Sensor Assembly Inspection in Section 1C".
	Loose connection or disconnection of vacuum hoses	Check connection or disconnection of vacuum hoses
	Faulty electric load parts (headlight, blower motor and/or rear defogger)	Refer to "Electric Load Signal Circuit Check".
Engine hesitates (Momentary lack of response as the accelerator is depressed. Can occur at all vehicle speeds. Usually most severe when first trying to make the vehicle move, as from a stop sign.)	Spark plug faulty or plug gap as out of adjustment	Refer to "Spark Plug Inspection in Section 1H".
	Fuel pressure out of specification – Dirty fuel filter – Dirty or clogged fuel hose or pipe – Faulty fuel pressure regulator – Faulty fuel pump	Refer to "Fuel Pressure Check".
	Engine overheating	Refer to condition of "Overheating".
	Faulty EGR system (if equipped)	Refer to "EGR System Inspection (If Equipped) in Section 1B".
	Faulty injector	Refer to "Fuel Injector Inspection in Section 1G".
	Faulty ECT sensor or MAF sensor	Refer to "Engine Coolant Temperature (ECT) Sensor Inspection in Section 1C" or "Mass Air Flow (MAF) and Intake Air Temperature (IAT) Sensor On-Vehicle Inspection in Section 1C".
	Faulty ECM	Refer to "Inspection of ECM and Its Circuits".
	Low compression	Refer to "Compression Check in Section 1D".
	Faulty electric throttle body assembly	Refer to "Electric Throttle Body Assembly On-Vehicle Inspection in Section 1C".
	Faulty accelerator pedal position (APP) sensor assembly	Refer to "Accelerator Pedal Position (APP) Sensor Assembly Inspection in Section 1C".

Condition	Possible cause	Correction / Reference Item
Surges (Engine power variation under steady throttle or cruise. Feels like the vehicle speeds up and down with no change in the accelerator pedal.)	Defective spark plug (excess carbon deposits, improper gap, and burned electrodes, etc.)	Refer to "Spark Plug Inspection in Section 1H".
	Variable fuel pressure – Dirty fuel filter – Dirty or clogged fuel hose or pipe – Faulty fuel pressure regulator – Faulty fuel pump	Refer to "Fuel Pressure Check".
	Faulty EGR system (if equipped)	Refer to "EGR System Inspection (If Equipped) in Section 1B".
	Faulty MAF sensor	Refer to "Mass Air Flow (MAF) and Intake Air Temperature (IAT) Sensor On-Vehicle Inspection in Section 1C".
	Faulty injector	Refer to "Fuel Injector Inspection in Section 1G".
	Faulty ECM	Refer to "Inspection of ECM and Its Circuits".
	Faulty electric throttle body assembly	Refer to "Electric Throttle Body Assembly On-Vehicle Inspection in Section 1C".
	Faulty accelerator pedal position (APP) sensor assembly	Refer to "Accelerator Pedal Position (APP) Sensor Assembly Inspection in Section 1C".
Excessive detonation (The engine makes sharp metallic knocks that change with throttle opening. Sounds like pop corn popping.)	Engine overheating	Refer to condition of "Overheating".
	Faulty spark plug	Refer to "Spark Plug Inspection in Section 1H".
	Improper ignition timing	Refer to "Ignition Timing Inspection in Section 1H".
	Clogged fuel filter and fuel lines	Refer to "Fuel Pressure Check".
	Faulty EGR system (if equipped)	Refer to "EGR System Inspection (If Equipped) in Section 1B".
	Faulty knock sensor, ECT sensor or MAF sensor	Refer to "DTC P0327 / P0328: Knock Sensor Circuit Low / High", "Engine Coolant Temperature (ECT) Sensor Inspection in Section 1C" or "Mass Air Flow (MAF) and Intake Air Temperature (IAT) Sensor On-Vehicle Inspection in Section 1C".
	Faulty injector	Refer to "Fuel Injector Inspection in Section 1G".
	Faulty ECM	Refer to "Inspection of ECM and Its Circuits".
	Excessive combustion chamber deposits	Refer to "Cylinder Head Inspection in Section 1D" and "Cylinders, Pistons and Piston Rings Inspection in Section 1D".
	Fuel pressure out of specification – Dirty fuel filter – Dirty or clogged fuel hose or pipe – Faulty fuel pressure regulator – Faulty fuel pump	Refer to "Fuel Pressure Check".
	Air drawn in through intake manifold or throttle body gasket	Check air intake system.

1A-55 Engine General Information and Diagnosis:

Condition	Possible cause	Correction / Reference Item
Overheating	Inoperative thermostat	Refer to "Thermostat Inspection in Section 1F".
	Poor water pump performance	Refer to "Water Pump Inspection in Section 1F".
	Clogged or leaky radiator	Refer to "Radiator On-Vehicle Inspection and Cleaning in Section 1F".
	Improper engine oil grade	Refer to "Engine Oil and Filter Change in Section 0B".
	Clogged oil filter or oil strainer	Refer to "Engine Oil and Filter Change in Section 0B" or "Oil Pan and Oil Pump Strainer Cleaning in Section 1E".
	Poor oil pump performance	Refer to "Oil Pump Inspection in Section 1E".
	Dragging brakes	Refer to condition: "Dragging brakes" in "Brakes Symptom Diagnosis in Section 4A".
	Slipping clutch	Refer to condition: "Slipping clutch" in "Clutch (Hydraulic Type) Symptom Diagnosis in Section 5C".
	Blown cylinder head gasket	Refer to "Cylinder Head Inspection in Section 1D".
	Faulty radiator cooling fan control system	Refer to "DTC P0480 / P0481 / P0482: Fan 1 / Fan 2 / Fan 3 Control Circuit".
	Air mixed in cooling system	Release air from cooling system.
Poor gasoline mileage	Faulty spark plug (improper gap, heavy deposits, and burned electrodes, etc.)	Refer to "Spark Plug Inspection in Section 1H".
	Fuel pressure out of specification	Refer to "Fuel Pressure Check".
	Faulty ECT sensor or MAF sensor	Refer to "Engine Coolant Temperature (ECT) Sensor Inspection in Section 1C" or "Mass Air Flow (MAF) and Intake Air Temperature (IAT) Sensor On-Vehicle Inspection in Section 1C".
	Faulty EGR system (if equipped)	Refer to "EGR System Inspection (If Equipped) in Section 1B".
	Faulty injector	Refer to "Fuel Injector Inspection in Section 1G".
	Faulty ECM	Refer to "Inspection of ECM and Its Circuits".
	Low compression	Refer to "Compression Check in Section 1D".
	Poor valve seating	Refer to "Valves and Valve Guides Inspection in Section 1D".
	Dragging brakes	Refer to condition: "Dragging brakes" in "Brakes Symptom Diagnosis in Section 4A".
	Slipping clutch	Refer to condition: "Slipping clutch" in "Clutch (Hydraulic Type) Symptom Diagnosis in Section 5C".
	Thermostat out of order	Refer to "Thermostat Inspection in Section 1F".
	Improper tire pressure	Adjust tire pressure.
	High idle speed	Refer to "Improper engine idling or engine fails to idle" under "Engine Symptom Diagnosis".
	Faulty electric throttle body assembly	Refer to "Electric Throttle Body Assembly On-Vehicle Inspection in Section 1C".
	Faulty accelerator pedal position (APP) sensor assembly	Refer to "Accelerator Pedal Position (APP) Sensor Assembly Inspection in Section 1C".

Condition	Possible cause	Correction / Reference Item
Excessive engine oil consumption	Sticky piston ring	Refer to "Cylinders, Pistons and Piston Rings Inspection in Section 1D".
	Worn piston and cylinder	Refer to "Cylinders, Pistons and Piston Rings Inspection in Section 1D".
	Worn piston ring groove and ring	Refer to "Cylinders, Pistons and Piston Rings Inspection in Section 1D".
	Improper location of piston ring gap	Refer to "Pistons, Piston Rings, Connecting Rods and Cylinders Disassembly and Reassembly in Section 1D".
	Worn or damaged valve stem seal	Replace.
	Worn valve stem	Refer to "Valves and Valve Guides Inspection in Section 1D".
Low oil pressure	Improper oil viscosity	Refer to "Engine Oil and Filter Change in Section 0B".
	Malfunctioning oil pressure switch	Refer to "Oil Pressure Switch Inspection in Section 9C".
	Clogged oil strainer	Refer to "Oil Pan and Oil Pump Strainer Cleaning in Section 1E".
	Functional deterioration of oil pump	Refer to "Oil Pump Inspection in Section 1E".
	Worn oil pump relief valve	Refer to "Oil Pump Inspection in Section 1E".
	Excessive clearance in various sliding parts	
Engine noise	Improper valve lash	Refer to "Valve Lash (Clearance) Inspection in Section 1D".
NOTE Before checking the mechanical noise, make sure that: <ul style="list-style-type: none"> • Ignition timing. • Specified spark plug is used. • Specified fuel is used. 	Worn valve stem and guide	Refer to "Valves and Valve Guides Inspection in Section 1D".
	Weak or broken valve spring	Refer to "Valve Springs Inspection in Section 1D".
	Warped or bent valve	Refer to "Valves and Valve Guides Inspection in Section 1D".
	Loose camshaft housing bolts	Refer to "Camshafts, Tappets and Shims Removal and Installation in Section 1D".
	Worn piston, ring and cylinder bore	Refer to "Cylinders, Pistons and Piston Rings Inspection in Section 1D".
	Worn crank pin bearing	Refer to "Crank Pins and Connecting Rod Bearings Inspection in Section 1D".
	Worn crank pin or connecting rod bearings	Refer to "Crank Pins and Connecting Rod Bearings Inspection in Section 1D".
	Loose connecting rod nuts	Refer to "Pistons, Piston Rings, Connecting Rods and Cylinders Removal and Installation in Section 1D".
	Low oil pressure	Refer to condition "Low oil pressure" previously described.
	Worn crankshaft journal bearing	Refer to "Main Bearings Inspection in Section 1D".
	Worn crankshaft journal	Refer to "Crankshaft Inspection in Section 1D".
	Loose lower crankcase (bearing cap) bolts	Refer to "Main Bearings, Crankshaft and Cylinder Block Removal and Installation in Section 1D".
	Excessive crankshaft thrust play	Refer to "Crankshaft Inspection in Section 1D".


1A-57 Engine General Information and Diagnosis:

Condition	Possible cause	Correction / Reference Item
Excessive hydrocarbon (HC) emission or carbon monoxide (CO)	Engine not at normal operating temperature	
	Clogged air cleaner	Refer to "Air Cleaner Filter Inspection and Cleaning in Section 1D".
	Vacuum leaks	Refer to "Engine Vacuum Check in Section 1D".
	Faulty spark plug	Refer to "Spark Plug Inspection in Section 1H".
	Faulty ignition coil with ignitor	Refer to "Ignition Coil Assembly (Igniter and Ignition Coil) Inspection in Section 1H".
	Low compression	Refer to "Compression Check in Section 1D".
	Lead contamination of three way catalytic converter	Check for absence of filler neck restrictor.
	Faulty evaporative emission control system	Refer to "EVAP Canister Purge Valve and Its Circuit Inspection in Section 1B".
	Fuel pressure out of specification – Dirty fuel filter – Dirty or clogged fuel hose or pipe – Faulty fuel pressure regulator – Faulty fuel pump	Refer to "Fuel Pressure Check".
	Closed loop system (A/F feedback compensation) fails (faulty TP sensor, poor performance of ECT sensor or MAF sensor)	Refer to "Electric Throttle Body Assembly On-Vehicle Inspection in Section 1C", "Engine Coolant Temperature (ECT) Sensor Inspection in Section 1C" or "Mass Air Flow (MAF) and Intake Air Temperature (IAT) Sensor On-Vehicle Inspection in Section 1C".
	Faulty electric throttle body assembly	Refer to "Electric Throttle Body Assembly On-Vehicle Inspection in Section 1C".
	Faulty accelerator pedal position (APP) sensor assembly	Refer to "Accelerator Pedal Position (APP) Sensor Assembly Inspection in Section 1C".
	Faulty injector	Refer to "Fuel Injector Circuit Check".
	Faulty ECM	Refer to "Inspection of ECM and Its Circuits".
Excessive nitrogen oxides (NOx) emission	Improper ignition timing	Refer to "Ignition Timing Inspection in Section 1H".
	Lead contamination of catalytic converter	Check for absence of filler neck restrictor.
	Faulty EGR system (if equipped)	Refer to "EGR System Inspection (If Equipped) in Section 1B".
	Fuel pressure out of specification – Dirty fuel filter – Dirty or clogged fuel hose or pipe – Faulty fuel pressure regulator – Faulty fuel pump	Refer to "Fuel Pressure Check".
	Closed loop system (A/F feedback compensation) fails (faulty TP sensor, poor performance of ECT sensor or MAF sensor)	Refer to "Electric Throttle Body Assembly On-Vehicle Inspection in Section 1C", "Engine Coolant Temperature (ECT) Sensor Inspection in Section 1C" or "Mass Air Flow (MAF) and Intake Air Temperature (IAT) Sensor On-Vehicle Inspection in Section 1C".
	Faulty electric throttle body assembly	Refer to "Electric Throttle Body Assembly On-Vehicle Inspection in Section 1C".
	Faulty accelerator pedal position (APP) sensor assembly	Refer to "Accelerator Pedal Position (APP) Sensor Assembly Inspection in Section 1C".
	Faulty injector	Refer to "Fuel Injector Circuit Check".
	Faulty ECM	Refer to "Inspection of ECM and Its Circuits".

Malfunction Indicator Lamp Does Not Come ON with Ignition Switch ON and Engine Stop (but Engine Can Be Started)

S6JB0B1104012

Wiring Diagram

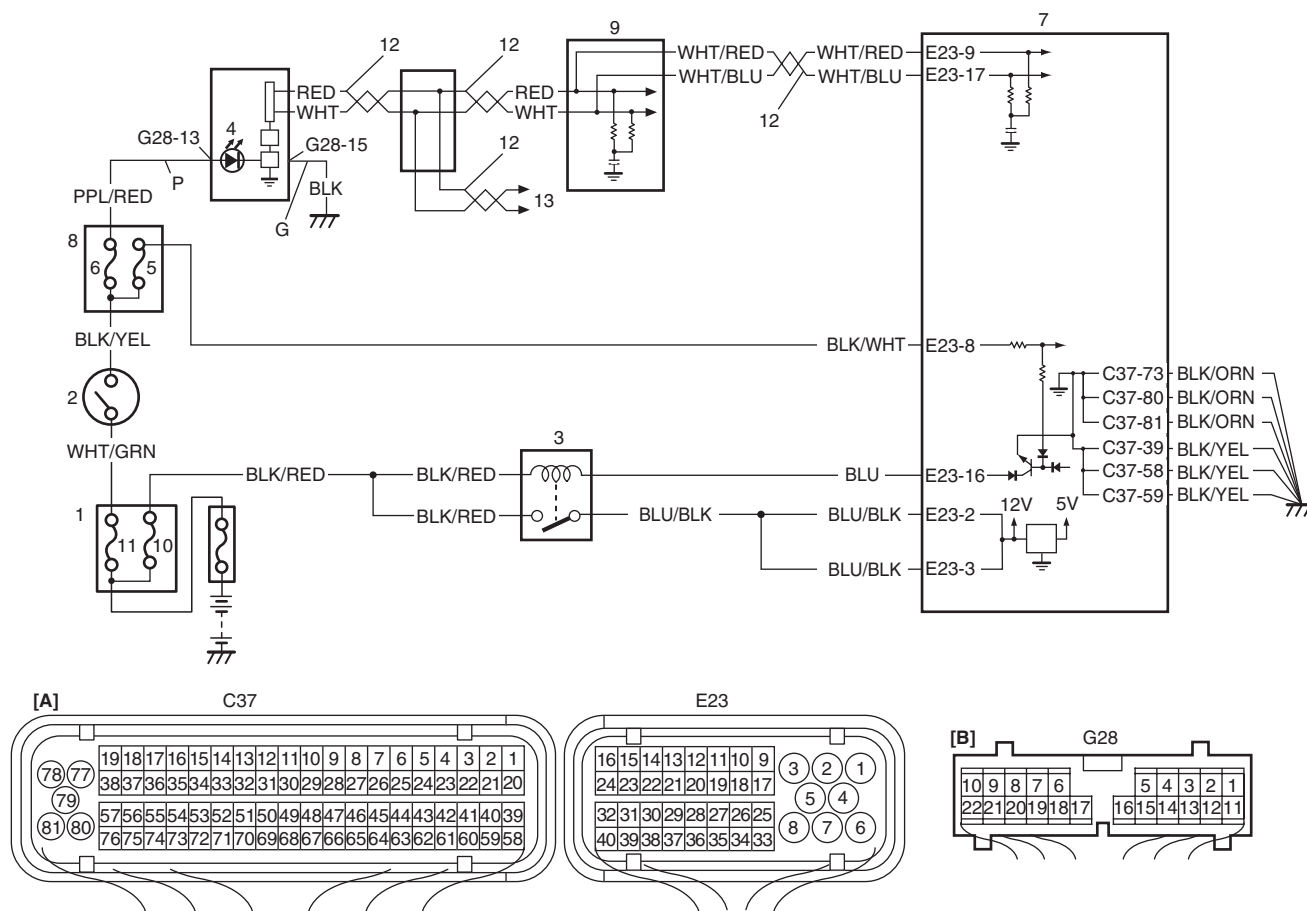

I6JB01110026-02

[A]: ECM connector (viewed from harness side)	3. Main relay	9. ABS or ESP® control module
[B]: Combination meter connector (viewed from harness side)	4. Malfunction indicator lamp in combination meter	10. "FI" fuse
P: Combination meter power supply circuit	5. "IG COIL" fuse	11. "IGN" fuse
G: Combination meter ground circuit	6. "METER" fuse	12. CAN communication line
1. Fuse box No.2	7. ECM	13. To other control module TCM (A/T model), BCM, 4WD control module (if equipped), keyless start control module (if equipped) and steering angle sensor (ESP® model)
2. Ignition switch	8. Junction block	

Circuit Description

When the ignition switch is turned ON, ECM causes the main relay to turn ON (close the contact point). Then, ECM being supplied with the main power, transmits indication ON signal of malfunction indicator lamp (MIL) to combination meter in order to turn MIL ON. And then, combination meter turns MIL ON. When the engine starts to run and no malfunction is detected in the system, ECM transmits MIL indication OFF signal to combination meter in order to turn MIL OFF. And then, combination meter turns MIL OFF, but if a malfunction was or is detected, MIL remains ON even when the engine is running.

Troubleshooting

NOTE

- Before performed troubleshooting, be sure to read the “Precautions of ECM Circuit Inspection”.
- When measuring circuit voltage, resistance and/or pulse signal at ECM connector, connect the special tool to ECM and/or the ECM connectors referring to “Inspection of ECM and Its Circuits”.

Step	Action	Yes	No
1	MIL power supply check 1) Turn ignition switch to ON position. <i>Do other warning lights come ON?</i>	Go to Step 2.	Go to Step 4.
2	DTC check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ON ignition switch and check DTC. <i>Is there DTC(s) U0073 and/or U0121?</i>	Go to applicable DTC diag. flow.	Go to Step 3.
3	DTC check in ABS or ESP® control module 1) Check DTC in ABS or ESP® control module. <i>Is there DTC(s) U1073 and/or U1100?</i>	Go to applicable DTC diag. flow.	Substitute a known good combination meter and recheck. If MIL still remains OFF, substitute a known good ECM and recheck.
4	Combination meter power supply and ground circuit check 1) Turn ignition switch OFF position. 2) Disconnect connector from combination meter. 3) Check for proper connection to power supply and ground terminals of combination meter connector. 4) If connections are OK, check that combination meter circuit is as follows. <ul style="list-style-type: none"> • Circuit voltage between combination meter power supply terminal and vehicle body ground is 10 – 14 V. • Wiring harness resistance of combination meter ground terminal and vehicle body ground is less than 3 Ω. <i>Are they in good condition?</i>	Go to Step 5.	Repair or replace.
5	CAN communication line circuit check 1) Check CAN communication circuit between control modules for open, short, high resistance and connections referring to Step 3 of “DTC U0073: Control Module Communication Bus Off” <i>Is circuit in good condition?</i>	Substitute a known good combination meter and recheck. If MIL still remains OFF, substitute a known good ECM and recheck.	Repair or replace.

Malfunction Indicator Lamp Remains ON after Engine Starts

S6JB0B1104013

Wiring Diagram and Circuit Description

Refer to "Malfunction Indicator Lamp Does Not Come ON with Ignition Switch ON and Engine Stop (but Engine Can Be Started)".


Troubleshooting**NOTE**

- Before performed troubleshooting, be sure to read the "Precautions of ECM Circuit Inspection".
- When measuring circuit voltage, resistance and/or pulse signal at ECM connector, connect the special tool to ECM and/or the ECM connectors referring to "Inspection of ECM and Its Circuits".

Step	Action	Yes	No
1	DTC check 1) Start engine and recheck DTC of ECM and TCM (A/T model) while engine running. <i>Is there any DTC(s)?</i>	Go to Step 2 of "Engine and Emission Control System Check", Step 2 of "A/T System Check in Section 5A".	Go to Step 2.
2	CAN communication line circuit check 1) Check CAN communication line circuit between control modules for open, short, high resistance and connections referring to Step 9 to 14 "DTC U0073: Control Module Communication Bus Off". <i>Is circuit in good condition?</i>	Substitute a known good combination meter and recheck. If MIL still remains ON, substitute a known good ECM and recheck.	Repair or replace CAN communication circuit.

DTC P0031 / P0032: HO2S Heater Control Circuit Low / High (Sensor-1, Bank-1)

S6JB0B1104014

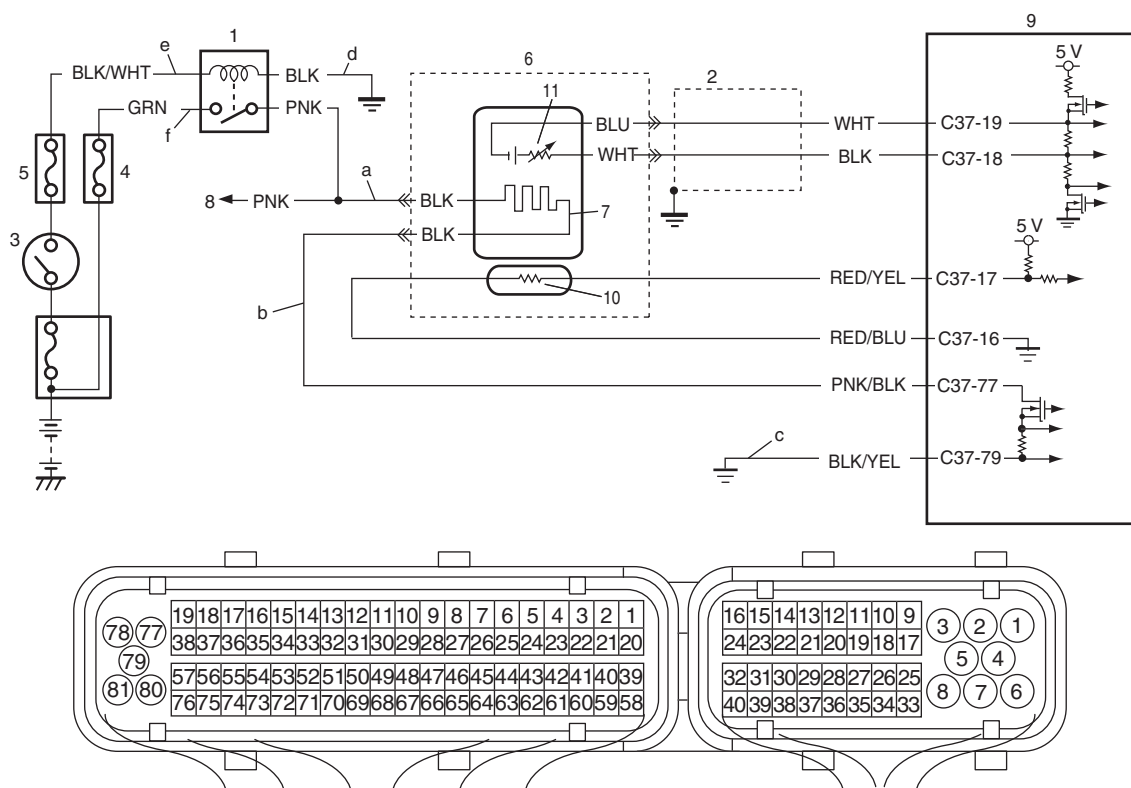System and Wiring Diagram

I6JB01110001-01

a. Power supply circuit of A/F sensor (bank-1) heater	f. Power supply circuit of HO2S heater relay	5. IG COIL fuse	10. Adjusting resistor (if equipped)
b. Control circuit of A/F sensor (bank-1) heater	1. HO2S heater relay	6. A/F sensor	11. A/F sensor element
c. Ground circuit of A/F sensor (bank-1) heater	2. Shield wire	7. A/F sensor heater	
d. Ground circuit of HO2S heater relay coil	3. Ignition Switch	8. To A/F sensor (bank-2), HO2S (bank-1 and -2) (if equipped)	
e. Power supply circuit of HO2S heater relay coil	4. O2 HTR fuse	9. ECM	

A/F Sensor Description

Refer to "A/F Sensor Description"

NOTE

When DTC P0031, P0037, P0051 and P0057 are indicated together, it is possible that HO2S heater relay circuit wire is open or short to ground.

When DTC P0032, P0052 are indicated together, it is possible that A/F sensor heater ground circuit is open or high resistance.

DTC Detecting Condition and Trouble Area


DTC detecting condition	Trouble area
DTC P0031 HOS Heater Control Circuit Low (Sensor-1, Bank-1): Circuit current of A/F sensor (bank-1) heater is lower than 0.8 A for more than 4 sec. continuously while control duty ratio of A/F sensor heater is more than 22% with engine running. (2 driving cycle detection logic) DTC P0032 HOS Heater Control Circuit High (Sensor-1, Bank-1): Circuit current of A/F sensor (bank-1) heater is higher than 10.5 A at ON duty pulse or 0.8 A at OFF duty pulse for more than 4 sec. continuously while control duty ratio of A/F sensor heater is more than 22% with engine running. (2 driving cycle detection logic)	<ul style="list-style-type: none"> A/F sensor heater circuit A/F sensor ECM

DTC Confirmation Procedure


- 1) With ignition switch turned OFF, connect scan tool to DLC.
- 2) Turn ON ignition switch and clear DTC.
- 3) Start engine and warm up to normal operating temperature.
- 4) Run engine at idle speed for 1 min. or more.
- 5) Check DTC and pending DTC.


DTC Troubleshooting**NOTE**

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

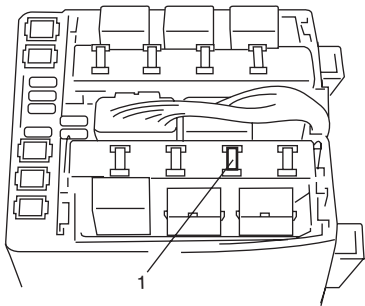Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	A/F sensor heater circuit check <ol style="list-style-type: none"> 1) Disconnect connector from A/F sensor (bank-1) with ignition switch turned OFF. 2) Check for proper terminal connection to A/F sensor (bank-1) connector. 3) If connections are OK, measure circuit voltage between "Power supply circuit of A/F sensor (bank-1) heater" and vehicle body ground with ignition switch turned ON. <p><i>Is measured voltage 10 – 14 V?</i></p>	Go to Step 7.	Go to Step 3.
3	HO2S heater fuse check <ol style="list-style-type: none"> 1) Check for "O2 HTR" fuse (1) blown.  <p style="text-align: right;">I5JB0C110009-01</p> <p><i>Is "O2 HTR" fuse in good condition?</i></p>	Go to Step 6.	Go to Step 4.

1A-63 Engine General Information and Diagnosis:

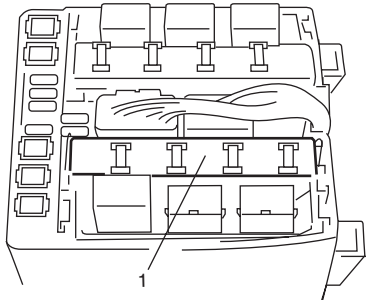Step	Action	Yes	No
4	<p>HO2S heater relay power circuit check</p> <ol style="list-style-type: none"> 1) Disconnect connector from each A/F sensor and HO2S with ignition switch turned OFF. 2) Remove HO2S heater relay (integration type relay) (1) and then check for proper terminal connection to relay connector.  <p style="text-align: right;">I5JB0C110010-01</p> <ol style="list-style-type: none"> 3) If connections are OK, check that HO2S heater relay circuit is as follows. <ul style="list-style-type: none"> • Insulation resistance between “Power supply circuit of A/F sensor (bank-1) heater” and vehicle body ground is infinity. • Insulation resistance between “Power supply circuit of HO2S heater relay” and vehicle body ground is infinity. <p><i>Is it in good condition?</i></p>	Go to Step 5.	Repair or replace defective wiring harness.
5	<p>A/F sensor and HO2S heater resistance check</p> <ol style="list-style-type: none"> 1) Check heater resistance of each A/F sensor and HO2S referring to “Air Fuel Ratio (A/F) Sensor On-Vehicle Inspection in Section 1C” and “Heated Oxygen Sensor (HO2S-2) Heater On-Vehicle Inspection (If Equipped) in Section 1C”. <p><i>Are each A/F sensor heater and HO2S heater in good condition?</i></p>	Faulty HO2S heater relay. Check HO2S heater relay referring to “Engine and Emission Control System Relay Inspection in Section 1C”.	Replace defective sensor.

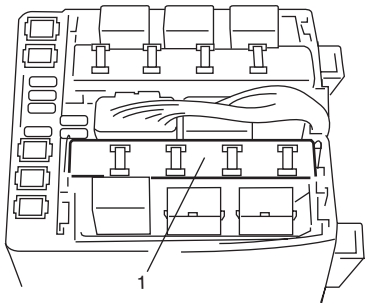Step	Action	Yes	No
6	<p>HO2S heater relay power circuit check</p> <ol style="list-style-type: none"> 1) Disconnect connector from each A/F sensor and HO2S with ignition switch turned OFF. 2) Remove HO2S heater relay (integration type relay) (1) and then check for proper terminal connection to relay connector.  <p>I5JB0C110010-01</p> <ol style="list-style-type: none"> 3) If connections are OK, check that HO2S heater relay circuit is as follows. <ul style="list-style-type: none"> • Circuit voltage between “Power supply circuit of HO2S heater relay” and vehicle body ground is battery voltage with ignition switch turned ON. • Circuit voltage between “Power supply circuit of HO2S heater relay coil” and vehicle body ground is battery voltage with ignition switch turned ON. • Wiring harness resistance of each “Ground circuit of HO2S heater relay coil” and “Power supply circuit of A/F sensor (bank-1) heater” is less than 1 Ω. <p><i>Are they in good condition?</i></p>	Faulty HO2S heater relay. Check HO2S heater relay referring to “Engine and Emission Control System Relay Inspection in Section 1C”.	Repair or replace defective wiring harness.
7	<p>A/F sensor heater circuit check</p> <ol style="list-style-type: none"> 1) Check that A/F sensor heater control circuit is as follows. <ul style="list-style-type: none"> • Circuit voltage between “Control circuit of A/F sensor (bank-1) heater” and vehicle body ground is 0 V with ignition switch turned ON. <p><i>Is it good condition?</i></p>	Go to Step 8.	repair or replace defective wiring harness.
8	<p>A/F sensor heater circuit check</p> <ol style="list-style-type: none"> 1) Disconnect connectors from ECM and check for proper terminal connection to ECM connector. 2) If connections are OK, check that A/F sensor heater circuit is as follows. <ul style="list-style-type: none"> • Insulation resistance of wire harness is infinity between “Control circuit of A/F sensor (bank-1) heater” terminal and each other terminal at A/F sensor (bank-1) connector. • Wiring harness resistance of “Control circuit of A/F sensor (bank-1) heater” and “Control ground circuit of A/F sensor (bank-1) heater” is less than 1 Ω. • Insulation resistance between “Control circuit of A/F sensor (bank-1) heater” and “Control ground circuit of A/F sensor (bank-1) heater” is infinity. <p><i>Are they in good condition?</i></p>	Go to Step 9.	Repair or replace defective wiring harness.


1A-65 Engine General Information and Diagnosis:

Step	Action	Yes	No
9	A/F sensor heater check 1) Check heater resistance of A/F sensor (bank-1) referring to "Air Fuel Ratio (A/F) Sensor On-Vehicle Inspection in Section 1C". <i>Is A/F sensor heater in good condition?</i>	Substitute a known good ECM and recheck.	Replace A/F sensor (bank-1).

DTC P0037 / P0038: HO2S Heater Control Circuit Low / High (Sensor-2, Bank-1)

S6JB0B1104015

System and Wiring Diagram

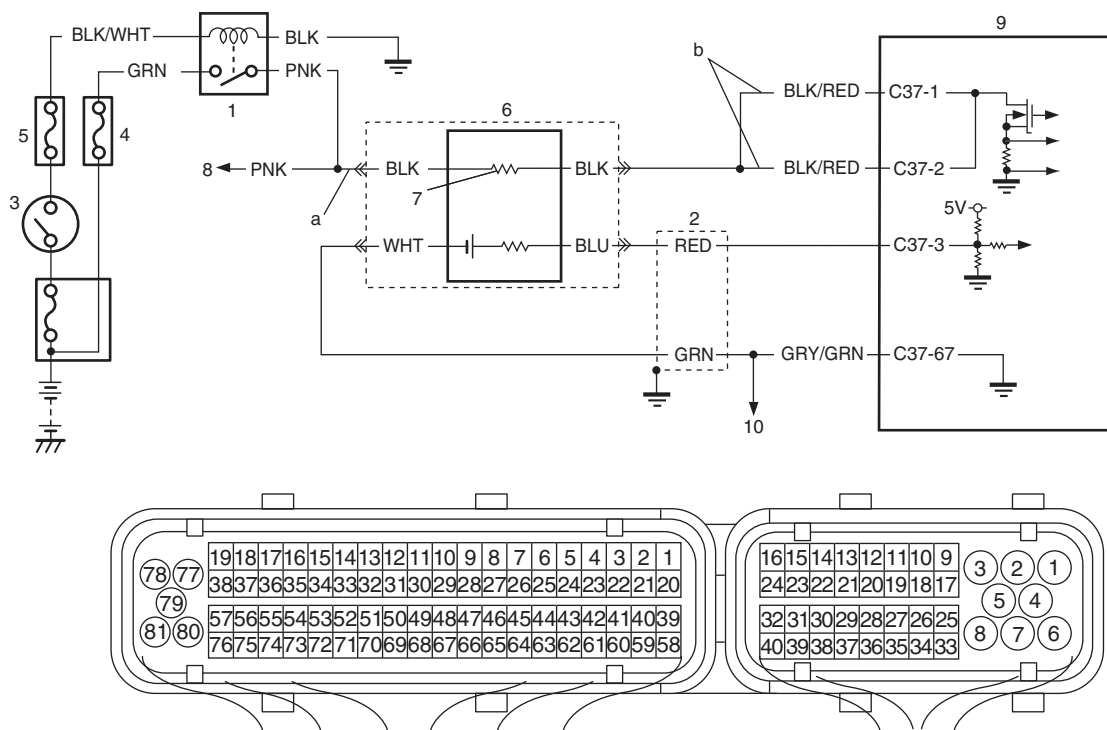

I6JB01110002-01

a. Power supply circuit of HO2S (bank-1) heater	2. Shield wire	5. IG COIL fuse	8. To A/F sensor (bank-1 and -2), HO2S (bank -2)
b. Control circuit of HO2S (bank-1) heater	3. Ignition Switch	6. HO2S (bank-1)	9. ECM
1. HO2S heater relay	4. O2 HTR fuse	7. HO2S heater	10. To other sensors

NOTE

When DTC P0031, P0037, P0051 and P0057 are indicated together, it is possible that HO2S heater relay circuit wire is open or short to ground.

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P0037 HO2S Heater Control Circuit Low (Sensor-2, Bank-1): Circuit current of HO2S (bank-1) heater is lower than specification (0.16 – 0.28 A depending on battery voltage) for more than 1 sec. continuously while control duty of HO2S sensor heater is ON with engine running. (2 driving cycle detection logic) DTC P0038 HO2S Heater Control Circuit High (Sensor-2, Bank-1): Circuit current of HO2S sensor (bank-1) heater is higher than 5 A at ON duty pulse or 0.2 A at OFF duty pulse for more than 1 sec. continuously while control duty of HO2S sensor heater is ON with engine running. (2 driving cycle detection logic)	<ul style="list-style-type: none"> HO2S heater circuit HO2S ECM

DTC Confirmation Procedure

- 1) With ignition switch turned OFF, connect scan tool to DLC.
- 2) Turn ON ignition switch and clear DTC.
- 3) Start engine and warm up to normal operating temperature.
- 4) Run engine at idle speed for 1 min. or more.
- 5) Check DTC and pending DTC.

DTC Troubleshooting**NOTE**

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".


Step	Action	Yes	No
1	<i>Was "Engine and Emission Control System Check" performed?</i>	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	A/F sensor DTC check <i>Are there DTC P0031 and/or P0051?</i>	Go to applicable DTC flow referring to "DTC P0031 / P0032: HO2S Heater Control Circuit Low / High (Sensor-1, Bank-1)" and/or "DTC P0051 / P0052: HO2S Heater Control Circuit Low / High (Sensor-1, Bank-2)".	Go to Step 3.
3	HO2S heater relay and its circuit check <ol style="list-style-type: none"> 1) Disconnect connector from HO2S (bank-1) with ignition switch turned OFF. 2) Check for proper terminal connection to HO2S (bank-1) connector. 3) If connections are OK, check that HO2S (bank-1) heater control circuit is as follows. <ul style="list-style-type: none"> • Circuit voltage between "Power supply circuit of HO2S (bank-1) heater" and vehicle body ground is battery voltage with ignition switch turned ON. <i>Is it in good condition?</i>	Go to Step 4	Repair or replace defective wiring harness.
4	HO2S heater circuit check <ol style="list-style-type: none"> 1) Check that HO2S (bank-1) heater control circuit is as follows. <ul style="list-style-type: none"> • Circuit voltage between "Control circuit of HO2S (bank-1) heater" and vehicle body ground is 0 V with ignition switch turned ON. <i>Is it good condition?</i>	Go to Step 5.	Repair or replace defective wiring harness.

1A-67 Engine General Information and Diagnosis:

Step	Action	Yes	No
5	HO2S heater circuit check 1) Disconnect connectors from ECM and check for proper terminal connection to ECM connector. 2) If connections are OK, check that HO2S (bank-1) heater circuit is as follows. <ul style="list-style-type: none">• Insulation resistance of wire harness is infinity between "Control circuit of HO2S (bank-1) heater" terminal and each other terminal at HO2S (bank-1) connector.• Wiring harness resistance of "Control circuit of HO2S (bank-1) heater" is less than 1 Ω.• Insulation resistance between "Control circuit of HO2S (bank-1) heater" and vehicle body ground is infinity. <i>Is it in good condition?</i>	Go to Step 6.	Repair or replace defective wiring harness.
6	HO2S heater check 1) Check heater resistance of HO2S (bank-1) referring to "Heated Oxygen Sensor (HO2S-2) Heater On-Vehicle Inspection (If Equipped) in Section 1C". <i>Is HO2S (bank-1) heater in good condition?</i>	Substitute a known good ECM and recheck.	Replace HO2S (bank-1).

DTC P0051 / P0052: HO2S Heater Control Circuit Low / High (Sensor-1, Bank-2)

S6JB0B1104016

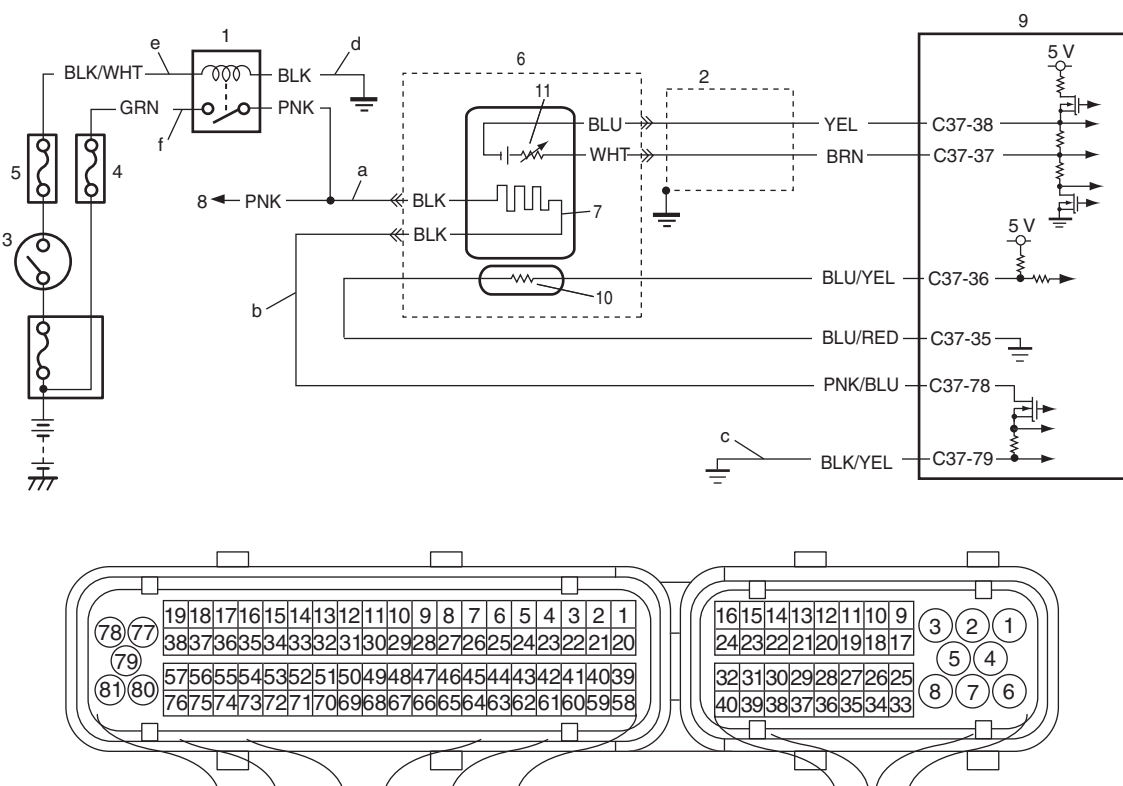System and Wiring Diagram

I6JB01110003-01

a. Power supply circuit of A/F sensor (bank-2) heater	f. Power supply circuit of HO2S heater relay	5. IG COIL fuse	10. Adjusting resistor (if equipped)
b. Control circuit of A/F sensor (bank-2) heater	1. HO2S heater relay	6. A/F sensor	11. A/F sensor element
c. Ground circuit of A/F sensor (bank-2) heater	2. Shield wire	7. A/F sensor heater	
d. Ground circuit of HO2S heater relay coil	3. Ignition Switch	8. To A/F sensor (bank-1), HO2S (bank-1 and -2) (if equipped)	
e. Power supply circuit of HO2S heater relay coil	4. O2 HTR fuse	9. ECM	

A/F Sensor Description

Refer to "A/F Sensor Description"

NOTE

When DTC P0031, P0037, P0051 and P0057 are indicated together, it is possible that HO2S heater relay circuit wire is open or short to ground.

When DTC P0032, P0052 are indicated together, it is possible that "A/F sensor heater ground circuit is open or high resistance.

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P0051 HO2S Heater Control Circuit Low (Sensor-1, Bank-2): Circuit current of A/F sensor (bank-2) heater is lower than 0.8 A for more than 4 sec. continuously while control duty ratio of A/F sensor heater is more than 22% with engine running. (2 driving cycle detection logic)	<ul style="list-style-type: none"> A/F sensor heater circuit A/F sensor ECM
DTC P0052 HO2S Heater Control Circuit High (Sensor-1, Bank-2): Circuit current of A/F sensor (bank-2) heater is higher than 10.5 A at ON duty pulse or 0.8 A at OFF duty pulse for more than 4 sec. continuously while control duty ratio of A/F sensor heater is more than 22% with engine running. (2 driving cycle detection logic)	

1A-69 Engine General Information and Diagnosis:


DTC Confirmation Procedure

- 1) With ignition switch turned OFF, connect scan tool to DLC.
- 2) Turn ON ignition switch and clear DTC.
- 3) Start engine and warm up to normal operating temperature.
- 4) Run engine at idle speed for 1 min. or more.
- 5) Check DTC and pending DTC.


DTC Troubleshooting

NOTE


Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

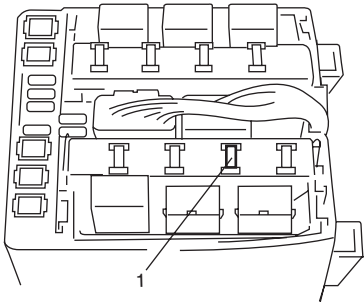Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	A/F sensor heater circuit check <ol style="list-style-type: none">1) Disconnect connector from A/F sensor (bank-2) with ignition switch turned OFF.2) Check for proper terminal connection to A/F sensor (bank-2) connector.3) If connections are OK, measure circuit voltage between "Power supply circuit of A/F sensor (bank-2) heater" and vehicle body ground with ignition switch turned ON. <i>Is measured voltage 10 – 14 V?</i>	Go to Step 7.	Go to Step 3.
3	HO2S heater fuse check <ol style="list-style-type: none">1) Check for "O2 HTR" fuse (1) blown.  <i>Is "O2 HTR" fuse in good condition?</i>	Go to Step 6.	Go to Step 4.

I5JB0C110009-01

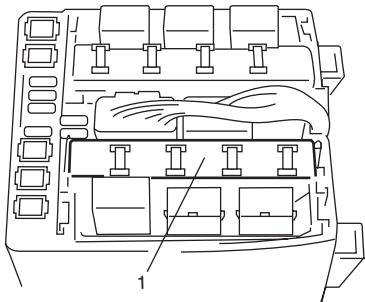Step	Action	Yes	No
4	<p>HO2S heater relay power circuit check</p> <ol style="list-style-type: none"> 1) Disconnect connector from each A/F sensor and HO2S with ignition switch turned OFF. 2) Remove HO2S heater relay (integration type relay) (1) and then check for proper terminal connection to relay connector.  <p>I5JB0C110010-01</p> <ol style="list-style-type: none"> 3) If connections are OK, check that HO2S heater relay circuit is as follows. <ul style="list-style-type: none"> • Insulation resistance between “Power supply circuit of A/F sensor (bank-2) heater” and vehicle body ground is infinity. • Insulation resistance between “Power supply circuit of HO2S heater relay” and vehicle body ground is infinity. <p><i>Is it in good condition?</i></p>	Go to Step 5.	Repair or replace defective wire.
5	<p>A/F sensor and HO2S heater resistance check</p> <ol style="list-style-type: none"> 1) Check heater resistance of each A/F sensor and HO2S referring to “Air Fuel Ratio (A/F) Sensor On-Vehicle Inspection in Section 1C” and “Heated Oxygen Sensor (HO2S-2) Heater On-Vehicle Inspection (If Equipped) in Section 1C”. <p><i>Are each A/F sensor heater and HO2S heater in good condition?</i></p>	Faulty HO2S heater relay. Check HO2S heater relay referring to “Engine and Emission Control System Relay Inspection in Section 1C”.	Replace defective sensor.


1A-71 Engine General Information and Diagnosis:

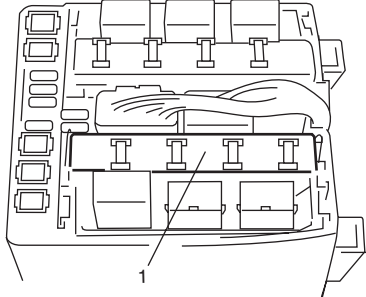Step	Action	Yes	No
6	<p>HO2S heater relay power circuit check</p> <ol style="list-style-type: none"> 1) Disconnect connector from each A/F sensor and HO2S with ignition switch turned OFF. 2) Remove HO2S heater relay (integration type relay) (1) and then check for proper terminal connection to relay connector.  <p style="text-align: right;">I5JB0C110010-01</p> <ol style="list-style-type: none"> 3) If connections are OK, check that HO2S heater relay circuit is as follows. <ul style="list-style-type: none"> • Circuit voltage between “Power supply circuit of HO2S heater relay” and vehicle body ground is battery voltage with ignition switch turned ON. • Circuit voltage between “Power supply circuit of HO2S heater relay coil” and vehicle body ground is battery voltage with ignition switch turned ON. • Wiring harness resistance of each “Ground circuit of HO2S heater relay coil” and “power supply circuit of A/F sensor (bank-2) heater” is less than 1 Ω. <p><i>Is it in good condition?</i></p>	<p>Faulty HO2S heater relay. Check HO2S heater relay referring to “Engine and Emission Control System Relay Inspection in Section 1C”.</p>	<p>Repair or replace defective wiring harness.</p>
7	<p>A/F sensor heater circuit check</p> <ol style="list-style-type: none"> 1) Check that A/F sensor heater control circuit is as follows. <ul style="list-style-type: none"> • Circuit voltage between “Control circuit of A/F sensor (bank-2) heater” and vehicle body ground is 0 V with ignition switch turned ON. <p><i>Is it good condition?</i></p>	<p>Go to Step 8.</p>	<p>Repair or replace defective wiring harness.</p>
8	<p>A/F sensor heater circuit check</p> <ol style="list-style-type: none"> 1) Disconnect connectors from ECM and check for proper terminal connection to ECM connector. 2) If connections are OK, check that A/F sensor heater circuit is as follows. <ul style="list-style-type: none"> • Insulation resistance of wire harness is infinity between “Control circuit of A/F sensor (bank-2) heater” terminal and each other terminal at A/F sensor (bank-2) connector. • Wiring harness resistance of “Control circuit of A/F sensor (bank-2) heater” and “Control ground circuit of A/F sensor (bank-2) heater” is less than 1 Ω. • Insulation resistance between “Control circuit of A/F sensor (bank-2) heater” and “Control ground circuit of A/F sensor (bank-2) heater” is infinity. <p><i>Is measured resistance infinity?</i></p>	<p>Go to Step 9.</p>	<p>Repair or replace defective wiring harness.</p>

Step	Action	Yes	No
9	A/F sensor heater check 1) Check heater resistance of A/F sensor (bank-2) referring to "Air Fuel Ratio (A/F) Sensor On-Vehicle Inspection in Section 1C". <i>Is A/F sensor heater in good condition?</i>	Substitute a known good ECM and recheck.	Replace A/F sensor (bank-2).

DTC P0057 / P0058: HO2S Heater Control Circuit Low / High (Sensor-2, Bank-2)

S6JB0B1104017

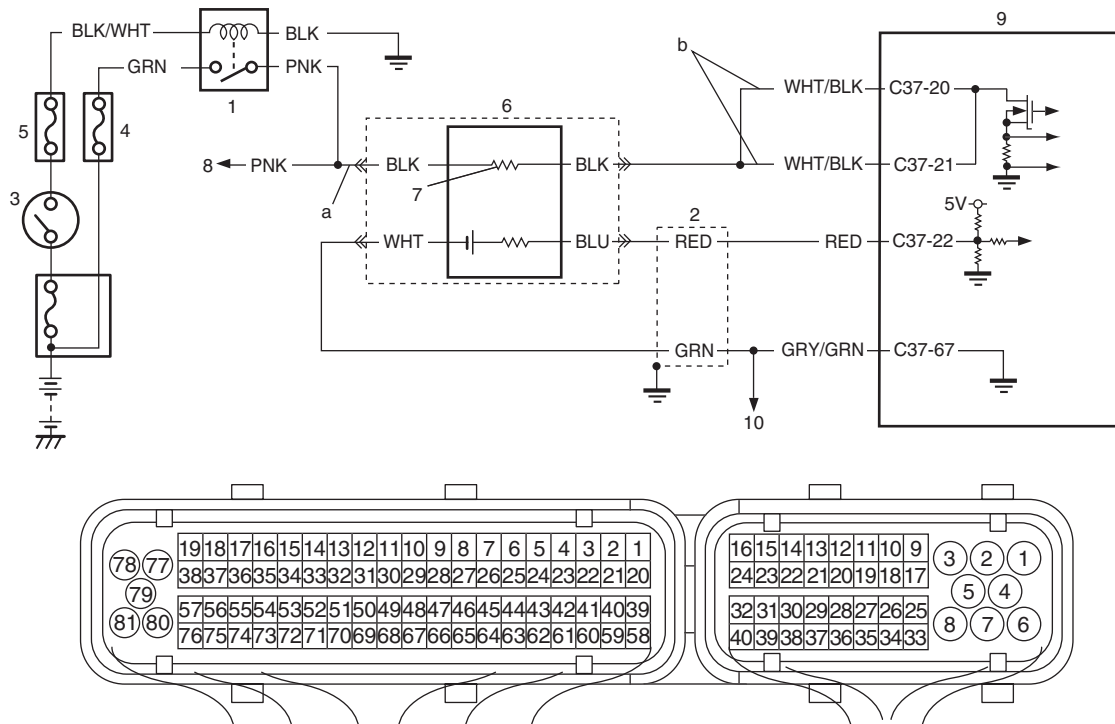System and Wiring Diagram

I6JB01110005-01

a. Power supply circuit of HO2S (bank-2) heater	3. Ignition Switch	7. HO2S heater
b. Control circuit of HO2S (bank-2) heater	4. O2 HTR fuse	8. To A/F sensor (bank-1 and -2), HO2S (bank-1)
1. HO2S heater relay	5. IG COIL fuse	9. ECM
2. Shield wire	6. HO2S (bank-2)	10. To other sensors

NOTE

When DTC P0031, P0037, P0051 and P0057 are indicated together, it is possible that HO2S heater relay circuit wire is open or short to ground.

1A-73 Engine General Information and Diagnosis:

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P0057 HO2S Heater Control Circuit Low (Sensor-2, Bank-2): Circuit current of HO2S (bank-2) heater is lower than specification (0.16 – 0.28 A depending on battery voltage) for more than 1 sec. continuously while control duty of HO2S sensor heater is ON with engine running. (2 driving cycle detection logic) DTC P0058 HO2S Heater Control Circuit High (Sensor-2, Bank-2): Circuit current of HO2S sensor (bank-2) heater is higher than 5 A at ON duty pulse or 0.2 A at OFF duty pulse for more than 1 sec. continuously while control duty of HO2S sensor heater is ON with engine running. (2 driving cycle detection logic)	<ul style="list-style-type: none">• HO2S heater circuit• HO2S• ECM

DTC Confirmation Procedure

- 1) With ignition switch turned OFF, connect scan tool to DLC.
- 2) Turn ON ignition switch and clear DTC.
- 3) Start engine and warm up to normal operating temperature.
- 4) Run engine at idle speed for 1 min. or more.
- 5) Check DTC and pending DTC.

DTC Troubleshooting


NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	A/F sensor DTC check <i>Are there DTC P0031 and/or P0051?</i>	Go to applicable DTC flow referring to "DTC P0031 / P0032: HO2S Heater Control Circuit Low / High (Sensor-1, Bank-1)" and/or "DTC P0051 / P0052: HO2S Heater Control Circuit Low / High (Sensor-1, Bank-2)".	Go to Step 3.
3	HO2S heater relay and its circuit check 1) Disconnect connector from HO2S (bank-2) with ignition switch turned OFF. 2) Check for proper terminal connection to HO2S (bank-2) connector. 3) If connections are OK, check that HO2S (bank-2) heater control circuit is as follows. <ul style="list-style-type: none">• Circuit voltage between "Power supply circuit of HO2S (bank-2) heater" and vehicle body ground is battery voltage with ignition switch turned ON. <i>Is it in good condition?</i>	Go to Step 4.	Repair or replace defective wiring harness.

Step	Action	Yes	No
4	HO2S heater circuit check 1) Check that HO2S (bank-2) heater control circuit is as follows. <ul style="list-style-type: none"> • Circuit voltage between “Control circuit of HO2S (bank-2) heater” and vehicle body ground is 0 V with ignition switch turned ON. <i>Is it good condition?</i>	Go to Step 5.	Repair or replace defective wiring harness.
5	HO2S heater circuit check 1) Disconnect connectors from ECM and check for proper terminal connection to ECM connector. 2) If connections are OK, check that HO2S (bank-2) heater circuit is as follows. <ul style="list-style-type: none"> • Insulation resistance of wire harness is infinity between “Control circuit of HO2S (bank-2) heater” terminal and each other terminal at HO2S (bank-2) connector. • Wiring harness resistance of “Control circuit of HO2S (bank-2) heater” is less than 1Ω. • Insulation resistance between “Control circuit HO2S (bank-2) heater” and vehicle body ground is infinity. <i>Is it in good condition?</i>	Go to Step 6.	Repair or replace defective wiring harness.
6	HO2S heater check 1) Check heater resistance of HO2S (bank-2) referring to “Heated Oxygen Sensor (HO2S-2) Heater On-Vehicle Inspection (If Equipped) in Section 1C”. <i>Is HO2S (bank-2) heater in good condition?</i>	Substitute a known good ECM and recheck.	Replace HO2S (bank-2).

Wiring Diagram

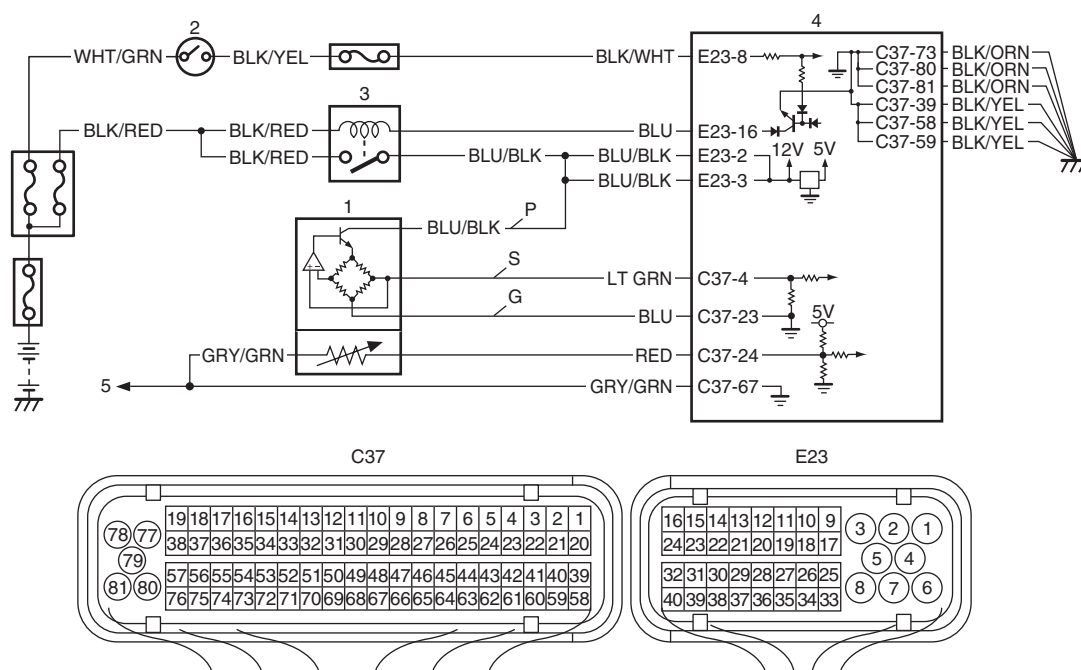

I6JB01110027-03

P: MAF sensor power supply circuit	1. MAF and IAT sensor	4. ECM
S: MAF sensor signal circuit	2. Ignition switch	5. To other sensors
G: MAF sensor ground circuit	3. Main relay	

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Ratio of MAF sensor signal to estimated MAF based on engine speed and MAP signal is more than 1.3 or less than 0.8 for more than 10 sec. (2 driving cycle detection logic, monitoring once per driving cycle)	<ul style="list-style-type: none"> • Air intake system (Clog or leakage) • MAF sensor and its circuit • MAP sensor and its circuit • Exhaust system (clogged WU-TWC converter) • ECM

DTC Confirmation Procedure

⚠ WARNING

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and very careful during testing to avoid occurrence of an accident.
- Road test should be carried out with 2 persons, a driver and a tester, on a level road.

NOTE

Check to make sure that the following conditions are satisfied when using this “DTC Confirmation Procedure”.

- **Intake air temperature: higher than -10°C (14°F).**
- **Atmospheric pressure: higher than 75 kPa (560 mmHg) (Altitude: lower than 2790 m (9150 ft)).**
- **The following DTCs are not detected: MAP sensor, IAT sensor, ECT sensor, EGR system, barometric pressure sensor and MAF sensor (other than P0101).**

- 1) With ignition switch OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Start engine and warm up to normal operating temperature.
- 4) Increase vehicle speed till engine speed is reached 1200 – 4800 r/min.
- 5) Drive vehicle for 1 min. at engine speed 1200 – 4800 r/min.
- 6) Stop vehicle and check DTC and pending DTC by using scan tool.

DTC Troubleshooting

NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to “Precautions for DTC Troubleshooting”.

Step	Action	Yes	No
1	Was “Engine and Emission Control System Check” performed?	Go to Step 2.	Go to “Engine and Emission Control System Check”.
2	Visual inspection 1) Check MAF sensor and air intake system for: <ul style="list-style-type: none"> • Objects which block measuring duct and resistor of MAF sensor. • Other air flow which does not pass the MAF sensor. Are they in good condition?	Go to Step 3.	Repair or replace.
3	MAF sensor performance check 1) With ignition switch OFF, connect scan tool to DLC. 2) Start engine and warm up to normal operation temperature. 3) Check MAF value using scan tool. (Refer to “Scan Tool Data” for normal value.) Is normal value indicated?	Intermittent trouble. Check for intermittent referring to “Intermittent and Poor Connection Inspection in Section 00”.	Go to Step 4.
4	Wire harness check 1) Check power supply, signal and ground circuits of MAF sensor for condition referring to Step 3 and 4 of “DTC P0102 / P0103: Mass Air Flow Circuit Low / High Input”. Are they in good condition?	Go to Step 5.	Repair or replace.
5	MAF sensor signal check 1) Turn ignition switch OFF position. 2) Connect connectors to MAF sensor and ECM. 3) Check MAF sensor signal voltage referring to “Mass Air Flow (MAF) and Intake Air Temperature (IAT) Sensor On-Vehicle Inspection in Section 1C”. Is each value within specified range?	Go to Step 6.	Replace MAF and IAT sensor.
6	MAP sensor check 1) Check MAP sensor for performance referring to “Manifold Absolute Pressure (MAP) Sensor Removal and Installation (If Equipped) in Section 1C”. Is it in good condition?	Substitute a known good ECM and recheck. If ECM is OK, replace exhaust manifold (built-in WU-TWC converter)	Replace MAP sensor.

DTC P0102 / P0103: Mass Air Flow Circuit Low / High Input

S6JB0B1104019

Wiring Diagram

Refer to "DTC P0101: Mass Air Flow Circuit Range / Performance".


DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P0102: Mass Air Flow Circuit Low Input Output voltage of MAF sensor is less than 0.3 V for 1 second or longer. (1 driving cycle detection logic)	<ul style="list-style-type: none"> MAF sensor and its circuit ECM
DTC P0103: Mass Air Flow Circuit High Input Output voltage of MAF sensor is more than 0.5 V for 1 second or longer. (1 driving cycle detection logic)	

DTC Confirmation Procedure

- 1) With ignition switch OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Start engine and run it for 10 sec.
- 4) Check DTC by using scan tool.

DTC Troubleshooting

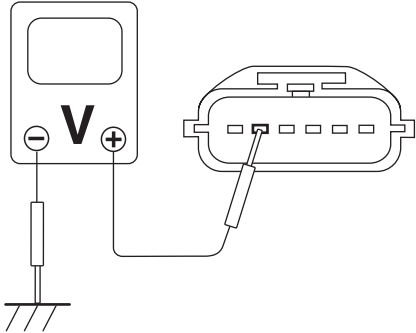
Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	MAF sensor and its circuit check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Start engine and check MAF value displayed on scan tool. (Refer to "Scan Tool Data" for normal value.) Is normal value indicated?	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".	Go to Step 3.
3	MAF sensor power supply voltage check 1) Disconnect connector from MAF sensor with ignition switch turned OFF. 2) Check for proper terminal connection to MAF sensor and ECM connectors 3) If connections are OK, turn ignition switch to ON position. 4) Check that MAF sensor power supply voltage is battery voltage.  Is it in good condition?	Go to Step 4.	Repair or replace MAF sensor power supply circuit.

I6JB01110028-01

Step	Action	Yes	No
4	Wire harness check <ol style="list-style-type: none"> 1) Turn ignition switch OFF position. 2) Disconnect connector from ECM. 3) Check that MAF sensor circuit is as follows. <ul style="list-style-type: none"> • Wiring harness resistance of each MAF sensor signal circuit and ground circuit is less than 3 Ω. • Insulation resistance between MAF sensor signal circuit and vehicle body ground is Infinity. • Insulation resistance of wire harness is infinity between MAF sensor signal terminal and each other terminal at MAF and IAT sensor connector. • Circuit voltage of each MAF sensor signal circuit and ground circuit is 0 – 1 V with ignition switch turned ON. <p><i>Are they in good condition?</i></p>	Go to Step 5.	Repair or replace defective wire harness.
5	MAF sensor signal check <ol style="list-style-type: none"> 1) Turn ignition switch OFF position. 2) Connect connectors to MAF sensor and ECM. 3) Check MAF sensor signal voltage referring to “Mass Air Flow (MAF) and Intake Air Temperature (IAT) Sensor On-Vehicle Inspection in Section 1C”. <p><i>Is each value within specified range?</i></p>	Substitute a known good ECM and recheck.	Replace MAF and IAT sensor.

DTC P0107 / P0108: Manifold Absolute Pressure Sensor Circuit Low / High Input

S6JB0B1104020

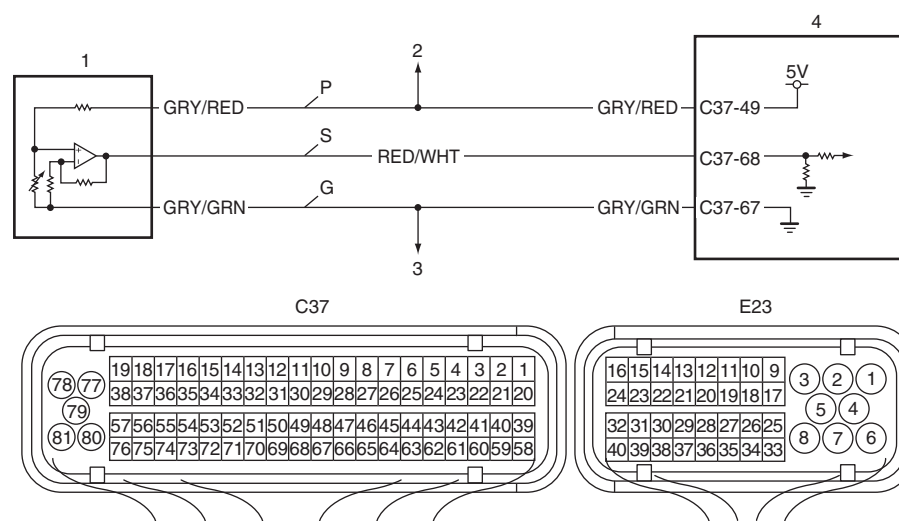Wiring Diagram

I6JB01110029-02

P: MAP sensor power supply circuit	1. Manifold absolute pressure sensor	4. ECM
S: MAP sensor signal circuit	2. To A/C refrigerant pressure sensor (if equipped with A/C)	
G: MAP sensor ground circuit	3. To other sensors	

1A-79 Engine General Information and Diagnosis:

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P0107: Manifold Absolute Pressure Sensor Circuit Low Input Output voltage of MAP sensor is less than 0.1 V for 2.6 seconds or longer. (1 driving cycle detection logic)	<ul style="list-style-type: none">• MAP sensor and its circuit• ECM
DTC P0108: Manifold Absolute Pressure Sensor Circuit High Input Output voltage of MAP sensor is more than 4.9 V for 2.6 seconds or longer. (1 driving cycle detection logic)	

DTC Confirmation Procedure

▲ WARNING

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and very careful during testing to avoid occurrence of an accident.
- Road test should be carried out with 2 persons, a driver and a tester, on a level road.

- 1) With ignition switch OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Run engine at idle speed for 1 minute.
- 4) Check DTC and pending DTC by using scan tool.

DTC Troubleshooting

NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".


Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	MAP sensor and its circuit check 1) Connect scan tool to DLC with ignition switch OFF. 2) Turn ignition switch ON. 3) Check intake manifold pressure. Is it 0 kPa or 126 kPa?	Go to Step 3.	Intermittent trouble. If OK, substitute a known good ECM and recheck.

Step	Action	Yes	No
3	Wire harness check 1) Turn ignition switch OFF position. 2) Disconnect connectors from MAP sensor and ECM. 3) Check for proper terminal connection to MAP sensor and ECM connectors. 4) If connections are OK, check that MAP sensor circuit is as follows. <ul style="list-style-type: none"> • Wiring harness resistance of each MAP sensor power supply, signal and ground circuit is less than 3 Ω. • Insulation resistance of each MAP sensor power supply and signal circuit is infinity between MAP sensor connector and vehicle body ground. • Insulation resistance of wire harness is infinity between MAP sensor signal terminal and each other terminal at MAP sensor connector. • Circuit voltage of each MAP sensor power supply, signal and ground circuit is 0 – 1 V with ignition switch turned ON. <i>Are they in good condition?</i>	Go to Step 4.	Repair or replace defective wire harness.
4	Wire harness check 1) Connect connectors to ECM. 2) Turn ignition switch to ON position. 3) Check that MAP sensor power supply voltage is 5 V between power supply terminal and ground terminal of MAP sensor connector. <i>Is it in good condition?</i>	Go to Step 5.	Go to Step 6.
5	MAP sensor check 1) Check MAP sensor, referring to “Manifold Absolute Pressure (MAP) Sensor Inspection in Section 1C”. <i>Is it in good condition?</i>	Substitute a known good ECM and recheck.	Replace MAP sensor.
6	Wire harness check 1) Turn ignition switch OFF position. 2) Disconnect connector from A/C refrigerant pressure sensor. 3) Turn ignition switch to ON position. 4) Check that MAP sensor power supply voltage is 5 V between power supply terminal and ground terminal of MAP sensor connector. <i>Is it in good condition?</i>	Check A/C refrigerant pressure sensor and its circuit.	Substitute a known-good ECM and recheck.

DTC P0111: Intake Air Temperature Sensor Circuit Performance

S6JB0B1104021

Wiring Diagram

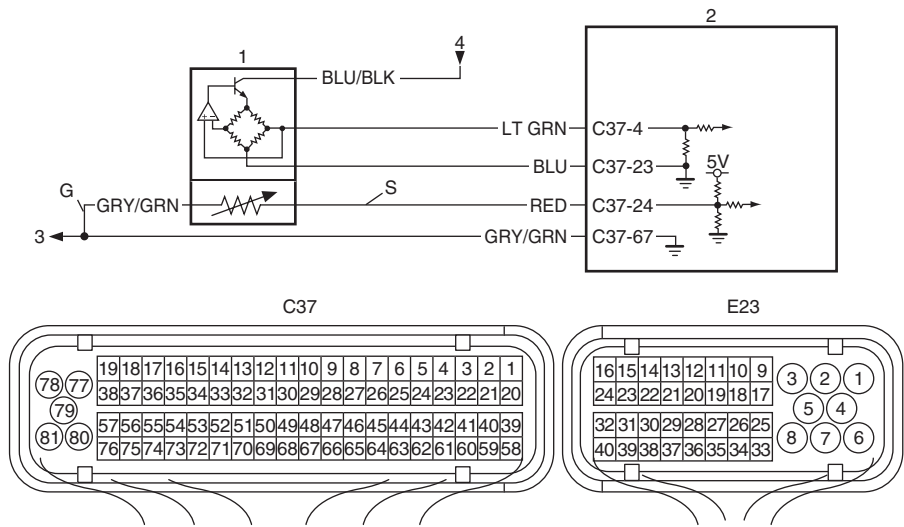

I6JB01110030-03

S: IAT sensor signal circuit	1. MAF and IAT sensor	3. To other sensors
G: IAT sensor ground circuit	2. ECM	4. From main relay

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Variation of IAT sensor signal is less than 15 mV even through ECT reaches 75 °C after engine is started with ECT less than 30 °C. (2 driving cycle detection logic)	<ul style="list-style-type: none">IAT sensor and its circuitECM

DTC Confirmation Procedure

⚠ WARNING

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and very careful during testing to avoid occurrence of an accident.
- Road test should be carried out with 2 persons, a driver and a tester, on a level road.

NOTE

Check to make sure that the following conditions are satisfied when using this “DTC Confirmation Procedure”.

- Atmospheric pressure: higher than 75 kPa (560 mmHg) (Altitude: lower than 2790 m (9150 ft)).
- Engine coolant temperature at engine start: between −10 °C and 30 °C (14 °F and 86 °F).
- The following DTCs are not detected: MAF sensor, ECT sensor and IAT sensor (other than P0111).

- 1) With ignition switch OFF, connect scan tool.
- 2) Turn ON ignition switch, clear DTC if any.
- 3) Start engine and warm up to normal operating temperature.
- 4) Drive vehicle more than 37 mph (60 km/h) for 15 min.
- 5) Stop vehicle and run engine at idle speed for 1 min.
- 6) Check DTC and pending DTC by using scan tool.

DTC Troubleshooting

NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	IAT sensor check 1) Check IAT sensor for performance referring to "Mass Air Flow (MAF) and Intake Air Temperature (IAT) Sensor On-Vehicle Inspection in Section 1C". <i>Is it in good condition?</i>	Go to Step 3.	Replace MAF and IAT sensor.
3	Wire harness check 1) Check signal and ground circuits of IAT sensor for condition referring to Step 2 and 3 of "DTC P0112 / P0113: Intake Air Temperature Sensor Circuit Low / High Input". <i>Are they in good condition?</i>	Substitute a known good ECM and recheck.	Repair or replace.

DTC P0112 / P0113: Intake Air Temperature Sensor Circuit Low / High Input

S6JB0B1104022

Wiring Diagram

Refer to "DTC P0111: Intake Air Temperature Sensor Circuit Performance".

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
P0112: Intake Air Temperature Sensor Circuit Low Input Circuit voltage of IAT sensor is less than 0.16 V for 5 seconds or longer. (1 driving cycle detection logic)	<ul style="list-style-type: none"> • IAT sensor and its circuit • ECM
P0113: Intake Air Temperature Sensor Circuit High Input Circuit voltage of IAT sensor is more than 5.0 V for 5 seconds or longer. (1 driving cycle detection logic)	

DTC Confirmation Procedure

- 1) With ignition switch OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Start engine and run it for 10 sec.
- 4) Check DTC by using scan tool.

DTC Troubleshooting


NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	Wire harness check 1) Turn ignition switch OFF position. 2) Disconnect connectors from IAT sensor and ECM. 3) Check for proper terminal connection to IAT sensor and ECM connectors. 4) If connections are OK, check that IAT sensor circuit is as follows. <ul style="list-style-type: none"> • Wiring harness resistance of each IAT sensor signal and ground circuit is less than 3 Ω. • Insulation resistance of IAT sensor signal circuit is infinity between IAT sensor connector and vehicle body ground. • Insulation resistance of wire harness is infinity between IAT sensor signal terminal and each other terminal at MAF and IAT sensor connector. • Circuit voltage of each IAT sensor signal and ground circuit is 0 – 1 V with ignition switch turned ON. Are they in good condition?	Go to Step 3.	Repair or replace defective wire harness.
3	IAT sensor reference voltage check 1) Connect connectors to ECM. 2) Turn ignition switch to ON position. 3) Check that IAT sensor signal voltage is 5 V between IAT sensor connector and vehicle body ground. Is it in good condition?	Go to Step 4.	Substitute a known good ECM and recheck.
4	IAT sensor check 1) Check IAT sensor for performance referring to "Mass Air Flow (MAF) and Intake Air Temperature (IAT) Sensor On-Vehicle Inspection in Section 1C". Is it in good condition?	Substitute a known good ECM and recheck.	Replace MAF and IAT sensor.

DTC P0116: Engine Coolant Temperature Circuit Range / Performance

S6JB0B1104023

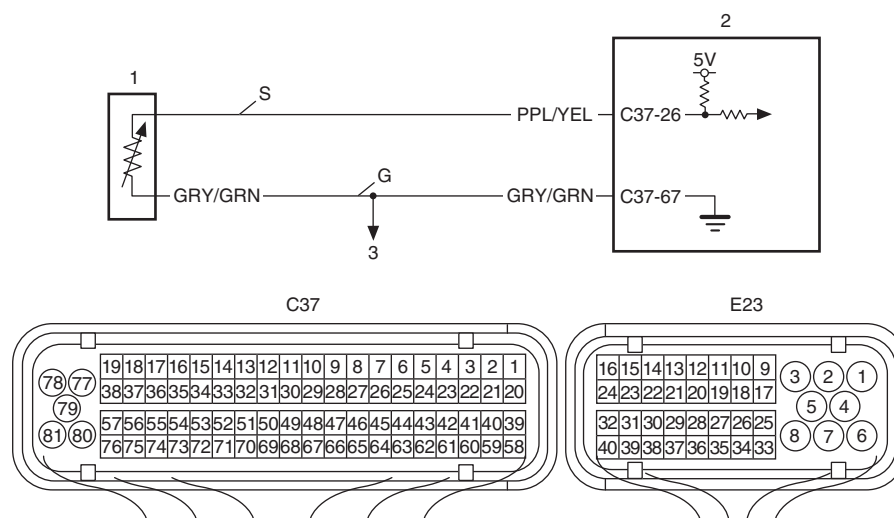Wiring Diagram

I6JB01110031-02

S: ECT sensor signal circuit	1. ECT sensor	3. To other sensors
G: ECT sensor ground circuit	2. ECM	

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
<ul style="list-style-type: none"> Variation of ECT sensor input voltage is 15 mV or less even though vehicle has been driven for 10 min or more after starting engine. (2 driving cycle detection logic, monitoring once per driving cycle) 	<ul style="list-style-type: none"> ECT sensor and its circuit Thermostat ECM

DTC Confirmation Procedure**NOTE**

Check to make sure that the following conditions are satisfied when using this “DTC Confirmation Procedure”.


The following DTCs are not detected: MAF sensor, IAT sensor, VSS and ECT sensor (other than DTC P0116)

- 1) With ignition switch OFF, connect scan tool.
- 2) Turn ON ignition switch, clear DTC if any.
- 3) Drive vehicle more than 37 mph (60 km/h) for more than 10 minutes.
- 4) Stop vehicle.
- 5) Check DTC and pending DTC by using scan tool.

DTC Troubleshooting

NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

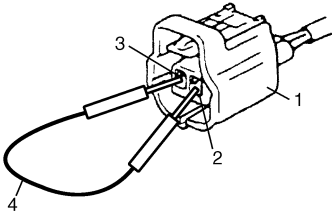Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	Engine coolant temperature check 1) With ignition switch OFF install scan tool. 2) With ignition switch ON, check engine coolant temperature displayed on scan tool. (ECT 1) 3) Warm up engine to normal operating temperature. 4) Check engine coolant temperature displayed on scan tool. (ECT 2) <i>Is difference between ECT 1 and ECT 2 less than 1 °C?</i>	Go to Step 4.	Go to Step 3.
3	Thermostat check 1) Check thermostat referring to "Thermostat Inspection in Section 1F". <i>Is thermostat in good condition?</i>	Go to Step 4.	Replace thermostat.
4	ECT sensor circuit check 1) With ignition switch OFF, install scan tool and disconnect ECT sensor connector (1). 2) With ignition switch ON, check engine coolant temperature displayed on scan tool. ECT sensor temperature specifications Signal wire terminal (2) and ground wire terminal (3) in ECT sensor connector are shorted by service wire (4): 205 °C Signal wire terminal (2) and ground wire terminal (3) in ECT sensor connector are opened: -40 °C  I6JB01110032-01 <i>Is each result satisfied its specification?</i>	Go to Step 5.	Check ECT sensor signal and ground circuits referring to Step 2 of "DTC P0117 / P0118: Engine Coolant Temperature Circuit Low / High Input".
5	ECT sensor performance check 1) Check ECT sensor referring to "Engine Coolant Temperature (ECT) Sensor Inspection in Section 1C". <i>Is check result as specified?</i>	Substitute a known good ECM and recheck.	Replace ECT sensor.

DTC P0117 / P0118: Engine Coolant Temperature Circuit Low / High Input

S6JB0B1104024

Wiring Diagram

Refer to "DTC P0116: Engine Coolant Temperature Circuit Range / Performance".

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
P0117: Engine Coolant Temperature Circuit Low Input Circuit voltage of ECT sensor is less than 0.16 V for 5 seconds or longer. (1 driving cycle detection logic)	<ul style="list-style-type: none"> ECT sensor and its circuit ECM
P0118: Engine Coolant Temperature Circuit High Input Circuit voltage of ECT sensor is more than 5.0 V for 5 seconds or longer. (1 driving cycle detection logic)	

DTC Confirmation Procedure

- 1) With ignition switch OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Start engine and run it for 10 sec.
- 4) Check DTC by using scan tool.

DTC Troubleshooting**NOTE**

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	Wire harness check <ol style="list-style-type: none"> 1) Turn ignition switch OFF position. 2) Disconnect connectors from ECT sensor and ECM. 3) Check for proper terminal connection to ECT sensor and ECM connectors. 4) If connections are OK, check that ECT sensor circuit is as follows. <ul style="list-style-type: none"> • Wiring harness resistance of each ECT sensor signal and ground circuit is less than 3 Ω. • Insulation resistance of ECT sensor signal circuit is infinity between ECT sensor connector and vehicle body ground. • Insulation resistance of wire harness is infinity between ECT sensor signal terminal and each other terminal at ECT sensor connector. • Circuit voltage of each ECT sensor signal and ground circuit is 0 – 1 V with ignition switch turned ON. Are they in good condition?	Go to Step 3.	Repair or replace defective wire harness.
3	ECT sensor reference voltage check <ol style="list-style-type: none"> 1) Connect connectors to ECM. 2) Turn ignition switch to ON position. 3) Check that ECT sensor signal voltage is 5 V between ECT sensor connector and vehicle body ground. Is it in good condition?	Go to Step 4.	Substitute a known good ECM and recheck.


1A-87 Engine General Information and Diagnosis:

Step	Action	Yes	No
4	ECT sensor check 1) Check ECT sensor for performance referring to "Engine Coolant Temperature (ECT) Sensor Inspection in Section 1C". <i>Is it in good condition?</i>	Substitute a known good ECM and recheck.	Replace ECT sensor.

DTC P0122 / P0123: Throttle Position Sensor (Main) Circuit Low / High Input

S6JB0B1104025

Wiring Diagram

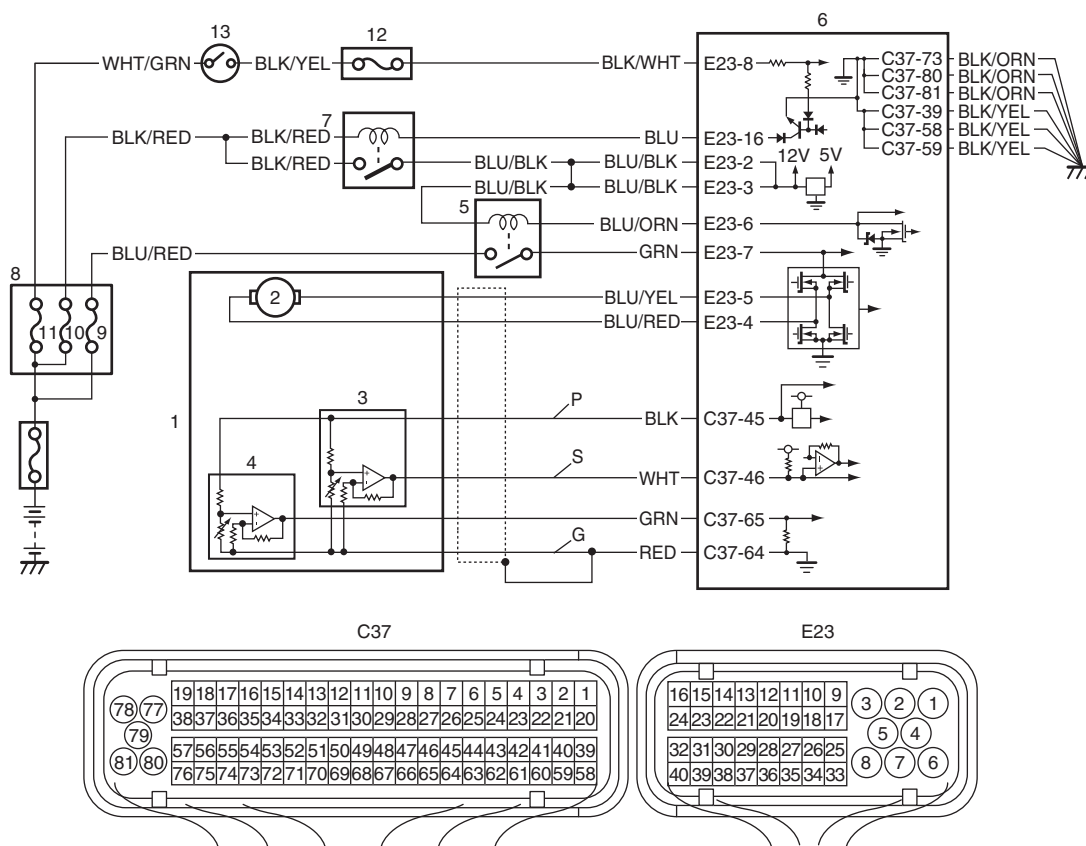

I6JB01110033-03

P: TP sensor power supply circuit	2. Throttle actuator	6. ECM	10. "FI" fuse
S: TP sensor signal circuit	3. Throttle position sensor (main)	7. Main relay	11. "IGN" fuse
G: TP sensor ground circuit	4. Throttle position sensor (sub)	8. Fuse Box No.2	12. "IG COIL" fuse
1. Electric throttle body assembly	5. Throttle actuator control relay	9. "THR MOT" fuse	13. Ignition switch

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
P0122: Throttle Position Sensor (Main) Circuit Low Circuit Output voltage of TP sensor (main) is less than 0.3 V. (1 driving cycle detection logic)	<ul style="list-style-type: none"> Electric throttle body assembly TP sensor main circuit ECM
P0123: Throttle Position Sensor (Main) Circuit High Circuit Output voltage of TP sensor (main) is more than 4.5 V. (1 driving cycle detection logic)	

DTC Confirmation Procedure

- 1) With ignition switch OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Start engine and run it for 10 sec.
- 4) Check DTC by using scan tool.

DTC Troubleshooting

NOTE

- Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".
- When DTC P0122 and P0222 are indicated together, it is possible that TP sensor power supply circuit is open.
- When DTC P0123 and P0223 are indicated together, it is possible that TP sensor power supply circuit is shorted to power circuit and / or TP sensor ground circuit is open.

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	Throttle position sensor and its circuit check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ON ignition switch, check "TP Sensor 1 Volt" displayed on scan tool when accelerator pedal is idle position and fully depressed. <i>Is displayed TP sensor value as described voltage in "Scan Tool Data"?</i>	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".	Go to Step 3.
3	Wire harness check 1) Turn ignition switch OFF position. 2) Disconnect connectors from TP sensor and ECM. 3) Check for proper terminal connection to electric throttle body assembly and ECM connectors. 4) If connections are OK, check that TP sensor (main) circuit is as follows. <ul style="list-style-type: none"> • Wiring harness resistance of each TP sensor (main) signal, power supply and ground circuit is less than 3 Ω. • Insulation resistance of each TP sensor (main) signal and power supply circuit is infinity between TP sensor connector and vehicle body ground. • Insulation resistance of wire harness is infinity between TP sensor (main) signal terminal and each other terminal at TP sensor connector. • Circuit voltage of each TP sensor (main) signal, power supply and ground circuit is 0 – 1 V with ignition switch turned ON. <i>Are they in good condition?</i>	Go to Step 4.	Repair or replace defective wire harness.
4	TP sensor circuit voltage check 1) Connect connector from ECM. 2) Turn ignition switch ON position. 3) Check that TP sensor circuit voltage is as follows. <ul style="list-style-type: none"> • Between TP sensor power supply terminal and TP sensor ground terminal is 5 V. • Between TP sensor (main) signal terminal and TP sensor ground terminal is 5 V. <i>Is it in good condition?</i>	Go to Step 5.	Substitute a known good ECM and recheck.


1A-89 Engine General Information and Diagnosis:

Step	Action	Yes	No
5	TP sensor check 1) Check TP sensor for performance referring to “Electric Throttle Body Assembly On-Vehicle Inspection in Section 1C”. <i>Is it in good condition?</i>	Substitute a known good ECM and recheck.	Replace electric throttle body assembly.

DTC P0133 / P2A00: O2 Sensor Circuit Slow Response / Performance (Sensor-1, Bank-1)

S6JB0B1104026

Wiring Diagram

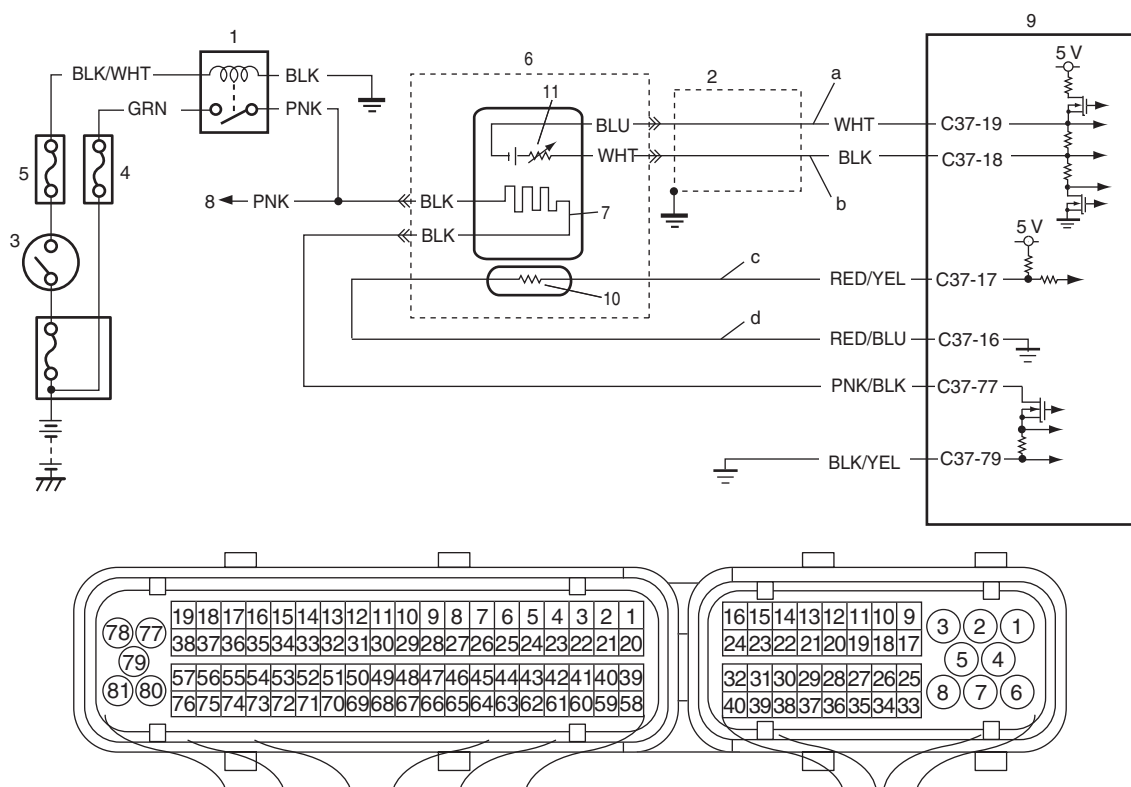

I6JB01110006-01

a. Signal (+) circuit of A/F sensor (bank-1)	1. HO2S heater relay	5. IG COIL fuse	9. ECM
b. Signal (-) circuit of A/F sensor (bank-1)	2. Shield wire	6. A/F sensor	10. Adjusting resistor (if equipped)
c. Adjusting resistor (+) circuit of A/F sensor (bank-1)	3. Ignition Switch	7. A/F sensor heater	11. A/F sensor element
d. Adjusting resistor (-) circuit of A/F sensor (bank-1)	4. O2 HTR fuse	8. To A/F sensor (bank-2), HO2S (bank-1 and -2)	

A/F Sensor Description

Refer to “A/F Sensor Description”

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P0133 O2 Sensor Circuit Slow Response (Sensor-1, Bank-1): Number of shifting times for A/F sensor signal between rich and lean is less than 13 times in 20 sec. while A/F (fuel trim) is shifted rich to lean and lean to rich with specified diagnosis frequency under specified running. (2 driving cycle detection logic, monitoring once per driving cycle) DTC P2A00 O2 Sensor Circuit performance (Sensor-1, Bank-1): Amplitude index of A/F sensor signal between rich and lean is more than 1.3 or less than 0.7 while A/F (fuel trim) is shifted rich to lean and lean to rich with specified diagnosis frequency under specified running. (2 driving cycle detection logic, monitoring once per driving cycle)	<ul style="list-style-type: none"> A/F sensor circuit A/F sensor ECM

DTC Confirmation Procedure

⚠ WARNING

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and be very careful during testing to avoid occurrence of an accident.
- Road test should be carried out by 2 persons, a driver and a tester, on a level road.

NOTE

Check to make sure that following conditions are satisfied when using this “DTC Confirmation Procedure”.

- Intake air temperature: -14°C (7°F) to 70°C (158°F).
- Engine coolant temperature: 40°C (104°F) or more.
- The following DTC is not detected (When DTC P0133 is detected): A/F sensor heater.

- 1) With ignition switch turned OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC using scan tool.
- 3) Start engine and warm up to normal operating temperature.
- 4) Drive vehicle at 40 mph (60 km/h) or higher. (engine speed: 2500 – 3000 r/min.)
- 5) Keep above vehicle speed for 6 min. or more. (Throttle valve opening is kept constant in this step.)
- 6) Release accelerator pedal and with engine brake applied, keep vehicle coasting (with fuel cut for 3 sec. or more) and then stop vehicle.
- 7) Check if DTC and pending DTC exist by using scan tool. If not, check if oxygen sensor monitoring test has been completed by using scan tool. If not in both of above checks (i.e., no DTC and pending DTC and oxygen sensor monitoring test not completed), check vehicle condition (environmental) and repeat Step 3) through 6).

DTC Troubleshooting

NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to “Precautions for DTC Troubleshooting”.


Step	Action	Yes	No
1	Was “Engine and Emission Control System Check” performed?	Go to Step 2.	Go to “Engine and Emission Control System Check”.
2	DTC check Is there DTC P0134?	Go to applicable DTC.	Go to Step 3.
3	DTC check Is there DTC(s) other than P0133, P0134 and P2A00?	Go to applicable DTC(s).	Go to Step 4.
4	Intake system and exhaust system for leakage check 1) Check intake system and exhaust system for leakage. Is it in good condition?	Go to Step 5.	Repair or replace defective parts.

1A-91 Engine General Information and Diagnosis:

Step	Action	Yes	No
5	A/F sensor circuit check <ol style="list-style-type: none"> 1) Disconnect connector from A/F sensor (bank-1) with ignition switch turned OFF. 2) Check for proper terminal connection to A/F sensor (bank-1) connector. 3) If connections are OK, check that A/F sensor (bank-1) circuit is as follows. <ul style="list-style-type: none"> • Wiring harness resistance of each “Signal (+) circuit of A/F sensor (bank-1)”, “Signal (–) circuit of A/F sensor (bank-1)”, “Adjusting resistor (+) circuit of A/F sensor (bank-1)” and “Adjusting resistor (–) circuit of A/F sensor (bank-1)” is less than 1 Ω. <p><i>Is it in good condition?</i></p>	Replace A/F sensor (bank-1).	Repair or replace defective wiring harness.

DTC P0134: O2 Sensor Circuit No Activity (Sensor-1, Bank-1)

S6JB0B1104027

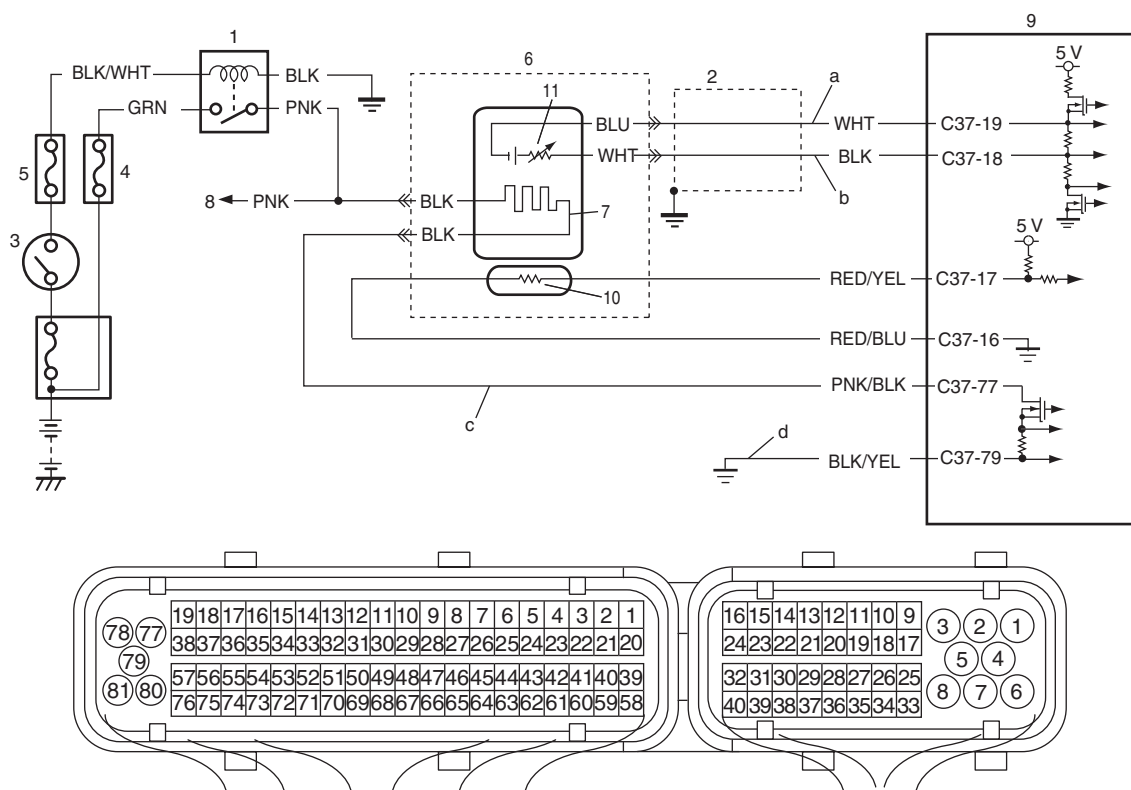

I6JB01110054-01

a. Signal (+) circuit of A/F sensor (bank-1)	1. HO2S heater relay	5. IG COIL fuse	9. ECM
b. Signal (–) circuit of A/F sensor (bank-1)	2. Shield wire	6. A/F sensor	10. Adjusting resistor (if equipped)
c. Control circuit of A/F sensor (bank-1) heater	3. Ignition Switch	7. A/F sensor heater	11. A/F sensor element
d. Control ground circuit of A/F sensor (bank-1) heater	4. O2 HTR fuse	8. To A/F sensor (bank-2), HO2S (bank-1 and -2) (if equipped)	

A/F Sensor Description

Refer to “A/F Sensor Description”

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Impedance of A/F sensor element is higher than $67\ \Omega$ for more than 20 sec. even though A/F sensor heater is turned ON for more than specified time with engine running. (2 driving cycle detection logic)	<ul style="list-style-type: none"> • A/F sensor circuit • A/F sensor • ECM

DTC Confirmation Procedure**NOTE**

Check to make sure that following conditions are satisfied when using this “DTC Confirmation Procedure”.

- **Engine coolant temperature: higher than $-10\ ^\circ\text{C}$ ($14\ ^\circ\text{F}$).**
- **The following DTCs are not detected: ECT sensor, MAF sensor, A/F sensor heater and IAT sensor.**

- 1) With ignition switch OFF, connect scan tool to DLC.
- 2) Turn ON ignition switch and clear DTC.
- 3) Start engine and warm up to normal operating temperature.
- 4) Run engine at idle speed for 1 min. or more.
- 5) Check DTC and pending DTC.

DTC Troubleshooting**NOTE**

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to “Precautions for DTC Troubleshooting”.

Step	Action	Yes	No
1	Was “Engine and Emission Control System Check” performed?	Go to Step 2.	Go to “Engine and Emission Control System Check”.
2	A/F sensor signal check <ol style="list-style-type: none"> 1) Connect scan tool with ignition switch turned OFF. 2) Warm up engine to normal operating temperature and keep it at 2000 r/min. for 60 sec. 3) Repeat racing engine (Repeat depressing accelerator pedal 5 to 6 times continuously to enrich A/F mixture and take foot off from pedal to enlean it). 4) Check for A/F sensor (bank-1) output current displayed on scan tool. <p>Does A/F sensor output current between $-0.2\ \text{mA}$ and $0.2\ \text{mA}$?</p>	Intermittent trouble. Check for intermittent referring to “Intermittent and Poor Connection Inspection in Section 00”.	Go to Step 3.
3	A/F sensor circuit check <ol style="list-style-type: none"> 1) Disconnect connector from A/F sensor (bank-1) with ignition switch turned OFF. 2) Check for proper terminal connection to A/F sensor (bank-1) connector. 3) If connections are OK, check that A/F sensor circuit is as follows. <ul style="list-style-type: none"> • Wiring harness resistance of each “Signal (+) circuit of A/F sensor (bank-1)”, “Signal (–) circuit of A/F sensor (bank-1)”, “Control circuit of A/F sensor (bank-1) heater” and “Control ground circuit of A/F sensor (bank-1) heater” is less than $1\ \Omega$. <p>Are they in good condition?</p>	Go to Step 4.	repair or replace defective wiring harness.


1A-93 Engine General Information and Diagnosis:

Step	Action	Yes	No
4	A/F sensor heater check 1) Check heater resistance of A/F sensor (bank-1) referring to "Air Fuel Ratio (A/F) Sensor On-Vehicle Inspection in Section 1C". <i>Is A/F sensor heater in good condition?</i>	Substitute a known good ECM and recheck. If ECM OK, replace A/F sensor (bank-1).	Replace A/F sensor (bank-1).

DTC P0137 / P0138: O2 Sensor Circuit Low Voltage / High Voltage (Sensor-2, Bank-1)

S6JB0B1104028

System and Wiring Diagram

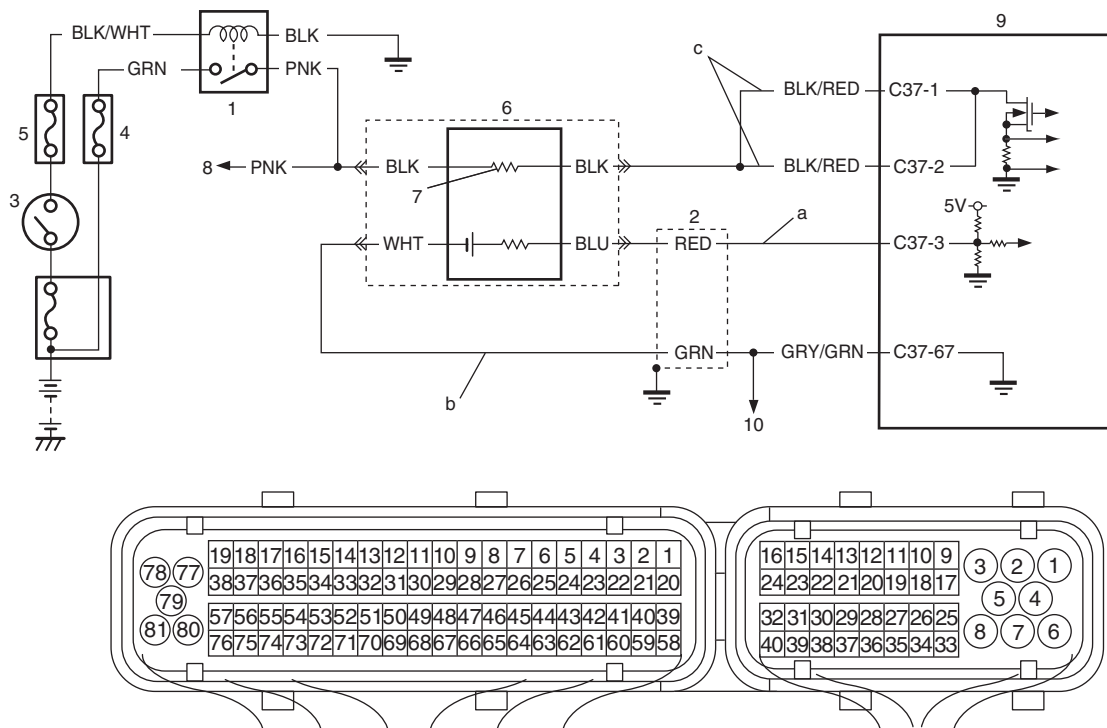

I6JB01110055-01

a. Signal circuit of HO2S (bank-1)	2. Shield wire	6. HO2S (bank-1)	10. To other sensors
b. Ground circuit of HO2S (bank-1)	3. Ignition Switch	7. HO2S heater	
c. Control circuit of HO2S (bank-1) heater	4. O2 HTR fuse	8. To A/F sensor (bank-1 and -2), HO2S (bank-2)	
1. HO2S heater relay	5. IG COIL fuse	9. ECM	

NOTE

When DTC P0138 and P0158 are indicated together, it is possible that HO2S ground circuit ("GRN") wire is open.

When DTC P0138, P0158, P0107, P0113, P0118 and P0553 are indicated together, it is possible that sensor ground circuit ("GRY/GRN") wire is open.

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P0137 O2 Sensor Circuit Low Voltage (Sensor-2, Bank-1): Circuit voltage of HO2S (bank-1) is lower than 15 mV for more than 60 sec. continuously with engine running except for fuel cut condition. (2 driving cycle detection logic)	<ul style="list-style-type: none"> HO2S circuit HO2S ECM
DTC P0138 O2 Sensor Circuit High Voltage (Sensor-2, Bank-1): Circuit voltage of HO2S (bank-1) is higher than 1.2 V for more than 20 sec. continuously with engine running. (2 driving cycle detection logic)	

DTC Confirmation Procedure**NOTE**

Check to make sure that following conditions are satisfied when using this “DTC Confirmation Procedure”.

- **The following DTC is not detected: HO2S heater (when troubleshooting for DTC P0137).**

- 1) With ignition switch OFF, connect scan tool to DLC.
- 2) Turn ON ignition switch and clear DTC.
- 3) Start engine and warm up to normal operating temperature.
- 4) Run engine at idle speed for 1 min. or more.
- 5) Check DTC and pending DTC.

DTC Troubleshooting**NOTE**

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to “Precautions for DTC Troubleshooting”.

Step	Action	Yes	No
1	Was “Engine and Emission Control System Check” performed?	Go to Step 2.	Go to “Engine and Emission Control System Check”.
2	HO2S signal check <ol style="list-style-type: none"> 1) Connect scan tool with ignition switch turned OFF 2) Warm up engine to normal operating temperature and keep it at 2000 r/min. for 60 sec. 3) Repeat racing engine (Repeat depressing accelerator pedal 5 to 6 times continuously to enrich A/F mixture and take foot off from pedal to enlean it). 4) Check for HO2S (bank-1) output voltage displayed on scan tool. <p><i>Does HO2S output voltage between 0.5 V and 0.8 V?</i></p>	Intermittent trouble. Check for intermittent referring to “Intermittent and Poor Connection Inspection in Section 00”.	Go to Step 3.
3	HO2S circuit check <ol style="list-style-type: none"> 1) Disconnect connector from HO2S (bank-1) and ECM with ignition switch turned OFF. 2) Check for proper terminal connection to HO2S (bank-1) connector and ECM connector. 3) If connections are OK, check that HO2S (bank-1) circuit is as follows. <ul style="list-style-type: none"> • Wiring harness resistance of each “Signal circuit of HO2S (bank-1)”, “Ground circuit of HO2S (bank-1)” and “Control circuit of HO2S (bank-1) heater” is less than 1 Ω. • Insulation resistance between “Signal circuit of HO2S (bank-1)” and vehicle body ground is infinity. • Insulation resistance of wire harness is infinity between “Signal circuit of HO2S (bank-1)” terminal and each other terminal at HO2S (bank-1) connector. • Circuit voltage between “Signal circuit of HO2S (bank-1)” and vehicle body ground is 0 V with ignition switch turned ON. <p><i>Are they in good condition?</i></p>	Go to Step 4.	Repair or replace defective wiring harness.

1A-95 Engine General Information and Diagnosis:

Step	Action	Yes	No
4	HO2S heater check 1) Check heater resistance of HO2S (bank-1) referring to "Heated Oxygen Sensor (HO2S-2) Heater On-Vehicle Inspection (If Equipped) in Section 1C". <i>Is HO2S heater in good condition?</i>	Substitute a known good ECM and recheck. If ECM OK, replace HO2S (bank-1).	Replace HO2S (bank-1).

DTC P0140: O2 Sensor Circuit No Activity Detected (Sensor-2, Bank-1)

S6JB0B1104029

Wiring Diagram

Refer to "DTC P0137 / P0138: O2 Sensor Circuit Low Voltage / High Voltage (Sensor-2, Bank-1)"

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Circuit voltage of HO2S (bank-1) is within 0.27 V – 0.35 V for more than 120 sec. continuously while A/F (fuel trim) is shifted rich to lean and lean to rich with specified diagnosis frequency under specified running, or circuit voltage of HO2S (bank-1) is out of specified range (0.2 V – 0.45 V) while engine is running with warmed it up from cold start (ECT is less than 40 °C). (2 driving cycle detection logic)	<ul style="list-style-type: none">• HO2S sensor• HO2S• ECM

⚠ WARNING

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and be very careful during testing to avoid occurrence of an accident.
- Road test should be carried out by 2 persons, a driver and a tester, on a level road.

NOTE

Check to make sure that following conditions are satisfied when using this "DTC Confirmation Procedure".

- Engine coolant temperature: 70 °C (158 °F) or more.
- Engine coolant temperature at engine start: –10 °C (14 °F) or more.
- Intake air temperature: –10 °C (14 °F) or more.
- Atmospheric pressure: higher than 75 kPa (560 mmHg) (Altitude: lower than 2790 m (9150 ft)).
- The following DTCs are not detected: MAF sensor, ECT sensor, IAT sensor, Fuel system, A/F sensor, TP sensor, HO2S sensor heater and HO2S sensor (other than DTC P0140).

- 1) With ignition switch turned OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC using scan tool.
- 3) Start engine and warm up to normal operating temperature.
- 4) Drive vehicle at 40 mph (60 km/h) or higher. (engine speed: 2500 – 3000 r/min.)
- 5) Keep above vehicle speed for 4 min. or more. (Throttle valve opening is kept constant in this step.)
- 6) Check if DTC and pending DTC exist by using scan tool. If not, check if oxygen sensor monitoring test has been completed by using scan tool. If not in both of above checks (i.e., no DTC and pending DTC and oxygen sensor monitoring test not completed), check vehicle condition (environmental) and repeat Step 3) through 6).

DTC Troubleshooting


NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	HO2S signal check 1) Connect scan tool with ignition switch turned OFF 2) Warm up engine to normal operating temperature and keep it at 2000 r/min. for 60 sec. 3) Repeat racing engine (Repeat depressing accelerator pedal 5 to 6 times continuously to enrich A/F mixture and take foot off from pedal to enlean it). 4) Check for HO2S (bank-1) output voltage displayed on scan tool. <i>Does HO2S output voltage between 0.5 V and 0.8 V?</i>	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".	Go to Step 3.
3	HO2S circuit check 1) Disconnect connector from HO2S (bank-1) and ECM with ignition switch turned OFF. 2) Check for proper terminal connection to HO2S (bank-1) connector and ECM connector. 3) If connections are OK, check that HO2S (bank-1) circuit is as follows. <ul style="list-style-type: none"> • Wiring harness resistance of each "Signal circuit of HO2S (bank-1)", "Ground circuit of HO2S (bank-1)" and "Control circuit of HO2S (bank-1) heater" is less than 1 Ω. • Insulation resistance between "Signal circuit of HO2S (bank-1)" and vehicle body ground is infinity. • Insulation resistance of wire harness is infinity between "Signal circuit of HO2S (bank-1)" terminal and each other terminal at HO2S (bank-1) connector. • Circuit voltage between "Signal circuit of HO2S (bank-1)" and vehicle body ground is 0 V with ignition switch turned ON. <i>Are they in good condition?</i>	Go to Step 4.	repair or replace defective wiring harness.
4	HO2S heater check 1) Check heater resistance of HO2S (bank-1) referring to "Heated Oxygen Sensor (HO2S-2) Heater On-Vehicle Inspection (If Equipped) in Section 1C". <i>Is HO2S heater in good condition?</i>	Substitute a known good ECM and recheck. If ECM OK, replace HO2S (bank-1).	Replace HO2S (bank-1).

DTC P0153 / P2A03: O2 Sensor Circuit Slow Response / Performance (Sensor-1, Bank-2)

S6JB0B1104030

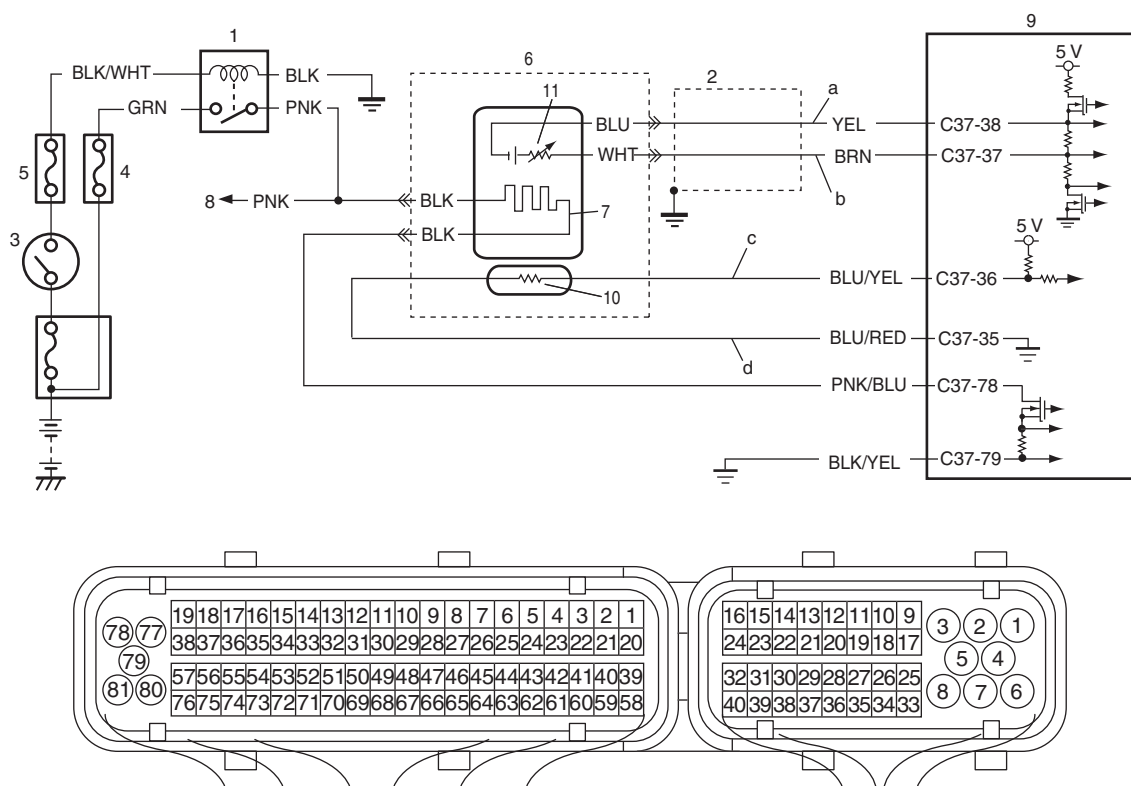Wiring Diagram

I6JB01110095-01

a. Signal (+) circuit of A/F sensor (bank-2)	1. HO2S heater relay	5. IG COIL fuse	9. ECM
b. Signal (-) circuit of A/F sensor (bank-2)	2. Shield wire	6. A/F sensor	10. Adjusting resistor (if equipped)
c. Adjusting resistor (+) circuit of A/F sensor (bank-2)	3. Ignition Switch	7. A/F sensor heater	11. A/F sensor element
d. Adjusting resistor (-) circuit of A/F sensor (bank-2)	4. O2 HTR fuse	8. To A/F sensor (bank-1), HO2S (bank-1 and -2)	

A/F Sensor Description

Refer to "A/F Sensor Description"

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P0153 O2 Sensor Circuit Slow Response (Sensor-1, Bank-2): Number of shifting times for A/F sensor signal between rich and lean is less than 13 times in 20 sec. while A/F (fuel trim) is shifted rich to lean and lean to rich with specified diagnosis frequency under specified running. (2 driving cycle detection logic, monitoring once per driving cycle)	<ul style="list-style-type: none"> A/F sensor circuit A/F sensor ECM
DTC P2A03 O2 Sensor Circuit Performance (Sensor-1, Bank-2): Amplitude index of A/F sensor signal between rich and lean is more than 1.3 or less than 0.7 while A/F (fuel trim) is shifted rich to lean and lean to rich with specified diagnosis frequency under specified running. (2 driving cycle detection logic, monitoring once per driving cycle)	

DTC Confirmation Procedure**▲ WARNING**

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and very careful during testing to avoid occurrence of an accident.
- Road test should be carried out with 2 persons, a driver and a tester, on a level road.

NOTE

Check to make sure that the following conditions are satisfied when using this “DTC Confirmation Procedure”.

- Intake air temperature: -14°C (7°F) to 70°C (158°F).
- Engine coolant temperature: 40°C (104°F) or more.
- The following DTC is not detected (when DTC P0153 is detected): A/F sensor heater.

- 1) With ignition switch OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool.
- 3) Start engine and warm up to normal operating temperature.
- 4) Drive vehicle at 40 mph (60 km/h) or higher. (engine speed: 2500 – 3000 r/min.)
- 5) Keep above vehicle speed for 6 min. or more. (Throttle valve opening is kept constant in this step.)
- 6) Release accelerator pedal and with engine brake applied, keep vehicle coasting (with fuel cut for 3 sec. or more) and then stop vehicle.
- 7) Check if DTC and pending DTC exist by using scan tool. If not, check if oxygen sensor monitoring test has been completed by using scan tool. If not in both of above checks (i.e., no DTC and pending DTC and oxygen sensor monitoring test not completed), check vehicle condition (environmental) and repeat Step 3) through 6).


DTC Troubleshooting**NOTE**

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to “Precautions for DTC Troubleshooting”.

Step	Action	Yes	No
1	Was “Engine and Emission Control System Check” performed?	Go to Step 2.	Go to “Engine and Emission Control System Check”.
2	DTC check <i>Is there DTC P0154?</i>	Go to applicable DTC.	Go to Step 3.
3	DTC check <i>Is there DTC(s) other than P0153, P0134 and P2A03?</i>	Go to applicable DTC(s).	Go to Step 4.
4	Intake system and exhaust system for leakage check 1) Check intake system and exhaust system for leakage. <i>Is it in good condition?</i>	Go to Step 5.	Repair or replace defective parts.
5	A/F sensor circuit check 1) Disconnect connector from A/F sensor (bank-2) with ignition switch turned OFF. 2) Check for proper terminal connection to A/F sensor (bank-2) connector. 3) If connections are OK, check that A/F sensor circuit is as follows. <ul style="list-style-type: none"> • Wiring harness resistance of each “Signal (+) circuit of A/F sensor (bank-2)”, “Signal (–) circuit of A/F sensor (bank-2)”, “Adjusting resistor (+) circuit of A/F sensor (bank-2)” and “Adjusting resistor (–) circuit of A/F sensor (bank-2)” is less than $1\ \Omega$. <i>Is it in good condition?</i>	Replace A/F sensor (bank-2).	Repair or replace defective wiring harness.

DTC P0154: O2 Sensor Circuit No Activity (Sensor-1, Bank-2)

S6JB0B1104031

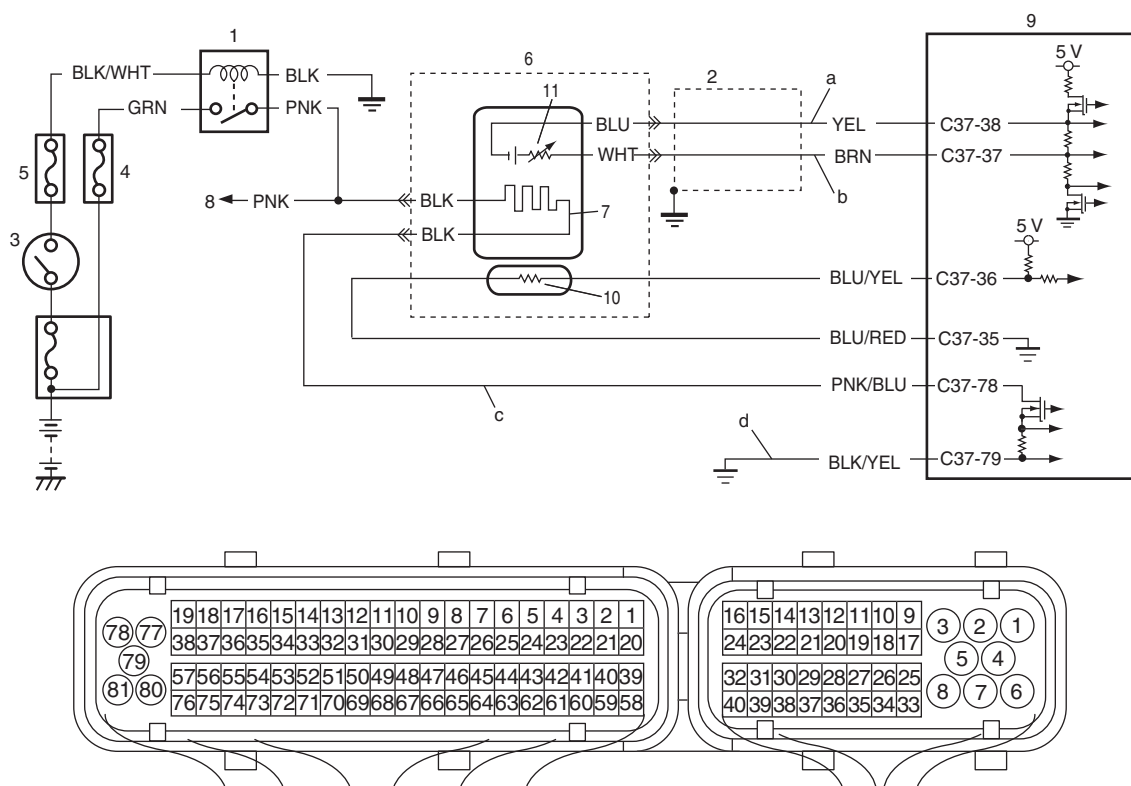Wiring Diagram

I6JB01110096-01

a. Signal (+) circuit of A/F sensor (bank-2)	1. HO2S heater relay	5. IG COIL fuse	9. ECM
b. Signal (-) circuit of A/F sensor (bank-2)	2. Shield wire	6. A/F sensor	10. Adjusting resistor (if equipped)
c. Control circuit of A/F sensor (bank-2) heater	3. Ignition Switch	7. A/F sensor heater	11. A/F sensor element
d. Control ground circuit of A/F sensor (bank-2) heater	4. O2 HTR fuse	8. To A/F sensor (bank-1), HO2S (bank-1 and -2) (if equipped)	

A/F Sensor Description

Refer to "A/F Sensor Description"

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Impedance of A/F sensor element is higher than 67 Ω for more than 20 sec. even though A/F sensor heater is turned ON for more than specified time with engine running. (2 driving cycle detection logic)	<ul style="list-style-type: none"> A/F sensor circuit A/F sensor ECM

DTC Confirmation Procedure

- 1) With ignition switch turned OFF, connect scan tool to DLC.
- 2) Turn ON ignition switch and clear DTC.
- 3) Start engine and warm up to normal operating temperature.
- 4) Run engine at idle speed for 1 min. or more.
- 5) Check DTC and pending DTC.

DTC Troubleshooting


NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	A/F sensor signal check 1) Connect scan tool with ignition switch turned OFF 2) Warm up engine to normal operating temperature and keep it at 2000 r/min. for 60 sec. 3) Repeat racing engine (Repeat depressing accelerator pedal 5 to 6 times continuously to enrich A/F mixture and take foot off from pedal to enlean it). 4) Check for A/F sensor (bank-2) output current displayed on scan tool. <i>Does A/F sensor output current between -0.2 mA and 0.2 mA?</i>	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".	Go to Step 3.
3	A/F sensor circuit check 1) Disconnect connector from A/F sensor (bank-2) with ignition switch turned OFF. 2) Check for proper terminal connection to A/F sensor (bank-2) connector. 3) If connections are OK, check that A/F sensor circuit is as follows. <ul style="list-style-type: none"> Wiring harness resistance of each "Signal (+) circuit of A/F sensor (bank-2)", "Signal (-) circuit of A/F sensor (bank-2)", "Control circuit of A/F sensor (bank-2) heater" and "Control ground circuit of A/F sensor (bank-2) heater" is less than $1\ \Omega$. <i>Are they in good condition?</i>	Go to Step 4.	Repair or replace defective wiring harness.
4	A/F sensor heater check 1) Check heater resistance of A/F sensor (bank-2) referring to "Air Fuel Ratio (A/F) Sensor On-Vehicle Inspection in Section 1C". <i>Is A/F sensor heater in good condition?</i>	Substitute a known good ECM and recheck. If ECM OK, replace A/F sensor (bank-2).	Repair A/F sensor (bank-2).

DTC P0157 / P0158: O2 Sensor Circuit Low Voltage / High Voltage (Sensor-2, Bank-2)

S6JB0B1104032

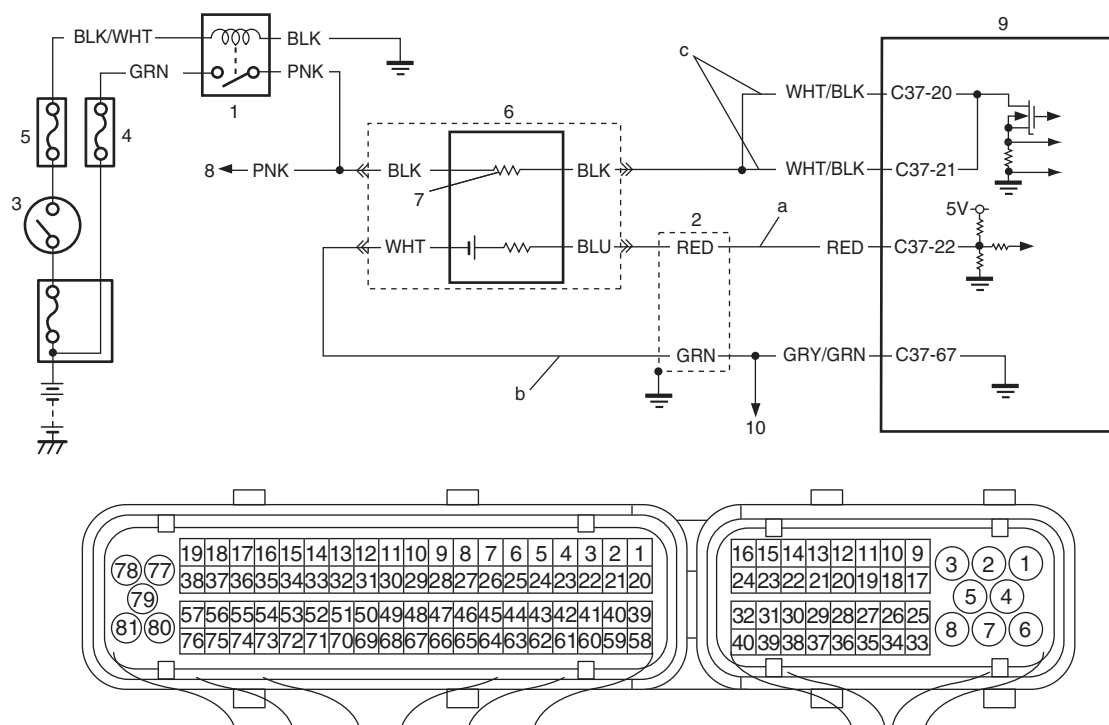System and Wiring Diagram

I6JB01110097-01

a. Signal circuit of HO2S (bank-2)	2. Shield wire	6. HO2S (bank-2)	10. To other sensors
b. Ground circuit of HO2S (bank-2)	3. Ignition switch	7. HO2S heater	
c. Control circuit of HO2S (bank-2) heater	4. O2 HTR fuse	8. To A/F sensor (bank-1 and -2), HO2S (bank-1)	
1. HO2S heater relay	5. IG COIL fuse	9. ECM	

NOTE

When DTC P0138 and P0158 are indicated together, it is possible that HO2S ground circuit ("GRN") wire is open.

When DTC P0138, P0158, P0107, P0113, P0118 and P0553 are indicated together, it is possible that sensor ground circuit ("GRY/GRN") wire is open.

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P0157 O2 Sensor Circuit Low Voltage (Sensor-2, Bank-2): Circuit voltage of HO2S (bank-1) is lower than 15 mV for more than 60 sec. continuously with engine running except for fuel cut condition. (2 driving cycle detection logic)	<ul style="list-style-type: none"> HO2S circuit HO2S ECM
DTC P0158 O2 Sensor Circuit High Voltage (Sensor-2, Bank-2): Circuit voltage of HO2S (bank-1) is higher than 1.2 V for more than 20 sec. continuously with engine running. (2 driving cycle detection logic)	

DTC Confirmation Procedure**NOTE**

Check to make sure that following conditions are satisfied when using this "DTC Confirmation Procedure".

- Engine coolant temperature: higher than -10°C (14°F).
- The following DTCs are not detected: ECT sensor, MAF sensor, A/F sensor heater and IAT sensor.

- 1) With ignition switch turned OFF, connect scan tool to DLC.
- 2) Turn ON ignition switch and clear DTC.
- 3) Start engine and warm up to normal operating temperature.
- 4) Run engine at idle speed for 1 min. or more.
- 5) Check DTC and pending DTC.

DTC Troubleshooting

NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	HO2S signal check <ol style="list-style-type: none"> 1) Connect scan tool with ignition switch turned OFF. 2) Warm up engine to normal operating temperature and keep it at 2000 r/min. for 60 sec. 3) Repeat racing engine (Repeat depressing accelerator pedal 5 to 6 times continuously to enrich A/F mixture and take foot off from pedal to enlean it). 4) Check for HO2S (bank-2) output voltage displayed on scan tool. <p><i>Does HO2S output voltage between 0.3 V and 0.8 V?</i></p>	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".	Go to Step 3.
3	HO2S circuit check <ol style="list-style-type: none"> 1) Disconnect connectors from HO2S (bank-2) and ECM with ignition switch turned OFF. 2) Check for proper terminal connection to HO2S (bank-2) connector and ECM connector. 3) If connections are OK, check that HO2S (bank-2) circuit is as follows. <ul style="list-style-type: none"> • Wiring harness resistance of each "Signal circuit of HO2S (bank-2)", "Ground circuit of HO2S (bank-2)" and "Control circuit of HO2S (bank-2) heater" is less than 1 Ω. • Insulation resistance between "Signal circuit of HO2S (bank-2)" and vehicle body ground is infinity. • Insulation resistance of wire harness is infinity between "Signal circuit of HO2S (bank-2)" terminal and each other terminal at HO2S (bank-2) connector. • Circuit voltage between "Signal circuit of HO2S (bank-2)" and vehicle body ground is 0 V with ignition switch turned ON. <p><i>Are they in good condition?</i></p>	Go to Step 4.	Repair or replace defective wiring harness.
4	HO2S heater check <ol style="list-style-type: none"> 1) Check heater resistance of HO2S (bank-2) referring to "Heated Oxygen Sensor (HO2S-2) Heater On-Vehicle Inspection (If Equipped) in Section 1C". <p><i>Is HO2S heater in good condition?</i></p>	Substitute a known good ECM and recheck. If ECM OK, replace HO2S (bank-2).	Replace HO2S (bank-2).

DTC P0160: O2 Sensor Circuit No Activity Detected (Sensor-2, Bank-2)**Wiring Diagram**

Refer to “DTC P0157 / P0158: O2 Sensor Circuit Low Voltage / High Voltage (Sensor-2, Bank-2)”

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Circuit voltage of HO2S (bank-2) is within 0.27 V – 0.35 V for more than 120 sec. continuously while A/F (fuel trim) is shifted rich to lean and lean to rich with specified diagnosis frequency under specified running, or circuit voltage of HO2S (bank-2) is out of specified range (0.2 V – 0.45 V) while engine is running with warmed it up from cold start (ECT is less than 40 °C). (2 driving cycle detection logic)	<ul style="list-style-type: none"> • HO2S circuit • HO2S • ECM

▲ WARNING

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and be very careful during testing to avoid occurrence of an accident.
- Road test should be carried out by 2 persons, a driver and a tester, on a level road.

NOTE

Check to make sure that following conditions are satisfied when using this “DTC Confirmation Procedure”.

- Engine coolant temperature: 70 °C (158 °F) or more.
- Engine coolant temperature at engine start: –10 °C (14 °F) or more.
- Intake air temperature: –10 °C (14 °F) or more.
- Atmospheric pressure: higher than 75 kPa (560 mmHg) (Altitude: lower than 2790 m (9150 ft)).
- The following DTCs are not detected: MAF sensor, ECT sensor, IAT sensor, Fuel system, A/F sensor, TP sensor, HO2S sensor heater and HO2S sensor (other than DTC P0160).

DTC Confirmation Procedure

- 1) With ignition switch turned OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC using scan tool.
- 3) Start engine and warm up to normal operating temperature.
- 4) Drive vehicle at 40 mph (60 km/h) or higher. (engine speed: 2500 – 3000 r/min.)
- 5) Keep above vehicle speed for 4 min. or more. (Throttle valve opening is kept constant in this step.)
- 6) Check if DTC and pending DTC exist by using scan tool. If not, check if oxygen sensor monitoring test has been completed by using scan tool. If not in both of above checks (i.e., no DTC and pending DTC and oxygen sensor monitoring test not completed), check vehicle condition (environmental) and repeat Step 3) through 6).

DTC Troubleshooting


NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	HO2S signal check 1) Connect scan tool with ignition switch turned OFF. 2) Warm up engine to normal operating temperature and keep it at 2000 r/min. for 60 sec. 3) Repeat racing engine (Repeat depressing accelerator pedal 5 to 6 times continuously to enrich A/F mixture and take foot off from pedal to enlean it). 4) Check for HO2S (bank-2) output voltage displayed on scan tool. <i>Does HO2S output voltage between 0.5 V and 0.8 V?</i>	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".	Go to Step 3.
3	HO2S circuit check 1) Disconnect connectors from HO2S (bank-2) and ECM with ignition switch turned OFF. 2) Check for proper terminal connection to HO2S (bank-2) connector and ECM connector. 3) If connections are OK, check that HO2S (bank-2) circuit is as follows. <ul style="list-style-type: none"> • Wiring harness resistance of each "Signal circuit of HO2S (bank-2)", "Ground circuit of HO2S (bank-2)" and "Control circuit of HO2S (bank-2) heater" is less than 1 Ω. • Insulation resistance between "Signal circuit of HO2S (bank-2)" and vehicle body ground is infinity. • Insulation resistance of wire harness is infinity between "Signal circuit of HO2S (bank-2)" terminal and each other terminal at HO2S (bank-2) connector. • Circuit voltage between "Signal circuit of HO2S (bank-2)" and vehicle body ground is 0 V with ignition switch turned ON. <i>Are they in good condition?</i>	Go to Step 4.	Repair or replace defective wiring harness.
4	HO2S heater check 1) Check heater resistance of HO2S (bank-2) referring to "Heated Oxygen Sensor (HO2S-2) Heater On-Vehicle Inspection (If Equipped) in Section 1C". <i>Is HO2S heater in good condition?</i>	Substitute a known good ECM and recheck. If ECM OK, replace HO2S (bank-2).	Replace HO2S (bank-2).

DTC P0171 / P0172: System Too Lean / Too Rich (Sensor-1, Bank-1)

S6JB0B1104034

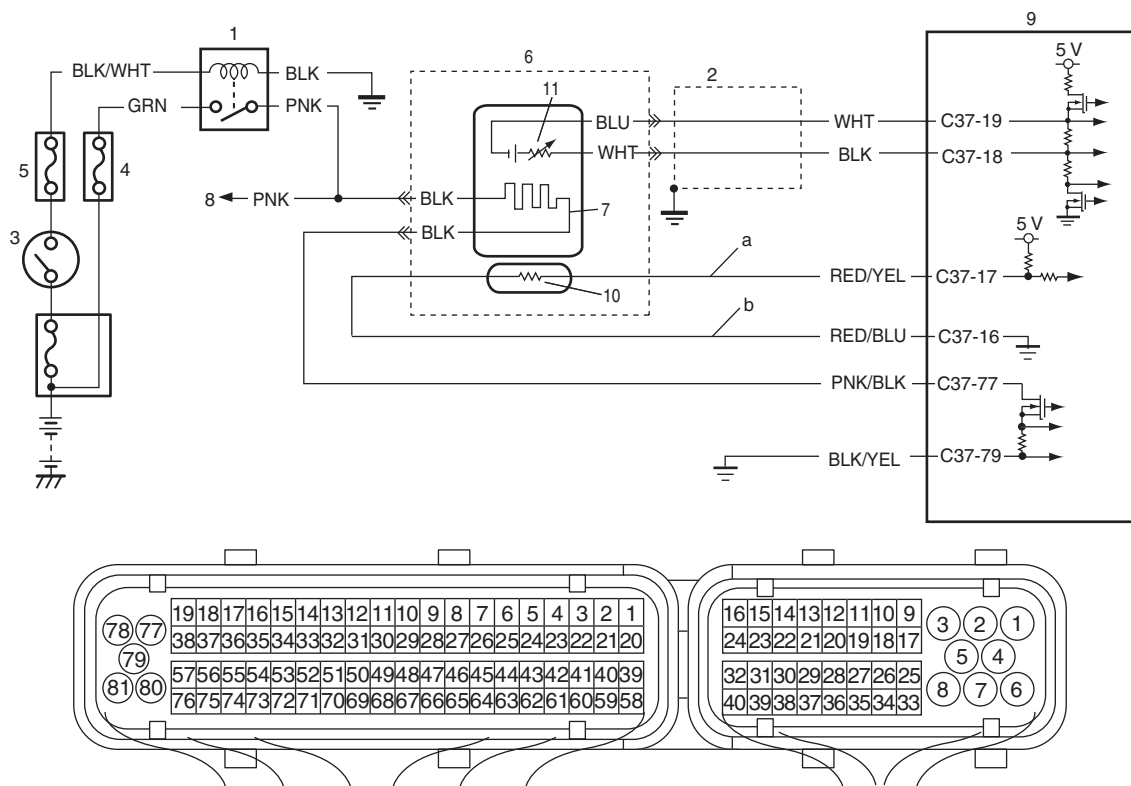System and Wiring Diagram

I6JB01110098-01

a. Adjusting resistor (+) circuit of A/F sensor (bank-1)	3. Ignition Switch	7. A/F sensor heater	11. A/F sensor element
b. Adjusting resistor (-) circuit of A/F sensor (bank-1)	4. O2 HTR fuse	8. To A/F sensor (bank-2), HO2S (bank-1 and -2)	
1. HO2S heater relay	5. IG COIL fuse	9. ECM	
2. Shield wire	6. A/F sensor	10. Adjusting resistor (if equipped)	

A/F Sensor Description

Refer to "A/F Sensor Description"

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P0171 System Too Lean (Sensor-1, Bank-1): Total fuel trim (short term + long term fuel trim) is larger than 127% for more than 20 sec, or short term fuel trim is larger than 130% for more than 30 sec. (2 driving cycle detection logic)	<ul style="list-style-type: none"> • Vacuum leakage • Exhaust gas leakage • Fuel pressure out of specification • Fuel injector malfunction • A/F sensor malfunction • MAF sensor malfunction • Intake & exhaust valve clearance • Intake & exhaust valve • Valve timing • ECM
DTC P0172 System Too Rich (Sensor-1, Bank-1): Total fuel trim (short term + long term fuel trim) is smaller than 71% for more than 20 sec, or short term fuel trim is larger than 70% for more than 30 sec. (2 driving cycle detection logic)	

DTC Confirmation Procedure

▲ WARNING

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and be very careful during testing to avoid occurrence of an accident.
- Road test should be carried out by 2 persons, a driver and a tester, on a level road.

NOTE

Check to make sure that the following conditions are satisfied when using this “DTC Confirmation Procedure”.

- Intake air temperature: -10°C (14°F) to 80°C (176°F).
- Engine coolant temperature: 30°C (86°F) or more.
- Altitude (barometric pressure): 2400 m, 8000 ft or less (560 mmHg, 75 kPa or more).
- The following DTC is not detected: ECT sensor, CKP sensor, IAT sensor, MAP sensor, A/F sensor, A/F sensor heater, TP sensor, barometric pressure sensor, MAF sensor, EGR system and CMP sensor.

- 1) With ignition switch turned OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC using scan tool.
- 3) Start engine and warm up to normal operating temperature.
- 4) Drive vehicle at 40 mph (60 km/h) or higher. (engine speed: 2500 – 3000 r/min.)
- 5) Keep above vehicle speed for 4 min. or more. (Throttle valve opening is kept constant in this step.)
- 6) Check if DTC and pending DTC exist by using scan tool. If not, check if oxygen sensor monitoring test has been completed by using scan tool. If not in both of above checks (i.e., no DTC and pending DTC and oxygen sensor monitoring test not completed), check vehicle condition (environmental) and repeat Step 3) through 6).

DTC Troubleshooting

NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to “Precautions for DTC Troubleshooting”.


Step	Action	Yes	No
1	Was “Engine and Emission Control System Check” performed?	Go to Step 2.	Go to “Engine and Emission Control System Check”.
2	Intake system and exhaust system for leakage check 1) Check intake system and exhaust system for leakage. <i>Are intake system and exhaust system in good condition?</i>	Go to Step 3.	Repair or replace defective parts.
3	Fuel pressure check 1) Check fuel pressure referring to “Fuel Pressure Check”. <i>Is check result satisfactory?</i>	Go to Step 4.	Repair or replace defective parts.
4	Fuel injectors and its circuit check 1) Check fuel injectors referring to “Fuel Injector Inspection in Section 1G”. <i>Is check result satisfactory?</i>	Go to Step 5.	Faulty injection(s) or its circuit.
5	MAF sensor visual inspection 1) Check MAF sensor and air intake system. <ul style="list-style-type: none"> • Objects which block measuring duct and resistor of MAF sensor. • Other air flow which does not pass MAF sensor. <i>Are they in good condition?</i>	Go to Step 6.	Repair or replace defective part.

1A-107 Engine General Information and Diagnosis:

Step	Action	Yes	No
6	MAF sensor for performance check 1) With ignition switch turned OFF, connect scan tool to DLC. 2) Start engine and warm up to normal operating temperature. 3) Check MAF value using scan tool (Refer to "Scan Tool Data" for normal value.). <i>Is each value within specified range?</i>	Go to Step 7.	Go to "DTC P0101: Mass Air Flow Circuit Range / Performance".
7	A/F sensor adjusting resistor circuit check 1) Disconnect connectors from A/F sensor (bank-1) and ECM with ignition switch turned OFF. 2) Check for proper terminal connection to A/F sensor (bank-1) connector and ECM connector. 3) If connections are OK, check that A/F sensor (bank-1) adjusting resistor circuit is as follows. <ul style="list-style-type: none">• Wiring harness resistance of each "Adjusting resistor (+) circuit of A/F sensor (bank-1)" and "Adjusting resistor (–) circuit of A/F sensor (bank-1)" is less than 1 Ω.• Insulation resistance between "Adjusting resistor (+) circuit of A/F sensor (bank-1)" and vehicle body ground is infinity.• Insulation resistance between "Adjusting resistor (+) circuit of A/F sensor (bank-1)" and "Adjusting resistor (–) circuit of A/F sensor (bank-1)" is infinity.• Circuit voltage between "Adjusting resistor (+) circuit of A/F sensor (bank-1)" and vehicle body ground is 0 V with ignition switch turned ON. <i>Are they in good condition?</i>	Go to Step 8.	Repair or replace defective wiring harness.
8	A/F sensor adjusting resistor check 1) Check for resistance of A/F sensor (bank-1) adjusting resistor referring to "Air Fuel Ratio (A/F) Sensor On-Vehicle Inspection in Section 1C". <i>Is check result satisfactory?</i>	Go to Step 9.	Replace A/F sensor (bank-1).
9	Valves and valves clearance check 1) Check bank-1 intake & exhaust valve and valve clearance referring to "Valve Lash (Clearance) Inspection in Section 1D" and "Valves and Valve Guides Inspection in Section 1D". <i>Is check result satisfactory?</i>	Substitute a known good ECM and recheck. If ECM OK, replace A/F sensor (bank-1).	Repair or replace defective parts.

DTC P0174 / P0175: System Too Lean / Too Rich (Sensor-1, Bank-2)

S6JB0B1104035

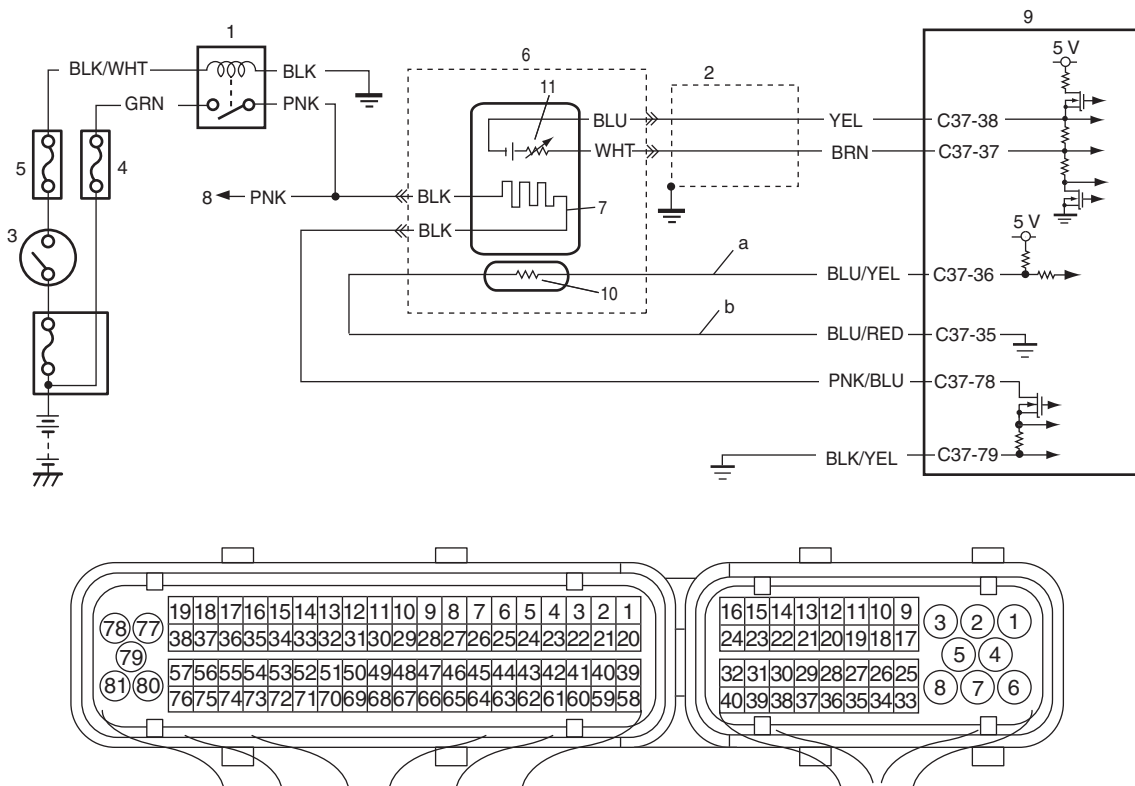System and Wiring Diagram

I6JB01110099-01

a. Adjusting resistor (+) circuit of A/F sensor (bank-2)	3. Ignition Switch	7. A/F sensor heater	11. A/F sensor element
b. Adjusting resistor (-) circuit of A/F sensor (bank-2)	4. O2 HTR fuse	8. To A/F sensor (bank-1), HO2S (bank-1 and -2)	
1. HO2S heater relay	5. IG COIL fuse	9. ECM	
2. Shield wire	6. A/F sensor	10. Adjusting resistor (if equipped)	

A/F Sensor Description

Refer to "A/F Sensor Description"

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P0174 System Too Lean (Sensor-1, Bank-2): Total fuel trim (short term + long term fuel trim) is larger than 127% for more than 20 sec, or short term fuel trim is larger than 130% for more than 30 sec. (2 driving cycle detection logic)	<ul style="list-style-type: none"> Vacuum leakage Exhaust gas leakage Fuel pressure out of specification Fuel injector malfunction A/F sensor malfunction MAF sensor malfunction Intake & exhaust valve clearance Intake & exhaust valve Valve timing ECM
DTC P0175 System Too Rich (Sensor-1, Bank-2): Total fuel trim (short term + long term fuel trim) is smaller than 71% for more than 20 sec, or short term fuel trim is larger than 70% for more than 30 sec. (2 driving cycle detection logic)	

DTC Confirmation Procedure

⚠ WARNING

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and be very careful during testing to avoid occurrence of an accident.
- Road test should be carried out with 2 persons, a driver and a tester, on a level road.

NOTE

Check to make sure that the following conditions are satisfied when using this “DTC Confirmation Procedure”.

- Intake air temperature: -10°C (14°F) to 80°C (176°F).
- Engine coolant temperature: 30°C (86°F) or more.
- Altitude (barometric pressure): 2400 m, 8000 ft or less (560 mmHg, 75 kPa or more).
- The following DTC is not detected: ECT sensor, CKP sensor, IAT sensor, MAP sensor, A/F sensor, A/F sensor heater, TP sensor, barometric pressure sensor, MAF sensor, EGR system and CMP sensor.

- 1) With ignition switch OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC using scan tool.
- 3) Start engine and warm up to normal operating temperature.
- 4) Drive vehicle at 40 mph (60 km/h) or higher. (engine speed: 2500 – 3000 r/min.)
- 5) Keep above vehicle speed for 4 min. or more. (Throttle valve opening is kept constant in this step.)
- 6) Check if DTC and pending DTC exist by using scan tool. If not, check if oxygen sensor monitoring test has been completed by using scan tool. If not in both of above checks (i.e., no DTC and pending DTC and oxygen sensor monitoring test not completed), check vehicle condition (environmental) and repeat Step 3) through 6).

DTC Troubleshooting

NOTE


Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to “Precautions for DTC Troubleshooting”.

Step	Action	Yes	No
1	Was “Engine and Emission Control System Check” performed?	Go to Step 2.	Go to “Engine and Emission Control System Check”.
2	Intake system and exhaust system for leakage check 1) Check intake system and exhaust system for leakage. <i>Are intake system and exhaust system in good condition?</i>	Go to Step 3.	Repair or replace defective parts.
3	Fuel pressure check 1) Check fuel pressure referring to “Fuel Pressure Check”. <i>Is check result satisfactory?</i>	Go to Step 4.	Repair or replace defective parts.
4	Fuel injectors and its circuit check 1) Check fuel injectors referring to “Fuel Injector Inspection in Section 1G”. <i>Is check result satisfactory?</i>	Go to Step 5.	Faulty injector(s) or its circuit.
5	MAF sensor visual inspection 1) Check MAF sensor and air intake system. <ul style="list-style-type: none"> • Objects which block measuring duct and resistor of MAF sensor. • Other air flow which does not pass MAF sensor. <i>Are they in good condition?</i>	Go to Step 6.	Repair or replace defective part.

Step	Action	Yes	No
6	MAF sensor for performance check 1) With ignition switch turned OFF, connect scan tool to DLC. 2) Start engine and warm up to normal operating temperature. 3) Check MAF value using scan tool (Refer to "Scan Tool Data" for normal value.). <i>Is each value within specified range?</i>	Go to Step 7.	Go to "DTC P0101: Mass Air Flow Circuit Range / Performance".
7	A/F sensor adjusting resistor circuit check 1) Disconnect connectors from A/F sensor (bank-2) and ECM with ignition switch turned OFF. 2) Check for proper terminal connection to A/F sensor (bank-2) connector and ECM connector. 3) If connections are OK, check that A/F sensor (bank-2) adjusting resistor circuit is as follows. <ul style="list-style-type: none"> Wiring harness resistance of each "Adjusting resistor (+) circuit of A/F sensor (bank-2)" and "Adjusting resistor (-) circuit of A/F sensor (bank-2)" is less than 1 Ω. Insulation resistance between "Adjusting resistor (+) circuit of A/F sensor (bank-2)" wire terminal and vehicle body ground is infinity. Insulation resistance between "Adjusting resistor (+) circuit of A/F sensor (bank-2)" and "Adjusting resistor (-) circuit of A/F sensor (bank-2)" is infinity. Circuit voltage between "Adjusting resistor (+) circuit of A/F sensor (bank-2)" and vehicle body ground is 0 V with ignition switch tuned ON. <i>Are they in good condition?</i>	Go to Step 8.	Repair or replace defective wiring harness.
8	A/F sensor adjusting resistor check 1) Check for resistance of A/F sensor (bank-2) adjusting resistor referring to "Air Fuel Ratio (A/F) Sensor On-Vehicle Inspection in Section 1C". <i>Is check result satisfactory?</i>	Go to Step 9.	Replace A/F sensor (bank-2).
9	Valves and valves clearance check 1) Check bank-2 intake & exhaust valve and valve clearance referring to "Valve Lash (Clearance) Inspection in Section 1D" and "Valves and Valve Guides Inspection in Section 1D". <i>Is check result satisfactory?</i>	Substitute a known good ECM and recheck. If ECM OK, replace A/F sensor (bank-2).	Repair or replace defective parts.

DTC P0222 / P0223: Throttle Position Sensor (Sub) Circuit Low/High

S6JB0B1104036

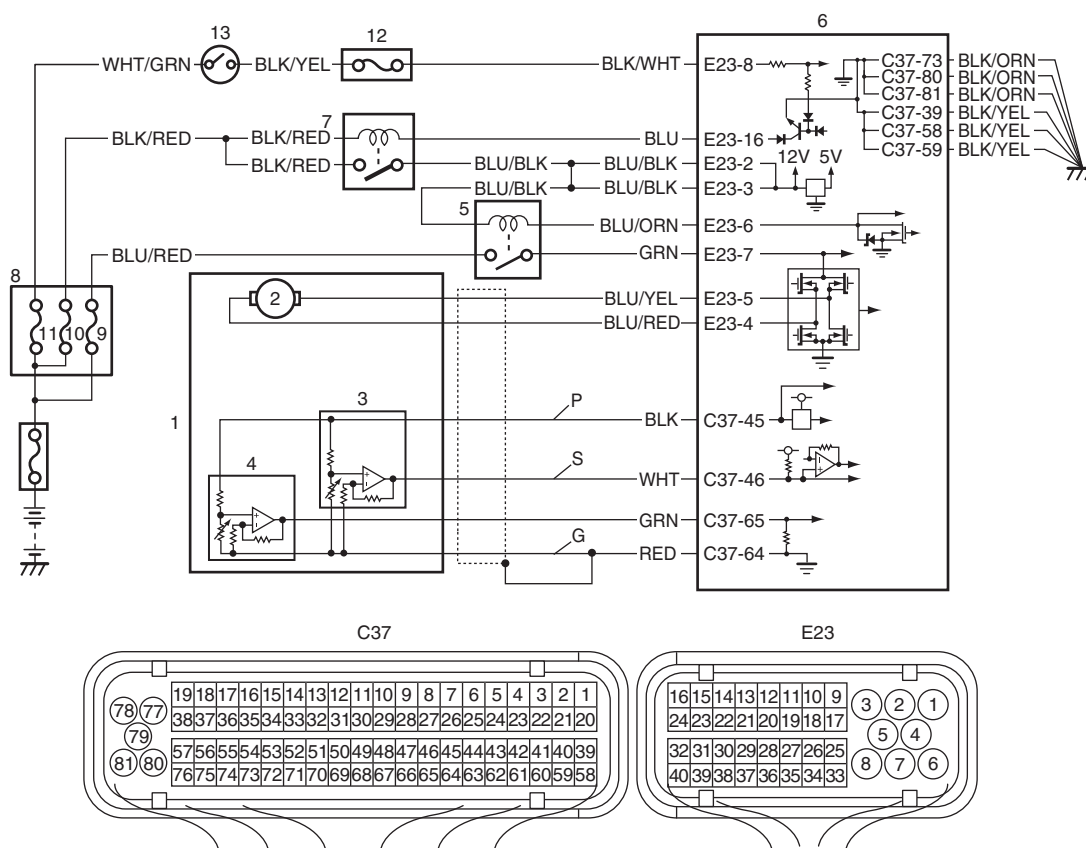Wiring Diagram

I6JB01110034-02

P: TP sensor power supply circuit	2. Throttle actuator	6. ECM	10. "FI" fuse
S: TP sensor (sub) signal circuit	3. Throttle position sensor (main)	7. Main relay	11. "IGN" fuse
G: TP sensor ground circuit	4. Throttle position sensor (sub)	8. Fuse box No.2	12. "IG COIL" fuse
1. Electric throttle body assembly	5. Throttle actuator control relay	9. "THR MOT" fuse	13. Ignition switch

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DCT P0222: Throttle Position Sensor (Sub) Circuit Low Output voltage of TP sensor (sub) is less than 0.55 V. (1 driving cycle detection logic)	<ul style="list-style-type: none"> TP sensor (sub) circuit Electric throttle body assembly ECM
DCT P0223: Throttle Position Sensor (Sub) Circuit High Output voltage of TP sensor (sub) is more than 4.82 V. (1 driving cycle detection logic)	

DTC Confirmation Procedure

- 1) With ignition switch turned OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Start engine and it for 10 seconds.
- 4) Check DTC by using scan tool.

DTC Troubleshooting

NOTE

- Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".
- When DTC P0122 and P0222 are indicated together, it is possible that TP sensor power supply circuit is open.
- When DTC P0123 and P0223 are indicated together, it is possible that TP sensor power supply circuit is shorted to power circuit and/or TP sensor ground circuit is open.

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	TP sensor and its circuit check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ON ignition switch, check "TP Sensor 2 Volt" displayed on scan tool when accelerator pedal is idle position and fully depressed. <i>Is displayed TP sensor value as described voltage in "Scan Tool Data"?</i>	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".	Go to Step 3.
3	Wire harness check 1) Turn ignition switch OFF position. 2) Disconnect connectors from TP sensor and ECM. 3) Check for proper terminal connection to electric throttle body assembly and ECM connectors. 4) If connections are OK, check that TP sensor (sub) circuit is as follows. <ul style="list-style-type: none"> • Wiring harness resistance of each TP sensor (sub) signal, power supply and ground circuit is less than 3 Ω. • Insulation resistance of each TP sensor (sub) signal and power supply circuit is infinity between TP sensor connector and vehicle body ground. • Insulation resistance of wire harness is infinity between TP sensor (sub) signal terminal and each other terminal at TP sensor connector. • Circuit voltage of each TP sensor (sub) signal, power supply and ground circuit is 0 – 1 V with ignition switch turned ON. <i>Are they in good condition?</i>	Go to Step 4.	Repair or replace defective wire harness.
4	TP sensor power supply voltage check 1) Connect connectors to ECM. 2) Turn ignition switch ON position. 3) Check that TP sensor power supply circuit voltage is 5 V between TP sensor power supply terminal and TP sensor ground terminal of TP sensor connector. <i>Is it in good condition?</i>	Go to Step 5.	Repair or replace TP sensor power supply circuit. If circuit is OK, substitute a known good ECM and recheck.

1A-113 Engine General Information and Diagnosis:

Step	Action	Yes	No
5	TP sensor check 1) Check TP sensor for performance referring to “Electric Throttle Body Assembly On-Vehicle Inspection in Section 1C”. <i>Is it in good condition?</i>	Substitute a known good ECM and recheck.	Replace electric throttle body assembly.

DTC P0300 / P0301 / P0302 / P0303 / P0304 / P0305 / P0306: Misfire Detected

S6JB0B1104037

System Description

ECM measure the angle of the crankshaft based on the pulse signal from the CKP sensor and CMP sensor for each cylinder. If it detects a large change in the angle speed of the crankshaft, it concludes occurrence of a misfire. When the number of misfire is counted by ECM beyond the DTC detecting condition, it determine the cylinder where the misfire occurred and output it as DTC.

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
P0300: Random <ul style="list-style-type: none"> Misfire, which causes catalyst to overheat during 200 engine revolutions, is detected at 2 or more cylinders. (MIL flashes as long as this misfire occurs continuously.) Misfire, which affects exhaust emission adversely during 1000 engine revolutions, is detected at 2 or more cylinders. (2 driving cycle detection logic)	<ul style="list-style-type: none"> Ignition system Fuel injector and its circuit Fuel pressure EGR system (if equipped) Fuel level sensor Abnormal air drawn in Engine compression Valve lash (clearance) Valve timing Fuel shortage Exhaust system Fuel of poor quality
P0301: No.1 cylinder, P0302: No.2 cylinder, P0303: No.3 cylinder, P0304: No.4 cylinder, P0305: No.5 cylinder, P0306: No.6 cylinder <ul style="list-style-type: none"> Misfire, which causes catalyst to overheat during 200 engine revolutions, is detected at 1 cylinder. (MIL flashes as long as this misfire occurs continuously.) Misfire, which affects exhaust emission adversely during 1000 engine revolutions, is detected at 1 cylinder. (2 driving cycle detection logic)	

DTC Confirmation Procedure**▲ WARNING**

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and very careful during testing to avoid occurrence of an accident.
- Road test should be carried out with 2 persons, a driver and a tester, on a level road.

NOTE

Check to make sure that the following conditions are satisfied when using this “DTC Confirmation Procedure”.

- Atmospheric pressure: higher than 75 kpa (560 mmHg) (Altitude: lower than 2790 m (9150 ft)).
- Engine coolant temperature: higher than -10 °C (14 °F).
- Make sure that the ignition timing is good referring to “Ignition Timing Inspection in Section 1H”.

- With ignition switch OFF, connect scan tool.
- Turn ON ignition switch and clear DTC by using scan tool if any.
- Drive vehicle more than 37 mph (60 km/h) for more than 1 minute.
- Stop vehicle and check DTC and pending DTC by using scan tool.


DTC Troubleshooting

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	Does fuel level meter indicate "E" level (empty)?	Add fuel and recheck.	Go to Step 3.
3	Air intake system and exhaust system inspection 1) Check air intake system and exhaust system for leakage. <i>Are intake system and exhaust system in good condition?</i>	Go to Step 4.	Repair or replace.
4	Ignition system inspection 1) Check spark plug and ignition spark of cylinder where misfire occurs, referring to "Spark Plug Inspection in Section 1H" and "Ignition Spark Check in Section 1H". <i>Is it in good condition?</i>	Go to Step 5.	Faulty ignition coil, wire harness or spark plug. If OK, substitute a known good ECM and recheck.
5	Fuel injector and its circuit check 1) Check fuel injector circuit referring to "Fuel Injector Circuit Check". <i>Is it in good condition?</i>	Go to Step 6.	Repair or replace.
6	Fuel pressure inspection 1) Check fuel pressure referring to "Fuel Pressure Check". <i>Is check result satisfactory?</i>	Go to Step 7.	Repair or replace.
7	Fuel injector inspection 1) Check fuel injector(s) referring to "Fuel Injector Inspection in Section 1G". <i>Is check result satisfactory?</i>	Go to Step 8.	Replace.
8	EGR system inspection (if equipped) 1) Check EGR system referring to "EGR System Inspection (If Equipped) in Section 1B". <i>Is check result satisfactory?</i>	Go to Step 9.	Repair or replace.
9	Fuel level sensor inspection 1) Check fuel level sensor referring to "Fuel Level Sensor Inspection in Section 9C". <i>Is check result satisfactory?</i>	Go to Step 10.	Repair or replace.
10	Engine mechanical systems check 1) Check engine mechanical systems. <ul style="list-style-type: none"> • Engine compression: Refer to "Compression Check in Section 1D". • Valve lash: Refer to "Valve Lash (Clearance) Inspection in Section 1D". • Valve timing: Refer to "LH (No.1) Bank 2nd Timing Chain and Chain Tensioner Removal and Installation in Section 1D" and "1st Timing Chain and Chain Tensioner Removal and Installation in Section 1D". <i>Are they in good condition?</i>	Substitute a known good ECM and recheck.	Repair or replace.

DTC P0327 / P0328: Knock Sensor Circuit Low / High

S6JB0B1104038

Wiring Diagram

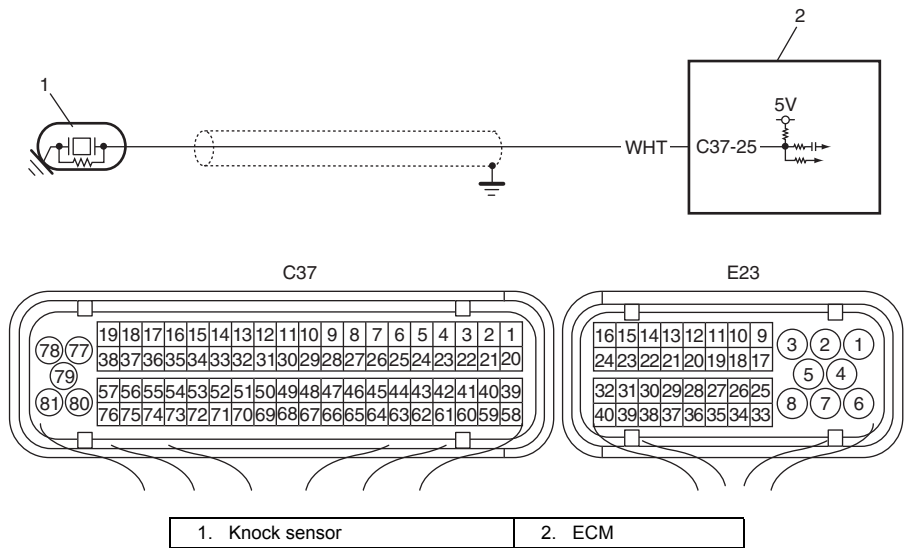

I5JB0C110011-01

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P0327: Knock Sensor Circuit Low Output voltage of knock sensor is less than 1 V for more than 255 ignition times continuously. (1 driving cycle detection logic)	<ul style="list-style-type: none">Knock sensor and its circuitECM
DTC P0328: Knock Sensor Circuit High Output voltage of knock sensor is more than 4 V for more than 255 ignition times continuously. (1 driving cycle detection logic)	

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch turned OFF.
- 2) Turn ON ignition switch and clear DTC pending DTC and freeze frame data by using scan tool.
- 3) Start engine and run it for 1 minute.
- 4) Check DTC by using scan tool.

DTC Troubleshooting


NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	Knock sensor circuit voltage check 1) Turn ignition switch OFF position. 2) Disconnect connector from knock sensor. 3) Check for proper terminal connection to knock sensor and ECM connectors 4) If connections are OK, turn ignition switch to ON position. 5) Check that circuit voltage is 5 V between knock sensor signal circuit of knock sensor connector and vehicle body ground. <i>Is it in good condition?</i>	Replace knock sensor.	Go to Step 3.
3	Wire harness check 1) Disconnect connector from ECM with ignition switch turned OFF. 2) Check that knock sensor signal circuit is as follows. <ul style="list-style-type: none"> • Wiring harness resistance of knock sensor signal circuit is less than 3 Ω. • Insulation resistance of knock sensor signal circuit is infinity between knock sensor connector and vehicle body ground. • Circuit voltage of knock sensor signal circuit is 0 – 1 V with ignition switch turned ON. <i>Are they in good condition?</i>	Substitute a known good ECM and recheck.	Repair or replace defective wire harness.

DTC P0335: Crankshaft Position Sensor Circuit

S6JB0B1104039

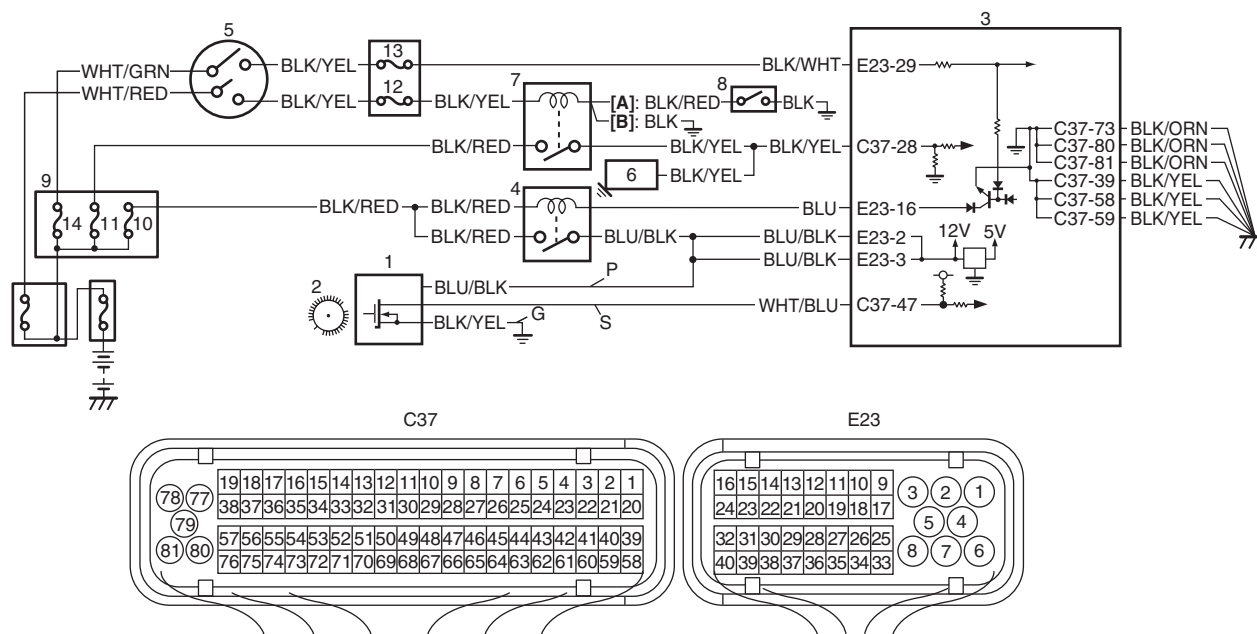Wiring Diagram

I6JB01110036-02

[A]: For A/T model	3. ECM	10. "FI" fuse
[B]: For M/T model	4. Main relay	11. "ST" fuse
P: CKP sensor power supply circuit	5. Ignition switch	12. "ST SIG" fuse
S: CKP sensor signal circuit	6. Starting motor	13. "IG COIL" fuse
G: CKP sensor ground circuit	7. Starting motor control relay	14. "IGN" fuse
1. CKP sensor	8. Transmission range switch (A/T model)	
2. Sensor plate on crankshaft	9. Fuse box No.2	

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
CKP sensor outputs signal of less than 15 pulses even through starting motor switch signal is inputted for more than 3 sec. continuously or CKP sensor outputs signal of less than 3 pulses for more than 0.2 sec. continuously within 2 pulses of CMP sensor signal. (1 driving cycle detection logic)	<ul style="list-style-type: none"> CKP sensor and its circuit CMP sensor and its circuit ECM

DTC Confirmation Procedure

- 1) With ignition switch OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Start engine and run it for 10 sec.
- 4) Check DTC by using scan tool.

DTC Troubleshooting

NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	CKP sensor and connector for proper installation check <i>Is CKP sensor installed properly and connector connected securely?</i>	Go to Step 3.	Correct.
3	CKP sensor power supply voltage check 1) Disconnect connector from CKP sensor with ignition switch turned OFF. 2) Check for proper terminal connection to CKP sensor and ECM connectors. 3) If connections are OK, turn ignition switch to ON position. 4) Check that CKP sensor power supply voltage is battery voltage between CKP sensor connector and vehicle body ground. <i>Is it in good condition?</i>	Go to Step 4.	Repair or replace CKP sensor power supply circuit.
4	Wire harness check 1) Turn ignition switch OFF position. 2) Disconnect connector from ECM. 3) Check that CKP sensor circuit is as follows. • Wiring harness resistance of CKP sensor signal circuit is less than 3 Ω . • Insulation resistance of each CKP sensor signal and ground circuit between CKP sensor connector and vehicle body ground is infinity. • Insulation resistance of wire harness is infinity between CKP sensor signal terminal and each other terminal at CKP sensor connector. • Circuit voltage of each CKP sensor signal circuit and ground circuit is 0 – 1 V with ignition switch turned ON. <i>Are they in good condition?</i>	Go to Step 5.	Repair or replace defective wire harness.
5	CKP sensor signal circuit voltage check 1) Check that CKP sensor signal circuit voltage is 5 V between CKP sensor connector and vehicle body ground. <i>Is it in good condition?</i>	Go to Step 6.	Substitute a known good ECM and recheck.
6	CKP sensor check 1) Check CKP sensor and sensor rotor referring to "Camshaft Position (CMP) Sensor and Crankshaft Position (CKP) Sensor Inspection in Section 1C". <i>Are they in good condition?</i>	Go to Step 7.	Replace CKP sensor and/or sensor rotor.

1A-119 Engine General Information and Diagnosis:

Step	Action	Yes	No
7	CMP sensor and its circuit check 1) Check CMP sensor and its circuit referring to Step 2 to 6 of "DTC P0340: Camshaft Position Sensor Circuit". <i>Are they in good condition?</i>	Substitute a known good ECM and recheck.	Repair or replace.

DTC P0336: Crankshaft Position Sensor Circuit Range / Performance

S6JB0B1104040

Wiring Diagram

Refer to "DTC P0335: Crankshaft Position Sensor Circuit".

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
CKP sensor outputs signal of less than 10 pulses for continuous 3 times within CKP no-teeth reference signal (120° crank angle).	<ul style="list-style-type: none">• CKP sensor and/or sensor rotor• ECM

DTC Confirmation Procedure

- 1) With ignition switch OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Start engine and it for 10 seconds.
- 4) Check DTC by using scan tool.


DTC Troubleshooting

Step	Action	Yes	No
1	<i>Was "Engine and Emission Control System Check" performed?</i>	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	CKP sensor and connector for proper installation check 1) Turn ignition switch to OFF position. 2) Check for proper terminal connection to CKP sensor and ECM connectors. 3) If connections are OK, check CKP sensor for installation condition. <i>Is CKP sensor installed properly?</i>	Go to Step 3.	Repair.
3	CKP sensor check 1) Check CKP sensor and sensor rotor referring to "Camshaft Position (CMP) Sensor and Crankshaft Position (CKP) Sensor Inspection in Section 1C". <i>Are they in good condition?</i>	Substitute a known good ECM and recheck.	Replace CKP sensor and/or sensor rotor.

DTC P0340: Camshaft Position Sensor Circuit

S6JB0B1104041

Wiring Diagram

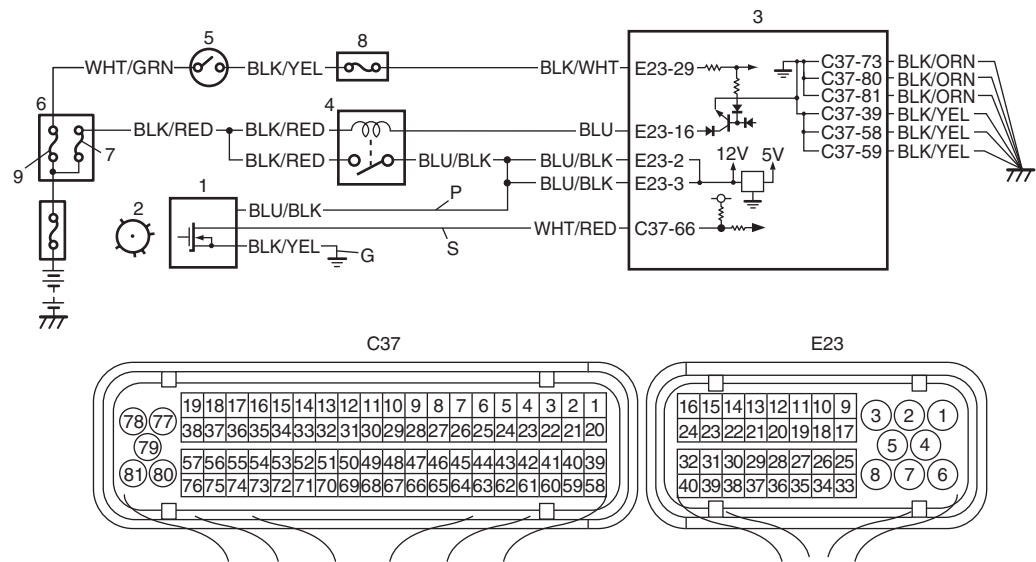

I6JB01110037-03

P: CMP sensor power supply circuit	1. CMP sensor	4. Main relay	7. "FI" fuse
S: CMP sensor signal circuit	2. Signal sensor	5. Ignition switch	8. "IG COIL" fuse
G: CMP sensor ground circuit	3. ECM	6. Fuse box No.2	9. "IGN" fuse

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
CMP sensor outputs signal of less than 3 pulses even through starting motor switch signal is inputted for more than 3 sec. continuously, or CKP no-teeth reference signal (120° crank angle). (1 driving cycle detection logic)	<ul style="list-style-type: none">• CMP sensor and its circuit• CKP sensor and its circuit• ECM

DTC Confirmation Procedure

- 1) With ignition switch OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Crank engine for 10 sec.
- 4) Check DTC by using scan tool.

DTC Troubleshooting

NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	CMP sensor and connector for proper installation check <i>Is CMP sensor installed properly and connector connected securely?</i>	Go to Step 3.	Correct.
3	CMP sensor power supply voltage check 1) Disconnect connector from CMP sensor with ignition switch turned OFF. 2) Check for proper terminal connection to CMP sensor and ECM connectors. 3) If connections are OK, turn ignition switch to ON position. 4) Check that CMP sensor power supply voltage is battery voltage between CMP sensor connector and vehicle body ground. <i>Is it in good condition?</i>	Go to Step 4.	CMP sensor power supply circuit is open or shorted to ground.
4	Wire harness check 1) Turn ignition switch OFF position. 2) Disconnect connector from ECM. 3) Check that CMP sensor circuit is as follows. <ul style="list-style-type: none"> Wiring harness resistance of CMP sensor signal circuit is less than 3 Ω. Insulation resistance of each CMP sensor signal and ground circuit between CMP sensor connector and vehicle body ground is infinity. Insulation resistance of wire harness is infinity between CMP sensor signal terminal and each other terminal at CMP sensor connector. Circuit voltage of each CMP sensor signal circuit and ground circuit is 0 – 1 V with ignition switch turned ON. <i>Are they in good condition?</i>	Go to Step 5.	Repair or replace defective wire harness.
5	CMP sensor signal circuit voltage check 1) Check that CMP sensor signal circuit voltage is 5 V between CMP sensor connector and vehicle body ground. <i>Is it in good condition?</i>	Go to Step 6.	Substitute a known good ECM and recheck.
6	CMP sensor check 1) Check CMP sensor and sensor rotor referring to "Camshaft Position (CMP) Sensor and Crankshaft Position (CKP) Sensor Inspection in Section 1C". <i>Are they in good condition?</i>	Go to Step 7.	Replace CMP sensor and/or sensor rotor.

Step	Action	Yes	No
7	CKP sensor and its circuit check 1) Check CKP sensor and its circuit referring to Step 2 to 6 of "DTC P0335: Crankshaft Position Sensor Circuit". <i>Are they in good condition?</i>	Substitute a known good ECM and recheck.	Repair or replace.

DTC P0341: Camshaft Position Sensor Circuit Range / Performance

S6JB0B1104042

Wiring Diagram

Refer to "DTC P0340: Camshaft Position Sensor Circuit".

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
CMP sensor signal pattern is different from previously one 20 times or more. (1 driving cycle detection logic)	<ul style="list-style-type: none"> • CMP sensor and/or sensor rotor • ECM

DTC Confirmation Procedure


- 1) With ignition switch turned OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Start engine and it for 10 seconds.
- 4) Check DTC by using scan tool.

DTC Troubleshooting

Step	Action	Yes	No
1	<i>Was "Engine and Emission Control System Check" performed?</i>	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	CMP sensor and connector for proper installation check 1) Turn ignition switch to OFF position. 2) Check for terminal proper connection to CMP sensor and ECM connectors. 3) If connections are OK, check CMP sensor for installation condition. <i>Is CMP sensor installed properly?</i>	Go to Step 3.	Repair.
3	CMP sensor check 1) Check CMP sensor and sensor rotor referring to "Camshaft Position (CMP) Sensor and Crankshaft Position (CKP) Sensor Inspection in Section 1C". <i>Are they in good condition?</i>	Substitute a known good ECM and recheck.	Replace CMP sensor and/or sensor rotor.

DTC P0401 / P0402: Exhaust Gas Recirculation Flow Insufficient Detected / Excessive Detected

S6JB0B1104043

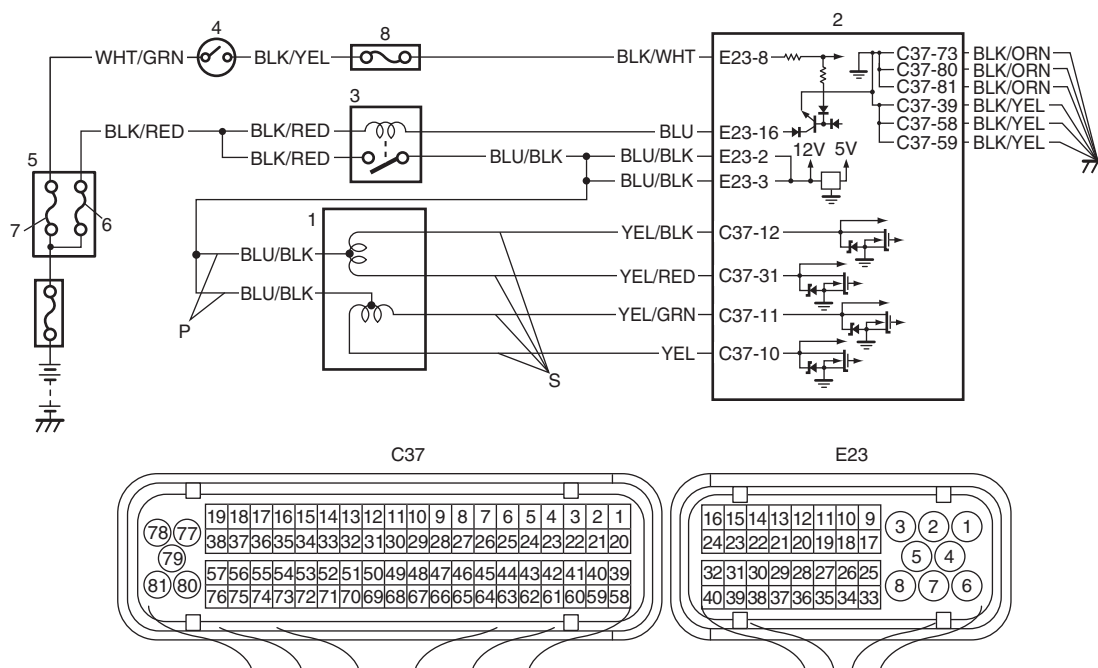System / Wiring Diagram

I6JB01110038-03

P: EGR valve power supply circuit	2. ECM	5. Fuse box No.2	8. "IG COIL" fuse
S: EGR valve control circuit	3. Main relay	6. "FI" fuse	
1. EGR valve	4. Ignition switch	7. "IGN" fuse	

System Description

EGR system consists of EGR valve and its passage. ECM judges EGR valve opening based on the following items.
(engine speed, engine load, engine coolant temperature, intake air temperature and vehicle speed)

If EGR system is in good condition, intake manifold absolute pressure is varied within specified value as soon as ECM opens EGR valve.

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P0401: Exhaust Gas Recirculation Flow Insufficient Detected MAP variation is 0.67 kPa or less when EGR valve is either opened or closed. (2 driving cycle detection logic, monitoring once per driving cycle)	<ul style="list-style-type: none"> EGR valve EGR circuit MAP sensor ECM
DTC P0402: Exhaust Gas Recirculation Flow Excessive Detected MAP variation is 8.7 kPa or more when EGR valve is either opened or closed. (2 driving cycle detection logic, monitoring once per driving cycle)	

DTC Confirmation Procedure

⚠ WARNING

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and very careful during testing to avoid occurrence of an accident.
- Road test should be carried out with 2 persons, a driver and a tester, on a level road.

NOTE

Check to make sure that the following conditions are satisfied when using this “DTC Confirmation Procedure”.

- Intake air temperature: between -10°C and 70°C (14°F and 158°F).
- Engine coolant temperature: higher than 70°C (158°F).
- Atmospheric pressure: higher than 75 kPa (560 mmHg) (Altitude: lower than 2790 m (9150 ft)).
- The following DTCs are not detected: MAF sensor, ECT sensor, TP sensor, barometric pressure sensor, CMP sensor, MAP sensor, VSS, IAT sensor and EGR system (other than P0401 and P0402).

- 1) With ignition switch OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Start engine and warm up to normal operating temperature.
- 4) Increase vehicle speed to 30 – 40 mph (50 – 65 km/h) (engine speed; 2000 – 3000 rpm).
- 5) Keep above vehicle speed for 3 min. (Throttle valve operating is kept constant in this step.)
- 6) Stop vehicle and check DTC and pending DTC by using scan tool.

DTC Troubleshooting

NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to “Precautions for DTC Troubleshooting”.

Step	Action	Yes	No
1	Was “Engine and Emission Control System Check” performed?	Go to Step 2.	Go to “Engine and Emission Control System Check”.
2	Do you have SUZUKI scan tool?	Go to Step 3.	Go to Step 5.
3	EGR valve operation check 1) With ignition switch OFF, install SUZUKI scan tool. 2) Check EGR system referring to “EGR System Inspection (If Equipped)” in Section 1B”. Is it in good condition?	Go to Step 4.	Go to Step 5.
4	MAP sensor check 1) Check MAP sensor for performance referring to “Manifold Absolute Pressure (MAP) Sensor Inspection in Section 1C”. Is check result satisfactory?	Intermittent trouble or faulty ECM. Check for intermittent referring to “Intermittent and Poor Connection Inspection in Section 00”.	Replace MAP sensor.
5	EGR valve control circuit check 1) Check that EGR valve control circuits are in good condition referring to Step 3 of “DTC P0403: Exhaust Gas Recirculation Control Circuit”. Are circuits in good condition?	Go to Step 6.	Repair or replace EGR valve control circuit(s).

1A-125 Engine General Information and Diagnosis:

Step	Action	Yes	No
6	EGR valve check 1) Check EGR valve referring to "PCV Valve Inspection in Section 1B". <i>Is check result satisfactory?</i>	Go to Step 7.	Faulty EGR valve.
7	MAP sensor check 1) Check MAP sensor for performance referring to "Manifold Absolute Pressure (MAP) Sensor Inspection in Section 1C". <i>Is check result satisfactory?</i>	EGR passage clogged. If OK, substitute a known good ECM and recheck.	Replace MAP sensor.

DTC P0403: Exhaust Gas Recirculation Control Circuit

S6JB0B1104044

Wiring Diagram

Refer to "DTC P0401 / P0402: Exhaust Gas Recirculation Flow Insufficient Detected / Excessive Detected".

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
EGR valve control duty pulse monitor signal is less than 0.8 V at OFF duty pulse or more than 2.2 V at ON duty pulse for more than 4 times. (1 driving cycle detection logic)	<ul style="list-style-type: none">• EGR valve circuit open• EGR valve• ECM


DTC Confirmation Procedure

⚠ WARNING

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and be very careful during testing to avoid occurrence of an accident.
- Road test should be carried out with 2 persons, a driver and a tester, on a level road.


- 1) With ignition switch OFF, connect scan tool to DLC.
- 2) Turn ON ignition switch and clear DTC using scan tool.
- 3) Start engine and warm it up to normal operating temperature.
- 4) Run engine at 2000 rpm and increase engine speed to 5000 rpm and then decrease it to 2000 rpm noting in order not to close throttle valve.
- 5) Repeat step 4) 4 times.
- 6) Stop vehicle and check DTC and pending DTC.

DTC Troubleshooting

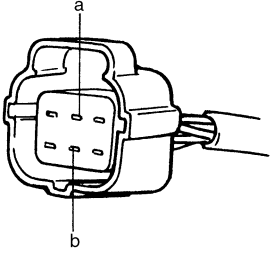Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	EGR valve power supply circuit check <ol style="list-style-type: none"> With ignition switch OFF, disconnect connector from EGR valve. With ignition switch ON, check that EGR valve power supply circuit voltage between. <ul style="list-style-type: none"> "a" terminal of EGR valve connector and vehicle body ground is battery voltage. "b" terminal of EGR valve connector and vehicle body ground is battery voltage.  <p>I4JA01111012-01</p> <p>Is it in good condition?</p>	Go to Step 3.	EGR valve power supply circuit is open or shorted to ground.
3	Wiring harness check <ol style="list-style-type: none"> Disconnect connectors from ECM with ignition switch turned OFF. Check for proper terminal connection to EGR valve and ECM connectors. If connections are OK, check that EGR valve control circuit is as follows. <ul style="list-style-type: none"> Wiring harness resistance of all EGR valve control circuits are less than 3 Ω. Insulation resistance between all EGR valve control circuits and vehicle body ground are infinity. <p>Are they in good condition?</p>	Go to Step 4.	Repair or replace defective wire harness.
4	EGR valve check <ol style="list-style-type: none"> Check EGR valve for resistance referring to "EGR Valve Assembly Inspection (If Equipped) in Section 1B". <p>Is it in good condition?</p>	Substitute a known good ECM and recheck.	Replace EGR valve.

DTC P0420 / P0430: Catalyst System Efficiency Below Threshold (Bank-1 / -2)

S6JB0B1104045

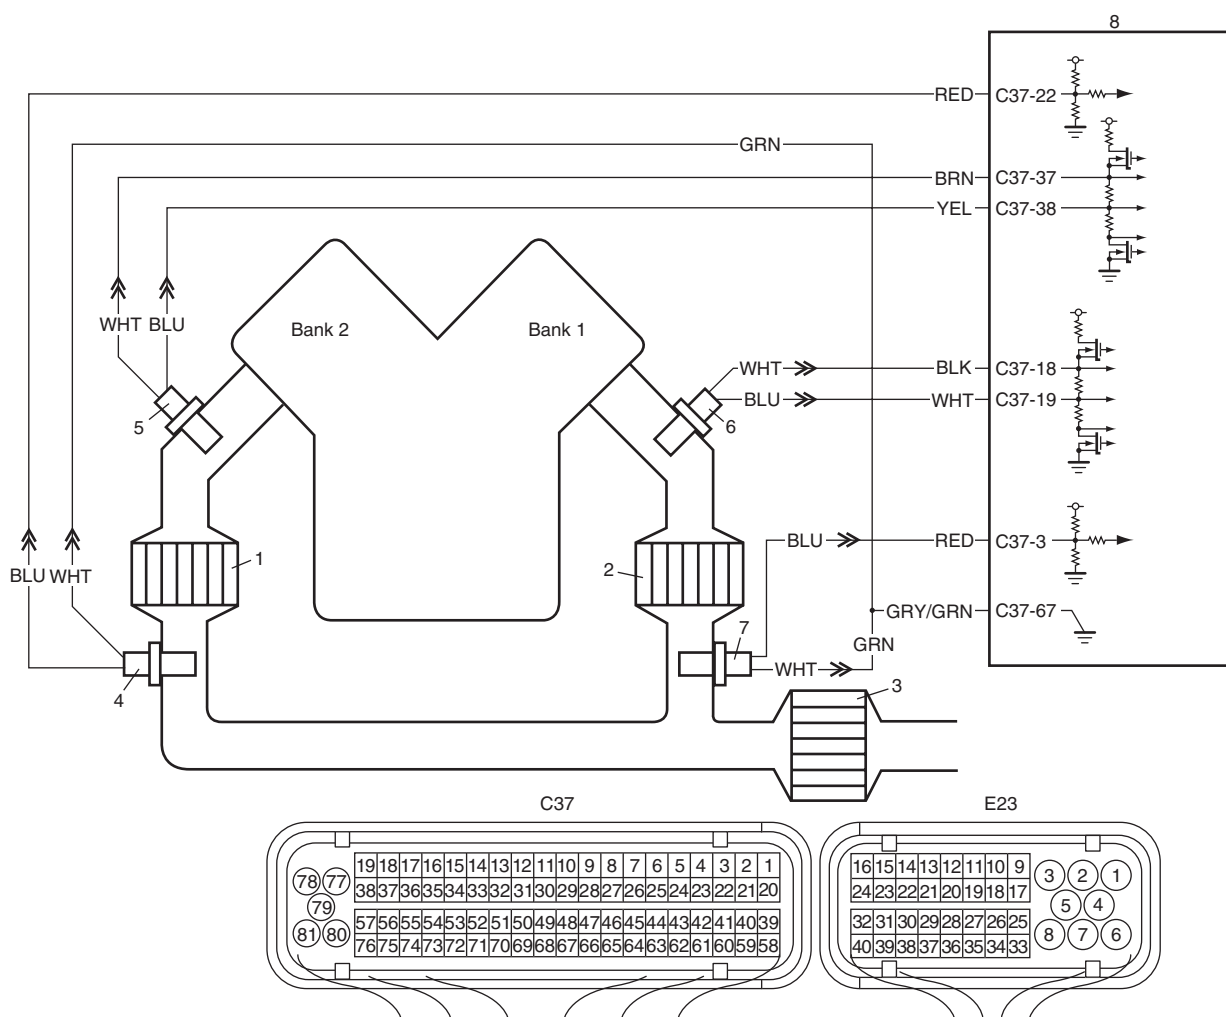System / Wiring Diagram

I6JB01110039-02

1. Warm up TWC converter (Bank-2)	4. HO2S (Bank-2, Sensor-2)	7. HO2S (Bank-1, Sensor-2)
2. Warm up TWC converter (Bank-1)	5. A/F sensor (Bank-2, Sensor-1)	8. ECM
3. TWC converter	6. A/F sensor (Bank-1, Sensor-1)	

System Description

ECM monitors oxygen concentration in the exhaust gas which has passed the warm up three way catalytic converter by HO2S. When the catalyst is functioning properly, the variation cycle of HO2S output voltage (oxygen concentration) is slower than that of A/F sensor output signal because the amount of oxygen in the exhaust gas is stored in warm up three way catalytic converter.

A/F Sensor Description

Refer to "A/F Sensor Description".

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Correlation coefficient that is calculated on the basis of A/F sensor signal and HO2S-2 signal exceeds specification when switched from RICH to LEAN in A/F diagnostic frequency under prescribed running condition. (2 driving cycle detection logic, monitoring once per driving cycle)	<ul style="list-style-type: none"> WU-TWC converter Exhaust system A/F sensor HO2S-2 ECM

DTC Confirmation Procedure

⚠ WARNING

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and very careful during testing to avoid occurrence of an accident.
- Road test should be carried out with 2 persons, a driver and a tester, on a level road.

NOTE

Check to make sure that the following conditions are satisfied when using this “DTC Confirmation Procedure”.

- Intake air temperature: between -14°C and 70°C (6.8°F and 158°F).
- Engine coolant temperature: higher than 58°C (136°F).
- The following DTCs are not detected: A/F sensor, A/F sensor heater, HO2S-2 and HO2S-2 heater.


- 1) With ignition switch OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Start engine and warm up to normal operating temperature.
- 4) Increase vehicle speed to 35 mph (56 km/h) or more.
- 5) Keep above vehicle speed for 5 min. (Throttle valve operating is kept constant in this step.)
- 6) Increase vehicle speed to 50 – 60 mph (80 – 100 km/h). (engine speed; 2500 – 3000 rpm)
- 7) Keep above vehicle speed for 5 min. (Throttle valve operating is kept constant in this step.)
- 8) Stop vehicle and check DTC and pending DTC by using scan tool.

DTC Troubleshooting

Step	Action	Yes	No
1	Was “Engine and Emission Control System Check” performed?	Go to Step 2.	Go to “Engine and Emission Control System Check”.
2	Exhaust system visual inspection 1) Check exhaust system for leaks, damage and loose. <i>Is it in good condition?</i>	Go to Step 3.	Repair or replace.
3	HO2S (bank-1 or bank-2) circuit check 1) Check signal and ground circuits of HO2-S (bank-1 or bank-2) for high resistance referring to applicable step of “DTC P0137 / P0138: O2 Sensor Circuit Low Voltage / High Voltage (Sensor-2, Bank-1)” or “DTC P0157 / P0158: O2 Sensor Circuit Low Voltage / High Voltage (Sensor-2, Bank-2)”. <i>Are they in good condition?</i>	Go to Step 4.	Repair or replace.
4	1) Replace exhaust manifold (built in warm up three way catalytic converter) and exhaust center pipe (built in three way catalytic converter). 2) Perform DTC confirmation procedure. <i>Is DTC P0420 (P0430) still detected?</i>	Substitute a known good ECM and recheck.	System is in good condition.

DTC P0444 / P0445: EVAP Emission System Purge Control Valve Circuit Open / Shorted

S6JB0B1104046

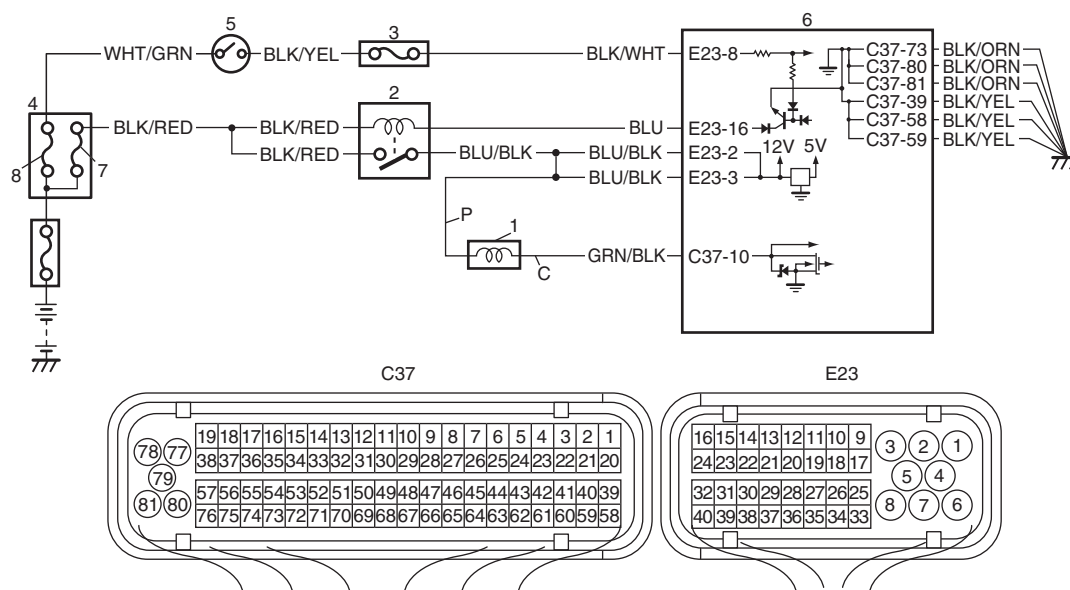Wiring Diagram

I6JB01110040-03

P: EVAP canister purge valve power supply circuit	2. Main relay	5. Ignition switch	8. "IGN" fuse
C: EVAP canister purge valve control circuit	3. "IG COIL" fuse	6. ECM	
1. EVAP canister purge valve	4. Fuse box No.2	7. "FI" fuse	

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P0444: EVAP Emission System Purge Control Valve Circuit Open EVAP canister purge valve control duty (on 48% ON duty or less) is continuous 240 pulses or more and purge valve circuit voltage is 3.0 V or less during OFF duty pulse condition. (1 driving cycle detection logic)	<ul style="list-style-type: none"> • EVAP canister purge valve and its circuit • ECM
DTC P0445: EVAP Emission System Purge Control Valve Circuit Shorted EVAP canister purge valve control duty (on 50% ON duty or less) is continuous 240 pulses or more and purge valve circuit voltage is 8.4 V or more during OFF duty pulse condition. (1 driving cycle detection logic)	

DTC Confirmation Procedure**▲ WARNING**

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and be very careful during testing to avoid occurrence of an accident.
- Road test should be carried out with 2 persons, a driver and a tester, on a level road.

- 1) With ignition switch turned OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Start engine and warm it up to normal operating temperature.
- 4) Drive vehicle in 4000 r/min. or less of engine speed for 10 seconds or longer.
- 5) Stop vehicle and check DTC by using scan tool.

DTC Troubleshooting


NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	EVAP canister purge valve power supply voltage check 1) Disconnect connector from EVAP canister purge valve with ignition switch turned OFF. 2) Check for proper terminal connection to EVAP canister purge valve and ECM connectors. 3) If connections are OK, check that EVAP canister purge valve power supply voltage is battery voltage between EVAP canister purge valve connector and vehicle body ground with ignition switch turned ON. <i>Is it in good condition?</i>	Go to Step 3.	Repair or replace EVAP canister purge valve power supply circuit.
3	Wire harness check 1) Disconnect connector from ECM with ignition switch turned OFF. 2) Check that EVAP canister purge valve circuit is as follows. <ul style="list-style-type: none"> • Wiring harness resistance of EVAP canister purge valve control circuit is less than 3 Ω. • Insulation resistance of EVAP canister purge valve control circuit is infinity between EVAP canister purge valve connector and vehicle body ground. • Circuit voltage of EVAP canister purge valve control circuit is 0 – 1 V with ignition switch turned ON. <i>Are they in good condition?</i>	Go to Step 4.	Repair or replace defective wire harness.
4	EVAP canister purge valve check 1) Check EVAP canister purge valve coil resistance referring to "EVAP Canister Purge Valve Inspection in Section 1B". <i>Is it in good condition?</i>	Substitute a known good ECM and recheck.	Replace EVAP canister purge valve.

DTC P0462 / P0463: Fuel Level Sensor Circuit Low / High

S6JB0B1104047

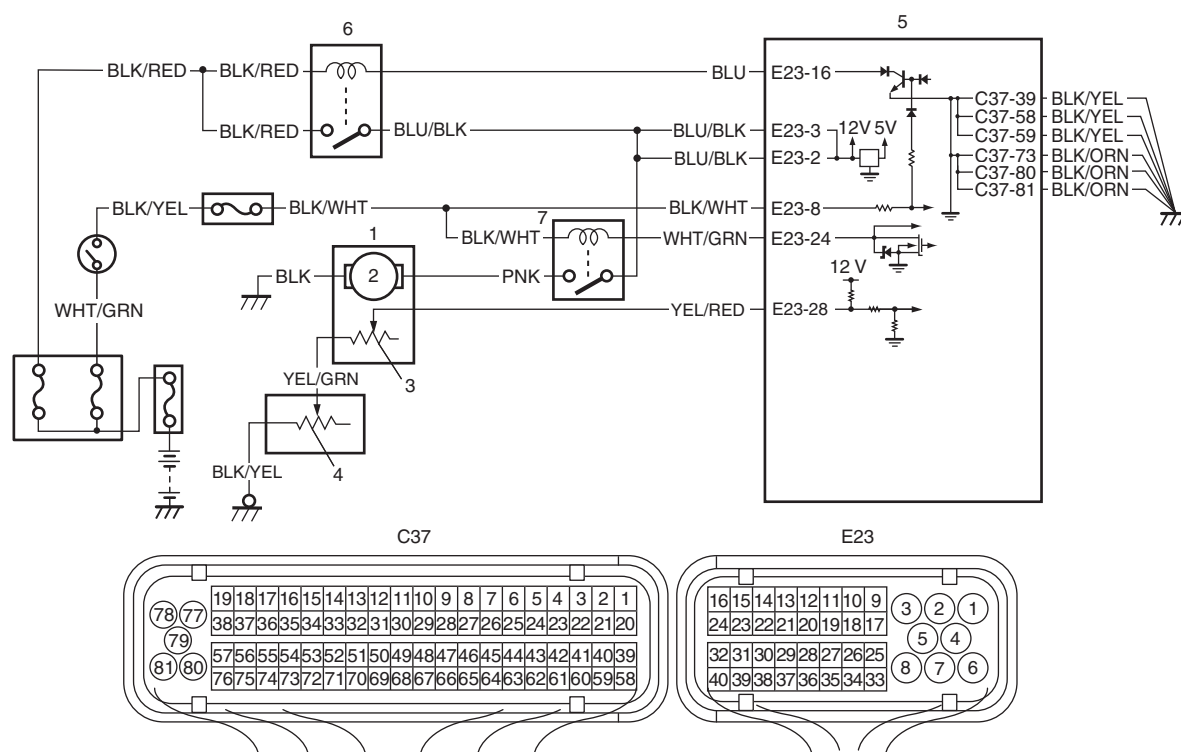Wiring Diagram

I6JB01110060-03

1. Fuel pump assembly	3. Main fuel level sensor	5. ECM	7. Fuel pump relay
2. Fuel pump	4. Sub fuel level sensor	6. Main relay	

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P0462: Fuel Level Sensor Circuit Low Input Circuit voltage of fuel level sensor is less than voltage specification calculated from battery voltage. (2 driving cycle detection logic)	<ul style="list-style-type: none"> Fuel level sensor and/or its circuit ECM
DTC P0463: Fuel Level Sensor Circuit High Input Circuit voltage of fuel level sensor is more than voltage specification calculated from battery voltage. (2 driving cycle detection logic)	

DTC Confirmation Procedure


- 1) With ignition switch OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Start engine and run it for 10 sec.
- 4) Check DTC and pending DTC by using scan tool.

DTC Troubleshooting

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	Fuel level sensor performance check 1) Check fuel level sensor (main and sub) for performance referring to "Fuel Level Sensor Inspection in Section 9C". <i>Is it in good condition?</i>	Go to Step 3.	Replace main and/or sub fuel level sensor.
3	Wire harness check 1) Disconnect connectors from ECM with ignition switch turned OFF. 2) Check for proper terminal connection to fuel level sensor (main and sub) and ECM connectors. 3) If connections are OK, check that fuel level sensor circuit is as follows. <ul style="list-style-type: none"> • Wiring harness resistance of fuel level sensor (main and sub) circuit is less than 3Ω. • Insulation resistance of fuel level sensor (main and sub) circuit is infinity between fuel level sensor (main and sub) connector and vehicle body ground. • Insulation resistance of wire harness is infinity between fuel level sensor (main and sub) terminal and each other terminal at fuel level sensor connector. • Circuit voltage of fuel level sensor (main and sub) circuit is 0 – 1 V with ignition switch turned ON. <i>Are they in good condition?</i>	Substitute a known good ECM and recheck.	Repair or replace defective wire harness.

DTC P0480 / P0481 / P0482: Fan 1 / Fan 2 / Fan 3 Control Circuit

S6JB0B1104048

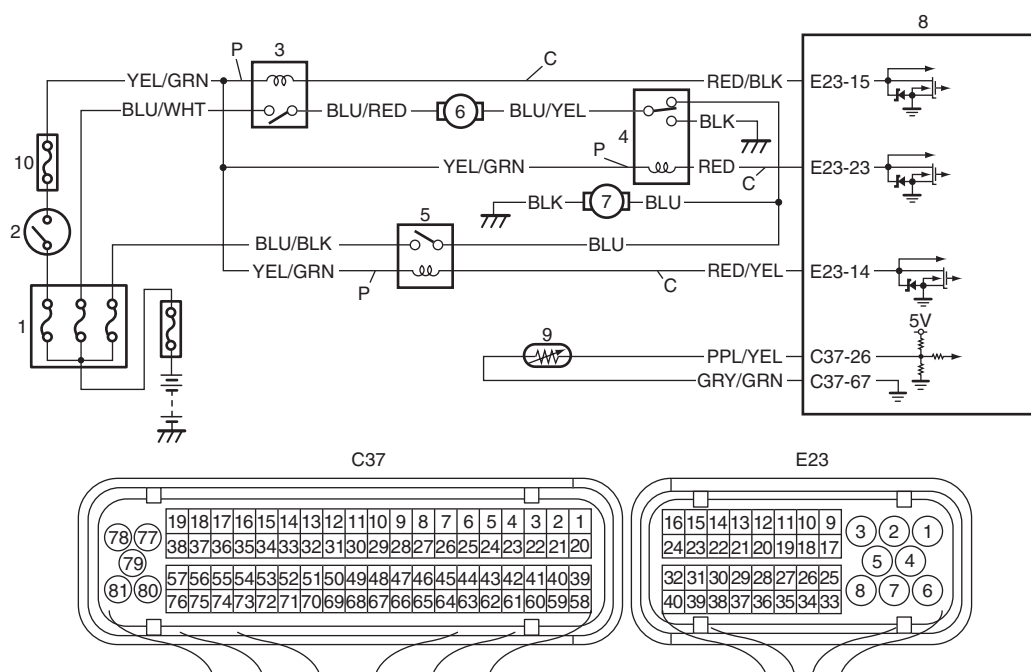Wiring Diagram

I6JB01110042-03

P: Radiator cooling fan relay power supply circuit	3. Radiator cooling fan relay No.1	7. Radiator cooling fan motor No.2
C: Radiator cooling fan relay control circuit	4. Radiator cooling fan relay No.2	8. ECM
1. Fuse Box No.2	5. Radiator cooling fan relay No.3	9. ECT sensor
2. Ignition switch	6. Radiator cooling fan motor No.1	10. "IG2 SIG" fuse

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P0480: Fan 1 Control Circuit No.1 radiator cooling fan relay circuit voltage is more than 8.4 V at relay ON or less than 3.0 V at relay OFF. (1 driving cycle detection logic)	<ul style="list-style-type: none"> Radiator cooling fan relay No.1 and its circuit (P0480) Radiator cooling fan relay No.2 and its circuit (P0481) Radiator cooling fan relay No.3 and its circuit (P0482) ECM
DTC P0481: Fan 2 Control Circuit No.2 radiator cooling fan relay circuit voltage is more than 8.4 V at relay ON or less than 3.0 V at relay OFF. (1 driving cycle detection logic)	
DTC P0482: Fan 3 Control Circuit No.3 radiator cooling fan relay circuit voltage is more than 8.4 V at relay ON or less than 3.0 V at relay OFF. (1 driving cycle detection logic)	

DTC Confirmation Procedure

- 1) With ignition switch turned OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Start engine and warm up to normal operating temperature.
- 4) Keep engine at idle speed until engine coolant temperature reaches 102 °C (216 °F) or more.
- 5) Check DTC by using scan tool.

DTC Troubleshooting

NOTE


Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	Wire harness check 1) Turn ignition switch to OFF position. 2) Check for proper terminal connection to related radiator cooling fan relay (No.1, No.2 or No.3) and ECM connectors. 3) If connections are OK, recheck DTC. <i>Is DTC P0480, P0481 or P0482 detected again?</i>	Go to Step 3.	Intermittent trouble.
3	Radiator cooling fan control circuit voltage check 1) Turn ignition switch to OFF position. 2) Disconnect connectors from ECM. 3) Turn ignition switch ON position. 4) Check that related radiator cooling fan relay (No.1, No.2 or No.3) control circuit voltage is battery voltage between ECM connector and vehicle body ground. <i>Is it in good condition?</i>	Go to Step 4.	Substitute a known good ECM and recheck.
4	Radiator cooling fan control circuit voltage check 1) Turn ignition switch to OFF position. 2) Remove radiator cooling fan relay No.1, No.2 or No.3. 3) Turn ignition switch ON position. 4) Check that related radiator cooling fan relay (No.1, No.2 or No.3) power supply voltage is battery voltage between radiator cooling fan relay (No.1, No.2 or No.3) connector and vehicle body ground. <i>Is it in good condition?</i>	Go to Step 5.	Repair or replace power supply circuit of radiator cooling fan relay (No.1, No.2 or No.3).
5	Radiator cooling fan relay check 1) Check radiator cooling fan relay No.1, No.2 or No.3 for operation referring to "Radiator Cooling Fan Relay Inspection in Section 1F". <i>Is it in good condition?</i>	Repair or replace control circuit of radiator cooling fan relay (No.1, No.2 or No.3). If circuit is OK, substitute a known good ECM and recheck.	Replace radiator cooling fan relay No.1, No.2 or No.3.

DTC P0500: Vehicle Speed Sensor

S6JB0B1104049

Wiring Diagram

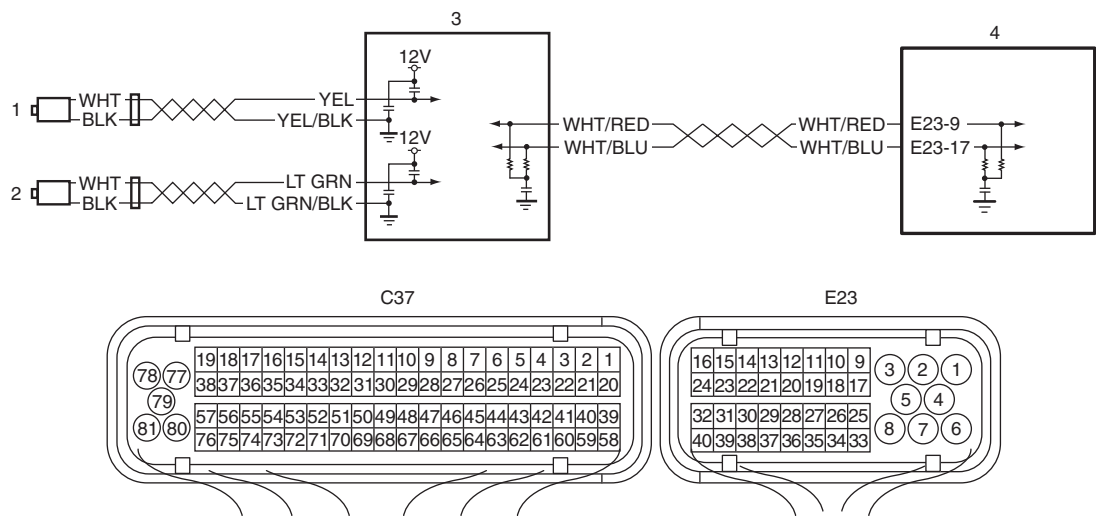

I5JB0C110012-01

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Wheel speed signal (RL and/or RR) is 0.6 mph or less even though signal sent from CAN is 4000 rpm or less with fuel cut. (1 driving cycle detection logic)	<ul style="list-style-type: none">Wheel speed sensor (RR and/or RL) and its circuitWheel speed encoder (RR and/or RL)ABS or ESP control module

DTC Confirmation Procedure

⚠ WARNING

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and very careful during testing to avoid occurrence of an accident.
- Road test should be carried out with 2 persons, a driver and a tester, on a level road by ECM.

- With ignition switch OFF, connect scan tool.
- Turn ON ignition switch and clear DTC by using scan tool if any.
- Start engine and warm up to normal operating temperature.
- Increase vehicle speed till engine speed is reached 4000 rpm in 3rd gear (M/T) or 2nd range (A/T).
- Release accelerator pedal and with engine brake applied, keep vehicle coasting and then stop vehicle.
- Check DTC by using scan tool.

DTC Troubleshooting

NOTE


- Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".
- Make sure that DTC of CAN communication is not detected by ECM.

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	DTC check in ABS control module 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Check DTC in ABS or ESP® control module. Is there DTC(s) of rear wheel speed sensor detected?	Go to applicable DTC diag. Flow.	Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00". If OK, substitute a known good ECM and recheck.

DTC P0532 / P0533: A/C Refrigerant Pressure Sensor Circuit Low / High

S6JB0B1104050

Wiring Diagram

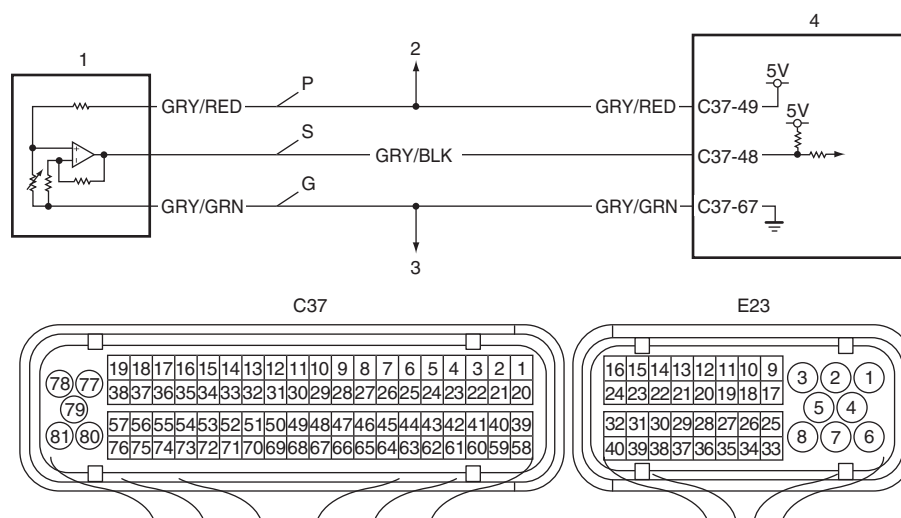

I6JB01110045-03

P: A/C refrigerant pressure sensor power supply circuit	1. A/C refrigerant pressure sensor	4. ECM
S: A/C refrigerant pressure sensor signal circuit	2. To other sensors	
G: A/C refrigerant pressure sensor ground circuit	3. To other sensors	

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P0532: A/C Refrigerant Pressure Sensor Circuit Low Output voltage of A/C refrigerant pressure sensor is less than 0.15 V for 5 seconds or longer. (1 driving cycle detection logic but MIL does not light up)	<ul style="list-style-type: none"> • A/C refrigerant pressure sensor and its circuit • ECM
DTC P0533: A/C Refrigerant Pressure Sensor Circuit High Output voltage of A/C refrigerant pressure sensor is more than 4.95 V for 5 seconds or longer. (1 driving cycle detection logic but MIL does not light up)	

DTC Confirmation Procedure

- 1) With ignition switch turned OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Check DTC by using scan tool.

DTC Troubleshooting**NOTE**

- Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".
- When DTC P0107 is indicated together, it is possible that sensor power supply circuit is open.
- When DTC P0108 is indicated together, it is possible that sensor power supply circuit is shorted to power circuit and/or sensor ground circuit is open.

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	A/C refrigerant pressure sensor and its circuit check 1) Check A/C refrigerant pressure sensor and its circuit for condition referring to "A/C Refrigerant Pressure Sensor and Its Circuit Inspection in Section 7B". Is it in good condition?	Substitute a known good ECM and recheck.	Repair or replace defective parts.

DTC P0601 / P0602 / P0607: Internal Control Module Memory Check Sum Error / Control Module Programming Error / Control Module Performance

S6JB0B1104051

System Description

Internal control module is installed in ECM.

NOTE

After reprogramming of ECM is executed, if the DTC P0601 and/or P0602 are indicated, it is possible that the reprogramming of ECM is not completed correctly.

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P0601: Internal Control Module Memory Check Sum Error Data write error or check sum error (1 driving cycle detection logic)	• ECM
DTC P0602: Control Module Programming Error Data programming error (1 driving cycle detection logic)	
DTC P0607: Control Module Performance Internal processor error (1 driving cycle detection logic)	

DTC Confirmation Procedure

- 1) With ignition switch OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Start engine and run it at idle if possible.
- 4) Check DTC by using scan tool.


DTC Troubleshooting

Step	Action	Yes	No
1	DTC recheck 1) Clear DTC referring to "DTC Clearance" 2) Turn off ignition switch. 3) Turn on ignition switch and check DTC. <i>Is DTC P0601, P0602 or P0607 still indicated?</i>	Go to Step 2.	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".
2	ECM reprogramming check <i>Was reprogramming of ECM executed?</i>	Execute reprogramming of ECM correctly once again.	Go to Step 3.
3	ECM power and ground circuit check 1) Check that ECM power supply circuit and ECM ground circuit is in good condition referring to "ECM Power and Ground Circuit Check". <i>Are checking results OK?</i>	Substitute a known good ECM and recheck.	Repair ECM power or ground circuit.

DTC P0616 / P0617: Starter Relay Circuit Low / High

S6JB0B1104052

Wiring Diagram

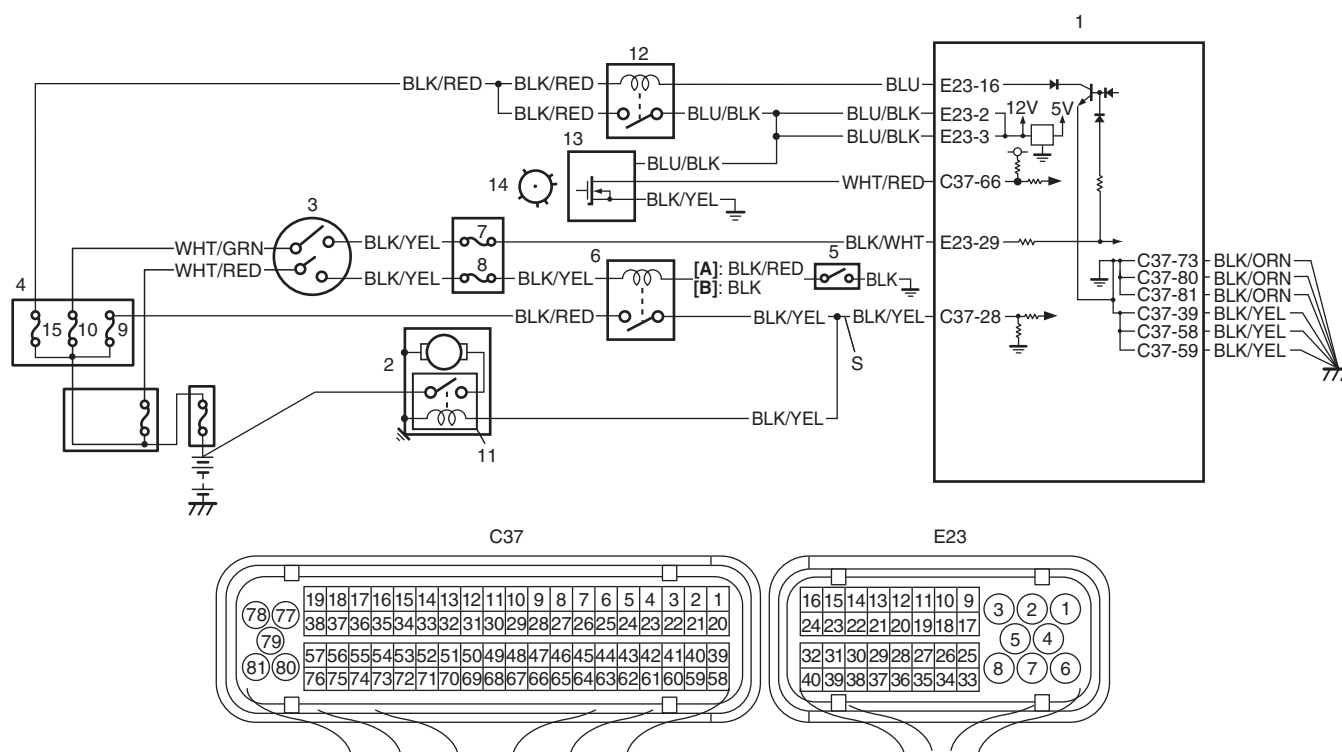

I6JB01110046-03

[A]: For A/T model	3. Ignition switch	8. "ST SIG" fuse	13. CMP sensor
[B]: For M/T model	4. Fuse box No.2	9. "STR MOT" fuse	14. Signal rotor
S: Start signal circuit	5. Transmission range switch (A/T model)	10. "IGN" fuse	15. "FI" fuse
1. ECM	6. Starting motor control relay	11. Starting motor magnet clutch	
2. Starter motor	7. "IG CIOL" fuse	12. Main relay	

Circuit Description

Engine start signal is sent from engine starter circuit while engine cranking.

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
P0616: Starter Relay Circuit Low No starter switch signal is inputted for 20 sec. or more even though there is CMP sensor input with vehicle speed at 2 km/h or less. (2 driving cycle detection logic)	<ul style="list-style-type: none"> Engine start signal circuit ECM
P0617: Starter Relay Circuit High There is starter switch input for 180 sec. or more even though engine operates at 600 rpm or more. (2 driving cycle detection logic)	

DTC Confirmation Procedure

NOTE

Before performing troubleshooting of DTC P0616, make sure that DTC of VSS is not detected.

- 1) With ignition switch OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Start engine and run it for 1 minute.
- 4) Check DTC and pending DTC by using scan tool.

DTC Troubleshooting

NOTE


Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	Engine start signal check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ignition switch to ON position. 3) Check engine start signal of "Starter SW" under "Data List" displayed on scan tool. <ul style="list-style-type: none"> Ignition switch is at "START" position: "ON". Ignition switch is at other than "START" position: "OFF". Does "Starter SW" signal correctly?	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".	Go to Step 3.
3	Engine start signal check 1) Disconnect connectors from ECM with ignition switch turned OFF. 2) Check that circuit voltage between start signal terminal of ECM connector and vehicle body ground. <ul style="list-style-type: none"> Ignition switch is at "START" position: 8 – 14 V Ignition switch is at other than "START" position: 0 – 1 V Is it in good condition?	Substitute a known good ECM and recheck.	Repair or replace start signal circuit.

DTC P0645: A/C Clutch Relay Control Circuit

S6JB0B1104053

Wiring Diagram

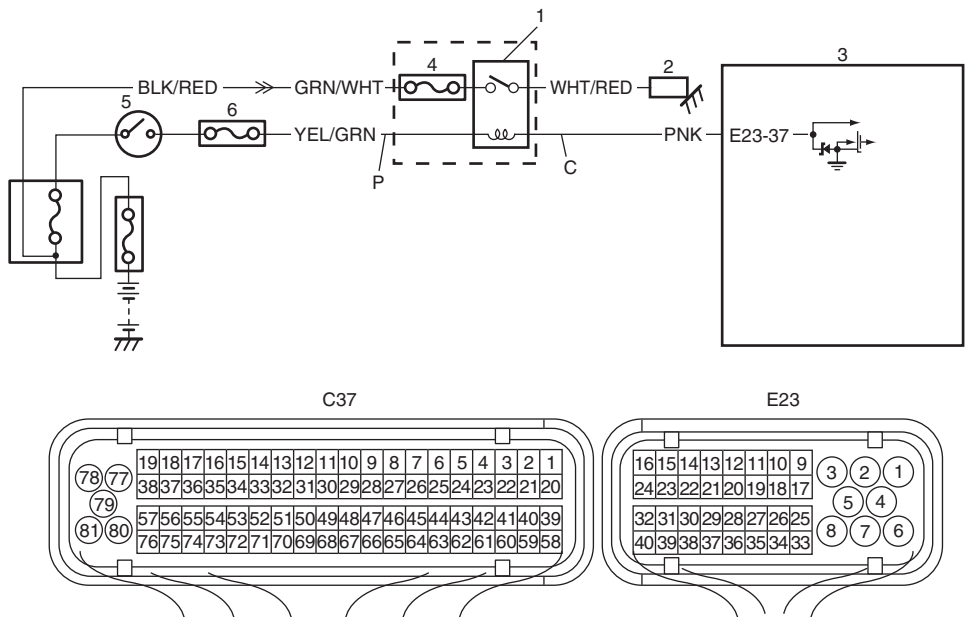

I6JB01110047-03

P: A/C compressor relay power supply circuit	2. A/C compressor	5. Ignition switch
C: A/C compressor relay control circuit	3. ECM	6. "IG2 SIG" fuse
1. A/C compressor relay (included in integration relay)	4. "CPRSR" fuse	

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Monitor signal of A/C compressor relay is different from command signal. (1 driving cycle detection logic)	<ul style="list-style-type: none">A/C compressor relay and its circuitECM

DTC Confirmation Procedure

- 1) With ignition switch turned OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Start engine and then operate A/C system.
- 4) Check DTC by using scan tool.

DTC Troubleshooting


NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	A/C compressor relay signal check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Start engine and then operate A/C system. 3) Check A/C compressor relay control signal of "A/C Comp Relay" under "Data List" displayed on scan tool. <ul style="list-style-type: none"> A/C switch is at ON position and blower selector is other than OFF position: "ON". A/C switch is at OFF position and blower selector is at OFF position: "OFF". Does "A/C Comp Relay" signal correctly?	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".	Go to Step 3.
3	A/C compressor relay control signal check 1) Disconnect connectors from ECM with ignition switch turned OFF. 2) Check that A/C compressor relay control signal circuit voltage between ECM connector and vehicle body ground. <ul style="list-style-type: none"> Ignition switch is at "ON" position: 10 – 14 V Ignition switch is at "OFF" position: 0 – 1 V Is it in good condition?	Substitute a known good ECM and recheck.	Go to Step 4.
4	A/C compressor relay power supply voltage check 1) Turn ignition switch to OFF position. 2) Remove A/C compressor relay. 3) Check that A/C compressor relay power supply voltage between A/C compressor relay connector and vehicle body ground. <ul style="list-style-type: none"> Ignition switch is at "ON" position: 10 – 14 V Ignition switch is at "OFF" position: 0 – 1 V Is it in good condition?	Go to Step 5.	Repair or replace power supply circuit of A/C compressor relay.
5	A/C compressor relay check Check A/C compressor relay for operation referring to "A/C Compressor Relay Inspection in Section 7B". Is it in good condition?	Control signal circuit of A/C compressor relay is open or short. If circuit is OK, substitute a known good ECM and recheck.	Replace A/C compressor relay.

DTC P0661 / P0662: Intake Manifold Tuning Valve Control Circuit Low / High

S6JB0B1104054

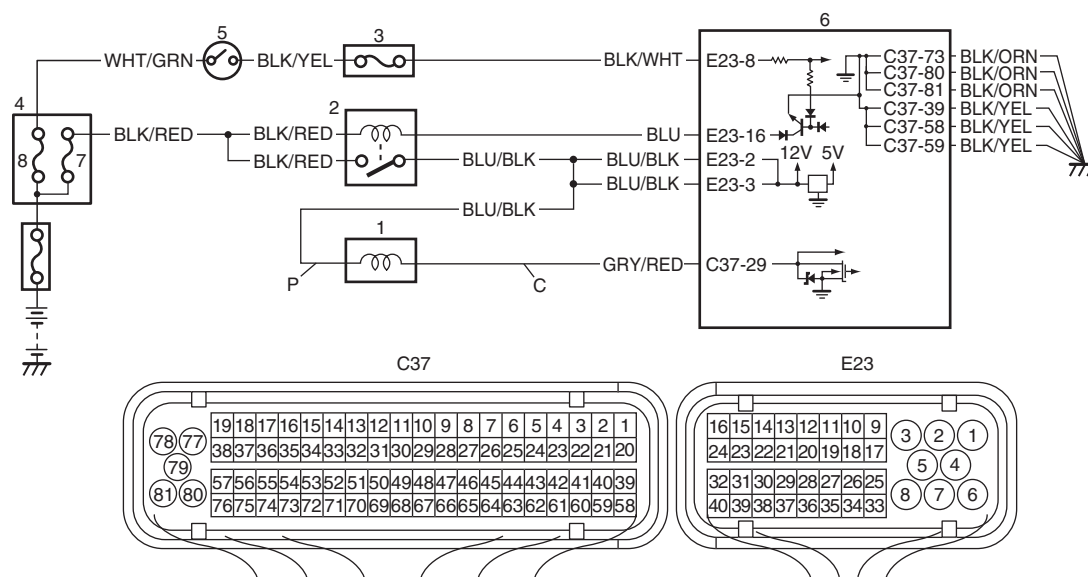Wiring Diagram

I6JB01110048-03

P: IMT vacuum solenoid valve power supply circuit	3. "IG COIL" fuse	7. "FI" fuse
C: IMT vacuum solenoid valve control circuit	4. Fuse box No.2	8. "IGN" fuse
1. IMT vacuum solenoid valve	5. Ignition switch	
2. Main relay	6. ECM	

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P0661: Intake Manifold Turning Valve Control Circuit Low Circuit voltage of intake manifold tuning vacuum solenoid valve is less than specification even if it solenoid valve is turned OFF. (1 driving cycle detection logic but MIL does not light up)	<ul style="list-style-type: none"> IMT vacuum solenoid valve and its circuit ECM
DTC P0662: Intake Manifold Turning Valve Control Circuit High Circuit voltage of intake manifold tuning vacuum solenoid valve is more than specification even if it solenoid valve is turned ON. (1 driving cycle detection logic but MIL does not light up)	

DTC Confirmation Procedure

- 1) With ignition switch turned OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Start engine and run it for 10 seconds.
- 4) Check DTC by using scan tool.

DTC Troubleshooting


NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	IMT vacuum solenoid valve power supply voltage check 1) Disconnect connector from IMT vacuum solenoid valve with ignition switch turned OFF. 2) Check for proper terminal connection to IMT vacuum solenoid valve and ECM connectors. 3) If connections are OK, check that IMT vacuum solenoid valve power supply voltage is battery voltage between IMT vacuum solenoid valve connector and vehicle body ground with ignition switch turned ON. <i>Is it in good condition?</i>	Go to Step 3.	Repair or replace IMT vacuum solenoid valve power supply circuit.
3	Wire harness check 1) Disconnect connectors from ECM with ignition switch turned OFF. 2) Check that IMT vacuum solenoid valve circuit is as follows. <ul style="list-style-type: none"> • Wiring harness resistance of IMT vacuum solenoid valve control circuit is less than 3 Ω. • Insulation resistance of IMT vacuum solenoid valve control circuit is infinity between IMT vacuum solenoid valve connector and vehicle body ground. • Insulation resistance of wire harness is infinity between IMT vacuum solenoid valve control terminal and each other terminal at IMT vacuum solenoid valve connector. • Circuit voltage of IMT vacuum solenoid valve control circuit is 0 – 1 V with ignition switch turned ON. <i>Are they in good condition?</i>	Go to Step 4.	Repair or replace IMT vacuum solenoid valve control circuit.
4	IMT vacuum solenoid valve check 1) Check IMT vacuum solenoid valve for coil resistance referring to "IMT Vacuum Tank Assembly Inspection in Section 1C". <i>Is it in "good condition"?</i>	Substitute a known good ECM and recheck.	Replace IMT vacuum solenoid valve.

DTC P1107 / P1108: Manifold Absolute Pressure Sensor Rationality Check - Low / High

S6JB0B1104055

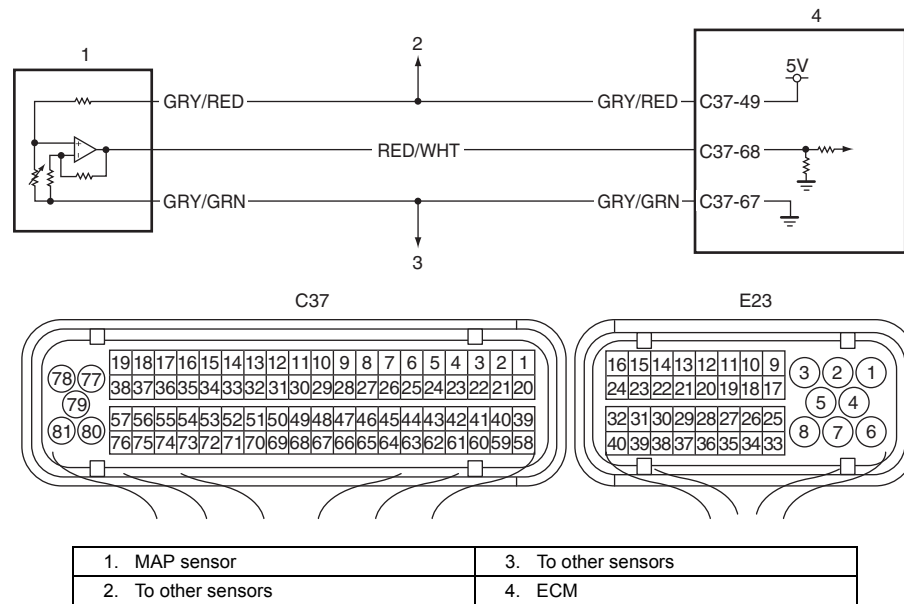Wiring Diagram

I6JB01110049-03

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P1107: Manifold Absolute Pressure Sensor Rationality Check - Low Input voltage of MAP sensor circuit is lower than the 1 V even though vehicle runs under engine load factor of 43% or more. (2 driving cycle detection logic)	<ul style="list-style-type: none"> MAP sensor and its circuit ECM
DTC P1108: Manifold Absolute Pressure Sensor Rationality Check - High Input voltage of MAP sensor circuit is more than the specified 2.7 V even though vehicle runs under engine load factor of 27% or less. (2 driving cycle detection logic)	

DTC Confirmation Procedure**⚠ WARNING**

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and very careful during testing to avoid occurrence of an accident.
- Road test should be carried out with 2 persons, a driver and a tester, on a level road.

NOTE

Check to make sure that the following conditions are satisfied when using this "DTC Confirmation Procedure".

- Intake air temperature: -10°C (14°F) or higher
- Engine coolant temperature: higher than 45°C (113°F)
- The following DTC(s) are not detected: MAF sensor, ECT sensor and MAP sensor (other than P1107 and P1108)

- With ignition switch OFF, connect scan tool.
- Turn ON ignition switch and clear DTC by using scan tool if any.
- Start engine and warm up to normal operating temperature.
- Increase vehicle speed to 35 mph (56 km/h) for 30 sec.
- Stop vehicle and check DTC and pending DTC by using scan tool.

1A-145 Engine General Information and Diagnosis:


DTC Troubleshooting

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	MAP sensor check 1) Check MAP sensor for performance referring to "Manifold Absolute Pressure (MAP) Sensor Inspection in Section 1C". <i>Is it in good condition?</i>	Go to Step 3.	Replace MAP sensor.
3	Wire harness check 1) Check power supply, signal and ground circuits of MAP sensor for connection and high resistance referring to Step 3 of "DTC P0107 / P0108: Manifold Absolute Pressure Sensor Circuit Low / High Input". <i>Is it in good condition?</i>	Substitute a known good ECM and recheck.	Repair or replace.

DTC P1510: ECM Back-Up Power Supply Malfunction

S6JB0B1104056

Wiring Diagram

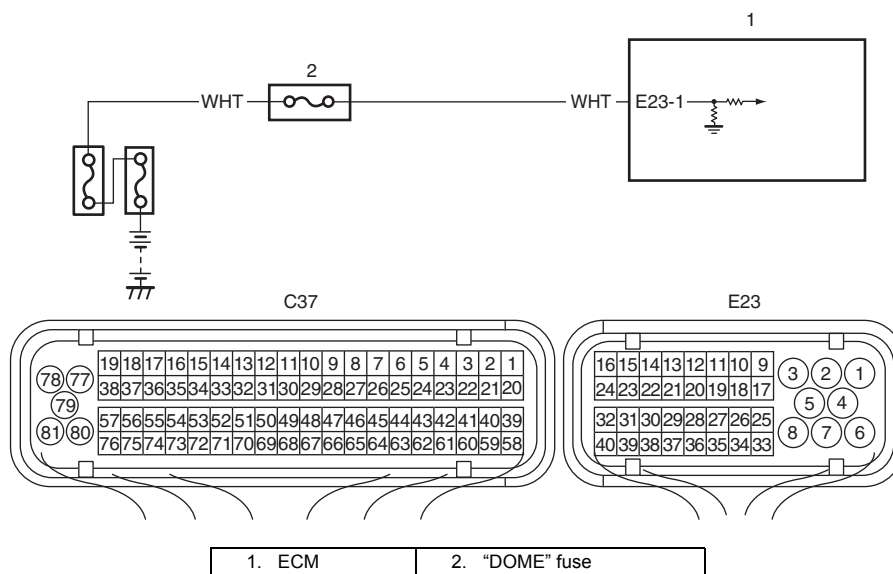

I6JB01110052-03

Circuit Description

Battery voltage is translated to 5 V in ECM back-up circuit. The voltage is supplied to keep DTC memory, values that ECM has learned to control engine, etc. in ECM even when ignition switch is turned OFF.

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Backup power voltage of internal circuit is lower than 3 V or more than 7 V. (1 driving cycle detection logic)	<ul style="list-style-type: none">Battery voltage supply circuitECM

DTC Confirmation Procedure

- 1) With ignition switch OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Start engine and run it for 10 sec.
- 4) Check DTC by using scan tool.

DTC Troubleshooting

NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	Battery voltage supply circuit check 1) Turn ignition switch to OFF position. 2) Remove ECM from its bracket with ECM connectors connected. 3) Measure ECM back-up power supply voltage between ECM connector and vehicle body ground. <i>Is voltage 10 – 14 V?</i>	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00". If OK, substitute a known good ECM and recheck.	ECM back-up power supply circuit is open or short.

DTC P1603: TCM Trouble Code Detected

S6JB0B1104057

DTC Detecting Condition

When ECM receives a trouble code from TMC, which indicates that some problem occurred in sensor circuits and its calculated values used for operations such as idle speed control, engine power control, and so on by TCM, ECM sets DTC P1603. (TCM outputs the trouble code to ECM when TCM can not compute the engine control signal due to malfunctions of sensor circuits used for gear shift control.)


DTC Troubleshooting

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	DTC check 1) Check DTC of TCM referring to "DTC Check in Section 5A". <i>Is there any DTC(s)?</i>	Go to applicable DTC troubleshooting.	Substitute a known good ECM and recheck.

DTC P2101: Throttle Actuator Control Motor Circuit Range / Performance

S6JB0B1104058

Wiring Diagram

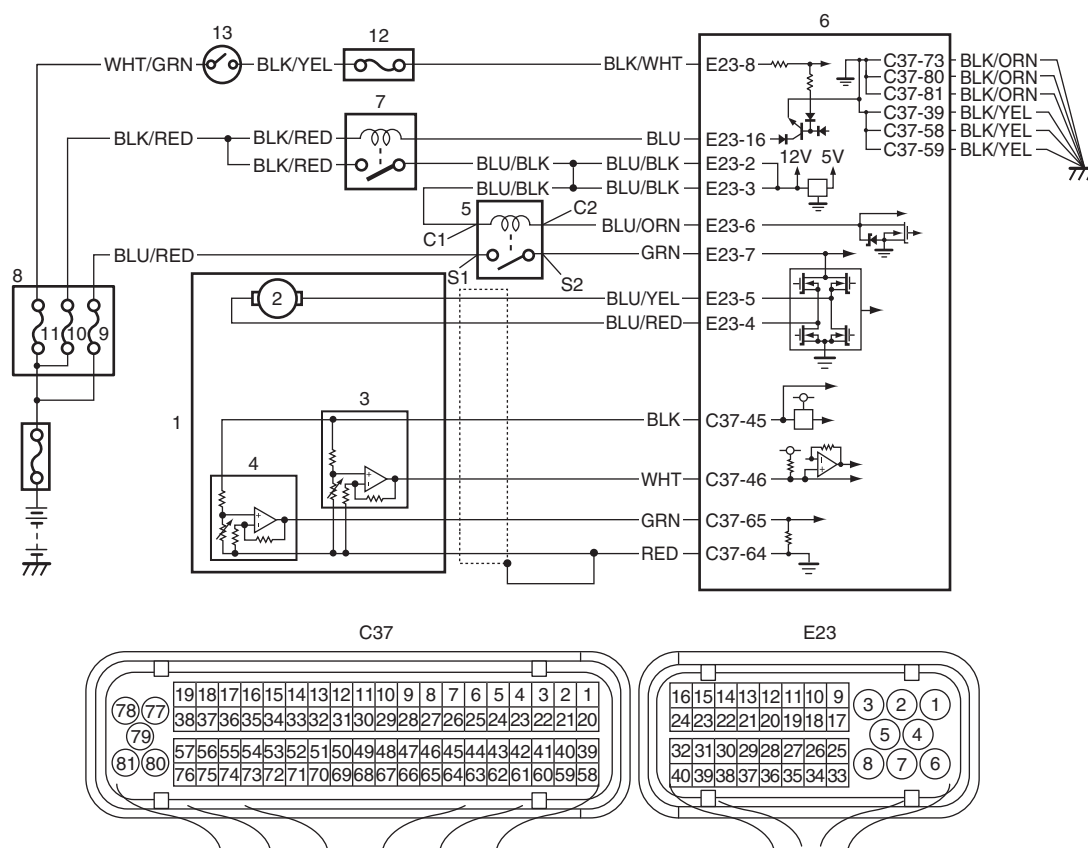

I6JB01110056-05

1: Electric throttle body assembly	6: ECM	11: "IGN" fuse
2: Throttle actuator	7: Main relay	12: "IG COIL" fuse
3: Throttle position sensor (main)	8: Fuse box No.2	13: Ignition switch
4: Throttle position sensor (sub)	9: "THR MOT" fuse	
5: Throttle actuator control relay	10: "FI" fuse	

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Difference between actual throttle valve position and target throttle valve position is more than 2° for more than 2 seconds. (1 driving cycle detection logic)	<ul style="list-style-type: none"> Throttle actuator circuit Electric throttle body assembly ECM

DTC Confirmation Procedure

- 1) With ignition switch turned OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Keep the accelerator pedal at idle position for 2 seconds.
- 4) Keep the accelerator pedal at fully depressed position for 2 seconds.
- 5) Repeat Step 3) and 4) for 3 times.
- 6) Check DTC by using scan tool.


DTC Troubleshooting**NOTE**

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	DTC check 1) Check DTC. Is DTC P2135 or P2138 detected?	Go to applicable DTC diag. flow.	Go to Step 3.
3	Throttle actuator circuit check 1) Check throttle actuator drive circuit referring to Step 2 of "DTC P2103: Throttle Actuator Control Motor Circuit High". Is it in good condition?	Go to Step 4.	Repair or replace.
4	Electric throttle body assembly check 1) Check electric throttle body for performance referring to "Electric Throttle Body Assembly On-Vehicle Inspection in Section 1C". Is it in good condition?	Substitute a known good ECM and recheck.	Repair or replace electric throttle body assembly.

DTC P2102: Throttle Actuator Control Motor Circuit Low

S6JB0B1104059

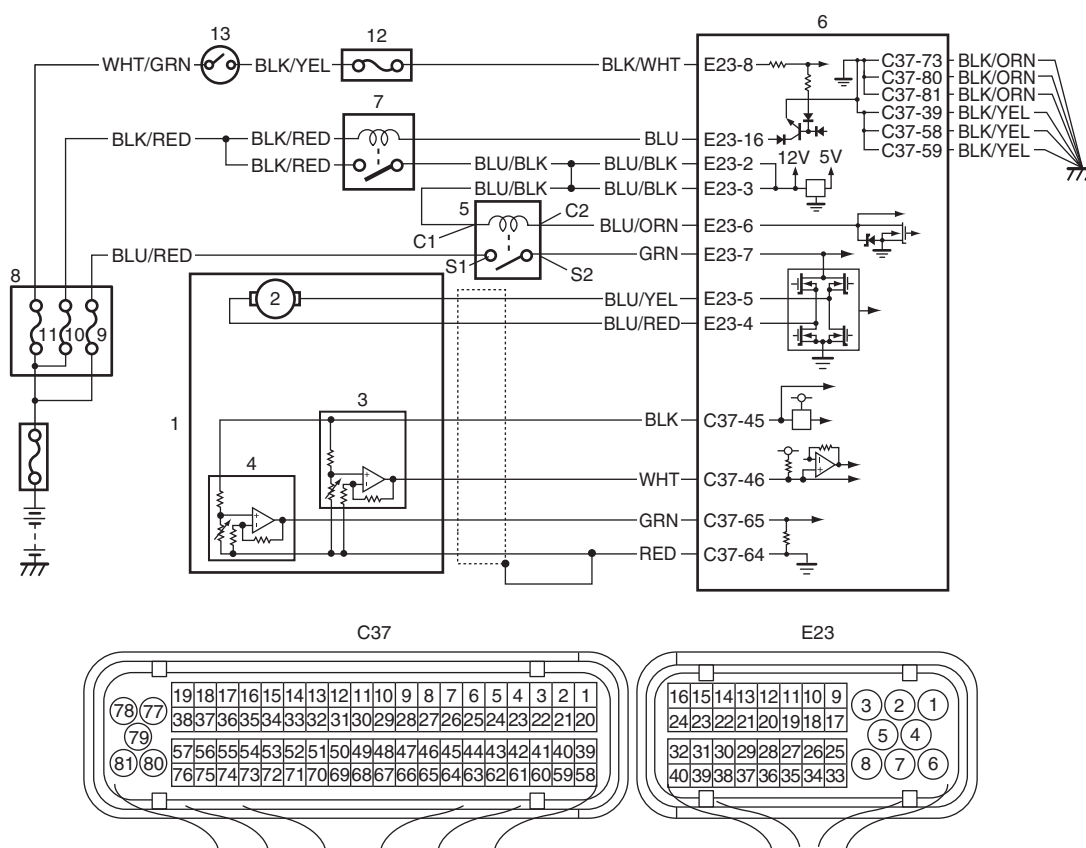Wiring Diagram

I5JB0C110013-01

C1: Power supply circuit of throttle actuator control relay (coil side)	3: Throttle position sensor (main)	9: "THR MOT" fuse
C2: Control circuit of throttle actuator control relay (coil side)	4: Throttle position sensor (sub)	10: "FI" fuse
S1: Power supply circuit of throttle actuator control relay (switch side)	5: Throttle actuator control relay	11: "IGN" fuse
S2: Control circuit of throttle actuator control relay (switch side)	6: ECM	12: "IG COIL" fuse
1: Electric throttle body assembly	7: Main relay	13: Ignition switch
2: Throttle actuator	8: Fuse box No.2	

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Power supply voltage of throttle actuator control circuit is lower than 6 V for more than 0.5 sec. even if throttle actuator control relay turned on. (1 driving cycle detection logic)	<ul style="list-style-type: none"> Throttle actuator control relay and its circuit ECM

DTC Confirmation Procedure

- 1) With ignition switch turned OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Keep ignition switch is at ON position for 5 seconds or longer.
- 4) Check DTC by using scan tool.

DTC Troubleshooting

NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	Throttle actuator control relay circuit check 1) Remove throttle actuator control relay with ignition switch turned OFF. 2) Check for proper terminal connection to throttle actuator control relay and ECM connectors. 3) If connections are OK, turn ignition switch to ON position. 4) Check that circuit voltage of throttle actuator control relay (coil side and switch side) power supply circuit is battery voltage. <i>Is it in good condition?</i>	Go to Step 3.	Repair or replace power supply circuit of throttle actuator control relay (coil side and/or switch side).
3	Throttle actuator control relay check 1) Check throttle actuator control relay for operation referring to "Engine and Emission Control System Relay Inspection in Section 1C". <i>Is it in good condition?</i>	Go to Step 4.	Replace throttle actuator control relay.
4	Wire harness check 1) Disconnect connectors from ECM with ignition switch turned OFF. 2) Check that throttle actuator control relay (coil side and switch side) circuit is as follows. <ul style="list-style-type: none"> • Wiring harness resistance of throttle actuator control relay (coil side and switch side) control circuit is less than 3Ω • Insulation resistance between throttle actuator control relay (coil side and switch side) control circuit and vehicle body ground is Infinity • Insulation resistance of wire harness is infinity between throttle actuator control relay (coil side) terminal and each other terminal at throttle actuator control relay connector • Circuit voltage of throttle actuator control relay (coil side and switch side) control circuit is 0 – 1 V with ignition switch turned ON <i>Are they in good condition?</i>	Substitute a known good ECM and recheck.	Repair or replace control circuit of throttle actuator control relay (coil side and/or switch side) is open, short or high resistance.

DTC P2103: Throttle Actuator Control Motor Circuit High

S6JB0B1104060

Wiring Diagram

Refer to "DTC P2101: Throttle Actuator Control Motor Circuit Range / Performance".

DTC Detecting Condition and Trouble Area


DTC detecting condition	Trouble area
Power supply current of throttle actuator control circuit is higher than specification for more than 0.5 sec. (1 driving cycle detection logic)	<ul style="list-style-type: none"> Throttle actuator control circuit Electric throttle body assembly ECM

DTC Confirmation Procedure

- 1) With ignition switch turned OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Keep ignition switch is at ON position for 5 seconds or longer.
- 4) Check DTC by using scan tool.

DTC Troubleshooting**NOTE**

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

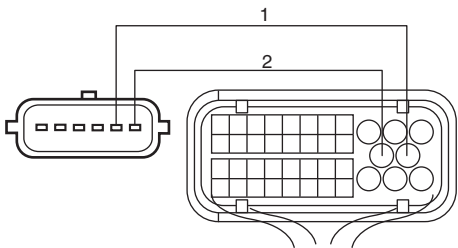Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	Throttle actuator circuit check <ol style="list-style-type: none"> 1) Disconnect connectors from electric throttle body assembly and ECM with ignition switch turned OFF. 2) Check for proper terminal connection to electric throttle body assembly and ECM connectors. 3) If connections are OK, check that throttle actuator motor circuit is as follows. <ul style="list-style-type: none"> • Wiring harness resistance of each throttle actuator motor drive circuit (1 and 2) is less than 3 Ω • Insulation resistance between each throttle actuator motor drive circuit (1 and 2) and vehicle body ground is Infinity • Insulation resistance of wire harness is infinity between throttle actuator motor drive terminal (1) and each other terminal at electric throttle body connector • Circuit voltage of each throttle actuator motor drive circuit (1 and 2) is 0 – 1 V with ignition switch turned ON.  <p>I6JB01110058-01</p> <p>Are they in good condition?</p>	Go to Step 3.	Repair or replace throttle actuator motor drive circuit(s).

Step	Action	Yes	No
3	Electric throttle body assembly check 1) Check electric throttle body for performance referring to "Electric Throttle Body Assembly On-Vehicle Inspection in Section 1C". <i>Is it in good condition?</i>	Substitute a known good ECM and recheck.	Repair or replace electric throttle body assembly.

DTC P2108: Throttle Actuator Control Module Performance

S6JB0B1104061

Wiring Diagram

Refer to "DTC P2102: Throttle Actuator Control Motor Circuit Low".

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Throttle actuator power supply voltage is 3 V or less even though its control relay is turned OFF, or throttle actuator power supply voltage is 8.4 V or more even though the relay is turned ON. (1 driving cycle detection logic)	<ul style="list-style-type: none"> Throttle actuator control relay and its circuit ECM

DTC Confirmation Procedure

- 1) With ignition switch turned OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Keep ignition switch is at ON position for 5 seconds or longer.
- 4) Check DTC by using scan tool.

DTC Troubleshooting

Refer to "DTC P2102: Throttle Actuator Control Motor Circuit Low".

DTC P2119: Throttle Actuator Control Throttle Body Range / Performance

S6JB0B1104062

Wiring Diagram

Refer to "DTC P2101: Throttle Actuator Control Motor Circuit Range / Performance".

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Even though throttle motor control is interrupted (throttle valve default position) at the time of detecting failure in electric throttle body, TP is 12 degrees or more, or MAF is 1400 g/min or more. or Even though throttle motor control is interrupted (throttle valve default position) at the time of IG OFF control, TP is 5 degrees or less, or 15 degrees or more. (1 driving cycle detection logic)	<ul style="list-style-type: none"> Electric throttle body assembly ECM

DTC Confirmation Procedure

- 1) With ignition switch turned OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Keep ignition switch is at ON position for 5 seconds or longer.
- 4) Check DTC by using scan tool.

DTC Troubleshooting

NOTE


Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	Electric throttle body assembly check 1) Check electric throttle body for operation and condition referring to "Electric Throttle Body Assembly On-Vehicle Inspection in Section 1C". <i>Is it in good condition?</i>	Substitute a known good ECM and recheck.	Repair or replace electric throttle body assembly.

DTC P2122 / P2123: Pedal Position Sensor (Main) Circuit Low / High

S6JB0B1104063

Wiring Diagram

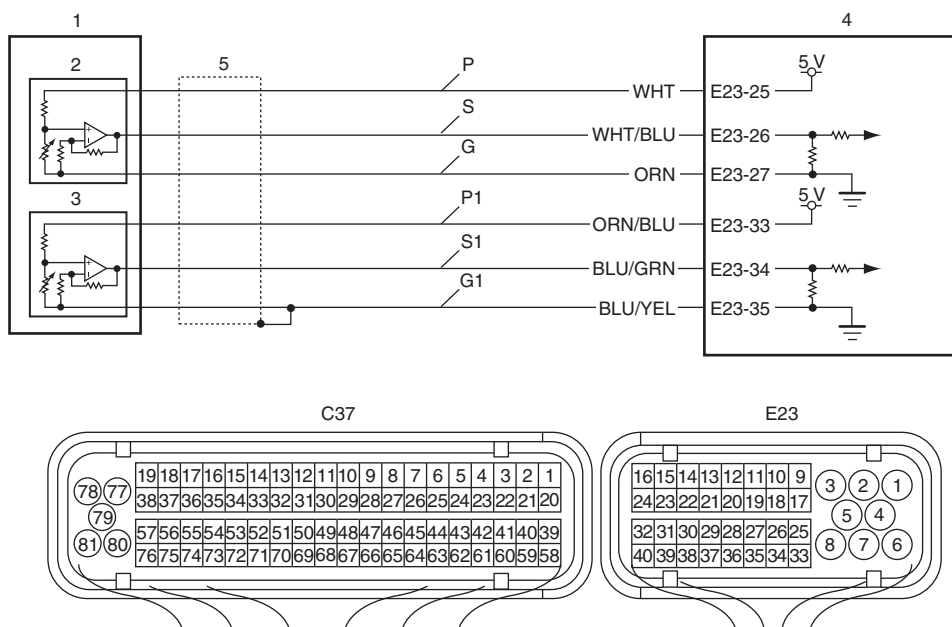

I6JB01110059-02

P: APP sensor (main) power supply circuit	S1: APP sensor (sub) signal circuit	3: APP sensor (sub)
S: APP sensor (main) signal circuit	G1: APP sensor (sub) ground circuit	4: ECM
G: APP sensor (main) ground circuit	1: APP sensor assembly	5: Ground of APP sensor for shield wire
P1: APP sensor (sub) power supply circuit	2: APP sensor (main)	

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P2122: Pedal Position Sensor (Main) Circuit Low Output voltage of pedal position sensor (main) is less than 0.45 V. (1 driving cycle detection logic)	<ul style="list-style-type: none"> APP sensor and its circuit ECM
DTC P2123: Pedal Position Sensor (Main) Circuit High Output voltage of pedal position sensor (main) is more than 4.8 V. (1 driving cycle detection logic)	

DTC Confirmation Procedure

- 1) With ignition switch turned OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Keep the accelerator pedal at idle position for 2 seconds.
- 4) Keep the accelerator pedal at fully depressed position for 2 seconds.
- 5) Repeat Step 3) and 4) for 3 times.
- 6) Check DTC by using scan tool.

DTC Troubleshooting**NOTE**

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions on Engine Service".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	Accelerator pedal position (APP) sensor assembly mounting check 1) Check that APP sensor assembly has been mounted to vehicle body properly (no pinched floor carpet, etc.). <i>Is it in good condition?</i>	Go to Step 3.	Reinstall accelerator pedal position (APP) sensor assembly properly referring to "Accelerator Pedal Position (APP) Sensor Assembly Removal and Installation in Section 1C".
3	APP sensor (main) and its circuit check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ON ignition switch, check "APP Sensor 1 Volt" displayed on scan tool when accelerator pedal is idle position and fully depressed. <i>Is displayed APP sensor value as described voltage in "Scan Tool Data"?</i>	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".	Go to Step 4.

1A-155 Engine General Information and Diagnosis:

Step	Action	Yes	No
4	Wire harness check 1) Turn ignition switch OFF position. 2) Disconnect connectors from APP sensor and ECM. 3) Check for proper terminal connection to APP sensor and ECM connectors. 4) If connections are OK, check that APP sensor (main) circuit is as follows. <ul style="list-style-type: none"> • Wiring harness resistance of each APP sensor (main) power supply, signal and ground circuit is less than 3 Ω • Insulation resistance of each APP sensor (main) power supply and signal circuit is infinity between APP sensor connector and vehicle body ground. • Insulation resistance of wire harness is infinity between APP sensor (main) power supply terminal and each other terminal at APP sensor connector. • Circuit voltage of each APP sensor (main) power supply, signal and ground circuit is 0 – 1 V with ignition switch turned ON <i>Are they in good condition?</i>	Go to Step 5.	Repair or replace APP sensor (main) power supply, signal and/or ground circuit(s).
5	APP sensor power supply voltage check 1) Connect connectors to ECM. 2) Turn ignition switch ON position. 3) Check that circuit voltage is 5 V between APP sensor (main) power supply terminal and vehicle body ground. <i>Is it in good condition?</i>	Go to Step 5.	Substitute a known good ECM and recheck.
6	APP sensor check 1) Check APP sensor for performance referring to “Accelerator Pedal Position (APP) Sensor Assembly Removal and Installation in Section 1C”. <i>Is it in good condition?</i>	Substitute a known good ECM and recheck.	Replace APP sensor assembly.

DTC P2127 / P2128: Pedal Position Sensor (Sub) Circuit Low / High

S6JB0B1104064

Wiring Diagram

Refer to “DTC P2122 / P2123: Pedal Position Sensor (Main) Circuit Low / High”.

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P2127: Pedal Position Sensor (Sub) Circuit Low Output voltage of pedal position sensor (sub) is less than 0.23 V. (1 driving cycle detection logic)	<ul style="list-style-type: none"> • APP sensor and its circuit • ECM
DTC P2128: Pedal Position Sensor (Sub) Circuit High Output voltage of pedal position sensor (sub) is more than 2.4 V. (1 driving cycle detection logic)	

DTC Confirmation Procedure

- 1) With ignition switch turned OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Keep the accelerator pedal at idle position for 2 seconds.
- 4) Keep the accelerator pedal at fully depressed position for 2 seconds.
- 5) Repeat Step 3) and 4) for 3 times.
- 6) Check DTC by using scan tool.

DTC Troubleshooting

NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	APP sensor assembly mounting check 1) Check that APP sensor assembly has been mounted to vehicle body properly (no pinched floor carpet, etc.). <i>Is it in good condition?</i>	Go to Step 3.	Reinstall APP sensor assembly properly referring to "Accelerator Pedal Position (APP) Sensor Assembly Removal and Installation in Section 1C".
3	APP sensor (sub) and its circuit check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ON ignition switch, check "APP Sensor 2 Volt" displayed on scan tool when accelerator pedal is idle position and fully depressed. <i>Is displayed APP sensor value as described voltage in "Scan Tool Data"?</i>	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".	Go to Step 4.
4	Wire harness check 1) Turn ignition switch OFF position. 2) Disconnect connectors from APP sensor and ECM. 3) Check for proper terminal connection to APP sensor and ECM connectors. 4) If connections are OK, check that APP sensor (sub) circuit is as follows. <ul style="list-style-type: none"> Wiring harness resistance of each APP sensor (sub) power supply, signal and ground circuit is less than 3Ω Insulation resistance of each APP sensor (sub) power supply and signal circuit is infinity between AAP sensor connector and vehicle body ground. Insulation resistance of wire harness is infinity between APP sensor (sub) power supply terminal and each other terminal at APP sensor connector. Circuit voltage of each APP sensor (sub) power supply, signal and ground circuit is 0 – 1 V with ignition switch turned ON <i>Are they in good condition?</i>	Go to Step 5.	Repair or replace APP sensor (sub) power supply, signal and/or ground circuit(s).
5	APP sensor power supply voltage check 1) Connect connectors to ECM. 2) Turn ignition switch ON position. 3) Check that circuit voltage is 5 V between APP sensor (sub) power supply terminal and vehicle body ground. <i>Is it in good condition?</i>	Go to Step 5.	Substitute a known good ECM and recheck.


1A-157 Engine General Information and Diagnosis:

Step	Action	Yes	No
6	APP sensor check 1) Check APP sensor for performance referring to "Accelerator Pedal Position (APP) Sensor Assembly On-Vehicle Inspection in Section 1C". <i>Is it in good condition?</i>	Substitute a known good ECM and recheck.	Replace APP sensor assembly.

DTC P2135: Throttle Position Sensor (Main / Sub) Voltage Correction

S6JB0B1104065

Wiring Diagram

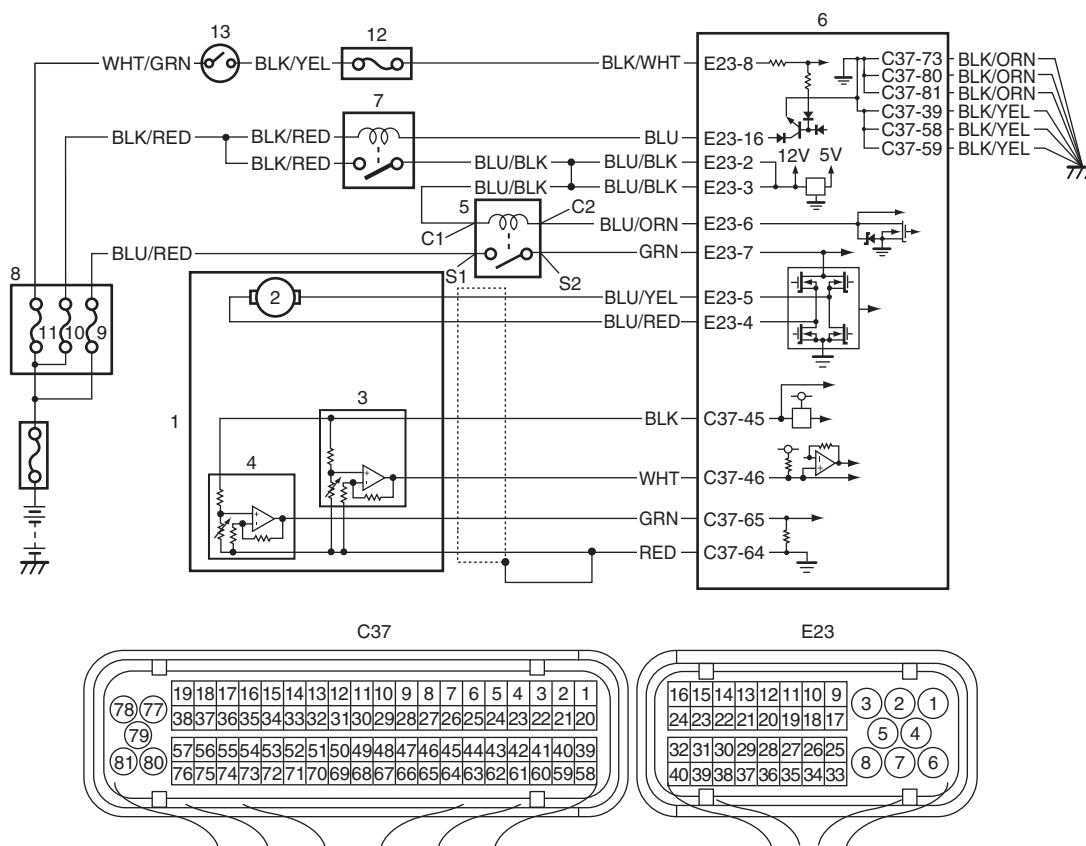

I6JB01110056-05

1: Electric throttle body assembly	6: ECM	11: "IGN" fuse
2: Throttle actuator	7: Main relay	12: "IG COIL" fuse
3: Throttle position sensor (main)	8: Fuse box No.2	13: Ignition switch
4: Throttle position sensor (sub)	9: "THR MOT" fuse	
5: Throttle actuator control relay	10: "FI" fuse	

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Index of correlation between main throttle position sensor and sub throttle position sensor (main throttle position sensor voltage plus sub throttle position sensor voltage minus 4.9 V) is more than 0.2 V. (1 driving cycle detection logic)	<ul style="list-style-type: none"> • TP sensor (main and sub) circuit • Electric throttle body assembly • ECM

DTC Confirmation Procedure


- 1) With ignition switch turned OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Keep the accelerator pedal at idle position for 2 seconds.
- 4) Keep the accelerator pedal at fully depressed position for 2 seconds.
- 5) Repeat Step 3) and 4) for 3 times.
- 6) Check DTC by using scan tool.

DTC Troubleshooting

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	TP sensor and its circuit check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ON ignition switch, check "TP Sensor 1 Volt" and "TP Sensor 2 Volt" displayed on scan tool when accelerator pedal is idle position and fully depressed. <i>Is displayed TP sensor value as described voltage in "Scan Tool Data"?</i>	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".	Go to Step 3.
3	TP sensor check 1) Check TP sensor for performance referring to "Electric Throttle Body Assembly On-Vehicle Inspection in Section 1C". <i>Is it in good condition?</i>	Go to Step 4.	Replace electric throttle body assembly.
4	Wire harness check 1) Check TP sensor (main and sub) circuit for condition. For TP sensor (main) circuit, referring to Step 3 of "DTC P0122 / P0123: Throttle Position Sensor (Main) Circuit Low / High Input". For TP sensor (sub) circuit, referring to Step 3 of "DTC P0222 / P0223: Throttle Position Sensor (Sub) Circuit Low/High". <i>Is it in good condition?</i>	Substitute a known good ECM and recheck.	Repair or replace.

DTC P2138: Pedal Position Sensor (Main / Sub) Voltage Correction

S6JB0B1104066

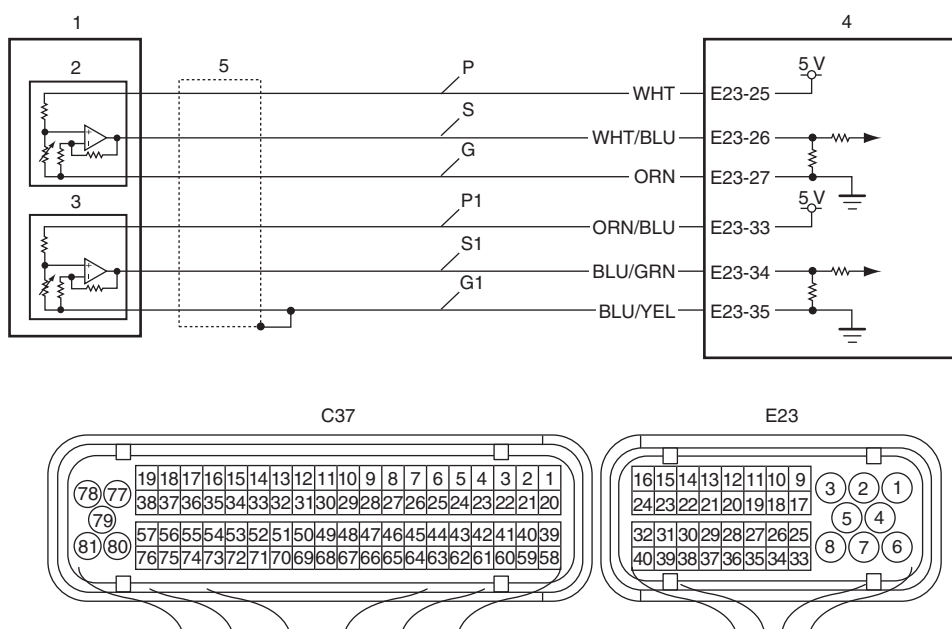Wiring Diagram

I6JB01110061-02

P: APP sensor (main) power supply circuit	S1: APP sensor (sub) signal circuit	3: APP sensor (sub)
S: APP sensor (main) signal circuit	G1: APP sensor (sub) ground circuit	4: ECM
G: APP sensor (main) ground circuit	1: APP sensor assembly	5: Ground of APP sensor for shield wire
P1: APP sensor (sub) power supply circuit	2: APP sensor (main)	

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Index of correlation between the main accelerator pedal position sensor and sub accelerator pedal position sensor (1/2 main accelerator pedal position sensor voltage minus sub accelerator pedal position sensor voltage) is more than 0.28 V. (1 driving cycle detection logic)	<ul style="list-style-type: none"> APP sensor and its circuit ECM

DTC Confirmation Procedure

- 1) With ignition switch turned OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Keep the accelerator pedal at idle position for 2 seconds.
- 4) Keep the accelerator pedal at fully depressed position for 2 seconds.
- 5) Repeat Step 3) and 4) for 3 times.
- 6) Check DTC by using scan tool.

DTC Troubleshooting


NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	TP sensor and its circuit check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ON ignition switch, check "APP Sensor 1 Volt" and "APP Sensor 2 Volt" displayed on scan tool when accelerator pedal is idle position and fully depressed. <i>Is displayed each APP sensor value as described voltage in "Scan Tool Data"?</i>	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".	Go to Step 3.
3	APP sensor check 1) Check APP sensor for performance referring to "Accelerator Pedal Position (APP) Sensor Assembly On-Vehicle Inspection in Section 1C". <i>Is it in good condition?</i>	Go to Step 4.	Replace APP sensor assembly.
4	Wire harness check 1) Check APP sensor (main and sub) circuit for condition. For APP sensor (main) circuit, referring to Step 4 of "DTC P2122 / P2123: Pedal Position Sensor (Main) Circuit Low / High". For TP sensor (sub) circuit, referring to Step 4 of "DTC P2127 / P2128: Pedal Position Sensor (Sub) Circuit Low / High". <i>Is it in good condition?</i>	Substitute a known good ECM and recheck.	Repair or replace.

DTC P2195 / P2196: O2 Sensor Signal Stuck Lean / Stuck Rich (Sensor-1, Bank-1)

S6JB0B1104067

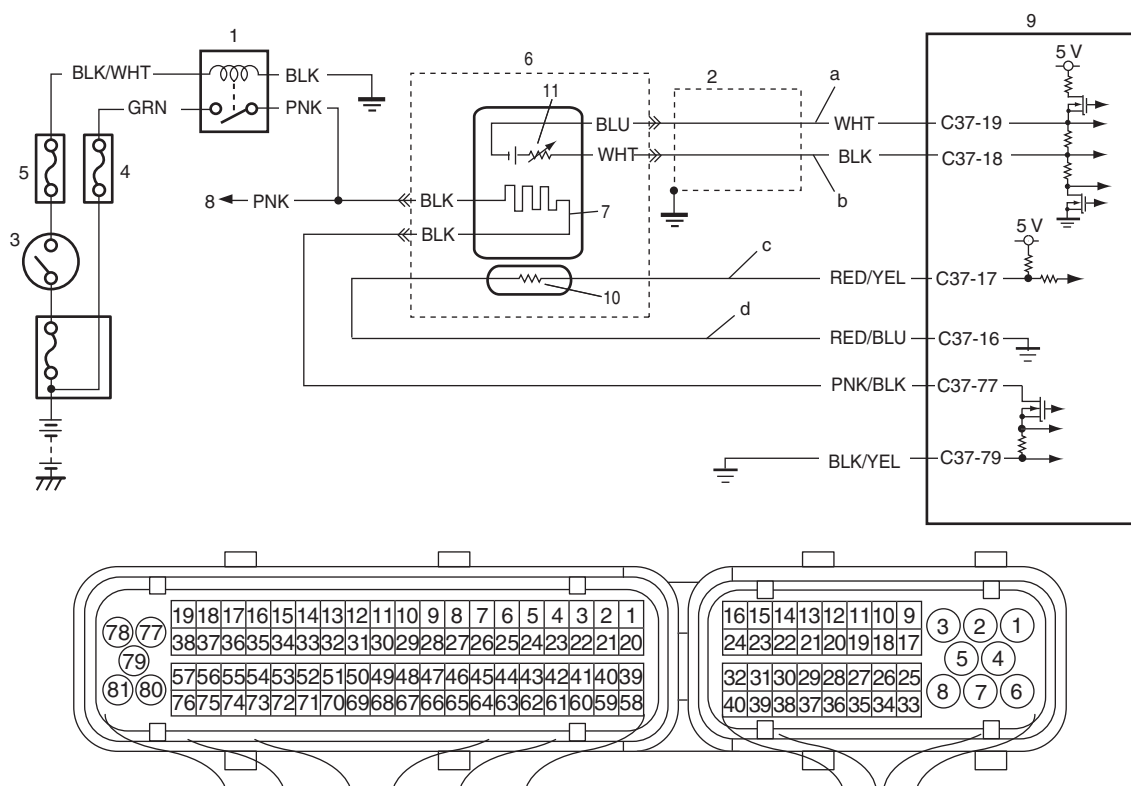System and Wiring Diagram

I6JB01110102-01

a. Signal (+) circuit of A/F sensor (bank-1)	1. HO2S heater relay	5. IG COIL fuse	9. ECM
b. Signal (-) circuit of A/F sensor (bank-1)	2. Shield wire	6. A/F sensor	10. Adjusting resistor (if equipped)
c. Adjusting resistor (+) circuit of A/F sensor (bank-1)	3. Ignition Switch	7. A/F sensor heater	11. A/F sensor element
d. Adjusting resistor (-) circuit A/F sensor (bank-1)	4. O2 HTR fuse	8. To A/F sensor (bank-2), HO2S (bank-1 and -2)	

A/F Sensor Description

Refer to "A/F Sensor Description"

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P2195 O2 Sensor Signal Stuck Lean (Sensor-1, Bank-1): Short term fuel trim is higher than 130% for 30 seconds even though HO2S (bank-1) signal voltage is higher than 0.5 V. (2 driving cycle detection logic)	<ul style="list-style-type: none"> A/F sensor circuit A/F sensor ECM
DTC P2196 O2 Sensor Signal Stuck Rich (Sensor-1, Bank-1): Short term fuel trim is lower than 70% for 30 seconds even though HO2S (bank-1) signal voltage is lower than 0.5 V. (2 driving cycle detection logic)	

DTC Confirmation Procedure

⚠ WARNING

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and very careful during testing to avoid occurrence of an accident.
- Road test should be carried out with 2 persons, a driver and a tester, on a level road.

NOTE

Check to make sure that the following conditions are satisfied when using this “DTC Confirmation Procedure”.

- Intake air temperature: -10°C (14°F) to 80°C (176°F)
- Engine coolant temperature: 20°C (68°F) or more
- Atmospheric pressure: higher than 75 kPa (560 mmHg) (Altitude: lower than 2790 m (9150 ft))
- The following DTCs are not detected: ECT sensor, CMP sensor, IAT sensor, TP sensor, barometric pressure sensor, A/F sensor heater, HO2S sensor, HO2S sensor heater and A/F sensor (other than DTC P2195 and DTC P2196)

- 1) With ignition switch OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool.
- 3) Start engine and warm up to normal operating temperature.
- 4) Drive vehicle at 40 mph (60 km/h) or higher. (engine speed: 2500 – 3000 r/min.)
- 5) Keep above vehicle speed for 4 min. or more. (Throttle valve opening is kept constant in this step.)
- 6) Check if DTC and pending DTC exist by using scan tool. If not, check if oxygen sensor monitoring test has been completed by using scan tool. If not in both of above checks (i.e., no DTC and pending DTC and oxygen sensor monitoring test not completed), check vehicle condition (environmental) and repeat Step 3) through 6).

DTC Troubleshooting

NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to “Precautions for DTC Troubleshooting”.

Step	Action	Yes	No
1	Was “Engine and Emission Control System Check” performed?	Go to Step 2.	Go to “Engine and Emission Control System Check”.
2	DTC check <i>Is there DTC P0171 or P0172?</i>	Go to applicable DTC.	Go to Step 3.
3	Intake system and exhaust system for leakage check 1) Check intake system and exhaust system for leakage. <i>Is it in good condition?</i>	Go to Step 4.	repair or replace defective parts.


1A-163 Engine General Information and Diagnosis:

Step	Action	Yes	No
4	A/F sensor circuit check <ol style="list-style-type: none"> 1) Disconnect connector from A/F sensor (bank-1) with ignition switch turned OFF. 2) Check for proper terminal connection to A/F sensor (bank-1) connector. 3) If connections are OK, check that A/F sensor (bank-1) circuit is as follows. <ul style="list-style-type: none"> • Wiring harness resistance of each “Signal (+) circuit of A/F sensor (bank-1)”, “Signal (–) circuit of A/F sensor (bank-1)”, “Adjusting resistor (+) circuit of A/F sensor (bank-1)” and “Adjusting resistor (–) circuit A/F sensor (bank-1)” is less than 1 Ω. <p><i>Is it in good condition?</i></p>	Replace A/F sensor (bank-1).	Repair or replace defective wiring harness.

DTC P2197 / P2198: O2 Sensor Signal Stuck Lean / Stuck Rich (Sensor-1, Bank-2)

S6JB0B1104068

System and Wiring Diagram

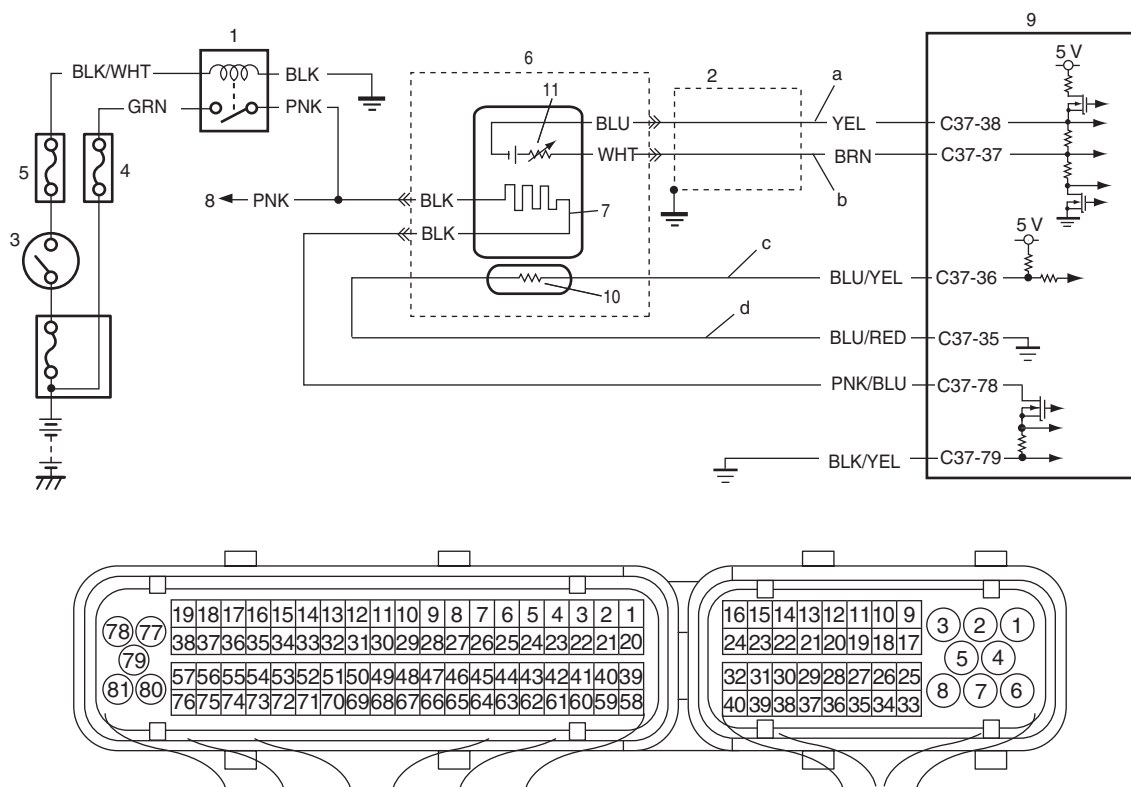

I6JB01110103-01

a. Signal (+) circuit of A/F sensor (bank-2)	1. HO2S heater relay	5. IG COIL fuse	9. ECM
b. Signal (–) circuit of A/F sensor (bank-2)	2. Shield wire	6. A/F sensor	10. Adjusting resistor (if equipped)
c. Adjusting resistor (+) circuit of A/F sensor (bank-2)	3. Ignition Switch	7. A/F sensor heater	11. A/F sensor element
d. Adjusting resistor (–) circuit A/F sensor (bank-2)	4. O2 HTR fuse	8. To A/F sensor (bank-1), HO2S (bank-1 and -2)	

A/F Sensor Description

Refer to “A/F Sensor Description”

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P2197 O2 Sensor Signal Stuck Lean (Sensor-1, Bank-2): Short term fuel trim is higher than 130% for 30 seconds even though HO2S (bank-2) signal voltage is higher than 0.5 V. (2 driving cycle detection logic)	<ul style="list-style-type: none"> • A/F sensor circuit • A/F sensor • ECM
DTC P2198 O2 Sensor Signal Stuck Rich (Sensor-1, Bank-2): Short term fuel trim is lower than 70% for 30 seconds even though HO2S (bank-2) signal voltage is lower than 0.5 V. (2 driving cycle detection logic)	

DTC Confirmation Procedure**▲ WARNING**

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and be very careful during testing to avoid occurrence of an accident.
- Road test should be carried out by 2 persons, a driver and a tester, on a level road.

NOTE

Check to make sure that following conditions are satisfied when using this “DTC Confirmation Procedure”.

- Intake air temperature: -10°C (14°F) to 80°C (176°F)
- Engine coolant temperature: 30°C (86°F) or more
- Atmospheric pressure: higher than 75 kPa (560 mmHg) (Altitude: lower than 2790 m (9150 ft))
- The following DTCs are not detected: ECT sensor, CMP sensor, IAT sensor, TP sensor, barometric pressure sensor, A/F sensor heater, HO2S sensor, HO2S sensor heater and A/F sensor (other than DTC P2197 and DTC P2198)

- 1) With ignition switch OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC using scan tool.
- 3) Start engine and warm up to normal operating temperature.
- 4) Drive vehicle at 40 mph (60 km/h) or higher. (engine speed: 2500 – 3000 r/min.)
- 5) Keep above vehicle speed for 4 min. or more. (Throttle valve opening is kept constant in this step.)
- 6) Check if DTC and pending DTC exist by using scan tool. If not, check if oxygen sensor monitoring test has been completed by using scan tool. If not in both of above checks (i.e., no DTC and pending DTC and oxygen sensor monitoring test not completed), check vehicle condition (environmental) and repeat Step 3) through 6).

DTC Troubleshooting**NOTE**

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to “Precautions for DTC Troubleshooting”.

Step	Action	Yes	No
1	Was “Engine and Emission Control System Check” performed?	Go to Step 2.	Go to “Engine and Emission Control System Check”.
2	DTC check <i>Is there DTC P0174 or P0175?</i>	Go to applicable DTC.	Go to Step 3.
3	Intake system and exhaust system for leakage check 1) Check intake system and exhaust system for leakage. <i>Is it in good condition?</i>	Go to Step 4.	Repair or replace defective parts.

1A-165 Engine General Information and Diagnosis:

Step	Action	Yes	No
4	A/F sensor circuit check 1) Disconnect connector from A/F sensor (bank-2) with ignition switch turned OFF. 2) Check for proper terminal connection to A/F sensor (bank-2) connector. 3) If connections are OK, check that A/F sensor circuit is as follows. <ul style="list-style-type: none"> Wiring harness resistance of each "Signal (+) circuit of A/F sensor (bank-2)", "Signal (–) circuit of A/F sensor (bank-2)", "Adjusting resistor (+) circuit of A/F sensor (bank-2)" and "Adjusting resistor (–) circuit of A/F sensor (bank-2)" is less than 1 Ω. <i>Is it in good condition?</i>	Replace A/F sensor (bank-2).	Repair or replace defective wire.

DTC P2227/ P2228 / P2229: Barometric Pressure Circuit Malfunction

S6JB0B1104069

DTC P2227: Barometric Pressure Circuit Range / Performance**DTC P2228: Barometric Pressure Circuit Low****DTC P2229: Barometric Pressure Circuit High****System Description**

Barometric pressure sensor is installed in ECM.

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P2227: Barometric Pressure Circuit Range / Performance Difference between measured barometric pressure and estimated barometric pressure based on MAP is more than 25.3 kPa at engine start. (2 driving cycle detection logic, monitoring once per driving cycle)	<ul style="list-style-type: none"> Barometric pressure sensor in ECM MAP sensor
DTC P2228: Barometric Pressure Circuit Low Barometric pressure sensor voltage is less than 0.1 V for 19 seconds or longer. (1 driving cycle detection logic)	
DTC P2229: Barometric Pressure Circuit High Barometric pressure sensor voltage is more than 5.1 V for 19 seconds or longer. (1 driving cycle detection logic)	

DTC Confirmation Procedure**DTC P2227:****NOTE**

Check to make sure that the following conditions are satisfied when using this "DTC Confirmation Procedure".

- Intake air temperature: between –10 °C and 45 °C (14 °F and 113 °F)
- Engine coolant temperature: between –10 °C and 110 °C (14 °F and 230 °F)
- The following DTCs are not detected: CMP sensor, TP sensor and IAC system

- With ignition switch OFF, connect scan tool.
- Turn ON ignition switch and clear DTC by using scan tool if any.
- Start engine.
- Check DTC and pending DTC by using scan tool.

DTC P2228 / P2229:


- 1) With ignition switch OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC by using scan tool if any.
- 3) Start engine and run it for 10 sec.
- 4) Check DTC and pending DTC by using scan tool.

DTC Troubleshooting

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	Is DTC P2227 set?	Go to Step 3.	Substitute a known good ECM and recheck.
3	MAP sensor check 1) Check MAP sensor and its circuit referring to "DTC P0107 / P0108: Manifold Absolute Pressure Sensor Circuit Low / High Input". Is check result satisfactory?	Substitute a known good ECM and recheck.	Repair or replace.

DTC P2237: O2 Sensor Positive Current Control Circuit / Open (Sensor-1, Bank-1)

S6JB0B1104070

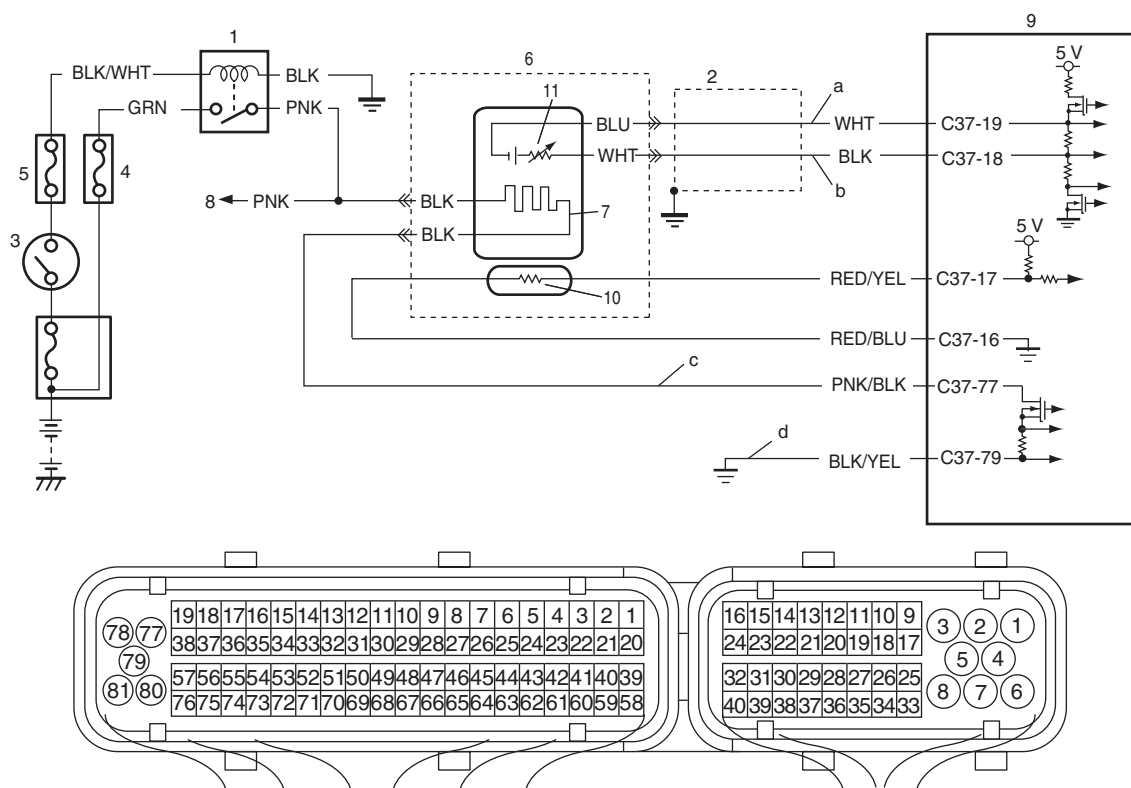System and Wiring Diagram

I6JB01110104-01

a. Signal (+) circuit of A/F sensor (bank-1)	1. HO2S heater relay	5. IG COIL fuse	9. ECM
b. Signal (-) circuit of A/F sensor (bank-1)	2. Shield wire	6. A/F sensor	10. Adjusting resistor (if equipped)
c. Control circuit of A/F sensor (bank-1) heater	3. Ignition Switch	7. A/F sensor heater	11. A/F sensor element
d. Control ground circuit of A/F sensor (bank-1) heater	4. O2 HTR fuse	8. To A/F sensor (bank-2), HO2S (bank-1 and -2) (if equipped)	

A/F Sensor Description

Refer to "A/F Sensor Description"

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Impedance of A/F sensor element is higher than 250 Ω for more than 5 sec. even though A/F sensor heater is turned ON with engine running. (1 driving cycle detection logic)	<ul style="list-style-type: none"> • A/F sensor circuit • A/F sensor • ECM

DTC Confirmation Procedure**NOTE**

Check to make sure that following conditions are satisfied when using this “DTC Confirmation Procedure”.

- The following DTC is not detected: A/F sensor heater

- 1) With ignition switch turned OFF, connect scan tool to DLC.
- 2) Turn ON ignition switch and clear DTC.
- 3) Start engine and warm up to normal operating temperature.
- 4) Run engine at idle speed for 1 min. or more.
- 5) Check DTC and pending DTC.

DTC Troubleshooting**NOTE**

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to “Precautions for DTC Troubleshooting”.

Step	Action	Yes	No
1	Was “Engine and Emission Control System Check” performed?	Go to Step 2.	Go to “Engine and Emission Control System Check”.
2	A/F sensor signal check <ol style="list-style-type: none"> 1) Connect scan tool with ignition switch turned OFF. 2) Warm up engine to normal operating temperature and keep it at 2000 r/min. for 60 sec. 3) Repeat racing engine (Repeat depressing accelerator pedal 5 to 6 times continuously to enrich A/F mixture and take foot off from pedal to enlean it). 4) Check for A/F sensor (bank-1) output current displayed on scan tool. <p>Does A/F sensor output current between -0.2 mA and 0.2 mA?</p>	Intermittent trouble. Check for intermittent referring to “Intermittent and Poor Connection Inspection in Section 00”.	Go to Step 3.
3	A/F sensor circuit check <ol style="list-style-type: none"> 1) Disconnect connector from A/F sensor (bank-1) with ignition switch turned OFF. 2) Check for proper terminal connection to A/F sensor (bank-1) connector and ECM connector. 3) If connections are OK, check that A/F sensor (bank-1) circuit is as follows. <ul style="list-style-type: none"> • Wiring harness resistance of each “Signal (+) circuit of A/F sensor (bank-1)”, “Signal (–) circuit of A/F sensor (bank-1)”, “Control circuit of A/F sensor (bank-1) heater” and “Control ground circuit of A/F sensor (bank-1) heater” is less than 1 Ω. <p>Are they in good condition?</p>	Go to Step 4.	Repair or replace defective wiring harness.

Step	Action	Yes	No
4	A/F sensor heater check 1) Check heater resistance of A/F sensor (bank-1) referring to "Air Fuel Ratio (A/F) Sensor On-Vehicle Inspection in Section 1C". <i>Is A/F sensor heater in good condition?</i>	Substitute a known good ECM and recheck. If ECM OK, replace A/F sensor (bank-1).	Replace A/F sensor (bank-1).

DTC P2238 / P2239: O2 Sensor Positive Current Control Circuit Low / High (Sensor-1, Bank-1)

S6JB0B1104071

Wiring Diagram

Refer to "DTC P2237: O2 Sensor Positive Current Control Circuit / Open (Sensor-1, Bank-1)"

A/F Sensor Description

Refer to "A/F Sensor Description"

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P2238 O2 Sensor Positive Current Control Circuit Low (Sensor-1, Bank-1): Circuit voltage of A/F sensor (+) terminal is lower than 0.4 V or A/F sensor circuit is short between (+) terminal wire and (–) terminal wire with engine running. (1 driving cycle detection logic)	<ul style="list-style-type: none"> • A/F sensor circuit • A/F sensor • ECM
DTC P2239 O2 Sensor Positive Current Control Circuit High (Sensor-1, Bank-1): Circuit voltage of A/F sensor (+) terminal is higher than 3.5 V with engine running (1 driving cycle detection logic)	

DTC Confirmation Procedure**NOTE**

Check to make sure that following conditions are satisfied when using this "DTC Confirmation Procedure".

- The following DTC is not detected: A/F sensor heater

- 1) With ignition switch turned OFF, connect scan tool to DLC.
- 2) Turn ON ignition switch and clear DTC.
- 3) Start engine and warm up to normal operating temperature.
- 4) Run engine at idle speed for 1 min. or more.
- 5) Check DTC and pending DTC.

DTC Troubleshooting


NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	A/F sensor signal check 1) Connect scan tool with ignition switch turned OFF. 2) Warm up engine to normal operating temperature and keep it at 2000 r/min. for 60 sec. 3) Repeat racing engine (Repeat depressing accelerator pedal 5 to 6 times continuously to enrich A/F mixture and take foot off from pedal to enlean it). 4) Check for A/F sensor (bank-1) output current displayed on scan tool. <i>Does A/F sensor output current between -0.2 mA and 0.2 mA?</i>	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".	Go to Step 3.
3	A/F sensor circuit check 1) Disconnect connector from A/F sensor (bank-1) and ECM with ignition switch turned OFF. 2) Check for proper terminal connection to A/F sensor (bank-1) connector and ECM connector. 3) If connections are OK, check that A/F sensor (bank-1) circuit is as follows. <ul style="list-style-type: none"> Wiring harness resistance of each "Signal (+) circuit of A/F sensor (bank-1)", "Signal (-) circuit of A/F sensor (bank-1)" is less than $1\ \Omega$. Insulation resistance between "Signal (+) circuit of A/F sensor (bank-1)" and vehicle body ground is infinity. Insulation resistance between "Signal (+) circuit of A/F sensor (bank-1)" and "Signal (-) circuit of A/F sensor (bank-1)" is infinity. Insulation resistance of wire harness is infinity between "Signal (+) circuit of A/F sensor (bank-1)" terminal and each other terminal at A/F sensor (bank-1) connector. Insulation resistance of wire harness is infinity between "Signal (-) circuit of A/F sensor (bank-1)" terminal and each other terminal at A/F sensor (bank-1) connector. Circuit voltage between "Signal (+) circuit of A/F sensor (bank-1)" and vehicle body ground is 0 V with ignition switch tuned ON. <i>Are they in good condition?</i>	Go to Step 4.	Repair or replace defective wiring harness.
4	A/F sensor heater check 1) Check A/F sensor (bank-1) referring to "Air Fuel Ratio (A/F) Sensor On-Vehicle Inspection in Section 1C". <i>Is A/F sensor in good condition?</i>	Substitute a known good ECM and recheck. If ECM OK, replace A/F sensor (bank-1).	Replace A/F sensor (bank-1).

DTC P2240: O2 Sensor Positive Current Control Circuit / Open (Sensor-1, Bank-2)

S6JB0B1104072

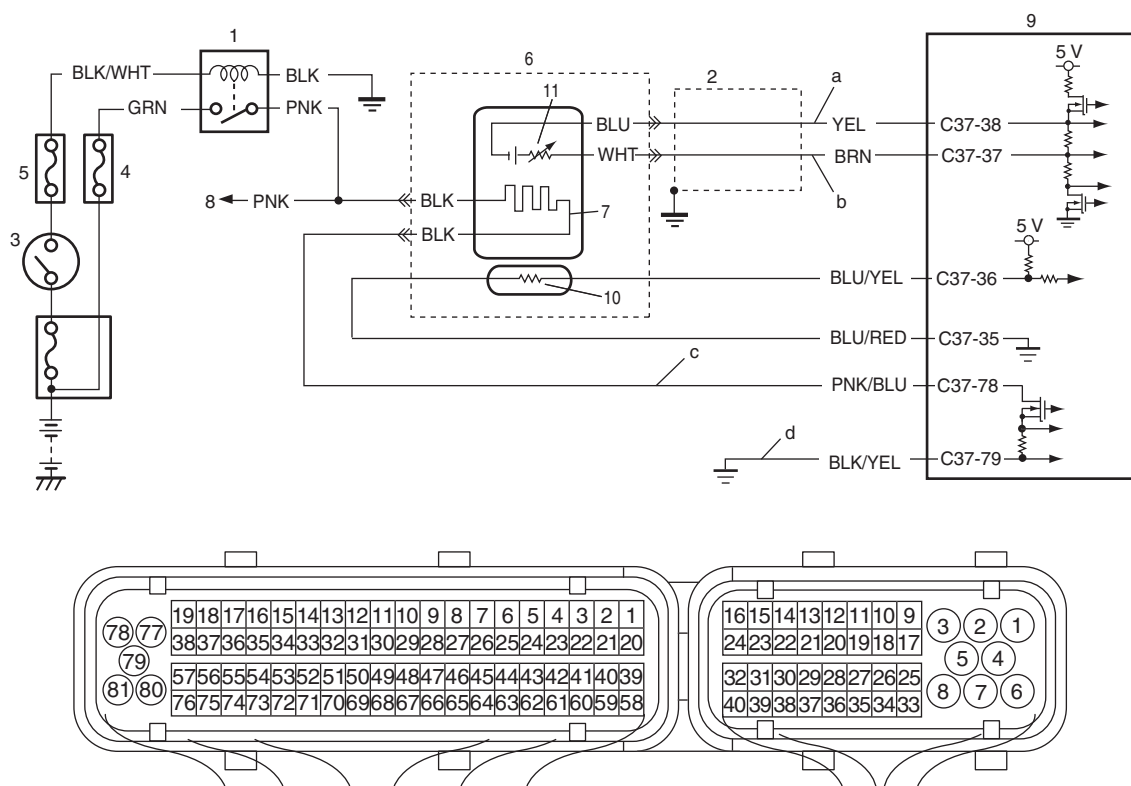System and Wiring Diagram

I6JB01110105-01

a. Signal (+) circuit of A/F sensor (bank-2)	1. HO2S heater relay	5. IG COIL fuse	9. ECM
b. Signal (-) circuit of A/F sensor (bank-2)	2. Shield wire	6. A/F sensor	10. Adjusting resistor (if equipped)
c. Control circuit of A/F sensor (bank-2) heater	3. Ignition Switch	7. A/F sensor heater	11. A/F sensor element
d. Control ground circuit of A/F sensor (bank-2) heater	4. O2 HTR fuse	8. To A/F sensor (bank-1), HO2S (bank-1 and -2) (if equipped)	

A/F Sensor Description

Refer to "A/F Sensor Description"

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Impedance of A/F sensor element is higher than 250 Ω for more than 5 sec. even though A/F sensor heater is turned ON with engine running. (1 driving cycle detection logic)	<ul style="list-style-type: none"> A/F sensor circuit A/F sensor ECM

DTC Confirmation Procedure

NOTE

Check to make sure that following conditions are satisfied when using this “DTC Confirmation Procedure”.

- The following DTC is not detected: A/F sensor heater

- 1) With ignition switch turned OFF, connect scan tool to DLC.
- 2) Turn ON ignition switch and clear DTC.
- 3) Start engine and warm up to normal operating temperature.
- 4) Run engine at idle speed for 1 min. or more.
- 5) Check DTC and pending DTC.

DTC Troubleshooting

NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to “Precautions for DTC Troubleshooting”.

Step	Action	Yes	No
1	Was “Engine and Emission Control System Check” performed?	Go to Step 2.	Go to “Engine and Emission Control System Check”.
2	A/F sensor signal check <ol style="list-style-type: none"> 1) Connect scan tool with ignition switch turned OFF. 2) Warm up engine to normal operating temperature and keep it at 2000 r/min. for 60 sec. 3) Repeat racing engine (Repeat depressing accelerator pedal 5 to 6 times continuously to enrich A/F mixture and take foot off from pedal to enlean it). 4) Check for A/F sensor (bank-2) output current displayed on scan tool. <p>Does A/F sensor output current between -0.2 mA and 0.2 mA?</p>	Intermittent trouble. Check for intermittent referring to “Intermittent and Poor Connection Inspection in Section 00”.	Go to Step 3.
3	A/F sensor circuit check <ol style="list-style-type: none"> 1) Disconnect connector from A/F sensor (bank-2) with ignition switch turned OFF. 2) Check for proper terminal connection to A/F sensor (bank-2) connector and ECM connector. 3) If connections are OK, check that A/F sensor (bank-2) circuit is as follows. <ul style="list-style-type: none"> • Wiring harness resistance of each “Signal (+) circuit of A/F sensor (bank-2)”, “Signal (–) circuit of A/F sensor (bank-2)”, “Control circuit of A/F sensor (bank-2) heater” and “Control ground circuit of A/F sensor (bank-2) heater” is less than $1\ \Omega$. <p>Are they in good condition?</p>	Go to Step 4.	Repair or replace defective wiring harness.
4	A/F sensor heater check <ol style="list-style-type: none"> 1) Check heater resistance of A/F sensor (bank-2) referring to “Air Fuel Ratio (A/F) Sensor On-Vehicle Inspection in Section 1C”. <p>Is A/F sensor heater in good condition?</p>	Substitute a known good ECM and recheck. If ECM OK, replace A/F sensor (bank-2).	Replace A/F sensor (bank-2).

DTC P2241 / P2242: O2 Sensor Positive Current Control Circuit Low / High (Sensor-1, Bank-2)

S6JB0B1104073

Wiring Diagram

Refer to "DTC P2240: O2 Sensor Positive Current Control Circuit / Open (Sensor-1, Bank-2)"

A/F Sensor Description

Refer to "A/F Sensor Description"

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P2241 O2 Sensor Positive Current Control Circuit Low (Sensor-1, Bank-2): Circuit voltage of A/F sensor (+) terminal is lower than 0.4 V or A/F sensor circuit is short between (+) terminal wire and (–) terminal wire with engine running. (1 driving cycle detection logic)	<ul style="list-style-type: none"> • A/F sensor circuit • A/F sensor • ECM
DTC P2242 O2 Sensor Positive Current Control Circuit High (Sensor-1, Bank-2): Circuit voltage of A/F sensor (+) terminal is higher than 3.5 V with engine running (1 driving cycle detection logic)	

DTC Confirmation Procedure**NOTE**

Check to make sure that following conditions are satisfied when using this "DTC Confirmation Procedure".

- The following DTC is not detected: A/F sensor heater

- 1) With ignition switch turned OFF, connect scan tool to DLC.
- 2) Turn ON ignition switch and clear DTC.
- 3) Start engine and warm up to normal operating temperature.
- 4) Run engine at idle speed for 1 min. or more.
- 5) Check DTC and pending DTC.

DTC Troubleshooting

NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	A/F sensor signal check 1) Connect scan tool with ignition switch turned OFF. 2) Warm up engine to normal operating temperature and keep it at 2000 r/min. for 60 sec. 3) Repeat racing engine (Repeat depressing accelerator pedal 5 to 6 times continuously to enrich A/F mixture and take foot off from pedal to enlean it). 4) Check for A/F sensor (bank-2) output current displayed on scan tool. <i>Does A/F sensor output current between -0.2 mA and 0.2 mA?</i>	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".	Go to Step 3.
3	A/F sensor circuit check 1) Disconnect connector from A/F sensor (bank-2) with ignition switch turned OFF. 2) Check for proper terminal connection to A/F sensor (bank-2) connector and ECM connector. 3) If connections are OK, check that A/F sensor (bank-2) circuit is as follows. <ul style="list-style-type: none"> Wiring harness resistance of each "Signal (+) circuit of A/F sensor (bank-2)", "Signal (-) circuit of A/F sensor (bank-2)" is less than $1\ \Omega$. Insulation resistance between "Signal (+) circuit of A/F sensor (bank-2)" and vehicle body ground is infinity. Insulation resistance of wire harness is infinity between "Signal (+) circuit of A/F sensor (bank-2)" terminal and each other terminal at A/F sensor (bank-2) connector. Insulation resistance of wire harness is infinity between "Signal (-) circuit of A/F sensor (bank-2)" terminal and each other terminal at A/F sensor (bank-2) connector. Circuit voltage between "Signal (+) circuit of A/F sensor (bank-2)" and vehicle body ground is 0 V with ignition switch tuned ON. <i>Are they in good condition?</i>	Go to Step 4.	Repair or replace defective wire(s).
4	A/F sensor heater check 1) Check A/F sensor (bank-2) referring to "Air Fuel Ratio (A/F) Sensor On-Vehicle Inspection in Section 1C". <i>Is A/F sensor heater in good condition?</i>	Substitute a known good ECM and recheck. if ECM OK, replace A/F sensor (bank-2).	Replace A/F sensor (bank-2).

DTC P2252 / P2253: O2 Sensor Negative Current Control Circuit Low/High (Sensor-1, Bank-1)

S6JB0B1104074

Wiring Diagram

Refer to "DTC P2237: O2 Sensor Positive Current Control Circuit / Open (Sensor-1, Bank-1)"

A/F Sensor Description

Refer to "A/F Sensor Description"

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P2252 O2 Sensor Negative Current Control Circuit Low (Sensor-1, Bank-1): Circuit voltage of A/F sensor (–) terminal is lower than 0.4 V with engine running. (1 driving cycle detection logic)	<ul style="list-style-type: none"> • A/F sensor circuit • A/F sensor • ECM
DTC P2253 O2 Sensor Negative Current Control Circuit High (Sensor-1, Bank-1): Circuit voltage of A/F sensor (–) terminal is higher than 3.5 V with engine running (1 driving cycle detection logic)	

DTC Confirmation Procedure**NOTE**

Check to make sure that following conditions are satisfied when using this "DTC Confirmation Procedure".

- The following DTC is not detected: A/F sensor heater

- 1) With ignition switch turned OFF, connect scan tool to DLC.
- 2) Turn ON ignition switch and clear DTC.
- 3) Start engine and warm up to normal operating temperature.
- 4) Run engine at idle speed for 1 min. or more.
- 5) Check DTC and pending DTC.

DTC Troubleshooting

NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	A/F sensor signal check 1) Connect scan tool with ignition switch turned OFF. 2) Warm up engine to normal operating temperature and keep it at 2000 r/min. for 60 sec. 3) Repeat racing engine (Repeat depressing accelerator pedal 5 to 6 times continuously to enrich A/F mixture and take foot off from pedal to enlean it). 4) Check for A/F sensor (bank-1) output current displayed on scan tool. <i>Does A/F sensor output current between -0.2 mA and 0.2 mA?</i>	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".	Go to Step 3.
3	A/F sensor circuit check 1) Disconnect connector from A/F sensor (bank-1) with ignition switch turned OFF. 2) Check for proper terminal connection to A/F sensor (bank-1) connector and ECM connector. 3) If connections are OK, check that A/F sensor (bank-1) circuit is as follows. <ul style="list-style-type: none"> Wiring harness resistance of each "Signal (+) circuit of A/F sensor (bank-1)", "Signal (-) circuit of A/F sensor (bank-1)" is less than $1\ \Omega$. Insulation resistance between "Signal (-) circuit of A/F sensor (bank-1)" and vehicle body ground is infinity. Insulation resistance between "Signal (+) circuit of A/F sensor (bank-1)" and "Signal (-) circuit of A/F sensor (bank-1)" is infinity. Insulation resistance of wire harness is infinity between "Signal (+) circuit of A/F sensor (bank-1)" terminal and each other terminal at A/F sensor (bank-1) connector. Insulation resistance of wire harness is infinity between "Signal (-) circuit of A/F sensor (bank-1)" terminal and each other terminal at A/F sensor (bank-1) connector. Circuit voltage between "Signal (-) circuit of A/F sensor (bank-1)" and vehicle body ground is 0 V with ignition switch tuned ON. <i>Are they in good condition?</i>	Go to Step 4.	Repair or replace defective wiring harness.
4	A/F sensor heater check 1) Check A/F sensor (bank-1) referring to "Air Fuel Ratio (A/F) Sensor On-Vehicle Inspection in Section 1C". <i>Is A/F sensor in good condition?</i>	Substitute a known good ECM and recheck. If ECM OK, replace A/F sensor (bank-1).	Replace A/F sensor (bank-1).

DTC P2255 / P2256: O2 Sensor Negative Current Control Circuit Low/High (Sensor-1, Bank-2)

S6JB0B1104075

Wiring Diagram

Refer to "DTC P2240: O2 Sensor Positive Current Control Circuit / Open (Sensor-1, Bank-2)"

A/F Sensor Description

Refer to "A/F Sensor Description"

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P2255 O2 Sensor Negative Current Control Circuit Low (Sensor-1, Bank-2): Circuit voltage of A/F sensor (–) terminal is lower than 0.4 V with engine running. (1 driving cycle detection logic)	<ul style="list-style-type: none"> • A/F sensor circuit • A/F sensor • ECM
DTC P2256 O2 Sensor Negative Current Control Circuit High (Sensor-1, Bank-2): Circuit voltage of A/F sensor (–) terminal is higher than 3.5 V with engine running. (1 driving cycle detection logic)	

DTC Confirmation Procedure**NOTE**

Check to make sure that following conditions are satisfied when using this "DTC Confirmation Procedure".

- The following DTC is not detected: A/F sensor heater

- 1) With ignition switch turned OFF, connect scan tool to DLC.
- 2) Turn ON ignition switch and clear DTC.
- 3) Start engine and warm up to normal operating temperature.
- 4) Run engine at idle speed for 1 min. or more.
- 5) Check DTC and pending DTC.

DTC Troubleshooting


NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	A/F sensor signal check 1) Connect scan tool with ignition switch turned OFF. 2) Warm up engine to normal operating temperature and keep it at 2000 r/min. for 60 sec. 3) Repeat racing engine (Repeat depressing accelerator pedal 5 to 6 times continuously to enrich A/F mixture and take foot off from pedal to enlean it). 4) Check for A/F sensor (bank-2) output current displayed on scan tool. <i>Does A/F sensor output current between -0.2 mA and 0.2 mA?</i>	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".	Go to Step 3.
3	A/F sensor circuit check 1) Disconnect connector from A/F sensor (bank-2) and ECM with ignition switch turned OFF. 2) Check for proper terminal connection to A/F sensor (bank-2) connector and ECM connector. 3) If connections are OK, check that A/F sensor (bank-2) circuit is as follows. <ul style="list-style-type: none"> Wiring harness resistance of each "Signal (+) circuit of A/F sensor (bank-2)", "Signal (-) circuit of A/F sensor (bank-2)" is less than $1\ \Omega$. Insulation resistance between "Signal (-) circuit of A/F sensor (bank-2)" and vehicle body ground is infinity. Insulation resistance between "Signal (+) circuit of A/F sensor (bank-2)" and "Signal (-) circuit of A/F sensor (bank-2)" is infinity. Insulation resistance of wire harness is infinity between "Signal (+) circuit of A/F sensor (bank-2)" terminal and each other terminal at A/F sensor (bank-2) connector. Insulation resistance of wire harness is infinity between "Signal (-) circuit of A/F sensor (bank-2)" terminal and each other terminal at A/F sensor (bank-2) connector. Circuit voltage between "Signal (-) circuit of A/F sensor (bank-2)" and vehicle body ground is 0 V with ignition switch tuned ON. <i>Are they in good condition?</i>	Go to Step 4.	Repair or replace defective wiring harness.
4	A/F sensor heater check 1) Check A/F sensor (bank-2) referring to "Air Fuel Ratio (A/F) Sensor On-Vehicle Inspection in Section 1C". <i>Is A/F sensor in good condition?</i>	Substitute a known good ECM and recheck. If ECM OK, replace A/F sensor (bank-2).	Replace A/F sensor (bank-2).

DTC P2627 / P2628: O2 Sensor Pumping Current Trim Circuit Low / High (Sensor-1, Bank-1)

S6JB0B1104076

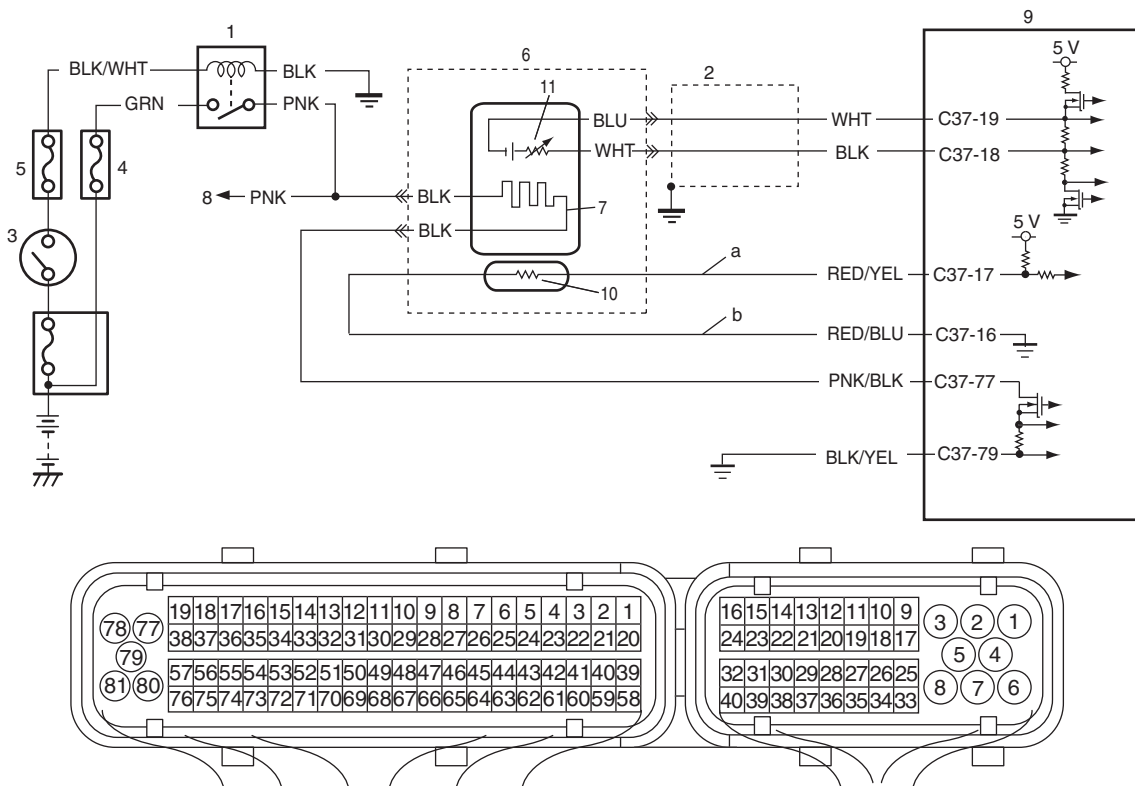System and Wiring Diagram

I6JB01110106-01

a. Adjusting resistor (+) circuit of A/F sensor (bank-1)	3. Ignition Switch	7. A/F sensor heater	11. A/F sensor element
b. Adjusting resistor (-) circuit of A/F sensor (bank-1)	4. O2 HTR fuse	8. To A/F sensor (bank-2), HO2S (bank-1 and-2)	
1. HO2S heater relay	5. IG COIL fuse	9. ECM	
2. Shield wire	6. A/F sensor	10. Adjusting resistor (if equipped)	

A/F Sensor Description

Refer to "A/F Sensor Description"

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P2627 O2 Sensor Pumping Current Trim Circuit Low (Sensor-1, Bank-1): Output voltage of A/F sensor adjusting resistor is less than 0.1 V for more than 4 sec. continuously with engine running. (1 driving cycle detection logic)	<ul style="list-style-type: none"> A/F sensor malfunction A/F sensor circuit malfunction ECM
DTC P2628 O2 Sensor Pumping Current Trim Circuit High (Sensor-1, Bank-1): Output voltage of A/F sensor adjusting resistor is more than 5 V for more than 4 sec. continuously with engine running. (1 driving cycle detection logic)	

DTC Confirmation Procedure

- 1) With ignition switch turned OFF, connect scan tool to DLC.
- 2) Turn ON ignition switch and clear DTC.
- 3) Start engine and warm up to normal operating temperature.
- 4) Run engine at idle speed for 1 min. or more.
- 5) Check DTC and pending DTC.

DTC Troubleshooting


NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	A/F sensor adjusting resistor circuit check 1) Disconnect connectors from A/F sensor (bank-1) and ECM with ignition switch turned OFF. 2) Check for proper terminal connection to A/F sensor (bank-1) connector and ECM connector. 3) If connections are OK, check that A/F sensor (bank-1) adjusting resistor circuit is as follows. <ul style="list-style-type: none"> • Wiring harness resistance of each "Adjusting resistor (+) circuit of A/F sensor (bank-1)" and "Adjusting resistor (–) circuit of A/F sensor (bank-1)" is less than 1 Ω. • Insulation resistance between "Adjusting resistor (+) circuit of A/F sensor (bank-1)" and vehicle body ground is infinity. • Insulation resistance between "Adjusting resistor (+) circuit of A/F sensor (bank-1)" and "Adjusting resistor (–) circuit of A/F sensor (bank-1)" is infinity. • Insulation resistance of wire harness is infinity between "Signal (+) circuit of A/F sensor (bank-1)" terminal and each other terminal at A/F sensor (bank-1) connector. • Insulation resistance of wire harness is infinity between "Signal (–) circuit of A/F sensor (bank-1)" terminal and each other terminal at A/F sensor (bank-1) connector. • Circuit voltage between "Adjusting resistor (+) circuit of A/F sensor (bank-1)" and vehicle body ground is 0 V with ignition switch turned ON. Are they in good condition?	Go to Step 3.	Repair or replace defective wiring harness.
3	A/F sensor adjusting resistor check 1) Check heater resistance of A/F sensor (bank-1) adjusting resistor referring to "Air Fuel Ratio (A/F) Sensor On-Vehicle Inspection in Section 1C". Is check result satisfactory?	Substitute a known good ECM and recheck. If ECM OK, replace A/F sensor (bank-1).	Replace A/F sensor (bank-1).

DTC P2630 / P2631: O2 Sensor Pumping Current Trim Circuit Low / High (Sensor-1, Bank-2)

S6JB0B1104077

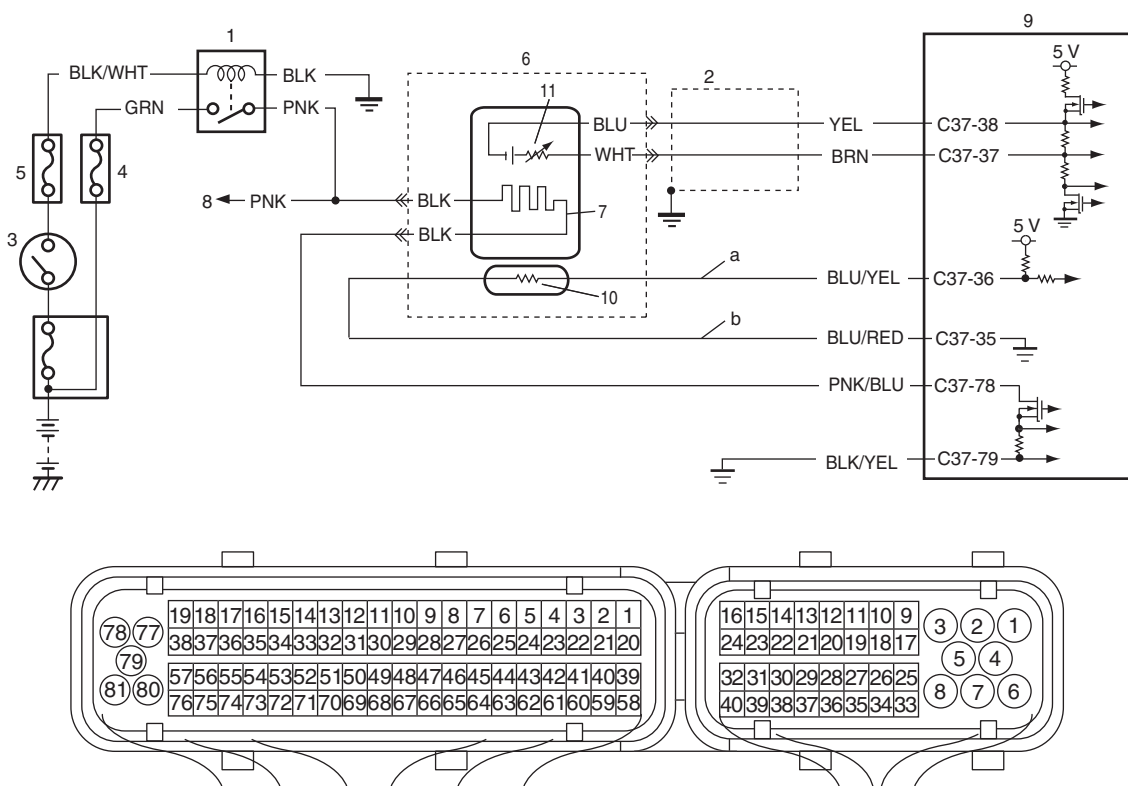System and Wiring Diagram

I6JB01110107-01

a. Adjusting resistor (+) circuit of A/F sensor (bank-1)	3. Ignition Switch	7. A/F sensor heater	11. A/F sensor element
b. Adjusting resistor (-) circuit of A/F sensor (bank-1)	4. O2 HTR fuse	8. To A/F sensor (bank-1), HO2S (bank-1 and -2)	
1. HO2S heater relay	5. IG COIL fuse	9. ECM	
2. Shield wire	6. A/F sensor	10. Adjusting resistor (if equipped)	

A/F Sensor Description

Refer to "A/F Sensor Description"

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC P2630 O2 Sensor Pumping Current Trim Circuit Low (Sensor-1, Bank-2): Output voltage of A/F sensor adjusting resister is less than 0.1 V for more than 4 sec. continuously with engine running. (1 driving cycle detection logic) DTC P2631 O2 Sensor Pumping Current Trim Circuit High (Sensor-1, Bank-2): Output voltage of A/F sensor adjusting resister is more than 5 V for more than 4 sec. continuously with engine running. (1 driving cycle detection logic)	<ul style="list-style-type: none"> A/F sensor malfunction A/F sensor circuit malfunction ECM

DTC Confirmation Procedure

- 1) With ignition switch turned OFF, connect scan tool to DLC.
- 2) Turn ON ignition switch and clear DTC.
- 3) Start engine and warm up to normal operating temperature.
- 4) Run engine at idle speed for 1 min. or more.
- 5) Check DTC and pending DTC.

DTC Troubleshooting


NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	A/F sensor adjusting resistor circuit check 1) Disconnect connectors from A/F sensor (bank-2) and ECM with ignition switch turned OFF. 2) Check for proper terminal connection to A/F sensor (bank-2) connector and ECM connector. 3) If connections are OK, check that A/F sensor (bank-2) adjusting resistor circuit is as follows. <ul style="list-style-type: none"> • Wiring harness resistance of each "Adjusting resistor (+) circuit of A/F sensor (bank-2)" and "Adjusting resistor (–) circuit of A/F sensor (bank-2)" is less than 1 Ω. • Insulation resistance between "Adjusting resistor (+) circuit of A/F sensor (bank-2)" and vehicle body ground is infinity. • Insulation resistance between "Adjusting resistor (+) circuit of A/F sensor (bank-2)" and "Adjusting resistor (–) circuit of A/F sensor (bank-2)" is infinity. • Insulation resistance of wire harness is infinity between "Signal (+) circuit of A/F sensor (bank-2)" terminal and each other terminal at A/F sensor (bank-2) connector. • Insulation resistance of wire harness is infinity between "Signal (–) circuit of A/F sensor (bank-2)" terminal and each other terminal at A/F sensor (bank-2) connector. • Circuit voltage between "Adjusting resistor (+) circuit of A/F sensor (bank-2)" and vehicle body ground is 0 V with ignition switch turned ON. Are they in good condition?	Go to Step 3.	Repair or replace defective wiring harness.
3	A/F sensor adjusting resistor check 1) Check for resistance of A/F sensor (bank-2) adjusting resistor referring to "Air Fuel Ratio (A/F) Sensor On-Vehicle Inspection in Section 1C". Is check result satisfactory?	Substitute a known good ECM and recheck. If ECM OK, replace A/F sensor (bank-2).	Replace A/F sensor (bank-2).

DTC P2A01: O2 Sensor Circuit Performance (Sensor-2, Bank-1)

S6JB0B1104078

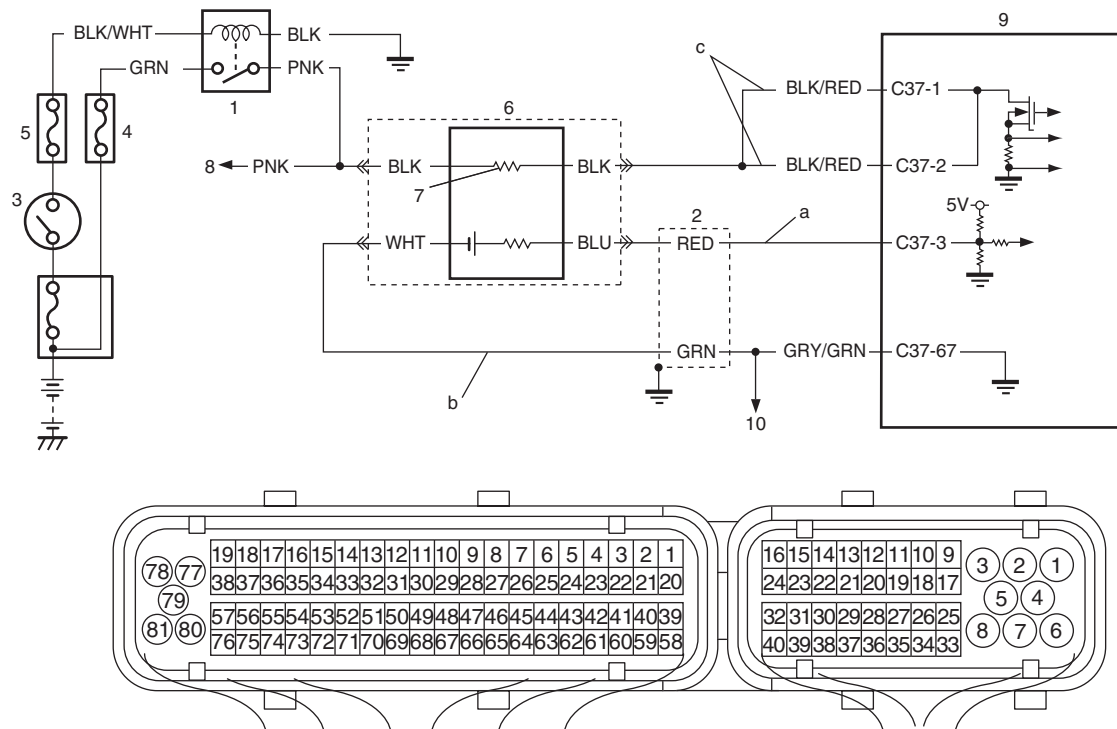Wiring Diagram

I6JB01110055-01

a. Signal circuit of HO2S (bank-1)	2. Shield wire	6. HO2S (bank-1)	10. To other sensors
b. Ground circuit of HO2S (bank-1)	3. Ignition Switch	7. HO2S heater	
c. Control circuit of HO2S (bank-1) heater	4. O2 HTR fuse	8. To A/F sensor (bank-1 and -2), HO2S (bank-2)	
1. HO2S heater relay	5. IG COIL fuse	9. ECM	

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Circuit voltage of HO2S (bank-1) signal is less than 0.35 V while A/F (fuel trim) is shifted rich to lean and lean to rich with specified diagnosis frequency under specified running or Circuit voltage of HO2S (bank-1) signal is more than 0.2 V for more than 4 sec. even though vehicle is running with fuel cut mode below 4000 rpm. (2 driving cycle detection logic, monitoring once per driving cycle)	<ul style="list-style-type: none"> HO2S circuit HO2S ECM

⚠ WARNING

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and be very careful during testing to avoid occurrence of an accident.
- Road test should be carried out by 2 persons, a driver and a tester, on a level road.

NOTE

Check to make sure that following conditions are satisfied when using this "DTC Confirmation Procedure".

- Engine coolant temperature: 70 °C (158 °F) or more.
- The following DTCs are not detected: A/F sensor, A/F sensor heater and HO2S heater.

1A-183 Engine General Information and Diagnosis:

- 1) With ignition switch turned OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC using scan tool.
- 3) Start engine and warm up to normal operating temperature.
- 4) Drive vehicle at 40 mph (60 km/h) or higher. (engine speed: 2500 – 3000 r/min.)
- 5) Keep above vehicle speed for 6 min. or more. (Throttle valve opening is kept constant in this step.)
- 6) Release accelerator pedal and with engine brake applied, keep vehicle coasting (with fuel cut for 5 sec. or more) and then stop vehicle.
- 7) Check if DTC and pending DTC exist by using scan tool. If not, check if oxygen sensor monitoring test has been completed by using scan tool. If not in both of above checks (i.e., no DTC and pending DTC and oxygen sensor monitoring test not completed), check vehicle condition (environmental) and repeat Step 3) through 6).

DTC Troubleshooting


NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	DTC check <i>Is there DTC P0140?</i>	Go to applicable DTC(s).	Go to Step 4.
3	DTC check <i>Is there DTC(s) other than P0140 and P2A01?</i>	Go to applicable DTC(s).	Go to Step 4.
4	Exhaust system for leakage check 1) Check exhaust system for leakage. <i>Is it in good condition?</i>	Go to Step 5.	repair or replace defective parts.
5	HO2S circuit check 1) Disconnect connector from HO2S (bank-1) and ECM with ignition switch turned OFF. 2) Check for proper terminal connection to HO2S (bank-1) connector and ECM connector. 3) If connections are OK, check that HO2S (bank-1) circuit is as follows. <ul style="list-style-type: none">• Wiring harness resistance of each "Signal circuit of HO2S (bank-1)", "Ground circuit of HO2S (bank-1)" and "Control circuit of HO2S (bank-1) heater" is less than 1 Ω.• Insulation resistance between "Signal circuit of HO2S (bank-1)" and vehicle body ground is infinity.• Insulation resistance of wire harness is infinity between "Signal circuit of HO2S (bank-1)" terminal and each other terminal at HO2S (bank-1) connector.• Circuit voltage between "Signal circuit of HO2S (bank-1)" and vehicle body ground is 0 V with ignition switch turned ON. <i>Is it in good condition?</i>	Replace HO2S (bank-1).	Repair or replace defective wiring harness.

DTC P2A04: O2 Sensor Circuit Performance (Sensor-2, Bank-2)

S6JB0B1104079

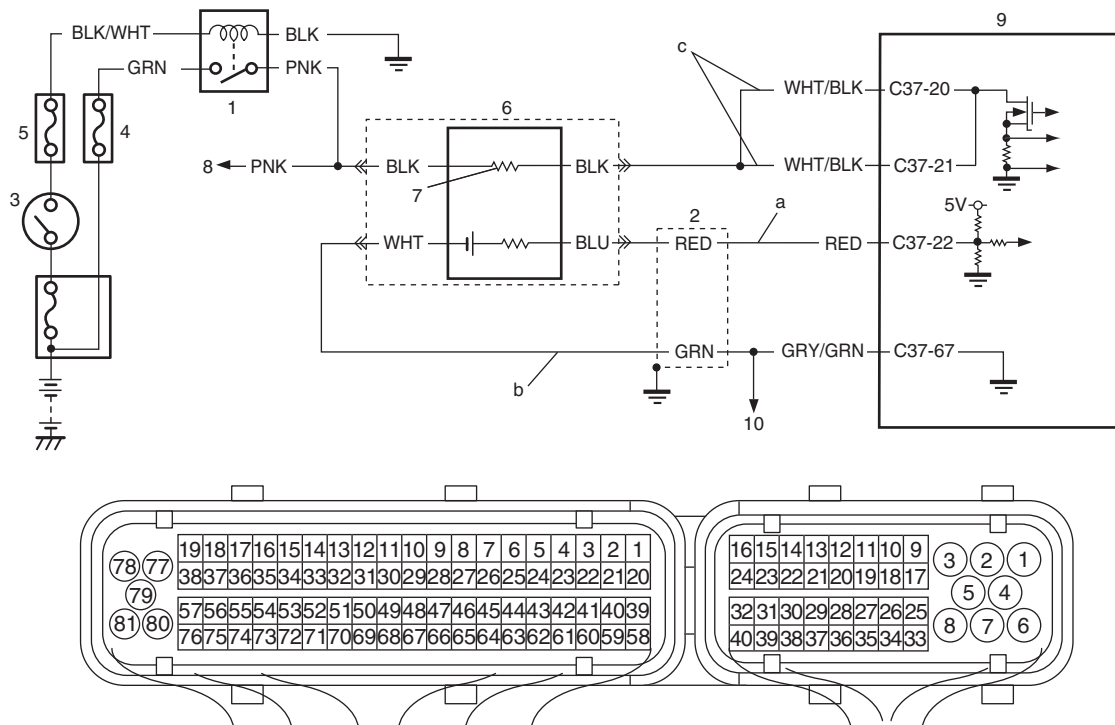Wiring Diagram

I6JB01110097-01

a. Signal circuit of HO2S (bank-2)	2. Shield wire	6. HO2S (bank-2)	10. To other sensors
b. Ground circuit of HO2S (bank-2)	3. Ignition switch	7. HO2S heater	
c. Control circuit of HO2S (bank-2) heater	4. O2 HTR fuse	8. To A/F sensor (bank-1 and -2), HO2S (bank-1)	
1. HO2S heater relay	5. IG COIL fuse	9. ECM	

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Circuit voltage of HO2S (bank-2) signal is less than 0.35 V while A/F (fuel trim) is shifted rich to lean and lean to rich with specified diagnosis frequency under specified running or Circuit voltage of HO2S (bank-2) signal is more than 0.2 V for more than 4 sec. even though vehicle is running with fuel cut mode below 4000 rpm. (2 driving cycle detection logic, monitoring once per driving cycle)	<ul style="list-style-type: none"> HO2S circuit HO2S ECM

⚠ WARNING

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and be very careful during testing to avoid occurrence of an accident.
- Road test should be carried out by 2 persons, a driver and a tester, on a level road.

NOTE

Check to make sure that following conditions are satisfied when using this "DTC Confirmation Procedure".

- Engine coolant temperature: 70 °C (158 °F) or more.
- The following DTCs are not detected: A/F sensor heater and HO2S heater.

DTC Confirmation Procedure

- 1) With ignition switch turned OFF, connect scan tool.
- 2) Turn ON ignition switch and clear DTC using scan tool.
- 3) Start engine and warm up to normal operating temperature.
- 4) Drive vehicle at 40 mph (60 km/h) or higher. (engine speed: 2500 – 3000 r/min.)
- 5) Keep above vehicle speed for 6 min. or more. (Throttle valve opening is kept constant in this step.)
- 6) Release accelerator pedal and with engine brake applied, keep vehicle coasting (with fuel cut for 5 sec. or more) and then stop vehicle.
- 7) Check if DTC and pending DTC exist by using scan tool. If not, check if oxygen sensor monitoring test has been completed by using scan tool. If not in both of above checks (i.e., no DTC and pending DTC and oxygen sensor monitoring test not completed), check vehicle condition (environmental) and repeat Step 3) through 6).

DTC Troubleshooting
NOTE


Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to “Precautions for DTC Troubleshooting”.

Step	Action	Yes	No
1	Was “Engine and Emission Control System Check” performed?	Go to Step 2.	Go to “Engine and Emission Control System Check”.
2	DTC Check <i>Is there DTC P0160?</i>	Go to applicable DTC.	Go to Step 3.
3	DTC check <i>Is there DTC(s) other than P0160 and P2A04?</i>	Go to applicable DTC(s).	Go to Step 4.
4	Exhaust system for leakage check 1) Check exhaust system for leakage. <i>Is it in good condition?</i>	Go to Step 5.	Repair or replace defective parts.
5	HO2S circuit check 1) Disconnect connectors from HO2S (bank-2) and ECM with ignition switch turned OFF. 2) Check for proper terminal connection to HO2S (bank-2) connector and ECM connector. 3) If connections are OK, check that HO2S (bank-2) circuit is as follows. <ul style="list-style-type: none"> • Wiring harness resistance of each “Signal circuit of HO2S (bank-2)”, “Ground circuit of HO2S (bank-2)” and “Control circuit of HO2S (bank-2) heater” is less than 1 Ω. • Insulation resistance between “Signal circuit of HO2S (bank-2)” and vehicle body ground is infinity. • Insulation resistance of wire harness is infinity between “Signal circuit of HO2S (bank-2)” terminal and each other terminal at HO2S (bank-2) connector. • Circuit voltage between “Signal circuit of HO2S (bank-2)” and vehicle body ground is 0 V with ignition switch turned ON. <i>Are they in good condition?</i>	Replace HO2S (bank-2).	Repair or replace defective wiring harness.

DTC U0073: Control Module Communication Bus Off

S6JB0B1104080

Wiring Diagram

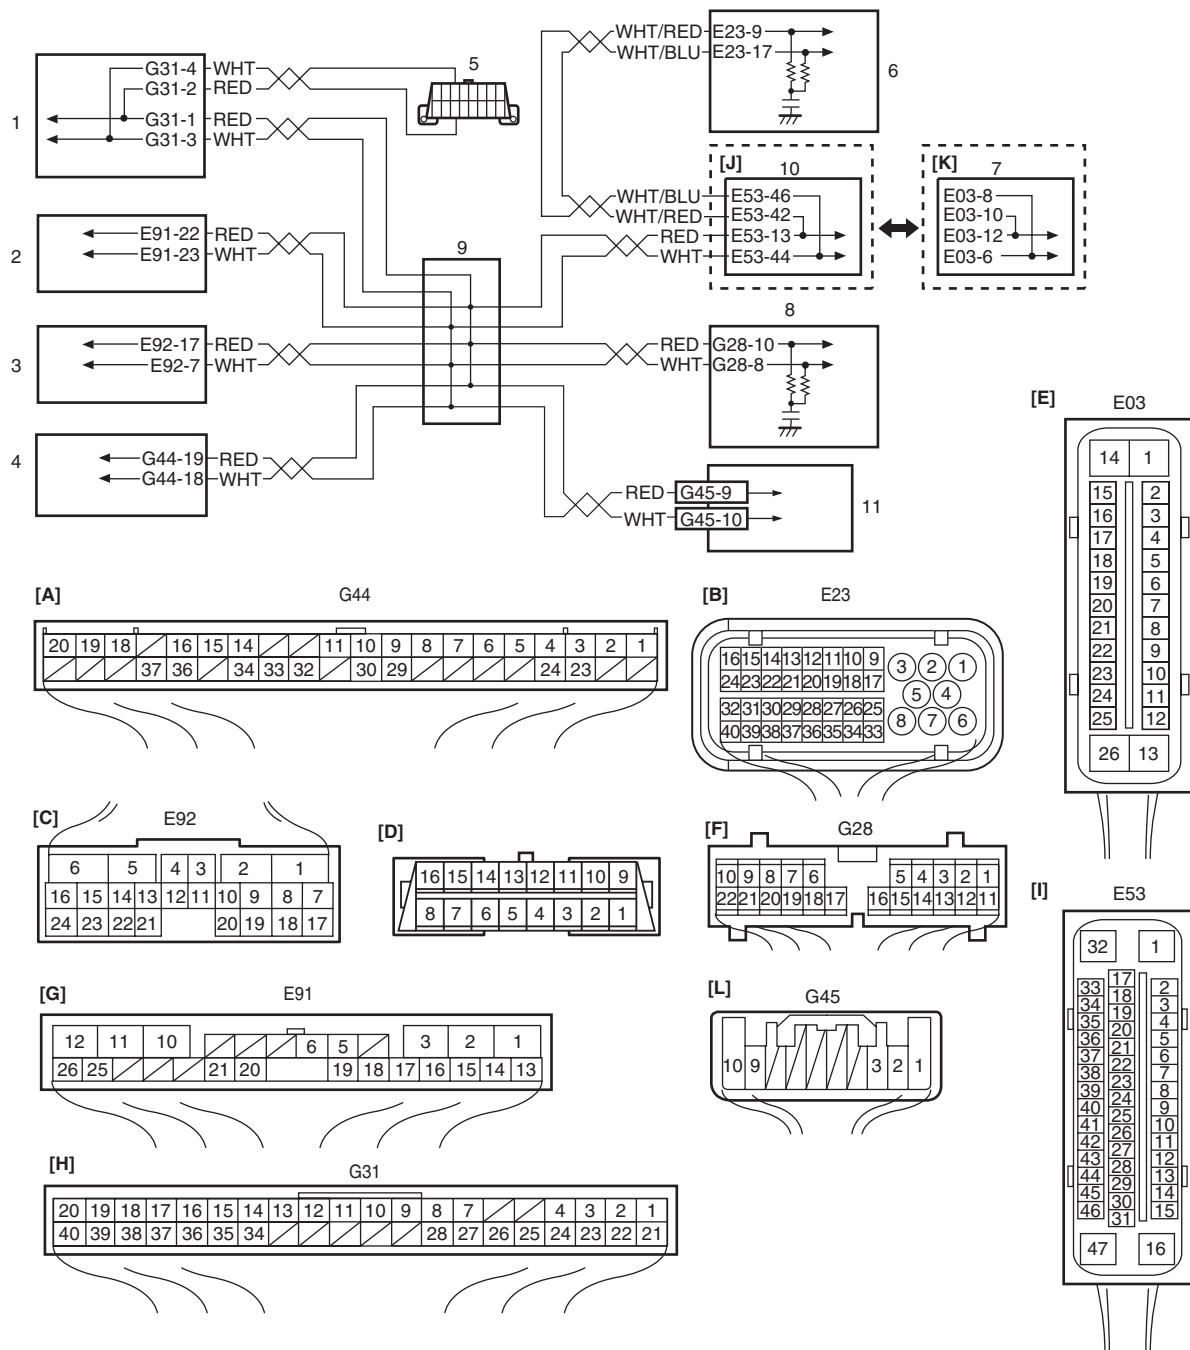

I6JB01110063-03

[A]: Keyless start control module connector (viewed from harness side)	1. BCM
[B]: ECM connector (viewed from harness side)	2. 4WD control module (if equipped)
[C]: TCM connector (viewed from harness side)	3. TCM (A/T model)
[D]: DLC connector (viewed from harness side)	4. Keyless start control module (if equipped)
[E]: ABS control module connector (viewed from harness side)	5. DLC
[F]: Combination meter connector (viewed from harness side)	6. ECM
[G]: 4WD control module connector (viewed from harness side)	7. ABS control module
[H]: BCM connector (viewed from harness side)	8. Combination meter
[I]: ESP® control module connector (viewed from harness side)	9. Junction connector
[J]: ESP® model	10. ESP® control module
[K]: Non ESP® model	11. Steering angle sensor (ESP® model)
[L]: Steering angle sensor connector (viewed from harness side)	

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Transmission error that is inconsistent between transmission data and transmission monitor (CAN bus monitor) data is detected more than 7 times continuously. (1 driving cycle detection logic)	<ul style="list-style-type: none"> • CAN communication circuit • Combination meter • Keyless start control module (if equipped) • BCM • 4WD control module (if equipped) • ABS or ESP® control module • TCM (A/T model) • Steering angle sensor (ESP® model) • ECM

DTC Confirmation Procedure

- 1) Clear DTC referring to “DTC Clearance” in this section.
- 2) Start engine and run it for 1 min. or more.
- 3) Check DTC referring to “DTC Check”.

DTC Troubleshooting**NOTE**

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to “Precautions for DTC Troubleshooting”.

Step	Action	Yes	No
1	Was “Engine and Emission Control System Check” performed?	Go to Step 2.	Go to “Engine and Emission Control System Check”.
2	DTC check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Check for all control modules (ECM, TCM (A/T model), BCM, ABS or ESP® control module, 4WD control module (if equipped), keyless start control module (if equipped), combination meter) for DTC(s) other than CAN communication DTCs. <i>Is there any DTC(s) other than CAN communication DTC(s) at each control module (other than DTC U0073, U0100, U0101, U0121, U0140, U1073, U1100, U1101, U1121, U1126, U1139, U1140, U1144)?</i>	Go to applicable DTC diag. flow.	Go to Step 3.
3	All control modules (ECM, TCM (A/T model), BCM, ABS or ESP® control module, 4WD control module (if equipped), keyless start control module (if equipped), combination meter, steering angle sensor (ESP® model)) connectors check 1) Check for proper connection at all control module (ECM, TCM (A/T model), BCM, ABS or ESP® control module, 4WD control module (if equipped), keyless start control module (if equipped), combination meter) connector terminals with ignition switch turned OFF. 2) If connections are OK, recheck ECM for DTC with engine running. <i>Is there DTC U0073?</i>	Go to Step 4.	Intermittent trouble. Check for intermittent referring to “Intermittent and Poor Connection Inspection in Section 00”.

Step	Action	Yes	No
4	ECM power and ground circuit check 1) Check ECM power and ground circuit referring to "ECM Power and Ground Circuit Check". <i>Are they in good condition?</i>	Go to Step 5.	Repair ECM power and/or ground circuits.
5	DTC check for all control modules which detected CAN communication DTC (ECM, TCM (A/T model), BCM, ABS or ESP® control module, 4WD control module (if equipped)) 1) Check for DTC(s) of all control modules which detected CAN communication DTC (ECM, TCM (A/T model), BCM, ABS or ESP® control module, 4WD control module (if equipped)). <i>Is there DTC(s) U0073 or U1073 at each control module?</i>	Go to Step 6.	Go to Step 7.
6	DTC check 1) Disconnect connectors from ECM with ignition switch turned OFF. 2) Check for DTC(s) of all control modules which detected CAN communication DTC (ECM, TCM (A/T model), BCM, ABS or ESP® control module, 4WD control module (if equipped)). <i>Is there DTC(s) U0073 or U1073 at each control module?</i>	Go to Step 7.	CAN communication circuit wire between ECM and ABS or ESP® control module is open or high resistance. If wires are OK, substitute a known-good ECM and recheck.
7	DTC check 1) Connect connectors to ECM and disconnect connector from BCM with ignition switch turned OFF. 2) Check ECM for DTC(s). <i>Is there DTC U0073?</i>	Go to Step 8.	CAN communication circuit wire between BCM and CAN circuit junction connector is open or high resistance. If wires are OK, check BCM power and ground circuits. If circuits are OK, substitute a known-good BCM and recheck.
8	DTC check 1) Disconnect connectors from TCM (A/T model) with ignition switch turned OFF. 2) Check ECM for DTC. <i>Is there DTC U0073?</i>	Go to Step 9.	CAN communication circuit wire between TCM and CAN circuit junction connector is open or high resistance. If wires are OK, check TCM power and ground circuits. If circuits are OK, substitute a known-good TCM (A/T model) and recheck.

1A-189 Engine General Information and Diagnosis:

Step	Action	Yes	No
9	DTC check 1) Disconnect connector from keyless start control module (if equipped) with ignition switch turned OFF. 2) Check ECM for DTC. <i>Is there DTC U0073?</i>	Go to Step 10.	CAN communication circuit wire between keyless start control module and CAN circuit junction connector is open or high resistance. If wires are OK, check keyless start control module power and ground circuits. If circuits are OK, substitute a known-good keyless start control module and recheck.
10	DTC check 1) Disconnect connector from combination meter with ignition switch turned OFF. 2) Check ECM for DTC. <i>Is there DTC U0073?</i>	Go to Step 11.	CAN communication circuit wire between combination meter and CAN circuit junction connector is open or high resistance. If wires are OK, check combination meter power and ground circuits. If circuits are OK, substitute a known-good combination meter and recheck.
11	DTC check 1) Disconnect connector from 4WD control module (if equipped) with ignition switch turned OFF. 2) Check ECM for DTC. <i>Is there DTC U0073?</i>	Go to Step 12.	CAN communication circuit wire between 4WD control module and CAN circuit junction connector is open or high resistance. If wires are OK, check 4WD control module power and ground circuits. If circuits are OK, substitute a known-good 4WD control module and recheck.
12	DTC check 1) Disconnect connector from steering angle sensor (ESP® model) with ignition switch turned OFF. 2) Check ECM for DTC. <i>Is there DTC U0073?</i>	Go to Step 13.	CAN communication circuit wire between steering angle sensor and CAN circuit junction connector is open or high resistance. If wires are OK, check steering angle sensor power and ground circuits. If circuits are OK, substitute a known-good steering angle sensor and recheck.

Step	Action	Yes	No
13	Circuit check 1) Measure resistance at following connector terminals. <ul style="list-style-type: none"> Between "WHT/BLU" terminal and "WHT" terminal of ABS or ESP® control module connector. Between "WHT/RED" terminal and "RED" terminal of ABS or ESP® control module connector. <i>Is measured resistance below 1 Ω?</i>	Go to Step 14.	Substitute a known-good ABS or ESP® control module and recheck.
14	Circuit check 1) Disconnect connectors from all control modules (ECM, TCM (A/T model), BCM, ABS or ESP® control module, 4WD control module (if equipped), keyless start control module (if equipped), combination meter, steering angle sensor (ESP® model)) with ignition switch turned OFF. 2) Check that CAN communication circuit is as follows. <ul style="list-style-type: none"> ALL wire harness resistance of CAN communication circuit is less than 1 Ω between each control module. Insulation resistance between CAN communication circuit wires is infinity at each control module connector. Insulation resistance between each CAN communication circuit wire and vehicle body ground is infinity at each control module connector. Circuit voltage of CAN communication circuit is 0 V with ignition switch turned ON. <i>Are they in good condition?</i>	Go to Step 15.	Repair or replace defective CAN communication circuit.
15	DTC check 1) Connect connectors to ECM with ignition switch turned OFF. 2) Check ECM for DTC. <i>Is there DTC U0073?</i>	Substitute a known good ECM and recheck.	Check ABS or ESP® control module power and ground circuits. If circuits are OK, substitute a known-good ABS or ESP® control module and recheck.

DTC U0101: Lost Communication with TCM

S6JB0B1104081

Wiring Diagram

Refer to "DTC U0073: Control Module Communication Bus Off".

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Reception error of communication data for TCM is detected for longer than specified time continuously. (1 driving cycle detection logic)	<ul style="list-style-type: none"> CAN communication circuit Combination meter Keyless start control module (if equipped) BCM 4WD control module (if equipped) ABS or ESP® control module TCM (A/T model) Steering angle sensor (ESP® model) ECM

DTC Confirmation Procedure

- 1) Clear DTC referring to "DTC Clearance" in this section.
- 2) Start engine and run it for 1 min. or more.
- 3) Check DTC referring to "DTC Check".

DTC Troubleshooting
NOTE

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	DTC check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Check for all control modules (ECM, TCM, BCM, ABS or ESP® control module, 4WD control module (if equipped), keyless start control module (if equipped), combination meter, steering angle sensor (ESP® model)) for DTC(s) other than CAN communication DTCs. <i>Is there any DTC(s) other than CAN communication DTC(s) at each control module (other than DTC U0073, U0100, U0101, U0121, U0140, U1073, U1100, U1101, U1121, U1126, U1139, U1140, U1144)?</i>	Go to applicable DTC diag. flow.	Go to Step 3.
3	DTC check <i>Is DTC U0101 and U0073 detected together?</i>	Go to "DTC U0073: Control Module Communication Bus Off".	Go to Step 4.
4	ECM, ABS or ESP® control module and TCM connector check 1) Check for proper connection at each ECM, ABS or ESP® control module and TCM connector terminals with ignition switch turned OFF. 2) If connections are OK, recheck ECM for DTC with engine running. <i>Is there DTC U0101?</i>	Go to Step 5.	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".
5	ECM power and ground circuit check 1) Check ECM power and ground circuits referring to "ECM Power and Ground Circuit Check". <i>Are they in good condition?</i>	Go to Step 6.	Repair ECM power and/or ground circuits.
6	DTC in TCM check <i>Is DTC U0073 detected in TCM?</i>	Go to "DTC U0073: Control Module Communication Bus Off in Section 5A".	Go to Step 7.

Step	Action	Yes	No
7	DTC check 1) Disconnect connectors from TCM and ECM with ignition switch turned OFF. 2) Check that CAN communication circuit is as follows. <ul style="list-style-type: none"> • Circuit resistance of CAN communication circuit is less than 1 Ω between ECM connector and TCM connector. <i>Is it in good condition?</i>	Go to Step 9.	Go to Step 8.
8	Circuit check 1) Measure resistance at following connector terminals. <ul style="list-style-type: none"> • Between "WHT/BLU" terminal and "WHT" terminal of ABS or ESP® control module connector. • Between "WHT/RED" terminal and "RED" terminal of ABS or ESP® control module connector. <i>Is measured resistance below 1 Ω?</i>	CAN communication circuit wire between TCM and ECM connector is open or high resistance.	Substitute a known-good ABS or ESP® control module and recheck.
9	DTC check in ECM 1) Connect connectors to ECM and TCM with ignition switch turned OFF. 2) Disconnect connector from BCM with ignition switch turned OFF. 3) Check ECM for DTC(s). <i>Is there DTC U0101?</i>	Go to Step 10.	CAN communication circuit wire between BCM and CAN circuit junction connector is open or high resistance. If wires are OK, check BCM power and ground circuits. If circuits are OK, substitute a known-good BCM and recheck.
10	DTC check 1) Disconnect connector from keyless start control module (if equipped) with ignition switch turned OFF. 2) Check ECM for DTC. <i>Is there DTC U0101?</i>	Go to Step 11.	CAN communication circuit wire between keyless start control module and CAN circuit junction connector is open or high resistance. If wires are OK, check keyless start control module power and ground circuits. If circuits are OK, substitute a known-good keyless start control module and recheck.
11	DTC check 1) Disconnect connector from combination meter with ignition switch turned OFF. 2) Check ECM for DTC. <i>Is there DTC U0101?</i>	Go to Step 12.	CAN communication circuit wire between combination meter and CAN circuit junction connector is open or high resistance. If wires are OK, check combination meter power and ground circuits. If circuits are OK, substitute a known-good combination meter and recheck.

1A-193 Engine General Information and Diagnosis:

Step	Action	Yes	No
12	DTC check 1) Disconnect connector from 4WD control module (if equipped) with ignition switch turned OFF. 2) Check ECM for DTC. <i>Is there DTC U0101?</i>	Go to Step 13.	CAN communication circuit wire between 4WD control module and CAN circuit junction connector is open or high resistance. If wires are OK, check 4WD control module power and ground circuits. If circuits are OK, substitute a known-good 4WD control module and recheck.
13	DTC check 1) Disconnect connector from steering angle sensor (ESP® model) with ignition switch turned OFF. 2) Check ECM for DTC. <i>Is there DTC U0101?</i>	Go to Step 14.	CAN communication circuit wire between steering angle sensor and CAN circuit junction connector is open or high resistance. If wires are OK, check steering angle sensor power and ground circuits. If circuits are OK, substitute a known-good steering angle sensor and recheck.
14	DTC check 1) Disconnect connectors from all control modules (ECM, TCM, BCM, ABS or ESP® control module, 4WD control module (if equipped), keyless start control module (if equipped), combination meter, steering angle sensor (ESP® model)) with ignition switch turned OFF. 2) Check that CAN communication circuit is as follows. <ul style="list-style-type: none"> • ALL wire harness resistance of CAN communication circuit is less than 1 Ω between each control module. • Insulation resistance between CAN communication circuit wires is infinity at each control module connector. • Insulation resistance between each CAN communication circuit wire and vehicle body ground is infinity at each control module connector. • Circuit voltage of CAN communication circuit is 0 V with ignition switch turned ON. <i>Are they in good condition?</i>	Go to Step 15.	Repair or replace defective CAN communication circuit.
15	DTC check in BCM 1) Connect connectors to all control modules communicating by CAN with ignition switch turned OFF. 2) Check DTC U1101 in BCM. <i>Is it indicated?</i>	Check TCM power and ground circuit. If circuit is OK, substitute a known-good TCM and recheck.	Substitute a known-good ECM and recheck.

DTC U0121: Lost Communication with Electronic Stability Program / ABS Control Module

S6JB0B1104082

Wiring Diagram

Refer to "DTC U0073: Control Module Communication Bus Off".

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Reception error of communication data for ABS or ESP® control module is detected for longer than specified time continuously. (1 driving cycle detection logic)	<ul style="list-style-type: none"> • CAN communication circuit • Combination meter • Keyless start control module (if equipped) • BCM • 4WD control module (if equipped) • ABS or ESP® control module • TCM (A/T model) • Steering angle sensor (ESP® model) • ECM

DTC Confirmation Procedure

- 1) Clear DTC referring to "DTC Clearance" in this section.
- 2) Start engine and run it for 1 min. or more.
- 3) Check DTC referring to "DTC Check".

DTC Troubleshooting**NOTE**

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	DTC check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Check for all control modules (ECM, TCM (A/T model), BCM, ABS or ESP® control module, 4WD control module (if equipped), keyless start control module (if equipped), combination meter, steering angle sensor (ESP® model)) for DTC(s) other than CAN communication DTCs. <i>Is there any DTC(s) other than CAN communication DTC(s) at each control module (other than DTC U0073, U0100, U0101, U0121, U0140, U1073, U1100, U1101, U1121, U1126, U1139, U1140, U1144)?</i>	Go to applicable DTC diag. flow.	Go to Step 3.
3	DTC check <i>Is DTC U0121 and U0073 detected together?</i>	Go to "DTC U0073: Control Module Communication Bus Off".	Go to Step 4.

1A-195 Engine General Information and Diagnosis:

Step	Action	Yes	No
4	ECM and ABS or ESP® control module connector check 1) Check for proper connection at each ECM and ABS or ESP® control module connector terminals with ignition switch turned OFF. 2) If connections are OK, recheck ECM for DTC with engine running. <i>Is there DTC U0121?</i>	Go to Step 5.	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".
5	ECM power and ground circuit check 1) Check ECM power and ground circuits referring to "ECM Power and Ground Circuit Check". <i>Are they in good condition?</i>	Go to Step 6.	Repair ECM power and/or ground circuits.
6	DTC check in ABS or ESP® control module 1) Check DTC U1073 in ABS or ESP® control module. <i>Is it indicated?</i>	Go to "DTC U1073: Control Module Communication Bus Off in Section 4E" or "DTC U1073: Control Module Communication Bus Off in Section 4F".	Go to Step 7.
7	DTC check 1) Disconnect connectors from ABS or ESP® control module and ECM. 2) Check that CAN communication circuit is as follows. <ul style="list-style-type: none"> • Circuit resistance of CAN communication circuit is less than 1 Ω between ECM connector and ABS or ESP® control module connector. <i>Is it in good condition?</i>	Go to Step 9.	Go to Step 8.
8	ECM circuit check 1) Connect connector to ABS or ESP® control module with ignition switch turned OFF. 2) Measure resistance at following connector terminals. <ul style="list-style-type: none"> • Between "WHT/BLU" and "WHT" terminals of ABS or ESP® control module connector. • Between "WHT/RED" and "RED" terminals of ABS or ESP® control module connector. <i>Is resistance below 1 Ω?</i>	CAN communication circuit wire between ABS or ESP® control module and ECM connector is open or high resistance.	Substitute a known-good ABS or ESP® control module and recheck.
9	DTC check in ECM 1) Connect connectors to ABS or ESP® control module and ECM with ignition switch turned OFF. 2) Disconnect connector from BCM with ignition switch turned OFF. 3) Check ECM for DTC(s). <i>Is there DTC U0121?</i>	Go to Step 10.	CAN communication circuit wire between BCM and CAN circuit junction connector is open or high resistance. If wires are OK, check BCM power and ground circuits. If circuits are OK, substitute a known-good BCM and recheck.

Step	Action	Yes	No
10	DTC check in ECM 1) Disconnect connectors from TCM (A/T model) with ignition switch turned OFF. 2) Check ECM for DTC. <i>Is there DTC U0121?</i>	Go to Step 11.	CAN communication circuit wire between TCM and CAN circuit junction connector is open or high resistance. If wires are OK, check TCM power and ground circuits. If circuits are OK, substitute a known-good TCM and recheck.
11	DTC check in ECM 1) Disconnect connector from keyless start control module (if equipped) with ignition switch turned OFF. 2) Check ECM for DTC. <i>Is there DTC U0121?</i>	Go to Step 12.	CAN communication circuit wire between keyless start control module and CAN circuit junction connector is open or high resistance. If wires are OK, check keyless start control module power and ground circuits. If circuits are OK, substitute a known-good keyless start control module and recheck.
12	DTC check in ECM 1) Disconnect connector from combination meter with ignition switch turned OFF. 2) Check ECM for DTC. <i>Is there DTC U0121?</i>	Go to Step 13.	CAN communication circuit wire between combination meter and CAN circuit junction connector is open or high resistance. If wires are OK, check combination meter power and ground circuits. If circuits are OK, substitute a known-good combination meter and recheck.
13	DTC check in ECM 1) Disconnect connector from 4WD control module (if equipped) with ignition switch turned OFF. 2) Check ECM for DTC. <i>Is there DTC U0121?</i>	Go to Step 14.	CAN communication circuit wire between 4WD control module and CAN circuit junction connector is open or high resistance. If wires are OK, check 4WD control module power and ground circuits. If circuits are OK, substitute a known-good 4WD control module and recheck.

Step	Action	Yes	No
14	DTC check 1) Disconnect connector from steering angle sensor (ESP® model) with ignition switch turned OFF. 2) Check ECM for DTC. <i>Is there DTC U0121?</i>	Go to Step 15.	CAN communication circuit wire between steering angle sensor and CAN circuit junction connector is open or high resistance. If wires are OK, check steering angle sensor power and ground circuits. If circuits are OK, substitute a known-good steering angle sensor and recheck.
15	DTC check 1) Disconnect connectors from all control modules (ECM, TCM (A/T model), BCM, ABS or ESP® control module, 4WD control module (if equipped), keyless start control module (if equipped), combination meter, steering angle sensor (ESP® model)) with ignition switch turned OFF. 2) Check that CAN communication circuit is as follows. <ul style="list-style-type: none"> • ALL wire harness resistance of CAN communication circuit is less than 1 Ω between each control module. • Insulation resistance between CAN communication circuit wires is infinity at each control module connector. • Insulation resistance between each CAN communication circuit wire and vehicle body ground is infinity at each control module connector. • Circuit voltage of CAN communication circuit is 0 V with ignition switch turned ON. <i>Are they in good condition?</i>	Go to Step 16.	Repair or replace defective CAN communication circuit.
16	Warning light check 1) Connect connectors to all control modules communicating by CAN. 2) Turn ignition switch ON. <i>Is ABS or ESP® warning light light up?</i>	Substitute a known-good ABS or ESP® control module and recheck.	Substitute a known-good ECM and recheck.

DTC U0140: Lost Communication with Body Control Module

S6JB0B1104083

Wiring Diagram

Refer to "DTC U0073: Control Module Communication Bus Off".

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Reception error of communication data for BCM is detected for longer than specified time continuously. (1 driving cycle detection logic)	<ul style="list-style-type: none"> • CAN communication circuit • Combination meter • Keyless start control module (if equipped) • BCM • 4WD control module (if equipped) • ABS or ESP® control module • TCM (A/T model) • Steering angle sensor (ESP® model) • ECM

DTC Confirmation Procedure

- 1) Clear DTC referring to "DTC Clearance" in this section.
- 2) Start engine and run it for 1 min. or more.
- 3) Check DTC referring to "DTC Check".

DTC Troubleshooting**NOTE**

Before this trouble shooting is performed, read the precautions for DTC troubleshooting referring to "Precautions for DTC Troubleshooting".

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check".
2	DTC check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Check for all control modules (ECM, TCM (A/T model), BCM, ABS or ESP® control module, 4WD control module (if equipped), keyless start control module (if equipped), combination meter, steering angle sensor (ESP® model)) for DTC(s) other than CAN communication DTCs. <i>Is there any DTC(s) other than CAN communication DTC(s) at each control module (other than DTC U0073, U0100, U0101, U0121, U0140, U1073, U1100, U1101, U1121, U1126, U1139, U1140, U1144)?</i>	Go to applicable DTC diag. flow.	Go to Step 3.
3	DTC check <i>Is DTC U0140 and U0073 detected together?</i>	Go to "DTC U0073: Control Module Communication Bus Off".	Go to Step 4.
4	ECM, ABS or ESP® control module and BCM connector check 1) Check for proper connection at each ECM, ABS or ESP® control module and BCM connector terminals with ignition switch turned OFF. 2) If connections are OK, recheck ECM for DTC with engine running. <i>Is there DTC U0140?</i>	Go to Step 5.	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".
5	ECM power and ground circuit check 1) Check ECM power and ground circuits referring to "ECM Power and Ground Circuit Check". <i>Are they in good condition?</i>	Go to Step 6.	Repair ECM power and/or ground circuits.
6	DTC check in BCM 1) Check DTC U1073 in BCM. <i>Is it indicated?</i>	Go to "DTC U1073 (No. 1073): Control Module Communication Bus Off in Section 10B".	Go to Step 7.

1A-199 Engine General Information and Diagnosis:

Step	Action	Yes	No
7	DTC check 1) Disconnect connector from BCM and ECM. 2) Check that CAN communication circuit is as follows. <ul style="list-style-type: none"> • Circuit resistance of CAN communication circuit is less than 1 Ω between ECM connector and BCM connector. <i>Is it in good condition?</i>	Go to Step 9.	Go to Step 8.
8	Circuit check 1) Measure resistance at following connector terminals. <ul style="list-style-type: none"> • Between "WHT/BLU" terminal and "WHT" terminal of ABS or ESP® control module connector. • Between "WHT/RED" terminal and "RED" terminal of ABS or ESP® control module connector. <i>Is measured resistance below 1 Ω?</i>	CAN communication circuit wire between BCM and ECM connector is open or high resistance.	Substitute a known-good ABS or ESP® control module and recheck.
9	DTC check 1) Connect connectors to BCM and ECM with ignition switch turned OFF. 2) Disconnect connectors from TCM (A/T model) with ignition switch turned OFF. 3) Check ECM for DTC. <i>Is there DTC U0140?</i>	Go to Step 10.	CAN communication circuit wire between TCM and CAN circuit junction connector is open or high resistance. If wires are OK, check TCM power and ground circuits. If circuits are OK, substitute a known-good TCM and recheck.
10	DTC check 1) Disconnect connector from keyless start control module (if equipped) with ignition switch turned OFF. 2) Check ECM for DTC. <i>Is there DTC U0140?</i>	Go to Step 11.	CAN communication circuit wire between keyless start control module and CAN circuit junction connector is open or high resistance. If wires are OK, check keyless start control module power and ground circuits. If circuits are OK, substitute a known-good keyless start control module and recheck.
11	DTC check 1) Disconnect connector from combination meter with ignition switch turned OFF. 2) Check ECM for DTC. <i>Is there DTC U0140?</i>	Go to Step 12.	CAN communication circuit wire between combination meter and CAN circuit junction connector is open or high resistance. If wires are OK, check combination meter power and ground circuits. If circuits are OK, substitute a known-good combination meter and recheck.

Step	Action	Yes	No
12	DTC check 1) Disconnect connector from 4WD control module (if equipped) with ignition switch turned OFF. 2) Check ECM for DTC. <i>Is there DTC U0140?</i>	Go to Step 13.	CAN communication circuit wire between 4WD control module and CAN circuit junction connector is open or high resistance. If wires are OK, check 4WD control module power and ground circuits. If circuits are OK, substitute a known-good 4WD control module and recheck.
13	DTC check 1) Disconnect connector from steering angle sensor (ESP® model) with ignition switch turned OFF. 2) Check ECM for DTC. <i>Is there DTC U0140?</i>	Go to Step 14.	CAN communication circuit wire between steering angle sensor and CAN circuit junction connector is open or high resistance. If wires are OK, check steering angle sensor power and ground circuits. If circuits are OK, substitute a known-good steering angle sensor and recheck.
14	DTC check 1) Disconnect connectors from all control modules (ECM, TCM (A/T model), BCM, ABS or ESP® control module, 4WD control module (if equipped), keyless start control module (if equipped), combination meter, steering angle sensor (ESP® model)) with ignition switch turned OFF. 2) Check that CAN communication circuit is as follows. <ul style="list-style-type: none"> • ALL wire harness resistance of CAN communication circuit is less than 1 Ω between each control module. • Insulation resistance between CAN communication circuit wires is infinity at each control module connector. • Insulation resistance between each CAN communication circuit wire and vehicle body ground is infinity at each control module connector. • Circuit voltage of CAN communication circuit is 0 V with ignition switch turned ON. <i>Are they in good condition?</i>	Go to Step 15.	Repair or replace defective CAN communication circuit.
15	Vehicle spec check <i>Is vehicle equipped with A/T?</i>	Go to Step 16.	Go to Step 17.
16	DTC check in TCM (A/T model) 1) Connect connectors to all control modules with ignition switch turned OFF. 2) Check DTC U0140 in TCM (A/T model). <i>Is it indicated?</i>	Go to Step 17.	Substitute a known-good ECM and recheck.

Step	Action	Yes	No
17	Combination meter operation check 1) Check combination meter operation for seat belt warning light by fastening and unfastening driver side seat belt with ignition switch turned ON. <i>Is it check result satisfactory?</i>	Substitute a known-good ECM and recheck.	Check BCM power and ground circuits, If circuits are OK, substitute a known-good BCM and recheck.

Inspection of ECM and Its Circuits

S6JB0B1104084

ECM and its circuits can be checked by measuring voltage, pulse signal and resistance with special tool connected.

⚠ CAUTION

ECM cannot be checked by itself. It is strictly prohibited to connect voltmeter or ohmmeter to ECM with ECM connectors disconnected from it.

Voltage Check


- 1) Remove ECM (1) from its bracket referring to “Engine Control Module (ECM) Removal and Installation in Section 1C”.
- 2) Connect special tool (A) between ECM and ECM connectors securely.

Special tool
(A): 09933–06520

- 3) Check voltage and/or pulse signal using voltmeter (2) and oscilloscope (3).

NOTE


- As each terminal voltage is affected by battery voltage, confirm that it is 11 V or more when ignition switch is turned ON.
- Voltage with asterisk (*) cannot be measured with voltmeter because it is pulse signal. Use oscilloscope for its check if necessary.

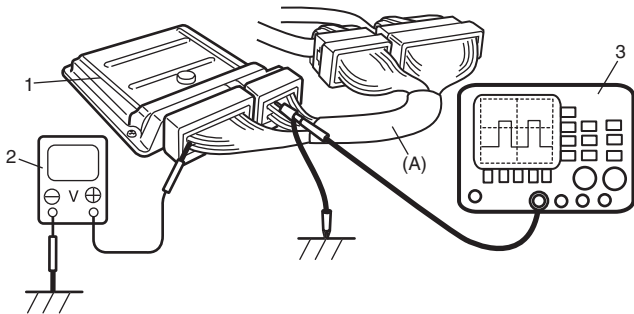

I6JB01110115-03

- Before performed this inspection, be sure to read the “Precautions of ECM Circuit Inspection”.

Viewed from harness side

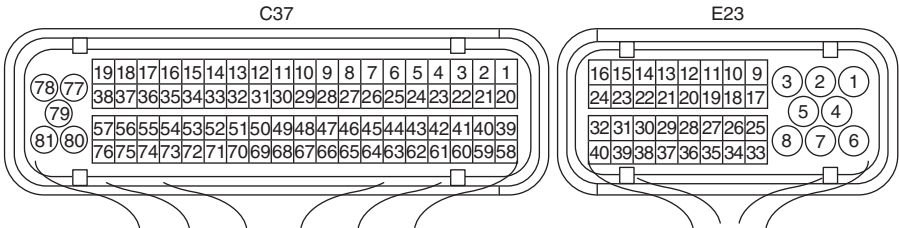

I6JB01110064-02

ECM connector "C37"

Terminal No.	Wire color	Circuit	Normal voltage	Condition	Remarks
1	BLK/ RED	Heater output of heated oxygen sensor-2 (Bank-1) (if equipped)	10 – 14 V	Ignition switch is at ON position.	—
			*0 – 1 V ↑↓ 10 – 14 V Refer to "Reference waveform No.1: " and "Reference waveform No.2: ".	Engine is running at specified idle speed after warmed up engine.	Output signal is active low duty pulse. Duty ratio varies depending on the engine condition.
2	BLK/ RED	Heater output of heated oxygen sensor-2 (Bank-1) (if equipped)	10 – 14 V	Ignition switch is at ON position.	—
			*0 – 1 V ↑↓ 10 – 14 V Refer to "Reference waveform No.1: " and "Reference waveform No.2: ".	Engine is running at specified idle speed after warmed up engine.	Output signal is active low duty pulse. Duty ratio varies depending on the engine condition.
3	RED	Oxygen signal of heated oxygen sensor-2 (Bank-1) (if equipped)	4 – 5 V	Ignition switch is at ON position.	—
			Approx. 0.15 V Refer to "Reference waveform No.1: " and "Reference waveform No.2: ".	Engine is running at specified idle speed after warmed up engine.	Output signal varies depending on the engine condition.
4	LT GRN	MAF sensor signal	0.5 – 1.0 V	Ignition switch is at ON position.	—
			1.2 – 3.6 V Refer to "Reference waveform No.3: ".	Engine running at specified idle speed after warmed up engine.	Output signal varies depending on the throttle valve opening and engine speed.
5	—	—	—	—	—
6	—	—	—	—	—
7	—	—	—	—	—
8	BLU/ RED	Power steering pump pressure switch signal	10 – 14 V	Ignition switch is at ON position.	—
			0 – 1 V	Turning steering wheel to the right or left as far as it stops while engine is running.	—
9	—	—	—	—	—
10	GRN/ BLK	EVAP canister purge valve output	10 – 14 V	Ignition switch is at ON position.	—
			*0 – 0.6 V ↑↓ 10 – 14 V Refer to "Reference waveform No.4: ".	Ignition switch is at ON position. Set EVAP canister purge valve at 50% by using "MISC. Test" of SUZUKI scan tool.	Output signal is active low duty pulse. Duty ratio varies depending on the vehicle condition.
11	YEL/ GRN	EGR valve (stepper motor coil 3) output (if equipped)	10 – 14 V	Ignition switch is at ON position.	—
			*0 – 1 V ↑↓ 10 – 14 V Refer to "Reference waveform No.5: ".	Engine is at cranking.	Output signal is active low duty pulse. Number of pulse generated times varies depending on engine condition.

1A-203 Engine General Information and Diagnosis:

Terminal No.	Wire color	Circuit	Normal voltage	Condition	Remarks
12	YEL/ BLK	EGR valve (stopper motor coil 1) output (if equipped)	10 – 14 V	Ignition switch is at ON position.	—
			*0 – 1 V ↑↓ 10 – 14 V Refer to "Reference waveform No.5: ".	Engine is at cranking.	Output signal is active low duty pulse. Number of pulse generated times varies depending on engine condition.
13	GRY/ GRN	Fuel injector No.5 output	10 – 14 V	Ignition switch is at ON position.	—
			*0 – 0.6 V ↑↓ 10 – 14 V Refer to "Reference waveform No.6: ", "Reference waveform No.7: " and "Reference waveform No.29: ".	Engine is running at specified idle speed after warmed up engine.	Output signal is active low pulse. Pulse frequency varies depending on the engine speed. Pulse width varies depending on the ECT and engine load.
14	PNK/ GRN	Fuel injector No.3 output	10 – 14 V	Ignition switch is at ON position.	—
			*0 – 0.6 V ↑↓ 10 – 14 V Refer to "Reference waveform No.6: ", "Reference waveform No.8: " and "Reference waveform No.29: ".	Engine is running at specified idle speed after warmed up engine.	Output signal is active low pulse. Pulse frequency varies depending on the engine speed. Pulse width varies depending on the ECT and engine load.
15	PNK	Fuel injector No.1 output	10 – 14 V	Ignition switch is at ON position.	—
			*0 – 0.6 V ↑↓ 10 – 14 V Refer to "Reference waveform No.6: ", "Reference waveform No.9: " and "Reference waveform No.29: ".	Engine is running at specified idle speed after warmed up engine.	Output signal is active low pulse. Pulse frequency varies depending on the engine speed. Pulse width varies depending on the ECT and engine load.
16	RED/ BLU	Ground for A/F sensor adjusting resister (Bank-1)	Below 0.3 V	Ignition switch is at ON position.	—
17	RED/ YEL	A/F sensor adjusting resister signal (Bank-1)	0.15 – 4.82 V	Ignition switch is at ON position.	—
18	BLK	A/F sensor signal (+) (Bank-1)	2.0 – 2.4 V Refer to "Reference waveform No.10: " and "Reference waveform No.11: ".	Engine is running at specified idle speed after warmed up engine.	—
19	WHT	A/F sensor signal (–) (Bank-1)	1.6 – 2.0 V Refer to "Reference waveform No.10: " and "Reference waveform No.11: ".	Engine is running at specified idle speed after warmed up engine.	—

Terminal No.	Wire color	Circuit	Normal voltage	Condition	Remarks
20	WHT/ BLK	Heater output of heated oxygen sensor-2 (Bank-2) (if equipped)	10 – 14 V	Ignition switch is at ON position.	—
			*0 – 1 V ↑↓ 10 – 14 V Refer to “Reference waveform No.1: ” and “Reference waveform No.2: ”.	Engine is running at specified idle speed after warmed up engine.	Output signal is active low duty pulse. Duty ratio varies depending on the engine condition.
21	WHT/ BLK	Heater output of heated oxygen sensor-2 (Bank-2) (if equipped)	10 – 14 V	Ignition switch is at ON position.	—
			*0 – 1 V ↑↓ 10 – 14 V Refer to “Reference waveform No.1: ” and “Reference waveform No.2: ”.	Engine is running at specified idle speed after warmed up engine.	Output signal is active low duty pulse. Duty ratio varies depending on the engine condition.
22	RED	Oxygen signal of heated oxygen sensor-2 (Bank-2) (if equipped)	4 – 5 V	Ignition switch is at ON position.	Output signal varies depending on the engine condition.
			Approx. 0.15 V Refer to “Reference waveform No.1: ” and “Reference waveform No.2: ”.	Engine is running at specified idle speed after warmed up engine.	
23	BLU	Ground for MAF sensor	Below 0.3 V	Ignition switch is at ON position.	—
24	RED	IAT sensor signal	3.62 – 3.93 V	Ignition switch is at ON position and intake air temperature is at 0 °C (32 °F)	—
			1.85 – 2.02 V	Ignition switch is at ON position and intake air temperature is at 40 °C (104 °F)	—
			0.73 – 0.80 V	Ignition switch is at ON position and intake air temperature is at 80 °C (176 °F)	—
25	WHT	Knock sensor signal	2 – 3 V Refer to “Reference waveform No.12: ”.	Engine is running at 4000 rpm after warmed up engine.	—
26	PPL/ YEL	ECT sensor signal	3.64 – 3.95 V	Ignition switch is at ON position and engine coolant temperature is at 0 °C (32 °F)	—
			1.50 – 1.63 V	Ignition switch is at ON position and engine coolant temperature is at 50 °C (122 °F)	—
			0.45 – 0.49 V	Ignition switch is at ON position and engine coolant temperature is at 100 °C (212 °F)	—
27	—	—	—	—	—

1A-205 Engine General Information and Diagnosis:

Terminal No.	Wire color	Circuit	Normal voltage	Condition	Remarks
28	BLK/ YEL	Starting motor control relay output	0 – 1 V	Ignition switch is at ON position.	—
			10 – 14 V	Ignition switch is at ST position. (Engine is cranking.)	
29	GRY/ RED	IMT vacuum solenoid valve output	0 – 1 V	Engine is racing after warmed up engine.	—
			10 – 14 V	Ignition switch is at ON position.	
30	YEL	EGR valve (stepper motor coil 4) output (if equipped)	10 – 14 V	Ignition switch is at ON position.	—
			*0 – 1 V ↑↓ 10 – 14 V Refer to "Reference waveform No.5: ".	Engine is at cranking.	Output signal is active low duty pulse. Number of pulse generated times varies depending on engine condition.
31	YEL/ RED	EGR valve (stepper motor coil 2) output (if equipped)	10 – 14 V	Ignition switch is at ON position.	—
			*0 – 1 V ↑↓ 10 – 14 V Refer to "Reference waveform No.5: ".	Engine is at cranking.	Output signal is active low duty pulse. Number of pulse generated times varies depending on engine condition.
32	GRY/ BLK	Fuel injector No.6 output	10 – 14 V	Ignition switch is at ON position.	—
			*0 – 0.6 V ↑↓ 10 – 14 V Refer to "Reference waveform No.6: ", "Reference waveform No.13: " and "Reference waveform No.29: ".	Engine is running at specified idle speed after warmed up engine.	Output signal is active low pulse. Pulse frequency varies depending on the engine speed. Pulse width varies depending on the ECT and engine load.
33	PNK/ BLU	Fuel injector No.4 output	10 – 14 V	Ignition switch is at ON position.	—
			*0 – 0.6 V ↑↓ 10 – 14 V Refer to "Reference waveform No.6: ", "Reference waveform No.14: " and "Reference waveform No.29: ".	Engine is running at specified idle speed after warmed up engine.	Output signal is active low pulse. Pulse frequency varies depending on the engine speed. Pulse width varies depending on the ECT and engine load.
34	PNK/ BLK	Fuel injector No.2 output	10 – 14 V	Ignition switch is at ON position.	—
			*0 – 0.6 V ↑↓ 10 – 14 V Refer to "Reference waveform No.6: ", "Reference waveform No.15: " and "Reference waveform No.29: ".	Engine is running at specified idle speed after warmed up engine.	Output signal is active low pulse. Pulse frequency varies depending on the engine speed. Pulse width varies depending on the ECT and engine load.

Terminal No.	Wire color	Circuit	Normal voltage	Condition	Remarks
35	BLU/ RED	Ground for A/F sensor adjusting resister (Bank-2)	Below 0.3 V	Ignition switch is at ON position.	—
36	BLU/ YEL	A/F sensor adjusting resister signal (Bank-2)	0.15 – 4.82 V	Ignition switch is at ON position.	—
37	BRN	A/F sensor signal (+) (Bank-2)	2.0 – 2.4 V Refer to “Reference waveform No.10: ” and “Reference waveform No.11: ”.	Engine is running at specified idle speed after warmed up engine.	Output signal varies depending on the engine condition.
38	YEL	A/F sensor signal (–) (Bank-2)	1.6 – 2.0 V Refer to “Reference waveform No.10: ” and “Reference waveform No.11: ”.	Engine is running at specified idle speed after warmed up engine.	
39	BLK/ YEL	Ground for ECM	Below 0.3 V	Ignition switch is at ON position.	—
40	—	—	—	—	—
41	—	—	—	—	—
42	—	—	—	—	—
43	—	—	—	—	—
44	—	—	—	—	—
45	BLK	Output for 5 V power source of throttle position sensor	4.5 – 5.5 V	Ignition switch is at ON position.	—
46	WHT	Throttle position sensor signal (main)	0.34 – 0.66 V	Ignition switch is at ON position and accelerator pedal is not depressed after warmed up engine.	Output signal varies linearly depending on the throttle valve opening.
			3.96 – 4.33 V	Ignition switch is at ON position and accelerator pedal is at fully depressed position after warmed up engine.	
47	WHT/ BLU	CKP sensor signal	*0 – 0.6 V ↑↓ 4 – 6 V Refer to “Reference waveform No.16: ”, “Reference waveform No.28: ” and “Reference waveform No.29: ”.	Engine is running at specified idle speed after warmed up engine.	Sensor signals are pulse. Pulse frequency varies depending on the engine speed.

1A-207 Engine General Information and Diagnosis:

Terminal No.	Wire color	Circuit	Normal voltage	Condition	Remarks
48	GRY/ BLK	A/C refrigerant pressure sensor signal (if equipped)	1.38 – 1.52 V	Air conditioning system is not operated while engine is running and A/C refrigerant pressure is 800 kPa (116 psi).	Output signal varies linearly depending on the A/C refrigerant pressure.
			2.15 – 2.38 V	Air conditioning system is operation while engine is running and when A/C refrigerant pressure is 1400 kPa (203 psi).	—
			2.67 – 2.95 V	Air conditioning system is operation while engine is running and when A/C refrigerant pressure is 1800 kPa (261 psi).	—
49	GRY/ RED	Output for 5 V power source of MAP sensor (if equipped) and A/C refrigerant pressure sensor (if equipped)	4.5 – 5.5 V	Ignition switch is at ON position.	—
50	—	—	—	—	—
51	—	—	—	—	—
52	—	—	—	—	—
53	—	—	—	—	—
54	—	—	—	—	—
55	BRN/ RED	Ignition coil No.5 output	0 – 0.6 V	Ignition switch is at ON position.	—
			*0 – 0.6 V ↑↓ 4 – 6 V Refer to "Reference waveform No.17: ", "Reference waveform No.18: " and "Reference waveform No.28: ".	Engine is running at specified idle speed after warmed up engine.	Output signal is active high pulse. Pulse frequency varies depending on the engine speed.
56	BRN/ WHT	Ignition coil No.3 output	0 – 0.6 V	Ignition switch is at ON position.	—
			*0 – 0.6 V ↑↓ 4 – 6 V Refer to "Reference waveform No.17: ", "Reference waveform No.19: " and "Reference waveform No.28: ".	Engine is running at specified idle speed after warmed up engine.	Output signal is active high pulse. Pulse frequency varies depending on the engine speed.

Terminal No.	Wire color	Circuit	Normal voltage	Condition	Remarks
57	BRN	Ignition coil No.1 output	0 – 0.6 V	Ignition switch is at ON position.	—
			*0 – 0.6 V ↑↓ 4 – 6 V Refer to “Reference waveform No.17: ”, “Reference waveform No.20: ” and “Reference waveform No.28: ”.	Engine is running at specified idle speed after warmed up engine.	Output signal is active high pulse. Pulse frequency varies depending on the engine speed.
58	BLK/YEL	Ground for ECM	Below 0.3 V	Ignition switch is at ON position.	—
59	BLK/YEL	Ground for ECM	Below 0.3 V	Ignition switch is at ON position.	—
60	—	—	—	—	—
61	—	—	—	—	—
62	—	—	—	—	—
63	—	—	—	—	—
64	RED	Ground for throttle position sensor	Below 0.3 V	Ignition switch is at ON position.	—
65	GRN	Throttle position sensor signal (sub)	4.22 – 4.58 V	Ignition switch is at ON position and accelerator pedal is not depressed after warmed up engine.	Output signal varies linearly depending on the throttle valve opening.
			0.58 – 0.95 V	Ignition switch is at ON position and accelerator pedal is at fully depressed position after warmed up engine.	
66	WHT/RED	CMP sensor signal	*0 – 0.6 V ↑↓ 4 – 6 V Refer to “Reference waveform No.16: ”, “Reference waveform No.28: ” and “Reference waveform No.29: ”.	Engine running at specified idle speed after warmed up engine.	Sensor signals are pulse. Pulse frequency varies depending on the engine speed.
67	GRY/GRN	Ground for MAP sensor (if equipped), A/C refrigerant pressure sensor (if equipped), engine coolant temperature sensor, IAT sensor and heated oxygen sensor-2 (if equipped)	Below 0.3 V	Ignition switch is at ON position.	—

1A-209 Engine General Information and Diagnosis:

Terminal No.	Wire color	Circuit	Normal voltage	Condition	Remarks
68	RED/ WHT	MAP sensor signal (if equipped)	3.3 – 4.3 V	Ignition switch is at ON position and barometric pressure is at 100 kPa (760 mmHg).	—
			1.0 – 2.5 V	Refer to “Reference waveform No.21: ”.	Output signal varies linearly depending on the throttle valve opening and engine speed.
69	—	—	—	—	—
70	—	—	—	—	—
71	—	—	—	—	—
72	—	—	—	—	—
73	BLK/ ORN	Ground for ECM	Below 0.3 V	Ignition switch is at ON position.	—
74	PPL/ RED	Ignition coil No.6 output	0 – 0.6 V	Ignition switch is at ON position.	—
			*0 – 0.6 V ↑↓ 4 – 6 V Refer to “Reference waveform No.17: ”, “Reference waveform No.22: ” and “Reference waveform No.28: ”.	Engine running at specified idle speed after warmed up engine.	Output signal is active high pulse. Pulse frequency varies depending on engine speed.
75	BRN/ YEL	Ignition coil No.4 output	0 – 0.6 V	Ignition switch is at ON position.	—
			*0 – 0.6 V ↑↓ 4 – 6 V Refer to “Reference waveform No.17: ”, “Reference waveform No.23: ” and “Reference waveform No.28: ”.	Engine running at specified idle speed after warmed up engine.	Output signal is active high pulse. Pulse frequency varies depending on engine speed.
76	BRN/ BLK	Ignition coil No.2 output	0 – 0.6 V	Ignition switch is at ON position.	—
			*0 – 0.6 V ↑↓ 4 – 6 V Refer to “Reference waveform No.17: ”, “Reference waveform No.24: ” and “Reference waveform No.28: ”.	Engine running at specified idle speed after warmed up engine.	Output signal is active high pulse. Pulse frequency varies depending on engine speed.
77	PNK/ BLK	Heater output of A/F sensor (Bank-1)	10 – 14 V	Ignition switch is at ON position.	—
			*0 – 1 V ↑↓ 10 – 14 V Refer to “Reference waveform No.10: ” and “Reference waveform No.11: ”.	Engine running at specified idle speed after warmed up engine.	Output signal is active low duty pulse. Duty ratio varies depending on the engine condition.

Terminal No.	Wire color	Circuit	Normal voltage	Condition	Remarks
78	PNK/ BLU	Heater output of A/F sensor (Bank-2)	10 – 14 V	Ignition switch is at ON position.	—
			*0 – 1 V ↑↓ 10 – 14 V Refer to “Reference waveform No.10: ” and “Reference waveform No.11: ”.	Engine running at specified idle speed after warmed up engine.	Output signal is active low duty pulse. Duty ratio varies depending on the engine condition.
79	BLK/ YEL	Ground for A/F sensor heater	Below 0.3 V	Ignition switch is at ON position.	—
80	BLK/ ORN	Ground for ECM	Below 0.3 V	Ignition switch is at ON position.	—
81	BLK/ ORN	Ground for ECM	Below 0.3 V	Ignition switch is at ON position.	—

ECM connector “E23”

Terminal No.	Wire color	Circuit	Normal voltage	Condition	Remarks
1	WHT	Power source for ECM internal memory	10 – 14 V	Ignition switch is at ON position.	—
2	BLU/ BLK	Main power supply	10 – 14 V	Ignition switch is at ON position.	—
3	BLU/ BLK	Main power supply	10 – 14 V	Ignition switch is at ON position.	—
4	BLU/ RED	Output of throttle actuator (+)	0 – 1 V	Ignition switch is at ON and accelerator pedal is at fully depressed position after warmed up engine.	Output signal are duty pulse. Duty ratio varies depending on throttle valve opening and accelerator pedal position.
			*0 – 1 V ↑↓ 10 – 14 V Refer to “Reference waveform No.25: ” and “Reference waveform No.26: ”.	Ignition switch is at ON position and accelerator pedal is at idle position after warmed up engine.	
5	BLU/ YEL	Output of throttle actuator (–)	0 – 1 V	Ignition switch is at ON position and accelerator pedal is at idle position after warmed up engine.	Output signal are duty pulse. Duty ratio varies depending on throttle valve opening and accelerator pedal position.
			*0 – 1 V ↑↓ 10 – 14 V Refer to “Reference waveform No.25: ” and “Reference waveform No.26: ”.	Ignition switch is at ON and accelerator pedal is at fully depressed position after warmed up engine.	
6	BLU/ ORN	Throttle actuator control relay output	0 – 1 V	Ignition switch is at ON position.	—
7	GRN	Power supply of throttle actuator drive circuit	10 – 14 V	Ignition switch is at ON position.	—
8	BLK/ WHT	Ignition switch signal	0 – 1 V	Ignition switch is at OFF position.	—
			10 – 14 V	Ignition switch is at ON position.	

1A-211 Engine General Information and Diagnosis:

Terminal No.	Wire color	Circuit	Normal voltage	Condition	Remarks
9	WHT/ RED	CAN communication line (active high signal)	*2.5 – 4.5 V Refer to “Reference waveform No.27: ”.	Ignition switch is at ON position.	CAN communication signal is serial communication signal pulse. Pulse signal displayed with a regular frequency varies depending on engine condition.
10	—	—	—	—	—
11	PNK/ BLU	Clock signal for immobilizer coil antenna (If equipped)	10 – 14 V	Ignition switch is at ON position.	For details, refer to “Inspection of Immobilizer Control Module (ICM) and Its Circuit in Section 10C”.
12	—	—	—	—	—
13	—	—	—	—	—
14	RED/ YEL	Radiator cooling fan relay No.3 output	10 – 14 V	<ul style="list-style-type: none"> Ignition switch is at ON position and engine coolant temperature is below 100 °C (212 °F). A/C switch is at ON position while engine is running and A/C refrigerant pressure is below 1300 kPa (188.5 psi). 	—
			0 – 2 V	<ul style="list-style-type: none"> Ignition switch is at ON position and engine coolant temperature is 102.5 °C (203 °F) or higher. A/C switch is at ON position while engine is running and A/C refrigerant pressure is 1600 kPa (232 psi) or higher. 	—
15	RED/ BLK	Radiator cooling fan relay No.1 output	10 – 14 V	<ul style="list-style-type: none"> Ignition switch is at ON position and engine coolant temperature is below 95 °C (203 °F). A/C switch is at ON position while engine is running and A/C refrigerant pressure is below 300 kPa (43.5 psi). 	—
			0 – 2 V	<ul style="list-style-type: none"> Ignition switch is at ON position and engine coolant temperature is 97.5 °C (207.5 °F) or higher. A/C switch is at ON position while engine is running and A/C refrigerant pressure is 340 kPa (49.3 psi) or higher. 	—

Terminal No.	Wire color	Circuit	Normal voltage	Condition	Remarks
16	BLU	Main power supply relay output	0 – 1 V	Ignition switch is at OFF position.	—
			10 – 14 V	Ignition switch is at ON position.	
17	WHT/ BLU	CAN communication line (active low signal)	*0.5 – 2.5 V Refer to “Reference waveform No.17: ”.	Ignition switch is at ON position.	CAN communication signal is serial communication signal pulse. Pulse signal displayed with a regular frequency varies depending on engine condition.
18	—	—	—	—	—
19	GRY/ BLU	Serial communication line for immobilizer coil antenna (if equipped)	10 – 14 V	Ignition switch is at ON position.	For details, refer to “Inspection of Immobilizer Control Module (ICM) and Its Circuit in Section 10C”.
20	—	—	—	—	—
21	—	—	—	—	—
22	—	—	—	—	—
23	RED	Radiator cooling fan relay No.2 output	10 – 14 V	<ul style="list-style-type: none"> Ignition switch is at ON position and engine coolant temperature is below 100 °C (212 °F). A/C switch is at ON position while engine is running and A/C refrigerant pressure is below 1300 kPa (188.5 psi). 	—
			0 – 2 V	<ul style="list-style-type: none"> Ignition switch is at ON position and engine coolant temperature is 102.5 °C (203 °F) or higher. A/C switch is at ON position while engine is running and A/C refrigerant pressure is 1600 kPa (232 psi) or higher. 	—
24	WHT/ GRN	Fuel pump relay output	0 – 2.5 V	For 2 seconds from the time ignition switch is at ON position or while engine is running.	—
			10 – 14 V	2 seconds after ignition switch is at ON position or while engine is at stop.	
25	WHT	Output for 5 V power source of APP sensor (main)	4.5 – 5.5 V	Ignition switch is at ON position.	—

1A-213 Engine General Information and Diagnosis:


Terminal No.	Wire color	Circuit	Normal voltage	Condition	Remarks
26	WHT/ BLU	APP sensor signal (main)	0.70 – 0.80 V	Ignition switch is at ON position and accelerator pedal is not depressed after warmed up engine.	Output signal varies linearly depending on the accelerator pedal position.
			3.33 – 4.07 V	Ignition switch is at ON position and accelerator pedal is at fully depressed position after warmed up engine.	
27	ORN	Ground for APP sensor (main)	Below 0.3 V	Ignition switch is at ON position.	—
28	YEL/ RED	Fuel level sensor signal	0 – 6 V	Ignition switch is at ON position. (Voltage varies depends on fuel level.)	Output signal varies linearly depending on the fuel level.
29	PPL/ WHT	Serial communication line of DLC	8 – 14 V	Ignition switch is at ON position.	—
30	GRN/ WHT	Brake light switch signal	0 – 1 V	Ignition switch is at ON position and brake pedal is not depressed.	—
			10 – 14 V	Ignition switch is at ON position and brake pedal is depressed.	—
31	BLK/ WHT	Cruise control main switch signal (if equipped)	0 – 1 V	Ignition switch is at ON position and cruise control main switch is not pushed.	For details, refer to “Inspection of Cruise Control System Circuit in Section 10A”.
			10 – 14 V	Ignition switch is at ON position and cruise control main switch is kept in push.	
32	YEL/ GRN	Brake pedal position switch signal for cruise control system (if equipped)	0 – 1 V	Ignition switch is at ON position and brake pedal is depressed.	—
			10 – 14 V	Ignition switch is at ON position and brake pedal is not depressed.	—
33	ORN/ BLU	Output for 5 V power source of APP sensor (sub)	4.5 – 5.5 V	Ignition switch is at ON position.	—
34	BLU/ GRN	APP sensor signal (sub)	0.37 – 0.38 V	Ignition switch is at ON position and accelerator pedal is not depressed after warmed up engine.	Output signal varies linearly depending on the accelerator pedal position.
			1.66 – 2.03 V	Ignition switch is at ON position and accelerator pedal is at fully depressed position after warmed up engine.	
35	BLU/ YEL	Ground for APP sensor (sub)	Below 0.3 V	Ignition switch is at ON position.	—
36	—	—	—	—	—

Terminal No.	Wire color	Circuit	Normal voltage	Condition	Remarks
37	PNK	A/C compressor relay output (if equipped)	0 – 1 V	A/C switch is at OFF position and blower selector is at OFF position while engine is running.	—
			10 – 14 V	A/C switch is at ON position and blower selector is other than OFF position while engine is running.	—
38	BLK/YEL	Ground for cruise control command switch (if equipped)	Below 1.3 V	Ignition switch is at ON position.	For details, refer to "Inspection of Cruise Control System Circuit in Section 10A".
39	LT GRN	Cruise control command switch signal (if equipped)	4.5 – 5.5 V	Ignition switch is at ON position and cruise control command switch are not pushed.	
40	BLU	Clutch pedal position switch signal for cruise control system (if equipped)	0 – 1 V	Ignition switch is at ON position and clutch pedal is depressed.	
			10 – 14 V	Ignition switch is at ON position and clutch pedal is not depressed.	

Reference waveform No.1

Oxygen (1) and heater output (2) signals of heated oxygen sensor-2 (Bank-1 and Bank-2):

Measurement terminal	Bank-1 CH1: C37-1 or C37-2 to C37-81 CH2: C37-3 to C37-81 Bank-2 CH1: C37-20 or C37-21 to C37-81 CH2: C37-22 to C37-81
Oscilloscope setting	CH1: 10 V/DIV, CH2: 200 mV/DIV TIME: 200 ms/DIV
Measurement condition	Engine is running at specified idle speed after warmed up engine.

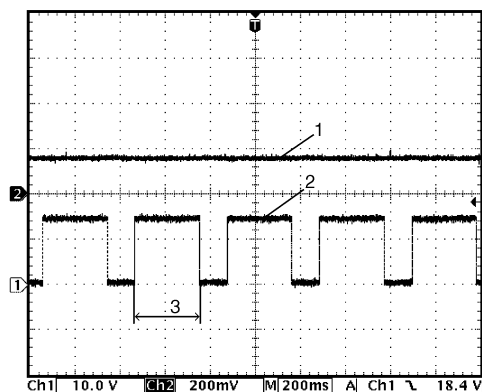


I6JB01110065-02

3. One duty cycle

Reference waveform No.2

Oxygen signal (1) and heater output signal (2) of heated oxygen sensor-2:

Measurement terminal	Bank-1 CH1: C37-1 or C37-2 to C37-81 CH2: C37-3 to C37-81 CH3: C37-46 to C37-81 Bank-2 CH1: C37-20 or C37-21 to C37-81 CH2: C37-22 to C37-81 CH3: C37-46 to C37-81
Oscilloscope setting	CH1: 10 V/DIV, CH2: 500 mV/DIV, CH3: 5 V/DIV TIME: 400 ms/DIV
Measurement condition	Engine is racing after warmed up engine.

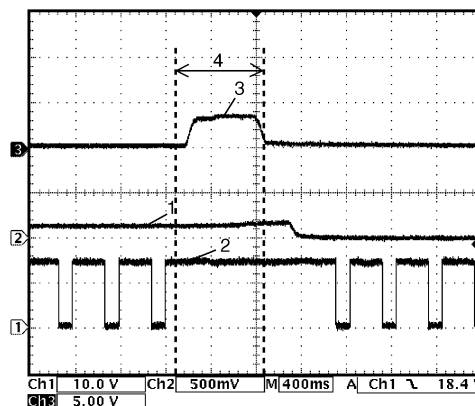

I6JB01110066-03


3. Throttle position sensor (main) signal

4. Racing

Reference waveform No.3

MAF sensor signal (1):

Measurement terminal	CH1: C37-4 to C37-23 CH2: C37-46 to C37-81
Oscilloscope setting	CH1: 1 V/DIV, CH2: 1 V/DIV TIME: 200 ms/DIV
Measurement condition	Engine is racing after warmed up engine.

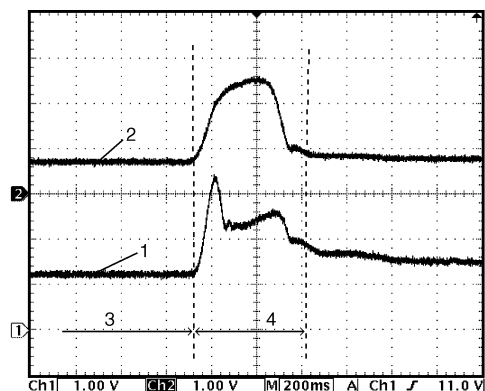


I6JB01110067-04

2. Throttle position sensor (main) signal
3. Idle
4. Racing

Reference waveform No.4

EVAP canister purge valve Signal:

Measurement terminal	CH1: C37-10 to C37-81
Oscilloscope setting	CH1: 10 V/DIV TIME: 40 ms/DIV
Measurement condition	Engine is running at specified idle speed after warming up. Set EVAP canister purge valve at 50% by using "MISC Test" of SUZUKI scan tool.

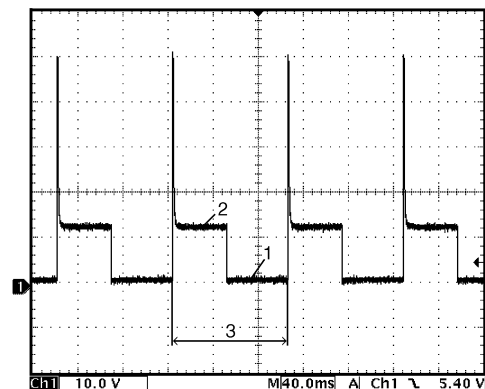


I6JB01110068-02

1. ON signal
2. OFF signal
3. One duty cycle

Reference waveform No.5

EGR valve Signal:

Measurement terminal	CH1: C37-12 to C37-81 CH2: C37-31 to C37-81 CH3: C37-11 to C37-81 CH4: C37-30 to C37-81
Oscilloscope setting	CH1: 20 V/DIV, CH2: 20 V/DIV, CH3: 20 V/DIV, CH4: 20 V/DIV TIME: 40 ms/DIV
Measurement condition	Engine is at cranking.

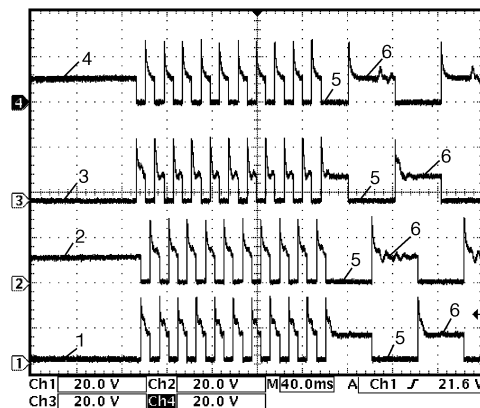


I6JB01110069-02

1. EGR valve stepper motor coil 1 signal
2. EGR valve stepper motor coil 2 signal
3. EGR valve stepper motor coil 3 signal
4. EGR valve stepper motor coil 4 signal
5. ON signal
6. OFF signal

Reference waveform No.6

Fuel injector signal:

Measurement terminal	CH1: C37-15 (No.1), C37-34 (No.2), C37-14 (No.3), C37-33 (No.4), C37-13 (No.5) or C37-32 (No.6) to C37-81
Oscilloscope setting	CH1: 20 V/DIV TIME: 1 ms/DIV
Measurement condition	Engine is running at specified idle speed after warmed up engine.

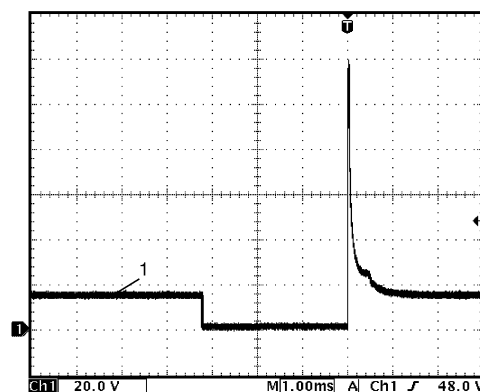


I6JB01110070-02

Reference waveform No.7

Fuel injector No.5 (1), CKP sensor (2) and CMP sensor (3) signals:

Measurement terminal	CH1: C37-13 to C37-81 CH2: C37-47 to C37-81 CH3: C37-66 to C37-81
Oscilloscope setting	CH1: 20 V/DIV, CH2: 5 V/DIV, CH3: 5 V/DIV TIME: 20 ms/DIV
Measurement condition	Engine is running at specified idle speed after warmed up engine.

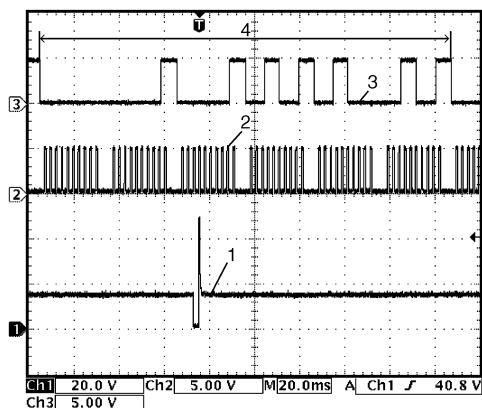


I6JB01110071-03

4. 720° crank angle

Reference waveform No.9

Fuel injector No.1 (1), CKP sensor (2) and CMP sensor (3) signals:

Measurement terminal	CH1: C37-15 to C37-81 CH2: C37-47 to C37-81 CH3: C37-66 to C37-81
Oscilloscope setting	CH1: 20 V/DIV, CH2: 5 V/DIV, CH3: 5 V/DIV TIME: 20 ms/DIV
Measurement condition	Engine is running at specified idle speed after warmed up engine.

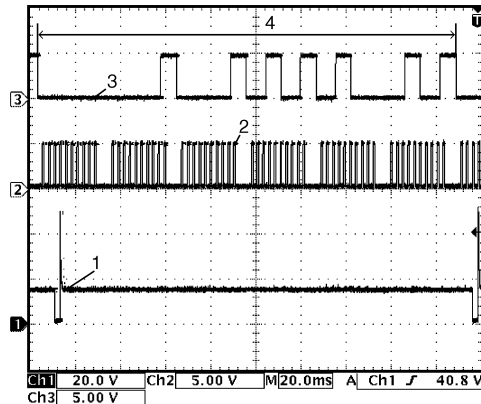


I6JB01110073-02

4. 720° crank angle

Reference waveform No.8

Fuel injector No.3 (1), CKP sensor (2) and CMP sensor (3) signals:

Measurement terminal	CH1: C37-14 to C37-81 CH2: C37-47 to C37-81 CH3: C37-66 to C37-81
Oscilloscope setting	CH1: 20 V/DIV, CH2: 5 V/DIV, CH3: 5 V/DIV TIME: 20 ms/DIV
Measurement condition	Engine is running at specified idle speed after warmed up engine.

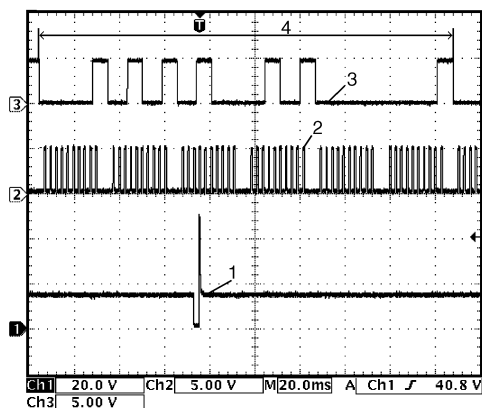


I6JB01110072-02

4. 720° crank angle

Reference waveform No.10

A/F sensor heater and A/F sensor signals (Bank-1 and Bank-2):

Measurement terminal	Bank-1 CH1: C37-18 to C37-81 CH2: C37-19 to C37-81 CH3: C37-77 to C37-81 Bank-2 CH1: C37-37 to C37-81 CH2: C37-38 to C37-81 CH3: C37-78 to C37-81
Oscilloscope setting	CH1: 500 mV/DIV, CH2: 500 mV/DIV, CH3: 5 V/DIV TIME: 40 ms/DIV
Measurement condition	Engine is running at specified idle speed after warmed up engine.

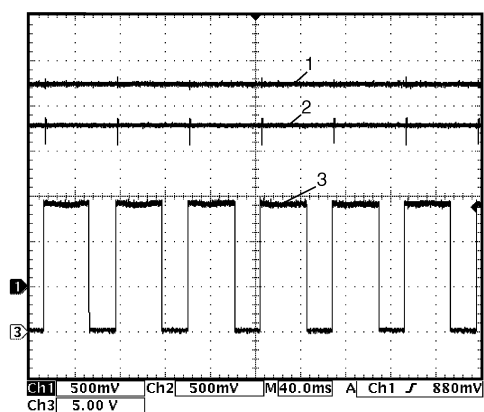


I6JB01110074-02

1. A/F sensor (+) signal
2. A/F sensor (-) signal
3. A/F sensor heater signal

Reference waveform No.11

A/F sensor heater and A/F sensor signals (Bank-1 and Bank-2):

Measurement terminal	Bank-1 CH1: C37-18 to C37-81 CH2: C37-19 to C37-81 CH3: C37-77 to C37-81 Bank-2 CH1: C37-37 to C37-81 CH2: C37-38 to C37-81 CH3: C37-78 to C37-81
Oscilloscope setting	CH1: 500 mV/DIV, CH2: 500 mV/DIV, CH3: 5 V/DIV TIME: 200 ms/DIV
Measurement condition	Engine is racing after warmed up engine.

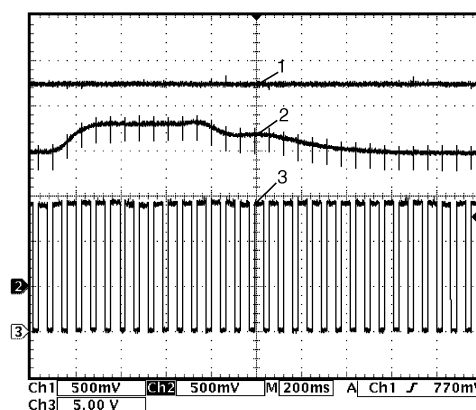


I6JB01110075-02

1. A/F sensor (+) signal
2. A/F sensor (-) signal
3. A/F sensor heater signal

Reference waveform No.12

Knock sensor signal (1):

Measurement terminal	CH1: C37-25 to C37-81
Oscilloscope setting	CH1: 1 V/DIV TIME: 200 μ s/DIV
Measurement condition	Engine is running at 4000 rpm after warmed up engine.

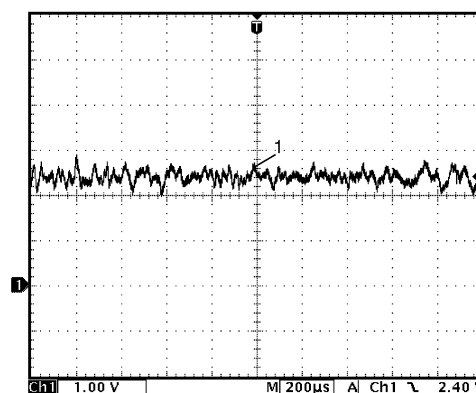


I6JB01110076-02

Reference waveform No.13

Fuel injector No.6 (1), CKP sensor (2) and CMP sensor (3) signals:

Measurement terminal	CH1: C37-32 to C37-81 CH2: C37-47 to C37-81 CH3: C37-66 to C37-81
Oscilloscope setting	CH1: 20 V/DIV, CH2: 5 V/DIV, CH3: 5 V/DIV TIME: 20 ms/DIV
Measurement condition	Engine is running at specified idle speed after warmed up engine.

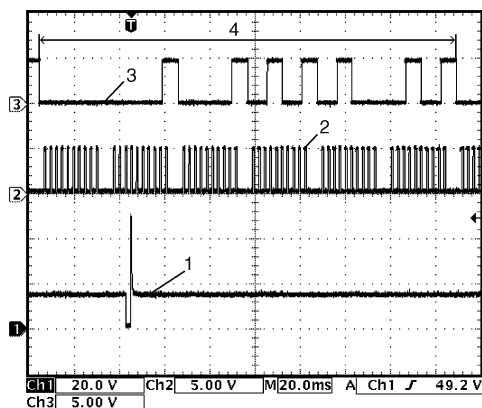


I6JB01110077-02

4. 720° crank angle

Reference waveform No.14

Fuel injector No.4 (1), CKP sensor (2) and CMP sensor (3) signals:

Measurement terminal	CH1: C37-33 to C37-81 CH2: C37-47 to C37-81 CH3: C37-66 to C37-81
Oscilloscope setting	CH1: 20 V/DIV, CH2: 5 V/DIV, CH3: 5 V/DIV TIME: 20 ms/DIV
Measurement condition	Engine is running at specified idle speed after warmed up engine.

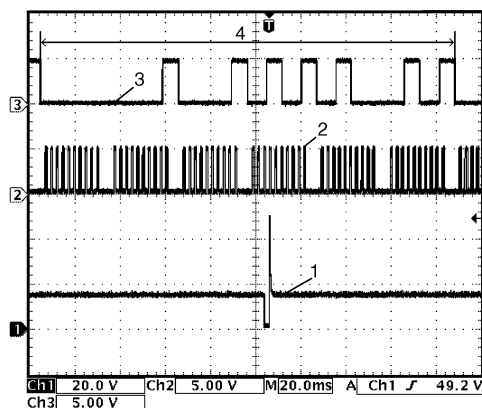


I6JB01110078-02

4. 720° crank angle

Reference waveform No.15

Fuel injector No.2 (1), CKP sensor (2) and CMP sensor (3) signals:

Measurement terminal	CH1: C37-34 to C37-81 CH2: C37-47 to C37-81 CH3: C37-66 to C37-81
Oscilloscope setting	CH1: 20 V/DIV, CH2: 5 V/DIV, CH3: 5 V/DIV TIME: 20 ms/DIV
Measurement condition	Engine is running at specified idle speed after warmed up engine.

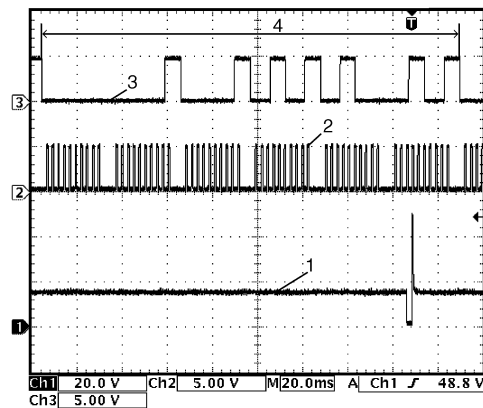


I6JB01110079-02

4. 720° crank angle

Reference waveform No.16

CKP sensor (1) and CMP sensor (2) signals:

Measurement terminal	CH1: C37-47 to C37-81 CH2: C37-66 to C37-81
Oscilloscope setting	CH1: 2 V/DIV, CH2: 2 V/DIV, TIME: 20 ms/DIV
Measurement condition	Engine is running at specified idle speed after warmed up engine.

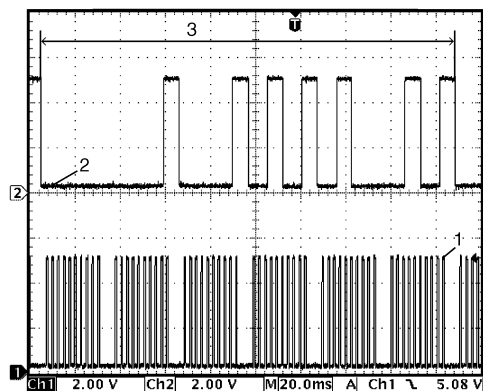


I6JB01110080-02

3. 720° crank angle

Reference waveform No.17

Ignition coil signal (1):


Measurement terminal	CH1: C37-57 (No.1), C37-76 (No.2), C37-56 (No.3), C37-75 (No.4), C37-55 (No.5) or C37-74 (No.6) to C37-81
Oscilloscope setting	CH1: 2 V/DIV TIME: 1 ms/DIV
Measurement condition	Engine is running at specified idle speed after warmed up engine.

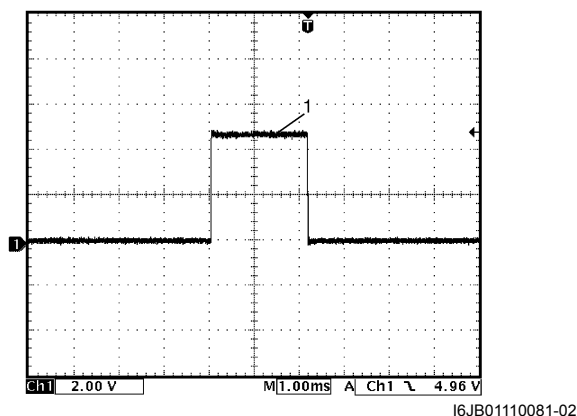

Reference waveform No.18

Ignition coil No.5 (1), CKP sensor (2) and CMP sensor (3) signals:


Measurement terminal	CH1: C37-55 to C37-81 CH2: C37-47 to C37-81 CH3: C37-66 to C37-81
Oscilloscope setting	CH1: 5 V/DIV, CH2: 5 V/DIV, CH3: 5 V/DIV TIME: 20 ms/DIV
Measurement condition	Engine is running at specified idle speed after warmed up engine.

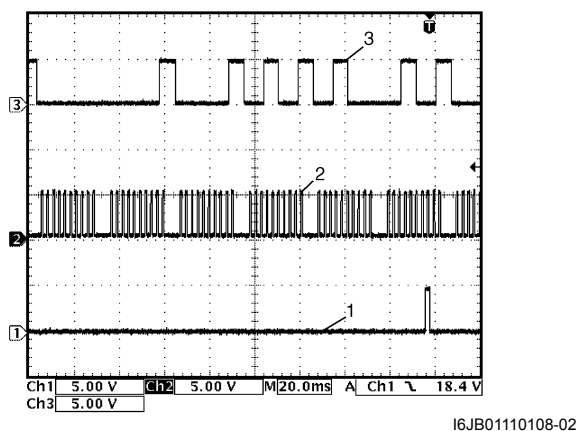

Reference waveform No.19

Ignition coil No.3 (1), CKP sensor (2) and CMP sensor (3) signals:


Measurement terminal	CH1: C37-56 to C37-81 CH2: C37-47 to C37-81 CH3: C37-66 to C37-81
Oscilloscope setting	CH1: 5 V/DIV, CH2: 5 V/DIV, CH3: 5 V/DIV TIME: 20 ms/DIV
Measurement condition	Engine is running at specified idle speed after warmed up engine.

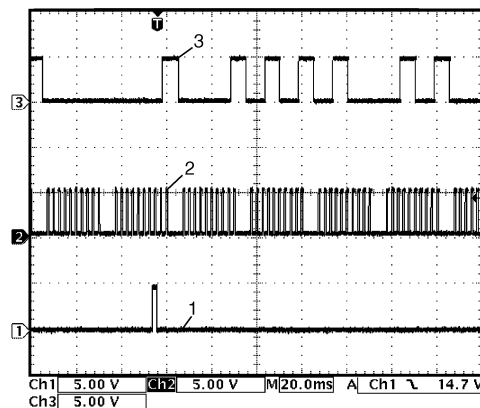

Reference waveform No.20

Ignition coil No.1 (1), CKP sensor (2) and CMP sensor (3) signals:


Measurement terminal	CH1: C37-57 to C37-81 CH2: C37-47 to C37-81 CH3: C37-66 to C37-81
Oscilloscope setting	CH1: 5 V/DIV, CH2: 5 V/DIV, CH3: 5 V/DIV TIME: 20 ms/DIV
Measurement condition	Engine is running at specified idle speed after warmed up engine.

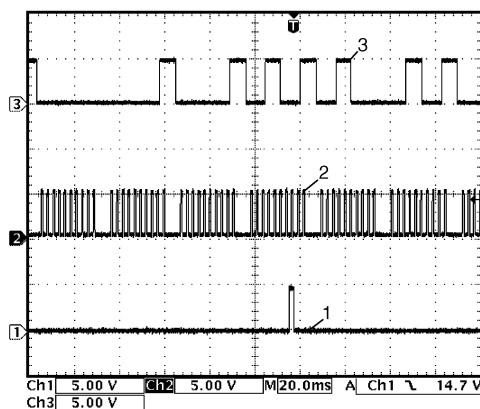

Reference waveform No.21

MAP sensor signal (1):

Measurement terminal	CH1: C37-68 to C37-67 CH2: C37-46 to C37-81
Oscilloscope setting	CH1: 2 V/DIV, CH2: 2 V/DIV TIME: 100 ms/DIV
Measurement condition	Engine is racing after warmed up engine.

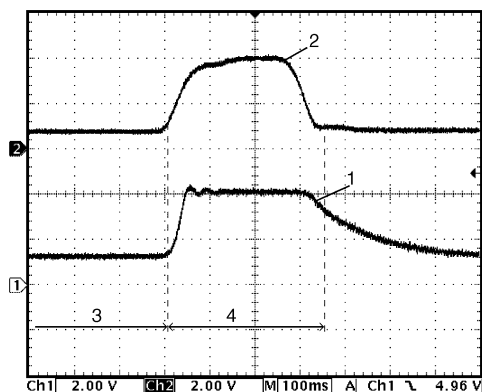


I6JB01110083-02

2. Throttle position sensor (main) signal
3. Idle
4. Racing

Reference waveform No.22

Ignition coil No.6 (1), CKP sensor (2) and CMP sensor (3) signals:

Measurement terminal	CH1: C37-74 to C37-81 CH2: C37-47 to C37-81 CH3: C37-66 to C37-81
Oscilloscope setting	CH1: 5 V/DIV, CH2: 5 V/DIV, CH3: 5 V/DIV TIME: 20 ms/DIV
Measurement condition	Engine is running at specified idle speed after warmed up engine.

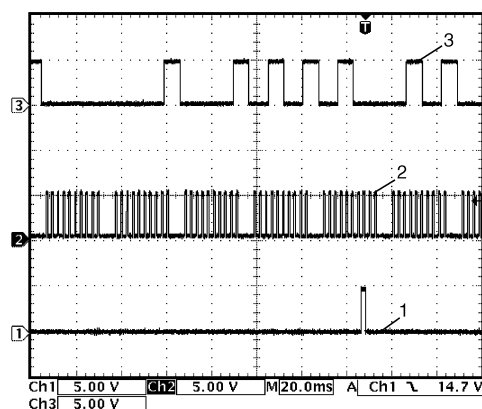


I6JB01110085-02

Reference waveform No.23

Ignition coil No.4 (1), CKP sensor (2) and CMP sensor (3) signals:

Measurement terminal	CH1: C37-75 to C37-81 CH2: C37-47 to C37-81 CH3: C37-66 to C37-81
Oscilloscope setting	CH1: 5 V/DIV, CH2: 5 V/DIV, CH3: 5 V/DIV TIME: 20 ms/DIV
Measurement condition	Engine is running at specified idle speed after warmed up engine.

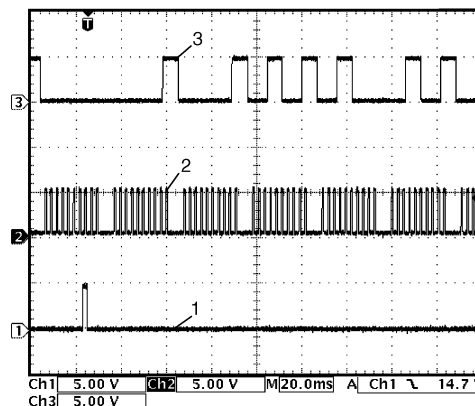


I6JB01110086-01

Reference waveform No.24

Ignition coil No.2 (1), CKP sensor (2) and CMP sensor (3) signals:

Measurement terminal	CH1: C37-76 to C37-81 CH2: C37-47 to C37-81 CH3: C37-66 to C37-81
Oscilloscope setting	CH1: 5 V/DIV, CH2: 5 V/DIV CH3: 5 V/DIV TIME: 20 ms/DIV
Measurement condition	Engine is running at specified idle speed after warmed up engine.

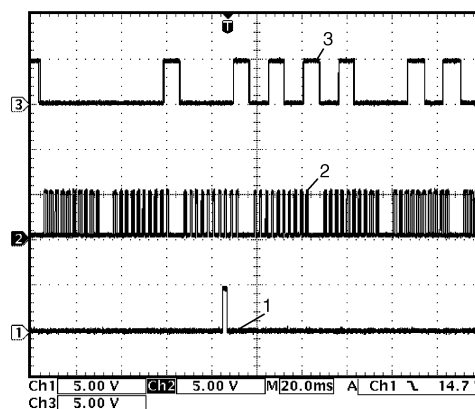


I6JB01110087-02

Reference waveform No.25

Throttle actuator output signals:

Measurement terminal	CH1: E23-4 to C37-81 CH2: E23-5 to C37-81
Oscilloscope setting	CH1: 5 V/DIV, CH2: 5 V/DIV, TIME: 100 μ s/DIV
Measurement condition	Ignition switch is at ON position and accelerator pedal is not depressed after warmed up engine.

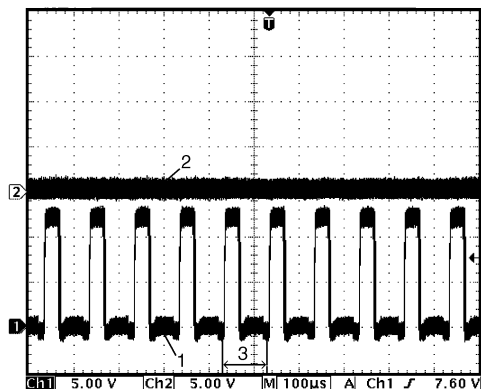


I6JB01110088-01

1. Throttle actuator drive signal (E23-4 terminal)
2. Throttle actuator drive signal (E23-5 terminal)
3. One duty cycle

Reference waveform No.26

Throttle actuator output signals:

Measurement terminal	CH1: E23-4 to C37-81 CH2: E23-5 to C37-81
Oscilloscope setting	CH1: 5 V/DIV, CH2: 5 V/DIV TIME: 100 μ s/DIV
Measurement condition	Ignition switch is at ON position and accelerator pedal is at fully depressed after warmed up engine.

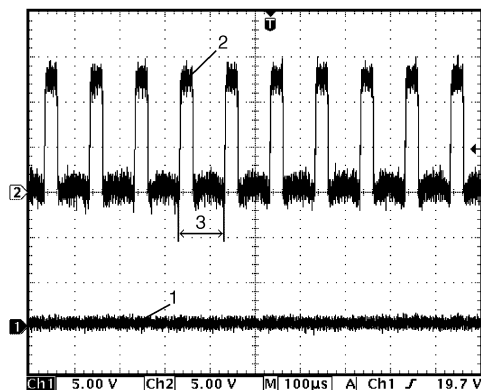


I6JB01110089-02

1. Throttle actuator drive signal (E23-4 terminal)
2. Throttle actuator drive signal (E23-5 terminal)
3. One duty cycle

Reference waveform No.27

CAN communication line signals:

Measurement terminal	CH1: E23-9 to C37-81 CH2: E23-17 to C37-81
Oscilloscope setting	CH1: 1 V/DIV, CH2: 1V/DIV TIME: 40 μ s/DIV
Measurement condition	Ignition switch is at ON position. (Signal pattern is depending on communication data.)

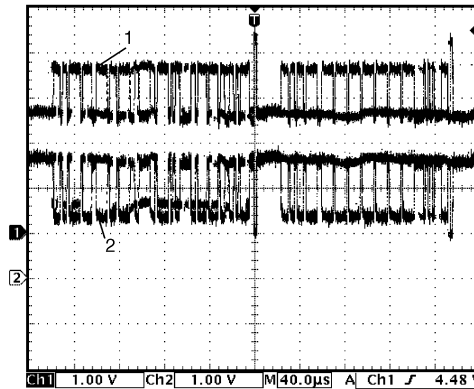


I6JB01110090-02

1. CAN communication line signal (high)
2. CAN communication line signal (low)

Reference waveform No.28

Start (1), CKP sensor (2), CMP sensor (3) and ignition coil No.1 (4) signals:

Measurement terminal	CH1: C37-28 to C37-81 CH2: C37-47 to C37-81 CH3: C37-66 to C37-81 CH4: C37-15 to C37-81
Oscilloscope setting	CH1: 10 V/DIV, CH2: 5 V/DIV, CH3: 5 V/DIV, CH4: 5 V/DIV TIME: 100 ms/DIV
Measurement condition	Engine is at cranking.

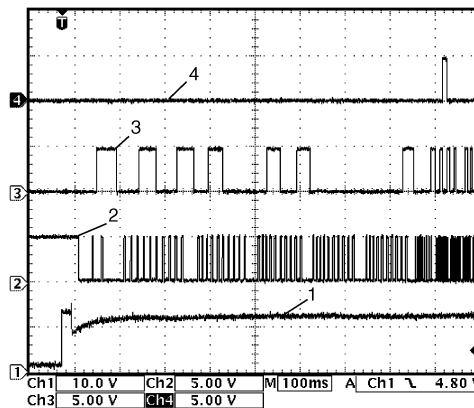


I6JB01110093-02

Reference waveform No.29

Start (1), CKP sensor (2), CMP sensor (3) and fuel injector No.1 (4) signals:

Measurement terminal	CH1: C37-28 to C37-81 CH2: C37-47 to C37-81 CH3: C37-66 to C37-81 CH4: C37-15 to C37-81
Oscilloscope setting	CH1: 10 V/DIV, CH2: 5 V/DIV, CH3: 5 V/DIV, CH4: 10 V/DIV TIME: 100 ms/DIV
Measurement condition	Engine is at cranking.

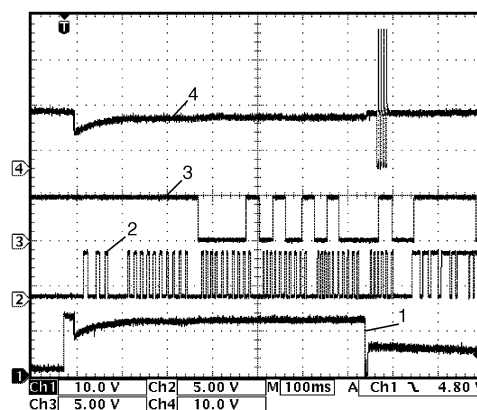

I6JB01110094-02

Resistance Check

- 1) Remove ECM from its bracket referring to "Engine Control Module (ECM) Removal and Installation in Section 1C".

⚠ CAUTION

Never touch terminals of ECM itself or connect voltmeter or ohmmeter (2).

- 2) Connect special tool (A) to ECM connectors (1) securely.

Special tool

(A): 09933-06520


NOTE

Do not connect the other connector of special tool to ECM.

- 3) Check resistance between each pair of terminals of special tool connectors as listed in the following table.

⚠ CAUTION

- Be sure to connect ohmmeter probe from wire harness side of coupler.
- Be sure to turn OFF ignition switch for this check.
- Resistance in the following table represents that measured when parts temperature is 20 °C (68 °F).

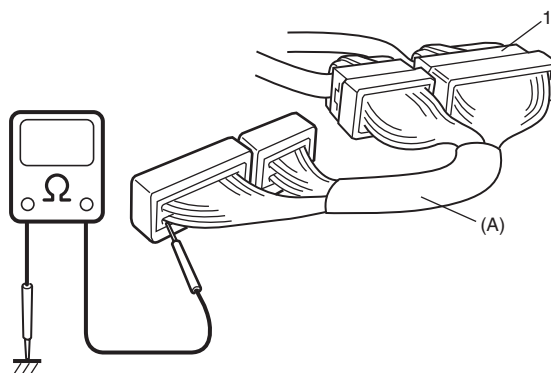

I6JB01110116-02

Terminals	Circuit	Standard resistance	Condition
E23-16 to E23-8	Main relay	160 – 240 Ω	Battery disconnected and ignition switch turned ON
E23-24 to E23-8	Fuel pump relay	160 – 240 Ω	—
E23-6 to E23-8	Throttle actuator control relay	160 – 240 Ω	—
C37-15 to E23-2/3	Fuel injector No.1	10 – 14 Ω	—
C37-34 to E23-2/3	Fuel injector No.2	10 – 14 Ω	—
C37-14 to E23-2/3	Fuel injector No.3	10 – 14 Ω	—


1A-223 Engine General Information and Diagnosis:

Terminals	Circuit	Standard resistance	Condition
C37-33 to E23-2/3	Fuel injector No.4	10 – 14 Ω	—
C37-13 to E23-2/3	Fuel injector No.5	10 – 14 Ω	—
C37-32 to E23-2/3	Fuel injector No.6	10 – 14 Ω	—
C37-12 to E23-2/3	EGR valve (stepping motor No.1 coil) (if equipped)	20 – 24 Ω	—
C37-31 to E23-2/3	EGR valve (stepping motor No.2 coil) (if equipped)	20 – 24 Ω	—
C37-11 to E23-2/3	EGR valve (stepping motor No.3 coil) (if equipped)	20 – 24 Ω	—
C37-30 to E23-2/3	EGR valve (stepping motor No.4 coil) (if equipped)	20 – 24 Ω	—
C37-10 to E23-2/3	EVAP canister purge valve	25 – 30 Ω	—
C37-29 to E23-2/3	IMT vacuum solenoid valve	33 – 45 Ω	—

ECM Power and Ground Circuit Check

S6JB0B1104085

Wiring Diagram

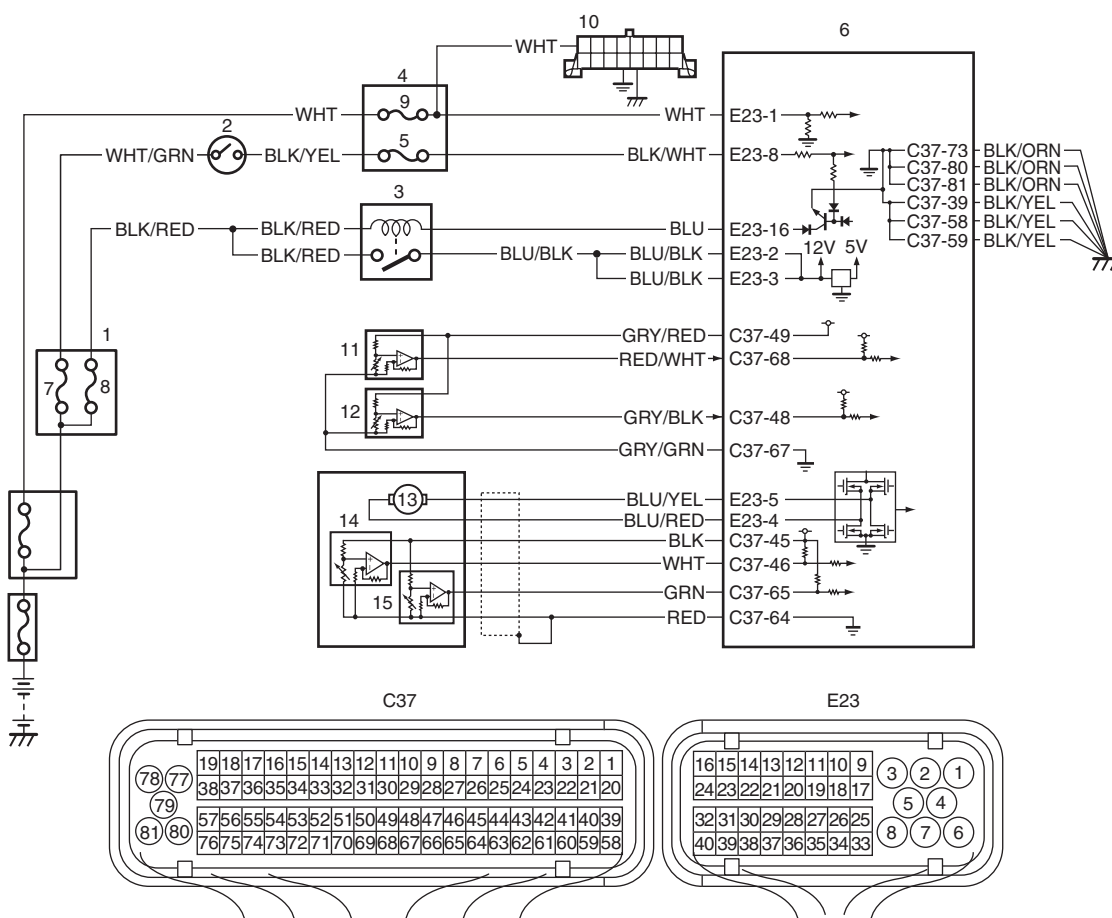

I5JB0C110015-01

1. Fuse box No.2	5. "IG COIL" fuse	9. "DOME" fuse	13. Throttle actuator motor
2. Ignition switch	6. ECM	10. DLC	14. TP sensor (main)
3. Main relay	7. "IG ACC" fuse	11. MAP sensor (if equipped)	15. TP sensor (sub)
4. Junction block	8. "FI" fuse	12. A/C refrigerant pressure sensor (if equipped)	

Circuit Description


When the ignition switch is turned ON, the main relay turns ON (the contact point closes) and the main power is supplied to ECM. And then ECM supplies 5 V power to each sensor (MAP sensor, A/C refrigerant pressure sensor, TP sensor).

If 5 V power circuit to each sensors from ECM is shorted to ground, ECM stops engine and emission control operation.


Troubleshooting

NOTE

- Before performed troubleshooting, be sure to read the “Precautions of ECM Circuit Inspection”.
- When measuring circuit voltage, resistance and/or pulse signal at ECM connector, connect the special tool to ECM and/or the ECM connectors referring to “Inspection of ECM and Its Circuits”.

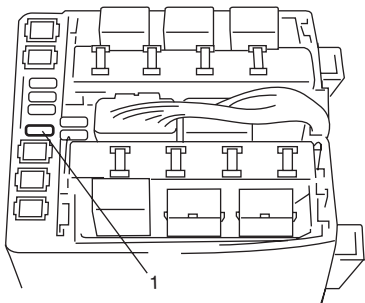Step	Action	Yes	No
1	Circuit fuse check <ol style="list-style-type: none"> 1) Disconnect connectors from ECM with ignition switch turned OFF. 2) Check for proper connection to ECM connector at “E23-1”, “E23-2”, “E23-3”, “E23-8”, “E23-16”, “C37-39”, “C37-58”, “C37-59”, “C37-73”, “C37-80” and “C37-81” terminals. 3) If OK, check “RADIO” fuse and “IG COIL” fuse for blowing. <p><i>Are “DOME” fuse and “IG COIL” fuse in good condition?</i></p>	Go to Step 2.	Replace fuse (s) and check for short in circuits connected to fuse(s).
2	Power supply circuit check <ol style="list-style-type: none"> 1) Measure voltage between “E23-1” terminal of ECM connector and body ground. <p><i>Is voltage 10 – 14 V?</i></p>	Go to Step 3.	“WHT” wire is open circuit.
3	Ignition signal check <ol style="list-style-type: none"> 1) Turn ignition switch to ON position. 2) Measure voltage between “E23-8” terminal of ECM connector and body ground. <p><i>Is voltage 10 – 14 V?</i></p>	Go to Step 4.	“BLK/WHT” or “BLK/YEL” wire is open circuit.
4	Main relay circuit check <ol style="list-style-type: none"> 1) Turn ignition switch to OFF position. 2) Check “FI” fuse (1) in fuse box No.2 for blowing.  <p style="text-align: right;">I5JB0C110016-01</p> <ol style="list-style-type: none"> 3) If OK, measure voltage between “E23-16” terminal of ECM connector and body ground. <p><i>Is voltage 10 – 14 V?</i></p>	Go to Step 5.	Go to Step 9.
5	Main relay circuit check <ol style="list-style-type: none"> 1) Connect connectors to ECM with ignition switch turned OFF. 2) Turn ignition switch to ON position. 3) Measure voltage between “E23-16” terminal of ECM connector and body ground. <p><i>Is voltage 0 – 1 V?</i></p>	Go to Step 7.	Go to Step 6.

1A-225 Engine General Information and Diagnosis:

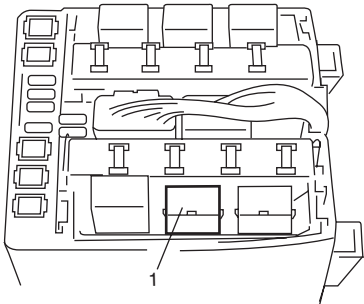
Step	Action	Yes	No
6	ECM ground circuit check 1) Turn ignition switch to OFF position. 2) Disconnect connectors from ECM. 3) Measure resistance between each "C37-39", "C37-58", "C37-59", "C37-73", "C-37-80" and "C37-81" terminals of ECM connector and body ground. <i>Is resistance 1 Ω or less?</i>	Substitute a known good ECM and recheck.	"BLK/ORN" or "BLK/YEL" wire is open or high resistance circuit.
7	Main relay circuit check 1) Disconnect connectors from ECM with ignition switch turned OFF. 2) Using service wire, ground "E23-16" terminal of ECM connector and measure voltage between each "E23-2" and "E23-3" terminals of ECM connector and body ground. <i>Is voltage 10 – 14 V?</i>	Go to Step 11.	Go to Step 8.
8	Main relay circuit check 1) Remove main relay (1) from fuse box No.2.  <small>15JB0C110017-01</small> 2) Check for proper connection to main relay connector at "BLU/BLK" and "BLK/RED" wire terminals. 3) If OK, measure resistance between each "E23-2" and "E23-3" wire terminals of ECM connector and "BLU/BLK" wire terminal of main relay connector. <i>Is resistance 1 Ω or less?</i>	Go to Step 9.	"BLU/BLK" wire is open circuit or high resistance circuit.
9	Main relay circuit check 1) Remove main relay from fuse box No.2 with ignition switch turned OFF. 2) Measure voltage between "BLK/RED" wire terminal of main relay connector and body ground. <i>Is voltage 10 – 14 V?</i>	Go to Step 10.	"BLK/RED" wire is open circuit.
10	Main relay check 1) Check main relay referring to "Engine and Emission Control System Relay Inspection in Section 1C". <i>Is main relay in good condition?</i>	"BLU" wire is open or high resistance circuit.	Replace main relay.
11	Sensor 5 V power source circuit check 1) Connect connectors to ECM with ignition switch turned OFF. 2) Turn ON ignition switch, measure each voltage between "C37-45" and "C37-49" terminal of ECM connector and vehicle body ground. <i>Is each voltage 4 – 6 V?</i>	ECM power and ground circuit is in good condition.	Go to Step 12.

Step	Action	Yes	No
12	Sensor 5 V power source circuit check 1) Disconnect connectors from ECM, TP sensor, MAP sensor (if equipped), A/C refrigerant pressure sensor (if equipped) with ignition switch turned OFF. 2) Measure each resistance between "C37-45" and "C37-49" terminal of ECM connector and vehicle body ground. <i>Is each resistance infinity?</i>	Check internal short circuit of TP sensor, MAP sensor (if equipped) and/or A/C refrigerant pressure sensor (if equipped).	"GRY/RED" and/or "BLK" wire is shorted to ground circuit.

Fuel Injector Circuit Check

S6JB0B1104086

Wiring Diagram

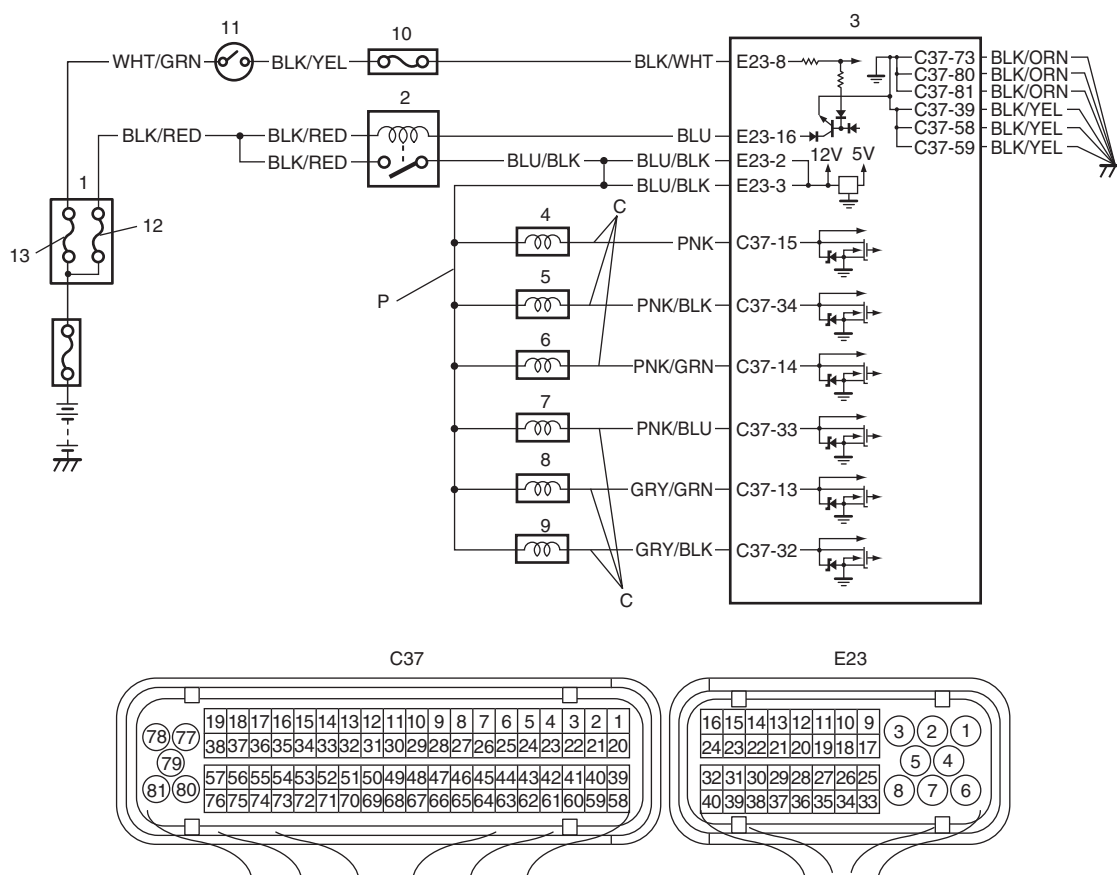

I6JB01110010-02

P: Fuel injector power supply circuit	3. ECM	7. No.4 injector	11. Ignition switch
C: Fuel injector control circuit	4. No.1 injector	8. No.5 injector	12. "FI" fuse
1. Fuse box No.2	5. No.2 injector	9. No.6 injector	13. "IGN" fuse
2. Main relay	6. No.3 injector	10. "IG COIL" fuse	


Troubleshooting

NOTE

- Before performed troubleshooting, be sure to read the “Precautions of ECM Circuit Inspection”.
- When measuring circuit voltage, resistance and/or pulse signal at ECM connector, connect the special tool to ECM and/or the ECM connectors referring to “Inspection of ECM and Its Circuits”.


Step	Action	Yes	No
1	Fuel injector check for operating sound 1) Using sound scope, check each injector for operating sound at engine cranking. <i>Do all 6 injector make operating sound?</i>	Fuel injectors circuit is in good condition.	Go to Step 2.
2	Fuel injector resistance check 1) Disconnect connectors from fuel injectors with ignition switch turned OFF. 2) Check for proper terminal connection to all fuel injectors and ECM connector. 3) If connections are OK, check all fuel injectors for resistance referring to “Fuel Injector On-Vehicle Inspection in Section 1G”. <i>Are all injectors in good condition?</i>	Go to Step 3.	Faulty fuel injector.
3	Fuel injector insulation resistance check 1) Check that there is insulation between each fuel injector terminal and engine ground. <i>Is there insulation?</i>	Go to Step 4.	Faulty fuel injector.
4	Fuel injector power supply check 1) Measure voltage between each fuel injector connector power supply circuit and engine ground with ignition switch turned ON. <i>Is each voltage 10 – 14 V?</i>	Go to Step 5.	Fuel injector power supply circuit is open or shorted to ground circuit. If it is in good condition, go to “ECM Power and Ground Circuit Check”.
5	Wire harness check 1) Disconnect connector from ECM with ignition switch turned OFF. 2) Check that each fuel injector circuit is as follows. <ul style="list-style-type: none"> • Wiring harness resistance of each fuel injector control circuit is less than 3 Ω • Insulation resistance of each fuel injector control circuit is infinity between each fuel injector connector and vehicle body ground • Circuit voltage of each fuel injector control circuit is 0 – 1 V with ignition switch turned ON <i>Are they in good condition?</i>	Check fuel injector for performance referring to “Fuel Injector Inspection in Section 1G”. If OK, substitute a known good ECM and recheck.	Fuel injector control circuit is open, short or high resistance.

 Wiring Diagram



Troubleshooting

- Before performed troubleshooting, be sure to read the “Precautions of ECM Circuit Inspection”.
- When measuring circuit voltage, resistance and/or pulse signal at ECM connector, connect the special tool to ECM and/or the ECM connectors referring to “Inspection of ECM and Its Circuits”.

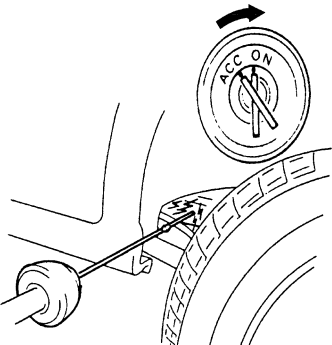Step	Action	Yes	No
1	<p>Fuel pump control system check for operation</p> <p><i>Is fuel pump heard to operate 2 sec. after ignition switch is turned ON?</i></p> 	Fuel pump circuit is in good condition.	Go to Step 2.

I2RH01110132-01

1A-229 Engine General Information and Diagnosis:

Step	Action	Yes	No
2	Fuel pump relay power supply check 1) Disconnect fuel pump relay from fuse box No.2 with ignition switch turned OFF. 2) Check for proper connection to fuel pump relay at each terminal. 3) If OK, turn ON ignition switch, measure voltage between “WHT/GRN” wire terminal of fuel pump relay connector and engine ground. <i>Is voltage 10 – 14 V?</i>	Go to Step 3.	“WHT/GRN” wire is open or shorted to ground circuit.
3	Fuel pump relay power supply check 1) Turn ON ignition switch, measure voltage between “BLU/BLK” wire terminal of fuel pump relay connector and engine ground. <i>Is voltage 10 – 14 V?</i>	Go to Step 4.	“BLU/BLK” wire is open circuit.
4	Fuel pump relay check 1) Check fuel pump relay referring to “Engine and Emission Control System Relay Inspection in Section 1C”. <i>Is relay in good condition?</i>	Go to Step 5.	Faulty relay.
5	Fuel pump relay drive signal check 1) Connect fuel pump relay to fuse box No.2. 2) Connect voltmeter between “E23-24” terminal of ECM connector and vehicle body ground. 3) Measure voltage 2 second after ignition switch is turned ON. <i>Is voltage 10 – 14 V?</i>	Go to Step 6.	“WHT/GRN” wire is open circuit or shorted to ground circuit.
6	Fuel pump relay drive signal check 1) Measure voltage within 2 second after ignition switch is turned ON. <i>Is voltage 0 – 1 V?</i>	Go to Step 7.	Substitute a known good ECM and recheck.
7	Wire circuit check 1) Turn OFF ignition switch. 2) Detach fuel tank referring to “Fuel Tank Removal and Installation in Section 1G”. 3) Disconnect connector from fuel pump. 4) Measure resistance between “PNK” wire terminal of fuel pump connector and vehicle body ground. <i>Is resistance infinity?</i>	Go to Step 8.	“PNK” wire is shorted to ground.
8	Fuel pump circuit check 1) Connect service wire between “E23-24” terminal of ECM connector and vehicle body ground. 2) Turn ON ignition switch, measure voltage between “PNK” terminal at fuel pump connector and vehicle body ground. <i>Is voltage 10 – 14 V?</i>	Go to Step 9.	“PNK” wire is open circuit.
9	Fuel pump circuit check 1) Turn OFF ignition switch. 2) Measure resistance between “BLK” wire terminal at fuel pump connector and vehicle body ground. <i>Is resistance less than 5 Ω?</i>	Faulty fuel pump.	“BLK” wire is open circuit.

Fuel Pressure Check

S6JB0B1104088


System Diagram

Special tool

(A): 09912-58442

(B): 09912-58432

(C): 09912-58490

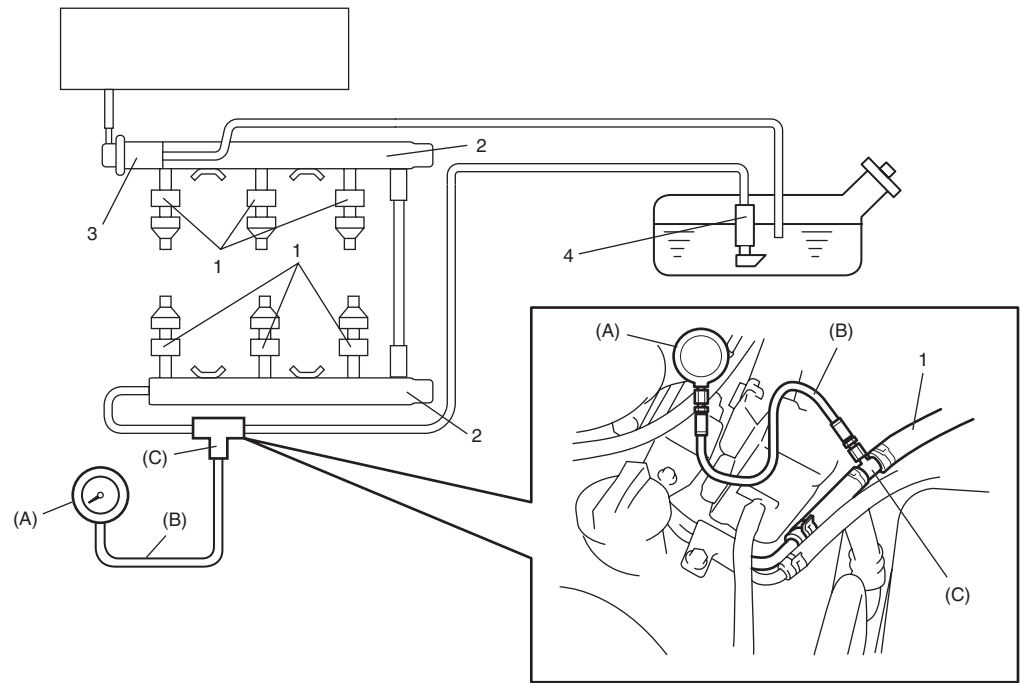

I6JB01110012-01

1. Injector	2. Delivery pipe	3. Fuel pressure regulator	4. Fuel filter and fuel pump
-------------	------------------	----------------------------	------------------------------

Troubleshooting

NOTE


Before using following flow, check to make sure that battery voltage is higher than 11 V. If battery voltage is low, pressure becomes lower than specification even if fuel pump and line are in good condition.

Step	Action	Yes	No
1	Fuel pump operating sound check 1) Remove fuel filler cap and then turn ON ignition switch. <i>Can you hear operating sound? (Is fuel pump to operate about 2 seconds after ignition switch is turned ON?)</i>	Go to Step 2.	Go to "Fuel Pump and Its Circuit Check".
2	Fuel pressure check 1) Check fuel pressure referring to "Fuel Pressure Inspection in Section 1G". <i>Is check result satisfactory?</i>	Go to Step 3.	Go to Step 6.
3	Fuel pressure check 1) Start engine and warm it up to normal operating temperature. 2) Keep engine speed at 4000 rpm. <i>Does fuel pressure show about the same value as Step 2?</i>	Go to Step 4.	Go to Step 8.
4	Fuel line check 1) Check fuel pipe, fuel hose and joint for fuel leakage. <i>Are they in good condition?</i>	Go to Step 5.	Repair or replace defective part.
5	Fuel line check 1) Check fuel pipe, fuel hose and joint for damage or deform. <i>Are they in good condition?</i>	Faulty fuel pressure regulator.	Repair or replace damaged or damaged part.
6	<i>Was fuel pressure higher than specification in Step 2?</i>	Go to Step 7.	Go to Step 8.
7	Fuel line check 1) Check fuel pipe, fuel hose and joint for damage or deform. <i>Are they in good condition?</i>	Faulty fuel pressure regulator.	Repair or replace damaged or damaged part.
8	Fuel line check 1) Check fuel pipe, fuel hose and joint for damage or deform. <i>Are they in good condition?</i>	Clogged fuel filter, faulty fuel pump, faulty fuel pressure regulator or fuel leakage from hose connection in fuel tank.	Repair or replace defective part.

A/C System Circuits Check

S6JB0B1104089

Wiring Diagram

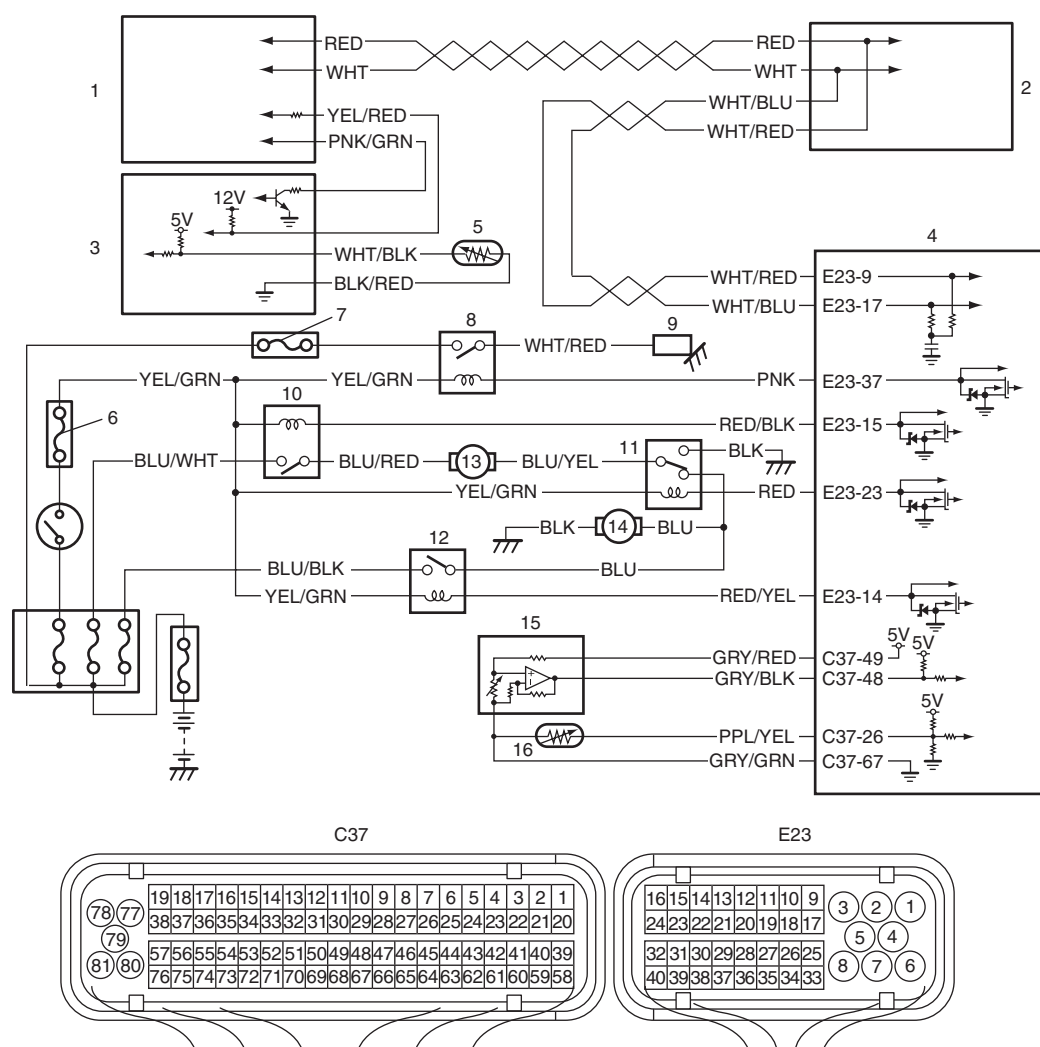

I6JB01110013-03

1. BCM	5. Evaporator temperature sensor	9. Compressor	13. Radiator cooling fan No.1
2. ABS or ESP® control module	6. "IG2 SIG" fuse	10. Radiator cooling fan relay No.1	14. Radiator cooling fan No.2
3. HVAC control module	7. "CPRSR" fuse	11. Radiator cooling fan relay No.2	15. A/C refrigerant pressure sensor
4. ECM	8. Compressor relay	12. Radiator cooling fan relay No.3	16. ECT sensor

Troubleshooting

▲ WARNING

Keep hands, tools, and clothing away from A/C condenser fan to help prevent personal injury. This fan is electric and can come on whether or not the engine is running. The fan can start automatically in response to the ECT sensor with the ignition switch in the "ON" position.

NOTE

- Before performed troubleshooting, be sure to read the "Precautions of ECM Circuit Inspection".
- When measuring circuit voltage, resistance and/or pulse signal at ECM connector, connect the special tool to ECM and/or the ECM connectors referring to "Inspection of ECM and Its Circuits".
- When A/C evaporator outlet air temp. is below 0 °C (32 °F), A/C remains OFF. This condition is not abnormal.


Step	Action	Yes	No
1	Check DTC in ECM (Reception data check from BCM) 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ON ignition switch. 3) Check DTC for reception data from BCM. <i>Is there DTC U0140?</i>	Go to applicable DTC diag. flow.	Go to Step 2.
2	DTC check of HVAC control module 1) Check HVAC control module for DTC. <i>Is there DTC(s)?</i>	Go to applicable DTC diag. flow.	Go to Step 3.
3	A/C switch signal circuit check 1) Start engine and select "DATA LIST" mode on scan tool. 2) Check A/C switch signal under following conditions respectively. <u>A/C switch signal</u> Engine running, A/C switch OFF: OFF Engine running, A/C switch ON and blower speed selector turned 1st position or more: ON <i>Is check result satisfactory?</i>	Go to Step 4.	Check HVAC control module and its circuit.
4	DTC check of ECT sensor circuit 1) Check ECM for DTC of ECT sensor circuit. <i>Is there DTC P0116, DTC P0117 or DTC P0118?</i>	Go to applicable DTC diag. flow.	Go to Step 5.
5	Radiator cooling fan control system check <i>Is radiator cooling fan started when A/C and blower speed selector switch are turned ON with engine running?</i>	Go to Step 11.	Go to Step 6.
6	Radiator cooling fan control circuit check 1) Check DTC with scan tool. <i>Are DTC P0480, DTC P0481 and/or DTC P0482 detected?</i>	Go to applicable DTC diag. flow.	Go to Step 7.
7	Evaporator temperature sensor check 1) Check evaporator temperature sensor referring to "A/C Evaporator Temperature Sensor Inspection in Section 7B". <i>Is resistance within specification?</i>	Go to Step 8.	Faulty evaporator temperature sensor.

Step	Action	Yes	No
8	DTC check of A/C refrigerant pressure sensor circuit 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ON ignition switch. 3) Check ECM for DTC of A/C refrigerant pressure sensor circuit. <i>Is there DTC P0532 or DTC P0533?</i>	Go to applicable DTC diag. flow.	Go to Step 9.
9	A/C refrigerant pressure sensor voltage check 1) Check A/C refrigerant pressure sensor voltage referring to "Inspection of ECM and Its Circuits". <i>Is voltage within specified value?</i>	Go to Step 10.	Check amount of refrigerant. If OK, replace A/C refrigerant pressure sensor.
10	Radiator cooling fan check 1) Check radiator cooling fan referring to "Radiator Cooling Fan Motor On-Vehicle Inspection in Section 1F". <i>Is check result satisfactory?</i>	Radiator cooling fan drive circuit malfunction.	Replace radiator cooling fan motor.
11	A/C compressor control system check <i>Is A/C compressor started when A/C and blower speed selector switch are turned ON with engine running?</i>	A/C system is in good condition.	Go to Step 12.
12	A/C compressor relay circuit check 1) Measure voltage between "E23-37" wire terminal of ECM connector and vehicle body ground under following conditions respectively. <u>Voltage between "E23-37" terminal of ECM connector and ground</u> While engine running and A/C switch turned OFF: 10 – 14 V While engine running, A/C and blower speed selector switch turned ON: 0 – 1 V <i>Is check result satisfactory?</i>	Go to Step 13.	Go to Step 14.
13	A/C compressor relay check 1) Check A/C compressor relay referring to "A/C Compressor Relay Inspection in Section 7B". <i>Is it in good condition?</i>	A/C compressor drive circuit malfunction.	Replace A/C compressor relay.
14	A/C compressor relay circuit check 1) Remove A/C compressor relay with ignition switch turned OFF. 2) Turn ON ignition switch, measure voltage between "YEL/GRN" wire terminal of A/C compressor relay connector and vehicle body ground. <i>Is voltage 10 – 14 V?</i>	Go to Step 15.	"YEL/GRN" wire is open circuit.
15	A/C compressor relay check 1) Check A/C compressor relay referring to "A/C Compressor Relay Inspection in Section 7B". <i>Is it in good condition?</i>	"PNK" wire is open circuit. If OK, substitute a known good ECM and recheck.	Replace A/C compressor relay.

Electric Load Signal Circuit Check

S6JB0B1104090

Wiring Diagram

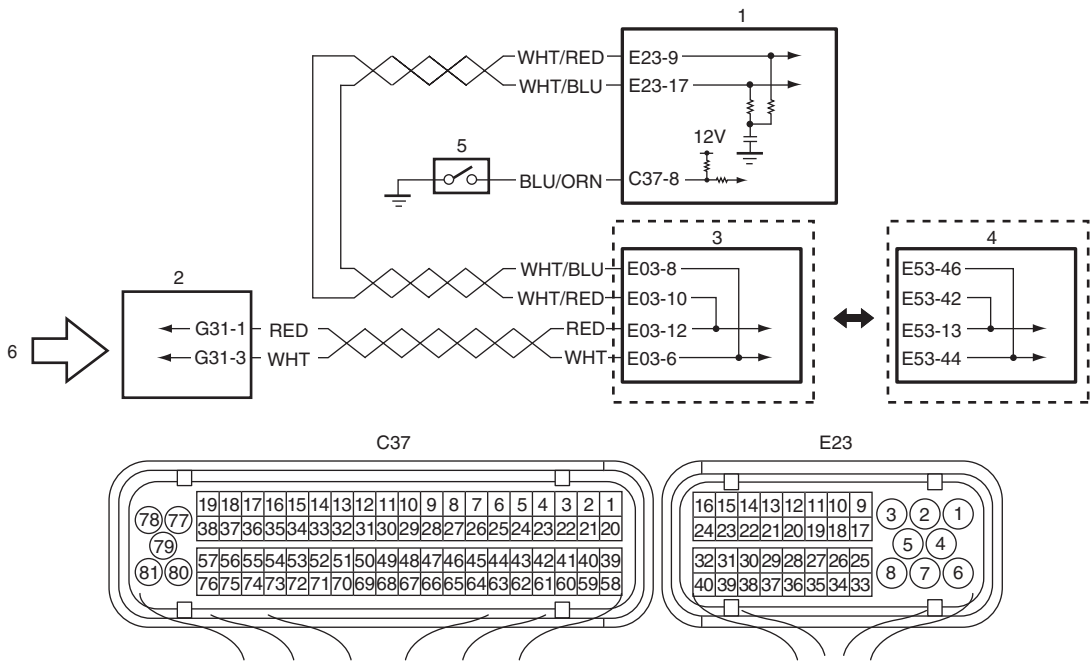

I6JB01110014-03

1. ECM	3. ABS control module	5. PSP switch
2. BCM	4. ESP® control module	6. Electric load signal (blower motor signal, rear defogger signal, headlight signal and A/C switch signal, etc.)

Troubleshooting

NOTE


- Before performed troubleshooting, be sure to read the “Precautions of ECM Circuit Inspection”.
- When measuring circuit voltage, resistance and/or pulse signal at ECM connector, connect the special tool to ECM and/or the ECM connectors referring to “Inspection of ECM and Its Circuits”.

Step	Action	Yes	No
1	DTC check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ON ignition switch and check DTC. <i>Is there DTC U0073 and/or U0140?</i>	Go to applicable DTC diag. flow.	Go to Step 2.
2	Electric load signal circuit check 1) Start engine and select “DATA LIST” mode on scan tool. 2) Check electric load signal under following conditions respectively. <u>A/C switch signal</u> Engine running, A/C switch OFF: OFF Engine running, A/C switch ON and blower speed selector turned 1st position or more: ON <u>Blower fan signal</u> Engine running, blower speed selector OFF: OFF Engine running, blower speed selector 5th position or more: ON <u>PSP signal</u> Engine running, steering wheel to neutral position: OFF Engine running, turning steering wheel to the right or left as far as it stops: ON <u>Electric load signal</u> Engine running, rear defogger switch or headlight switch OFF: OFF Engine running, rear defogger switch or headlight switch ON: ON <i>Is check result satisfactory?</i>	Electric load signal circuit is in good condition	Check defective signal circuit.

Radiator Cooling Fan Low Speed Control System Check

S6JB0B1104091

Wiring Diagram

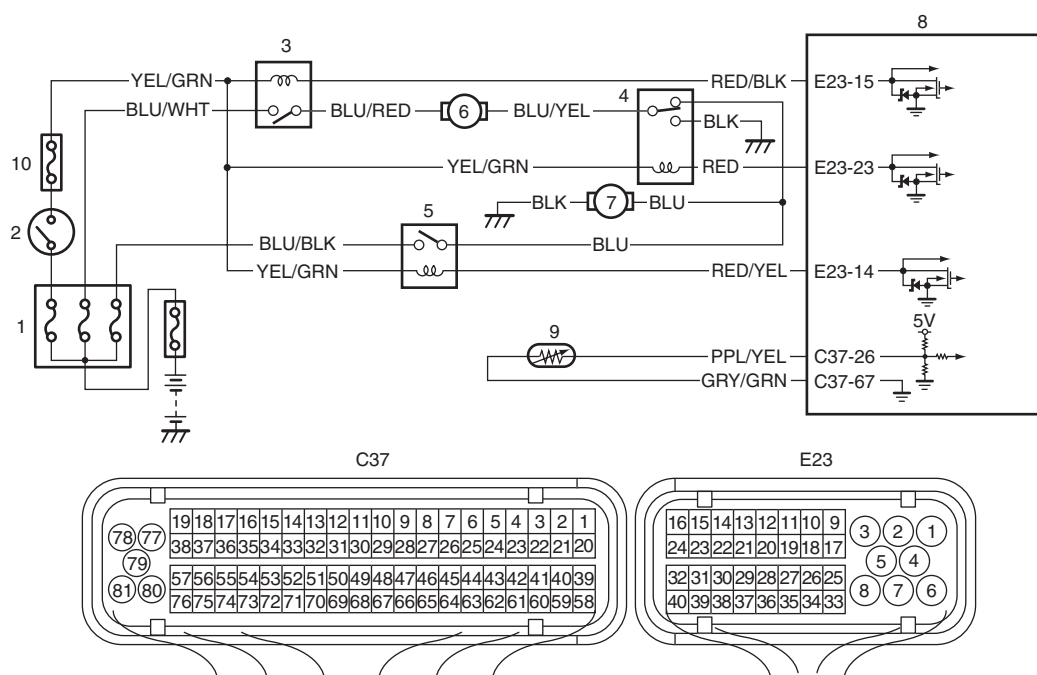

I6JB01110015-02

1. Fuse box No.1	5. Radiator cooling fan relay No.3	9. ECT sensor
2. Ignition switch	6. Radiator cooling fan motor No.1	10. "IG2 SIG" fuse
3. Radiator cooling fan relay No.1	7. Radiator cooling fan motor No.2	
4. Radiator cooling fan relay No.2	8. ECM	

Troubleshooting

⚠ WARNING

Keep hands, tools, and clothing away from engine cooling fan to help prevent personal injury. This fan is electric and can come on whether or not the engine is running. The fan can start automatically in response to the ECT sensor with the ignition switch at the "ON" position.

NOTE

- Before performed troubleshooting, be sure to read the "Precautions of ECM Circuit Inspection".
- When measuring circuit voltage, resistance and/or pulse signal at ECM connector, connect the special tool to ECM and/or the ECM connectors referring to "Inspection of ECM and Its Circuits".

Step	Action	Yes	No
1	Is there DTC(s) of ECT sensor circuit (DTC P0116 / P0117 / P0118) and/or radiator cooling fan circuit (DTC P0480 / P0481 / P0482)?	Go to corresponding DTC flow.	Go to Step 2.
2	Low speed radiator cooling fan control circuit check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Start engine and select "DATA LIST" mode on scan tool. 3) Warm up engine until coolant temp. is 92 °C (197.6 °F) or higher and A/C switch turns OFF (if equipped with A/C). (If engine coolant temp. dose not rise, check engine cooling system or ECT sensor.) Is radiator cooling fan started at low speed when engine coolant temp. reached above temp.?	Radiator cooling fan low speed control system is in good condition.	Perform from Step 2 to Step of "DTC P0480 / P0481 / P0482: Fan 1 / Fan 2 / Fan 3 Control Circuit".

Step	Action	Yes	No
3	Wire circuit check 1) Disconnect radiator cooling fan relay No.1 from relay box with ignition switch turned OFF. 2) Turn ON ignition switch. 3) Measure voltage between "BLU/WHT" wire terminal of radiator cooling fan relay No.1 connector and vehicle body ground. <i>Is voltage 10 – 14 V?</i>	Go to Step 4.	"BLU/WHT" wire is open circuit.
4	Radiator cooling fan control check 1) Disconnect connector from radiator cooling fan motor No.1 and connect radiator cooling fan relay No.1 with ignition switch turned OFF. 2) Run engine until ECT is over 92 °C (197.6 °F). 3) Measure voltage between "BLU/RED" wire terminals of radiator cooling fan motor No.1 connector and vehicle body ground. <i>Is voltage 10 – 14 V?</i>	Go to Step 5.	Go to Step 6.
5	Wire circuit check 1) Disconnect radiator cooling fan relay No.1 from relay box with ignition switch turned OFF. 2) Measure resistance between "BLU/RED" wire terminals of radiator cooling fan relay No.1 connector and radiator cooling fan motor No.1 connector. <i>Is resistance below 3 Ω?</i>	Go to Step 15.	"BLU/RED" wire is open or high resistance.
6	Wire circuit check 1) Disconnect radiator cooling fan relay No.2 and connect radiator cooling fan motor No.1 connector with ignition switch turned OFF. 2) Run engine until ECT is over 92 °C (197.6 °F). 3) Measure voltage between "BLU/YEL" wire terminal of radiator cooling fan relay No.2 connector and vehicle body ground. <i>Is voltage 10 – 14 V?</i>	Go to Step 10.	Go to Step 7.
7	Wire circuit check 1) Disconnect radiator cooling fan motor No.1 connector with ignition switch turned OFF. 2) Measure resistance between "BLU/YEL" wire terminal of radiator cooling fan relay No.2 connector and vehicle body ground. <i>Is resistance infinity?</i>	Go to Step 8.	"BLU/YEL" wire is shorted to ground circuit.
8	Wire circuit check 1) Measure voltage between "BLU/YEL" wire terminal of radiator cooling fan relay No.2 connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 0 V?</i>	Go to Step 9.	"BLU/YEL" wire is shorted to other circuit.

1A-239 Engine General Information and Diagnosis:

Step	Action	Yes	No
9	Wire circuit check 1) Measure resistance between “BLU/YEL” wire terminal of radiator cooling fan relay No.2 connector and radiator cooling fan motor No.1 connector with ignition switch turned OFF. <i>Is resistance below 5 Ω?</i>	Go to Step 16.	“BLU/YEL” wire is open circuit.
10	Radiator cooling fan control check 1) Disconnect connector from radiator cooling fan motor No.2 and connect radiator cooling fan relay No.2 with ignition switch turned OFF. 2) Run engine until ECT is over 92 °C (197.6 °F). 3) Measure voltage between “BLU” wire terminals of radiator cooling fan motor No.2 connector and vehicle body ground. <i>Is voltage 10 – 14 V?</i>	Go to Step 14.	Go to Step 11.
11	Wire circuit check 1) Disconnect radiator cooling fan relay No.2 with ignition switch turned OFF. 2) Measure resistance between “BLU” wire terminal of radiator cooling fan relay No.2 connector and vehicle body ground. <i>Is resistance infinity?</i>	Go to Step 12.	“BLU” wire is shorted to ground circuit.
12	Wire circuit check 1) Measure voltage between “BLU” wire terminal of radiator cooling fan relay No.2 connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 0 V?</i>	Go to Step 13.	“BLU” wire is shorted to other circuit.
13	Wire circuit check 1) Measure resistance between “BLU” wire terminals of radiator cooling fan relay No.2 connector and radiator cooling fan motor No.2 connector with ignition switch turned OFF. <i>Is resistance below 3 Ω?</i>	Go to Step 15.	“BLU” wire is open circuit.
14	Wire circuit check 1) Measure resistance between “BLK” wire terminal of radiator cooling fan motor No.2 connector and vehicle body ground with ignition switch turned OFF. <i>Is resistance below 3 Ω?</i>	Go to Step 16.	“BLK” wire is open circuit.
15	Radiator cooling fan motor check 1) Check radiator cooling fan motor referring to “Radiator Cooling Fan Motor On-Vehicle Inspection in Section 1F”. <i>Is it in good condition?</i>	Substitute a known good ECM and recheck.	Replace radiator cooling fan motor.
16	Radiator cooling fan motor check 1) Check radiator cooling fan motor referring to “Radiator Cooling Fan Motor On-Vehicle Inspection in Section 1F”. <i>Is it in good condition?</i>	Substitute a known good ECM and recheck.	Replace radiator cooling fan motor.

Radiator Cooling Fan High Speed Control System Check

Wiring Diagram

Refer to "Radiator Cooling Fan Low Speed Control System Check".

Troubleshooting

▲ WARNING

Keep hands, tools, and clothing away from engine cooling fan to help prevent personal injury. This fan is electric and can come on whether or not the engine is running. The fan can start automatically in response to the ECT sensor with the ignition switch at the "ON" position.

NOTE

- Before performed troubleshooting, be sure to read the "Precautions of ECM Circuit Inspection".
- When measuring circuit voltage, resistance and/or pulse signal at ECM connector, connect the special tool to ECM and/or the ECM connectors referring to "Inspection of ECM and Its Circuits".

Step	Action	Yes	No
1	Is there DTC(s) of ECT sensor circuit (DTC P0116 / P0117 / P0118) and/or radiator cooling fan circuit (DTC P0480 / P0481 / P0482)?	Go to corresponding DTC flow.	Go to Step 2.
2	Low speed radiator cooling fan control circuit check <ol style="list-style-type: none"> 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Start engine and select "DATA LIST" mode on scan tool. 3) Warm up engine until coolant temp. is 92 °C (197.6 °F) or higher and A/C switch turns OFF (if equipped with A/C). (If engine coolant temp. dose not rise, check engine cooling system or ECT sensor.) <p>Is radiator cooling fan started at low speed when engine coolant temp. reached above temp.?</p>	Go to Step 3.	Perform from Step 2 to Step 5 in "Radiator Cooling Fan Low Speed Control System Check".
3	High speed radiator cooling fan control circuit check <ol style="list-style-type: none"> 1) Start engine and select "DATA LIST" mode on scan tool. 2) Warm up engine until coolant temp. is 102 °C (215.6 °F) or higher and A/C switch turns OFF (if equipped with A/C). (If engine coolant temp. dose not rise, check engine cooling system or ECT sensor.) <p>Is radiator cooling fan started at high speed when engine coolant temp. reached above temp.?</p>	Radiator cooling fan control system is in good condition.	Perform from Step 2 to Step 5 in DTC P0480 P0481/ P0482: Fan 1 / Fan 2 / Fan 3 Control Circuit. If OK, Go to Step 4.
4	Wire circuit check <ol style="list-style-type: none"> 1) Disconnect radiator cooling fan relay No.3 from relay box with ignition switch turned OFF. 2) Turn ON ignition switch. 3) Measure voltage between "BLU/BLK" wire terminal of radiator cooling fan relay No.3 connector and vehicle body ground. <p>Is voltage 10 – 14 V?</p>	Go to Step 5.	"BLU/BLK" wire is open circuit.

1A-241 Engine General Information and Diagnosis:

Step	Action	Yes	No
5	Radiator cooling fan control check 1) Disconnect connector from radiator cooling fan motor No.2 with ignition switch turned OFF. 2) Turn ignition switch ON. 3) Measure voltage between “BLU” wire terminal of radiator cooling fan relay No.3 connector and vehicle body ground. <i>Is voltage 0 V?</i>	Go to Step 6.	“BLU” wire is shorted to other circuit.
6	Wire circuit check 1) Measure resistance between “BLU” wire terminals of radiator cooling fan relay No.3 connector and radiator cooling fan motor No.2 connector with ignition switch turned OFF. <i>Is resistance below 3 Ω?</i>	Go to Step 7.	“BLU” wire is open or high resistances.
7	Wire circuit check 1) Disconnect radiator cooling fan relay No.2 from relay box. 2) Measure resistance between “BLK” wire terminal of radiator cooling fan relay No.2 connector and vehicle body ground. <i>Is resistance below 3 Ω?</i>	Go to Step 8.	“BLK” wire is open circuit.
8	Radiator cooling fan relay check 1) Check radiator cooling fan relay referring to “Radiator Cooling Fan Relay Inspection in Section 1F”. <i>Is it in good condition?</i>	Go to Step 9.	Replace radiator cooling fan relay.
9	Radiator cooling fan motor check 1) Check radiator cooling fan motor referring to “Radiator Cooling Fan Motor On-Vehicle Inspection in Section 1F”. <i>Is it in good condition?</i>	Substitute a known good ECM and recheck.	Replace radiator cooling fan motor.

Repair Instructions

Idle Speed and IAC Throttle Valve Opening Inspection

S6JB0B1106001

Before idle speed check, make sure of the following.

- Lead wires and hoses of electronic fuel injection and engine and emission control systems are connected securely.
- Valve lash is checked according to maintenance schedule.
- Ignition timing is within specification.
- ECT sensor performance is in good condition.
- All accessories (wipers, heater, lights, A/C, etc.) are out of service.
- Air cleaner has been properly installed and is in good condition.
- No abnormal air drawn in from air intake system.

After all items are confirmed, check idle speed and IAC throttle opening as follows.


NOTE

Before starting engine, place transmission gear shift lever in "Neutral" (shift selector lever to "P" range for A/T vehicle), and set parking brake and block drive wheels.

- 1) Connect SUZUKI scan tool to DLC (1) with ignition switch turned OFF.

Special tool

(A): SUZUKI scan tool

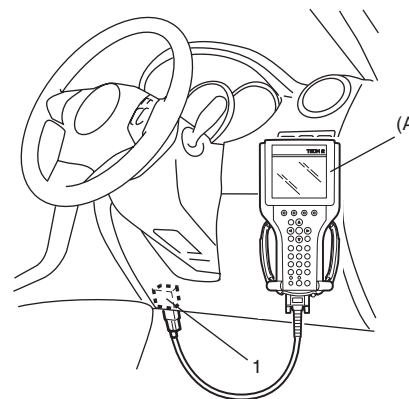

I5JB0C110021-02

- 2) Warm up engine to normal operating temperature.
- 3) Check engine idle speed and "IAC throttle opening" by using "Data List" mode on scan tool to check "IAC throttle opening".
- 4) If check result is out of specification, check EGR system (EGR valve), EVAP system (EVAP canister purge valve) and PCV system (PCV valve) for stuck open or air inhaling. If those system are in good condition, inspect electric throttle body assembly referring to "Electric Throttle Body Assembly On-Vehicle Inspection in Section 1C".

Engine idle speed

A/C OFF: 650 ± 50 rpm (IAC duty: 8 – 25%)








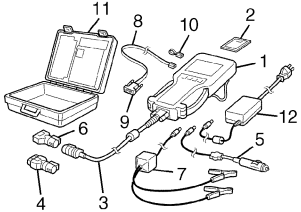
A/C ON: 700 ± 50 rpm

- 5) Check that specified engine idle speed is obtained with A/C turned ON if vehicle is equipped with A/C. If not, check A/C system.

Special Tools and Equipment

Special Tool

S6JB0B1108001


<p>09912-58432 Fuel pressure gauge hose This tool is included in fuel pressure gauge set (09912-58413). </p>	<p>09912-58442 Fuel pressure gauge This tool is included in fuel pressure gauge set (09912-58413). </p>
<p>09912-58490 3-way joint & hose </p>	<p>09933-06520 ECM Check Harness 121P  / </p>
<p>SUZUKI scan tool — This kit includes following items. 1. Tech 2, 2. PCMCIA card, 3. DLC cable, 4. SAE 16/19 adapter, 5. Cigarette cable, 6. DLC loop back adapter, 7. Battery power cable, 8. RS232 cable, 9. RS232 adapter, 10. RS232 loop back connector, 11. Storage case, 12.  / </p>	

Aux. Emission Control Devices

Component Location

PCV System Location

S6JB0B1203001

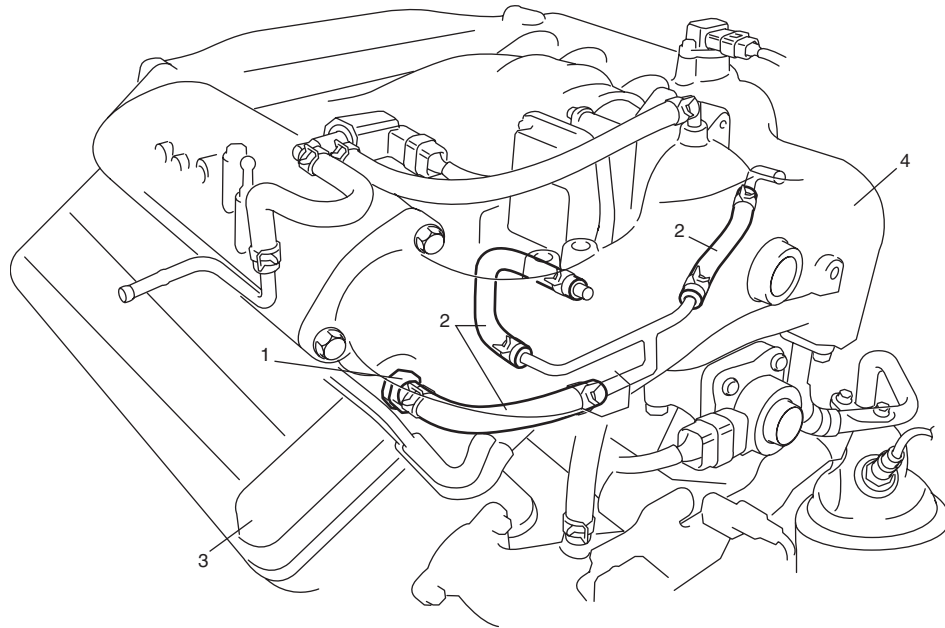

I6JB01120001-01

1. PCV valve	3. Cylinder head cover
2. PCV hose	4. Intake collector

Diagnostic Information and Procedures


EGR System Inspection (If Equipped)

S6JB0B1204001

- 1) Connect SUZUKI scan tool to DLC (1) with ignition switch turned OFF.

Special tool

(A): SUZUKI scan tool

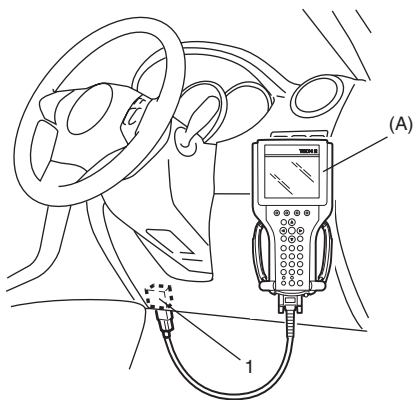

I5JB0C120001-02

- 2) Start engine and warm it up to normal operating temperature.
- 3) With engine idling (without depressing accelerator pedal), open EGR valve by using "MISC. TEST" mode. In this state, according as EGR valve opening increases engine idle speed drops. If not, possible cause is clogged EGR gas passage, stuck or faulty EGR valve.

Step EGR	
EGR valve opening	21 %
Target EGR opening	23 %
Engine Speed	771 RPM
Desired Idle	698 RPM
IAC Flow Duty	20.0 %
Ignition Advance	11.5° BTDC
Closed Throttle Pos	ON

I6JB01120022-01

1. SUZUKI scan tool display
2. EGR valve opening (0: Close, 100: Full Open)


EVAP Canister Purge System Inspection

S6JB0B1204002

⚠ WARNING


The front wheels rotate when servicing the vehicle with the 4WD system. Therefore, do not service near the front wheels. Or, there is a possibility of the severe injury.

- 1) Warm up engine to normal operating temperature.
- 2) Hoist vehicle so that all wheels rotate freely.

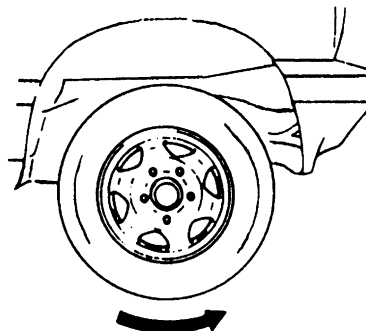

IYSQ01124001-01

- 3) Set M/T in "Neutral" or A/T in "P" position and parking brake.
- 4) Disconnect purge hose (1) from purge pipe.
- 5) Place finger against the end of disconnected hose (1) and check that vacuum is not felt there when engine is running at idle speed.

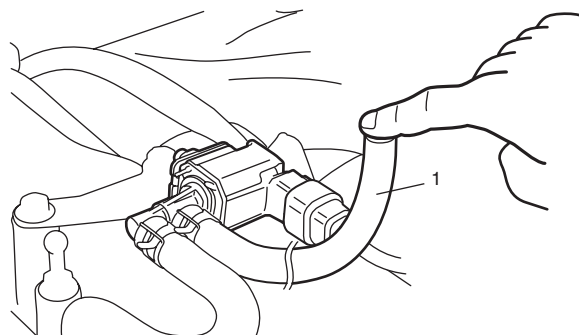

I6JB01120010-01

- 6) Release parking brake lever, set M/T in "1st" or A/T in "L".
- 7) Also check that vacuum is felt when engine speed is increased to higher than about 1,500 r/min. and keep it for 3 min. or more. If check result is not described in Steps 5) and 7), check EVAP canister purge valve, wire harness and vacuum passage.

Repair Instructions

EVAP Canister Purge Valve and Its Circuit Inspection

S6JB0B1206001

⚠ WARNING

Do not apply vacuum by mouth; otherwise harmful fuel vapor can be breathed in.

⚠ CAUTION

Do not apply vacuum more than -86 kPa (-12.47 psi); otherwise EVAP canister purge valve could be damaged.


- 1) Prepare to operate EVAP canister purge valve as follows.

When using SUZUKI scan tool:

- a) Connect SUZUKI scan tool to DLC with ignition switch OFF and disconnect vacuum hoses from each pipe.

Special tool

(A): SUZUKI scan tool

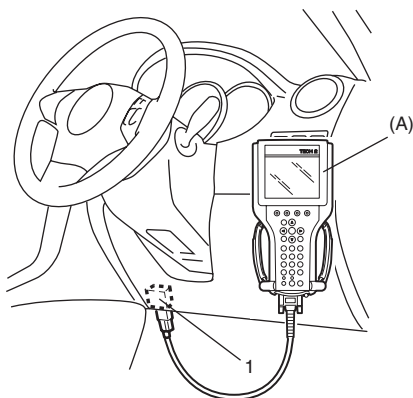

I5JB0C120001-02

- b) Turn ignition switch ON, clear DTC and select "MISC TEST" mode on SUZUKI scan tool.


When not using SUZUKI scan tool:

NOTE

Before performed this check, be sure to read the "Precautions of ECM Circuit Inspection in Section 1A".

- a) Disconnect purge valve vacuum hoses from intake manifold and purge pipe.
- b) Remove ECM cover.
- c) Connect special tool between ECM and ECM connector referring to "Inspection of ECM and Its Circuits in Section 1A"

- d) Turn ON ignition switch.
Using service wire, ground "C37-10" terminal circuit of special tool (valve ON: "B") and unground it (valve OFF: "A").

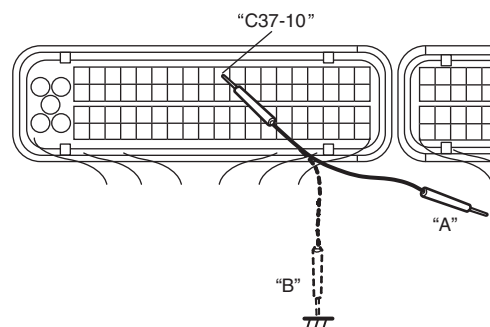

I5JB0C120002-02

- 2) Check purge valve for operation and vacuum passage for clog when valve is switched ON and OFF by using SUZUKI scan tool or service wire. If check result is not described, check vacuum hoses, purge valve, wire harness and connections.


EVAP canister purge valve

Valve OFF [A]: When vacuum (-53 kPa (-7.69 psi) to -67 kPa (-9.72 psi)) is applied to hose (1), vacuum is maintained.

Valve ON [B]: When vacuum is applied to hose (1), air goes into hose (2).

Special tool

(A): 09917-47011

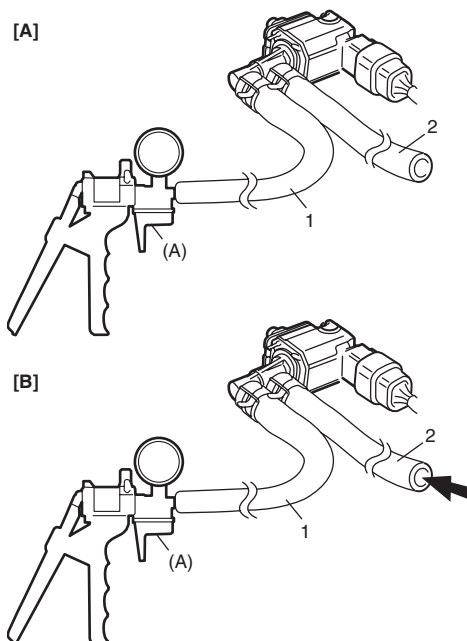

I6JB01120011-01

EVAP Canister Purge Valve Inspection

S6JB0B1206002

⚠ WARNING


Do not apply vacuum by mouth; otherwise harmful fuel vapor can be breathed in.

⚠ CAUTION

Do not apply vacuum more than 86 kPa (12.47 Psi); otherwise EVAP canister purge valve could be damaged.

- 1) With ignition switch OFF, disconnect coupler from canister purge valve.
- 2) Check resistance between two terminals of EVAP canister purge valve (1).
If resistance is as specified, proceed to next operation check. If not, replace EVAP canister purge valve.

Resistance of EVAP canister purge valve
28 – 35 Ω at 20 °C (68 °F)

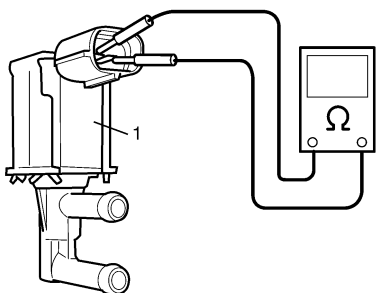

I6JB01120012-01


- 3) Remove EVAP canister purge valve from intake manifold.
- 4) With coupler disconnected, apply vacuum (–53 kPa (–7.69 psi) to –67 kPa (–9.72 psi)) to pipe (1) using a special tool. Check that vacuum is manifold. If vacuum can not be maintained, replace EVAP canister purge valve.
- 5) In this state, connect 12 V-battery to EVAP canister purge valve terminals.
If vacuum can not be maintained, EVAP canister purge valve is in good condition.
If maintained, replace EVAP canister purge valve.

⚠ WARNING

Do not suck the through valve. Fuel vapor inside valve is harmful.

Special tool

(A): 09917–47011

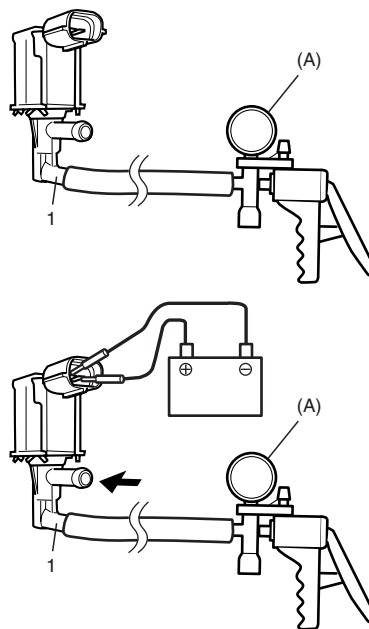

I3RB0A120007-01


- 6) Connect vacuum hoses.
- 7) Connect EVAP canister purge valve coupler securely.

EVAP Canister Removal and Installation

S6JB0B1206003

Removal

- 1) Hoist vehicle.
- 2) Disconnect hoses (1) from EVAP canister (2).
- 3) Remove EVAP canister with its bracket (3).

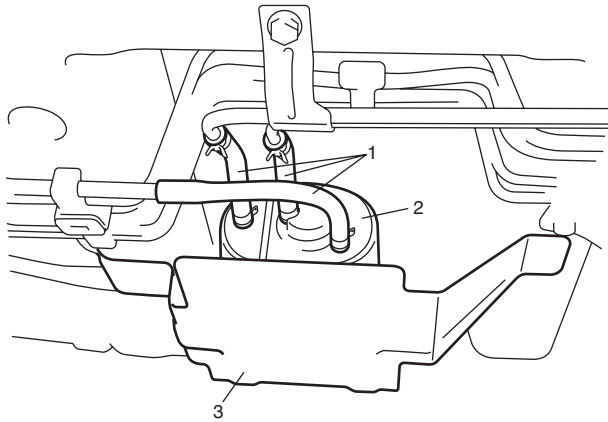

I5JB0C120003-01

- 4) Remove EVAP canister from its bracket.
- 5) Disconnect hoses from EVAP canister.


EVAP Canister Inspection

S6JB0B1206004

⚠ WARNING

**Do not suck nozzles on EVAP canister.
Fuel vapor inside EVAP canister is harmful.**

- 1) Check outside of EVAP canister visually.
 - 2) Disconnect vacuum hoses from EVAP canister.
 - 3) Check that there is no restriction of flow through purge pipe (1) and air pipe (2) when air is blown (4) into tank pipe (3).
- If any faulty condition is found in this inspection, replace EVAP canister.

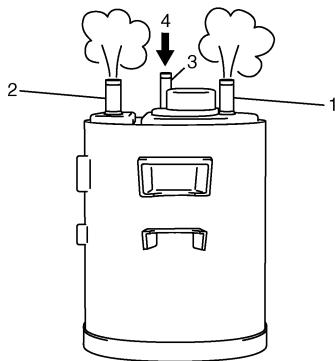

I2RH0B120001-01

Vacuum Passage Inspection

S6JB0B1206005

- 1) Start engine and run it at idle speed.
- 2) Disconnect vacuum hose from EVAP canister purge valve.
- 3) With finger placed on the hole of disconnected hose, check if vacuum is applied.
If it is not applied, clean vacuum passage by blowing compressed air.


PCV Hose Inspection

S6JB0B1206006

NOTE

Be sure to check that there is no obstruction in PCV valve or its hoses before checking engine idle speed / IAC duty for obstructed PCV valve or hose hampers its accurate checking.

Check hoses for connection, leakage, clog, and deterioration.
Replace as necessary.

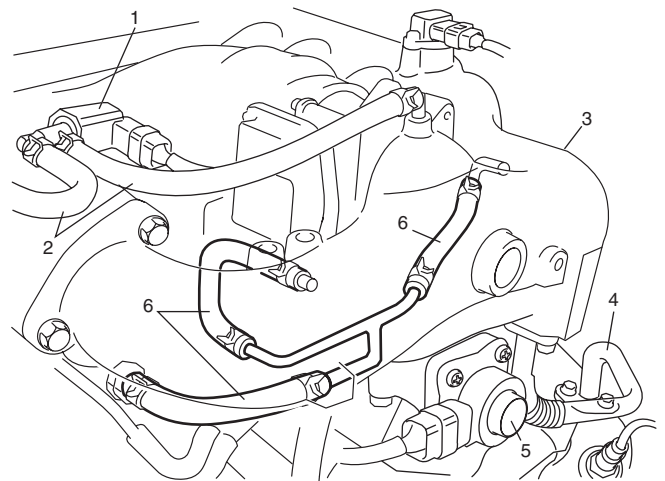

I6JB01120020-01

1. EVAP canister purge valve	4. EGR pipe (if equipped)
2. EVAP canister purge valve hose	5. EGR valve (if equipped)
3. Intake collector	6. PCV hose

PCV Valve Removal and Installation

S6JB0B1206007

Removal

- 1) Disconnect PCV hose from PCV valve.
- 2) Remove PCV valve from cylinder head cover.

Installation

- 1) Apply sealant to thread part of PCV valve (1).


"A": Water tight sealant 99000-31250 (SUZUKI Bond No.1207F)

- 2) Install PCV valve (1) onto cylinder head cover.

Tightening torque

PCV valve (a): 27 N·m (2.7 kgf-m, 19.5 lb-ft)

- 3) Connect PCV hose (2) to PCV valve (1).

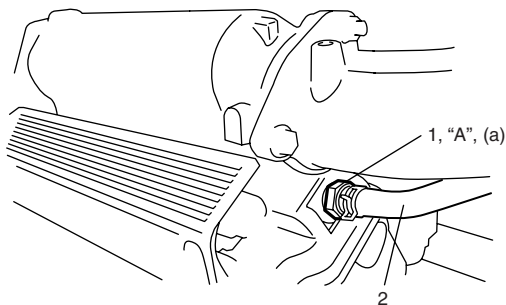

I4JA01121011-01


PCV Valve Inspection

S6JB0B1206008

NOTE


Be sure to check that there is no obstruction in PCV valve or its hoses before checking engine idle speed / IAC duty for obstructed PCV valve or hose hampers its accurate checking.

- 1) Remove PCV valve referring to "PCV Valve Removal and Installation".
- 2) Connect PCV valve (1) to PCV hose and plug head cover hole.
- 3) Run engine at idle.
- 4) Place your finger on the hole of PCV valve (1) to check for vacuum. If there is no vacuum, check for clogged valve. Replace as necessary.

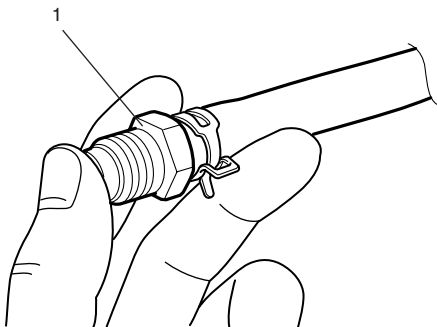

I5JA01121009-01

- 5) After checking vacuum, stop engine and remove PCV valve (1). Shake valve and listen for the rattle of check needle inside the valve. If valve does not rattle, replace valve.

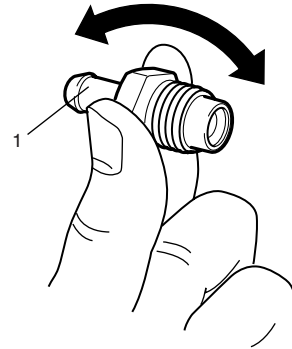

I4JA01121012-01


- 6) After inspection, remove plug from head cover hole. Then, install PCV valve to head cover hole referring to "PCV Valve Removal and Installation", connect PCV valve, PCV hose and clamp securely.

EGR Valve Assembly Removal and Installation (If Equipped)

S6JB0B1206009

Removal

- 1) Remove intake collector from intake manifold referring to Step 1) to 11) of "Intake Collector and Intake Manifold Removal and Installation in Section 1D".
- 2) Remove EGR valve (1) and gasket from intake collector (2).

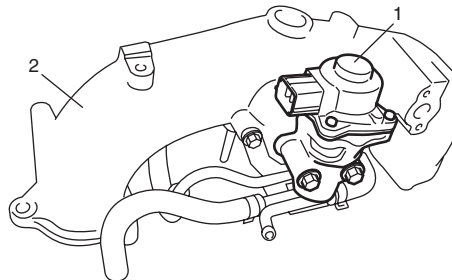

I6JB01120019-01

Installation

Reverse removal procedure noting the following.

- Clean mating surface of valve and intake collector.
- Use new gaskets.

EGR Valve Assembly Inspection (If Equipped)

S6JB0B1206010

- 1) Check resistance between the following terminals of EGR valve (1) in each pair.
If found faulty, replace EGR valve assembly.

EGR valve resistance

Terminal "A" and terminal "B": 20 – 24 Ω at 20 °C (68 °F)


Terminal "C" and terminal "B": 20 – 24 Ω at 20 °C (68 °F)

Terminal "F" and terminal "E": 20 – 24 Ω at 20 °C (68 °F)

Terminal "D" and terminal "E": 20 – 24 Ω at 20 °C (68 °F)

Terminal "B" and valve body: infinity (∞)

Terminal "E" and valve body: infinity (∞)

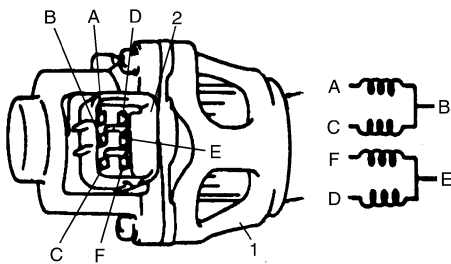

IYSQ01113035-01

2. Connector


- 2) Remove carbon from EGR valve gas passage.

NOTE

Do not use any sharp-edged tool to remove carbon.

Be careful not to damage or bend EGR valve, valve seat and rod.

- 3) Inspect valve (2), valve seat (3) and rod for fault, cracks bend or other damage.
If found faulty, replace EGR valve (1) assembly.

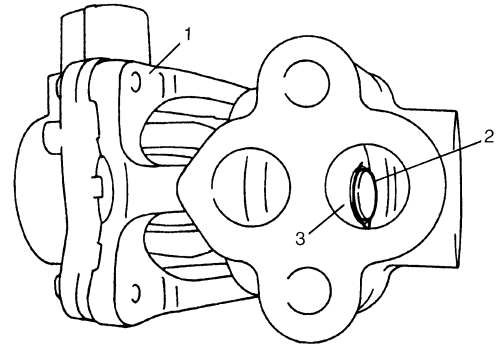

IYSQ01120003-01

Specifications

Tightening Torque Specifications

S6JB0B1207001

Fastening part	Tightening torque			Note
	N·m	kgf-m	lb-ft	
PCV valve	27	2.7	19.5	⌚

Reference:

For the tightening torque of fastener not specified in this section, refer to "Fastener Information in Section 0A".

Special Tools and Equipment



Recommended Service Material

S6JB0B1208001

Material	SUZUKI recommended product or Specification		Note
Water tight sealant	SUZUKI Bond No.1207F	P/No.: 99000-31250	

Special Tool

S6JB0B1208002

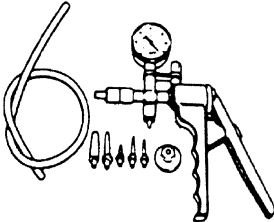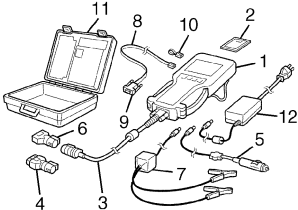09917-47011 Vacuum pump gauge /		SUZUKI scan tool — This kit includes following items. 1. Tech 2, 2. PCMCIA card, 3. DLC cable, 4. SAE 16/19 adapter, 5. Cigarette cable, 6. DLC loop back adapter, 7. Battery power cable, 8. RS232 cable, 9. RS232 adapter, 10. RS232 loop back connector, 11. Storage case, 12. /	
---------------------------------------	---	---	---

Engine Electrical Devices

Repair Instructions

Engine Control Module (ECM) Removal and Installation

S6JB0B1306001

⚠ CAUTION


As ECM consists of precision parts, be careful not to expose it to excessive shock.

NOTE

If ECM is replaced with new one or with another one, make sure to register immobilizer transponder code to ECM correctly according to "Procedure after ECM Replacement in Section 10C".


Removal

- 1) Disconnect negative cable from battery.
- 2) Remove ECM cover from bracket.
- 3) Disconnect connectors from ECM as follows.
 - a) Push lock (1) to release locking of lock lever (2).
 - b) Turn lock lever to arrow direction until it stops.

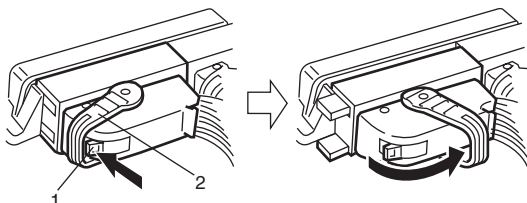

I6JB01130001-02

- 4) Remove ECM (1) from its bracket by removing its mounting bolts (2).

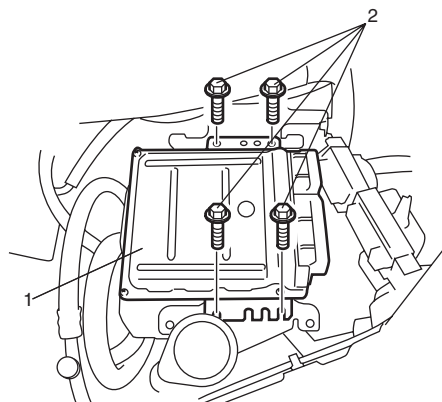


I6JB01130002-03

Installation

Reverse removal procedure noting the following:

- Connect connectors to ECM as follows.
 - a. Make sure that lock lever (1) of ECM connector is at unlock position.
 - b. In this state, insert connectors to ECM securely.
 - c. Lock ECM connectors securely by turning its lock lever to left until it stops.

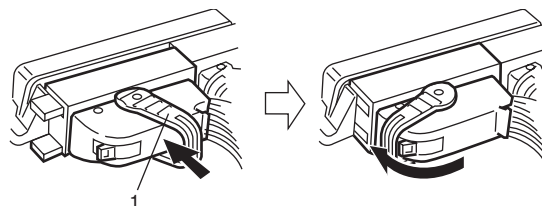

I6JB01130003-01

Mass Air Flow (MAF) and Intake Air Temperature (IAT) Sensor On-Vehicle Inspection


MAF Sensor Signal Inspection

S6JB0B1306002

NOTE

Before performing this inspection, be sure to read the "Precautions of ECM Circuit Inspection in Section 1A".

- 1) Remove ECM cover from bracket.
- 2) With ignition switch OFF, disconnect MAF and IAT sensor connector (1).
- 3) Connect voltmeter between C13-2 terminal (2) and C13-3 terminal (3) of MAF and IAT sensor connector (1) disconnected.

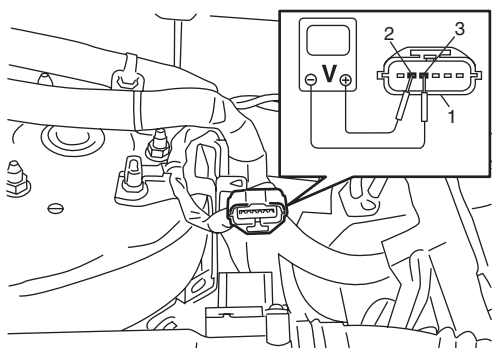

I6JB01130004-03

- 4) Turn ignition switch ON and check that sensor power supply is battery voltage. If not, check if wire harness is open or connection is poor.
- 5) Turn ignition switch OFF and connect connector to MAF and IAT sensor.
- 6) Check MAF sensor output voltage referring to "Inspection of ECM and Its Circuits in Section 1A". If MAF sensor output voltage is not as specified, cause may lie in wire harness, coupler connection, MAF and IAT sensor or ECM.

Intake Air Temperature (IAT) Sensor Inspection

⚠ CAUTION

Do not heat up MAF and IAT sensor more than 100 °C (212 °F). Otherwise, MAF and IAT sensor will be damaged.



- Check sensor O-ring for damage and deterioration. Replace as necessary.
- Blow hot air to temperature sensing part (1) of MAF and IAT sensor (2) using hot air drier (3) and measure resistance between IAT sensor terminals (5) and (6) while heating air gradually. If measured resistance does not show such characteristic as shown, replace MAF and IAT sensor.

Intake air temperature sensor resistance

-20 °C (-4 °F): 12.5 – 16.9 kΩ

25 °C (77 °F): 1.8 – 2.2 kΩ

60 °C (140 °F): 0.5 – 0.68 kΩ

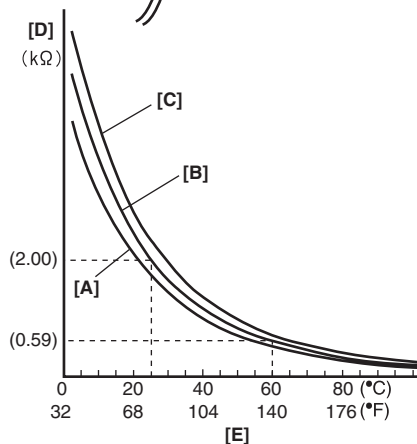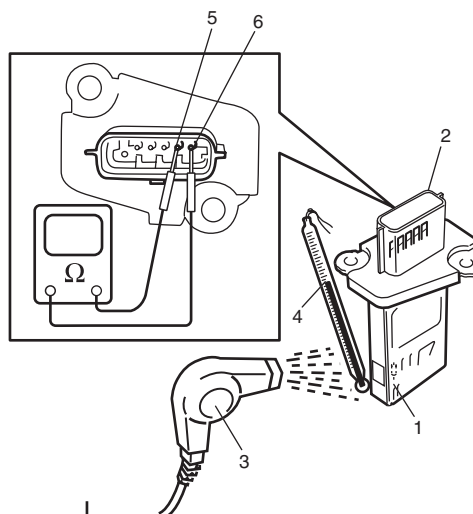

I6JB01130005-03

[A]:	Lower limit
[B]:	Nominal
[C]:	Upper limit
[D]:	Resistance
[E]:	Temperature
4.	Temperature gauge

Mass Air Flow (MAF) and Intake Air Temperature (IAT) Sensor Removal and Installation


S6JB0B1306003

⚠ CAUTION

- Do not disassemble MAF and IAT sensor.
- Do not expose MAF and IAT sensor to any shock.
- Do not clean MAF and IAT sensor.
- If MAF and IAT sensor has been dropped, it should be replaced.
- Do not blow compressed air by using air gun or the like.
- Do not put finger or any other object into MAF and IAT sensor. Malfunction may occur.

Removal

- 1) Disconnect negative cable at battery.
- 2) Disconnect MAF and IAT sensor connector.
- 3) Remove MAF and IAT sensor (1) from air cleaner case.

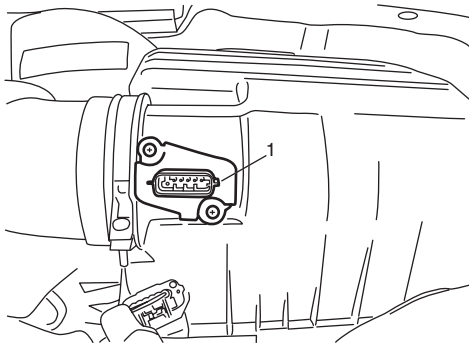

I6JB01130006-01


Installation

Reverse removal procedure noting the followings.

- Tighten MAF and IAT sensor screws to specified torque.

Tightening torque

MAF and IAT Sensor screw (a): 1.5 N·m (0.15 kgf-m, 1.1 lb-ft)

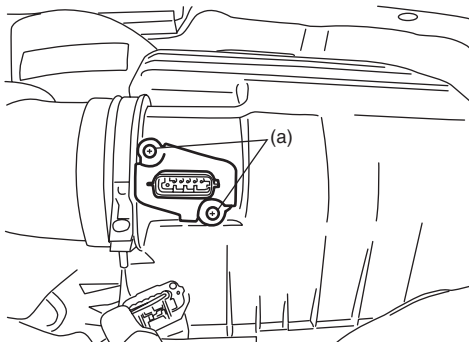

I6JB01130007-01

- Connect MAF and IAT sensor connector securely.

Electric Throttle Body Assembly On-Vehicle Inspection

S6JB0B1306004

⚠ WARNING

Never touch throttle valve with finger while ignition switch is turned ON and accelerator pedal is depressed. Otherwise, injury may result by pinching the finger between throttle valve and throttle body housing.

⚠ CAUTION

- Do not disassemble electric throttle body assembly.
- Do not expose electric throttle body assembly to excessive shock like a dropping it. If electric throttle body assembly has been exposed to excessive shock, it should be replaced.
- Be careful not to accrete a foreign material (like dust and/or metallic particle) to the throttle body housing and/or throttle valve. Otherwise, the throttle body assembly is breaking down by throttle valve accretion.
- Do not apply excessive moving force to throttle valve for throttle valve operation check and/or TP sensor performance check.
Otherwise, the throttle body assembly is breaking down by damaging the internal resinous gear of throttle valve actuator.

NOTE


After replacing electric throttle body assembly, perform calibration of electric throttle body assembly referring to "Electric Throttle Body System Calibration".

Throttle Valve Visual Check

- 1) Remove air intake pipe.
- 2) Check that there isn't any foreign matter caught between throttle valve and throttle body housing. If there is, take it out after removing throttle body referring to "Electric Throttle Body Assembly Removal and Installation in Section 1D" and clean inside of throttle body thoroughly.


Throttle Valve Operation Check

- 1) Remove air intake pipe.
- 2) Turn OFF ignition switch and then disconnect connector from electric throttle body assembly.
- 3) Move throttle valve with finger to its full open position and check that it moves smoothly.
- 4) Move throttle valve with finger to its completely closed position and check that it moves smoothly.

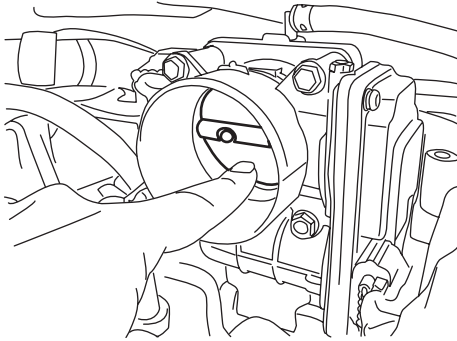

I6JB01130008-01

- 5) Take off finger from throttle valve (1) which is at full open position and check that it moves smoothly by its return spring and open spring force back to default position (position where throttle valve is open by 10° (2) from completely closed position).
- 6) Take off finger from throttle valve (1) which is at completely closed position and check that it moves smoothly by its return spring and open spring force back to default position.

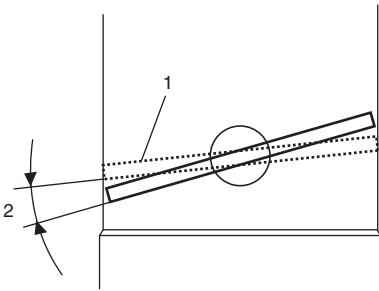


I5JB0A130035-01

If check result is not satisfactory, replace electric throttle body assembly.

Electric Throttle Body Assembly Operation Check

- 1) Remove air intake pipe.
- 2) Turn ON ignition switch.
- 3) Depress accelerator pedal gradually and check that throttle valve moves smoothly until it opens fully (1).
- 4) Release accelerator pedal depressed in Step 3) and check that throttle valve (2) moves back to completely closed position.

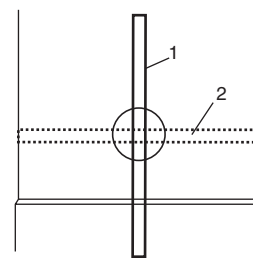

I6JB01130009-02

If check result is satisfactory, electric throttle body system is in good condition. If check result is not satisfactory, proceed to next step.

- 5) Perform "Accelerator Pedal Position (APP) Sensor Assembly On-Vehicle Inspection", "Throttle Actuator (Motor) Check" and "Throttle Position Sensor Performance Check".


If check results are not satisfactory, replace electric throttle body assembly.

If check results are satisfactory, wire circuit and/or ECM are faulty.

Throttle Actuator (Motor) Check

- 1) Turn OFF ignition switch.
- 2) Disconnect connector from electric throttle body assembly.
- 3) Measure resistance between "M1" terminal (1) and "M2" terminal (2) of electric throttle body assembly. If measured resistance is out of specified value, replace electric throttle body assembly.


Throttle actuator (motor) resistance
0.3 – 100 Ω at 20 °C, 68 °F

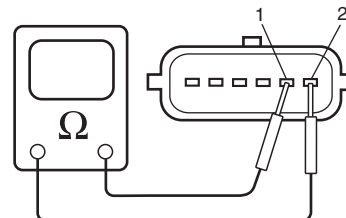

I6JB01130010-01


Throttle Position Sensor Performance Check

- 1) Remove air intake pipe.
- 2) Turn OFF ignition switch.
- 3) Disconnect connector from electric throttle body assembly.
- 4) Check throttle position sensor (main and sub) output voltage as following steps.
 - a) For throttle position sensor (main), arrange 3 new 1.5 V batteries (1) in series (check that total voltage is 4.7 – 5.0 V) and connect its positive terminal to “Vin” terminal (2) and negative terminal to “Ground” terminal (3) of sensor. Then using voltmeter, connect positive terminal to “Vout 1” terminal (4) of sensor and negative terminal to battery.

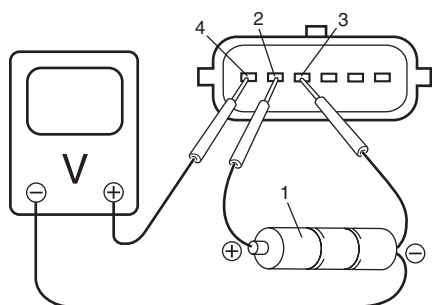

I6JB01130011-01

- b) For throttle position sensor (sub), arrange 3 new 1.5 V batteries (1) in series (check that total voltage is 4.7 – 5.0 V) and connect its positive terminal to “Vin” terminal (2) and negative terminal to “Ground” terminal (3) of sensor. Then using voltmeter, connect positive terminal to “Vout 2” terminal (4) of sensor and negative terminal to battery.

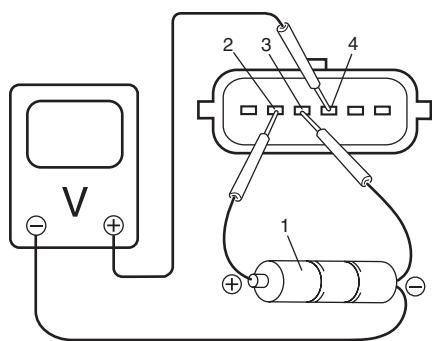

I6JB01130012-02



- c) Measure output voltage variation while throttle valve is opened and closed as following specification.

If sensor voltage is out of specified value and linear variation as the following graph, replace electric throttle body assembly.

Throttle position sensor output voltage

Throttle position sensor (main) variation [A]: 0.304 – 4.325 V at minimum variation, varying according to throttle valve opening by finger (Voltage should vary by about 0.04 V for each 1° valve opening)

Throttle position sensor (sub) variation [B]: 4.585 – 0.517 V at minimum variation, varying according to throttle valve opening by finger (Voltage should vary by about 0.04 V for each 1° valve opening)

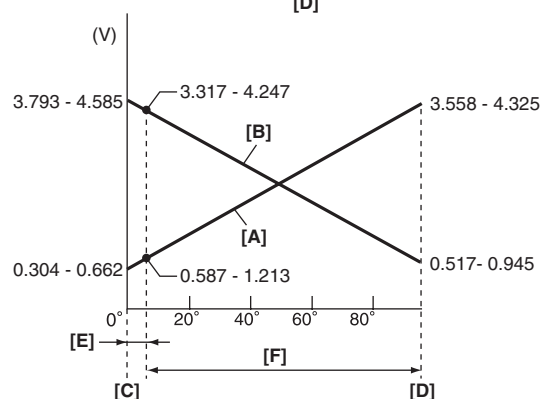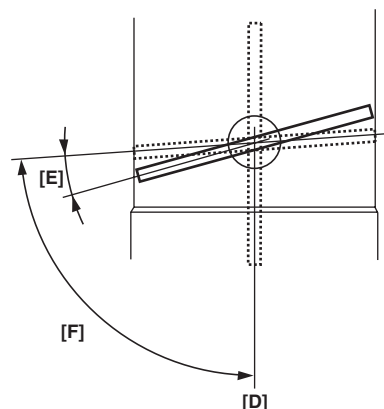

I6JB01130013-01

[C]: Throttle valve is completely closed position
[D]: Throttle valve is fully open position
[E]: Position where throttle valve is open by 10° from completely closed position (default position)
[F]: Angle obtained when accelerator pedal is depressed fully (84°)

Electric Throttle Body System Calibration

S6JB0B1306005

NOTE



If working the service described under the “Precautions of Electric Throttle Body System Calibration in Section 1A”, perform following steps for electric throttle body system calibration.

- 1) If electric throttle body assembly and/or accelerator pedal position (APP) sensor assembly are replaced, perform following steps.
 - a) Disconnect negative cable at battery for 20 seconds or more for the purpose of clearing calibration data of closed throttle position from memory in ECM.
 - b) Connect negative cable to battery.
- 2) Keep ignition switch at ON position for 5 seconds or more without running engine.

Accelerator Pedal Position (APP) Sensor Assembly On-Vehicle Inspection

S6JB0B1306006

- 1) Check that accelerator pedal position (APP) sensor assembly has been mounted to vehicle body properly (no pinched floor carpet, etc.). If mounting is not properly, reinstall accelerator pedal position (APP) sensor assembly properly referring to "Accelerator Pedal Position (APP) Sensor Assembly Removal and Installation".
- 2) Connect scan tool to DLC with ignition switch turned OFF.
- 3) Turn ON ignition switch and select "Data List" mode on scan tool.
- 4) Check that accelerator pedal position sensor voltage varies as the following graph. If sensor voltage is out of specified value or does not vary linearly as the following graph, check accelerator pedal position (APP) sensor assembly referring to "Accelerator Pedal Position (APP) Sensor Assembly Inspection".

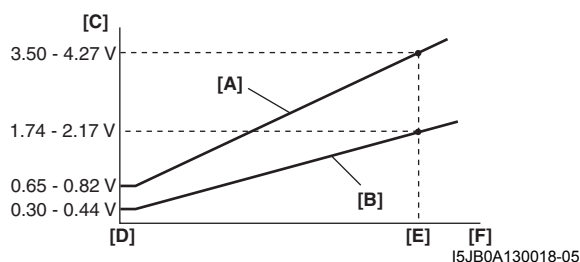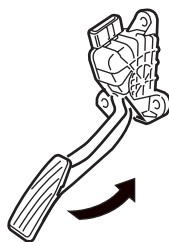

[A]: Accelerator pedal position (APP) sensor (main) voltage
[B]: Accelerator pedal position (APP) sensor (sub) voltage
[C]: Sensor output voltage
[D]: Idle position of accelerator pedal
[E]: Full depressed position of accelerator pedal
[F]: Pedal stroke

Accelerator Pedal Position (APP) Sensor Assembly Removal and Installation

S6JB0B1306007

⚠ CAUTION

- Do not expose accelerator pedal position (APP) sensor assembly to excessive shock like a dropping it. If accelerator pedal position (APP) sensor assembly has been exposed to excessive shock, it should be replaced.
- Be careful not to expose sensor section of accelerator pedal position (APP) sensor assembly to water.

NOTE

After replacing accelerator pedal position (APP) sensor assembly, perform calibration of throttle valve referring to "Electric Throttle Body System Calibration".

Removal

- 1) Disconnect negative cable at battery.
- 2) Disconnect connector from accelerator pedal position (APP) sensor assembly.
- 3) Remove accelerator pedal position (APP) sensor assembly from its bracket.


Installation

Reverse removal procedure for installation noting the following.

- Tighten accelerator pedal position (APP) sensor assembly upper nut (1) first and then lower nuts (2) to specified torque.

Tightening torque

Accelerator pedal position (APP) sensor assembly nut (a): 6.0 N·m (0.6 kgf-m, 4.5 lb-ft)

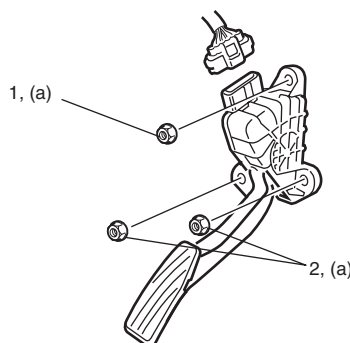

ISJB0A130036-01

- If APP sensor assembly bracket is removed, tighten its mounting nuts to specified torque.

Tightening torque

APP sensor assembly bracket nut (a): 6.0 N·m (0.6 kgf-m, 4.3 lb-ft)


- Connect connector to accelerator pedal position (APP) sensor assembly securely.

Accelerator Pedal Position (APP) Sensor Assembly Inspection

S6JB0B1306008


Check accelerator pedal position (APP) sensor (main and sub) output voltage as following steps.

- 1) For accelerator pedal position (APP) sensor (main), arrange 3 new 1.5 V batteries (1) in series (check that total voltage is 4.7 – 5.0 V) and connect its positive terminal to “Vin 1” terminal (2) and negative terminal to “Ground 1” terminal (3) of sensor. Then using voltmeter, connect positive terminal to “Vout 1” terminal (4) of sensor and negative terminal to battery.

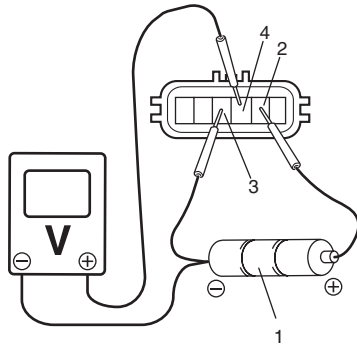

I5JB0A130019-02

- 2) For accelerator pedal position (APP) sensor (sub), arrange 3 new 1.5 V batteries (1) in series (check that total voltage is 4.7 – 5.0 V) and connect its positive terminal to “Vin 2” terminal (2) and negative terminal to “Ground 2” terminal (3) of sensor. Then using voltmeter, connect positive terminal to “Vout 2” terminal (4) of sensor and negative terminal to battery.

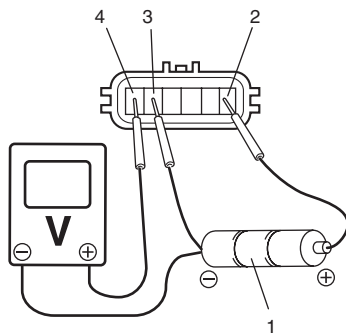

I5JB0A130020-02


- 3) Measure output voltage variation while accelerator pedal is no depressed and fully depressed as following specification.

If sensor voltage is out of specified value or does not vary linearly as the following graph, replace accelerator pedal position (APP) sensor assembly.

Accelerator pedal position (APP) sensor output voltage variation

Accelerator pedal position (APP) sensor (main) output voltage variation [A]: 0.82 – 3.50 V at minimum variation, varying according to depressed extent of accelerator pedal

Accelerator pedal position (APP) sensor (sub) output voltage variation [B]: 0.44 – 1.74 V at minimum variation, varying according to depressed extent of accelerator pedal

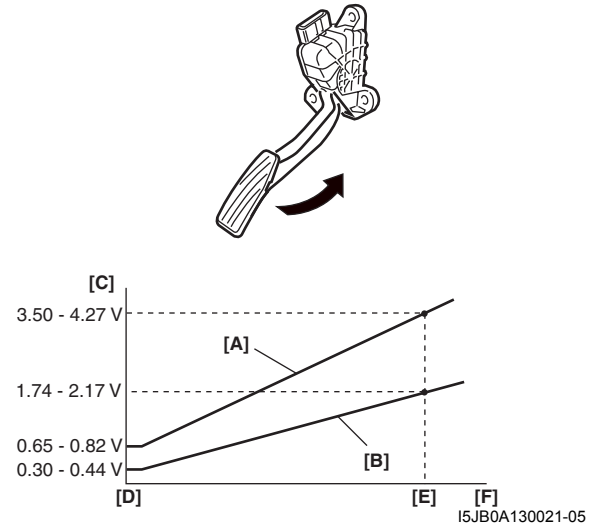

I5JB0A130021-05

[C]: Sensor output voltage

[D]: Idle position of accelerator pedal

[E]: Fully depressed position of accelerator pedal


[F]: Pedal stroke

Engine Coolant Temperature (ECT) Sensor Removal and Installation

S6JB0B1306009

Removal

- 1) Disconnect negative cable from battery.
- 2) Drain cooling system.
- 3) Disconnect coupler from ECT sensor (1).
- 4) Remove ECT sensor (1) from water outlet cap (2).

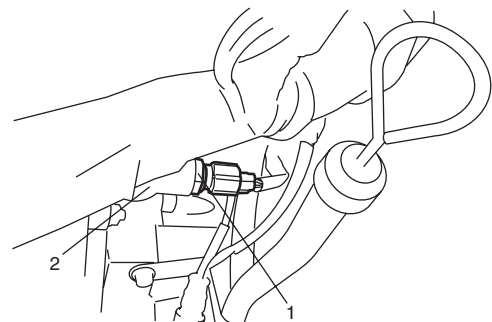


I6JB01130014-01

Installation

Reverse removal procedure noting the following.

- Clean mating surfaces of sensor and water outlet cap (1).
- Use new O-ring.
- Tighten ECT sensor to specified torque.

Tightening torque
ECT sensor (a): 12 N·m (1.2 kgf-m, 8.5 lb-ft)

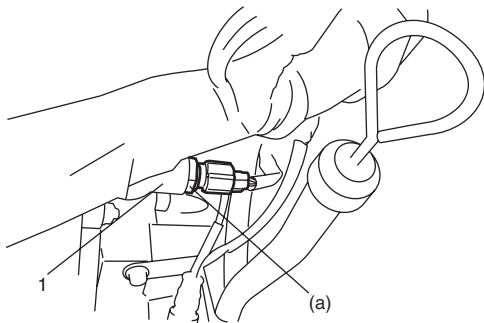


I6JB01130015-02

- Connect coupler to sensor securely.
- Refill cooling system.

Engine Coolant Temperature (ECT) Sensor Inspection

S6JB0B1306010

Immerse temperature sensing part of ECT sensor in water and measure resistance between sensor terminals while heating water gradually. If measured resistance doesn't show characteristics as shown in the figure, replace ECT sensor.

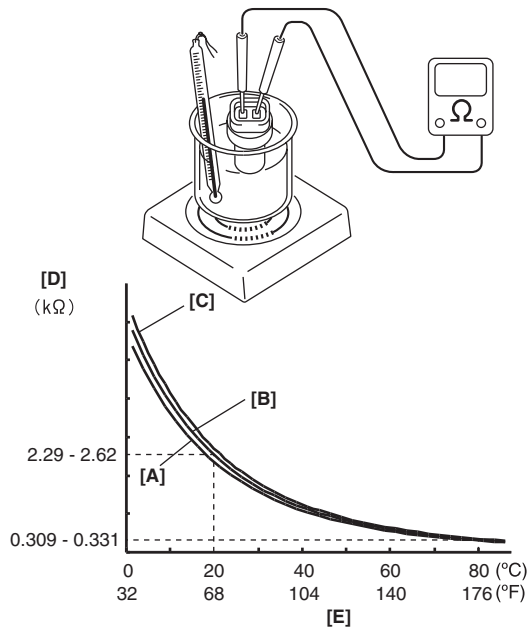

I5JB0A130037-01


[A]: Lower limit	[D]: Resistance
[B]: Normal	[E]: Temperature
[C]: Upper limit	

Manifold Absolute Pressure (MAP) Sensor Removal and Installation (If Equipped)

S6JB0B1306011

Removal

- 1) Disconnect negative cable at battery.
- 2) Disconnect connector from manifold absolute pressure sensor (1).
- 3) Remove manifold absolute pressure sensor (1) from intake manifold (2).

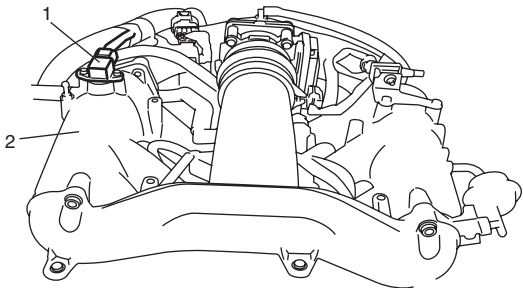


I6JB01130016-01

Installation

- 1) Confirm that vacuum passage on intake manifold is free from clog.
- 2) Apply engine oil to O-ring of manifold absolute pressure sensor.
- 3) Install manifold absolute pressure sensor (1) onto intake manifold.
- 4) Tighten MAP sensor bolt (2) to specified torque.

Tightening torque
MAP sensor bolt (a): 5 N·m (0.5 kgf-m, 3.5 lb-ft)

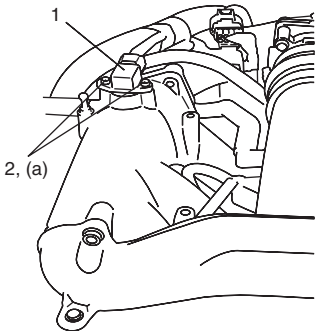


I6JB0B130001-01

- 5) Connect connector to manifold absolute pressure sensor securely.

Manifold Absolute Pressure (MAP) Sensor Inspection

S6JB0B1306012

- 1) Check sensor O-ring (1) for damage and deterioration. Replace as necessary.

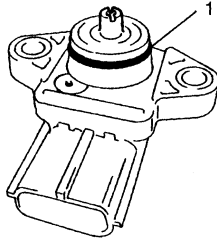

I1SQ01130005-01


- 2) Arrange new three 1.5 V batteries (2) in series and connect its positive terminal to "Vin" terminal and negative terminal to "Ground" terminal. Then, check voltage between "Vout" and "Ground". Also, check if voltage reduces when vacuum is slowly applied up to 400 mmHg by using vacuum pump (3). If check result is not satisfactory, replace manifold absolute pressure sensor (1).

⚠ CAUTION

As connection to wrong terminal will cause damage to manifold absolute pressure sensor, make absolutely sure to connect properly as shown in the figure.

Manifold absolute pressure output voltage ("Vin" voltage): 4.7 – 5.5 V, ambient temp. 20 – 30°C (68 – 86°F)

Altitude (Reference)	Barometric pressure		Output voltage
	(ft (m))	(mmHg) (kPa)	
0 – 2000 (0 – 610)	760 – 707	100 – 94	3.3 – 4.3
2001 – 5000 (611 – 1524)	Under 707, Over 634	94 – 85	3.0 – 4.1
5001 – 8000 (1525 – 2438)	Under 634, Over 567	85 – 76	2.7 – 3.7
8001 – 10000 (2439 – 3048)	Under 567, Over 526	76 – 70	2.5 – 3.3

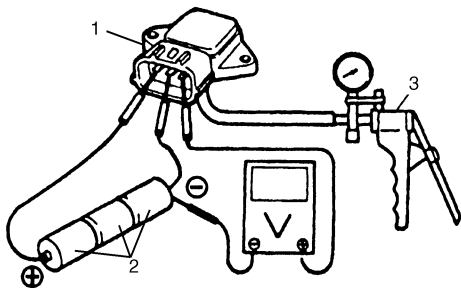

I1SQ01130006-01

Air Fuel Ratio (A/F) Sensor On-Vehicle Inspection

S6JB0B1306013

⚠ WARNING

To avoid danger of being burned, do not touch exhaust system when system is hot. Sensor inspection should be performed when system is cool.

Heater

- 1) Disconnect A/F sensor connector.
- 2) Using ohmmeter, measure resistance of Sensor heater between terminals "V_B" and "GND" at sensor connector. If found faulty, replace A/F sensor.


NOTE

Temperature of sensor affects resistance value largely. Make sure that sensor heater is at correct temperature.

A/F sensor heater resistance

2 – 3 Ω at 20 °C (68 °F)

Viewed from terminal side

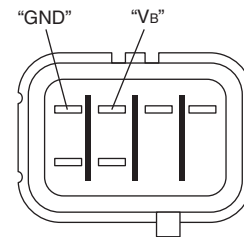


I5JB0A130001-02

- 3) Connect A/F sensor connector securely.

Circuit Insulation Check

- 1) Disconnect connector from A/F sensor.
- 2) Using ohmmeter, check circuit insulation of A/F sensor. If faulty is found, replace A/F sensor.
 - Between each heater terminal (1) and other than heater terminals (2).


Viewed from terminal side

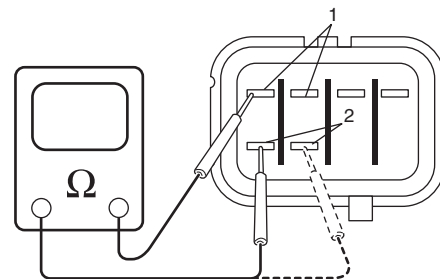

I6JB01130034-01

1C-10 Engine Electrical Devices:

- Between each terminal ((1), (2), (3) and (4)) of A/F sensor and A/F sensor body (5).

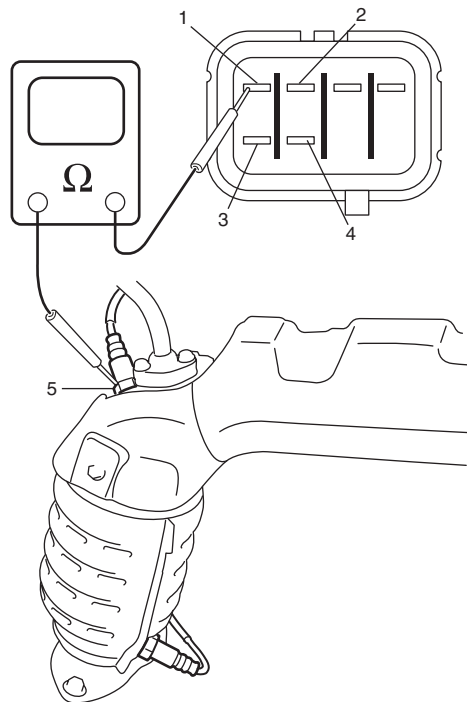

I6JB01130035-01


3) Connect A/F sensor connector securely.

Adjusting Resistor (If Equipped)

- 1) Disconnect A/F sensor connector.
 - 2) Using ohmmeter, measure resistance of adjusting resistor between terminals "R+" and "R-" at A/F sensor connector.
- If found faulty, replace A/F sensor.

Adjusting resistor resistance
100 – 58000 Ω at 20 °C (68 °F)

Viewed from terminal side

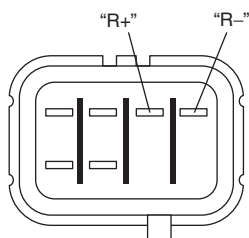

I5JB0A130002-02

3) Connect A/F sensor connector securely.

Heated Oxygen Sensor (HO2S-2) Heater On-Vehicle Inspection (If Equipped)

S6JB0B1306014

⚠ WARNING

To avoid danger of being burned, do not touch exhaust system when system is hot. Sensor inspection should be performed when system is cool.

Heater


- 1) Disconnect sensor connector.
 - 2) Using ohmmeter, measure resistance of sensor heater between terminals "V_B" and "GND" at sensor connector.
- If found faulty, replace oxygen sensor.

NOTE

Temperature of sensor affects resistance value largely. Make sure that sensor heater is at correct temperature.

HO2S heater resistance
5.0 – 6.4 Ω at 20 °C (68 °F)

Viewed from terminal side

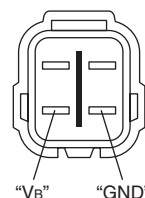


I5JB0A130024-03

3) Connect sensor connector securely.

Circuit Insulation Check


- 1) Disconnect connector from HO2 sensor.
 - 2) Using ohmmeter, check circuit insulation of HO2S sensor. If faulty is found, replace HO2S sensor.
- Between each heater terminal (1) and other than heater terminals (2).

Viewed from terminal side

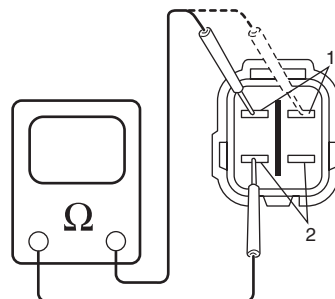

I6JB01130036-01

- Between each terminal ((1), (2), (3) and (4)) of HO2S sensor and HO2S sensor body (5).

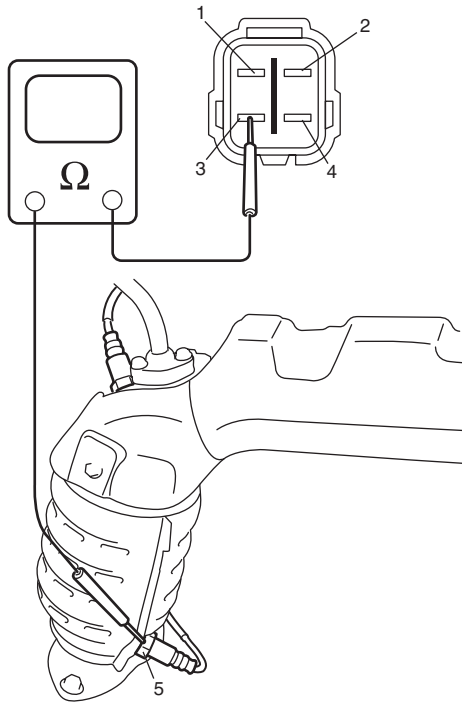

I6JB01130037-02

3) Connect HO2S sensor connector securely.

Air Fuel Ratio (A/F) Sensor (Sensor-1) Removal and Installation

S6JB0B1306015

Removal

⚠ WARNING


To avoid danger of being burned, do not touch exhaust system when system is hot. A/F sensor removal should be performed when system is cool.

- 1) Disconnect negative cable from battery.
- 2) Remove left or right bank of A/F sensor as follows:
 - For left bank
 - a. Remove exhaust manifold cover from exhaust manifold.
 - b. Detach A/F sensor connector from bracket and then disconnect connector from A/F sensor.
 - c. Remove A/F sensor from exhaust manifold.
 - For right bank
 - a. Remove battery and battery tray from vehicle body.
 - b. Detach A/F sensor connector from bracket and then disconnect connector from A/F sensor.
 - c. Remove EGR pipe from exhaust manifold (if equipped).
 - d. Remove A/F sensor from exhaust manifold.

NOTE

Be careful not to expose it to excessive shock.

Example: Bank-2

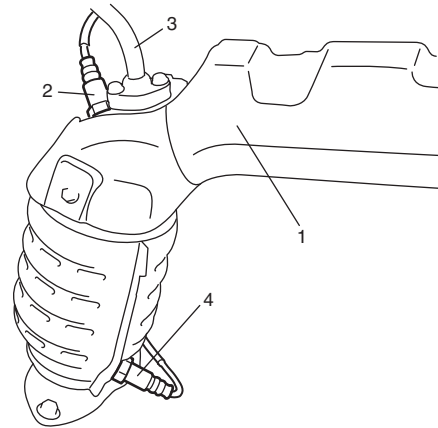

I6JB01130017-03

- | |
|---------------------------|
| 1. Exhaust manifold cover |
| 2. A/F sensor |
| 3. EGR pipe (if equipped) |
| 4. HO2S |


Installation

Reverse removal procedure noting the followings.

- Tighten A/F sensor to specified torque.

Tightening torque

A/F sensor (a): 45 N·m (4.5 kgf-m, 32.5 lb-ft)

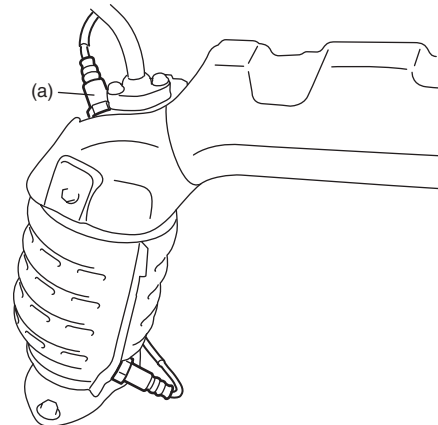

I6JB01130030-01

- Connect connector of A/F sensor and clamp wire harness securely.
- Install new gasket to EGR pipe (if equipped).
- After installing A/F sensor, start engine and check that no exhaust gas leakage exists.

Heated Oxygen Sensor (Sensor-2) Removal and Installation (If Equipped)

S6JB0B1306016

Removal

⚠ WARNING


To avoid danger of being burned, do not touch exhaust system when system is hot. Oxygen sensor removal should be performed when system is cool.

- 1) Disconnect negative cable from battery.
- 2) Detach oxygen sensor connector from bracket and then disconnect connector from oxygen sensor.
- 3) Remove oxygen sensor (1) from exhaust manifold (2).

NOTE

Be careful not to expose it to excessive shock.

Example: Bank-2

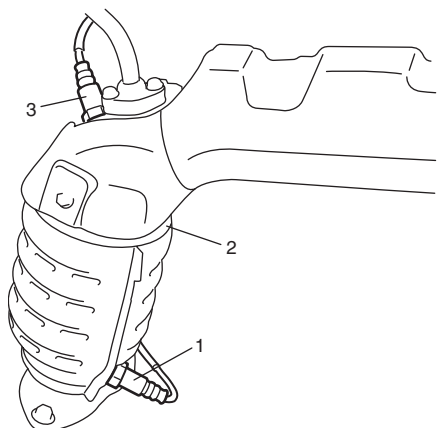

I6JB01130018-02

3. A/F sensor


Installation

Reverse removal procedure noting the following.

- Tighten oxygen sensor to specified torque.

Tightening torque

Heated oxygen sensor (a): 45 N·m (4.5 kgf-m, 32.5 lb-ft)

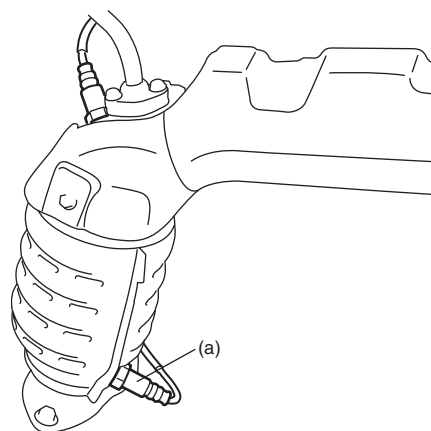

I6JB01130031-02


- Connect connector of oxygen sensor and clamp wire harness securely.
- After installing oxygen sensor, start engine and check that no exhaust gas leakage exists.

Camshaft Position (CMP) Sensor Removal and Installation

S6JB0B1306017

Removal

- 1) Disconnect negative cable at battery.
- 2) Disconnect connector from CMP sensor.
- 3) Remove CMP sensor (1) from timing chain cover.

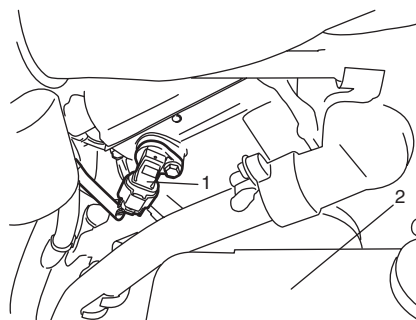

I6JB01130019-01

2. Coolant reservoir tank


Installation

Reverse removal procedure noting the following.

- Tighten CMP sensor bolt to specified torque.

Tightening torque

CMP sensor bolt (a): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

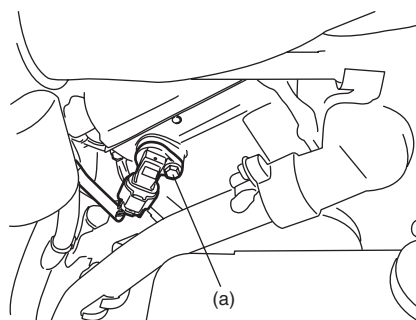

I6JB01130020-01


- Connect CMP sensor connector securely.

Crankshaft Position (CKP) Sensor Removal and Installation

S6JB0B1306018

Removal

- 1) Remove battery.
- 2) Disconnect connector from CKP sensor (1).
- 3) Remove CKP sensor from transmission case (2).

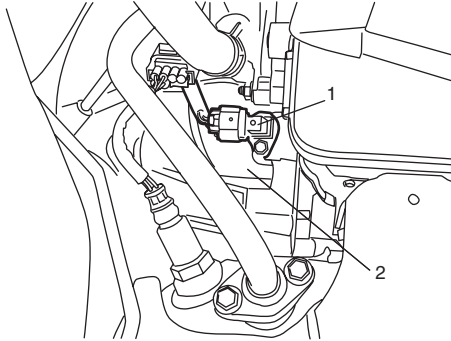

I6JB01130021-01


Installation

Reverse removal procedure noting the following.

- Tighten CKP sensor bolt to specified torque.

Tightening torque

CKP sensor bolt (a): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

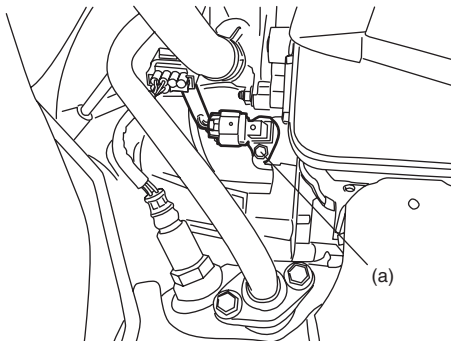

I6JB01130022-01


- Connect connector to CKP sensor securely.

Camshaft Position (CMP) Sensor and Crankshaft Position (CKP) Sensor Inspection

S6JB0B1306019

Visual check

- Check that O-ring is free from damage.
- Check that end face of sensor and signal rotor tooth are free from any metal particles and damage.

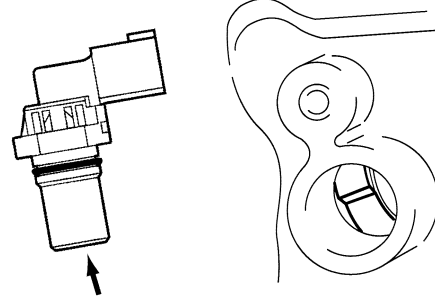


I6JB01130023-01

Performance check

- 1) Remove metal particles on end face of sensor, if any.
- 2) Arrange 12 V battery (1) and connect its positive terminal to "Vin" terminal (2) and negative terminal to "Ground" terminal (3) of sensor. Then using ohmmeter, measure resistance between "Vout" terminal (4) of sensor and negative terminal of battery by passing magnetic substance (iron) (5) while keeping approximately 1 mm (0.03 in.) gap with respect to end face of sensor. If resistance does not vary as specified below, replace defective sensor.

CMP or CKP sensor resistance

Resistance varies from less than 220 Ω (ON) to infinity (OFF) or from infinity (OFF) to less than 220 Ω (ON)

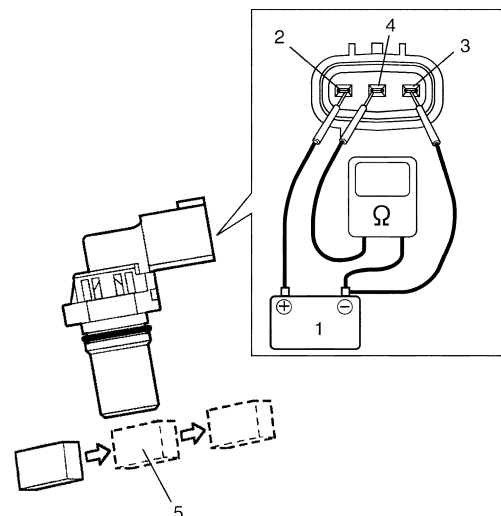


I6JB01130024-01

Knock Sensor Removal and Installation

S6JB0B1306020

Removal

- 1) Disconnect negative cable at battery.
- 2) Remove intake manifold from cylinder head referring to "Intake Collector and Intake Manifold Removal and Installation in Section 1D".
- 3) Disconnect knock sensor connector (1).
- 4) Remove knock sensor (2) from cylinder block.

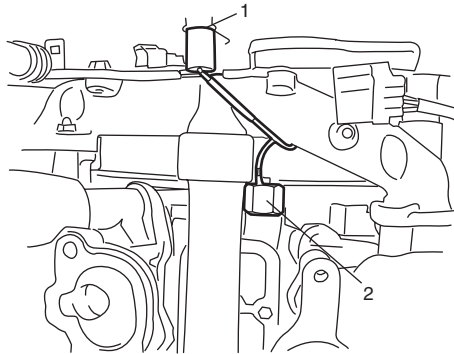


I6JB01130025-01

Installation

Reverse removal procedure for installation.

Tightening torque

Knock sensor (a): 22 N·m (2.2 kgf-m, 16.0 lb-ft)

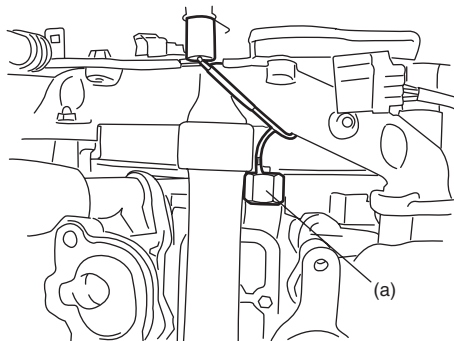



I6JB01130026-01

Engine and Emission Control System Relay Inspection

S6JB0B1306021

Main, Fuel Pump, Starting Motor Control and Throttle Actuator Control Relays (Single Type Relay)


- 1) Disconnect negative cable at battery.
- 2) Remove main relay (1), fuel pump relay (3), starting motor control relay (2), throttle actuator control relay (4) from fuse box No.2 (5) and/or relay box (6).
- 3) Check that there is no continuity between terminal "C" and "D". If there is continuity, replace relay.
- 4) Connect battery positive (+) terminal to terminal "A" of relay. Connect battery negative (-) terminal to terminal "B" of relay. Check for continuity between terminal "C" and "D". If there is no continuity when relay is connected to the battery, replace defective relay.

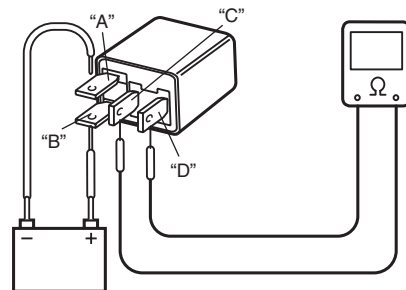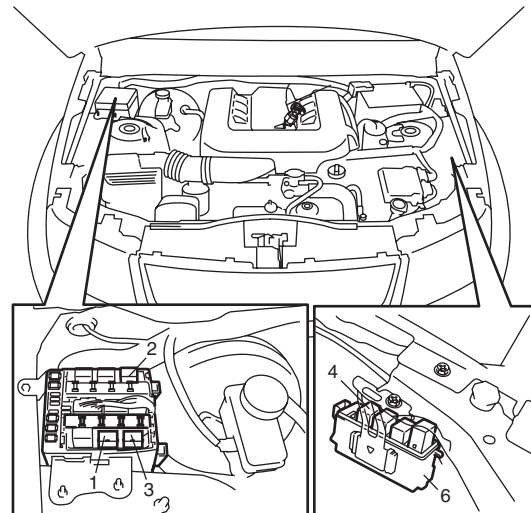



I5JB0C130001-01

HO2S Heater Relay (Integration Type Relay)

- 1) Disconnect negative cable at battery.
- 2) Remove integration relay No.2 (1) from fuse box No.2 (2).

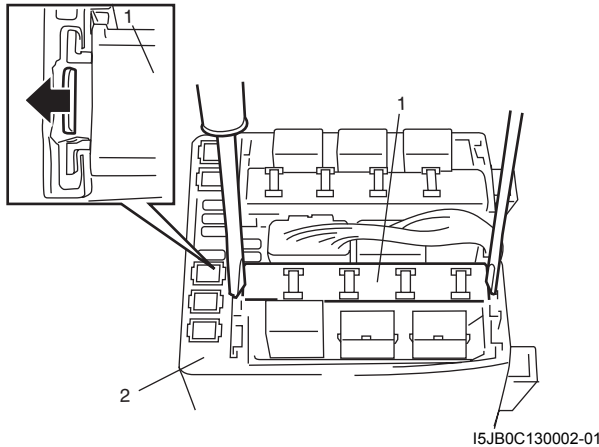

 - 3) Check that there is no continuity between terminals "[A]-1" and "[B]-8" of relay. If there is continuity, replace relay.
- 4) Connect battery positive (+) terminal to "[B]-7" terminal of relay. Connect battery negative (–) terminal to "[B]-6" terminal of relay. Check for continuity between terminal "[A]-1" and "[B]-8". If there is no continuity when relay is connected to the battery, replace integration relay No.2.

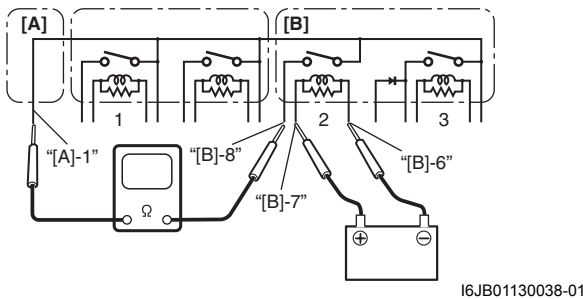

- | |
|----------------------|
| 1. A/T relay |
| 2. HO2S heater relay |
| 3. Compressor relay |

IMT Vacuum Tank Assembly Inspection

S6JB0B1306022

⚠ CAUTION


Do not apply vacuum more than –86 kPa (–12.47 psi); otherwise IMT vacuum solenoid valve and vacuum tank could be damaged.

IMT vacuum solenoid valve


- 1) Disconnect negative cable at battery.
- 2) Remove vacuum tank assembly mounting bolts.
- 3) With ignition switch OFF, disconnect connector from IMT vacuum solenoid valve.
- 4) Check resistance of IMT vacuum solenoid valve. If resistance is as specified, proceed to next operation check. If not, replace IMT vacuum solenoid valve.

Resistance of IMT vacuum solenoid valve


Between two terminals: 33 – 39 Ω at 20 °C (68 °F)

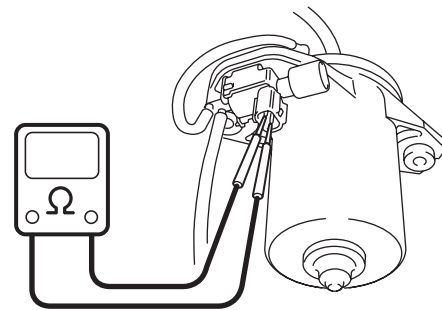

- 5) Disconnect vacuum hoses (1 and 2) from IMT valve and vacuum tank.
- 6) With connector disconnected, apply vacuum (–53 kPa (–7.69 psi) to –67 kPa (–9.72 psi)) to hose (2). Vacuum is maintained.

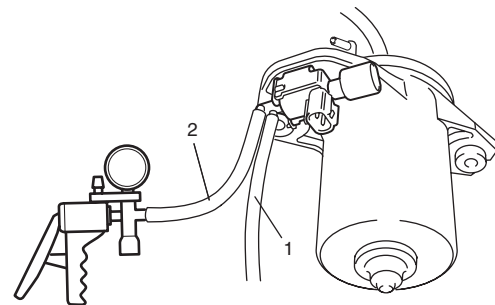


- 7) With connector disconnected, apply vacuum to hose (1). Air goes into nozzle (2).

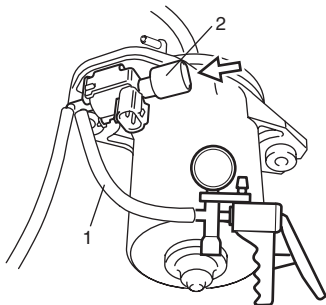

I5JB0A130007-01

- 8) Connect 12 V-battery to IMT vacuum solenoid valve terminals. In this state, apply vacuum to hose (2). Air goes into hose (1).

If check result is not as described, replace IMT vacuum solenoid valve.

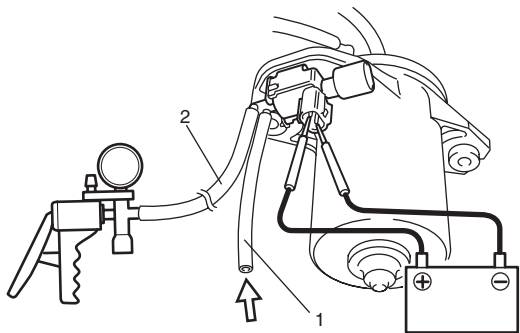


I5JB0A130008-01

- 9) Connect vacuum hoses to IMT vacuum solenoid valve and IMT vacuum tank.
10) Connect IMT vacuum solenoid valve connector securely.


IMT Vacuum Tank

- 1) Check for outside of IMT vacuum tank visually.
- 2) Disconnect vacuum hoses from intake manifold and IMT vacuum solenoid valve.
- 3) Check for vacuum passage of IMT vacuum tank as follows by using vacuum pump.
 - a) When applying vacuum (-53 kPa (-7.69 psi) to -67 kPa (-9.72 psi)) to hose (1), vacuum is maintained (there is no leakage): [A]
 - b) When applying vacuum to hose (2), vacuum is not maintained: [B]If check result is not described, replace IMT vacuum tank assembly.

[A]

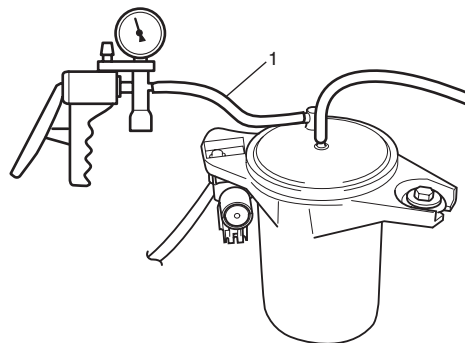

[B]

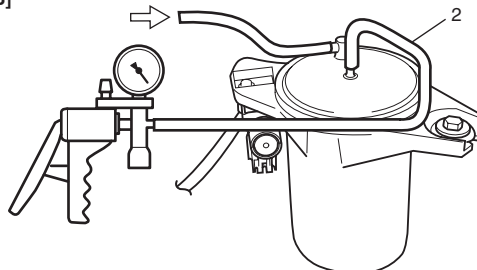

I5JB0A130009-01

- 4) Connect vacuum hoses to intake manifold and IMT vacuum solenoid valve.

Specifications

Tightening Torque Specifications

S6JB0B1307001

Fastening part	Tightening torque			Note
	N·m	kgf-m	lb-ft	
MAF and IAT Sensor screw	1.5	0.15	1.1	🔧
Accelerator pedal position (APP) sensor assembly nut	6.0	0.6	4.5	🔧
APP sensor assembly bracket nut	6.0	0.6	4.3	🔧
ECT sensor	12	1.2	8.5	🔧
MAP sensor bolt	5	0.5	3.5	🔧
A/F sensor	45	4.5	32.5	🔧
Heated oxygen sensor	45	4.5	32.5	🔧
CMP sensor bolt	11	1.1	8.0	🔧
CKP sensor bolt	11	1.1	8.0	🔧
Knock sensor	22	2.2	16.0	🔧

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.


Engine Mechanical

General Description

Engine General Information

S6JB0B1401001

The engine is a water-cooled, 60° V6 cylinders, 4 stroke cycle gasoline unit with its DOHC (Double over head camshaft) valve mechanism arranged for "V" type valve configuration. The double overhead camshaft is mounted over the cylinder head; it is driven from crankshaft through timing chains, and no push rods are provided in the valve train system.

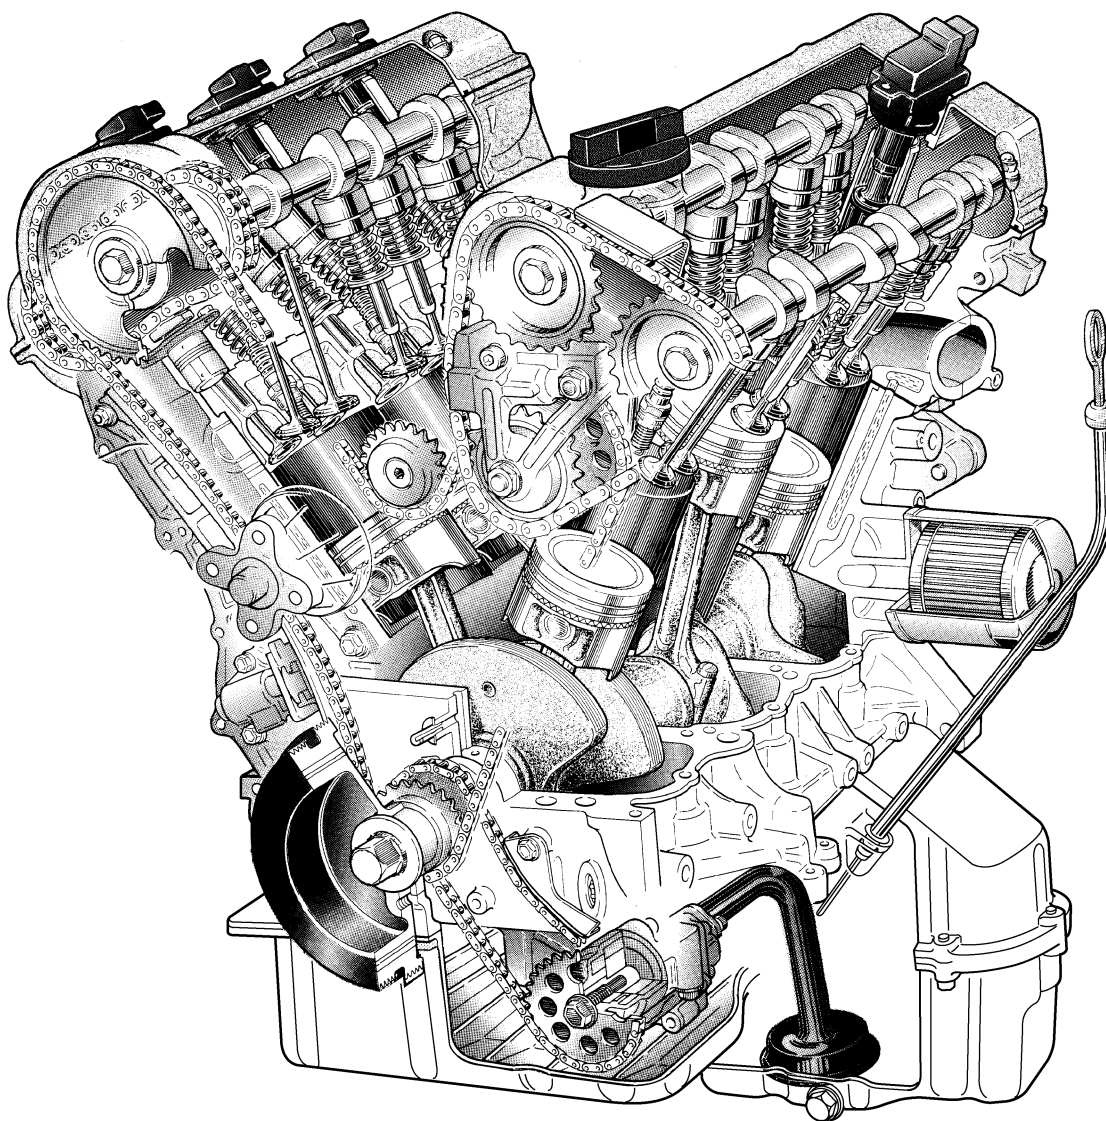

I6JB01140001-02

Air Cleaner Filter Introduction

S6JB0B1401002

This air cleaner filter is of dry type. Note that it needs cleaning referring to “Air Cleaner Filter Inspection and Cleaning”.

IMT (Intake Manifold Tuning) System Description


S6JB0B1401003

IMT system consists of the following items:

- IMT valve (1) installed between intake manifold and surge tank pipe
- IMT valve actuator (4)
- IMT vacuum solenoid valve (2)
- Vacuum tank (3)

Vacuum tank contains the one way check valve (5) to maintain negative pressure constantly regardless of variation in the intake manifold pressure.

Vacuum tank, therefore, supplies IMT vacuum solenoid valve actuator with stable negative pressure in whole engine speed ranges.

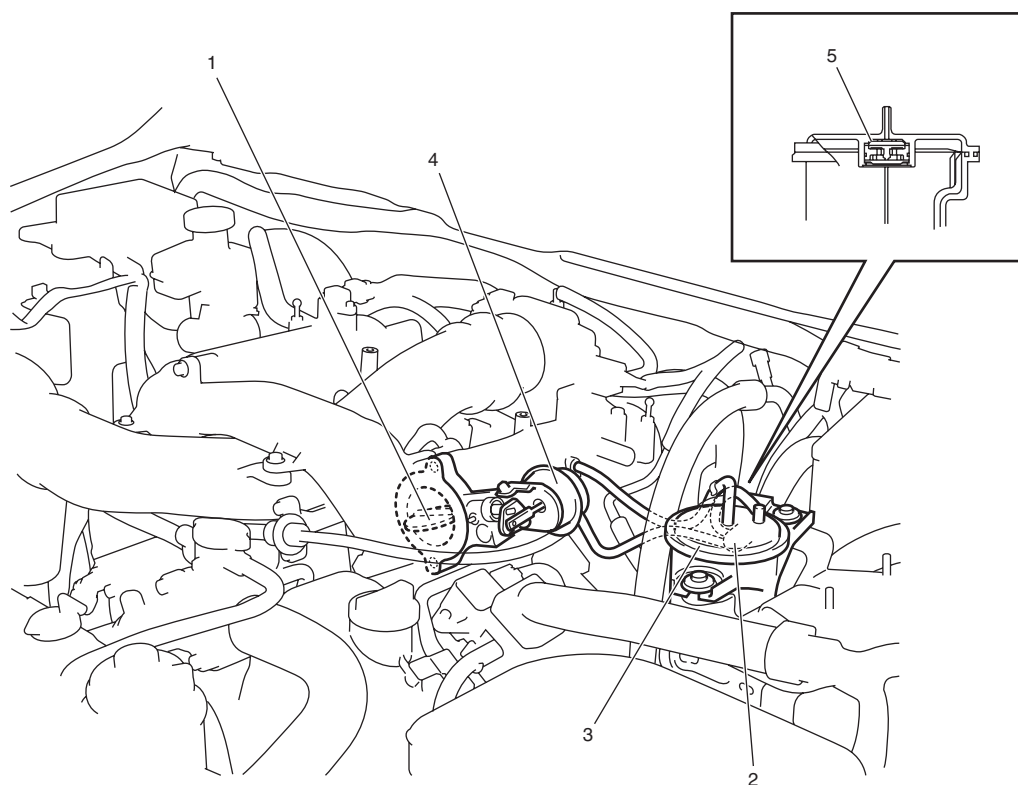

I6JB01140110-01

1D-3 Engine Mechanical:

IMT system varies the effective length of intake pipe by opening and closing IMT valve in order to improve an air volumetric efficiency.

When IMT valve is fully open [A]:

The effective length of intake pipe is short.

With this condition, the engine torque is large at low and middle-high engine speed ranges.

However, the engine torque is small at middle-low and high engine speed ranges.

When IMT valve is totally closed [B]:


The effective length of intake pipe is long.

With this condition, the engine torque is large at middle-low and high engine speed ranges.

However, the engine torque is small at low and middle-high engine speed ranges.

IMT system utilizes this characteristic of engine. IMT valve is opened at low and middle-high engine speed ranges, and closed at middle-low and high engine speed ranges.

In this way, engine torque is improved in whole engine speed ranges.

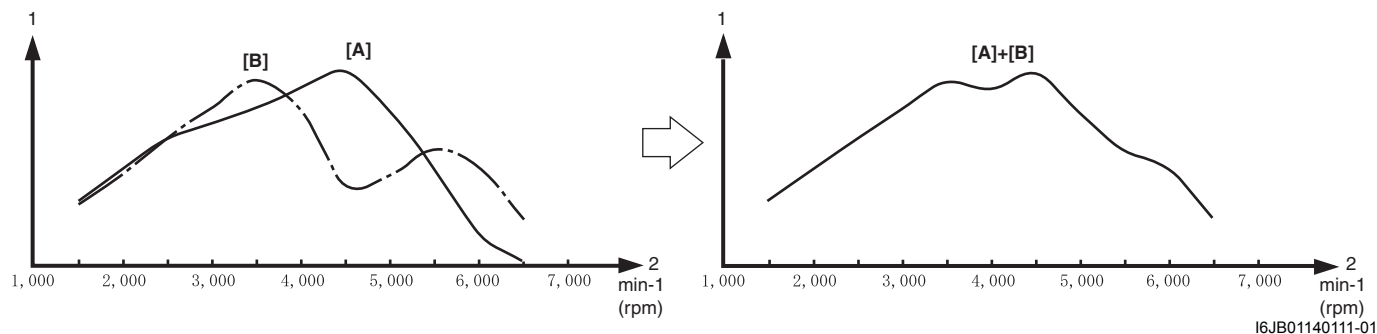

[A]: IMT valve open	1. Engine torque
[B]: IMT valve closed	2. Engine speed


Diagnostic Information and Procedures

Compression Check

S6JB0B1404001

Check compression pressure on all 6 cylinders as follows:

- 1) Warm up engine.
- 2) Stop engine after warming up.
- 3) Remove surge tank cover and disconnect ignition coil harness couplers.
- 4) Remove all ignition coils (1) and spark plugs (2) referring to "Spark Plug Removal and Installation in Section 1H".

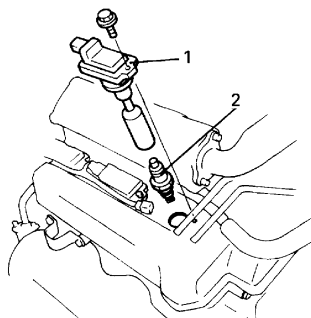

IYSQ01143002-01


- 5) Disconnect fuel injector wire harness at connector.
- 6) Install special tool (Compression gauge) into spark plug hole.

Special tool

(A): 09915-64512


(B): 09915-64530

(C): 09915-67010

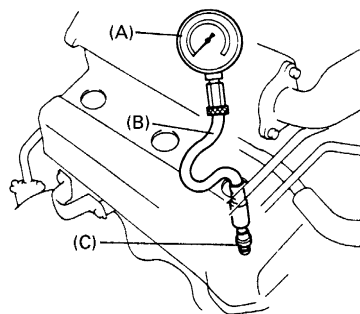

IYSQ01143003-01

- 7) Disengage clutch (to lighten starting load on engine) for M/T vehicle, and depress accelerator pedal all the way to make throttle fully open.

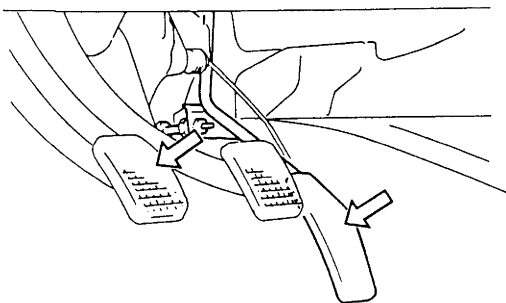

I2RH01140004-01

- 8) Crank engine with fully charged battery, and read the highest pressure on compression gauge.

NOTE

For measuring compression pressure, crank engine at least 250 rpm by using fully charged battery.

Compression pressure

Standard: 1400 – 1600 kPa (14.0 – 16.0 kg/cm², 199.0 – 227.5 psi)

Limit: 1100 kPa (11.0 kg/cm², 156.0 psi)

Max. difference between any two cylinders: 100 kPa (1.0 kg/cm², 14.2 psi)

- 9) Carry out steps 6), 7) and 8) on each cylinder to obtain 6 readings.

Engine Vacuum Check

S6JB0B1404002

The engine vacuum that develops in the intake line is a good indicator of the condition of the engine. The vacuum checking procedure is as follows:

- 1) Warm up engine to normal operating temperature and make sure that engine idle speed is within specification.
- 2) Stop engine and disconnect vacuum hoses from fuel pressure regulator valve (1).
- 3) Connect special tools (Vacuum gauge and hose joint) and 3-way joint between vacuum hose and valve.


Special tool

(A): 09915-67311

(B): 09918-08210

(C): 09355-35754-600 Hose, SUZUKI genuine parts

(D): 09367-04002 3-way joint, SUZUKI genuine parts

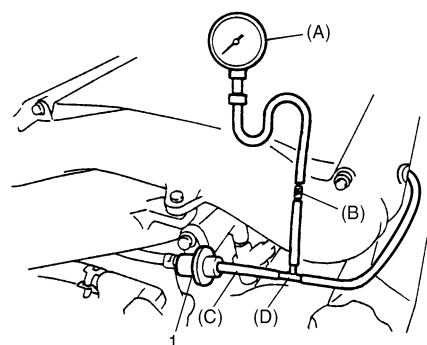

I4JA01140028-01

- 4) Start engine and run engine at specified idle speed, and read vacuum gauge. Vacuum should be within specification.

Vacuum specifications (sea level)


59 – 79 kPa (450 – 600 mmHg, 17.7 – 23.7 in.Hg) at specified idle speed

- 5) After checking, remove, all special tools.
- 6) Connect vacuum hoses to fuel pressure regulator valve.

Valve Lash (Clearance) Inspection

S6JB0B1404003

- 1) Remove negative (–) cable at battery.
- 2) Remove cylinder head covers referring to “Cylinder Head Covers Removal and Installation”.
- 3) Using 19 mm wrench, turn crankshaft pulley (1) clockwise until timing mark “O” position (2) of cylinder block and index (3) of crankshaft pulley (1) are aligned.
- 4) Check whether cam position (4) of No.1 cylinder is at the specified position [A] as shown in figure. If cam position is [B], locate cam position to [A] by turning crankshaft one rotation.

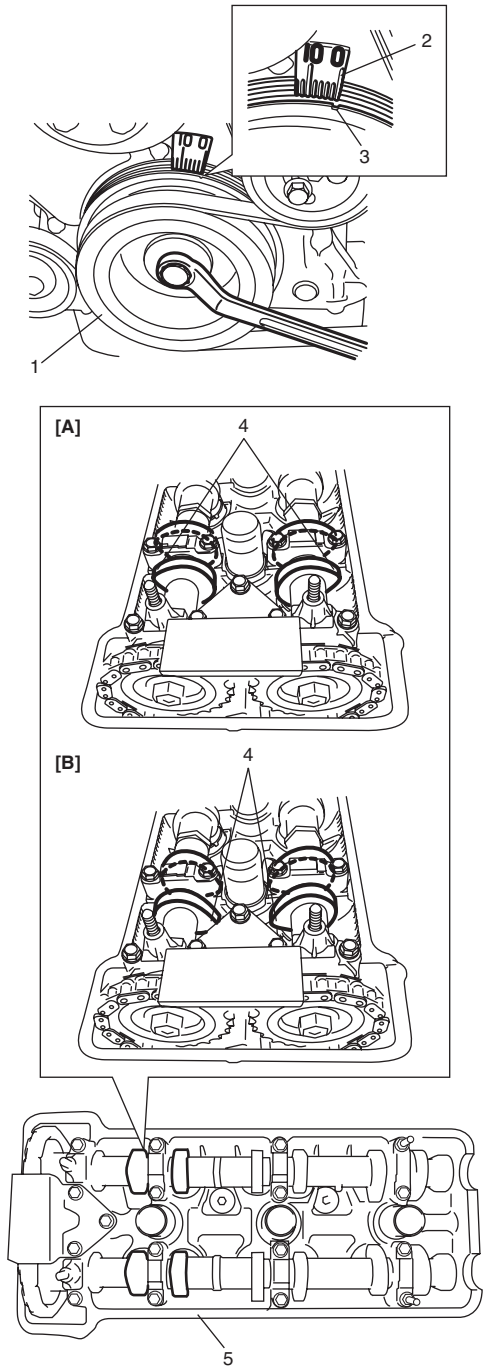

I6JB01140002-01

[A]: TDC in compression for No.1 cylinder	5. LH (No.1) bank
[B]: TDC in exhaust for No.1 cylinder	

- 5) Check valve lashes with thickness gauge (1) according to the following procedure.
 - a) Check valve lashes of cylinder No.1.
 - b) Turn crankshaft pulley by 120° clockwise.
 - c) Check valve lashes of cylinder No.6.
 - d) In the same manner as b) – c), check valve lashes of cylinder No.5, cylinder No.4, cylinder No.3 then cylinder No.2.

If valve lash is out of specification, record valve lash and adjust it to specification by replacing shim.


Valve clearance specification

When cold (Coolant temperature is 15 – 25 °C (59 – 77 °F)):

- Intake: 0.18 – 0.22 mm(0.007 – 0.008 in.)
- Exhaust: 0.28 – 0.32 mm(0.011 – 0.012 in.)

When hot (Coolant temperature is 60 – 68 °C (140 – 154 °F)):


- Intake: 0.21 – 0.27 mm(0.008 – 0.011 in.)
- Exhaust: 0.30 – 0.36 mm(0.012 – 0.014 in.)

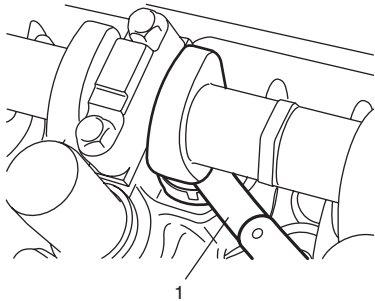

I6JB01140003-01

Replacement of Shim

- 1) Close the valve whose shim (2) is to be replaced by turning crankshaft, then turn tappet (3) till its cut section (1) faces inside as shown in figure.

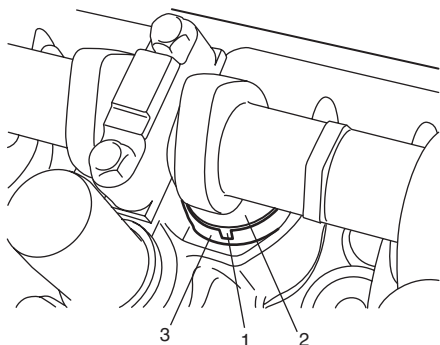


I6JB01140004-01

- 2) Lift down the valve by turning crankshaft to 360°.
- 3) Hold tappet at that position using special tool as follows.
 - a) Remove its housing bolts.
 - b) Check housing No. and select special tool corresponding to housing No. as below table.

Special tool selection table

No. on camshaft housing	Embossed mark on special tool
I2 · I3 · I4	IN
E2 · E3 · E4	EX

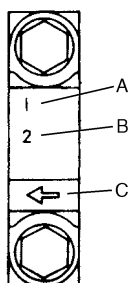


I5JB0A142066-01

A: I: Intake side or E: Exhaust side
B: Position from timing chain side
C: Pointing to timing chain side

- c) Hold down the tappet so as not to contact the shim by installing special tool on camshaft housing with housing bolt (1) tighten housing bolts to specified torque.

Special tool**(A): 09916-66510****Tightening torque**

Camshaft housing bolts (a): 11 N·m (1.1 kgf-m, 7.5 lb-ft) by the specified procedure

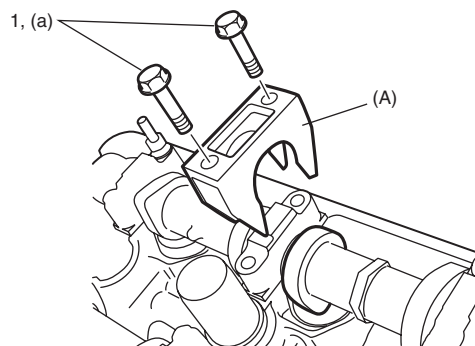


I6JB01140005-01

- 4) Turn camshaft by approximately 90° clockwise and remove shim (3).

⚠ WARNING

Never put in the hand between camshaft and tappet.

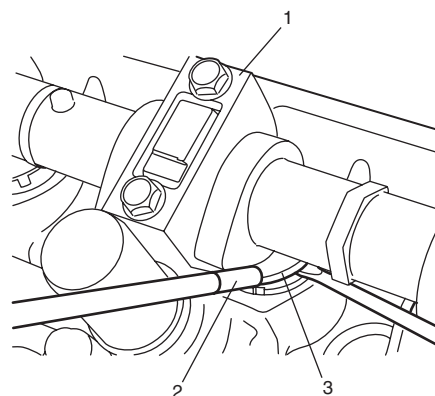

I6JB01140006-01

1. Special tool	2. Magnet
-----------------	-----------

- 5) Using a micrometer (2), measure the thickness of the removed shim (1), and determine replacement shim by calculating the thickness of new shim with the following formula and table.

Shim thickness specification

Intake side:

$$A = B + C - 0.200 \text{ mm (0.008 in.)}$$


Exhaust side:

$$A = B + C - 0.300 \text{ mm (0.012 in.)}$$

A: Thickness of new shim

B: Thickness of removed shim

C: Measured valve clearance

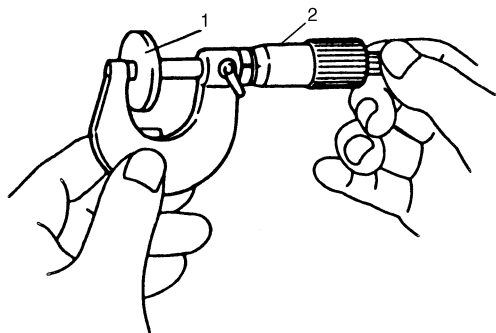

I2RH0B140014-01

For example of intake side:

When thickness of removed shim is 2.400 mm (0.094 in.), and measured valve clearance is 0.450 mm (0.018 in.).

$$A = 2.400 \text{ mm (0.094 in.)} + 0.450 \text{ mm (0.018 in.)} - 0.200 \text{ mm (0.008 in.)} = 2.650 \text{ mm (0.104 in.)}$$


Calculated thickness of new shim = 2.650 mm (0.104 in.)

- 6) Select new shim No. (1) with a thickness as close as possible to calculated value.

Available new shim No.

Thickness mm (in.)	Shim No.	Thickness mm (in.)	Shim No.
2.175 (0.0856)	218	2.600 (0.1024)	260
2.200 (0.0866)	220	2.625 (0.1033)	263
2.225 (0.0876)	223	2.650 (0.1043)	265
2.250 (0.0886)	225	2.675 (0.1053)	268
2.275 (0.0896)	228	2.700 (0.1063)	270
2.300 (0.0906)	230	2.725 (0.1073)	273
2.325 (0.0915)	233	2.750 (0.1083)	275
2.350 (0.0925)	235	2.775 (0.1093)	278
2.375 (0.0935)	238	2.800 (0.1102)	280
2.400 (0.0945)	240	2.825 (0.1112)	283
2.425 (0.0955)	243	2.850 (0.1122)	285
2.450 (0.0965)	245	2.875 (0.1132)	288
2.475 (0.0974)	248	2.900 (0.1142)	290
2.500 (0.0984)	250	2.925 (0.1152)	293
2.525 (0.0994)	253	2.950 (0.1161)	295
2.550 (0.1004)	255	2.975 (0.1171)	298
2.575 (0.1014)	258	3.000 (0.1181)	300

- 7) Install new shim facing shim No. side (1) with tappet.

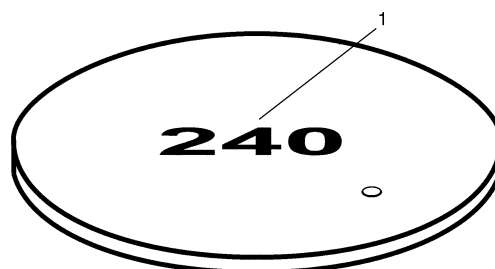


I6JB01140007-01

- 8) Lift valve by turning crankshaft counterclockwise (in opposite direction against above Step 4)) and remove special tool.

Special tool

(A): 09916-66510

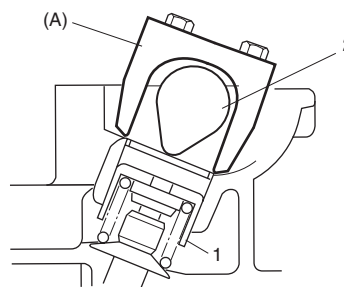


I6JB01140008-02

1. Tappet

2. Camshaft

9) Install camshaft housing (1) and tighten bolts to specified torque.

Tightening torque
Camshaft housing bolt (a): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

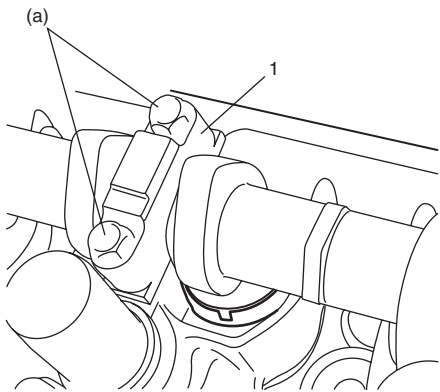


I6JB01140009-01

- 10) Turn crankshaft pulley more than 4 rotations.
- 11) Check valve clearance again after adjusting it.
- 12) After checking and adjusting all valves.
- 13) Install cylinder head covers referring to “Cylinder Head Covers Removal and Installation”.

Repair Instructions

Air Intake System Components

S6JB0B1406001

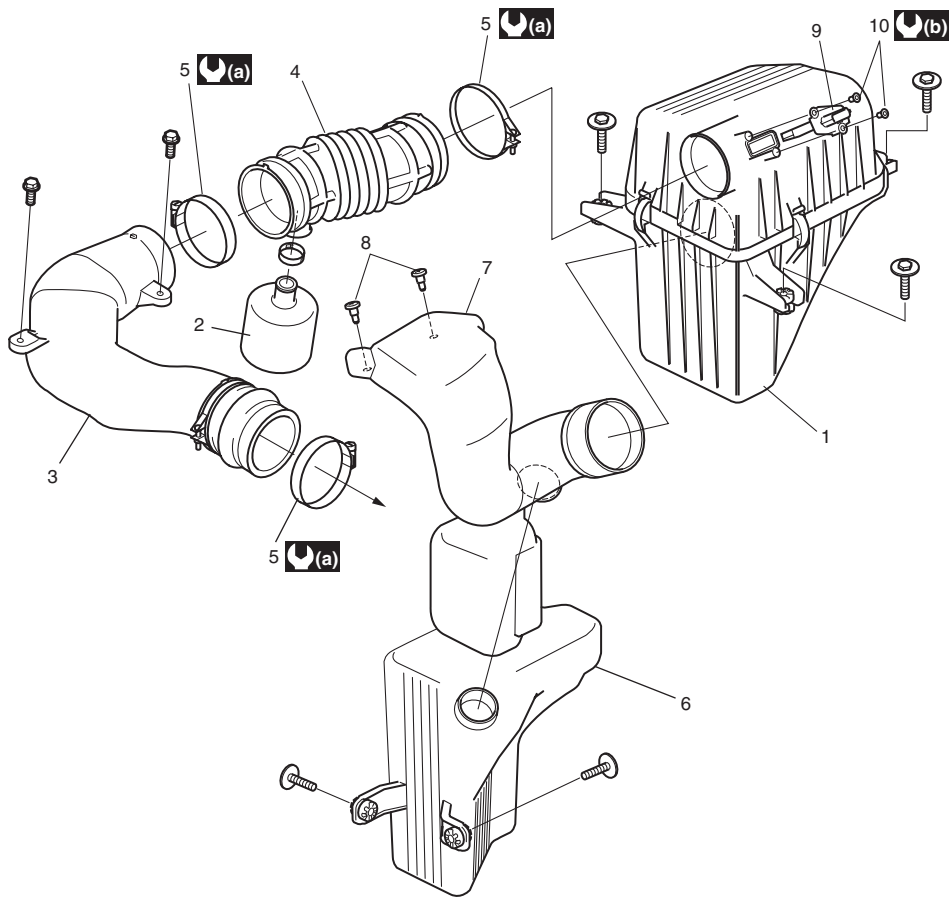

I6JB01140010-02


1. Air cleaner assembly	4. Air cleaner outlet hose	7. Air cleaner suction pipe	10. MAF and IAT sensor screw
2. Resonator No.2	5. Clamp	8. Clip	(a) : 2.0 N·m (0.2 kgf-m, 1.5 lb-ft)
3. Air intake pipe	6. Resonator No.1	9. MAF and IAT sensor	(b) : 1.6 N·m (0.16 kgf-m, 1.2 lb-ft)

Air Cleaner Filter Removal and Installation

S6JB0B1406002

Removal

- 1) Disconnect connector from MAF and IAT sensor.
- 2) Open air cleaner upper case (1) after unhooking its clamps (2).

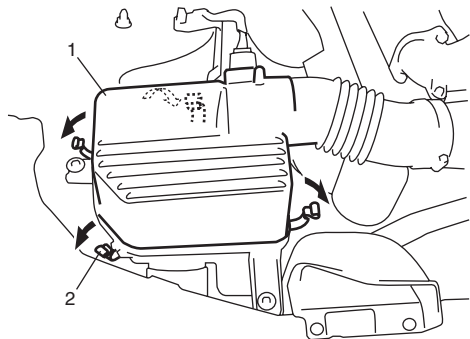

I6JB01140011-01

- 3) Remove air cleaner filter.

Installation

Reverse removal procedure for installation.

Air Cleaner Filter Inspection and Cleaning


S6JB0B1406003

Inspection

Check filter for dirt. Replace if filter is excessively dirty.

Cleaning


When cleaning filter, blow off dust by blowing compressed air from air outlet side of filter (i.e., the side facing up when installed in air cleaner case).

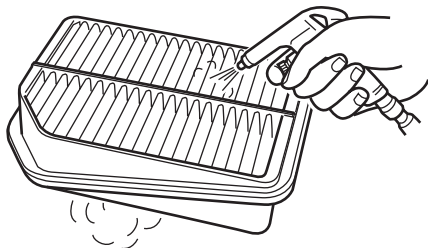

I6JB01140012-01

Intake Collector and Intake Manifold Components

S6JB0B1406004

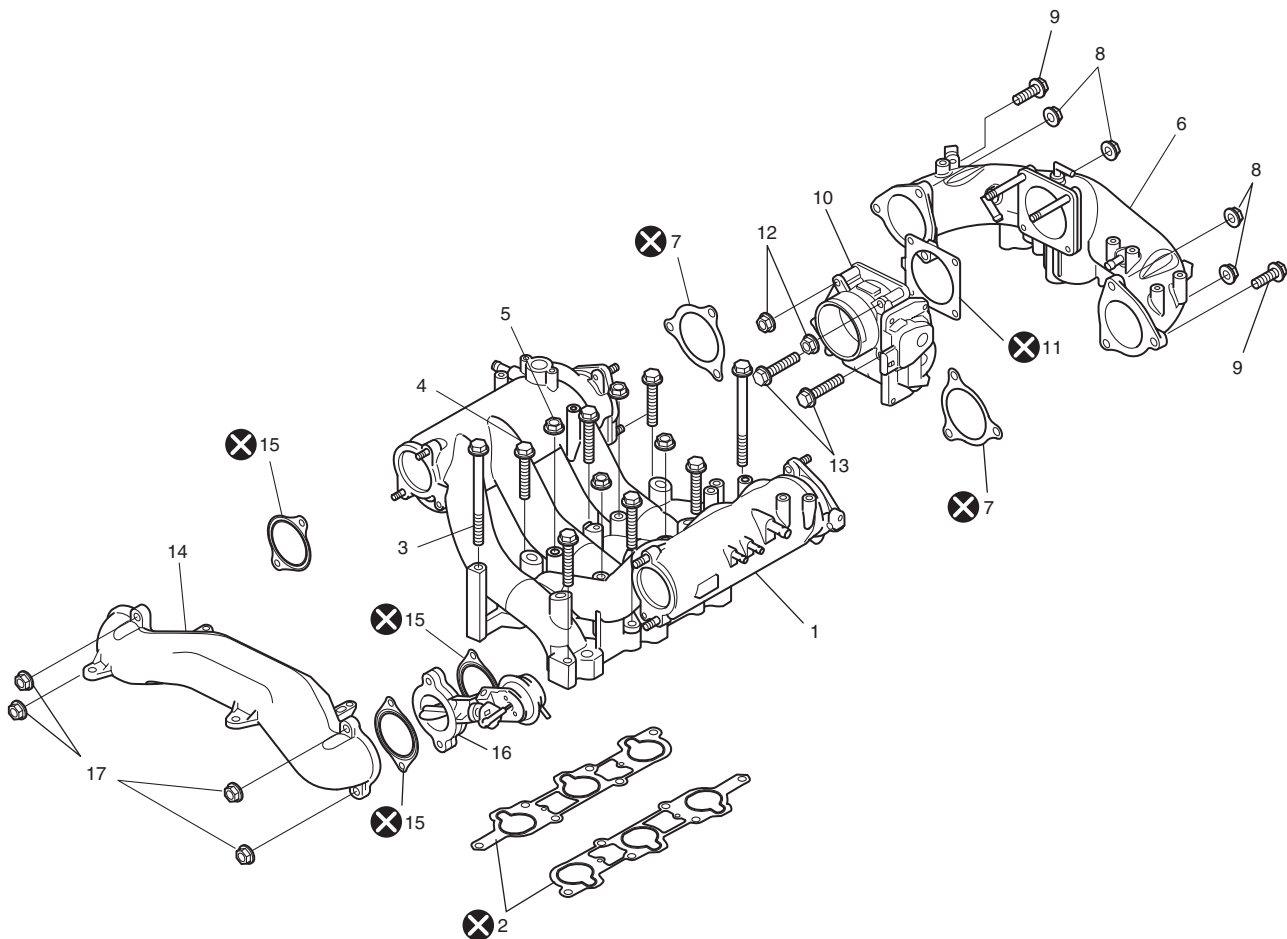

I6JB01140018-01

1. Intake manifold	6. Intake collector	11. Electric throttle body assembly gasket	16. IMT (Intake manifold tuning) valve
2. Intake manifold gasket	7. Intake collector gasket	12. Electric throttle body assembly nut	17. Surge tank pipe nut
3. Intake manifold bolt (long)	8. Intake collector nut	13. Electric throttle body assembly bolt	X : Do not reuse.
4. Intake manifold bolt (short)	9. Intake collector bolt	14. Surge tank pipe	

5. Intake manifold nut

10. Electric throttle body assembly

15. Surge tank pipe gasket

Electric Throttle Body Assembly On-Vehicle Inspection

S6JB0B1406005


Check electric throttle body assembly referring to "Electric Throttle Body Assembly On-Vehicle Inspection in Section 1C".

Electric Throttle Body Assembly Removal and Installation

S6JB0B1406006


Removal

- 1) Release fuel pressure in fuel feed line by referring to "Fuel Pressure Relief Procedure in Section 1G".
- 2) Disconnect negative (–) cable at battery.
- 3) Drain engine coolant referring to "Cooling System Draining in Section 1F".
- 4) Remove surge tank cover.
- 5) Remove intake air pipe (1), surge tank pipe (2) and IMT valve (3).

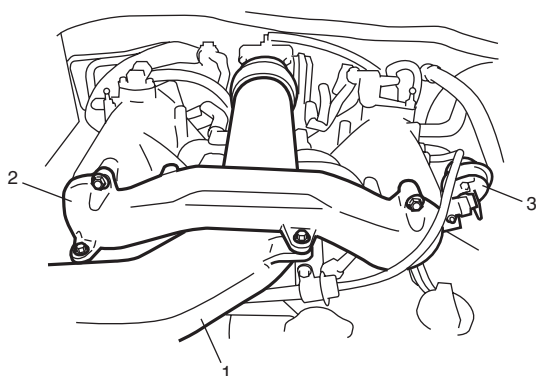


I6JB01140112-01

- 6) Disconnect connectors from electric throttle body assembly (1) and fuel injectors (2) of LH (No.1) bank.

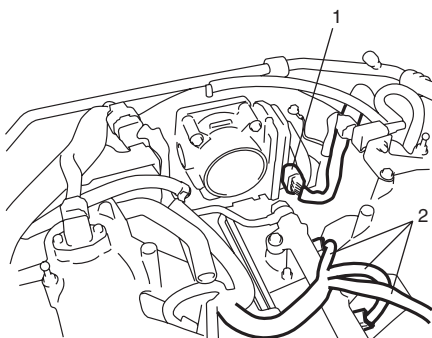


I6JB01140014-01

- 7) Disconnect fuel connect pipe (1) from delivery pipe.
- 8) Disconnect water hose (2) from electric throttle body assembly.

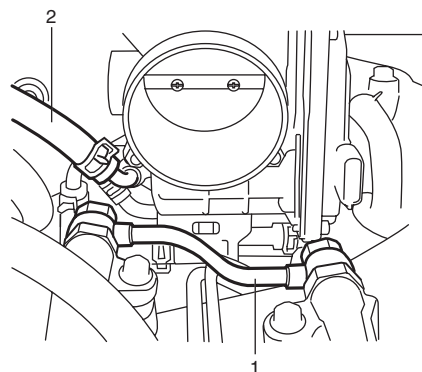


I6JB01140015-01

- 9) Remove LH (No.1) bank delivery pipe (1) with fuel pressure regulator (2).

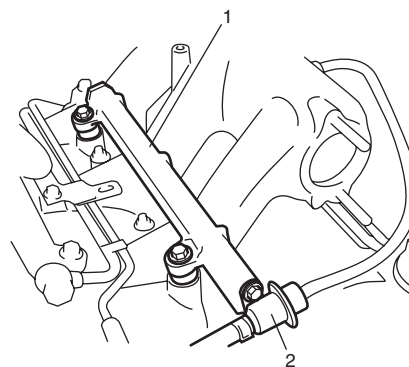

I6JB01140016-01

- 10) Detach electric throttle body assembly (1) from intake collector.
- 11) Disconnect water hose (2) from electric throttle body assembly.

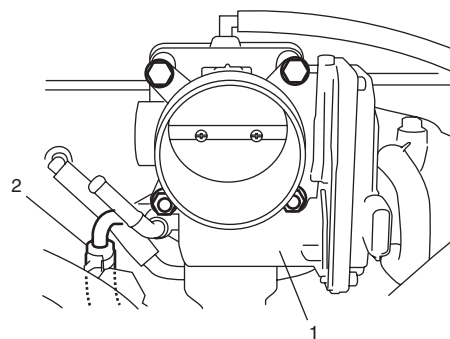


I6JB01140017-01

Installation

Reverse removal procedure for installation noting the following.

- Clean mating surfaces and use new throttle body gasket (1).

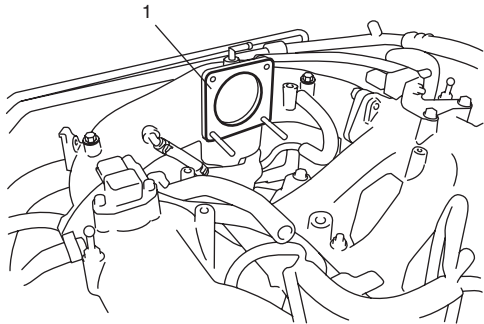

I6JB01140109-01

- Use new fuel connector pipe gaskets.
- Tighten fuel connector pipe union bolts and delivery pipe bolts to specified torque referring to "Fuel System Components in Section 1G".
- Use new surge tank pipe gaskets.
- Check to ensure that all removed parts are back in place.
Reinstall any necessary parts which have not been reinstalled.
- Refill cooling system referring to "Cooling System Flush and Refill in Section 1F".
- Upon completion of installation, verify that there is no fuel leakage at each connection according to "Fuel Leakage Check Procedure in Section 1G".

IMT (Intake Manifold Tuning) Valve Removal and Installation

S6JB0B1406007

Refer to "Electric Throttle Body Assembly Removal and Installation".


IMT (Intake Manifold Tuning) Valve Inspection

S6JB0B1406008

- 1) Connect special tool (A) to IMT valve (1).

Special tool

(A): 09917-47011

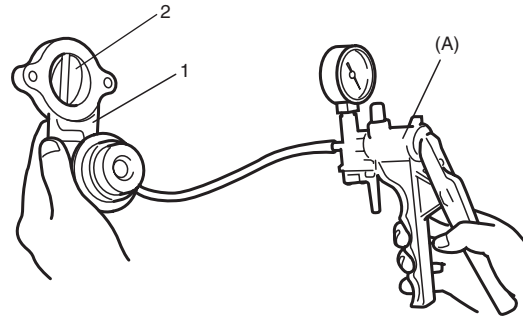

I4JA01140010-01

- 2) Apply vacuum to IMT valve (1) and verify that throttle (2) fully closes within the specified range. If IMT valve (1) fails this check, replace it.

⚠ CAUTION

**Do not apply above 88 kPa (0.88 kg/cm², 661 mmHg, 880 mbar) of negative pressure.
Damage may occur to IMT valve (1).**

IMT valve operation pressure

1.3 – 34 kPa (0.01 – 0.34 kg/cm², 9.8 – 255 mmHg, 13 – 340 mbar)


- 3) Let the throttle (2) close for 15 seconds with no vacuum application and inspect throttle travel. If throttle travel decreases, replace IMT valve (1).

Intake Collector and Intake Manifold Removal and Installation

S6JB0B1406009


Removal

- 1) Remove electric throttle body assembly referring to "Electric Throttle Body Assembly Removal and Installation".
- 2) Disconnect water hose (1) from heater outlet pipe.
- 3) Remove heater outlet pipe bolts (2).

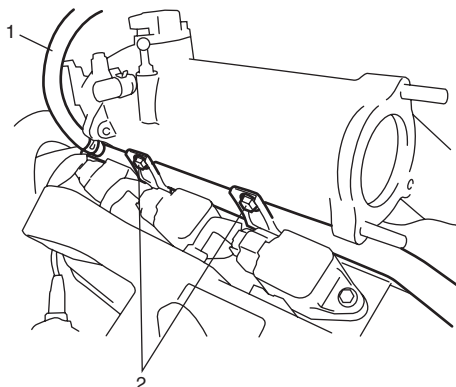


I6JB01140019-01

- 4) Disconnect MAP sensor connector (if equipped) (1) and fuel injector harness connector (2).
- 5) Remove harness clamp bracket (right side) (3) from intake collector.
- 6) Disconnect vacuum hose (4) of EVAP canister purge valve from intake collector.

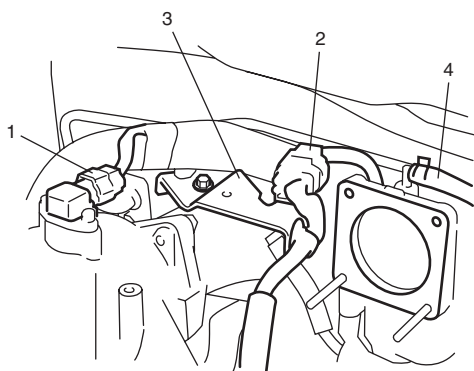

I6JB01140020-01

- 7) Disconnect EVAP canister purge valve connector (1) and ground terminals (2).
- 8) Remove harness clamp bracket (left side) (3) from intake collector.

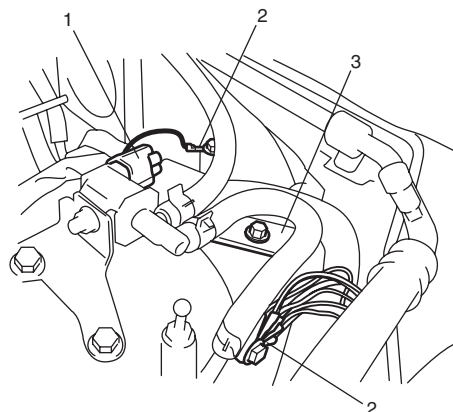


I6JB01140021-01

9) With EGR system


- a) Disconnect connector from EGR valve assembly (1).
 - b) Disconnect EGR pipe (2) and PCV hose (3).
- ### Without EGR system
- a) Disconnect PCV hose (3).

- 10) Detach intake collector (4) from intake manifold, and then disconnect water hose (5).

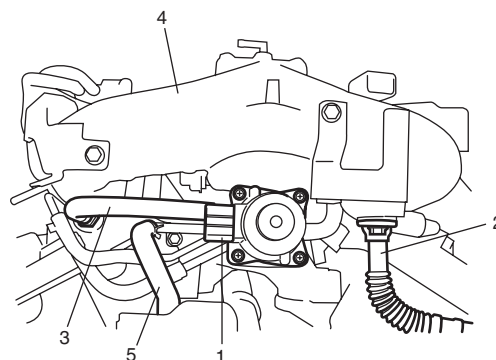

I6JB01140022-01


- 11) Remove EGR valve assembly (1) (if equipped) and PCV pipe (2) from intake collector, if necessary.

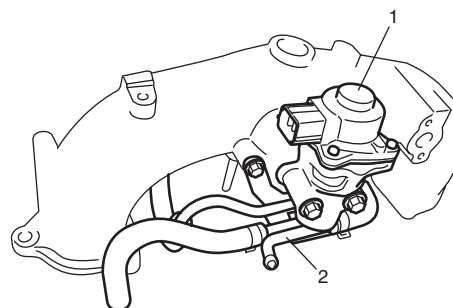

I6JB01140023-01

1D-13 Engine Mechanical:


- 12) Disconnect brake booster hose (2) and vacuum tank hose (4) from intake manifold (1) then EVAP canister purge valve hose (3) from fuel No.2 pipe (5).

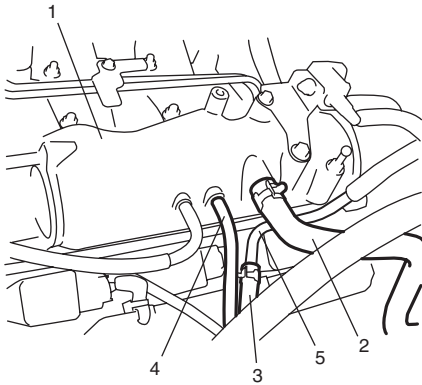

I6JB01140024-02


- 13) Disconnect fuel feed hose (1) and fuel return hose (2).

- 14) Remove fuel No.2 pipe bolts (3).

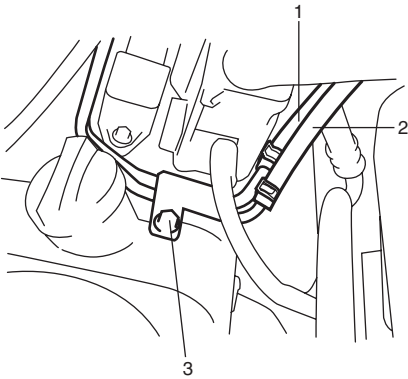

I6JB01140025-01

- 15) Remove intake manifold bolts (8 pcs.) and nuts (4 pcs.).

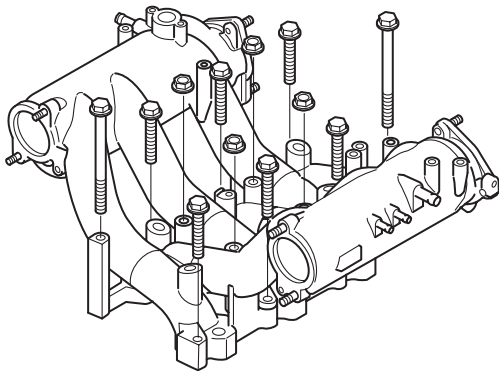


I6JB01140026-01

- 16) Remove intake manifold.

Installation

Reverse removal procedure for installation noting the following.

- Use new intake manifold gaskets (1).

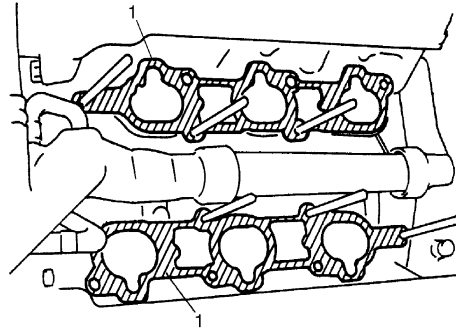

IYSQ01143022-01


- Use new intake collector gaskets, and EGR pipe gasket (if equipped).
- Install electric throttle body assembly referring to "Electric Throttle Body Assembly Removal and Installation".
- Check to ensure that all removed parts are back in place.
Reinstall any necessary parts which have not been reinstalled.
- Refill cooling system referring to "Cooling System Flush and Refill in Section 1F".
- Connect negative cable (–) at battery.
- Upon completion of installation, verify that there is no fuel leakage at each connection according to "Fuel Leakage Check Procedure in Section 1G".
- If EGR valve is removed, use new EGR valve gasket. (with EGR system)
- If EGR plate is removed, use new EGR plate gasket. (without EGR system)

Cylinder Head Covers Removal and Installation

S6JB0B1406010


Removal

- 1) Remove electric throttle body assembly, intake collector and intake manifold. Refer to “Intake Collector and Intake Manifold Removal and Installation” and “Electric Throttle Body Assembly Removal and Installation”.
- 2) Remove heater outlet pipe (1).
- 3) Detach engine harness (2) from cylinder head covers.

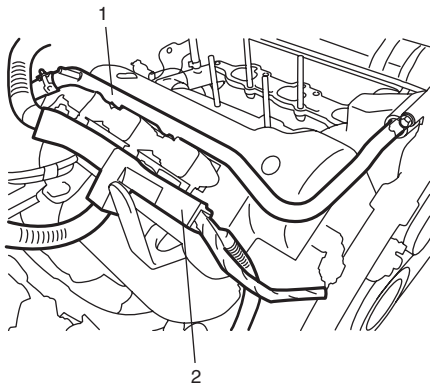

I6JB01140027-01

- 4) Disconnect ignition coil couplers and remove ignition coils referring to “Ignition Coil Assembly (Igniter and Ignition Coil) Removal and Installation in Section 1H”.
- 5) Remove cylinder head covers (1).

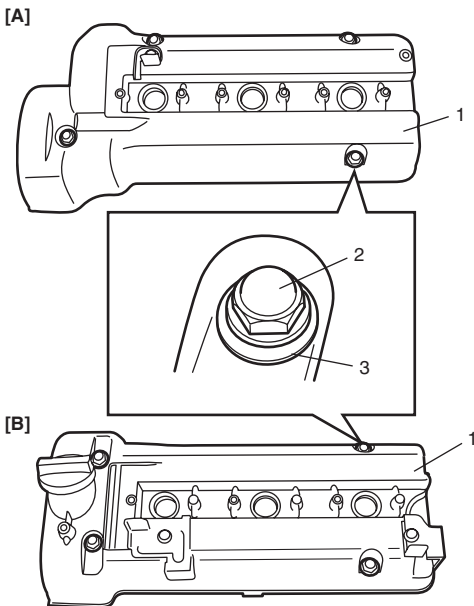


I6JB01140028-01

[A]: RH (No.2) bank	2. Nut
[B]: LH (No.2) bank	3. Seal washer

Installation

- 1) Clean sealing surfaces on cylinder heads and covers.
- 2) Remove oil, old sealant, and dust from sealing surfaces. After cleaning, apply sealant “A” to cylinder heads sealing surface area as shown in figure.

“A”: Water tight sealant 99000–31250 (SUZUKI Bond No.1207F)

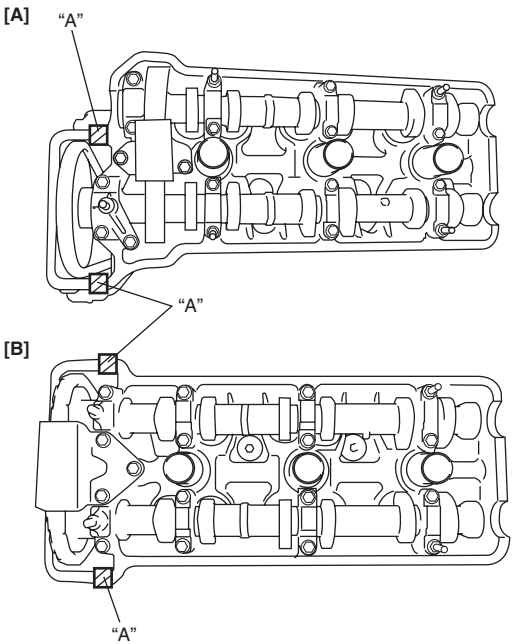


I6JB01140029-03

[A]: RH (No.2) bank	[B]: LH (No.1) bank
---------------------	---------------------

- 3) Install new spark plug hole gaskets (3) and new cylinder head cover gaskets (2) to head covers (1).
- 4) Apply sealant “A” to cylinder head gaskets searing surface area as shown in figure.

“A”: Water tight sealant 99000–31250 (SUZUKI Bond No.1207F)

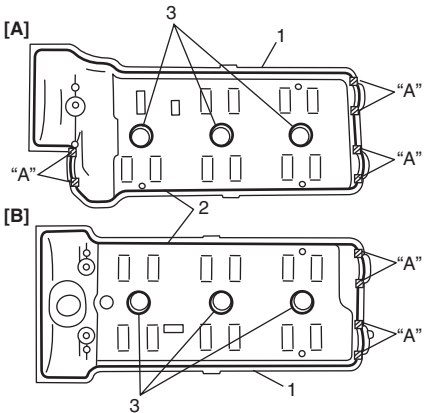

I6JB01140030-03


[A]: RH (No.2) bank	[B]: LH (No.1) bank
---------------------	---------------------

1D-15 Engine Mechanical:

- 5) Install cylinder head covers (1) to cylinder heads.
- 6) Using new seal washers (3), tighten nuts (2) following sequence ("1" – "4") as indicated in figure. Tighten a little at a time and evenly among nuts and repeat tightening sequence 2 or 3 times before they are tightened to specified torque.

Tightening torque

Cylinder head cover nut (a): 10.5 N·m (1.1 kgf-m, 7.5 lb-ft)

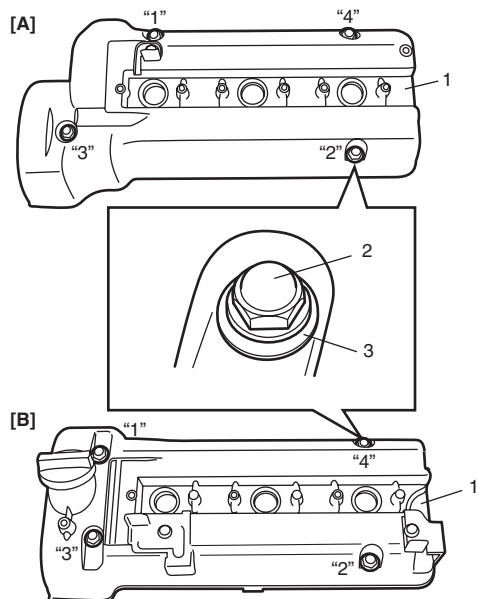


I6JB01140031-03

[A]: RH (No.2) bank

[B]: LH (No.1) bank

- 7) Install ignition coils and connect ignition coil couplers referring to "Ignition Coil Assembly (Igniter and Ignition Coil) Removal and Installation in Section 1H".
- 8) Clamp engine harness (2) to cylinder head cover.
- 9) Install heater outlet pipe (1).

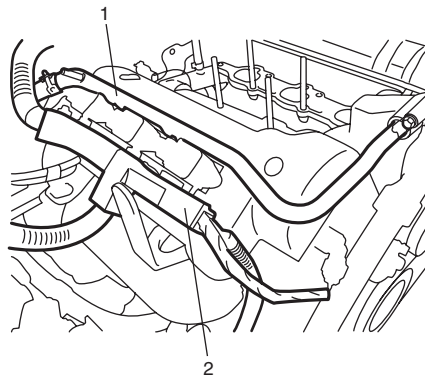


I6JB01140032-01



- 10) Install intake manifold and intake collector referring to "Intake Collector and Intake Manifold Removal and Installation".
- 11) Install electric throttle body assembly referring to "Electric Throttle Body Assembly Removal and Installation".

Engine Mounting Components

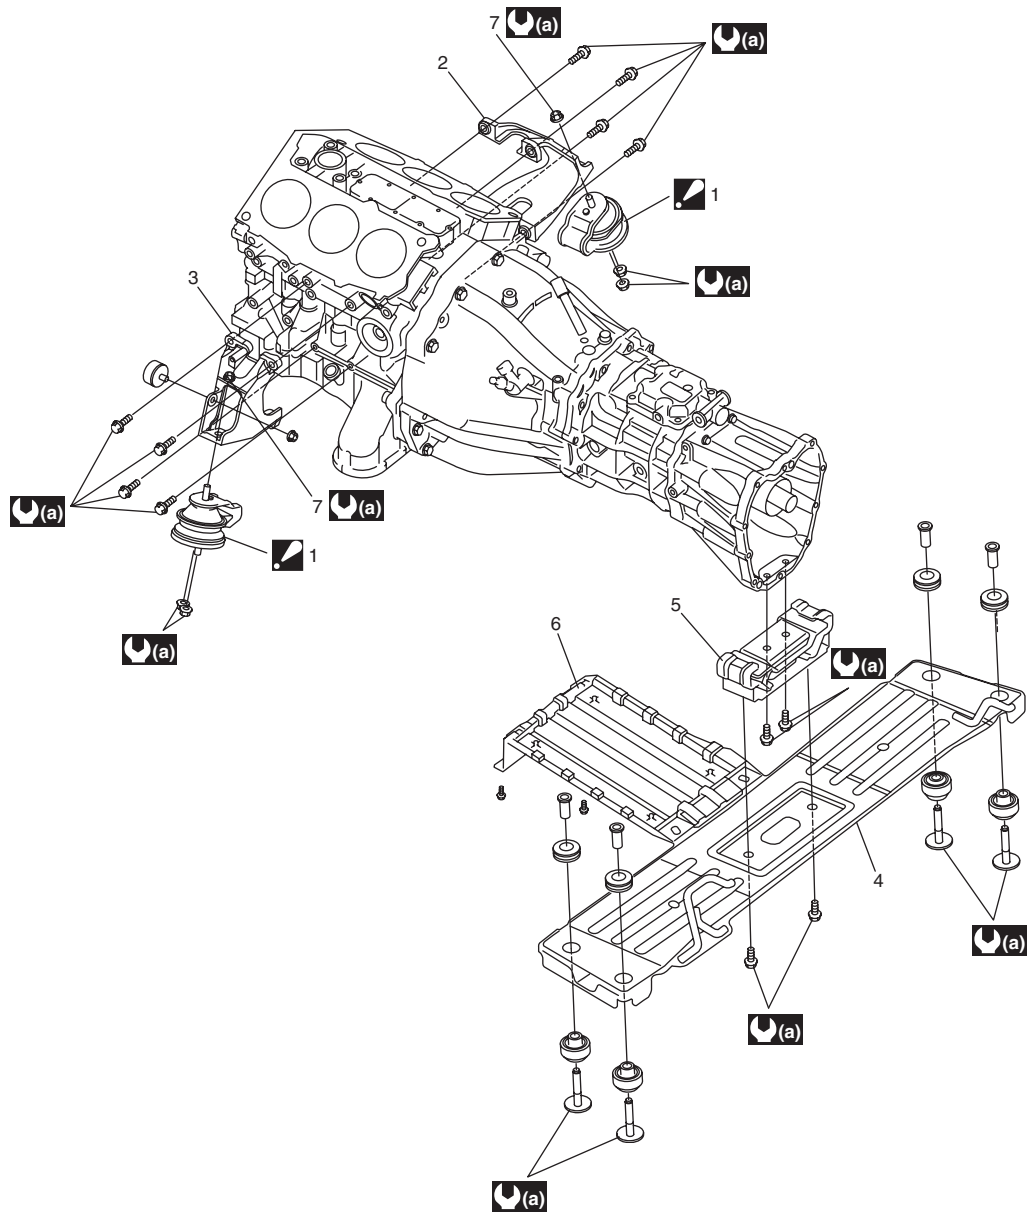S6JB0B1406011



I6JB01140033-02


 1. Engine front mounting Be sure to align dowel pin with dowel hole of engine front mounting bracket.	5. Engine rear mounting
2. Engine front mounting right bracket	6. Engine splash cover (if equipped)
3. Engine front mounting left bracket	7. Engine front mounting nut
4. Engine rear mounting member	 (a) : 55 N·m (5.5 kgf-m, 40.0 lb-ft)

Engine Assembly Removal and Installation

S6JB0B1406012

Removal



- 1) Release fuel pressure in fuel feed line referring to "Fuel Pressure Relief Procedure in Section 1G".
- 2) Remove battery and battery tray.
- 3) Remove surge tank cover.
- 4) Remove air cleaner assembly and air cleaner outlet hose referring to "Air Intake System Components".
- 5) Drain engine oil referring to "Engine Oil and Filter Change in Section 0B".
- 6) Drain coolant referring to "Cooling System Draining in Section 1F".
- 7) Drain transmission oil or A/T fluid referring to "Manual Transmission Oil Change in Section 5B" or "A/T Fluid Change in Section 5A".
- 8) Disconnect the following electric wires.
 - MAP sensor (if equipped) (1)
 - Injector harness
 - Electric throttle body (2)
 - EVAP canister purge valve (3)
 - Ignition coil assemblies (4)
 - CMP sensor (5)
 - Generator
 - Starting motor
 - Pressure switch of P/S pump (6)
 - Magnet clutch switch of A/C compressor (if equipped)
 - Engine oil pressure switch
 - Ground terminals
 - Knock sensor (7)
 - CKP sensor (8)
 - A/F sensor (No.1 and No.2) (9)
 - HO2S (No.1 and No.2) (if equipped) (10)
 - EGR valve (if equipped) (11)
 - ECT sensor (12)
 - Back up light switch (for M/T model)
 - Input shaft speed sensor (for A/T model) (13)
 - Output shaft speed sensor (for A/T model) (14)
 - Transmission range sensor (for A/T model) (15)
 - Transmission wire connector (for A/T model) (16)
 - Transfer actuator (if equipped) (17)
 - Center differential switch (if equipped) (18)
 - 4 L/N switch (if equipped) (19)
 - Each wire harness clamps

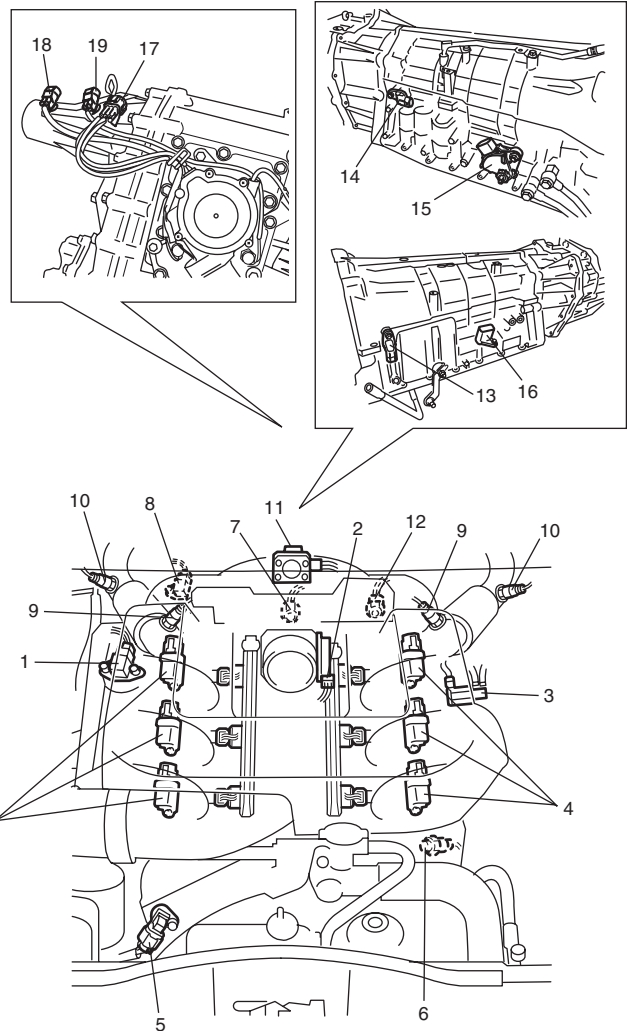

I6JB01140034-01


9) Disconnect the following hoses.

- Brake booster hose (1) from intake manifold
- EVAP canister purge hose (2) from fuel No.2 pipe.
- Vacuum tank hose (3) from intake manifold
- IMT hose from IMT valve
- Radiator inlet hose and outlet hose from each pipe.
- Heater inlet hose and outlet hose from each pipe
- Fuel feed hose (4) and return hose (5) from each pipe
- Reservoir hose from water outlet cap
- Clutch oil pipe from transmission front case (for M/T model)
- A/T fluid cooler hose from radiator (for A/T model)

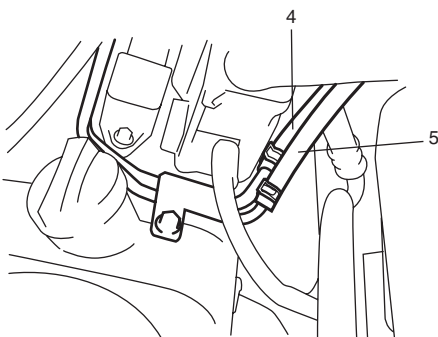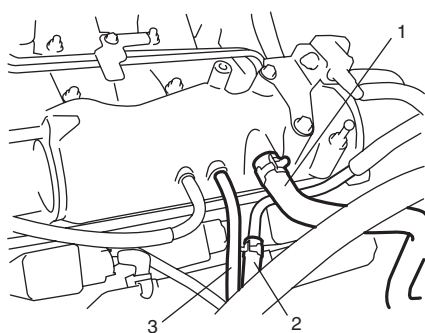


I6JB01140035-01

- 10) Disconnect high pressure pipe and suction hose from P/S pump referring to "P/S Hose / Pipe Components in Section 6C".
- 11) Disconnect suction hose and discharge hose from A/C compressor referring to "Compressor Assembly Removal and Installation in Section 7B".
- 12) For M/T model, remove shift control lever referring to "Transmission Shift Control Lever Removal and Installation in Section 5B".
- 13) For A/T model, disconnect A/T select cable from A/T referring to "Select Cable Component in Section 5A".
- 14) Remove exhaust No.1 and No.2 pipes referring to "Exhaust System Components in Section 1K".
- 15) Remove front and rear propeller shafts referring to "Propeller Shaft Removal and Installation in Section 3D".
- 16) Support front suspension frame and engine rear mounting member using jack (2).
- 17) Carry out Step 1) to 12) of "Removal" under "Front Suspension Frame, Stabilizer Bar and/or Bushings Removal and Installation in Section 2B" in order to lower engine with front suspension frame.
- 18) Remove front suspension frame mounting bolts (1).

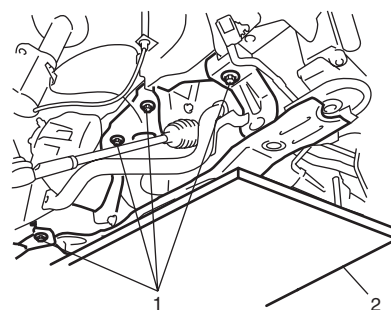

I5JB0A142018-01


19) Remove engine rear mounting member bolts (1).

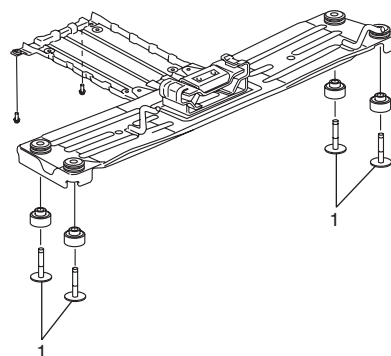

I5JB0A142019-01

1D-19 Engine Mechanical:

- 20) Before lowering engine, recheck to make sure all hoses, electric wires and cables are disconnected from engine.
- 21) Lower engine with transmission, transfer, front suspension frame and engine rear mounting member from engine compartment.
- 22) Disconnect transmission from engine referring to "Manual Transmission Assembly Dismounting and Remounting in Section 5B" or "Automatic Transmission Unit Components in Section 5A", if necessary.
- 23) Remove engine with engine front mounting bracket (1) from engine front mounting (2), if necessary.

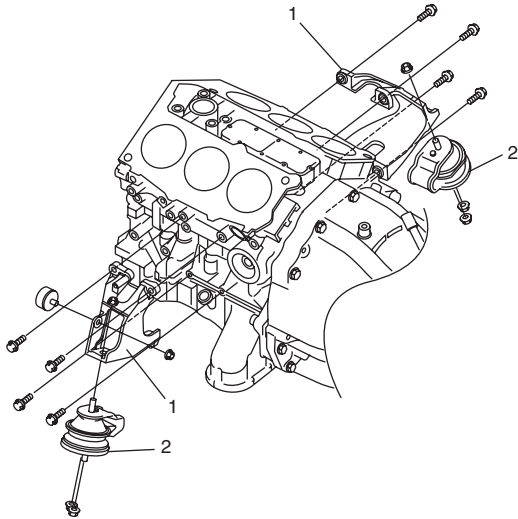

I6JB01140036-01

- 24) Remove clutch cover and clutch disk referring to "Clutch Cover, Clutch Disc and Flywheel Removal and Installation in Section 5C", if necessary.

Installation

- 1) Install clutch cover and clutch disk referring to "Clutch Cover, Clutch Disc and Flywheel Removal and Installation in Section 5C", if removed.
- 2) Install engine with engine front mounting bracket to engine front mounting. For tightening torque, referring to "Engine Mounting Components", if removed.


NOTE

Be sure to align dowel pin of engine front mounting with dowel hole of engine front mounting bracket.

- 3) Connect transmission to engine referring to "Manual Transmission Assembly Dismounting and Remounting in Section 5B" or "Automatic Transmission Unit Components in Section 5A", if removed.
- 4) Lift engine with transmission, front suspension frame and engine rear mounting member into engine compartment with jack.
- 5) Tighten engine rear mounting member bolt referring to "Engine Mounting Components".
- 6) Carry out Step 5) to 17) of "Installation" under "Front Suspension Frame, Stabilizer Bar and/or Bushings Removal and Installation in Section 2B" in order to lift engine with front suspension frame.
- 7) Remove engine jack.
- 8) Install front and rear propeller shafts referring to "Propeller Shaft Removal and Installation in Section 3D".
- 9) Install exhaust No.1 and No.2 referring to "Exhaust System Components in Section 1K".
- 10) Connect suction hose and discharge hose to A/C compressor referring to "Compressor Assembly Removal and Installation in Section 7B".
- 11) Connect high pressure pipe and suction hose from P/S pump referring to "P/S Hose / Pipe Components in Section 6C".
- 12) Return disconnected hoses, cables and electric wire.
- 13) Check all removed parts are back in place.
- 14) For A/T model, adjust select cable referring to "Select Cable Adjustment in Section 5A".
- 15) Refill cooling system with coolant referring to "Cooling System Flush and Refill in Section 1F".
- 16) Refill engine with engine oil referring to "Engine Oil and Filter Change in Section 0B".
- 17) Bleed air from clutch system referring to "Air Bleeding of Brake System in Section 4A" for air bleeding procedure.
- 18) Install battery tray and battery.
- 19) With engine OFF, turn ignition switch to ON position and check for fuel leakage.
- 20) Start engine and check coolant, oil and exhaust gas leakage at each connection.

Timing Chain Cover Components

S6JB0B1406013

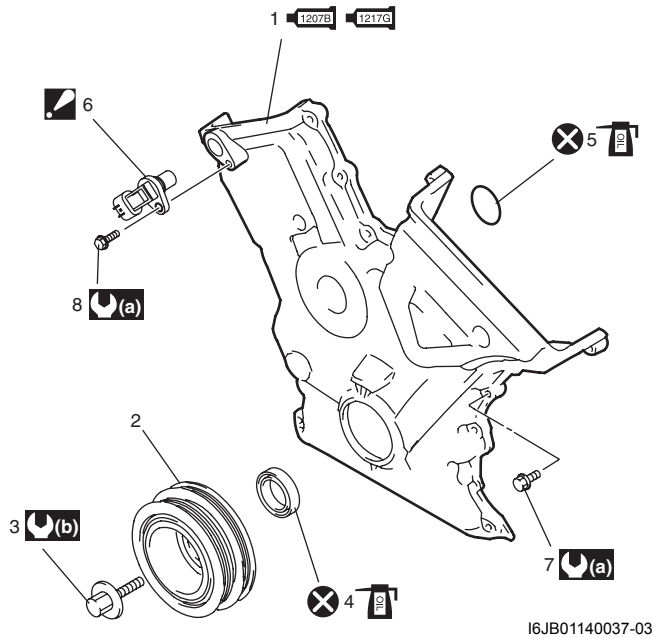

I6JB01140037-03


1. Timing chain cover 1207B : Apply sealant 99000-31140 referring to "Installation" in "Timing Chain Cover Removal and Installation". 1217G : Apply sealant 99000-31260 referring to "Installation" in "Timing Chain Cover Removal and Installation".	7. Timing chain cover bolt
2. Crankshaft pulley	8. CMP sensor bolt
3. Crankshaft pulley bolt	(a) : 11 N·m (1.1 kgf-m, 8.0 lb-ft)
4. Oil seal	(b) : 150 N·m (15.0 kgf-m, 108.5 lb-ft)
5. O-ring	X : Do not reuse.
6. CMP sensor	Oil can icon : Apply engine oil.

Engine Block Heater (If Equipped) Removal and Installation

S6JB0B1406014

Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Drain engine coolant referring to "Cooling System Draining in Section 1F".
- 3) Remove right side exhaust manifold. Refer to "Exhaust Manifold Removal and Installation in Section 1K".
- 4) Disconnect engine block heater and remove engine block heater (1).

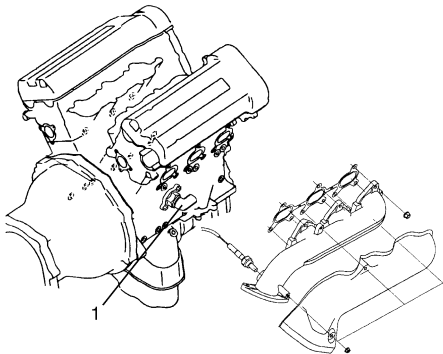


I2JA01160005-01

Installation

Reverse removal procedure for installation, noting the following.

- Install engine block heater (1) in the direction as shown in figure.

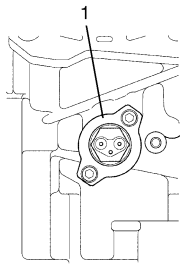


I1JA01160006-01

- Tighten engine block heater mounting bolt (1) to specified torque.

Tightening torque

Engine block heater mounting bolt (a): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

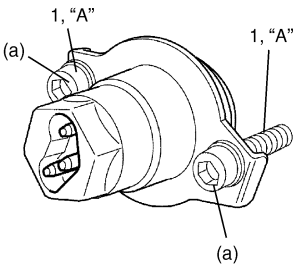

I1SQ01162002-01


1D-21 Engine Mechanical:

- Use new exhaust manifold gasket.
- Tighten exhaust manifold mounting bolts and nuts to specified torque referring to "Exhaust Manifold Removal and Installation in Section 1K".
- Refill coolant referring to "Cooling System Flush and Refill in Section 1F".
- Finally, start engine and check for engine coolant leaks and exhaust gas leakage.

Engine Block Heater (If Equipped) Inspection

S6JB0B1406015

- Check continuity between terminal "a" and "c". If there is no continuity, replace it.
- Check that there is no continuity between terminal "a" or "b" and "c". If there is continuity, replace it.
- Check continuity between terminal "c" and engine block heater body. If there is no continuity, replace it.

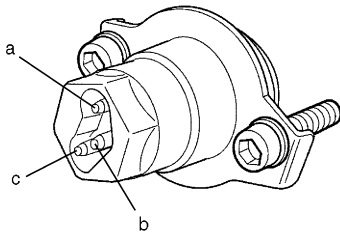

I1SQ01162003-01

Timing Chain Cover Removal and Installation

S6JB0B1406016


Removal

- 1) Remove engine assembly from vehicle. Refer to "Engine Assembly Removal and Installation".
- 2) Remove electric throttle body assembly with intake collector and intake manifold. Refer to "Intake Collector and Intake Manifold Removal and Installation" and "Electric Throttle Body Assembly Removal and Installation".
- 3) Remove cylinder head covers. Refer to "Cylinder Head Covers Removal and Installation".
- 4) Remove P/S pump and A/C compressor (if equipped) drive belt referring to "P/S Pump and A/C Compressor (If Equipped) Drive Belt Removal and Installation in Section 6C".
- 5) Remove water pump and generator drive belt. Refer to "Water Pump and Generator Drive Belt Removal and Installation in Section 1J".
- 6) Remove water pump pulley.
- 7) Remove thermostat cap. Refer to "Thermostat Removal and Installation in Section 1F".
- 8) Remove P/S pump bracket. Refer to "P/S Hose / Pipe Components in Section 6C".
- 9) Remove oil pans. Refer to "Oil Pan and Oil Pump Strainer Removal and Installation in Section 1E".

- 10) Remove crankshaft pulley bolt (1). To lock crankshaft pulley, use special tool (camshaft pulley holder) as shown in figure.

Special tool

(A): 09917-68221

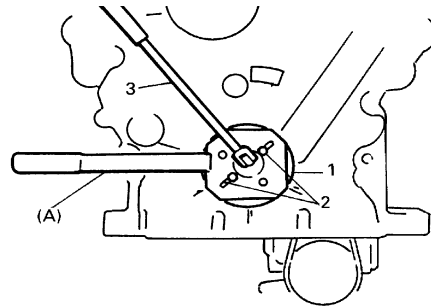

IYSQ01143031-01


2. Bolt	3. Wrench
---------	-----------

NOTE

Be sure to use the following bolt for fixing special tool to crankshaft pulley.

Bolt size: M8, P1.25 L=45 mm

 Strength: 7T



IYSQ01143032-01

- 11) Remove crankshaft pulley (1).


If it is hard to remove, use special tools (Steering wheel remover, Bearing puller attachment) as shown in figure.

If bolts of steering wheel remover are too long, replace them with those of suitable length.

Special tool

(A): 09944-36011

(B): 09926-58010

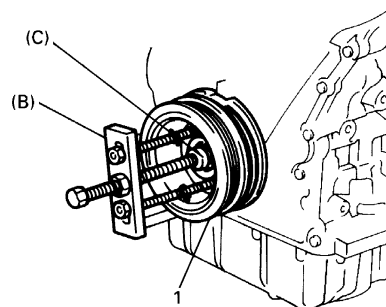

I6JB01140038-01


- 12) Remove timing chain cover.

Installation

Reverse removal sequence to install timing chain cover noting the following points.

- Clean sealing surface on timing chain cover, crankcase, cylinder block and cylinder heads. Remove oil, old sealant, and dust from sealing surface.
- Apply sealant "A" to timing chain cover sealing surface area as shown in figure.

"A": Sealant 99000-31260 (SUZUKI Bond No.1217G)

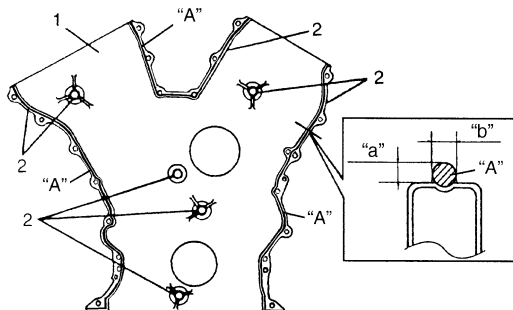


I6JB01140114-01

"a": 2 mm (0.08 in.)	1. Timing chain cover
"b": 3 mm (0.11 in.)	2. Sealant "A"

- Apply sealant "B" to mating surfaces of cylinder head and cylinder block as shown in figure.

"B": Water tight sealant 99000-31140 (SUZUKI Bond No.1207B)

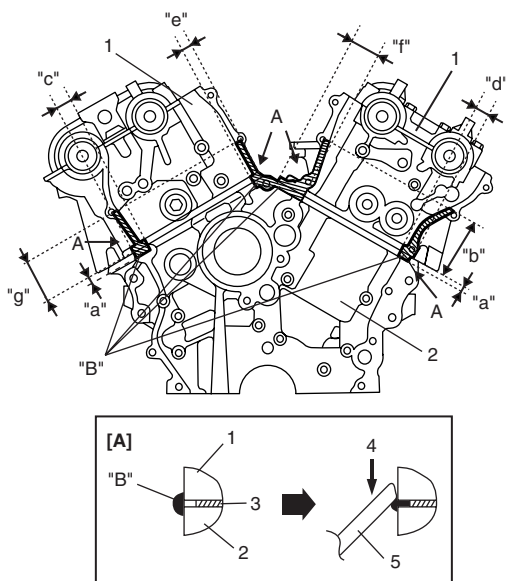


I5JA01140005-02

[A]: View A	"a": 7 mm (0.28 in.)
1. Cylinder head	"b": 67 mm (2.64 in.)
2. Cylinder block	"c": 17 mm (0.67 in.)
3. Cylinder head gasket	"d": 18 mm (0.71 in.)
4. Rub into	"e": 10 mm (0.39 in.)
5. Jig	"f": 34 mm (1.34 in.)
	"g": 50 mm (1.97 in.)

- Apply engine oil to new oil seal lip and water pump O-ring. Using special tool (bearing installer), install new oil seal (2) with its surface is flush with edge of timing chain cover (1).

Special tool

(D): 09913-75510

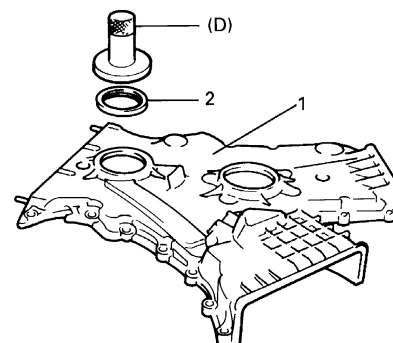

IYSQ01143037-01

- Install timing chain cover.

Tightening torque

Timing chain cover bolt: 11 N·m (1.1 kgf-m, 8.0 lb-ft)


- Install CMP sensor to timing chain cover referring to "Camshaft Position (CMP) Sensor Removal and Installation in Section 1C".
- Install crankshaft pulley (1). To lock crankshaft pulley, use special tool (camshaft pulley holder) with it at shown in figure.

Special tool

(A): 09917-68221

Tightening torque

Crankshaft pulley bolt (a): 150 N·m (15 kgf-m, 108.5 lb-ft)

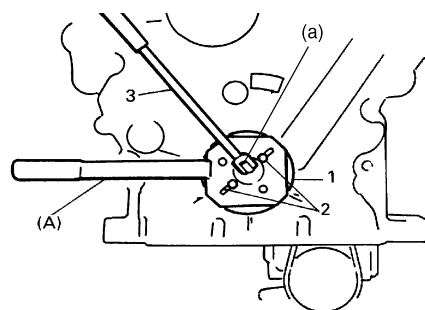

I6JB01140108-01


2. Bolt	3. Wrench
---------	-----------

NOTE

Be sure to use the following bolt for fixing special tool to crank pulley.

Bolt size: M8, P1.25 L=45 mm

 Strength: 7T



IYSQ01143032-01


Timing Chain Cover Inspection

S6JB0B1406017




 
Check oil seal lip for damage or deterioration. Replace as necessary.

LH (No.1) Bank 2nd Timing Chain and Chain Tensioner Components

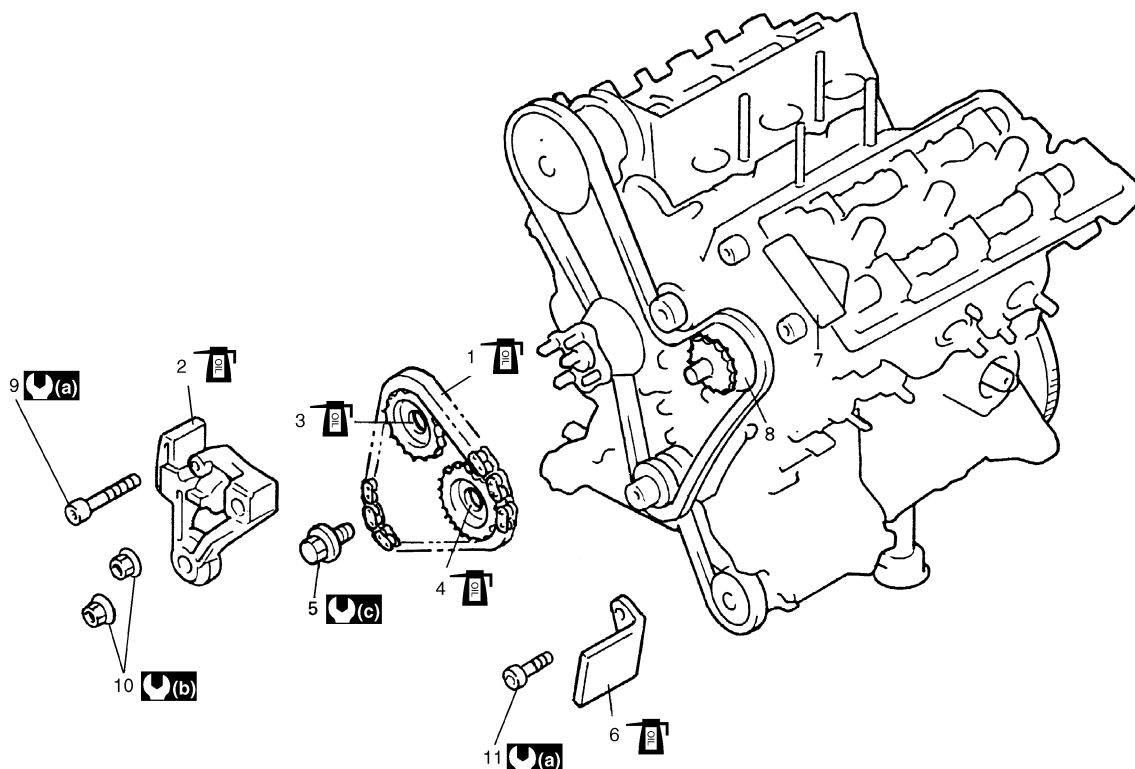S6JB0B1406018



I6JB01140039-01


1. LH (No.1) bank 2nd timing chain	6. Timing chain guide No.4	11. Timing chain guide No. 4 bolt
2. Timing chain tensioner adjuster No.3	7. Timing chain guide No.5	 : Apply engine oil to sliding surface of each point.
3. LH (No.1) bank intake camshaft sprocket	8. Idler sprocket No.2	 : 11 N·m (1.1 kgf-m, 8.0 lb-ft)
4. LH (No.1) bank exhaust camshaft sprocket	9. Timing chain tensioner adjuster No. 3 bolt	 : Tighten 45 N·m (4.5 kgf-m, 32.5 lb-ft) by the specified procedure.
5. Camshaft sprocket bolt	10. Timing chain tensioner adjuster No. 3 nut	 : Tighten 80 N·m (8.0 kgf-m, 58.0 lb-ft) by the specified procedure.

LH (No.1) Bank 2nd Timing Chain and Chain Tensioner Removal and Installation

S6JB0B1406019


Removal

- 1) Remove engine assembly from vehicle. Refer to "Engine Assembly Removal and Installation".
- 2) Remove timing chain cover. Refer to "Timing Chain Cover Removal and Installation".
- 3) Turn crankshaft to meet the following condition.
 - Key (1) on crankshaft positions as shown.
 - Mark on idler sprocket No.2 (2) points the center of crankshaft.
 - The marks on sprockets (3) match with marks on cylinder head.

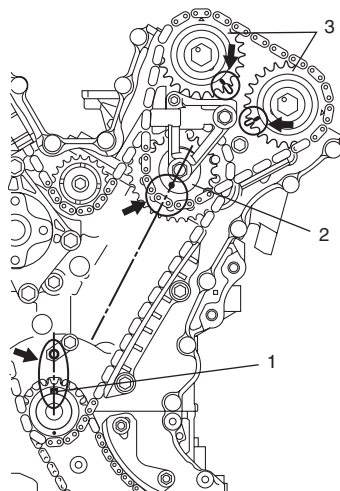


I6JB01140040-01

- 4) Remove timing chain tensioner adjuster No.3 (1). To remove it, slacken LH (No.1) bank 2nd timing chain by turning intake camshaft (2) counterclockwise a little while pushing back pad.

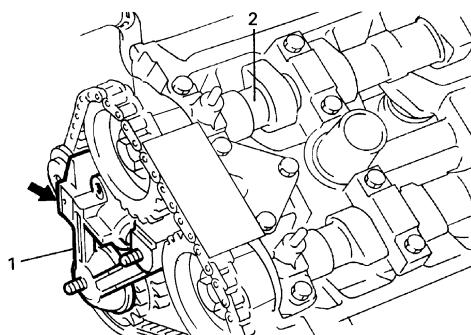

I6JB01140041-01

- 5) Remove LH (No.1) bank intake and exhaust camshaft sprocket bolts. To remove it, fit a spanner to hexagonal part (3) at the center of camshaft to hold it stationary.

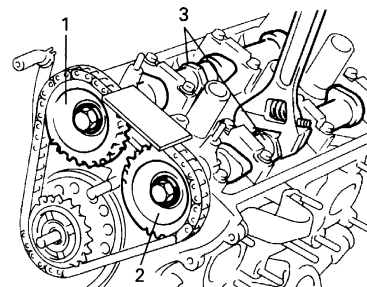


I6JB01140042-01

- | |
|---|
| 1. LH (No.1) bank intake camshaft sprocket |
| 2. LH (No.1) bank exhaust camshaft sprocket |

- 6) Remove LH (No.1) bank exhaust camshaft sprocket (1).

⚠ CAUTION

Removing sprocket (1) from camshaft (2) may cause cam to turn, resulting in damage to valve and piston. To prevent this, when removing sprocket, hold camshaft stationary by using a spanner at its hexagonal part.

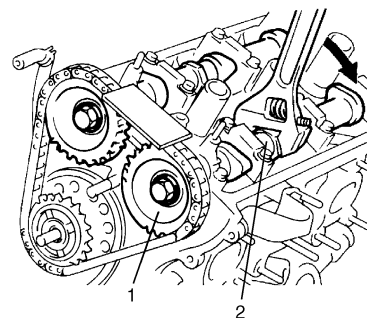


I6JB01140043-01

- 7) Remove LH (No.1) bank intake camshaft sprocket.
- 8) Remove LH (No.1) bank 2nd timing chain.

Installation


- 1) Check timing mark on crankshaft as shown in figure.

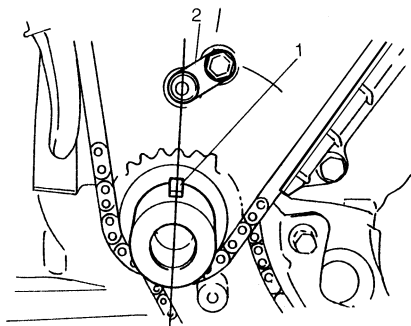

I6JB01140044-01

- | | |
|----------------------------|------------|
| 1. Crank timing pulley key | 2. Oil jet |
|----------------------------|------------|

- 2) Check timing mark on idler sprocket No.2 (1) as shown in figure.

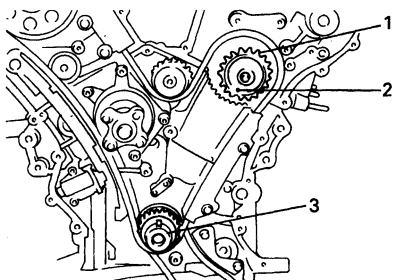


I6JB01140045-01

- | | |
|--------------------------------------|---------------|
| 2. Match mark of idler sprocket No.2 | 3. Crankshaft |
|--------------------------------------|---------------|

- 3) Install timing chain guide No.4 (1).

Tightening torque


Timing chain guide No.4 bolt (a): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

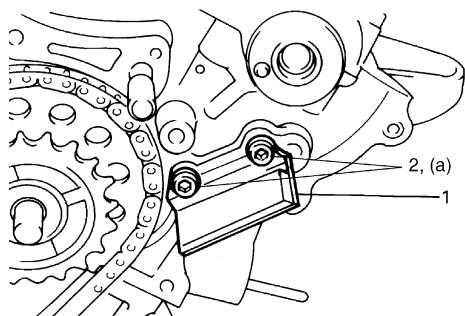

I6JB01140046-01

- | |
|----------|
| 2. Bolts |
|----------|


- 4) Check that knock-pins of intake and exhaust camshafts are aligned with match marks on cylinder head as shown in figure.

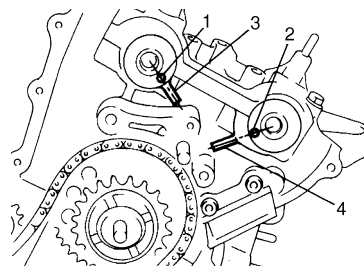

I6JB01140047-01

- | | |
|---|--|
| 1. Knock pin of LH (No.1) bank intake camshaft | 3. Match mark of intake side |
| 2. Knock pin of LH (No.1) bank exhaust camshaft | 4. Match mark of exhaust side camshaft |

- 5) Install by aligning match marks (2) on yellow plate (1) of LH (No.1) bank 2nd timing chain and idler sprocket No.2.

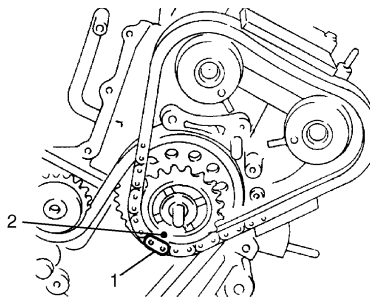

I6JB01140048-01

- 6) Install sprockets to intake and exhaust camshafts by aligning silver plate (1) of LH (No.1) bank 2nd timing chain, match marks on intake sprocket and exhaust sprocket respectively.

⚠ CAUTION


Do not turn camshaft more than necessary. If turned excessively, valve and piston may get damaged.

- 7) Install LH (No.1) bank intake and exhaust camshaft timing sprockets.

To install it, fit a spanner to hexagonal part at the center of camshaft to hold stationary.

Tightening torque


Camshaft timing sprocket bolt (b): 80 N·m (8.0 kgf-m, 58.0 lb-ft)

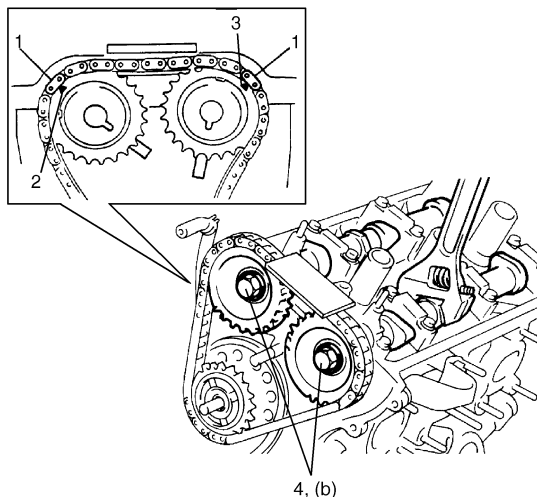

I6JB01140049-01

2. Arrow mark on intake camshaft timing sprocket
3. Arrow mark on exhaust camshaft timing sprocket
4. Sprocket bolt

- 8) With latch (2) of tensioner adjuster No.3 returned and plunger (1) pushed back into body, insert stopper (pin) (4) into set hole (3).
After inserting it, check that plunger will not come out.

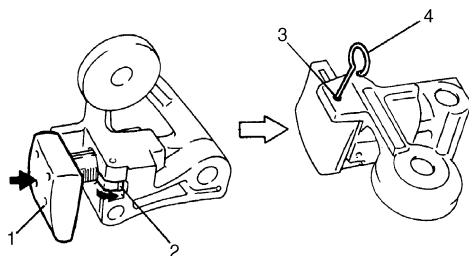

IYSQ01143054-01

- 9) Install timing chain tensioner adjuster No.3 (1) in tightening order below.

Tightening torque


Timing chain tensioner adjuster No.3 bolt (c): Tighten 11 N·m (1.1 kgf-m, 7.5 lb-ft) by the specified procedure

Timing chain tensioner adjuster No.3 nut (d): Tighten 45 N·m (4.5 kgf-m, 32.5 lb-ft) by the specified procedure

Tightening order for tensioner bolt and nuts

"1" → "2" → "3"

- 10) Pull out stopper (pin) (2) from set hole.

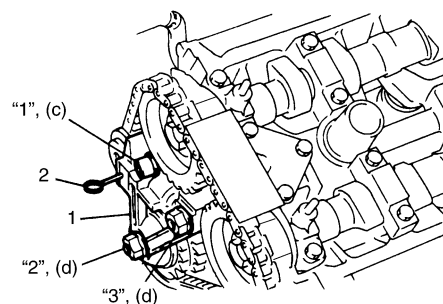


I6JB01140050-01

1D-27 Engine Mechanical:

11) Turn crankshaft two rotations clockwise then align timing pulley key (1) on crankshaft and oil jet (2) on cylinder block as shown in figure.

Check each other timing marks that align them shown in figure.

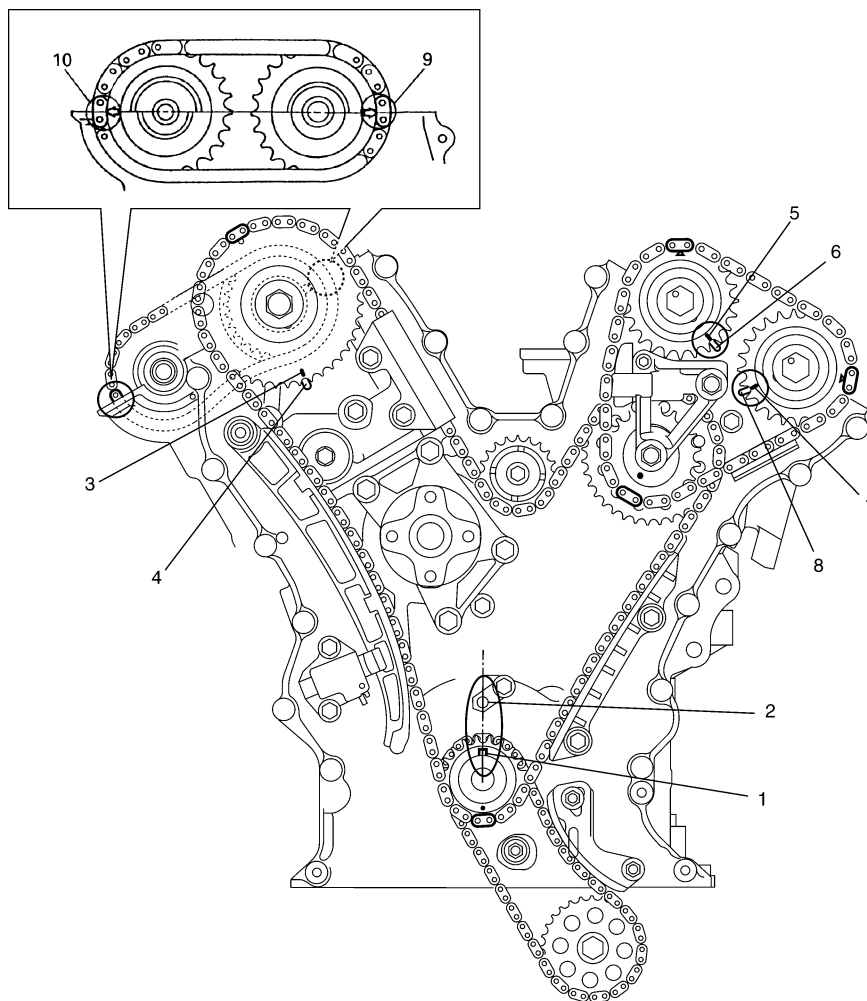

I6JB01140051-01

3. Timing mark of RH (No.2) bank 1st timing chain sprocket	6. Timing mark of LH (No.1) bank 2nd timing chain	9. Timing mark of RH (No.2) bank 2nd timing chain intake sprocket
4. Timing mark of RH (No.2) bank 1st timing chain	7. Timing mark of LH (No.1) bank 2nd timing chain exhaust sprocket	10. Timing mark of RH (No.2) bank 2nd timing chain exhaust sprocket
5. Timing mark of LH (No.1) bank 2nd timing chain intake sprocket	8. Timing mark of LH (No.1) bank 2nd timing chain	

12) Apply oil to timing chains, tensioner adjusters sprockets and guides.

13) Install timing chain cover referring to "Timing Chain Cover Removal and Installation".

14) Install oil pans referring to "Oil Pan and Oil Pump Strainer Removal and Installation in Section 1E".

15) Install cylinder head covers referring to "Cylinder Head Covers Removal and Installation".

16) Install intake manifold, intake collector and electric throttle body assembly referring to "Intake Collector and Intake Manifold Removal and Installation" and "Electric Throttle Body Assembly Removal and Installation".


17) Install engine assembly to vehicle referring to "Engine Assembly Removal and Installation".

LH (No.1) Bank 2nd Timing Chain and Chain Tensioner Inspection

S6JB0B1406020

Timing Chain Guide No.4 and No.5

Check shoe (3) for wear or damage.

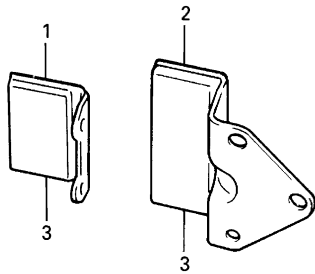


IYSQ01143043-01

1. Timing chain guide No.4	2. Timing chain guide No.5
----------------------------	----------------------------

Camshaft Sprocket


Check teeth of sprocket for wear or damage.

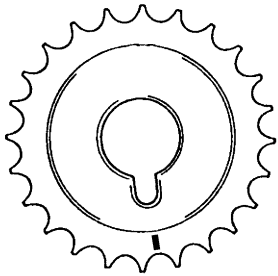

I6JB01140052-01

Timing Chain

 
Check timing chain for wear or damage.



IYSQ01153029-01


Tensioner Adjuster No.3

- Check shoe (1) for wear or damage.

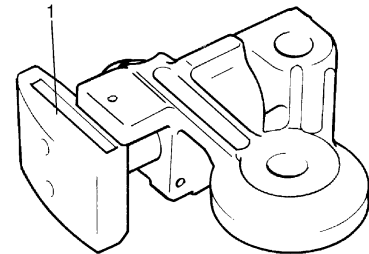

IYSQ01143046-01


- Check that latch (1) and tooth surface (2) are free from damage and latch functions properly.

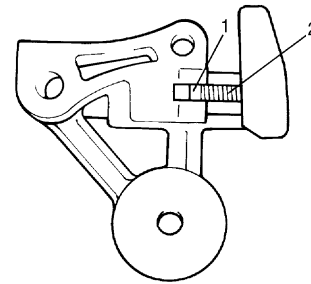

IYSQ01143047-01

1st Timing Chain and Chain Tensioner Components

S6JB0B1406021

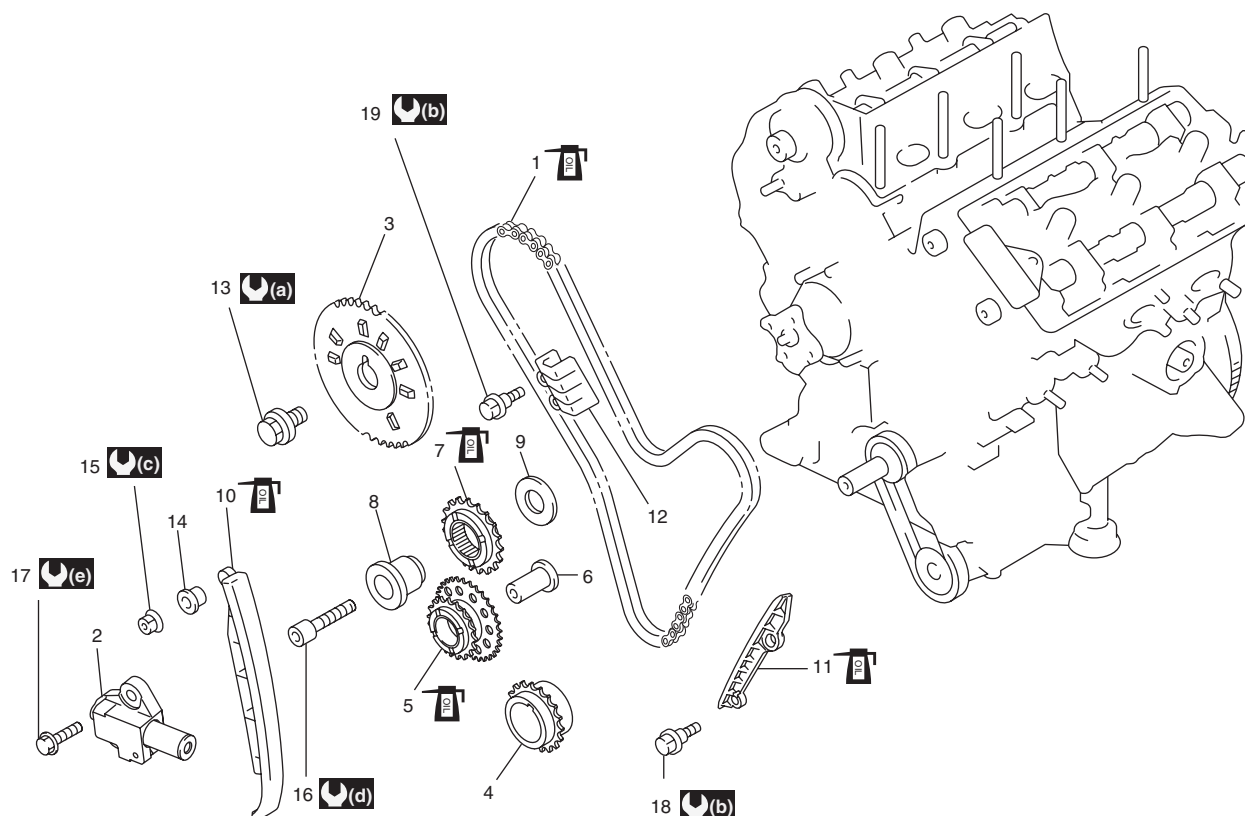

I6JB01140053-01


1. 1st timing chain	10. Timing chain tensioner	19. Timing chain guide No.2 bolt
2. Timing chain tensioner adjuster No.1	11. Timing chain guide No.1	: 80 N·m (8.0 kgf-m, 58.0 lb-ft)
3. RH (No.2) bank 1st timing chain intake camshaft sprocket	12. Timing chain guide No.2	: 9 N·m (0.9 kgf-m, 6.5 lb-ft)
4. 1st timing chain crankshaft sprocket	13. Camshaft sprocket bolt	: 25 N·m (2.5 kgf-m, 18.0 lb-ft)
5. Idler sprocket No.2	14. Spacer	: 55 N·m (5.5 kgf-m, 40.0 lb-ft)
6. Shaft	15. Timing chain tensioner nut	: 11 N·m (1.1 kgf-m, 8.0 lb-ft)
7. Idler sprocket No.1	16. Idler sprocket No.1 bolt	: Apply engine oil to sliding parts.
8. Shaft	17. Timing tensioner adjuster No.1 bolt	
9. Washer	18. Timing chain guide No.1 bolt	

1st Timing Chain and Chain Tensioner Removal and Installation


S6JB0B1406022

Removal

- 1) Remove engine assembly from vehicle. Refer to "Engine Assembly Removal and Installation".
- 2) Remove timing chain cover. Refer to "Timing Chain Cover Removal and Installation".
- 3) For reinstallation of timing chain, align 8 timing marks as shown in figure by turning crankshaft.

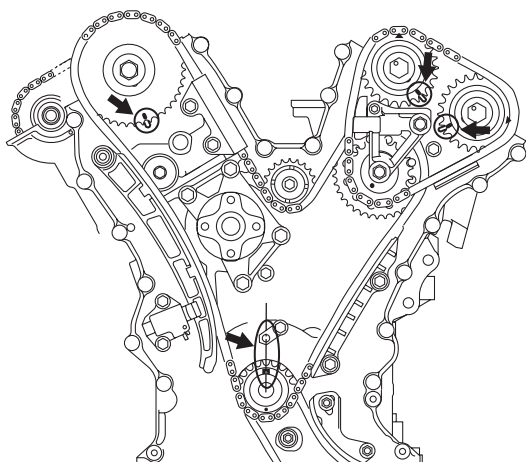


- 4) Remove LH (No.1) bank 2nd timing chain. Refer to "LH (No.1) Bank 2nd Timing Chain and Chain Tensioner Removal and Installation".
- 5) Remove the following parts referring to "1st Timing Chain and Chain Tensioner Components".
 - Timing chain guide No.1 and No.2.
 - Timing chain tensioner.
 - Timing chain tensioner adjuster.
 - Idler sprocket No.1 and 1st timing chain.
 - Idler sprocket No.2 and sprocket shaft.
- 6) Remove RH (No.2) bank 1st timing chain intake camshaft sprocket bolt. To remove it, fit a spanner to hexagonal part (3) at the center of camshaft (2) to hold it stationary.
- 7) Remove RH (No.2) bank 1st timing chain intake camshaft sprocket (1).

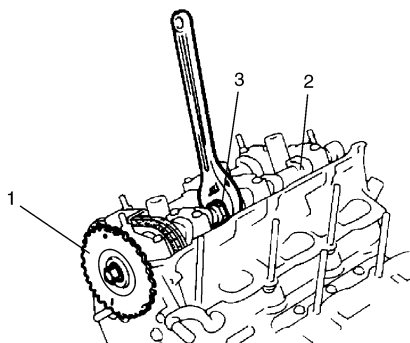

- 8) Remove 1st timing chain crankshaft sprocket.


Installation

- 1) Check timing pulley key (1) of crankshaft is on specified position as shown in figure.
- 2) Install 1st timing chain crankshaft sprocket (2) to crankshaft as shown in figure.

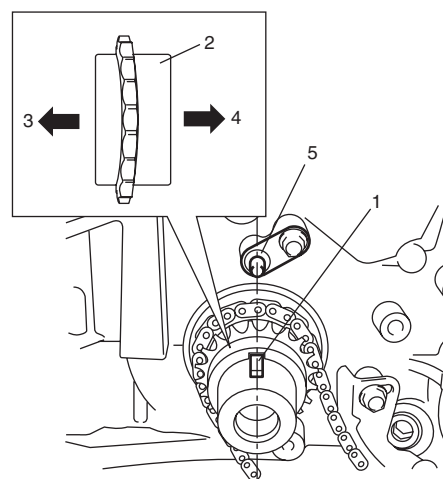

3. Crankshaft pulley side	4. Oil pump sprocket side	5. Oil jet
---------------------------	---------------------------	------------

- 3) Check timing mark on RH (No.2) bank intake camshaft as shown in figure.

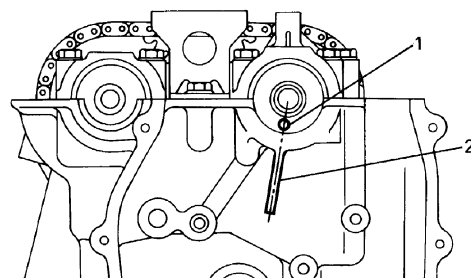


1. Knock pin of intake camshaft	2. Match mark
---------------------------------	---------------

- 4) Install RH (No.2) bank 1st timing chain intake camshaft sprocket (1) noting the following points.
- The sprocket should be set in such way that its timing marks (4) can be seen.
 - Camshaft (2) should be held stationary by using a spanner at its hexagonal parts (3) as shown in figure.

Tightening torque

RH (No.2) bank 1st timing chain intake camshaft sprocket bolt (a): 80 N·m (8.0 kgf-m, 58.0 lb-ft)

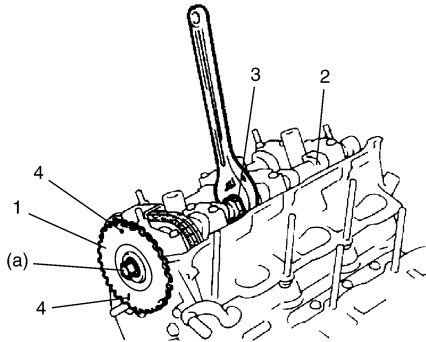


I6JB01140057-01

- 5) Install timing chain tensioner (1) as shown in figure.

Tightening torque

Timing chain tensioner nut (b): 25 N·m (2.5 kgf-m, 18.0 lb-ft)

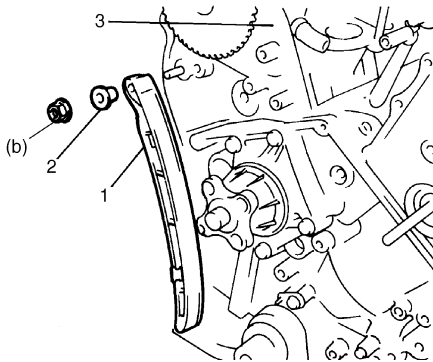


I6JB01140058-01

2. Spacer

3. RH (No.2) bank cylinder head

- 6) Install 1st timing chain by aligning match marks (2) on RH silver plate (1) of 1st timing chain and RH (No.2) bank 1st timing chain intake camshaft sprocket (3).

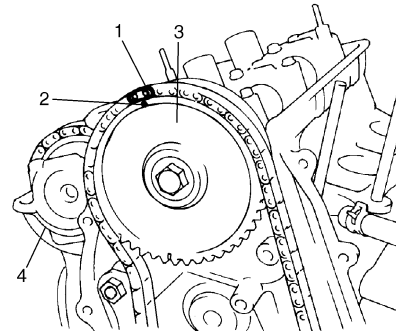


I6JB01140059-01

4. RH (No.2) bank cylinder head

- 7) Apply oil to bush of idler sprocket No.2.

- 8) Install idler sprocket No.2 and sprocket shaft.

- 9) Install idler sprocket No.2 by aligning match marks (2) on LH silver plate (1) of 1st timing chain.

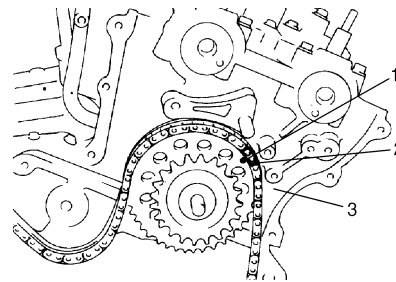

IYSQ01143073-01


3. LH (No.1) bank cylinder head

- 10) Install crankshaft sprocket by aligning match marks (2) on yellow plate (1) of 1st timing chain and crankshaft timing sprocket.

To install it, fit a spanner to hexagonal part at the center of RH (No.2) bank intake camshaft to turn a little.

⚠ CAUTION

Do not turn camshaft more than necessary. If turned excessively, valve and piston may get damaged.

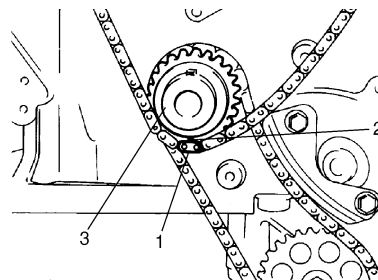

IYSQ01143074-01


3. Crankshaft

11) Apply oil to bearing of idler sprocket No.1.

12) Install idler sprocket No.1.

Tightening torque


Idler sprocket No.1 bolt (c): 55 N·m (5.5 kgf-m, 40.0 lb-ft)

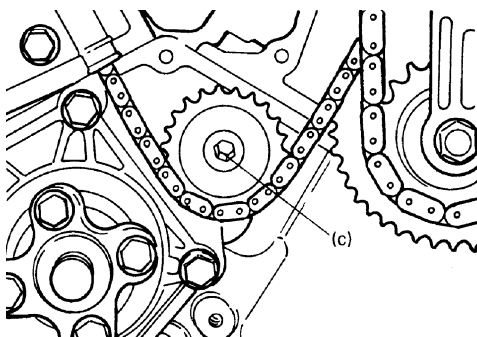

IYSQ01143075-01

13) With latch of tensioner adjuster No.1 returned and plunger (1) pushed back into body, insert stopper (3) into latch (2) and body.

After inserting it, check to make sure that plunger (1) will not come out.

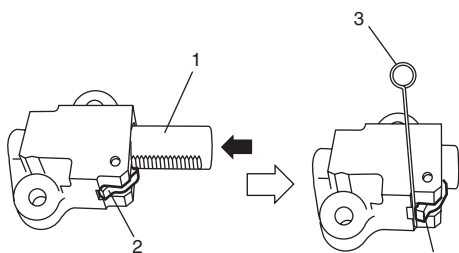


I6JB01140060-01

14) Install timing chain tensioner adjuster No.1 (1).

Tightening torque

Timing chain tensioner adjuster No.1 bolt (a): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

15) Pull out stopper (3) from adjuster No.1 (1).

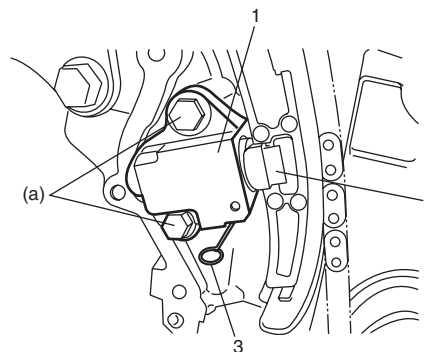


I6JB01140061-01

2. Timing chain tensioner

16) Install timing chain guide No.1 (2) and No.2 (1).

Tightening torque

Timing chain guide No.1 and No.2 bolt (a): 9 N·m (0.9 kgf-m, 6.5 lb-ft)

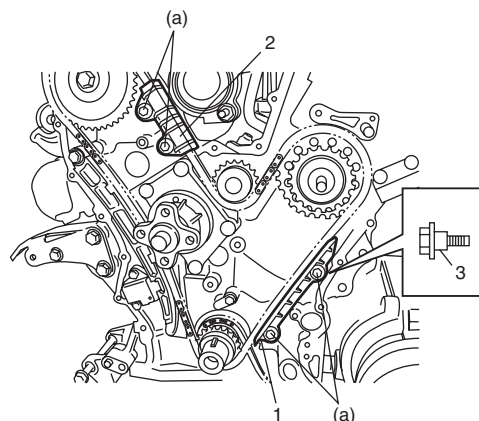


I6JB01140113-01

3. Guide bolt

1D-33 Engine Mechanical:

17) Check each aligned timing marks as shown in figure.

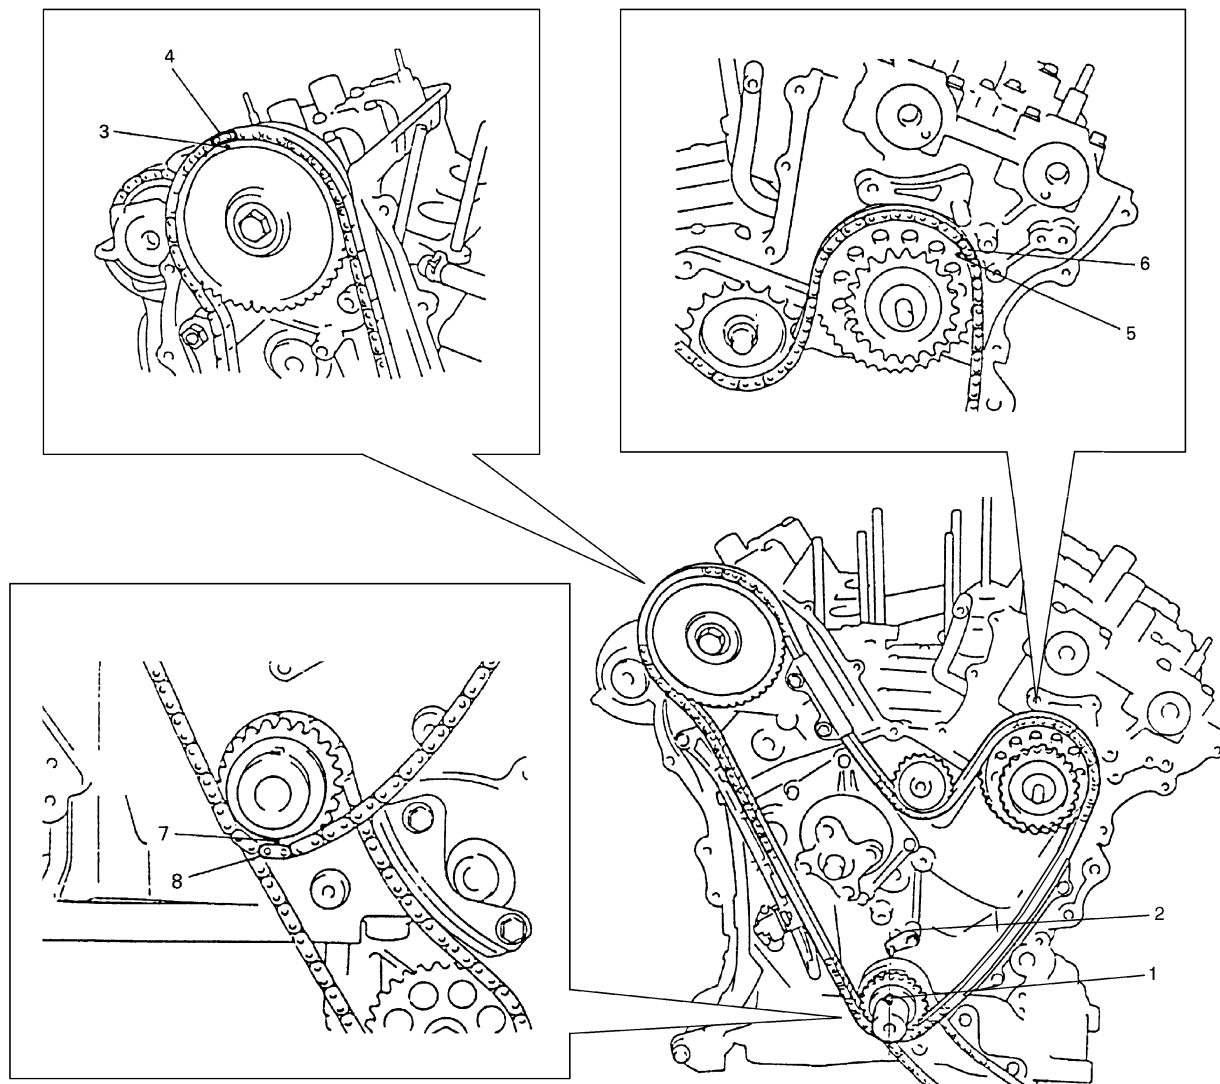

I6JB01140062-01

1. Crank timing pulley key	4. Silver plate (LH) of 1st timing chain	7. Match mark of crankshaft timing sprocket
2. Oil jet	5. Match mark of idler sprocket No.2	8. Yellow plate of 1st timing chain
3. Match mark of RH (No.2) bank 1st timing chain sprocket	6. Silver plate (LH) of 1st timing chain	

18) Install LH (No.1) bank 2nd timing chain. Refer to "LH (No.1) Bank 2nd Timing Chain and Chain Tensioner Removal and Installation".

19) Install timing chain cover. Refer to "Timing Chain Cover Removal and Installation".

20) Install oil pans referring to "Oil Pan and Oil Pump Strainer Removal and Installation in Section 1E".

21) Install cylinder head covers referring to "Cylinder Head Covers Removal and Installation".

22) Install intake manifold, intake collector and electric throttle body assembly referring to "Intake Collector and Intake Manifold Removal and Installation" and "Electric Throttle Body Assembly Removal and Installation".


23) Install engine assembly to vehicle referring to "Engine Assembly Removal and Installation".

1st Timing Chain and Chain Tensioner Inspection

S6JB0B1406023

Timing Chain Guides No.1 and No.2

Check shoe for excessive wear or damage.
If any malfunction is found, replace it.

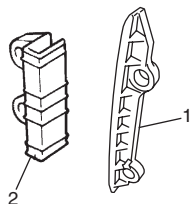

I6JB01140063-01

1. Timing chain guide No.1	2. Timing chain guide No.2
----------------------------	----------------------------

Timing Chain Tensioner


Check shoe (1) for wear or damage.
If any malfunction is found, replace it.



IYSQ01143061-01

1st Timing Chain Crankshaft Sprocket


Check teeth of sprocket for wear or damage.
If any malfunction is found, replace it.

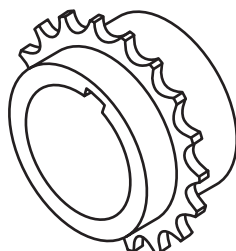

I6JB01140064-01

RH (No.2) Bank 1st Timing Chain Intake Camshaft Sprocket


Check teeth of sprocket for wear or damage.
If any malfunction is found, replace it.

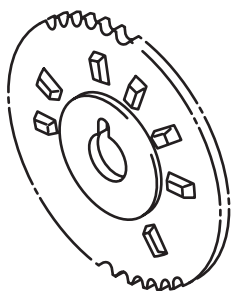

I6JB01140065-01

Idler Sprocket No.1

Check teeth of sprocket for wear or damage.
If any malfunction is found, replace it.

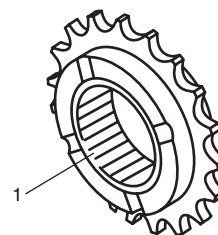


1. Bearing

I6JB01140066-01

Idler Sprocket No.2

Check teeth of sprocket for wear or damage.
If any malfunction is found, replace it.

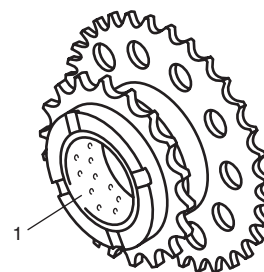


1. Bush

I6JB01140067-01

1st Timing Chain

 
Check timing chain for wear or damage.
If any malfunction is found, replace it.



IYSQ01143066-01

Timing Chain Tensioner Adjuster No.1


Check that latch (1) and tooth surface (2) are free from damage and latch functions properly.
If any malfunction is found, replace it.

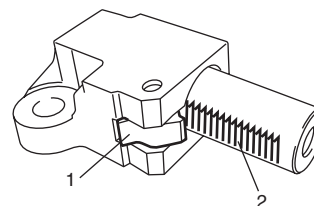



I6JB01140068-01

RH (No.2) Bank 2nd Timing Chain and Chain Tensioner Components

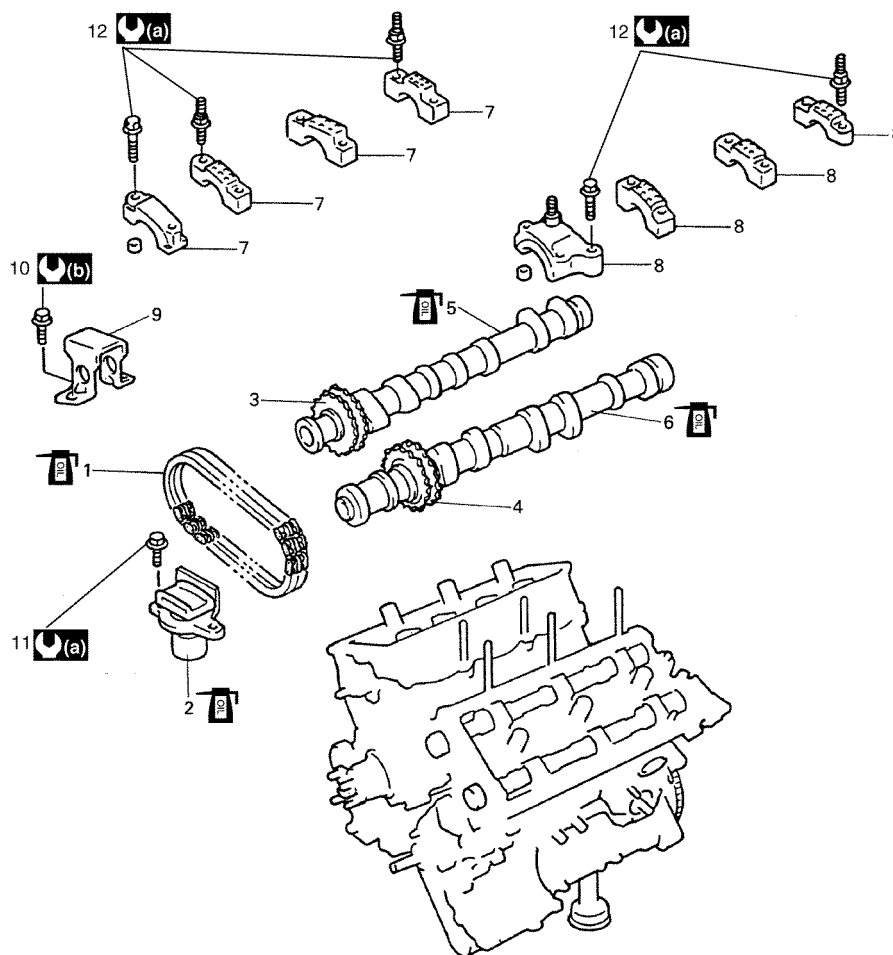S6JB0B1406024




I6JB01140069-01

1. RH (No.2) bank 2nd timing chain	6. RH (No.2) bank intake camshaft	11. Timing chain tensioner adjuster No.2 bolt
2. Timing chain tensioner adjuster No.2	7. RH (No.2) bank exhaust camshaft housing	12. Camshaft housing bolt
3. RH (No.2) bank exhaust camshaft sprocket	8. RH (No.2) bank intake camshaft housing	 : Apply engine oil to sliding surface of each part.
4. RH (No.2) bank intake camshaft sprocket	9. Timing chain guide No.3	 (a) : Tighten 11 N·m (1.1 kgf-m, 8.0 lb-ft) by the specified procedure.
5. RH (No.2) bank exhaust camshaft	10. Timing chain guide No.3 bolt	

RH (No.2) Bank 2nd Timing Chain and Chain Tensioner Removal and Installation


S6JB0B1406025

- 1) Remove engine assembly from vehicle. Refer to "Engine Assembly Removal and Installation".
- 2) Remove timing chain cover. Refer to "Timing Chain Cover Removal and Installation".
- 3) For reinstallation of timing chain, align 12 timing marks as shown in figure by turning crankshaft.

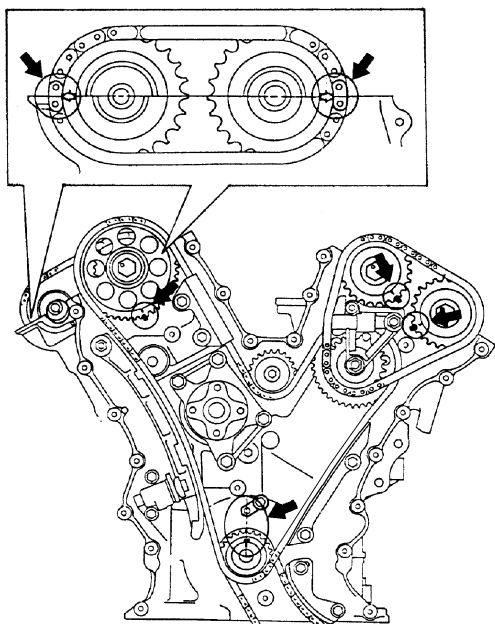

I6JB01140070-01

- 4) Remove LH (No.1) bank 2nd timing chain. Refer to "LH (No.1) Bank 2nd Timing Chain and Chain Tensioner Removal and Installation".
- 5) Remove 1st timing chain. Refer to "1st Timing Chain and Chain Tensioner Removal and Installation".
- 6) Remove timing chain guide No.3 referring to "RH (No.2) Bank 2nd Timing Chain and Chain Tensioner Components".
- 7) Loosen camshaft housing bolts in such order ("1" – "17") as indicated in figure and remove them.
- 8) Remove camshaft housings.

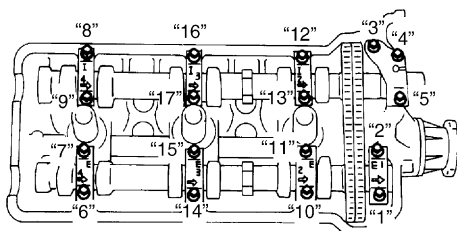


I6JB01140071-01

- 9) Remove RH (No.2) bank intake camshaft, RH (No.2) bank exhaust camshaft, and RH (No.2) bank 2nd timing chain as a set referring to "RH (No.2) Bank 2nd Timing Chain and Chain Tensioner Components".
- 10) Remove timing chain tensioner adjuster No.2 referring to "RH (No.2) Bank 2nd Timing Chain and Chain Tensioner Components".

Installation

- 1) Check timing mark on crankshaft as shown in figure.

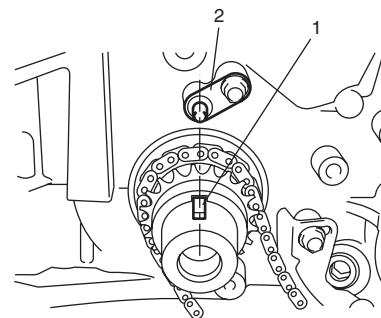


I6JB01140072-01

- | | |
|----------------------------|------------|
| 1. Crank timing pulley key | 2. Oil jet |
|----------------------------|------------|

- 2) Apply oil to timing chain tensioner adjuster No.2 (1).
- 3) Install timing chain tensioner adjuster No.2 (1).

Tightening torque


Timing chain tensioner adjuster No.2 bolt (a): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

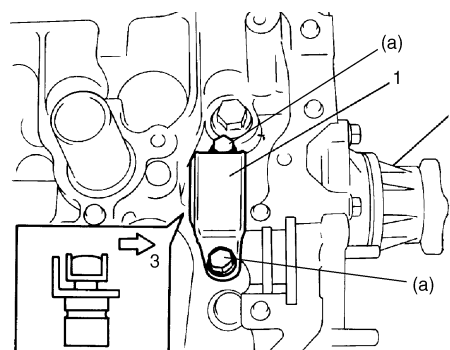

I6JB01140073-01

- | | |
|---------------|----------------------|
| 2. Water pump | 3. Engine front side |
|---------------|----------------------|


- 4) Apply oil to sliding surface of each camshafts and camshaft journals.
- 5) Install RH (No.2) bank 2nd timing chain by aligning match marks on yellow plates (1) of RH (No.2) bank 2nd timing chain, RH (No.2) bank 2nd timing chain intake camshaft sprocket and RH (No.2) bank 2nd timing chain exhaust camshaft sprocket as shown in figure.

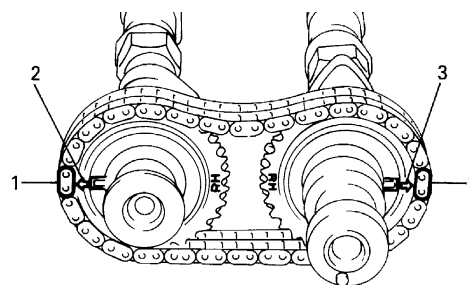

IYSQ01143088-01

- | |
|--|
| 2. Match mark of RH (No.2) bank 2nd timing chain exhaust camshaft sprocket |
| 3. Match mark of RH (No.2) bank 2nd timing chain intake camshaft sprocket |

- 6) Install camshaft housing pins (3) as shown in figure.

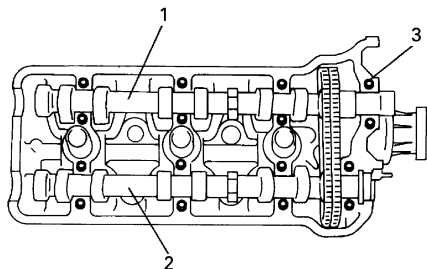


I6JB01140074-01

- | | |
|-----------------------------------|------------------------------------|
| 1. RH (No.2) bank intake camshaft | 2. RH (No.2) bank exhaust camshaft |
|-----------------------------------|------------------------------------|

- 7) Check position of camshaft housings.

Embossed marks are provided on each camshaft housing, indicating position and direction for installation. Install housings as indicated by these marks.

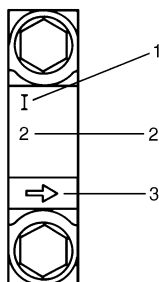


IYSQ01143090-01

- | | |
|------------------------------------|----------------------|
| 1. I: Intake side, E: Exhaust side | 3. Timing chain side |
| 2. Position from timing chain side | |

- 8) After applying oil to housing bolts, tighten them temporarily first.
Then tighten them by following sequence ("1" – "17") as indicated in figure. Tighten a little at a time and evenly among bolts and repeat tightening sequence 2 or 3 times before they are tightened to specified torque below.

Tightening torque

Camshaft housing bolt: 11 N·m (1.1 kgf-m, 8.0 lb-ft) by the specified procedure

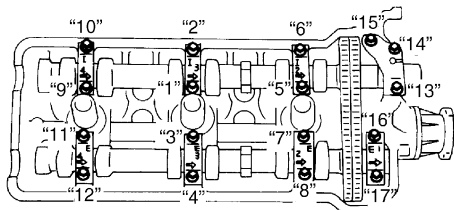


I6JB01140075-01

- 9) Install timing chain guide No.3 (1).

Tightening torque

Timing chain guide No.3 bolt (c): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

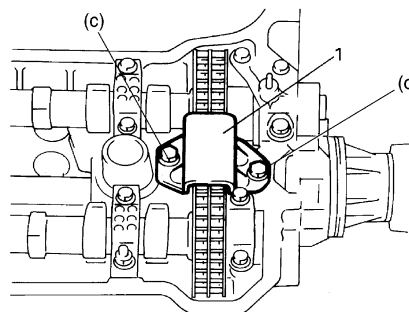

I6JB01140076-01


- 10) Install 1st timing chain. Refer to "1st Timing Chain and Chain Tensioner Removal and Installation".
- 11) Install LH (No.1) bank 2nd timing chain. Refer to "LH (No.1) Bank 2nd Timing Chain and Chain Tensioner Removal and Installation".
- 12) Install timing chain cover. Refer to "Timing Chain Cover Removal and Installation".
- 13) Install oil pans referring to "Oil Pan and Oil Pump Strainer Removal and Installation in Section 1E".
- 14) Install cylinder head covers referring to "Cylinder Head Covers Removal and Installation".
- 15) Install intake manifold, intake collector and electric throttle body assembly referring to "Intake Collector and Intake Manifold Removal and Installation" and "Electric Throttle Body Assembly Removal and Installation".
- 16) Install engine assembly to vehicle referring to "Engine Assembly Removal and Installation".

RH (No.2) Bank 2nd Timing Chain and Chain Tensioner Inspection

S6JB0B1406026

Timing Chain Guide No.3


Check shoe (1) for excessive wear or damage.
If any malfunction is found, replace it.

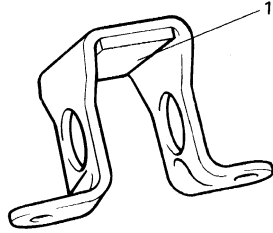

IYSQ01143083-01

RH (No.2) Bank 2nd Timing Chain Sprockets


Check teeth of sprocket for wear or damage.

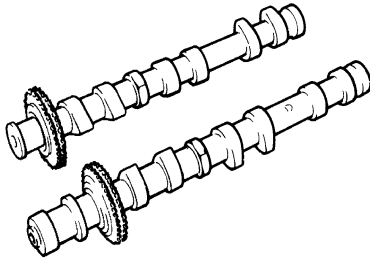

IYSQ01143084-01

RH (No.2) Bank 2nd Timing Chain

 
Check timing chain for wear or damage.



IYSQ01143085-01

Timing Chain Tensioner Adjuster No.2


- Check shoe (1) for wear or damage.
- Check that plunger slides smoothly.

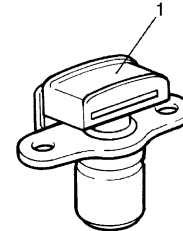

IYSQ01143086-01




Camshafts, Tappets and Shims Components

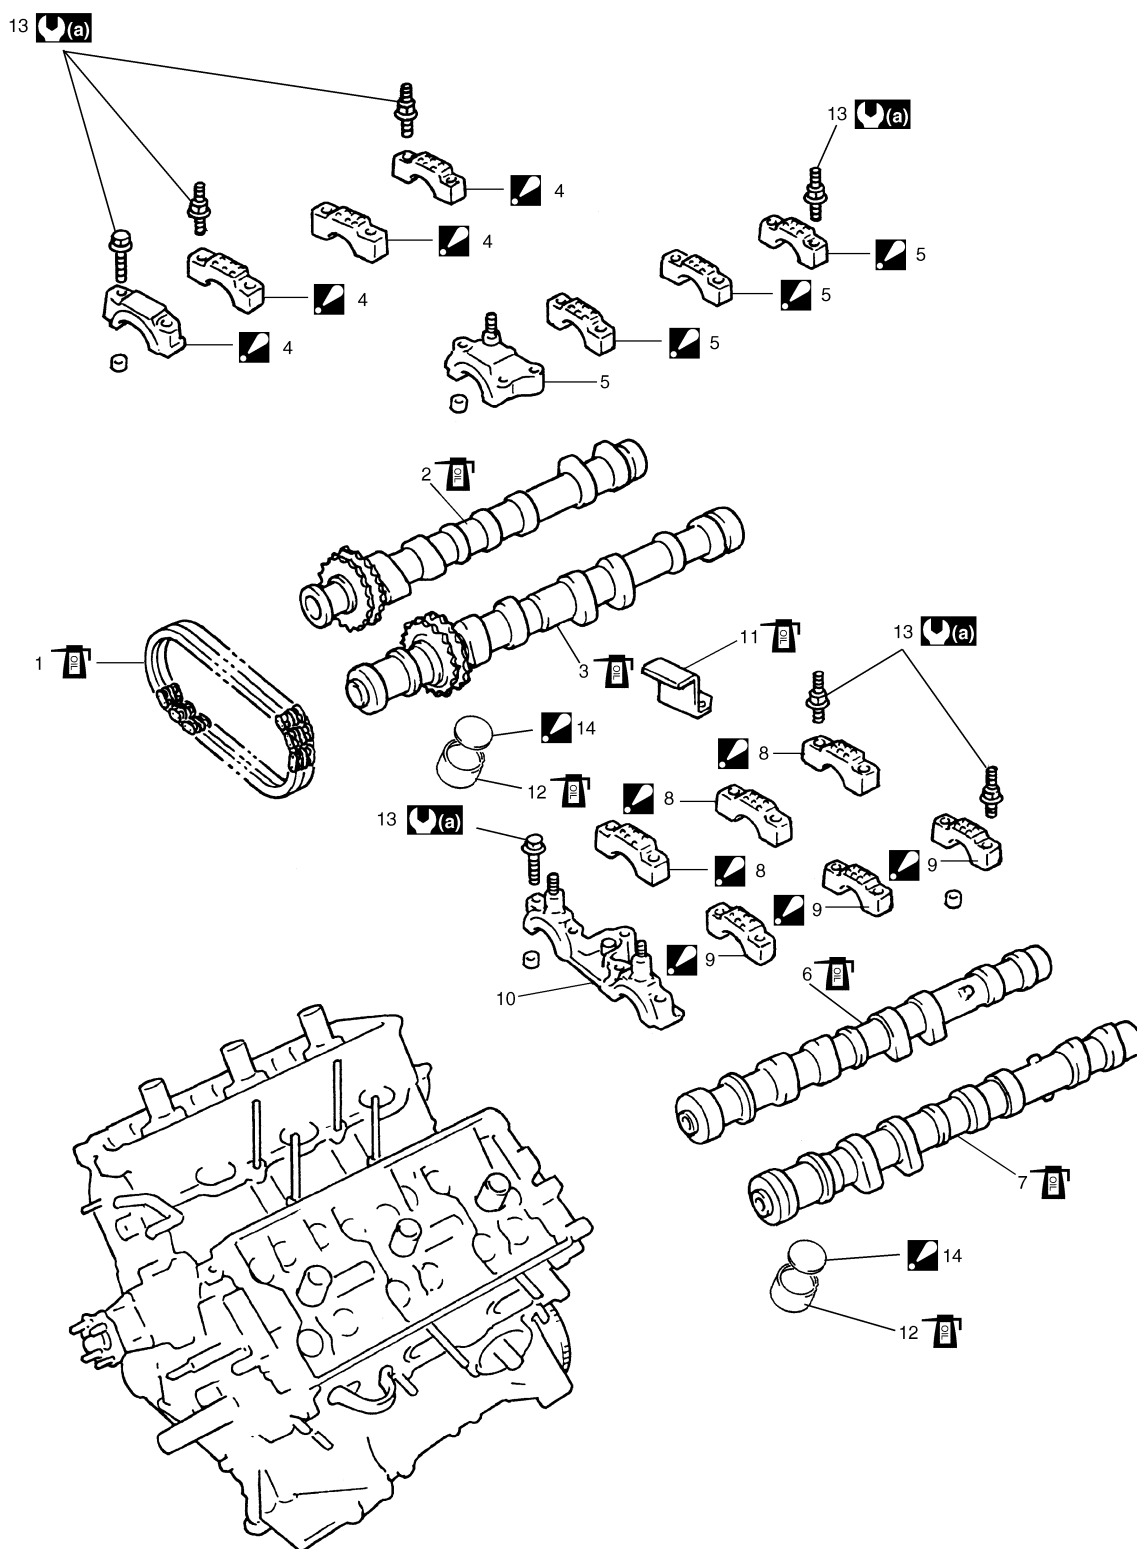S6JB0B1406027



I6JB01140077-01

1. RH (No.2) bank 2nd timing chain	7. LH (No.1) bank exhaust camshaft	13. Camshaft housing bolt
2. RH (No.2) bank exhaust camshaft	8. LH (No.1) bank intake camshaft housing : Point arrow mark on cap to camshaft sprocket side.	14. Shim : Direct shim No. side toward tappet.
3. RH (No.2) bank intake camshaft	9. LH (No.1) bank exhaust camshaft housing : Point arrow mark on cap to camshaft sprocket side.	(a) : Tighten 11 Nm (1.1 kgf-m, 8.0 lb-ft) by the specified procedure.


 4. RH (No.2) bank exhaust camshaft housing : Point arrow mark on cap to camshaft sprocket side.	10. LH (No.1) bank camshaft housing	 : Apply engine oil to sliding surface of each part.
 5. RH (No.2) bank intake camshaft housing : Point arrow mark on cap to camshaft sprocket side.	11. Timing chain guide No.5	
6. LH (No.1) bank intake camshaft	12. Tappet	

Camshafts, Tappets and Shims Removal and Installation

S6JB0B1406028

Removal

- 1) Remove engine assembly from vehicle referring to “Engine Assembly Removal and Installation”.
- 2) Remove timing chain cover. Refer to “Timing Chain Cover Removal and Installation”.
- 3) Remove LH (No.1) bank 2nd timing chain. Refer to “LH (No.1) Bank 2nd Timing Chain and Chain Tensioner Removal and Installation”.
- 4) Remove 1st timing chain. Refer to “1st Timing Chain and Chain Tensioner Removal and Installation”.
- 5) Remove RH (No.2) bank camshafts. Refer to “RH (No.2) Bank 2nd Timing Chain and Chain Tensioner Removal and Installation”.
- 6) Loosen LH (No.1) bank camshaft housing bolts in such order (“1” – “17”) as indicated in figure and remove them.

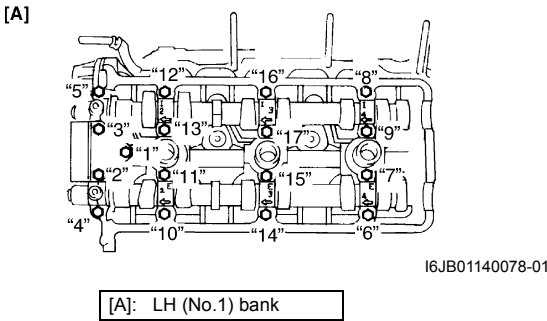


- 7) Remove LH (No.1) bank camshaft housings.
- 8) Remove LH (No.1) bank camshafts.
- 9) Remove tappets with shims.

Installation


- 1) Apply engine oil around tappet (1), and then install tappets with shims to cylinder head.

NOTE

When installing shim, make sure to direct shim No. side toward tappet.

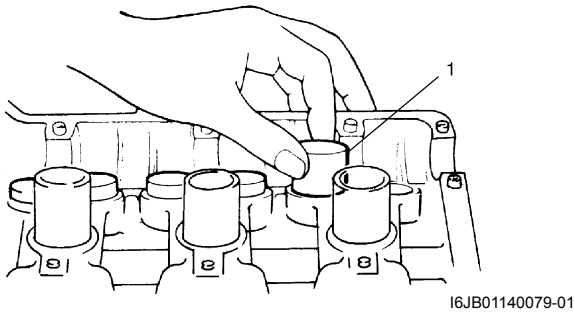


- 2) Check timing pulley key (1) on crankshaft as shown in figure.

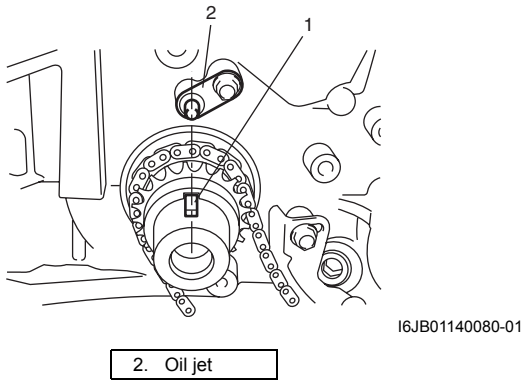


1D-41 Engine Mechanical:

- 3) Install RH (No.2) bank camshafts referring to "RH (No.2) Bank 2nd Timing Chain and Chain Tensioner Removal and Installation".
- 4) Install LH (No.1) bank camshafts.
Apply oil to sliding surface of each camshaft and camshaft journal then install them by aligning match marks (4) on cylinder head (3) and LH (No.1) bank camshafts as shown in figure.

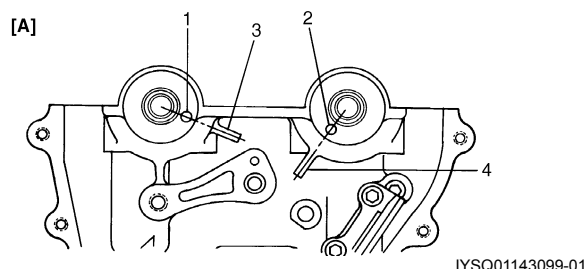


[A]: LH (No.1) bank	2. LH (No.1) bank exhaust camshaft
1. LH (No.1) bank intake camshaft	

- 5) Install LH (No.1) bank camshaft housing pins (3) as shown in figure.

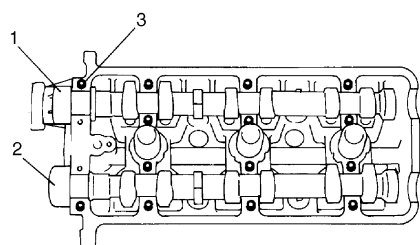

1. LH (No.1) bank intake camshaft	2. LH (No.1) bank exhaust camshaft
-----------------------------------	------------------------------------

- 6) Check position of LH (No.1) bank camshaft housings.
Embossed marks are provided on each camshaft housing, indicating position and direction for installation. Install housings as indicated by these marks.

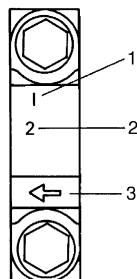


1. I: Intake side, E: Exhaust side	3. Timing chain side
2. Position from timing chain side	

- 7) Tighten housing bolts temporarily first.
Then tighten them by following sequence ("1" – "17") as indicated in figure. Tighten a little at a time and evenly among bolts and repeat tightening sequence 2 or 3 times before they are tightened to specified torque below.

Tightening torque

Camshaft housing bolts: Tighten 11 N·m (1.1 kgf-m, 7.5 lb-ft) by the specified procedure

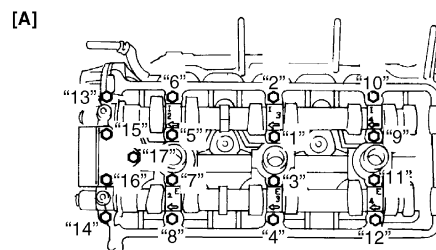

[A]: LH (No.1) bank

- 8) Install 1st timing chain. Refer to "1st Timing Chain and Chain Tensioner Removal and Installation".
- 9) Install LH (No.1) bank 2nd timing chain. Refer to "LH (No.1) Bank 2nd Timing Chain and Chain Tensioner Removal and Installation".
- 10) Install timing chain cover. Refer to "Timing Chain Cover Removal and Installation".
- 11) Install oil pans referring to "Oil Pan and Oil Pump Strainer Removal and Installation in Section 1E".
- 12) Install cylinder head covers referring to "Cylinder Head Covers Removal and Installation".
- 13) Install intake manifold, intake collector and electric throttle body assembly referring to "Intake Collector and Intake Manifold Removal and Installation" and "Electric Throttle Body Assembly Removal and Installation".
- 14) Install engine assembly to vehicle referring to "Engine Assembly Removal and Installation".

Camshafts and Camshaft Housings Inspection


S6JB0B1406029

Cam Wear

Using a micrometer, measure cam height. If measured height is below its limit, replace camshaft.

Cam height “a”

Cam height	Intake cam	Exhaust cam
Standard	45.005 – 45.165 mm (1.7719 – 1.7781 in.)	45.550 – 45.710 mm (1.7933 – 1.7996 in.)
Limit	44.89 mm (1.7673 in.)	45.43 mm (1.7886 in.)

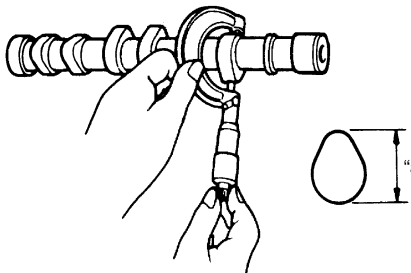

IYSQ01143103-01


Camshaft Runout

Set camshaft between two “V” blocks, and measure its runout by using a dial gauge.

If measured runout exceeds specified limit, replace camshaft.

Camshaft runout limit

0.04 mm (0.002 in.)

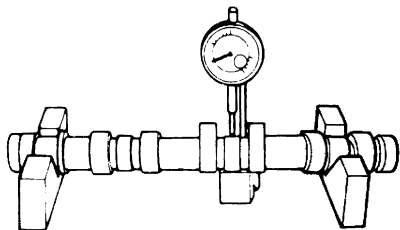


IYSQ01143104-01

Camshaft Journal Wear

Check camshaft journals and camshaft housings for pitting, scratches, wear or damage.

If any malcondition is found, replace camshaft or cylinder head with housing. Never replace cylinder head without replacing housings.

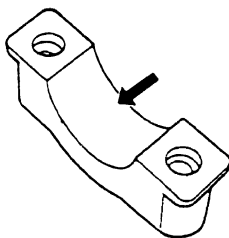



IYSQ01143105-01

Check clearance by using gauging plastic. The procedure is as follows.

- 1) Clean housings and camshaft journals.
- 2) Make sure that all tappets and shims are removed and install camshafts to cylinder head.
- 3) Place a piece of gauging plastic the full width of journal of camshaft (parallel to camshaft).
- 4) Install camshaft housing.
- 5) Tighten camshaft housing bolts in such order (“1” – “17”) as shown in figure a little at a time till they are tightened to specified torque.

NOTE

Do not rotate camshaft while gauging plastic is installed.

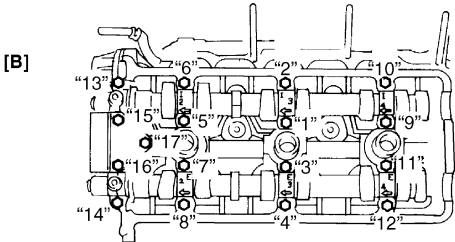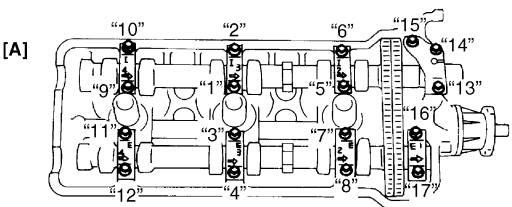

I6JB01140083-01

[A]: RH (No.2) bank


[B]: LH (No.1) bank

- 6) Remove housing, and using scale (2) on gauging plastic (1) envelop, measure gauging plastic (1) width at its widest point.

Camshaft journal clearance

Standard: 0.020 – 0.074 mm (0.0008 – 0.0029 in.)

Limit: 0.10 mm (0.0039 in.)

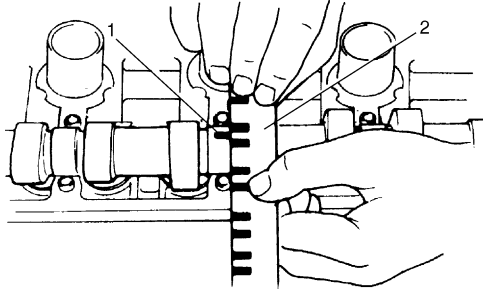

IYSQ01143107-01


If measured camshaft journal clearance exceeds limit, measure journal (housing) bore and outside diameter of camshaft journal. Replace camshaft or cylinder head assembly whichever the difference from specification is greater.

Camshaft journal bore (IN and EX)

Standard: 26.000 – 26.033 mm (1.0236 – 1.0249 in.)

Camshaft journal outside diameter (IN and EX)

Standard: 25.959 – 25.980 mm (1.0220 – 1.0228 in.)

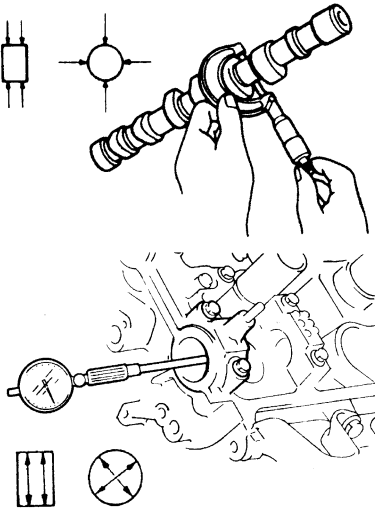


I5JA01140009-01

Tappets and Shims Inspection

S6JB0B1406030

Check tappet and shim for pitting, scratches, or damage. If any malcondition is found, replace.

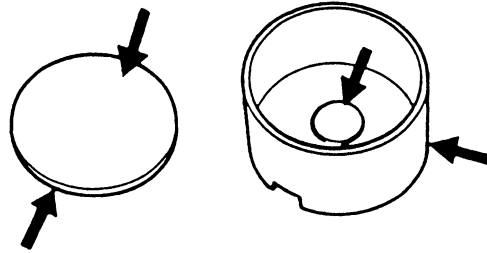

I2RH0B140085-01

Measure cylinder head bore and tappet outside diameter to determine cylinder head-to-tappet clearance. If clearance exceeds limit, replace tappet or cylinder head.

Tappet outside diameter

Standard: 32.456 – 32.472 mm (1.2778 – 1.2784 in.)


Cylinder head bore

Standard: 32.500 – 32.525 mm (1.2795 – 1.2805 in.)

Cylinder head to tappet clearance

Standard: 0.028 – 0.069 mm (0.0011 – 0.0027 in.)


Limit: 0.10 mm (0.0039 in.)

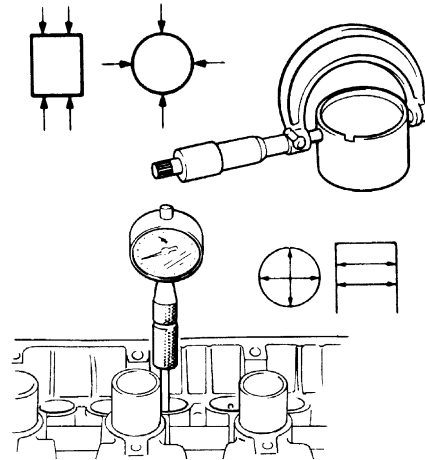

I6JB01140084-01


Valves and Cylinder Heads Components

S6JB0B1406031

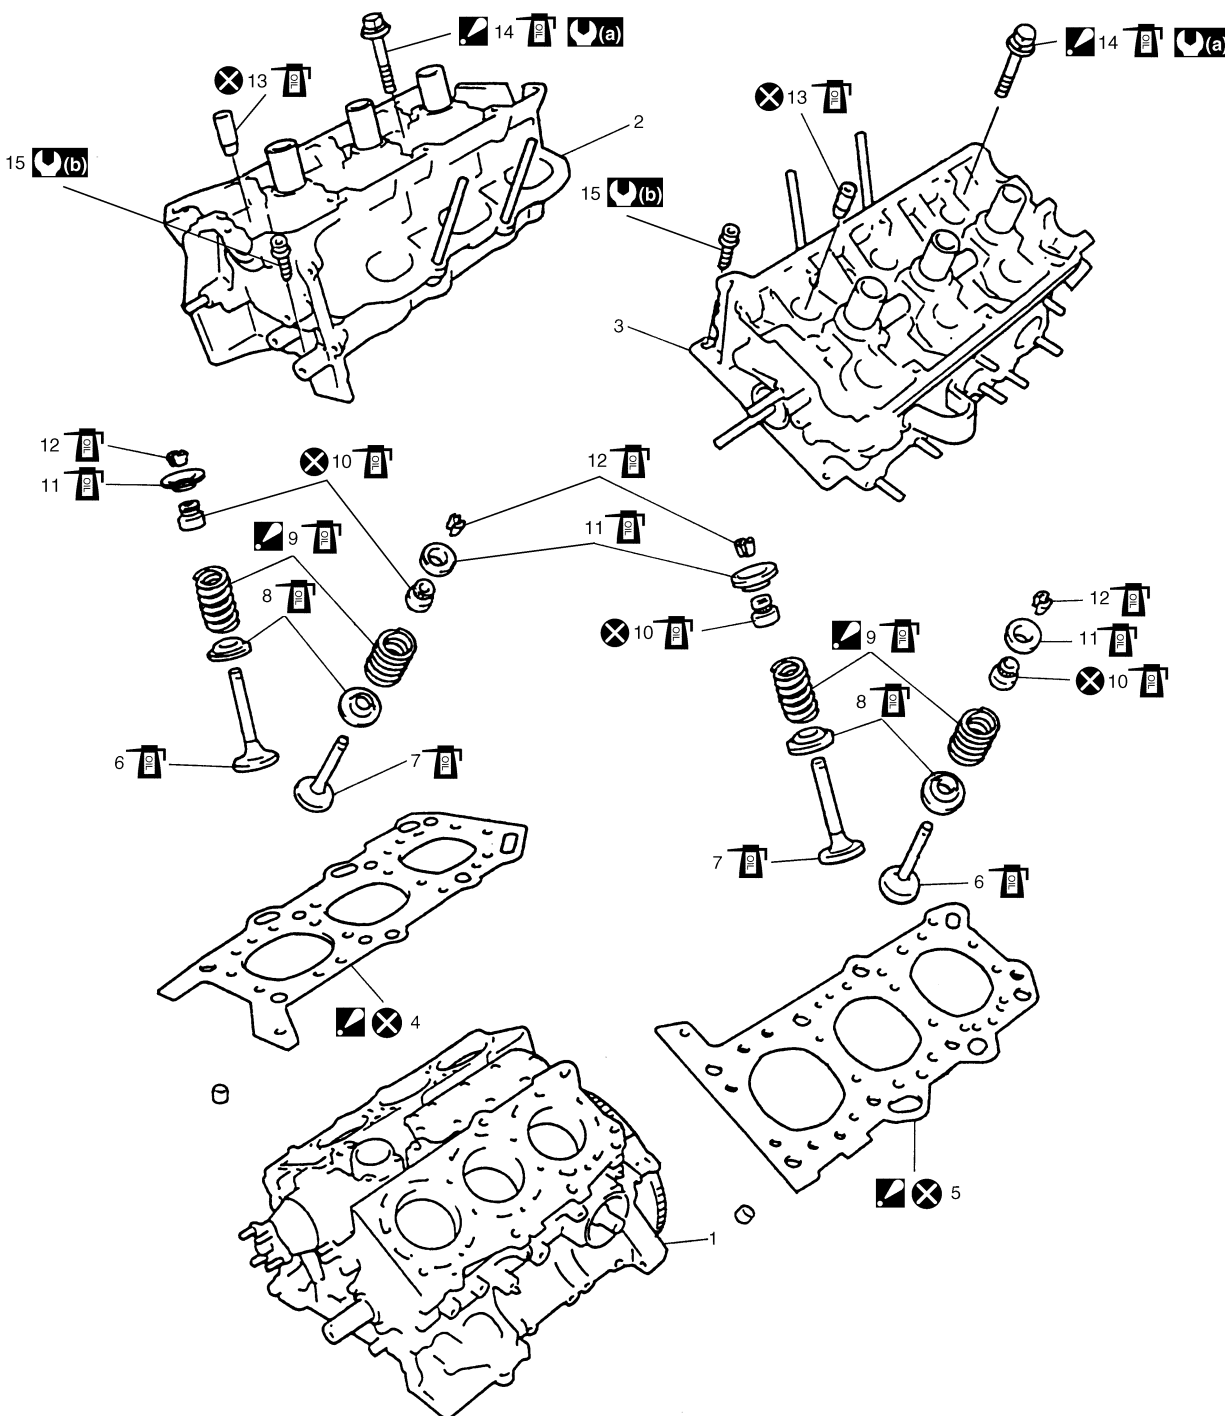

I6JB01140085-01

1. Cylinder block	8. Valve spring seat	15. Cylinder head bolt (hex hole bolt)
2. RH (No.2) bank cylinder head	9. Valve spring: Be sure to position spring in place with its bottom end (small-pitch end) facing the bottom (valve spring seat side).	: Tighten 53 N·m (5.3 kgf-m, 38.5 lb-ft), 84 N·m (8.4 kgf-m, 61.0 lb-ft), 0 N·m (0 kgf-m, 0 lb-ft), 53 N·m (5.3 kgf-m, 38.5 lb-ft) and 105 N·m (10.5 kgf-m, 76.0 lb-ft) by the specified procedure.
3. LH (No.1) bank cylinder head	10. Valve stem oil seal	: 11 N·m (1.1 kgf-m, 8.0 lb-ft)
4. RH (No.2) bank cylinder head gasket: Carved lot number on cylinder head gasket should face up (toward cylinder head side).	11. Valve spring retainer	: Do not reuse.
5. LH (No.1) bank cylinder head gasket: Carved lot number on cylinder head gasket should face up (toward cylinder head side).	12. Valve cotter	: Apply engine oil to sliding surface of each part.
6. Exhaust valve	13. Valve guide	

7. Intake valve	 14. Cylinder head bolt : Check cylinder head bolt (M10) for deformation referring to "Cylinder Head Bolt" under "Valves and Valve Guides Inspection", if it is reused.	
-----------------	--	--

Valves and Cylinder Heads Removal and Installation


S6JB0B1406032

Removal

- 1) Remove engine assembly from vehicle referring to "Engine Assembly Removal and Installation".
- 2) Remove camshafts, tappets and shims referring to "Camshafts, Tappets and Shims Removal and Installation".
- 3) Remove exhaust manifold referring to "Exhaust Manifold Removal and Installation in Section 1K".
- 4) Remove water outlet cap.
- 5) Loosen cylinder head bolts in such order ("1" → "8") as shown in figure and remove them.

NOTE

Be sure to remove 2 hex bolts (1) shown in figure.

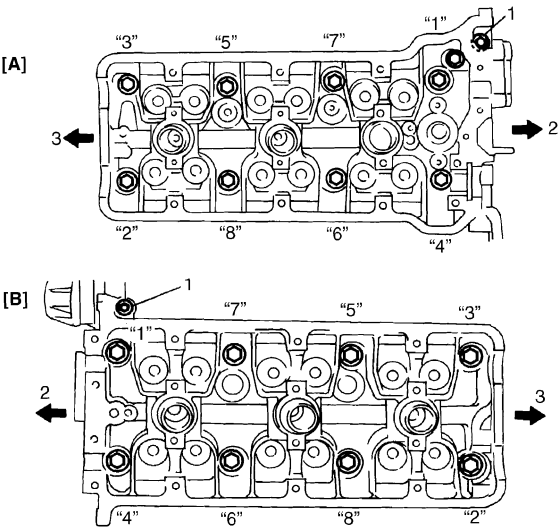


I6JB01140086-01

[A]: RH (No.2) bank	2. Timing chain side
[B]: LH (No.1) bank	3. Flywheel side

- 6) Remove cylinder heads.

Installation

- 1) Clean mating surface on cylinder head and cylinder block. Remove oil, old gasket and dust from mating surface.
- 2) Install knock pin (4) to cylinder block.
- 3) Install new cylinder head gasket (1) to cylinder block as shown in figure. Carved lot number (5) on cylinder head gasket (1) should face up (toward cylinder head side).

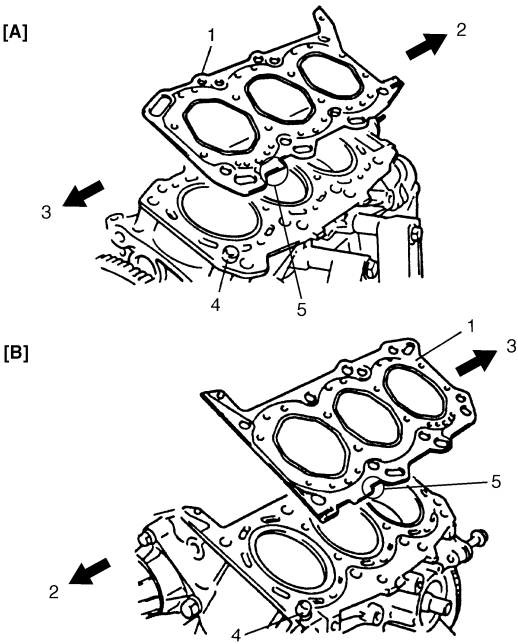

I6JB01140087-01

[A]: RH (No.2) bank	2. Crankshaft pulley side
[B]: LH (No.1) bank	3. Flywheel side

4) Install cylinder head to block.

After applying oil to cylinder head bolts, tighten them gradually as follows.

- a) Tighten cylinder head bolts (except hex hole bolt) to 53 N·m (5.3 kgf-m, 38.5 lb-ft) according to numerical order in figure.
- b) In the same manner as Step a), tighten them to 84 N·m (8.4 kgf-m, 61.0 lb-ft).
- c) Loosen all bolts until tightening torque is reduced to 0 in reverse order of tightening.
- d) In the same manner as Step a), tighten them to 53 N·m (5.3 kgf-m, 38.5 lb-ft).
- e) In the same manner as Step a) again, tighten them to 105 N·m (10.5 kgf-m, 76.0 lb-ft).
- f) Tighten cylinder head bolts (hex hole bolt) to specified torque.


Tightening torque

Cylinder head bolt (a): Tighten 53 N·m (5.3 kgf-m, 38.5 lb-ft), 84 N·m (8.4 kgf-m, 61.0 lb-ft), 0 N·m (0 kgf-m, 0 lb-ft), 53 N·m (5.3 kgf-m, 38.5 lb-ft) and 105 N·m (10.5 kgf-m, 76.0 lb-ft) by the specified procedure

Cylinder head bolt (hex hole bolt) (b): Tighten 11 N·m (1.1 kgf-m, 7.5 lb-ft) by the specified procedure

NOTE

Be sure to install hex hole bolts (1) as shown in figure.

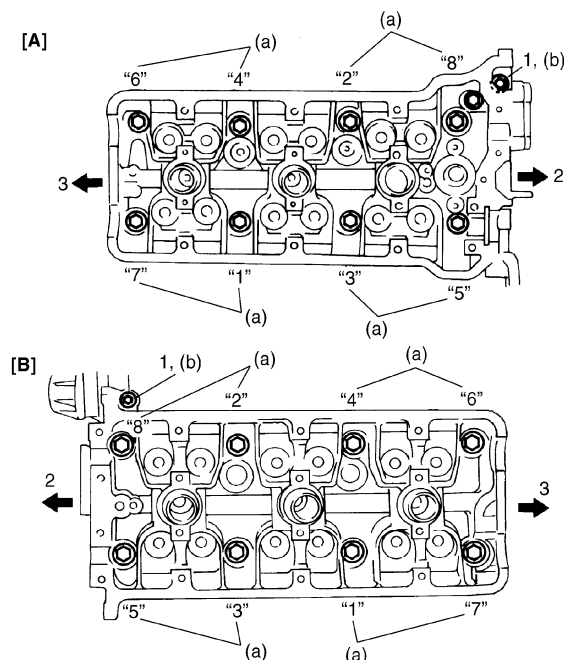


I6JB01140088-01

2. Crankshaft pulley side

3. Flywheel side

5) Install water outlet cap.

6) Check timing mark on crankshaft as shown in figure.

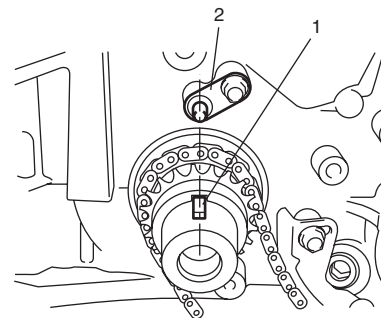

I6JB01140089-01

1. Crank timing pulley key

2. Oil jet

7) Install tappets, shims, camshafts, and RH (No.2) bank 2nd timing chain.

Refer to "Camshafts, Tappets and Shims Removal and Installation" and "RH (No.2) Bank 2nd Timing Chain and Chain Tensioner Removal and Installation".

8) Install 1st timing chain referring to "1st Timing Chain and Chain Tensioner Removal and Installation".

9) Install LH (No.1) bank 2nd timing chain referring to "LH (No.1) Bank 2nd Timing Chain and Chain Tensioner Removal and Installation".

10) Install timing chain cover referring to "Timing Chain Cover Removal and Installation".

11) Install oil pans and oil pump strainer referring to "Oil Pan and Oil Pump Strainer Removal and Installation in Section 1E".

12) Install cylinder head covers referring to "Cylinder Head Covers Removal and Installation".

13) Install exhaust manifold referring to "Exhaust Manifold Removal and Installation in Section 1K".

14) Install radiator outlet pipe referring to "Cooling Water Pipes or Hoses Removal and Installation in Section 1F".

15) Install intake manifold, intake collector and electric throttle body assembly referring to "Intake Collector and Intake Manifold Removal and Installation" and "Electric Throttle Body Assembly Removal and Installation".

16) Install engine assembly to vehicle referring to "Engine Assembly Removal and Installation".

Valves and Cylinder Heads Disassembly and Reassembly

S6JB0B1406033

Disassembly

- 1) Using special tools (A), (B) and (C), compress valve springs and then remove valve cotters (1) by using special tool (D).
- 2) Release special tool, and remove spring retainer and valve spring.


Special tool

(A): 09916-14510

(B): 09916-14910

(C): 09919-28610

(D): 09916-84511

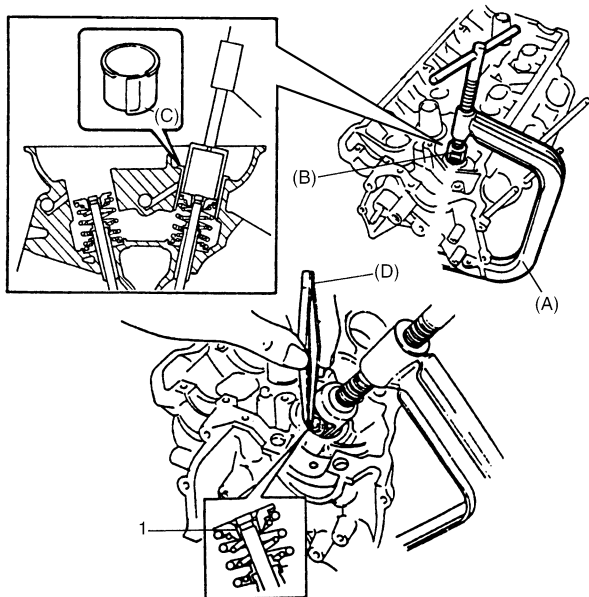


I5JA01140014-01

- 3) Remove valve from combustion chamber side.
- 4) Remove valve stem seal (1) from valve guide, and then valve spring seat (2).

NOTE

Do not reuse seal once disassembled. Be sure to use new seal when assembling.

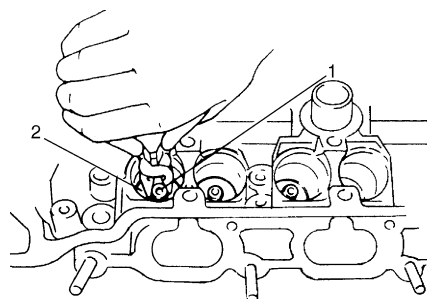

IYSQ01143116-01


- 5) Using special tool (E) (Valve guide remover), drive valve guide out from combustion chamber side to valve spring side.

Special tool

(E): 09916-44910

NOTE

Do not reuse valve guide once disassembled. Be sure to use new valve guide (Oversize) when assembling.

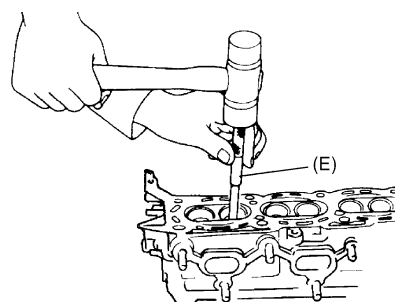

IYSQ01143117-01

- 6) Place disassembled parts except valve stem seal and valve guide in order so that they can be installed in their original positions.

Reassembly

- 1) Before installing valve guide into cylinder head, ream guide hole with special tool (11 mm reamer) so as to remove burrs and make it truly round.

Special tool

(E): 09916-34542

(F): 09916-38210

- 2) Install valve guide to cylinder head.

Heat cylinder head uniformly at a temperature of 80 to 100 °C (176 to 212 °F) so that head will not be distorted, and drive new valve guide into hole with special tools. Drive in new valve guide until special tool (Valve guide installer) contacts cylinder head. After installing, make sure that valve guide protrusions (1) by specified height from cylinder head.

Special tool

(G): 09916-58210

(H): 09917-87810

NOTE


- Do not reuse valve guide once disassembled. Install new valve guide (Oversize).
- Intake and exhaust valve guides are identical.

Outer diameter of oversized valve guide

11.088 – 11.103 mm (0.4365 – 0.4371 in.)

Valve guide protrusion (In and Ex)

13.5 mm (0.53 in.)

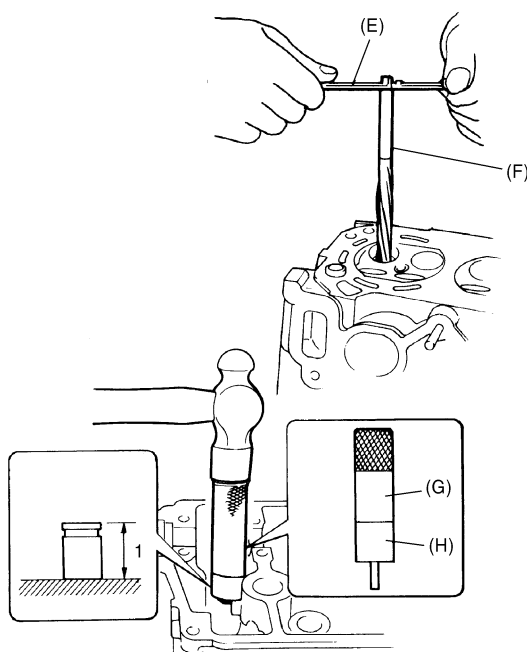


I5JA01140015-01

- 3) Ream valve guide bore with special tool (6.0 mm reamer). After reaming, clean bore.

Special tool

(E): 09916-34542

(I): 09916-37810

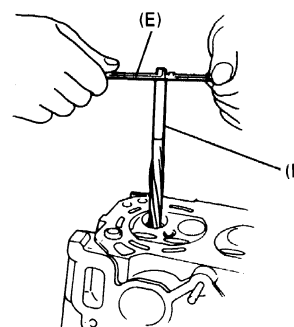

IYSQ01143119-01

- 4) Install valve spring seat to cylinder head.

- 5) Install new valve stem seal (1) to valve guide.

After applying engine oil to seal and spindle of special tool (Valve guide installer handle), fit oil seal to spindle, and then install seal to valve guide by pushing special tool by hand.

After installing, check to be sure that seal is properly fixed to valve guide.


Special tool

(J): 09917-98221

(K): 09916-58210

NOTE


- Do not reuse seal once disassembled. Be sure to install new seal.
- When installing, never tap or hit special tool with a hammer or else. Install seal to guide only by pushing special tool by hand. Tapping or hitting special tool may cause damage to seal.

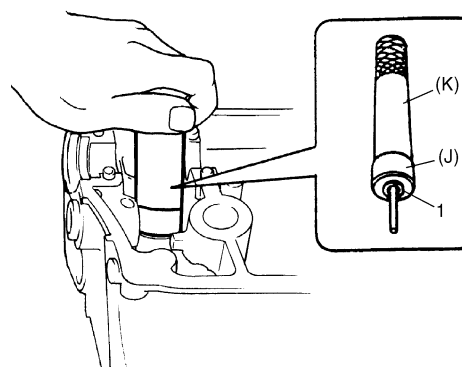

IYSQ01143120-01

6) Install valve (1) to valve guide.


Before installing valve to valve guide, apply engine oil to stem seal, valve guide bore, and valve stem.

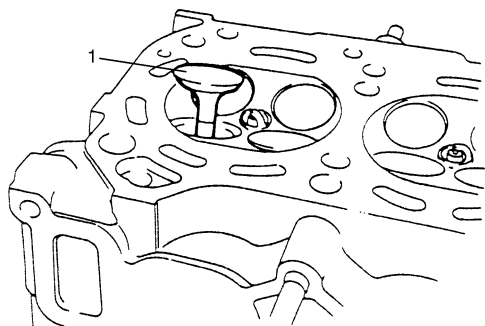

IYSQ01141092-01

7) Install valve spring and spring retainer.

Each valve spring has top end (large-pitch end (1)) and bottom end (small-pitch end (2)). Be sure to position spring in place with its bottom end (valve spring retainer side (3)) facing the bottom (valve spring seat side (4)).

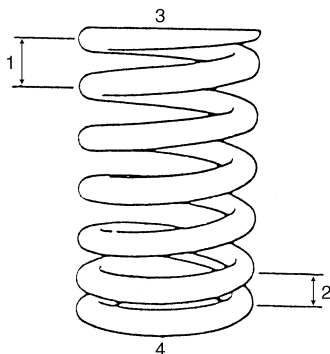

IYSQ01141093-01

8) Using special tool (Valve lifter), compress valve spring and fit 2 valve cotters (1) into groove in valve stem.


Special tool

(A): 09916-14510

(B): 09916-14910

(C): 09916-84511

(D): 09919-28610

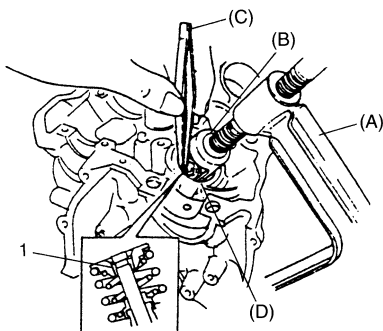

IYSQ01143121-01

Valves and Valve Guides Inspection


S6JB0B1406034

Valve Guides

Using a micrometer and bore gauge, take diameter readings on valve stems and guides to check stem-to-guide clearance. Be sure to take reading at more than one place along the length of each stem and guide. If clearance exceeds limit, replace valve and valve guide.

Valve stem-to-guide clearance

Item		Standard	Limit
Valve stem diameter	Intake	5.965 – 5.980 mm (0.2348 – 0.2354 in.)	—
	Exhaust	5.940 – 5.955 mm (0.2339 – 0.2344 in.)	—
Valve guide bore	In and Ex	6.000 – 6.012 mm (0.2362 – 0.2367 in.)	—
Stem-to-guide clearance	Intake	0.020 – 0.047 mm (0.0008 – 0.0019 in.)	0.07 mm (0.0028 in.)
	Exhaust	0.045 – 0.072 mm (0.0018 – 0.0028 in.)	0.09 mm (0.0035 in.)

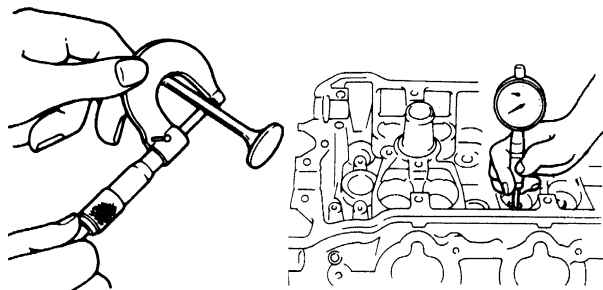


IYSQ01143122-01

Valves

- Remove all carbon from valves.
- Inspect each valve for wear, burn or distortion at its face and stem and, as necessary, replace it.
- Measure thickness of valve head. If measured thickness exceeds limit, replace valve.

Valve specifications

Item	Standard	Limit
Intake	1.0 mm (0.039 in.)	0.6 mm (0.024 in.)
Exhaust	1.2 mm (0.047 in.)	0.7 mm (0.028 in.)

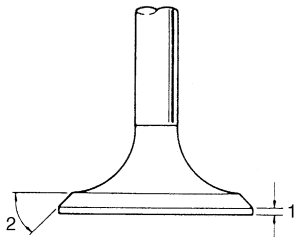

IYSQ01141097-01

1. Valve head thickness	2. 45°
-------------------------	--------


- Inspect valve stem end face for pitting and wear. If pitting or wear is found, valve stem end may be resurfaced. But do not grind its taper excessively. When valve is excessively worn out too much or its taper is gone, replace it.



IYSQ01141098-01

- Check each valve for radial runout with a dial gauge and “V” block.
To check runout, rotate valve slowly. If runout exceeds its limit, replace valve.

Valve head radial runout
Limit: 0.08 mm (0.003 in.)

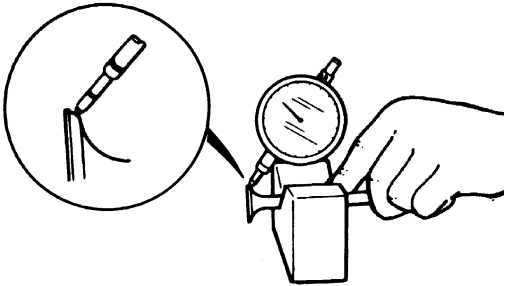


IYSQ01143123-01

- Seating contact width
Create contact pattern on each valve in the usual manner, i.e., by giving uniform coat of marking compound to valve seat and by rotatingly tapping seat with valve head. Valve lapper (tool used in valve lapping) must be used.
Pattern produced on seating face of valve must be a continuous ring without any break, and the width of pattern must be within specified range.

Standard seating width revealed by contact pattern on valve face

Intake and Exhaust: 1.1 – 1.3 mm (0.0433 – 0.0512 in.)

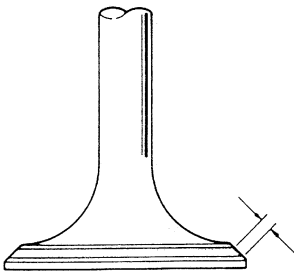

IYSQ01141099-01

- Valve seat repair

A valve seat not producing a uniform contact with its valve or showing width of seating contact that is out of specified range must be repaired by regrounding or by cutting and regrounding and finished by lapping.

a. **Exhaust valve seat**

Use valve seat cutters (1) to make two cuts as illustrated in figure. Two cutters must be used: the 1st for making 15° angle, and the 2nd for making 45° angle. The 2nd cut must be made to produce desired seat width.

Seat width for exhaust valve seat


1.1 – 1.3 mm (0.0433 – 0.0512 in.)

b. **Intake valve seat**

Use valve seat cutters (1) to make three cuts as illustrated in figure. Three cutters must be used: the 1st for making 15° angle, the 2nd for making 60° angle, and the 3rd for making 45° angle. The 3rd cut (45°) must be made to produce desired seat width.

Seat width for intake valve seat


1.1 – 1.3 mm (0.0433 – 0.0512 in.)

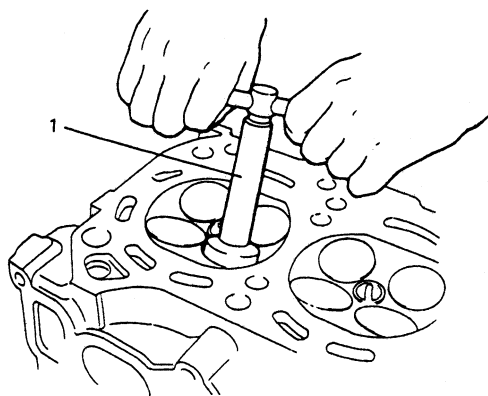

IYSQ01141100-01

c. **Valve lapping**

Lap valve on seat in two steps, first with coarse size lapping compound applied to face and the second with fine-size compound, each time using valve lapper according to usual lapping method.

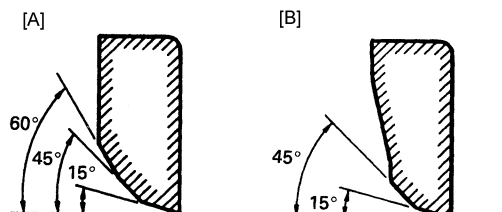

IYSQ01143124-01

[A]: Intake valve [B]: Exhaust valve


Cylinder Head Inspection

S6JB0B1406035

- Remove all carbon from combustion chambers.

NOTE

Do not use any sharp-edged tool to scrape off carbon. Be careful not to scuff or nick metal surfaces when decarboning. The same applies to valves and valve seats, too.

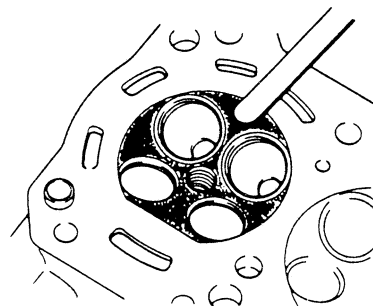



IYSQ01141102-01

- Check cylinder head for cracks on intake and exhaust ports, combustion chambers, and head surface. Using straightedge (1) and thickness gauge (2), check flatness of gasketed surface at a total of 6 locations. If distortion limit, given below, is exceeded, correct gasketed surface with a surface plate and abrasive paper of about #400 (Waterproof silicon carbide abrasive paper): Place abrasive paper on and over surface plate, and rub gasketed surface against paper to grind off high spots. Should this fail to reduce thickness gauge readings to within limit, replace cylinder head.

Leakage of combustion gases from this gasketed joint is often due to warped gasketed surface: such leakage results in reduced power output.

Cylinder head gasketed surface distortion

Limit: 0.05 mm (0.002 in.)

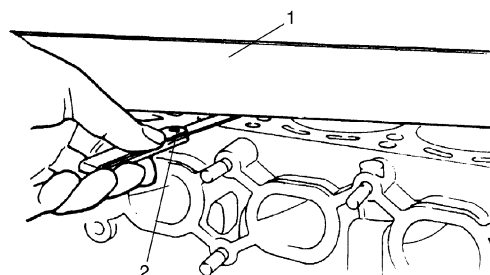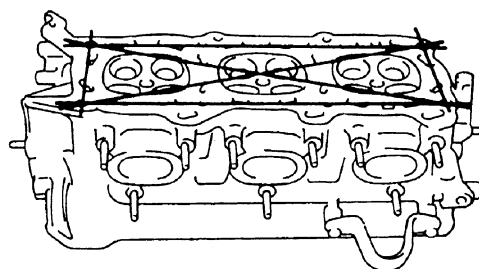


I5JA01140016-01

- Distortion of manifold seating faces
Check seating faces of cylinder head for manifolds, using a straightedge (1) and thickness gauge (2), in order to determine whether these faces should be corrected or cylinder head replaced.

Manifold seating surface distortion

Limit: 0.10 mm (0.004 in.)

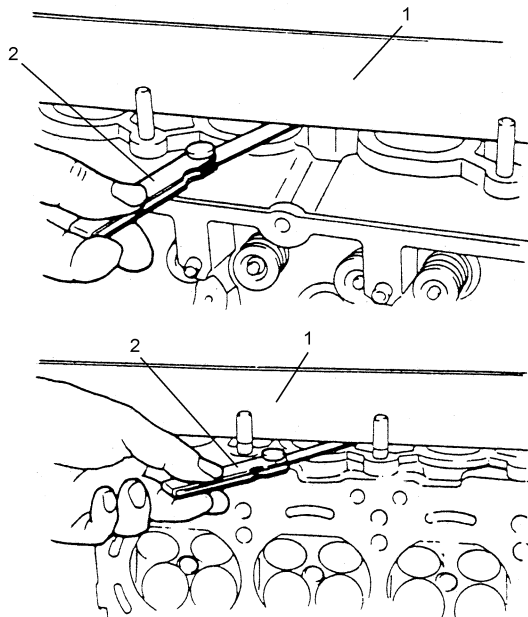


I5JA01140017-01

Valve Springs Inspection

S6JB0B1406036

- Referring to data given below, check to be sure that each spring is in sound condition, free of any evidence of breakage or weakening. Remember, weakened valve springs can cause chatter, not to mention possibility of reducing power output due to gas leakage caused by decreased seating pressure.

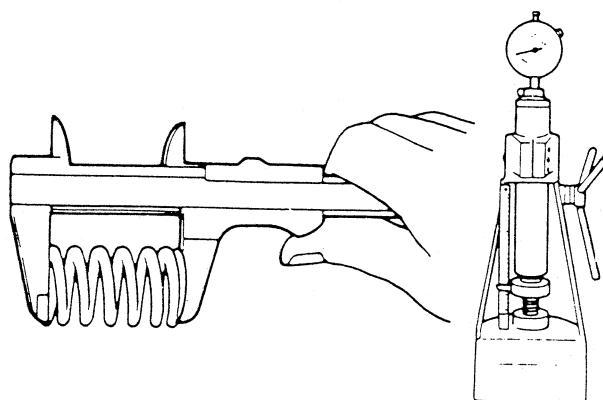

IYSQ01141105-01

Valve spring free length

Standard: 51.13 mm (2.0130 in.)

Valve spring preload


Standard: 209 – 241 N (20.9 – 24.1 kg, 46.1 – 53.1 lb) for 37.60 mm (1.480 in.)

Limit: 192 N (19.2 kg, 42.24 lb) for 37.60 mm (1.480 in.)

- Spring squareness
Use a square and surface plate to check each spring for squareness in terms of clearance between end of valve spring and square. Valve springs found to exhibit a larger clearance than limit given below must be replaced.

Valve spring squareness limit


2.2 mm (0.087 in.)

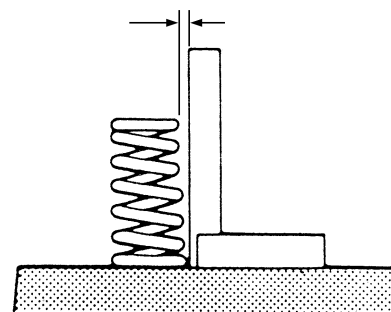

IYSQ01141106-01

Pistons, Piston Rings, Connecting Rods and Cylinders Components

S6JB0B1406037

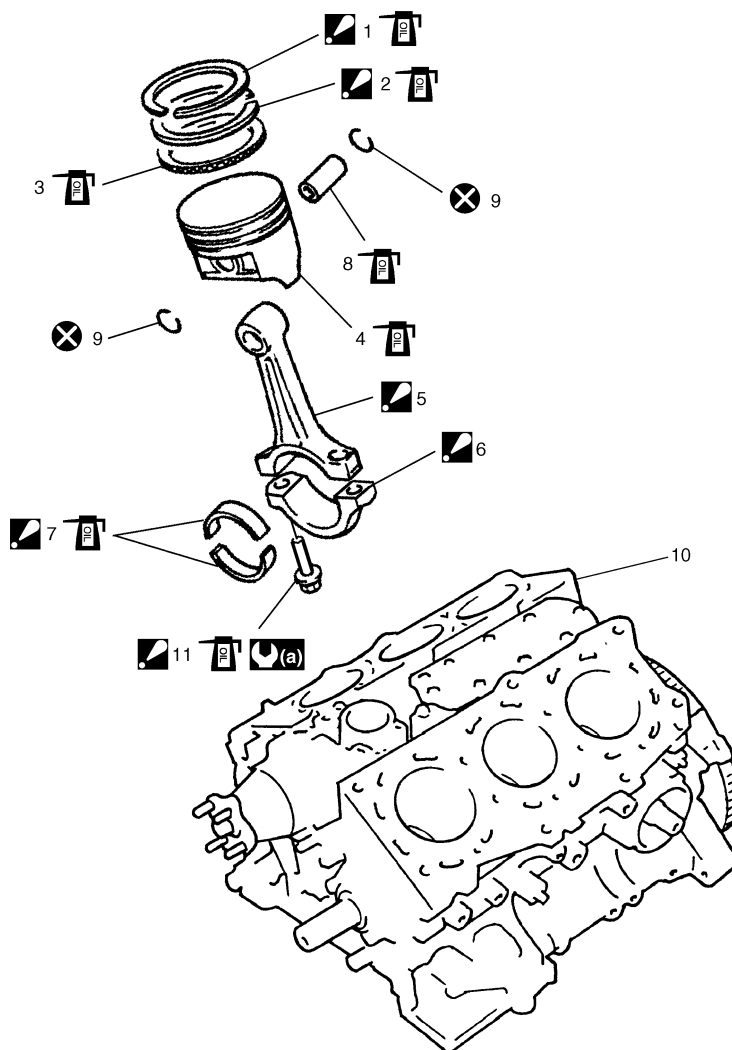

I6JB01140090-01

1. Top ring : "RN" mark provided on piston ring comes to facing up.	8. Piston pin
2. 2nd ring : "R" mark provided on piston ring comes to facing up.	9. Piston pin circlip
3. Oil ring	10. Cylinder block
4. Piston	11. Connecting rod bolt : Check connecting rod bolt referring to "Connecting Rod Bolt Deformation (Plastic Deformation Tightening Bolt)" under "Crank Pins and Connecting Rod Bearings Inspection" if it is reused.
5. Connecting rod : Do not apply engine oil to inner surface of big end.	: Tighten 15 N·m (1.5 kgf-m, 11.0 lb-ft), 45° and 45° by the specified procedure.
6. Connecting rod bearing cap : Point arrow mark on cap to crankshaft pulley side. Do not apply engine oil to inner surface of bearing cap.	: Apply engine oil to sliding surface of each part.
7. Connecting rod bearing : Do not apply engine oil between connecting rod big end and bearing, between cap and bearing.	: Do not reuse.

Pistons, Piston Rings, Connecting Rods and Cylinders Removal and Installation

S6JB0B1406038

Removal

- 1) Remove engine assembly from vehicle referring to "Engine Assembly Removal and Installation".
- 2) Remove cylinder heads. Refer to "Valves and Cylinder Heads Removal and Installation".
- 3) Remove oil pump. Refer to "Oil Pump and Oil Pump Chain Removal and Installation in Section 1E".
- 4) Mark cylinder number on all pistons, connecting rods and connecting rod bearing caps.
- 5) Remove connecting rod bearing caps.
- 6) Clean carbon from top of cylinder bore before removing piston from cylinder.
- 7) Push piston and connecting rod assembly out through the top of cylinder bore.


Installation

- 1) Apply engine oil to pistons, rings, cylinder walls, connecting rod bearings and crank pins.

NOTE

Do not apply oil between connecting rod and bearing or between bearing cap and bearing.

- 2) When installing piston and connecting rod assembly into cylinder bore, point mark (1) on piston head to crankshaft pulley side (2).

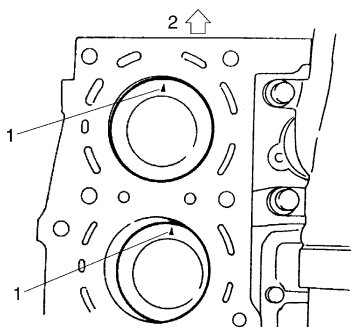


IYSQ01143128-01

- 3) Install piston and connecting rod assembly into cylinder bore. Use special tool (Piston ring compressor) to compress rings. Guide connecting rod into place on crankshaft. Using a hammer handle, tap piston head to install piston into bore. Hold ring compressor firmly against cylinder block until all piston rings have entered cylinder bore.

Special tool

(A): 09916-77310

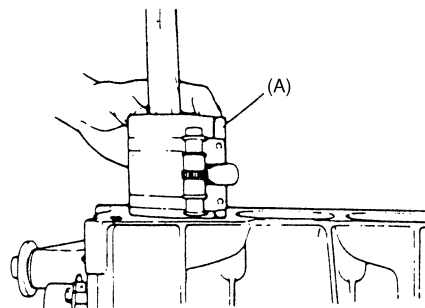

IYSQ01141111-01

- 4) Install connecting rod bearing cap (1) as follows.


NOTE

If connecting rod bolt is reused, mark sure to check connecting rod bolt for deformation referring to "Connecting Rod Bolt Deformation (Plastic Deformation Tightening Bolt)" under "Crank Pins and Connecting Rod Bearings Inspection".

- a) Point arrow mark (2) on cap to crankshaft pulley side.
- b) Apply engine oil to new connecting rod bolts (3).
- c) Tighten all connecting rod bolts to 15 N·m (1.5 kgf-m, 11.0 lb-ft).
- d) Retighten them by turning through 45°
- e) Repeat step d) once again.

Tightening torque

Connecting rod bolt (a): Tighten 15 N·m (1.5 kgf-m, 11.0 lb-ft), 45° and 45° by the specified procedure.

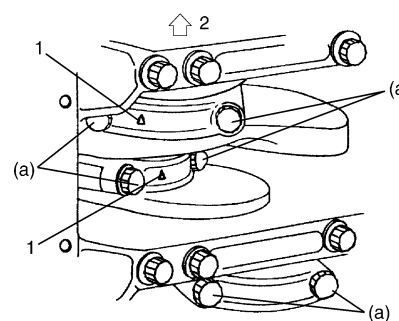

I6JB01140091-01


- 5) Install cylinder heads to cylinder block referring to "Valves and Cylinder Heads Removal and Installation".
- 6) Install oil pump to cylinder block referring to "Oil Pump and Oil Pump Chain Removal and Installation in Section 1E".
- 7) Install tappets, shims and camshafts referring to "Camshafts, Tappets and Shims Removal and Installation".
- 8) Install RH (No.2) bank 2nd timing chain referring to "RH (No.2) Bank 2nd Timing Chain and Chain Tensioner Removal and Installation".
- 9) Install 1st timing chain. Refer to "1st Timing Chain and Chain Tensioner Removal and Installation".
- 10) Install LH (No.1) bank 2nd timing chain. Refer to "LH (No.1) Bank 2nd Timing Chain and Chain Tensioner Removal and Installation".
- 11) Install timing chain cover. Refer to "Timing Chain Cover Removal and Installation".
- 12) Install oil pans and pump strainer. Refer to "Oil Pan and Oil Pump Strainer Removal and Installation in Section 1E".
- 13) Install cylinder head covers. Refer to "Cylinder Head Covers Removal and Installation".
- 14) Install exhaust manifold. Refer to "Exhaust Manifold Removal and Installation in Section 1K".
- 15) Install radiator outlet pipe.
Refer to "Cooling Water Pipes or Hoses Removal and Installation in Section 1F".
- 16) Install intake manifold, intake collector and electric throttle body assembly referring to "Intake Collector and Intake Manifold Removal and Installation" and "Electric Throttle Body Assembly Removal and Installation".
- 17) Install engine assembly to vehicle referring to "Engine Assembly Removal and Installation".

Pistons, Piston Rings, Connecting Rods and Cylinders Disassembly and Reassembly

S6JB0B1406039


Disassembly

- 1) Using piston ring expander, remove two compression rings (Top and 2nd) and oil ring from piston.
- 2) Remove piston pin from connecting rod.
 - a) Ease out piston pin circlips (1) as shown in figure.

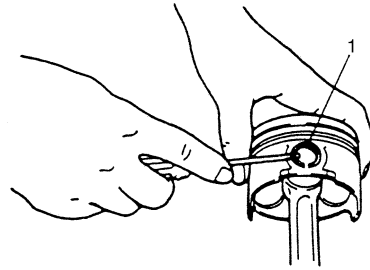

IYSQ01141113-01

- b) Force piston pin out.

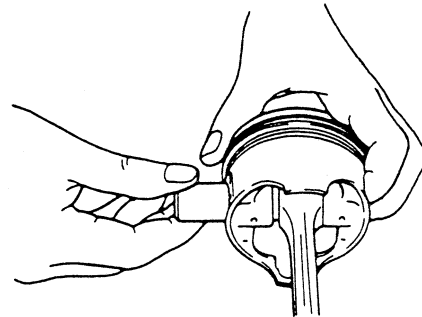

IYSQ01141114-01


Reassembly

- 1) 2 sizes of piston are available as standard size spare part so as to ensure proper piston-to-cylinder clearance. When installing a standard size piston, make sure to match piston with cylinder as follows.
- a) Each piston (8) has stamped number (9) on its piston head. It represents outer diameter of piston.
 - b) There are also stamped numbers (10) or painted color (10) on cylinder block as shown in figure.
 - c) Stamped number on piston and painted color (stamped number) on cylinder block must correspond. That is, install number “2” stamped piston to cylinder which is identified with blue painted (or “2” stamped) and a number “1” piston to cylinder with red painted (or “1” stamped).

Piston outer diameter and cylinder bore diameter

Piston		Cylinder	
Number	Outer diameter	Number (Paint)	Bore diameter
1	87.9800 – 87.9900 mm (3.4638 – 3.4641 in.)	1 (Red)	88.0101 – 88.0200 mm (3.4650 – 3.4653 in.)
2	87.9700 – 87.9799 mm (3.4633 – 3.4637 in.)	2 (Blue)	88.0000 – 88.0100 mm (3.4646 – 3.4649 in.)

Piston-to-cylinder clearance
0.02 – 0.04 mm (0.0008 – 0.0015 in.)

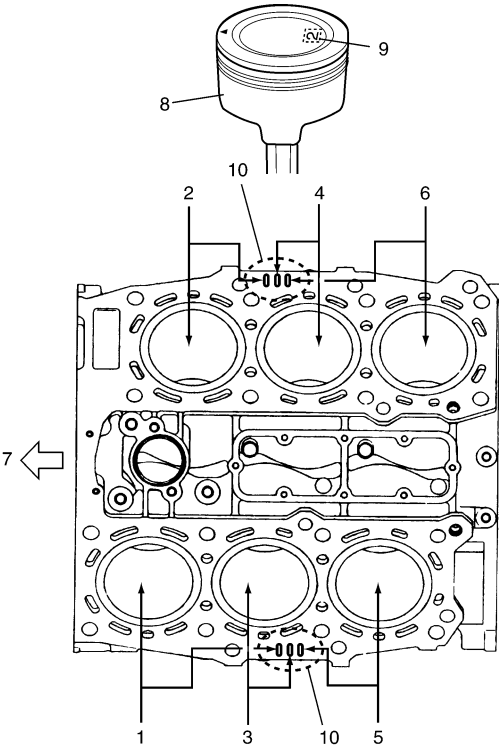


16JB01140092-01

1. No.1 cylinder	4. No.4 cylinder	7. Crankshaft pulley side
2. No.2 cylinder	5. No.5 cylinder	
3. No.3 cylinder	6. No.6 cylinder	

- 2) Install piston pin to piston and connecting rod:
After applying engine oil to piston pin and piston pin holes in piston (1) and connecting rod (3), fit connecting rod to piston as shown in figure and insert piston pin to piston and connecting rod, and install piston pin circlips.


NOTE

"59J0" mark on connecting rod must face toward crankshaft pulley side.

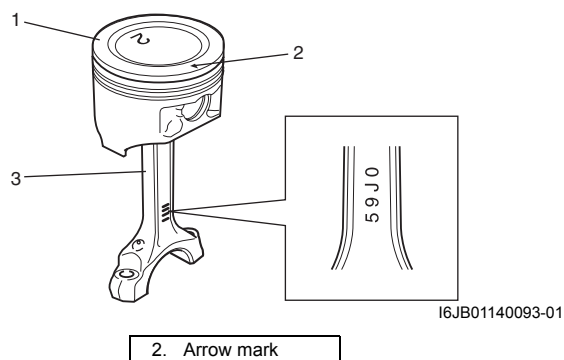

NOTE


- Install circlip (6) with its cut part facing as shown in figure.
- Install so that circlip end gap comes within such range as indicated by arrow.

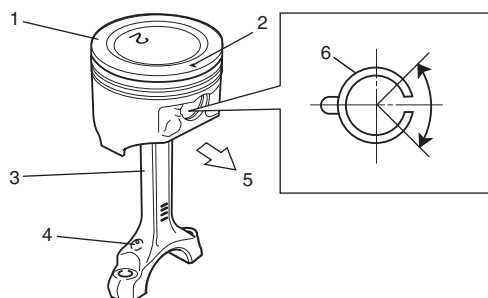


1. Piston	4. Oil hole
2. Arrow mark	5. Crankshaft pulley side
3. Connecting rod	

- 3) Install piston rings to piston:

- As shown in figure, 1st (1) and 2nd rings (2) have "RN" or "R" mark respectively. When installing these piston rings to piston, direct marked side of each ring toward top of piston.
- 1st rings differs from 2nd ring in thickness, shape of surface contacting cylinder wall. Distinguish 1st ring from 2nd ring by referring to figure.
- When installing oil ring (3), install spacer first and then 2 rails.

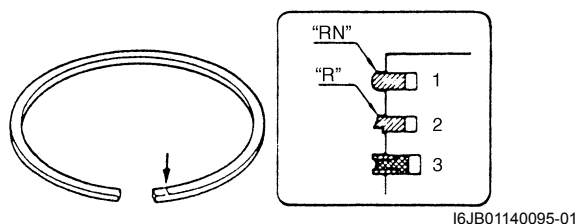

- 4) After installing three rings (1st, 2nd and oil rings), distribute their end gaps as shown in figure.

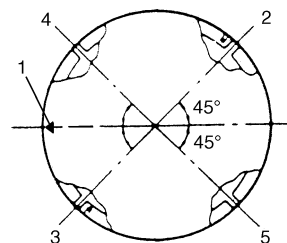

1. Mark
2. 1st ring end gap
3. 2nd ring end gap and oil ring spacer gap
4. Oil ring upper rail gap
5. Oil ring lower rail gap

Cylinders, Pistons and Piston Rings Inspection

S6JB0B1406040

NOTE

Before the following inspection, clean carbon from piston head and ring grooves, using a suitable tool.

Cylinders

- Inspect cylinder walls for scratches, roughness, or ridges which indicate excessive wear. If cylinder bore is very rough or deeply scratched, or ridged, rebore cylinder and use over size piston.
- Using a cylinder gauge, measure cylinder bore in thrust and axial directions at 2 positions (1, 2) as shown in figure. If any of the following condition is noted, rebore cylinder.
 - Cylinder bore via. exceeds limit.
 - Difference of measurements at 2 positions exceeds taper limit.
 - Difference between thrust and axial measurements exceeds out-of-round limit.

Cylinder bore

Standard: 88.000 – 88.020 mm (3.4646 – 3.4653 in.)


Limit: 88.050 mm (3.4665 in.)

Taper and out-of-round

Limit: 0.10 mm (0.004 in.)

NOTE

If any one of six cylinders has to be rebored, rebore all six to the same oversize. This is necessary for the sake of uniformity and balance.

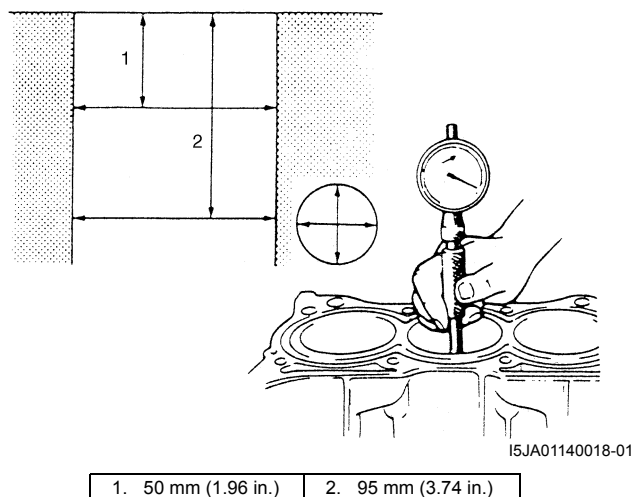


Pistons

- Inspect piston for faults, cracks or other damages. Damaged or faulty piston should be replaced.
- Piston diameter:
As shown in figure, piston diameter should be measured at a position 26.5 mm (1.04 in.) ("a") from piston skirt end in the direction perpendicular to piston pin.

Piston diameter

Standard: 87.970 – 87.990 mm (3.4634 – 3.4641 in.)

Oversize (0.50 mm): 88.470 – 88.490 mm (3.4831 – 3.4838 in.)

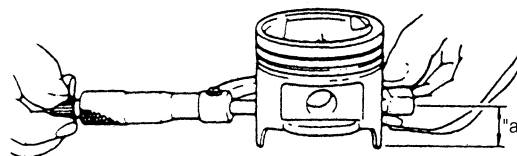

IYSQ01141121-01

"a": 26.5 mm (1.04 in.)


- Piston clearance:
Measure cylinder bore diameter and piston diameter to find their difference which is piston clearance. Piston clearance should be within specification as given below. If it is out of specification, rebore cylinder and use oversize piston.

Piston-to-cylinder clearance

0.02 – 0.04 mm (0.0008 – 0.0015 in.)

NOTE

Cylinder bore diameter should be measured in 2 places 90 degrees apart.

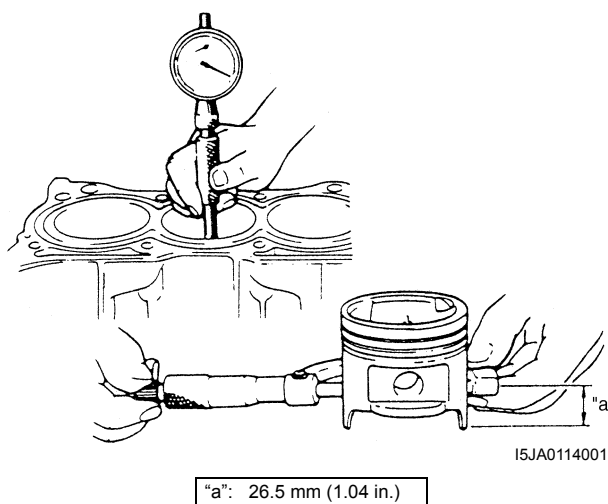


"a": 26.5 mm (1.04 in.)

- Ring groove clearance:
Before checking, piston grooves must be clean, dry and free of carbon.
Fit new piston ring (1) into piston groove, and measure clearance between ring and ring land by using thickness gauge (2). If clearance is out of specification, replace piston.

Ring groove clearance

Top: 0.03 – 0.07 mm (0.0012 – 0.0027 in.)

2nd: 0.02 – 0.06 mm (0.0008 – 0.0023 in.)

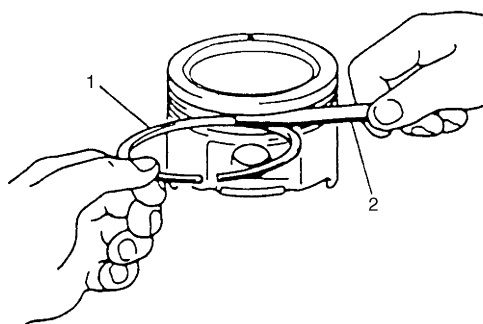

I2RH01140159-01

Piston Rings


To measure end gap, insert piston ring into cylinder bore and then measure the gap by using thickness gauge. If measure gap is out of specification, replace ring.

NOTE

Clean carbon and any other dirt from top of cylinder bore before inserting piston ring.

Piston ring end gap

Item	Standard	Limit
Top ring	0.20 – 0.35 mm (0.0079 – 0.0137 in.)	0.7 mm (0.0276 in.)
2nd ring	0.35 – 0.47 mm (0.0138 – 0.0185 in.)	0.7 mm (0.0276 in.)
Oil ring	0.20 – 0.70 mm (0.0079 – 0.0275 in.)	1.8 mm (0.0709 in.)

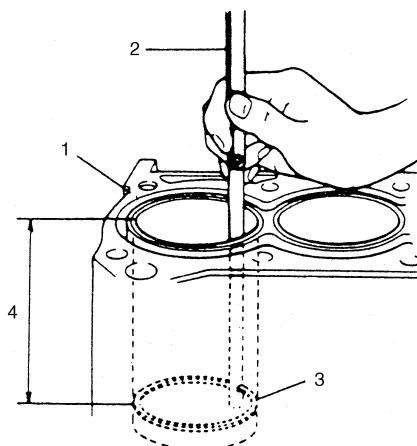

IYSQ01141124-01

1. Cylinder block	3. Piston ring
2. Feeler gauge	4. 120 mm (4.72 in.)

Piston Pins and Connecting Rods Inspection

S6JB0B1406041

Piston Pins

- Check piston pin, connecting rod small end bore and piston bore for wear or damage, paying particular attention to condition of small end bore bush. If pin, connecting rod small end bore or piston bore is badly worn or damaged, replace pin, connecting rod or piston.
- Piston pin clearance:
Check piston pin clearance in small end. Replace connecting rod if its small end is badly worn or damaged or if measured clearance exceeds limit.

Piston pin clearance in small end


0.003 – 0.014 mm (0.0001 – 0.0005 in.)

Small-end bore

21.003 – 21.011 mm (0.8269 – 0.8272 in.)

Piston pin diameter

20.997 – 21.000 mm (0.82665 – 0.82677 in.)

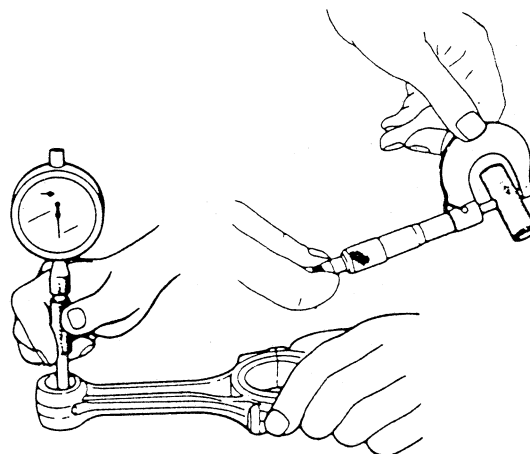

I5JA01140020-01


Connecting Rods

- Big-end side clearance:
Check big-end of connecting rod for side clearance, with rod fitted and connected to its crank pin in the normal manner. If measured clearance is found to exceed its limit, replace connecting rod.

Big-end side clearance

Standard: 0.25 – 0.35 mm (0.0099 – 0.0137 in.)

Limit: 0.45 mm (0.0177 in.)

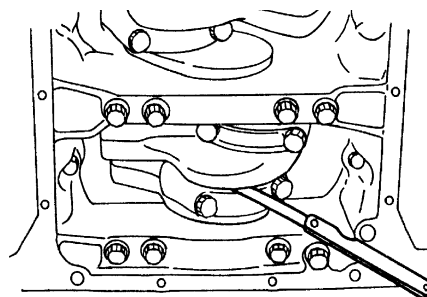

I6JB01140097-01

- Connecting rod alignment:
Mount connecting rod on aligner to check it for bow and twist. If limit is exceeded, replace it.

Connecting rod alignment

Limit on bow: 0.05 mm (0.0020 in.)

Limit on twist: 0.10 mm (0.0039 in.)

Crank Pins and Connecting Rod Bearings Inspection

S6JB0B1406042

- Inspect crank pin for uneven wear or damage. Measure crank pin for out-of-round or taper with a micrometer. If crank pin is damaged, or out-of-round or taper is out of limit, replace crankshaft or regrind crank pin then inspect rod bearing clearance referring to "Connecting rod bearing clearance".

Crank pin diameter


Connecting rod bearing size	Crank pin diameter
Standard	49.982 – 50.000 mm (1.9678 – 1.9685 in.)
0.25 mm (0.0098 in.) undersize	49.732 – 49.750 mm (1.9580 – 1.9586 in.)

Crank pin out-of-round (a – b)


Limit: 0.01 mm (0.0004 in.)

Crank pin taper (c – d)

Limit: 0.01 mm (0.0004 in.)

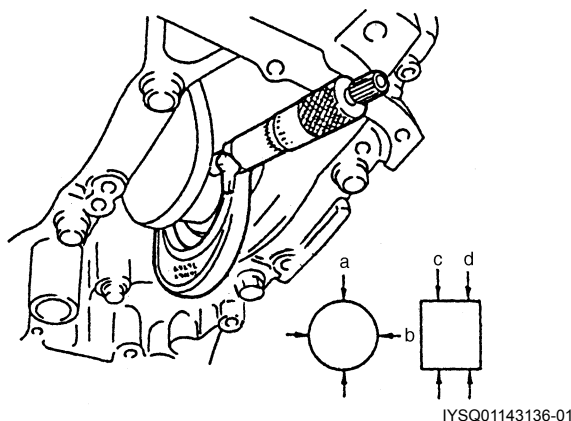


- Connecting rod bearing general information:**
Service connecting rod bearings are available in standard size and 0.25 mm (0.0098 in.) undersize, and standard size bearing has 5 kinds of bearings differing in tolerance. For identification of undersize bearing, it is painted red at the position as indicated in figure, undersize bearing thickness is 1.605 – 1.615 mm (0.0632 – 0.0635 in.) at the center of it.

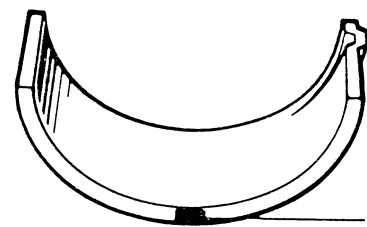

IYSQ01141169-01

1. Painting

- Connecting rod bearing visual inspection:**
Inspect bearing shells for signs of fusion, pitting, burn or flaking and observe contact pattern. Bearing shells found in defective condition must be replaced.
- Connecting rod bearing clearance:**
 - Before checking bearing clearance, clean bearing and crank pin.
 - Install bearing in connecting rod and bearing cap.
 - Place a piece of gaging plastic (1) to full width of crank pin as contacted by bearing (parallel to crankshaft), avoiding oil hole.

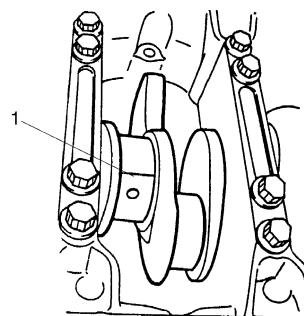

I6JB01140098-01

- Install rod bearing cap to connecting rod referring to "Pistons, Piston Rings, Connecting Rods and Cylinders Removal and Installation".

NOTE


Do not turn crankshaft with gaging plastic installed.

- e. Remove cap and using a scale (2) on gaging plastic (1) envelope, measure gaging plastic (1) width at the widest point (clearance).
If clearance exceed its limit, use a new standard size bearing referring to "Selection of Connecting Rod Bearings" in this section.
After selecting new bearing, recheck clearance.

Bearing clearance

Standard: 0.045 – 0.063 mm (0.0018 – 0.0024 in.)

Limit: 0.08 mm (0.0031 in.)

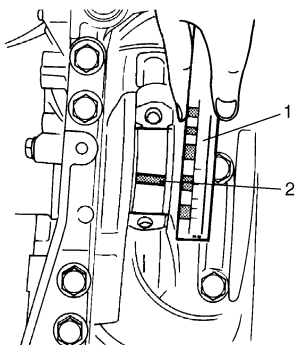

I6JB01140099-01

- f. If clearance can not be brought to within its limit even by using a new standard size bearing, regrind crankpin to undersize and use 0.25 mm undersize bearing as follows.
- Install 0.25 mm undersize bearing to connecting rod big end.
 - Measure bore diameter of connecting rod big end.
 - Regrind crank pin to the following finished diameter.

$$\begin{array}{rcl} \text{Finished crank} & \text{Measured big end} & \\ \text{pin diameter} & = \text{bore diameter} & - 0.054 \text{ mm} \\ & \text{(including undersize} & - (0.0021 \text{ in.)} \\ & \text{bearing)} & \end{array}$$

- Confirm that bearing clearance is within standard value described at step e).

• Selection of connecting rod bearings:

NOTE

- If bearing is in malcondition, or bearing clearance is out of specification, select a new standard bearing according to the following procedure and install it.
- When replacing crankshaft or connecting rod and its bearing due to any reason, select new standard bearings to be installed by referring to numbers stamped on connecting rod and its cap and/or alphabets stamped on crank web No.3.


- a. Check stamped numbers on connecting rod and its cap as shown.

Three kinds of numbers ("1", "2" and "3") represent the following connecting rod big end inside diameters.

For example, stamped number "1" indicates that corresponding connecting rod big end inside diameter is 53.0000 – 53.0060 mm (2.0867 – 2.0868 in.).

Connecting rod big end inside diameter

Stamped numbers	connecting rod big end inside diameter
1	53.0000 – 53.0060 mm (2.0867 – 2.0868 in.)
2	53.0061 – 53.0120 mm (2.0869 – 2.0870 in.)
3	53.0121 – 53.0180 mm (2.0871 – 2.0873 in.)

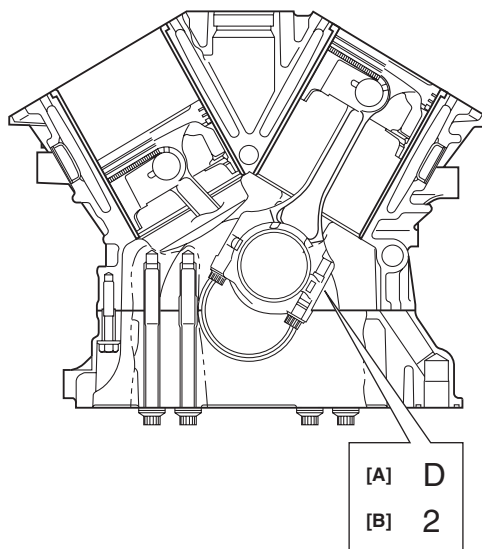


I6JB01140100-01

[A]:	Weight indication mark
[B]:	Connecting rod big end inside diameter number

- b. Next, check crankshaft pin diameter. On crank web No.3, six alphabets are stamped as shown in figure. Three kinds of alphabet (“A”, “B” and “C”) represent the following crankshaft pin diameter respectively. For example, stamped “A” indicates that corresponding crankshaft pin diameter is 49.9940 – 50.0000 mm (1.9683 – 1.9685 in.).

Crankshaft pin diameter

Stamped alphabet	Crankshaft pin diameter
A	49.9940 – 50.0000 mm (1.9683 – 1.9685 in.)
B	49.9880 – 49.9939 mm (1.9681 – 1.9682 in.)
C	49.9820 – 49.9879 mm (1.9678 – 1.9680 in.)

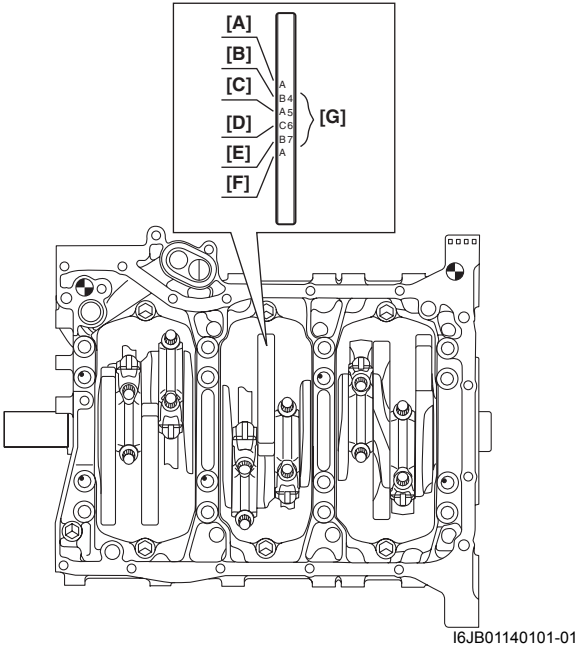


[A]: Crankshaft pin diameter for No.1 cylinder
[B]: Crankshaft pin diameter for No.2 cylinder
[C]: Crankshaft pin diameter for No.3 cylinder
[D]: Crankshaft pin diameter for No.4 cylinder
[E]: Crankshaft pin diameter for No.5 cylinder
[F]: Crankshaft pin diameter for No.6 cylinder
[G]: Crankshaft journal outside diameter tolerance mark

- c. There are five kinds of standard bearings differing in thickness. To distinguish them, they are painted in the following colors at the position as indicated in figure. Each color indicated the following thickness at the center of bearing.

Standard size of connecting rod bearing thickness

Color painted	Bearing thickness
Blue	1.494 – 1.497 mm (0.05882 – 0.05893 in.)
Yellow	1.491 – 1.494 mm (0.05871 – 0.05881 in.)
Nothing	1.488 – 1.491 mm (0.05859 – 0.05870 in.)
Black	1.485 – 1.488 mm (0.05847 – 0.05858 in.)
Green	1.482 – 1.485 mm (0.05835 – 0.05846 in.)

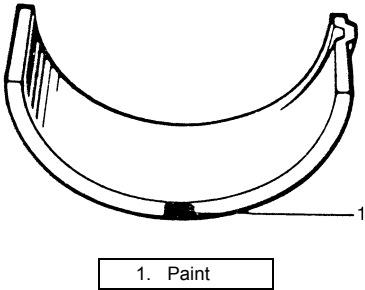

IYSQ01141169-01

- d. From number stamped on connecting rod and its cap and alphabets stamped on crank web No.3, determine new standard bearing to be installed to connecting rod big end inside, by referring to table.

For example, if number stamped on connecting rod and its cap is "1" and alphabet stamped on crank web No.3 is "B", install a new standard bearing painted in "Black" to its connecting rod big end inside.

Specification of new standard connecting rod bearing size

		Number stamped on connecting rod and its cap (connecting rod big end inside diameter)		
		1	2	3
Alphabet stamped on crank web No.3 (Crankshaft pin outer diameter)	A	Green	Black	Nothing
	B	Black	Nothing	Yellow
	C	Nothing	Yellow	Blue
		New standard bearing to be installed.		

- e. Check bearing clearance with newly selected standard bearing referring to "Selection of Connecting Rod Bearing" in this section. If clearance still exceeds its limit, use next thicker bearing and recheck clearance.

- Selection of connecting rod bearings:
Measured each thread diameter of connecting rod bolts (1) at specified measurement points "A" and "B" by using a micrometer (2).
Calculate difference in diameters ("A" – "B"). If it exceeds limit, replace connecting rod.


Connecting rod bolt measurement points

"a": 28.5 mm (1.12 in.)

"b": 42.0 mm (1.65 in.)


Connecting rod bolt diameter difference

Limit: ("A" – "B"): 0.1 mm (0.004 in.)

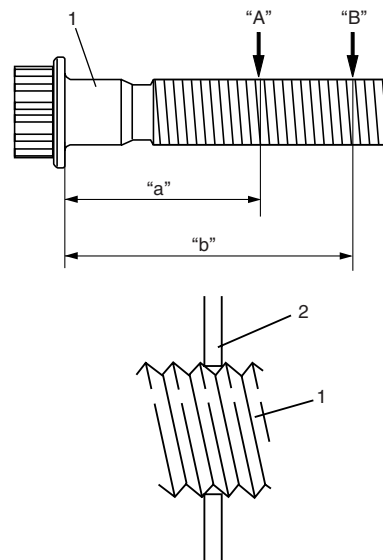

Main Bearings, Crankshaft and Cylinder Block Components

S6JB0B1406043

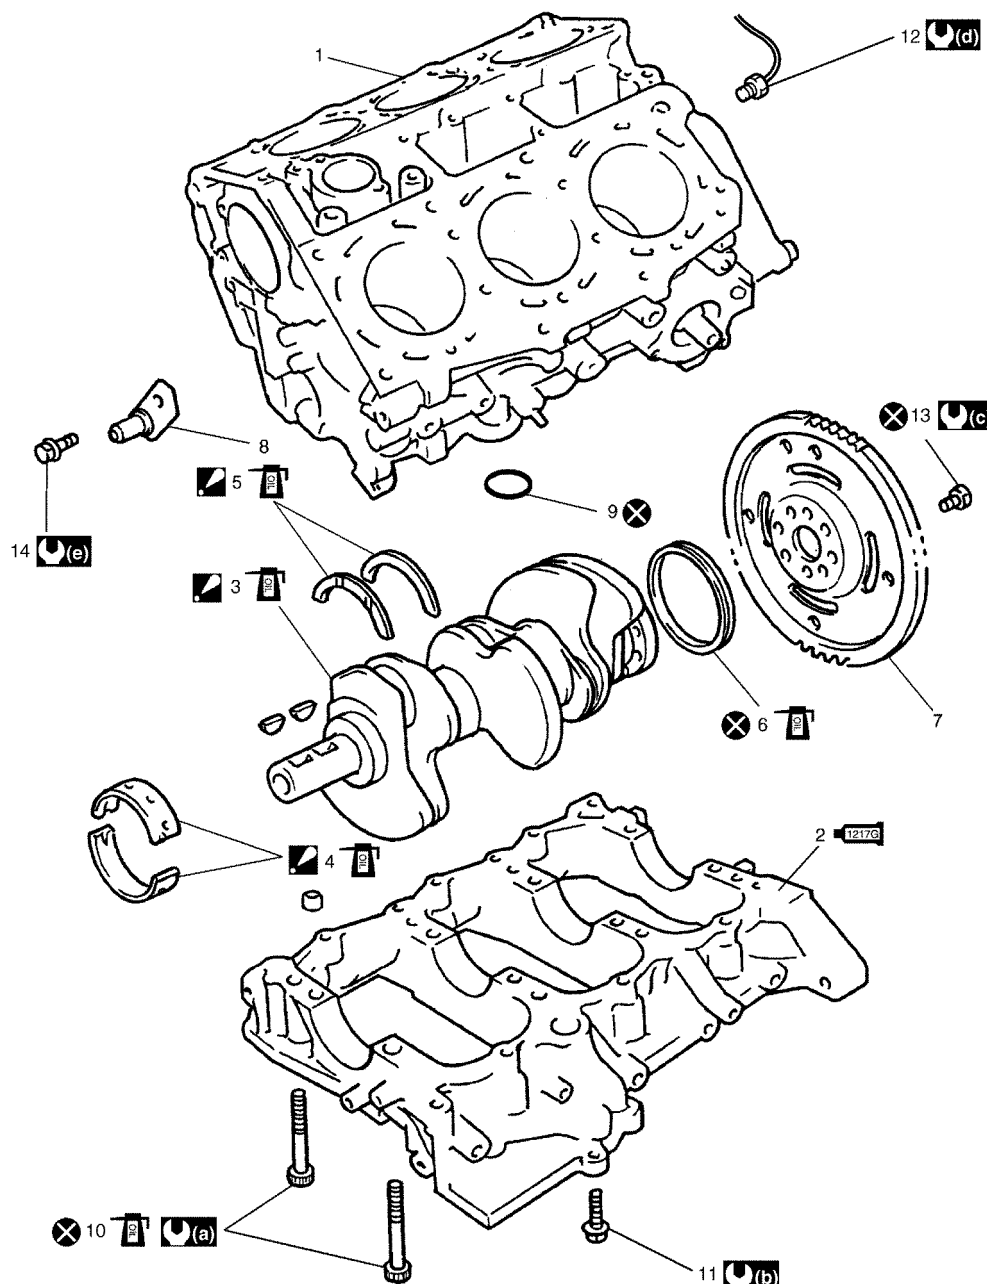

I6JB0B140001-01

1. Cylinder block	8. Timing chain oil jet	: Tighten 30 N·m (3.0 kgf-m, 22.0 lb-ft), 42 N·m (4.2 kgf-m, 30.5 lb-ft) and 40° by the specified procedure.
2. Lower crankcase: Apply sealant 99000-31260 referring to "Installation" under "Main Bearings, Crankshaft and Cylinder Block Removal and Installation".	9. O-ring	: Tighten 27 N·m (2.7 kgf-m, 19.5 lb-ft) by the specified procedure.
3. Crankshaft: Apply engine oil to crankshaft journals.	10. Crankcase bolt (10 mm (0.39 in.) thread diameter)	: 70 N·m (7.0 kgf-m, 51.0 lb-ft)
4. Main bearing: Apply engine oil to bearing inside surfaces only.	11. Crankcase bolt (8 mm (0.31 in.) thread diameter)	: 23 N·m (2.3 kgf-m, 17.0 lb-ft)
5. Thrust bearing: Set bearing facing grooved side to crank weds.	12. Knock sensor	: 11 N·m (1.1 kgf-m, 8.0 lb-ft)
6. Rear oil seal: Apply engine oil to contact part of crankshaft with oil seal lip.	13. Flywheel (or drive plate) bolt	: Do not reuse.
7. Flywheel (M/T) / Drive plate (A/T)	14. Timing chain oil jet bolt	: Apply engine oil.

Main Bearings, Crankshaft and Cylinder Block Removal and Installation


S6JB0B1406044

Removal

- 1) Remove engine assembly from vehicle referring to "Engine Assembly Removal and Installation".
- 2) Remove clutch and flywheel (for M/T vehicle) or drive plate (for A/T vehicle). For clutch removal, refer to "Clutch Cover, Clutch Disc and Flywheel Removal and Installation in Section 5C".
Using special tool (flywheel holder), remove flywheel (M/T vehicle) or drive plate (A/T vehicle).

Special tool

(A): 09924-17811

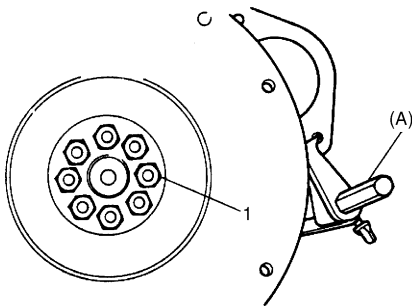

IYSQ01143150-01


1. Flywheel bolt

- 3) Remove electric throttle body assembly with intake collector and intake manifold.
- 4) Remove oil pans (lower and upper) and oil pump strainer. Refer to "Oil Pan and Oil Pump Strainer Removal and Installation in Section 1E".
- 5) Remove cylinder head cover referring to "Cylinder Head Covers Removal and Installation".
- 6) Remove timing chain cover. Refer to "Timing Chain Cover Removal and Installation".
- 7) Remove LH (No.1) bank 2nd timing chain and tensioner referring to "LH (No.1) Bank 2nd Timing Chain and Chain Tensioner Removal and Installation".
- 8) Remove 1st timing chain and tensioner referring to "1st Timing Chain and Chain Tensioner Removal and Installation".
- 9) Remove RH (No.2) bank 2nd timing chain and tensioner referring to "RH (No.2) Bank 2nd Timing Chain and Chain Tensioner Removal and Installation".
- 10) Remove cylinder heads referring to "Valves and Cylinder Heads Removal and Installation".
- 11) Remove pistons and connecting rods referring to "Pistons, Piston Rings, Connecting Rods and Cylinders Removal and Installation".
- 12) Remove oil pump referring to "Oil Pump and Oil Pump Chain Removal and Installation in Section 1E".

- 13) Remove oil pump chain referring to "Oil Pump and Oil Pump Chain Removal and Installation in Section 1E".
- 14) Loosen crankcase bolts by numerical order ("1" through "17") in figure and remove them.

NOTE

Loosen 8 mm (0.31 in.) thread diameter bolts (2) first, then loosen 10 mm (0.39 in.) thread diameter bolts (3).

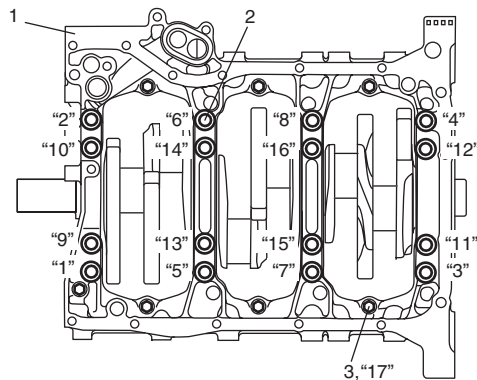

I6JB01140103-01

1. Lower crankcase

- 15) Remove crankshaft from cylinder block.


Installation

NOTE

- All parts to be installed must be perfectly clean.
- Be sure to apply oil crankshaft journals, main bearings, thrust bearings, crank pins, connecting rod bearings, pistons, piston rings and cylinder bores.
- Main bearings, crankcase (bearings caps), connecting rods, connecting rod bearings, connecting rod bearing caps, pistons and piston rings are in combination sets. Do not disturb combination and try to see that each part goes back to where it came from, when installing.
- Clean mating surface of cylinder block and crankcase, remove oil, old sealant and dust from mating surface.

- 1) Fit main bearings (4) to cylinder block (1). One of two halves of main bearing, has oil groove (3). Install this half with oil groove to cylinder block, and another half without oil groove to crankcase. Make sure that two halves are painted in the same color.


2) Install O-ring (2) to cylinder block.

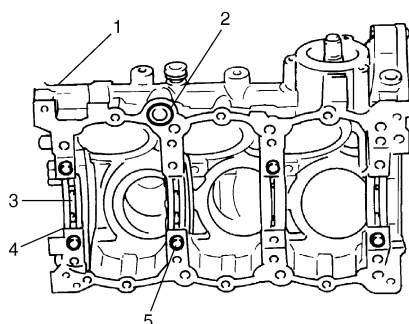

I2JA01143002-01

5. Knock pin

3) Fit thrust bearings (1) to cylinder block between No.4 and No.5 cylinders.
Face oil groove (2) sides to crank webs.

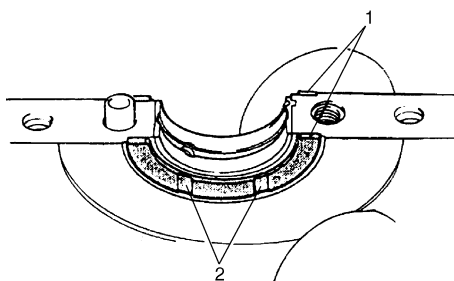


IYSQ01143153-01

4) Put crankshaft to cylinder block.

5) Apply sealant "A" to lower crankcase mating surface area as shown in figure.

"A": Sealant 99000-31260 (SUZUKI Bond No.1217G)

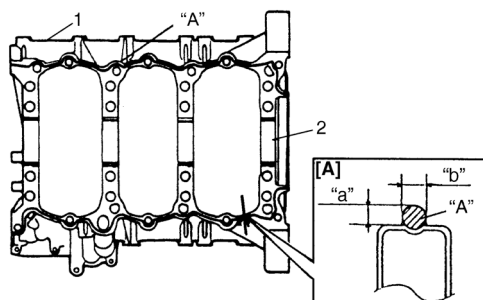

I4JA01140026-02

[A]: Sealant application amount	1. Lower crankcase
"a": 2 mm (0.08 in.)	2. Bearing
"b": 3 mm (0.11 in.)	

6) Install lower crankcase (1) to cylinder block. Apply oil to crankcase bolts before installing them. Tighten crankcase bolts gradually as follows.

- Tighten crankcase bolts (10 mm (0.39 in.) thread diameter) (2) to 30 N·m (3.0 kgf-m, 22.0 lb-ft) according to numerical order in figure.
- In the same manner as Step a), tighten them to 42 N·m (4.2 kgf-m, 30.5 lb-ft).
- In the same manner as Step a), retighten by turning through 40°.
- Tighten crankcase bolts (8 mm (0.31 in.) thread diameter) (3) to specified torque.

NOTE

Tighten 10 mm (0.39 in.) thread diameter bolts first (the following the order shown in figure), then tighten 8 mm (0.31 in.) thread diameter bolts.


Tightening torque

Lower crankcase bolt (10 mm (0.39 in.) thread diameter) (a): Tighten 30 N·m (3.0 kgf-m, 22.0 lb-ft), 0 N·m (0 kgf-m, 0 lb-ft), 42 N·m (4.2 kgf-m, 30.5 lb-ft) and 40° by the specified procedure

Lower crankcase bolt (8 mm (0.31 in.) thread diameter) (b): 27 N·m (2.7 kgf-m, 19.5 lb-ft) by the specified procedure

NOTE

After tightening crankcase bolts, check to be sure that crankshaft rotates smoothly when turned by hand.

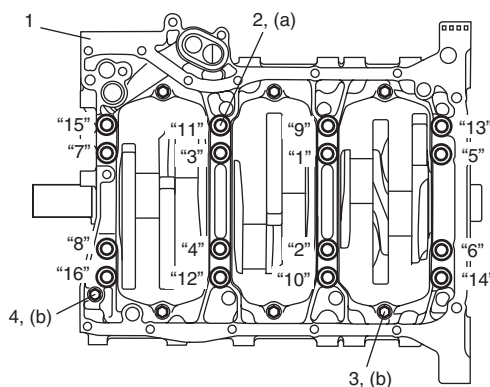

I6JB01140104-01


4. Long bolt (8 mm (0.31 in.) thread diameter)

- 7) Using special tools (Oil seal installer and oil seal guide), install rear oil seal (1).

Special tool

(A): 09911-97710

(B): 09911-97811

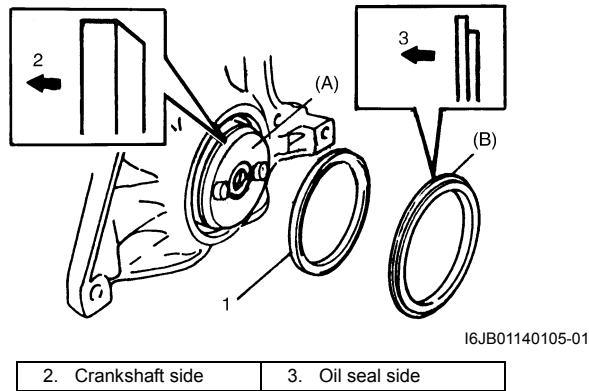


- 8) Install flywheel (M/T vehicle) or drive plate (A/T vehicle). Using special tool, lock flywheel or drive plate, and tighten new flywheel bolts or new drive plate bolts to specification.

Special tool

(A): 09924-17811

Tightening torque

Flywheel (or drive plate) bolt (c): 70 N·m (7.0 kgf-m, 51.0 lb-ft)

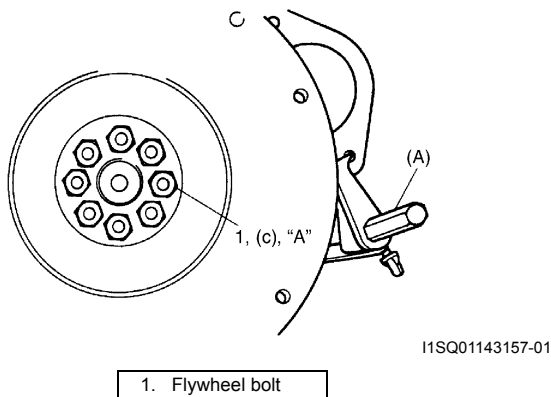

- 9) Install oil pump referring to "Oil Pump and Oil Pump Chain Removal and Installation in Section 1E".
- 10) Install pistons and connecting rods referring to "Pistons, Piston Rings, Connecting Rods and Cylinders Removal and Installation".
- 11) Install oil pump strainer and oil pans referring to "Oil Pan and Oil Pump Strainer Removal and Installation in Section 1E".
- 12) Install cylinder heads assembly to cylinder block referring to "Valves and Cylinder Heads Removal and Installation".
- 13) Install oil pump chain referring to "Oil Pump and Oil Pump Chain Removal and Installation in Section 1E".
- 14) Install RH (No.2) bank 2nd timing chain and tensioner referring to "RH (No.2) Bank 2nd Timing Chain and Chain Tensioner Removal and Installation".
- 15) Install 1st timing chain and tensioner referring to "1st Timing Chain and Chain Tensioner Removal and Installation".
- 16) Install LH (No.1) bank 2nd timing chain and tensioner referring to "LH (No.1) Bank 2nd Timing Chain and Chain Tensioner Removal and Installation".
- 17) Install timing chain cover and crankshaft pulley referring to "Timing Chain Cover Removal and Installation".
- 18) Install cylinder head covers referring to "Cylinder Head Covers Removal and Installation".
- 19) Install intake manifold, intake collector and electric throttle body assembly referring to "Intake Collector and Intake Manifold Removal and Installation" and "Electric Throttle Body Assembly Removal and Installation".
- 20) Install clutch to flywheel (for M/T vehicle). For clutch installation, refer to "Clutch Cover, Clutch Disc and Flywheel Removal and Installation in Section 5C".
- 21) Install engine assembly to vehicle referring to "Engine Assembly Removal and Installation".

Crankshaft Inspection


S6JB0B1406045

Crankshaft Runout

Using a dial gauge, measure runout at center journal. Rotate crankshaft slowly. If runout exceeds its limit, replace crankshaft.

Crankshaft runout

Limit: 0.06 mm (0.0023 in.)

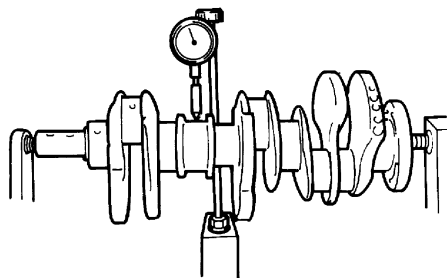

IYSQ01143158-01

Crankshaft Thrust Play

Measure this play with crankshaft set in cylinder block in the normal manner, that is, with thrust bearing, lower crankcase, main bearings and main bearing caps installed. Refer to "Main Bearings, Crankshaft and Cylinder Block Removal and Installation".


Use a dial gauge to read displacement in axial (thrust) direction of crankshaft.

If its limit is exceeded, replace thrust bearing with new standard one or oversize one to obtain standard thrust play.

Crankshaft thrust play

Standard: 0.10 – 0.35 mm (0.0040 – 0.0137 in.)

Limit: 0.38 mm (0.0150 in.)

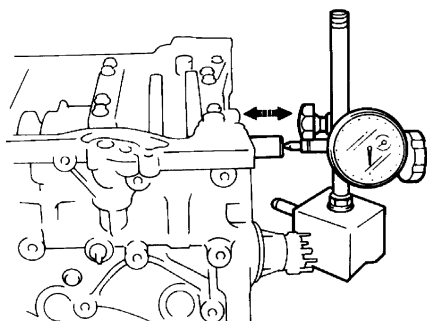


IYSQ01143160-01

Thickness of crankshaft thrust bearing

Standard: 2.425 – 2.475 mm (0.0955 – 0.0974 in.)

Oversize (0.125 mm): 2.488 – 2.538 mm (0.0980 – 0.0999 in.)

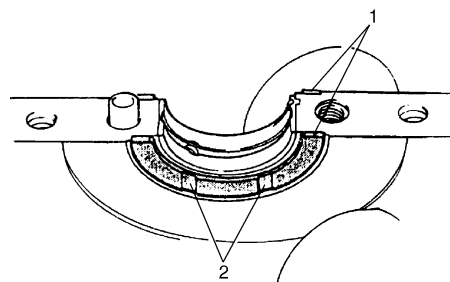

IYSQ01143153-01


1. Thrust bearing	2. Oil groove
-------------------	---------------

Out-of-Round and Taper (Uneven Wear) of Journals

An unevenly worn crankshaft journal shows up as a difference in diameter at a cross section or along its length (or both). This difference, if any, is determined by taking micrometer readings. If any one of journals is badly damaged or if amount of uneven wear in the sense explained above exceeds its limit, regrind or replace crankshaft.

Crank journal out-of-round (a – b) and taper (c – d)

Limit: 0.01 mm (0.0004 in.)

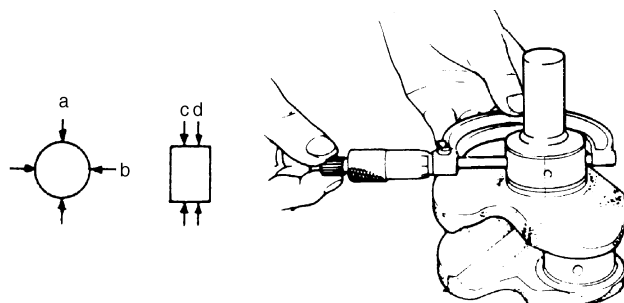

IYSQ01143161-01

Main Bearings Inspection


S6JB0B1406046

Main Bearing General Information

NOTE

Before inspecting main bearings, note the following points.

- Service main bearings are available in standard size and 0.25 mm (0.0098 in.) undersize, and each of them has 5 kinds of bearings differing in tolerance.
- Upper half of bearing (1) has oil groove (2) as shown in figure. Install this half with oil groove toward cylinder block.

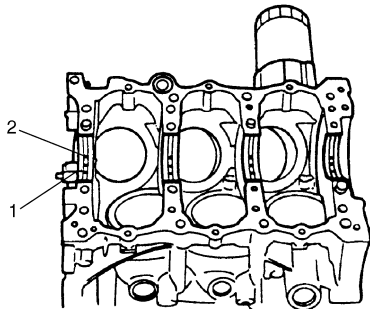

IYSQ01143162-01

- Lower half of bearing does not have oil groove.

Visual Inspection

Check bearings for pitting, scratches, wear or damage. If any malcondition is found, replace both upper and lower halves. Never replace either half without replacing the other half.


Main Bearing Clearance

NOTE

Do not rotate crankshaft while gauging plastic is installed.

Check clearance by using gauging plastic (1) according to the following procedure.

- 1) Remove lower crankcase.
- 2) Clean bearings and main journals.
- 3) Place a piece of gauging plastic (1) to full width of bearing (parallel to crankshaft) on journal, avoiding oil hole.

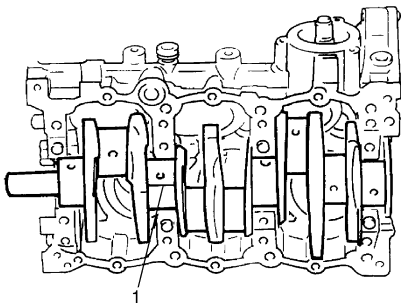

IYSQ01143163-01

- 4) Install lower crankcase to cylinder block without applying sealant referring to "Main Bearings, Crankshaft and Cylinder Block Removal and Installation".
- 5) Remove lower crankcase, and using scale (2) on gauging plastic (1) envelop, measure gauging plastic (1) width at its widest point. If clearance exceeds its limit, replace bearing. Always replace both upper and lower inserts as a unit.

A new standard bearing may produce proper clearance. If not, it will be necessary to regrind crankshaft journal for use of 0.25 mm undersize bearing.

After selecting new bearing, recheck clearance.

Main Bearing Clearance for Standard Size Bearing


Standard: 0.0210 – 0.0390 mm (0.0009 – 0.0015 in.)

Limit: 0.0520 mm (0.0020 in.)

Main Bearing Clearance for Undersize Bearing

Standard: 0.0240 – 0.0420 mm (0.0010 – 0.0016 in.)

Limit: 0.0550 mm (0.0021 in.)

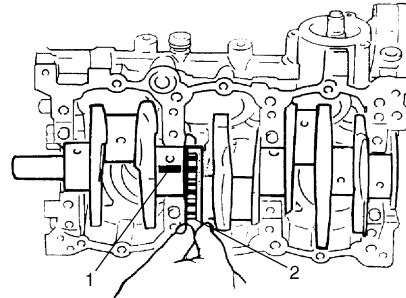

IYSQ01143164-01

Selection of Main Bearings**Standard bearing****NOTE**

The meaning of "Upper" and "Lower" described in this procedure are the following.

- **Upper:** It is meaning of main bearing installed in cylinder block side journal.
- **Lower:** It is meaning of main bearing installed in lower crankcase side journal.


If engine is under one of the following conditions, select a new standard bearing as follow, and install it.

- Bearing is in malcondition.
- Bearing clearance is out of specification.
- Crankshaft or cylinder block is replaced.

- 1) First check journal diameter. As shown in figure, crank web has stamped numbers and alphabet at the center. Six kinds of numbers ("4" through "9") represent the following journal diameters.

Journal diameter

Stamped numbers	Journal diameter
4	65.0030 – 65.0060 mm (2.55917 – 2.55928 in.)
5	65.0000 – 65.0029 mm (2.55905 – 2.55916 in.)
6	64.9970 – 64.9999 mm (2.55893 – 2.55904 in.)
7	64.9940 – 64.9969 mm (2.55882 – 2.55892 in.)
8	64.9910 – 64.9939 mm (2.55870 – 2.55881 in.)
9	64.9880 – 64.9909 mm (2.55858 – 2.55869 in.)

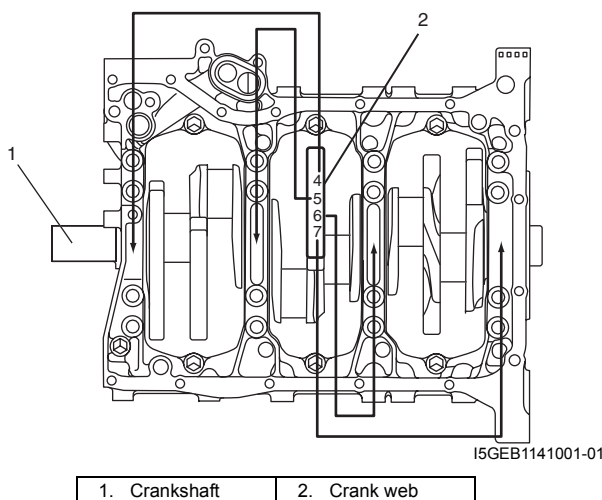


- 2) Next, check journal bore diameter.

On lower crankcase, 4 alphabets (1) are stamped as shown in figure.

Three kinds of alphabets (A, B and C) represent the following journal bore diameters.

Journal bore diameter

Stamped alphabet	Bearing cap bore diameter (without bearing)
A	70.0000 – 70.0060 mm (2.75590 – 2.75613 in.)
B	70.0061 – 70.0120 mm (2.75614 – 2.75637 in.)
C	70.0121 – 70.0180 mm (2.75638 – 2.75660 in.)

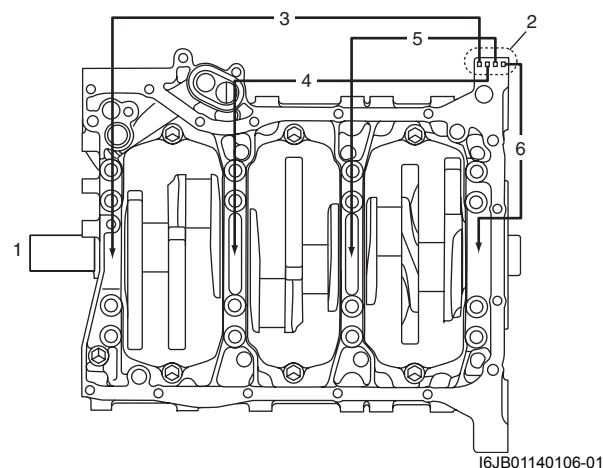

1. Crankshaft pulley side	4. No.2 bearing
2. Stamped alphabets	5. No.3 bearing
3. No.1 bearing	6. No.4 bearing

- 3) There are 5 kinds of standard bearings differing in thickness. To distinguish them, they are painted in the following colors at the position as indicated in figure.

Each color indicates the following thickness at the center of bearing.


NOTE

The following bearing are not supplied because they are unnecessary in this selection procedure.

- Upper main bearing: Brown
- Lower main bearing: Black

Standard size main bearing thickness

Color painted	Bearing thickness
Black	2.4970 – 2.5000 mm (0.09831 – 0.09842 in.)
Colorless (no paint)	2.5000 – 2.5030 mm (0.09843 – 0.09854 in.)
Yellow	2.5030 – 2.5060 mm (0.09855 – 0.09866 in.)
Blue	2.5060 – 2.5090 mm (0.09867 – 0.09877 in.)
Pink	2.5090 – 2.5120 mm (0.09878 – 0.09889 in.)
Brown	2.5120 – 2.5150 mm (0.09890 – 0.09901 in.)

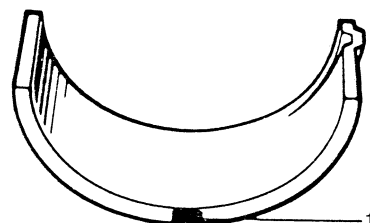

IYSQ01141169-01

1. Paint

- 4) From number stamped on crank webs at its center and alphabets stamped on cylinder block lower side, determine new standard bearing to be installed to journal referring to cross-reference table below.

For example, if number stamped on crank web is “4” and alphabet stamped on cylinder block is “A”, install new standard bearing painted in “Black” to cylinder block side journal and “Colorless” to lower crankcase side journal.

Main bearing cross-reference table (standard bearing)

		Stamped number on crank web					
		4	5	6	7	8	9
Stamped alphabet on lower crankcase	A	Upper: Black Lower: Colorless	Colorless	Upper: Colorless Lower: Yellow	Yellow	Upper: Yellow Lower: Blue	Blue
	B	Upper: Colorless Lower: Yellow	Yellow	Upper: Yellow Lower: Blue	Blue	Upper: Blue Lower: Pink	Pink
	C	Upper: Yellow Lower: Blue	Blue	Upper: Blue Lower: Pink	Pink	Upper: Pink Lower: Brown	Upper: Pink Lower: Brown

- 5) Using gauging plastic, check bearing clearance with newly selected standard bearing referring to “Main Bearing Clearance: ”.

If clearance still exceeds its limit, use next thicker bearing and recheck clearance.


Undersize bearing (0.25 mm)

0.25 mm (0.0098 in.) undersize bearing is available, in five kinds varying in thickness.

To distinguish them, each bearing is painted in the following colors at such position as indicated in figure. Each color represents the following thickness at the center of bearing.

Undersize main bearing thickness

Color painted	Bearing thickness
Black & Red	2.6220 – 2.6250 mm (0.10322 – 0.10334 in.)
Red only	2.6250 – 2.6280 mm (0.10335 – 0.10346 in.)
Yellow & Red	2.6280 – 2.6310 mm (0.10347 – 0.10358 in.)
Blue & Red	2.6310 – 2.6340 mm (0.10359 – 0.10370 in.)
Pink & Red	2.6340 – 2.6370 mm (0.10371 – 0.10382 in.)

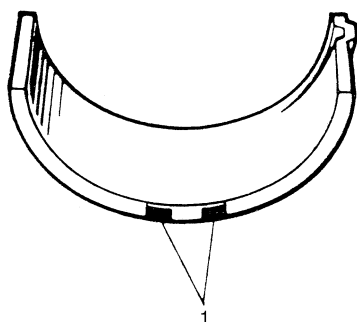

1. Paint

IYSQ01141171-01


- If necessary, regrind crankshaft journal and select undersize bearing to use with it as follows.
 - Regrind journal to the following finished diameter.

Finished journal diameter

64.7380 – 64.7560 mm (2.54874 – 2.54944 in.)

- Using micrometer, measure reground journal diameter.

Measurement should be taken in two directions perpendicular to each other in order to check for out-of-round.

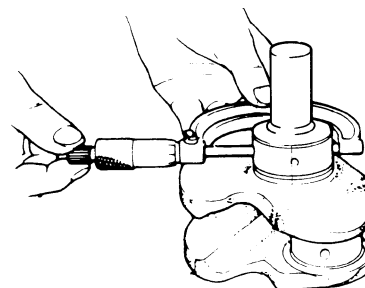

IYSQ01143167-01

- Using journal diameter measured and alphabets stamped on cylinder block, select undersize bearing referring to cross-reference table below. Check bearing clearance with newly selected undersize bearing referring to "Main Bearing Clearance: ".

Main bearing cross-reference table (undersize bearing)


		Measured journal diameter			
		64.7500 – 64.7560 mm (2.54921 – 2.54944 in.)	64.7440 – 64.7499 mm (2.54897 – 2.54920 in.)	64.7380 – 64.7439 mm (2.54873 – 2.54896 in.)	
Alphabets stamped on lower crankcase	A	Black & Red	Red only	Yellow & Red	
	B	Red only	Yellow & Red	Blue & Red	
	C	Yellow & Red	Blue & Red	Pink & Red	

Rear Oil Seal and Flywheel Inspection

S6JB0B1406047

Rear Oil Seal

Carefully inspect oil seal for wear or damage. If lip portion is worn or damaged, replace oil seal.

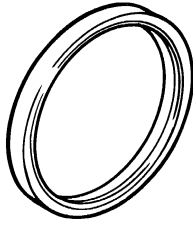


IYSQ01143168-01

Flywheel

- If ring gear is damaged, cracked or worn, replace flywheel.
- If the surface contacting clutch disc is damaged or excessively worn, replace flywheel.
- Check flywheel for face runout with a dial gauge. If runout exceeds its limit, replace flywheel.

Flywheel runout

Limit: 0.2 mm (0.0078 in.)

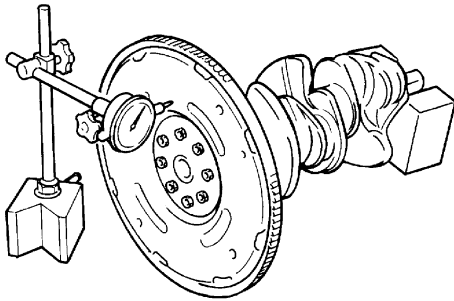

IYSQ01143169-01

Cylinder Block Inspection


S6JB0B1406048

Distortion of Gasketed Surface

Using straightedge and thickness gauge, check gasketed surface for distortion. If flatness exceeds its limit, correct or replace it.

Gasketed surface flatness

Limit: 0.06 mm (0.0024 in.)

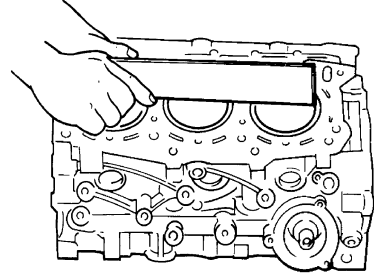

IYSQ01143170-01


Honing or reboring cylinders

- 1) When any cylinder needs reboring, all other cylinders must also be rebored at the same time.
- 2) Select oversized piston according to amount of cylinder wear.

Oversize piston diameter

88.470 – 88.490 mm (3.4831 – 3.4838 in.)

- 3) Using micrometer, measure piston diameter.

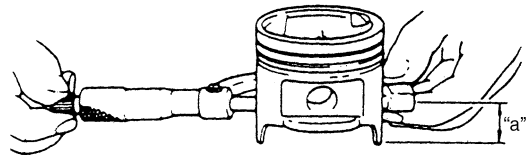

I6JB01140107-01

"a": 26.5 mm (1.04 in.)

- 4) Calculate cylinder bore diameter to be rebored as follows.

$$D = A + B - C$$

D: Cylinder bore diameter to be rebored

A: Piston diameter as measured

B: Piston clearance = 0.02 – 0.04 mm (0.0008 – 0.0015 in.)

C: Allowance for honing = 0.02 mm (0.0008 in.)

- 5) Rebore and hone cylinder to calculated dimension.

NOTE

Before reboring, install lower crankcase in place and tighten to specification to avoid distortion of bearing bores.

- 6) Measure piston clearance after honing.

Specifications

Tightening Torque Specifications

S6JB0B1407001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lb·ft	
Camshaft housing bolts	11 N·m (1.1 kgf·m, 7.5 lb·ft) by the specified procedure			⌚ / ⌚
Camshaft housing bolt	11	1.1	8.0	⌚
Cylinder head cover nut	10.5	1.1	7.5	⌚
Engine block heater mounting bolt	11	1.1	8.0	⌚
Timing chain cover bolt	11	1.1	8.0	⌚
Crankshaft pulley bolt	150	15	108.5	⌚
Timing chain guide No.4 bolt	11	1.1	8.0	⌚
Camshaft timing sprocket bolt	80	8.0	58.0	⌚
Timing chain tensioner adjuster No.3 bolt	Tighten 11 N·m (1.1 kgf·m, 7.5 lb·ft) by the specified procedure			⌚
Timing chain tensioner adjuster No.3 nut	Tighten 45 N·m (4.5 kgf·m, 32.5 lb·ft) by the specified procedure			⌚
RH (No.2) bank 1st timing chain intake camshaft sprocket bolt	80	8.0	58.0	⌚
Timing chain tensioner nut	25	2.5	18.0	⌚
Idler sprocket No.1 bolt	55	5.5	40.0	⌚
Timing chain tensioner adjuster No.1 bolt	11	1.1	8.0	⌚
Timing chain guide No.1 and No.2 bolt	9	0.9	6.5	⌚
Timing chain tensioner adjuster No.2 bolt	11	1.1	8.0	⌚
Camshaft housing bolt	11 N·m (1.1 kgf·m, 8.0 lb·ft) by the specified procedure			⌚
Timing chain guide No.3 bolt	11	1.1	8.0	⌚
Cylinder head bolt	Tighten 53 N·m (5.3 kgf·m, 38.5 lb·ft), 84 N·m (8.4 kgf·m, 61.0 lb·ft), 0 N·m (0 kgf·m, 0 lb·ft), 53 N·m (5.3 kgf·m, 38.5 lb·ft) and 105 N·m (10.5 kgf·m, 76.0 lb·ft) by the specified procedure			⌚
Cylinder head bolt (hex hole bolt)	Tighten 11 N·m (1.1 kgf·m, 7.5 lb·ft) by the specified procedure			⌚
Connecting rod bolt	Tighten 15 N·m (1.5 kgf·m, 11.0 lb·ft), 45° and 45° by the specified procedure.			⌚
Lower crankcase bolt (10 mm (0.39 in.) thread diameter)	Tighten 30 N·m (3.0 kgf·m, 22.0 lb·ft), 0 N·m (0 kgf·m, 0 lb·ft), 42 N·m (4.2 kgf·m, 30.5 lb·ft) and 40° by the specified procedure			⌚
Lower crankcase bolt (8 mm (0.31 in.) thread diameter)	27 N·m (2.7 kgf·m, 19.5 lb·ft) by the specified procedure			⌚
Flywheel (or drive plate) bolt	70	7.0	51.0	⌚

NOTE

The specified tightening torque is also described in the following.

“Air Intake System Components”

“Engine Mounting Components”

“Timing Chain Cover Components”

“LH (No.1) Bank 2nd Timing Chain and Chain Tensioner Components”

“1st Timing Chain and Chain Tensioner Components”

“RH (No.2) Bank 2nd Timing Chain and Chain Tensioner Components”

“Camshafts, Tappets and Shims Components”

“Valves and Cylinder Heads Components”

“Pistons, Piston Rings, Connecting Rods and Cylinders Components”

“Main Bearings, Crankshaft and Cylinder Block Components”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Special Tools and Equipment

Recommended Service Material

S6JB0B1408001

Material	SUZUKI recommended product or Specification		Note
Sealant	SUZUKI Bond No.1217G	P/No.: 99000-31260	🔧 / 🔧
Water tight sealant	SUZUKI Bond No.1207B	P/No.: 99000-31140	🔧
	SUZUKI Bond No.1207F	P/No.: 99000-31250	🔧 / 🔧

NOTE

Required service material is also described in the following.

“Timing Chain Cover Components”

“LH (No.1) Bank 2nd Timing Chain and Chain Tensioner Components”

“1st Timing Chain and Chain Tensioner Components”

“RH (No.2) Bank 2nd Timing Chain and Chain Tensioner Components”

“Camshafts, Tappets and Shims Components”


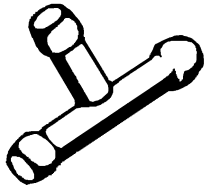
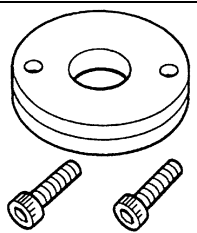
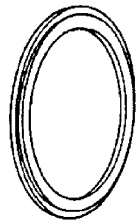
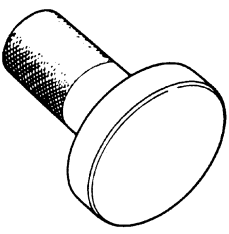
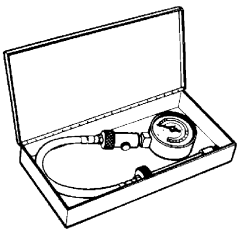
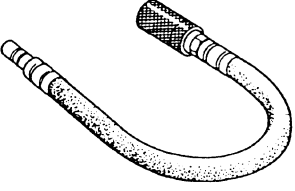
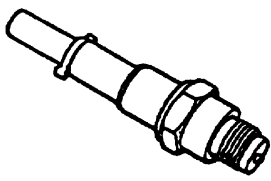
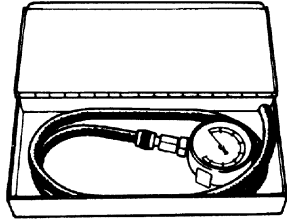
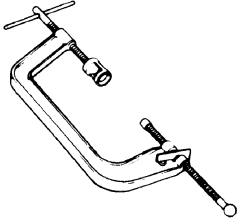
“Valves and Cylinder Heads Components”














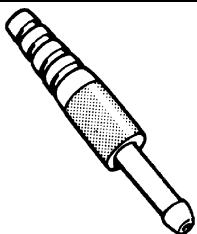
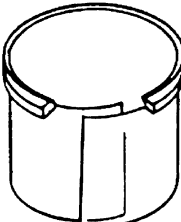
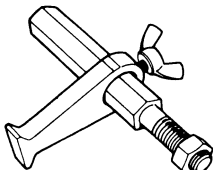
“Pistons, Piston Rings, Connecting Rods and Cylinders Components”

“Main Bearings, Crankshaft and Cylinder Block Components”

Special Tool

S6JB0B1408002

09355-35754-600 Hose 🔧		09367-04002 3-way joint 🔧	
09911-97710 Oil seal guide 🔧		09911-97811 Oil seal installer 🔧	
09913-75510 Bearing installer 🔧		09915-64512 Compression gauge 🔧	
09915-64530 Compression gauge hose 🔧		09915-67010 Compression gauge attachment (C) 🔧	
09915-67311 Vacuum gauge 🔧		09916-14510 Valve lifter 🔧 / 🔧	

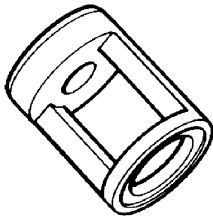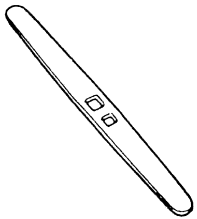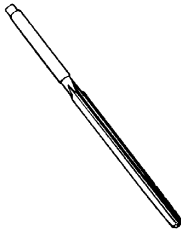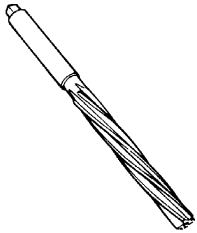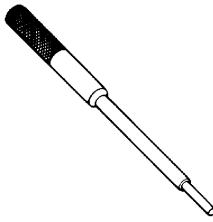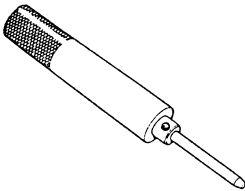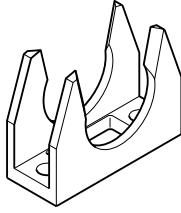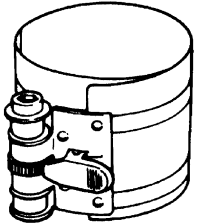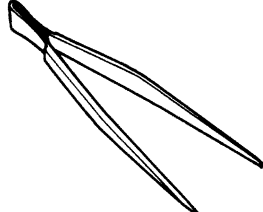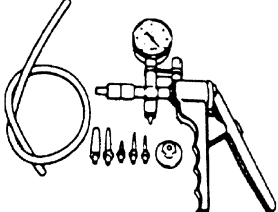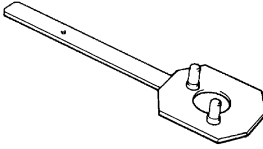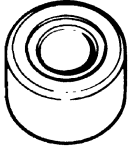09916-14910 Valve spring compressor attachment 	09916-34542 Reamer handle 
09916-37810 Valve guide reamer (6 mm) 	09916-38210 Valve guide reamer (11 mm) 
09916-44910 Valve guide installer & remover 	09916-58210 Valve guide installer handle 
09916-66510 Tappet holder 	09916-77310 Piston ring compressor (50- 125 mm) 
09916-84511 Forceps 	09917-47011 Vacuum pump gauge 
09917-68221 Camshaft pulley holder 	09917-87810 Valve guide installer attachment (protrusion: 13.5 mm) 
09917-98221 Valve guide stem attachment 	09918-08210 Vacuum gauge hose joint 
09919-28610 Protector sleeve 	09924-17811 Flywheel holder 

1D-77 Engine Mechanical:


09926-58010

Bearing remover attachment



09944-36011

Steering wheel remover

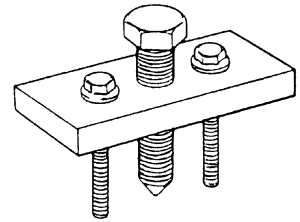


Engine Lubrication System

General Description

Engine Lubrication Description

S6JB0B1501001

The oil pump is of a trochoid type, and mounted under the crankshaft. Oil is drawn up through the oil pump strainer and passed through the pump to the oil filter. The filtered oil flows into 3 paths in cylinder block. In one path, oil reaches the crankshaft main bearings. Oil from the crankshaft main bearings is supplied to the connecting rod bearings by means of intersecting passages drilled in the crankshaft, and then injected from the big end of connecting rod to lubricate piston, rings, and cylinder wall. In other paths oil goes up to the cylinder heads and lubricates valves and camshafts, etc., after passing through the internal oil way of camshafts. An oil relief valve is provided on the oil pump. This valve starts relieving oil pressure when the pressure exceeds the specified pressure.

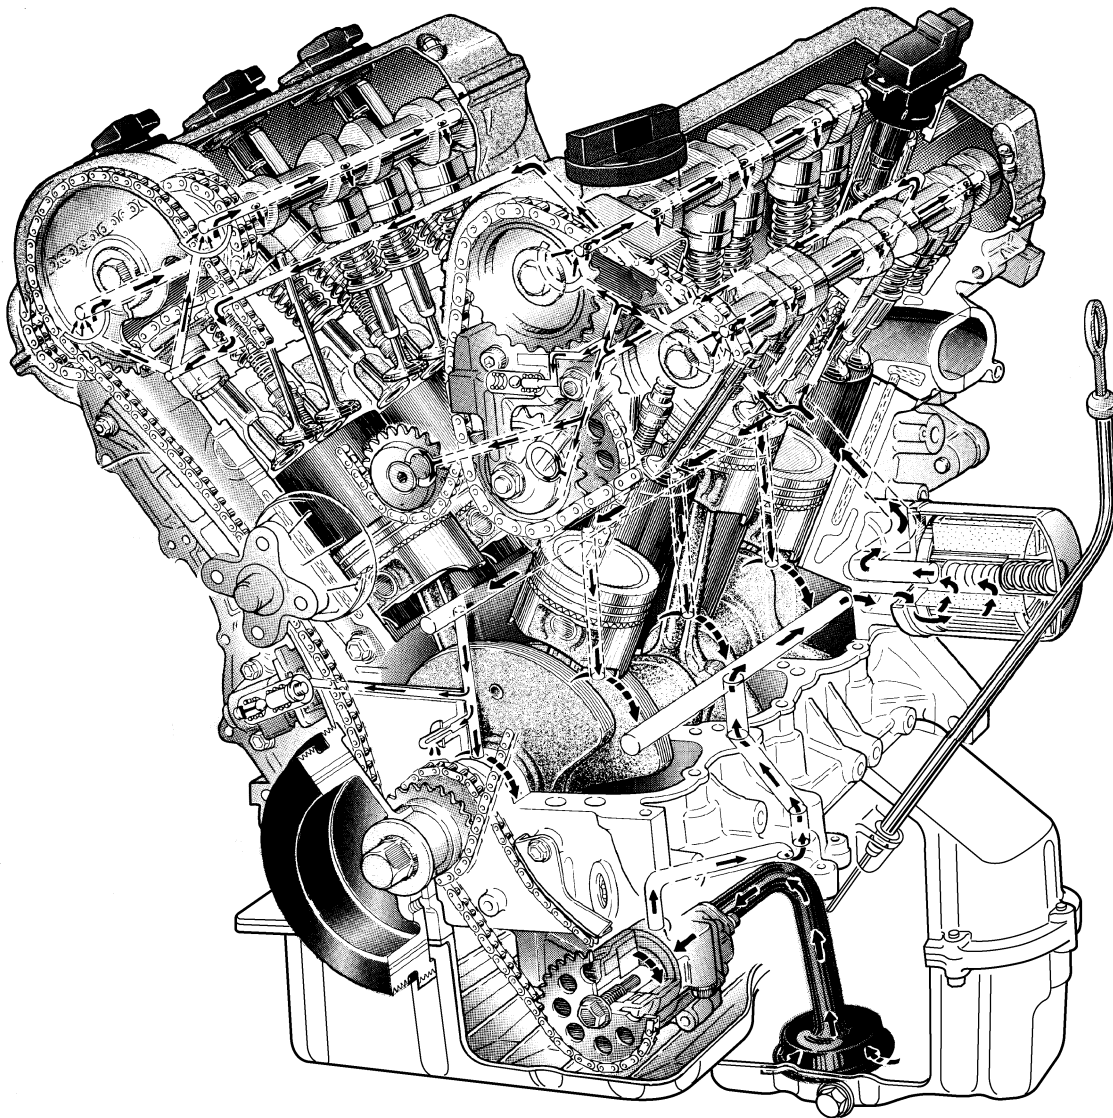

I6JB01150001-02

Diagnostic Information and Procedures

Oil Pressure Check


S6JB0B1504001

NOTE

Prior to checking oil pressure, check the followings.

- **Oil level in oil pan**
If oil level is low, add oil up to Full level hole on oil level gauge.
- **Oil quality**
If oil is discolored or deteriorated, change it.
For particular oil to be used, refer to "Engine Oil and Filter Change in Section 0B".
- **Oil leaks**
If leak is found, repair it.

- 1) Disconnect suction hose and discharge hose from A/C compressor referring to "Compressor Assembly Removal and Installation in Section 7B".
- 2) Remove oil pressure switch (1) from cylinder block.

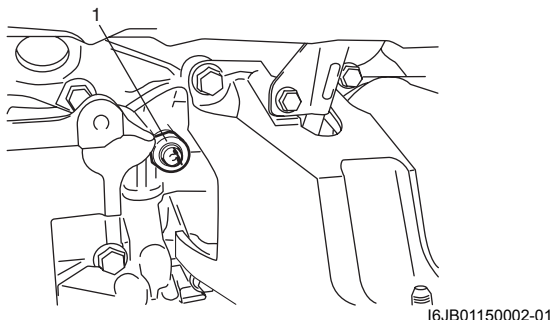


I6JB01150002-01

- 3) Remove steering lower shaft assembly referring to "Steering Lower Shaft Assembly Removal and Installation in Section 6B".
- 4) Install special tool (oil pressure gauge) to vacated threaded hole.
Use oil pressure gauge (special tool (A)) with special tool (B) instead of the steel adaptor supplied in special tool (A).

Special tool

(A): 09915-77311

(B): 09915-76510

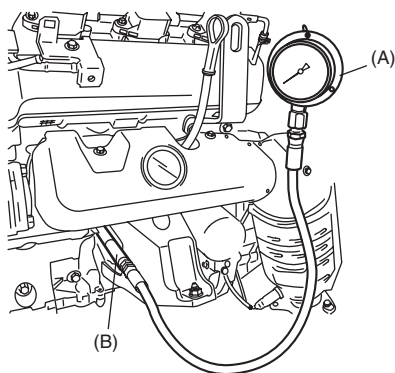

I6JB01150003-01

- 5) Start engine and warm it up to normal operating temperature.
- 6) After warming up, raise engine speed to 3,000 rpm and measure oil pressure.

Oil pressure specifications

250 kPa (2.5 kg/cm², 36.25 psi) or more at 3,000 rpm


- 7) After checking oil pressure, stop engine and remove oil pressure gauge.
- 8) Before reinstalling oil pressure switch, be sure to wrap its screw threads with sealing tape and tighten switch to specified torque.

NOTE

If sealing tape edge is bulged out from screw threads of switch, cut it off.

Tightening torque

Oil pressure switch (a): 13 N·m (1.3 kgf-m, 9.5 lb-ft)

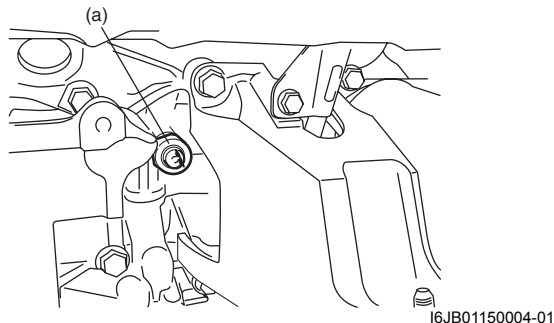


I6JB01150004-01

- 9) Connect suction hose and discharge hose to A/C compressor referring to "Compressor Assembly Removal and Installation in Section 7B".
- 10) Start engine and check oil pressure switch for oil leakage.

Repair Instructions

Oil Pan and Oil Pump Strainer Components

S6JB0B1506001

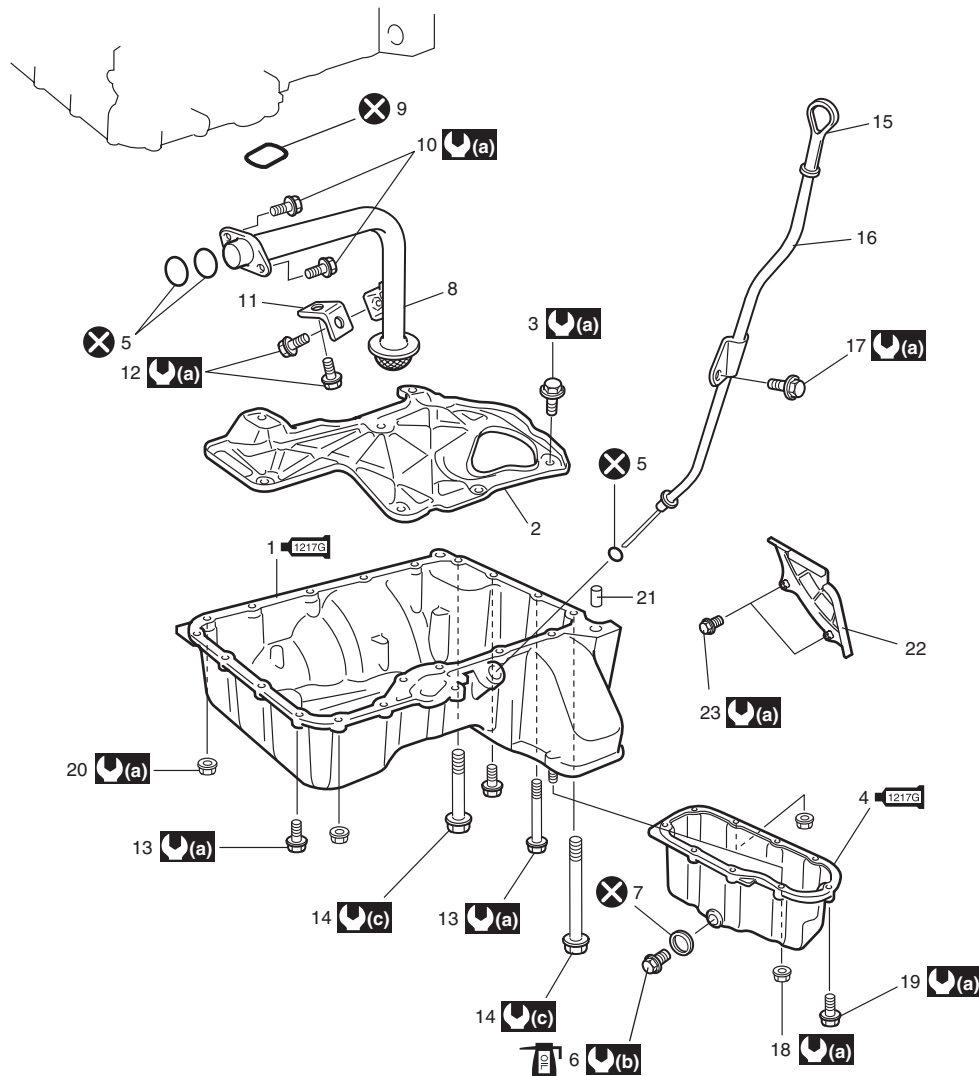

I6JB01150005-04


1217G 1. Upper oil pan : Apply sealant 99000-31260 referring to "Oil Pan and Oil Pump Strainer Removal and Installation".	15. Oil level gauge
2. Oil pan baffle plate	16. Oil level gauge guide
3. Oil pan baffle plate bolt	17. Oil level gauge guide bolt
1217G 4. Lower oil pan : Apply sealant 9900-31260 referring to "Oil Pan and Oil Pump Strainer Removal and Installation".	18. Lower oil pan nut
5. O-ring	19. Lower oil pan bolt
6. Drain plug	20. Upper oil pan mounting nut
7. Gasket	21. Dowel pin
8. Oil pump strainer	22. Drive plate cover (A/T) or clutch housing lower plate (M/T)
9. O-ring	23. Drive plate cover (A/T) bolt or clutch housing lower plate (M/T) bolt
10. Oil pump strainer bolt	(a) : 11 N·m (1.1 kgf-m, 8.0 lb-ft)
11. Oil pump strainer bracket	(b) : 35 N·m (3.5 kgf-m, 25.5 lb-ft)
12. Oil pump strainer bracket bolt	(c) : 25 N·m (2.5 kgf-m, 18.0 lb-ft)
13. Upper oil pan mounting bolt (M6)	: Apply engine oil to bolt thread
14. Upper oil pan mounting bolt (M8)	X : Do not reuse.

Oil Pan and Oil Pump Strainer Removal and Installation

S6JB0B1506002


Removal

- 1) Remove oil level gauge guide.
- 2) Raise vehicle.
- 3) Remove engine under cover (1).
- 4) Drain engine oil by removing drain plug (2).

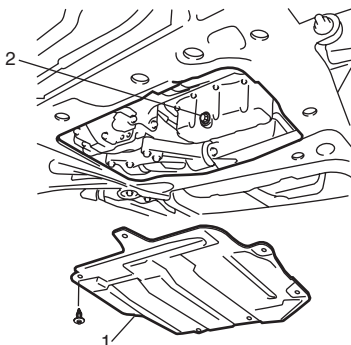


I6JB01150006-01

- 5) Remove front suspension frame referring to "Front Suspension Frame, Stabilizer Bar and/or Bushings Removal and Installation in Section 2B".
- 6) Remove lower oil pan (2) from upper oil pan (1).

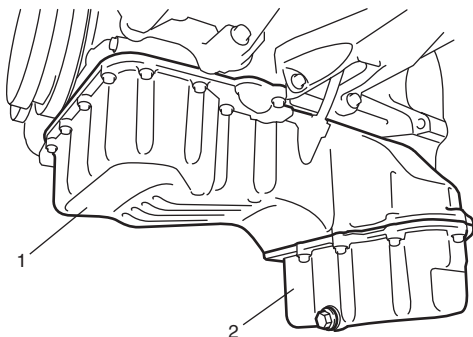

I6JB01150007-01


- 7) Remove drive plate cover (A/T) or clutch housing lower plate (M/T) from transmission.
- 8) Remove oil pump strainer bracket.
- 9) Remove upper oil pan from lower crankcase.
- 10) Remove oil pump strainer (1) and O-rings (2) from oil pump.

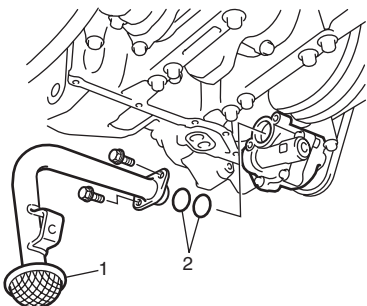

I6JB01150008-01

Installation

- 1) Install new O-ring (1) to lower crankcase as shown in figure.

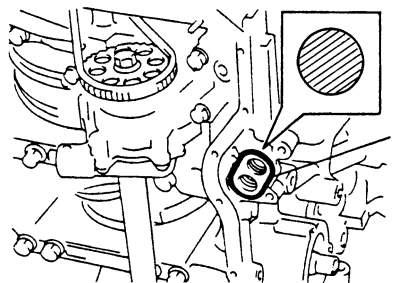


IYSQ01153005-01

- 2) Install new O-rings (2) to oil pump strainer (1) securely as shown in figure. Tighten strainer bolts to specified torque.

Tightening torque

Oil pump strainer bolt (a): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

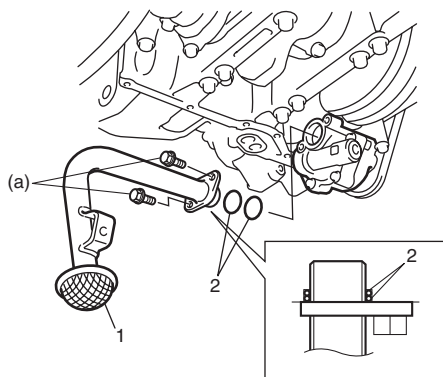

I6JB01150009-01

- 3) Apply sealant "A" to upper oil pan (1) sealing surface area as shown in figure.


"A": Sealant 99000-31260 (SUZUKI Bond No.1217G)

Sealant amount for upper oil pan

Width "a": 3 mm (0.12 in.)

Height "b": 2 mm (0.08 in.)

- 4) Install dowel pin (2) to upper oil pan.

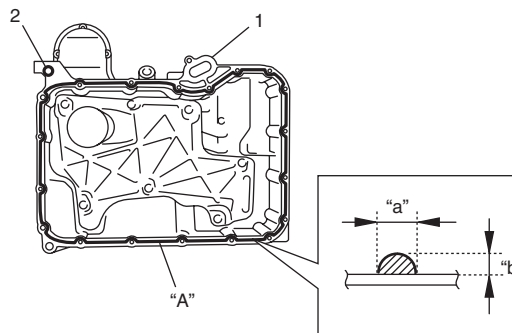

I6JB01150010-03


- 5) After fitting upper oil pan (1) to lower crankcase, run in securing bolts and start tightening at the center: move wrench outward, tightening one bolt at a time. Tighten bolts and nuts to specified torque.

Tightening torque

Upper oil pan bolt (M6) (a): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

Upper oil pan bolt (M8) (b): 25 N·m (2.5 kgf-m, 19.5 lb-ft)

Upper oil pan nut (c): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

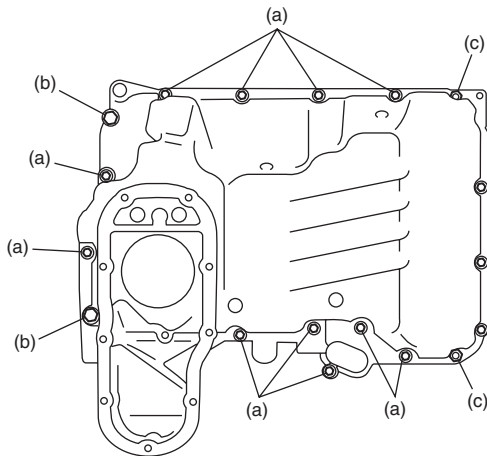


I6JB01150011-01

- 6) Install bracket (3) to oil pump strainer (2) and upper oil pan (1).

Tightening torque

Oil pump strainer bracket bolt (a): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

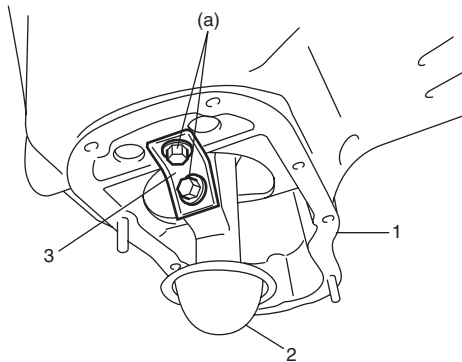

I6JB01150012-01


- 7) Apply sealant "A" to lower oil pan sealing surface area as shown in figure.

"A": Sealant 99000-31260 (SUZUKI Bond No.1217G)

Sealant amount for lower oil pan

Width "a": 3 mm (0.12 in.)

Height "b": 2 mm (0.08 in.)

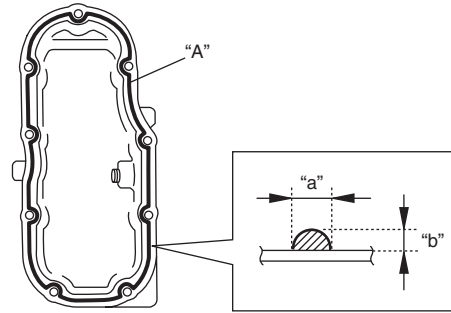


I6JB01150013-01

- 8) After fitting lower oil pan to upper oil pan, run in securing bolts and start tightening at the center: move wrench outward, tightening one bolt at a time. Tighten bolts and nuts to specified torque.

Tightening torque

Lower oil pan bolt (a): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

Lower oil pan nut (b): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

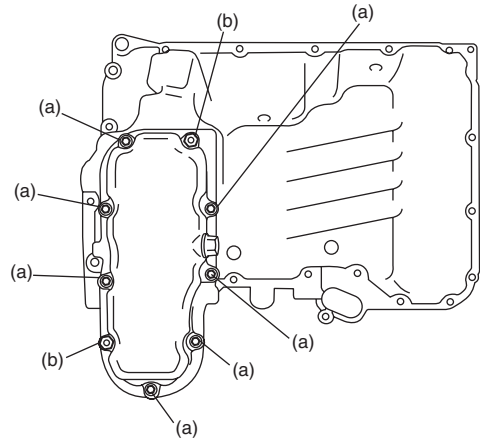


I6JB01150014-01

- 9) Install new gasket (1) and drain plug (2) to oil pan after applying engine oil.

Tightening torque

Engine oil drain plug (f): 35 N·m (3.5 kgf-m, 25.5 lb-ft)

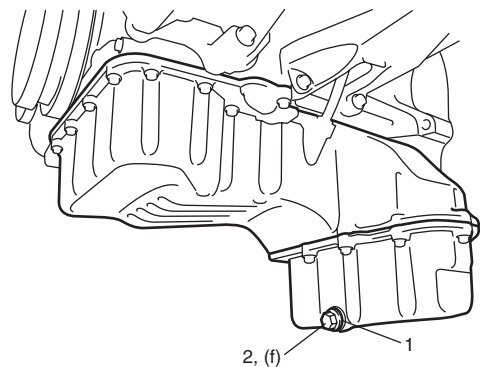


I6JB01150015-01

1E-6 Engine Lubrication System:

- 10) Install drive plate cover (A/T) or clutch housing lower plate (M/T) to transmission.

Tightening torque

Drive plate cover (A/T) bolt or clutch housing lower plate (M/T) bolt (a): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

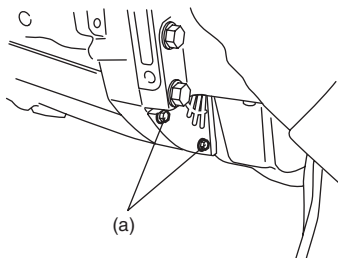

I6JB01150020-01

- 11) Install front suspension frame referring to “Front Suspension Frame, Stabilizer Bar and/or Bushings Removal and Installation in Section 2B”.

- 12) Install engine under cover.

- 13) Install oil level gauge guide with new O-ring.

Tightening torque

Oil level gauge guide bolt: 11 N·m (1.1 kgf-m, 8.0 lb-ft)

- 14) Refill engine with engine oil referring to “Engine Oil and Filter Change in Section 0B”.

Oil Pan and Oil Pump Strainer Cleaning


S6JB0B1506003

- Inside of oil pans and oil pump strainer screen.
- Clean sealing surface on upper oil pan, lower oil pan and lower crankcase.





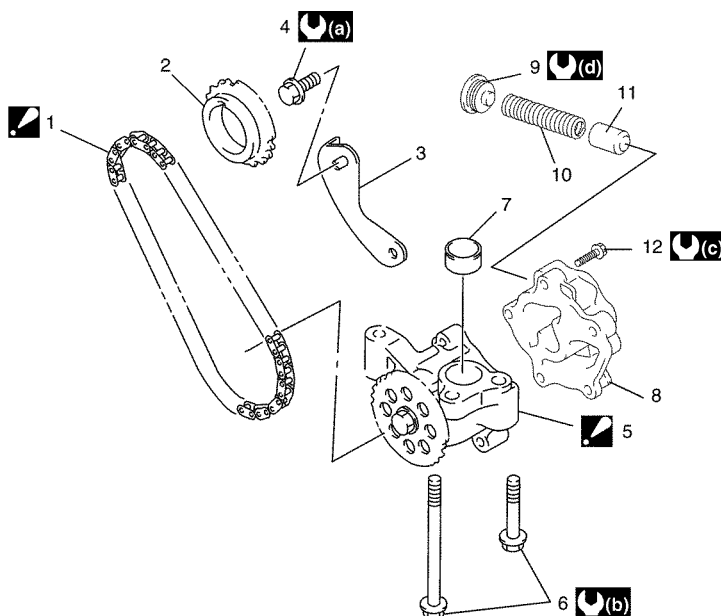

Remove oil, old sealant and dust from sealing surface.

Oil Pump and Oil Pump Chain Components

S6JB0B1506004



I6JB01150019-02

 1. Oil pump chain: Install oil pump chain and adjust its tension by the specified procedure	9. Retainer
2. Oil pump drive sprocket	10. Relief spring
3. Oil pump chain guide	11. Relief valve
4. Oil pump chain guide bolt	12. Oil pump bolt
 5. Oil pump case No.1 : Do not disassemble.	 : 11 N·m (1.1 kgf-m, 8.0 lb-ft)
6. Oil pump mounting bolt	 : 25 N·m (2.5 kgf-m, 18.0 lb-ft)
7. Pin	 : 12 N·m (1.2 kgf-m, 9.0 lb-ft)
8. Oil pump case No. 2	 : 29 N·m (2.9 kgf-m, 21.0 lb-ft)

Oil Pump and Oil Pump Chain Removal and Installation

S6JB0B1506005

Removal


- 1) Remove engine assembly from vehicle referring to "Engine Assembly Removal and Installation in Section 1D".
- 2) Remove timing chain cover. Refer to "Timing Chain Cover Removal and Installation in Section 1D".
- 3) Remove LH bank 2nd timing chain. Refer to "LH (No.1) Bank 2nd Timing Chain and Chain Tensioner Removal and Installation in Section 1D".
- 4) Remove 1st timing chain. Refer to "1st Timing Chain and Chain Tensioner Removal and Installation in Section 1D".
- 5) Remove oil pump chain guide.
- 6) Remove oil pump mounting bolts.
- 7) Remove oil pump drive sprocket, oil pump chain and oil pump all together.

Installation

- 1) Install oil pump drive sprocket (2), oil pump chain with oil pump to engine assembly. Tighten oil pump mounting bolts to specified torque.

Tightening torque

Oil pump mounting bolt (a): 25 N·m (2.5 kgf-m, 18.0 lb-ft)

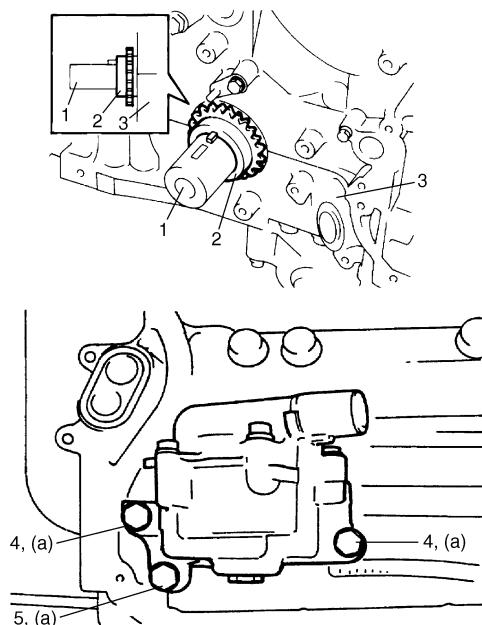

I6JB01150017-01

1. Crankshaft	4. Short bolt
3. Lower crankcase	5. Long bolt

- 2) Install oil pump chain guide (2), and adjust oil pump chain tension as follows:

- a) Install oil pump chain guide (1) and hand-tighten oil pump chain guide bolts.
- b) Insert specified thickness gauge between center of oil pump chain guide and chain.

Thickness gauge specification


Thickness: 1.35 mm (0.053 in.)

Width: 14 mm (0.55 in.)

- c) Press hatched part of chain guide (2) to 40 N·m (4.0 kgf-m, 29.0 lb-ft) in arrow direction.
- d) Tighten oil pump chain guide bolts (1) to specified torque while pressing.

Tightening torque

Oil pump chain guide bolt (a): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

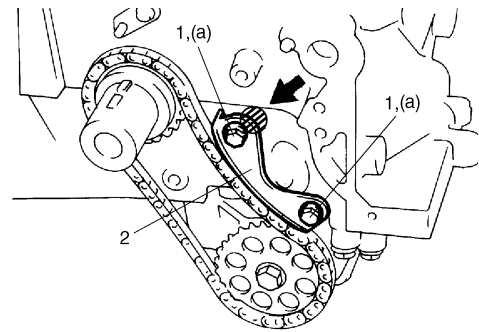

I4JA01150007-01

- e) Remove thickness gauge.


- 3) Install 1st timing chain. Refer to "1st Timing Chain and Chain Tensioner Removal and Installation in Section 1D".
- 4) Install LH bank 2nd timing chain. Refer to "LH (No.1) Bank 2nd Timing Chain and Chain Tensioner Removal and Installation in Section 1D".
- 5) Install timing chain cover. Refer to "Timing Chain Cover Removal and Installation in Section 1D".
- 6) Install oil pans referring to "Oil Pan and Oil Pump Strainer Removal and Installation".
- 7) Install cylinder head covers referring to "Cylinder Head Covers Removal and Installation in Section 1D".
- 8) Install intake manifold, intake collector and electric throttle body assembly referring to "Intake Collector and Intake Manifold Removal and Installation in Section 1D" and "Electric Throttle Body Assembly Removal and Installation in Section 1D".
- 9) Install engine assembly to vehicle referring to "Engine Assembly Removal and Installation in Section 1D".

Oil Pump and Oil Pump Chain Inspection

S6JB0B1506006

Oil Pump Chain Guide


Check shoe (1) for wear or damage.

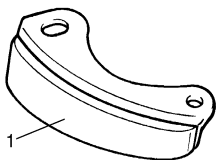

IYSQ01153026-01

Oil Pump Drive Sprocket


Check teeth of sprocket for wear or damage.

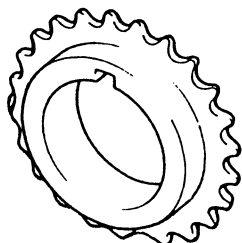

IYSQ01153027-01

Oil Pump Sprocket

Check teeth of sprocket for wear or damage.

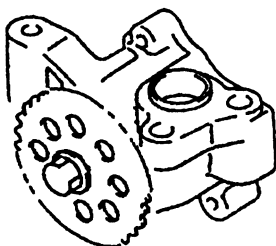

IYSQ01153028-01

Oil Pump Chain

Check oil pump chain for wear or damage.



IYSQ01153029-01

Oil Pump Disassembly and Reassembly

S6JB0B1506007

Disassembly

Disassemble oil pump referring to “Oil Pump and Oil Pump Chain Components”.

⚠ CAUTION


Do not remove oil pump sprocket or bolt. Otherwise, oil pump sprocket and/or oil pump rotor shaft might be damaged.

Reassembly

- 1) Wash, clean and then dry all disassembled parts.
- 2) Apply thin coat of engine oil to inner and outer rotors, and inside surfaces of oil pump case.
- 3) Reassemble oil pump. After reassembling oil pump, check to be sure that rotor turns smoothly by hand.

Tightening torque

Oil pump bolt (a): 12 N·m (1.2 kgf-m, 9.0 lb-ft)

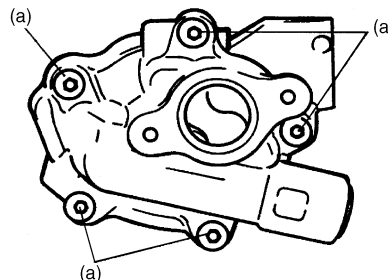

IYSQ01153019-01

Oil Pump Inspection

S6JB0B1506008


- Check outer rotor, inner rotor and oil pump cases for excessive wear or damage.
- Check relief valve for excessive wear or damage.
- Measure free length and tension of oil relief spring.

Spring (for oil pump) free length

63.47 mm (2.49 in.)

Spring (for oil pump) preload

80.38 – 88.22 N (8.04 – 8.82 kg, 58.14 – 63.80 lb) for 52.0 mm (2.05 in.)

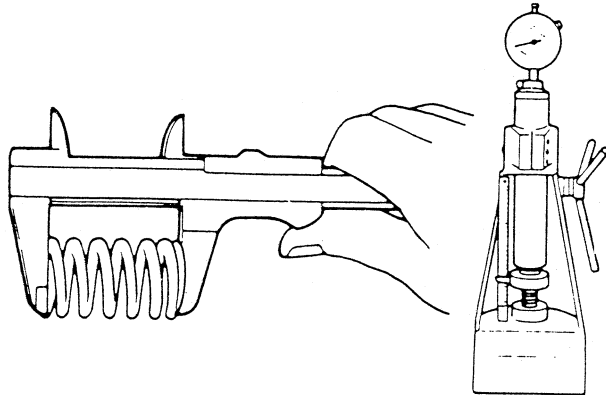


IYSQ01141105-01

• Radial clearance

Measure clearance of oil pump rotor and oil pump case using thickness gauge. Check radial clearance between outer rotor (2) and case (1), using thickness gauge (3). If clearance exceeds its limit, replace oil pump assembly.

Radial clearance between oil pump outer rotor and oil pump case

Limit: 0.19 mm (0.0075 in.)

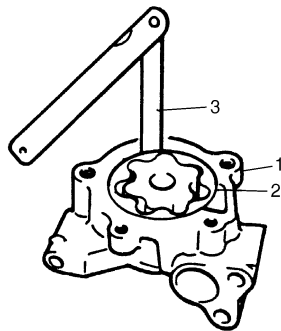


IYSQ01153020-01

• Side clearance

Using straightedge (5) and thickness gauge (4), measure side clearance. If clearance exceeds its limit, replace oil pump assembly.

Oil pump side clearance

Limit: 0.11 mm (0.0043 in.)

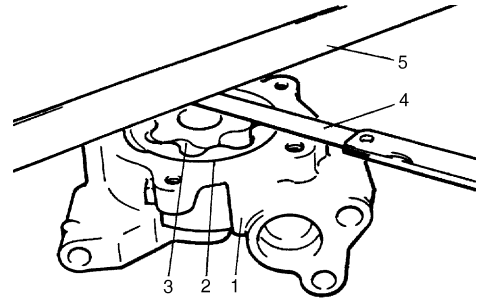

IYSQ01153021-01

1. Oil pump case No.1	2. Outer rotor	3. Inner rotor
-----------------------	----------------	----------------

Specifications

Tightening Torque Specifications

S6JB0B1507001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lb·ft	
Oil pressure switch	13	1.3	9.5	☞
Oil pump strainer bolt	11	1.1	8.0	☞
Upper oil pan bolt (M6)	11	1.1	8.0	☞
Upper oil pan bolt (M8)	25	2.5	19.5	☞
Upper oil pan nut	11	1.1	8.0	☞
Oil pump strainer bracket bolt	11	1.1	8.0	☞
Lower oil pan bolt	11	1.1	8.0	☞
Lower oil pan nut	11	1.1	8.0	☞
Engine oil drain plug	35	3.5	25.5	☞
Drive plate cover (A/T) bolt or clutch housing lower plate (M/T) bolt	11	1.1	8.0	☞
Oil level gauge guide bolt	11	1.1	8.0	☞
Oil pump mounting bolt	25	2.5	18.0	☞
Oil pump chain guide bolt	11	1.1	8.0	☞
Oil pump bolt	12	1.2	9.0	☞

NOTE

The specified tightening torque is also described in the following.

“Oil Pan and Oil Pump Strainer Components”

“Oil Pump and Oil Pump Chain Components”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Special Tools and Equipment

Recommended Service Material

S6JB0B1508001

Material	SUZUKI recommended product or Specification		Note
Sealant	SUZUKI Bond No.1217G	P/No.: 99000–31260	☞ / ☞



NOTE

Required service material is also described in the following.

“Oil Pan and Oil Pump Strainer Components”

Special Tool

S6JB0B1508002

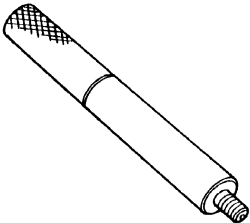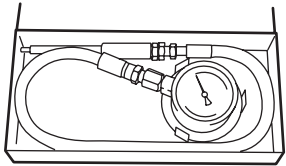09915–76510 Oil pressure gauge attachment 	09915–77311 Oil pressure gauge 
---	--

Engine Cooling System

General Description

Cooling System Description

S6JB0B1601001

The cooling system consists of the radiator cap, radiator, coolant reservoir, hoses, water pump, cooling fan and thermostat. The radiator is of tube-and-fin type.

Coolant Description

S6JB0B1601002

⚠ WARNING

- Do not remove radiator cap to check engine coolant level; check coolant visually at the see-through coolant reservoir. Coolant should be added only to reservoir as necessary.
- As long as there is pressure in the cooling system, the temperature can be considerably higher than the boiling temperature of the solution in the radiator without causing the solution to boil. Removal of the radiator cap while engine is hot and pressure is high will cause the solution to boil instantaneously and possibly with explosive force, spewing the solution over engine, fenders and person removing cap. If the solution contains flammable anti-freeze such as alcohol (not recommended for use at any time), there is also the possibility of causing a serious fire.
- Check to make sure that engine coolant temperature is cold before removing any part of cooling system.
- Also be sure to disconnect negative (–) cable from battery terminal before removing any part.

The coolant recovery system is standard. The coolant in the radiator expands with heat, and the coolant is overflowed to the reservoir.

When the system cools down, the coolant is drawn back into the radiator.

The cooling system has been filled with a quality coolant that is a 50/50 mixture of water and ethylene glycol antifreeze.

This 50/50 mixture coolant solution provides freezing protection to –36 °C (–33 °F).

- Maintain cooling system freeze protection at –36 °C (–33 °F) to ensure protection against corrosion and loss of coolant from boiling. This should be done even if freezing temperatures are not expected.
- Add ethylene glycol base coolant when coolant has to be added because of coolant loss or to provide added protection against freezing at temperature lower than –36 °C (–33 °F).

NOTE

- Alcohol or methanol base coolant or plain water alone should not be used in cooling system at any time as damage to cooling system could occur.
- Coolant must be mixed with demineralized water or distilled water.

Anti-freeze proportioning table

Freezing temperature	°C	–36
	°F	–33
Anti-freeze / Anti-corrosion coolant concentration	%	50
Ratio of compound to cooling water	ltr.	4.1/4.1
	US pt.	8.75/8.75
	Imp pt.	7.22/7.22

Coolant capacity

Engine, radiator and heater: 7.4 liters (15.64/13.03 US/Imp pt.)


Reservoir: 0.8 liters (1.69/1.41 US/Imp pt.)

Total: 8.2 liters (17.49/14.43 US/Imp pt.)

Schematic and Routing Diagram

Coolant Circulation

S6JB0B1602001

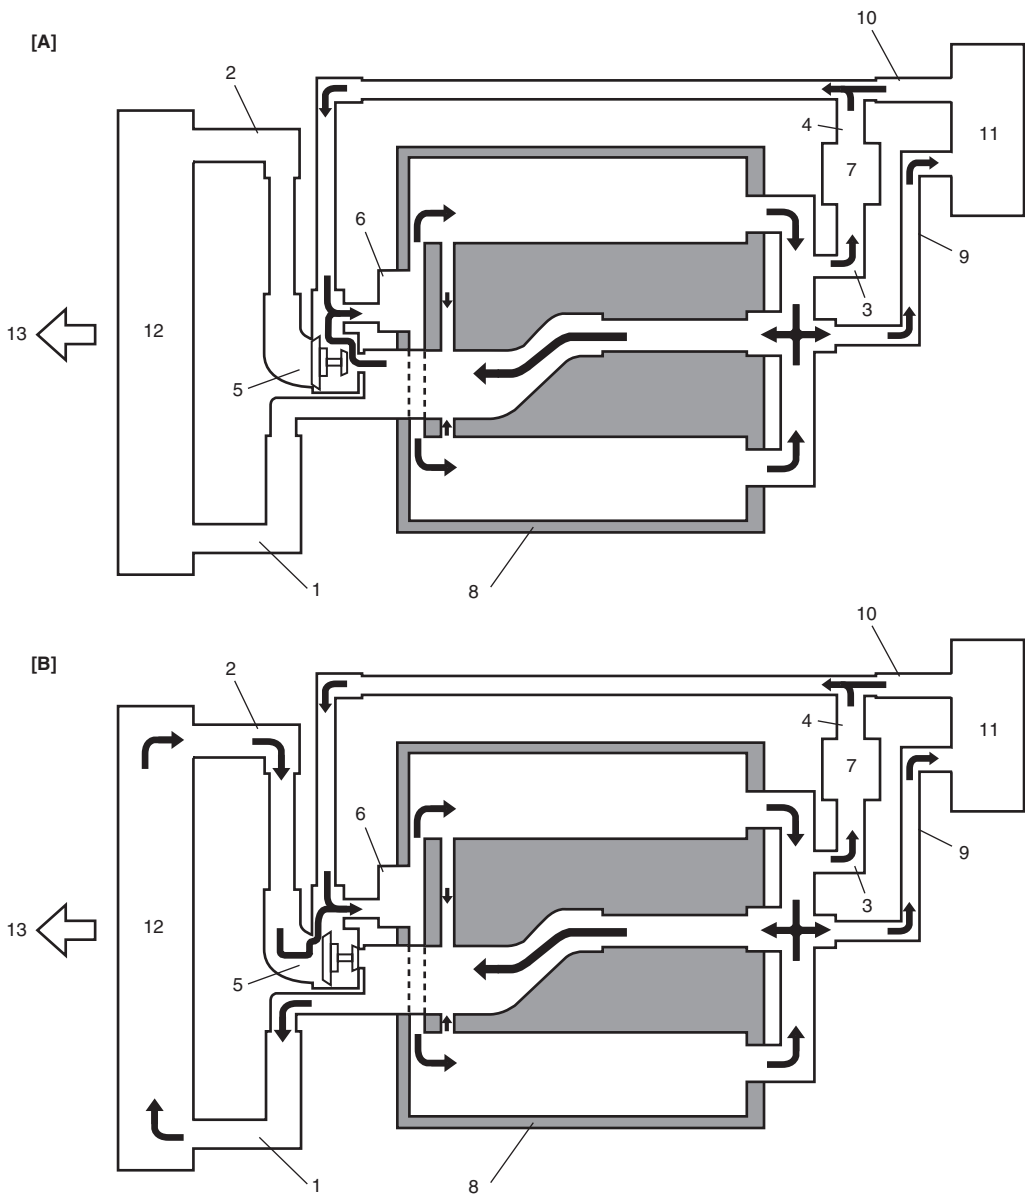

I6JB01160015-01

[A]: When thermostat is close	3. Throttle body inlet hose	7. Throttle body	11. Heater core
[B]: When thermostat is open	4. Throttle body outlet hose	8. Engine	12. Radiator
1. Radiator inlet hose	5. Thermostat	9. Heater core inlet hose	13. Forward
2. Radiator outlet hose	6. Water pump	10. Heater core outlet hose	

Diagnostic Information and Procedures

Engine Cooling Symptom Diagnosis


S6JB0B1604001

Condition	Possible cause	Correction / Reference Item
Engine overheats (Radiator fan operates)	Loose or broken water pump belt	<i>Adjust or replace.</i>
	Not enough coolant	<i>Check coolant level and add as necessary.</i>
	Faulty thermostat	<i>Replace.</i>
	Faulty water pump	<i>Replace.</i>
	Dirty or bent radiator fins	<i>Clean or remedy.</i>
	Coolant leakage on cooling system	<i>Repair.</i>
	Clogged radiator	<i>Check and replace radiator as necessary.</i>
	Faulty radiator cap	<i>Replace.</i>
	Improper ignition timing	<i>Refer to "Ignition System Symptom Diagnosis in Section 1H".</i>
	Dragging brakes	<i>Adjust brake.</i>
	Slipping clutch	<i>Adjust or replace.</i>
	Poor charge battery	<i>Check and replace as necessary.</i>
	Poor generation generator	<i>Check and repair.</i>
	ECT sensor faulty	<i>Check and replace as necessary.</i>
	Radiator cooling fan relay No.2 and/or No.3 faulty	<i>Check and replace as necessary.</i>
	Radiator fan motor faulty	<i>Check and replace as necessary.</i>
	ECM faulty	<i>Check and replace as necessary.</i>
	Wiring or grounding faulty	<i>Repair as necessary.</i>
	Equipped with too much electric load part(s)	<i>Dismount.</i>
Engine overheats (Radiator fan does not operate)	Fuse blown	<i>Check radiator fan fuse of relay/fuse box and check for short circuit to ground.</i>
	Radiator cooling fan relay No.1 faulty	<i>Check and replace as necessary.</i>
	ECT sensor faulty	<i>Check and replace as necessary.</i>
	Radiator cooling fan motor faulty	<i>Check and replace as necessary.</i>
	Wiring or grounding faulty	<i>Repair as necessary.</i>
	ECM faulty	<i>Check and replace as necessary.</i>

Repair Instructions

Cooling System Components

S6JB0B1606001

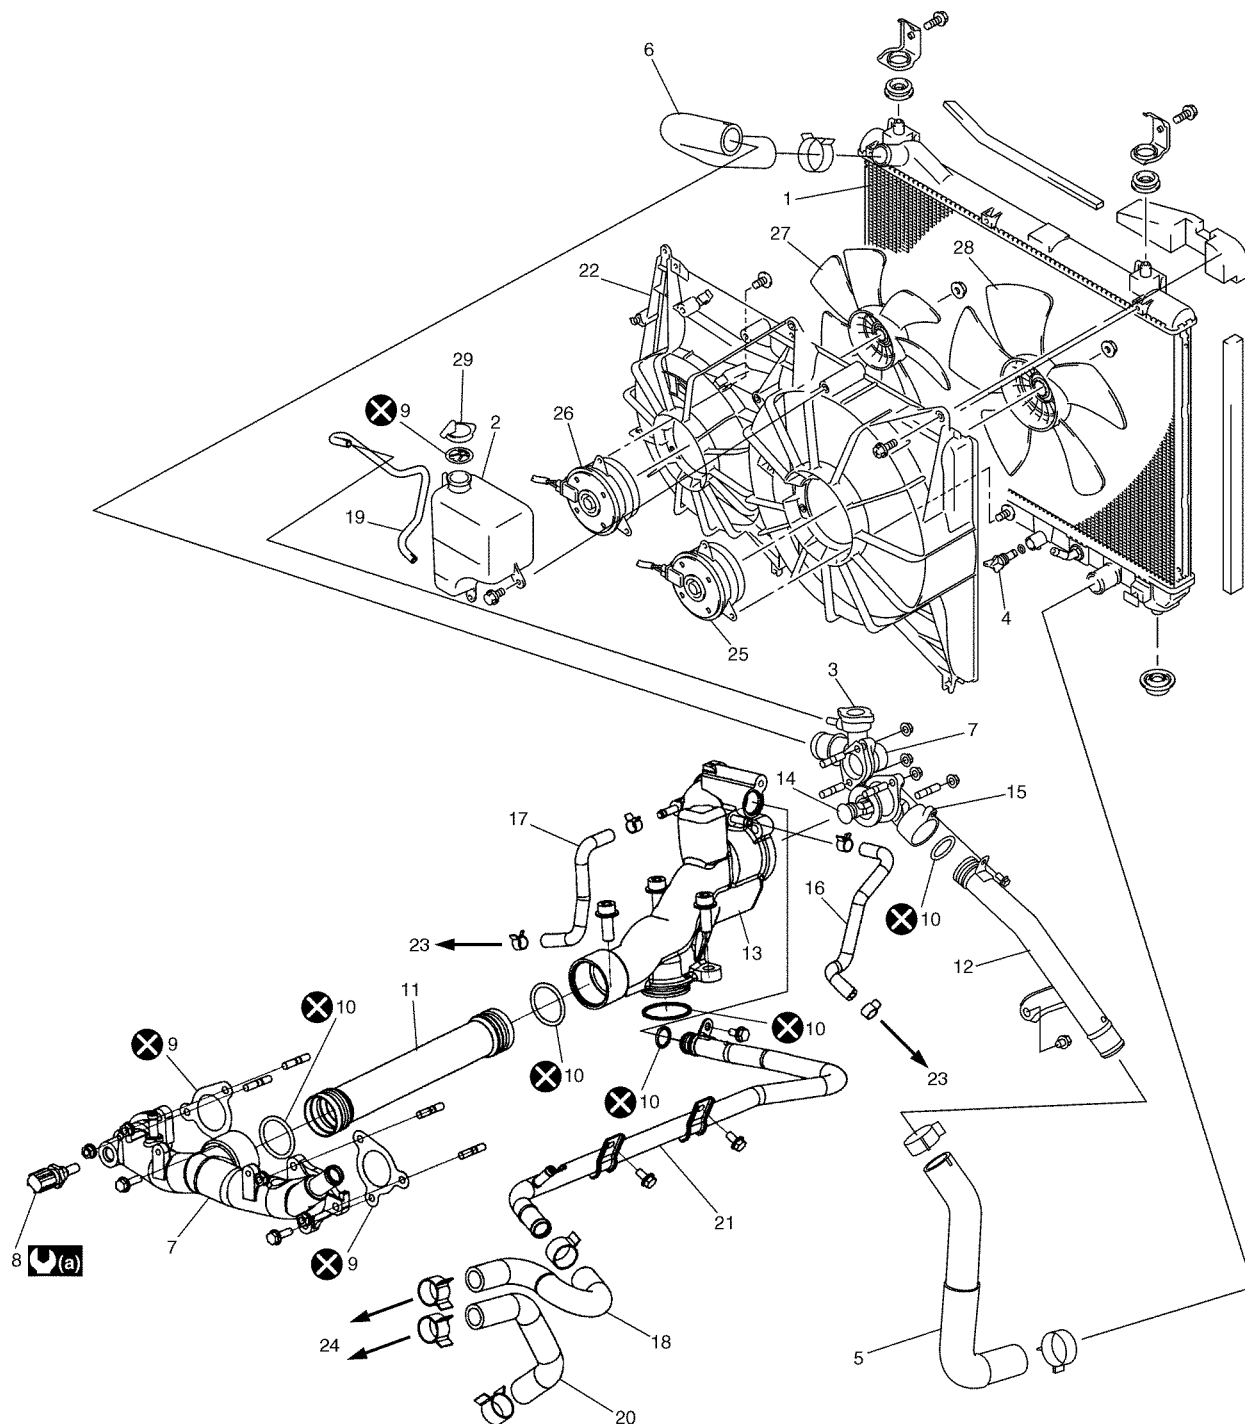

I6JB01160003-01

1. Radiator	9. Gasket	17. Left side cylinder head water hose	25. Main fan motor
2. Reservoir	10. O-ring	18. Heater outlet hose	26. Sub fan motor
3. Radiator cap	11. Water outlet pipe	19. Reservoir hose	27. Sub fan
4. Drain plug	12. Water inlet pipe	20. Heater inlet hose	28. Main fan
5. Radiator outlet hose	13. Thermostat case	21. Heater outlet pipe	29. Reservoir cap
6. Radiator inlet hose	14. Thermostat	22. Fan shroud	(a) : 12 N-m (1.2 kgf-m, 9.0 lb-ft)
7. Water outlet cap	15. Thermostat cap	23. To cylinder head	: Do not reuse.
8. ECT sensor	16. Right side cylinder head water hose	24. To heater core	

Coolant Level Check

S6JB0B1606002

⚠ WARNING

To help avoid danger of being burned, do not remove radiator cap while engine and radiator are still hot. Scalding fluid and steam can be blown out under pressure if radiator cap is taken off too soon.

To check level, lift hood and look at “see-through” coolant reservoir.


It is not necessary to remove radiator cap to check coolant level.

When engine is cool, check coolant level in reservoir (1). A normal coolant level should be between “FULL” mark (2) and “LOW” mark (3) on reservoir (1).

If coolant level is below “LOW” mark (3), remove reservoir cap (4) and add proper coolant to reservoir to bring coolant level up to “FULL” mark (2).

NOTE

If proper quality antifreeze is used, there is no need to add extra inhibitors or additives that claim to improve system. They may be harmful to proper operation of system, and are unnecessary expense.

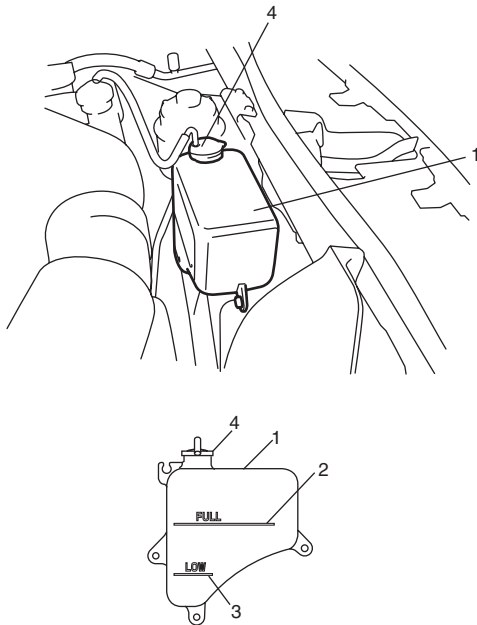

I6JB01160004-02

Engine Cooling System Inspection and Cleaning

S6JB0B1606003

⚠ WARNING

To help avoid danger of being burned, do not remove radiator cap while engine and radiator are still hot. Scalding fluid and steam can be blown out under pressure if cap is taken off too soon.


- 1) Check cooling system for leakage or damage.
- 2) Wash radiator cap and filler neck with clean water by removing radiator cap when engine is cold.
- 3) Check coolant for proper level and freeze protection.
- 4) Using a pressure tester (1), check system and radiator cap (2) for proper pressure holding capacity. If replacement of cap is required, use a proper cap for this vehicle.

NOTE

After installing radiator cap to water outlet cap, make sure that the ear of cap lines is parallel to radiator.

Cooling system and radiator cap holding pressure (for inspection)

110 kPa (1.1 kg/cm², 15.6 psi)

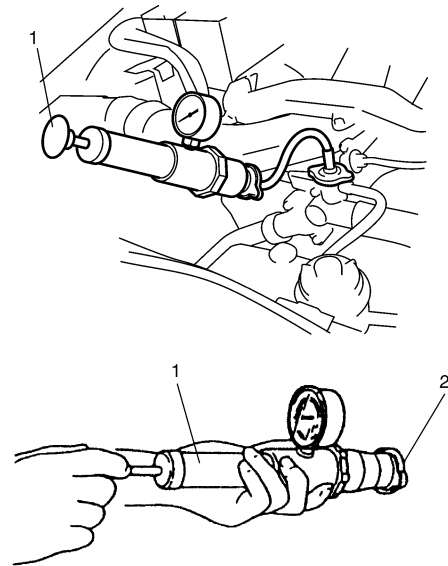

I6JB01160005-01


- 5) Tighten hose clamps and inspect all hoses. Replace hoses whenever cracked, swollen or otherwise deteriorated.
- 6) Clean frontal area of radiator core.

1F-6 Engine Cooling System:

Cooling System Draining

S6JB0B1606004

- 1) Remove radiator cap.
- 2) Drain coolant from radiator drain plug (1).
- 3) After draining coolant, be sure to tighten drain plug (1) securely.

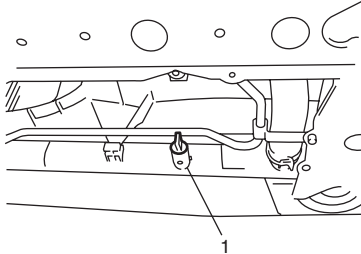

I5JB0A161006-01

Cooling System Flush and Refill

S6JB0B1606005


⚠ WARNING

To help avoid danger of being burned, do not remove radiator cap while engine and radiator are still hot. Scalding fluid and steam can be blown out under pressure if cap is taken off too soon.

NOTE



For detail of coolant specification, refer to "Coolant Description".

- 1) Remove radiator cap as follows when engine is cool.
 - a) Turn cap counterclockwise slowly until it reaches a "stop" (Do not press down while turning it).
 - b) Wait until pressure is relieved (indicated by a hissing sound) then press down on cap and continue to turn it counterclockwise.
- 2) With radiator cap removed, run engine until upper radiator hose is hot (this shows that thermostat is open and coolant is flowing through system).
- 3) Stop engine and drain coolant from radiator drain plug (1).
- 4) Close radiator drain plug. Add water until system is filled and run engine until upper radiator hose is hot again.
- 5) Repeat Steps 3) and 4) several times until drained liquid is nearly colorless.
- 6) Close radiator drain plug (1) tightly.

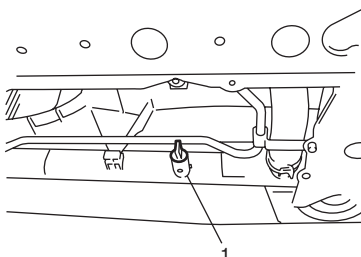

I5JB0A161006-01

- 7) Remove reservoir (1) and remove cap (2) from reservoir (1).
- 8) Pour out any fluid, scrub and clean inside of reservoir with soap and water. Flush it well with clean water and drain. Reinstall reservoir.
- 9) Fill reservoir with coolant up to "FULL" level mark (3).
- 10) Install reservoir cap (2) on reservoir.
- 11) Fill radiator with coolant up to bottom of water outlet cap filler neck and install radiator cap, making sure that the ear of cap lines is parallel to radiator.
- 12) Run engine at idle speed.
- 13) Run engine until radiator fan motor is operated.
- 14) Stop engine and wait until engine comes cooled down to help avoid danger of being burned.
- 15) Add coolant to radiator up to bottom of water outlet cap filler neck, and install radiator cap, making sure that the ear of cap lines is parallel to radiator.
- 16) Repeat Step 12) through 15).
- 17) Confirm that reservoir coolant level is "FULL" level mark (3). If coolant is insufficient, repeat Step 9) and 10).

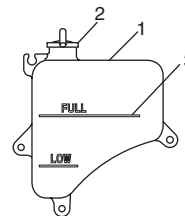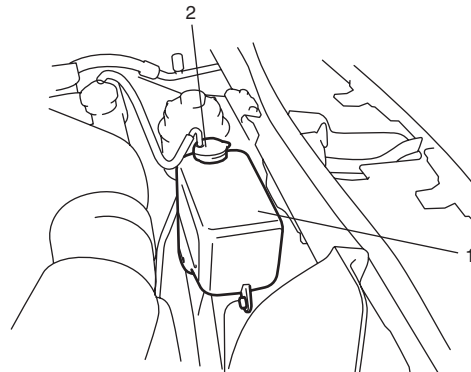

I6JB01160006-02

Cooling Water Pipes or Hoses Removal and Installation

S6JB0B1606006

Removal

- 1) Drain coolant referring to "Cooling System Draining".
- 2) To remove these pipes or hoses, loosen clamp on each hose and pull hose end off.

Installation

Install removed parts in reverse order of removal procedure, noting the following.


- Tighten each clamp securely.
- Refill cooling system referring to Step 7) to 17) of "Cooling System Flush and Refill".

Thermostat Removal and Installation

S6JB0B1606007

Removal

- 1) Drain coolant referring to "Cooling System Draining".
- 2) Disconnect radiator outlet hose (3) from water inlet pipe (1).
- 3) Remove thermostat cap (2) with water inlet pipe.
- 4) Remove thermostat from thermostat case.

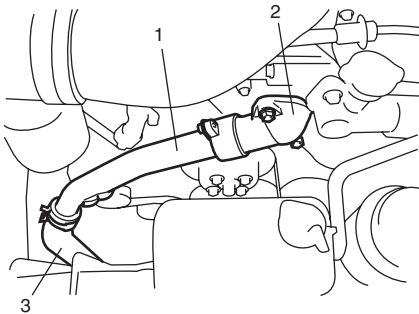


I6JB01160007-01

Installation

Reverse removal procedure for installation noting the following points.

- When positioning thermostat (1) and O-ring on thermostat case, be sure to position it so that air bleed valve (2) comes at match mark (3) and into the recession of thermostat case.

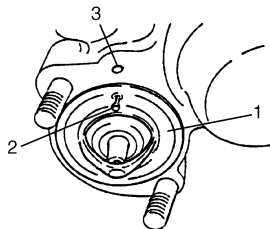


I6JB01160008-01

- Use new O-ring when installing.
- Refill cooling system referring to Step 7) to 17) of "Cooling System Flush and Refill".
- Verify that there is no coolant leakage at each connection.

Thermostat Inspection

S6JB0B1606008

- Make sure that air bleed valve (1) of thermostat is clean. Should this valve be clogged, engine would tend to overheat.
- Check to make sure that valve seat (2) is free from foreign matters which would prevent valve from seating tight.
- Check thermostat O-ring (3) for breakage, deterioration or any other damage.

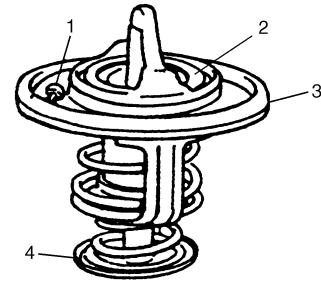

I6JB01160009-01

4. Bypass valve

- Check thermostatic movement of wax pellet as follows:
 - a. Immerse thermostat (1) in water, and heat water gradually.
 - b. Check that valve starts to open at specific temperature.


Temperature at which valve begins to open
80 – 84 °C (176 – 183 °F)

Temperature at which valve become fully open
95 – 97 °C (203 °F)

Valve lift

More than 8 mm at 95 °C (203 °F)

If valve starts to open at a temperature substantially below or above specific temperature, thermostat unit should be replaced with a new one. Such a unit, if reused, will bring about overcooling or overheating tendency.

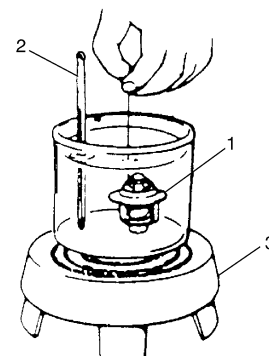

I2RH01160012-01

2. Thermometer

3. Heater

Radiator Cooling Fan Motor On-Vehicle Inspection


S6JB0B1606009

- 1) Check main and/or sub fan operation of radiator cooling fan as follows.
 - a) Connect battery to main fan motor coupler (coupler color: black) or sub fan motor coupler (coupler color: gray) as shown in figure.
 - b) Check that radiator cooling fan rotates smoothly. If any abnormality is found, replace fan motor.


Reference: Fan motor specified current at 12 V

Main fan operation: 10.9 – 14.4 A

Sub fan operation: 10.3 – 13.3 A

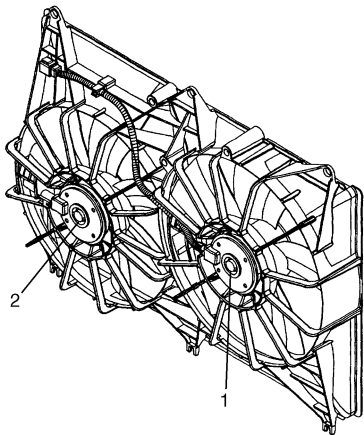

I5JB0A161012-02

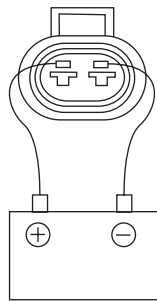

I5JB0A161011-01

1. Main fan motor	2. Sub fan motor
-------------------	------------------

Radiator Cooling Fan Relay Inspection




S6JB0B1606010

- 1) Disconnect negative (–) cable at battery.
- 2) Remove radiator cooling fan relay No.1 (1), No.3 (2) and/or No.2 (3) from relay box.
- 3) Check radiator cooling fan relay No.1 (1) and No.3 (2) as follows.
 - a) Check that there is no continuity between terminals “C” and “D”. If there is continuity, replace relay.
 - b) Connect battery positive (+) terminal to terminal “B” of relay.
 - c) Connect battery negative (–) terminal to terminal “A” of relay.

- d) Check continuity between terminals “C” and “D”. If there is no continuity, replace relay.

- 4) Check radiator cooling fan relay No.2 (3) as follows.

- a) Check that there is no continuity between terminals “G” or “H” and “F”. If there is continuity, replace relay.
- b) Check continuity between terminals “I” and “H”. If there is no continuity, replace relay.
- c) Connect battery positive (+) terminal to terminal “F” of relay.
- d) Connect battery negative (–) terminal to terminal “E” of relay.
- e) Check continuity between terminals “G” and “H”. If there is no continuity, replace relay.

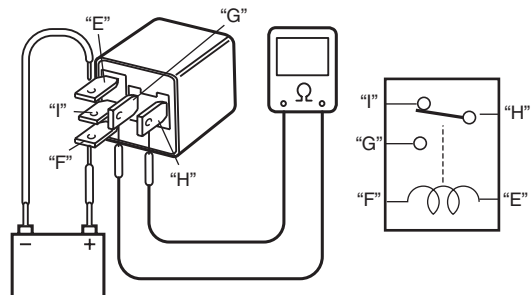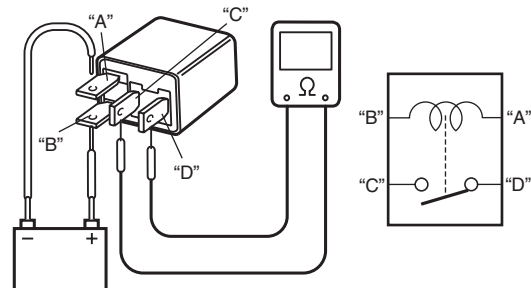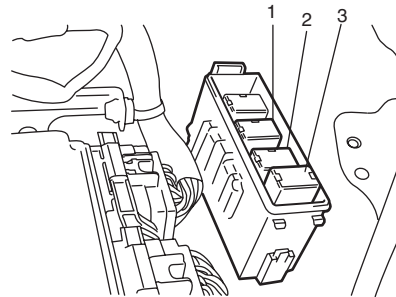


I5JB0A161017-01

Radiator Cooling Fan Assembly Removal and Installation

S6JB0B1606011

Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Disconnect connectors (1) of cooling fan motors.

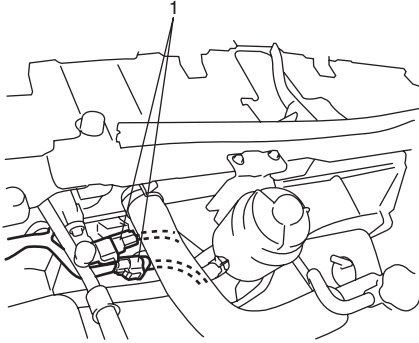

I6JB01160010-01

- 3) With hose connected, detach P/S fluid reservoir with reservoir bracket.
- 4) Remove air cleaner case and air cleaner suction pipe (2).
- 5) Remove reservoir (1) from radiator.



I6JB01160011-01

- 6) Remove cooling fan assembly.

Installation

Reverse removal procedure for installation noting the following.

- Refill cooling system referring to Step 7) to 17) of “Cooling System Flush and Refill”.
- After installation, verify there is no coolant leakage at each connection.

Radiator On-Vehicle Inspection and Cleaning


S6JB0B1606012

Inspection

Check radiator for leakage or damage. Straighten bent fins, if any.

Cleaning

Clean frontal area of radiator cores.

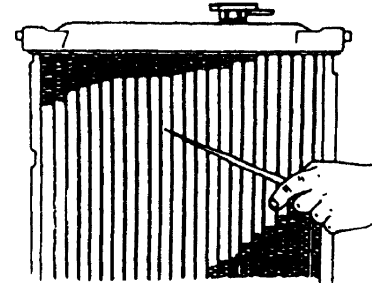

I2RH01160014-01

Radiator Removal and Installation

S6JB0B1606013

Removal

- 1) Disconnect negative (–) cable at battery.
- 2) For A/T, drain A/T fluid referring to “A/T Fluid Change in Section 5A”.
- 3) Drain coolant.
- 4) Remove cooling fan assembly referring to “Radiator Cooling Fan Assembly Removal and Installation”.
- 5) For A/T, remove A/T fluid cooler inlet and outlet hoses.
- 6) Remove radiator outlet hose from radiator.
- 7) Remove condenser bolts from condenser brackets.
- 8) Remove radiator from vehicle.

Installation

Reverse removal procedures, noting the following.


- Refill cooling system referring to Step 7) to 17) of “Cooling System Flush and Refill”.
- After installation, verify there is no coolant leakage each connection.
- Refill A/T fluid referring to “A/T Fluid Change in Section 5A”.

Water Pump Removal and Installation

S6JB0B1606014

Removal

- 1) Remove engine assembly from vehicle referring to "Engine Assembly Removal and Installation in Section 1D".
- 2) Remove timing chain cover referring to "Timing Chain Cover Removal and Installation in Section 1D".
- 3) Remove water pump assembly (1) from cylinder block.

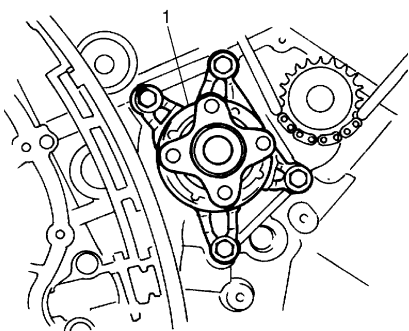


I6JB01160012-01

Installation

- 1) Install new O-rings (3) to water pump (1).
- 2) Install water pump to cylinder block. Tighten water pump bolts to specified torque.

Tightening torque

Water pump bolt (a): 25 N·m (2.5 kgf-m, 18.0 lb-ft)

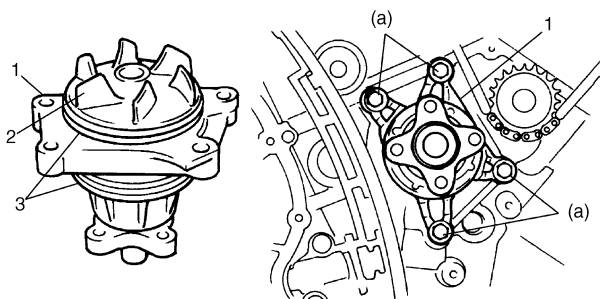

I6JB01160013-01

2. Impeller

- 3) Install timing chain cover referring to "Timing Chain Cover Removal and Installation in Section 1D".
- 4) Install engine assembly to vehicle referring to "Engine Assembly Removal and Installation in Section 1D".


Water Pump Inspection

S6JB0B1606015

⚠ CAUTION

**Do not disassemble water pump.
If any repair is required on pump, replace it
as assembly.**

Rotate water pump by hand to check for smooth operation. If pump does not rotate smoothly or makes abnormal noise, replace it.

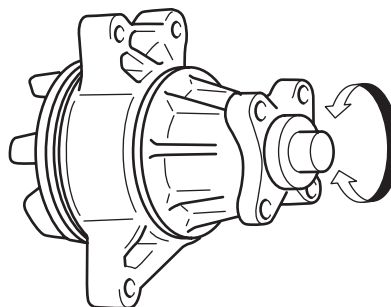


I6JB01160014-01

Specifications

Tightening Torque Specifications

S6JB0B1607001

Fastening part	Tightening torque			Note
	N·m	kgf-m	lb-ft	
Water pump bolt	25	2.5	18.0	

NOTE

The specified tightening torque is also described in the following.
 “Cooling System Components”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Fuel System

Precautions

Precautions on Fuel System Service

S6JB0B1700001

⚠ WARNING

Before attempting service of any type on fuel system, the following should be always observed in order to reduce the risk of fire and personal injury.

- Disconnect negative (–) cable at battery.
- Do not smoke, and place no smoking signs near work area.
- Be sure to have CO₂ fire extinguisher handy.
- Be sure to perform work in a well-ventilated area and away from any open flames (such as gas hot heater).
- Wear safety glasses.
- To relieve fuel vapor pressure in fuel tank, remove fuel filler cap from fuel filler neck and then reinstall it.
- As fuel feed line is still under high fuel pressure even after stopping engine, loosening or disconnecting fuel feed line directly may cause dangerous spout of fuel. Before loosening or disconnecting fuel feed line, make sure to relieve fuel pressure referring to “Fuel Pressure Relief Procedure”.
- A small amount of fuel may be released when the fuel line is disconnected. In order to reduce the risk of personal injury, cover a shop cloth to the fitting to be disconnected. Be sure to put that cloth in an approved container after disconnecting.
- Never run engine with fuel pump relay disconnected when engine and exhaust system are hot.
- Note that fuel hose connection varies with each type of pipe. Be sure to connect and clamp each hose correctly referring to “Fuel Hose Disconnecting and Reconnecting”. After connecting, make sure that it has no twist or kink.
- When installing injector or fuel feed pipe, lubricate its O-ring with gasoline.

General Description

Fuel System Description

S6JB0B1701001

⚠ CAUTION

This engine requires the unleaded fuel only. The leaded and/or low lead fuel can result in engine damage and reduce the effectiveness of the emission control system.

The main components of the fuel system are fuel tank, fuel pump assembly (with fuel filter and fuel level gauge), fuel pressure regulator, fuel feed line, fuel return line and fuel vapor line.

For the details of fuel flow, refer to “Fuel Delivery System Diagram”.

Fuel Delivery System Description

S6JB0B1701002

The fuel delivery system consists of the fuel tank, fuel pump assembly (with built-in fuel filter), fuel pressure regulator, delivery pipe, injectors, fuel return line, fuel vapor line and fuel feed line.

The fuel in the fuel tank is pumped up by the fuel pump, sent into delivery pipe and injected by the injectors.

As the fuel pump assembly is equipped with built-in fuel filter, the fuel is filtered and its pressure is regulated after being sent to the feed pipe.

The excess fuel at fuel pressure regulation process is returned back into the fuel tank.

Also, fuel vapor generated in fuel tank is led through the fuel vapor line into the EVAP canister.


For system diagram, refer to “Fuel Delivery System Diagram”.

Fuel Pump Description

S6JB0B1701003

The fuel pump (1) is an in-tank type electric pump. Incorporated in the pump assembly are; a fuel filter (2) included and a fuel level gauge (3) attached.

Also, the jet pump (4) installed in the fuel pump sucks up the fuel from the sub fuel level sensor side to main fuel level sensor side through the fuel suction pipe / hose by using the negative pressure produced when the part of pressurised fuel with the fuel pump passes the venturi (5).

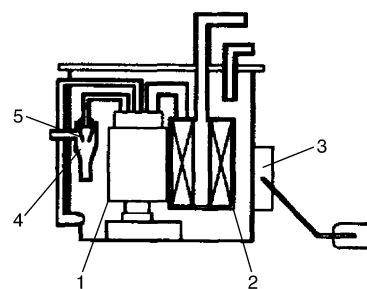


I5JB0A171001-03

Schematic and Routing Diagram

Fuel Delivery System Diagram

S6JB0B1702001

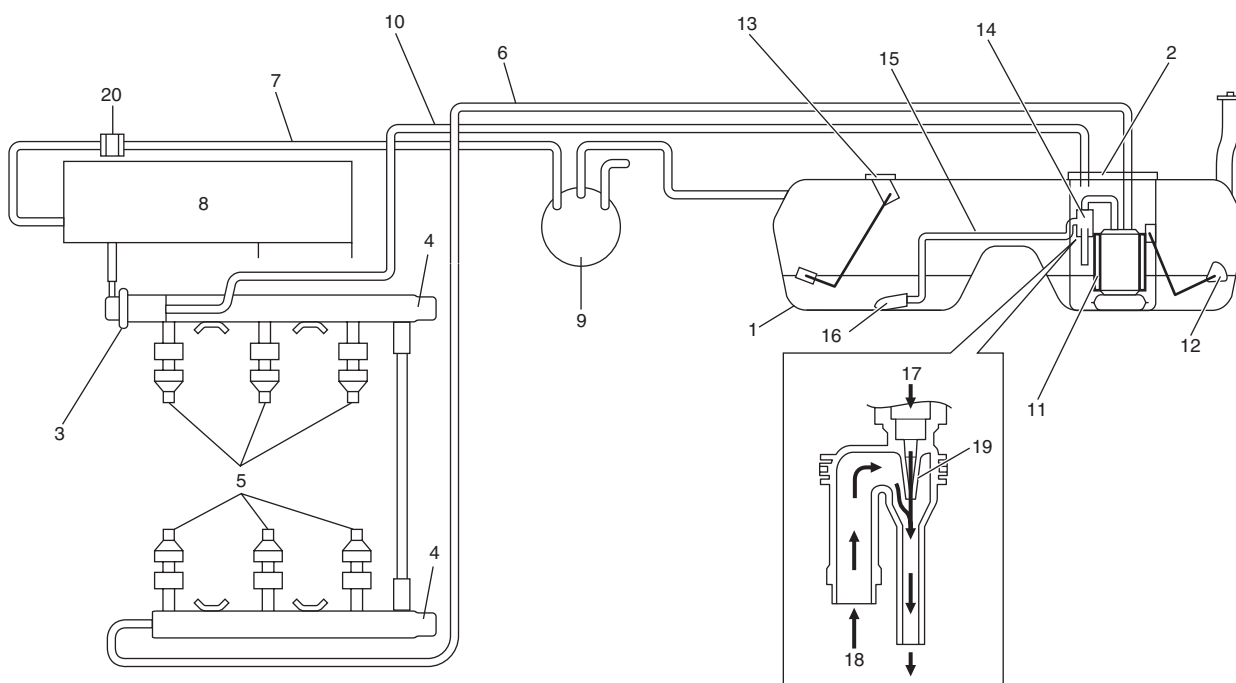

I6JB01170001-01

1. Fuel tank	6. Fuel feed line	11. Fuel filter	16. Fuel suction filter
2. Fuel pump	7. Fuel vapor line	12. Main fuel level sensor	17. Pressurised fuel from fuel pump
3. Fuel pressure regulator	8. Intake manifold	13. Sub fuel level sensor	18. Fuel feeded from fuel suction hose
4. Delivery pipe	9. EVAP canister	14. Jet pump	19. Venturi
5. Fuel injector	10. Fuel return line	15. Fuel suction pipe / hose	20. EVAP canister purge valve

Diagnostic Information and Procedures

Fuel Pressure Inspection

S6JB0B1704001

▲ WARNING

Before starting the following procedure, be sure to observe "Precautions on Fuel System Service" in order to reduce the risk of fire and personal injury.


- 1) Relieve fuel pressure in fuel feed line referring to "Fuel Pressure Relief Procedure".
- 2) Disconnect fuel feed hose from fuel No.2 pipe.
- 3) Connect special tools and hose between fuel feed hose (1) and fuel No.2 pipe as shown in figure, and clamp hoses securely in order to ensure that no leaks occur during checking.

Special tool

(A): 09912-58442

(B): 09912-58432

(C): 09912-58490

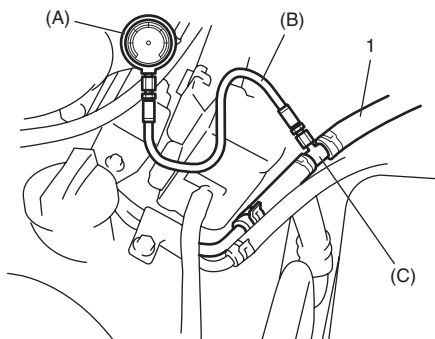

I6JB01170002-01

4) Check that battery voltage is 11 V or more.

5) Measure fuel pressure at each condition.

If measured pressure is out of specification, refer to "Fuel Pressure Check in Section 1A" and check each possibly defective part. Replace if found defective.

- a) Turn ignition switch ON to operate fuel pump and after 2 seconds turn it OFF. Repeat this 3 or 4 times and then check fuel pressure.

Fuel pressure specification with fuel pump operating and engine stopped

: 250 – 310 kPa (2.5 – 3.1 kg/cm², 35.5 – 44.0 psi)

- b) Start engine and warm it up to normal operating temperature, and measure fuel pressure at idling.

Fuel pressure specification at specified idle speed

: 210 – 260 kPa (2.1 – 2.6 kg/cm², 29.9 – 36.9 psi)

- c) Stop engine, and measure fuel pressure at one minute after stopping.

Fuel pressure specification in 1 min. after engine (fuel pump) stop (Pressure reduces as time passes)


Over 180 kPa (1.8 kg/cm², 25.6 psi)

- 6) After checking fuel pressure, remove fuel pressure gauge.

⚠ WARNING

As fuel feed line is still under high fuel pressure, make sure to release fuel pressure according to the following procedures.

- Place fuel container under joint.
- Cover joint with rag and loosen joint nut slowly in order to release fuel pressure gradually.

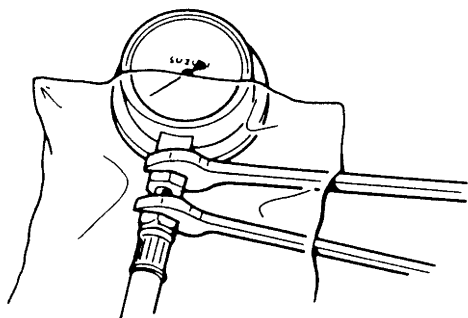

I2RH01170032-01

- 7) Remove special tools from fuel No.2 pipe and fuel feed hose.
- 8) Connect fuel feed hose to fuel No.2 pipe and clamp it securely.
- 9) With engine OFF and ignition switch ON, check for fuel leaks.


Fuel Cut Operation Inspection

S6JB0B1704002

NOTE

Before inspection, make sure that gear shift lever is in neutral position (shift select lever is "P" range for A/T vehicle), A/C is OFF and parking brake lever is pulled all the way up.

- 1) Warm engine up to normal operating temperature.
- 2) While listening to sound of injector (2) by using sound scope (1) or such, increase engine speed to higher than 3,000 r/min.

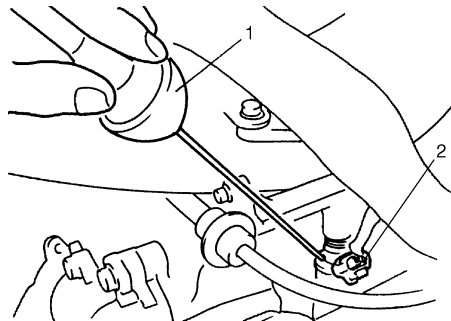


I6JB01170003-01

- 3) Check to make sure that injector operation sound is stop when throttle valve is closed instantly and it is heard again when engine speed is reduced to approx. 2,000 r/min or less.

Repair Instructions

Fuel System Components

S6JB0B1706001

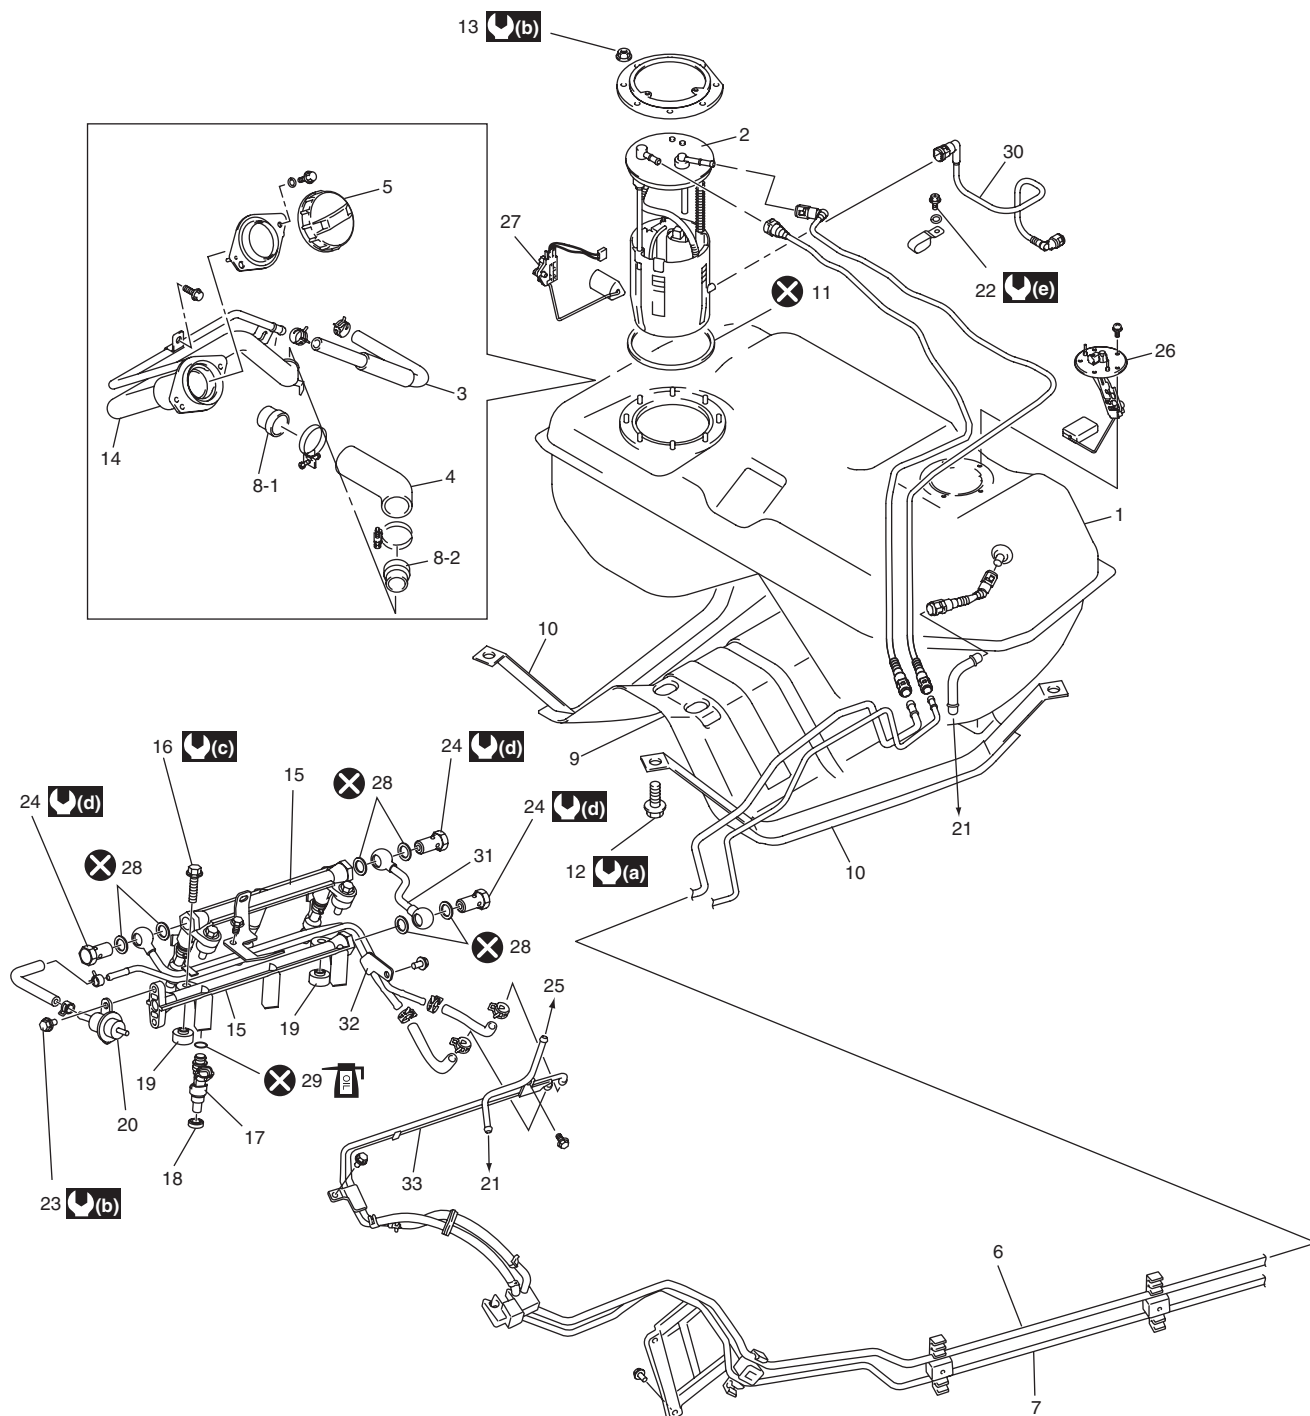

I6JB0B170003-01

1. Fuel tank	14. Fuel filler neck	28. Fuel delivery pipe gasket
2. Fuel pump assembly	15. Fuel delivery pipe	29. O-ring
3. Fuel recirculation hose	16. Fuel delivery pipe bolt	30. Fuel suction hose
4. Fuel tank filler hose	17. Fuel injector	31. Fuel connect pipe
5. Fuel filler cap	18. Injector cushion	32. Fuel No.1 pipe
6. Fuel feed line	19. Fuel delivery pipe insulator	33. Fuel No.2 pipe
7. Fuel return line	20. Fuel pressure regulator	34. Fuel EVAP valve assembly (included in fuel tank) : Securely insert hook through end of bracket.
8-1. Fuel tank inlet valve (fuel filler neck side)	21. To canister	X : Do not reuse.
8-2. Fuel tank inlet valve (fuel tank side)	22. Fuel pipe clamp bolt	(a) : 50 N·m (5.0 kgf-m, 36.5 lb-ft)
9. Fuel tank protector	23. Fuel pressure regulator bolt	(b) : 11 N·m (1.1 kgf-m, 8.0 lb-ft)

10. Fuel tank belt	24. Fuel union bolt	🔧(c) : 25 N·m (2.5 kgf-m, 18.0 lb-ft)
11. Fuel pump gasket	25. To EVAP canister purge valve	🔧(d) : 30 N·m (3.0 kgf-m, 22.0 lb-ft)
12. Fuel tank bolt	26. Sub fuel level sensor	🔧(e) : 5 N·m (0.5 kgf-m, 3.6 lb-ft)
13. Fuel pump nut	27. Main fuel level sensor	

Fuel Hose Disconnecting and Reconnecting

S6JB0B1706002

⚠ WARNING


Before starting the following procedure, be sure to observe “Precautions on Fuel System Service” in order to reduce the risk of fire and personal injury.

Be sure to connect and clamp each hose correctly as shown in figure.

For Normal Clamp Fuel tank system

NOTE

Be sure to install hose to spool of pipe surely.

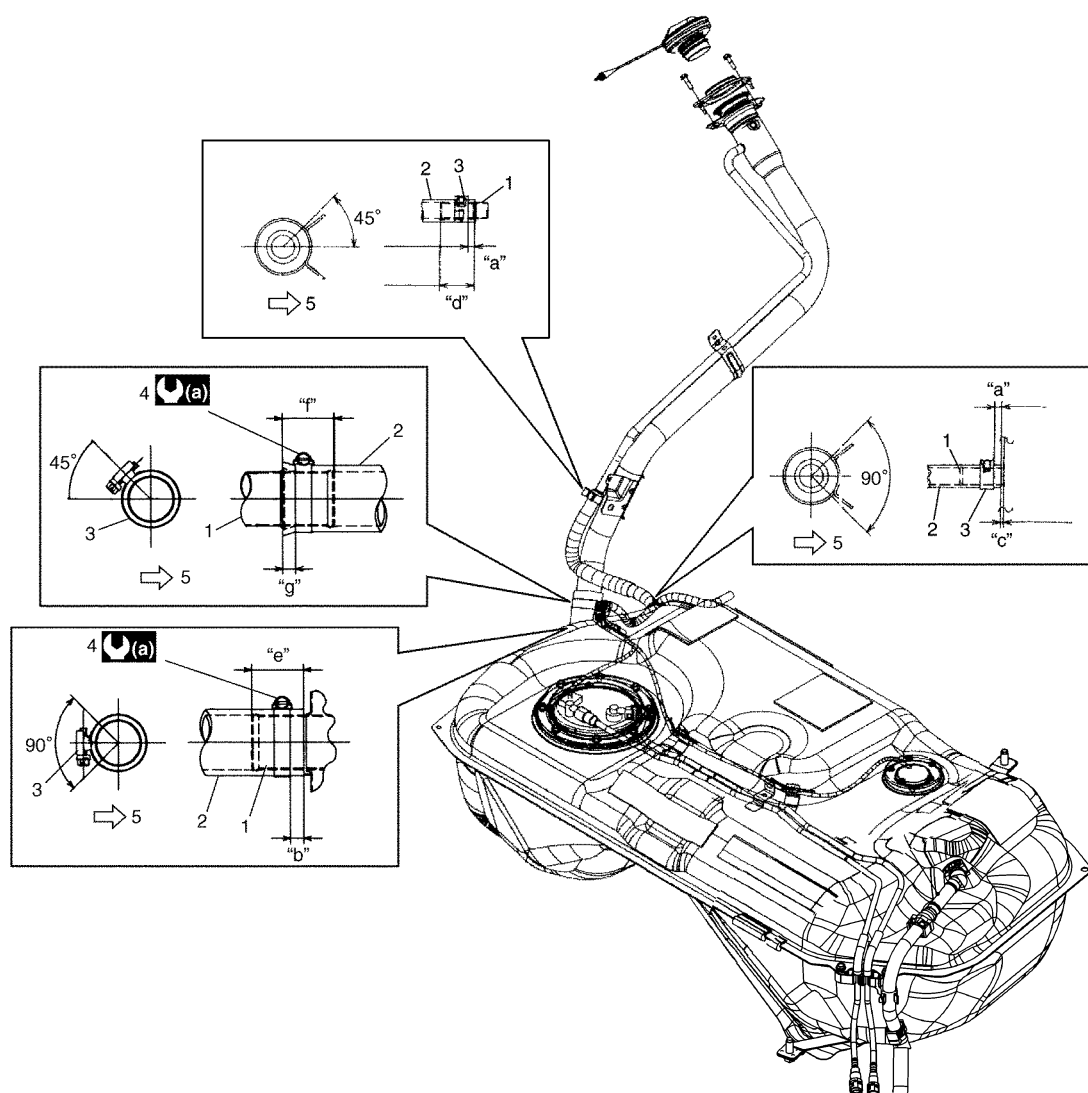


I7JB01170002-01


1. Pipe	5. Vehicle forward	"d": 25 – 30 mm (0.98 – 1.18 in.)	🔧(a) : 4 N·m (0.4 kgf-m, 3.0 lb-ft)
2. Hose	"a": 3 – 7 mm (0.12 – 0.28 in.)	"e": 33 mm (1.30 in.)	
3. Clamp	"b": 5 – 12 mm (0.20 – 0.48 in.)	"f": 38 mm (1.50 in.)	
4. Fuel filler hose clamp screw	"c": 2 mm (0.08 in.)	"g": 8 – 15 mm (0.32 – 0.59 in.)	

The other than fuel tank system


[A]

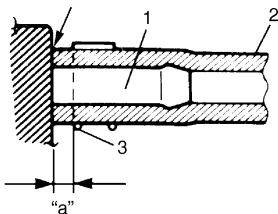


[B]

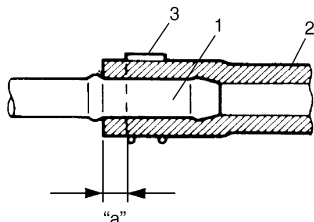


[C]

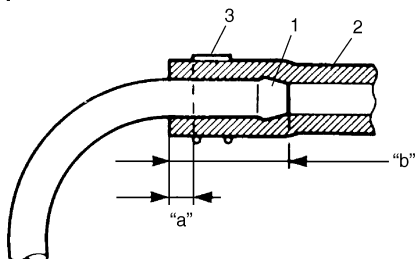


[D]

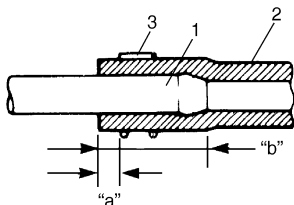

[E]

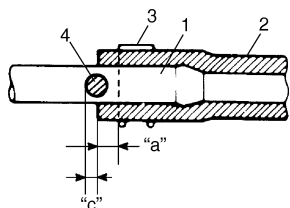

[F]

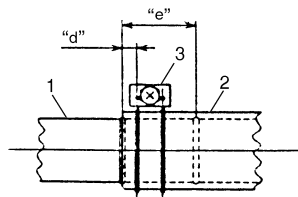

I3RM0A170001-01

[A]: With short pipe, fit hose as far as it reaches pipe joint as shown.

[B]: With the following type pipe, fit hose as far as its peripheral projection as shown.

[C]: With bent pipe, fit hose as its bent part as shown or till depth "b".

[D]: With straight pipe, fit hose till depth "b".

[E]: With red marked pipe, fit hose end reaches red mark on pipe.

[F]: For fuel tank filler hose, insert it to spool or welding-bead.

"a": Clamp securely at a position 3 – 7 mm (0.12 – 0.27 in.) from hose end.

"b": 20 – 30 mm (0.79 – 1.18 in.)

"c": 0 – 5 mm (0 – 0.19 in.)

"d": 5 – 12 mm (0.2 – 0.47 in.)

"e": 40 mm (1.57 in.)

4. Red mark


For Quick Joint (other than Fuel Vapor Line) Disconnecting

- 1) Remove mud, dust and/or foreign material between pipe (1) and quick joint (2) by blowing compressed air.
- 2) Unlock joint lock by inserting special tool between pipe and quick joint.

Special tool

(A): 09919-47020

- 3) Disconnect quick joint from pipe.

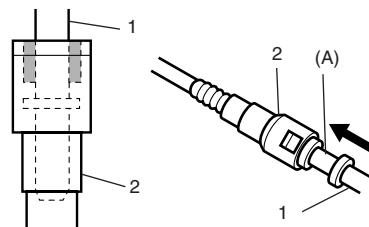

I4RS0A170019-01


Reconnecting

Insert quick joint to fuel pipe until they lock securely (a click is heard), and confirm that quick joint is not disconnected by hand.

For Quick Joint (Fuel Vapor Line)

Disconnecting


- 1) Remove mud, dust and/or foreign material between pipe (1) and quick joint (fuel vapor line) (2) by blowing compressed air.
- 2) Disconnect hose joint while joint lock is unlocked by pushing both sides of joint.

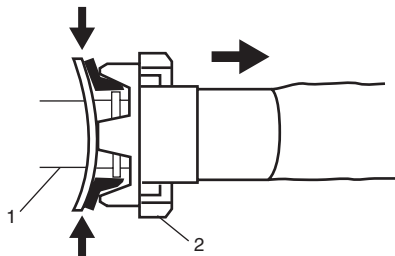

I6JB01170006-01

Reconnecting

- 1) For quick joint, push joint into pipe till joint lock clicks and check that quick joint does not pull out by pulling quick joint in arrow direction.

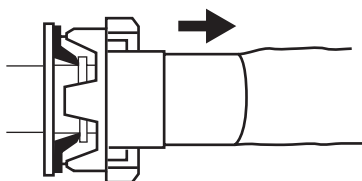

I6JB01170007-01

- 2) Confirm that quick joint is not disconnected by hand.

Fuel Pressure Relief Procedure

S6JB0B1706003

⚠ CAUTION


This work must not be done when engine is hot. If done so, it may cause adverse effect to catalyst.

NOTE

If ECM detects DTC(s) after servicing, clear DTC(s) referring to "DTC Clearance in Section 1A".

- 1) Make sure that engine is cold.
- 2) Shift transaxle gear shift lever in "Neutral" (shift select lever in "P" range for A/T model), set parking brake and block drive wheels.
- 3) Remove fuse box No.2 cover.
- 4) Disconnect fuel pump relay (1) from fuse box No.2 (2).

- 5) Remove fuel filter cap in order to release fuel vapor pressure in fuel tank, and then reinstall it.
- 6) Start engine and run it until engine stops for lack of fuel. Repeat cranking engine 2 – 3 times for about 3 seconds each time in order to dissipate fuel pressure in lines. Fuel connections are now safe for servicing.
- 7) After servicing, connect fuel pump relay (1) to fuse box No.2 and install fuse box No.2 cover.

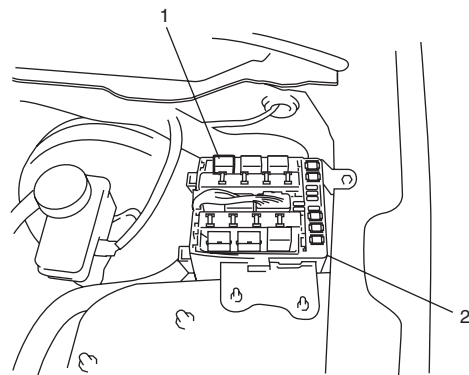

I5JB0A171006-01

Fuel Leakage Check Procedure

S6JB0B1706004

After performing any service on fuel system, check to make sure that there are no fuel leakages as follows.

- 1) Turn ON ignition switch for 3 seconds (to operate fuel pump) and then turn it OFF.
Repeat this (ON and OFF) 3 or 4 times and apply fuel pressure to fuel line until fuel pressure is felt by hand placed on fuel feed hose.
- 2) In this state, check to see that there are no fuel leakages from any part of fuel system.

Fuel Lines On-Vehicle Inspection

S6JB0B1706005

⚠ CAUTION

Due to the fact that fuel feed line (1) is under high pressure, use special care when servicing it.

Visually inspect fuel lines for evidence of fuel leakage, hose crack and deterioration or damage.

Make sure all clamps are secure.

Replace parts as needed.

Fuel Pipe Removal and Installation


S6JB0B1706006

⚠ WARNING

Before starting the following procedure, be sure to observe “Precautions on Fuel System Service” in order to reduce the risk of fire and personal injury.

Removal

- 1) Relieve fuel pressure in fuel feed line according to “Fuel Pressure Relief Procedure”.
- 2) Disconnect negative (–) cable at battery.
- 3) Disconnect fuel pipe joint and fuel hose (3) from fuel pipe (2) at the front and rear of each fuel pipe referring to “Fuel Hose Disconnecting and Reconnecting”.
- 4) Mark the location of clamps (1) on fuel pipes (2) so that the clamps can be reinstalled to where they were.
- 5) Remove pipes (2) with clamp from vehicle.
- 6) Remove clamp (1) from pipes (2).

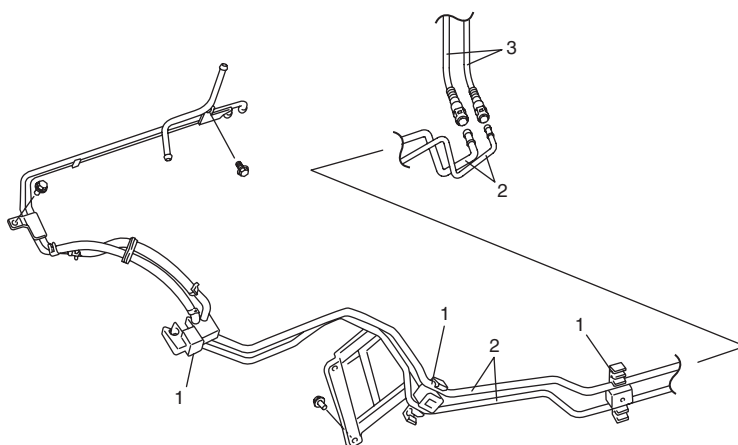

I7JB01170003-01


Installation

- 1) Install clamps to white painted at pipes. If clamp is deformed, its claw is bent or broken, replace it with new one.
- 2) Install pipes with pipe clamps to vehicle.
- 3) Connect fuel hoses and pipes to each pipe referring to “Fuel Hose Disconnecting and Reconnecting”.
- 4) Connect negative (–) cable at battery.
- 5) With engine OFF, turn ignition switch to ON position and check for fuel leaks.

Fuel Injector On-Vehicle Inspection

S6JB0B1706007

- 1) Remove surge tank cover.
- 2) Using sound scope (1) or such, check operating sound of injector when engine is running or cranking. Cycle of operating sound should vary according to engine speed.
If no sound or an unusual sound is heard, check injector circuit (wire or coupler) or injector.

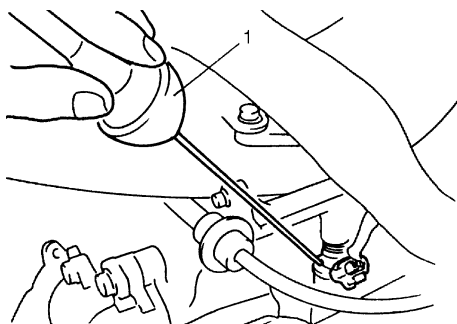


IYSQ01173015-01

- 3) Disconnect connector (1) from injector, connect ohmmeter between terminals of injector and check resistance.

Reference resistance of fuel injector

11.5 – 12.5 Ω at 20 °C, 68 °F

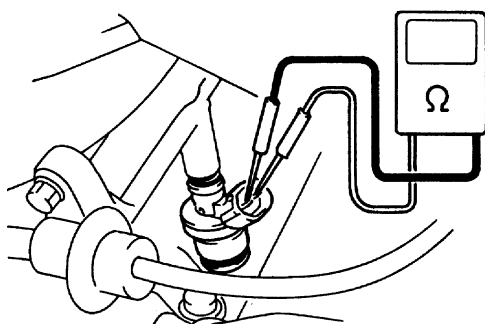

IYSQ01173016-01

- 4) Connect connector to injector securely.

Fuel Injector Removal and Installation


S6JB0B1706008

⚠ WARNING

Before starting the following procedure, be sure to observe "Precautions on Fuel System Service" in order to reduce the risk of fire and personal injury.


Removal

- 1) Relieve fuel pressure according to "Fuel Pressure Relief Procedure".
- 2) Disconnect negative (–) cable at battery.
- 3) Remove surge tank cover.
- 4) Remove intake air pipe (1) and surge tank pipe (2).

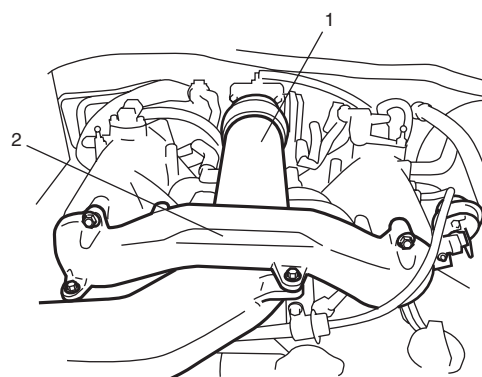

I6JB01170022-01

- 5) Disconnect fuel injector couplers and release fuel injector harness from clamps.
- 6) Disconnect fuel return hose (1) from pressure regulator.
- 7) Disconnect vacuum hose (2) from pressure regulator.
- 8) Remove fuel pipe bolt (3).
- 9) Remove fuel union bolt (4) of fuel delivery pipe (right side).
- 10) Remove fuel delivery pipes (right and left) (5) from intake manifold.

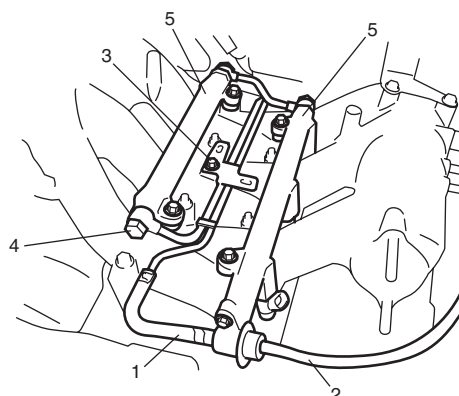

I6JB01170009-01

Installation

Reverse removal procedure for installation noting the following.

- Replace injector O-ring (1) and insulator (7) with new one using care not to damage it.
- Check if cushion (2) is scored or damaged. If it is, replace with new one.
- Apply O-ring oil to O-rings (1), and then install injectors (3) into delivery pipes (4) and intake manifold.
Make sure that injectors rotate smoothly (6). If not, probable cause is incorrect installation of O-ring. Replace O-ring with new one.

"A": Oil 99000-25320 (SUZUKI DI O RING OIL(500CC))


1G-11 Fuel System:

- Tighten delivery pipe bolts (5) and fuel union bolt (8) to specified torque and make sure that injectors rotate smoothly.

Tightening torque

Fuel delivery pipe bolt (a): 25 N·m (2.5 kgf-m, 18.0 lb-ft)

Fuel union bolt (b): 30 N·m (3.0 kgf-m, 22.0 lb-ft)

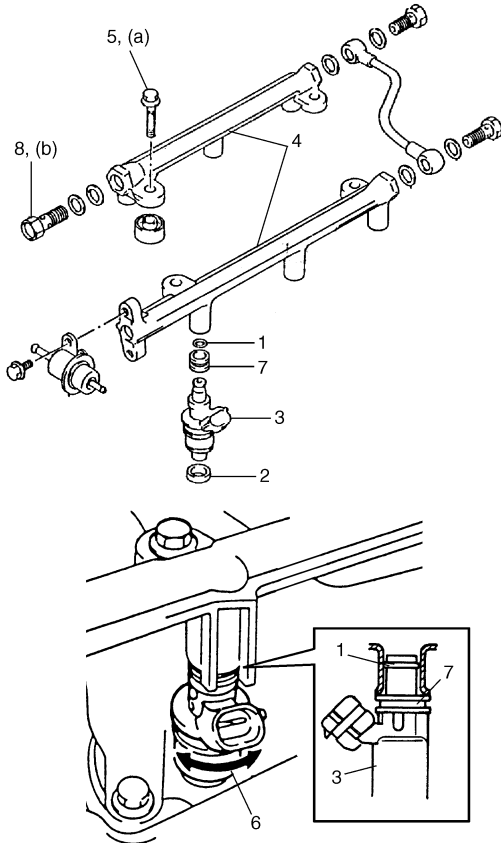

I6JB01170010-01

- After installation, with engine OFF and ignition switch ON, check for fuel leaks around fuel line connection.

Fuel Injector Inspection

S6JB0B1706009

⚠ WARNING

Before starting the following procedure, be sure to observe "Precautions on Fuel System Service" in order to reduce the risk of fire and personal injury.

- 1) Install injector (1) and pressure regulator (2) to special tool (A), and connect pressure regulator to fuel return pipe (4) using hose included in special tool (A).

Special tool

(A): 09912-58421

- 2) Connect special tools (B) to fuel feed pipe (3) and injector (1).


Special tool

(B): 09912-58442

- 3) Connect special tool (C) to injector (1).

Special tool

(C): 09930-88530

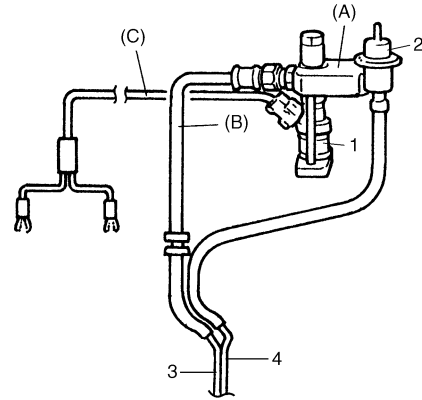


I6JB01170011-01

- 4) Install suitable vinyl tube onto injector nozzle to prevent fuel from splashing out when injecting.
- 5) Put graduated cylinder under injector.
- 6) Operate fuel pump and apply fuel pressure to injector as follows:
 - a) When using scan tool:
 - i) Connect scan tool to DLC with ignition switch OFF.
 - ii) Turn ignition switch ON, clear DTC and select "MISC TEST" mode on scan tool.
 - iii) Turn fuel pump ON by using scan tool.

Special tool

(A): SUZUKI scan tool

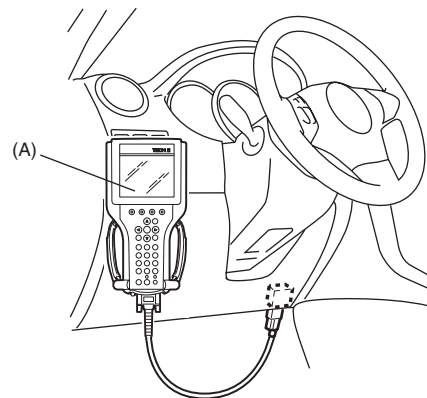


I5JB0A171009-01

- b) When not using scan tool:
- Remove fuel pump relay from connector.
 - Connect two terminals of relay connector using service wire (1) as shown in figure.

⚠ CAUTION

Check to make sure that connection is made between correct terminals. Wrong connection can cause damage to ECM, wire harness, etc.

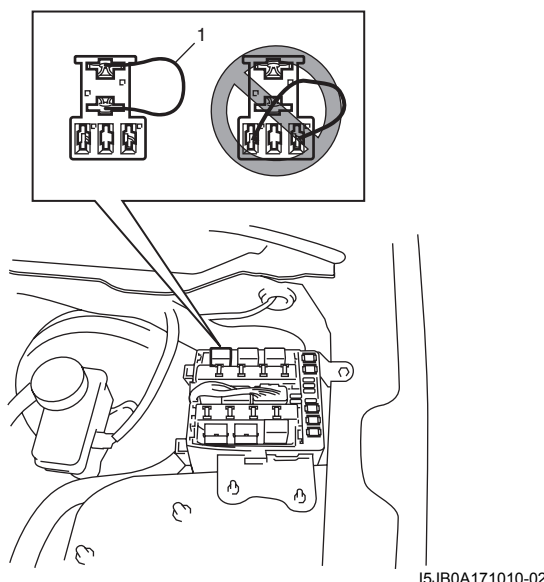

iii) Turn ignition switch ON.

- 7) Apply battery voltage to injector (1) for 15 seconds and measure injected fuel volume with graduated cylinder. Test each injector two or three times.


Reference injected fuel volume

Approx. 65 cc / 15 sec. (2.20/2.29 US/lmp oz / 15 sec.)

- 8) Check fuel leakage from injector nozzle. Do not operate injector for this check (but fuel pump should be at work). If fuel leaks (1) more than the following specifications, replace.

Fuel leakage

Less than 1 drop/min.

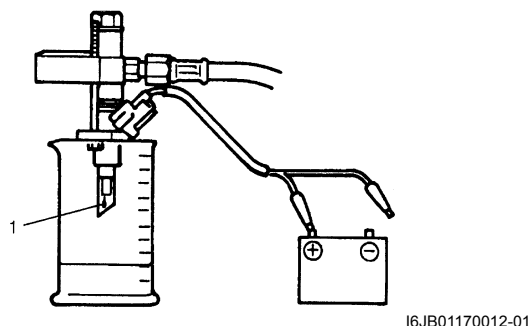

Fuel Pressure Regulator Removal and Installation


S6JB0B1706010

⚠ WARNING


Before starting the following procedure, be sure to observe "Precautions on Fuel System Service" in order to reduce the risk of fire and personal injury.

Removal

- 1) Relieve fuel pressure according to "Fuel Pressure Regulator Inspection".
- 2) Disconnect negative (-) cable at battery.
- 3) Remove surge tank cover.
- 4) Disconnect vacuum hose (1) from fuel pressure regulator.

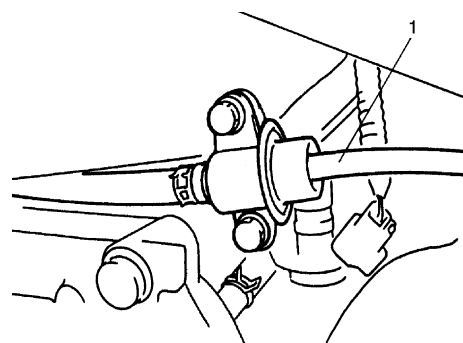

- 5) Remove fuel pressure regulator (1) from delivery pipe (3).
- 6) Disconnect fuel return hose (2) from fuel pressure regulator (1).

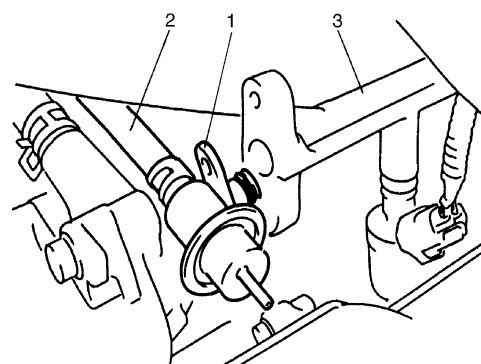


1G-13 Fuel System:

Installation

Reverse removal procedure for installation noting the following.

- Replace O-ring with new one using care not to damage it.
- Apply thin coat of fuel to O-ring and then install fuel pressure regulator (1) to delivery pipe.

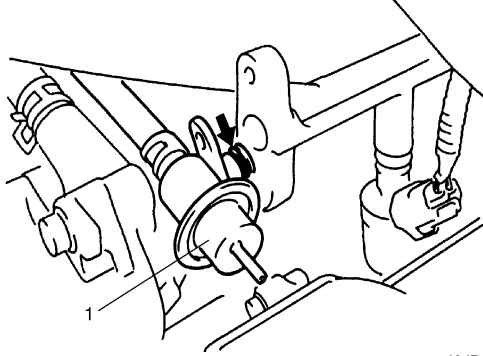

I6JB01170013-01

- Tighten fuel pressure regulator bolts to specified torque.

Tightening torque

Fuel pressure regulator bolt: 11 N·m (1.1 kgf-m, 8.0 lb-ft)

- After installation, with engine OFF and ignition switch ON, check for fuel leaks around fuel line connection.


Fuel Pressure Regulator Inspection

S6JB0B1706011

Confirm fuel pressure of fuel line is decreased when fuel pressure regulator is applied negative pressure by special tool.

Special tool

(A): 09917-47011

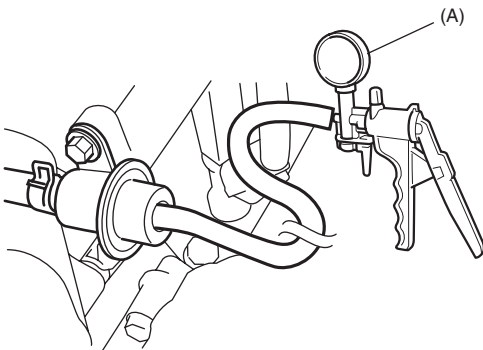

I6JB01170014-01

Fuel Filler Cap Inspection

S6JB0B1706012


⚠ WARNING

Before starting the following procedure, be sure to observe "Precautions on Fuel System Service" in order to reduce the risk of fire and personal injury.

Remove cap (1), and check gasket for even filler neck imprint, and deterioration or any damage. If gasket (2) is in malcondition, replace cap.

NOTE

If cap requires replacement, only a cap with the same features should be used. Failure to use correct cap can result in fire and personal injury.

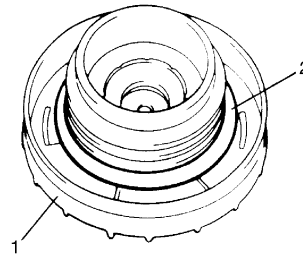

I2RH01170008-01

Fuel Tank Inlet Valve Removal and Installation

S6JB0B1706013

⚠ WARNING


Before starting the following procedure, be sure to observe "Precautions on Fuel System Service" in order to reduce the risk of fire and personal injury.

Removal

- 1) Remove fuel filler cap.
- 2) Insert hose of a hand operated pump into fuel filler hose (1) and drain fuel in space "A" as shown in figure.


⚠ CAUTION

Do not force pump hose into fuel tank, or pump hose may damage to fuel tank inlet valve (2).

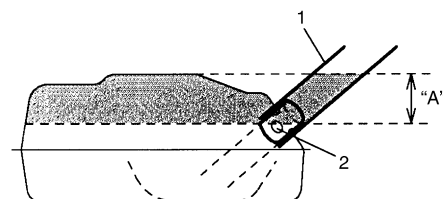

IYSQ01170010-01

- 3) Hoist vehicle, and remove clamps (2) and fuel filler hose (1) from fuel filler neck.

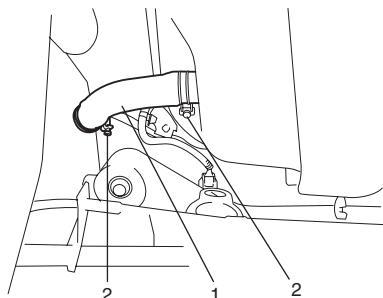


I6JB01170015-01

- 4) Remove fuel tank inlet valves (1) using flat head rod (2) or the like.

CAUTION

Be careful not to damage fuel tank inlet valve (1) with flat head rod (2) or the like.

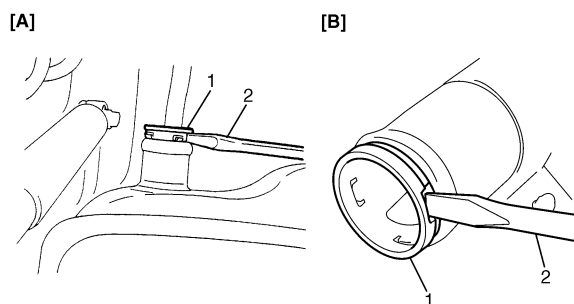


I6JB01170023-01

[A]: Fuel tank side (if equipped)
[B]: Fuel filler neck side

Installation

- 1) Install fuel tank inlet valves (1) to fuel filler neck (3) and fuel tank (2).

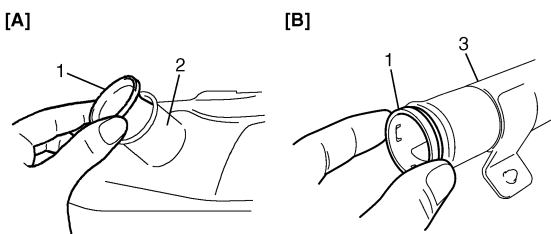


I6JB01170024-01

[A]: Fuel tank side (if equipped)
[B]: Fuel filler neck side

- 2) Install fuel filler hose (1) to fuel filler neck and fuel tank and secure it with clamps (2).
For proper installation, refer to "Fuel Hose Disconnecting and Reconnecting".

Tightening torque

Fuel filler hose clamp (a): 4 N·m (0.4 kgf-m, 3.0 lb-ft)

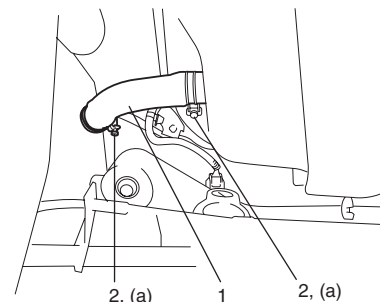

I6JB01170025-01

- 3) Lower vehicle and install fuel filler cap.

Fuel Tank Inlet Valve Inspection


S6JB0B1706014

WARNING

Before starting the following procedure, be sure to observe "Precautions on Fuel System Service" in order to reduce the risk of fire and personal injury.

Check fuel tank inlet valve for the following.
If any damage or malfunction is found, replace.

- Damage
- Smooth opening and closing

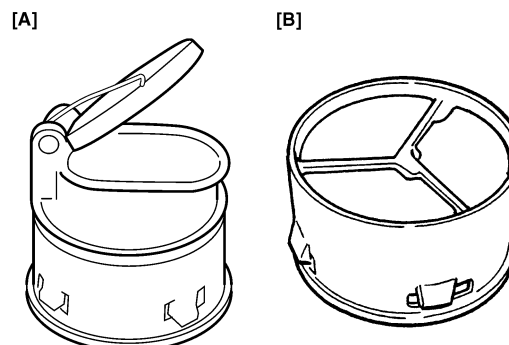

I6JB01170026-02

[A]: Fuel tank side (if equipped)
[B]: Fuel filler neck side

Fuel Tank Removal and Installation

S6JB0B1706015

⚠ WARNING


Before starting the following procedure, be sure to observe "Precautions on Fuel System Service" in order to reduce the risk of fire and personal injury.

Removal

- 1) Relieve fuel pressure in fuel feed line according to "Fuel Pressure Relief Procedure".
- 2) Disconnect negative (–) cable at battery.
- 3) Hoist vehicle.
- 4) Remove exhaust center pipe.
- 5) Remove rear propeller shaft referring to "Propeller Shaft Removal and Installation in Section 3D".
- 6) With cable connected, detach parking brake cable clamp from fuel tank cover referring to "Parking Brake Cable Location in Section 4D".
- 7) Remove fuel filler cap.
- 8) Insert hose of a hand operated pump into fuel filler hose (1) and drain fuel in space "A" as shown in figure.


⚠ CAUTION

Do not force pump hose into fuel tank, or pump hose may damage to fuel tank inlet valve (2).

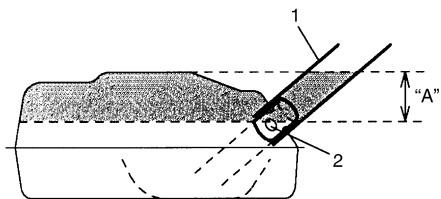

IYSQ01170010-01

- 9) Disconnect fuel filler hose (2) and breather hose from filler neck.
- 10) Disconnect fuel pump connector (1).

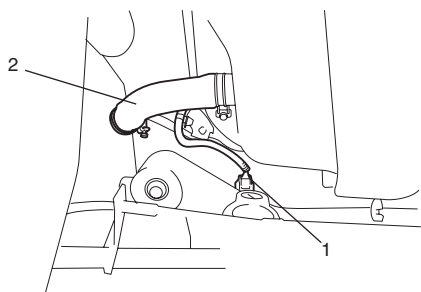


I6JB01170016-01

- 11) Due to absence of fuel tank drain plug, drain fuel tank by pumping fuel out through fuel tank filler. Use hand operated pump device to drain fuel tank.

⚠ CAUTION


- Do not force pump hose into fuel tank, or pump hose may damage fuel tank inlet valve.
- Never store fuel in an open container due to possibility of fire or explosion.

- 12) Disconnect fuel hoses (2) and EVAP canister hose (1) from each pipe referring to "Fuel Hose Disconnecting and Reconnecting".

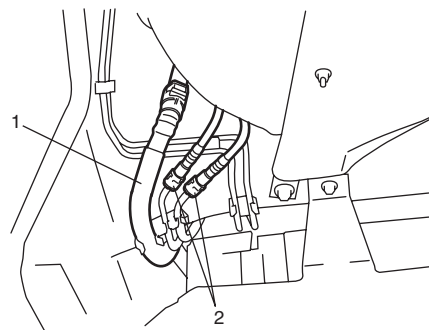

I6JB01170017-01

- 13) Support fuel tank (1) with jack (2) and remove fuel tank.

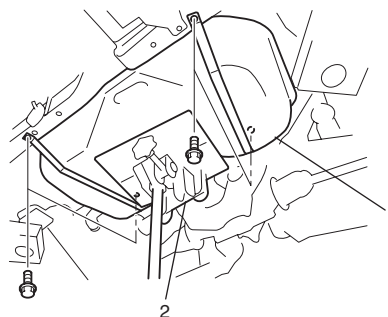

I5JB0A171018-01

- 14) Remove fuel tank inlet valve (if equipped) from fuel tank if necessary.

Installation


⚠ CAUTION

- When connecting joint, clean outside surfaces of pipe where joint is to be inserted, push joint into pipe till joint lock clicks and check to ensure that pipes are connected securely, or fuel leak may occur.
- Never let the fuel hoses touch the wheel speed sensor harness (if equipped).

- 1) If parts have been removed from fuel tank, install them before installing fuel tank to vehicle.
- 2) Raise fuel tank (1) with jack, and connect connectors of fuel pump and sub fuel level gauge and clamp wire harness.
- 3) Install fuel tank to vehicle tighten new fuel tank bolts to specified torque.

Tightening torque

Fuel tank bolt (a): 45 N·m (4.5 kgf-m, 32.5 lb-ft)

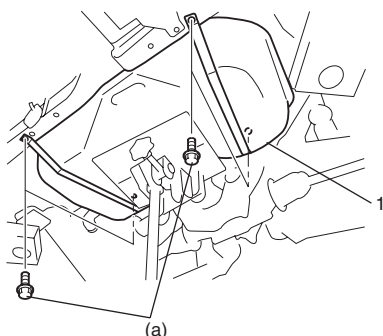


I5JB0A171020-01

- 4) Connect fuel filler hose (1) and breather hose to filler neck as shown in figure, and clamp them securely. For proper installation, refer to "Fuel Hose Disconnecting and Reconnecting".

Tightening torque


Fuel filler hose clamp (a): 4 N·m (0.4 kgf-m, 3.0 lb-ft)

- 5) Connect fuel pump connector (2).

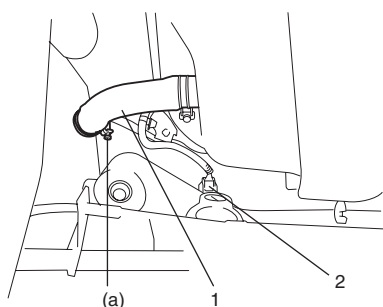

I6JB01170018-01

- 6) Connect fuel hoses (1) and EVAP canister hose (2) to each pipe as shown in figure, and clamp them securely referring to "Fuel Hose Disconnecting and Reconnecting".

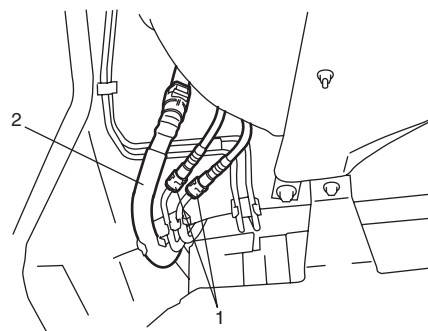

I6JB01170019-01

- 7) Install parking brake cable clamp to fuel tank cover referring to "Parking Brake Cable Location in Section 4D".
- 8) Install rear propeller shaft referring to "Propeller Shaft Removal and Installation in Section 3D".
- 9) Install exhaust center pipe referring to "Exhaust System Components in Section 1K".
- 10) Connect negative (–) cable at battery.
- 11) With engine OFF, turn ignition switch to ON position and check for fuel leaks.

Fuel Tank Inspection

S6JB0B1706016

After removing fuel tank, check hoses and pipes connected to fuel tank for leaks, loose connections, deterioration or damage. Also check fuel pump assembly gaskets for leaks, visually inspect fuel tank for leaks and damage.

Replace any damaged or malfunctioned parts.

Fuel Tank Purging Procedure

S6JB0B1706017

⚠ WARNING

- Before starting the following procedure, be sure to observe "Precautions on Fuel System Service" in order to reduce the risk of fire and personal injury.
- This purging procedure will not remove all fuel vapor.
Do not attempt any repair on tank using heat of flame as an explosion resulting in personal injury could occur.

⚠ CAUTION

Never remain water in fuel tank after washing, or fuel tank inside will get corrosion.

The following procedure are used for purging fuel tank.

- 1) After removing fuel tank, remove all hoses, pipes, sub fuel level gauge and fuel pump assembly from fuel tank.
- 2) Drain all remaining fuel from tank.
- 3) Place fuel tank to flushing area.
- 4) Fill tank with warm water or tap water, and agitate vigorously and drain. Repeat this washing until inside of tank is clean. Replace tank if its inside is rusty.
- 5) Completely flush out remaining water after washing.


Fuel Pump On-Vehicle Inspection

S6JB0B1706018

⚠ WARNING


Before starting the following procedure, be sure to observe "Precautions on Fuel System Service" in order to reduce the risk of fire and personal injury.

- 1) Remove filler cap and turn ON ignition switch (2). Then fuel pump operating sound should be heard from fuel filler (1) for about 2 seconds and stop. Be sure to reinstall fuel filler cap after checking. If the check result is not satisfactory, go to "Fuel Pump and Its Circuit Check in Section 1A".

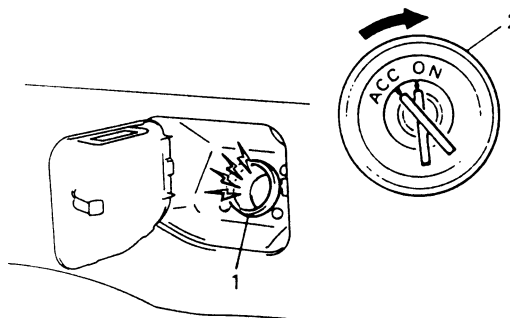

IVSY01170013-01

- 2) Turn OFF ignition switch and leave over 10 minutes as it is.
- 3) Fuel pressure should be felt at fuel feed hose (1) for about 2 seconds after ignition switch ON. If fuel pressure is not felt, go to "Fuel Pressure Check in Section 1A".

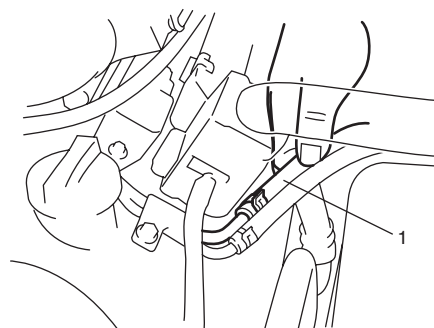

I6JB01170020-01

Fuel Pump Assembly Removal and Installation


S6JB0B1706019

⚠ WARNING

Before starting the following procedure, be sure to observe "Precautions on Fuel System Service" in order to reduce the risk of fire and personal injury.


Removal

- 1) Remove fuel tank from vehicle. Refer to "Fuel Tank Removal and Installation".
- 2) Disconnect fuel feed pipe (1) and fuel return pipe (3) from fuel pump assembly (2) referring to "Fuel Hose Disconnecting and Reconnecting".

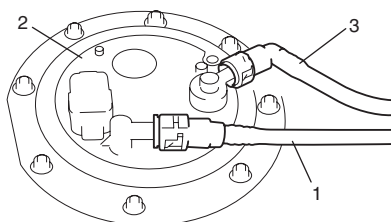

I5JB0A171024-01

- 3) Disconnect fuel suction hose (2) referring to "Fuel Hose Disconnecting and Reconnecting".
- 4) Remove fuel pump assembly (1) from fuel tank.

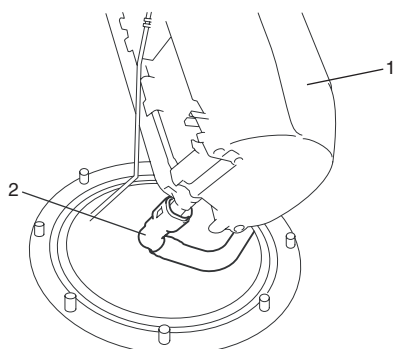


I5JB0A170005-01

Installation

⚠ CAUTION

When connecting joint, clean outside surface of pipe where joint is to be inserted, push joint into pipe till joint lock clicks and check to ensure that pipes are connected securely, or fuel leak may occur.

- 1) Clean mating surfaces of fuel pump assembly (1) and fuel tank.
- 2) Put plate (2) on fuel pump assembly (1) by matching the protrusion of fuel pump assembly (3) to plate hole (4) as shown.

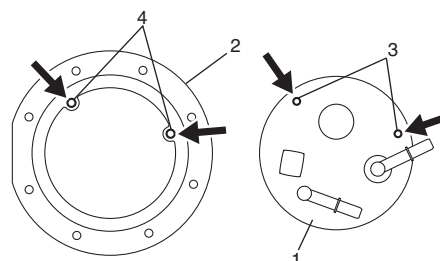


I5JB0A171025-01

- 3) Install new gasket (2) and fuel pump assembly (1) with plate (3) to fuel tank (4).


Tightening torque

Fuel pump assembly nut (a): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

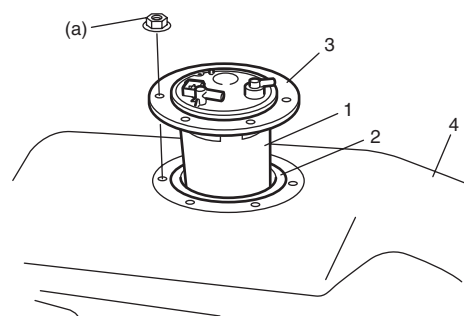

I6JB01170021-01

- 4) Connect fuel feed pipe (1) (pipe joint) and fuel return pipe (3) (pipe joint) to fuel pump assembly (2).

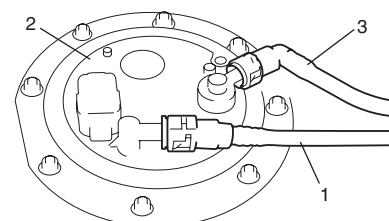

I5JB0A171024-01


- 5) Install fuel tank to vehicle. Refer to "Fuel Tank Removal and Installation".

Main Fuel Level Gauge Removal and Installation

S6JB0B1706020

⚠ CAUTION


- Do not touch resister plate (1) and deform arm (2). It may cause main fuel level gauge to fail.
- Be very careful not to cause damage to fuel tube installed section (sealed section in bore). If it be damaged, replace it with new one, or fuel will leak from the part.

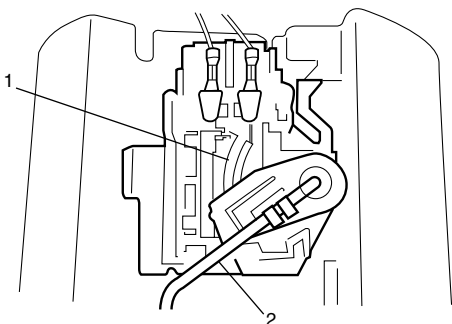

I4RS0A170016-01

Removal

- 1) Remove fuel pump assembly from fuel tank referring to "Fuel Pump Assembly Removal and Installation".
- 2) Disconnect main fuel level gauge connector (3).
- 3) With pressing snap-fit part (2), remove main fuel level gauge (1) by sliding it in the arrow direction as shown in figure.

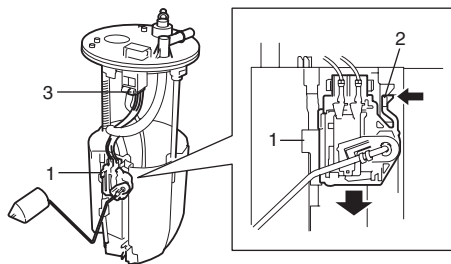

I5JB0A171026-01


Installation

Reverse removal procedure for installation.

Fuel Pump Inspection

S6JB0B1706021

- Check fuel pump assembly for damage.
- Check fuel suction filter for evidence of dirt and contamination.
If present, replace or clean and check for presence of dirt in fuel tank.
- For electrical circuit, refer to "Fuel Pressure Check in Section 1A".
- For inspection of main fuel level gauge (1), refer to "Fuel Level Sensor Inspection in Section 9C".

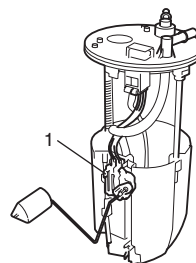


I5JB0A171027-01

Sub Fuel Level Gauge Removal and Installation

S6JB0B1706022

⚠ CAUTION


- Do not touch resister plate (1) and deform arm (2). It may cause sub fuel level gauge to fail.

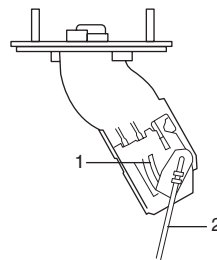

I5JB0A171028-01

Removal

- 1) Remove fuel tank from vehicle. Refer to "Fuel Tank Removal and Installation".
- 2) Disconnect sub fuel level gauge connector (1).
- 3) Remove sub fuel level gauge (2).

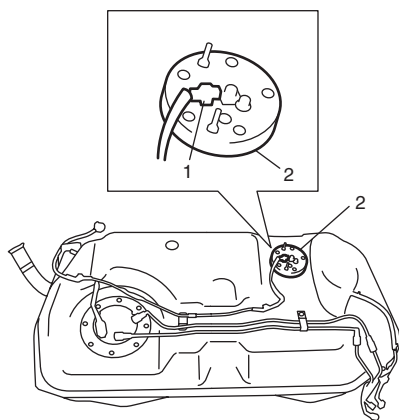

I5JB0A171029-01

Installation


Reverse removal procedure for installation noting the following.

- Replace O-ring with new one using care not to damage it.
- Apply thin coat of fuel to O-ring, and then install sub fuel level gauge.

Sub Fuel Level Gauge Inspection

S6JB0B1706023

- Check sub fuel level gauge for damage.
- For inspection of sub fuel gauge (1), refer to "Fuel Level Sensor Inspection in Section 9C".

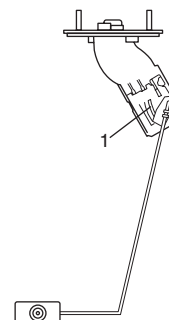

I5JB0A171030-01

Specifications**Tightening Torque Specifications**

S6JB0B1707001

Fastening part	Tightening torque			Note
	N·m	kgf-m	lb-ft	
Fuel delivery pipe bolt	25	2.5	18.0	⌚
Fuel union bolt	30	3.0	22.0	⌚
Fuel pressure regulator bolt	11	1.1	8.0	⌚
Fuel filler hose clamp	4	0.4	3.0	⌚ / ⌚
Fuel tank bolt	45	4.5	32.5	⌚
Fuel pump assembly nut	11	1.1	8.0	⌚

NOTE

The specified tightening torque is also described in the following.

"Fuel System Components"

"Fuel Hose Disconnecting and Reconnecting"


Reference:

For the tightening torque of fastener not specified in this section, refer to "Fastener Information in Section 0A".

Special Tools and Equipment


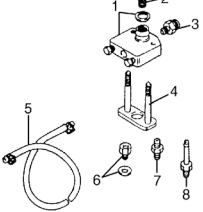

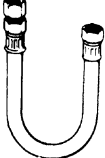



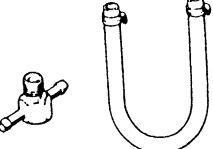
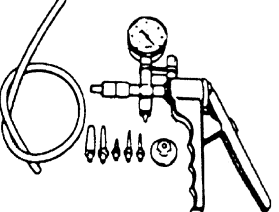
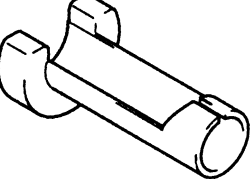
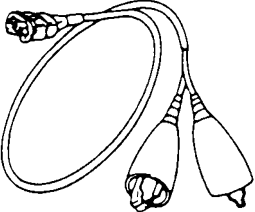

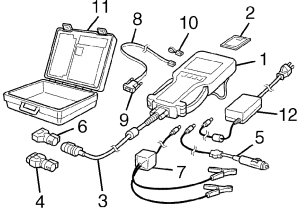
Recommended Service Material

S6JB0B1708001

Material	SUZUKI recommended product or Specification	Note
Oil	SUZUKI DI O RING OIL(500CC)	P/No.: 99000-25320 

Special Tool

S6JB0B1708002

<p>09912-58421</p> <p>Checking tool set</p> <p>This kit includes the following items. 1. Tool body and washer, 2. Body plug, 3. Body attachment-1, 4. Holder, 5. Return hose and clamp, 6. Body attachment-2 and washer, 7. Hose attachment-1, 8. Hose attachment-2 </p> 	<p>09912-58432</p> <p>Fuel pressure gauge hose</p> <p>This tool is included in fuel pressure gauge set (09912-58413). </p> 
<p>09912-58442</p> <p>Fuel pressure gauge</p> <p>This tool is included in fuel pressure gauge set (09912-58413).  / </p> 	<p>09912-58490</p> <p>3-way joint & hose</p> 
<p>09917-47011</p> <p>Vacuum pump gauge</p> 	<p>09919-47020</p> <p>Quick joint remover</p> 
<p>09930-88530</p> <p>Injector test lead</p> 	<p>SUZUKI scan tool</p> <p>—</p> <p>This kit includes following items. 1. Tech 2, 2. PCMCIA card, 3. DLC cable, 4. SAE 16/19 adapter, 5. Cigarette cable, 6. DLC loop back adapter, 7. Battery power cable, 8. RS232 cable, 9. RS232 adapter, 10. RS232 loop back connector, 11. Storage case, 12. </p> 

Ignition System

General Description

Ignition System Construction

S6JB0B1801001

The ignition system is a direct ignition system. It consists of the parts as described below and has an electronic ignition control system.


- ECM
It detects the engine and vehicle conditions through the signals from the sensors, determines the most suitable ignition timing and time for electricity to flow to the primary coil and sends a signal to the igniter (power unit) in the ignition coil assembly.
- Ignition coil assembly (including an igniter and an ignition coil)
The ignition coil assembly has a built-in igniter which turns ON and OFF the current flow to the primary coil according to the signal from ECM. When the current flow to the primary coil is turned OFF, a high voltage is induced in the secondary coil. One ignition coil is in charge of ignition of one cylinder only.
- Spark plug and noise suppressor
- CMP sensor (Camshaft position sensor) and CKP sensor (Crankshaft position sensor)
Using signals from these sensors, ECM identifies the specific cylinder whose piston is in the compression stroke, detects the crank angle and engine speed, adjusts the ignition timing automatically.
- TP sensor, ECT sensor, MAP sensor (if equipped), MAF sensor, IAT sensor, knock sensor, wheel speed sensor (VSS) and other sensors / switches

This ignition system does not have a distributor and high-tension cords but each cylinder has an ignition coil assembly (igniter and ignition coil) and the secondary voltage which occurred in the ignition coil is sent to the spark plug directly.

Schematic and Routing Diagram

Ignition System Wiring Circuit Diagram

S6JB0B1802001

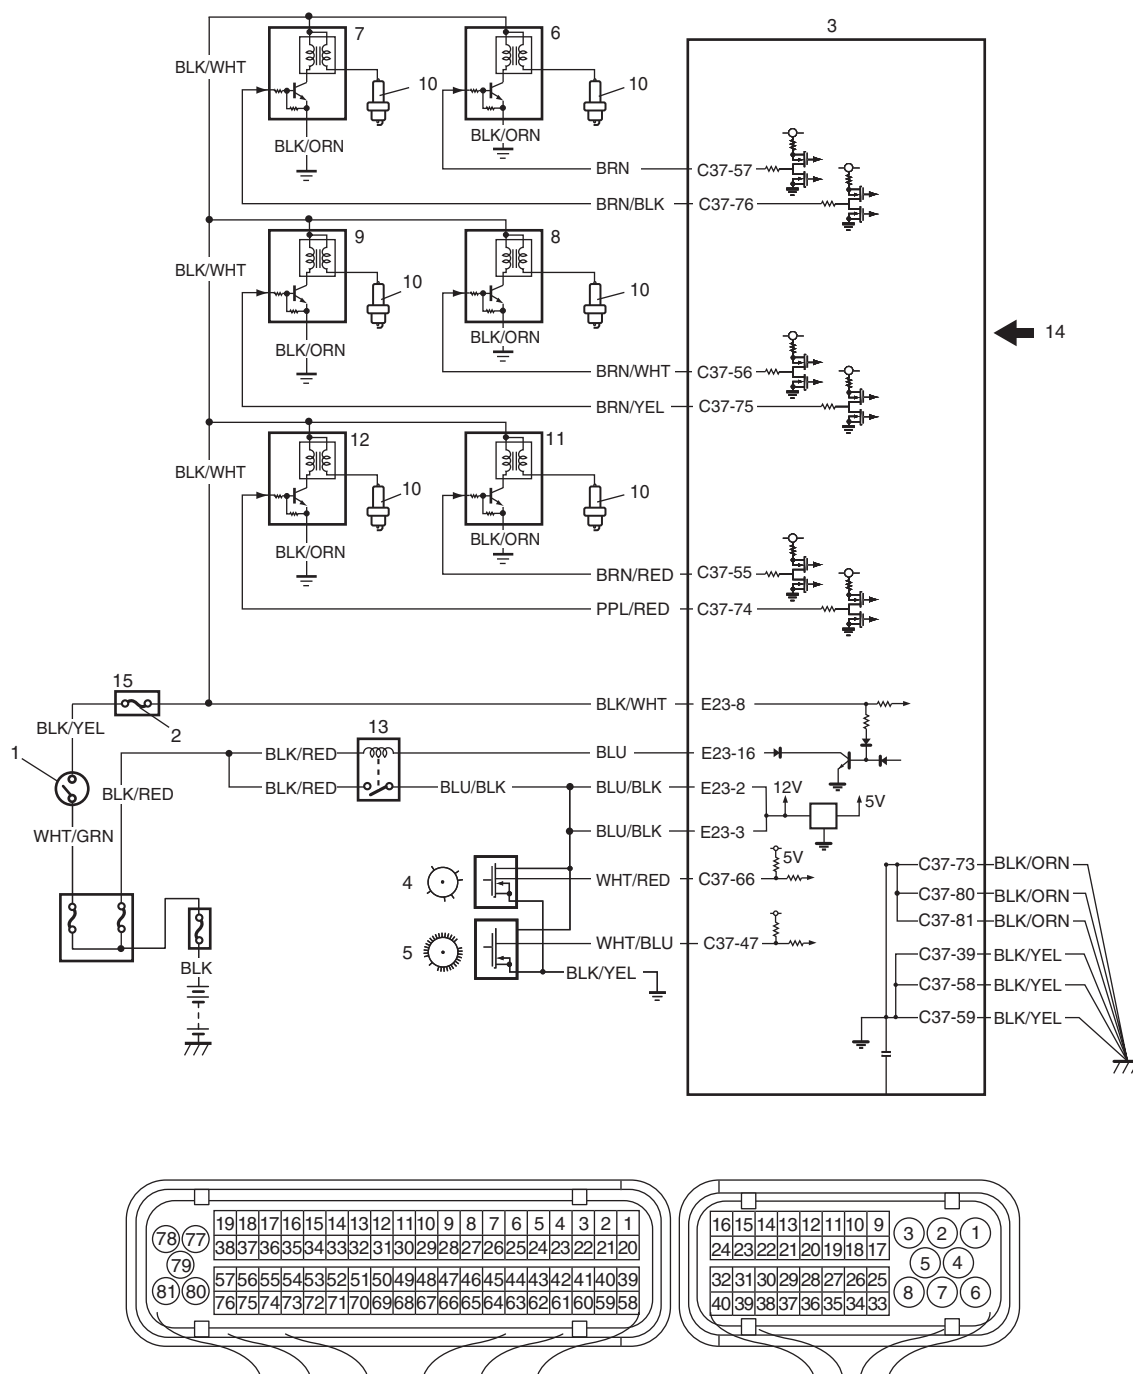


1. Ignition switch	5. CKP sensor	9. Ignition coil assembly (For No.4 cylinder)	13. Main relay
2. "IG COIL" fuse	6. Ignition coil assembly (For No.1 cylinder)	10. Spark plug	14. Sensed information
3. ECM	7. Ignition coil assembly (For No.2 cylinder)	11. Ignition coil assembly (For No.5 cylinder)	15. Junction block
4. CMP sensor	8. Ignition coil assembly (For No.3 cylinder)	12. Ignition coil assembly (For No.6 cylinder)	

I6JB01180001-01

Component Location

Ignition System Components Location

S6JB0B1803001

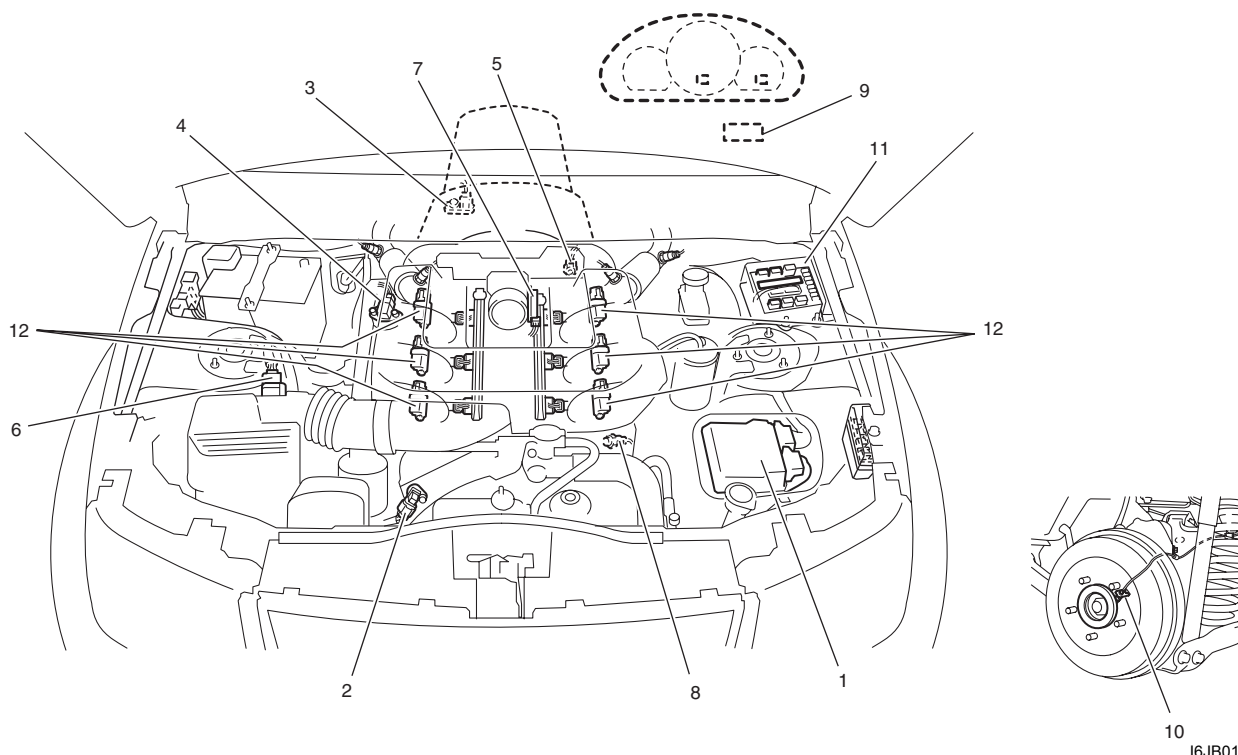

I6JB01180002-01

1. ECM	5. ECT sensor	9. Data link connector
2. CMP sensor	6. MAF and IAT sensor	10. Rear wheel sensor (RH, LH) (VSS)
3. CKP sensor	7. Electric throttle body assembly	11. Fuse box No.2
4. MAP sensor (if equipped)	8. Knock sensor	12. Ignition coil assembly

Diagnostic Information and Procedures

Ignition System Symptom Diagnosis

S6JB0B1804001

Condition	Possible cause	Correction / Reference Item
Engine cranks, but will not start or hard to start (No spark)	Blown fuse for ignition coil assembly	<i>Replace.</i>
	Loose connection or disconnection of lead wire	<i>Connect securely.</i>
	Faulty spark plug(s)	<i>Replace.</i>
	Faulty ignition coil assembly(s)	<i>Replace.</i>
	Faulty CMP sensor or sensor rotor	<i>Clean, tighten or replace.</i>
	Faulty CKP sensor or sensor plate	<i>Clean, tighten or replace.</i>
	Faulty ECM	<i>Replace.</i>
Poor fuel economy or engine performance	Incorrect ignition timing	<i>Check related sensors and CKP sensor plate.</i>
	Faulty spark plug(s)	<i>Replace.</i>
	Faulty ignition coil assembly(s)	<i>Replace.</i>
	Faulty CMP sensor or sensor rotor	<i>Clean, tighten or replace.</i>
	Faulty CKP sensor or sensor plate	<i>Clean, tighten or replace.</i>
	Faulty ECM	<i>Replace.</i>
	Faulty knock sensor	<i>Replace.</i>

Ignition System Check

Step	Action	Yes	No
1	Was "Engine and Emission Control System Check" performed?	Go to Step 2.	Go to "Engine and Emission Control System Check in Section 1A".
2	Ignition spark test 1) Check all spark plugs for condition and type referring to "Spark Plug Inspection". 2) If OK, perform ignition spark test referring to "Ignition Spark Check". <i>Is spark emitted from all spark plugs?</i>	Go to Step 11.	Go to Step 3.
3	DTC check 1) Perform DTC check referring to "DTC Check in Section 1A". <i>Is DTC stored in ECM?</i>	Go to applicable DTC diag. flow.	Go to Step 4.
4	Electrical connection check 1) Check ignition coil assemblies for electrical connection. <i>Are they connected securely?</i>	Go to Step 5.	Connect securely.
5	Ignition coil assembly power supply and ground circuit check 1) Check ignition coil assembly power supply and ground circuits for open and short. <i>Are circuits in good condition?</i>	Go to Step 6.	Repair or replace.
6	Ignition coil assembly check 1) Check ignition coil for resistance referring to "Ignition Coil Assembly (Igniter and Ignition Coil) Inspection". <i>Is check result satisfactory?</i>	Go to Step 7.	Replace ignition coil assembly.
7	CKP sensor check 1) Check CKP sensor referring to "Camshaft Position (CMP) Sensor and Crankshaft Position (CKP) Sensor Inspection in Section 1C". <i>Is check result satisfactory?</i>	Go to Step 8.	Tighten CKP sensor bolt, replace CKP sensor or CKP sensor plate.
8	CMP sensor check 1) Check CMP sensor referring to "Camshaft Position (CMP) Sensor and Crankshaft Position (CKP) Sensor Inspection in Section 1C". <i>Is check result satisfactory?</i>	Go to Step 9.	Tighten CMP sensor bolt, replace CMP sensor or intake camshaft.
9	Ignition trigger signal circuit check 1) Check ignition trigger signal wire for open, short and poor connection. <i>Is circuit in good condition?</i>	Go to Step 10.	Repair or replace.
10	A known-good ignition coil assembly substitution 1) Substitute a known-good ignition coil assembly and then repeat Step 2. <i>Is check result of Step 2 satisfactory?</i>	Go to Step 11.	Substitute a known-good ECM and then repeat Step 2.

Step	Action	Yes	No
11	Ignition timing check 1) Check initial ignition timing and ignition timing advance referring to "Ignition Timing Inspection". <i>Is check result satisfactory?</i>	System is in good condition.	Go to Step 12.
12	Knock sensor check 1) Confirm that knock sensor circuit is in good condition referring to "DTC P0327 / P0328: Knock Sensor Circuit Low / High in Section 1A". 2) Check oscilloscope waveform of knock sensor signal referring to "Reference waveform No.12" under "Inspection of ECM and Its Circuits in Section 1A". <i>Is check result satisfactory?</i>	Check CMP sensor, CMP sensor rotor tooth of camshaft, CKP sensor, CKP sensor plate and/or input signals related to this system.	Substitute a known-good knock sensor and recheck.

Reference

Refer to "Reference waveform No.17 to 20" and "Reference waveform No.24 to 26" under "Inspection of ECM and Its Circuits in Section 1A" for waveform of ignition trigger signal.


Ignition Spark Check

S6JB0B1804003

⚠ WARNING

Without disconnection of injector coupler, combustible gas may come out from spark plug holes during this test and may get ignited in engine room.

- 1) Remove surge tank cover.
- 2) Disconnect injector coupler (1).

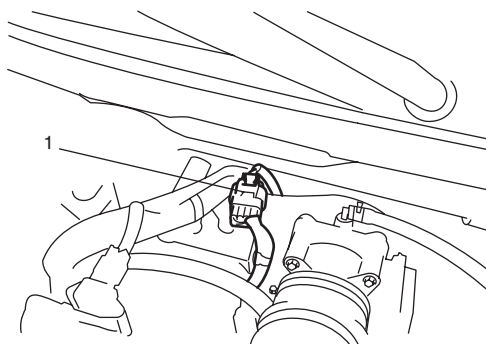

I6JB01180003-02

- 3) Remove spark plug and check it for condition and type, referring to "Spark Plug Inspection".
- 4) If OK, connect ignition coil coupler to ignition coil assembly and connect spark plug to ignition coil assembly. Ground spark plug.
- 5) Crank engine and check if each spark plug sparks.
If no spark is emitted, inspect the related parts as described under "Ignition System Symptom Diagnosis".
- 6) After checking, install spark plug referring to "Spark Plug Removal and Installation".
- 7) Connect injector coupler.
- 8) Install surge tank cover.

Repair Instructions

Ignition Timing Inspection

S6JB0B1806001


NOTE

Before starting engine, place transmission gear shift lever in "Neutral" (shift selector lever to "P" range for A/T model), and set parking brake.

- 1) Start engine and warm it up to normal operating temperature.
- 2) Make sure that all of electrical loads except ignition are switched OFF.
- 3) Check to be sure that idle speed is within specification referring to "Idle Speed and IAC Throttle Valve Opening Inspection in Section 1A".
- 4) Connect SUZUKI scan tool to DLC (1) with ignition switch OFF, restart engine and fix ignition timing by using fixed spark mode of SUZUKI scan tool.

Special tool

(A): SUZUKI scan tool

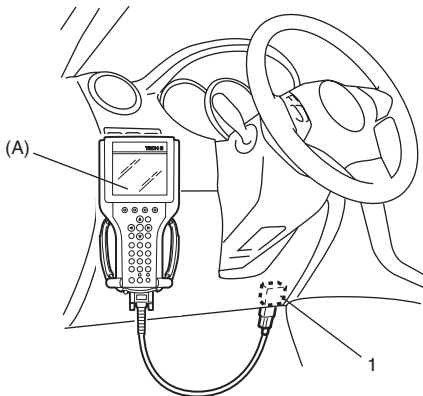

I5JB0A510016-01

- 5) Set timing light to ignition harness for No.1 cylinder.
- 6) Using timing light, check that timing observed from viewpoint is within specification.

Initial ignition timing


Fixed with SUZUKI scan tool: $5 \pm 1^\circ$ BTDC

Ignition order

1-6-5-4-3-2

Special tool

(A): 09930-76420

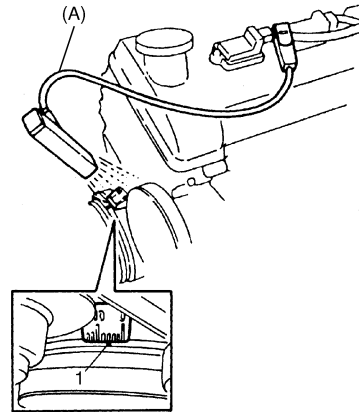

I6JB01180004-02

1. Timing mark on crankshaft pulley


- 7) If ignition timing is out of specification, check the followings.
 - CKP sensor
 - CKP sensor plate
 - TP sensor
 - CMP sensor
 - CMP sensor rotor tooth of camshaft
 - Wheel speed sensor (VSS)
 - Timing chain cover installation
- 8) After checking initial ignition timing, release ignition timing fixation by using scan tool.
- 9) With engine idling (throttle opening at closed position and vehicle stopped), check that ignition timing is about $10^\circ - 16^\circ$ BTDC. (Constant variation within a few degrees from $10^\circ - 156^\circ$ BTDC indicates no abnormality but proves operation of electronic timing control system.) Also, check that increasing engine speed advances ignition timing.
If the check results are not satisfactory, check CKP sensor and ECM.

Ignition Coil Assembly (Igniter and Ignition Coil) Removal and Installation

S6JB0B1806002

Removal

- 1) Remove surge tank cover.
- 2) Disconnect ignition coil coupler.
- 3) Remove ignition coil bolt (1), and then pull out ignition coil assembly (2).

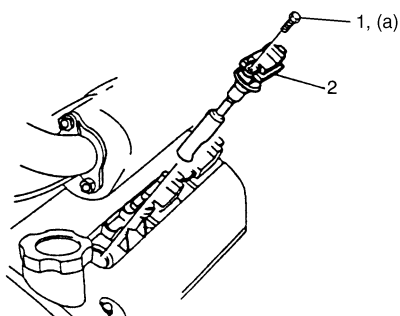

I6JB01180005-02

Installation

Install in reverse order of removal.

Tightening torque

Ignition coil bolt (a): 6.5 N·m (0.65 kgf-m, 5.0 lb-ft)

Ignition Coil Assembly (Igniter and Ignition Coil) Inspection

S6JB0B1806003

Check ignition coil assembly for the following:


- Damage
- Deterioration
- Terminal for corrosion

Spark Plug Removal and Installation

S6JB0B1806004

Removal

- 1) Remove ignition coil assembly (1) referring to "Ignition Coil Assembly (Igniter and Ignition Coil) Removal and Installation".
- 2) Remove spark plug (2).

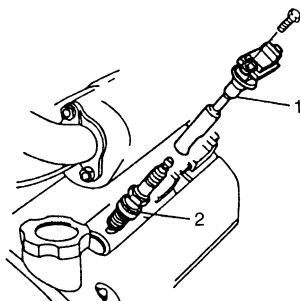

I4JA01180002-01


Installation

- 1) Install spark plug (1) and tighten them to specified torque.

Tightening torque

Spark plug (a): 25 N·m (2.5 kgf-m, 18.0 lb-ft)

- 2) Install ignition coil assembly (2) referring to "Ignition Coil Assembly (Igniter and Ignition Coil) Removal and Installation".

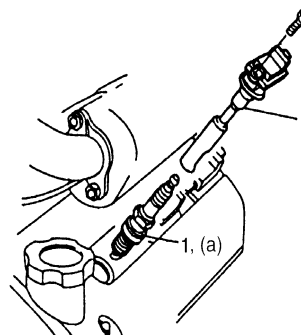

I4JA01180003-01

Spark Plug Inspection

S6JB0B1806005

Inspect them for electrode, air gap wear carbon deposits and Insulator damage.

If any abnormality is found, adjust air gap, clean with spark plug cleaner or replace them with specified new plug.


Spark plug air gap "a"

: 1.0 – 1.1 mm (0.039 – 0.043 in.)

Spark plug type

DENSO: K20PR-U11

NGK: BKR6E-11

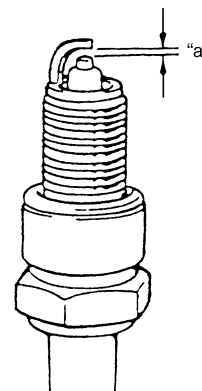

IYSQ01181012-01

Specifications

Tightening Torque Specifications

S6JB0B1807001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lb·ft	
Ignition coil bolt	6.5	0.65	5.0	☞
Spark plug	25	2.5	18.0	☞



Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Special Tools and Equipment

Special Tool

S6JB0B1808001

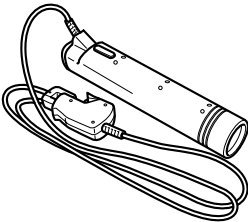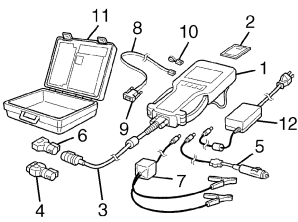09930-76420 Timing-light (dry cell type) ☞		SUZUKI scan tool — This kit includes following items. 1. Tech 2, 2. PCMCIA card, 3. DLC cable, 4. SAE 16/19 adapter, 5. Cigarette cable, 6. DLC loop back adapter, 7. Battery power cable, 8. RS232 cable, 9. RS232 adapter, 10. RS232 loop back connector, 11. Storage case, 12. ☞	
--	---	---	---

Starting System

General Description

Cranking Circuit Introduction


S6JB0B1901001

The cranking circuit consists of the battery, starting motor, ignition switch, and related electrical wiring. These components are connected electrically.

Starting Motor Circuit Description

S6JB0B1901002

- The magnetic switch coils are magnetized when the ignition switch is closed.
- The resulting plunger and pinion drive lever movement causes the pinion to engage the engine flywheel gear and the magnetic switch main contacts to close, and cranking takes place.
- When the engine starts, the pinion over-running clutch protects the armature from excessive speed until the switch is opened, at which time the return spring causes the pinion to disengage.

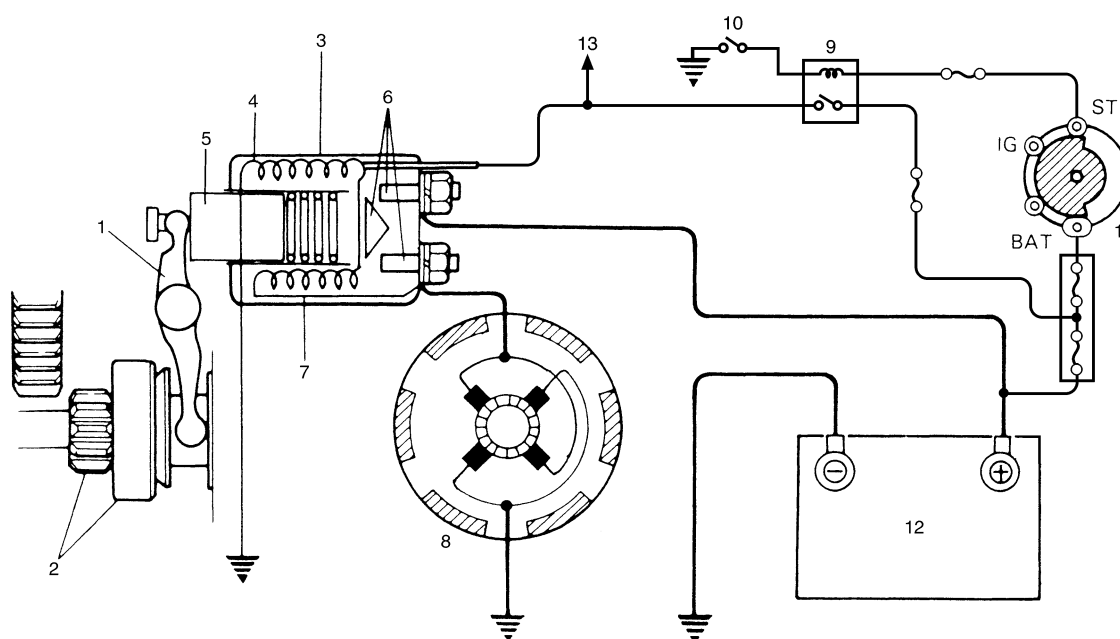

I5JB0A190004-01

1. Pinion drive lever	6. Magnetic switch contacts	11. Ignition & Starter switch
2. Pinion & Over-running clutch	7. Pull-in coil	12. Battery
3. Magnetic switch	8. Starting motor	13. To ECM
4. Hold-in coil	9. Starting motor control relay	
5. Plunger	10. A/T: Transmission range switch (shift lever switch)	

Diagnostic Information and Procedures

Cranking System Symptom Diagnosis

S6JB0B1904001

Possible symptoms due to starting system trouble would be as follows:

- Starting motor does not run (or runs slowly)
- Starting motor runs but fails to crank engine
- Abnormal noise is heard

Proper diagnosis must be made to determine exactly where the cause of each trouble lies.....in battery, wiring harness, (including starting motor switch), starting motor or engine.

Do not remove motor just because starting motor does not run. Check the following items and narrow down scope of possible causes.

- 1) Condition of trouble
- 2) Tightness of battery terminals (including ground cable connection on engine side) and starting motor terminals
- 3) Discharge of battery
- 4) Mounting of starting motor

Condition	Possible cause	Correction / Reference Item
Motor not running – No operating sound of magnetic switch	Shift lever switch is not in P or N, or not adjusted (A/T)	<i>Shift in P or N, or adjust switch.</i>
	Malfunction of clutch pedal position switch (M/T)	<i>Adjust or replace.</i>
	Battery run down	<i>Recharge battery.</i>
	Battery voltage too low due to battery deterioration	<i>Replace battery.</i>
	Poor contact in battery terminal connection	<i>Retighten or replace.</i>
	Loose grounding cable connection	<i>Retighten.</i>
	Fuse set loose or blown off	<i>Tighten or replace.</i>
	Poor contacting action of ignition switch and magnetic switch	<i>Replace.</i>
	Lead wire coupler loose in place	<i>Retighten.</i>
	Open-circuit between ignition switch and magnetic switch	<i>Repair.</i>
	Open-circuit in pull-in coil	<i>Replace magnetic switch.</i>
	Brushes are seating poorly or worn down	<i>Repair or replace.</i>
	Poor sliding or plunger and/or pinion	<i>Repair.</i>
	Faulty starting motor control relay	<i>"Engine and Emission Control System Relay Inspection in Section 1C".</i>
	Faulty ECM and its circuit	<i>"Inspection of ECM and Its Circuits in Section 1A".</i>
Motor not running – Operating sound of magnetic switch heard	Battery run down	<i>Recharge battery.</i>
	Battery voltage too low due to battery deterioration	<i>Replace battery.</i>
	Loose battery cable connections	<i>Retighten.</i>
	Burnt main contact point, or poor contacting action of magnetic switch	<i>Replace magnetic switch.</i>
	Brushes are seating poorly or worn down	<i>Repair or replace.</i>
	Weakened brush spring	<i>Replace.</i>
	Burnt commutator	<i>Replace armature.</i>
	Layer short-circuit of armature	<i>Replace.</i>
	Crankshaft rotation obstructed	<i>Repair.</i>

Condition	Possible cause	Correction / Reference Item
Starting motor running, but too slow (small torque) – Battery and wiring are satisfactory	Insufficient contact of magnetic switch main contacts	<i>Replace magnetic switch.</i>
	Layer short-circuit of armature	<i>Replace.</i>
	Disconnected, burnt or worn commutator	<i>Repair commutator or replace armature.</i>
	Worn brushes	<i>Replace brush.</i>
	Weakened brush springs	<i>Replace brush assembly.</i>
	Burnt or abnormally worn end bush	<i>Replace front housing.</i>
	Burnt commutator	<i>Replace armature.</i>
	Layer short-circuit of armature	<i>Replace.</i>
	Crankshaft rotation obstructed	<i>Repair.</i>
Starting motor running, but not cranking engine	Worn pinion tip	<i>Replace over-running clutch.</i>
	Poor sliding of over-running clutch	<i>Repair.</i>
	Over-running clutch slipping	<i>Replace over-running clutch.</i>
	Worn teeth of ring gear	<i>Replace flywheel (M/T) or drive plate (A/T).</i>
Noise	Abnormally worn bush	<i>Replace front housing.</i>
	Worn pinion or worn teeth of ring gear	<i>Replace over-running clutch, flywheel (M/T) or drive plate (A/T).</i>
	Poor sliding of pinion (failure in return movement)	<i>Repair or replace.</i>
	Worn internal or planetary gear teeth	<i>Replace.</i>
	Lack of oil in each part	<i>Lubricate.</i>
Starting motor does not stop running	Fused contact points of magnetic switch	<i>Replace magnetic switch.</i>
	Short-circuit between turns of magnetic switch coil (layer short-circuit)	<i>Replace magnetic switch.</i>
	Failure of returning action in ignition switch	<i>Replace.</i>

Starting Motor Performance Test

S6JB0B1904002

⚠ CAUTION


Each test must be performed within 3 – 5 seconds to avoid coil from burning.

Pull-In Test

- 1) Connect battery to magnetic switch as shown.
- 2) Check that plunger and pinion move outward. If plunger and pinion don't move, replace magnetic switch.

NOTE

Before testing, disconnect lead wire from terminal "M".

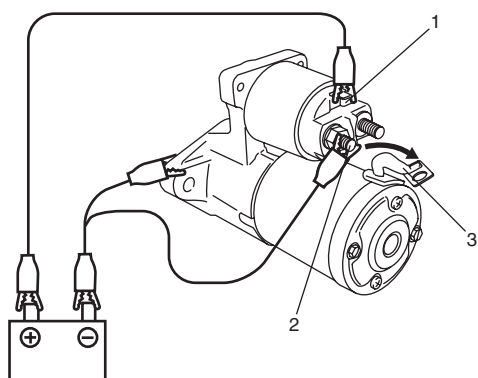


I6JB01190001-02

1. Terminal "S"
2. Terminal "M"
3. Lead wire (switch to motor)

Hold-In Test


- 1) While connected as above with plunger out, disconnect negative lead (2) from terminal "M" (1).
- 2) Check that plunger and pinion remain out. If plunger and pinion return inward, replace magnetic switch.

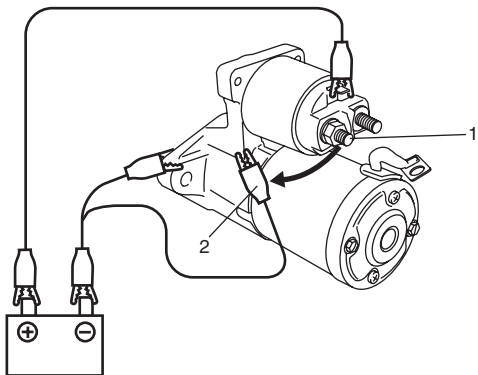

I6JB01190002-02

Plunger and Pinion Return Test

- 1) Disconnect negative lead (1) from switch body (2).
- 2) Check that plunger and pinion return inward. If plunger and pinion don't return, disassemble and inspect starting motor.

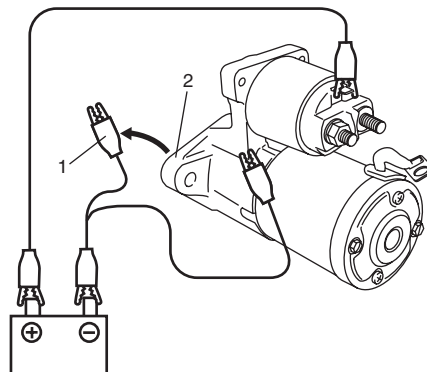

I6JB01190003-02


No-Load Performance Test

- 1) Connect battery and ammeter to starter as shown.
- 2) Check that starter rotates smoothly and steadily with pinion moving out. Check that ammeter indicates specified current.

Specified current (no-load performance test)
90 A MAX. at 11 V

NOTE

Use wires as thick as possible and tighten each terminal fully.

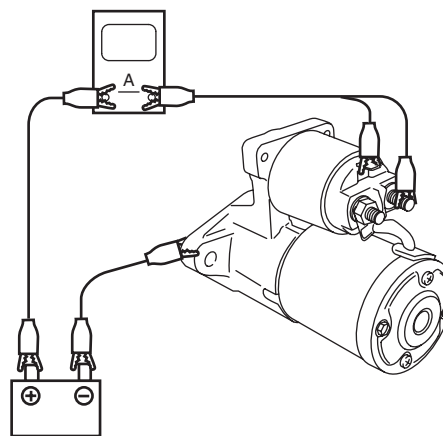


I6JB01190004-01

Repair Instructions

Starting Motor Components

S6JB0B1906001

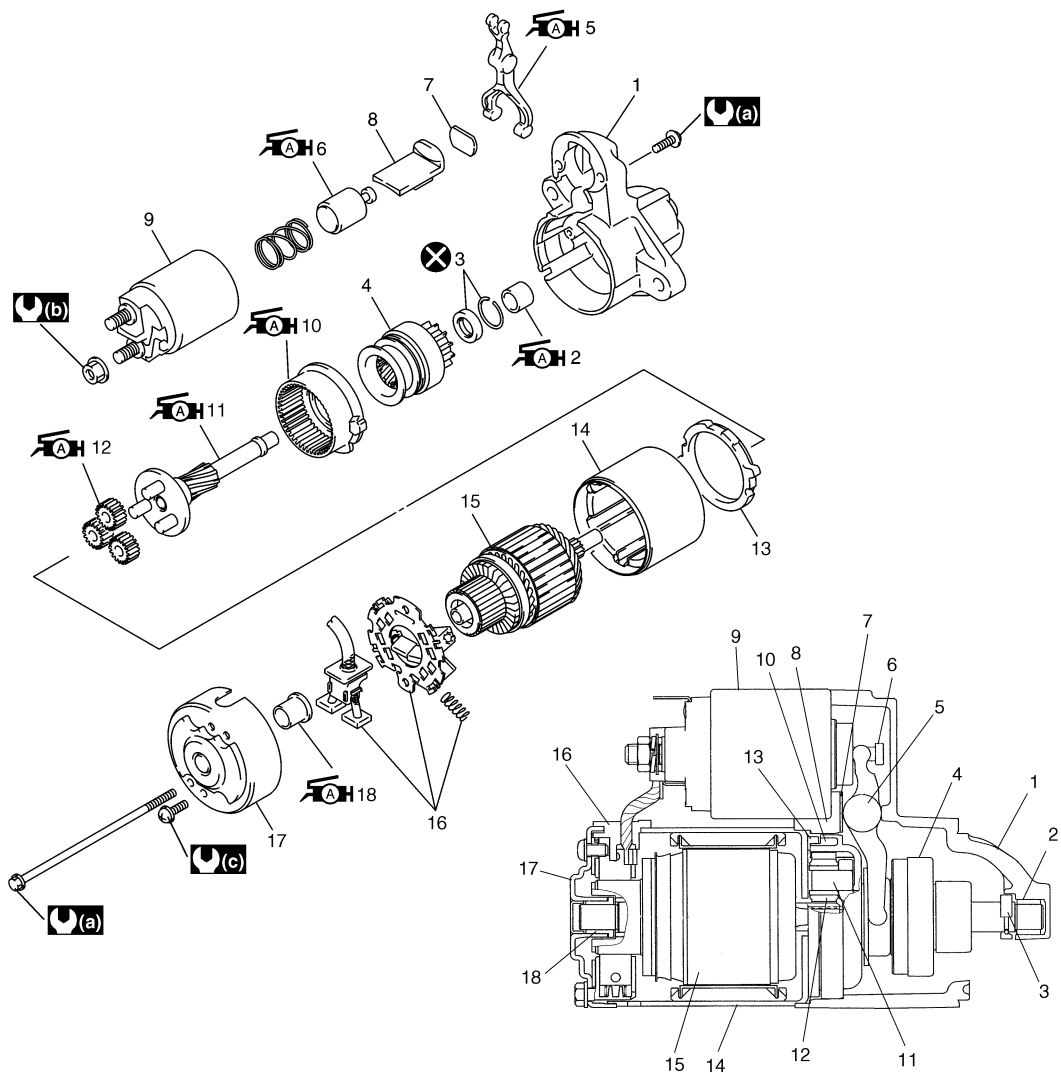

I6JB01190005-02

1. Front housing	7. Plate	13. Packing	: 6 N·m (0.6 kgf-m, 4.5 lb-ft)
2. Bush	8. Seal rubber	14. Yoke	: 10 N·m (1.0 kgf-m, 7.5 lb-ft)
3. Pinion stop ring	9. Magnetic switch	15. Armature	: 3 N·m (0.3 kgf-m, 2.5 lb-ft)
4. Over-running clutch	10. Internal gear	16. Brush assembly	: Do not reuse.
5. Lever	11. Planetary carrier shaft	17. Rear bracket	: Apply grease 99000-25010 to sliding surface of each part.
6. Plunger	12. Planetary gear	18. Rear bush	

11-6 Starting System:

Starting Motor Dismounting and Remounting

S6JB0B1906002

Dismounting

- 1) Disconnect negative (–) cable at battery.
- 2) Dismounting generator referring to “Generator Dismounting and Remounting in Section 1J”.
- 3) Disconnect magnetic switch lead wire and battery cable from starting motor terminals.
- 4) Remove 2 starting motor mount bolts.
- 5) Remove starting motor.

Remounting


Reverse the dismounting procedure noting the following.

- Tighten starting motor mount bolt (1) and starting motor battery cable nut.

Tightening torque

Starting motor mount bolt (a): 55 N·m (5.5 kgf-m, 40.0 lb-ft)

Starting motor battery cable nut: 11 N·m (1.1 kgf-m, 8.0 lb-ft)

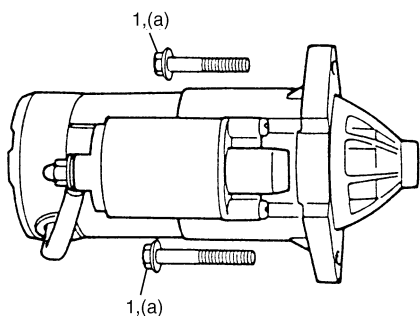

I6JB01190018-01

Starting Motor Disassembly and Assembly


S6JB0B1906003

Disassembly

NOTE


Do not clamp yoke in a vise or strike it with a hammer during repair operations.

- 1) Disconnect lead wire (1) from terminal “M” (2).

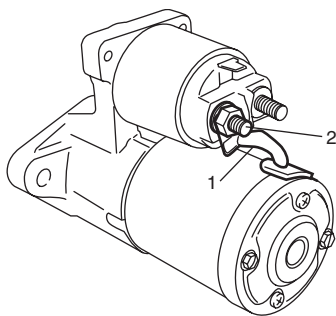


I6JB01190007-01

- 2) Loosen screws (1) and then remove protector (2).

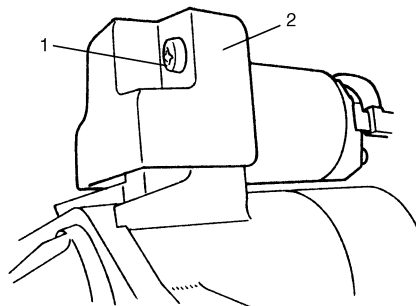

I6JB01190008-01

- 3) Put match marks at 2 locations (A (magnetic switch (1) and front housing (2)) and B (front housing (2) and yoke (3))) as shown in figure so that any possible mistake can be avoided.

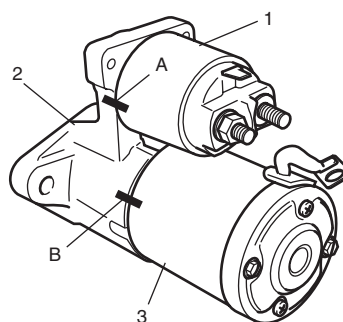


I6JB01190009-01

- 4) Loosen screws (4) and then remove magnetic switch (1), spring (2) and plunger (3).


⚠ CAUTION

Don't disassemble magnetic switch. If defective, replace as a complete assembly.

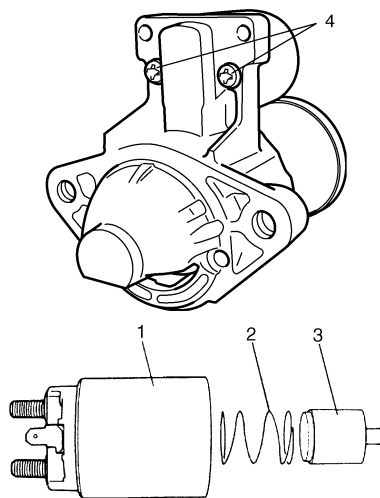


I6JB01190010-01

- 5) Remove through bolts (1) shown in the figure, then separate reduction gear assembly (2) from starting motor assembly.

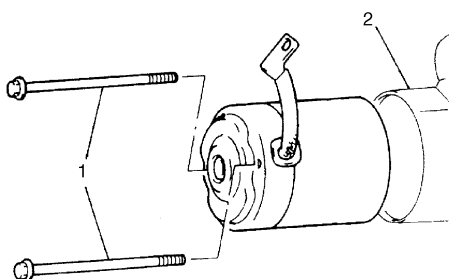


I6JB01190011-01

- 6) To overhaul reduction gear assembly, remove packing (2) and planetary gears (1).

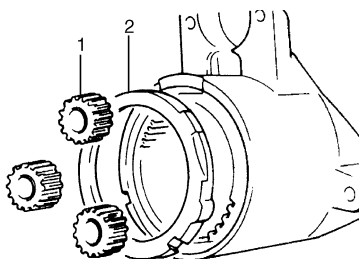


IYSQ01190012-01

- 7) Remove seal rubber (1) and plate (2).

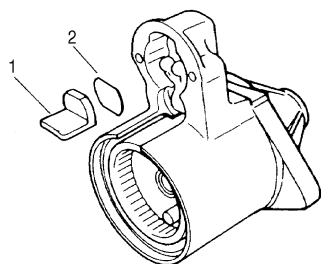


I6JB01190012-01

- 8) Remove shaft assembly (1) with lever (2).

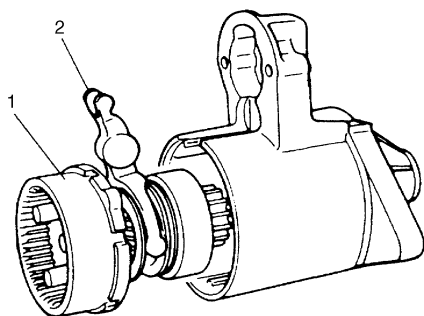

IYSQ01190014-01

- 9) Loosen pinion stop ring (2) fixed by snap ring (1).

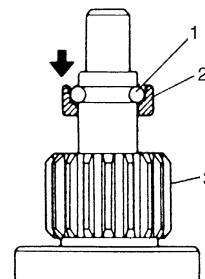


IYSQ01190015-01

3. Over-running clutch assembly


- 10) Remove snap ring (2), then pull out pinion stop ring (3) and over-running clutch (4) and internal gear (1).

Special tool
(A): 09900-06107

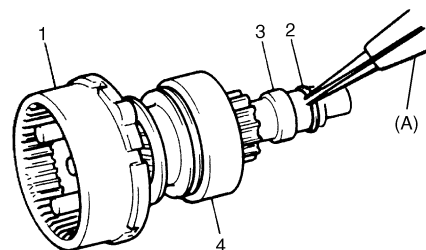

IYSQ01190016-01


- 11) Remove rear bracket (1) and brush holder.

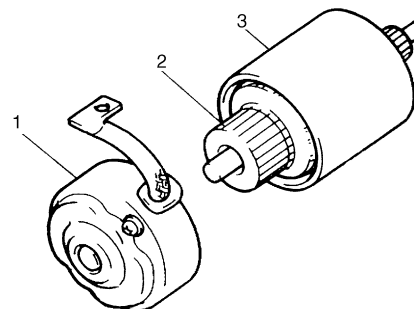

IYSQ01190017-01

2. Armature
3. Yoke


- 12) Remove armature (1) from yoke (2).

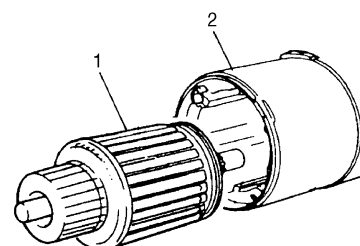

I6JB01190013-01


11-8 Starting System:

13) Remove brush holder (2) from rear bracket (1).

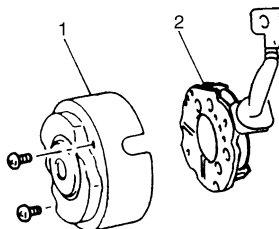

IYSQ01190019-01

14) Remove brush springs (1) and brushes (2).

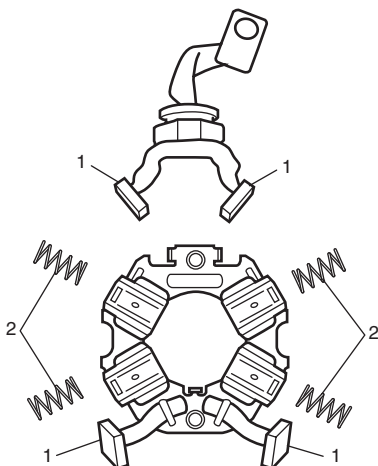


I6JB01190014-01

Assembly

⚠ CAUTION

New oilless bearing have been lubricated when they are supplied as spare parts. DO NOT wash with grease dissolving solvent nor lubricate them with other lubricant.

- 1) Inspect component parts referring to "Starting Motor Inspection" and replace with new ones as necessary.
- 2) Apply grease referring to "Starting Motor Components".
- 3) Install armature to yoke.
- 4) Install brushes (1) and brush springs (2) to brush holder (3).

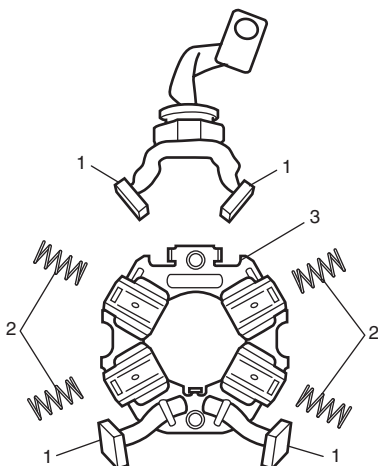


I6JB01190015-01

5) Install brush holder to armature while pushing 4 brushes outward.


6) Install rear bracket (1).

7) Tighten brush holder screws (2).

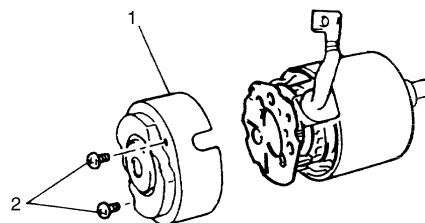


IYSQ01190023-01

8) Install internal gear and over-running clutch assembly (1) to gear shaft (4), using care for installing direction of pinion stop ring (2).

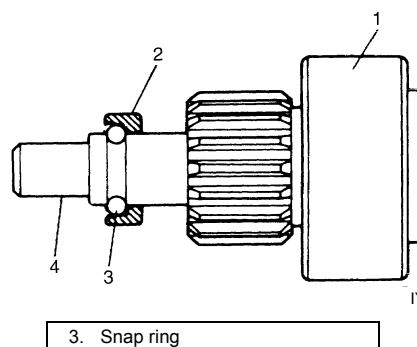


IYSQ01190024-01

9) Insert shaft assembly (1) into front housing with lever (2) positioned as shown in the figure.

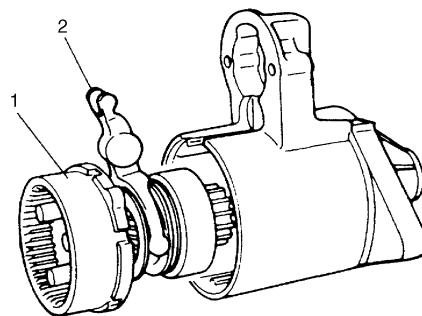

IYSQ01190014-01


- 10) Install packing (1) so that cuts in packing align with holes for through bolts in front housing.
 11) Install plate and seal rubber (4) to front housing.

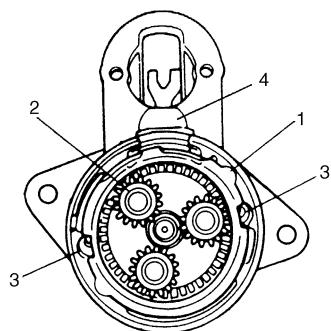

IYSQ01190025-01


2.	Planetary gear
3.	Bolt hole

- 12) Install yoke, armature, brush holder and rear bracket to front housing (2) by aligning match marks provided before removal.
 13) Tighten through bolts (1).

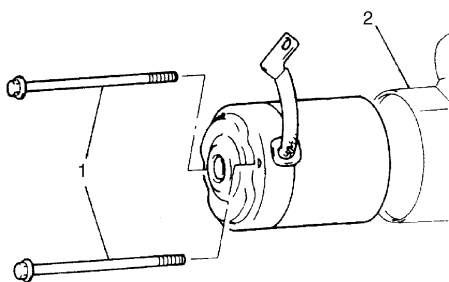


I6JB01190011-01

- 14) Install magnetic switch (1), spring (2) and plunger (3) to front housing (5) by aligning match marks provided before removal and then tighten screws (4).

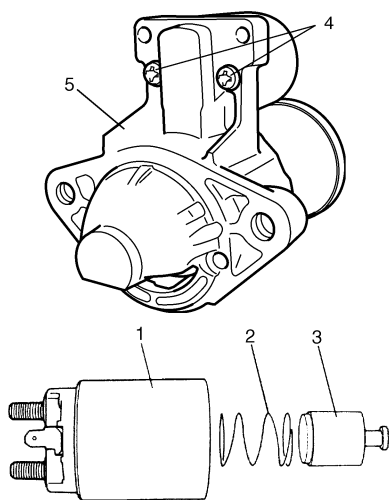


I6JB01190016-01

- 15) Install protector (2) and tighten screws (1).

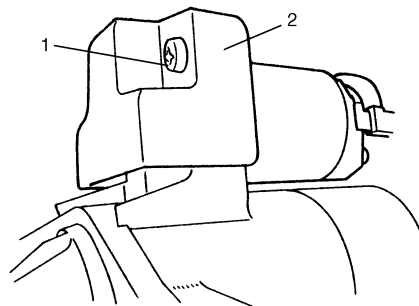

I6JB01190008-01

- 16) Connect lead wire (1) to terminal "M" (2).

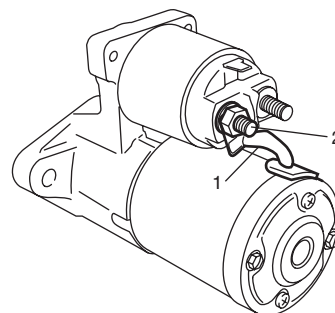

I6JB01190007-01


- 17) Upon completion of assembly, carry out performance test. Refer to "Starting Motor Performance Test".

Starting Motor Inspection

S6JB0B1906004

Plunger


Inspect plunger for wear. Replace if necessary.

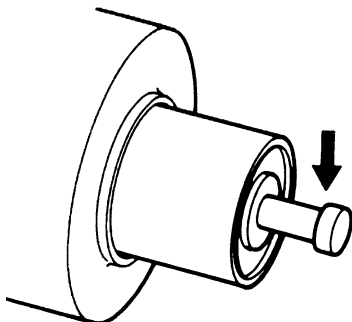

IYSQ01190027-01

Magnetic Switch


Push in plunger and release it. The plunger should return quickly to its original position. Replace if necessary.

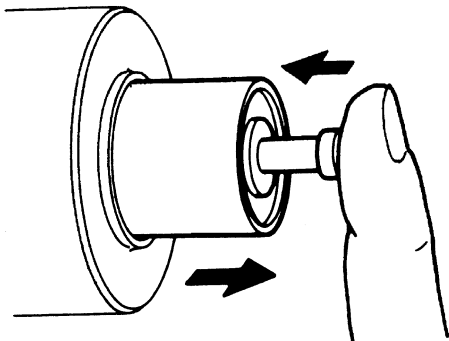

IYSQ01190028-01

Pull-in coil open circuit test


Check for continuity across magnetic switch "S" terminal and "M" terminal. If no continuity exists, coil is open and should be replaced.

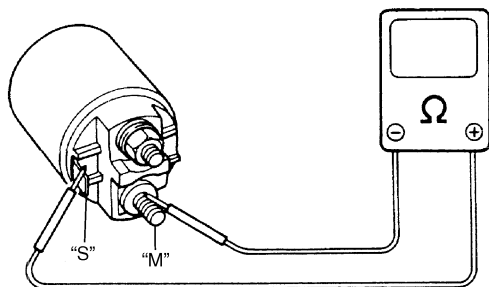

IYSQ01190029-01

Hold-in coil open circuit test


Check for continuity across magnetic switch "S" terminal and coil case. If no continuity exists, coil is open and should be replaced.

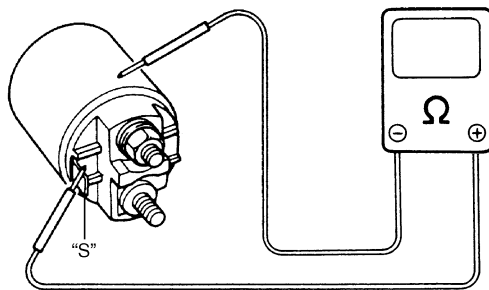

IYSQ01190030-01

Armature Shaft Bush

Inspect bush for wear or damage. Replace if necessary.

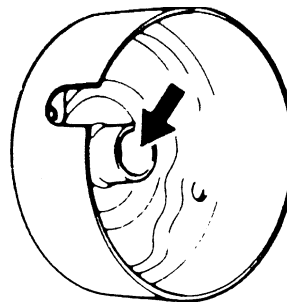

IYSQ01190031-01


Brush

- Check brushes for wear. Measure length of brushes and if below limit, replace brush.

Brush length

Standard: 12.3 mm (0.48 in.)

Limit: 5.5 mm (0.22 in.)

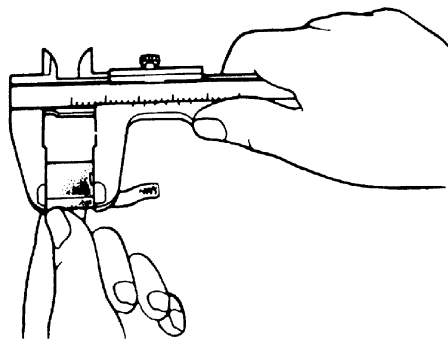

IYSQ01190032-01


- Install brushes to each brush holder and check for smooth movement.

Brush Spring

Inspect brush springs for wear, damage or other abnormal conditions. Replace if necessary.

Brush Holder


- Check movement of brush in brush holder. If brush movement within brush holder is sluggish, check brush holder for distortion and sliding faces for contamination. Clean or correct as necessary.
- Check for continuity across brush positive terminal (1) and grounded brush holder (2). If continuity exists, brush holder is grounded due to defective insulation and should be replaced.

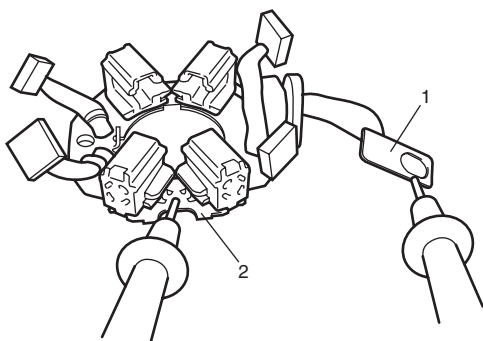

I6JB01190017-01

Armature

- Inspect commutator for dirt or burn. Correct with sandpaper or lathe, if necessary.

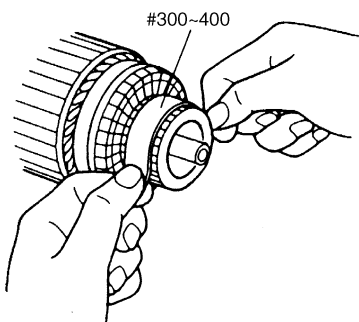

IYSQ01190034-01

- Check commutator for uneven wear with armature (1) supported on V-blocks (2). If deflection of dial gauge pointer exceeds limit, repair or replace.


NOTE

Below specification presupposes that armature is free from bend. Bent armature must be replaced.

Commutator out of round

Standard: 0.05 mm (0.002 in.) or less

Limit: 0.4 mm (0.016 in.)

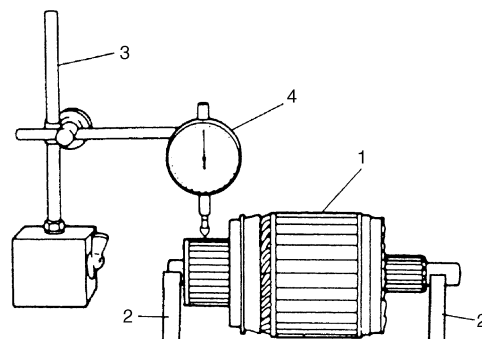

IYSQ01190035-01

3. Magnetic stand


4. Dial gauge

- Inspect commutator for wear. If diameter is below limit, replace armature.

Commutator outside diameter

Standard: 29.4 mm (1.16 in.)

Limit: 28.8 mm (1.13 in.)

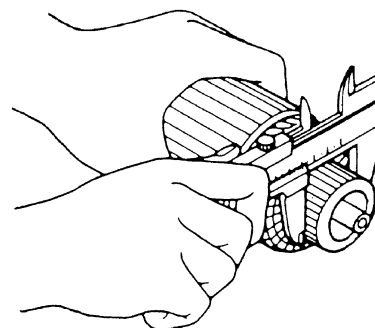


IYSQ01190036-01

- Inspect commutator for insulator depth. Correct or replace if below limit.

Commutator insulator depth "a"

Standard: 0.5 mm (0.020 in.)

Limit: 0.2 mm (0.008 in.)

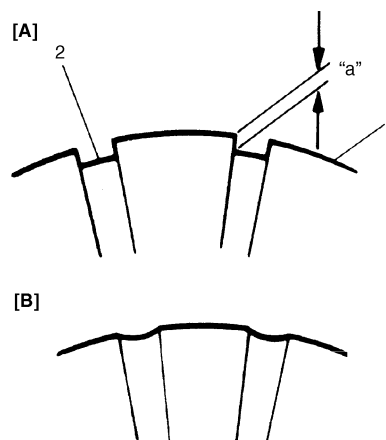

I5JA01190001-01

[A]: Correct


[B]: Incorrect

1. Commutator segment

2. Insulator

Ground test


Check commutator and armature core. If there is continuity, armature is grounded and must be replaced.

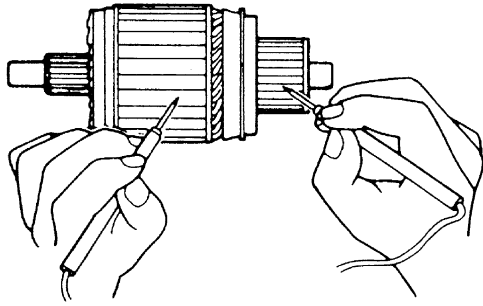

IYSQ01190038-01

Open circuit test


Check for continuity between segments. If there is no continuity at any test point, there is an open circuit and armature must be replaced.

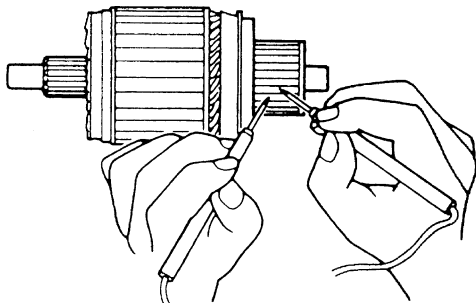

IYSQ01190039-01

Gears


Inspect internal gear and planetary gears for wear, damage or other abnormal conditions. Replace if necessary.

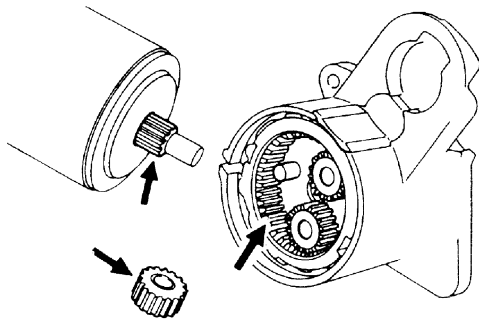

IYSQ01190040-01


Pinion and Over-Running Clutch

- Inspect pinion for wear, damage or other abnormal conditions. Check that clutch locks up when turned in direction of drive and rotates smoothly in reverse direction. Replace if necessary.

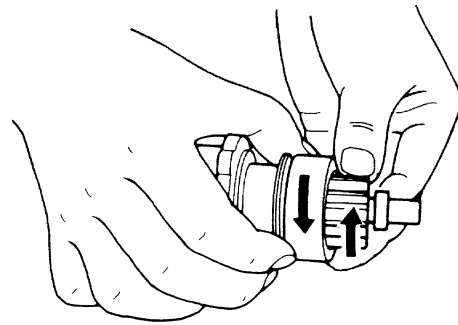

IYSQ01190041-01


- Inspect spline teeth for wear or damage. Replace if necessary. Inspect pinion for smooth movement.

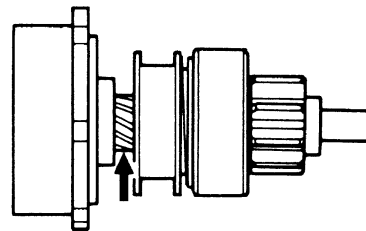

IYSQ01190042-01

Front Housing Bush

Inspect bush for wear or damage. Replace if necessary.

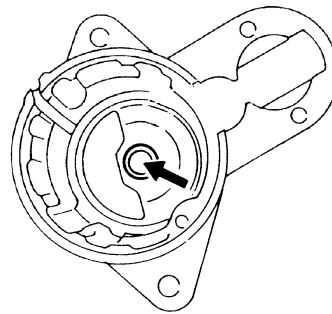

IYSQ01190043-01

Specifications

Starting Motor Specifications

S6JB0B1907001

1.4 kW Type

Voltage		12 volts	
Output		1.4 kW	
Rating		30 seconds	
Direction of rotation		Clockwise as viewed from pinion side	
Brush length		12.3 mm (0.48 in.)	
Number of pinion teeth		8	
Performance		Condition	Guarantee
Around at 20 °C (68 °F)	No load characteristic	11.0 V	90 A maximum 2000 rpm minimum
	Load characteristic	7.5 V 300 A	11 N·m (1.1 kgf-m, 8.0 lb-ft) minimum 840 rpm minimum
	Locked characteristic	3.0 V	860 A maximum 20 N·m (2.0 kgf-m, 14.5 lb-ft) minimum
	Magnetic switch operating voltage		8 volts maximum

Tightening Torque Specifications

S6JB0B1907002

Fastening part	Tightening torque			Note
	N·m	kgf-m	lb-ft	
Starting motor mount bolt	55	5.5	40.0	🔧
Starting motor battery cable nut	11	1.1	8.0	🔧

NOTE

The specified tightening torque is also described in the following.
“Starting Motor Components”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Special Tools and Equipment

Recommended Service Material


S6JB0B1908001

NOTE

Required service material is also described in the following.
“Starting Motor Components”

Special Tool

S6JB0B1908002

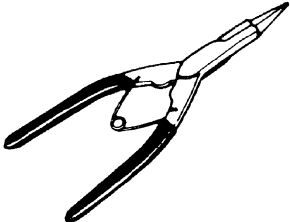09900-06107 Snap ring pliers (opening type) 🔧			
---	--	---	--

Charging System

General Description

Battery Description

S6JB0B1A01001

The battery has three major functions in the electrical system.

- It is a source of electrical energy for cranking the engine.
- It acts as a voltage stabilizer for the electrical system.
- It can, for a limited time, provide energy when the electrical load exceeds the output of the generator.

Carrier and Hold-Down

The battery carrier should be in good condition so that it will support the battery securely and keep it level.

Before installing the battery, the battery carrier and hold-down clamp should be clean and free from corrosion and make certain there are no parts in carrier.

To prevent the battery from shaking in its carrier, the hold-down bolts should be tight enough but not over-tightened.

Electrolyte Freezing

The freezing point of electrolyte depends on its specific gravity. Since freezing may ruin a battery, it should be protected against freezing by keeping it in a fully charged condition. If a battery is frozen accidentally, it should not be charged until it is warmed.

Sulfation

If the battery is allowed to stand for a long period in discharged condition, the lead sulfate becomes converted into a hard, crystalline substance, which will not easily turn back to the active material again during the subsequent recharging. "Sulfation" means the result as well as the process of that reaction.


Such a battery can be revived by very slow charging and may be restored to usable condition but its capacity is lower than before.

Built-In Indicator (If Equipped)

The battery has a built-in temperature compensated indicator (1) in the top of the battery. This indicator is to be used with the following diagnostic procedure.




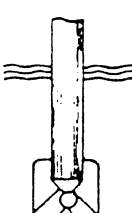
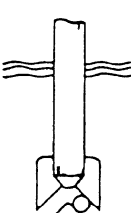
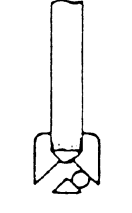
When checking the indicator, make sure that the battery has a clean top. A light may be needed in some poorly-lit areas.

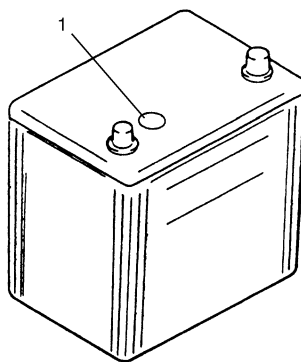Three types of indication available under normal operation are as follows.



IYSQ011A0001-01


- **Green dot:**
Battery is sufficiently charged for testing.
- **Dark:**
Battery must be charged before testing.
If there is a cranking complaint, battery should be tested as described in "Battery Inspection".
Charging and electrical systems should also be checked at this time.
- **Clear or light yellow:**
This means that fluid level is below the bottom of hydrometer. Its possible cause is excessive or prolonged charging, a broken case, excessive tipping or normal battery deterioration.
When the battery is found in such condition, it is possible that high charging voltage is caused by the faulty charging system and therefore, charging and electrical systems need to be checked. If there is a trouble in cranking and its cause lies in the battery, it should be replaced.

Diagnosis	OK	Charging Necessary	Low Level Electrolyte Replace Battery
Indicator	 IYSQ011A0002-01 Green dot	 IYSQ011A0065-01 Dark	 IYSQ011A0066-01 Clear
Gravity Ball	 IYSQ011A0067-01	 IYSQ011A0068-01	 IYSQ011A0069-01

Generator Description

S6JB0B1A01002

The basic charging system is the IC integral regulator charging system. The internal components are connected electrically as shown below.

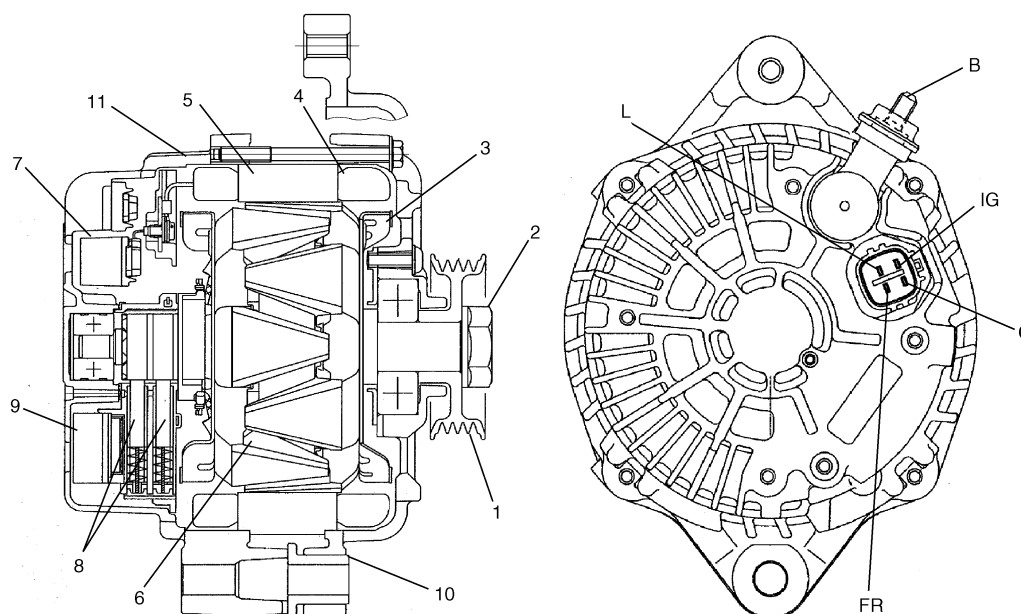

I6JB011A0001-01

1. Pulley	6. Field coil	11. Rear housing	IG: Ignition terminal
2. Pulley nut	7. Rectifier	B: Generator output (Battery terminal)	L: Lamp terminal
3. Rotor fan	8. Brush	C: Generator cut	
4. Stator coil	9. Regulator	E: Ground	
5. Stator core	10. Front housing	FR: Field duty monitor	

1J-3 Charging System:

Wiring Circuit

The generator features a solid state regulator that is mounted inside the generator. All regulator components are enclosed into a solid mold, and this unit along with the brush holder assembly is attached to the rear housing.


The generator rotor bearings contain enough grease to eliminate the need for periodic lubrication.

Two brushes carry current through the two slip rings to the field coil mounted on the rotor, and under normal conditions will provide long period of attention-free service.

The stator windings are assembled inside a laminated core that forms part of the generator frame.

A rectifier bridge connected to the stator windings contains diodes, and electrically changes the stator A.C. voltages to a D.C. voltage which appears at the generator output terminal.

The neutral diodes serve to convert the voltage fluctuation at the neutral point to direct current for increasing the generator output.

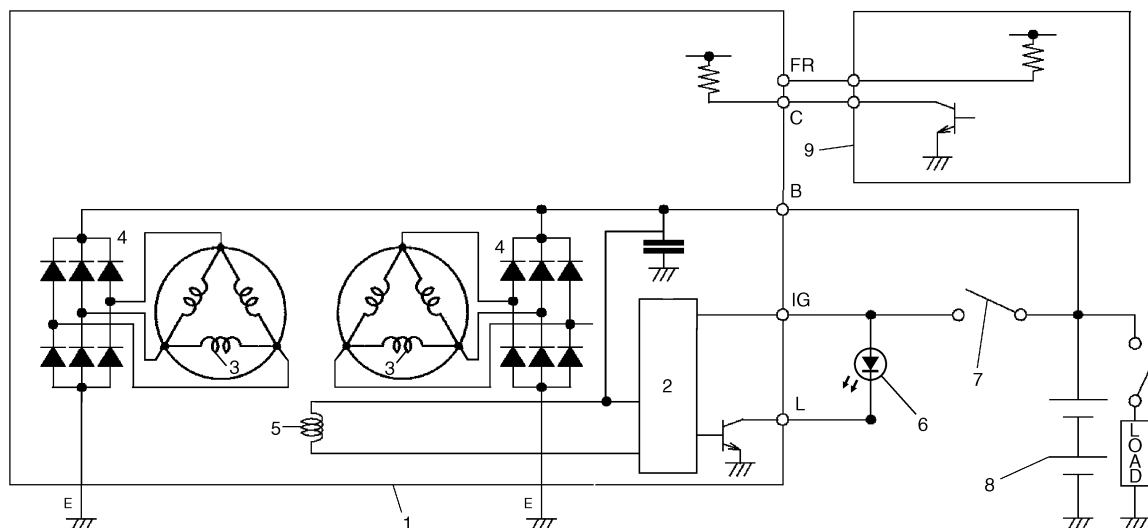

I6JB011A0002-01

1. Generator with regulator assembly	4. Diode	7. Main switch
2. I.C. regulator	5. Field coil (rotor coil)	8. Battery
3. Stator coil	6. Charge indicator light	9. ECM

Diagnostic Information and Procedures

Battery Inspection

S6JB0B1A04001

Common Causes of Failure

A battery is not designed to last indefinitely; however, with proper care, it will provide many years of service. If the battery performs satisfactorily during test but fails to operate properly for no apparent reason, the following are some factors that may point to the cause of trouble:

- Accessories left on overnight or for an extended period without the generator operating.
- Slow average driving speeds for short periods.
- Electrical load exceeding generator output particularly with addition of aftermarket equipment.
- Defects in charging system such as high resistance, slipping drive belt, loose generator output terminal, faulty generator or voltage regulator. Refer to "Generator Symptom Diagnosis".
- Battery abuse, including failure to keep battery cable terminals clean and tight or loose battery hold down.
- Mechanical problems in electrical system such as shorted or pinched wires.

Visual inspection

Check for obvious damage, such as cracked or broken case or cover, that could permit loss of electrolyte. If obvious damage is noted, replace battery. Determine cause of damage and correct as needed.

Generator Symptom Diagnosis

A charging circuit wiring diagram for generator connection is shown in "Generator Description". To avoid damage, always follow these precautions:

⚠ CAUTION

- Do not mistake polarities of "IG" terminal and "L" terminal.
- Do not create a short circuit between "IG" and "L" terminals. Always connect these terminals through a lamp.
- Do not connect any load between "L" and "E".
- When connecting charger or booster battery to vehicle battery, see "Jump Starting in Case of Emergency".

Trouble in charging system will show up as one or more of the following conditions:

- 1) Faulty charge indicator light operation.
- 2) Undercharged battery as evidenced by slow cranking or indicator clear with red dot.
- 3) Overcharged battery as evidenced by excessive spewing of electrolyte from vents.

Condition	Possible cause	Correction / Reference Item
Noisy generator	Loose drive belt	<i>Adjust or replace drive belt.</i>
	Loose drive belt pulley	<i>Check generator.</i>
	Loose mounting bolts	<i>Check mounting condition.</i>
	Worn or dirty bearings	<i>Check generator.</i>
	Defective diode or stator	<i>Check generator.</i>
Charge indicator light does not light with ignition ON and engine OFF	Fuse blown	<i>Check fuse.</i>
	Light burned out	<i>Replace light.</i>
	indicator lamp (LED) faulty	<i>Check BCM, combination meter and/or CAN communication line.</i>
	Wiring connection loose	<i>Tighten loose connection.</i>
	IC regulator or field coil faulty	<i>Check generator.</i>
Charge indicator light does not go out with engine running Battery requires frequent recharging	Poor contact between brush and slip ring	<i>Repair or replace.</i>
	Drive belt loose or worn	<i>Adjust or replace drive belt.</i>
	IC regulator or generator faulty	<i>Check charging system.</i>
	Wiring faulty	<i>Repair wiring.</i>

Generator Test (Undercharged Battery Check)

S6JB0B1A04003

This condition, as evidenced by slow cranking or indicator clear with red dot can be caused by one or more of the following conditions even though indicator lamp may be operating normal.

The following procedure also applies to cars with voltmeter and ammeter.


- 1) Make sure that undercharged condition has not been caused by accessories left on for extended period of time.
- 2) Check drive belt for proper tension.
- 3) If battery defect is suspected, refer to "Battery Description".
- 4) Inspect wiring for defects. Check all connections for tightness and cleanliness, battery cable connections at battery, starting motor and ignition ground cable.
- 5) Connect switch (6), load (5), battery (4), voltmeter (3) and ammeter (2) to generator (1) as shown in figure.

Voltmeter: Set between generator "B" terminal and ground.

Ammeter: Set between generator "B" terminal and battery (+) terminal.

NOTE

Use fully charged battery.

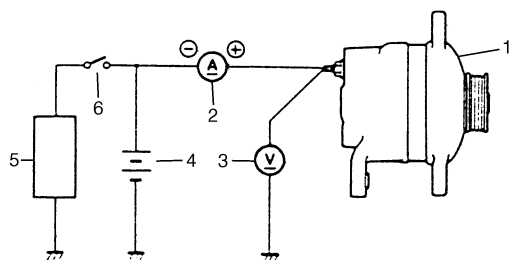

IYSQ011A0007-01

- 6) Measure current and voltage.

No-Load Check

- 1) Run engine from idling up to 2000 rpm and read meters.

NOTE

Turn off switches of all accessories (wiper, heater etc.).


Specification for undercharged inspection

Current: 10 A

Voltage (at 20 °C (68 °F)): 14.2 – 14.8 V

NOTE

Consideration should be taken that voltage will differ somewhat with regulator case temperature as shown in the figure.

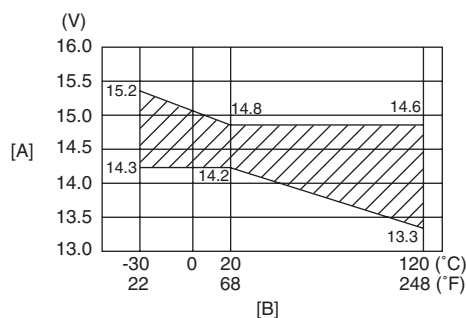

I5JB0A1A0006-02

[A]: Regulated voltage (V)

[B]: Heat sink temperature (°C)

• If voltage is higher than standard value

If voltage is higher than standard value, check ground of brushes.

If brushes are not grounded, replace IC regulator.

• If voltage is lower than standard value

If voltage is lower than standard value, check rotor and stator, rectifier, brushes, regulator.


Load Check

- 1) Run engine at 2000 rpm and turn on head light and heater motor.
- 2) Measure current and if it is less than 30 A repair or replace generator.

Generator Test (Overcharged Battery Check)

S6JB0B1A04004

- 1) To determine battery condition, refer to "Battery Description".
- 2) If obvious overcharge condition exists as evidenced by excessive spewing of electrolyte, measure generator "B" terminal voltage at engine 2000 rpm.

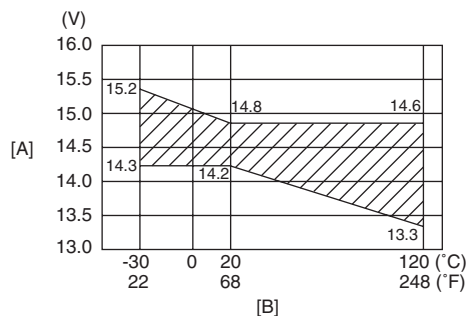

I5JB0A1A0006-02

[A]: Regulated voltage (V)

[B]: Heat sink temperature (°C)

- 3) If measured voltage is higher than upper limit value, proceed to "Generator Disassembly and Assembly".

- 4) Check ground of brushes. If brushes are not grounded, replace IC regulator. Then check field coil for grounds and shorts, referring to "Generator Inspection".

Repair Instructions

Jump Starting in Case of Emergency

S6JB0B1A06001

With Auxiliary (Booster) Battery

⚠ CAUTION

Do not push or tow vehicle to start. Damage to emission system and/or to other parts of vehicle may result.

Both booster and discharged battery should be treated carefully when using jumper cables. Follow procedure outlined below, being careful not to cause sparks.

⚠ WARNING

- Departure from these conditions or procedure described below could result in:
 - a. Serious personal injury (particularly to eyes) or property damage from such causes as battery explosion, battery acid, or electrical burns.
 - b. Damage to electronic components of either vehicle.
- Never expose battery to open flame or electric spark. Batteries generate gas which is flammable and explosive.
- Remove rings, watches, and other jewelry. Wear approved eye protection.
- Do not allow battery fluid to contact eyes, skin, fabrics, or painted surface as fluid is a corrosive acid. Flush any contacted area with water immediately and thoroughly.
- Be careful so that metal tools or jumper cables do not contact positive battery terminal (or metal in contact with it) and any other metal on vehicle, because a short circuit could occur.
- Batteries should always be kept out of reach of children.

- 1) Set parking brake and place automatic transmission in PARK (NEUTRAL on manual transmission).
- 2) Turn OFF ignition switch, turn OFF lights and all other electrical loads.
- 3) Check built-in indicator (if equipped). If it is clear or light yellow, replace the battery.
- 4) Attach end of one jumper cable to positive terminal of booster battery and the other end of the same cable to positive terminal of discharged battery. (Use 12-volt battery only to jump start engine).
- 5) Attach one end of the remaining negative cable to negative terminal of booster battery, and the other end to a solid engine ground (such as exhaust manifold) at least 45 cm (18 in.) away from battery of vehicle being started.

⚠ WARNING

Do not connect negative cable directly to negative terminal of dead battery.

- 6) Start engine of vehicle that is providing jump start and turn off electrical accessories. Then Start engine of the vehicle with discharged battery.
- 7) Reverse connecting procedure exactly when disconnecting jumper cable. Negative cable must be disconnected from engine that was jump started first.

With Charging Equipment

⚠ CAUTION

When jump starting engine with charging equipment, be sure equipment used is 12-volt and negative ground. Do not use 24-volt charging equipment. Using such equipment can cause serious damage to electrical system or electronic parts.

Battery Dismounting and Remounting

S6JB0B1A06002

⚠ WARNING

When handling battery, following safety precautions should be followed:

- Hydrogen gas is produced by battery. A flame or spark near battery may cause the gas to ignite.
- Battery fluid is highly acidic. Avoid spilling on clothing or other fabric. Any spilled electrolyte should be flushed with large quantity of water and cleaned immediately.

Dismounting

- 1) Disconnect negative cable.
- 2) Disconnect positive cable.
- 3) Remove retainer.
- 4) Remove battery.

Handling

When handling battery, the following safety precautions should be followed:


- Hydrogen gas is produced by battery. A flame or spark near battery may cause the gas to ignite.
- Battery fluid is highly acidic. Avoid spilling on clothing or other fabric. Any spilled electrolyte should be flushed with large quantity of water and cleaned immediately.

Remounting

- 1) Reverse removal procedure.
- 2) Torque battery cables securely.

NOTE

Check to be sure that ground cable has enough clearance to hood panel by terminal.

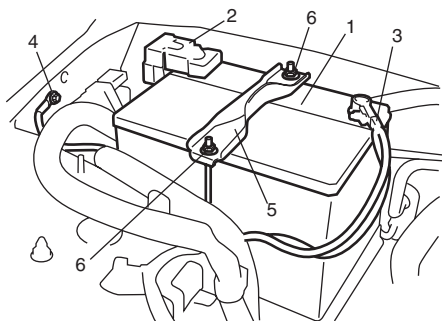

I6JB011A0003-01

1. Battery	4. Body ground bolt
2. Positive cable	5. Retainer
3. Negative cable	6. Nut

Generator Dismounting and Remounting

S6JB0B1A06003

Dismounting

- 1) Disconnect negative (–) cable at battery.
- 2) Remove air cleaner case and hose.
- 3) Disconnect generator lead wire (“B” terminal wire) and coupler from generator.
- 4) Remove water pump and generator drive belt. Refer to “Water Pump and Generator Drive Belt Removal and Installation”.
- 5) Remove generator bracket bolt and then remove bracket.
- 6) Remove generator mounting bolt.
- 7) Remove generator.

Remounting

- 1) Install bracket and then tighten generator bracket bolt (3) to specified torque.

Tightening torque

Generator bracket bolt (c): 45 N·m (4.5 kgf-m, 32.5 lb-ft)

- 2) Mount generator on the generator bracket.
- 3) Tighten generator mounting bolt (upper bolt (short) (1), lower bolt (long) (2)).

Tightening torque


Generator mounting upper bolt (a): 25 N·m (2.5 kgf-m, 18.0 lb-ft)

Generator mounting lower bolt (b): 45 N·m (4.5 kgf-m, 32.5 lb-ft)

- 4) Install water pump and generator drive belt. Refer to “Water Pump and Generator Drive Belt Removal and Installation”.
- 5) Connect “B” terminal wire and coupler to generator.

Tightening torque

“B” terminal outer nut (d): 7 N·m (0.7 kgf-m, 5.0 lb-ft)

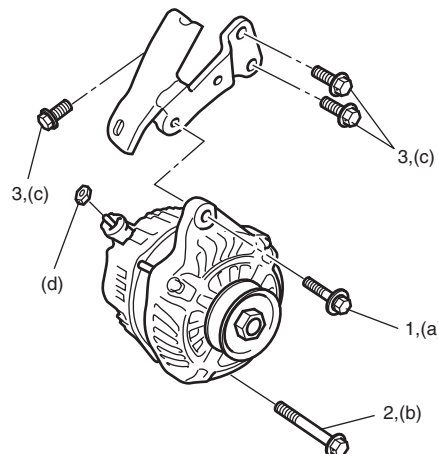


I6JB011A0004-01

- 6) Install air cleaner case and hose.
- 7) Connect negative (–) cable at battery.

Generator Components

S6JB0B1A06004

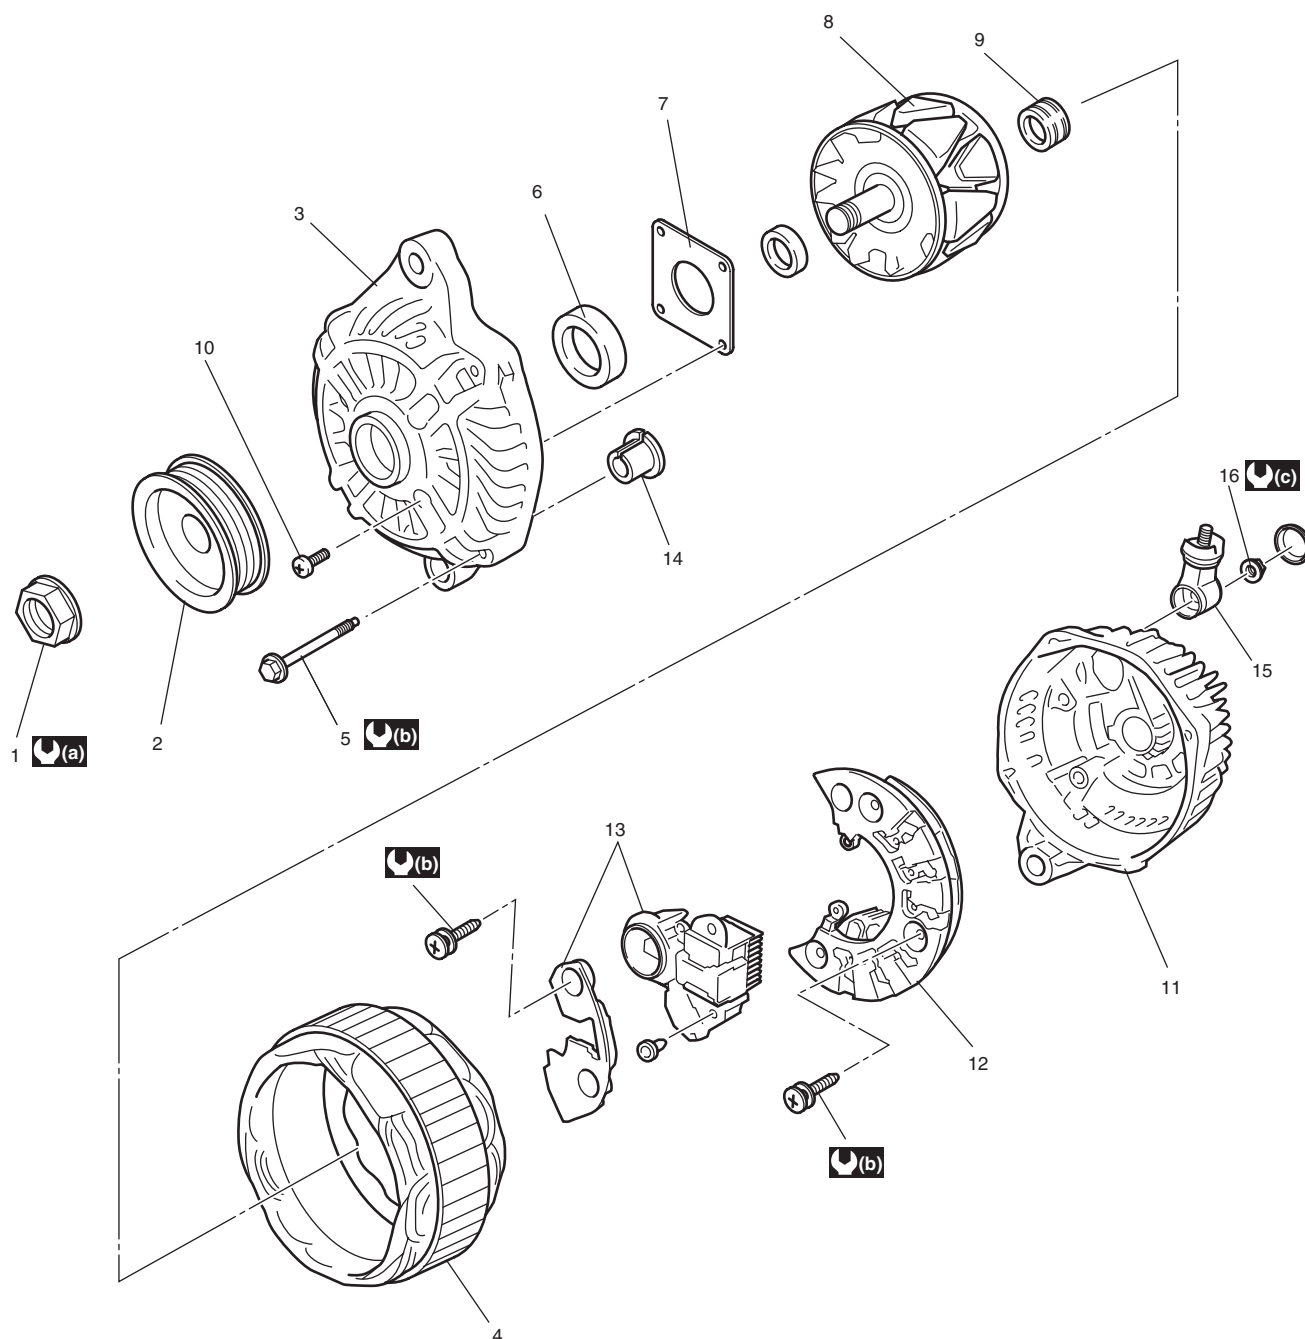

I6JB011A0005-02


1. Pulley nut	6. Driver end bearing	11. Rear housing	16. "B" terminal nut
2. Pulley	7. Bearing retainer	12. Rectifier	: 118 N·m (11.8 kgf-m, 85.5 lb-ft)
3. Front housing	8. Rotor	13. Regulator assembly	: 4 N·m (0.4 kgf-m, 3.0 lb-ft)
4. Stator	9. Rear end bearing	14. Generator stay bushing	: 9 N·m (0.9 kgf-m, 7.0 lb-ft)
5. Frame bolt	10. Retainer screw	15. "B" terminal	

Generator Disassembly and Assembly

S6JB0B1A06005


Disassembly

- 1) Put match marks at 2 locations (A (front housing (1) and stator (2)) and B (rear housing (3) and stator (2))) as shown in figure so that any possible mistake can be avoided.

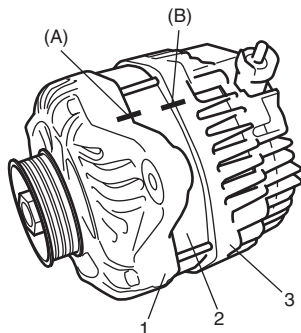


I6JB011A0006-01

- 2) Loosen frame bolt (1).

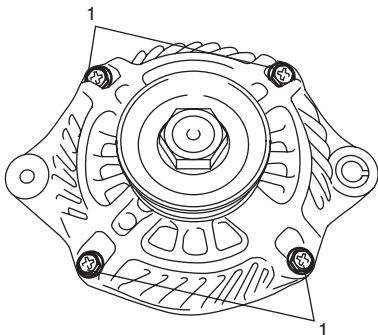

I6JB011A0007-01

- 3) Remove front housing with rotor (1) from stator (2).

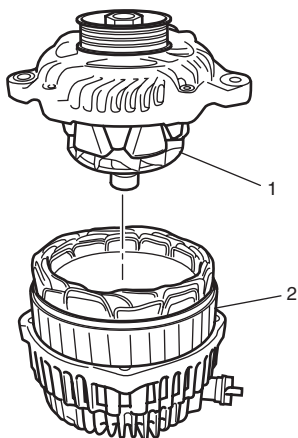


I6JB011A0008-01

- 4) Hold rotor by using vise (2) and loosen pulley nut and then remove pulley (1).

⚠ CAUTION


When using vise, put clean cloth (3) and aluminium plate (5) between rotor (4) and vise (2) so as not to cause damage to rotor.

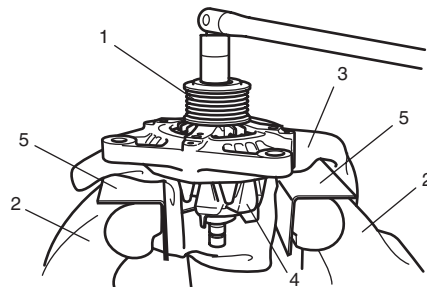

I6JB011A0009-01

- 5) If required, remove drive end bearing.


- a) Loosen retainer screw (1) and then remove retainer.

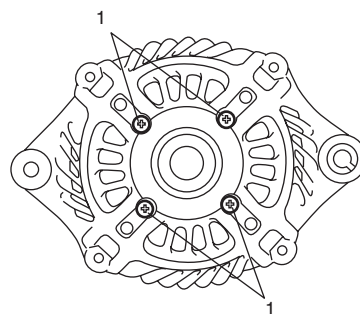

I6JB011A0010-01


- b) Push out drive end bearing by using hydraulic press (1) and special tool.

**Special tool
(A): 09943-88211**

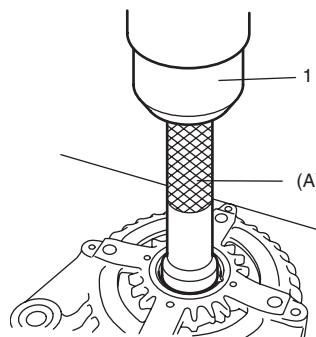


I6JB011A0011-01

- 6) If required, use bearing puller (2) to remove rear end bearing (1).

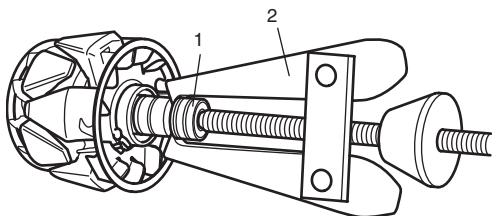

I6JB011A0012-01


- 7) Loosen screw (1) and then remove stator (2) from rear housing.

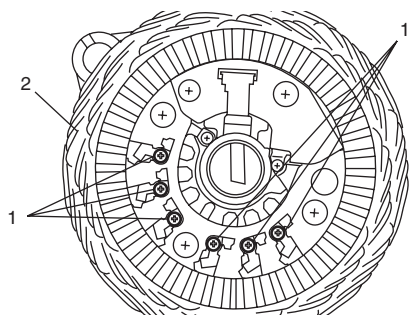

I6JB011A0013-01

- 8) Remove cap (1).


- 9) Loosen "B" terminal nut and then remove insulator (2).

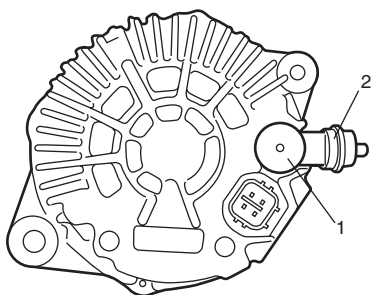

I6JB011A0014-01

- 10) Loosen screw (1) and then regulator assembly (2).


- 11) Loosen screw (3) and then remove rectifier (4).

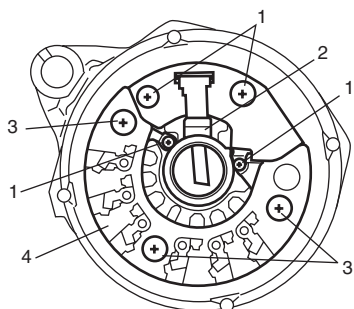

I6JB011A0015-01

Assembly

- 1) Install rectifier (4) to rear housing and then tighten screw (3).
- 2) Install regulator assembly (2) to rear housing and then tighten screw (1).

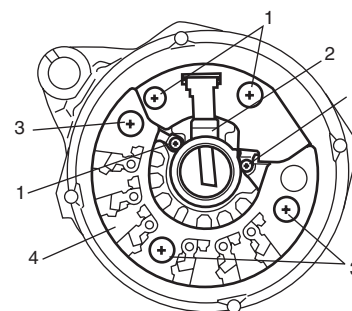


I6JB011A0015-01

- 3) Install insulator (2) and then tighten "B" terminal nut to specified torque.

Tightening torque


"B" terminal nut : 9 N·m (0.9 kgf-m, 7.0 lb-ft)

- 4) Install cap (1) to insulator (2).

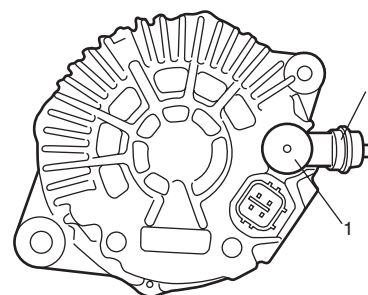

I6JB011A0014-01


- 5) Depress brush and then while holding it depressed, and insert pin (1) to hole of rear housing (2).

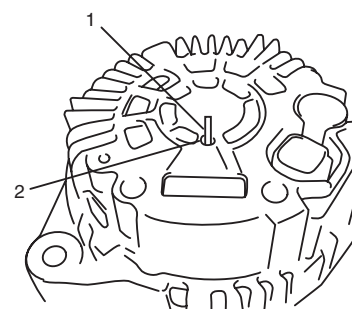

I6JB011A0016-01


1J-11 Charging System:

- 6) Install stator (2) to rear housing by aligning match marks provided before removal and then tighten screw (1).

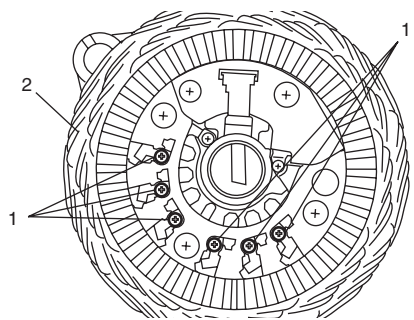

I6JB011A0013-01


- 7) If rear end bearing (2) is removed, install it by using hydraulic press (1).

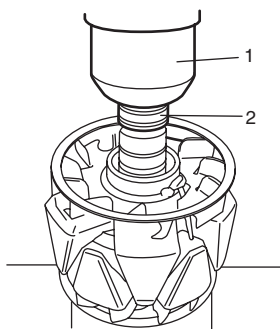

I6JB011A0017-01


- 8) If drive end bearing is removed, install it.
a) Press-fit drive end bearing by using hydraulic press (1) and special tool.

Special tool
(A): 09913-76010

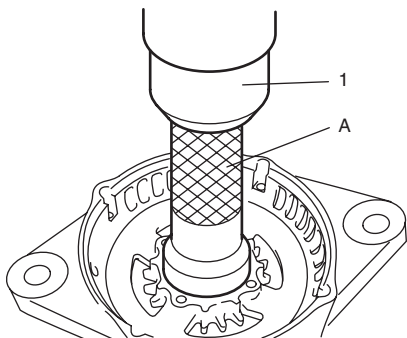

I6JB011A0018-02

- b) Install retainer and then tighten retainer screw (1).

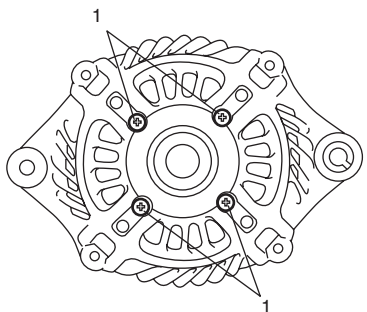

I6JB011A0010-01

- 9) Insert stator to front housing and install pulley and pulley nut.


- 10) Hold rotor by using vise (1) and tighten pulley nut to specified torque.

⚠ CAUTION

When using vise, put clean cloth (2) and aluminium plate (3) between rotor (4) and vise (1) so as not to cause damage to rotor.

Tightening torque

Pulley nut: 118 N·m (11.8 kgf-m, 85.5 lb-ft)

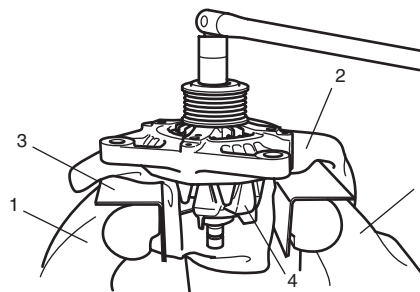


I6JB011A0019-01


- 11) Install front housing with rotor (1) to stator (2) by aligning match marks provided before removal and then tighten frame bolt (3) to specified torque.

Tightening torque

Frame bolt (a): 4 N·m (0.4 kgf-m, 3.0 lb-ft)

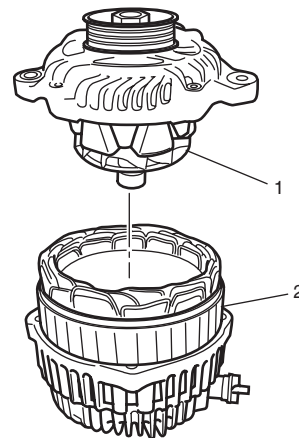


3,(a)

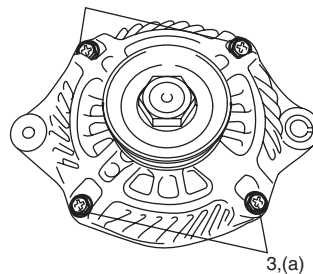

3,(a)

I6JB011A0020-01

12) Remove pin (1) from rear housing (2).

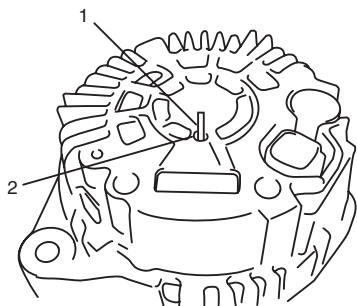

I6JB011A0016-01

13) Make sure that rotor turns smoothly.

Generator Inspection


S6JB0B1A06006

Rotor

- Using ohmmeter, check for continuity between slip rings of rotor. If there is no continuity, replace rotor.


Standard resistance between clip rings of rotor

2.0 – 2.3 Ω at 20 °C (68 °F)

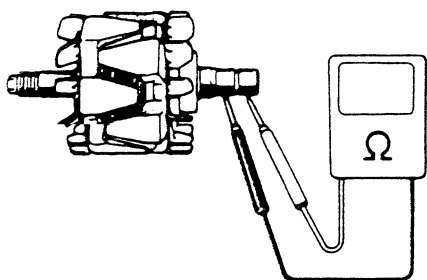

IYSQ011A0042-01

- Using ohmmeter, check that there is no continuity between slip ring and rotor. If there is continuity, replace rotor.

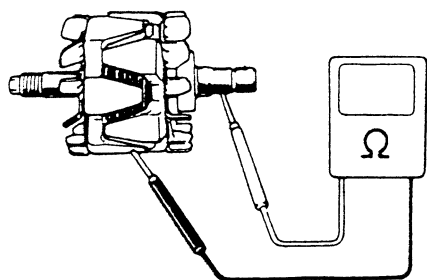


IYSQ011A0043-01

Stator


- Check resistance between the following leads of stator. If there is no continuity, replace stator.

stator lead	Resistance
1 – 2	continuity
1 – 3	
4 – 5	
4 – 6	

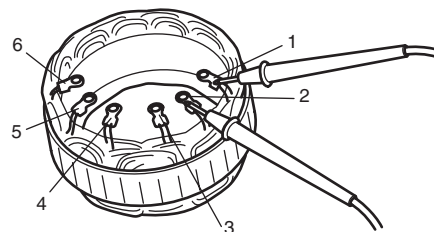

I6JB011A0021-01


- Using ohmmeter, check that there is no continuity between coil leads (1) and stator core (2). If there is continuity, replace stator.

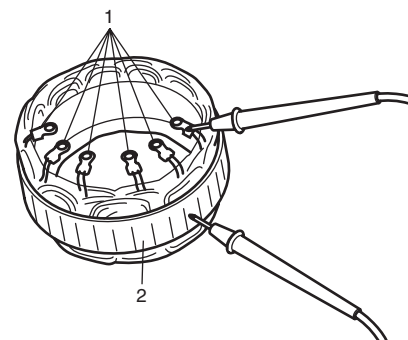

I6JB011A0022-01

Brush and Brush Holder

Check each brush for wear by measuring its length as shown. Replace the brush if the brush is found worn down to service limit line (1).

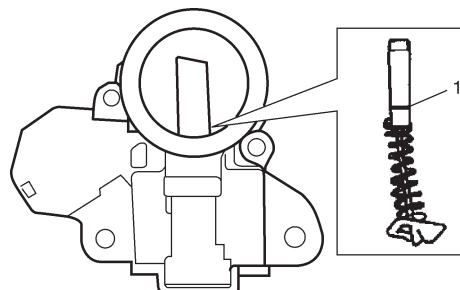


I6JB011A0023-03

Rectifier


Positive rectifier

- 1) Using an ohmmeter, connect one tester probe to the "B" terminal (1) and the other to each rectifier terminal (2).
- 2) Reverse the polarity of the tester probes and repeat Step 1).
- 3) Check that one shows continuity and the other shows no continuity. If there is continuity, replace the rectifier.

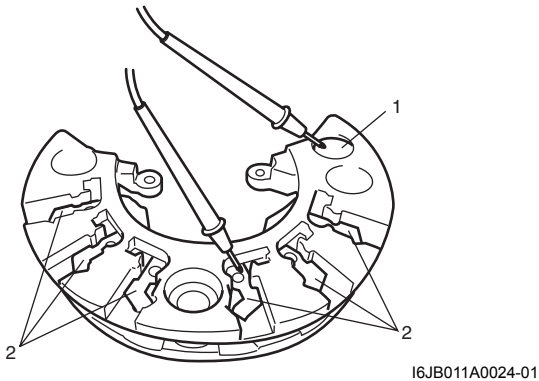


Negative rectifier

- 1) Using an ohmmeter, connect one tester probe to negative terminal (1) and the other to each rectifier terminal (2).
- 2) Reverse the polarity of the tester probes and repeat Step 1).
- 3) Check that one shows continuity and the other shows no continuity. If there is continuity, replace the rectifier.

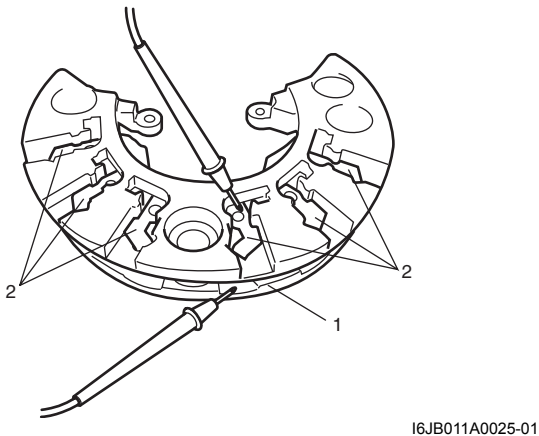


Bearing

- Check that drive and bearing is not rough or worn.

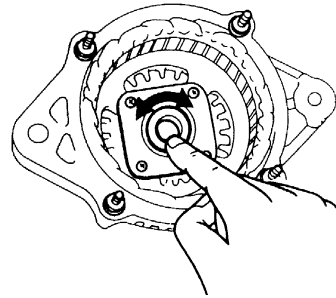

- Check that end housing bearing is not rough or worn.

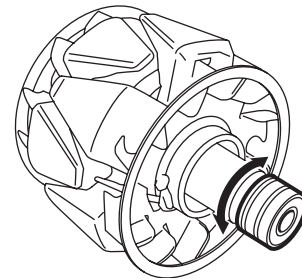

Water Pump and Generator Drive Belt Inspection and Adjustment


S6JB0B1A06007

- 1) Disconnect negative cable at battery.
- 2) Inspect belt for cracks, cuts, deformation, wear and cleanliness. If it is necessary to replace belt, refer to "Water Pump and Generator Drive Belt Removal and Installation".
- 3) Check belt for tension. Belt is in proper tension when it deflects the following specification under thumb pressure (about 10 kg or 22 lb.).

Water pump / generator drive belt tension "a"


Existing belt: 9.0 – 10.0 mm (0.35 – 0.39 in.) as deflection / 10 kg (22 lbs)

New belt: 7.5 – 8.5 mm (0.29 – 0.33 in.) as deflection / 10 kg (22 lbs)

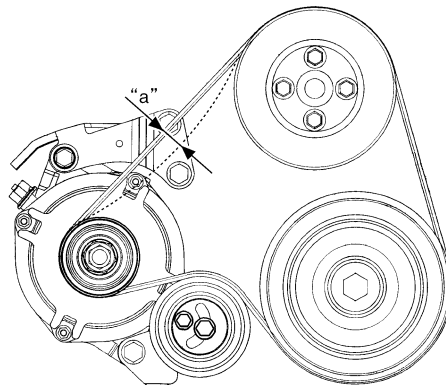

4) If belt is too tight or too loose, adjust it to proper tension as follows.

- a) Loosen adjusting bolt (2) and remove tension pulley bolt (1). And then turn tension pulley (3) using hexagon wrench (4) as shown.

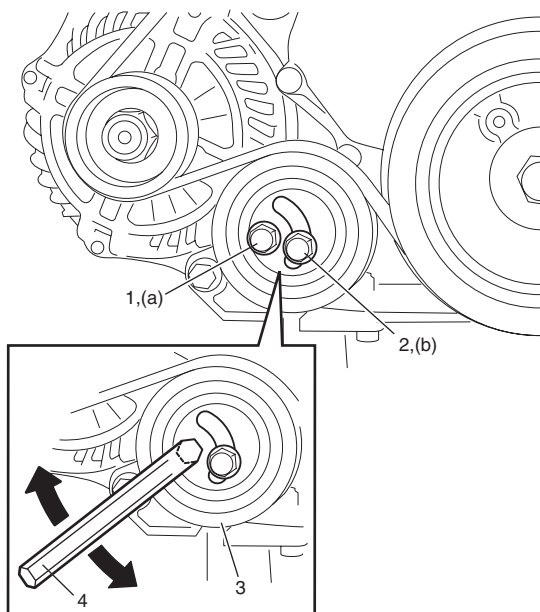


I6JB0B1A0001-01

- b) Adjust belt tension to specification, and then tighten adjusting bolt (2) and tension pulley bolt (1) to specified torque.

Tightening torque

Tension pulley bolt (a): 25 N·m (2.5 kgf-m, 18.0 lb-ft)

Tension pulley adjusting bolt (b): 25 N·m (2.5 kgf-m, 18.0 lb-ft)

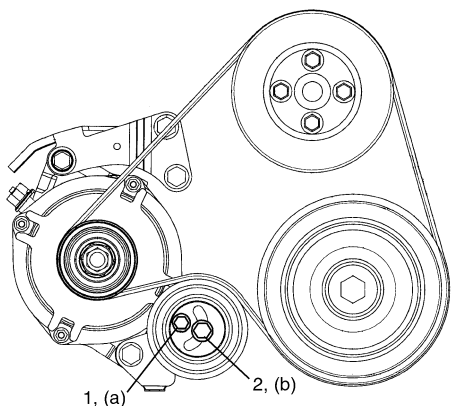

I6JB011A0028-01

Water Pump and Generator Drive Belt Removal and Installation

S6JB0B1A06008

Removal

- 1) Disconnect negative cable at battery.
- 2) Loosen tension pulley bolt (1) and tension pulley adjusting bolt (2).
- 3) Remove Water Pump and Generator Drive Belt (3).

Installation


Reverse removal procedure noting the following instruction.

- Adjust belt tension referring to "Water Pump and Generator Drive Belt Inspection and Adjustment".
- Tighten all fasteners to specified torque.

Tightening torque

Tension pulley bolt (a): 25 N·m (2.5 kgf-m, 18.0 lb-ft)

Tension pulley adjusting bolt (b): 25 N·m (2.5 kgf-m, 18.0 lb-ft)

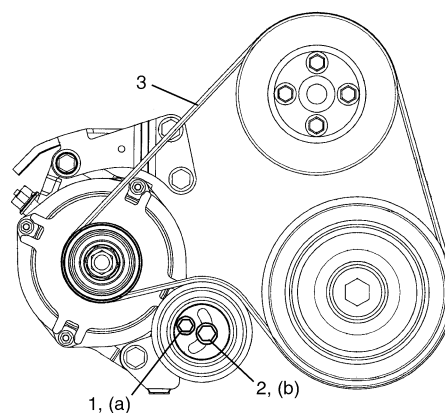

I6JB011A0029-01

Specifications

Charging System Specifications

S6JB0B1A07001

Battery

Battery

: 55D23L(AH/5HR)12 V

Battery type	55D23L
Rated Capacity AH/5HR, 12 Volts	48
Electrolyte L (US/lmp. pt)	3.9 (8.24/6.86)
Electrolyte S. G.	1.28 when fully charged at 20 °C (68 °F)

Generator

Type	115 A type
Rated voltage	12 V
Nominal output	115 A
Permissible max. speed	18000 r/min. (rpm)
No-load speed	1200 r/min. (rpm)
Setting voltage	14.2 – 14.8 V (at 20 °C (68 °F))
Permissible ambient temperature	–30 – 90 °C (–22 – 194 °F)
Polarity	Negative ground
Rotation	Clockwise viewed from pulley side

Tightening Torque Specifications

S6JB0B1A07002

Fastening part	Tightening torque			Note
	N·m	kgf·m	lb·ft	
Generator bracket bolt	45	4.5	32.5	☞
Generator mounting upper bolt	25	2.5	18.0	☞
Generator mounting lower bolt	45	4.5	32.5	☞
“B” terminal outer nut	7	0.7	5.0	☞
“B” terminal nut	9	0.9	7.0	☞
Pulley nut	118	11.8	85.5	☞
Frame bolt	4	0.4	3.0	☞
Tension pulley bolt	25	2.5	18.0	☞ / ☞
Tension pulley adjusting bolt	25	2.5	18.0	☞ / ☞

NOTE

The specified tightening torque is also described in the following.
“Generator Components”



Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Special Tools and Equipment

Special Tool

S6JB0B1A08001

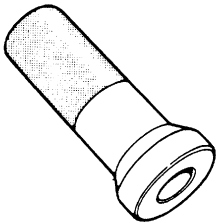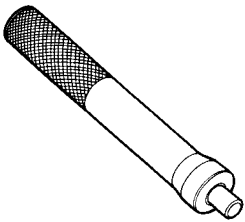09913–76010 Bearing installer ☞		09943–88211 Pinion bearing installer ☞	
---------------------------------------	---	--	---

Exhaust System

Precautions

Exhaust System Caution

S6JB0B1B00001

NOTE

Be sure to use **UNLEADED FUEL** for the catalytic converter equipped vehicle. Use of **LEADED FUEL** will affect performance of the catalytic converter adversely to a great extent.

General Description

Exhaust System Description

S6JB0B1B01001

The exhaust system of the vehicle consists of the exhaust manifold (with Warm Up Three-Way Catalytic Converter, WU-TWC), exhaust No.1 pipe, exhaust No.2 pipe (with Three-Way Catalytic Converter, TWC), muffler, seal, gasket, etc. The three way catalytic converter is an emission control device added to the exhaust system to lower the level of Hydrocarbon (HC), Carbon Monoxide (CO) and Oxides of Nitrogen (NOx) pollutants in the exhaust gas.

Diagnostic Information and Procedures

Exhaust System Check


S6JB0B1B04001

⚠ WARNING

To avoid the danger of being burned, do not touch the exhaust system when the system is hot. Any service on the exhaust system should be performed when the system is cool.

At every interval of periodic maintenance service, and when vehicle is raised for other service, check exhaust system as follows:

- Check rubber mountings for damage, deterioration, and out of position.

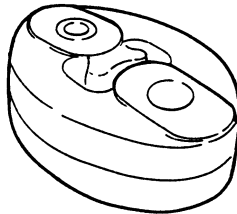


I6JB011B0001-01

- Check exhaust system for leakage, loose connection, dent and damage. If bolts or nuts are loosened, tighten them to specified torque. Refer to "Exhaust System Components".
- Check under neath body for damaged, missing, mispositioned part, open seam, hole connection or any other defect which could permit exhaust fumes to seep into vehicle.
- Make sure that exhaust system components have enough clearance from underbody to avoid overheating and possible damage to passenger compartment carpet.
- Any defect should be fixed at once.

Repair Instructions

Exhaust System Components

S6JB0B1B06001

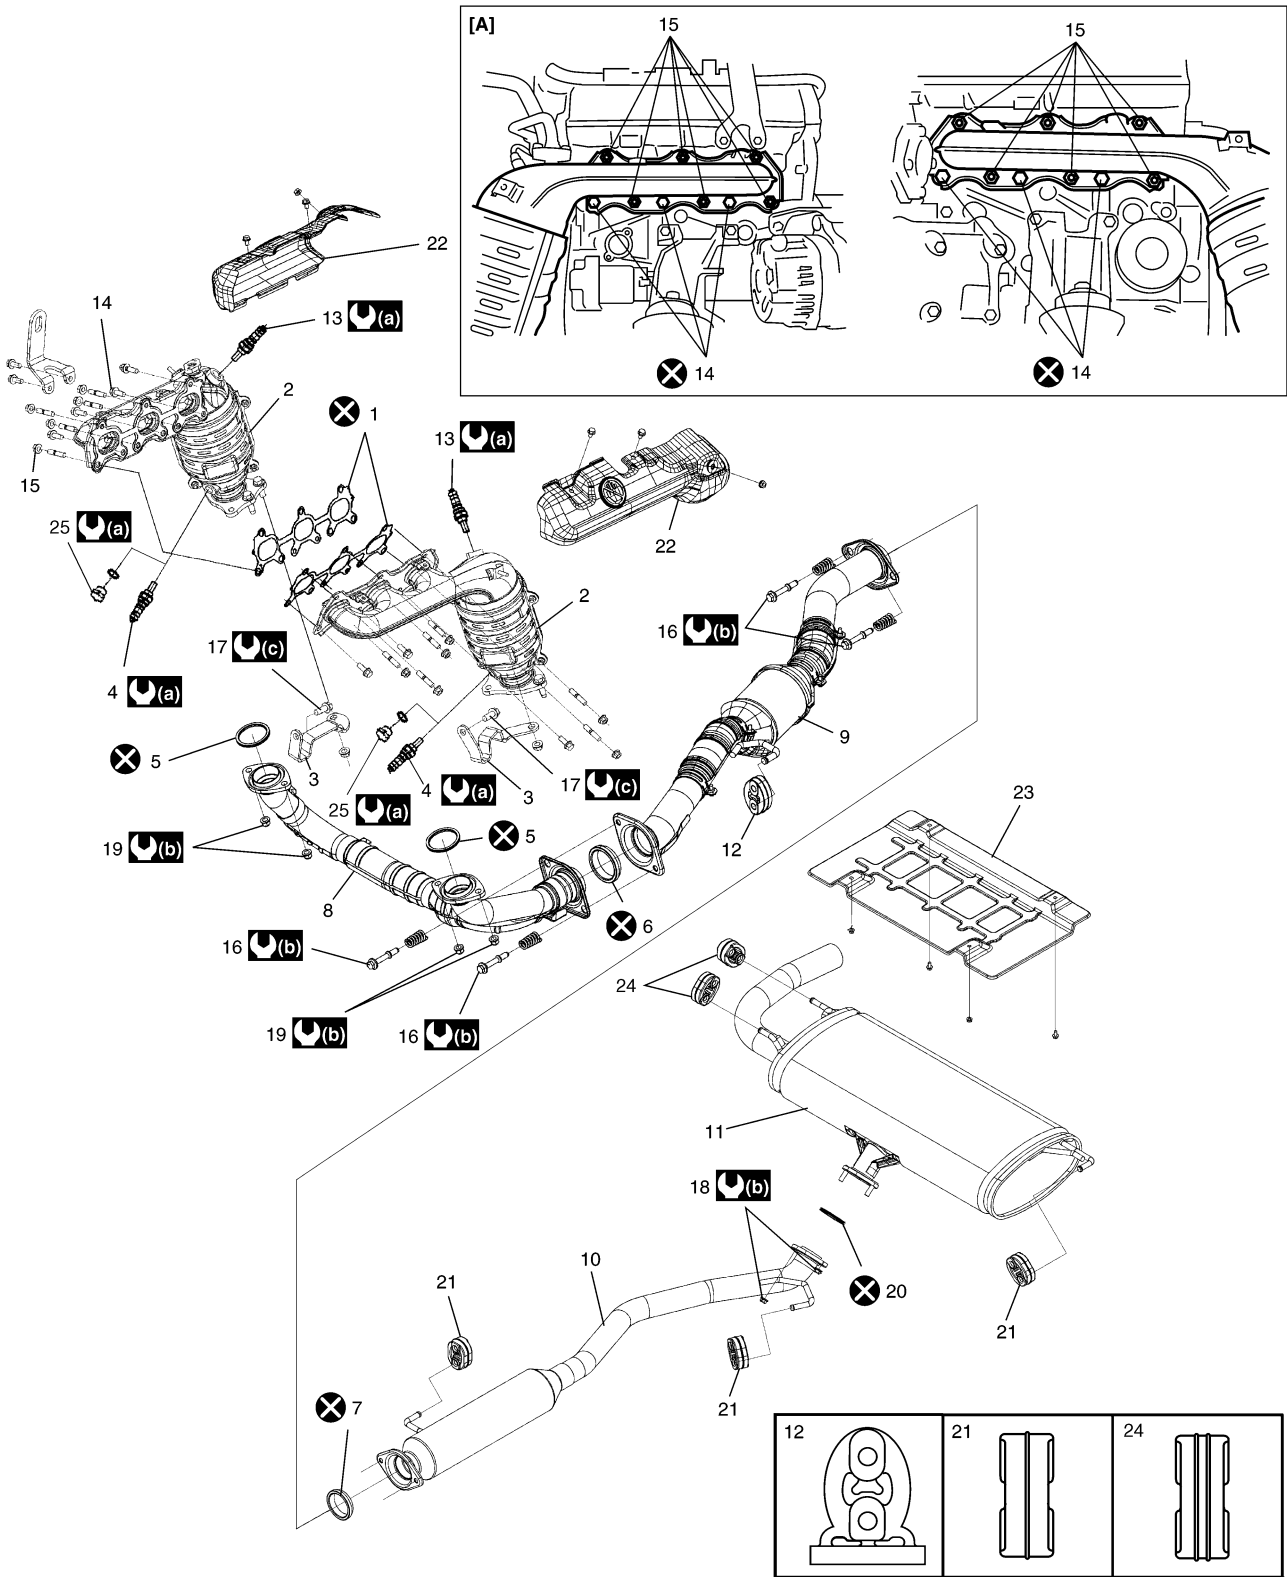

I6JB0B1B0001-01

[A]: Installing location of exhaust manifold bolt and nut	10. Exhaust center pipe	20. Muffler gasket
1. Exhaust manifold gasket	11. Muffler	21. Mounting No.2
2. Exhaust manifold	12. Mounting No.1	22. Exhaust manifold cover
3. Exhaust manifold stiffener	13. A/F sensor	23. Heat protector rear panel

4. HO2S (if equipped)	14. Exhaust manifold bolt	24. Mounting No.3
5. Exhaust No.1 pipe gasket	15. Exhaust manifold nut	25. Plug (if equipped)
6. No.1 seal ring	16. Exhaust pipe bolt	(a) : 45 N·m (4.5 kgf-m, 32.5 lb-ft)
7. No.2 seal ring	17. Exhaust manifold stiffener bolt	(b) : 50 N·m (5.0 kgf-m, 36.5 lb-ft)
8. Exhaust No.1 pipe	18. Muffler nut	(c) : 30 N·m (3.0 kgf-m, 21.5 lb-ft)
9. Exhaust No.2 pipe	19. Exhaust pipe nut	: Do not reuse.

Exhaust Manifold Removal and Installation

S6JB0B1B06002


WARNING

To avoid danger of being burned, do not service exhaust system while it is still hot. Service should be performed after system has cooled off.

Removal

Right side exhaust manifold

- 1) Remove battery and battery tray.
- 2) Remove air cleaner assembly and air cleaner outlet hose.
- 3) Remove A/F sensor connector (1) and HO2S connector (2) (if equipped) from bracket, then disconnect them.
- 4) For RHD model, remove steering lower shaft assembly referring to "Steering Lower Shaft Assembly Removal and Installation in Section 6B".
- 5) If equipped with EGR system, disconnect EGR pipe (3) from exhaust manifold.

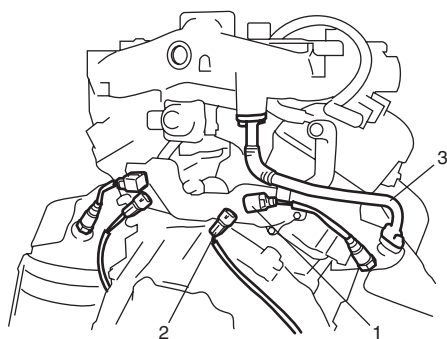


I6JB011B0003-01

- 6) Remove exhaust manifold cover.
- 7) Remove exhaust No.1 pipe.
- 8) Remove exhaust manifold stiffener (1).



I6JB011B0004-01


- 9) Remove exhaust manifold (1) and its gasket from cylinder head.

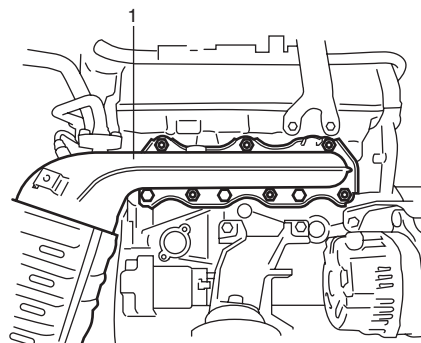

I6JB011B0005-01


Left side exhaust manifold

- 1) Release fuel pressure in fuel feed line referring to "Fuel Pressure Relief Procedure in Section 1G".
- 2) Disconnect negative (-) cable at battery.
- 3) Disconnect fuel feed hose (1) and fuel return hose (2).

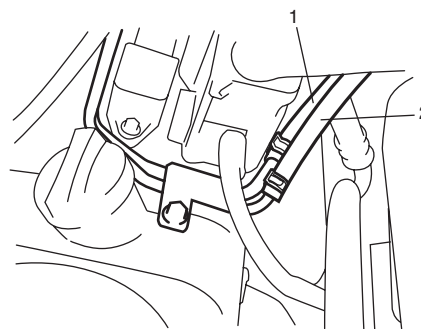

I6JB011B0006-01


- 4) Disconnect brake booster hose (1), vacuum tank hose (2) and EVAP canister purge valve hose (3) from intake manifold and fuel No.2 pipe (4).

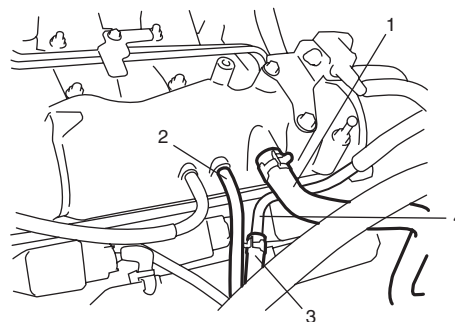

I6JB011B0007-01


1K-4 Exhaust System:

- 5) Disconnect vacuum hose from IMT valve, and remove vacuum tank assembly.
- 6) For LHD model, remove steering lower shaft assembly referring to "Steering Lower Shaft Assembly Removal and Installation in Section 6B".
- 7) Disconnect suction hose and discharge hose from A/C compressor referring to "Compressor Assembly Removal and Installation in Section 7B".
- 8) Remove oil filter referring to "Engine Oil and Filter Change in Section 0B".
- 9) Remove A/F sensor connector (1) and HO2S connector (2) (if equipped) from bracket, then disconnect them.

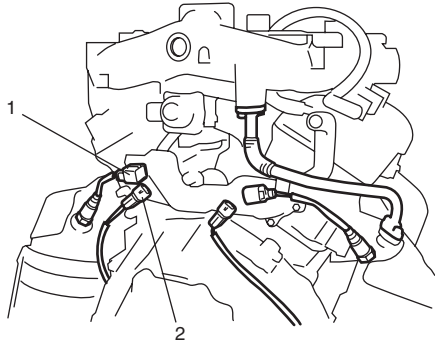


I6JB011B0008-01

- 10) Remove engine hook (1).
- 11) Remove oil level gauge (2) and oil level gauge guide (3).
- 12) Remove exhaust manifold cover (4).

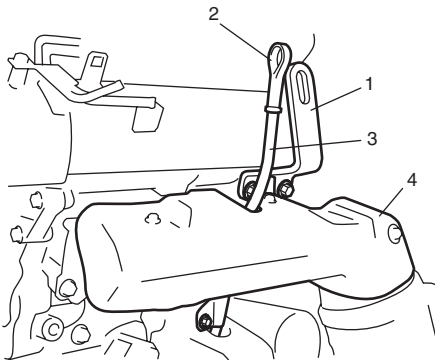


I6JB011B0009-01

- 13) Remove exhaust No.1 pipe.
- 14) Remove exhaust manifold stiffener (1).

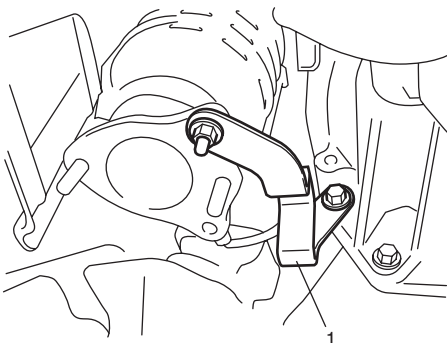

I6JB011B0010-01

- 15) Remove exhaust manifold (1) and its gasket from cylinder head.

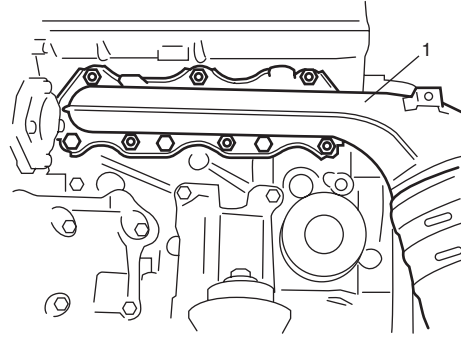

I6JB011B0011-01

Installation

Right side exhaust manifold


Reverse removal procedure for installation noting the following.

- Use new gaskets and seal rings.
- Always install new exhaust manifold bolts (1) with pre-coated adhesive.
- Tighten each bolts and nuts to specified torque.

Tightening torque

Exhaust manifold stiffener bolt (a): 30 N·m (3.0 kgf-m, 21.5 lb-ft)

Exhaust No.1 pipe bolt and nut (b): 50 N·m (5.0 kgf-m, 36.5 lb-ft)

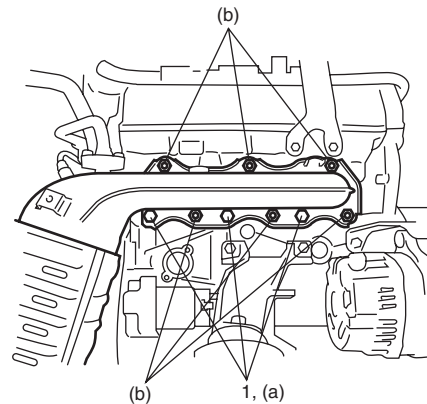

I6JB011B0012-02

- For RHD model, install steering lower shaft assembly referring to "Steering Lower Shaft Assembly Removal and Installation in Section 6B".
- Upon completion of installation, start engine and check that no exhaust gas leakage exists.

Left side exhaust manifold

Reverse removal procedure for installation noting the following.


- Use new gaskets and seal rings.
- Always install new exhaust manifold bolts (1) with pre-coated adhesive.
- Tighten each bolts and nuts to specified torque.

Tightening torque

Exhaust manifold stiffener bolt (a): 30 N·m (3.0 kgf-m, 21.5 lb-ft)

Exhaust No.1 pipe bolt and nut (b): 50 N·m (5.0 kgf-m, 36.5 lb-ft)

HO2S: 45 N·m (4.5 kgf-m, 32.5 lb-ft)

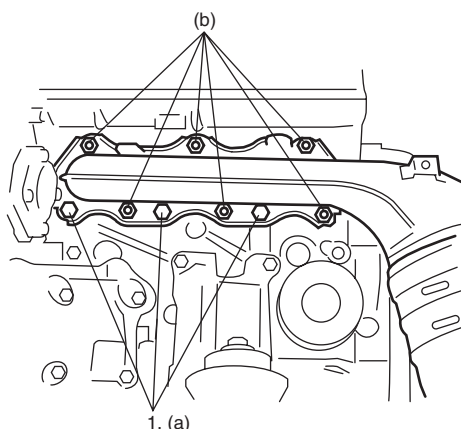

I6JB011B0013-02

- Install oil filter referring to “Engine Oil and Filter Change in Section 0B”.
- Connect suction hose and discharge hose to A/C compressor referring to “Compressor Assembly Removal and Installation in Section 7B”.
- For LHD model, install steering lower shaft assembly referring to “Steering Lower Shaft Assembly Removal and Installation in Section 6B”.
- Upon completion of installation, turn ignition switch to ON position and check that no fuel leakage.
- Start engine and check that no exhaust gas leakage.

Muffler Removal and Installation

S6JB0B1B06003

⚠ WARNING

To avoid the danger of being burned, do not touch the exhaust system when the system is hot. Any service on the exhaust system should be performed when the system is cool.

⚠ CAUTION

Three way catalytic converter should not be exposed to any impulse. Be careful not to drop it or hit it against something.

Refer to “Exhaust System Components”.

Specifications**Tightening Torque Specifications**

S6JB0B1B07001

Fastening part	Tightening torque			Note
	N·m	kgf-m	lb-ft	
Exhaust manifold stiffener bolt	30	3.0	21.5	⌀ / ⌀
Exhaust No.1 pipe bolt and nut	50	5.0	36.5	⌀ / ⌀
HO2S	45	4.5	32.5	⌀

NOTE

The specified tightening torque is also described in the following.
“Exhaust System Components”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Section 2

Suspension

CONTENTS

Precautions	2-1		
Precautions.....	2-1		
Precautions on Suspension	2-1		
Suspension General Diagnosis.....	2A-1		
Diagnostic Information and Procedures.....	2A-1		
Suspension, Wheels and Tires Symptom			
Diagnosis	2A-1		
Specifications.....	2A-3		
Wheel Alignment Specifications.....	2A-3		
Front Suspension	2B-1		
General Description	2B-1		
Front Suspension Construction.....	2B-1		
Front Wheel Alignment Construction	2B-2		
Repair Instructions	2B-2		
Front Wheel Alignment Inspection and			
Adjustment	2B-2		
Front Strut Assembly Components	2B-4		
Front Strut Assembly Removal and			
Installation	2B-5		
Front Strut Assembly Disassembly and			
Assembly	2B-7		
Front Strut Assembly Check	2B-8		
Front Wheel Hub Assembly and Steering			
Knuckle Components	2B-9		
Front Wheel Hub Assembly Removal and			
Installation	2B-9		
Steering Knuckle Removal and Installation.....	2B-11		
Front Wheel Hub, Disc, Nut and Bearing			
Check	2B-12		
Suspension Control Arm Removal and			
Installation	2B-13		
Suspension Control Arm / Bushing			
Disassembly and Assembly	2B-13		
Suspension Control Arm / Steering Knuckle			
Check	2B-14		
Suspension Control Arm Bushing Check	2B-14		
Suspension Control Arm Joint Check	2B-14		
Front Suspension Frame, Stabilizer Bar and/			
or Bushings Components.....	2B-15		
Front Suspension Frame, Stabilizer Bar and/			
or Bushings Removal and Installation.....	2B-16		
Front Suspension Frame Check	2B-20		
		Front Stabilizer Bar, Bushing and/or Joint	
		Check	2B-20
		Front Suspension Fasteners Check.....	2B-20
		Specifications.....	2B-21
		Tightening Torque Specifications	2B-21
		Special Tools and Equipment	2B-22
		Recommended Service Material	2B-22
		Special Tool	2B-22
		Rear Suspension	2C-1
		General Description	2C-1
		Rear Suspension Construction	2C-1
		Rear Wheel Alignment Construction	2C-2
		Repair Instructions	2C-2
		Rear Wheel Alignment Inspection and	
		Adjustment	2C-2
		Rear Shock Absorber and Rear Coil Spring	
		Components.....	2C-4
		Rear Shock Absorber Removal and	
		Installation	2C-5
		Shock Absorber Check	2C-6
		Rear Coil Spring and Bump Stopper Removal	
		and Installation	2C-6
		Rear Coil Spring Check.....	2C-8
		Rod and Arm Components.....	2C-9
		Control Rod Removal and Installation.....	2C-10
		Control Rod / Bushing Disassembly and	
		Assembly.....	2C-11
		Control Rod Check.....	2C-11
		Trailing Rod Removal and Installation	2C-12
		Trailing Rod / Bushing Disassembly and	
		Assembly.....	2C-13
		Trailing Rod Check.....	2C-14
		Lower Arm Removal and Installation	2C-14
		Lower Arm / Bushing Disassembly and	
		Assembly.....	2C-15
		Lower Arm Check.....	2C-16
		Upper Arm Removal and Installation	2C-16
		Upper Arm / Bushing Disassembly and	
		Assembly.....	2C-18
		Upper Arm Check.....	2C-18
		Rear Suspension Frame Components.....	2C-19
		Rear Suspension Frame Removal and	
		Installation	2C-20

Rear Suspension frame / Bushing Disassembly and Assembly	2C-22
Rear Suspension Frame, Bushing and Pad Check	2C-23
Rear Wheel Hub Assembly and Rear Suspension Knuckle Components	2C-23
Rear Wheel Hub Assembly Removal and Installation	2C-24
Rear Wheel Hub Assembly, Wheel Bearing and Wheel Stud Inspection	2C-26
Rear Wheel Disc, Nut and Bearing Check	2C-26
Rear Suspension knuckle Removal and Installation	2C-26
Rear Suspension Knuckle Check	2C-28
Rear Suspension Fasteners Check	2C-28
Specifications	2C-29
Tightening Torque Specifications	2C-29
Special Tools and Equipment	2C-30
Recommended Service Material	2C-30
Special Tool	2C-30

Wheels and Tires	2D-1
General Description	2D-1
Tires Description	2D-1
Wheels Description	2D-2
Irregular and/or Premature Wear Description	2D-3
Wear Indicators Description	2D-3
Radial Tire Waddle Description	2D-3
Radial Tire Lead / Pull Description	2D-5
Balancing Wheels Description	2D-5
Repair Instructions	2D-6
General Balance Procedures	2D-6
Tire Rotation	2D-6
Wheel Removal and Installation	2D-7
Tire Mounting and Dismounting	2D-7
Tire Repair	2D-7
Specifications	2D-8
Wheels and Tires Specifications	2D-8
Tightening Torque Specifications	2D-8

Precautions

Precautions

Precautions on Suspension

S6JB0B2000001

Suspension Caution

Refer to "Suspension Caution in Section 00".

Wheels and Tires Caution

Refer to "Wheels and Tires Caution in Section 00".

General Precautions

Refer to "General Precautions in Section 00".

Vehicle Lifting Points

Refer to "Vehicle Lifting Points in Section 0A".

Fastener Caution

Refer to "Fastener Caution in Section 00".

Fastener Information

Refer to "Fastener Information in Section 0A".

Brake Caution

Refer to "Brakes Caution and Note in Section 00".

Suspension General Diagnosis

Diagnostic Information and Procedures

Suspension, Wheels and Tires Symptom Diagnosis


S6JB0B2104001

Condition	Possible cause	Correction / Reference Item
Vehicle pulls (Leads)	Mismatched or uneven tires	Replace tires.
	Tires not adequately inflated	Adjust tire pressure.
	Broken or sagging coil springs	Replace coil springs.
	Radial tire lateral force	Replace tire.
	Disturbed wheel alignment	Check and adjust wheel alignment.
	Brake dragging in one road wheel	Repair brake.
	Loose, bent or broken front or rear suspension parts	Tighten or replace related suspension parts.
Abnormal or excessive tire wear	Sagging or broken coil spring	Replace coil spring.
	Tire out of balance	Adjust balance or replace tire.
	Disturbed wheel alignment	Check and adjust wheel alignment.
	Faulty strut (shock absorber)	Replace strut (shock absorber).
	Hard driving	Replace tires.
	Overloaded vehicle	Replace tires.
	Not rotated tires	Replace or rotate tires.
	Worn or loose wheel bearing	Replace wheel bearing.
	Wobbly wheel or tire	Replace wheel or tire.
	Tires not adequately inflated	Adjust tire pressure.
Wheel tramp	Blister or bump on tire	Replace tire.
	Improper strut (shock absorber) action	Replace strut (shock absorber).
Shimmy, shake or vibration	Tire or wheel out of balance	Balance wheel or replace tire and/or wheel.
	Loosen wheel bearings	Replace wheel bearings.
	Worn tie-rod ends	Replace tie-rod ends.
	Worn lower ball joints	Replace front suspension control arm.
	Excessive wheel runout	Repair or replace wheel and/or tire.
	Blister or bump on tire	Replace tire.
	Excessively loaded radial runout of tire / wheel assembly	Replace tire or wheel.
	Disturbed wheel alignment	Check and adjust wheel alignment.
	Loose or worn steering linkage	Tighten or replace steering linkage.
	Loose steering gear case bolts	Tighten steering gear case bolts.
Abnormal noise, front end	Worn, sticky or loose tie-rod ends, lower ball joints, tie-rod inside ball joints or drive shaft joints	Replace tie-rod end, suspension arm, tie-rod or drive shaft joint.
	Damaged struts or mountings	Repair or replace struts or mountings.
	Worn suspension arm bushings	Replace suspension arm bushings.
	Loose stabilizer bar	Tighten bolts or nuts and/or replace bushes.
	Loose wheel bolts	Tighten wheel bolts.
	Loose suspension bolts or nuts	Tighten suspension bolts or nuts.
	Broken or damaged wheel bearings	Replace wheel bearings.
	Broken suspension springs	Replace suspension springs.
	Poorly lubricated or worn strut bearings	Replace strut bearing.
	Malfunction of Power Steering System	Check and correct malfunction.
Low or uneven trim height	Broken or sagging coil springs	Replace coil springs.
	Over loaded	Check loading.
	Incorrect coil springs	Replace coil spring.
NOTE		
See NOTE *1.	Tires not adequately inflated	Adjust tire pressure.
Ride too soft	Faulty strut (shock absorber)	Replace strut (shock absorber).
Suspension bottoms	Overloaded	Check loading.
	Faulty strut (shock absorber)	Replace strut (shock absorber).
	Incorrect, broken or sagging coil springs	Replace coil spring.

Condition	Possible cause	Correction / Reference Item
Body leans or sways in corners	Loose stabilizer bar	<i>Tighten stabilizer bar bolts or nuts, or replace bushes.</i>
	Faulty strut (shock absorber) or mounting	<i>Replace strut (shock absorber) or tighten mounting.</i>
	Broken or sagging coil springs	<i>Replace coil springs.</i>
	Overloaded	<i>Check loading.</i>
Cupped tires	Front struts defective	<i>Replace struts.</i>
	Worn wheel bearings	<i>Replace wheel bearings.</i>
	Excessive tire or wheel run-out	<i>Replace tire and/or wheel.</i>
	Worn ball joints	<i>Replace front suspension control arm.</i>
	Tire out of balance	<i>Adjust tire balance.</i>

NOTE

***1: Right-to-left trim height ("H") difference should be within 15 mm (0.6 in.) with curb weight. (same with rear side.)**

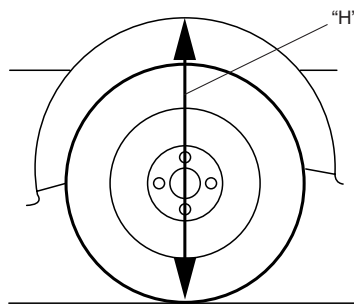

I2RH01210001-01

Specifications

Wheel Alignment Specifications

S6JB0B2107001

Toe “b” – “a”

Front: 0.0 ± 2.0 mm (0 ± 0.0787 in.)

Rear: IN 6.0 ± 2.0 mm (0.2362 ± 0.0787 in.)

Toe (degree) (each wheel) “d”

Front: 0° ± 5’

Rear: 0° 14’ ± 5’

Camber “c”

Front: 0° 00’ ± 1°

Rear: -1° 15’ ± 30’

Caster

Front: 2° 30’

Side Slip

Front: IN 1.5 to OUT 1.5 mm/m (IN 0.0591 to OUT 0.0591 in./3.3 ft)

Rear: IN 7.5 mm/m (IN 0.2953 in./3.3 ft)


Steering angle

Inside: 37.0° ± 3°

Outside: 32.0° ± 3°

NOTE

- Toe value in the specifications table was measured by using a toe-in gauge.
- As for front camber, front caster and rear caster, regulation is impossible.
- Side slip is reference information.

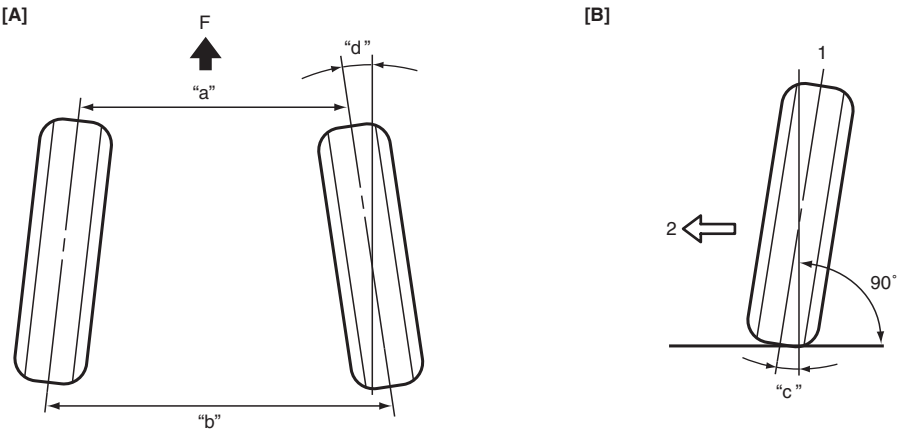

I6JB0B210001-02


[A]: Toe-in (Top view)	1. Center line of wheel	F: Forward
[B]: Camber (Front view)	2. Body center	

Front Suspension

General Description

Front Suspension Construction

S6JB0B2201001

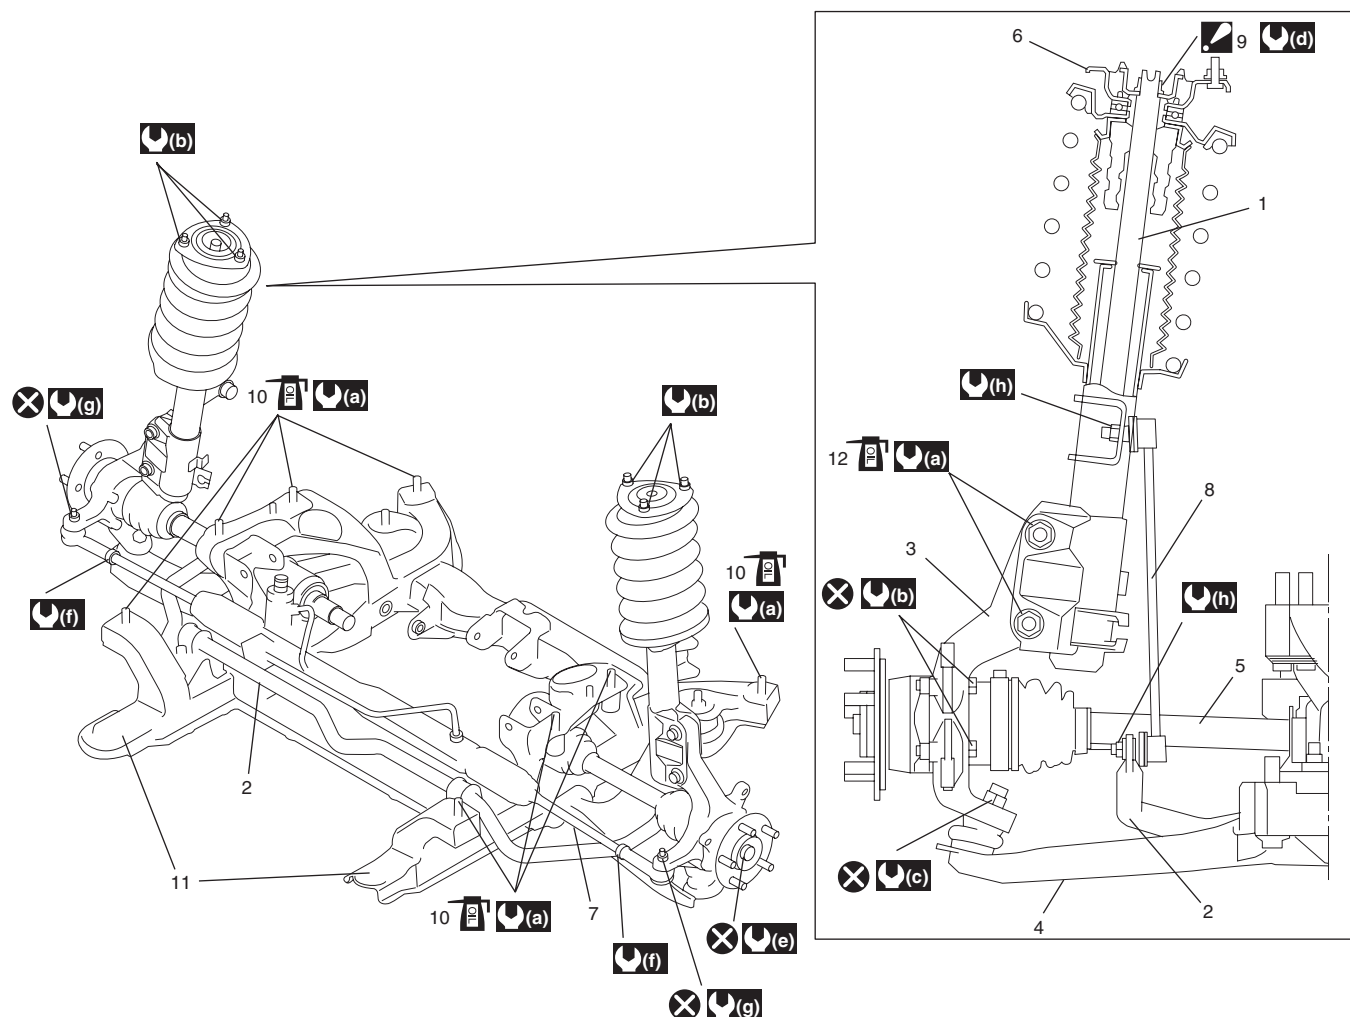

I6JB0B220001-02

1. Front strut assembly	8. Stabilizer bar joint	⌚(c) : 55 N·m (5.5 kgf-m, 40.0 lb-ft)
2. Stabilizer bar	9. Strut nut : Do not reuse caulking nut if used.	⌚(d) : 70 N·m (7.0 kgf-m, 51.0 lb-ft)
3. Steering knuckle	10. Suspension frame bolt : If bolt is reused, apply engine oil to thread, bearing and trunk surface.	⌚(e) : 220 N·m (22.0 kgf-m, 159.5 lb-ft)
4. Suspension control arm	11. Suspension frame	⌚(f) : 65 N·m (6.5 kgf-m, 47.0 lb-ft)
5. Front drive shaft	12. Strut bracket nut : If nut is reused, apply engine oil to thread and bearing.	⌚(g) : 43 N·m (4.3 kgf-m, 31.0 lb-ft)
6. Vehicle body	⌚(a) : 135 N·m (13.5 kgf-m, 98.0 lb-ft)	⌚(h) : 60 N·m (6.0 kgf-m, 43.5 lb-ft)
7. Tie-rod	⌚(b) : 50 N·m (5.0 kgf-m, 36.5 lb-ft)	X : Do not reuse.

2B-2 Front Suspension:

Front Wheel Alignment Construction

S6JB0B2201002

Among factors for front wheel alignment, only toe setting can be adjusted. Camber and caster are not adjustable. Therefore, should camber or caster be out of specification due to the damage caused by hazardous road conditions or collision, whether the damage is in body or in suspension should be determined and damaged body should be repaired or damaged suspension should be replaced.

Preliminary Checks Prior to Adjustment Front Wheel Alignment

Steering and vibration complaints are not always the result of improper wheel alignment. An additional item to be checked is the possibility of tire lead due to worn or improperly manufactured tires. "Lead" is the vehicle deviation from a straight path on a level road without hand pressure on the steering wheel. Refer to "Radial Tire Lead / Pull Description in Section 2D" in order to determine if the vehicle has a tire lead problem. Before making any adjustment affecting wheel alignment, the following checks and inspections should be made to ensure correctness of alignment readings and alignment adjustments:

- Check all tires for proper inflation pressures and approximately the same tread wear.

- Check for loose of ball joints. Check tie-rod ends; if excessive looseness is noted, it must be corrected before adjusting.
- Check for run-out of wheels and tires.
- Check vehicle trim heights; if it is out of limit and a correction is needed, it must be done before adjusting toe.
- Check for loose of suspension control arms.
- Check for loose or missing stabilizer bar attachments.
- Consideration must be given to excess loads, such as tool boxes. If this excess load is normally carried in vehicle, it should remain in vehicle during alignment checks.
- Consider condition of equipment being used to check alignment and follow manufacturer's instructions.
- Regardless of equipment used to check alignment, vehicle must be placed on a level surface.

NOTE

To prevent possible incorrect reading of toe, camber or caster, vehicle front and rear end must be moved up and down a few times before inspection.

Repair Instructions

Front Wheel Alignment Inspection and Adjustment

S6JB0B2206001

Toe Inspection and Adjustment

Preparation for toe inspection and adjustment.

- Place vehicle in unloaded state on level surface.
- Set steering wheel in straight state.
- Check that inflation pressure of each tire is adjusted properly and wheel is free from deflection.
- Check that each suspension part is free from bend, dent, wear or damage in any other form.
- Check that ground clearance at the right and left is just about the same.

Inspection


Measure toe with toe-in gauge (1).

Toe should be within following specifications.

If toe is out of the specification, adjust toe properly.

Toe

IN 0 ± 2.0 mm (0 ± 0.0787 in.)

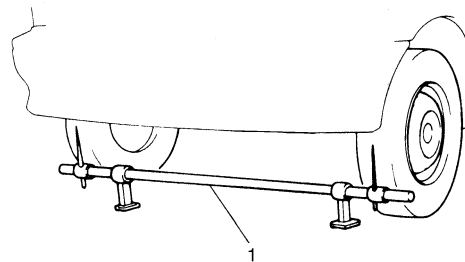

I2RH01220062-01

Adjustment

- 1) Loosen right and left tie-rod end lock nuts (1) first.
- 2) Rotate right and left tie-rods (2) by the same amount to align toe to specification. In this adjustment, the lengths "A" of both right and left tie-rod should be equal.

NOTE

Before rotating tie-rods (2), apply grease between tie-rods and rack boots so that boots won't be twisted.


- 3) After adjustment, tighten lock nuts (1) to specified torque.

Tightening torque

Tie-rod end lock nut (a): 65 N·m (6.5 kgf-m, 47.0 lb-ft)

NOTE

Make sure that rack boots are not twisted.

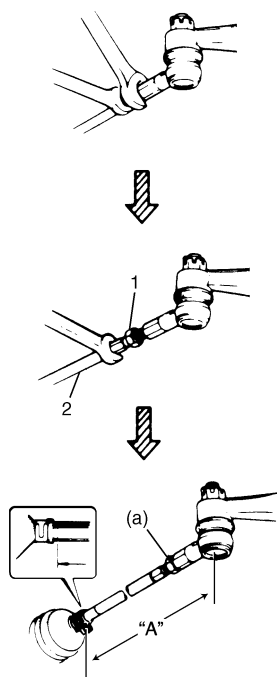

I5JB0A220002-01

Steering Angle Check and Adjustment

When tie-rod or tie-rod end was replaced, check toe and then also steering angle with turning radius gauge (1). If steering angle is not correct, check whether right and left tie-rods length "A" are equal.



NOTE

If tie-rod lengths were changed to adjust steering angle, reinspect toe-in.

Steering angle

Inside: $37.0^\circ \pm 3^\circ$

Outside: $32.0^\circ \pm 3^\circ$

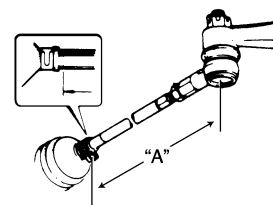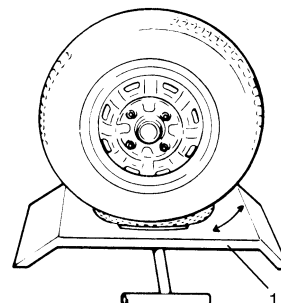

I5JB0A220003-01

Reference Information**Side slip**

When checked with side slip tester, side slip should satisfy following specification.


Side slip

IN 1.5 to OUT 1.5 (IN 0.0591 to OUT 0.0591)

If side slip is greatly different, toe or front wheel alignment may not be correct.

Front Strut Assembly Components

S6JB0B2206002

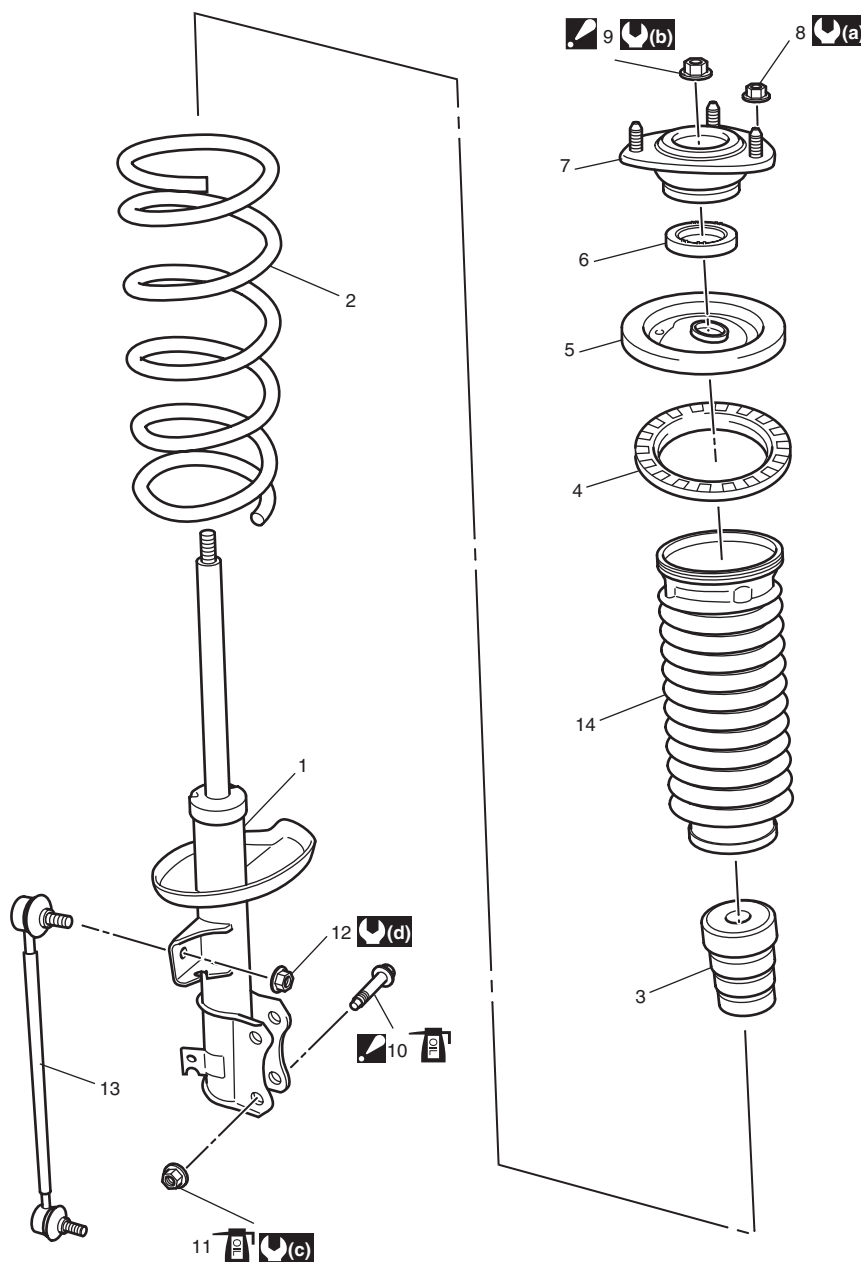

I6JB0B220002-02

1. Strut assembly	7. Strut support	13. Stabilizer joint
2. Coil spring	8. Strut support nut	14. Strut dust cover
3. Bump stopper	9. Strut nut : Do not reuse caulking nut if used.	(a) : 50 N·m (5.0 kgf-m, 36.5 lb-ft)
4. Coil spring seat	10. Strut bracket bolt : Insert from vehicle front side. : If bolt is reused, apply engine oil to thread, bearing and trunk surface.	(b) : 70 N·m (7.0 kgf-m, 51.0 lb-ft)
5. Coil spring upper seat	11. Strut bracket nut : If nut is reused, apply engine oil to thread and bearing.	(c) : 135 N·m (13.5 kgf-m, 98.0 lb-ft)
6. Strut bearing	12. Stabilizer joint nut	(d) : 60 N·m (6.0 kgf-m, 43.5 lb-ft)

Front Strut Assembly Removal and Installation


S6JB0B2206003

Removal

NOTE

When servicing component parts of strut assembly, remove strut rod cap and then loosen strut nut a little before removing strut assembly. This will make service work easier. Note that the nut must not be removed at this point.


- 1) Hoist vehicle, allowing front suspension to hang free.
 - 2) Remove wheel and disconnect stabilizer joint (1) from strut bracket.
- When loosening joint nut, hold stud with hexagon wrench.

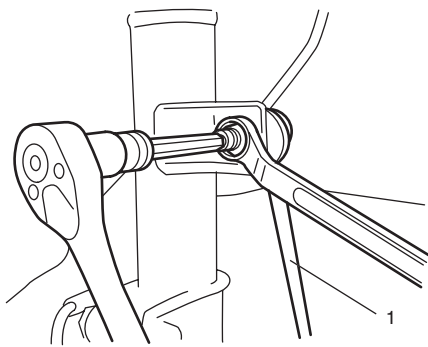

I5JB0A220005-02

- 3) Remove brake hose mounting bolt (1) and remove brake hose (2) from bracket.
- 4) Disconnect front height sensor (if equipped) from suspension control arm for left side referring to "Height Sensor Removal and Installation (If Equipped) in Section 9B".
- 5) Remove wheel speed sensor harness clamp bolt (3) and then detach front speed sensor harness (5) from strut bracket as shown in figure.

- 6) Remove strut bracket bolts and nuts (4).

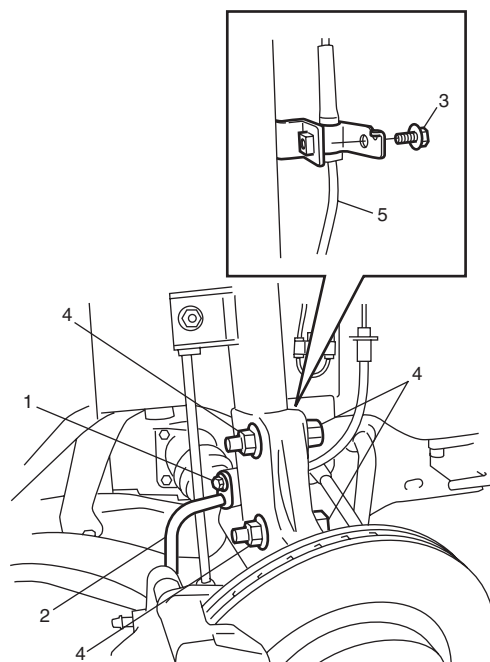


I5JB0A220006-01

- 7) Remove strut support nuts (1).

NOTE

Hold strut by hand so that it will not fall off.

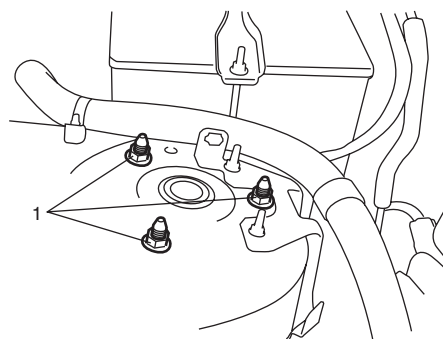

I5JB0A220007-01

- 8) Remove strut assembly.

2B-6 Front Suspension:

Installation

Install strut assembly by reversing removal procedure, noting the following instructions.

- Insert bolts in such direction as shown in figure.
- Tighten all fasteners to specified torque.

Tightening torque

Strut bracket nut (a): 135 N·m (13.5 kgf-m, 98.0 lb-ft)

Brake hose mounting bolt (c): 25 N·m (2.5 kgf-m, 18.0 lb-ft)

Stabilizer joint nut (d): 60 N·m (6.0 kgf-m, 43.5 lb-ft)

Wheel speed sensor harness clamp bolt (e): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

- Lower hoist and vehicle in unloaded condition, tighten strut support nuts (b) to specified torque.

Tightening torque



Strut support nut (b): 50 N·m (5.0 kgf-m, 36.5 lb-ft)

⚠ CAUTION

If strut bracket bolt and nut are reused, apply engine oil to thread, bearing and trunk surface.

NOTE

- Don't twist brake hose and wheel speed sensor harness when installing them.
- Insert strut bracket bolt from vehicle forward.

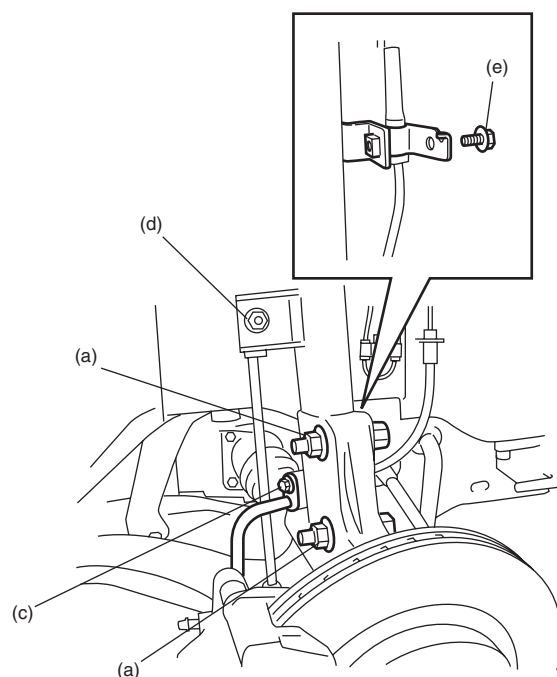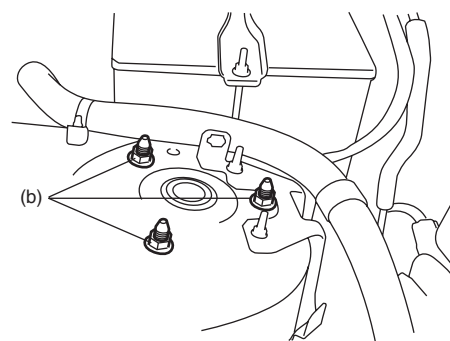

I5JB0A220008-01

- Tighten wheel nuts to specified torque.

Tightening torque

Wheel nut: 100 N·m (10.0 kgf-m, 72.5 lb-ft)

- After installation, confirm front wheel alignment and adjust headlight auto leveling system referring to "Initialization of Auto Leveling Headlight System in Section 9B".

Front Strut Assembly Disassembly and Assembly

S6JB0B2206004

⚠ WARNING

Use a regular coil spring compressor and follow the operation procedure described in the Instruction Manual.


Otherwise, spring might come off and injure.

Disassembly

- 1) Attach special tool (A) to coil spring as shown. Turn special tool bolts alternately until coil spring tension is released. Rotate the strut around its axis to confirm that the coil spring is released or not.

Special tool

(A): 09943-25010

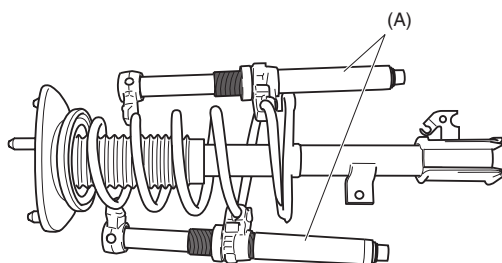

I5JB0A220059-01


- 2) While keeping coil spring compressed, remove strut nut with special tools as shown.

Special tool

(A): 09900-00411

(B): 09900-00414

(C): 09941-56510

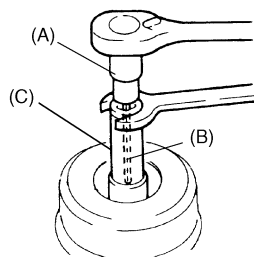

I5JB0A220060-01

- 3) Disassemble strut assembly.


Assembly

For assembly, reverse disassembly procedure, noting the following instructions.

- 1) Compress coil spring with special tool (A) until total length becomes about 310 mm (12.2 in.) as shown.

Length

"a": 310 mm (12.2 in.)

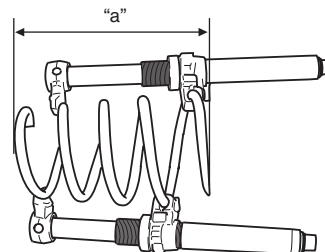


I6JB01220001-02

- 2) Install bump stopper onto strut rod. For installing direction, refer to the figure in "Front Strut Assembly Components".
- 3) Install compressed coil spring to strut, and place coil spring end (2) onto spring lower seat (1) as shown.

NOTE


End of coil spring must not interfere with step of spring lower seat.

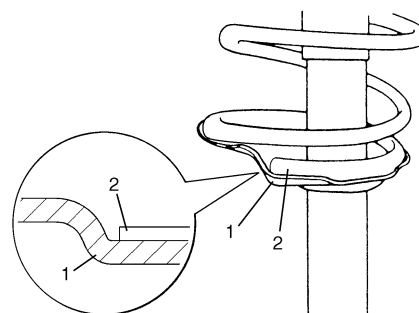

I4RS0A220011-01

2B-8 Front Suspension:

- 4) Pull strut rod as far up as possible and use care not to allow it to retract into strut.
- 5) Attach coil spring seat to coil spring upper seat and then install strut dust cover firmly.
- 6) Install coil spring upper seat with strut dust cover on coil spring and then spring upper seat (1) aligning "OUT" mark (3) on spring upper seat and center of strut bracket (2).

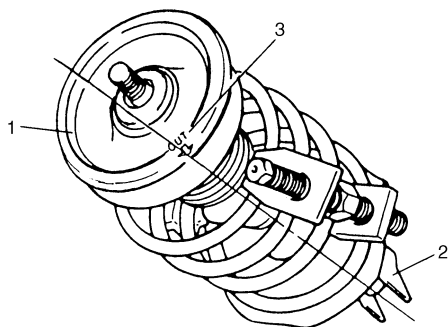

I2RH01220019-01

- 7) Install bearing (3), strut support (2) and strut nut (1) in this sequence.
Tighten strut nut (1) holding stud with special tools.

NOTE

If using caulking nut, do not reuse.

Special tool


(A): 09900-00411

(B): 09900-00414

(C): 09941-56510

Tightening torque

Strut nut (a): 70 N·m (7.0 kgf-m, 51.0 lb-ft)

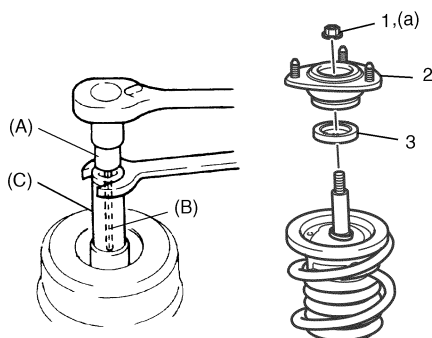


I5JB0A220011-03

Front Strut Assembly Check

S6JB0B2206005

- Inspect strut for oil leakage, damage or deformation. If defect is found, replace strut as an assembly unit, because it can not be disassembled.

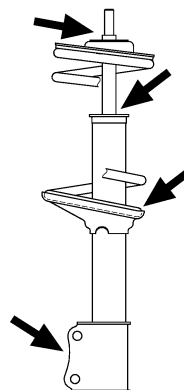

I4RS0A220014-01

- Inspect strut function referring to the following procedures:

1) Check and adjust tire pressures as specified.

2) Bounce vehicle body up and down 3 or 4 times continuously by pushing front end of the vehicle side body to check strut.

Also, note how many times vehicle body rebounds to stop after force application.

3) Repeat the same procedure to the other strut to confirm that the both side struts equally respond.

If conditions of struts are in doubt, compare them with known-good vehicle or strut.


- Inspect bearing for wear, abnormal noise or gripping. If defective, replace.
- Inspect coil spring seat for cracks or deformation. If defective, replace.
- Inspect bump stopper for deterioration. If defective, replace.
- Inspect rebound stopper and strut mount for wear, cracks or deformation. If defective, replace.

Front Wheel Hub Assembly and Steering Knuckle Components

S6JB0B2206006

⚠ CAUTION

Never disassemble front wheel hub assembly. Disassembly will spoil its original function. If faulty condition is found, replace it with new one.

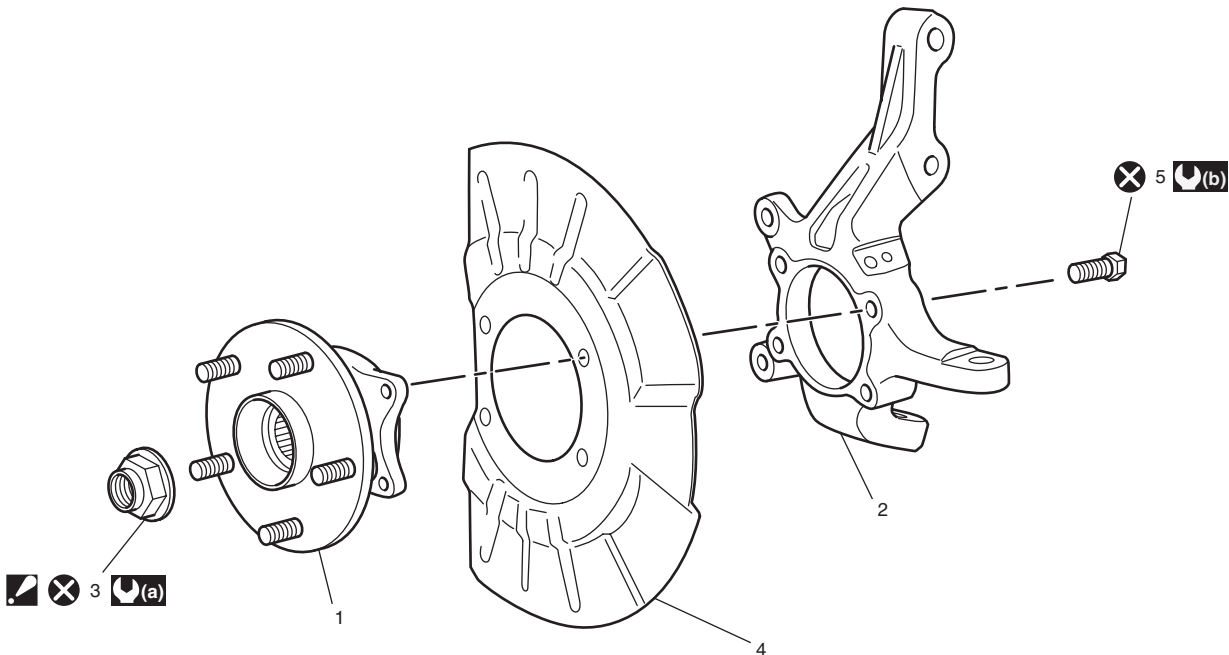

I6JB0B220003-02

1. Front wheel hub assembly	4. Dust cover	⚙(b) : 50 N·m (5.0 kgf-m, 36.0 lb-ft)
2. Steering knuckle	5. Wheel hub housing bolt	⚠ : Do not reuse.
⚙ 3. Drive shaft nut : Calk, after tightening.	⚙(a) : 220 N·m (22.0 kgf-m, 159.5 lb-ft)	

Front Wheel Hub Assembly Removal and Installation


S6JB0B2206007

⚠ CAUTION

Never disassemble front wheel hub assembly. Disassembly will spoil its original function. If faulty condition is found, replace it with new one.

Removal

- 1) Hoist vehicle and remove wheel.
- 2) Uncaulk drive shaft nut (1).
- 3) Depress foot brake pedal and hold it. Remove drive shaft nut (1).

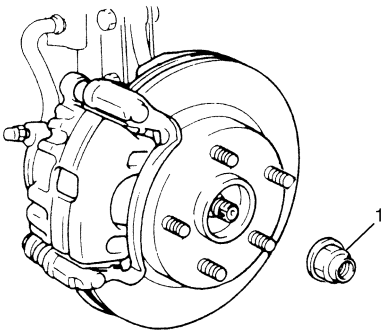

I5JB0A220013-01


2B-10 Front Suspension:

- 4) Remove caliper (1) with carrier.

NOTE


Hang removed caliper with a wire hook or the like (3) so as to prevent brake hose (4) from bending, twisting or tension. Do not depress brake pedal during pads removal. Do not operate brake pedal with pads removed.

- 5) Pull brake disc (2) off by using two 8 mm bolts.

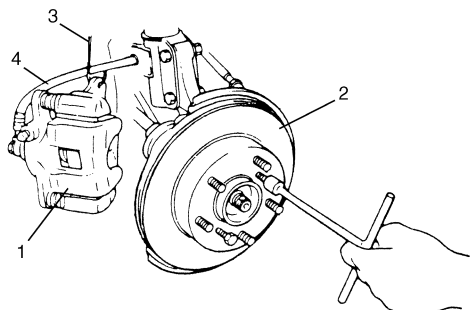

I5JB0A220014-01

- 6) Remove wheel hub housing bolts (3), and then remove wheel hub assembly (1) and dust cover (2).

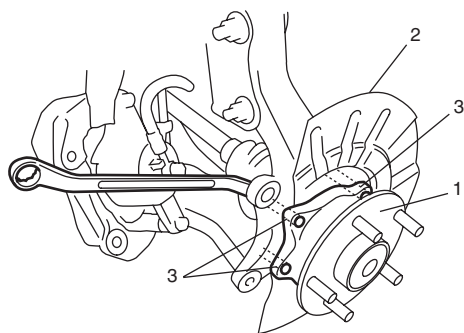


I5JB0A220015-01

- 7) Remove hub bolts (1) with copper hammer or hydraulic press.

CAUTION


Never remove bolt unless replacement is necessary.
Be sure to use a new bolt for replacement.

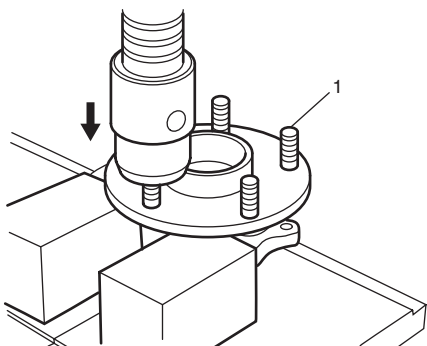

I5JB0A220016-01

Installation

- 1) Insert new hub bolt (1) in hub hole. Rotate hub bolt slowly to assure that serrations are aligned with those made by original bolt.

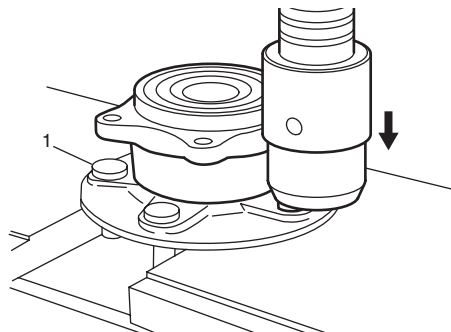


I5JB0A220017-01

- 2) Apply grease to end face of inner ring (2) before front wheel hub (1) installation.

CAUTION

Do not apply the grease to the encoder section to avoid the encoder malfunction.

“A”: Grease 99000-25010 (SUZUKI Super Grease A)

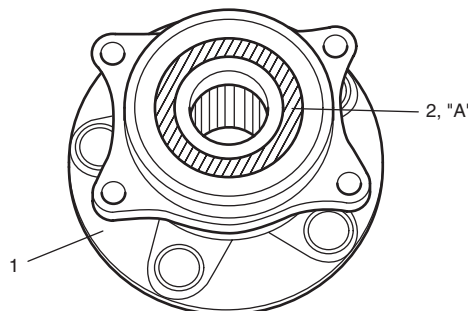


I5JB0A220018-01

- 3) Install wheel hub (1) and dust cover (2) to steering knuckle.
4) Tighten wheel hub housing bolts (3) to specified torque

Tightening torque

Wheel hub housing bolt (a): 50 N·m (5.0 kgf-m, 36.5 lb-ft)

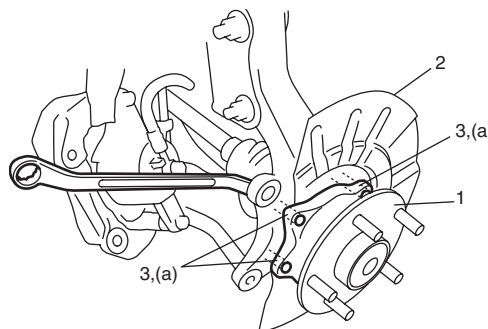

I5JB0A220019-01


- 5) Install brake disk and brake caliper.
- 6) Tighten caliper carrier bolt to specified torque.

Tightening torque**Caliper carrier bolt: 85 N·m (8.5 kgf-m, 61.5 lb-ft)**

- 7) Depress foot brake pedal and hold it there. Tighten new drive shaft nut (1) to specified torque.

Tightening torque**Drive shaft nut: 220 N·m (22.0 kgf-m, 159.5 lb-ft)**

- 8) Caulk drive shaft nut (1) as shown.

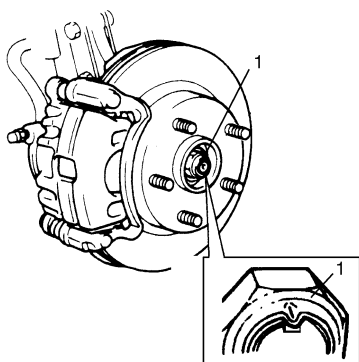

I5JB0A220021-01


- 9) Tightening wheel nuts to specified torque.

Tightening torque**Wheel nut: 100 N·m (10.0 kgf-m, 72.5 lb-ft)****Steering Knuckle Removal and Installation**

S6JB0B2206008

Removal

- 1) Hoist vehicle and remove wheel.
- 2) Remove Front wheel hub assembly referring to "Front Wheel Hub Assembly Removal and Installation".
- 3) Disconnect tie-rod end (1) from steering knuckle (2) with puller (3).

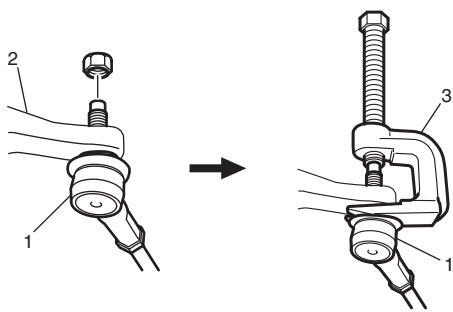

I5JB0A220020-01


- 4) Disconnect front height sensor (if equipped) from suspension control arm for left side referring to "Height Sensor Removal and Installation (If Equipped)" in Section 9B".
- 5) Remove wheel speed sensor from knuckle.
- 6) Remove steering knuckle ball joint nut then remove strut bracket bolts and nut.

- 7) Disconnect ball joint from steering knuckle with puller and then remove steering knuckle.

Installation

For installation, reverse removal procedure, noting the following instructions.

- 1) Connect steering knuckle to suspension arm.
- 2) Install strut bracket bolts (2) and nuts (1).
- 3) Tighten strut bracket nuts (1) to specified torque.

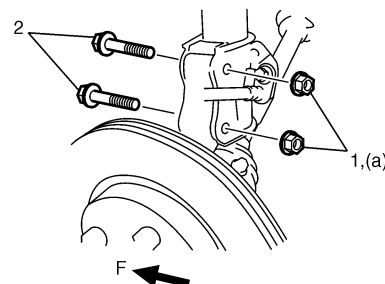Tightening torque**Strut bracket nut (a): 135 N·m (13.5 kgf-m, 98.0 lb-ft)**

I5JB0A220025-01

F: Vehicle forward


- 4) Tighten new suspension arm ball joint nut (1) to specified torque.

⚠ CAUTION

Never reuse the removed suspension arm ball joint nut.

Tightening torque**Suspension arm ball joint nut (a): 55 N·m (5.5 kgf-m, 40.0 lb-ft)**

- 5) Install wheel speed sensor (2) and tighten wheel speed sensor bolt (3).

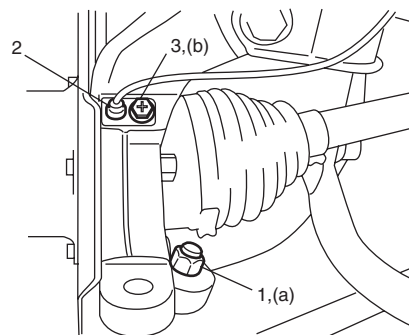Tightening torque**Wheel speed sensor bolt (b): 11 N·m (1.1 kgf-m, 8.0 lb-ft)**


I5JB0A220026-01

2B-12 Front Suspension:

- 6) Connect front height sensor (if equipped) to suspension control arm for left side referring to "Height Sensor Removal and Installation (If Equipped) in Section 9B".
- 7) Connect tie-rod end (1) to steering knuckle (2), tighten new nut (3) to specified torque.

Tightening torque

Tie-rod end nut (a): 45 N·m (4.5 kgf-m, 32.5 lb-ft)

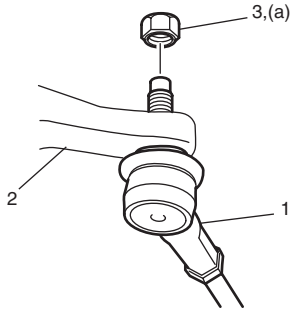

I5JB0A220028-01

- 8) Install front wheel hub assembly and dust cover to steering knuckle referring to "Front Wheel Hub Assembly Removal and Installation".
- 9) Check front wheel alignment adjust it as necessary. For check and adjustment procedures, refer to "Front Wheel Alignment Inspection and Adjustment".
- 10) Adjust headlight auto leveling system (if equipped), refer to "Initialization of Auto Leveling Headlight System in Section 9B".


Front Wheel Hub, Disc, Nut and Bearing Check

S6JB0B2206009

- Inspect each wheel disc for dents, distortion and cracks.
A disc in badly damaged condition must be replaced.
- Check rust of installation face inside of wheel disc.
As rust affects adversely, remove it thoroughly.
- Check tightness of wheel nuts and, if necessary, retighten them to specified torque.

Tightening torque

Wheel nut (a): 100 N·m (10.0 kgf-m, 72.5 lb-ft)

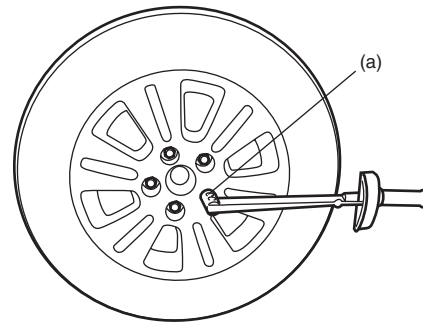


I5JB0A220029-01

- Check wear of wheel bearing. When measuring thrust play, apply a dial gauge to wheel hub as shown in figure.


Front wheel bearing thrust play

Limit: 0.1 mm (0.004 in.)

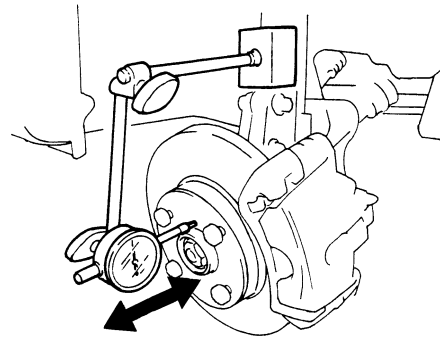

I3RM0A220034-01

- Check wheel bearing noise and smooth wheel rotation by rotating wheel in figure.
If defective, replace bearing.

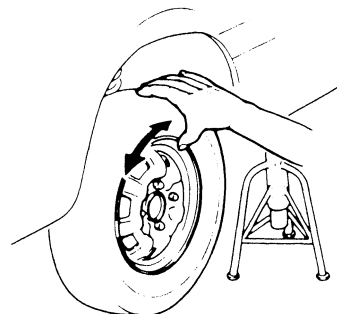


I2RH01220011-01

Suspension Control Arm Removal and Installation

S6JB0B2206010

Removal

- 1) Remove steering knuckle from suspension control arm referring to "Steering Knuckle Removal and Installation".
- 2) Remove suspension control arm bolts (1).

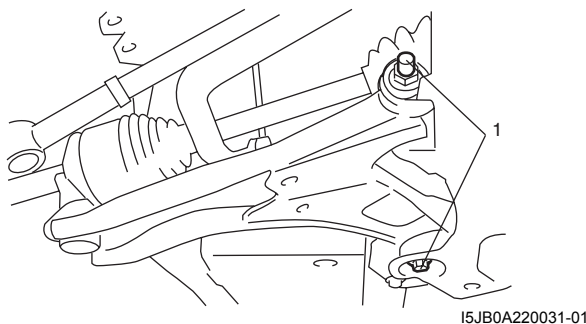


Installation

- 1) Install suspension control arm bolts (1) and tighten suspension control arm nuts (2) temporarily by hand.

⚠ CAUTION

If suspension control arm nut is reused, apply engine oil to thread, bearing and trunk surface.

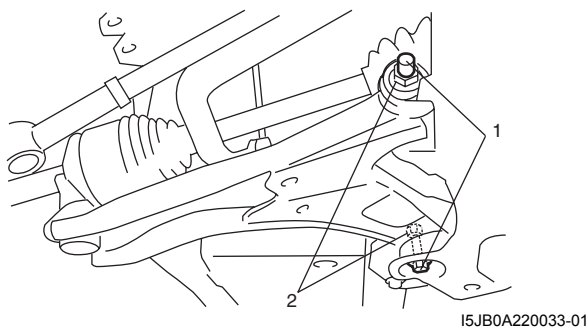

- 2) Connect steering knuckle to suspension control arm referring to "Steering Knuckle Removal and Installation".
- 3) Tighten suspension control arm nuts to specified torque with vehicle weight on suspension.

⚠ CAUTION

It is the most desirable to have vehicle off hoist and in non-loaded condition when tightening them.

Tightening torque

Suspension control arm nut: 135 N·m (13.5 kgf-m, 98.0 lb-ft)

Suspension Control Arm / Bushing Disassembly and Assembly



S6JB0B2206011

Disassembly

- 1) Remove rubber stopper (1).
- 2) Cut rubber (2) of flange of suspension control arm front bushing.
- 3) Using grinder (3), grind off flange (4) of front bushing.

⚠ CAUTION

Be careful not to damage suspension control arm (5) when grinding flange (4) of front bushing with grinder.

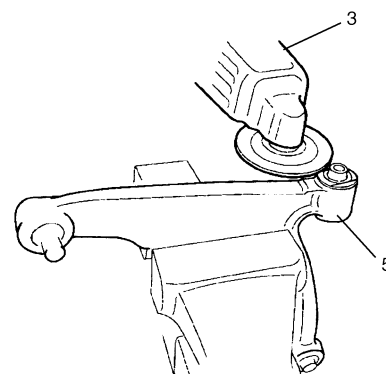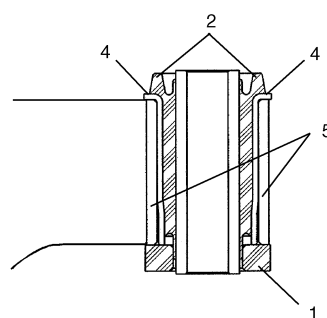


- 4) Push out bushing by using hydraulic press (2) and special tools.

Special tool

(A): 09945-55410

(B): 09913-75821

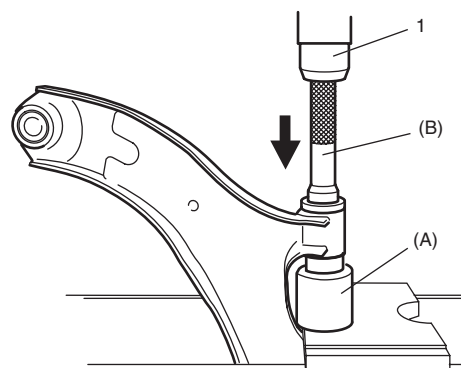

2B-14 Front Suspension:

Assembly

⚠ CAUTION

Apply grease (included in the repair kit) to ball joint and inside of ball stud boot when the ball stud boot is replaced.

1) Front bushing

Press-fit front bushing (1) by using special tools and press (2).


Special tool

(A): 09945-55410


(B): 09913-75821

⚠ CAUTION

Be sure to use new bushing.

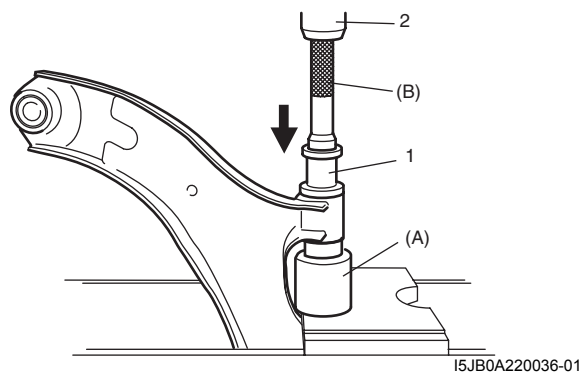


2) Install rubber stopper (1).

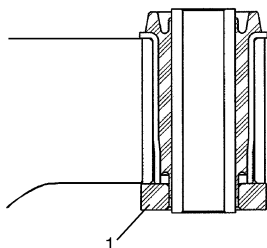

Suspension Control Arm / Steering Knuckle Check

S6JB0B2206012


Inspect for cracks, deformation or damage.
If defective, replace.

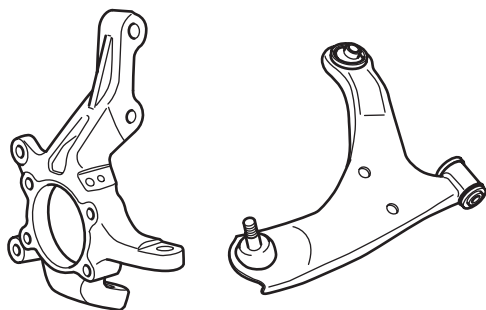

Suspension Control Arm Bushing Check

S6JB0B2206013

Inspect for damage, wear or deterioration.
If defective, replace.

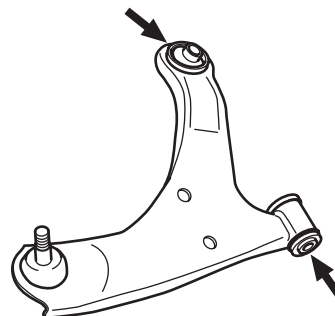

Suspension Control Arm Joint Check


S6JB0B2206014

- Check smooth rotation of ball stud.
- Check damages of ball stud.
- Check damages of dust cover.

NOTE


Suspension control arm and arm joint cannot be separated.

If there is any damage to either parts, control arm assembly must be replaced as a complete unit.

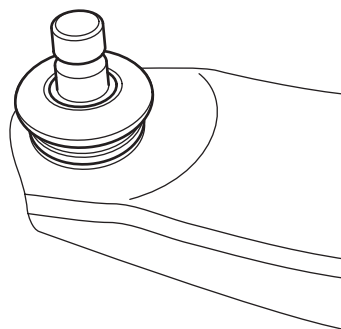

Front Suspension Frame, Stabilizer Bar and/or Bushings Components

S6JB0B2206015

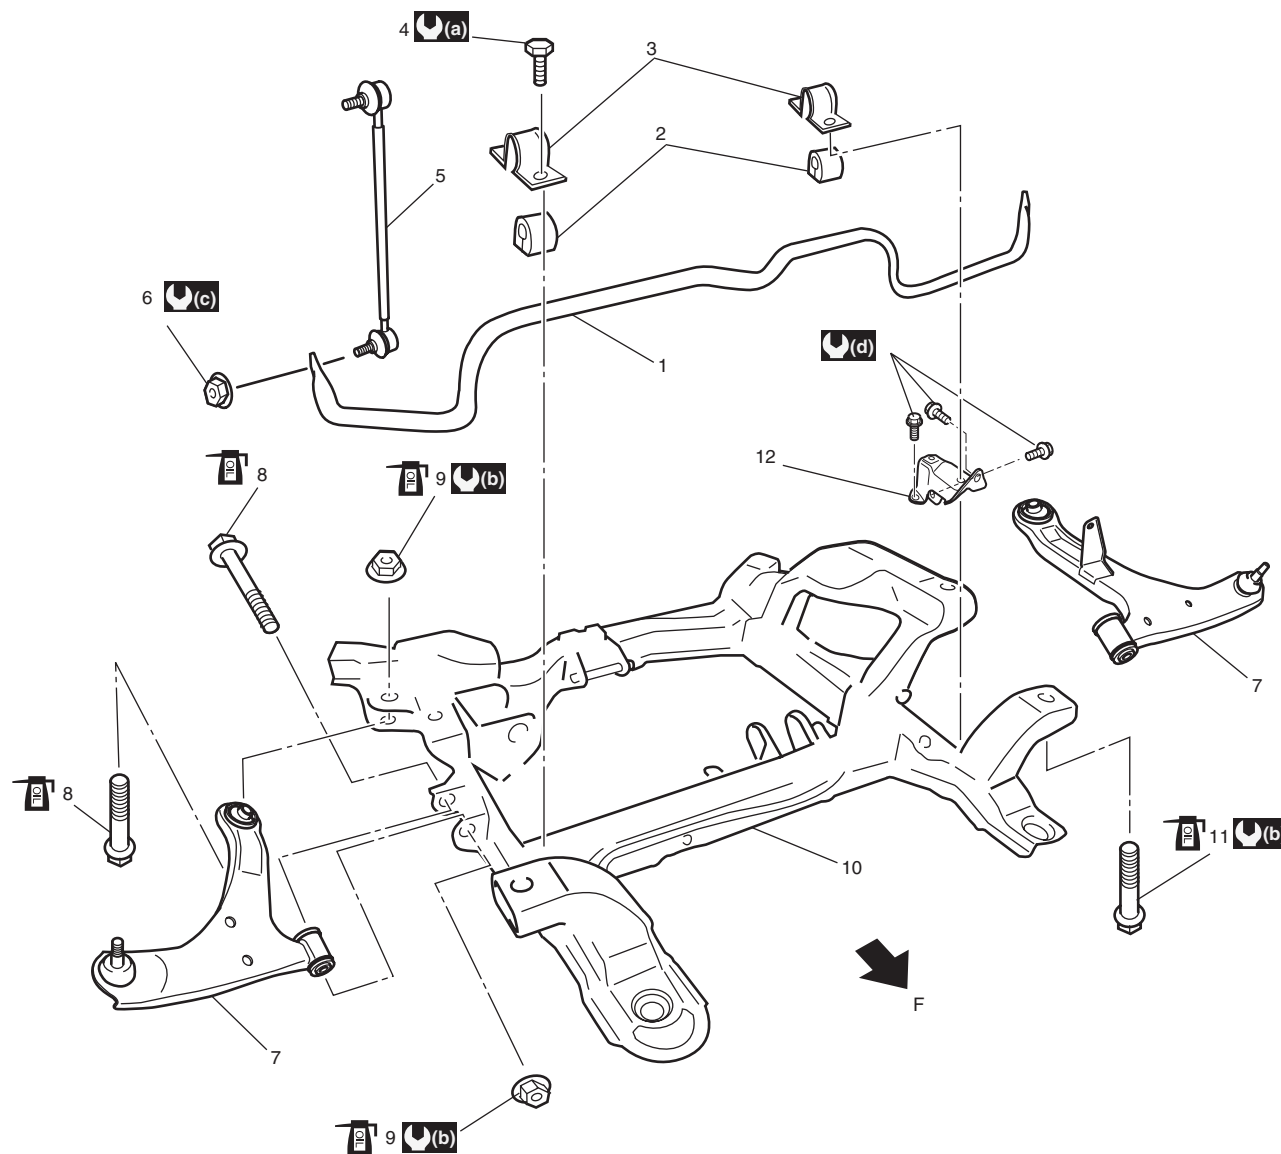

I6JB01220006-01

F: Forward	6. Stabilizer joint nut	12. Stabilizer mount
1. Stabilizer bar	7. Suspension control arm	(a) : 50 N·m (5.0 kgf-m, 36.5 lb-ft)
2. Stabilizer bushing	8. Control arm mounting bolt	(b) : 135 N·m (13.5 kgf-m, 98.0 lb-ft)
3. Stabilizer mounting bracket	9. Control arm nut	(c) : 60 N·m (6.0 kgf-m, 43.5 lb-ft)
4. Stabilizer bar mounting bracket bolt	10. Suspension frame	(d) : 55 N·m (5.5 kgf-m, 40.0 lb-ft)
5. Stabilizer joint	11. Suspension frame mounting bolt	: If bolt and nut is reused, apply engine oil to thread, bearing and trunk surface.

Front Suspension Frame, Stabilizer Bar and/or Bushings Removal and Installation



S6JB0B2206016

⚠ WARNING

When removing and installing front suspension frame, be sure to apply some supporting equipment under it at well-balanced position to prevent from its drop. Otherwise, drop and injure.


Removal

- 1) Hoist vehicle and remove wheels (right & left).
- 2) Remove engine under cover.
- 3) Remove suspension control arm referring to "Suspension Control Arm Removal and Installation".
- 4) Remove right side and left side front drive shaft assembly referring to "Front Drive Shaft Assembly Removal and Installation: Front in Section 3A".
- 5) Remove stabilizer joints (1). When loosening joint nut, hold stud with hexagon wrench.

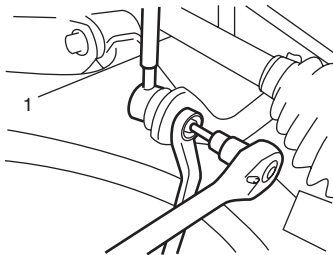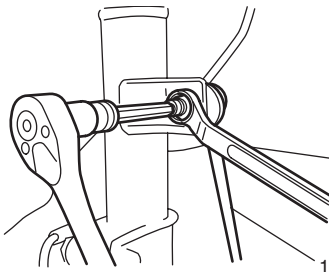


I5JB0A220041-01

- 6) Disconnect front fender lining clip (1) (if equipped with head light auto leveling system).

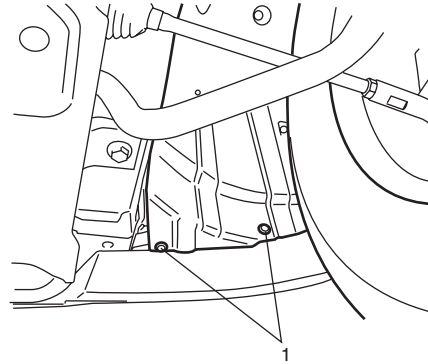


I5JB0A220042-01

- 7) Disconnect front height sensor connector (1) (if equipped with head light auto leveling system) and then detach clip (2).

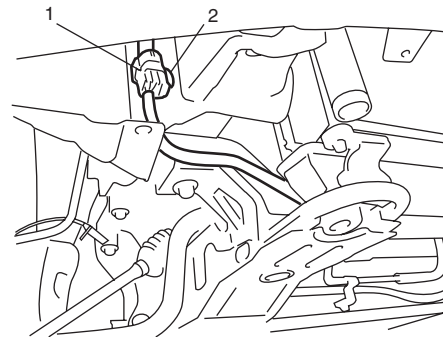


I5JB0A220043-01

- 8) Disconnect steering lower shaft from pinion shaft referring to "P/S Gear Case Assembly Removal and Installation in Section 6C".
- 9) Detach P/S oil line from suspension frame and P/S gear case assembly referring to the figure in "P/S Hose / Pipe Components in Section 6C".
- 10) Remove front propeller shaft referring to "Propeller Shaft Removal and Installation in Section 3D".
- 11) Fix radiator (2) to body with rope (1) to avoid the radiator (2) fall off when front suspension frame lowered.

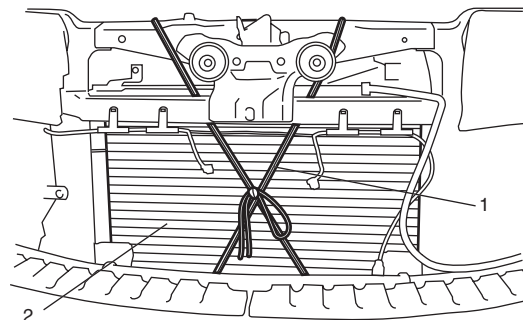


I5JB0A220046-01


- 12) Support engine assemble as follows.
 - a) Remove hood referring to "Hood Removal and Installation in Section 9J".
 - b) Support engine assemble by using chain hoist.
- 13) Support suspension frame at the specified positions (1) indicated in figure.

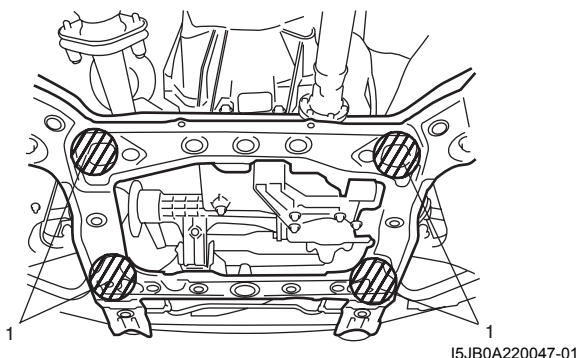


- 14) Remove engine front body side mounting nuts (1).
- 15) Remove suspension frame mounting bolts (2), and then lower suspension frame (3) with stabilizer bar, P/S gear box assembly and front differential assembly.

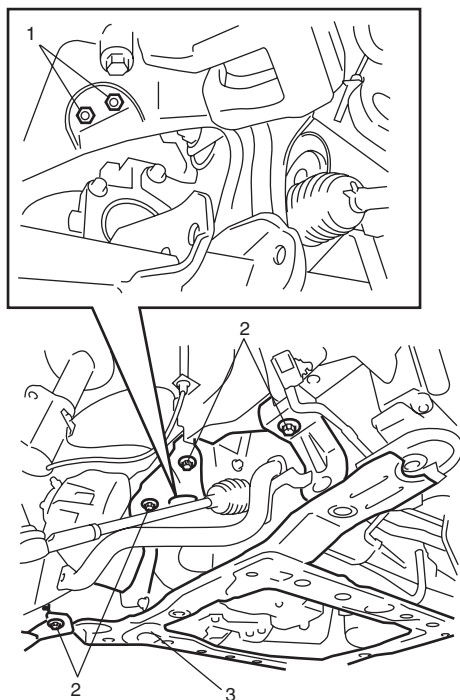

- 16) Remove P/S gear box assembly (1) and front differential assembly (2) referring to "P/S Gear Case Assembly Removal and Installation in Section 6C" and "Front Differential Dismounting and Remounting: Front in Section 3B".

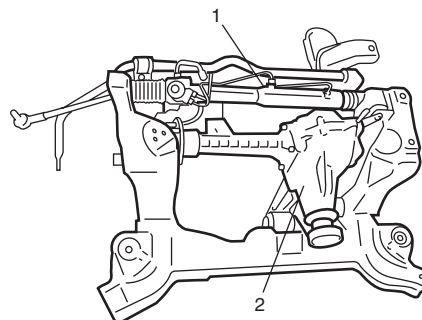

- 17) Remove stabilizer bar (1) and bushing (2) from suspension frame (3).

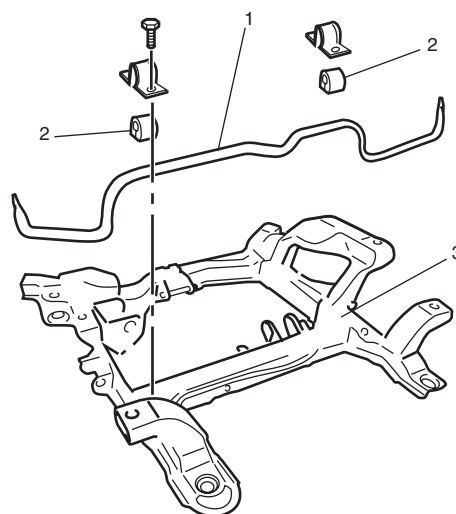

2B-18 Front Suspension:

Installation

- 1) When installing stabilizer, loosely assemble all components while insuring that stabilizer is centered, side-to-side.
- 2) Install stabilizer bar (1), stabilizer bushing (2) and stabilizer mounting bracket (3) to suspension frame.


NOTE

- For correct installation of stabilizer bar, side-to-side, be sure that stopper ring (5) on stabilizer bar aligns with stabilizer bushing, both right and left, as shown in figure.
- Install stabilizer bushing so that a cut (6) becomes forward.


- 3) Tighten stabilizer bar mounting bracket bolts (4) to specified torque.

Tightening torque

Stabilizer bar mounting bracket bolt (a): 50 N·m (5.0 kgf-m, 36.5 lb-ft)

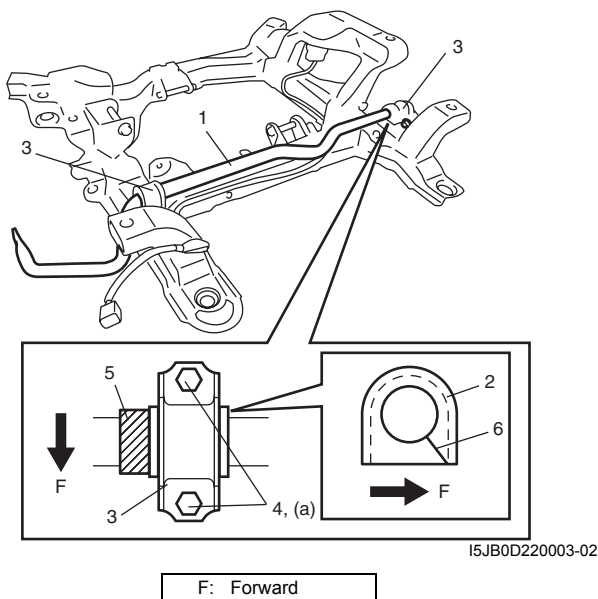

- 4) Install P/S gear box assembly (1) and front differential assembly (2) referring to “P/S Gear Case Assembly Removal and Installation in Section 6C” and “Front Differential Dismounting and Remounting: Front in Section 3B”.

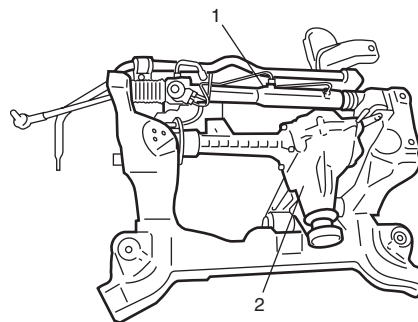


I5JB0A220049-01

- 5) Install suspension frame.

⚠ CAUTION

Lug (2) in suspension frame (1) must be mated to the corresponding hole in body. And also engine front body side mounting bolts (3) must be mated to the corresponding holes (4) in suspension frame.

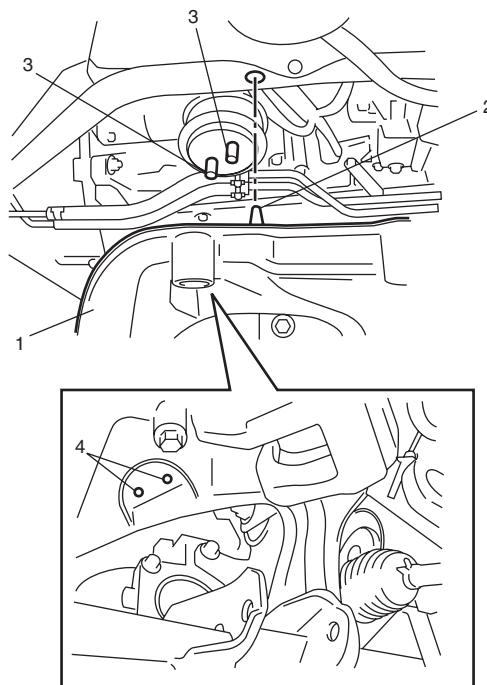

I6JB01220008-01

- 6) Tighten suspension frame mounting bolts (1) and engine front body side mounting nuts (2) to specified torque.



⚠ CAUTION

If suspension frame mounting bolt is reused, apply engine oil to thread, bearing and trunk surface.

Tightening torque


Suspension frame mounting bolt (a): 135 N·m (13.5 kgf-m, 98.0 lb-ft)

Engine front body side mounting nut (b): 55 N·m (5.5 kgf-m, 40.0 lb-ft)

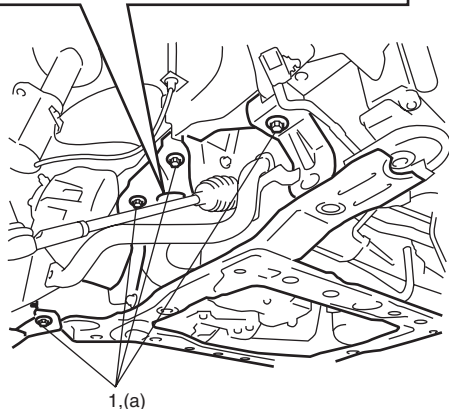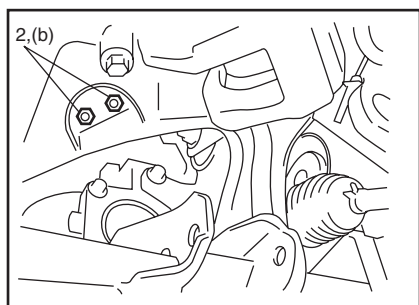


I6JB01220009-01

- 7) Remove chain hoist from engine and the rope (1) from the radiator (2).

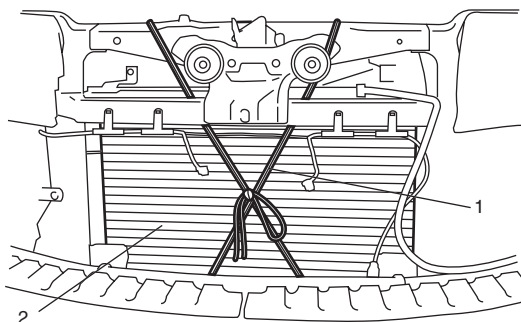


I5JB0A220046-01

- 8) Install hood referring to "Hood Removal and Installation in Section 9J".
- 9) Install front propeller shaft referring to "Propeller Shaft Removal and Installation in Section 3D".
- 10) Install P/S oil line referring to the figure in "P/S Hose / Pipe Components in Section 6C".
- 11) Connect steering lower shaft from pinion shaft Steering referring to "Steering Lower Shaft Assembly Removal and Installation in Section 6B".
- 12) Connect front height sensor connector (1) (if equipped with head light auto leveling system) and then detach clip (2).

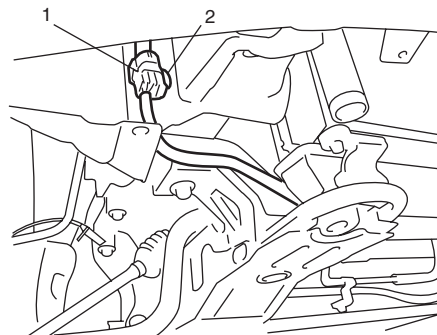

I5JB0A220043-01

- 13) Connect front fender lining clip (1) (if equipped with head light auto leveling system).

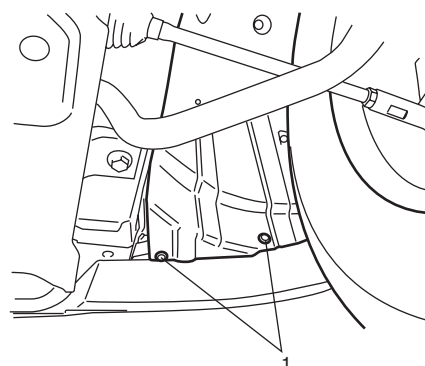



I5JB0A220042-01

2B-20 Front Suspension:

- 14) Install stabilizer joints (1), and tighten nuts to specified torque. When tightening, hold stud with hexagon wrench.

Tightening torque

Stabilizer joint nut (a): 60 N·m (6.0 kgf-m, 43.5 lb-ft)

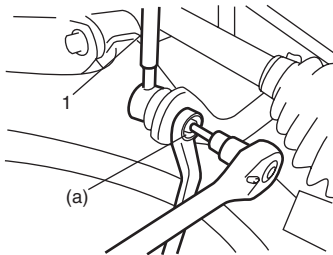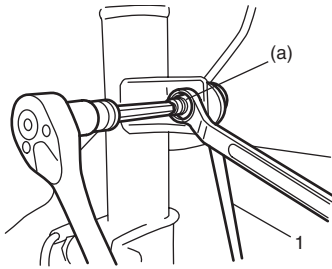


I5JB0A220055-01

- 15) Install right side and left side front drive shaft assembly referring to "Front Drive Shaft Assembly Removal and Installation: Front in Section 3A".
- 16) Install suspension control arm referring to "Suspension Control Arm Removal and Installation".
- 17) Install engine under cover.
- 18) Install wheels (right & left) and lower hoist.
- 19) After installation, be sure to fill specified power steering fluid and bleed air referring to "P/S System Air Bleeding Procedure in Section 6C".
- 20) Adjust auto leveling headlight system (if equipped), refer to "Initialization of Auto Leveling Headlight System in Section 9B".

Front Suspension Frame Check

S6JB0B2206017

Inspect for cracks, deformation or damage.
If defective, replace.

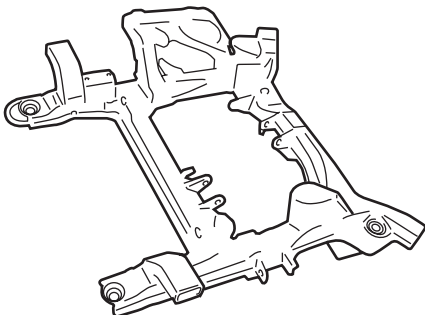

I5JB0A220056-01

Front Stabilizer Bar, Bushing and/or Joint Check

S6JB0B2206018

Stabilizer Bar


Inspect for damage or deformation.
If defective, replace.



I5JB0A220057-01

Stabilizer Bushing

Inspect for damage, wear or deterioration.
If defective, replace.

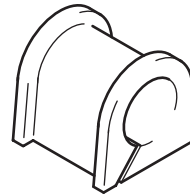

I5JB0D220002-01


Stabilizer Joint

- 1) Check for smooth rotation.
- 2) Check damages of ball stud.
- 3) Check damages of dust cover.

NOTE

Stabilizer joint (1) cannot be disassembled.

If there is any damage to either parts, stabilizer joint assembly must be replaced as a complete unit.

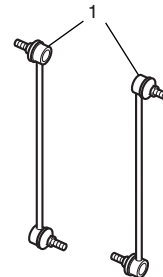

I4RH01220007-01

Front Suspension Fasteners Check

S6JB0B2206019

Check each bolt and nut fastening suspension parts for tightness. Tighten loose one, if any, to specified torque, referring to "Front Suspension Construction".

Specifications

Tightening Torque Specifications

S6JB0B2207001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lb·ft	
Tie-rod end lock nut	65	6.5	47.0	⌚
Strut bracket nut	135	13.5	98.0	⌚ / ⌚
Brake hose mounting bolt	25	2.5	18.0	⌚
Stabilizer joint nut	60	6.0	43.5	⌚ / ⌚
Wheel speed sensor harness clamp bolt	11	1.1	8.0	⌚
Strut support nut	50	5.0	36.5	⌚
Wheel nut	100	10.0	72.5	⌚ / ⌚ / ⌚
Strut nut	70	7.0	51.0	⌚
Wheel hub housing bolt	50	5.0	36.5	⌚
Caliper carrier bolt	85	8.5	61.5	⌚
Drive shaft nut	220	22.0	159.5	⌚
Suspension arm ball joint nut	55	5.5	40.0	⌚
Wheel speed sensor bolt	11	1.1	8.0	⌚
Tie-rod end nut	45	4.5	32.5	⌚
Suspension control arm nut	135	13.5	98.0	⌚
Stabilizer bar mounting bracket bolt	50	5.0	36.5	⌚
Suspension frame mounting bolt	135	13.5	98.0	⌚
Engine front body side mounting nut	55	5.5	40.0	⌚

NOTE

The specified tightening torque is also described in the following.

“Front Suspension Construction: ”

“Front Strut Assembly Components: ”

“Front Wheel Hub Assembly and Steering Knuckle Components: ”

“Front Suspension Frame, Stabilizer Bar and/or Bushings Components: ”


Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Special Tools and Equipment

Recommended Service Material

S6JB0B2208001

Material	SUZUKI recommended product or Specification		Note
Grease	SUZUKI Super Grease A	P/No.: 99000–25010	

NOTE

Required service material is also described in the following.






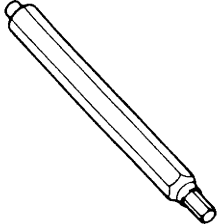







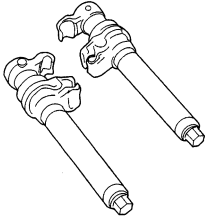



“Front Suspension Construction: ”





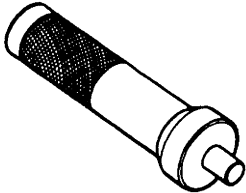

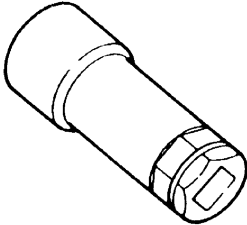

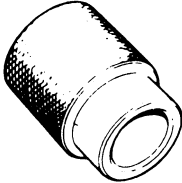
“Front Strut Assembly Components: ”

“Front Suspension Frame, Stabilizer Bar and/or Bushings Components: ”

Special Tool

S6JB0B2208002

09900–00411 Hexagon bit socket  /  	09900–00414 Hexagon bit (6 mm)  /  
09913–75821 Bearing installer attachment  /  	09941–56510 Socket wrench (19 mm)  /  
09943–25010 Spring compressor  	09945–55410 Bushings installer  /  

[A]: View A	4. Control rod	9. Lower Arm	 (e): 50 N·m (5.0 kgf-m, 36.5 lb-ft)
[B]: View B	5. Trailing rod	 (a): 105 N·m (10.5 kgf-m, 76.0 lb-ft)	 (f): 60 N·m (6.0 kgf-m, 43.5 lb-ft)
1. Rear shock absorber	6. Rear brake drum	 (b): 135 N·m (13.5 kgf-m, 98.0 lb-ft)	 (g): 90 N·m (9.0 kgf-m, 65.0 lb-ft)
2. Rear suspension knuckle	7. Rear drive shaft	 (c): 55 N·m (5.5 kgf-m, 40.0 lb-ft)	 : Do not reuse.
3. Rear suspension frame	8. Upper Arm	 (d): 220 N·m (22.0 kgf-m, 159.5 lb-ft)	 : If bolt and/or nut are reused, apply engine oil to thread, bearing and trunk surface.

Rear Wheel Alignment Construction

S6JB0B2301002

Among factors for rear wheel alignment, only toe and camber setting can be adjusted. Caster can't be adjusted. Therefore, should caster be out of specification due to the damage caused by hazardous road conditions or collision, whether the damage is in body or in suspension should be determined and damaged body should be repaired or damaged suspension should be replaced.

Repair Instructions

Rear Wheel Alignment Inspection and Adjustment

S6JB0B2306001

Among factors for rear wheel alignment, only toe and camber setting can be adjusted.

Caster can't be adjusted. Therefore, should caster be out of specification due to the damage caused by hazardous road conditions or collision, whether the damage is in body or in suspension should be determined and damaged body should be repaired or damaged suspension should be replaced.

Toe and Camber Inspection and Adjustment

Preparation for toe and camber inspection and adjustment.

- Place vehicle in non-loaded state on level floor.
- Set steering wheel in straight state.
- Check that inflation pressure of each tire is adjusted properly and disc wheel is free from deflection.
- Check that each suspension part is free from bend, dent, wear or damage in any other form.
- Check that ground clearance at the right and left is just about the same.

NOTE

To prevent possible incorrect reading of toe, camber or caster, vehicle front and rear end must be moved up and down and forward and rearward a few times before inspection.

Inspection

Toe Inspection


Measure toe with toe-in gauge (1).

Toe should be within following specifications.

Toe

IN 6.0 ± 2.0 mm (0.2362 ± 0.0787 in.)

If toe is out of the specification, adjust toe properly.

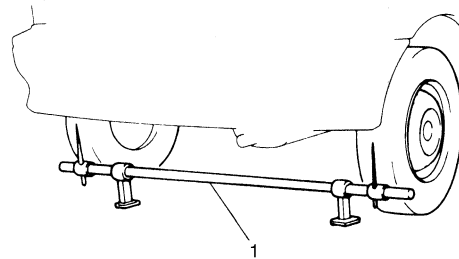

I2RH01230057-01

Camber Inspection

Measure camber with camber tester.

Camber should be within following specifications.

Camber


$-1^{\circ} 15' \pm 30'$

If camber is out of the specification, adjust camber properly.

Adjustment

Control rod adjustment

- 1) Loosen right and left control rod mount nuts (1).

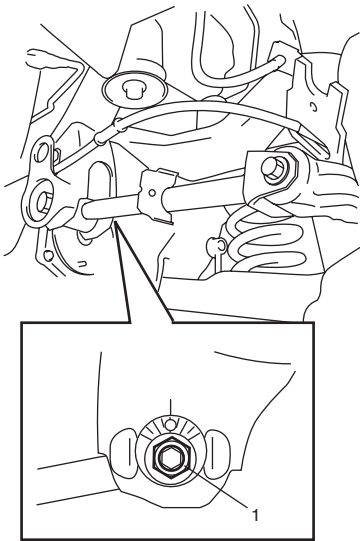


I5JB0A230002-01

- 2) Adjust toe and camber to satisfy the specification by turning right and left control rod inner bolts (cam bolts) (1) with the same amount.

NOTE

When bolt is turned a-direction, camber becomes “+” and toe becomes “IN”. When bolt is turned b-direction, camber becomes “-” and toe becomes “OUT”.

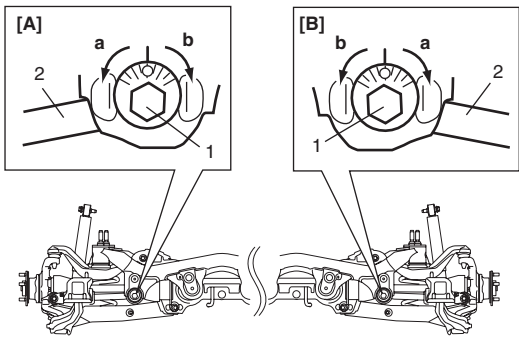

I5JB0A230003-01

[A]: Right side	2. Control rod
[B]: Left side	


- 3) After adjustment, tighten right and left nuts to specified torque while holding cam bolt with another wrench to prevent it from turning.

Tightening torque

Control rod mount nut: 135 N·m (13.5 kgf-m, 98.0 lb-ft)

Lower arm adjustment

- 1) Loosen right and left lower arm mount nuts (1).

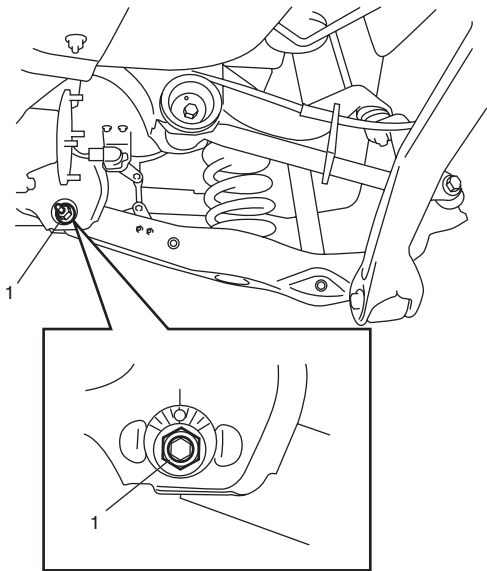


I5JB0A230004-01

- 2) Adjust toe and camber to satisfy the specification by turning right and left lower arm inner bolts (cam bolts) (1) with same amount.

NOTE

When bolt is turned a-direction, camber becomes “+” and toe becomes “OUT”. When bolt is turned b-direction, camber becomes “-” and toe becomes “IN”.

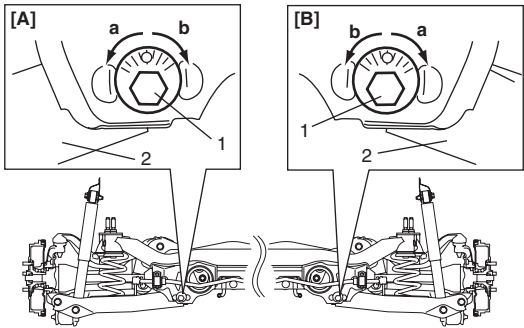

I5JB0A230005-01

[A]: Left side	2. Lower arm
[B]: Right side	

- 3) After adjustment, tighten right and left nuts to specified torque while holding cam bolt with another wrench to prevent it from turning.

Tightening torque

Lower arm mount nut: 135 N·m (13.5 kgf-m, 98.0 lb-ft)

2C-4 Rear Suspension:

Reference Information

Side slip

When checked with side slip tester, side slip should satisfy following specification.


Side slip specification

IN 7.5 mm/m (IN 0.2953 in/3.3 ft)

If side slip is greatly different, toe and/or camber may be not correct.

Rear Shock Absorber and Rear Coil Spring Components

S6JB0B2306002

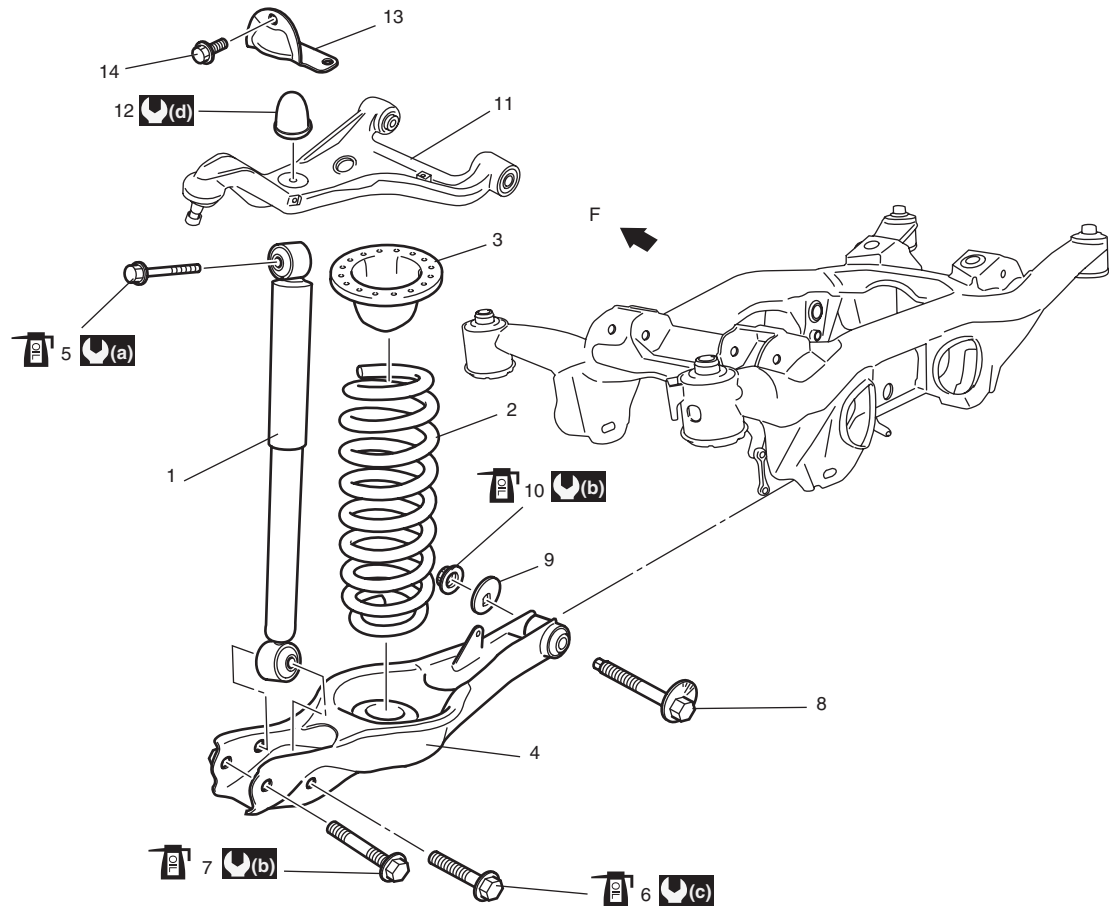

I6JB0B230002-01


1. Rear shock absorber	8. Lower arm inner bolt	F: Vehicle forward
2. Rear coil spring	9. Lower arm washer	(a) : 60 N·m (6.0 kgf-m, 43.5 lb-ft)
3. Coil spring rubber seat	10. Lower arm mount nut : If reuse nut, apply engine oil to thread.	(b) : 135 N·m (13.5 kgf-m, 98.0 lb-ft)
4. Lower arm	11. Upper arm	(c) : 90 N·m (9.0 kgf-m, 65.0 lb-ft)
5. Shock absorber upper bolt : If reuse bolt, apply engine oil to thread.	12. Bump stopper	(d) : 50 N·m (5.0 kgf-m, 36.5 lb-ft)
6. Shock absorber lower bolt : If reuse bolt, apply engine oil to thread.	13. Bump stopper upper seat	
7. Lower arm outer bolt : If reuse bolt, apply engine oil to thread.	14. Bump stopper upper seat bolt	

Rear Shock Absorber Removal and Installation

S6JB0B2306003


Removal

- 1) Hoist vehicle, allowing rear suspension to hang free.
- 2) Remove wheel.
- 3) Support lower arm (1) with jack (2) and remove shock absorber bolts (3).

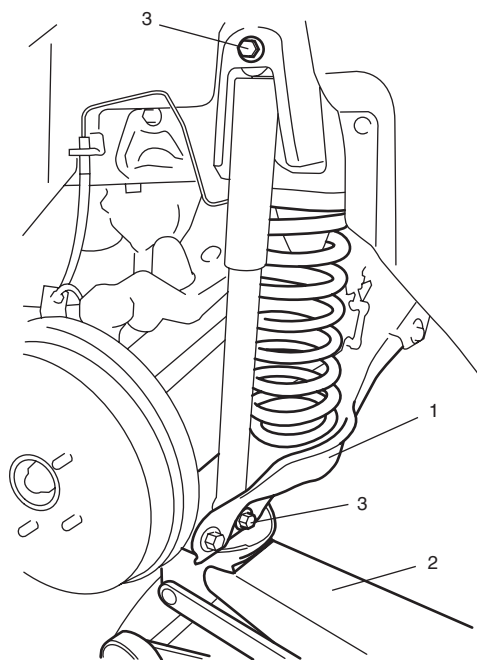

I5JB0A230007-01

- 4) Compress the shock absorber enough to remove it from body.

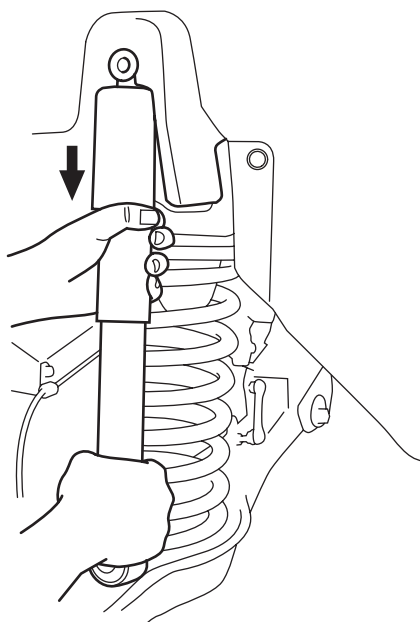

I5JB0A230008-01

Installation

Install shock absorber by reversing removal procedure, noting the following instructions.

- Tighten all fasteners to specified torque.

Tightening torque


Shock absorber upper bolt (a): 60 N·m (6.0 kgf-m, 43.5 lb-ft)

Shock absorber lower bolt (b): 90 N·m (9.0 kgf-m, 65.0 lb-ft)

Wheel nut: 100 N·m (10.0 kgf-m, 72.5 lb-ft)

⚠ CAUTION

- If shock absorber bolts are reused, apply engine oil to thread, bearing and trunk surface.
- It is the most desirable to have vehicle off joint and in non-loaded condition when tightening them.

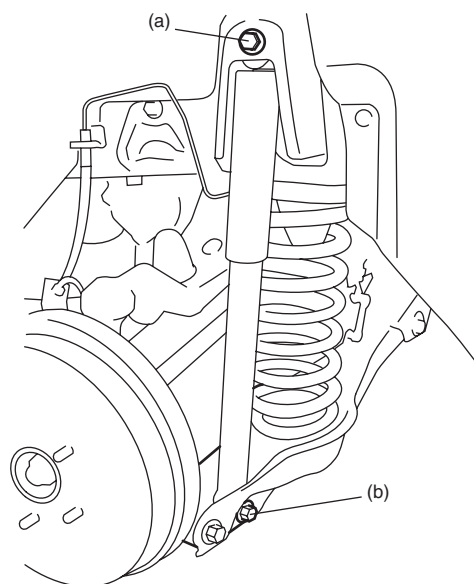

I5JB0A230081-01

Shock Absorber Check

S6JB0B2306004

- Inspect for deformation or damage.
 - Inspect bushings for wear or damage.
 - Inspect for evidence of oil leakage.
- Replace any defective part.


⚠ WARNING

When handling rear shock absorber (1) in which high-pressure gas is sealed, make sure to observe the following precautions.

- Don't disassemble it.
- Don't put it into the fire.
- Don't store it where it gets hot.
- Before disposing it, be sure to drill a hole in it where shown by an arrow in the figure and let gas and oil out. Lay it down sideways for this work.
- The gas itself is harmless but it may issue out of the hole together with chips generated by the drill. Therefore, be sure to wear goggle.

Drill hole diameter

"a": Approx. 3 mm (0.12 in.)

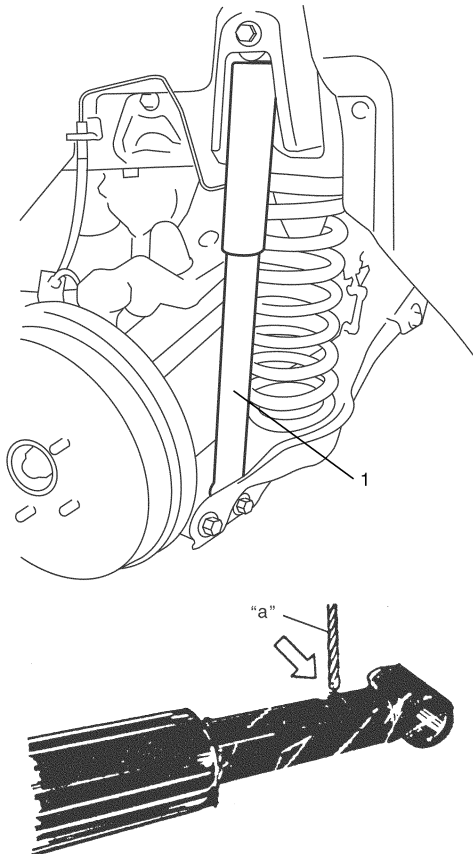


I5JB0A230011-01

Rear Coil Spring and Bump Stopper Removal and Installation

S6JB0B2306005


Removal

- 1) Hoist vehicle, allowing rear suspension to hang free.
- 2) Remove rear wheels.
- 3) Disconnect rear height sensor link (if equipped) from lower arm for left side referring to "Height Sensor Removal and Installation (If Equipped) in Section 9B".
- 4) Remove rear shock absorber referring to "Rear Shock Absorber Removal and Installation".
- 5) Put match marks (1) on lower arm washer (2) and on suspension frame (3) to install the bolts correctly in position.
- 6) Loosen lower arm mount nut (4).

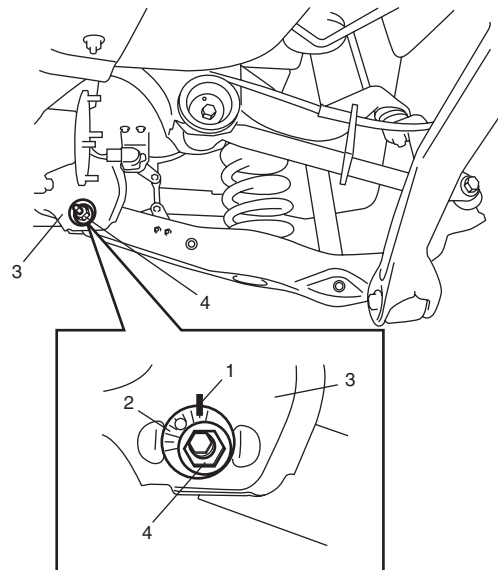

I5JB0A230010-01

- 7) Remove lower arm outer bolt (1).
- 8) Lower jack and then remove rear coil spring (2) and coil spring rubber seat (3).

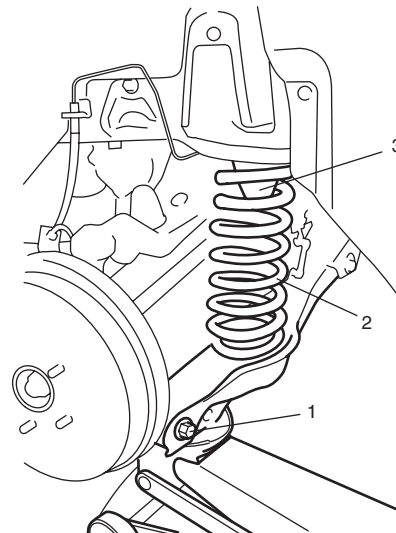


I5JB0A230012-01

- 9) Remove bump stopper (1) from suspension upper arm (2) by using special tool (A).

Special tool

(A): 09941-66010

- 10) Remove bump stopper upper seat bolts (4), and bump stopper upper seat (3) from body.

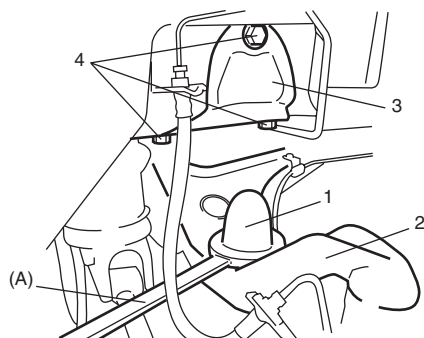

I5JB0A230013-01

Installation


- 1) Install bump stopper upper seat (1) to body and tighten bolts (2).
- 2) Tighten bump stopper (3) to specified torque by using special tool (A).

Special tool

(A): 09941-66010

Tightening torque

Bump stopper (a): 50 N·m (5.0 kgf-m, 36.5 lb-ft)

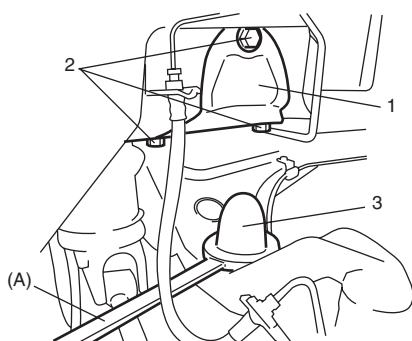

I5JB0A230014-01

- 3) Installing coil spring on lower arm and place coil spring end (1) onto lower arm (2) as shown.


⚠ CAUTION

- Flat end coil spring is upward.
- Upper end of coil spring has to be firmly mated to coil spring rubber seat.
- End of coil spring must not interfere with step of spring lower seat.

- 4) Support lower arm (2) with jack (4).
- 5) Hoist jack and then install lower arm outer bolt (5) and tighten bolt temporarily by hand.

⚠ CAUTION

If lower arm outer bolt is reused, apply engine oil to thread, bearing and trunk surface.

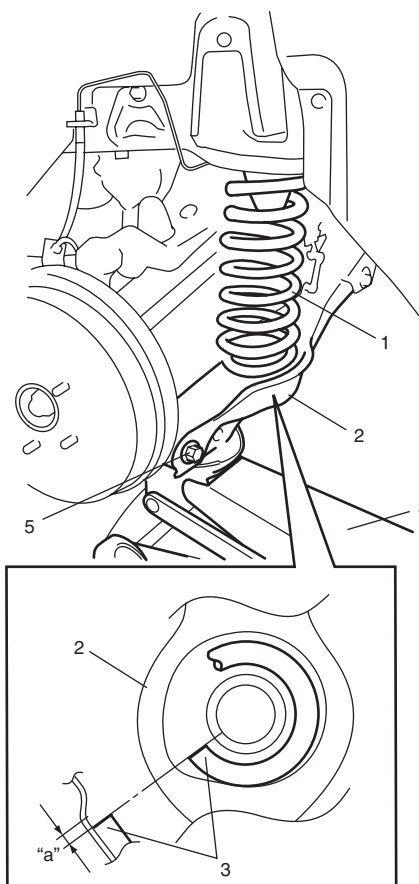


I5JB0D230001-02

"a": 5mm

2C-8 Rear Suspension:

- 6) With marks (1) on lower arm washer (2) and rear suspension frame (3) marked before remove aligned to each other, tighten lower arm mount nut (4) temporarily by hand.

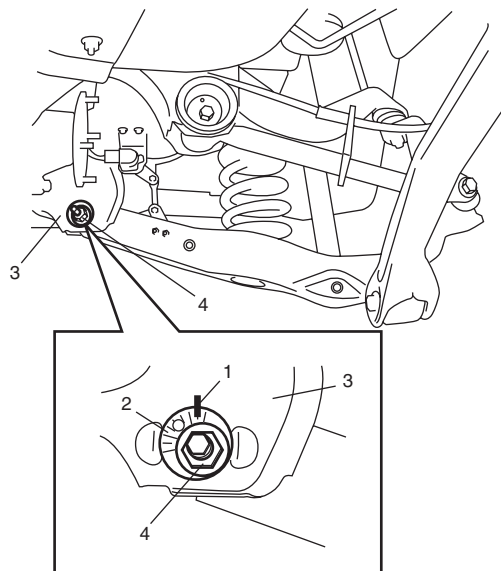

I5JB0A230010-01

- 7) Install rear shock absorber referring to "Rear Shock Absorber Removal and Installation".
- 8) Connect rear height sensor link (if equipped) to lower arm for left side referring to "Height Sensor Removal and Installation (If Equipped) in Section 9B".
- 9) Install wheel with nuts and lower vehicle.
- 10) Tighten wheel nuts to specified torque.

Tightening torque

Wheel nut: 100 N·m (10.0 kgf-m, 72.5 lb-ft)

- 11) Tighten lower arm outer bolt and lower arm mount nut, shock absorber bolts to specified torque with vehicle weight on suspension.

⚠ CAUTION

- It is the most desirable to have vehicle off hoist and in non-loaded condition when tightening them.
- Tighten Lower arm washer with match marks aligned.

Tightening torque

Lower arm outer bolt: 135 N·m (13.5 kgf-m, 98.0 lb-ft)

Lower arm mount nut: 135 N·m (13.5 kgf-m, 98.0 lb-ft)

Shock absorber upper bolt: 60 N·m (6.0 kgf-m, 43.5 lb-ft)


Shock absorber lower bolt: 90 N·m (9.0 kgf-m, 65.0 lb-ft)

- 12) Check rear toe and camber adjust it as necessary. For check and adjustment procedures, refer to "Rear Wheel Alignment Inspection and Adjustment".
- 13) Adjust headlight auto leveling system, refer to "Initialization of Auto Leveling Headlight System in Section 9B".

Rear Coil Spring Check

S6JB0B2306006


- Inspect for cracks, deformation or damage. If any, replace defective part.

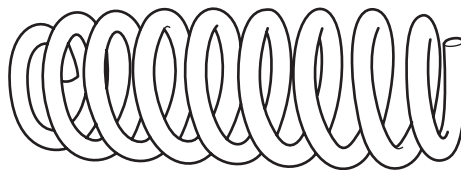

I5JB0A230016-01

Rod and Arm Components

S6JB0B2306007

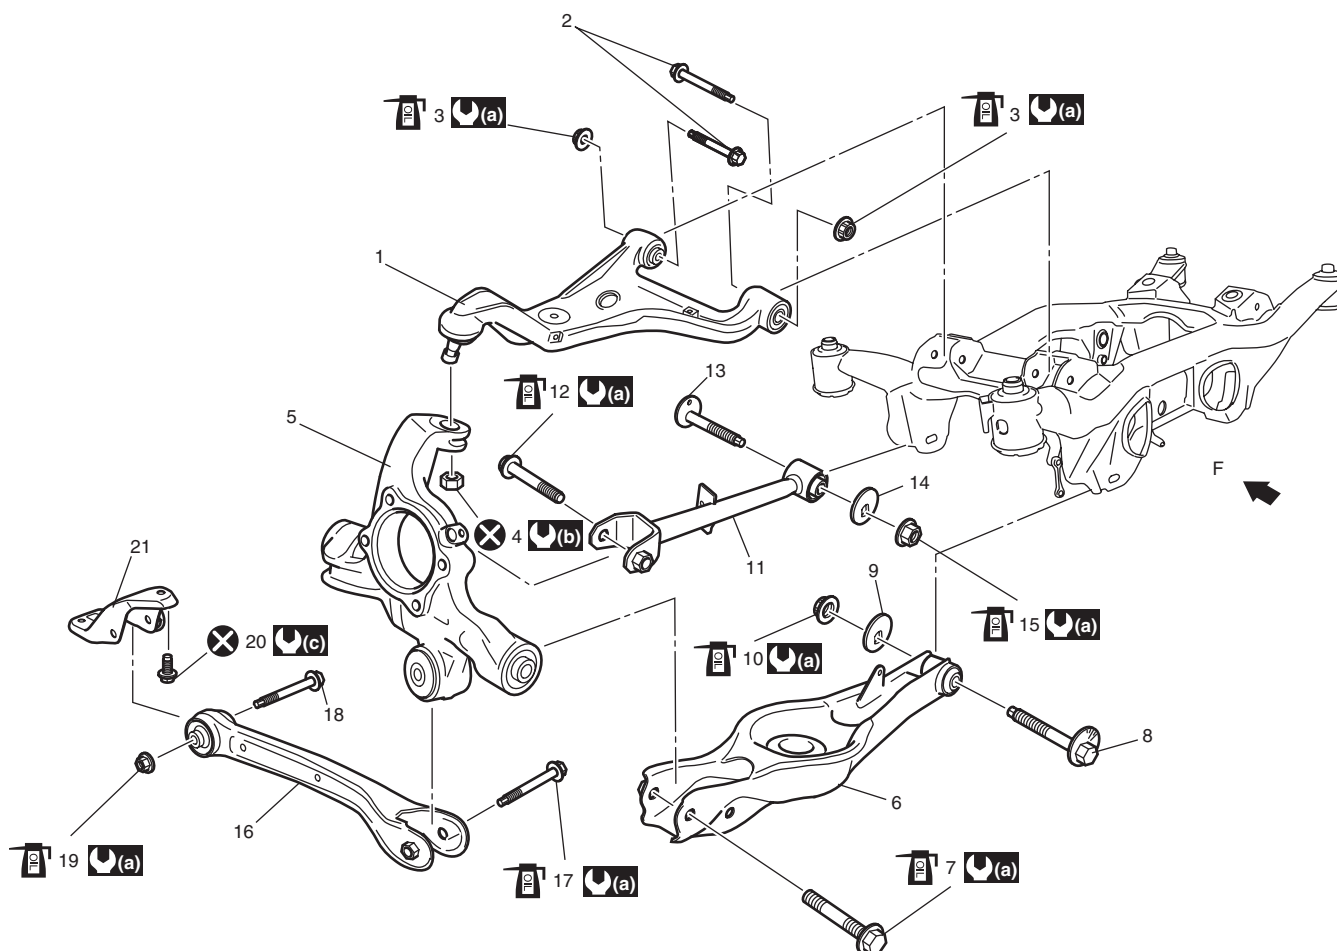

I6JB01230008-03


1. Upper arm	10. Lower arm mount nut :If reuse nut, apply engine oil to thread.	19. Trailing rod mount nut :If reuse nut, apply engine oil to thread.
2. Upper arm bolt	11. Control rod	20. Trailing rod mount bracket bolt
3. Upper arm mount nut :If reuse nut, apply engine oil to thread.	12. Control rod outer bolt :If reuse bolt, apply engine oil to thread.	21. Trailing rod mount bracket
4. Upper arm joint nut	13. Control rod inner bolt	F: Forward
5. Rear suspension knuckle	14. Control rod washer	(a) : 135 N·m (13.5 kgf-m, 98.0 lb-ft)
6. Lower arm	15. Control rod mount nut :If reuse nut, apply engine oil to thread.	(b) : 55 N·m (5.5 kgf-m, 40.0 lb-ft)
7. Lower arm outer bolt :If reuse bolt, apply engine oil to thread.	16. Trailing rod	(c) : 105 N·m (10.5 kgf-m, 76.0 lb-ft)
8. Lower arm inner bolt	17. Trailing rod rear bolt :If reuse bolt, apply engine oil to thread.	X : Do not reuse.
9. Lower arm washer	18. Trailing rod front bolt	

Control Rod Removal and Installation

S6JB0B2306008


Removal

- 1) Hoist vehicle and remove rear wheels.
- 2) Support lower arm with jack.
- 3) Remove parking cable hanger bolt (1).

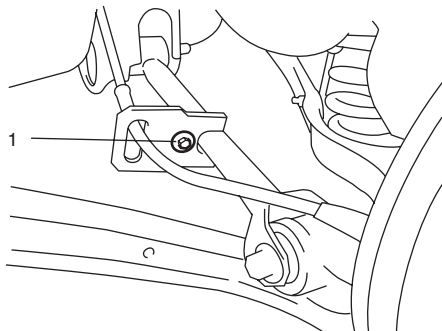

I5JB0A230019-01

- 4) Put match marks (1) on control rod washer (2) and on suspension frame (3) to install the bolts correctly in position.
- 5) Remove control rod inner bolt (4) and control rod outer bolt (5) and then control rod (6).

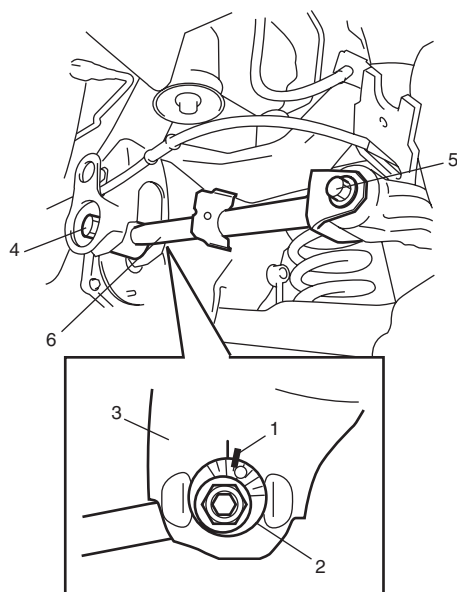

I5JB0A230020-01



Installation

- 1) Install control rod (1).
 - a) Install control rod (1) to rear suspension frame.
 - b) Insert control rod inner bolt (2) from the vehicle frontward.
 - c) Install control rod washer (3) with its graduated part facing up.
 - d) Insert control rod outer bolt (4).

⚠ CAUTION

If control rod outer bolt and control rod mount nut are reused, apply engine oil to thread, bearing and trunk surface.

- e) The marks (5) on control rod washer (3) and rear suspension frame marked before its removal must be aligned and, tighten bolt and nut temporarily by hand.

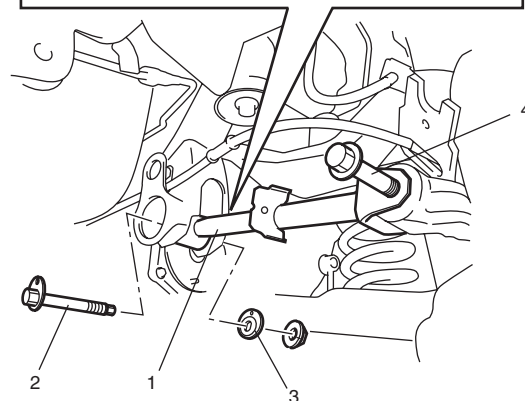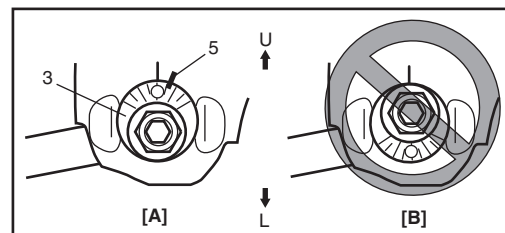


I5JB0A230021-02

[A]: Correct	U: Upper side
[B]: Wrong	L: Lower side

- 2) Tighten parking cable hanger bolt (1) to specified torque.

Tightening torque

Parking cable hanger bolt (a): 10 N·m (1.0 kgf-m, 7.5 lb-ft)

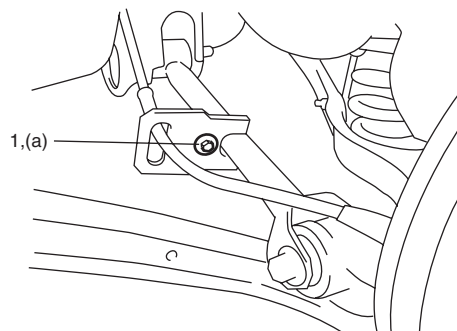

I5JB0A230022-01

- 3) Lower jack and remove floor jack from lower arm.
- 4) Install rear wheels and lower hoist.
- 5) Tighten wheel nuts to specified torque.

Tightening torque

Wheel nut: 100 N·m (10.0 kgf-m, 72.5 lb-ft)

- 6) Tighten control rod mount nut and control rod outer bolt to specified torque with vehicle weight on suspension.

⚠ CAUTION

- It is the most desirable to have vehicle off hoist and in non-loaded condition when tightening them.
- Tighten control rod washer with match marks aligned.

Tightening torque

Control rod mount nut: 135 N·m (13.5 kgf-m, 98.0 lb-ft)

Control rod outer bolt: 135 N·m (13.5 kgf-m, 98.0 lb-ft)

- 7) Check rear toe and camber adjust it as necessary.
For check and adjustment procedures, refer to "Rear Wheel Alignment Inspection and Adjustment".

Control Rod / Bushing Disassembly and Assembly


S6JB0B2306009

Disassembly

- 1) Push out control rod bushing by using hydraulic press (1) and special tool.

Special tool

(A): 09913-84510

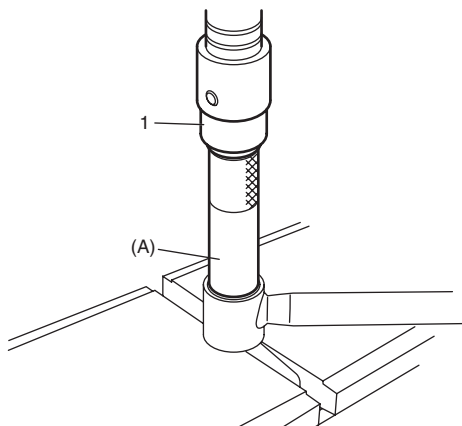

I5JB0A230023-02

Assembly


- 1) Press-fit control rod bushing (1) by using press (2) and special tool.

⚠ CAUTION

Be sure to use new bushing.


Special tool

(A): 09913-85210

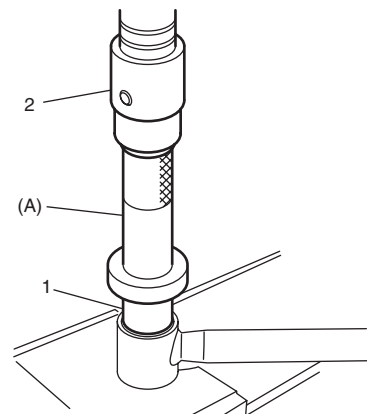

I5JB0A230082-01

- 2) Press-fit bushing so that dimensions "A" and "B" in figure become equal.

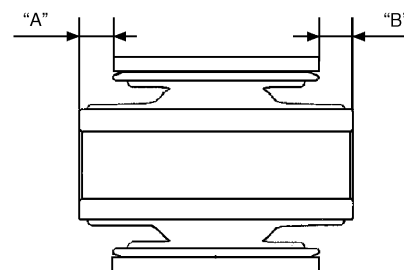


I5JB0A230024-01

Control Rod Check

S6JB0B2306010

- Inspect for cracks, deformation or damage.
 - Inspect bushing for wear and breakage.
- If any faulty condition is found, replace.

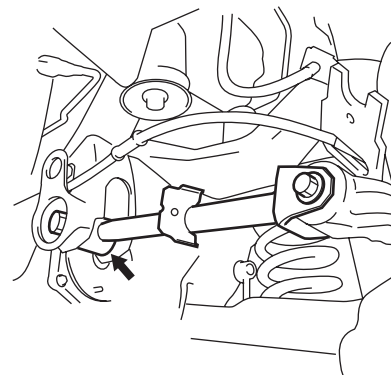


I5JB0A230025-01

Trailing Rod Removal and Installation

S6JB0B2306011


Removal

- 1) Hoist vehicle and remove rear wheels.
- 2) Support lower arm (1) with jack (2).
- 3) Remove air suction pipe bolts (1) for 5door model only.

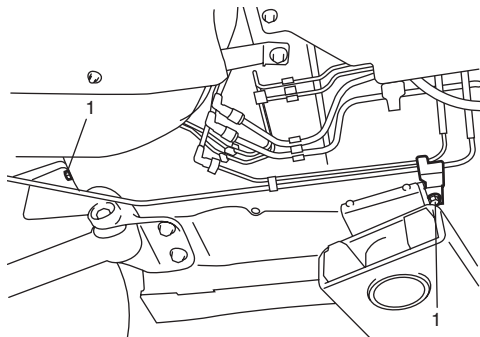


I5JB0A230026-01

- 4) Remove trailing rod front bolt (1) and trailing rod rear bolt (2) and then trailing rod (3).

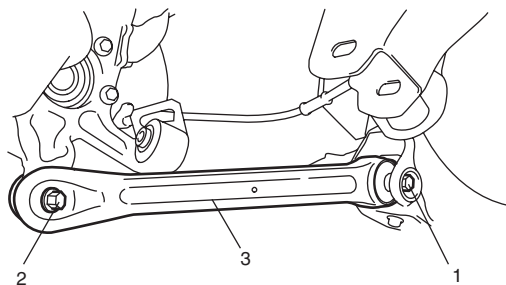

I5JB0A230027-01

- 5) Remove trailing rod mount bracket bolt (1) and then trailing rod mount bracket (2).

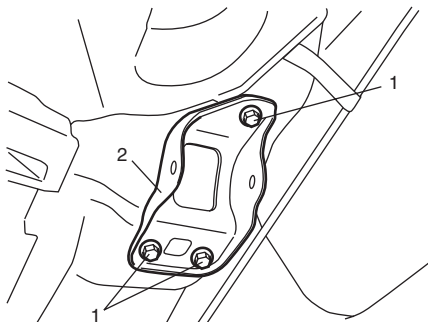

I5JB0A230028-02

Installation


- 1) Install trailing rod mount bracket and then tighten trailing rod mount bracket bolt to specified torque.

⚠ CAUTION

- Tighten the bolts in order of bolt (1), (2) and (3).
- Do not reuse removed trailing rod mount bracket bolt.

Tightening torque

Trailing rod mount bolt (a): 105 N·m (10.5 kgf-m, 76.0 lb-ft)

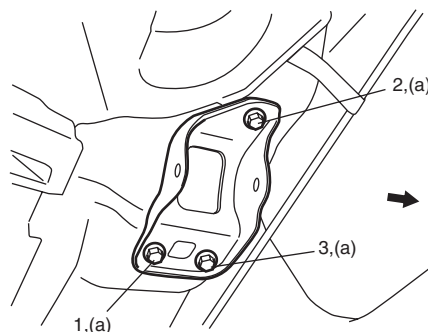


I6JB0B230003-02

I: Vehicle inner side

- 2) Install trailing rod (4).
 - a) Install trailing rod and insert trailing rod front bolt (1) from the body inside.
 - b) Insert trailing rod rear bolt (2).
 - c) Tighten trailing rod rear bolt (2) and trailing rod mount nut (3) temporarily by hand.


⚠ CAUTION

If trailing rod mount nut and rear bolt are reused, apply engine oil to thread, bearing and trunk surface.

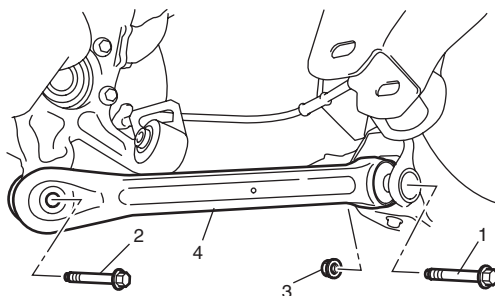

I5JB0A230030-01

- 3) Tighten air suction pipe bolts (1) to specified torque for 5door model only.

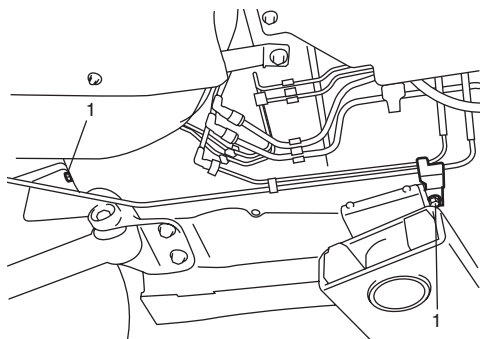

I5JB0A230026-01

- 4) Remove floor jack from lower arm.
5) Install rear wheels and lower hoist.
6) Tighten wheel nuts to specified torque.

Tightening torque

Wheel nut: 100 N·m (10.0 kgf-m, 72.5 lb-ft)

- 7) Tighten trailing rod mount nut and trailing rod rear bolt to specified torque with vehicle weight on suspension.

⚠ CAUTION

It is the most desirable to have vehicle off hoist and in non-loaded condition when tightening them.

Tightening torque

Trailing rod mount nut: 135 N·m (13.5 kgf-m, 98.0 lb-ft)

Trailing rod rear bolt: 135 N·m (13.5 kgf-m, 98.0 lb-ft)

- 8) Check rear toe and camber adjust it as necessary.
For check and adjustment procedures, refer to "Rear Wheel Alignment Inspection and Adjustment".

Trailing Rod / Bushing Disassembly and Assembly

S6JB0B2306012

Disassembly


 
- 1) Push out trailing rod bushing by using hydraulic press (1) and special tool.

⚠ CAUTION

Remove bushing following the direction shown in figure since diameter "b" is bigger than diameter "a".

Special tool

(A): 09945-56510

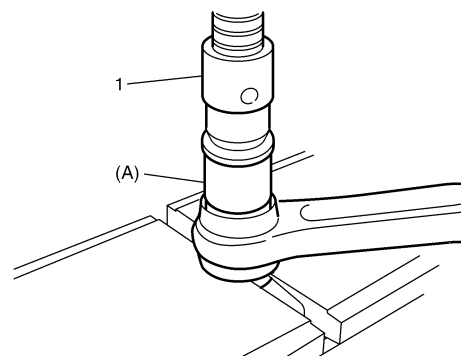

I5JB0A230031-03

2C-14 Rear Suspension:

Assembly


- 1) Press-fit trailing rod bushing (2) by using press (1) and special tool.

⚠ CAUTION

- Be sure to use new bushing.
- Install bushing following the direction shown in figure since diameter "b" is bigger than diameter "a".


Special tool

(A): 09945-56510

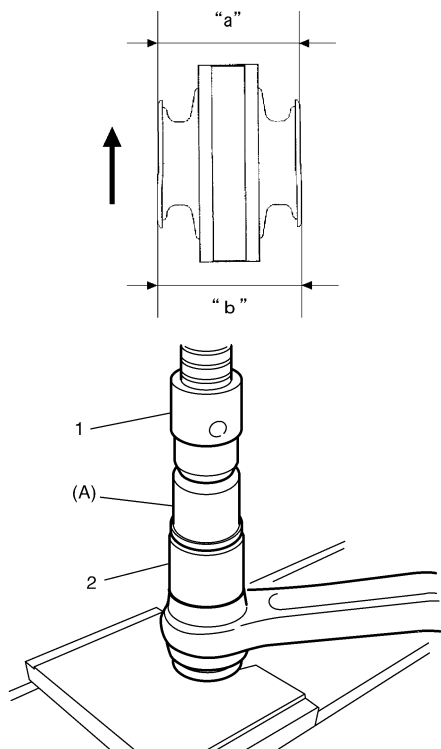

I5JB0A230079-02

- 2) Press-fit bushing (1) so that dimensions "A" and "B" in figure become equal.

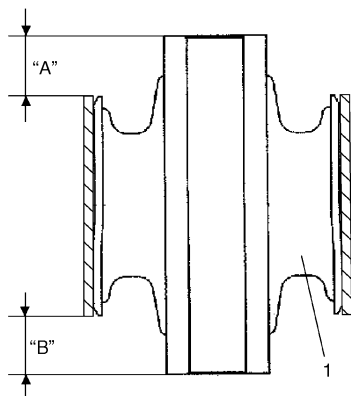


I5JB0A230032-02

Trailing Rod Check

S6JB0B2306013

- Inspect for cracks, deformation or damage.
 - Inspect bushing for wear and breakage.
- If any faulty condition is found, replace.

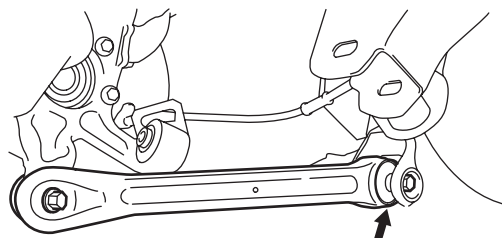


I5JB0A230033-01

Lower Arm Removal and Installation


S6JB0B2306014

- 1) Hoist vehicle and remove rear wheels.
- 2) Put match marks (1) on lower arm washer (2) and on suspension frame (3) to install the bolts correctly in position.
- 3) Loosen lower arm mount nut (4).

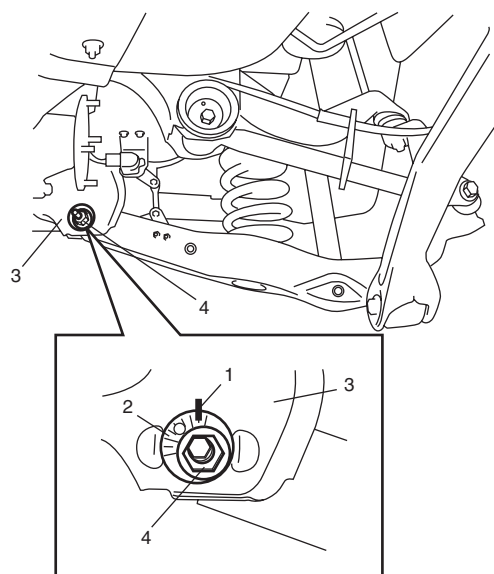

I5JB0A230010-01

- 4) Remove rear coil spring referring to "Rear Coil Spring and Bump Stopper Removal and Installation".
- 5) Remove suspension rod mount bolt (1) and then lower arm (2).

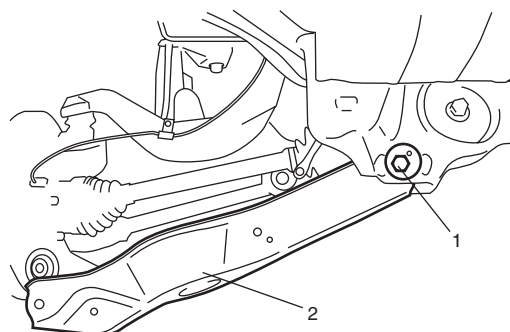


I5JB0A230034-01

Installation

- 1) Install lower arm.
 - a) Install lower arm (1) to rear suspension frame.
 - b) Insert suspension lower arm inner bolt (2) from the vehicle rearward.
 - c) Install lower arm washer (3) with its graduated part facing up.
 - d) The marks (4) on lower arm washer (3) and rear suspension frame marked before its removal must be aligned and, tighten bolt and nut temporarily by hand.

⚠ CAUTION

If lower arm mount nut and lower arm outer bolt are reused, apply engine oil to thread, bearing and trunk surface.

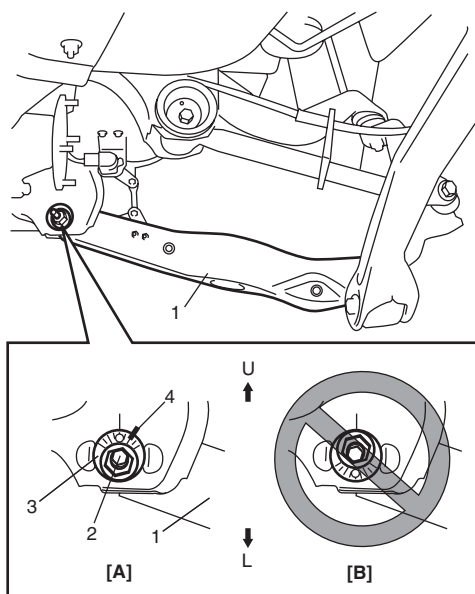

I5JB0A230035-02

[A]: Correct	U: Upper side
[B]: Wrong	L: Lower side

- 2) Install rear coil spring referring to "Rear Coil Spring and Bump Stopper Removal and Installation".
- 3) Install wheel with nuts and lower vehicle.
- 4) Tighten wheel nuts to specified torque.

Tightening torque

Wheel nut: 100 N·m (10.0 kgf-m, 72.5 lb-ft)

- 5) Tighten lower arm outer bolt and lower arm mount nut, shock absorber bolts to specified torque with vehicle weight on suspension.

⚠ CAUTION

- It is the most desirable to have vehicle off hoist and in non-loaded condition when tightening them.
- Tighten lower arm washer with match marks aligned.

Tightening torque

Lower arm outer bolt: 135 N·m (13.5 kgf-m, 98.0 lb-ft)

Lower arm mount nut: 135 N·m (13.5 kgf-m, 98.0 lb-ft)

Shock absorber upper bolt: 60 N·m (6.0 kgf-m, 43.5 lb-ft)

Shock absorber lower bolt: 90 N·m (9.0 kgf-m, 65.0 lb-ft)

- 6) Check rear toe and camber adjust it as necessary. For check and adjustment procedures, refer to "Rear Wheel Alignment Inspection and Adjustment".
- 7) Adjust headlight auto leveling system, refer to "Initialization of Auto Leveling Headlight System in Section 9B".

Lower Arm / Bushing Disassembly and Assembly


S6JB0B2306015

Disassembly

- 1) Push out suspension lateral link bushing by using hydraulic press (1) and special tool.

Special tool

(A): 09913-84510

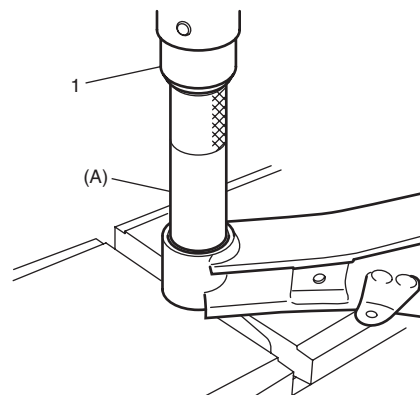

I5JB0A230036-02

2C-16 Rear Suspension:

Assembly


- 1) Press-fit suspension lateral link bushing (2) by using press (1) and special tool.

CAUTION

Be sure to use new bushing.


Special tool

(A): 09913-85210

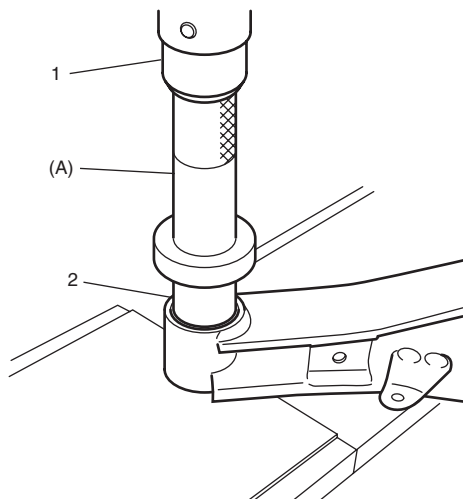

I5JB0A230083-01

- 2) Press-fit bushing (1) so that dimension "A" and "B" in figure become equal.

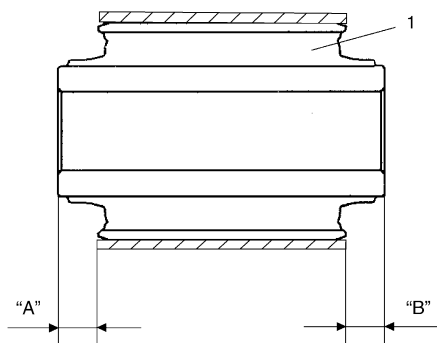


I5JB0A230037-02

Lower Arm Check

S6JB0B2306016

- Inspect for cracks, deformation or damage.
 - Inspect bushing for wear and breakage.
- If any faulty condition is found, replace.

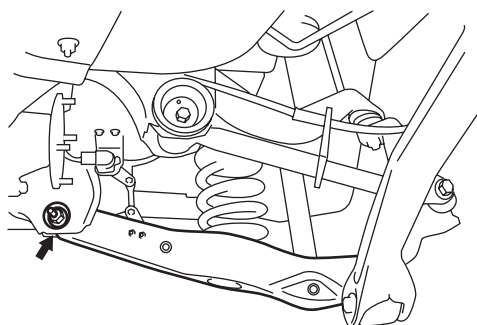


I5JB0A230038-01

Upper Arm Removal and Installation

S6JB0B2306017


Removal

- 1) Hoist vehicle and remove rear wheels.
- 2) Remove control rod refer to "Control Rod Removal and Installation".
- 3) Remove trailing rod refer to "Trailing Rod Removal and Installation".
- 4) Remove lower arm refer to "Lower Arm Removal and Installation".
- 5) Remove rear suspension knuckle refer to "Rear Suspension knuckle Removal and Installation".
- 6) Remove wheel sensor bolts (1) from upper arm (2).

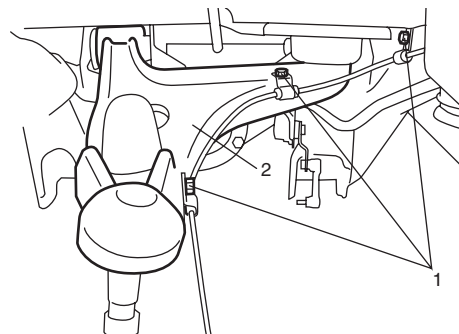

I5JB0A230039-01

- 7) Remove upper arm bolts (1) and then upper arm (2).

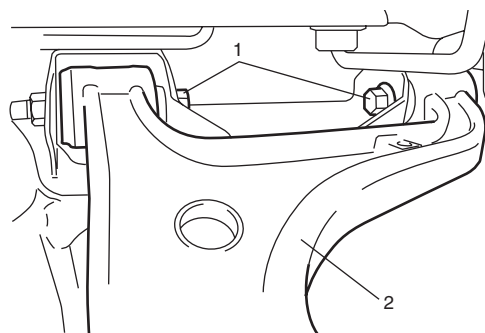


I5JB0A230040-01

Installation

- 1) Install upper arm.
 - a) Install upper arm (2) to rear suspension frame.
 - b) Insert upper arm bolt (1) from the upper arm inside.
 - c) Tighten upper arm mount nuts (3) temporarily by hand.

⚠ CAUTION

If upper arm mount nut is reused, apply engine oil to thread and bearing.

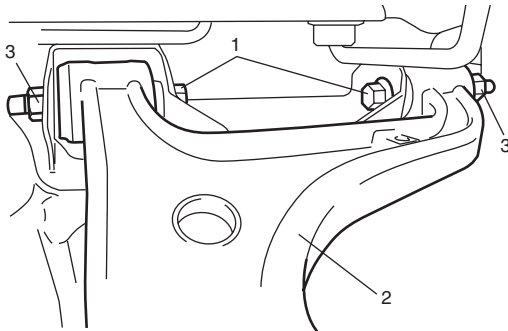


I5JB0A230041-01

- 2) Tighten wheel sensor bolts (1) to specified torque.

Tightening torque

Wheel sensor bolt (a): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

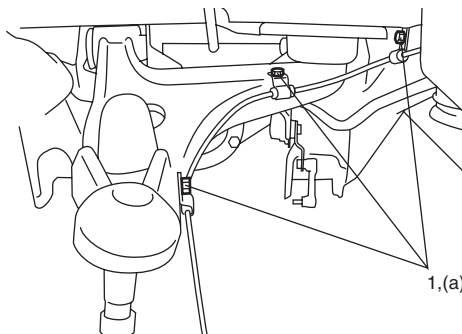

I5JB0A230042-01

- 3) Install rear suspension knuckle refer to "Rear Suspension knuckle Removal and Installation".
- 4) Install trailing rod refer to "Trailing Rod Removal and Installation".
- 5) Install control rod refer to "Control Rod Removal and Installation".
- 6) Install lower arm refer to "Lower Arm Removal and Installation".
- 7) Install rear wheels and lower hoist.
- 8) Tighten wheel nuts to specified torque.

Tightening torque

Wheel nut: 100 N·m (10.0 kgf-m, 72.5 lb-ft)

- 9) Tighten each bolts and nuts to specified torque with vehicle weight on suspension.

⚠ CAUTION

- It is the most desirable to have vehicle off hoist and in non-loaded condition when tightening them.
- Tighten lower arm washer and control rod washer with match marks aligned.

Tightening torque

Upper arm mount nut: 135 N·m (13.5 kgf-m, 98.0 lb-ft)

Shock absorber upper bolt: 60 N·m (6.0 kgf-m, 43.5 lb-ft)

Shock absorber lower bolt: 90 N·m (9.0 kgf-m, 65.0 lb-ft)

Lower arm outer bolt: 135 N·m (13.5 kgf-m, 98.0 lb-ft)

Lower arm mount nut: 135 N·m (13.5 kgf-m, 98.0 lb-ft)

Control rod outer bolt: 135 N·m (13.5 kgf-m, 98.0 lb-ft)

Control rod mount nut: 135 N·m (13.5 kgf-m, 98.0 lb-ft)

Trailing rod rear bolt: 135 N·m (13.5 kgf-m, 98.0 lb-ft)

Trailing rod mount nut: 135 N·m (13.5 kgf-m, 98.0 lb-ft)

- 10) Check rear toe and camber adjust it as necessary. For check and adjustment procedures, refer to "Rear Wheel Alignment Inspection and Adjustment".
- 11) Adjust headlight auto leveling system, refer to "Initialization of Auto Leveling Headlight System in Section 9B".

Upper Arm / Bushing Disassembly and Assembly



S6JB0B2306018

Disassembly

- 1) Cut rubber (1) of flange of upper arm bushing.
- 2) Using grinder (2), grind off flange (3) of upper arm bushing.

⚠ CAUTION

Be careful not to damage upper arm (4) when grinding flange (3) of upper arm bushing with grinder.

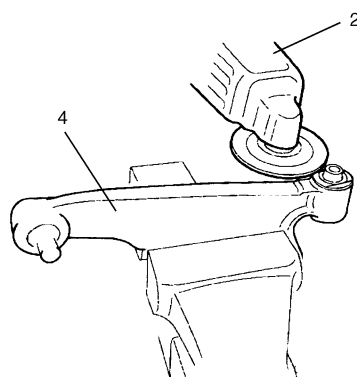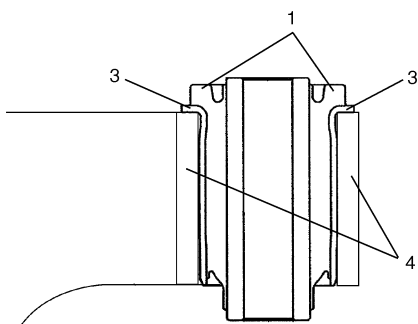


I5JB0A230043-01

- 3) Push out upper arm bushing by using hydraulic press (1) and special tool.

Special tool

(A): 09913-68711

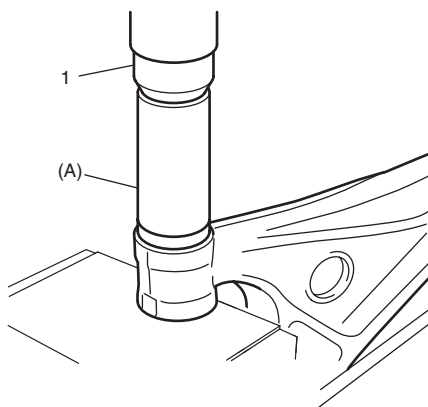

I5JB0A230044-02

Assembly

⚠ CAUTION

Apply grease (included in the repair kit) to ball joint and inside of ball stud boot when the ball stud boot is replaced.


- 1) Press-fit upper arm bushing (2) by using press (1) and special tool.

⚠ CAUTION

Be sure to use new bushing.

Special tool

(A): 09913-75510

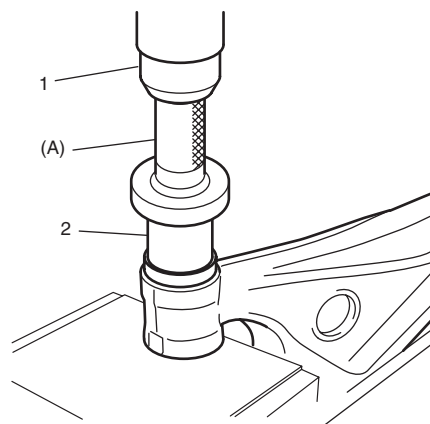


I5JB0A230084-01

Upper Arm Check

S6JB0B2306019


- Inspect for cracks, deformation or damage.
 - Inspect bushing for wear and breakage.
- If any faulty condition is found, replace.

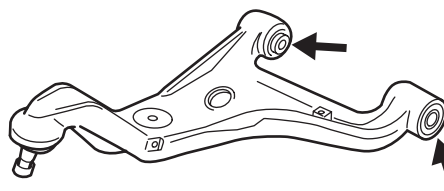

I5JB0A230045-01

Rear Suspension Frame Components

S6JB0B2306020

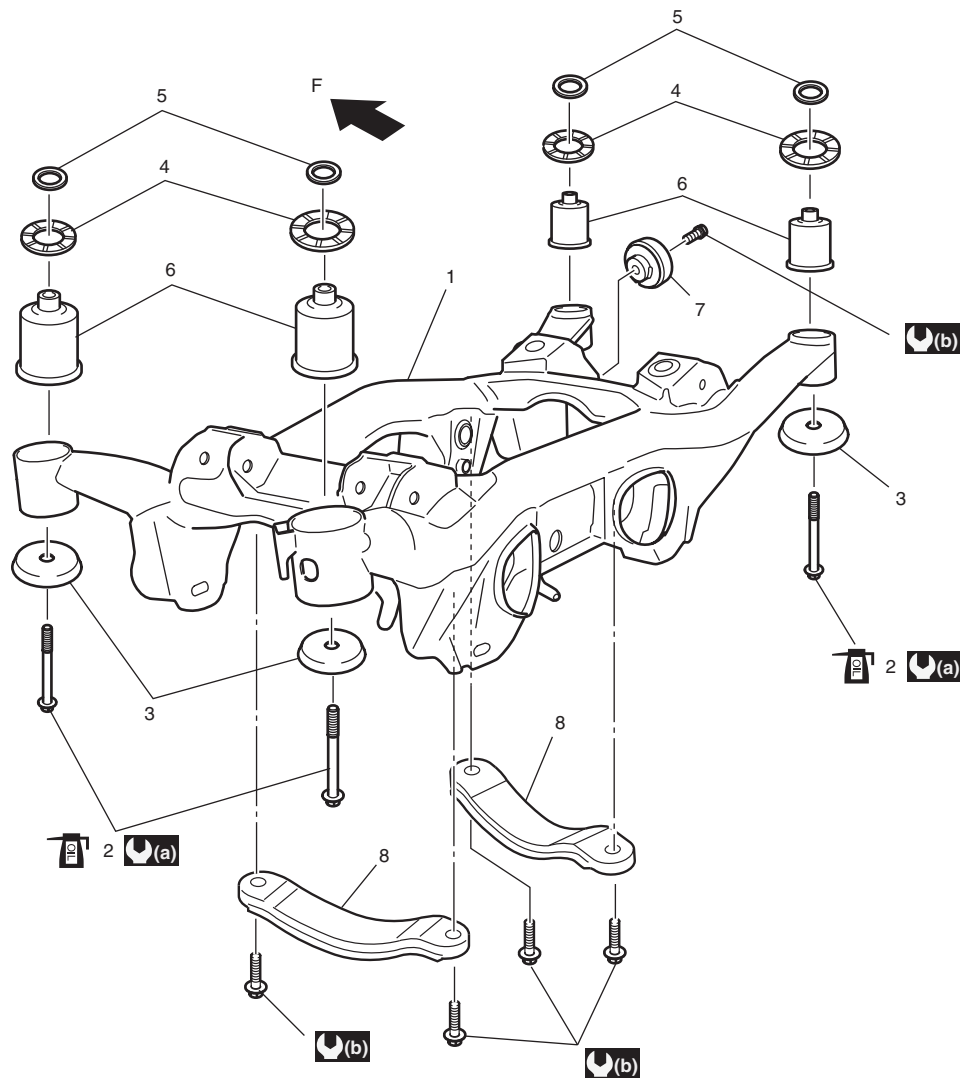

I6JB0B230004-01

F: Vehicle forward	5. Upper mount stopper washer	10. Dynamic damper bolt
1. Rear suspension frame	6. Rear suspension frame busing	(a) : 135 N·m (13.5 kgf-m, 98.0 lb-ft)
2. Rear suspension frame mount bolt :If reuse bolt, apply engine oil to thread.	7. Dynamic damper	(b) : 50 N·m (5.0 kgf-m, 36.5 lb-ft)
3. Rear suspension frame mount washer	8. Stiffener	
4. Rear suspension frame mount stopper	9. Rear suspension frame stiffener bolt	

Rear Suspension Frame Removal and Installation


S6JB0B2306021

⚠ WARNING

When removing and installing rear suspension frame, be sure to apply some supporting equipment under it at well-balanced position in the center to prevent from its drop.

Removal


- 1) Hoist vehicle and remove rear wheels.
- 2) Remove muffler and exhaust center pipe referring to "Exhaust System Components in Section 1K".
- 3) To facilitate reinstallation, put match marks (1) on rear propeller shaft flange and differential flange. Disconnect rear propeller shaft from differential.

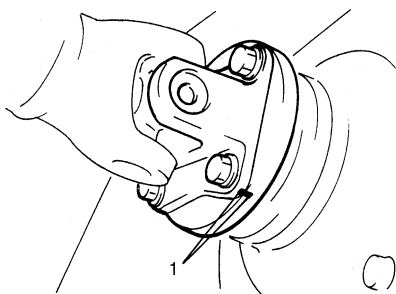

I3RH01232006-01


- 4) Remove rear wheel hub assembly referring to "Rear Wheel Hub Assembly Removal and Installation".
- 5) Remove control rod referring to "Control Rod Removal and Installation".
- 6) Remove trailing rod referring to "Trailing Rod Removal and Installation".
- 7) Remove lower arm referring to "Lower Arm Removal and Installation".
- 8) Remove rear drive shaft referring to "Rear Drive Shaft Assembly Removal and Installation: Rear in Section 3A".
- 9) Remove rear suspension knuckle referring to "Rear Suspension knuckle Removal and Installation".
- 10) Remove upper arm referring to "Upper Arm Removal and Installation".

- 11) Remove parking cable clamp bolt (1) and parking cable clamp (2).

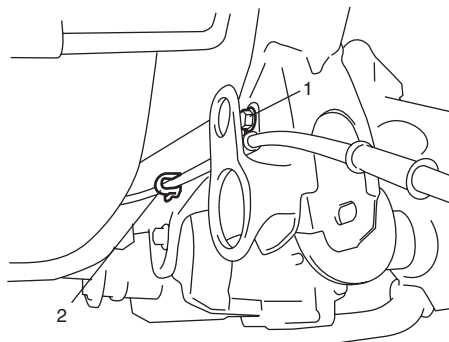


I5JB0A230047-01

- 12) Remove wheel sensor bolt (1) and ABS wheel sensor harness clamp (2) (if equipped).
- 13) Disconnect rear height sensor connector (3) and rear height sensor harness clamp (4) (if equipped) for left side.

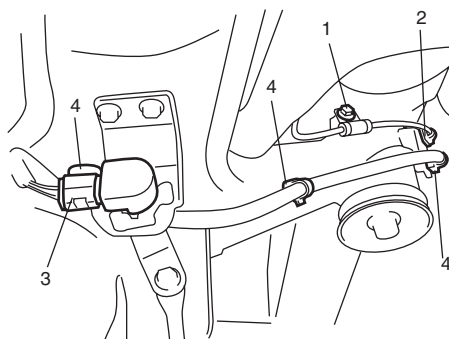


I5JB0A230048-01

- 14) Support rear suspension frame with rear differential by using mission jack (1).

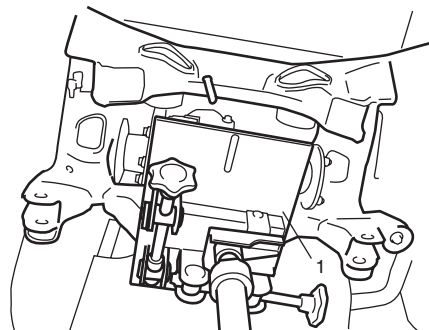

I5JB0A230049-01

- 15) Remove rear suspension frame mount bolts (1) and washer (2) and then lower mission jack and remove rear suspension frame (3) with rear differential and rear suspension frame stopper (4).

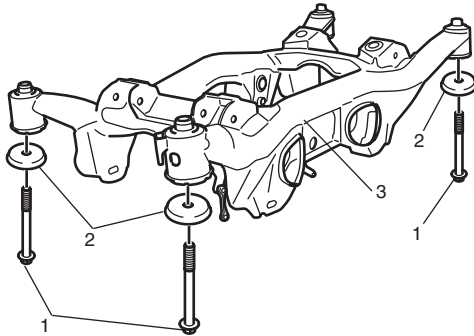

I5JB0A230050-03

- 16) Dismounting rear differential from rear suspension frame referring to "Rear Differential Unit Components: Rear in Section 3B".

Installation


- 1) Remounting rear differential to rear suspension frame referring to "Rear Differential Unit Components: Rear in Section 3B".
- 2) Support rear suspension frame with rear differential by using mission jack, and jack up it.
- 3) Install rear suspension frame (3) to vehicle body and tighten rear suspension frame mount bolts (1) with washer (2) to specified torque.

⚠ CAUTION

If suspension frame mount bolts are reused, apply engine oil to thread, bearing and trunk surface.

Tightening torque

Rear suspension frame mount bolt (a): 135 N·m (13.5 kgf-m, 98.0 lb-ft)

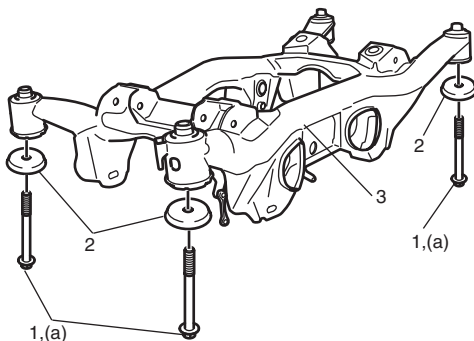


I5JB0A230051-02

- 4) Connect rear height sensor connector (3) and rear height sensor harness clamp (4) (if equipped) for left side.
- 5) Tighten wheel sensor bolt (1) to specified torque and then connect ABS wheel sensor harness clamp (2) (if equipped).

Tightening torque

Wheel sensor bolt (a): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

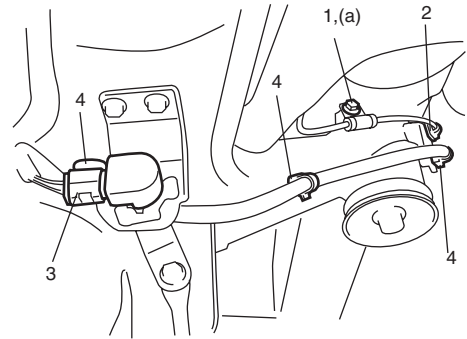


I5JB0A230052-01

- 6) Tighten parking cable clamp bolt (1) to specified torque and then connect parking cable clamp (2).

Tightening torque

Parking cable clamp bolt (a): 25 N·m (2.5 kgf-m, 18.0 lb-ft)

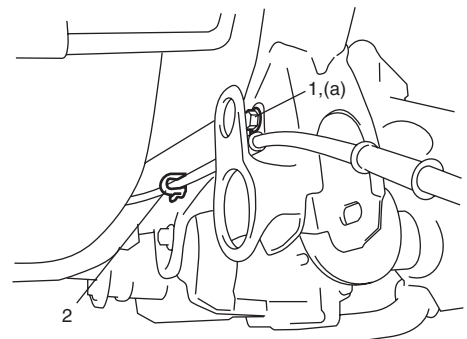

I5JB0A230053-01

- 7) Install upper arm referring to "Upper Arm Removal and Installation".
- 8) Install rear suspension knuckle referring to "Rear Suspension knuckle Removal and Installation".
- 9) Install rear drive shaft referring to "Rear Drive Shaft Assembly Removal and Installation: Rear in Section 3A".
- 10) Install lower arm referring to "Lower Arm Removal and Installation".
- 11) Install trailing rod referring to "Trailing Rod Removal and Installation".

2C-22 Rear Suspension:

- 12) Install control rod referring to "Control Rod Removal and Installation" "Control Rod Removal and Installation".
- 13) Install rear wheel hub assembly referring to "Rear Wheel Hub Assembly Removal and Installation".
- 14) Connect rear propeller shaft to differential aligning match marks on flanges. Tighten bolts and nuts to specified torque. Refer to "Propeller Shaft Removal and Installation in Section 3D".
- 15) Install exhaust muffler and exhaust center pipe referring to "Exhaust System Components in Section 1K".
- 16) Fill reservoir with brake fluid and bleed brake system. Refer to "Air Bleeding of Brake System in Section 4A".
- 17) Upon completion of all jobs, depress brake pedal with about 30 kg (66 lbs) load a few times so as to obtain proper drum-to-shoe clearance. Adjust parking brake cable. Refer to "Parking Brake Check and Adjustment in Section 4D".
- 18) Install rear wheels.
- 19) Check to ensure that brake drum is free from dragging and proper braking is obtained.
- 20) Lower hoist and tighten rear wheel bolts to specified torque.

Tightening torque

Wheel nut: 100 N·m (10.0 kgf-m, 72.5 lb-ft)

- 21) Bounce vehicle up and down to stabilize suspension.
- 22) Tighten each bolts and nuts to specified torque with vehicle weight on suspension.

NOTE

It is the most desirable to have vehicle off hoist and in non-loaded condition when tightening them.

- 23) Perform brake test (foot brake and parking brake).
- 24) Check each installed part for fluid leakage.
- 25) Check rear toe and camber and adjust it if necessary. For check and adjustment procedures, refer to "Rear Wheel Alignment Inspection and Adjustment".
- 26) Adjust headlight auto leveling system, referring to "Initialization of Auto Leveling Headlight System in Section 9B".

Rear Suspension frame / Bushing Disassembly and Assembly


S6JB0B2306022

Disassembly

- 1) Cut rubber (1) of flange of rear suspension frame bushing.
- 2) Using grinder (2), grind off flange (3) of upper arm bushing.

⚠ CAUTION

Be careful not to damage rear suspension frame bushing (4) when grinding flange (3) of upper arm bushing with grinder.

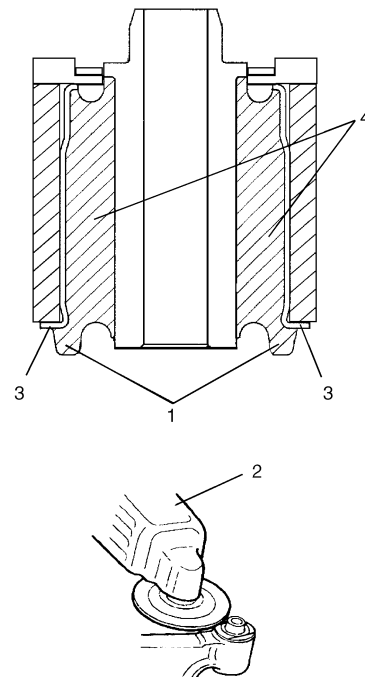


I5JB0A230054-02

- 3) Push out rear suspension frame bushing by using hydraulic press (1) and special tool.

Special tool

(A): 09913-75520

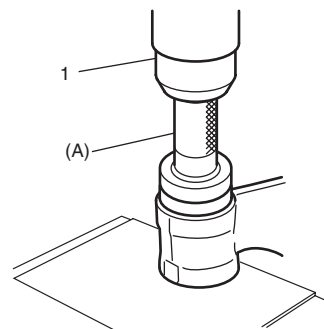

I5JB0A230055-02

Assembly


- 1) Press-fit rear suspension frame bushing (2) by using press (1) and special tool.

⚠ CAUTION

Be sure to use new bushing.

Special tool

(A): 09913-75510

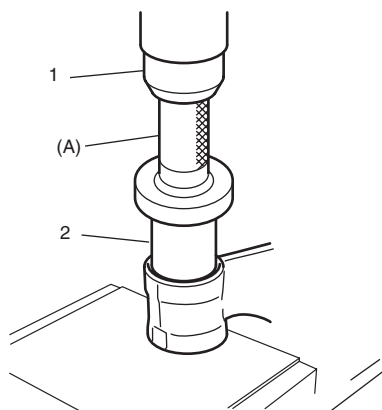

I5JB0A230085-01

- 2) Install rear suspension frame stopper (3) to rear suspension frame bushing (1) and press-fit upper mount stopper washer (2) by using press with bearing installer.


⚠ CAUTION

Be sure to use new upper mount stopper washer and rear suspension frame stopper.

NOTE

Use bearing installer in dimensions of outer diameter 43.0 to 49.0 mm (1.69 to 1.92 in.), inner diameter 41.0 mm (1.61 in.) or more and length 21.0 mm (0.82 in.) or more.

Clearance "a" between washer and bushing
"a": 1.5 mm (0.059 in.)

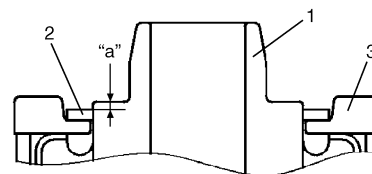


I5JB0A230080-01

Rear Suspension Frame, Bushing and Pad Check

S6JB0B2306023


Inspect for cracks, deformation or damage. If any faulty condition is found, replace.

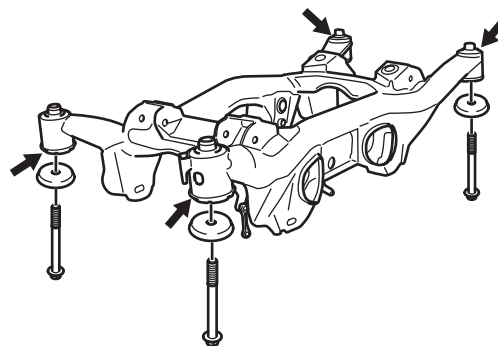

I5JB0A230056-02

Rear Wheel Hub Assembly and Rear Suspension Knuckle Components

S6JB0B2306024

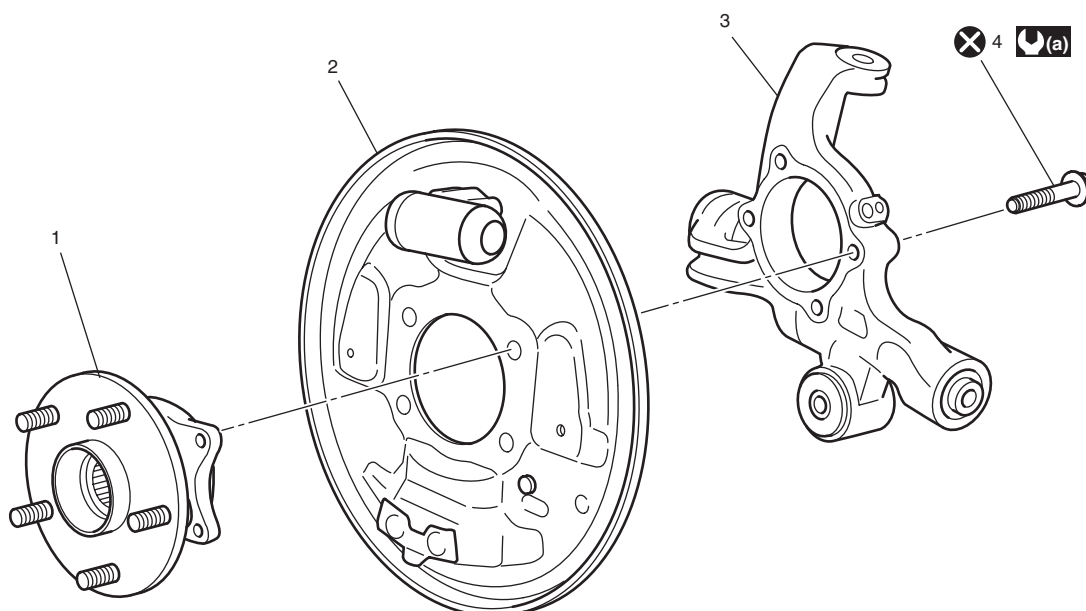

I6JB0B230005-01


1. Rear wheel hub assemble	3. Rear suspension knuckle	: 50 N·m (5.0 kgf-m, 36.5 lb-ft)
2. Back plate	4. Rear wheel hub housing bolt	: Do not reuse.

Rear Wheel Hub Assembly Removal and Installation

S6JB0B2306025


Removal

- 1) Hoist vehicle and remove rear wheels.
- 2) Uncaulk rear axle nut (1).
- 3) Pull up parking brake lever fully and remove rear axle nut (1).

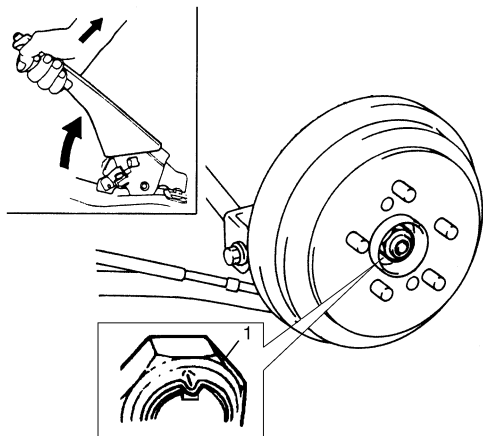


I5JB0A230058-01

- 4) Remove rear brake shoe referring to "Rear Brake Shoe Removal and Installation in Section 4C".
- 5) Disconnect brake pipe (1) from wheel cylinder (2) and put wheel cylinder bleeder plug cap (3) onto pipe to prevent fluid from spilling.

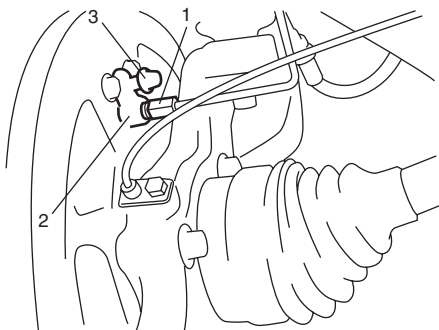


I5JB0A230059-01

- 6) Loosen parking cable cap nut (1).

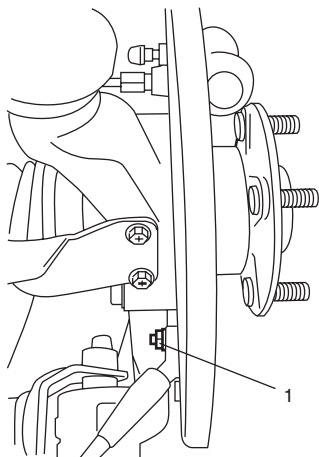

I5JB0A230060-01

- 7) Removal rear wheel hub housing bolts (1) and then remove rear wheel hub assembly and back plate.

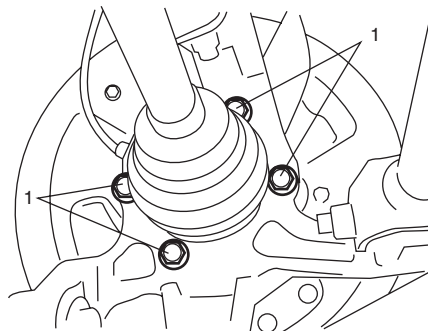

I5JB0A230061-01

- 8) Refer to Step 7) of "Front Wheel Hub Assembly Removal and Installation in Section 2B" to remove hub bolts since the rear wheel hub assembly is the same as the front wheel hub assembly.


Installation

- 1) Refer to Step 1) of "Front Wheel Hub Assembly Removal and Installation in Section 2B" to install hub bolts since the rear wheel hub assembly is the same as the front wheel hub assembly.
- 2) Apply grease to end face of inner ring (2) before rear wheel hub (1) installation.

⚠ CAUTION

Do not apply the grease to the encoder section to avoid the encoder malfunction.

"A": Grease 99000-25010 (SUZUKI Super Grease A)

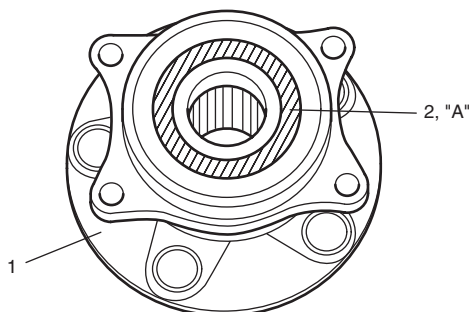


I5JB0A220018-01

- 3) Install rear wheel assembly and back plate to rear suspension knuckle and tighten rear wheel hub housing bolts (1) to specified torque.

Tightening torque

Rear wheel hub housing bolt (a): 50 N·m (5.0 kgf-m, 36.5 lb-ft)

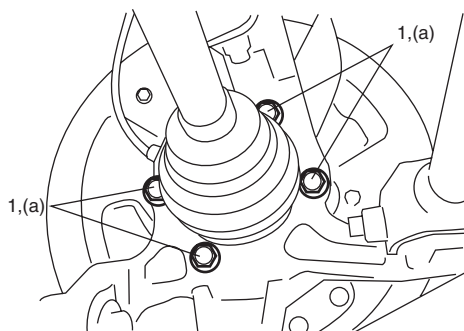


I5JB0A230062-01

- 4) Tighten parking cable cap nut (1) to specified torque.

Tightening torque

Parking cable cap nut (a): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

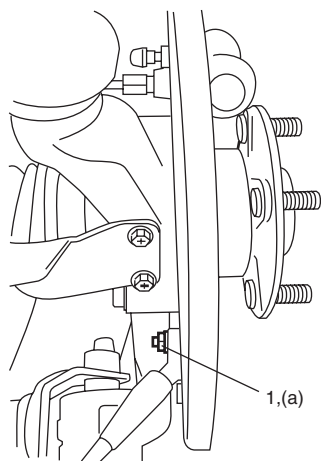


I5JB0A230063-01

- 5) Connect brake pipe (1) to wheel cylinder (2) and tighten brake pipe flare nut (1) to specified torque and install bleeder plug cap (3) taken off pipe back to bleeder plug.

Tightening torque

Brake pipe flare nut (a): 16 N·m (1.6 kgf-m, 11.5 lb-ft)

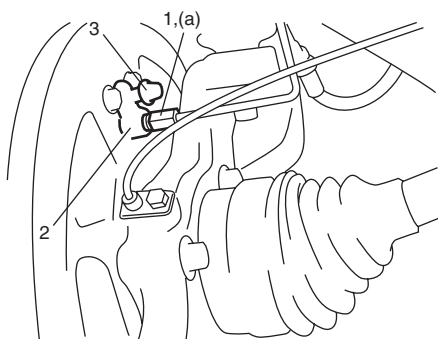

I5JB0A230064-01

- 6) Install rear break shoe referring to "Rear Brake Shoe Removal and Installation in Section 4C".
- 7) Pull up parking brake lever fully and tighten new rear axle nut (1) to specified torque.


Tightening torque

Rear axle nut (a): 220 N·m (22.0 kgf-m, 159.5 lb-ft)

- 8) Caulk rear axle nut (1).

⚠ CAUTION

Be careful while calking nut so that no crack will occur in calked part of nut. Cracked nut must be replaced with new one.

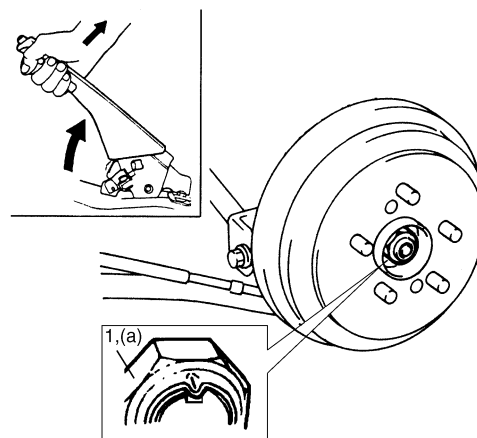

I5JB0A230065-01

- 9) Fill reservoir with brake fluid and bleed brake system. Refer to "Air Bleeding of Brake System in Section 4A".
- 10) Upon completion of all jobs, depress brake pedal with about 30 kg (66 lbs) load a few times so as to obtain proper drum-to-shoe clearance. Adjust parking brake cable. Refer to "Parking Brake Check and Adjustment in Section 4D".
- 11) Install rear wheels.
- 12) Check to ensure that brake drum is free from dragging and proper braking is obtained.
- 13) Lower hoist and tighten rear wheel bolts to specified torque.

Tightening torque


Wheel nut: 100 N·m (10.0 kgf-m, 72.5 lb-ft)

- 14) Perform brake test (foot brake and parking brake).
- 15) Check each installed part for fluid leakage.

Rear Wheel Hub Assembly, Wheel Bearing and Wheel Stud Inspection

S6JB0B2306026

- Wheel bearing and wheel hub form a solid unit.
- When wheel bearing is found defective and its replacement is necessary, replace hub assembly.

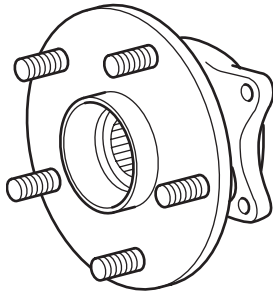

I5JB0A230066-01


Rear Wheel Disc, Nut and Bearing Check

S6JB0B2306027

- Inspect each wheel disc for dents, distortion and cracks.
A disc in badly damaged condition must be replaced.
- Check wheel nuts for tightness and, as necessary, retighten to specification.

Tightening torque

Wheel nut (a): 100 N·m (10.0 kgf-m, 72.5 lb-ft)

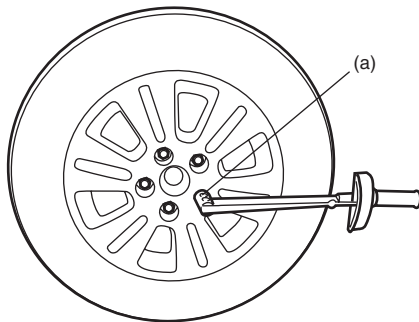


I5JB0A220029-01

- Check wheel bearings for wear. When measuring thrust play, apply a dial gauge to spindle cap center. If thrust play exceeds limit, replace bearing.


Rear wheel bearing thrust play "a"

Limit: 0.1 mm (0.004 in.)

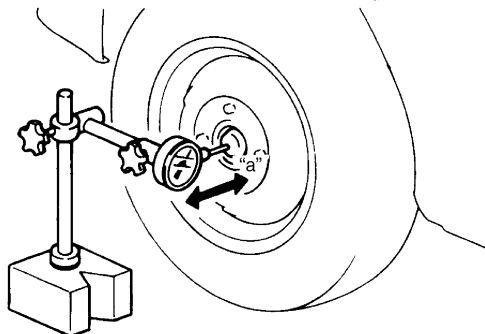

I2RH01230011-01

- By rotating wheel actually, check wheel bearing for noise and smooth rotation. If it is defective, replace bearing.

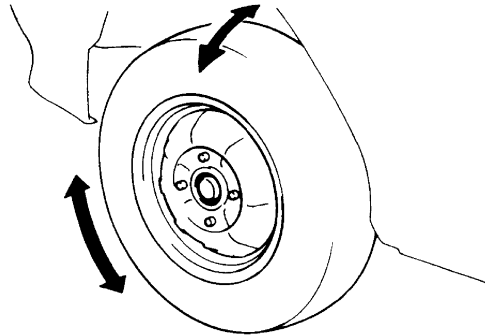


I2RH01230012-01

Rear Suspension knuckle Removal and Installation

S6JB0B2306028


Removal

- 1) Hoist vehicle and remove rear wheels.
- 2) Remove rear wheel hub assembly referring to "Rear Wheel Hub Assembly Removal and Installation".
- 3) Remove wheel sensor (1).

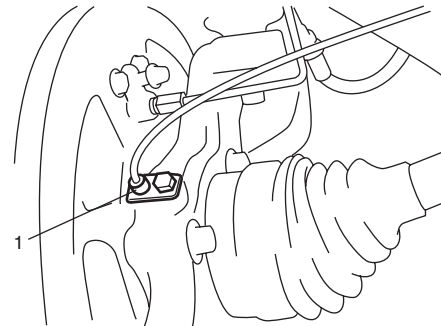

I5JB0A230067-01

- 4) Loosen rear brake hose bracket bolt (1).

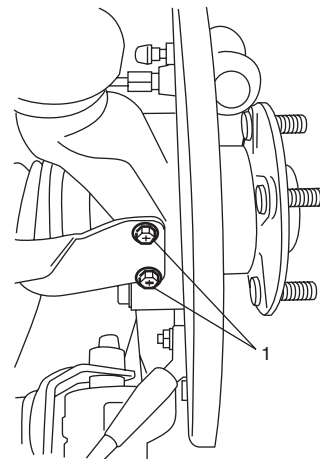


I5JB0A230068-01

- 5) Support lower arm with jack.
- 6) Loosen control rod outer bolt, trailing rod rear bolt and lower arm outer bolt referring to the figure in "Rod and Arm Components".
- 7) Disconnect upper arm joint from rear suspension knuckle (1) with puller (2) and remove rear suspension knuckle.

NOTE

Do not remove upper arm joint nut (3) to avoid the rear suspension knuckle fall off.

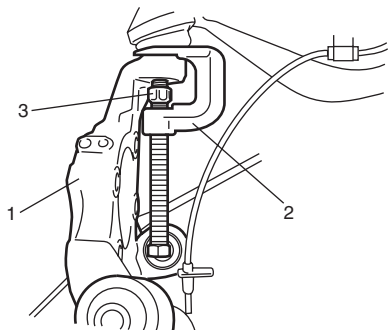

I5JB0A230072-01

Installation


- 1) Connect upper arm joint (2) to rear suspension knuckle (1).
- 2) Tighten new upper arm joint nut (3) to specified torque.

CAUTION

Do not reuse removed upper arm joint nut.

Tightening torque

Upper arm joint nut (a): 55 N·m (5.5 kgf-m, 40.0 lb-ft)

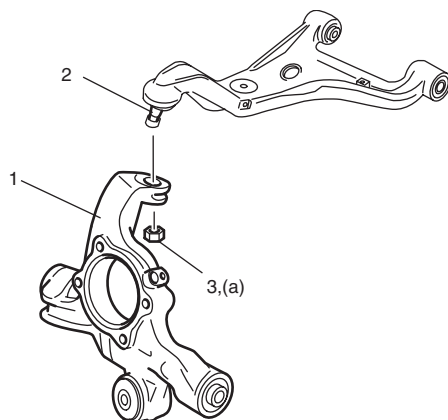

I5JB0A230073-01

- 3) Install lower arm, trailing rod and control rod to rear suspension knuckle referring to the figure in "Rod and Arm Components" and tighten bolts temporarily by hand.


CAUTION

If reuse lower arm outer bolt, trailing rod rear bolt and control rod outer bolt, apply engine oil to thread, bearing and trunk surface.

- 4) Remove floor jack from lower arm.
- 5) Install rear brake hose bracket (1) and then tighten rear brake hose bracket bolt (2) to specified torque.

Tightening torque

Rear brake hose bracket bolt (a): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

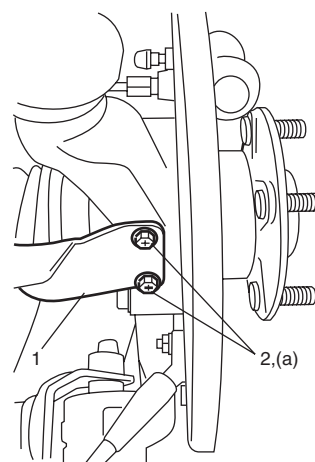


I5JB0A230074-01

- 6) Install wheel sensor (1) and then tighten wheel sensor bolt (2) to specified torque.

Tightening torque

Wheel sensor bolt (a): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

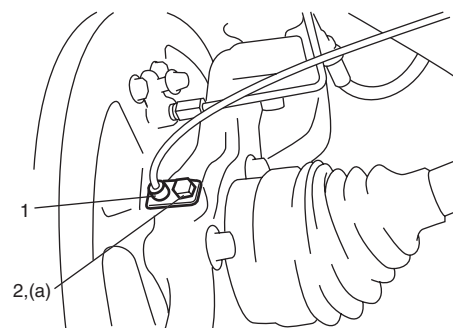

I5JB0A230075-01

2C-28 Rear Suspension:

- 7) Install rear wheel hub assembly referring to "Rear Wheel Hub Assembly Removal and Installation".
- 8) Fill reservoir with brake fluid and bleed brake system. Refer to "Air Bleeding of Brake System in Section 4A".
- 9) Upon completion of all jobs, depress brake pedal with about 30 kg (66 lbs) load a few times so as to obtain proper drum-to-shoe clearance. Adjust parking brake cable. Refer to "Parking Brake Check and Adjustment in Section 4D".
- 10) Install rear wheels.
- 11) Check to ensure that brake drum is free from dragging and proper braking is obtained.
- 12) Lower hoist and tighten rear wheel bolts to specified torque.

Tightening torque

Wheel nut: 100 N·m (10.0 kgf-m, 72.5 lb-ft)

- 13) Bounce vehicle up and down to stabilize suspension.
- 14) Tighten each bolts to specified torque with vehicle weight on suspension.

NOTE

It is the most desirable to have vehicle off hoist and in non-loaded condition when tightening them.

Tightening torque

Lower arm outer bolt: 135 N·m (13.5 kgf-m, 98.0 lb-ft)

Trailing rod rear bolt: 135 N·m (13.5 kgf-m, 98.0 lb-ft)


Control rod outer bolt: 135 N·m (13.5 kgf-m, 98.0 lb-ft)

- 15) Perform brake test (foot brake and parking brake).
- 16) Check each installed part for fluid leakage.
- 17) Check rear toe and camber adjust it as necessary. For check and adjustment procedures, refer to "Rear Wheel Alignment Inspection and Adjustment".

Rear Suspension Knuckle Check

S6JB0B2306029

- Inspect for cracks, deformation or damage.
- Inspect bushing for damage, wear or breakage. If any faulty condition is found, replace rear suspension knuckle assembly.

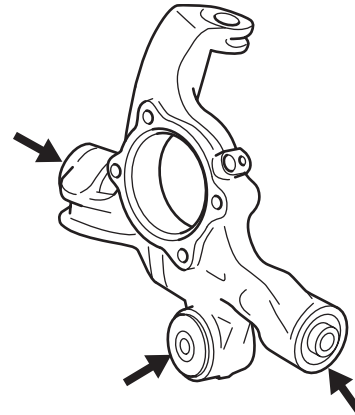

I5JB0A230078-01

Rear Suspension Fasteners Check

S6JB0B2306030

Check each bolt and nut fastening suspension parts for tightness. Tighten loose one, if any, to specified torque referring to the figure in "Rear Suspension Construction".

Tightening Torque Specifications

Fastening part	Tightening torque			Note
	N·m	kgf·m	lb·ft	
Control rod mount nut	135	13.5	98.0	🔩 / 🔩 / 🔩
Lower arm mount nut	135	13.5	98.0	🔩 / 🔩 / 🔩 / 🔩
Shock absorber upper bolt	60	6.0	43.5	🔩 / 🔩 / 🔩 / 🔩
Shock absorber lower bolt	90	9.0	65.0	🔩 / 🔩 / 🔩 / 🔩
Wheel nut	100	10.0	72.5	🔩 / 🔩 / 🔩 / 🔩 / 🔩 / 🔩 / 🔩 / 🔩 / 🔩 / 🔩 / 🔩
Bump stopper	50	5.0	36.5	🔩
Lower arm outer bolt	135	13.5	98.0	🔩 / 🔩 / 🔩 / 🔩
Parking cable hanger bolt	10	1.0	7.5	🔩
Control rod outer bolt	135	13.5	98.0	🔩 / 🔩 / 🔩
Trailing rod mount bolt	105	10.5	76.0	🔩
Trailing rod mount nut	135	13.5	98.0	🔩 / 🔩
Trailing rod rear bolt	135	13.5	98.0	🔩 / 🔩 / 🔩
Wheel sensor bolt	11	1.1	8.0	🔩 / 🔩 / 🔩
Upper arm mount nut	135	13.5	98.0	🔩
Rear suspension frame mount bolt	135	13.5	98.0	🔩
Parking cable clamp bolt	25	2.5	18.0	🔩
Rear wheel hub housing bolt	50	5.0	36.5	🔩
Parking cable cap nut	11	1.1	8.0	🔩
Brake pipe flare nut	16	1.6	11.5	🔩
Rear axle nut	220	22.0	159.5	🔩
Upper arm joint nut	55	5.5	40.0	🔩
Rear brake hose bracket bolt	11	1.1	8.0	🔩

The specified tightening torque is also described in the following.

“Rear Shock Absorber and Rear Coil Spring Components: ”

“Rear Suspension Frame Components: ”


“Rear Wheel Hub Assembly and Rear Suspension Knuckle Components: ”

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Special Tools and Equipment

Recommended Service Material

S6JB0B2308001

Material	SUZUKI recommended product or Specification		Note
Grease	SUZUKI Super Grease A	P/No.: 99000–25010	

NOTE

Required service material is also described in the following.

“Rear Suspension Construction: ”


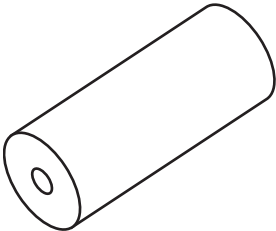




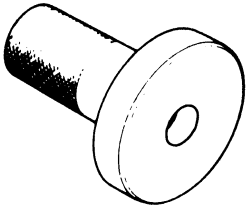












“Rear Shock Absorber and Rear Coil Spring Components: ”

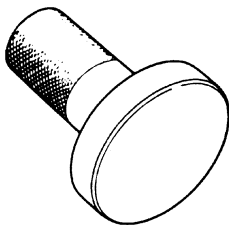“Rod and Arm Components: ”

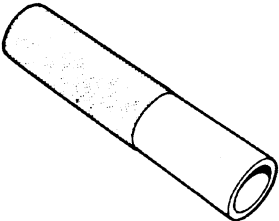“Rear Suspension Frame Components: ”

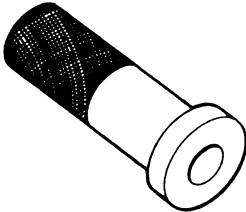Special Tool

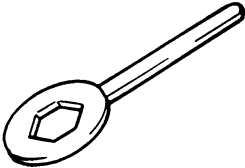S6JB0B2308002

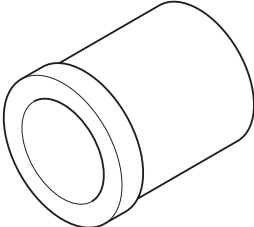09913–68711 Pinion bearing attachment  	09913–75510 Bearing installer  /  
09913–75520 Bearing installer  	09913–84510 Bearing installer  /  
09913–85210 Bearing installer  /  	09941–66010 Bump stopper rubber wrench  /  
09945–56510 Trailing rod bush remover  /  	

Wheels and Tires

General Description

Tires Description

S6JB0B2401001

The tire is of tubeless type. The tire is designed to operate satisfactorily with loads up to the full rated load capacity when inflated to the recommended inflation pressures.

Correct tire pressures and driving habits have an important influence on tire life. Heavy cornering, excessively rapid acceleration, and unnecessary sharp braking increase tire wear.

Tire Placard

The "Tire Placard" is located on the left or right door lock pillar and should be referred to tire information.

The placard lists the maximum load, tire size and cold tire pressure where applicable.

NOTE

Whether rim size and/or maximum load are listed or not depends on regulations of each country.

Inflation of Tires

The pressure recommended for any model is carefully calculated to give a satisfactory ride, stability, steering, tread wear, tire life and resistance to bruises.

Tire pressure, with tires cold, (after vehicle has set for 3 hours or more, or driven less than one mile) should be checked monthly or before any extended trip. Set to the specifications on the "Tire Placard" located on the left or right door lock pillar.

It is normal for tire pressure to increase when the tires become hot during driving.

Do not bleed or reduce tire pressure after driving.

Bleeding reduces the "Cold Inflation Pressure".

Higher than recommended pressure can cause:

- Hard ride
- Tire bruising or carcass damage
- Rapid tread wear at center of tire

Unequal pressure on same axle can cause:

- Uneven braking
- Steering lead
- Reduced handling
- Swerve on acceleration

Lower than recommended pressure can cause:

- Tire squeal on turns
- Hard Steering
- Rapid and uneven wear on the edges of the tread
- Tire rim bruises and rupture
- Tire cord breakage
- High tire temperature
- Reduced handling
- High fuel consumption

Matched Tires and Wheels (Steel Type)


Tires and wheels are match mounted at the assembly plant.

This means that the radially stiffest part of the tire, or "high spot", is matched to the smallest radius or "low spot" of the wheel.

This is done to provide the smoothest possible ride.

The "high spot" of the tire is originally marked by paint dot (1) on the outboard sidewall. This paint dot will eventually wash off the tire.

The "low spot" of the wheel is originally marked by paint dot (2) on the wheel rim-flange. Properly assembled, the wheel rims' paint dot should be aligned with the tires' paint dot as shown in figure.

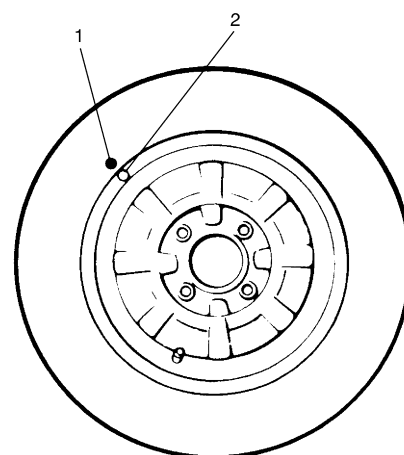

I2RH01240001-01

Whenever a tire is dismantled from its wheel, it should be remounted so that the tire and wheel are matched. If the tire's paint dot cannot be located, a line should be scribed on the tire and wheel before dismantling to assure that it is remounted in the same position.

2D-2 Wheels and Tires:

Replacement Tires

When replacement is necessary, the original equipment type tire should be used. Refer to the "Tire Placard". Replacement tires should be of the same size, load range and construction as those originally on the vehicle. Use of any other size or type tire may affect ride, handling, speedometer / odometer calibration, vehicle ground clearance and tire or snow chain clearance to the body and chassis.

It is recommended that new tires be installed in pairs on the same axle. If necessary to replace only one tire, it should be paired with the tire having the most tread, to equalize braking traction.

⚠ WARNING

Do not mix different types of tires on the same vehicle such as radial, bias and bias-belted tires except in emergencies, because handling may be seriously affected and may result in loss of control.

The metric term for tire inflation pressure is the kilo pascal (kPa). Tire pressures is usually printed in both kPa and kgf/cm² on the "Tire Placard".

Metric tire gauges are available from tool suppliers. The chart, shown the table, converts commonly used inflation pressures from kPa to kgf/cm² and psi.

	kPa	kgf/cm ²	psi	bar
Conversion:	160	1.6	23	1.6
1 psi =	180	1.8	26	1.8
6.895 kPa	200	2.0	29	2.0
1 kgf/cm ² =	220	2.2	32	2.2
98.066 kPa	240	2.4	35	2.4
1bar =	260	2.6	38	2.6
100 kpa	280	2.8	41	2.8
	300	3.0	44	3.0

Wheels Description

S6JB0B2401002

Wheel Maintenance

Wheel repairs that use welding, heating, or peening are not approved. All damaged wheels should be replaced.

Replacement Wheels

Wheels must be replaced if they are bent, dented, have excessive lateral or radial runout, air leak through welds, have elongated bolt holes, if lug nuts won't stay tight, or if they are heavily rusted. Wheels with greater runout than shown in the following may cause objectional vibrations.

Replacement wheels must be equivalent to the original equipment wheels in load capacity, diameter, rim with offset and mounting configuration. A wheel of improper size or type may affect wheel and bearing life, brake cooling, speedometer / odometer calibration, vehicle ground clearance and tire clearance to body and chassis.


How to Measure Wheel Runout

To measure the wheel runout, it is necessary to use an accurate dial indicator. The tire may be on or off the wheel. The wheel should be installed to the wheel balancer of the like for proper measurement. Take measurements of both lateral runout "a" and radial runout "b" at both inside and outside of the rim flange. With the dial indicator set in place securely, turn the wheel one full revolution slowly and record every reading of the indicator.

When the measured runout exceeds the specification and correction by the balancer adjustment is impossible, replace the wheel. If the reading is affected by welding, paint or scratch, it should be ignored.

Wheel Runout

	Lateral runout limit	Radial runout limit
Steel wheel	1.20 mm (0.047 in.)	0.70 mm (0.027 in.)
Aluminum wheel	0.30 mm (0.011 in.)	0.30 mm (0.011 in.)

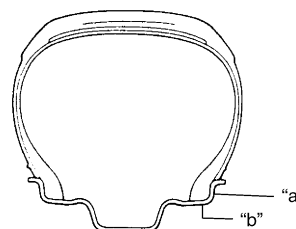


I4RS0A240001-01

Metric Lug Nuts and Wheel Studs

All models use metric lug nuts and wheel studs.

Metric lug nuts and wheel studs size M12 x 1.25

If a broken stud is found, see "Front Wheel Hub, Disc, Nut and Bearing Check in Section 2B", "Rear Wheel Disc, Nut and Bearing Check in Section 2C", "Front Wheel Hub Assembly Removal and Installation in Section 2B" and/or "Rear Wheel Hub Assembly Removal and Installation in Section 2C", for Note and Replacement procedure.

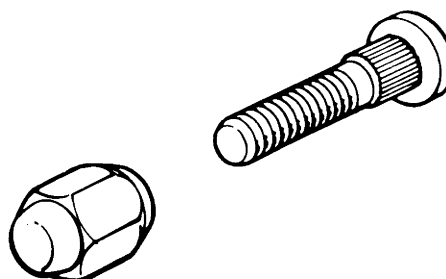

I2RH01240003-01

Irregular and/or Premature Wear Description



S6JB0B2401003

Irregular and premature wear has many causes. Some of them are as follows: incorrect inflation pressures, lack of tire rotation, driving habits, improper alignment. If the following conditions are noted, rotation is necessary:

- Front tire wear is different from rear.
- Uneven wear exists across the tread of any tire.
- Both side of front tire wears are not even.
- Both side of rear tire wears are not even.
- There is cupping, flat spotting, etc.

A wheel alignment check is necessary if following conditions are noted:

- Both side of front tire wears are not even.
- Wear is uneven across the tread of any front tire.
- Front tire treads have scuffed appearance with “feather” edges on one side of tread ribs or blocks.

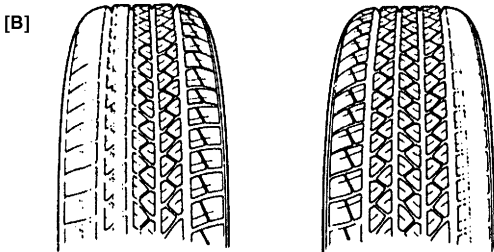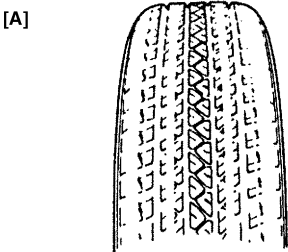

I3RH0A240002-01

[A]: Hard Cornering, under inflation or lack of tire rotation


[B]: Incorrect wheel alignment, tire construction not uniform or wheel heavy acceleration

Wear Indicators Description

S6JB0B2401004

Original equipment tires have built-in tread wear indicators (1) to show when they need replacement. These indicators (1) will appear as 12 mm (0.47 in) wide bands when the tire tread depth becomes 1.6 mm (0.063 in).

When the indicators (1) appear in 3 or more grooves at 6 locations, tire replacement is recommended.

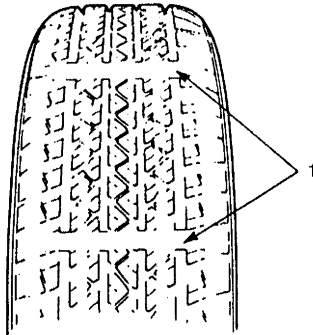

I2RH01240005-01

Radial Tire Waddle Description

S6JB0B2401005


Waddle is side to side movement at the front and/or rear of the vehicle. It is caused by the steel belt not being straight within the tire. It is most noticeable at a low speed, 8 to 48 kph (5 to 30 mph).

It is possible to locate the faulty tire by road testing the vehicle. If it is on the rear, the rear end of the vehicle shakes from side to side or “waddles”. To the driver in the seat, it feels as though someone is pushing on the side of vehicle.

If the faulty tire is on the front, waddling is more visual. The front sheet metal appears to be moving back and forth and the driver feels as though he is at the pivot point in vehicle.

Waddle can be quickly diagnosed by using Tire Problem Detector (TPD) and following the equipment manufacture’s recommendations.

If TPD is not available, an alternative method of substituting known-good tire / wheel assemblies can be used as follows, although it takes a longer time.

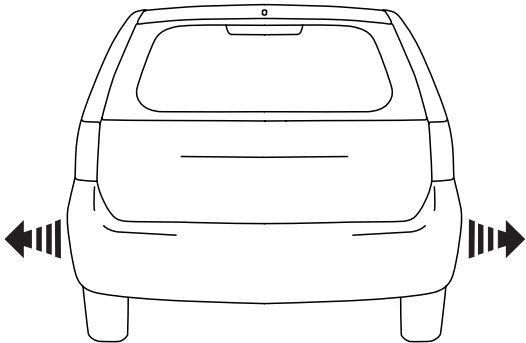


I2RH01240006-01

2D-4 Wheels and Tires:

- 1) Ride vehicle to determine whether the front or rear waddles.
- 2) Install tires and wheels that are known to be good (on similar vehicle) in place of those on waddling end of vehicle. If waddling end cannot be identified, substitute rear ones.
- 3) Road test again. If improvement is noted, reinstall originals one at a time till waddle causal tire is found. If no improvement is noted, install known-good tires in place of all four. Then reinstall originals in the same manner.

Equipment manufacture's recommendations

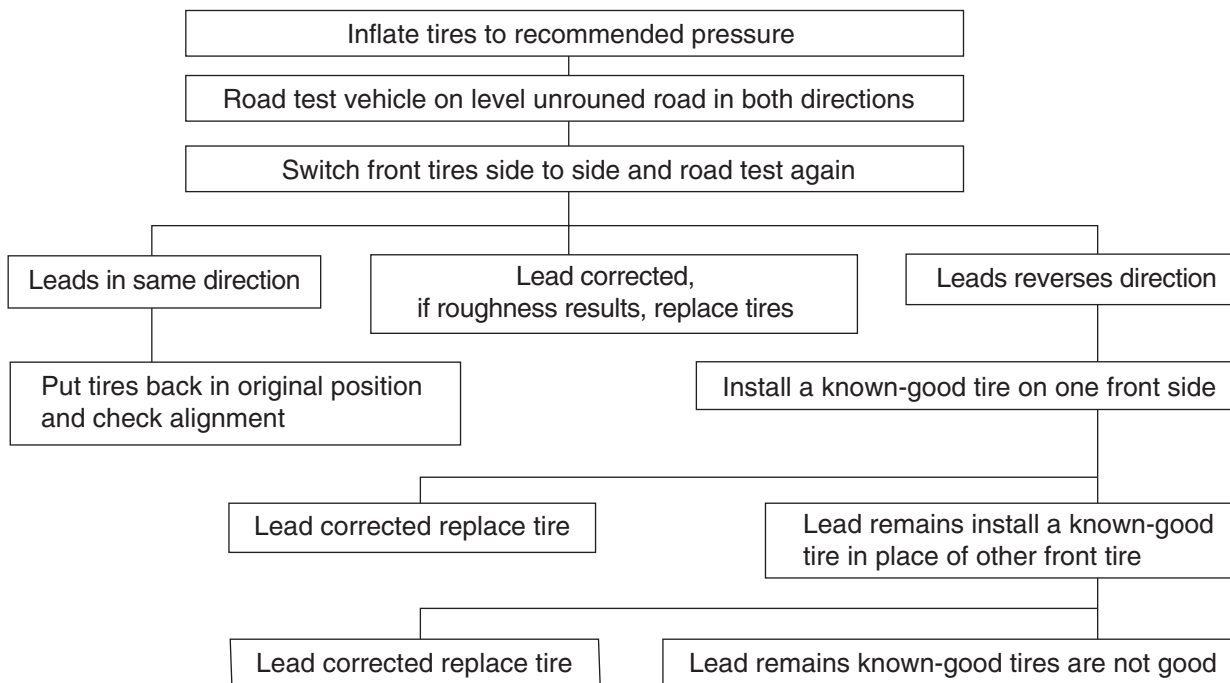

I2RH01240007-01

Radial Tire Lead / Pull Description

S6JB0B2401006

“Lead / Pull” is the deviation of the vehicle from a straight path on a level road even with no pressure on the steering wheel.

Lead is usually caused by the following conditions.

- Improper tire and wheel alignment.
- Uneven brake assemblies.
- Tire construction.

The way in which a tire is built can produce lead in a vehicle. An example of this is placement of the belt. Off center belts on radial tires can cause the tire to develop a side force while rolling straight down the road. If one side of the tire has a little larger diameter than the other, the tire will tend to roll to one side. This will develop a side force which can produce vehicle lead.


The procedure in the figure (Lead Diagnosis) should be used to make sure that wheel alignment is not mistaken for tire lead.

- Part of the lead diagnosis procedure is different from the proper tire rotation pattern currently in the owner and service manuals. If a medium to high mileage tire is moved to the other side of the vehicle, be sure to check that ride roughness has not developed
- Rear tires will not cause lead.

Balancing Wheels Description

S6JB0B2401007


There are two types of wheel and tire balance: static and dynamic. Static balance, as shown in figure, is the equal distribution of weight around the wheel. Wheels that are statically unbalanced cause a bouncing action called tramp. This condition will eventually cause uneven tire wear.

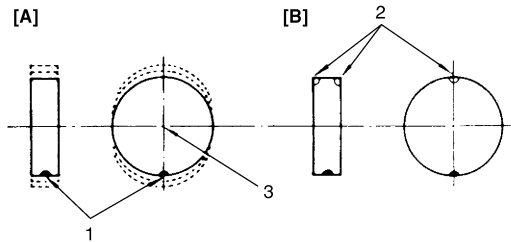

I2RH01240008-01

1. Heavy spot wheel tramp	[A]: Before correction
2. Balance weights addition point	[B]: Corrective weights
3. C/L of spindle	

Dynamic balance, as shown in figure, is the equal distribution of weight on each side of the wheel centerline so that when the tire spins there is no tendency for the assembly to move from side to side. Wheels that are dynamically unbalanced may cause shimmy.

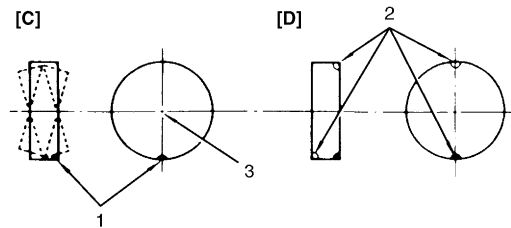

I2RH01240009-01

1. Heavy spot wheel shimmy	[C]: Before correction
2. Balance weights addition point	[D]: Corrective weights
3. C/L of spindle	

Repair Instructions

General Balance Procedures

S6JB0B2406001

Deposits of mud, etc. must be cleaned from inside of rim.

⚠ WARNING

Stones should be removed from the tread in order to avoid operator injury during spin balancing and to obtain good balance.

Each tire should be inspected for any damage, then balanced according to equipment manufacturer’s recommendation.

Off-Vehicle Balancing

Most electronic off-vehicle balancers are more accurate than the on-vehicle spin balancers. They are easy to use and give a dynamic (two plane) balance. Although they do not correct for drum or disc unbalance as does on-vehicle spin balancing, this is overcome by their accuracy, usually to within 1/8 ounce.

On-Vehicle Balancing

On-vehicle balancing methods vary with equipment and tool manufacturers. Be sure to follow each manufacturer’s instructions during balancing operation.

⚠ WARNING

Wheel spin should be limited to 35 mph (55 km/h) as indicated on speedometer. This limit is necessary because speedometer only indicates one-half of actual wheel speed when one drive wheel is spinning and the other drive wheel is stopped. Unless care is taken in limiting drive wheel spin, spinning wheel can reach excessive speeds. This can result in possible tire disintegration or differential failure, which could cause serious personal injury or extensive vehicle damage.

⚠ CAUTION

For vehicle equipped with ABS, using on-vehicle balancing method with ignition switch ON may set malfunction diagnostic trouble code (DTC) of ABS even when system is in good condition. Never turn ignition switch ON while spinning wheel.


Tire Rotation

S6JB0B2406002

To equalize wear, rotate tires according to figure. Radial tires should be rotated periodically. Set tire pressure.

NOTE

Due to their design, radial tires tend to wear faster in the shoulder area, particularly in front positions. This makes regular rotation especially necessary.

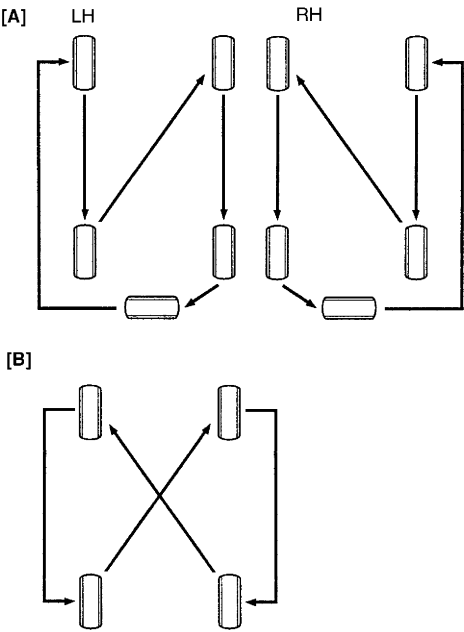

I3RH0A240001-01

[A]: 5-tire rotation	
NOTE	
Applicable to vehicles equipped with 5 tires including spare tire all of which are identical in size	
[B]: 4-tire rotation	
LH: Left-hand drive	
RH: Right-hand drive	

Wheel Removal and Installation


S6JB0B2406003

Removal

- 1) Loosen wheel nuts by approximately 180 ° (half a rotation).
- 2) Hoist vehicle.
- 3) Remove wheel.

⚠ CAUTION

Never use heat to loosen tight wheel because application of heat to wheel can shorten life of wheel and damage wheel bearings.

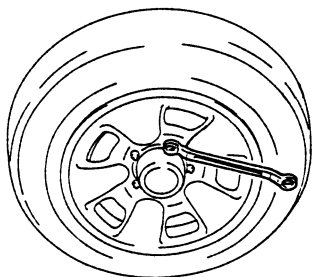

IYSQ01240007-01

Installation

For installation, reverse removal procedure, noting the following.


- Wheel nuts must be tightened in sequence and to proper torque to avoid bending wheel or brake drum or brake disc as shown in the figure.

NOTE

Before installing wheels, remove any build-up of corrosion on wheel mounting surface and brake disc mounting surface by scraping and wire brushing. Installing wheels without good metal-to-metal contact at mounting surfaces can cause wheel nuts to loosen, which can later allow a wheel to come off while vehicle is moving.

Tightening torque

Wheel nut (a): 100 N·m (10.0 kgf-m, 72.5 lb-ft)

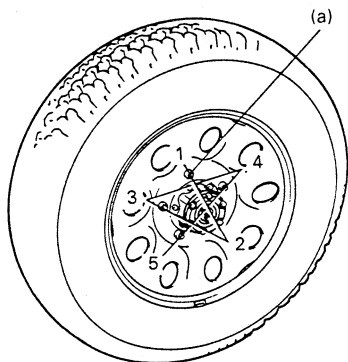

IYSQ01240008-01

Tire Mounting and Dismounting

S6JB0B2406004

Use a tire changing machine to mount or dismount tires. Follow equipment manufacturer's instructions. Do not use hand tools or tire irons alone to change tires as they may damage tire beads or wheel rim.

Rim bead seats should be cleaned with a wire brush or coarse steel wool to remove lubricants, old rubber and light rust. Before mounting or dismounting a tire, bead area should be well lubricated with approved tire lubricant.

After mounting, inflate to specified pressure shown on tire placard so that beads are completely seated.

⚠ WARNING

Do not stand over tire when inflating. Bead may break when bead snaps over rim's safety hump and cause serious personal injury.

Do not exceed 380 kPa (55.0 psi) pressure when inflating. If 380 kPa (55.0 psi) pressure will not seat beads, deflate, re-lubricate and reinflate.

Over inflation may cause bead to break and cause serious personal injury.

Install valve core and inflate to proper pressure.

Tire Repair

S6JB0B2406005

There are many different materials and techniques on the market to repair tires. As not all of these work on all types of tires, tire manufacturers have published detailed instructions on how and when to repair tires. These instructions can be obtained from each tire manufacturer.

Specifications

Wheels and Tires Specifications

S6JB0B2407001

Tire size (Standard)

: 225/70R16 102S or 225/65R17 101S

Wheel size (Standard)

: 16 x 6 1/2 J (for 225/70R16) or 17 x 6 1/2 J (for 225/65R17)

Tightening torque

Wheel nut: 100 N·m (10.0 kgf-m, 72.5 lb-ft)

NOTE

- Tire inflation pressure should be checked when tires are cool.
- Specified tire size tire inflation pressure should be found on tire placard or in owner's manual which came with the vehicle.

Tightening Torque Specifications

S6JB0B2407002

Fastening part	Tightening torque			Note
	N·m	kgf-m	lb-ft	
Wheel nut	100	10.0	72.5	🔧 / 🔧

Reference:

For the tightening torque of fastener not specified in this section, refer to "Fastener Information in Section 0A".

Section 3

Driveline / Axle

CONTENTS

Precautions	3-1		
Precautions.....	3-1		
Precautions for Driveline / Axle	3-1		
Drive Shaft / Axle	3A-1		
Front.....	3A-1		
General Description	3A-1		
Front Drive Shaft Construction.....	3A-1		
Diagnostic Information and Procedures.....	3A-1		
Front Drive Shaft Symptom Diagnosis	3A-1		
Repair Instructions	3A-2		
Front Drive Shaft Boot and Joint Check.....	3A-2		
Front Drive Shaft Components	3A-2		
Front Drive Shaft Assembly Removal and Installation	3A-3		
Front Drive Shaft Disassembly and Assembly	3A-3		
Specifications	3A-6		
Tightening Torque Specifications.....	3A-6		
Special Tools and Equipment	3A-6		
Recommended Service Material	3A-6		
Special Tool	3A-6		
Rear	3A-7		
General Description	3A-7		
Rear Drive Shaft Construction	3A-7		
Repair Instructions	3A-7		
Rear Drive Shaft Components	3A-7		
Rear Drive Shaft Assembly Removal and Installation	3A-8		
Rear Drive Shaft Disassembly and Assembly.....	3A-8		
Specifications	3A-9		
Tightening Torque Specifications.....	3A-9		
Special Tools and Equipment	3A-9		
Recommended Service Material	3A-9		
Special Tool	3A-9		
Differential	3B-1		
Front.....	3B-1		
General Description	3B-1		
Front Differential Construction	3B-1		
Diagnostic Information and Procedures.....	3B-1		
Front Differential Symptom Diagnosis.....	3B-1		
Repair Instructions	3B-2		
Front Differential Oil Change	3B-2		
Front Differential Unit Components.....	3B-3		
Front Differential Dismounting and Remounting.....	3B-3		
Front Differential Components	3B-4		
Front Differential Assembly Disassembly and Reassembly	3B-5		
Front Differential Inspection	3B-18		
Specifications	3B-18		
Tightening Torque Specifications	3B-18		
Special Tools and Equipment	3B-18		
Recommended Service Material	3B-18		
Special Tool	3B-19		
Rear	3B-21		
General Description	3B-21		
Rear Differential Construction	3B-21		
Diagnostic Information and Procedures.....	3B-21		
Rear Differential Symptom Diagnosis	3B-21		
Repair Instructions	3B-21		
Rear Differential Oil Change	3B-21		
Rear Differential Unit Components	3B-21		
Rear Differential Dismounting and Remounting.....	3B-22		
Rear Differential Components.....	3B-22		
Rear Differential Assembly Disassembly and Reassembly	3B-23		
Rear Differential Inspection.....	3B-35		
Specifications	3B-36		
Tightening Torque Specifications.....	3B-36		
Special Tools and Equipment	3B-36		
Recommended Service Material	3B-36		
Special Tool	3B-36		
Transfer	3C-1		
Precautions.....	3C-1		
Transfer Warning	3C-1		
Precautions in Diagnosing Trouble	3C-1		
General Description	3C-1		
Transfer Description.....	3C-1		
4WD Control System Description.....	3C-2		
Function of 4WD Control System Component	3C-4		
4WD Control System Operation.....	3C-4		
Input / Output Signal Table of 4WD Control Module	3C-9		
On-Board Diagnostic System Description.....	3C-10		

CAN Communication System Description.....	3C-11	Inspection of 4WD Control Module and Its Circuits	3C-50
Schematic and Routing Diagram.....	3C-12	Repair Instructions	3C-53
4WD Control System Wiring Circuit Diagram.....	3C-12	Transfer Oil Level Check.....	3C-53
Component Location	3C-14	Transfer Oil Change.....	3C-53
Transfer Shift Control System Components Location	3C-14	Transfer Oil Seal Removal and Installation.....	3C-54
Diagnostic Information and Procedures	3C-15	Transfer Switch Removal and Installation.....	3C-54
4WD Control System Check	3C-15	Transfer Switch Inspection.....	3C-55
Transfer Position Indicator Operation Check	3C-17	4WD Control Module Removal and Installation	3C-55
4WD Control System Operation Inspection	3C-17	Transfer Assembly Dismounting and Remounting.....	3C-56
Visual Inspection.....	3C-18	Transfer Assembly Components.....	3C-57
DTC Check.....	3C-19	Transfer Assembly Disassembly and Reassembly	3C-58
DTC Clearance	3C-20	Transfer Assembly Inspection.....	3C-66
DTC Table.....	3C-21	Input Gear Assembly, Counter Gear Assembly, Front Output Shaft Assembly and Rear Output Shaft Assembly Components	3C-68
Fail-Safe Table.....	3C-22	Input Gear Assembly Disassembly and Reassembly	3C-69
Scan Tool Data	3C-22	Counter Gear Assembly Disassembly and Reassembly	3C-70
Scan Tool Data Definitions.....	3C-23	Front Output Shaft Assembly Disassembly and Reassembly	3C-70
4WD Control Symptom Diagnosis.....	3C-24	Rear Output Shaft Assembly Disassembly and Reassembly	3C-71
Transfer Position Indicator Does Not Come ON at Ignition Switch ON but Engine Stops.....	3C-25	Specifications	3C-72
Transfer Position Indicator Remains ON Steady at Ignition Switch ON	3C-27	Tightening Torque Specifications.....	3C-72
DTC C1213: Transfer Switch Circuit Open	3C-28	Special Tools and Equipment	3C-72
DTC C1214: Transfer Switch Circuit Short	3C-29	Recommended Service Material	3C-72
DTC C1223 / C1235: Transfer Shift Actuator Motor Position Switch 1 Circuit Open / Transfer Shift Actuator Motor Position Switch 2 Circuit Open	3C-31	Special Tool	3C-73
DTC C1224 / C1236: Transfer Shift Actuator Motor Position Switch 1 Circuit Short / Transfer Shift Actuator Motor Position Switch 2 Circuit Short.....	3C-33	Propeller Shaft.....	3D-1
DTC C1227: 4L/N Switch Circuit Open	3C-35	Precautions.....	3D-1
DTC C1228: 4L/N Switch Circuit Short	3C-36	Propeller Shaft Caution	3D-1
DTC C1230: Transfer Actuator Circuit Malfunction.....	3C-38	General Description	3D-1
DTC C1237: Center Differential Lock Switch Circuit Open	3C-39	Propeller Shaft Construction	3D-1
DTC C1238: Center Differential Lock Switch Circuit Short	3C-41	Diagnostic Information and Procedures	3D-2
DTC C1240: 4WD Control Module Power Supply Circuit Malfunction	3C-42	Propeller Shaft Symptom Diagnosis	3D-2
DTC C1243: Internal Circuit Malfunction of 4WD Control Module.....	3C-43	Repair Instructions	3D-2
DTC C1246: Clutch Pedal Position (CPP) Switch Circuit Short.....	3C-44	Propeller Shaft Joint Check.....	3D-2
DTC U1073: Control Module Communication Bus Off.....	3C-46	Propeller Shaft Removal and Installation	3D-2
DTC U1100: Lost Communication with ECM.....	3C-48	Propeller Shaft Disassembly and Assembly	3D-4
DTC U1101: Lost Communication with TCM.....	3C-49	Propeller Shaft Inspection	3D-6
DTC U1121: Lost Communication with ABS / Electronic Stability Program Hydraulic Unit / Control Module.....	3C-50	Specifications	3D-6
		Tightening Torque Specifications.....	3D-6
		Special Tools and Equipment	3D-6
		Recommended Service Material	3D-6
		Special Tool	3D-6

Precautions

Precautions

Precautions for Driveline / Axle

S6JB0B3000001

Differential Gear Oil Note

Refer to "Differential Gear Oil Note in Section 00".

Fastener Caution

Refer to "Fastener Caution in Section 00".

Precautions for Transfer

Refer to "Precautions in Diagnosing Trouble in Section 3C".

Drive Shaft / Axle

Front

General Description

Front Drive Shaft Construction

S6JB0B3111001

A constant velocity tripod joint is used on the differential side of both the right and left drive shaft assemblies. And, a constant velocity ball joint is used on the wheel side of both the right and left drive shaft assemblies. The drive shaft can slide through the tripod joint in the extension / contraction direction.

Diagnostic Information and Procedures

Front Drive Shaft Symptom Diagnosis

S6JB0B3114001


Condition	Possible cause	Correction / Reference Item
Abnormal noise: When starting	Loose wheel nut(s)	<i>Tighten wheel nut(s) referring to "Wheel Removal and Installation in Section 2D".</i>
	Loose drive shaft flange bolt(s)	<i>Tighten drive shaft flange bolt(s) referring to "Front Drive Shaft Assembly Removal and Installation: Front".</i>
	Broken or damaged wheel bearing	<i>Replace referring to "Front Wheel Hub, Disc, Nut and Bearing Check in Section 2B".</i>
Abnormal noise: When making turns	Grease leakage from boot	<i>Replace boot and apply grease referring to "Front Drive Shaft Disassembly and Assembly: Front".</i>
	Worn or broken drive shaft joint	<i>Replace drive shaft joint referring to "Front Drive Shaft Disassembly and Assembly: Front".</i>
Abnormal noise: When running	Broken drive shaft joint	<i>Replace drive shaft joint referring to "Front Drive Shaft Disassembly and Assembly: Front".</i>
	Poorly lubricated or worn joint	<i>Lubricate or replace joint referring to "Front Drive Shaft Disassembly and Assembly: Front".</i>
	Loose drive shaft flange bolt(s)	<i>Tighten drive shaft flange bolt(s) referring to "Front Drive Shaft Assembly Removal and Installation: Front".</i>
Vibration	Worn drive shaft joint	<i>Replace drive shaft joint referring to "Front Drive Shaft Disassembly and Assembly: Front".</i>
	Deformed drive shaft	<i>Replace referring to "Front Drive Shaft Disassembly and Assembly: Front".</i>

Repair Instructions

Front Drive Shaft Boot and Joint Check

S6JB0B3116001

- Check boot for tear. If even a small tear is found, replace with new one.

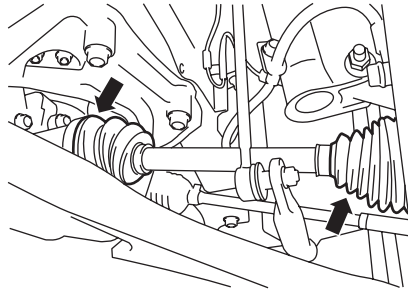


I5JB0A311001-01

- Check drive shaft joint for wear, breakage, and any other damage. Replace if any abnormality is found.

Front Drive Shaft Components

S6JB0B3116002

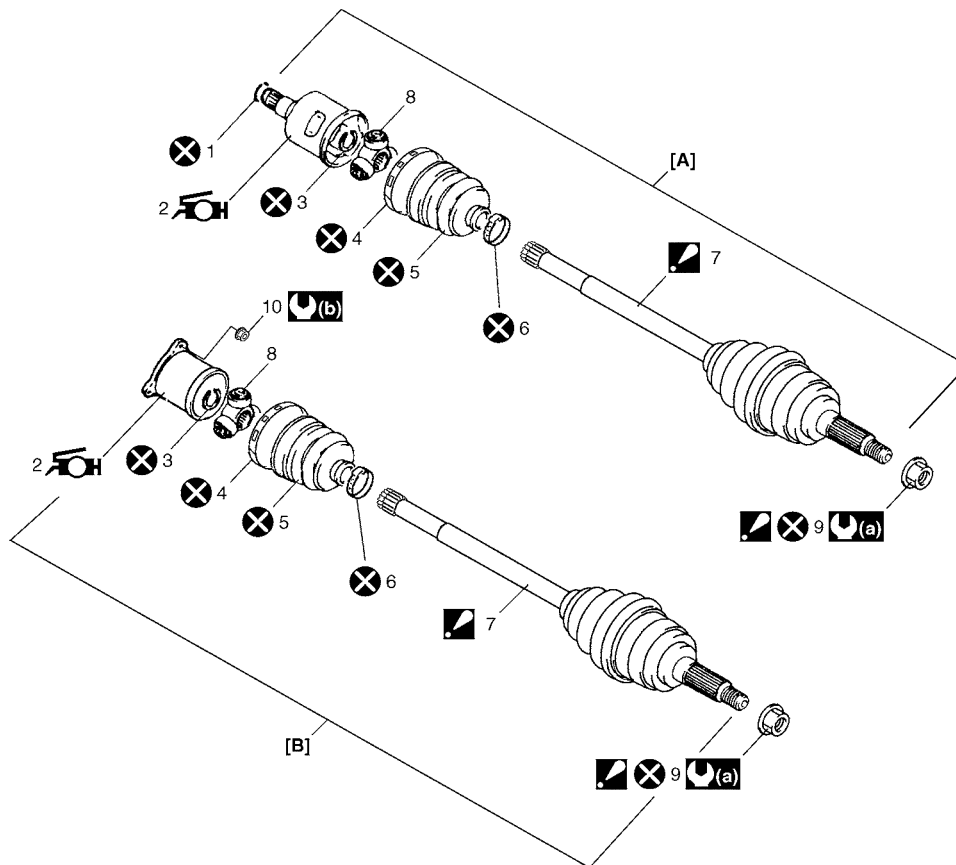

I5JB0A311002-03


[A]: Right side drive shaft assembly	4. Boot band (Large)	9. Drive shaft nut : After tightening nut, caulk nut securely.
[B]: Left side drive shaft assembly	5. Boot (Differential side)	10. Front drive shaft flange nut
1. Circlip	6. Boot band (Small)	: 220 N·m (22.0 kgf-m, 159.5 lb-ft)
2. Differential side joint (Constant velocity tripod joint) : Apply yellow grease included in spare part to joint.	7. Wheel side joint assembly (Constant velocity ball joint) : Never disassemble.	: 80 N·m (8.0 kgf-m, 58.0 lb-ft)
3. Snap ring	8. Tripod joint spider	: Do not reuse.

Front Drive Shaft Assembly Removal and Installation

S6JB0B3116003


Removal

- 1) Undo caulking (1) and remove drive shaft nut (2).

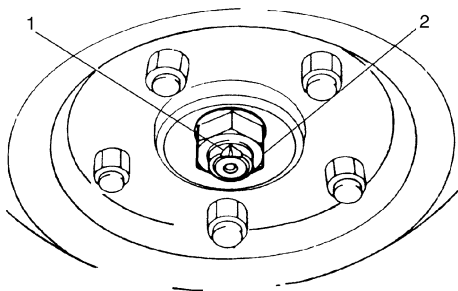

I5JB0A311003-01

- 2) Hoist vehicle and remove wheel.
- 3) Drain front differential oil.
- 4) Disconnect tie-rod end from steering knuckle referring to "Steering Knuckle Removal and Installation in Section 2B".
- 5) Remove stabilizer joint from stabilizer bar.
- 6) Remove brake hose mounting bolt.
- 7) Remove suspension control arm referring to "Suspension Control Arm Removal and Installation in Section 2B".
- 8) Remove front drive shaft flange nuts (1).

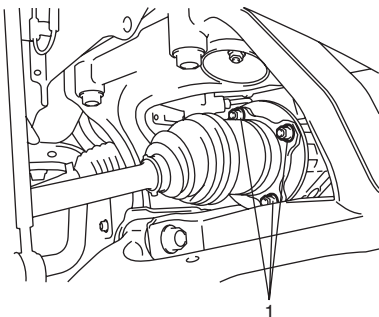

I5JB0A311004-01

- 9) Remove drive shaft assembly from front differential.

⚠ CAUTION

To prevent breakage of boots (wheel side and differential side), do not contact them with other parts when removing drive shaft assembly.

Installation

⚠ CAUTION

- Be careful not to damage oil seals and boots when installing drive shaft.
- Do not hit joint boot with hammer. Inserting joint only by hands is allowed.
- Make sure that differential side joint is inserted fully and its snap ring is seated as it was.

Install drive shaft assembly by reversing removal procedure and noting the following points.

- Tighten each bolts and nuts to the specified torque referring to "Front Drive Shaft Components: Front" and "Front Suspension Construction in Section 2B".

Front Drive Shaft Disassembly and Assembly


S6JB0B3116004

Disassembly

⚠ CAUTION


- Disassembly of wheel side joint assembly is not allowed. If any noise or damage exists in it, replace it as assembly.
- Do not disassemble tripod joint spider. If any malfunction is found in it, replace it as differential side joint assembly.

- 1) Draw hooks (2) of boot big band together and remove differential side boot big band (1).

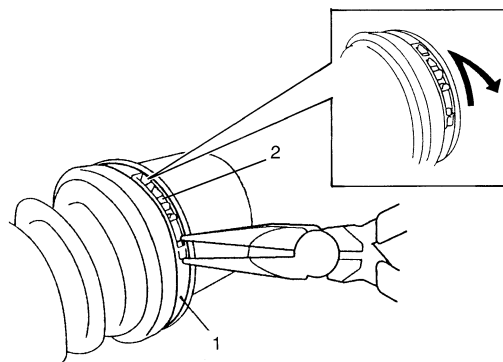

I5JB0A311005-01

- 2) Wipe off grease from shaft and take off snap ring (1) using snap ring plier (2).

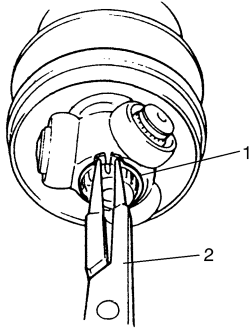


I5JB0A311008-01

- 3) Remove tripod joint spider (1) using 3 arms puller (2).

⚠ CAUTION

To prevent any problem caused by washing solution, do not wash tripod joint except its housing. Degreasing of tripod joint with cloth is allowed.

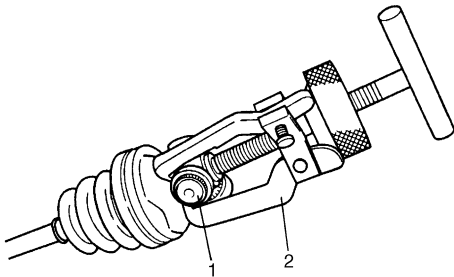

I3RH0A311004-01

- 4) Remove differential side boot small band, and then pull out differential side boot from shaft.

Assembly

Judging from abnormality noted before disassembly and what is found through visual check of component parts after disassembly, prepare replacing parts and proceed to reassembly.

Make sure that tripod joint housing is washed thoroughly and air dried.

Replace boot with new one.


⚠ CAUTION

- **Do not wash boots in degreaser such as gasoline or kerosene. etc. Washing in degreaser causes deterioration of boot.**
- **To ensure full performance of joint as designed, apply grease of specified volume and color to joint.**

- 1) Wash disassembled parts (except boots). After washing, dry parts completely by blowing air.
- 2) Clean boots with cloth.
- 3) Set new differential side small band and new differential side boot (1) on shaft temporarily, and then apply grease to tripod joint (2). Use specified grease in tube included in spare parts.
- 4) Install tripod joint spider (3) on shaft using special tool with hammer, directing its chamfered spline toward wheel side, and then fasten it with new snap ring (4) using snap ring plier (5).

Special tool

(A): 09913-80113

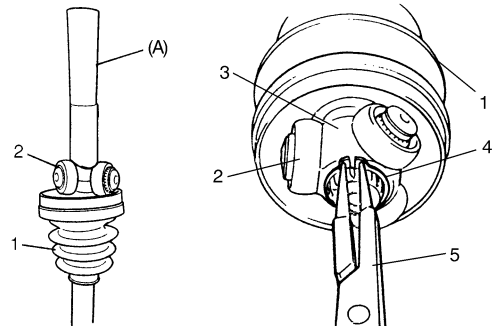

I5JB0A311009-01

3A-5 Drive Shaft / Axle: Front

- 5) Apply grease (including in spare parts) to inside of tripod joint housing (1), joint it with tripod joint.


Grease color

"A": Yellow

Amount

"A": 127 – 137 g (4.5 – 4.8 oz) (right side)

"A": 170 – 180 g (6.0 – 6.3 oz) (left side)

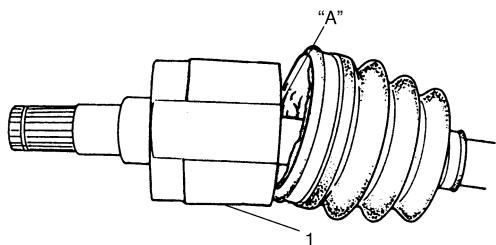


I4RS0B310003-01

- 6) Fit boot to grooves of shaft and housing.
- 7) Insert screw driver into boot and allow air to enter boot so that air pressure in boot becomes the same as atmospheric pressure.

⚠ CAUTION

- Bend each boot band against forward rotation.
- Do not squeeze or distort boot when fastening it with bands. Distorted boot caused by squeezing air may reduce its durability.

- 8) Place differential side boot new big band (3) and new small band (4) onto boot putting band outer end (1) against forward rotation (2) as shown in figure.

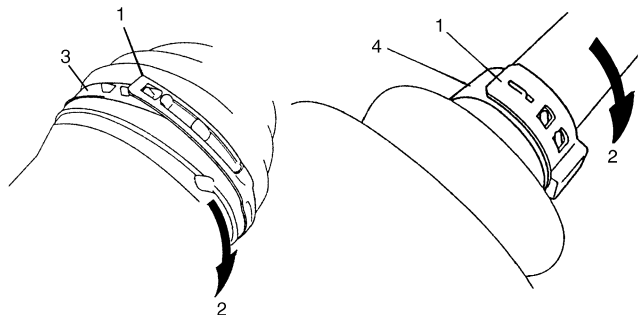

I5JB0A311006-01

- 9) Fasten differential side boot big band.

- For differential side boot big band
Fasten band (1) by drawing hooks (2) with special tool and engage hooks (3) in slot and window (4).

Special tool

(A): 09943–57010



- For differential side boot small band
Fasten band (5) securely using special tool.

NOTE

Fasten boot small band securely until complete contact "a" is obtained.

Special tool

(A): 09943–57010

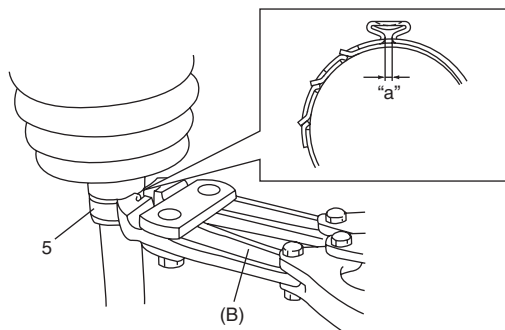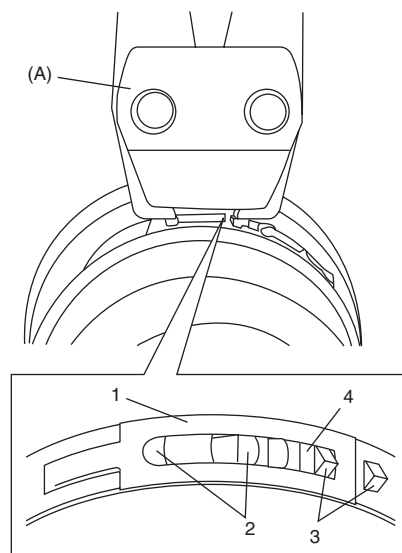

I5JB0A311007-03

Specifications

Tightening Torque Specifications

S6JB0B3117001

NOTE

The specified tightening torque is also described in the following.
“Front Drive Shaft Components: Front”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Special Tools and Equipment

Recommended Service Material



 

S6JB0B3118001

NOTE

Required service material is also described in the following.
“Front Drive Shaft Components: Front”

Special Tool

S6JB0B3118002

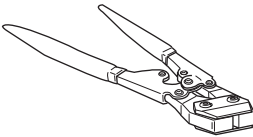09913-80113 Bearing installer 		09943-57010 Band compressor 	
---	--	---	--

Rear

General Description

Rear Drive Shaft Construction


S6JB0B3121001

Refer to “Front Drive Shaft Construction: Front”.





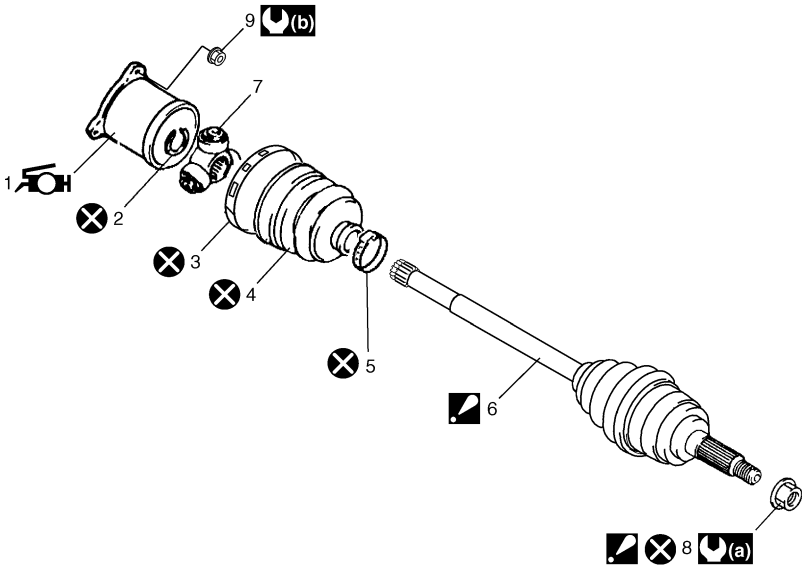

Repair Instructions

Rear Drive Shaft Components

S6JB0B3126001



I5JB0A312001-02


 1. Differential side joint (Constant velocity tripod joint) : Apply yellow grease included in spare part to joint.	5. Boot band (Small)	9. Rear drive shaft flange nut
2. Snap ring	 6. Wheel side joint (Constant velocity ball joint) : Never disassemble.	 (a) : 220 N·m (22.0 kgf-m, 159.5 lb-ft)
3. Boot band (Large)	7. Tripod joint spider	 (b) : 80 N·m (8.0 kgf-m, 58.0 lb-ft)
4. Boot (Differential side)	 8. Drive shaft nut : After tightening nut, caulk nut securely.	 : Do not reuse.

Rear Drive Shaft Assembly Removal and Installation

S6JB0B3126002


Removal

- 1) Undo caulking (1) of drive shaft nut (2) and then remove drive shaft nut.

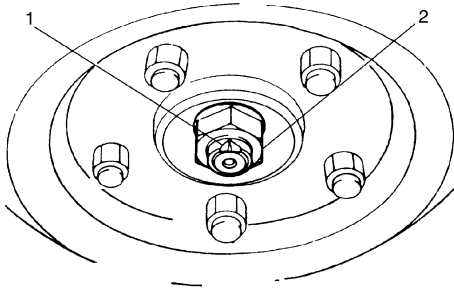

I5JB0A311003-01

- 2) Hoist vehicle and remove wheel.
- 3) Give match mark rear drive shaft flange (3) and rear drive shaft (4) as shown in figure, and then remove rear drive shaft flange nuts (1), and then remove rear drive shaft.

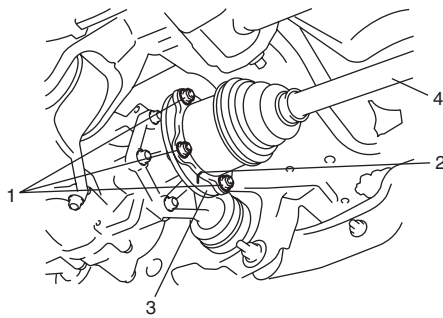


I5JB0A312002-02

2. Match mark

Installation

Install drive shaft assembly by reversing removal procedure and noting the following points.

- Install rear drive shaft (1) aligning match marks (2).

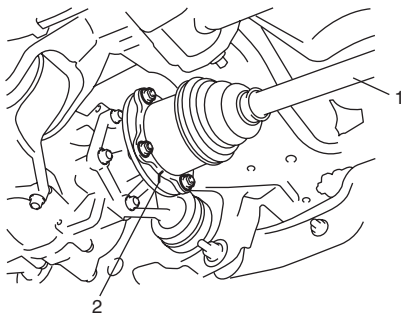

I5JB0A312003-01

⚠ CAUTION

- Protect oil seals and boots from any damage, preventing them from unnecessary contact while installing drive shaft.
 - Do not hit joint boot with hammer. Inserting joint only by hands is allowed.
 - Make sure that differential side joint is inserted fully and its snap ring is seated as it was.
- Tighten each nuts to specified torque referring to "Rear Drive Shaft Components: Rear".

Rear Drive Shaft Disassembly and Assembly

S6JB0B3126003

Disassembly

Refer to "Front Drive Shaft Disassembly and Assembly: Front".

Assembly

Assemble rear drive shaft assembly referring to "Front Drive Shaft Disassembly and Assembly: Front" and noting the following points which are different from that of the front drive shaft assembly.

- Apply grease to differential side joint.

Grease color

: Yellow


Amount

: 197 – 207 g (6.9 – 7.3 oz)

- Install tripod joint spider (1) on shaft by using special tool with hammer, directing its chamfered spline toward wheel side, and then fasten it with new snap ring (2) using snap ring plier (3).

Special tool

(A): 09913-84510

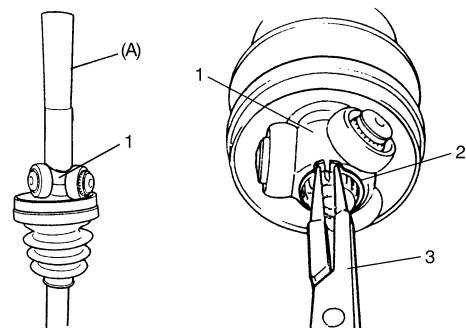

I5JB0A312004-03

Specifications

Tightening Torque Specifications

S6JB0B3127001

NOTE

The specified tightening torque is also described in the following.
“Rear Drive Shaft Components: Rear”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Special Tools and Equipment

Recommended Service Material


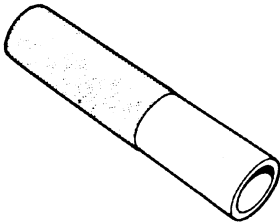
S6JB0B3128001

NOTE

Required service material is also described in the following.
“Rear Drive Shaft Components: Rear”

Special Tool

S6JB0B3128002

09913-84510 Bearing installer 		
--	--	--

Differential

Front

General Description

Front Differential Construction

S6JB0B3211001

The differential assembly uses a hypoid bevel pinion and gear.

The differential assembly is decisive in that the drive power is concentrated there. Therefore, use of genuine parts and specified torque is compulsory. Further, because of sliding tooth meshing with high pressure between bevel pinion and gear, it is mandatory to lubricate them by hypoid gear oil.

Diagnostic Information and Procedures

Front Differential Symptom Diagnosis

S6JB0B3214001

Condition	Possible cause	Correction / Reference Item
Gear noise	Deteriorated or water mixed lubricant	<i>Repair and replenish referring to "Front Differential Oil Change: Front".</i>
	Inadequate or insufficient lubricant	<i>Repair and replenish referring to "Front Differential Oil Change: Front".</i>
	Maladjusted backlash between drive bevel pinion and gear	<i>Adjust as prescribed referring to "Front Differential Assembly Disassembly and Reassembly: Front".</i>
	Improper tooth contact in the mesh between drive bevel pinion and gear	<i>Adjust or replace referring to "Front Differential Assembly Disassembly and Reassembly: Front".</i>
	Loose drive bevel gear securing bolts	<i>Replace or retighten referring to "Front Differential Assembly Disassembly and Reassembly: Front".</i>
	Damaged differential gear(s) or differential pinion(s)	<i>Replace referring to "Front Differential Inspection: Front".</i>
Bearing noise	(Constant noise) Deteriorated or water mixed lubricant	<i>Repair and replenish referring to "Front Differential Oil Change: Front".</i>
	(Constant noise) Inadequate or insufficient lubricant	<i>Repair and replenish referring to "Front Differential Oil Change: Front".</i>
	(Noise while coasting) Damaged bearing(s) of drive bevel pinion	<i>Replace referring to "Front Differential Inspection: Front".</i>
	(Noise while turning) Damaged differential side bearing(s) or axle bearing(s)	<i>Replace referring to "Front Differential Inspection: Front".</i>
Oil leakage	Clogged breather plug	<i>Clean.</i>
	Worn or damaged oil seal	<i>Replace.</i>
	Excessive oil	<i>Adjust oil level referring to "Front Differential Oil Change: Front".</i>
	Loose differential carrier bolts	<i>Replace or retighten.</i>

Repair Instructions

Front Differential Oil Change

S6JB0B3216001

- 1) Before changing or inspecting oil, be sure to stop engine and lift vehicle horizontally.
- 2) With vehicle lifted up, check leakage.
If leakage exists, correct it.

NOTE

Whenever vehicle is hoisted for any other service work than oil change, also be sure to check for oil leakage.

- 3) Remove oil filler plug (2).
- 4) Remove drain plug (1), and drain old oil.
- 5) Apply sealant to thread of drain plug (1), and tighten it to specified torque.

"A": Sealant 99000-31260 (SUZUKI Bond No.1217G)

Tightening torque

Differential oil drain plug (a): 23 N·m (2.3 kgf-m, 17.0 lb-ft)

- 6) Pour new specified oil until oil level reaches bottom of oil filler plug hole (3) as shown in figure.

NOTE

- Hypoid gear oil must be used for differential.
- It is highly recommended to use API GL-5 80W-90 gear oil.

Differential oil specification

: API GL-5 (For SAE classification, refer to viscosity chart [A] in figure.)

Front differential oil capacity




Reference: 0.85 – 1.05 liters (1.8/1.5 – 2.2/1.8 US/ Imp. pt.)

- 7) Apply sealant to thread of level / filler plug, and then tighten it to specified torque.

"A": Sealant 99000-31260 (SUZUKI Bond No.1217G)

Tightening torque


Differential oil level / filler plug (b): 23 N·m (2.3 kgf-m, 17.0 lb-ft)

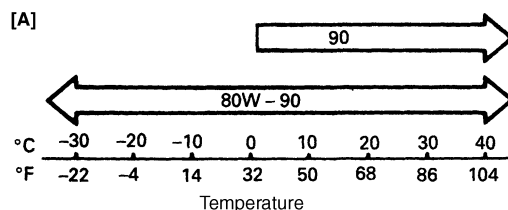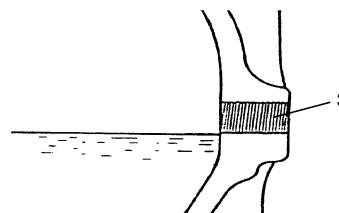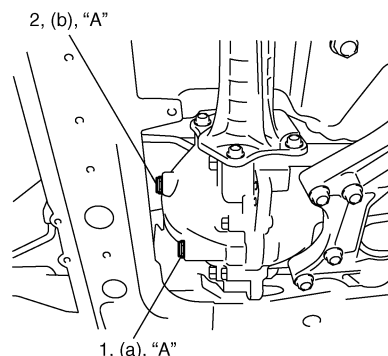

I5JB0A321004-02

Front Differential Unit Components

S6JB0B3216002

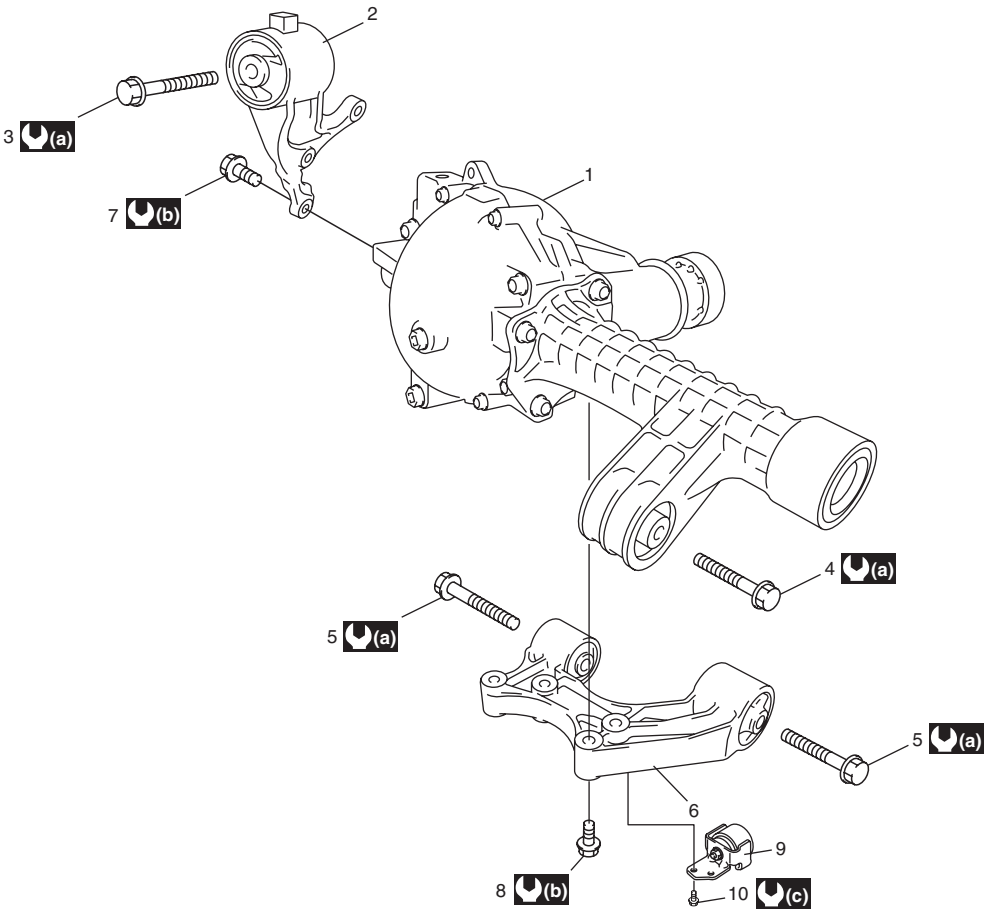

I5JB0A321001-05


1. Front differential	8. Rear mounting bracket bolt
2. Right mounting bracket	9. Damper
3. Right mounting bolt	10. Damper bolt
4. Differential mounting bolt	(a) : 85 N-m (8.5 kgf-m, 61.5 lb-ft)
5. Rear mounting bolt	(b) : 50 N-m (5.0 kgf-m, 36.5 lb-ft)
6. Rear mounting bracket	(c) : 23 N-m (2.3 kgf-m, 17.0 lb-ft)
7. Right mounting bracket bolt	

Front Differential Dismounting and Remounting

S6JB0B3216003

Dismounting

- 1) Lift up vehicle and drain front differential oil.
- 2) Remove front drive shafts referring to “Front Drive Shaft Assembly Removal and Installation: Front in Section 3A”.
- 3) Remove front suspension frame with front differential referring to “Front Suspension Frame, Stabilizer Bar and/or Bushings Removal and Installation in Section 2B”.
- 4) Remove mounting bolts (1), and then take off front differential from front suspension frame (2).

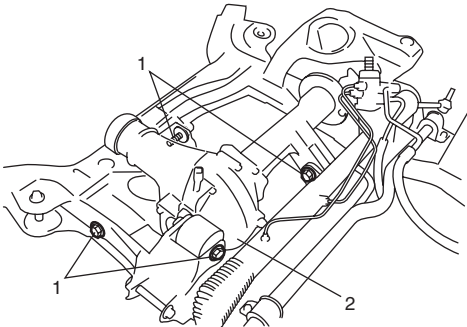

I5JB0A321002-01

3B-4 Differential: Front


Remounting

Reverse dismounting procedure for remounting noting the following.

- Tighten each bolts and nuts referring to “Front Differential Unit Components: Front”, “Front Drive Shaft Components: Front in Section 3A” and “Front Suspension Frame, Stabilizer Bar and/or Bushings Components in Section 2B”.
- Fill front differential oil referring to “Front Differential Oil Change: Front”.

Front Differential Components

S6JB0B3216004

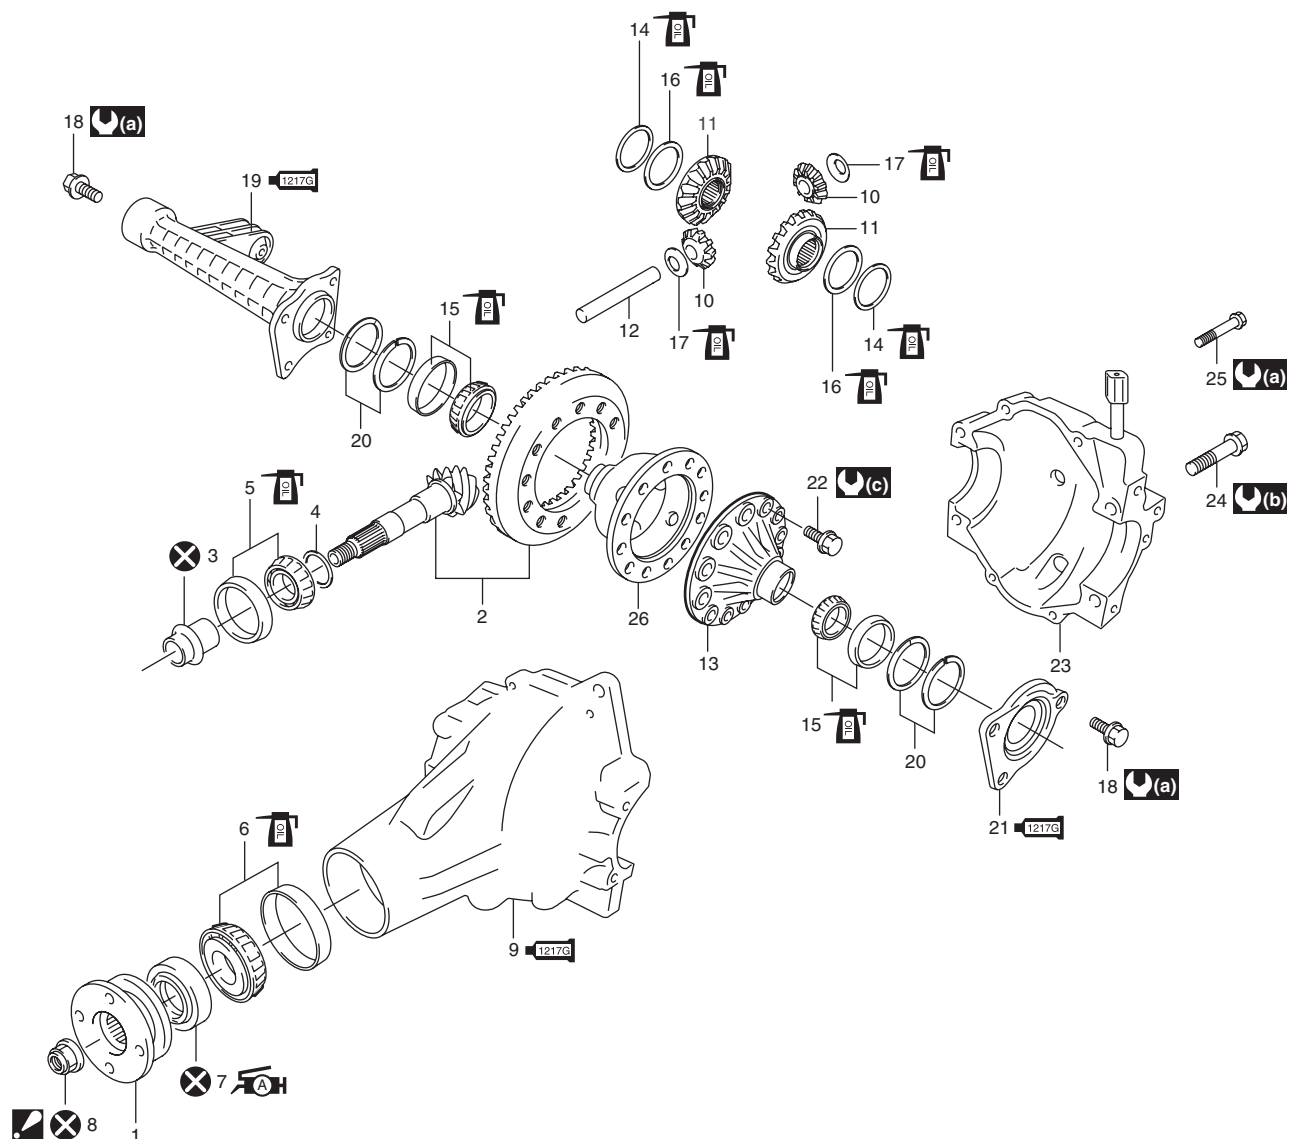

I5JB0A321003-08

1. Universal joint flange	17. Pinion washer
2. Hypoid gear set	18. Retainer bolt
3. Bevel pinion spacer	19. Differential side right retainer : Apply sealant 99000-31260 to mating surface of right retainer, carrier and rear cover.
4. Shim	20. Shim
5. Rear bearing	21. Front drive shaft retainer : Apply sealant 99000-31260 to mating surface of drive shaft retainer, carrier and rear cover.
6. Front bearing	22. Bevel gear bolt : Apply thread lock cement 99000-32110 to thread part of bolt.
7. Oil seal : Apply grease 99000-25010 to oil seal lip.	23. Rear cover
8. Flange nut : After tightening nut so as rotation torque of bevel pinion shaft to be in specified value, caulk nut securely.	24. Rear cover bolt No.2 bolt


1217G 9. Differential carrier : Apply sealant 99000-31260 to mating surface of carrier and rear cover.	25. Rear cover bolt No.1 bolt
10. Differential pinion	26. Differential right case
11. Differential gear	(a) : 50 N·m (5.0 kgf-m, 36.5 lb-ft)
12. Pinion shaft	(b) : 60 N·m (6.0 kgf-m, 43.5 lb-ft)
13. Differential left case	(c) : 40 N·m (4.0 kgf-m, 29.5 lb-ft) + 50°
14. Thrust washer	⊗ : Do not reuse.
15. Differential side bearing	🔧 : Apply differential oil.
16. Spring washer	

Front Differential Assembly Disassembly and Reassembly

S6JB0B3216005


Disassembly

- 1) Remove front differential right mounting (1) and rear mounting (2).

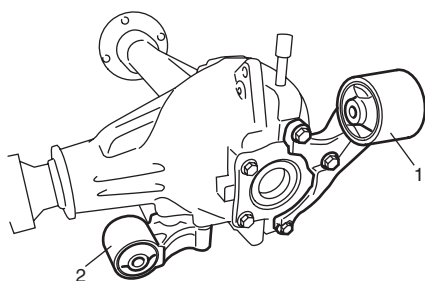


I5JB0A321005-01

- 2) Drive out front drive shaft (1) from front shaft retainer (2) using plastic hammer (3).

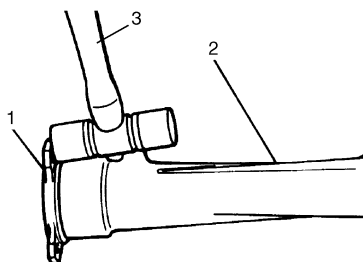

I5JB0A321006-01

- 3) Remove differential side right retainer and front drive shaft retainer, and then remove rear cover (1).

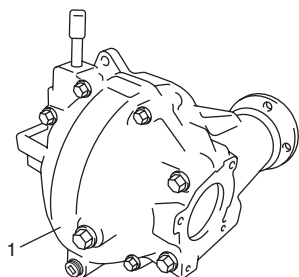


I5JB0A321007-01

- 4) Disassembly front drive shaft retainer as follows, if necessary.

- a) Remove oil seal (1) from front drive shaft retainer using special tool.


Special tool

(A): 09913-50121

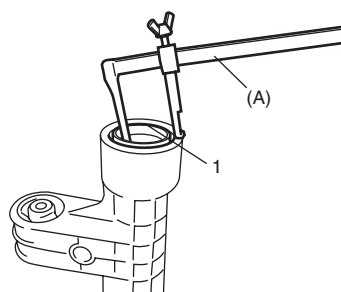

I5JB0A321008-01

- b) Remove snap ring (1) using snap ring plier.

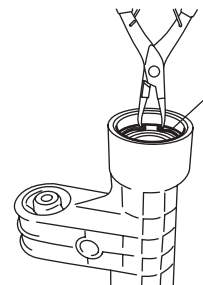


I5JB0A321009-01

- c) Drive out front drive shaft bearing using special tools.

Special tool

(A): 09930-30104

(B): 09941-64511

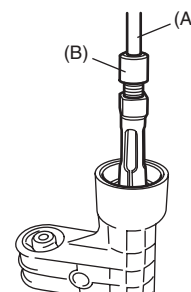


I5JB0A321010-01

3B-6 Differential: Front

- 5) Support differential side right retainer (1) with soft jawed vise and remove oil seal (2) from differential side right retainer using special tool, if necessary.


Special tool

(A): 09913-50121

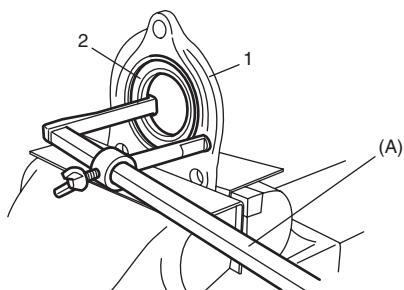

I5JB0A321011-01

- 6) Take out differential assembly (1), outer race and shim all at once.

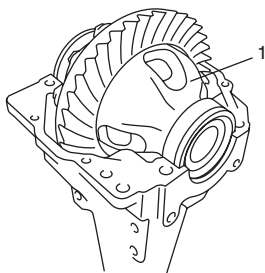


I5JB0A321012-02

- 7) Pull out differential side bearing (1) using special tools.

Special tool

(A): 09913-65135


(B): 09925-86010

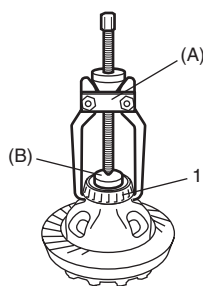

I5JB0A321013-02


- 8) Remove drive bevel gear (hypoid gear), differential gears, differential pinions and pinion shaft as follows.

- a) With aluminum plates (2) placed on vise first, grip differential case with it and remove drive bevel gear (hypoid gear) (3) by removing its bolts (1).

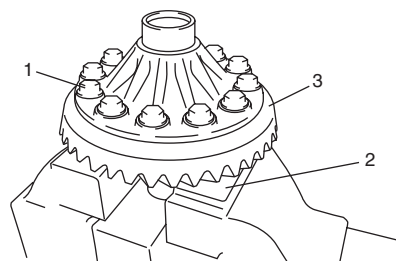

I5JB0A321014-02

- b) Remove pinion shaft (1), differential gears, washers, differential pinions, spring washers and thrust washers.

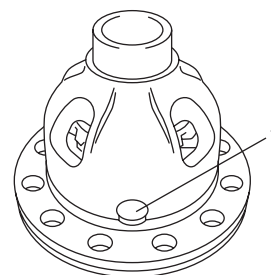


I5JB0A321015-02

- 9) Remove drive bevel pinion (hypoid gear) assembly as follows.

- a) Hold joint flange with special tool and then remove flange nut by using power wrench (4 – 10 magnification) (2).

Special tool

(A): 09922-66021

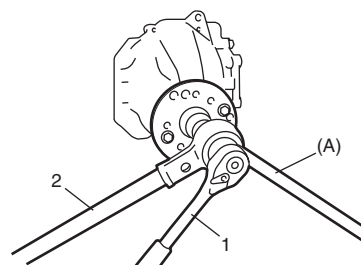

I5JB0A321016-02

1. Socket wrench

- b) Make mating marks (1) on drive bevel pinion and companion flange.

⚠ CAUTION


Do not make mating mark on the coupling surface of the flange.

- c) Remove flange (2) from drive bevel pinion. Use special tool if it is hard to remove.

Special tool


(A): 09913-65135

(B): 09925-88210

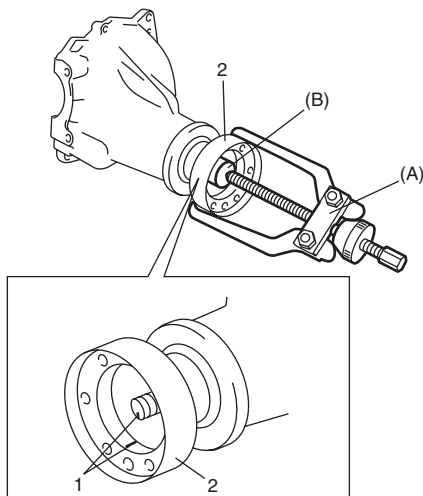

I5JB0A321017-02

- d) Remove drive bevel pinion (1) with rear bearing, shim and spacer from carrier. If it is hard to remove, screw an used nut (2) into drive bevel pinion and hammer (3) on that nut with a plastic hammer but never directly on drive bevel pinion.

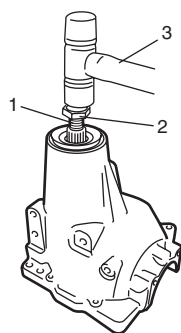


I5JB0A321018-01

- e) Remove drive bevel pinion rear bearing (2) by using bearing puller (3) and hydraulic press.

⚠ CAUTION

To avoid rear bearing from being damaged, support it at flat side of bearing puller.

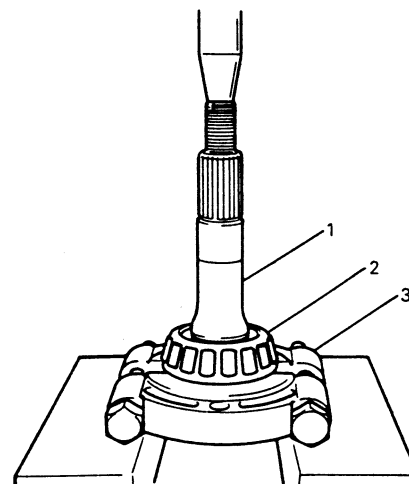


I1JA01322006-01

1. Drive bevel pinion

- 10) Remove oil seal (1) using special tool.


Special tool

(A): 09913-50121

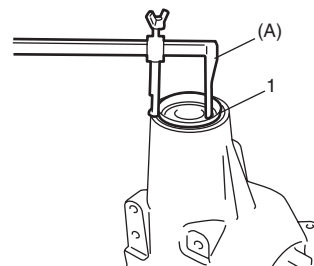

I5JB0A321019-01


- 11) Using a hammer and brass bar (1), drive out front bearing outer race (2).

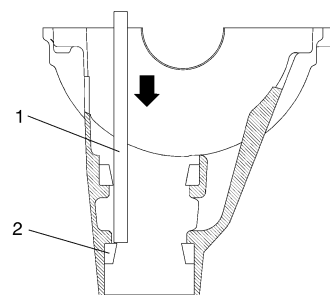

I5JB0A321020-01

3B-8 Differential: Front

- 12) Drive out rear bearing outer race (1) in the same manner as Step 11).

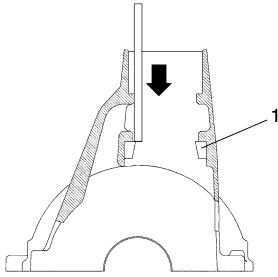

I5JB0A321021-01

Reassembly

Judging from faulty conditions noted before disassembly and what is found through visual check of bearing and gear tooth etc. after disassembly, prepare replacing parts and proceed to reassembly according to procedures as described.

⚠ CAUTION

- Drive bevel gear and pinion must be replaced as a set when either replacement becomes necessary.
- When replacing taper roller bearing, replace as inner race and outer race assembly.


- 1) For press-fitting drive bevel pinion bearing outer races, use special tools and press as shown in the figure.

Special tool

(A): 09924-74510

(B): 09925-14520

(C): 09913-75510

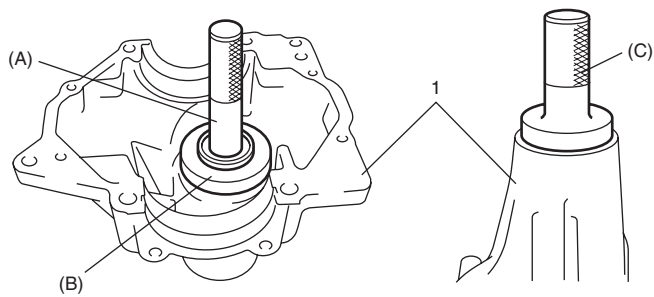


I5JB0A321022-01

1. Differential carrier


- 2) After applying differential oil to differential gear (4), pinions (5), pinion shaft (6), pinion washer, thrust washer (2) and spring washer (1), install them in differential right case (3).

For correct installing direction of thrust washer (2) and spring washer (1), refer to the figure.

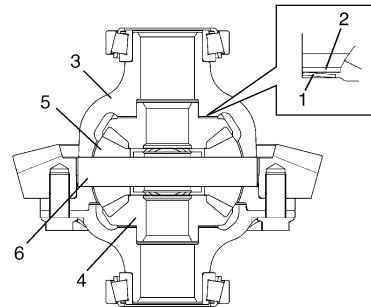

I5JB0A321023-05

- 3) Check differential pinion gear (1) for smooth rotation.

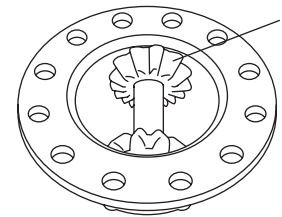

I5JB0A321024-04

- 4) Put drive bevel gear (3) on differential case (1) and fasten them with bolts (2) by tightening them to specified torque. Use thread lock cement for bolts (2).


⚠ CAUTION

Use of any other bolts than that specified is prohibited.

“A”: Thread lock cement 99000-32110 (Thread Lock Cement Super 1322)

Tightening torque

Bevel gear bolt (a): Tighten 40 N·m (4.0 kgf-m, 29.5 lb-ft) + 50°

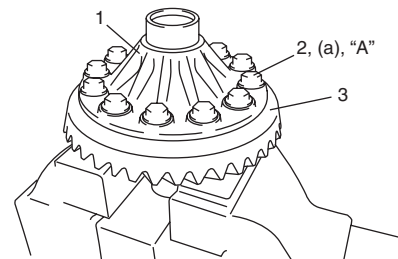

I5JB0A321025-01


- 5) Install special tool to differential case assembly (2) and check that preload is within specification. If preload exceeds specified value, check if foreign matter is caught or gear is damaged.

Special tool

(B): 09928-06510

Side gear preload

Max. 2.5 N·m (0.25 kgf-m, 1.8 lb-ft)

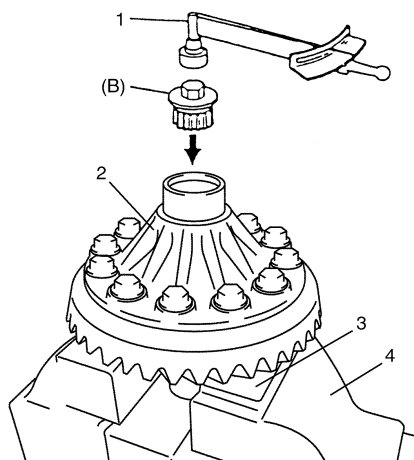

I5JB0A321026-01


- | |
|-------------------|
| 1. Torque wrench |
| 3. Aluminum plate |
| 4. Vise |

- 6) Press-fit left side bearing (1) with special tool and hydraulic press.

Special tool

(A): 09913-75821

(B): 09924-84510-004

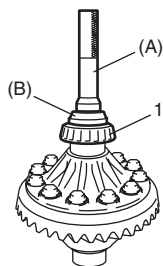

I5JB0A321027-01

- 7) Press-fit right side bearing (1) with special tools and hydraulic press.

NOTE


Be sure to use bearing holder for the purpose of protecting lower bearing.

Special tool

(A): 09913-75821

(B): 09924-84510-004

(C): 09924-84510-005

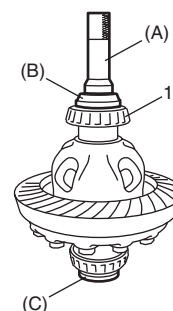

I5JB0A321028-02

3B-10 Differential: Front

8) To engage drive bevel pinion and gear correctly, it is pre-required to install drive bevel pinion to differential carrier properly by using adjusting shim as described on the followings. Shown below is relative positions of drive bevel pinion, differential carrier and mounting dummy.

Special tool

(A): 09900-20607

(B): 09926-78320


(C): 09922-75222

(D): 09951-16070

(E): 09951-46010

(F): 09926-78311-002

(G): 09922-76520

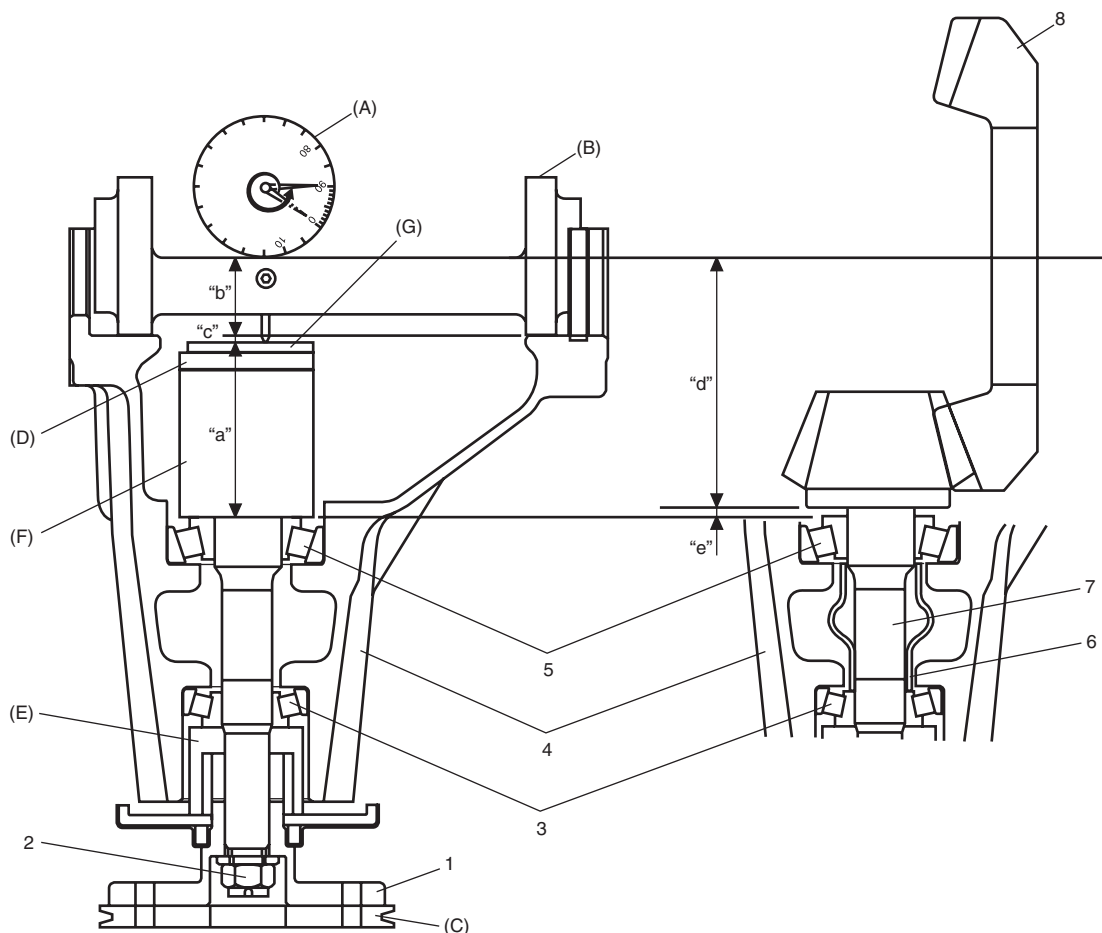

I5JB0A321029-02

1. Universal Joint flange	8. Drive bevel gear
2. Nut	"a": Pinion dummy height + Attachment height
3. Front bearing	"b": Axle dummy radius
4. Differential carrier	"a" + "b": Mounting dummy size 103.0 mm/4.0551 in.
5. Rear bearing	"c": Measured dimension
6. Spacer	"d": Drive bevel pinion mounting distance 102.0 mm/4.0157 in.
7. Drive bevel pinion	"e": Shim size for mounting distance adjustment (= "c" + 1)

- 9) Install special tools with bearings (3) and flange (2) to differential carrier (1).


NOTE

This installation requires no spacer or oil seal.

Special tool

(E): 09951-46010

(F): 09926-78311-002

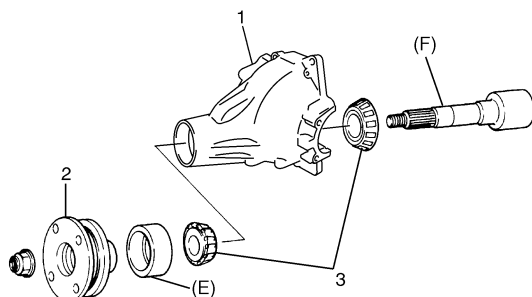

I5JB0A321030-01

- 10) Tighten flange nut (1) so that specified bearing preload is obtained.

NOTE

- Before taking measurement with spring balance (2) or torque wrench (3), check for rotation by hand and apply small amount of differential oil to bearings.
- On measuring preload, rotate the drive bevel pinion about 1 rotation per 2 seconds.

Special tool

(C): 09922-75222


(F): 09926-78311-002

Pinion bearing preload

0.9 – 1.7 N·m (9.0 – 17.0 kg-cm, 7.8 – 14.7 lb-in.)

Spring measure reading with special tool

20 – 40 N (2.0 – 4.0 kg, 4.4 – 8.8 lb)

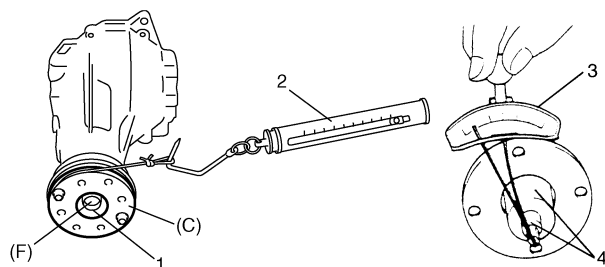

I5JB0A321031-01

4. Socket with adapter

- 11) Set dial gauge to mounting dummy and make 0 (zero) adjustment on surface plate (1).


NOTE

- When setting dial gauge to mounting dummy, tighten screw (2) lightly. Be careful not to overtighten it, which will cause damage to dial gauge.
- With dial gauge set, turn dummy back and force by hand a couple of times and attain accurate 0 (zero) adjustment.
- It is desirable that short pointer indicates beyond 2 mm when long one is at 0 (zero).

Special tool

(A): 09900-20607

(B): 09926-78320

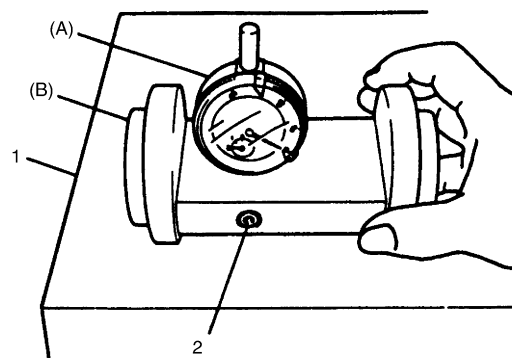

IYSQ01322033-01

3B-12 Differential: Front

- 12) Place zero-adjusted mounting dummy and dial gauge set on pinion mounting dummy and take measurement between zero position and extended dial gauge measuring tip.

NOTE

- Repeat turning back and force of dummy and measure distance as far as top surface of pinion dummy accurately.
- When dial gauge measuring tip extends from 0 (zero) position, pointer turns counterclockwise.
- Measured value may exceed 1 mm. Therefore, it is also necessary to know reading of short pointer.

Special tool


(A): 09900-20607

(B): 09926-78311

(D): 09951-16070

(F): 09926-78311-002

: 09922-76520

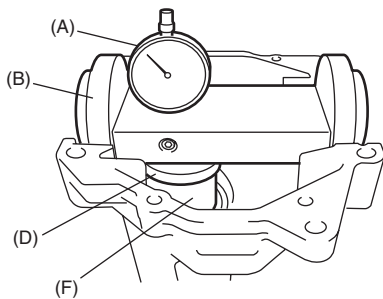

I5JB0A321032-01

- 13) Obtain adjusting shim thickness by the following equation.

Necessary shim thickness "e"	=	Mounting dummy size 103.0 mm/ 4.0551 in. "a" + "b"	+	Measured dimension "c"	-	Drive bevel pinion mounting distance 102 mm/ 4.0157 in.
------------------------------	---	--	---	------------------------	---	---

- 14) Select adjusting shim(s) (2) closest to calculated value from among the following available sizes and put it in place and then press-fit rear bearing (1).

Special tool


(G): 09913-85210

(H): 09940-53111

Available shim thickness

1.00, 1.03, 1.06, 1.09, 1.12, 1.15, 1.18, 1.21, 1.24, 1.27, 1.30 and 0.3 mm

(0.039, 0.040, 0.042, 0.043, 0.044, 0.045, 0.046, 0.047, 0.048, 0.049, 0.050 and 0.012 in.)

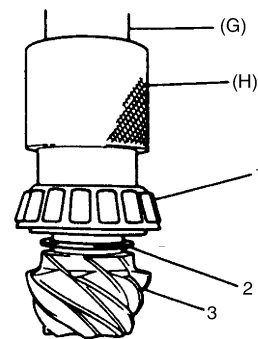


I5JB0A321033-01

3. Drive bevel pinion

- 15) With new pinion spacer (3) inserted as shown in the figure, install front bearing (5) to differential carrier (4).

NOTE

- Make sure to use new spacer for reinstallation.
- Apply differential oil to bearings.

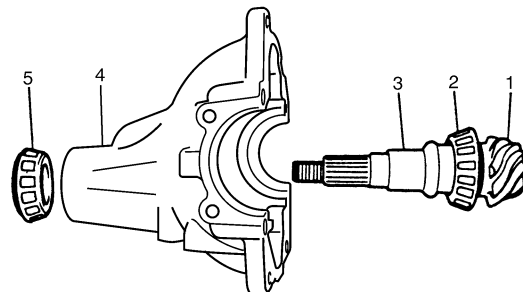

I5JB0A321034-01


1. Drive bevel pinion 2. Rear bearing

- 16) Using special tool and plastic hammer, drive oil seal (2) into differential carrier (1) as shown in figure. Then apply grease "A" to oil seal lip.

"A": Grease 99000-25010 (SUZUKI Super Grease A)

Special tool

(A): 09951-18210

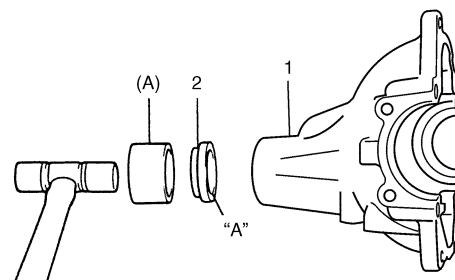

I5JB0A321035-01

- 17) While tightening flange nut gradually with special tool and power wrench (4 – 10 magnification) (1), set preload of pinion to specification.

NOTE

- Before taking measurement with spring balance (3) or torque wrench (4), check for smooth rotation by hand.
- On measuring preload, rotate the drive bevel pinion about 1 rotation per 2 seconds.
- Be sure to tighten gradually and carefully till specified starting torque is obtained. Turning back overtightened flange nuts should be avoided.

Pinion bearing preload

0.9 – 1.7 N·m (9.0 – 17.0 kg-cm, 7.8 – 14.7 lb-in.)


Spring measure reading with special tool

20 – 40 N (2.0 – 4.0 kg, 4.4 – 8.8 lb)

Special tool

(A): 09922-75222

(B): 09922-66021

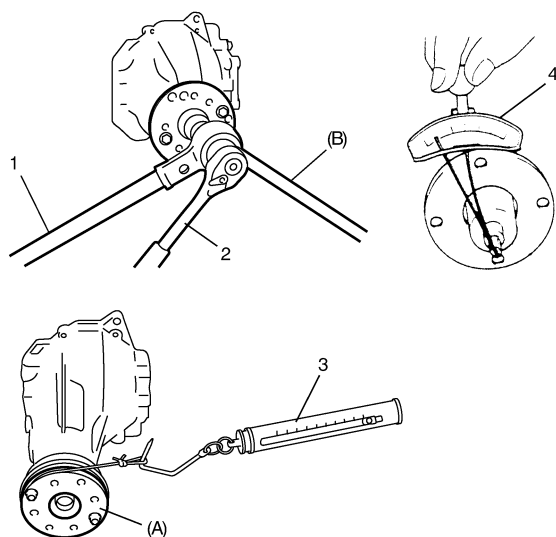


I5JB0A321036-02

2. Socket wrench

- 18) Select differential side bearing shim as follows.

- a) Measure dimension "a" and "b" using vernier caliper.

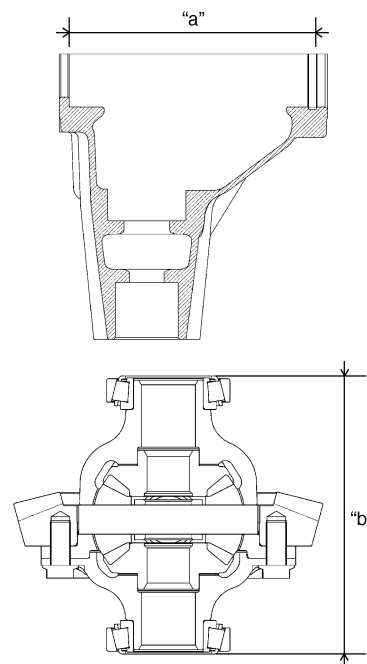

I5JB0A321037-04

- b) Calculate dimension "a" – "b", and select shims from among following available size so that total of thickness of right side and left side shims may reach the calculated value.

NOTE

Select shims so that thickness of right side shims and left side shims become almost even.

Available shim thickness

Right side: 1.75, 1.85, 1.95, 2.00, 2.05, 2.15 and 2.25 mm (0.069, 0.073, 0.077, 0.079, 0.081, 0.085 and 0.089 in.)

Left side: 2.75, 2.85, 2.95, 3.00, 3.05, 3.15 and 3.25 mm (0.108, 0.112, 0.116, 0.118, 0.120, 0.124 and 0.128 in.)

3B-14 Differential: Front

- 19) To measure bevel gear backlash, set dial gauge (1) at right angle to bevel gear tooth, fix drive bevel pinion and read dial gauge while moving bevel gear.

Special tool

(A): 09900-20607


(B): 09900-20701

Bevel gear backlash

: 0.1 – 0.2 mm (0.004 – 0.008 in.)

NOTE


- Be sure to apply measuring tip of dial gauge at right angles to convex side of tooth.
- Measure at least 4 points on drive bevel gear periphery.
- If backlash exceeds specification given below, adjust it by changing thickness ratio of differential side bearing shims.

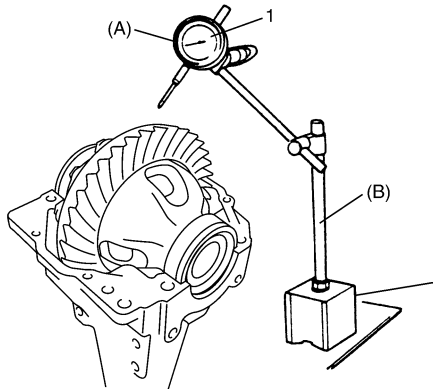

I5JB0A321038-03

- 20) Place bearing outer races on their respective bearings. Used left and right outer races are not interchangeable.

- 21) Install case assembly (1) in carrier (2).

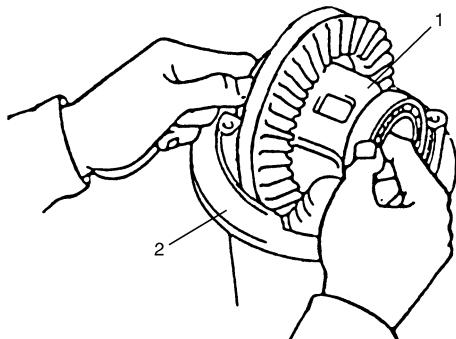


I5JB0A321039-01

- 22) As final step, check gear tooth contact as follows.

- a) After cleaning 10 drive bevel gear teeth, paint them with gear marking compound evenly by using brush (1) or sponge etc.
- b) Turn gear to bring its painted part in mesh with drive bevel pinion and turn it back and forth by hand to repeat their contact.
- c) Bring painted part up and check contact pattern, referring to the following table. If contact pattern is not normal, readjust or replace as necessary according to instruction in the table.



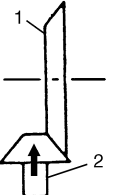

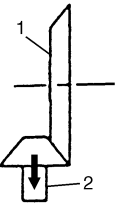
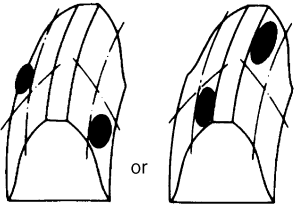
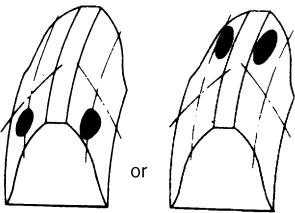
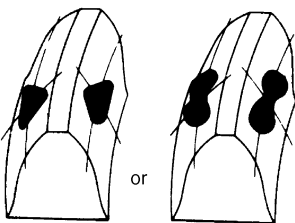
NOTE

Be careful not to turn drive bevel gear more than one full revolution, for it will hinder accurate check.

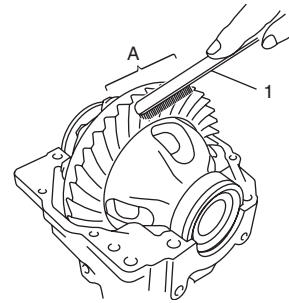


I5JB0A321040-02

A: Paint gear marking compound evenly

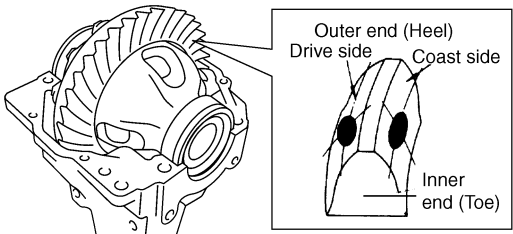Tooth Contact Pattern	Diagnosis and Remedy	
 <p>I5JB0A321041-05</p>	<p>Normal</p>	
 <p>IYSQ01321072-01</p>	<p>High Contact Pinion is positioned too far from the center of drive bevel gear (1).</p> <ul style="list-style-type: none"> • Increase thickness of pinion (2) height adjusting shim and position pinion closer to gear center. • Adjust drive bevel gear backlash to specification. 	 <p>IYSQ01321073-01</p>
 <p>IYSQ01321074-01</p>	<p>Low Contact Pinion is positioned too close to the center of drive bevel gear (1).</p> <ul style="list-style-type: none"> • Decrease thickness of pinion (2) height adjusting shim and position pinion farther from gear center. • Adjust drive bevel gear backlash to specification. 	 <p>IYSQ01321076-01</p>
 <p>IYSQ01321077-01</p>	<p>If adjustment is impossible, replace differential carrier.</p>	
 <p>IYSQ01321078-01</p>	<ul style="list-style-type: none"> • Check seating of bevel gear or differential case. (Check bevel gear for runout.) • If adjustment is impossible, replace drive bevel gear and pinion set or differential carrier. 	
 <p>IYSQ01321079-01</p>	<p>Replace drive bevel gear and pinion set or differential case.</p>	

3B-16 Differential: Front

- 23) Upon completion of gear tooth contact check in Step 22), caulk flange nut (2) with caulking tool (1) and hammer.

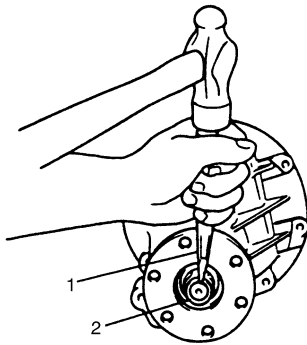

I1JA01322021-01



- 24) Clean mating surface of differential carrier (2) and rear cover (1), apply sealant to carrier as shown in figure by such amount that its section is 1.5 mm (0.059 in.) in diameter, mate rear cover with differential carrier, and then tighten bolts to specified torque.

“A”: Sealant 99000–31260 (SUZUKI Bond No.1217G)

Tightening torque

Rear cover bolt No.1 (a): 50 N·m (5.0 kgf-m, 36.5 lb-ft)

Rear cover bolt No.2 (b): 60 N·m (6.0 kgf-m, 43.5 lb-ft)

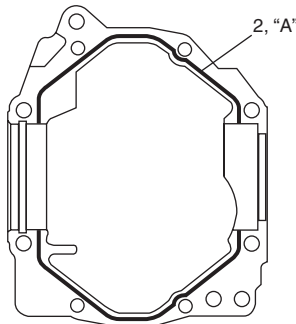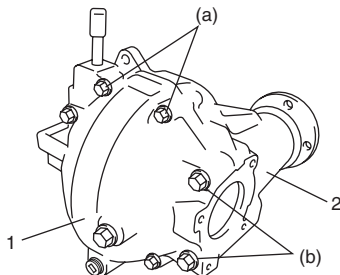


I6JB01321001-03

- 25) Assembly front drive shaft retainer as follows.

- a) Install front drive shaft bearing (1) using special tool, and then install snap ring.

Special tool

(A): 09913–75520

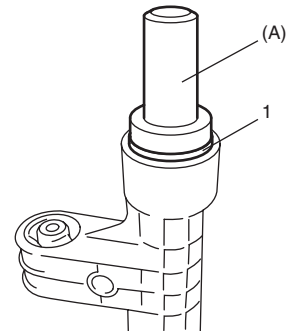

I5JB0A321043-01

- b) Apply grease to oil seal lip, and then install oil seal (1) using special tools as shown in figure.

Distance between retainer surface and oil seal


“a”: 4.7 – 5.2 mm (0.185 – 0.205 in.)

“A”: Grease 99000–25010 (SUZUKI Super Grease A)

Special tool

(A): 09924–74510

(B): 09951–16090

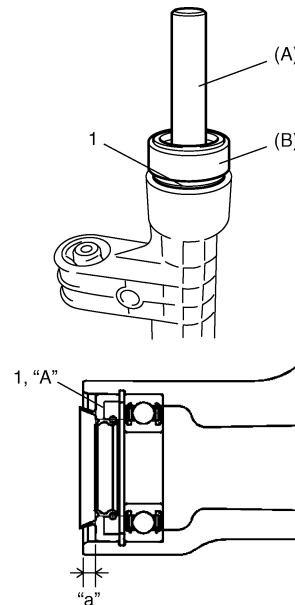

I5JB0A321044-01

- 26) Apply grease to oil seal lip, and then install oil seal into differential side right retainer (1) as shown in figure.

 

Distance between retainer surface and oil seal

"a": 0.65 – 1.65 mm (0.026 – 0.065 in.)

"A": Grease 99000–25010 (SUZUKI Super Grease A)

Special tool

(A): 09913–75520

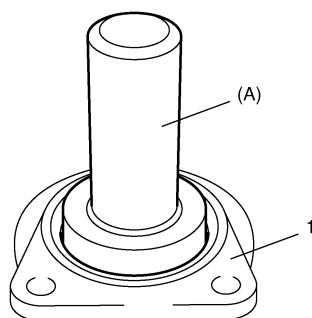


I5JB0A321045-01

- 27) Clean mating surface of right retainer, carrier (1) and rear cover (2), apply sealant to carrier and rear cover as shown in figure by such amount that its section is 1.5 mm (0.059 in.) in diameter, mate right retainer with carrier and rear cover, and then tighten bolts to specified torque.

"A": Sealant 99000–31260 (SUZUKI Bond No.1217G)

Tightening torque

Retainer bolt: 50 N·m (5.0 kgf-m, 36.5 lb-ft)

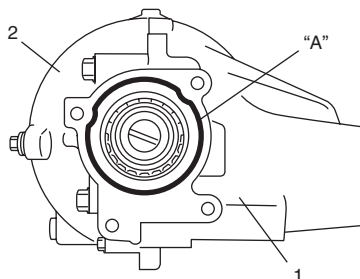


I5JB0A321048-01

- 28) Clean mating surface of front drive shaft retainer, carrier (1) and rear cover (2), apply sealant to carrier and rear cover as shown in figure by such amount that its section is 1.5 mm (0.059 in.) in diameter, mate front drive shaft retainer with carrier and rear cover, and then tighten bolts to specified torque.

"A": Sealant 99000–31260 (SUZUKI Bond No.1217G)

Tightening torque

Retainer bolt: 50 N·m (5.0 kgf-m, 36.5 lb-ft)

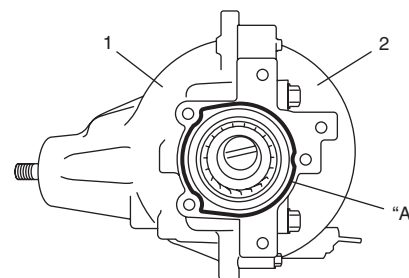


I5JB0A322014-01

- 29) Install front drive shaft using plastic hammer.

- 30) Install front differential rear mounting (1).

Tightening torque

Rear mounting bracket bolt (a): 50 N·m (5.0 kgf-m, 36.5 lb-ft)

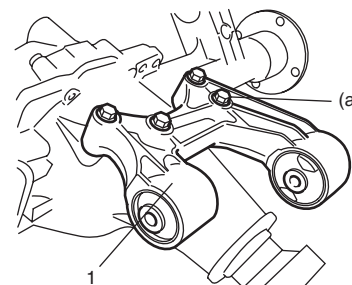


I5JB0A321046-01

- 31) Install front differential right mounting (1).

Tightening torque

Right mounting bracket bolt (b): 50 N·m (5.0 kgf-m, 36.5 lb-ft)

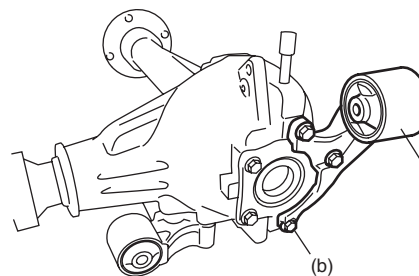

I5JB0A321047-02

Front Differential Inspection

S6JB0B3216006

- Check companion flange for wear or damage.
- Check bearings for wear or discoloration.
- Check differential carrier for cracks.
- Check drive bevel pinion and drive bevel gear for wear or cracks.
- Check differential gears, pinions and pinion shafts for wear or damage.
- Check differential gear spline for wear or damage.

Specifications**Tightening Torque Specifications**

S6JB0B3217001

Fastening part	Tightening torque			Note
	N·m	kgf-m	lb-ft	
Differential oil drain plug	23	2.3	17.0	🔩
Differential oil level / filler plug	23	2.3	17.0	🔩
Bevel gear bolt	Tighten 40 N·m (4.0 kgf-m, 29.5 lb-ft) + 50°			🔩
Rear cover bolt No.1	50	5.0	36.5	🔩
Rear cover bolt No.2	60	6.0	43.5	🔩
Retainer bolt	50	5.0	36.5	🔩 / 🔩
Rear mounting bracket bolt	50	5.0	36.5	🔩
Right mounting bracket bolt	50	5.0	36.5	🔩

NOTE

The specified tightening torque is also described in the following.

“Front Differential Unit Components: Front”

“Front Differential Components: Front”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Special Tools and Equipment**Recommended Service Material**

S6JB0B3218001















Material	SUZUKI recommended product or Specification		Note
Grease	SUZUKI Super Grease A	P/No.: 99000–25010	🔩 / 🔩 / 🔩
Sealant	SUZUKI Bond No.1217G	P/No.: 99000–31260	🔩 / 🔩 / 🔩 / 🔩 / 🔩
Thread lock cement	Thread Lock Cement Super 1322	P/No.: 99000–32110	🔩

NOTE


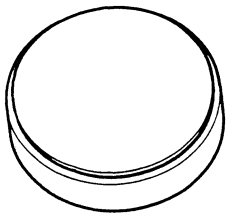
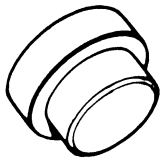
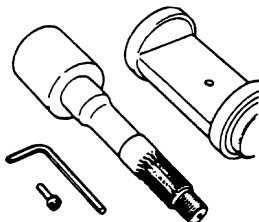
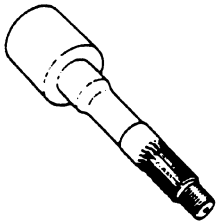
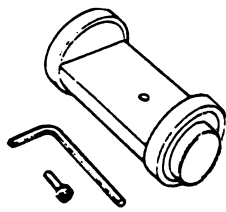
 
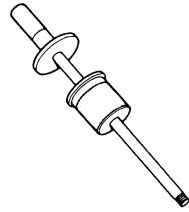
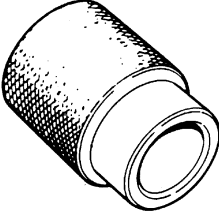
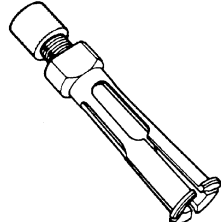
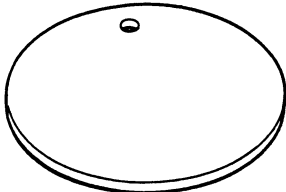
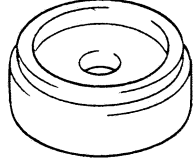
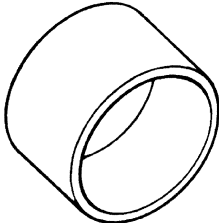
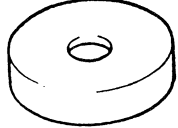
Required service material is also described in the following.

“Front Differential Components: Front”

Special Tool

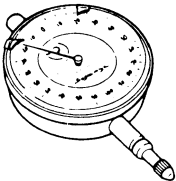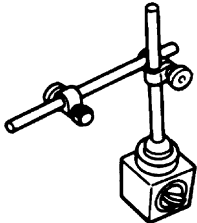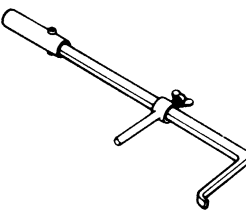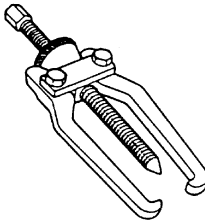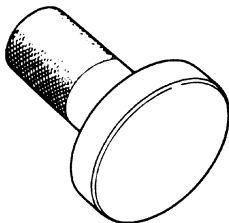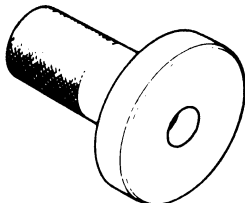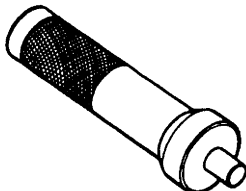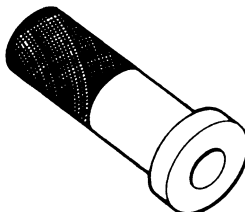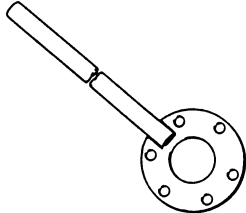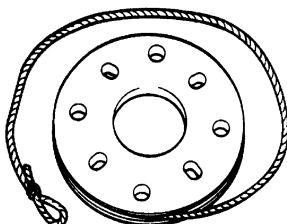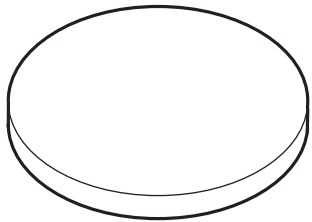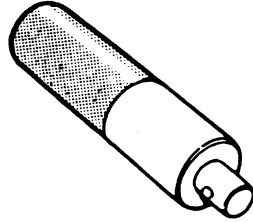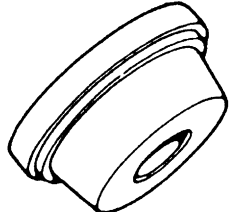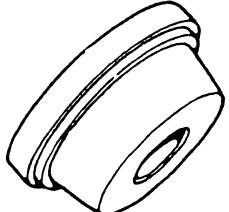09900–20607 Dial gauge 	09900–20701 Magnetic stand 
09913–50121 Oil seal remover 	09913–65135 Bearing puller 
09913–75510 Bearing installer 	09913–75520 Bearing installer 
09913–75821 Bearing installer attachment 	09913–85210 Bearing installer 
09922–66021 Flange holder 	09922–75222 Differential gear preload adjuster 
09922–76520 Bevel pinion gauge block 	09924–74510 Bearing and oil seal handle 
09924–84510–004 Bearing installer attachment 	09924–84510–005 Bearing installer attachment (D) 

3B-20 Differential: Front

09925-14520 Bearing and oil seal installer (80 x 50 mm) 	09925-86010 Bearing puller attachment 
09925-88210 Bearing puller attachment 	09926-78311 Differential bevel pinion dummy 
09926-78311-002 Pinion mounting dummy 	09926-78320 Mounting dummy 
09928-06510 Differential torque checking tool 	09930-30104 Sliding shaft 
09940-53111 Differential side bearing installer 	09941-64511 Bearing and oil seal remover (30 mm Min.) 
09951-16070 Shim adjuster attachment 	09951-16090 Oil seal installer 
09951-18210 Oil seal remover & installer No. 2 	09951-46010 Drive shaft oil seal installer 

Rear

General Description

Rear Differential Construction

Refer to “Front Differential Construction: Front”.

S6JB0B3221001

Diagnostic Information and Procedures

Rear Differential Symptom Diagnosis

Refer to “Front Differential Symptom Diagnosis: Front”.

S6JB0B3224001

Repair Instructions

Rear Differential Oil Change

Refer to “Front Differential Oil Change: Front” except for oil capacity below that is different from the front differential.


S6JB0B3226001

Rear differential oil capacity

Reference: 0.75 – 0.85 liters (1.6/1.3 – 1.8/1.5 US/Imp. pt.)

Rear Differential Unit Components

S6JB0B3226002

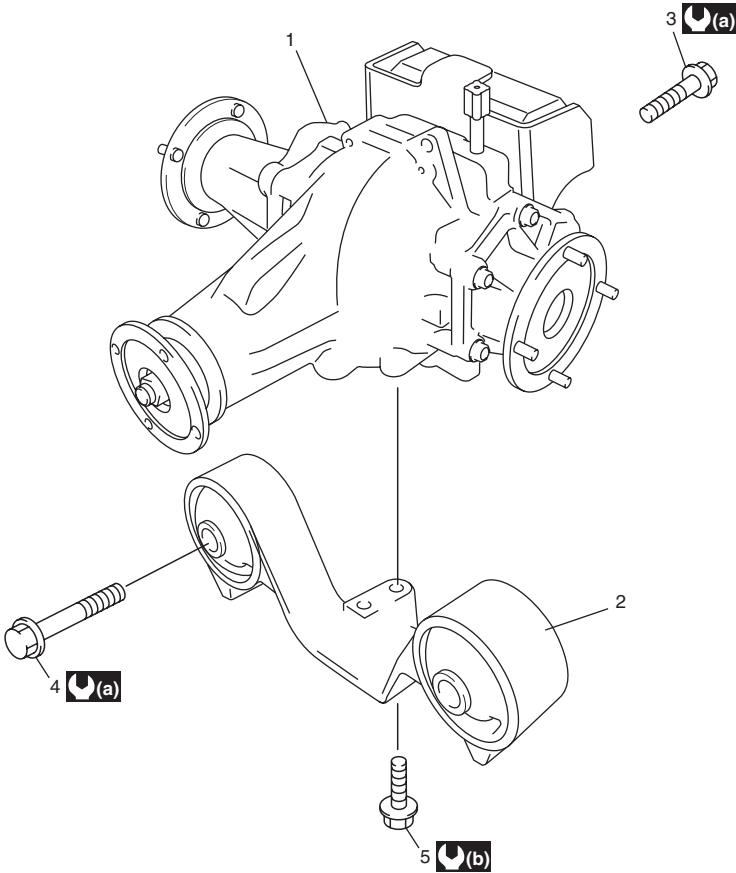

I5JB0A322002-03

1. Rear differential	4. Front mounting bracket bolt
2. Front mounting bracket	(a) : 120 N·m (12.0 kgf-m, 87.0 lb-ft)
3. Rear mounting bolt	(b) : 50 N·m (5.0 kgf-m, 36.5 lb-ft)

Rear Differential Dismounting and Remounting

S6JB0B3226003

Dismounting

- 1) Lift up vehicle and drain oil from rear differential.
- 2) Remove rear propeller shaft referring to "Propeller Shaft Removal and Installation in Section 3D".
- 3) Remove exhaust center pipe referring to "Exhaust System Components in Section 1K".
- 4) Remove rear drive shafts referring to "Rear Drive Shaft Assembly Removal and Installation: Rear in Section 3A".
- 5) Support rear differential with transmission jack.
- 6) Remove front and rear mounting bolts, and then lower rear differential.

Remounting

Reverse dismounting procedure for remounting noting the following.

- Tighten rear differential mounting front and rear bolts to specified torque.

Tightening torque


Rear differential front mounting bolt: 120 N·m (12.0 kgf-m, 87.0 lb-ft)

Rear differential rear mounting bolt: 120 N·m (12.0 kgf-m, 87.0 lb-ft)

- Tighten rear suspension frame front and rear bolts to specified torque referring to "Rear Suspension Construction in Section 2C".
- Fill rear differential oil referring to "Rear Differential Oil Change: Rear".

 



 


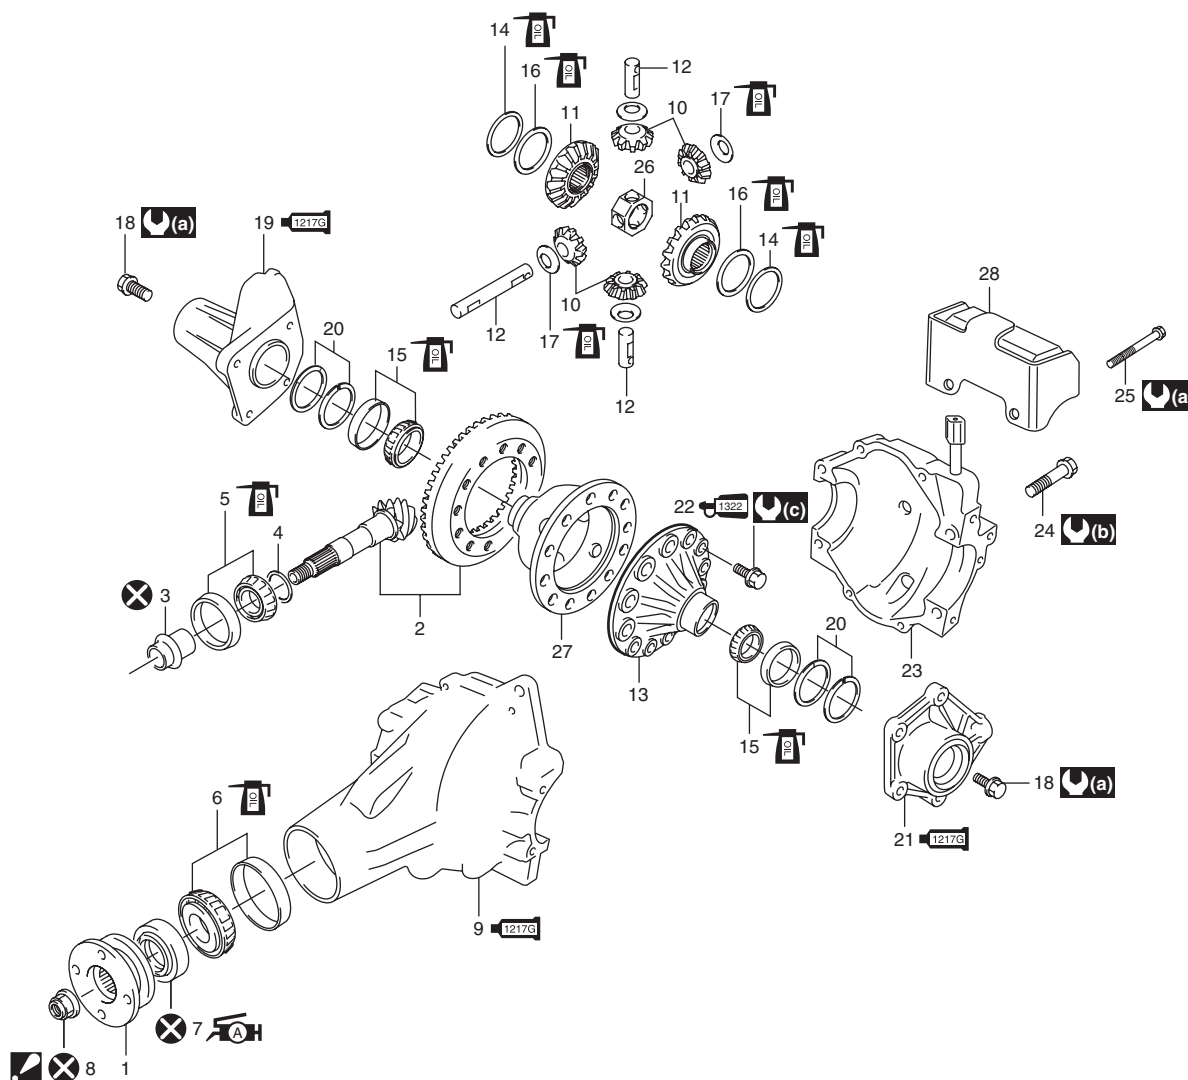


Rear Differential Components

S6JB0B3226004



I6JB0A322001-01

1. Universal joint flange	18. Retainer bolt
2. Hypoid gear set	19. Rear drive right retainer : Apply sealant 99000-31260 to mating surface of right retainer, carrier and rear cover.
3. Bevel pinion spacer	20. Shim

4. Shim	 21. Rear drive left retainer : Apply sealant 99000-31260 to mating surface of left retainer, carrier and rear cover.
5. Rear bearing	 22. Bevel gear bolt : Apply thread lock cement 99000-32110 to thread part of bolt.
6. Front bearing	23. Rear cover
 7. Oil seal : Apply grease 99000-25010 to oil seal lip.	24. Rear cover bolt No.2 bolt
 8. Flange nut : After tightening nut so as rotation torque of bevel pinion shaft to be in specified value, caulk nut securely.	25. Rear cover bolt No.1 bolt
 9. Differential carrier : Apply sealant 99000-31260 to mating surface of carrier and rear cover.	26. Pinion joint
10. Differential pinion	27. Differential right case
11. Differential gear	28. Dynamic damper (if equipped)
12. Pinion shaft	 (a) : 50 N·m (5.0 kgf-m, 36.5 lb-ft)
13. Differential left case	 (b) : 60 N·m (6.0 kgf-m, 43.5 lb-ft)
14. Thrust washer	 (c) : 200 N·m (20.0 kgf-m, 145.0 lb-ft)
15. Differential side bearing	 : Do not reuse.
16. Spring washer	 : Apply differential oil.
17. Pinion washer	

Rear Differential Assembly Disassembly and Reassembly

S6JB0B3226005


Disassembly

- 1) Drive out rear drive right and left shaft using special tools.

Special tool


(A): 09942-15511

(B): 09943-17912

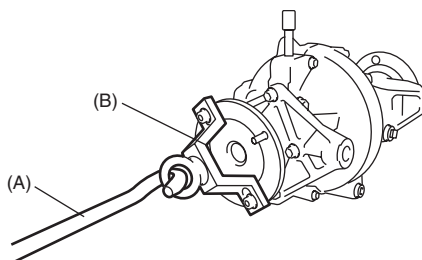

I5JB0A322007-01

- 2) Remove rear drive right and left retainers.
- 3) Tapping rear cover flanges with plastic hammer, remove rear cover (1) and dynamic damper (if equipped).

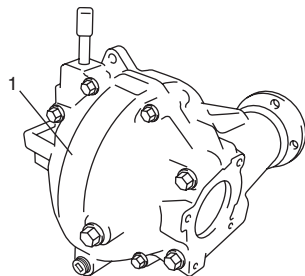


I5JB0A322008-01

- 4) Disassembly rear drive right retainer as follows, if necessary.

- a) Remove oil seal (1) using special tool.

Special tool

(A): 09913-50121

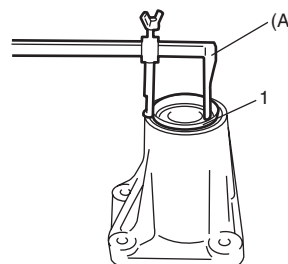

I5JB0A322009-01

- b) Remove snap ring.



I5JB0A322010-01


3B-24 Differential: Rear

- c) Drive out rear drive shaft bearing using special tools.

Special tool


(A): 09930-30104

(B): 09941-64511

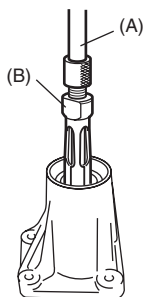

I5JB0A322011-01

- 5) Disassembly rear drive left retainer in the same manner at Step 4), if necessary.
6) Take out differential assembly (1), outer race and shim all at once.

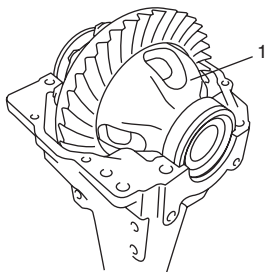


I5JB0A321012-02

- 7) Pull out differential side bearing (1) using special tools.

Special tool

(A): 09913-65135


(B): 09925-86010

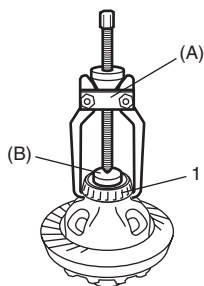

I5JB0A321013-02


- 8) Remove drive bevel gear (hypoid gear), differential gears, differential pinions and pinion shaft as follows.

- a) With aluminum plates (2) placed on vise first, grip differential case with it and remove drive bevel gear (hypoid gear) (3) by removing its bolts (1).

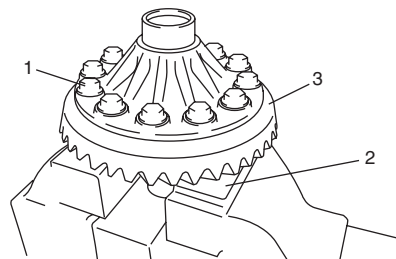

I5JB0A321014-02

- b) Remove pinion shafts (1), differential gears, washers, differential pinions, spring washers, thrust washers and pinion joint.

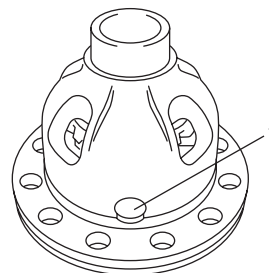


I5JB0A321015-02

- 9) Remove drive bevel pinion (hypoid gear) assembly as follows.

- a) Hold joint flange with special tool and then remove flange nut by using power wrench (4 – 10 magnification) (2).

Special tool

(A): 09922-66021

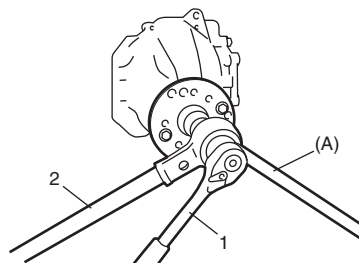

I5JB0A321016-02

1. Socket wrench

- b) Make mating marks (1) on drive bevel pinion and companion flange.

⚠ CAUTION


Do not make mating mark on the coupling surface of the flange.

- c) Remove flange (2) from drive bevel pinion. Use special tool if it is hard to remove.

Special tool


(A): 09913-65135

(B): 09925-88210

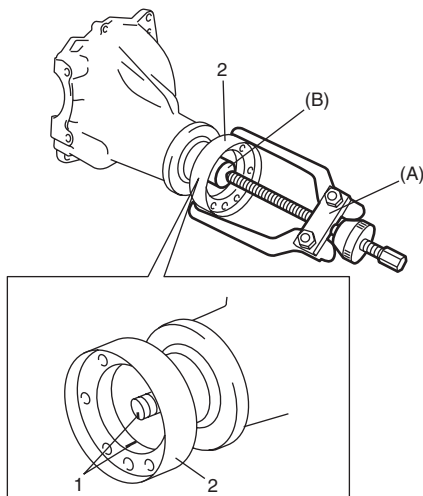

I5JB0A321017-02

- d) Remove drive bevel pinion (1) with rear bearing, shim and spacer from carrier. If it is hard to remove, screw an used nut (2) into drive bevel pinion and hammer (3) on that nut with a plastic hammer but never directly on drive bevel pinion.

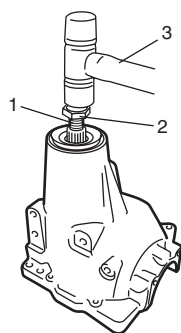


I5JB0A321018-01

- e) Remove drive bevel pinion rear bearing (2) by using bearing puller (3) and hydraulic press.

⚠ CAUTION

To avoid rear bearing from being damaged, support it at flat side of bearing puller.

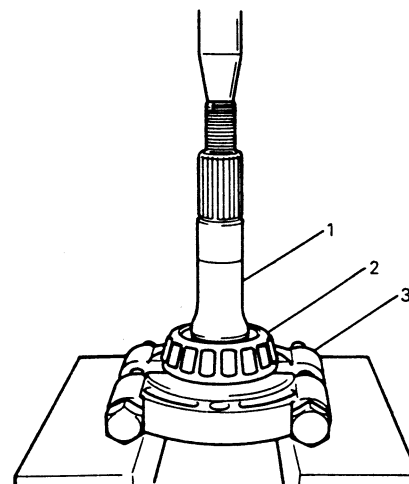


I1JA01322006-01

1. Drive bevel pinion

- 10) Remove oil seal (1) using special tool.


Special tool

(A): 09913-50121

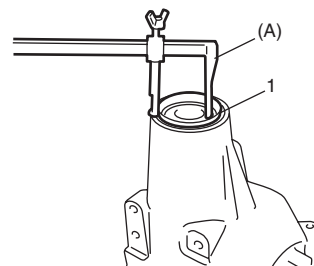


I5JB0A321019-01

- 11) Using a hammer and brass bar (1), drive out front bearing outer race (2).

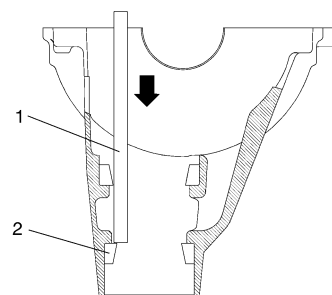

I5JB0A321020-01

- 12) Drive out rear bearing outer race (1) in the same manner as Step 11).

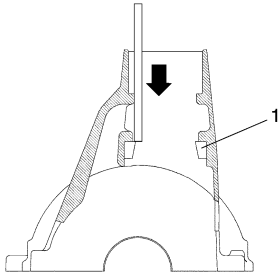

I5JB0A321021-01

Reassembly

Judging from faulty conditions noted before disassembly and what is found through visual check of bearing and gear tooth etc. after disassembly, prepare replacing parts and proceed to reassembly according to procedures as described.

⚠ CAUTION

- Drive bevel gear and pinion must be replaced as a set when either replacement becomes necessary.
- When replacing taper roller bearing, replace as inner race and outer race assembly.


- 1) For press-fitting drive bevel pinion bearing outer races, use special tools and press as shown in the figure.

Special tool

(A): 09924-74510

(B): 09925-14520

(C): 09913-75510

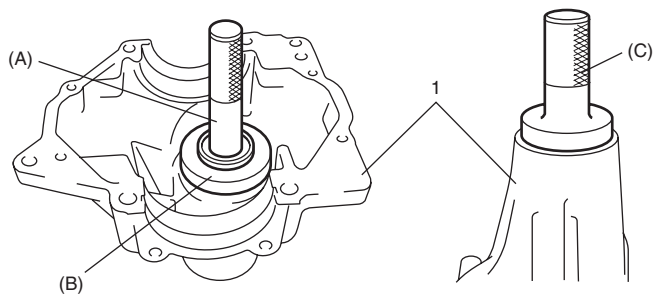


I5JB0A321022-01

1. Differential carrier


- 2) After applying differential oil to differential gear (4), pinions (5), pinion shafts (6), pinion washer, thrust washer (2) and spring washer (1), install them in differential right case (3).

For correct installing direction of thrust washer (2) and spring washer (1), refer to the figure.

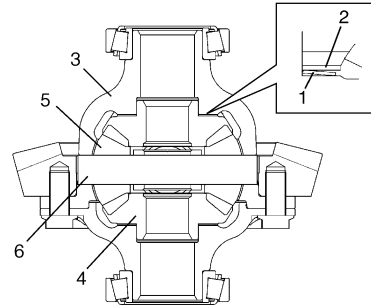

I5JB0A321023-05

- 3) Check differential pinion gear (1) for smooth rotation.

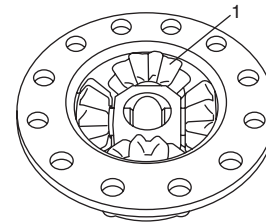

I5JB0A322015-01

- 4) Put drive bevel gear (3) on differential case (1) and fasten them with bolts (2) by tightening them to specified torque. Use thread lock cement for bolts (2).


⚠ CAUTION

Use of any other bolts than that specified is prohibited.

“A”: Thread lock cement 99000-32110 (Thread Lock Cement Super 1322)

Tightening torque

Bevel gear bolt (a): Tighten 40 N·m (4.0 kgf-m, 29.5 lb-ft) + 50°

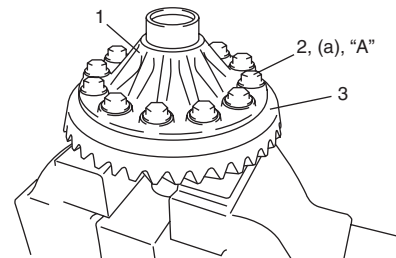

I5JB0A321025-01


- 5) Install special tool to differential case assembly (2) and check differential gear for preload. If preload exceeds specified value, check if foreign matter is caught or gear is damaged.

Special tool

(B): 09928-06510

Differential gear preload

Max. 2.5 N·m (0.25 kgf-m, 1.8 lb-ft)

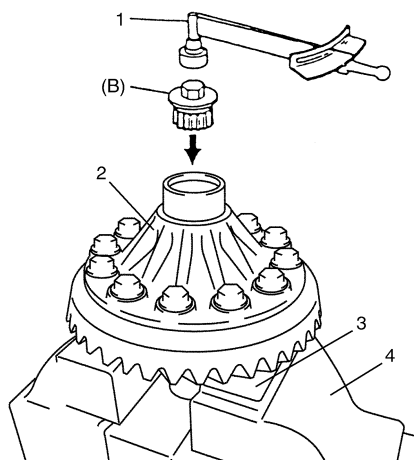

I5JB0A321026-01


- | |
|-------------------|
| 1. Torque wrench |
| 3. Aluminum plate |
| 4. Vise |

- 6) Press-fit left side bearing (1) with special tool and hydraulic press.

Special tool

(A): 09913-75821

(B): 09924-84510-004

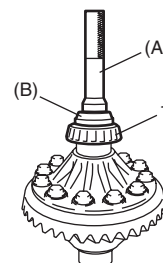

I5JB0A321027-01

- 7) Press-fit right side bearing (1) with special tools and hydraulic press.

NOTE


Be sure to use bearing holder for the purpose of protecting lower bearing.

Special tool

(A): 09913-75821

(B): 09924-84510-004

(C): 09924-84510-005

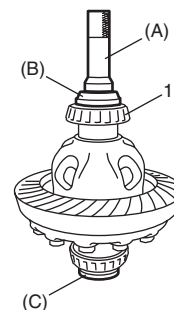

I5JB0A321028-02

3B-28 Differential: Rear

8) To engage drive bevel pinion and gear correctly, it is pre-required to install drive bevel pinion to differential carrier properly by using adjusting shim as described on the followings. Shown below is relative positions of drive bevel pinion, differential carrier and mounting dummy.

Special tool

(A): 09900-20607

(B): 09926-78320


(C): 09922-75222

(D): 09951-16070

(E): 09951-46010

(F): 09926-78311-002

(G): 09922-76520

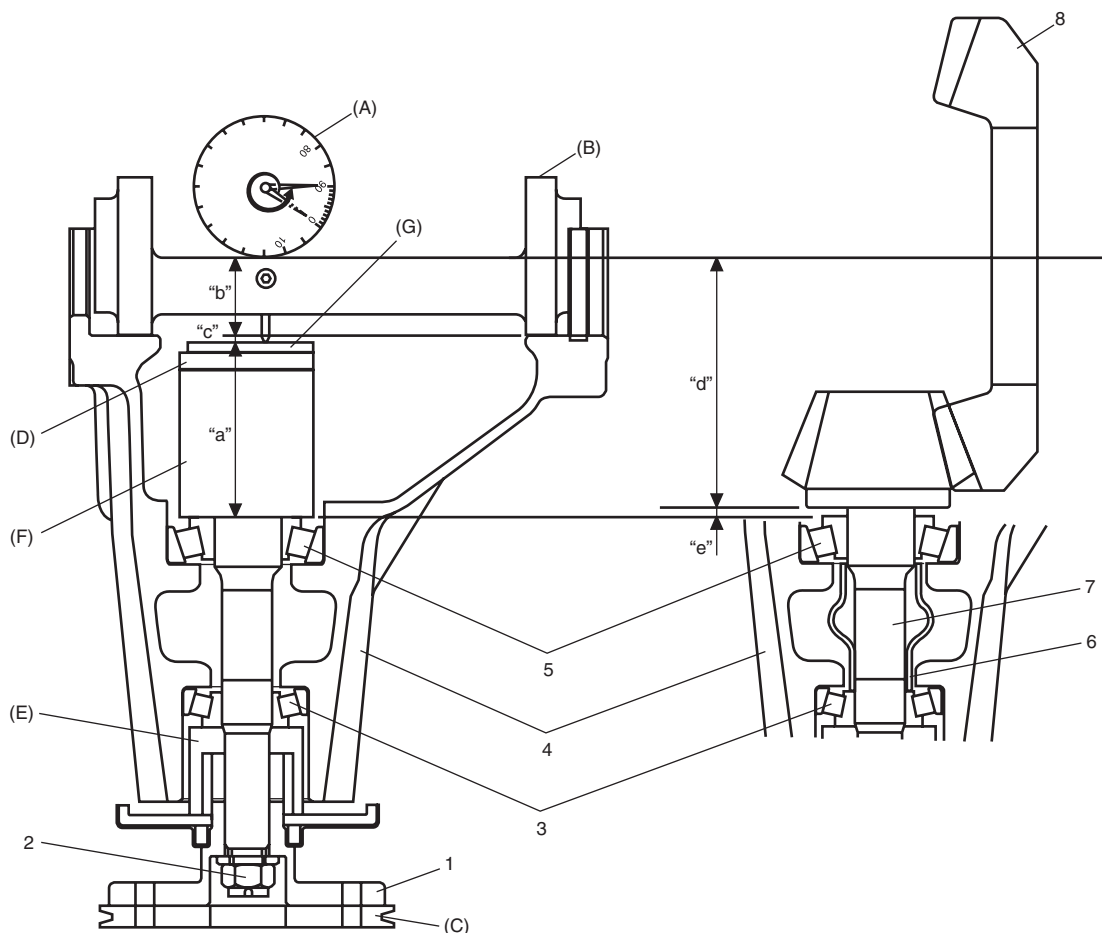

I5JB0A321029-02

1. Universal Joint flange	8. Drive bevel gear
2. Nut	"a": Pinion dummy height + Attachment height
3. Front bearing	"b": Axle dummy radius
4. Differential carrier	"a" + "b": Mounting dummy size 103.0 mm/4.0551 in.
5. Rear bearing	"c": Measured dimension
6. Spacer	"d": Drive bevel pinion mounting distance 102.0 mm/4.0157 in.
7. Drive bevel pinion	"e": Shim size for mounting distance adjustment (= "c" + 1)

- 9) Install special tools with bearings (3) and flange (2) to differential carrier (1).


NOTE

This installation requires no spacer or oil seal.

Special tool

(E): 09951-46010

(F): 09926-78311-002

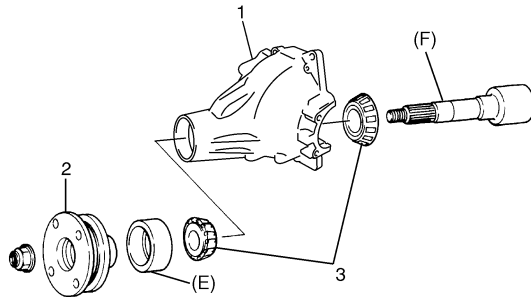

I5JB0A321030-01

- 10) Tighten flange nut (1) so that specified bearing preload is obtained.

NOTE

- Before taking measurement with spring balance (2) or torque wrench (3), check for rotation by hand and apply small amount of differential oil to bearings.
- On measuring preload, rotate the drive bevel pinion about 1 rotation per 2 seconds.

Special tool

(C): 09922-75222


(F): 09926-78311-002

Pinion bearing preload

0.9 – 1.7 N·m (9.0 – 17.0 kg-cm, 7.8 – 14.7 lb-in.)

Spring measure reading with special tool

20 – 40 N (2.0 – 4.0 kg, 4.4 – 8.8 lb)

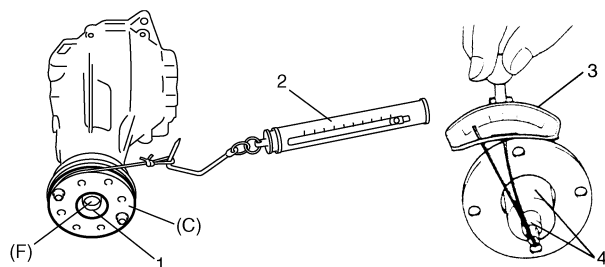

I5JB0A321031-01

4. Socket with adapter

- 11) Set dial gauge to mounting dummy and make 0 (zero) adjustment on surface plate (1).


NOTE

- When setting dial gauge to mounting dummy, tighten screw (2) lightly. Be careful not to overtighten it, which will cause damage to dial gauge.
- With dial gauge set, turn dummy back and force by hand a couple of times and attain accurate 0 (zero) adjustment.
- It is desirable that short pointer indicates beyond 2 mm when long one is at 0 (zero).

Special tool

(A): 09900-20607

(B): 09926-78320

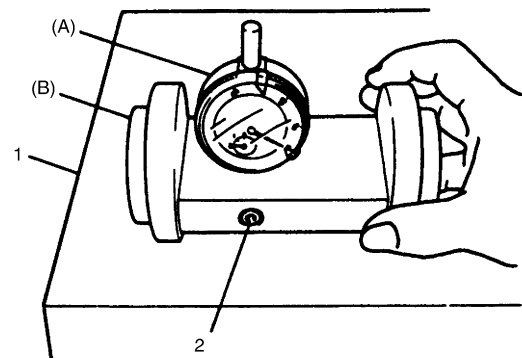

IYSQ01322033-01

- 12) Place zero-adjusted mounting dummy and dial gauge set on pinion mounting dummy and take measurement between zero position and extended dial gauge measuring tip.

NOTE

- Repeat turning back and force of dummy and measure distance as far as top surface of pinion dummy accurately.
- When dial gauge measuring tip extends from 0 (zero) position, pointer turns counterclockwise.
- Measured value may exceed 1 mm. Therefore, it is also necessary to know reading of short pointer.

Special tool


(A): 09900-20607

(B): 09926-78311

(D): 09951-16070

(F): 09926-78311-002

: 09922-76520

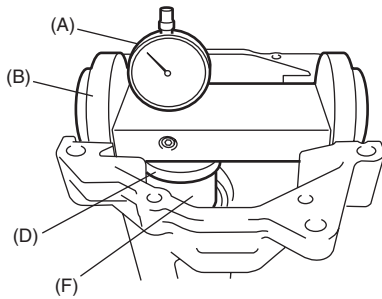

I5JB0A321032-01

- 13) Obtain adjusting shim thickness by the following equation.

Necessary shim thickness "e"	=	Mounting dummy size 103.0mm / 4.0551 in. "a" + "b"	+	Measured dimension "c"	-	Drive bevel pinion mounting distance 102 mm / 4.0157 in.
------------------------------	---	--	---	------------------------	---	--

- 14) Select adjusting shim(s) (2) closest to calculated value from among the following available sizes and put it in place and then press-fit rear bearing (1).

Special tool


(G): 09913-85210

(H): 09940-53111

Available shim thickness

1.00, 1.03, 1.06, 1.09, 1.12, 1.15, 1.18, 1.21, 1.24, 1.27, 1.30 and 0.3 mm

(0.039, 0.040, 0.042, 0.043, 0.044, 0.045, 0.046, 0.047, 0.048, 0.049, 0.050 and 0.012 in.)

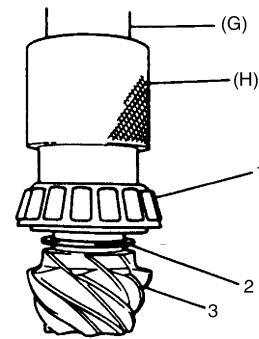


I5JB0A321033-01

3. Drive bevel pinion

- 15) With new pinion spacer (3) inserted as shown in the figure, install front bearing (5) to differential carrier (4).

NOTE

- Make sure to use new spacer for reinstallation.
- Apply differential oil to bearings.

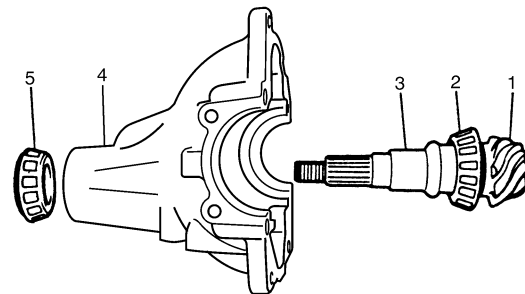

I5JB0A321034-01


1. Drive bevel pinion 2. Rear bearing

- 16) Using special tool and plastic hammer, drive oil seal (2) into differential carrier (1) as shown in figure. Then apply grease "A" to oil seal lip.

"A": Grease 99000-25010 (SUZUKI Super Grease A)

Special tool

(A): 09951-18210

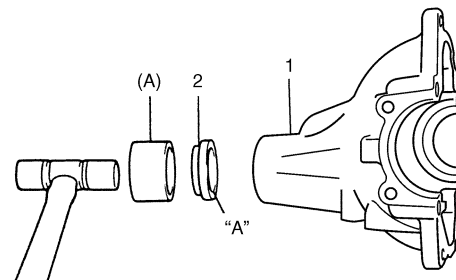

I5JB0A321035-01

- 17) While tightening flange nut gradually with special tool and power wrench (4 – 10 magnification) (1), set preload of pinion to specification.

NOTE

- Before taking measurement with spring balance (3) or torque wrench (4), check for smooth rotation by hand.
- On measuring preload, rotate the drive bevel pinion about 1 rotation per 2 seconds.
- Be sure to tighten gradually and carefully till specified starting torque is obtained. Turning back overtightened flange nuts should be avoided.

Pinion bearing preload

0.9 – 1.7 N·m (9.0 – 17.0 kg-cm, 7.8 – 14.7 lb-in.)


Spring measure reading with special tool

20 – 40 N (2.0 – 4.0 kg, 4.4 – 8.8 lb)

Special tool

(A): 09922-75222

(B): 09922-66021

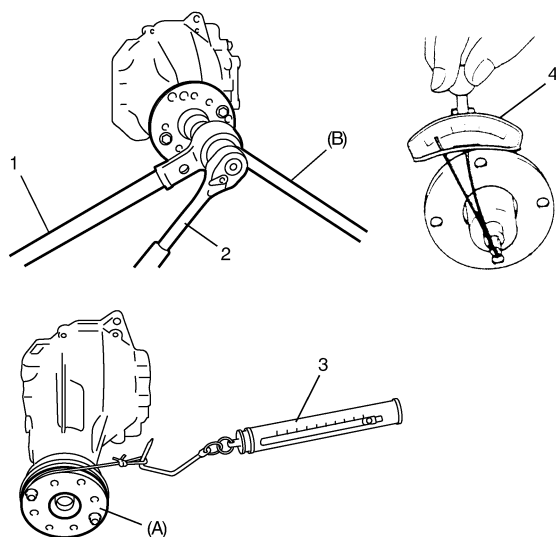


I5JB0A321036-02

2. Socket wrench

- 18) Select differential side bearing shim as follows.

- a) Measure dimension "a" and "b" using vernier caliper.

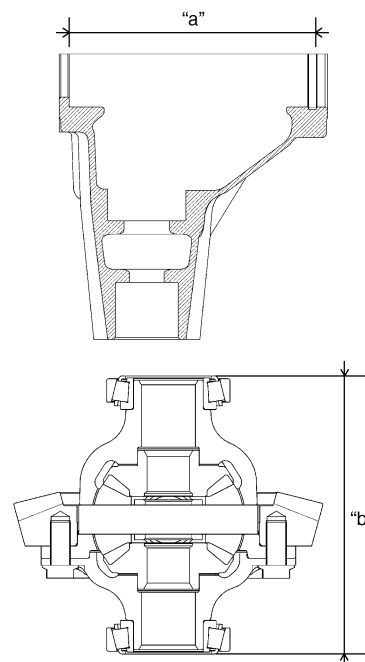

I5JB0A321037-04

- b) Calculate dimension "a" – "b", and select shims from among following available size so that total of thickness of right side and left side shims may reach the calculated value.

NOTE

Select shims so that thickness of right side shims and left side shims become almost even.

Available shim thickness

Right side: 1.75, 1.85, 1.95, 2.00, 2.05, 2.15 and 2.25 mm (0.069, 0.073, 0.077, 0.079, 0.081, 0.085 and 0.089 in.)

Left side: 2.75, 2.85, 2.95, 3.00, 3.05, 3.15 and 3.25 mm (0.108, 0.112, 0.116, 0.118, 0.120, 0.124 and 0.128 in.)

- 19) To measure bevel gear backlash, set dial gauge (1) at right angle to bevel gear tooth, fix drive bevel pinion and read dial gauge while moving bevel gear.

Special tool

(A): 09900-20607


(B): 09900-20701

Bevel gear backlash

: 0.1 – 0.2 mm (0.004 – 0.008 in.)

NOTE


- Be sure to apply measuring tip of dial gauge at right angles to convex side of tooth.
- Measure at least 4 points on drive bevel gear periphery.
- If backlash exceeds specification given below, adjust it by changing thickness ratio of differential side bearing shims.

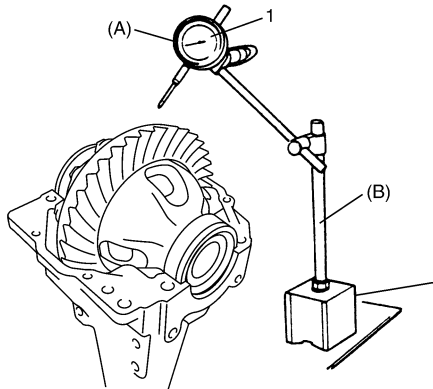

I5JB0A321038-03

- 20) Place bearing outer races on their respective bearings. Used left and right outer races are not interchangeable.

- 21) Install case assembly (1) in carrier (2).

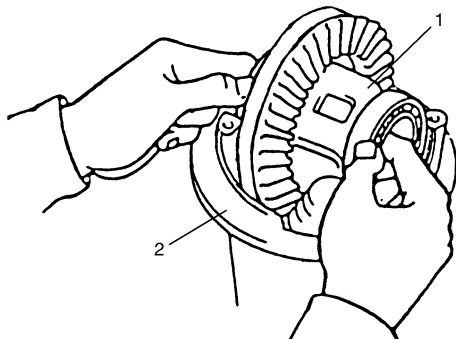


I5JB0A321039-01

- 22) As final step, check gear tooth contact as follows.

- After cleaning 10 drive bevel gear teeth, paint them with gear marking compound evenly by using brush (1) or sponge etc.
- Turn gear to bring its painted part in mesh with drive bevel pinion and turn it back and forth by hand to repeat their contact.
- Bring painted part up and check contact pattern, referring to the following table. If contact pattern is not normal, readjust or replace as necessary according to instruction in the table.



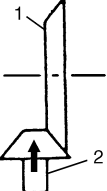

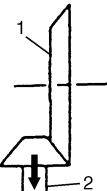
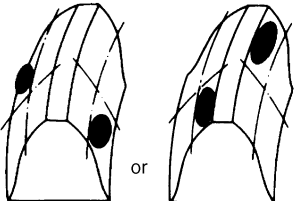
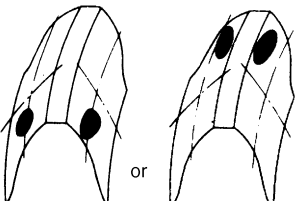
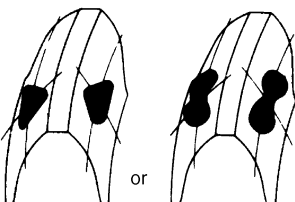
NOTE

Be careful not to turn drive bevel gear more than one full revolution, for it will hinder accurate check.

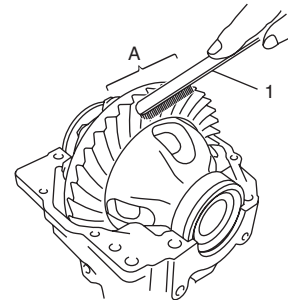


I5JB0A321040-02

A: Paint gear marking compound evenly

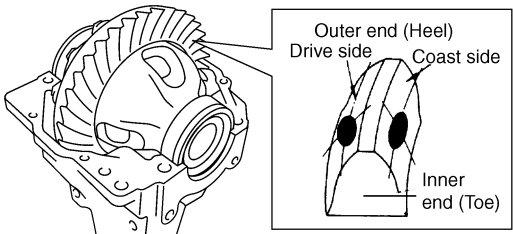Tooth Contact Pattern	Diagnosis and Remedy	
 <p>Outer end (Heel) Drive side Coast side Inner end (Toe)</p> <p>I5JB0A321041-05</p>	<p>Normal</p>	
 <p>IYSQ01321072-01</p>	<p>High Contact Pinion is positioned too far from the center of drive bevel gear (1).</p> <ul style="list-style-type: none"> • Increase thickness of pinion (2) height adjusting shim and position pinion closer to gear center. • Adjust drive bevel gear backlash to specification. 	 <p>IYSQ01321073-01</p>
 <p>IYSQ01321074-01</p>	<p>Low Contact Pinion is positioned too close to the center of drive bevel gear (1).</p> <ul style="list-style-type: none"> • Decrease thickness of pinion (2) height adjusting shim and position pinion farther from gear center. • Adjust drive bevel gear backlash to specification. 	 <p>IYSQ01321076-01</p>
 <p>or</p> <p>IYSQ01321077-01</p>	<p>If adjustment is impossible, replace differential carrier.</p>	
 <p>or</p> <p>IYSQ01321078-01</p>	<ul style="list-style-type: none"> • Check seating of bevel gear or differential case. (Check bevel gear for runout.) • If adjustment is impossible, replace drive bevel gear and pinion set or differential carrier. 	
 <p>or</p> <p>IYSQ01321079-01</p>	<p>Replace drive bevel gear and pinion set or differential case.</p>	

3B-34 Differential: Rear

- 23) Upon completion of gear tooth contact check in Step 22), caulk flange nut (2) with caulking tool (1) and hammer.

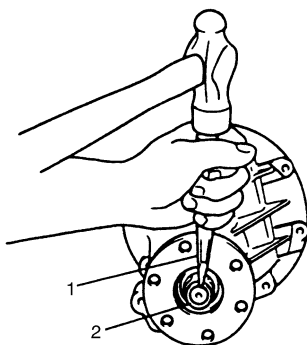

I1JA01322021-01



- 24) Clean mating surface of differential carrier (2) and rear cover (1), apply sealant to carrier as shown in figure by such amount that its section is 1.5 mm (0.059 in.) in diameter, mate rear cover with differential carrier, and then tighten bolts to specified torque.

“A”: Sealant 99000–31260 (SUZUKI Bond No.1217G)

Tightening torque

Rear cover bolt No.1 (a): 50 N·m (5.0 kgf-m, 17.0 lb-ft)

Rear cover bolt No.2 (b): 60 N·m (6.0 kgf-m, 43.5 lb-ft)

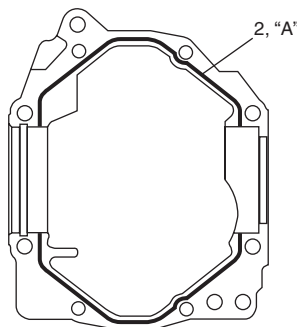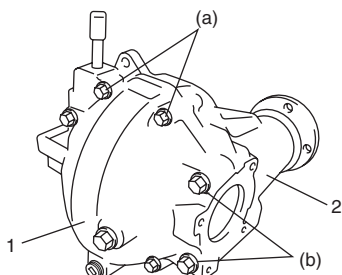


I6JB01321001-03

- 25) Assembly rear drive right retainer as follows.

- a) Install rear drive shaft bearing (1) using special tool and press (2).

Special tool

(A): 09913–75520

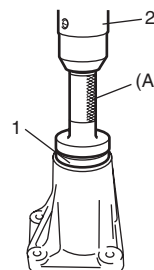

I5JB0A322012-01

- b) Install snap ring.



I5JB0A322010-01

- c) Install oil seal using special tools as shown in figure.



Distance between retainer surface and oil seal

“a”: 2.5 – 3.0 mm (0.10 – 0.12 in.)

Special tool

(A): 09924–74510

(B): 09951–16090

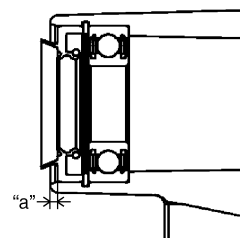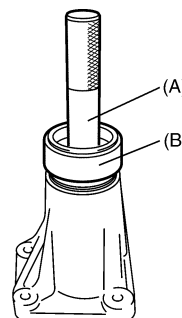


I5JB0A322013-02

- 26) Assembly rear drive left retainer in the same manner at Step 25) in this assembly procedure.
- 27) Clean mating surface of right retainer, carrier (1) and rear cover (2), apply sealant to carrier and rear cover as shown in figure by such amount that its section is 1.5 mm (0.059 in.) in diameter, mate right retainer with carrier and rear cover, and then tighten bolts to specified torque.

"A": Sealant 99000-31260 (SUZUKI Bond No.1217G)

Tightening torque

Retainer bolt: 50 N·m (5.0 kgf-m, 36.5 lb-ft)

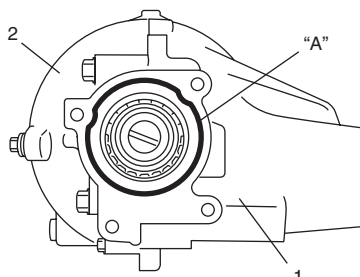


I5JB0A321048-01

- 28) Clean mating surface of left retainer, carrier (1) and rear cover (2), apply sealant to carrier and rear cover as shown in figure by such amount that its section is 1.5 mm (0.059 in.) in diameter, mate left retainer with carrier and rear cover, and then tighten bolts to specified torque.

"A": Sealant 99000-31260 (SUZUKI Bond No.1217G)

Tightening torque

Retainer bolt: 50 N·m (5.0 kgf-m, 36.5 lb-ft)

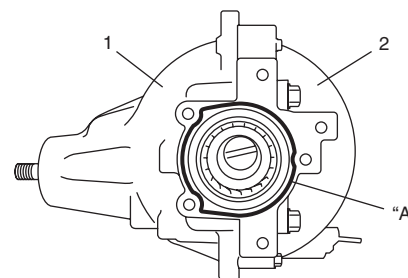

I5JB0A322014-01

- 29) Install rear drive right and left shaft using plastic hammer.

Rear Differential Inspection

S6JB0B3226006

Refer to "Front Differential Inspection: Front".

Specifications

Tightening Torque Specifications

S6JB0B3227001

Fastening part	Tightening torque			Note
	N·m	kgf-m	lb-ft	
Rear differential front mounting bolt	120	12.0	87.0	🔩
Rear differential rear mounting bolt	120	12.0	87.0	🔩
Bevel gear bolt	Tighten 40 N·m (4.0 kgf-m, 29.5 lb-ft) + 50°			🔩
Rear cover bolt No.1	50	5.0	17.0	🔩
Rear cover bolt No.2	60	6.0	43.5	🔩
Retainer bolt	50	5.0	36.5	🔩 / 🔩

NOTE

The specified tightening torque is also described in the following.

“Rear Differential Unit Components: Rear”

“Rear Differential Components: Rear”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Special Tools and Equipment

Recommended Service Material

S6JB0B3228001

Material	SUZUKI recommended product or Specification		Note
Grease	SUZUKI Super Grease A	P/No.: 99000-25010	🔩
Sealant	SUZUKI Bond No.1217G	P/No.: 99000-31260	🔩 / 🔩 / 🔩
Thread lock cement	Thread Lock Cement Super 1322	P/No.: 99000-32110	🔩







NOTE










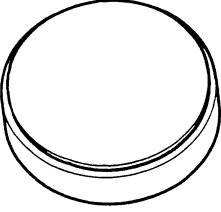
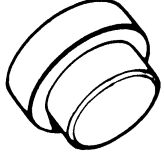
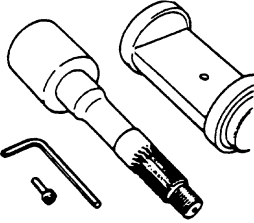
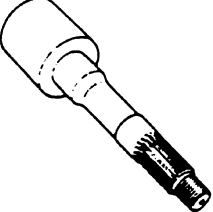
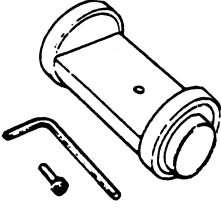

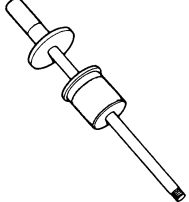
Required service material is also described in the following.

“Rear Differential Components: Rear”









Special Tool

S6JB0B3228002

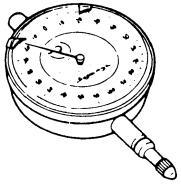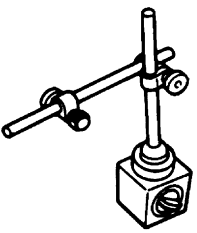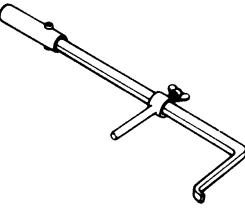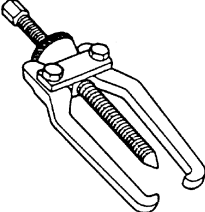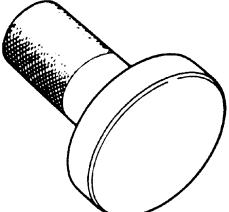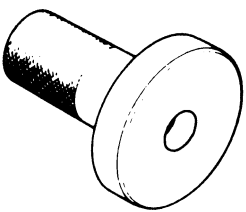09900-20607 Dial gauge 🔩 / 🔩 / 🔩 / 🔩		09900-20701 Magnetic stand 🔩	
09913-50121 Oil seal remover 🔩 / 🔩		09913-65135 Bearing puller 🔩 / 🔩	
09913-75510 Bearing installer 🔩		09913-75520 Bearing installer 🔩	
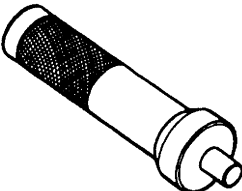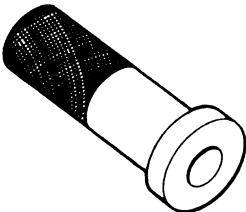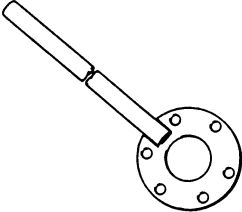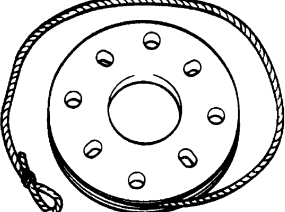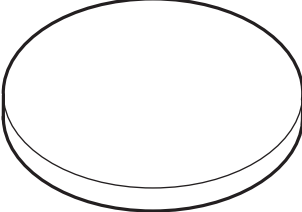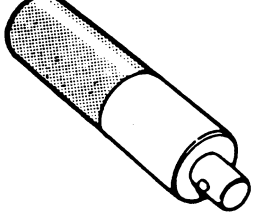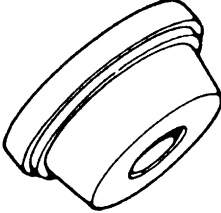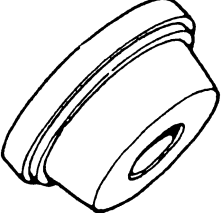
<p>09913-75821 Bearing installer attachment 🔧 / 🔧</p> 	<p>09913-85210 Bearing installer 🔧</p> 
<p>09922-66021 Flange holder 🔧 / 🔧</p> 	<p>09922-75222 Differential gear preload adjuster 🔧 / 🔧 / 🔧</p> 
<p>09922-76520 Bevel pinion gauge block 🔧 / 🔧</p> 	<p>09924-74510 Bearing and oil seal handle 🔧 / 🔧</p> 
<p>09924-84510-004 Bearing installer attachment 🔧 / 🔧</p> 	<p>09924-84510-005 Bearing installer attachment (D) 🔧</p> 
<p>09925-14520 Bearing and oil seal installer (80 x 50 mm) 🔧</p> 	<p>09925-86010 Bearing puller attachment 🔧</p> 
<p>09925-88210 Bearing puller attachment 🔧</p> 	<p>09926-78311 Differential bevel pinion dummy 🔧</p> 
<p>09926-78311-002 Pinion mounting dummy 🔧 / 🔧 / 🔧 / 🔧</p> 	<p>09926-78320 Mounting dummy 🔧 / 🔧</p> 
<p>09928-06510 Differential torque checking tool 🔧</p> 	<p>09930-30104 Sliding shaft 🔧</p> 

3B-38 Differential: Rear
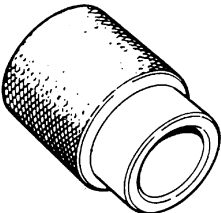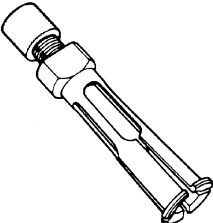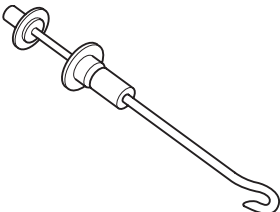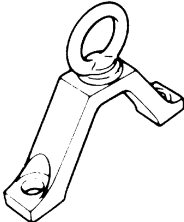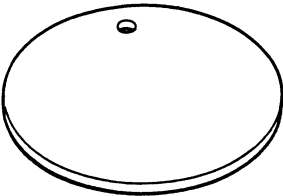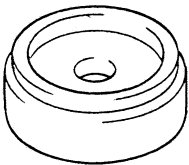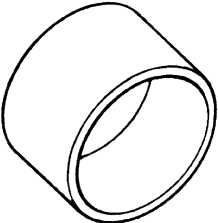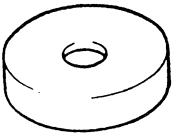
<p>09940-53111 Differential side bearing installer</p> 	<p>09941-64511 Bearing and oil seal remover (30 mm Min.)</p> 
<p>09942-15511 Sliding hammer</p> 	<p>09943-17912 Wheel hub remover</p> 
<p>09951-16070 Shim adjuster attachment</p> 	<p>09951-16090 Oil seal installer</p> 
<p>09951-18210 Oil seal remover & installer No. 2</p> 	<p>09951-46010 Drive shaft oil seal installer</p> 

Transfer

Precautions

Transfer Warning

S6JB0B3300001

▲ WARNING


This transfer has a center differential. When testing with 2-wheel chassis dynamometer or speedometer tester (which tester roller is driven by vehicle wheels), be sure to make the vehicle as rear wheel drive or as front wheel drive temporarily as follows.

Otherwise, front wheels drive rear wheels or vise-versa and personal injury may result.

- 1) Remove front propeller shaft or rear propeller shaft referring to "Propeller Shaft Removal and Installation in Section 3D".
- 2) Install special tool (cap) to flange yoke cover hole (front or rear) of transfer (1) and fix it to transfer or hook with string to prevent oil leakage from transfer.

Special tool

(A): 09928-36510

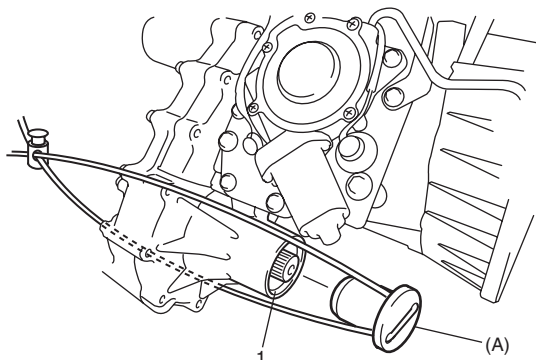

I5JB0A331107-03

- 3) Pour specified oil into transfer up to lever plug hole if front propeller shaft is removed.
- 4) Shift transfer to 4H-lock position by turning transfer switch.

Precautions in Diagnosing Trouble

S6JB0B3300002

- Do not disconnect the following parts before confirming diagnostic information (DTC, etc.) stored in 4WD control module memory. These actions will erase memorized information in 4WD control module memory.
 - Disconnection of coupler from 4WD control module
 - Disconnection of battery cable from battery
 - Disconnection of ground wire harness of 4WD control module
 - Disconnect main fuse from fuse box
- Diagnostic information stored in 4WD control module memory can be cleared as well as checked by using SUZUKI scan tool. Before using scan tool, read its Operator's (Instruction) Manual carefully to have good understanding as to what functions are available and how to use it.
- Be sure to read "Precautions for Electrical Circuit Service:" before inspection and observe what is written there.

General Description

Transfer Description

S6JB0B3301001

The aluminum transfer case directly connected to the back of the transmission contains input gear, counter gear, rear output shaft, front output shaft, center differential, drive chain and their accompanying gears, hubs, sleeves, fork, etc. The center differential is installed in the transfer. With the torque induction type LSD used in the center differential, the effect of LSD works when a rotation difference between front and rear wheels is occurring.

The transfer has such a selective mechanism as to enable the shift actuator to make selection of high speed (direct connection with transmission output: main shaft), low speed (speed reduction by input gear, counter gear and low gear) or neutral by way of the reduction shift sleeve located between the input gear and low gear, and selection of center differential lock or not by way of the differential lock clutch sleeve located at the center of the rear output shaft. The case has an oil pump to provide proper lubrication.


4WD Control System Description

Transfer Shift Control

The 4WD control module controls the transfer shift actuator based on the signal from the transfer switch so that the transfer is shifted to the selected position (4H, 4H-lock, N or 4L-lock). (Shifting to the N position requires that the switch to "□" position (1) keep it there for about 10 seconds then turn it to "N" position.)

The transfer actuator consists of the actuator motor and the actuator motor position switch. The 4WD control module detects the position of the actuator motor using the position switch and controls the actuator motor running / stopping operation.

Also, the 4L/N switch and center differential lock switch that detect the each position of the High / Low shift fork and the differential lock shift fork are installed the transfer assembly. The 4WD control module detects the transfer actual shift position (4H, 4H-lock, N or 4L-lock) by the signals from the 4L/N switch and center differential lock switch as follows.

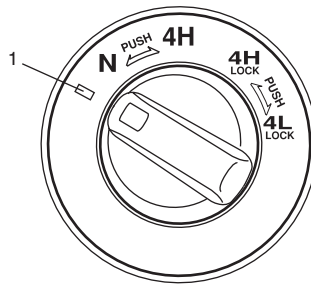

I5JB0A332002-01

Relationship of transfer shift position and switches

Switch	Transfer shift position			
	4H	4H-lock	N	4L-lock
4L/N switch	OFF	OFF	ON	ON
Center differential lock switch	ON	OFF	ON	OFF

When the transfer shift actuator motor position detected by motor position switch and transfer actual shift position detected by the above-mentioned switches match, the 4WD control module judges that the transfer shifting is complete.

Retry Control

When 4WD control module cannot judge the shifting to the target position, it commands to retry the shifting up to 3 times. If retry shifting is not possible, previous shift position is restored and notify failure of the shifting with the indicator and buzzer.

Indicator And Buzzer Operation

The 4WD control module output operation signal of the differential lock indicator, 4L indicator, N indicator and the buzzer to BCM. Indicators and buzzer as follows in order to inform what state the transfer control system is.

Operation			Condition
Indicator		Buzzer	
Differential lock indicator	OFF	—	<ul style="list-style-type: none"> Ignition switch is OFF. Transfer is at 4H/N position.
	ON	—	<ul style="list-style-type: none"> Within 2 seconds after ignition switch is turn ON (checking indicator operation). Transfer is at 4H-lock/4L-lock position.
	Flashes at 0.25 seconds for 3 times, at intervals of 20 seconds.	Sounds at 1 second at intervals of 20 seconds.	<ul style="list-style-type: none"> The transfer shift position is different for transfer switch.
	Flashes at intervals of 0.25 seconds continuously	—	<ul style="list-style-type: none"> 4WD control module detects DTC of 4WD control system.
	Flashes at intervals of 0.5 seconds continuously	—	<ul style="list-style-type: none"> Transfer is shifting from 4H to 4H-lock. Transfer is shifting from 4H-lock to 4H. Transfer could not complete shifting to 4H-lock.
4L indicator	OFF	—	<ul style="list-style-type: none"> Ignition switch is OFF. Transfer is at 4H-lock/N position.
	ON	—	<ul style="list-style-type: none"> Within 2 seconds after ignition switch is turn ON (checking indicator operation). Transfer is at 4L-lock position.
	Flashes at 0.25 seconds for 3 times, at intervals of 20 seconds.	Sounds at 1 second at intervals of 20 seconds.	<ul style="list-style-type: none"> The transfer shift position is different for transfer switch.
	Flashes at intervals of 0.25 seconds continuously	—	<ul style="list-style-type: none"> 4WD control module detects DTC of 4WD control system.
	Flashes at intervals of 0.5 seconds continuously	—	<ul style="list-style-type: none"> Transfer is shifting from 4H-lock to 4L-lock. Transfer is shifting from 4L-lock to 4H-lock. Transfer could not complete shifting to 4L-lock.
N indicator	OFF	—	<ul style="list-style-type: none"> Ignition switch is OFF. Transfer is at 4H/4H-lock/4L-lock position.
	ON	—	<ul style="list-style-type: none"> Within 2 seconds after ignition switch is turn ON (checking indicator operation). Transfer is at N position.
	Flashes at 0.25 seconds for 3 times, at intervals of 20 seconds.	Sounds at 1 second at intervals of 20 seconds.	<ul style="list-style-type: none"> The transfer shift position is different for transfer switch.
	Flashes at intervals of 0.2 seconds continuously	—	<ul style="list-style-type: none"> 4WD control module detects DTC of 4WD control system.
	Flashes at 0.5 seconds continuously	—	<ul style="list-style-type: none"> Transfer could not complete shifting to N.
—	—	Sounds at 0.2 seconds for 2 times, at intervals of 3 seconds.	<ul style="list-style-type: none"> Transfer is at N position.

Function of 4WD Control System Component

S6JB0B3301004

Part Name	Function
4L/N switch	Detects transfer shift position combining center differential lock switch.
Center differential lock switch	Detects transfer shift position combining 4L/N switch.
Transfer switch	Shifts transfer shift position.
N indicator	Indicates transfer is at N position or not.
4L indicator	Indicates transfer is at 4L-lock position or not.
Differential lock indicator	Indicates transfer is at 4H-lock, 4L-lock or not.
Transmission range sensor (N position) (for A/T model)	Detects A/T is at N range or not.
CPP switch	Detects clutch pedal is depressed or not.
Buzzer incorporated into BCM	<ul style="list-style-type: none"> Indicates transfer is at "N" position. Warns of prohibited shift operation.
4WD control module	<ul style="list-style-type: none"> Controls transfer shifting. Diagnoses 4WD control system components. Output operation signal of indicators and buzzer to BCM.
Transfer shift actuator	<ul style="list-style-type: none"> Consists of transfer shift actuator motor and transfer shift actuator motor position switch. Shifts transfer shift position operating High / Low shift fork and differential lock shift fork via cams. Detects transfer shift actuator motor position.
Diagnosis connector	Indicates DTC on indicators when grounding its diagnosis terminal.

4WD Control System Operation

S6JB0B3301005


Instead of the transfer shift lever assembly, the transfer position (4H, 4H-lock, N and 4L-lock) is shifted automatically by operating the transfer switch.

The 4WD control module operates the transfer shift actuator according to the transfer switch operation.

4H (4WD High) Position

The driving force from the transmission is transmitted to the transfer input gear. As the center LSD case and transfer input gear are engaged via the reduction shift sleeve at this time, the driving force transmitted from the transfer input gear to the rear output shaft rotates them at the same speed.

Also, driving force from the center LSD is transmitted to the front drive shaft through front drive sprocket. Then, the front drive sprocket rotates the front output shaft via the drive chain.

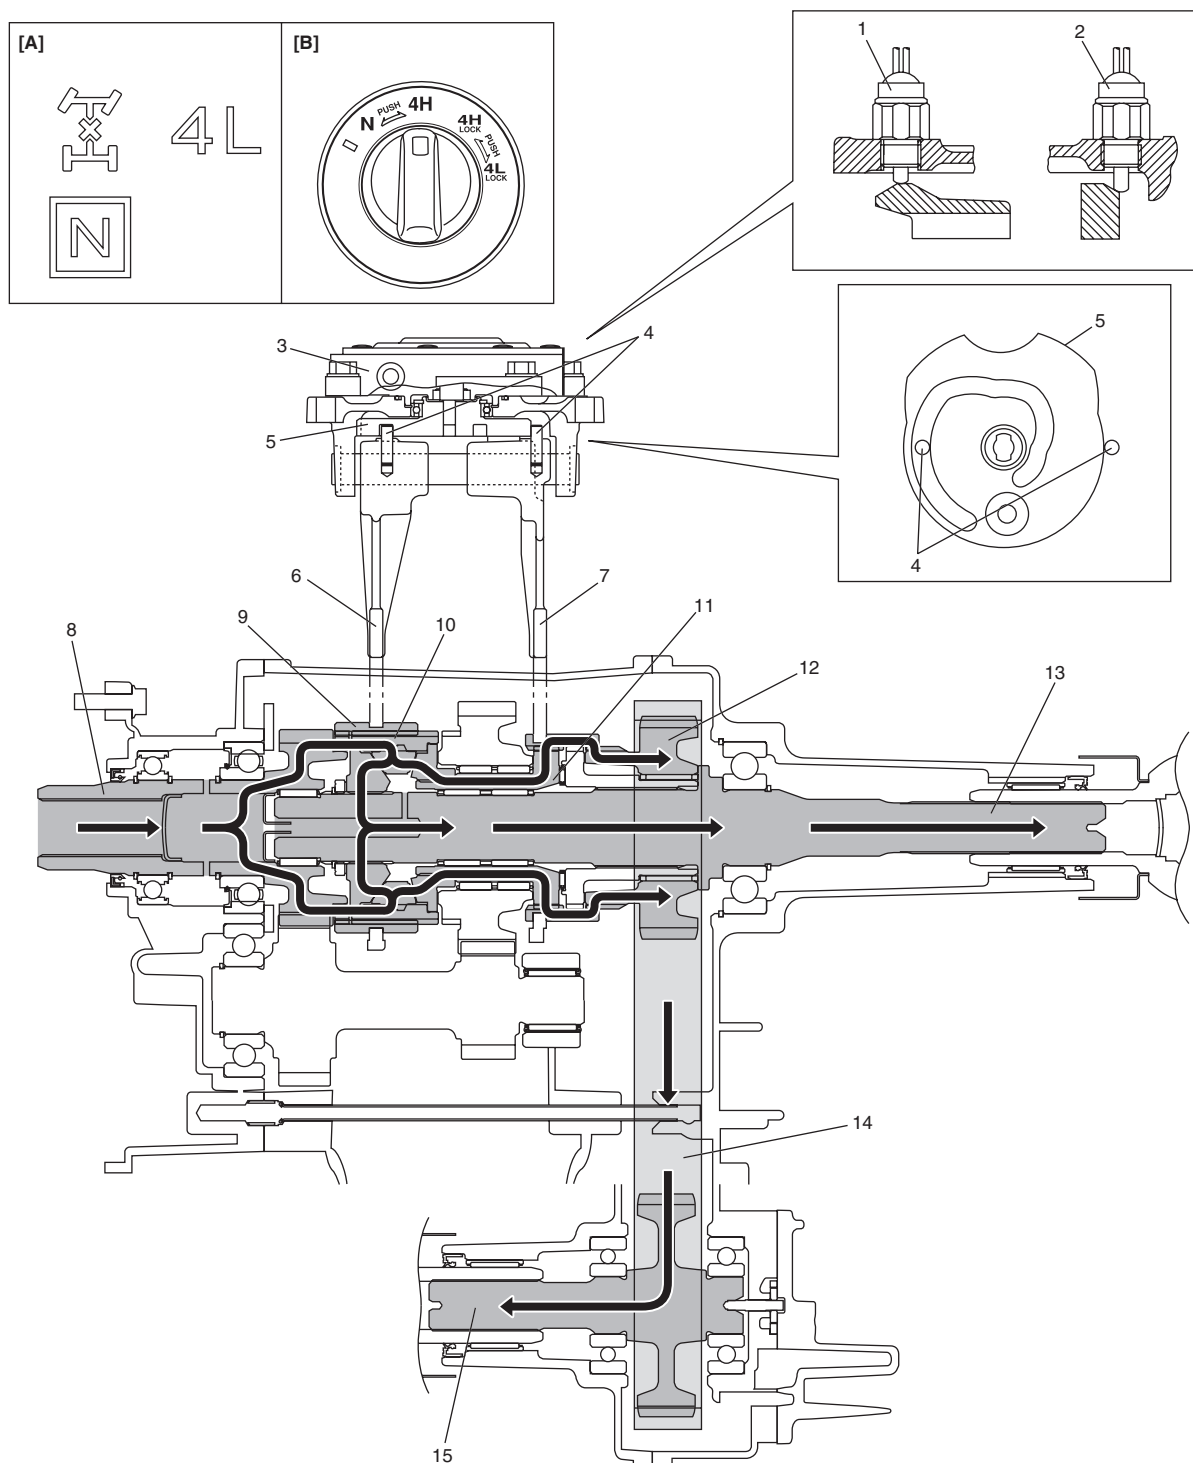

I5JB0A332003-02


[A]: Transfer position indicator	4. Shift fork pin	9. Reduction shift sleeve	14. Drive chain
[B]: Transfer switch	5. Shift cam	10. Center LSD case	15. Front output shaft
1. 4L/N switch	6. High / Low shift fork	11. Front drive shaft	
2. Center differential lock switch	7. Differential lock shift fork	12. Front drive sprocket	
3. Transfer actuator	8. Input gear	13. Rear output shaft	

3C-6 Transfer:

4H-lock (4WD High Center Differential Lock) Position

When 4H-lock position is selected from 4H position by turning the transfer switch, the transfer shift control actuator motor runs and shift cam rotates in the arrow direction "A". The shift cam shifts the differential lock shift fork in the arrow direction "B", and the differential lock clutch sleeve also moves in the arrow direction "B".

The driving force from the transmission is transmitted from the transfer input gear to the rear output shaft, as in the case of 4H position. Also, as the front drive shaft and front drive sprocket bush are engaged via differential lock clutch sleeve, the driving force from the input gear is locked and transmitted to the rear output shaft.

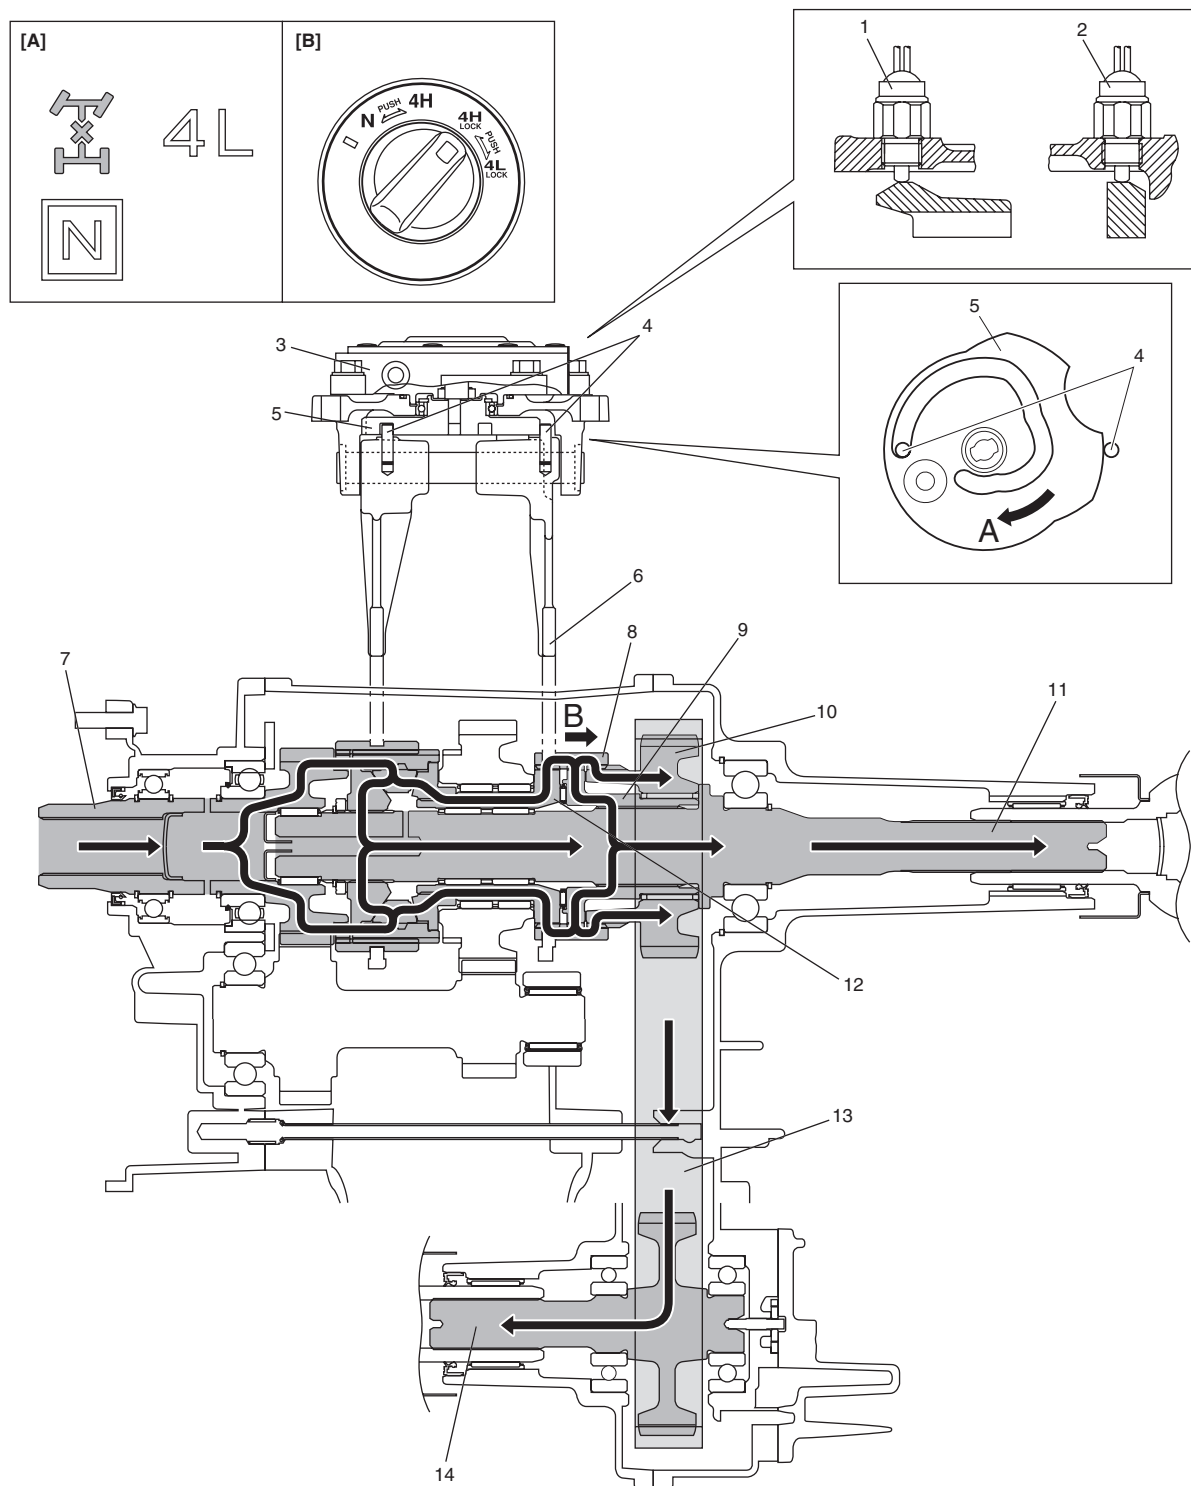


I5JB0A332004-03

[A]: Transfer position indicator	3. Transfer actuator	7. Input gear	11. Rear output shaft
[B]: Transfer switch	4. Shift fork pin	8. Differential lock clutch sleeve	12. Front drive shaft
1. 4L/N switch	5. Shift cam	9. Front drive sprocket bush	13. Drive chain
2. Center differential lock switch	6. Differential lock shift fork	10. Front drive sprocket	14. Front output shaft

N (Neutral) Position

When N position is selected from 4H position by turning the transfer switch, the transfer shift control actuator motor runs and shift cam rotates in the arrow direction "A". The shift cam shifts the High / Low shift fork in the arrow direction "B", and the reduction shift sleeve moves in the arrow direction "B". Also, the shift cam shifts the differential lock shift fork in the arrow direction "C", and the differential lock clutch sleeve also moves in the arrow direction "C".

The driving force from the transmission is transmitted to the transfer input gear. However, as the reduction shift sleeve is not engaged with the transfer input gear and low gear, the driving force is not transmitted to the rear output shaft and front output shaft.

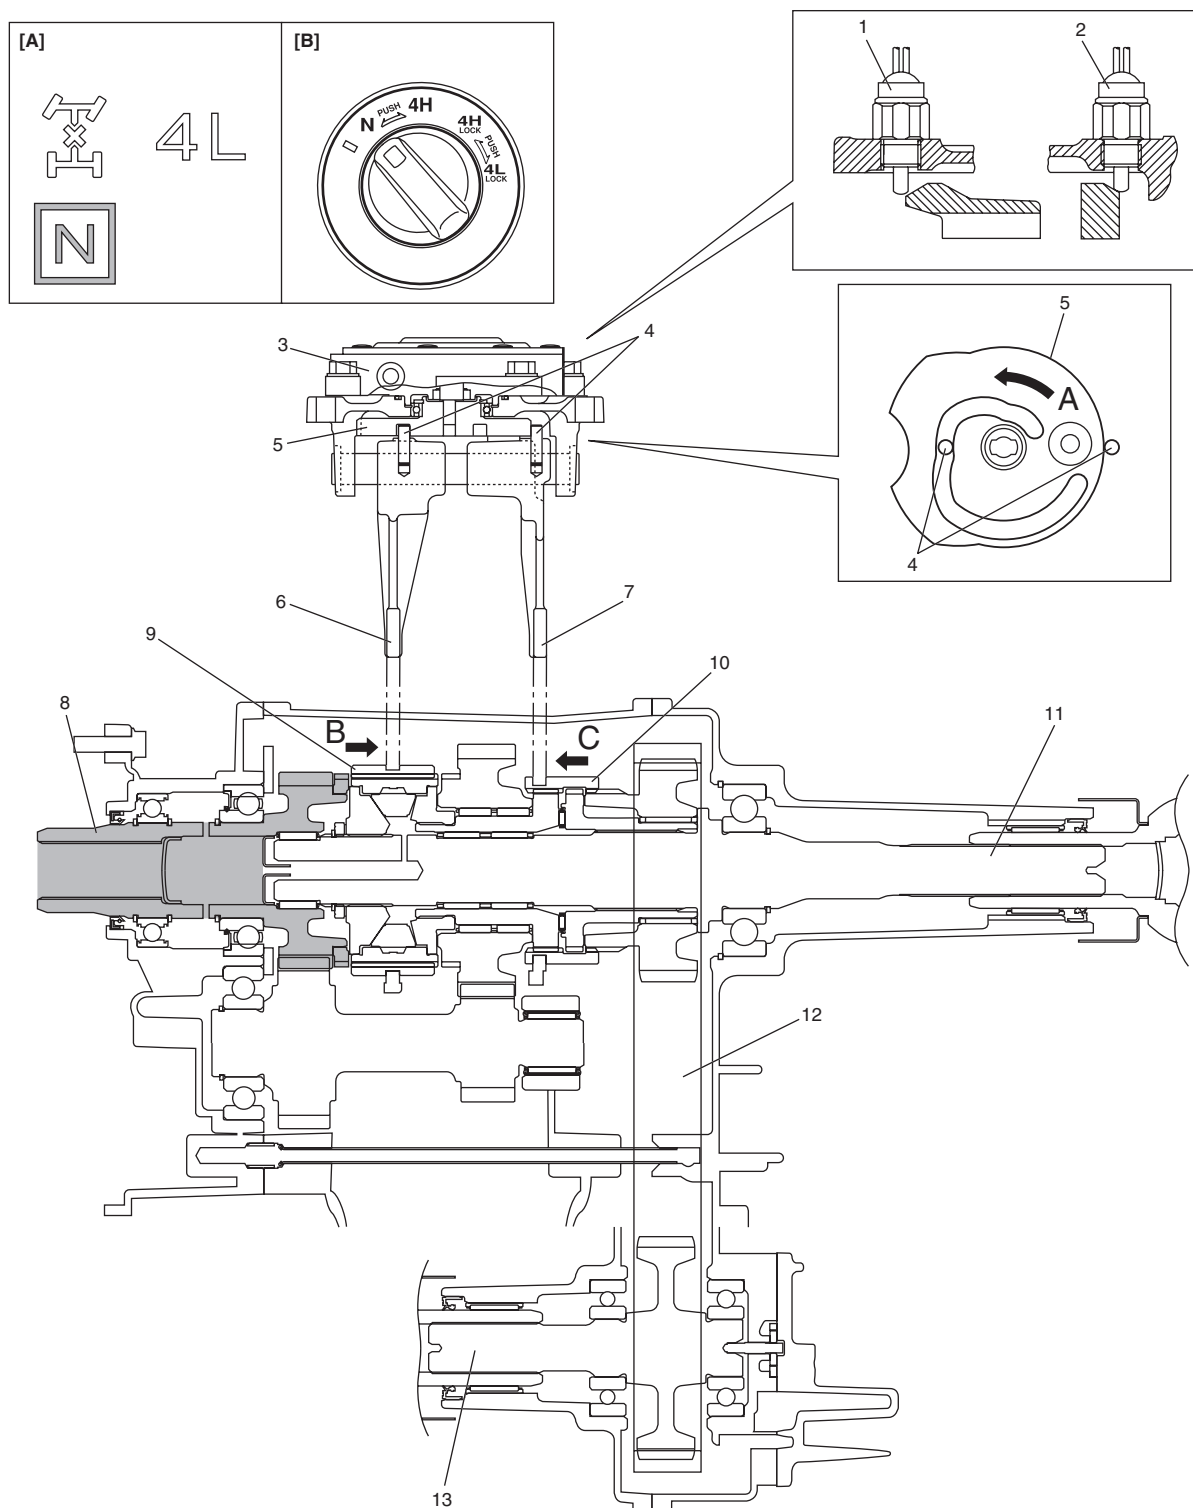

I5JB0A332005-01


[A]: Transfer position indicator	2. Center differential lock switch	5. Shift cam	8. Input gear	11. Rear output shaft
[B]: Transfer switch	3. Transfer actuator	6. High / Low shift fork	9. Reduction shift sleeve	12. Drive chain
1. 4L/N switch	4. Shift fork pin	7. Differential lock shift fork	10. Differential lock clutch sleeve	13. Front output shaft

4L-lock (4WD Low Center Differential Lock) Position

When 4L-lock position is selected from 4H-lock position by turning the transfer switch, the transfer shift control actuator motor runs and shift cam rotates in the arrow direction "A". The shift cam shifts the High/Low shift fork in the arrow direction "B", and the reduction shift sleeve moves in the arrow direction "B". Also, the shift cam shifts the differential lock shift fork in the arrow direction "C", and the differential lock clutch sleeve also moves in the arrow direction "C".

The driving force from the transmission is transmitted from the transfer low gear, through the transfer input gear and transfer counter gear with the speed reduced. At this time, as the center LSD case and transfer low gear are engaged via reduction shift sleeve, the driving force is transmitted to the rear output shaft.

The driving force of the rear output shaft makes the front output shaft rotate via the differential lock clutch sleeve as in the case of 4H-lock position.

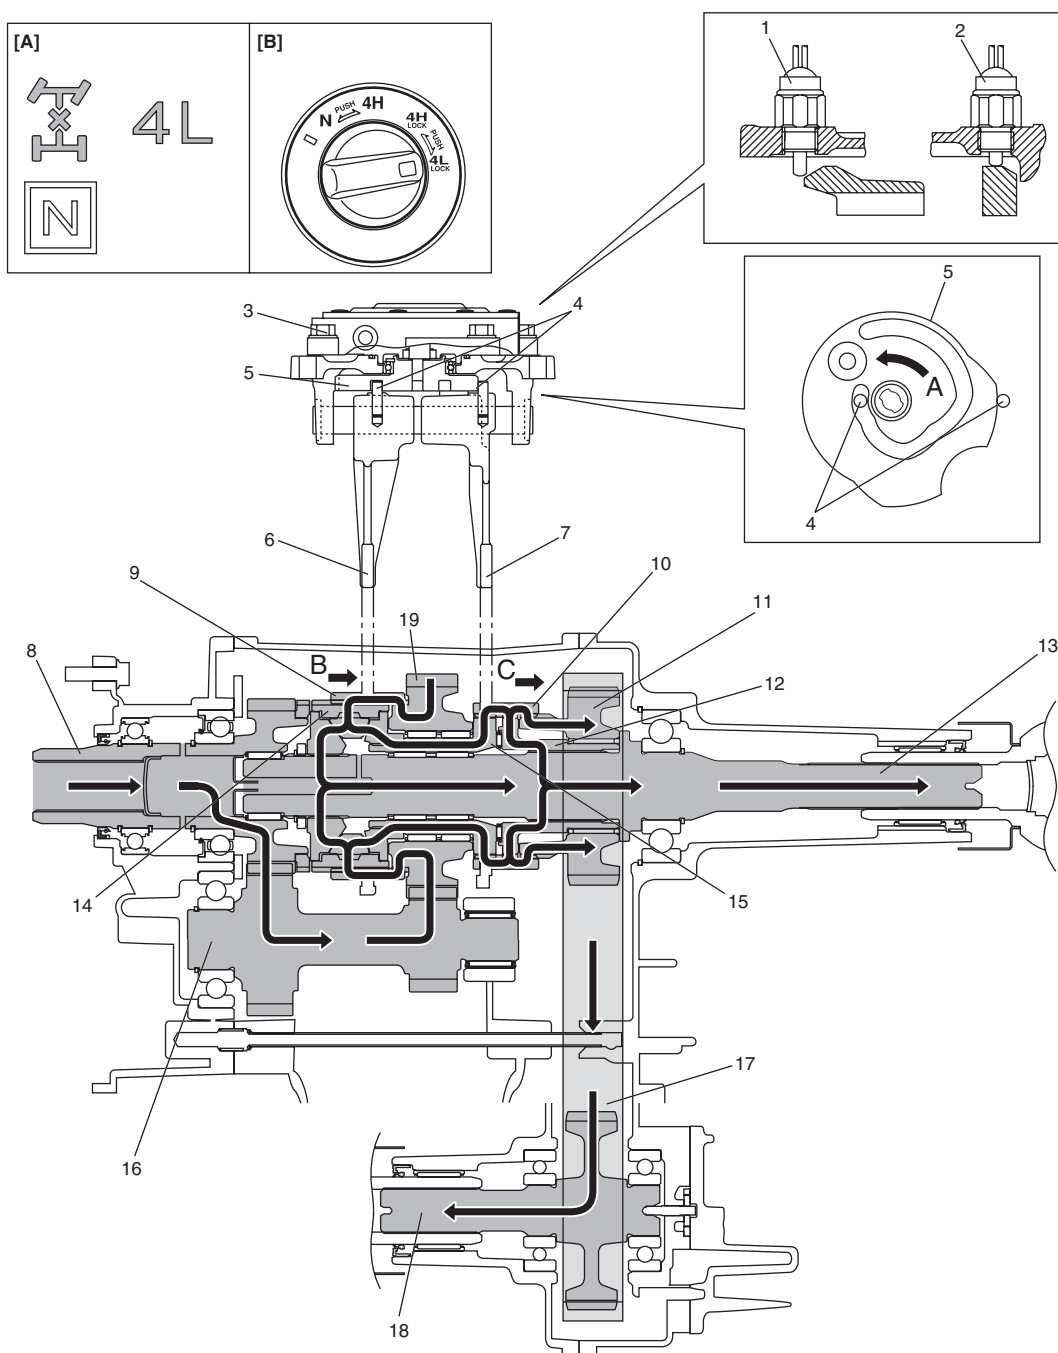

15JB0A332006-02

[A]: Transfer position indicator	4. Shift fork pin	9. Reduction shift sleeve	14. Center LSD case	19. Low gear
[B]: Transfer switch	5. Shift cam	10. Differential lock clutch sleeve	15. Front drive shaft	
1. 4L/N switch	6. High / Low shift fork	11. Front drive sprocket	16. Counter gear	
2. Center differential lock switch	7. Differential lock shift fork	12. Front drive sprocket bush	17. Drive chain	
3. Transfer actuator	8. Input gear	13. Rear output shaft	18. Front output shaft	

Input / Output Signal Table of 4WD Control Module

S6JB0B3301008


4WD control module outputs the following signals to actuators, indicators, warning buzzer, according to the transfer switch operation.

		Output signal (to each component parts)				
		Transfer shift actuator	Differential lock indicator	4L indicator	N indicator	Warning buzzer
Input signal	Transfer switch	○	○	○	○	○
	CPP switch	○		○	○	○
	TCM	○		○	○	○
	ABS hydraulic unit / control module	○	○	○	○	○
	4L/N switch			○	○	○
	Center differential lock switch		○	○		

On-Board Diagnostic System Description

For 4WD control system, 4WD control module has the following functions.

- When ignition switch is turned ON with engine at stop, differential lock indicator (1), 4L indicator (2) and N indicator (3) turn on at the same time for 2 seconds in order to check operation of these indicators.
- When 4WD control module detects any malfunction in the following area, differential lock indicator (1), 4L indicator (2) and N indicator (3) flash continuously and 4WD control module comes into fail-safe mode. For details of fail safe mode, refer to "Fail-Safe Table".
 - Transfer switch
 - Transfer shift actuator motor
 - Transfer shift actuator motor position switch
 - 4L/N switch
 - Center differential lock switch
- DTC can be checked by either one of the following ways.
 - DTC can be checked by using SUZUKI scan tool (4) connected to DLC (5).
 - If equipped with diagnosis connector, DTC can be displayed on digital display odometer by shorting diagnosis connector (6).
- When 4WD control module detects any malfunction, 4WD control module will shift automatically transfer to either N or former position which is in before shifting process began.

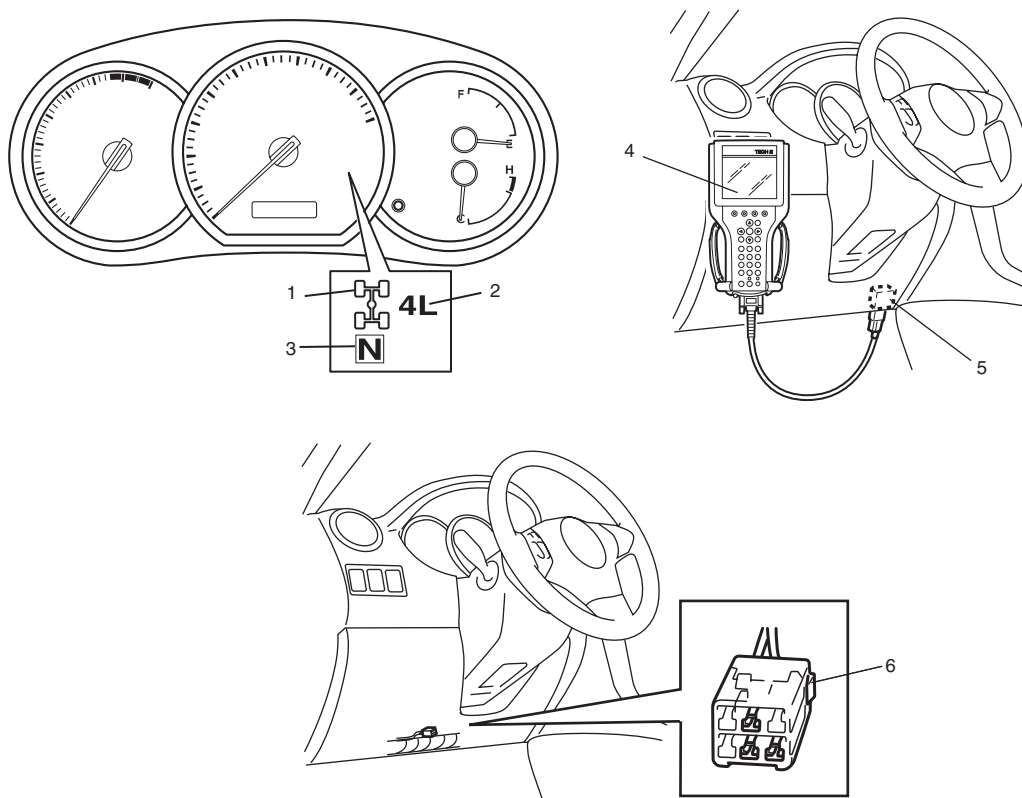

I5JB0A332008-01

DLC (Data Link Connector)


Refer to "Data Link Connector (DLC)" under "On-Board Diagnostic System Description in Section 1A".

CAN Communication System Description

S6JB0B3301010


Refer to “CAN Communication System Description in Section 1A”.

4WD Control Module Transmission Data

4WD control module		DATA		ECM	BCM	Combination Meter
			4WD shift position	○		
			Buzzer on request		○	
			Lock indication status			○
			Low indication status			○
			Neutral Indication Status			○
			4WD diagnostic trouble codes			○

I6JB0B330001-01

4WD Control Module Reception Data


4WD control module		DATA		ECM	TCM	ABS control module (Non-ESP® model)	ESP® control module (ESP® model)
			Engine speed signal	○			
			Vehicle speed signal	○			
			Brake pedal switch active	○			
			Transmission gear selector position		○		
			Wheel speed pulse (front right)			○	○
			Wheel speed pulse (front left)			○	○
			Wheel speed pulse (rear right)			○	○
			Wheel speed pulse (rear left)			○	○
			ABS active			○	○
			ESP® status signal				○

I6JB01331001-02

Schematic and Routing Diagram

4WD Control System Wiring Circuit Diagram

S6JB0B3302001

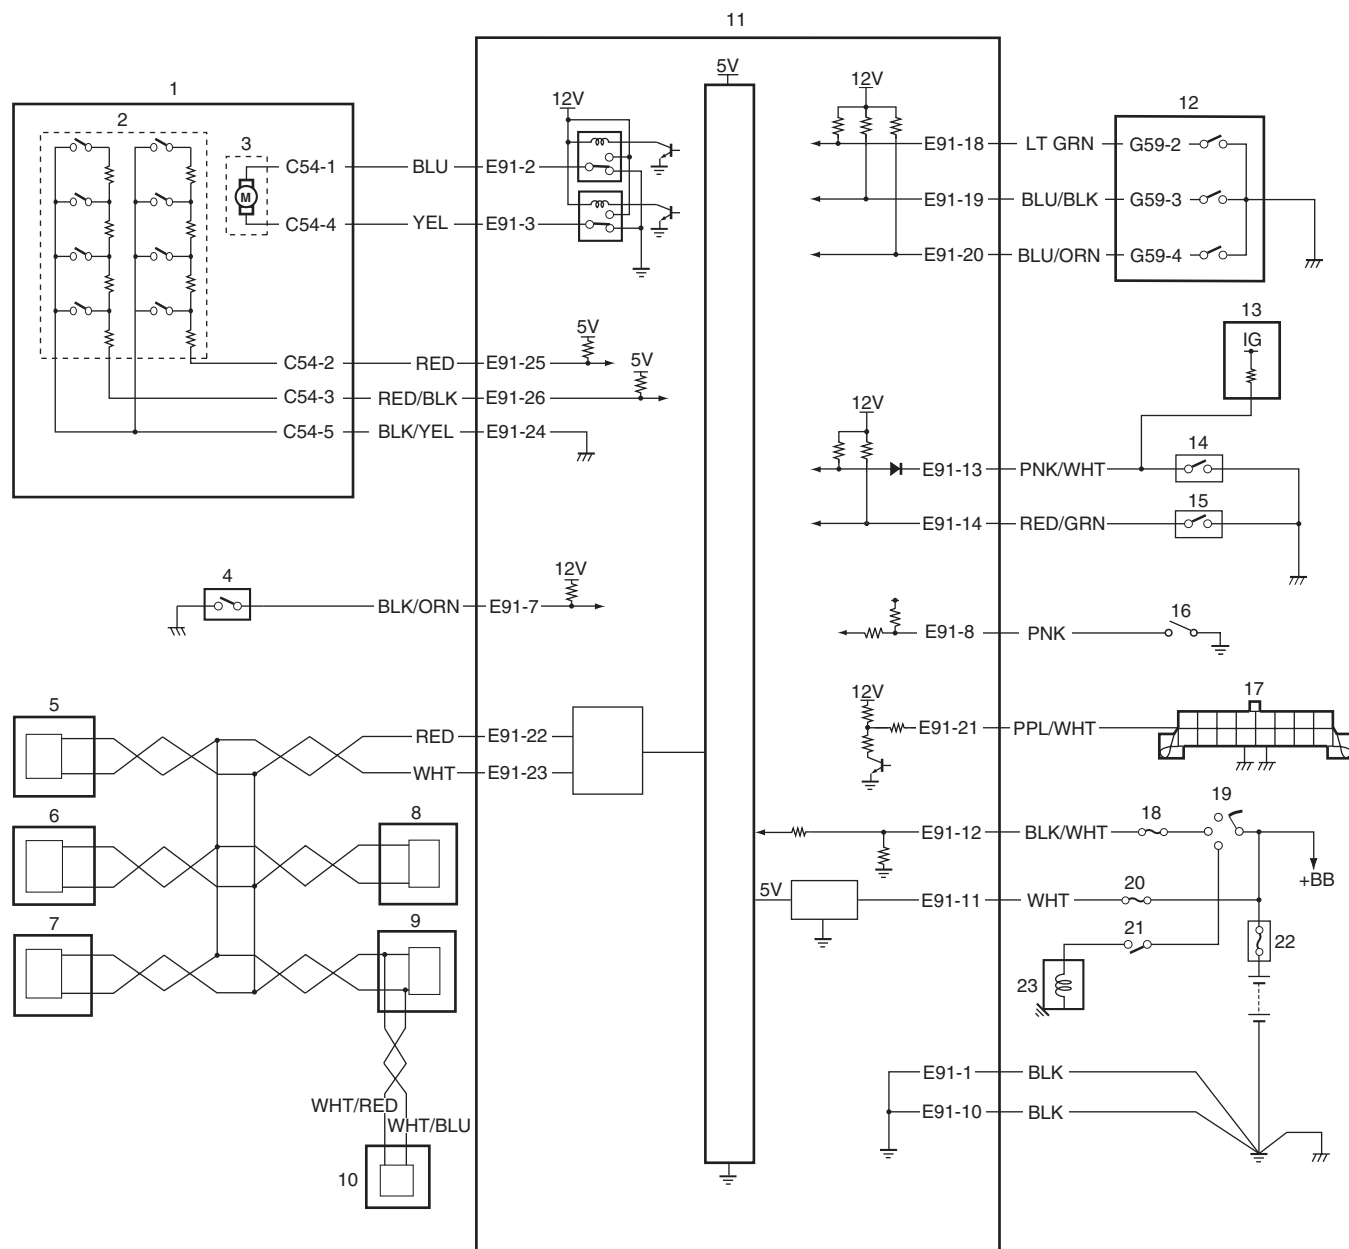


I5JB0A332007-03

1. Transfer actuator	9. ABS hydraulic unit / control module	17. DLC
2. Transfer actuator position switch	10. ECM	18. "IG COIL" fuse
3. Transfer actuator motor	11. 4WD control module	19. Ignition switch
4. CPP switch (for M/T model)	12. Transfer switch	20. "4WD" fuse
5. BCM	13. TCM (for A/T model)	21. Shift switch (for A/T model) or CPP switch (for M/T model)
6. TCM (for A/T model)	14. 4L/N switch	22. Main fuse box
7. Combination meter	15. Center differential lock switch	23. Starting motor
8. Keyless start control module (if equipped)	16. Diagnosis connector (if equipped)	

Terminal Arrangement of 4WD Control Module

[A]

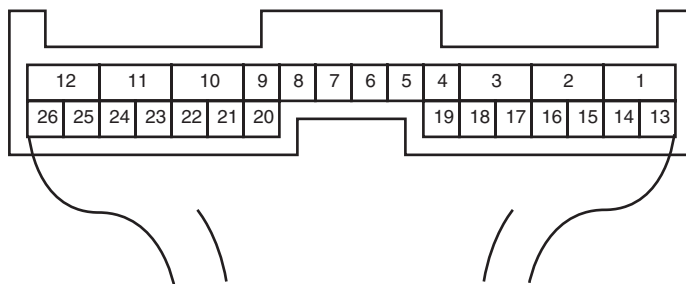

I4JA01332038-01


[A]: Connector "E91" viewed from harness side

Terminal	Circuit	Terminal	Circuit
E91-1	Ground	E91-18	Transfer switch 1
E91-2	Transfer actuator motor 1	E91-19	Transfer switch 2
E91-3	Transfer actuator motor 2	E91-20	Transfer switch 3
E91-7	CPP switch	E91-21	Data link connector (DLC)
E91-8	Diagnosis connector	E91-22	CAN communication line (High)
E91-10	Ground	E91-23	CAN communication line (Low)
E91-11	Power source for internal memory	E91-24	Transfer actuator position switch (ground)
E91-12	Ignition switch	E91-25	Transfer actuator position switch 1 (power)
E91-13	4L/N switch	E91-26	Transfer actuator position switch 2 (power)
E91-14	Center differential lock switch		

Component Location

Transfer Shift Control System Components Location

S6JB0B3303001

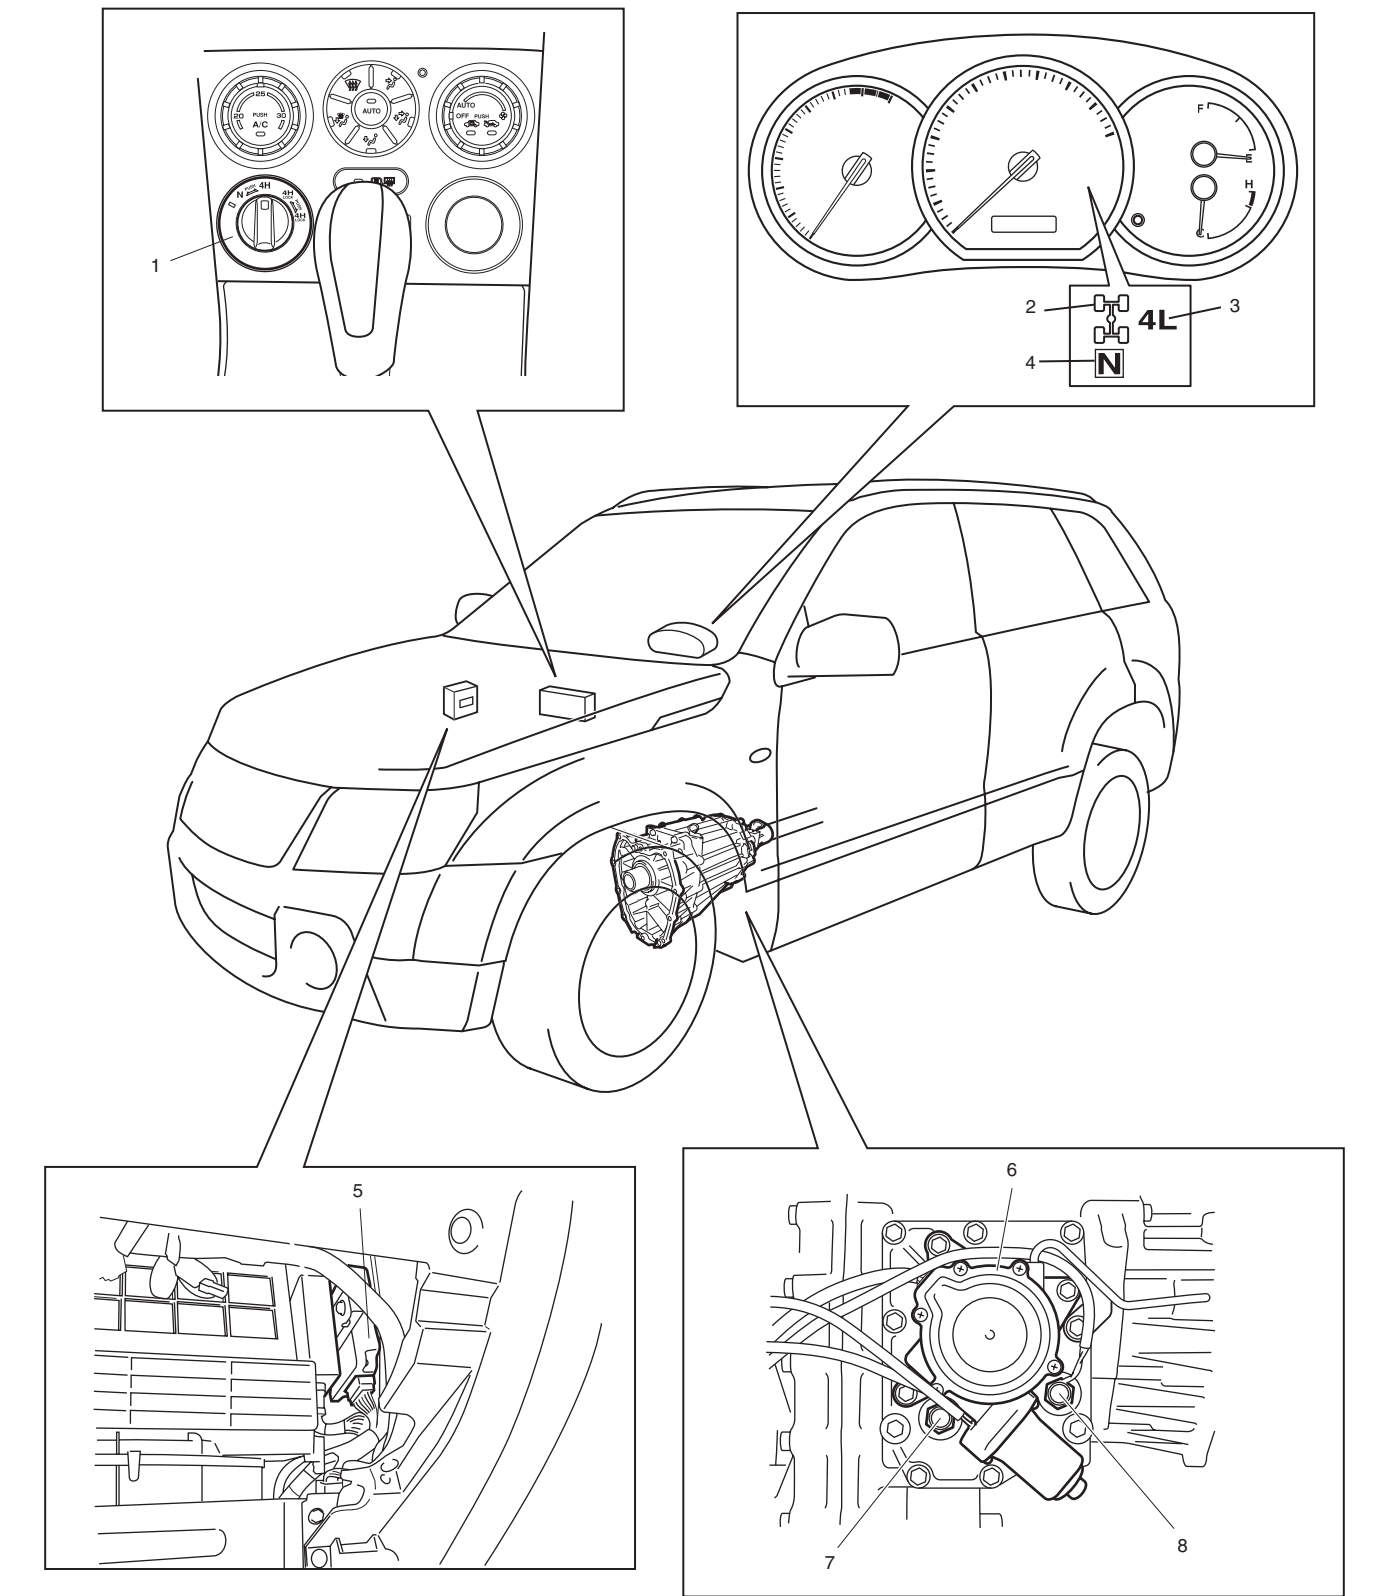

I5JB0A332001-01

1. Transfer switch	4. N indicator	7. Center differential lock switch
2. Differential lock indicator	5. 4WD control module	8. 4L/N switch
3. 4L indicator	6. Transfer actuator	

Diagnostic Information and Procedures

4WD Control System Check

S6JB0B3304001

Refer to the following items for the details of each step.

Step	Action	Yes	No
1	☞ Customer complaint analysis 1) Perform customer complaint analysis. <i>Was customer complaint analysis performed?</i>	Go to Step 2.	Perform customer complaint analysis.
2	☞ DTC / freeze frame data check, record and clearance 1) Check for DTC. <i>Is there any DTC(s)?</i>	Print DTC or write them down and clear them by referring to "DTC Clearance". Go to Step 3.	Go to Step 4.
3	☞ Visual inspection 1) Perform visual inspection. <i>Is there any faulty condition?</i>	Repair or replace malfunction part. Go to Step 11.	Go to Step 5.
4	☞ Visual inspection 1) Perform visual inspection. <i>Is there any faulty condition?</i>	Repair or replace malfunction part. Go to Step 11.	Go to Step 8.
5	☞ Trouble symptom confirmation 1) Shift transfer to "4H", "4H-lock", "4L-lock" and "N" positions referring to "4WD Control System Operation Inspection". 2) Confirm trouble symptom. <i>Is trouble symptom identified?</i>	Go to Step 6.	Go to Step 7.
6	☞ Rechecking and record of DTC / freeze frame data 1) Recheck for DTC referring to "DTC Check". <i>Is there any DTC(s)?</i>	Go to Step 9.	Go to Step 8.
7	☞ Rechecking and record of DTC / freeze frame data 1) Recheck for DTC referring to "DTC Check". <i>Is there any DTC(s)?</i>	Go to Step 9.	Go to Step 10.
8	☞ 4WD control symptom diagnosis 1) Check and repair according to "4WD Control Symptom Diagnosis". <i>Are check and repair complete?</i>	Go to Step 11.	Check and repair malfunction part(s). Go to Step 11.
9	☞ Troubleshooting for DTC 1) Check and repair according to applicable DTC flow. <i>Are check and repair complete?</i>	Go to Step 11.	Check and repair malfunction part(s). Go to Step 11.
10	☞ Check for intermittent problems 1) Check for intermittent problems. <i>Is there any faulty condition?</i>	Repair or replace malfunction part(s). Go to Step 11.	Go to Step 11.
11	☞ Final confirmation test 1) Clear DTC if any. 2) Perform final confirmation test. <i>Is there any problem symptom, DTC or abnormal condition?</i>	Go to Step 6.	End.

Detail of 4WD Control System Check**Step 1: Customer complaint analysis**

Record details of the problem (failure, complaint) and how it occurred as described by the customer.

For this purpose, use of such a questionnaire form as shown in the following will facilitate collecting information to the point required for proper analysis and diagnosis.

Customer questionnaire (Example)

Customer's name:	Model:	VIN:	
Date of issue:	Date of Reg:	Date of problem:	Mileage:

Problem Symptoms	<ul style="list-style-type: none"> • Transfer position indicator abnormal: fails to turn on / fails to turn off / flashes • Abnormal noise while vehicle running: from transfer, from actuator, other _____ • No shifted to "4H" position • No shifted to "4H-lock" position • No shifted to "4L-lock" position • No shifted to "N" position
Frequency of Occurrence	<ul style="list-style-type: none"> • Continuous / Intermittent (_____ times a day, a month) / other _____
Conditions for Occurrence of Problem	<ul style="list-style-type: none"> • When starting: at initial start only / at every start / other _____ • Vehicle speed: while accelerating / while decelerating / at stop / while turning / while running at constant speed / other _____ • Road surface condition: Paved road / rough road / snow-covered road / other _____
Environmental Condition	<ul style="list-style-type: none"> • Weather: fine / cloudy / rain / snow / other • Temperature: _____ °F (_____ °C)
Diagnostic Trouble Code	<ul style="list-style-type: none"> • First check: _____ Normal code / malfunction code (_____) • Second check after test drive: Normal code / malfunction code (_____)

I5JB0A332011-02

NOTE

The form is a standard sample. It should be modified according to conditions characteristic of each market.

Step 2. DTC / freeze frame data check, record and clearance

First, referring to "DTC Check", check DTC and pending DTC. If DTC exists, print or write down DTC and freeze frame data and then clear malfunction DTC(s) by referring to "DTC Clearance". Malfunction DTC indicates malfunction in the system but it is not possible to know from it whether the malfunction is occurring now or it occurred in the past and normal condition has been restored. In order to know that, check symptom in question according to Step 5 and then recheck DTC according to Step 6.

Diagnosing a trouble based on the DTC in this step only or failure to clear the DTC in this step may result in an faulty diagnosis, trouble diagnosis of a normal circuit or difficulty in troubleshooting which is otherwise unnecessary.

Step 3 and 4. Visual inspection

As a preliminary step, be sure to perform visual check of the items that support proper function of the 4WD control system referring to "Visual Inspection".

Step 5. Trouble symptom confirmation

Check trouble symptoms based on information obtained in "Step 1: Customer complaint analysis: " and "Step 2. DTC / freeze frame data check, record and clearance: ". Also, reconfirm DTC according to "DTC Confirmation Procedure" described in each DTC flow.

Step 6 and 7. Rechecking and record of DTC and freeze frame data

Refer to "DTC Check" for checking procedure.

Step 8. 4WD control symptom diagnosis

Check the parts of the system suspected as a possible cause referring to "4WD Control Symptom Diagnosis".

Step 9. Troubleshooting for DTC

Based on the DTC indicated in Step 6 / 7 and referring to "applicable DTC flow", locate the cause of the trouble, namely in a sensor, switch, wire harness, connector, actuator, 4WD control module or other part and repair or replace faulty parts.

Step 10. Check for intermittent problem

Check parts where an intermittent trouble is easy to occur (e.g. wire harness, connector, etc.), referring to "Intermittent and Poor Connection Inspection in Section 00" and related circuit of DTC recorded in Step 2.

Step 11. Final confirmation test

Confirm that the problem symptom has gone and the vehicle is free from any abnormal conditions. If what has been repaired is related to the malfunction DTC, clear the DTC once and check to ensure that no malfunction DTC is indicated.

Transfer Position Indicator Operation Check

S6JB0B3304002

- 1) Turn ignition switch to OFF position.
- 2) Check that transfer position indicators turn on for about 2 seconds and then turns off.
If any faulty condition is found, proceed to "Transfer Position Indicator Does Not Come ON at Ignition Switch ON but Engine Stops" or "Transfer Position Indicator Remains ON Steady at Ignition Switch ON".

4WD Control System Operation Inspection

S6JB0B3304003

NOTE


- If it is difficult to shift between "4H" and "4H-lock" while vehicle is moving, stop vehicle and operate Transfer switch.
- When ABS operates while shifting from "4H" to "4H-lock" ("4H-lock" to "4H"), it becomes to disagreement of transfer switch and transfer position. End of the ABS operation, and then transfer shifting from "4H" to "4H-lock" ("4H-lock" to "4H").
- Transfer position indicator blinks during shifting process.
- Transfer position indicator blinks and warning buzzer sounds during "N" position at intervals of 3 seconds.
- When shifting to "N" or "4L-lock" does not shifts, try the following procedure.
 - For M/T model, shift transmission to N (Neutral) position, turn ignition switch to ON position, depress clutch pedal and brake pedal while engine is running, and then try shifting again.
 - For A/T model, turn ignition switch to ON position, move vehicles lowly back or forth a few feet, depress brake pedal, and then try shifting again.

- 1) Inspect shift operation from 4H to 4H-lock as follows.
 - a) Start engine.
 - b) Position front wheels straight ahead.
 - c) Confirm that vehicle is under following conditions.
 - Transfer shift position is 4H.
 - Vehicle speed is less than 100 km/h (60 mph).
 - d) Turn transfer switch to "4H-lock" position.
 - e) Check that differential lock indicator blinks, and then comes ON steady.

3C-18 Transfer:

- 2) Inspect shift operation from 4H-lock to 4L-lock as follows.
 - a) Stop vehicle completely with engine running.
 - b) Position front wheels straight ahead.
 - c) Confirm that vehicle is under following conditions.
 - Transfer shift position is 4H-lock.
 - Transmission shift lever is at "N" position. (for A/T model)
 - Clutch pedal is depressed fully. (for M/T model)
 - Brake pedal is depressed.
 - d) Push and turn transfer switch to "4L-lock" position.
 - e) Check that 4L indicator blink, and then differential lock indicator and 4L indicator comes ON steady.
- 3) Inspect shift operation from 4L-lock to 4H-lock as follows.
 - a) Stop vehicle completely with engine running.
 - b) Position front wheels straight ahead.
 - c) Confirm that vehicle is under following conditions.
 - Transfer shift position is 4L-lock.
 - Transmission shift lever is at "N" position. (for A/T model)
 - Clutch pedal is depressed fully. (for M/T model)
 - Brake pedal is depressed.
 - d) Push and turn transfer switch to "4H-lock" position.
 - e) Check that 4L indicator blink, and then differential lock indicator comes ON steady and 4L indicator not come ON.

- 4) Inspect shift operation from 4H-lock to 4H as follows.
 - a) Start engine.
 - b) Position front wheels straight ahead.
 - c) Confirm that vehicle is under following conditions.
 - Transfer shift position is 4H-lock.
 - Vehicle speed is less than 100 km/h (60 mph).
 - d) Turn transfer switch to "4H" position.
 - e) Check that differential lock indicator blinks, and then not comes ON.
- 5) Inspect shift operation from 4H to N as follows.
 - a) Stop vehicle completely with engine running.
 - b) Position front wheels straight ahead.
 - c) Confirm that vehicle is under following conditions.
 - Transfer shift position is 4H.
 - Transmission shift lever is at "N" position. (for A/T model)
 - Clutch pedal is depressed fully. (for M/T model)
 - Brake pedal is depressed.
 - d) Turn transfer switch to "□" position (1), keep it there for about 10 seconds, and then turn it to "N" position after N indicator blinks.

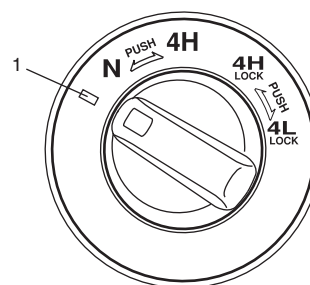

I5JB0A332002-01

- e) Check that N indicator blinks and warning buzzer sounds, and then N indicator comes ON steady.

Visual Inspection

S6JB0B3304004

Check the following parts and systems visually.

Inspection Item	Referring
<ul style="list-style-type: none"> • Front differential oil ---- level, leakage • Rear differential oil ---- level, leakage • Transfer gear oil ---- level, leakage • Manual transmission oil ---- level, leakage • A/T fluid ---- level, leakage • Transfer mounting(s) ---- wear and looseness • Fuses ---- burning • Battery ---- fluid level, corrosion of terminal • Connectors of electric wire harness ---- disconnection, friction • Other parts that can be checked visually 	<p>"Front Differential Oil Change: Front in Section 3B"</p> <p>"Rear Differential Oil Change: Rear in Section 3B"</p> <p>"Transfer Oil Change"</p> <p>"Manual Transmission Oil Change in Section 5B"</p> <p>"A/T Fluid Level Check in Section 5A"</p> <p>"Battery Inspection in Section 1J"</p> <p>"Intermittent and Poor Connection Inspection in Section 00"</p>

DTC Check


S6JB0B3304005

Using SUZUKI Scan Tool

- 1) Turn ignition switch to OFF position.
- 2) Connect SUZUKI scan tool to data link connector (DLC) (1) located on underside of instrument panel.

Special tool

(A): SUZUKI scan tool

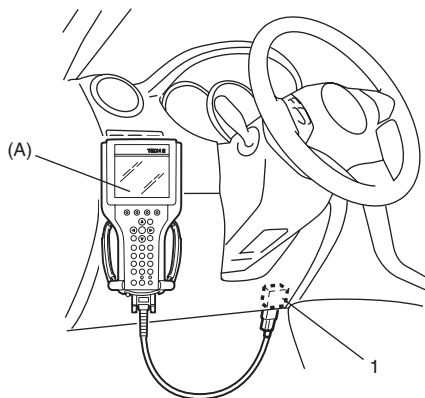

I5JB0A332012-01

- 3) Turn ignition switch to ON position.
- 4) Read DTC according to instructions displayed on SUZUKI scan tool and print it or write it down. Refer to SUZUKI scan tool operator's manual for further details.

If communication between SUZUKI scan tool and 4WD control module is not possible, check if SUZUKI scan tool is communicable by connecting it to 4WD control module in another vehicle. If communication is possible in this case, SUZUKI scan tool is in good condition. Then check data link connector and serial data line (circuit) in the vehicle with which communication was not possible.



- 5) After completing the check, turn ignition switch OFF and disconnect SUZUKI scan tool from data link connector (DLC).

Using Diagnosis Connector

- 1) With ignition switch OFF position, using service wire short diagnosis switch terminal (1) of diagnosis connector (2) and body ground.
- 2) With ignition switch ON position and leaving engine OFF, read DTC displayed on digital display odometer (3) of combination meter referring to "DTC Table".

NOTE

When more than 2 DTCs are stored in memory, flashing for each DTC is repeated three times starting with the smallest DTC number in increasing order.

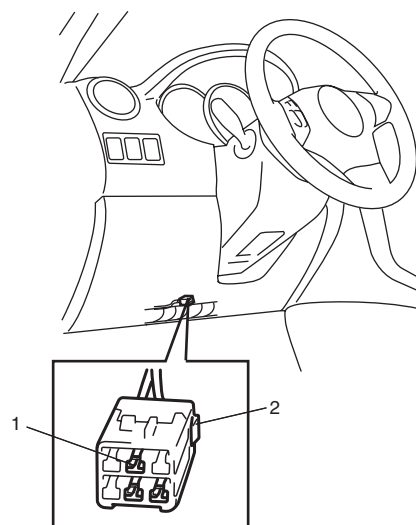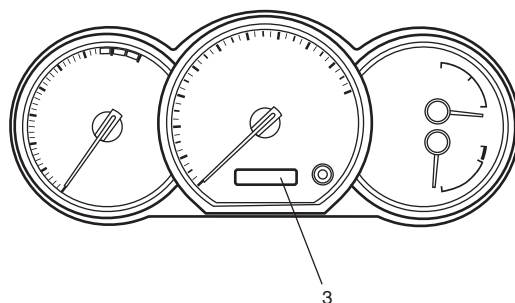

I5JB0A332013-01

- 3) After completing the check, turn ignition switch OFF, disconnect service wire from diagnosis connector.

DTC Clearance


S6JB0B3304006

Using SUZUKI Scan Tool

- 1) Turn ignition switch to OFF position.
- 2) Connect SUZUKI scan tool to data link connector (DLC) (1) located on underside of instrument panel.

Special tool

(A): SUZUKI scan tool

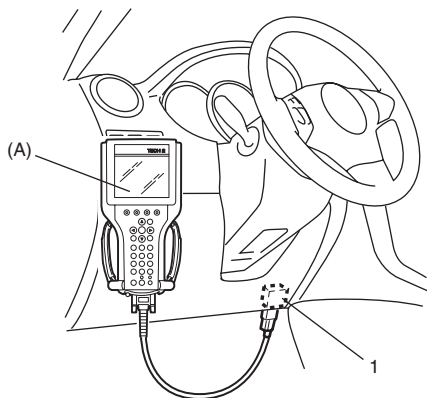

I5JB0A332012-01

- 3) Turn ignition switch to ON position.
- 4) Erase DTC according to instructions displayed on SUZUKI scan tool. Refer to SUZUKI scan tool operator's manual for further details.
- 5) After completing clearance, turn ignition switch OFF and disconnect SUZUKI scan tool from data link connector (DLC).
- 6) Perform "DTC Check" and confirm that NO CODES is displayed.


NOTE

DTC and freeze frame data stored in 4WD control module memory are also cleared in the following cases. Be careful not to clear them before keeping their record.

- When power to 4WD control module is cut off (by disconnecting battery cable, removing fuse or disconnecting 4WD control module connectors).
- When the same malfunction (DTC) is not detected again during 40 engine warm-up cycles.

Using Diagnosis Connector

- 1) Turn ignition switch to ON position.
- 2) Using service wire short diagnosis switch terminal (1) of diagnosis connector (2) and body ground more than 5 times at about 1 second interval within 10 seconds.
- 3) Wait more than 9 seconds.
- 4) Perform "DTC Check" and confirm that DTC No. is not displayed.

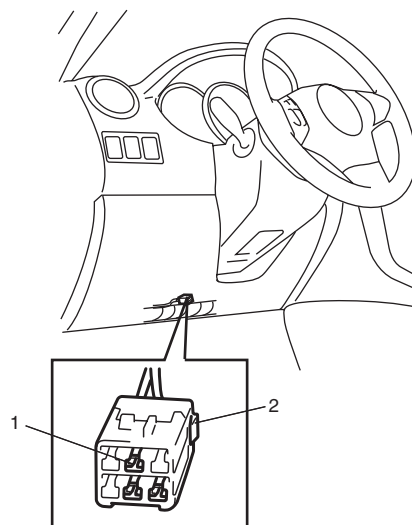

I5JB0A332014-01

DTC Table

DTC No.	Detecting item	Detecting condition (DTC will set when detecting)	Transfer position indicators
☞ C1213	Transfer switch circuit open	Different switch combination from specification is detected.	○
☞ C1214	Transfer switch circuit short	Different switch combination from specification is detected.	○
☞ C1223	Transfer shift actuator motor position switch 1 circuit open	Actuator position switch signal voltage 4.2 V or more.	○
☞ C1224	Transfer shift actuator motor position switch 1 circuit short	Actuator position switch signal voltage 0.6 V or less.	○
☞ C1227	4L/N switch circuit open	Though actuator position switch is "4L-lock" position, the ON signal is not input from the 4L/N switch.	○
☞ C1228	4L/N switch circuit short	Though actuator position switch is "4L-lock" position, the OFF signal is not input from the 4L/N switch.	○
☞ C1230	Transfer actuator circuit malfunction	<ul style="list-style-type: none"> Position switch in transfer shift actuator is not changed for 3 seconds even if command signal of motor relay for transfer shift actuator (included in 4WD control module) is turned on. or Monitor signal from motor relay of transfer shift actuator (included in 4WD control module) is inconsistent with command signal to motor relay of transfer shift actuator. 	○
☞ C1235	Transfer shift actuator motor position switch 2 circuit open	Actuator position switch signal voltage 4.2 V or more.	○
☞ C1236	Transfer shift actuator motor position switch 2 circuit short	Actuator position switch signal voltage 0.6 V or less.	○
☞ C1237	Center differential lock switch circuit open	Though actuator position switch is "4H" position, the ON signal is not input from the center differential lock switch.	○
☞ C1238	Center differential lock switch circuit short	Though actuator position switch is "4L-lock" position, the OFF signal is not input from the center differential lock switch.	○
☞ C1240	4WD control module power supply circuit malfunction	Battery voltage is lower than lower limit voltage for 4WD control module diagnosis.	○
☞ C1243	Internal circuit malfunction of 4WD control module	EEPROM error	○
☞ C1246	Clutch pedal position (CPP) switch circuit short	CPP switch signal is input when vehicle speed is 30 km/h (19 mph).	○
☞ U1073	Control module communication bus off	Transmitting and receiving error of 4WD control module for specified time continuously.	○
☞ U1100	Lost communication with ECM	Receiving error of 4WD control module from ECM for specified time continuously.	○
☞ U1101	Lost communication with TCM	Receiving error of 4WD control module from TCM for specified time continuously.	○
☞ U1121	Lost communication with ABS / electronic stability program control module	Receiving error of 4WD control module from ABS / electronic stability program control module for specified time continuously.	○

NOTE

"O" in transfer position indicator column of the above table means indicator lights up when DTC is detected.

Fail-Safe Table

S6JB0B3304008

This function is provided by the safe mechanism that assures safe drive ability even when the actuator, switch, sensor or its circuit fails. The following table shows the fail safe function for each fail condition of sensor, actuator, switch, 4WD control module or its circuit.

DTC No.	Trouble Area	Fail-Safe Operation
☞ C1223	Transfer actuator switch 1 circuit open	4WD control module stops outputting of control signal to transfer actuator (When shifting, it stops outputting after shifting is completed).
☞ C1224	Transfer actuator switch 1 circuit short	
☞ C1235	Transfer actuator switch 2 circuit open	
☞ C1236	Transfer actuator switch 2 circuit short	
☞ C1230	Transfer actuator circuit malfunction	
☞ C1240	4WD control module power supply circuit malfunction	4WD control module stops outputting of control signal to transfer actuator.
☞ C1246	Clutch switch circuit short	

Scan Tool Data

S6JB0B3304009

Scan Tool Data	Vehicle Condition	Normal Condition / Reference Value
Vehicle speed	At vehicle stop	0 km/h, 0 mph
Actuator Pos Sen	Transfer shifted to 4H position	4H
	Transfer being shifted between 4H-lock and 4H position	4H-lock – 4H
	Transfer shifted to 4H-lock position	4H-lock
	Transfer being shifted between 4H and N position	4H – N
	Transfer shifted to 4L-lock position	4L-lock
	Transfer being shifted between N and 4L-lock position	N – 4L-lock
	Transfer shifted to N position	N
Actuator motor Pos	Transfer shifted to 4H position	4H
	Transfer shifted to 4H-lock position	4H-lock
	Transfer shifted to 4L-lock position	4L-lock
	Transfer shifted to N position	N
Battery voltage	Ignition switch ON and engine stop	10 – 14 V
4L/N switch	Transfer shifted to 4L-lock or N position	ON
	Transfer shifted to 4H or 4H-lock position	OFF
Center diff lock SW	Transfer shifted to 4H or N position	ON
	Transfer shifted to 4H-lock or 4L-lock position	OFF
N range signal (AT)	A/T shifted to “N” range	ON
	A/T shifted to other than “N” range	OFF
CPP switch (MT)	Clutch pedal depressed	OFF
	Clutch pedal released	ON
Mode switch 1	Transfer switch selected to N position	ON
	Transfer switch selected to 4H, 4H-lock or 4L-lock position	OFF
Mode switch 2	Transfer switch selected to 4H, 4H-lock or N position	ON
	Transfer switch selected to 4L-lock position	OFF
Mode switch 3	Transfer switch selected to 4H-lock or 4L-lock position	ON
	Transfer switch selected to 4H or N position	OFF
Warning buzzer	Buzzer not being sound	OFF
	Transfer shifted to N Position	N Pos
	Transfer shifted to disagreement of transfer switch and transfer position	Error
ABS active	ABS operating	ON
	ABS not operating	OFF
ESP® active	ESP® operating	ON
	ESP® not operating	OFF

Scan Tool Data Definitions

Vehicle Speed (KM/H, MPH):

This parameter indicates vehicle speed calculated by 4WD control module.

Actuator Pos Sen (Transfer shift actuator motor position switch) (4H / 4H-lock / 4L-lock / N / 4H-lock-4H / 4H-N / N-4L-lock):

This parameter indicates transfer shift actuator motor position switch status detected by 4WD control module.

Actuator motor Pos (Transfer shift actuator motor position) (4H / 4H-lock / 4L-lock / N):

This parameter indicates transfer shift actuator motor position detected by 4WD control module using transfer shift actuator motor position.

Battery voltage (V):

This parameter indicates battery voltage detected by 4WD control module.

4L / N switch (ON / OFF):

This parameter indicates 4L / N switch status detected by 4WD control module.

Center diff lock Sw (ON / OFF):

This parameter indicates center differential lock switch status detected by 4WD control module.

N range signal (AT) (ON / OFF):

This parameter indicates A/T shift position ("N" range or not) detected by 4WD control module.

CPP switch (Clutch pedal position switch) (MT) (ON / OFF):

This parameter indicates clutch pedal position switch status detected by 4WD control module using CPP switch.

Mode switch 1 (Transfer switch) (ON / OFF):

ON: Transfer switch to N position.

OFF: Transfer switch to other than N position.

Mode switch 2 (Transfer switch) (ON / OFF):

ON: Transfer switch to other than 4L-lock position.

OFF: Transfer switch to 4L-lock position.

Mode switch 3 (Transfer switch) (ON / OFF):

ON: Transfer switch to 4H-lock or 4L-lock position.

OFF: Transfer switch to 4H or N position.

Warning buzzer (OFF / N Pos / Error):

This parameter indicates if buzzer is being commanded by 4WD control module.

ABS active (ON / OFF):

This parameter indicates ABS status detected by 4WD control module.

ESP® active (ON / OFF):

This parameter indicates ESP® status detected by 4WD control module.

4WD Control Symptom Diagnosis

Diagnose transfer assembly after performing the following inspections.

- 1) Perform 4WD control system check referring to "4WD Control System Check".
- 2) Confirm 4WD control system operation referring to "4WD Control System Operation"

Condition	Possible cause	Correction / Reference Item
Transfer does not operate (Transfer position indicator does not operate)	Transfer switch faulty	Check switch referring to "Transfer Switch Inspection".
	Transfer shift actuator faulty	Check transfer shift actuator referring to "Transfer Assembly Inspection".
	4L/N switch and/or switch center differential lock switch faulty	Check switch referring to "Transfer Assembly Inspection".
	Transmission range sensor ("N" range) faulty (for A/T model)	Adjust or check transmission range sensor referring to "Transmission Range Sensor Inspection and Adjustment in Section 5A".
	CPP switch faulty (for M/T model)	Check CPP switch referring to "Clutch Pedal Position (CPP) Switch Inspection and Adjustment in Section 5C".
	Wiring or grounding faulty	Repair as necessary.
	4WD control module faulty	Check 4WD control module referring to "Inspection of 4WD Control Module and Its Circuits".
Transfer refuses to operate (Transfer position indicator flashes, and then transfer does not shift)	Transfer shift actuator faulty	Check transfer shift actuator referring to "Transfer Assembly Inspection".
	4L/N switch and/or center differential lock switch faulty	Check switch referring to "Transfer Assembly Inspection".
	Distorted control cover shift shaft or shift fork	Check shift fork referring to "Transfer Assembly Inspection".
	Weakened control cover shift shaft spring	Check spring referring to "Transfer Assembly Inspection".
	Distorted or dispositioned control cover shift shaft snap ring and washer	Check snap ring and washer referring to "Transfer Assembly Inspection".
	Worn chamfered tooth on sleeve or gear	Check chamfered tooth and gear referring to "Transfer Assembly Inspection".
	Wiring or grounding faulty	Repair as necessary.
Gear slipping out of mesh	4WD control module faulty	Check 4WD control module referring to "Inspection of 4WD Control Module and Its Circuits".
	Worn control cover shift shaft	Check control cover shift shaft referring to "Transfer Assembly Inspection".
	Worn shift fork or sleeve	Check shift fork or sleeve referring to "Transfer Assembly Inspection".
	Weak or damaged control cover shift shaft spring	Check spring referring to "Transfer Assembly Inspection".
	Worn bearings on input gear or counter gear	Check bearing referring to "Transfer Assembly Inspection".
	Worn chamfered tooth on sleeve or gear	Check sleeve and gear referring to "Transfer Assembly Inspection".
	Missing or disengagement of circlip(s)	Check circlip(s) referring to "Transfer Assembly Inspection".
Noise	Damaged or worn bearing(s)	Refer to "Transfer Assembly Inspection".
	Damaged or worn gear(s)	Refer to "Transfer Assembly Inspection".
	Damaged or worn chamfered tooth on sleeve or gear	Refer to "Transfer Assembly Inspection".

Transfer position indicator operates according to the signal from 4WD control module. If the transfer control system is in good condition, transfer position indicator light up for 2 seconds when ignition switch is turned to ON position, and then turned to OFF position. If an abnormality is detected in the system, transfer position indicator remains lighting.

Troubleshooting


Step	Action	Yes	No
1	Transfer position indicator power supply check 1) Turn ignition switch to ON position. <i>Do other indicators come ON?</i>	Go to Step 2.	Go to Step 3.
2	Check DTC 1) Connect scan tool to DLC with ignition switch OFF. 2) Turn ignition switch to ON position and check DTC. <i>Is there DTC(s) U1073, U1100, U1101 and/or U1121?</i>	Go to applicable DTC diag. flow.	Substitute a known-good combination meter and recheck. If transfer position indicator still remains off, substitute a known-good 4WD control module and recheck.
3	CAN communication circuit check 1) Check CAN communication circuit between combination meter and 4WD control module referring to "DTC U1073: Control Module Communication Bus Off". <i>Is CAN communication circuit in good condition?</i>	Go to Step 4.	Repair or replace.
4	"METER" fuse check 1) Turn ignition switch to OFF position. 2) Check for fuse blown to "METER" fuse in junction block assembly. <i>Is "METER" fuse in good condition?</i>	Go to Step 5.	Replace "METER" fuse and check for short.
5	Combination meter power supply check 1) Remove combination meter referring to "Combination Meter Removal and Installation in Section 9C". 2) Check proper connection to combination meter connector at "G28-13" and "G28-15" terminals. 3) If OK, then turn ignition switch to ON position and measure voltage between combination meter connector at "G28-13" terminal and vehicle body ground. <i>Is it 10 – 14 V?</i>	Go to Step 6.	"PPL/RED" wire is open circuit.
6	Combination meter ground circuit check 1) Turn ignition switch to OFF position. 2) Measure resistance between combination meter connector at "G28-15" terminal and vehicle body ground. <i>Is resistance 1 Ω or less?</i>	Substitute a known-good combination meter and recheck. If transfer position indicator still remains OFF, substitute a known-good 4WD control module and recheck.	"BLK" wire is open or high resistance circuit.

Step	Action	Yes	No
1	Check DTC 1) Check DTC referring to “DTC Check”. <i>Is there any DTC(s)?</i>	Perform DTC flow to repair and retry.	Go to Step 2.
2	CAN communication circuit check 1) Check CAN communication circuit between combination meter and 4WD control module referring to “DTC U1073: Control Module Communication Bus Off”. <i>Is CAN communication circuit in good condition?</i>	Substitute a known-good combination meter and recheck. If transfer position indicator still remains off, substitute a known-good 4WD control module and recheck.	Repair or replace.

DTC C1213: Transfer Switch Circuit Open

S6JB0B3304014

Wiring Diagram

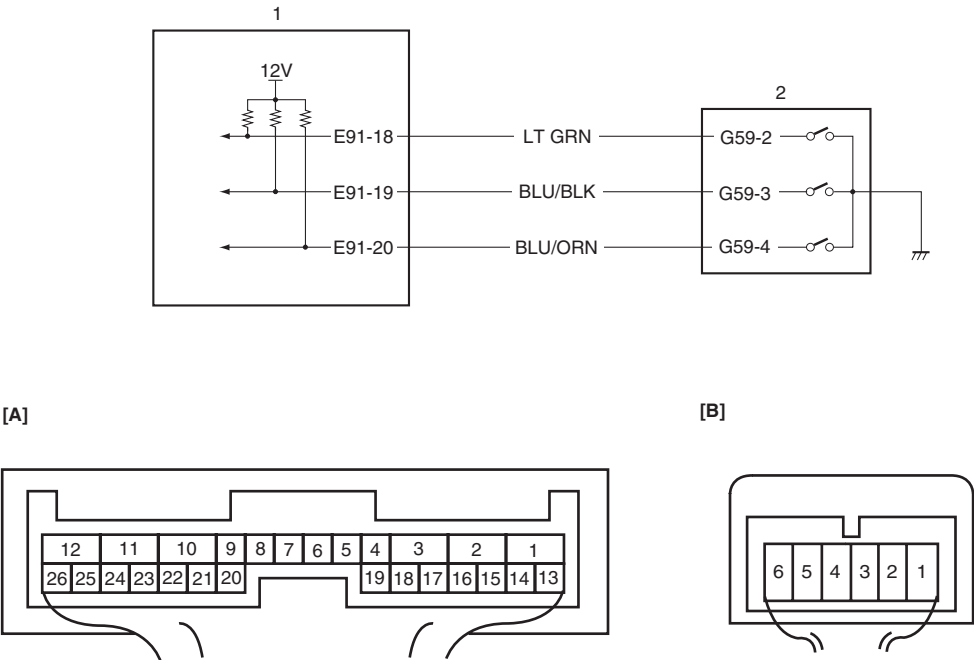

I5JB0A332016-01

[A]: 4WD control module connector "E91" (viewed from harness side)	1. 4WD control module
[B]: Transfer switch connector "G59" (viewed from harness side)	2. Transfer switch

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Transfer switch combination different from specification is detected for more than 0.5 seconds.	<ul style="list-style-type: none"> Transfer switch Transfer switch circuit 4WD control module

DTC Confirmation Procedure

- 1) Clear DTC using scan tool.
- 2) Select transfer switch to "4H" position and keep its position for 10 seconds. Similarly select transfer switch to "4H-lock", "N" and "4L-lock" position.
- 3) Check DTC.

Troubleshooting


Step	Action	Yes	No
1	Was "4WD control system check" performed?	Go to Step 2.	Go to "4WD Control System Check".
2	Transfer switch circuit check <ol style="list-style-type: none"> 1) Disconnect transfer switch connector "G59" with ignition switch OFF. 2) Check for proper connection to "G59-2", "G59-3" and "G59-4" terminals of transfer switch connector. 3) If connection is OK, measure voltage between "G59-2", "G59-3" or "G59-4" terminal of transfer switch connector and vehicle body ground with ignition switch ON. <p>Is it 10 – 14 V?</p>	Go to Step 3.	Go to Step 4.

Step	Action	Yes	No
3	Transfer switch check 1) Check transfer switch referring to “Transfer Switch Inspection”. <i>Is switch in good condition?</i>	Substitute a known-good 4WD control module and recheck.	Replace transfer switch.
4	Wire harness check 1) Disconnect connector from 4WD control module connector “E91” with ignition switch OFF. 2) Check for open and high resistance in related circuits. <ul style="list-style-type: none">Between “G59-2” terminal of transfer switch connector and “E91-18” terminal of 4WD control module connectorBetween “G59-3” terminal of transfer switch connector and “E91-19” terminal of 4WD control module connectorBetween “G59-4” terminal of transfer switch connector and “E91-20” terminal of 4WD control module connector <i>Are they in good condition?</i>	Substitute a known-good 4WD control module and recheck.	Repair circuit.

DTC C1214: Transfer Switch Circuit Short

S6JB0B3304015

Wiring Diagram

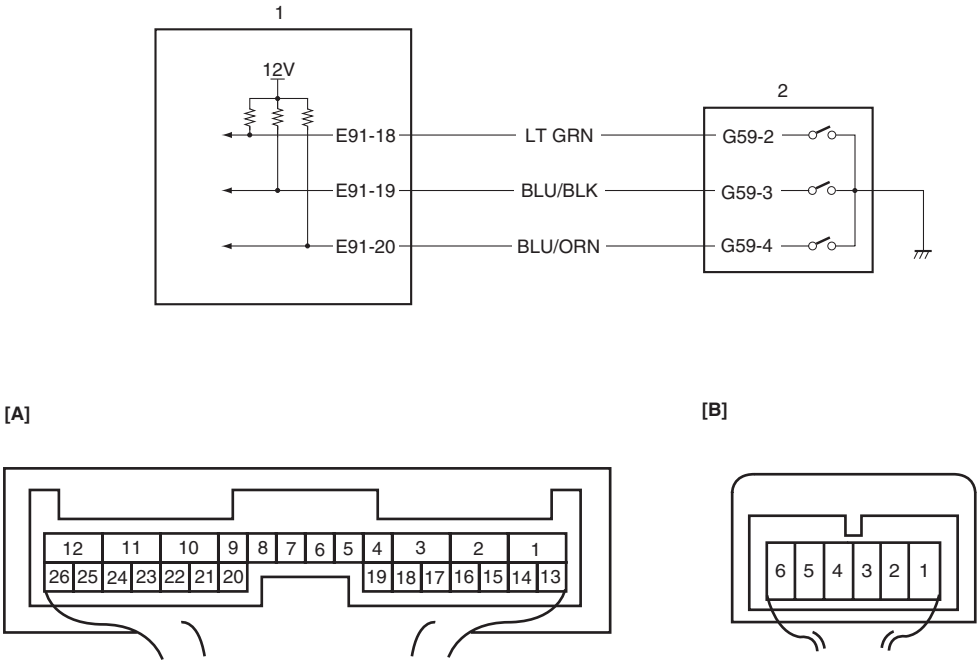

I5JB0A332016-01

[A]: 4WD control module connector “E91” (viewed from harness side)	1. 4WD control module
[B]: Transfer switch connector “G59” (viewed from harness side)	2. Transfer switch

3C-30 Transfer:

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Transfer switch combination different from specification is detected for more than 0.5 seconds.	<ul style="list-style-type: none">• Transfer switch• Transfer switch circuit• 4WD control module

DTC Confirmation Procedure

- 1) Clear DTC using scan tool.
- 2) Select transfer switch to "4H" position and keep its position for 10 seconds. Similarly select transfer switch to "4H-lock", "N" and "4L-lock" position.
- 3) Check DTC.


Troubleshooting

Step	Action	Yes	No
1	<i>Was "4WD control system check" performed?</i>	Go to Step 2.	Go to "4WD Control System Check".
2	Transfer switch circuit check 1) Disconnect transfer switch connector "G59" with ignition switch OFF. 2) Check for proper connection to "G59-2", "G59-3" and "G59-4" terminals of transfer switch connector. 3) If connection is OK, measure voltage between "G59-2", "G59-3" or "G59-4" terminal of transfer switch connector and vehicle body ground with ignition switch ON. <i>Is it 10 – 14 V?</i>	Go to Step 3.	Go to Step 4.
3	Transfer switch check 1) Check transfer switch referring to "Transfer Switch Inspection". <i>Is switch in good condition?</i>	Substitute a known-good 4WD control module and recheck.	Replace transfer switch.
4	Wire harness check 1) Disconnect connector from 4WD control module connector "E91" with ignition switch OFF. 2) Check for shorted to ground in related circuits. <ul style="list-style-type: none">• Between "G59-2" terminal of transfer switch connector and "E91-18" terminal of 4WD control module connector• Between "G59-3" terminal of transfer switch connector and "E91-19" terminal of 4WD control module connector• Between "G59-4" terminal of transfer switch connector and "E91-20" terminal of 4WD control module connector <i>Are they in good condition?</i>	Substitute a known-good 4WD control module and recheck.	Repair circuit.

DTC C1223 / C1235: Transfer Shift Actuator Motor Position Switch 1 Circuit Open / Transfer Shift Actuator Motor Position Switch 2 Circuit Open

S6JB0B3304016

Wiring Diagram

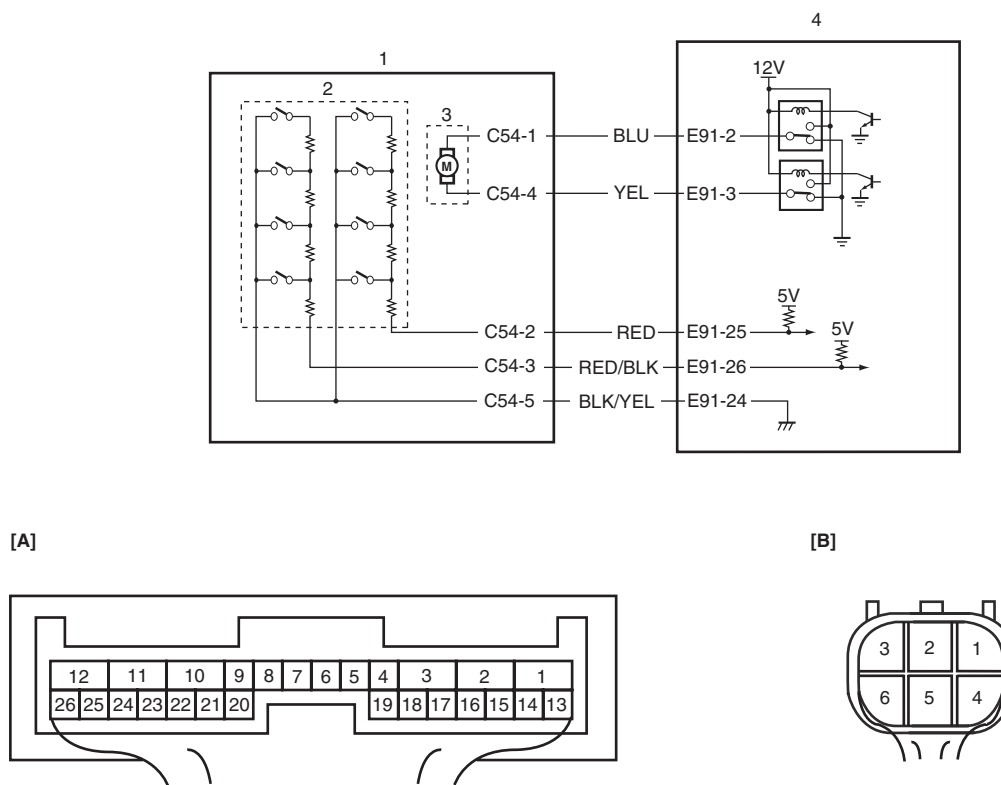

I5JB0A332017-01

[A]: 4WD control module connector "E91" (viewed from harness side)	2. Transfer shift actuator motor position switch
[B]: Transfer shift actuator connector "C54" (engine harness side) (viewed from harness side)	3. Transfer shift actuator motor
1. Transfer shift actuator	4. 4WD control module

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Transfer shift actuator motor position switch signal voltage 4.2 V or more.	<ul style="list-style-type: none"> Transfer shift actuator motor position switch Transfer shift actuator motor position switch circuit 4WD control module

DTC Confirmation Procedure

- 1) Clear DTC using scan tool.
- 2) Select transfer switch to "4H" position and keep its position for 10 seconds. Similarly select transfer switch to "4H-lock", "N" and "4L-lock" position.
- 3) Check DTC.


Troubleshooting

Step	Action	Yes	No
1	Was "4WD control system check" performed?	Go to Step 2.	Go to "4WD Control System Check".
2	Transfer shift actuator motor position switch circuit check 1) Disconnect transfer shift actuator connector "C54" with ignition switch OFF. 2) Check for proper connection to "C54-2", "C54-3" and "C54-5" terminals of transfer shift actuator connector. 3) If connection is OK, measure voltage between "G54-2", "G54-3" or "G54-5" terminal of transfer switch connector and vehicle body ground with ignition switch ON. <i>Is it approx. 5 V?</i>	Go to Step 3.	Go to Step 4.
3	Transfer shift actuator position switch check 1) Check transfer shift actuator position switch referring to "Transfer Assembly Inspection". <i>Is actuator in good condition?</i>	Substitute a known-good 4WD control module and recheck.	Faulty actuator position switch. Replace transfer shift actuator.
4	Wire harness check 1) Disconnect connector from 4WD control module connector "E91" with ignition switch OFF. 2) Check for open and high resistance in related circuits. <ul style="list-style-type: none"> Between "C54-2" terminal of transfer shift actuator connector and "E91-25" terminal of 4WD control module connector Between "C54-3" terminal of transfer shift actuator connector and "E91-26" terminal of 4WD control module connector Between "C54-5" terminal of transfer shift actuator connector and "E91-24" terminal of 4WD control module connector <i>Are they it in good condition?</i>	Substitute a known-good 4WD control module and recheck.	Repair circuit.

DTC C1224 / C1236: Transfer Shift Actuator Motor Position Switch 1 Circuit Short / Transfer Shift Actuator Motor Position Switch 2 Circuit Short

S6JB0B3304017

Wiring Diagram

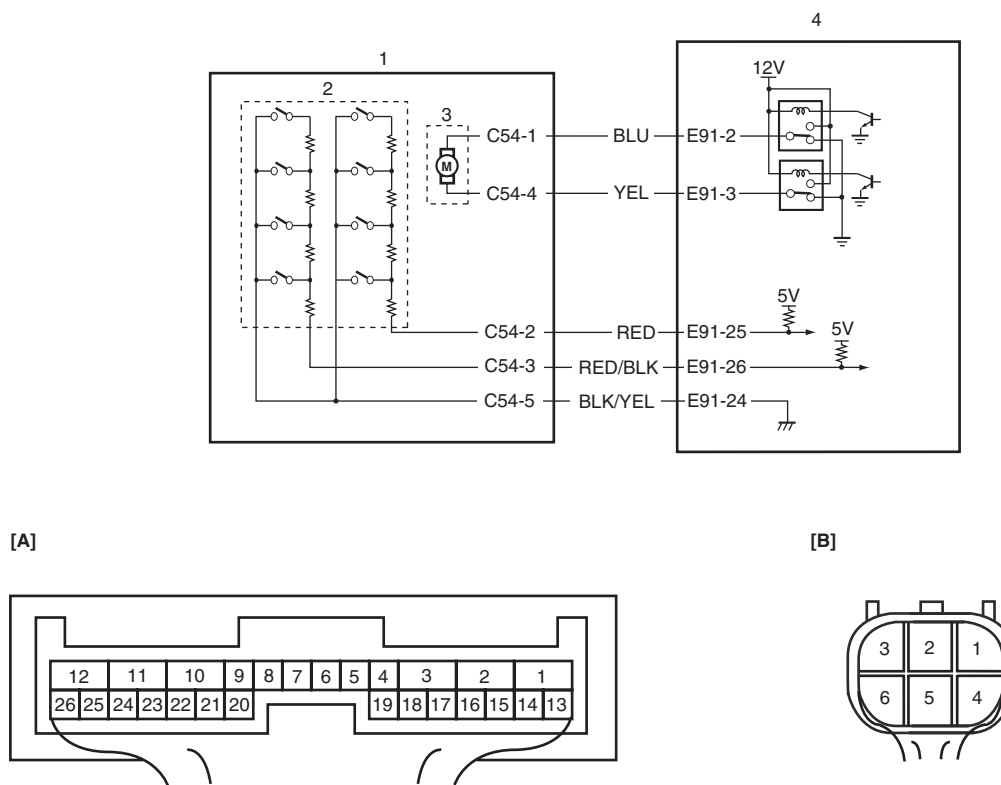

I5JB0A332017-01

[A]: 4WD control module connector "E91" (viewed from harness side)	2. Transfer shift actuator motor position switch
[B]: Transfer shift actuator connector "C54" (engine harness side) (viewed from harness side)	3. Transfer shift actuator motor
1. Transfer shift actuator	4. 4WD control module

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Transfer shift actuator motor position switch signal voltage 0.6 V or less.	<ul style="list-style-type: none"> Transfer shift actuator motor position switch Transfer shift actuator motor position switch circuit 4WD control module

DTC Confirmation Procedure


- 1) Clear DTC using scan tool.
- 2) Select transfer switch to "4H" position and keep its position for 10 seconds. Similarly select transfer switch to "4H-lock", "N" and "4L-lock" position.
- 3) Check DTC.

3C-34 Transfer:**Troubleshooting**

Step	Action	Yes	No
1	<i>Was "4WD control system check" performed?</i>	Go to Step 2.	Go to "4WD Control System Check".
2	Transfer shift actuator motor position switch circuit check 1) Disconnect transfer shift actuator connector "C54" with ignition switch OFF. 2) Check for proper connection to "C54-2", "C54-3" and "C54-5" terminals of transfer shift actuator connector. 3) If connection is OK, measure voltage between "G54-2", "G54-3" or "G54-5" terminal of transfer switch connector and vehicle body ground with ignition switch ON. <i>Is it approx. 5 V?</i>	Go to Step 3.	Go to Step 4.
3	Transfer shift actuator position switch check 1) Check transfer shift actuator position switch referring to "Transfer Assembly Inspection". <i>Is actuator in good condition?</i>	Substitute a known-good 4WD control module and recheck.	Faulty actuator position switch. Replace transfer shift actuator.
4	Wire harness check 1) Disconnect connector from 4WD control module connector "E91" with ignition switch OFF. 2) Check for shorted to ground in related circuits. <ul style="list-style-type: none">• Between "C54-2" terminal of transfer shift actuator connector and "E91-25" terminal of 4WD control module connector• Between "C54-3" terminal of transfer shift actuator connector and "E91-26" terminal of 4WD control module connector• Between "C54-5" terminal of transfer shift actuator connector and "E91-24" terminal of 4WD control module connector <i>Are they in good condition?</i>	Substitute a known-good 4WD control module and recheck.	Repair circuit.

DTC C1227: 4L/N Switch Circuit Open

S6JB0B3304018

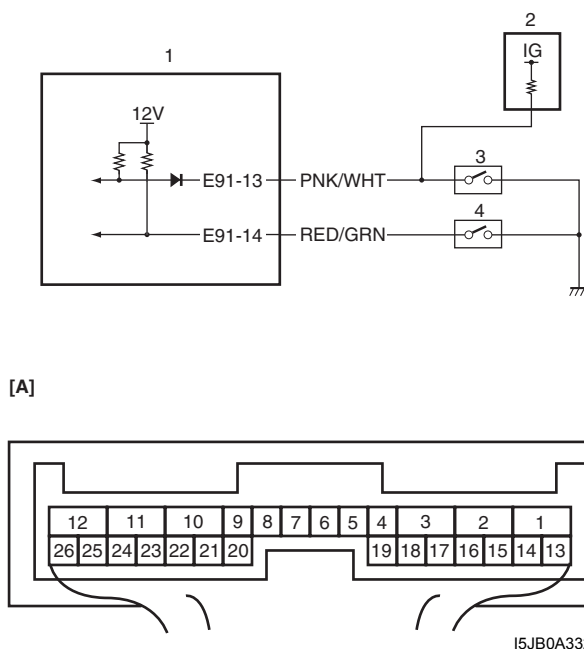Wiring Diagram

[A]: 4WD control module connector "E91" (viewed from harness side)		3. 4L/N switch
1. 4WD control module		4. Center differential lock switch
2. TCM		

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Though transfer shift actuator motor position switch is "4L-lock" position, the ON signal is not input from the 4L/N switch.	<ul style="list-style-type: none"> 4L/N switch 4L/N switch circuit 4WD control module

DTC Confirmation Procedure

- 1) Clear DTC using scan tool.
- 2) Select transfer switch to "4L-lock" position and keep its position for 1 min.
- 3) Check DTC.

Troubleshooting

Step	Action	Yes	No
1	Was "4WD control system check" performed?	Go to Step 2.	Go to "4WD Control System Check".
2	4L/N switch circuit check <ol style="list-style-type: none"> 1) Disconnect 4L/N switch connector with ignition switch OFF. 2) Check for proper connection to terminal of 4L/N switch connector. 3) If connection is OK, measure voltage between "PNK/WHT" terminal of 4L/N switch connector and vehicle body ground with ignition switch ON. Is it 10 – 14 V?	Go to Step 3.	Go to Step 4.
3	4L/N switch check <ol style="list-style-type: none"> 1) Check 4L/N switch referring to "Transfer Assembly Inspection". Is switch in good condition?	Substitute a known-good 4WD control module and recheck.	Replace 4L/N switch.


3C-36 Transfer:

Step	Action	Yes	No
4	Wire harness check 1) Disconnect connector from 4WD control module connector "E91" with ignition switch OFF. 2) Check for proper connection to "E91-13" terminal of 4WD control module connector. 3) If OK, measure resistance between "PNK/WHT" terminal of 4L/N switch connector and "E91-13" terminal of 4WD control module connector. <i>Is it 1 Ω or less?</i>	Substitute a known-good 4WD control module and recheck.	"PNK/WHT" wire is open or high resistance.


DTC C1228: 4L/N Switch Circuit Short

S6JB0B3304019

Wiring Diagram

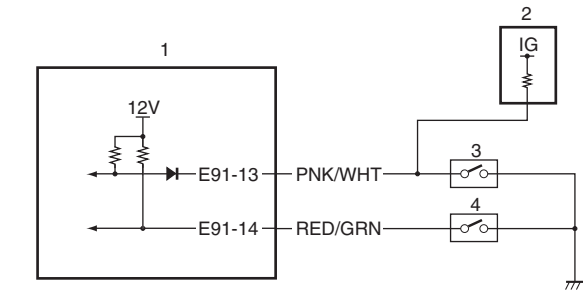

[A]

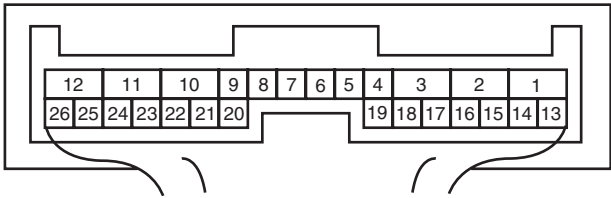

I5JB0A332018-01

[A]: 4WD control module connector "E91" (viewed from harness side)	3. 4L/N switch
1. 4WD control module	4. Center differential lock switch
2. TCM	

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Though transfer shift actuator motor position switch is "4L-lock" position, the OFF signal is not input from the 4L/N switch.	<ul style="list-style-type: none">• 4L/N switch• 4L/N switch circuit• 4WD control module

DTC Confirmation Procedure

- 1) Clear DTC using scan tool.
- 2) Select transfer switch to "4L-lock" position and keep its position for 1 min.
- 3) Check DTC.


Troubleshooting

Step	Action	Yes	No
1	<i>Was "4WD control system check" performed?</i>	Go to Step 2.	Go to "4WD Control System Check".
2	4L/N switch circuit check <ol style="list-style-type: none"> 1) Disconnect 4L/N switch connector with ignition switch OFF. 2) Check for proper connection to terminal of 4L/N switch connector. 3) If connection is OK, measure voltage between "PNK/WHT" terminal of 4L/N switch connector and vehicle body ground with ignition switch ON. <i>Is it 10 – 14 V?</i>	Go to Step 3.	Go to Step 4.
3	4L/N switch check <ol style="list-style-type: none"> 1) Check 4L/N switch referring to "Transfer Assembly Inspection". <i>Is switch in good condition?</i>	Substitute a known-good 4WD control module and recheck.	Replace 4L/N switch.
4	Wire harness check <ol style="list-style-type: none"> 1) Disconnect connector from 4WD control module connector "E91" with ignition switch OFF. 2) Check for proper connection to "E91-13" terminal of 4WD control module connector. 3) If OK, measure resistance between "PNK/WHT" terminal of 4L/N switch connector and "E91-13" terminal of 4WD control module connector. <i>Is it 1 MΩ or more?</i>	Substitute a known-good 4WD control module and recheck.	"PNK/WHT" wire is shorted to ground circuit.

DTC C1230: Transfer Actuator Circuit Malfunction

S6JB0B3304020

Wiring Diagram

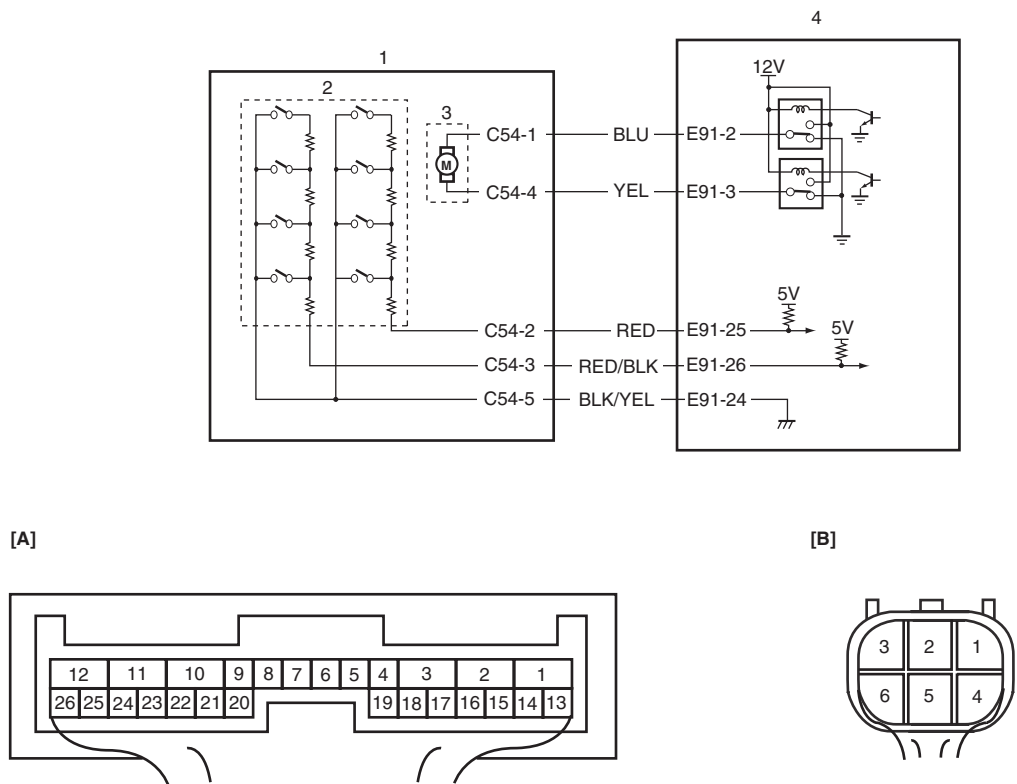

I5JB0A332017-01

[A]: 4WD control module connector "E91" (viewed from harness side)	2. Transfer shift actuator motor position switch
[B]: Transfer shift actuator connector "C54" (engine harness side) (viewed from harness side)	3. Transfer shift actuator motor
1. Transfer shift actuator	4. 4WD control module

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
<ul style="list-style-type: none">Position switch in transfer shift actuator is not changed for 3 seconds even if command signal of motor relay for transfer shift actuator (included in 4WD control module) is turned on.orMonitor signal from motor relay of transfer shift actuator (included in 4WD control module) is inconsistent with command signal to motor relay of transfer shift actuator.	<ul style="list-style-type: none">Transfer shift actuatorTransfer shift actuator circuit4WD control module

DTC Confirmation Procedure

- 1) Clear DTC using scan tool.
- 2) Select transfer switch to "4H" position and keep its position for 10 seconds. Similarly select transfer switch to "4H-lock", "N" and "4L-lock" position.
- 3) Check DTC.

Troubleshooting


Step	Action	Yes	No
1	Was "4WD control system check" performed?	Go to Step 2.	Go to "4WD Control System Check".

Step	Action	Yes	No
2	Transfer shift actuator circuit check 1) Disconnect transfer shift actuator connector “C54” with ignition switch OFF. 2) Check for proper connection to “C54-1” and “C54-4” terminals of transfer shift actuator connector. 3) If connection is OK, measure voltage between “C54-1” or “C54-4” terminal of transfer shift actuator connector and vehicle body ground. <i>Is it 10 – 14 V?</i>	Go to Step 3.	Go to Step 4.
3	Transfer shift actuator check 1) Check transfer shift actuator referring to “Transfer Assembly Inspection”. <i>Is actuator in good condition?</i>	Substitute a known-good 4WD control module and recheck.	Replace transfer shift actuator.
4	Wire harness check 1) Disconnect connector from 4WD control module connector “E91” with ignition switch OFF. 2) Check for open and high resistance or shorted to ground in related circuits. <ul style="list-style-type: none">Between “C54-1” terminal of transfer shift actuator connector and “E91-22” terminal of 4WD control module connectorBetween “C54-4” terminal of transfer shift actuator connector and “E91-3” terminal of 4WD control module connector <i>Are they in good condition?</i>	Substitute a known-good 4WD control module and recheck.	Repair circuit.

DTC C1237: Center Differential Lock Switch Circuit Open

S6JB0B3304021

Wiring Diagram

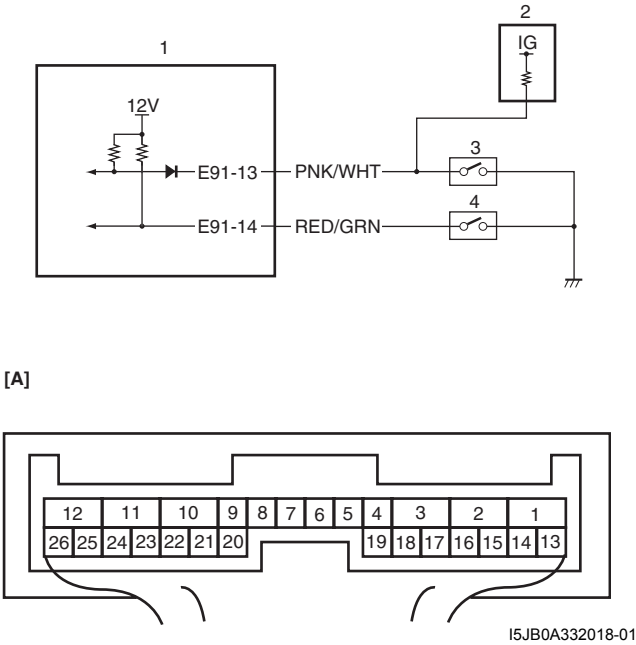

[A]: 4WD control module connector “E91” (viewed from harness side)	3. 4L/N switch
1. 4WD control module	4. Center differential lock switch
2. TCM	

3C-40 Transfer:

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Though transfer shift actuator motor position switch is "4H" position, the ON signal is not input from the center differential lock switch.	<ul style="list-style-type: none">Center differential lock switchCenter differential lock switch circuit4WD control module

DTC Confirmation Procedure


- 1) Clear DTC using scan tool.
- 2) Select transfer switch to "4H" position and keep its position for 1 min.
- 3) Check DTC.

Troubleshooting


Step	Action	Yes	No
1	<i>Was "4WD control system check" performed?</i>	Go to Step 2.	Go to "4WD Control System Check".
2	Center differential lock switch circuit check <ol style="list-style-type: none">1) Disconnect center differential lock switch connector with ignition switch OFF.2) Check for proper connection to terminal of center differential lock switch connector.3) If connection is OK, measure voltage between "RED/GRN" terminal of center differential lock switch connector and vehicle body ground with ignition switch ON. <i>Is it 10 – 14 V?</i>	Go to Step 3.	Go to Step 4.
3	Center differential lock switch check <ol style="list-style-type: none">1) Check center differential lock switch referring to "Transfer Assembly Inspection". <i>Is switch in good condition?</i>	Substitute a known-good 4WD control module and recheck.	Replace center differential lock switch.
4	Wire harness check <ol style="list-style-type: none">1) Disconnect connector from 4WD control module connector "E91" with ignition switch OFF.2) Check for proper connection to "E91-14" terminal of 4WD control module connector.3) If OK, measure resistance between "RED/GRN" terminal of center differential lock switch connector and "E91-14" terminal of 4WD control module connector. <i>Is it 1 Ω or less?</i>	Substitute a known-good 4WD control module and recheck.	"RED/GRN" wire is open or high resistance.

DTC C1238: Center Differential Lock Switch Circuit Short

S6JB0B3304022

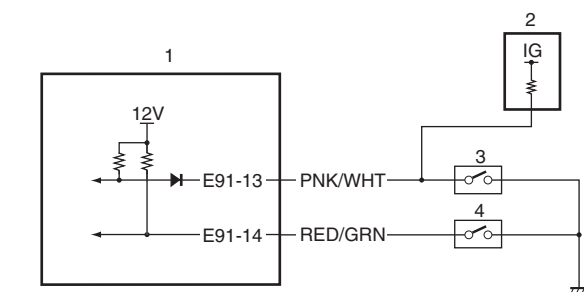Wiring Diagram

[A]

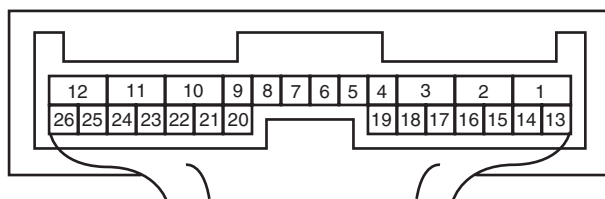

I5JB0A332018-01

[A]: 4WD control module connector "E91" (viewed from harness side)		3. 4L/N switch
1. 4WD control module		4. Center differential lock switch
2. TCM		

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Though transfer shift actuator motor position switch is "4L-lock" position, the OFF signal is not input from the center differential lock switch.	<ul style="list-style-type: none"> Center differential lock switch Center differential lock switch circuit 4WD control module

DTC Confirmation Procedure

- 1) Clear DTC using scan tool.
- 2) Select transfer switch to "4L-lock" position and keep its position for 1 min.
- 3) Check DTC.

Troubleshooting


Step	Action	Yes	No
1	Was "4WD control system check" performed?	Go to Step 2.	Go to "4WD Control System Check".
2	Center differential lock switch circuit check <ol style="list-style-type: none"> 1) Disconnect center differential lock switch connector with ignition switch OFF. 2) Check for proper connection to terminal of center differential lock switch connector. 3) If connection is OK, measure voltage between "RED/GRN" terminal of center differential lock switch connector and vehicle body ground with ignition switch ON. <p>Is it 10 – 14 V?</p>	Go to Step 3.	Go to Step 4.

Step	Action	Yes	No
3	Center differential lock switch check 1) Check center differential lock switch referring to "Transfer Assembly Inspection". <i>Is switch in good condition?</i>	Substitute a known-good 4WD control module and recheck.	Replace center differential lock switch.
4	Wire harness check 1) Disconnect connector from 4WD control module connector "E91" with ignition switch OFF. 2) Check for proper connection to "E91-14" terminal of 4WD control module connector. 3) If OK, measure resistance between "RED/GRN" terminal of center differential lock switch connector and "E91-14" terminal of 4WD control module connector. <i>Is it 1 MΩ or more?</i>	Substitute a known-good 4WD control module and recheck.	"RED/GRN" wire is shorted to ground circuit.


DTC C1240: 4WD Control Module Power Supply Circuit Malfunction

S6JB0B3304023

Wiring Diagram

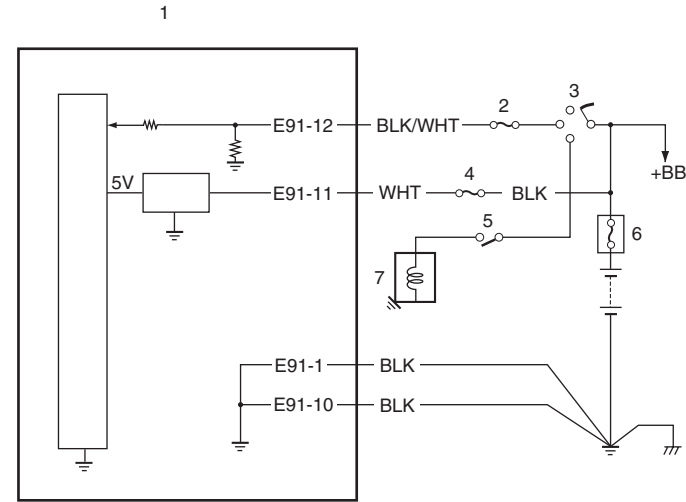

[A]

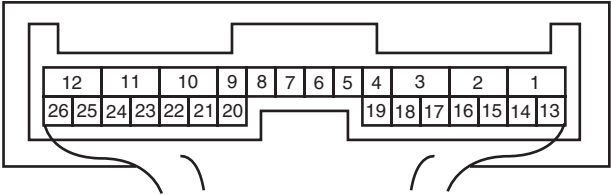

I5JB0A332019-01

[A]: 4WD control module connector "E91" (viewed from harness side)	4. "4WD" fuse
1. 4WD control module	5. Shift switch (for A/T model) or CPP switch (for M/T model)
2. "IG COIL" fuse	6. Main fuse box
3. Ignition switch	7. Starting motor

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
4WD control module power supply voltage is out of specification while vehicle is running at 20 km/h (12 mph) or more.	• 4WD control module power supply circuit

DTC Confirmation Procedure

- 1) Clear DTC using scan tool.
- 2) Start engine and drive vehicle at 30 km/h (19 mph) or more vehicle speed at least for 1 min.
- 3) Stop vehicle and check DTC.

Troubleshooting

Step	Action	Yes	No
1	Was "4WD control system check" performed?	Go to Step 2.	Go to "4WD Control System Check".
2	4WD control module power circuit check 1) Disconnect 4WD control module connector with ignition switch OFF. 2) Check for proper connection to "E91" terminal of 4WD control module connector. 3) If connection is OK, measure voltage between "E91-11" terminal of 4WD control module connector and vehicle body ground with ignition switch ON. <i>Is it 10 – 14 V?</i>	Poor "E91-11" connection or intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00". If wire and connections are OK, substitute a known-good 4WD control module and recheck.	"4WD" fuse blown, "WHT" or "BLK" wire is circuit open or circuit short.

DTC C1243: Internal Circuit Malfunction of 4WD Control Module

S6JB0B3304024

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
EEPROM Error	• 4WD control module

DTC Confirmation Procedure

- 1) Clear DTC using scan tool.
- 2) Turn ignition switch to ON position for 60 seconds.
- 3) Check DTC.


Troubleshooting

Substitute a known-good 4WD control module and recheck.

DTC C1246: Clutch Pedal Position (CPP) Switch Circuit Short

S6JB0B3304025

Wiring Diagram

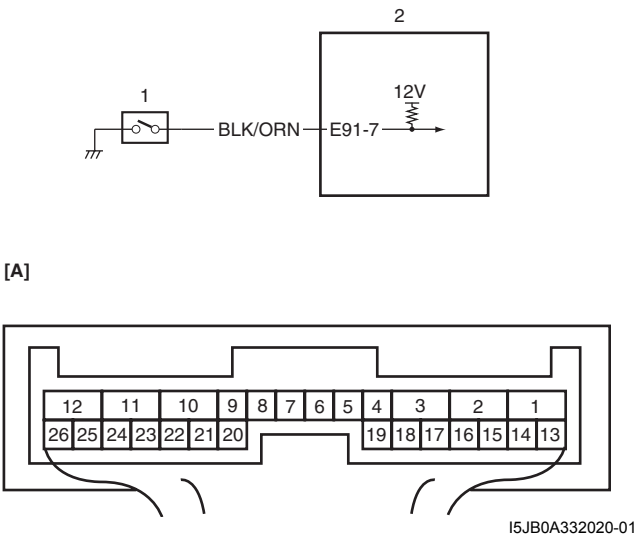

[A]: 4WD control module connector "E91" (viewed from harness side)	2. 4WD control module
1. CPP switch	

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
CPP switch signal is input when vehicle speed is 30 km/h (19 mph).	<ul style="list-style-type: none">• CPP switch• CPP switch circuit• 4WD control module

DTC Confirmation Procedure

- 1) Clear DTC using scan tool.
- 2) Start engine and drive vehicle at 50 km/h (31 mile/h) or more vehicle speed at least for 1 min.
- 3) Stop vehicle and check DTC.


Troubleshooting

Step	Action	Yes	No
1	Was "4WD control system check" performed?	Go to Step 2.	Go to "4WD Control System Check".
2	CPP switch circuit check 1) Disconnect CPP switch connector with ignition switch OFF. 2) Check for proper connection to terminal of CPP switch connector. 3) If connection is OK, measure voltage between "BLK/ORN" terminal of CPP switch connector and vehicle body ground with ignition switch ON. <i>Is it 10 – 14 V?</i>	Go to Step 3.	Go to Step 4.
3	CPP switch check 1) Check CPP switch referring to "Clutch Pedal Position (CPP) Switch Inspection and Adjustment in Section 5C". <i>Is switch in good condition?</i>	Substitute a known-good 4WD control module and recheck.	Replace CPP switch.
4	Wire harness check 1) Disconnect connector from 4WD control module connector "E91" with ignition switch OFF. 2) Check for proper connection to "E91-7" terminal of 4WD control module connector. 3) If OK, measure resistance between "BLK/ORN" terminal of CPP switch connector and "E91-7" terminal of 4WD control module connector. <i>Is it 1 MΩ or more?</i>	Substitute a known-good 4WD control module and recheck.	"BLK/ORN" wire is shorted to ground circuit.

DTC U1073: Control Module Communication Bus Off

S6JB0B3304026

Wiring Diagram

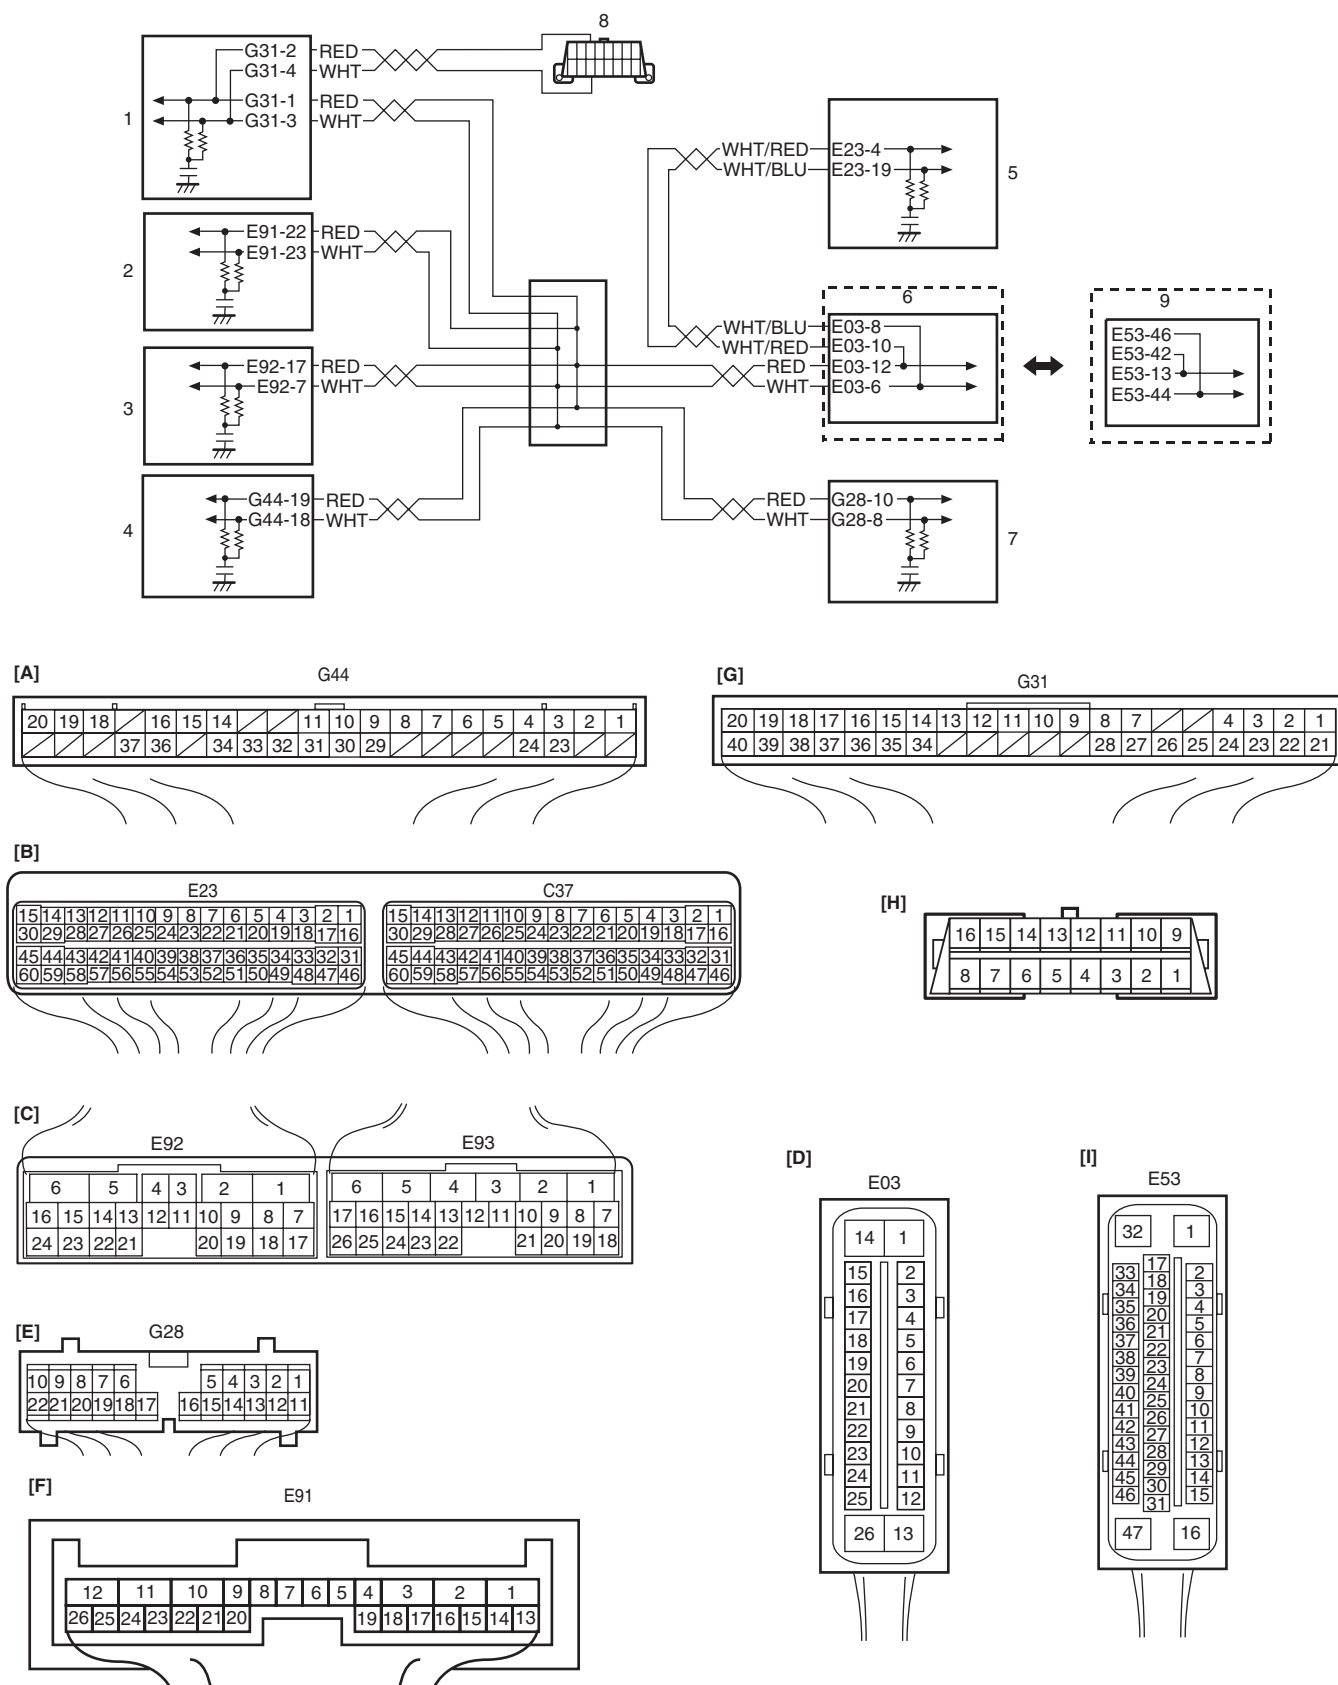

16JB01331002-02

[A]: Keyless start control module connector (if equipped) (viewed from harness side)	1. BCM
[B]: ECM connector (viewed from harness side)	2. 4WD control module
[C]: TCM connector (for A/T model) (viewed from harness side)	3. TCM (for A/T model)

[D]: ABS hydraulic unit / control module connector (viewed from terminal side)	4. Keyless start control module (if equipped)
[E]: Combination meter connector (viewed from harness side)	5. ECM
[F]: 4WD control module connector (viewed from harness side)	6. ABS hydraulic unit / control module (if equipped)
[G]: BCM connector (viewed from harness side)	7. Combination meter
[H]: DLC (viewed from harness side)	8. DLC
[I]: ESP® hydraulic unit / control module connector (viewed from terminal side)	9. ESP® hydraulic unit / control module (if equipped)

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Transmission error of communication data for 4WD control module is detected more than 7 times at more than specified error counts continuously.	<ul style="list-style-type: none"> • CAN communication circuit • ECM • BCM • 4WD control module • TCM • Combination meter • Keyless start control module (if equipped) • ABS or ESP® hydraulic unit / control module

DTC Confirmation Procedure

- 1) Clear DTC using scan tool.
- 2) Start engine and run it for 1 min. or more.
- 3) Stop vehicle and check DTC.

Troubleshooting

Step	Action	Yes	No
1	Was "4WD control system check" performed?	Go to Step 2.	Go to "4WD Control System Check".
2	Control module connector check 1) Check connection of connectors of all control modules communicating by means of CAN. 2) Recheck DTC in TCM. <i>Is DTC U1073 detected?</i>	Go to Step 3.	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".
3	CAN communication circuit check 1) Turn ignition switch to OFF position. 2) Disconnect connectors of all control modules communicating by means of CAN. 3) Check CAN communication circuit between control modules for open, short and high resistance. <i>Is each CAN communication circuit in good condition?</i>	Go to Step 4.	Repair circuit.
4	Check DTC 1) Turn ignition switch to OFF position. 2) Disconnect each connector. <ul style="list-style-type: none"> • ECM • ABS or ESP® hydraulic unit / control module • BCM • TCM (if equipped) • Keyless start control module (if equipped) 3) Recheck DTC in 4WD control module. <i>Is DTC U1073 detected?</i>	Check 4WD control module power and ground circuit. If circuits are OK, substitute a known-good 4WD control module and recheck.	Check applicable control module power and ground circuit. If circuit is OK, substitute a known-good applicable control module and recheck.

DTC U1100: Lost Communication with ECM

S6JB0B3304027

Wiring Diagram

Refer to "DTC U1073: Control Module Communication Bus Off".

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Reception error of communication data for ECM is detected for longer than specified time continuously.	<ul style="list-style-type: none"> CAN communication circuit ABS or ESP® hydraulic unit / control module ECM 4WD control module

DTC Confirmation Procedure

- 1) Clear DTC using scan tool.
- 2) Start engine and run it for 1 min. or more.
- 3) Stop vehicle and check DTC.

Troubleshooting

Step	Action	Yes	No
1	<i>Was "4WD control system check" performed?</i>	Go to Step 2.	Go to "4WD Control System Check".
2	DTC check 1) Check DTC in 4WD control module. <i>Is DTC U1100 and DTC U1073 detected together?</i>	Go to "DTC U1073: Control Module Communication Bus Off".	Go to Step 3.
3	DTC check 1) Check DTC in ECM. <i>Is DTC P1674 detected?</i>	Go to "DTC U0073: Control Module Communication Bus Off in Section 1A".	Go to Step 4.
4	Check each control module connectors 1) Check connection of connectors of all control modules communicating by means of CAN. 2) Recheck in 4WD control module. <i>Is DTC U1100 detected?</i>	Go to Step 5.	NO Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".
5	CAN communication circuit check 1) Turn ignition switch to OFF position. 2) Disconnect connectors of all control modules communicating by means of CAN. 3) Check CAN communication circuit between control modules for open, short and high resistance. <i>Is each CAN communication circuit in good condition?</i>	Check ECM power and ground circuit. If circuit is OK, substitute a known-good ECM and recheck.	Repair circuit.

DTC U1101: Lost Communication with TCM**Wiring Diagram**

Refer to "DTC U1073: Control Module Communication Bus Off".

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Reception error of communication data for TCM is detected for longer than specified time continuously.	<ul style="list-style-type: none"> CAN communication circuit TCM 4WD control module

DTC Confirmation Procedure

- 1) Clear DTC using scan tool.
- 2) Start engine and run it for 1 min. or more.
- 3) Stop vehicle and check DTC.

Troubleshooting

Step	Action	Yes	No
1	<i>Was "4WD control system check" performed?</i>	Go to Step 2.	Go to "4WD Control System Check".
2	DTC check 1) Check DTC in 4WD control module. <i>Is DTC U1100 and DTC U1073 detected together?</i>	Go to "DTC U1073: Control Module Communication Bus Off".	Go to Step 3.
3	DTC check 1) Check DTC in TCM. <i>Is DTC P1774 detected?</i>	Go to "DTC U0073: Control Module Communication Bus Off in Section 5A".	Go to Step 4.
4	Check each control module connectors 1) Check connection of connectors of all control modules communicating by means of CAN. 2) Recheck in 4WD control module. <i>Is DTC U1100 detected?</i>	Go to Step 5.	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".
5	CAN communication circuit check 1) Turn ignition switch to OFF position. 2) Disconnect connectors of all control modules communicating by means of CAN. 3) Check CAN communication circuit between control modules for open, short and high resistance. <i>Is each CAN communication circuit in good condition?</i>	Check TCM power and ground circuit. If circuit is OK, substitute a known-good TCM and recheck.	Repair circuit.

DTC U1121: Lost Communication with ABS / Electronic Stability Program Hydraulic Unit / Control Module

S6JB0B3304029

Wiring Diagram

Refer to "DTC U1073: Control Module Communication Bus Off".

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Reception error of communication data for ABS or ESP® hydraulic unit / control module is detected for longer than specified time continuously.	<ul style="list-style-type: none"> • CAN communication circuit • ABS or ESP® hydraulic unit / control module • 4WD control module

DTC Confirmation Procedure

- 1) Clear DTC using scan tool.
- 2) Start engine and run it for 1 min. or more.
- 3) Stop vehicle and check DTC.

Troubleshooting

Step	Action	Yes	No
1	<i>Was "4WD control system check" performed?</i>	Go to Step 2.	Go to "4WD Control System Check".
2	DTC check 1) Check DTC in 4WD control module. <i>Is DTC U1100 and DTC U1073 detected together?</i>	Go to "DTC U1073: Control Module Communication Bus Off".	Go to Step 3.
3	DTC check 1) Check DTC in ABS or ESP® hydraulic unit / control module. <i>Is DTC PU1073 detected?</i>	Go to "DTC U1073: Control Module Communication Bus Off in Section 4E".	Go to Step 4.
4	Check each control module connectors 1) Check connection of connectors of all control modules communicating by means of CAN. 2) Recheck in 4WD control module. <i>Is DTC U1100 detected?</i>	Go to Step 5.	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".
5	CAN communication circuit check 1) Turn ignition switch to OFF position. 2) Disconnect connectors of all control modules communicating by means of CAN. 3) Check CAN communication circuit between control modules for open, short and high resistance. <i>Is each CAN communication circuit in good condition?</i>	Check ABS or ESP® hydraulic unit / control module power and ground circuit. If circuit is OK, substitute a known-good ABS or ESP® hydraulic unit / control module and recheck.	Repair circuit.

Inspection of 4WD Control Module and Its Circuits

S6JB0B3304030

4WD control module and its circuits can be checked at coupler connected to 4WD control module by measuring voltage, pulse signal.

⚠ CAUTION


4WD control module cannot be checked by itself. It is strictly prohibited to connect voltmeter or ohmmeter to 4WD control module with couplers disconnected from it.

Voltage and Signal Check

- 1) Check voltage using voltmeter (1) connected to each terminal of couplers.
- 2) Check signal using oscilloscope (2) connected to each terminal of couplers.


NOTE

- As each terminal voltage is affected by the battery voltage, confirm that it is 11 V or more when ignition switch is turned ON.
- Pulse signal cannot be measured by voltmeter. It can be measured by oscilloscope.
- Item with asterisk (*) in normal voltage column can be read only by oscilloscope.

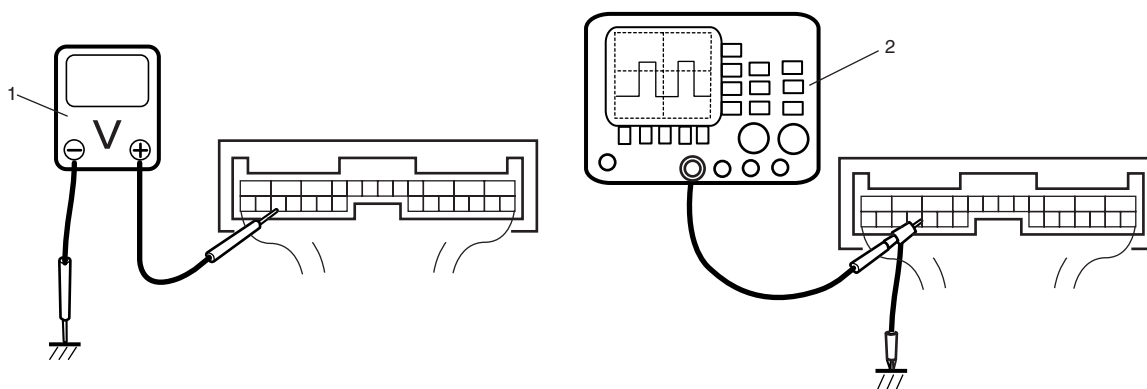

I4JA01332053-01

Terminal arrangement of 4WD control module connector (Viewed from harness side)

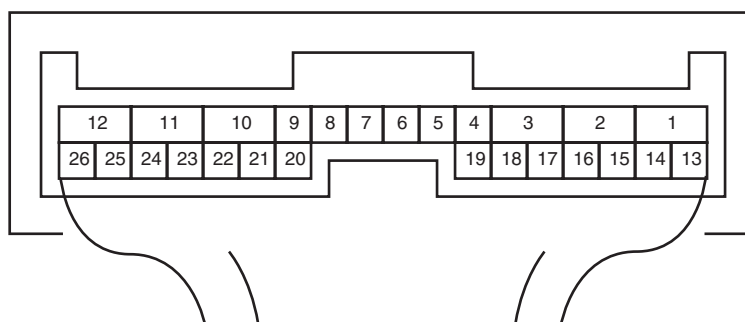

I4JA01332054-01

Terminal Number	Wire Color	Circuit	Normal Voltage	Condition
E91-1	BLK	Ground	0 – 1 V	—
E91-2	BLU	Transfer actuator motor 1	10 – 14 V	Ignition switch turned to ON position and transfer shift actuator being rotated N → 4H → 4H-lock direction or 4L-lock → 4H-lock direction
			0 – 1 V	Ignition switch turned to ON position and transfer shift actuator in other than above-mentioned condition
E91-3	YEL	Transfer actuator motor 2	10 – 14 V	Ignition switch turned to ON position and transfer shift actuator being rotated 4H-lock → 4H → N direction or 4H-lock → 4L-lock direction
			0 – 1 V	Ignition switch turned to ON position and transfer shift actuator in other than above-mentioned condition
E91-4	—	—	—	—
E91-5	—	—	—	—
E91-6	—	—	—	—
E91-7	BLK/ORN	Clutch switch	10 – 14 V	Ignition switch turned to ON position and clutch pedal released
			0 – 1 V	Ignition switch turned to ON position and clutch pedal kept depressing
E91-8	PNK	Diagnosis switch	4 – 5 V	Ignition switch turned to ON position

3C-52 Transfer:

Terminal Number	Wire Color	Circuit	Normal Voltage	Condition
E91-9	—	—	—	—
E91-10	BLK	Ground	0 – 1 V	—
E91-11	WHT	Power source for internal memory	10 – 14 V	—
E91-12	BLK/WHT	Ignition switch	10 – 14 V	Ignition switch turned to ON position
E91-13	BLK/WHT	4L/N switch	10 – 14 V	Ignition switch turned to ON position and transfer shifted to 4H or 4H-lock position
			0 – 1 V	Ignition switch turned to ON position and transfer shifted to 4L-lock or N position
E91-14	RED/GRN	Center differential lock switch	10 – 14 V	Ignition switch turned to ON position and transfer shifted to 4H-lock or 4L-lock position
			0 – 1 V	Ignition switch turned to ON position and transfer shifted to N or 4H position
E91-15	—	—	—	—
E91-16	—	—	—	—
E91-17	—	—	—	—
E91-18	LT GRN	Transfer switch 1	10 – 14 V	Ignition switch turned to ON position and transfer switch at 4H, N or 4L-lock position
			0 – 1 V	Ignition switch turned to ON position and transfer switch at N position
E91-19	BLU/BLK	Transfer switch 2	10 – 14 V	Ignition switch turned to ON position and transfer switch at 4L-lock position
			0 – 1 V	Ignition switch turned to ON position and transfer switch at 4H, 4H-lock or N position
E91-20	BLU/ORN	Transfer switch 3	10 – 14 V	Ignition switch turned to ON position and transfer switch at 4H or N position
			0 – 1 V	Ignition switch turned to ON position and transfer switch at 4H-lock or 4L-lock position
E91-21	PPL/WHT	Data link connector (DLC)	10 – 14 V	Ignition switch turned to ON position
E91-22	RED	CAN communication line (High)	*2.5 – 3.5 V	Ignition switch turned to ON position
E91-23	WHT	CAN communication line (Low)	*1.5 – 2.5 V	Ignition switch turned to ON position
E91-24	BLK/YEL	Transfer actuator position switch (ground)	0 – 1 V	—
E91-25	RED	Transfer actuator position switch 1 (power)	Approx. 4 V	Ignition switch turned to ON position and transfer shifted to 4H-lock position
			Approx. 2 V	Ignition switch turned to ON position and transfer shifted to 4H position
			Approx. 1 V	Ignition switch turned to ON position and transfer shifted to 4L-lock or N position
			Approx. 0 V	Ignition switch turned to OFF position
E91-26	RED/BLK	Transfer actuator position switch 2 (power)	Approx. 4 V	Ignition switch turned to ON position and transfer shifted to 4L-lock position
			Approx. 2 V	Ignition switch turned to ON position and transfer shifted to N position
			Approx. 1 V	Ignition switch turned to ON position and transfer shifted to 4H or 4H-lock position
			Approx. 0 V	Ignition switch turned to OFF position

Repair Instructions

Transfer Oil Level Check



S6JB0B3306001

- 1) Lift up vehicle and check oil leakage.
- 2) Remove oil level/filler plug (1) and check oil level is between 0 and 10 mm (0 and 0.394 in.) from the lower end of oil level / filler plug hole (2).
If oil is insufficient, pour specified oil up to plug hole.
- 3) Apply sealant to thread of level / filler plug, and then tighten it to specified torque.

"A": Sealant 99000-31260 (SUZUKI Bond No.1217G)

Tightening torque

Transfer oil level / filler plug (a): 23 N·m (2.3 kgf-m, 17.0 lb-ft)

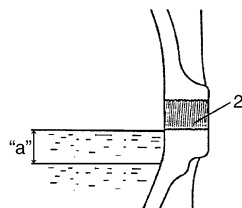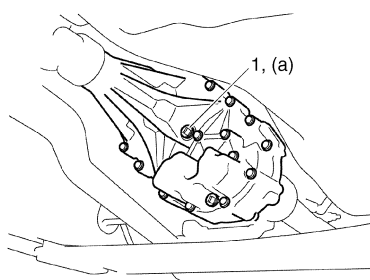

I6JB01331003-01

"a". 0 – 10 mm (0 – 0.394 in.)

Transfer Oil Change

S6JB0B3306002

- 1) Before changing or inspecting oil, be sure to stop engine and lift vehicle horizontally.
- 2) Check leakage.
If leakage exists, correct it.

NOTE

Whenever vehicle is hoisted for any other service work than oil change, also be sure to check for oil leakage.

- 3) Remove oil filler plug (2).
- 4) Remove drain plug (1), and drain oil.

- 5) Apply sealant to thread of drain plug (1), and tighten it to specified torque.

"A": Sealant 99000-31260 (SUZUKI Bond No.1217G)

Tightening torque

Transfer oil drain plug (a): 23 N·m (2.3 kgf-m, 17.0 lb-ft)

- 6) Pour new specified oil up to lower end of oil level / filler plug hole (3).

NOTE

It is highly recommended to use API GL-5 80W-90 gear oil.

Transfer oil specification

: API GL-5 (For SAE classification, refer to viscosity chart [A] in figure.)

Transfer oil capacity



Reference: 1.5 liters (3.2/2.6 US/Imp. pt)

- 7) Apply sealant to thread of level / filler plug, and then tighten it to specified torque.


"A": Sealant 99000-31260 (SUZUKI Bond No.1217G)

Tightening torque

Transfer oil level / filler plug (b): 23 N·m (2.3 kgf-m, 17.0 lb-ft)

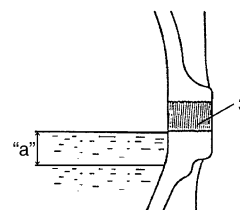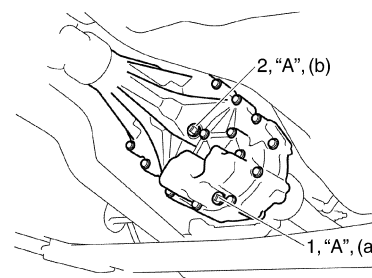

[A]

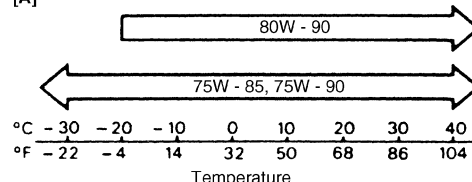

I5JB0A331002-03



"a". 0 – 10 mm (0 – 0.394 in.)

Transfer Oil Seal Removal and Installation

S6JB0B3306003

Removal

- 1) Lift up vehicle and drain transfer oil.
- 2) Remove front propeller shaft and/or rear propeller shaft referring to "Propeller Shaft Removal and Installation in Section 3D".
- 3) Remove front oil seal No.1 (1) and/or rear oil seal (2) using flat end rod or the like.

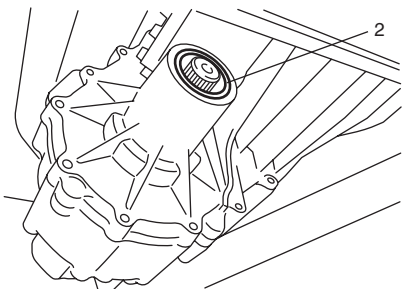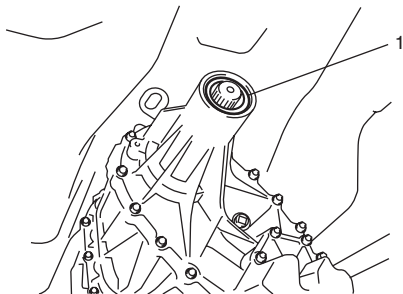

I5JB0A331031-01



Installation

- 1) Install new oil seal using special tool and plastic hammer, and then apply grease to oil seal lip.

: Grease 99000-25010 (SUZUKI Super Grease A)

Special tool

(A): 09913-70123

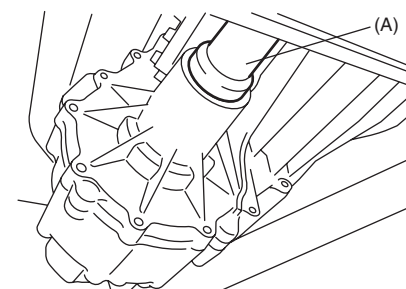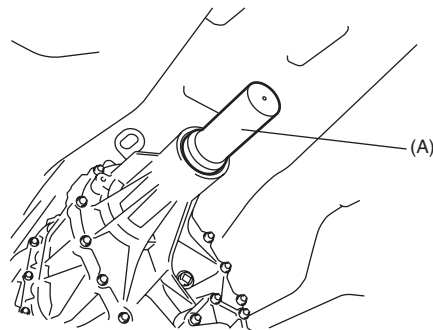

I5JB0A331032-01


- 2) Install front propeller shaft and/or rear propeller shaft referring to "Propeller Shaft Removal and Installation in Section 3D".
- 3) Fill transfer oil referring to "Transfer Oil Change".

Transfer Switch Removal and Installation

S6JB0B3306004

Removal

Remove HVAC control module referring to "HVAC Control Module Removal and Installation in Section 7A", and then remove transfer switch (1) from center cluster (2).

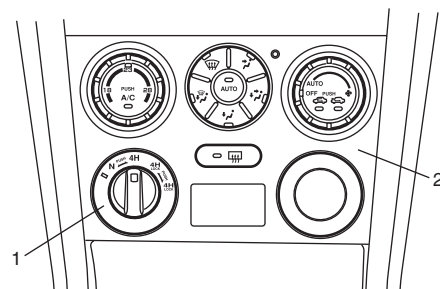

I5JB0A331003-02

Installation


Reverse removal procedure.

Transfer Switch Inspection

S6JB0B3306005

Check continuity between following terminals when transfer switch (1) operated at each position.

Switch position	Terminal
□ (2)	1 – 2
N (3)	1 – 2 – 3
4H (4)	1 – 3
4H-lock (5)	1 – 3 – 4
4L-lock (6)	1 – 4

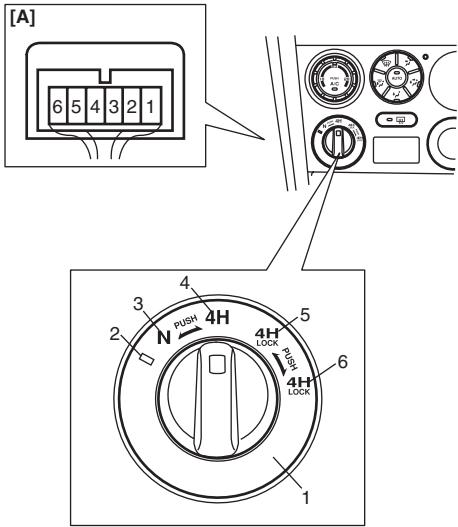

I5JB0A331004-04


[A]: Transfer switch connector (harness side view)

4WD Control Module Removal and Installation

S6JB0B3306006

Removal

- 1) Disconnect negative (–) cable from battery.
- 2) If the vehicle is equipped with air bag system, disable air bag system. Refer to “Disabling Air Bag System in Section 8B”.
- 3) Disconnect connectors from 4WD control module (1).
- 4) Remove 4WD control module with TCM by removing its nuts, and then separate 4WD control module and TCM.

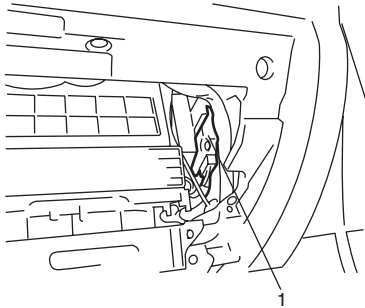

I5JB0A331005-01

Installation

Reverse removal procedure for installation noting the following.


- Connect 4WD control module connectors securely.
- If the vehicle is equipped with air bag system, be sure to enable air bag system after 4WD control module is back in place. Refer to “Enabling Air Bag System in Section 8B”.

Transfer Assembly Dismounting and Remounting

S6JB0B3306007


Dismounting

- 1) Shift transfer to 4H position operating transfer switch.
- 2) Disconnect negative (–) cable from battery.
- 3) Remove gear shift control lever (for M/T model) referring to “Transmission Shift Control Lever Removal and Installation in Section 5B”.
- 4) Drain transfer oil.
- 5) Remove front propeller shaft (1) and rear propeller shaft (2) referring to “Propeller Shaft Removal and Installation in Section 3D”.
- 6) Remove exhaust center pipe (3) referring to “Muffler Removal and Installation in Section 1K”.
- 7) Disconnect transfer actuator connector (4), center differential lock switch connector (5), 4L/N switch connector (6).

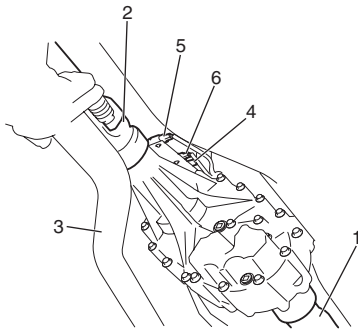


I5JB0A331006-01

- 8) Support engine rear mounting member (1) with transmission jack (2).
- 9) Remove engine rear mounting bolts (3), and then slant the transmission with transfer.

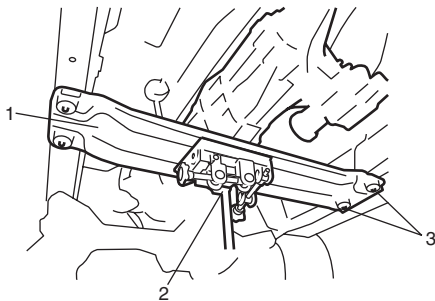

I5JB0A331007-02

- 10) Remove gear shift control lever rear case from transfer (for M/T model).
- 11) Remove transfer to transmission bolts (upper side), and then install engine rear mounting member with transmission and transfer.
- 12) Support transfer assembly (1) with transmission jack.
- 13) Remove transfer to transmission bolts (lower side) (2), and then lower transfer assembly.

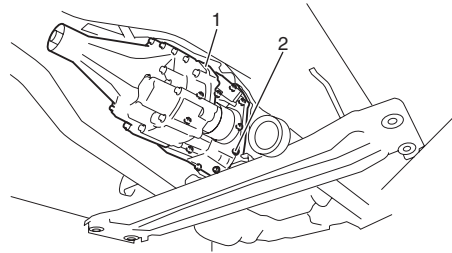

I5JB0A331008-01


Remounting

Reverse dismounting procedure for remounting noting the following.


 

 








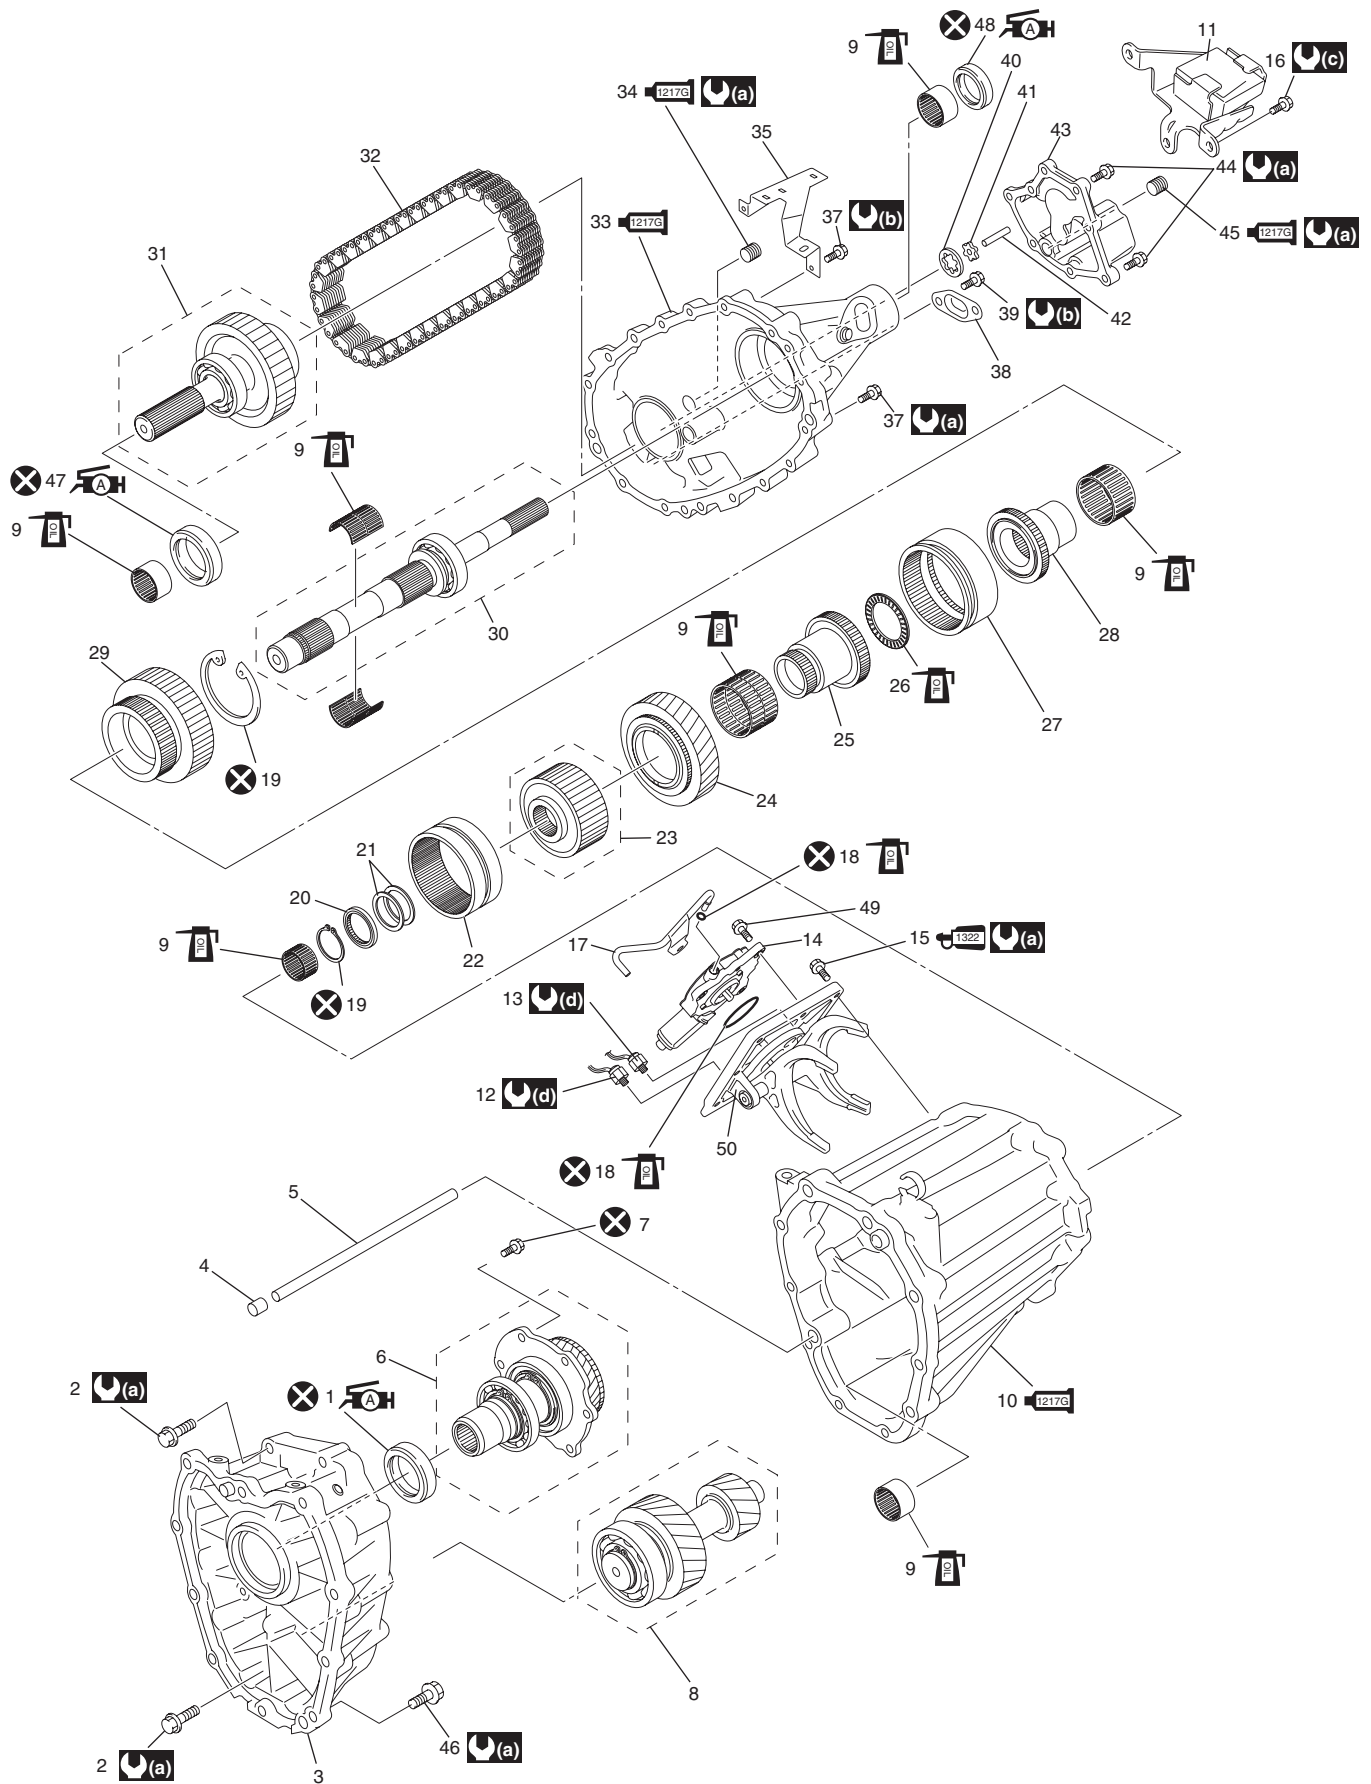

- Tighten each bolts and nuts referring to “Transfer Assembly Components”, “Propeller Shaft Construction in Section 3D”, “Exhaust System Components in Section 1K”, “Gear Shift Control Lever Rear Case Assembly Components in Section 5B” and “Transmission Shift Control Lever Removal and Installation in Section 5B”.
- Set each clamp for wiring securely.
- Fill transfer oil referring to “Transfer Oil Change”.
- Connect battery and check for function.

 Transfer Assembly Components

S6JB0B3306008

 

3C-58 Transfer:


 1. Front oil seal No.1 : Apply grease 99000-25010 to oil seal lip.	20. Washer	39. Oil strainer bolt
2. Front case bolt	21. Shim	40. Oil pump outer rotor
3. Front case	22. Reduction shift sleeve	41. Oil pump inner rotor
4. Knock pin	23. Center differential assembly	42. Oil pump drive pin
5. Oil pipe	24. Low gear	43. Oil strainer bolt
6. Input gear assembly	25. Front drive shaft	44. Oil pump cover bolt
7. Input gear plate bolt	26. Thrust needle bearing	 45. Oil drain plug : Apply sealant 99000-31260 to plug thread.
8. Counter gear assembly	27. Differential lock clutch sleeve	46. Transfer to transmission bolt
9. Needle bearing	28. Front drive sprocket bush	 47. Front oil seal No.2 : Apply grease 99000-25010 to oil seal lip.
 10. Center case : Apply sealant 99000-31260 to mating surface of front case, transfer control cover and center case.	29. Front drive sprocket	 48. Rear oil seal : Apply grease 99000-25010 to oil seal lip.
11. Damper	30. Rear output shaft assembly	49. Transfer actuator bolt
12. 4L/N switch	31. Front output shaft assembly	50. Control cover
13. Center differential lock switch	32. Drive chain	 (a) : 23 N·m (2.3 kgf-m, 17.0 lb-ft)
14. Transfer actuator assembly	 33. Rear case : Apply sealant 99000-31260 to mating surface of rear case, oil pump cover and center case.	 (b) : 10 N·m (1.0 kgf-m, 7.5 lb-ft)
 15. Control cover bolt : Apply thread lock 99000-32110 to bolt thread.	 34. Oil level / filler plug : Apply sealant 99000-31260 to plug thread.	 (c) : 50 N·m (5.0 kgf-m, 36.5 lb-ft)
16. Damper bolt	35. Harness bracket	 (d) : 20 N·m (2.0 kgf-m, 14.5 lb-ft)
17. Breather pipe	36. Harness bracket bolt	 : Do not reuse.
18. O-ring	37. Rear case bolt	 : Apply transfer oil.
19. Snap ring	38. Oil strainer	

Transfer Assembly Disassembly and Reassembly

S6JB0B3306009


Disassembly

- 1) Remove harness bracket (1).

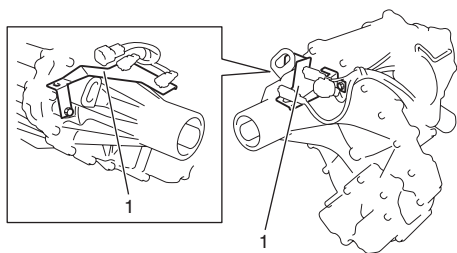


I5JB0A331010-01

- 2) Remove center differential lock switch (1) and 4L/N switch (2).
3) Remove transfer actuator assembly (3) and breather pipe (4).

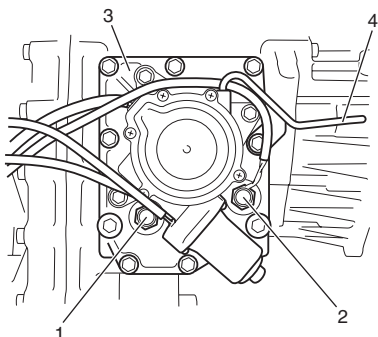


I5JB0A331011-01

- 4) Remove oil pump cover (1).

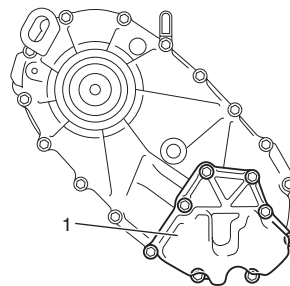


I5JB0A331012-01

- 5) Remove oil pump inner rotor (1), outer rotor (2), oil strainer (4) and drive pin (3).

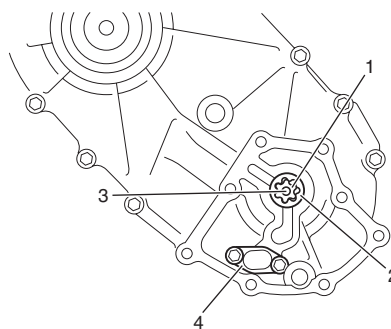

I5JB0A331013-01

- 6) Remove front case (1) using plastic hammer.

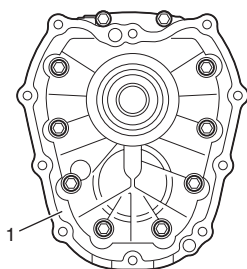


I5JB0A331014-01


- 7) Remove rear case bolts (1) and clamp (2) and then separate center case (3) using special tool.

Special tool

(A): 09912-34510

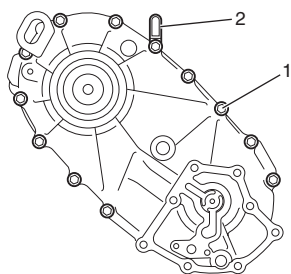


I5JB0A331015-01

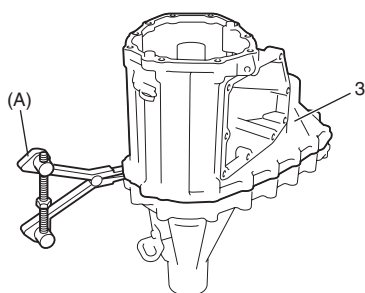

I5JB0A331106-01

- 8) Remove knock pin (1) and oil pipe (2) from center case (4) and remove front oil seal No.1 (3) using flat end rod or the like, if necessary.

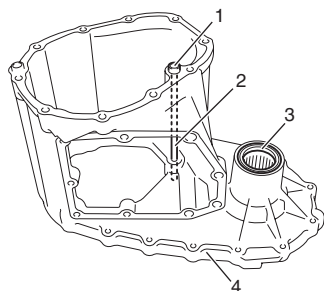


I5JB0A331017-01

- 9) Remove needle bearings (1) from center case (2) using special tools, if necessary.

Special tool


(A): 09913-76010

(B): 09925-98210

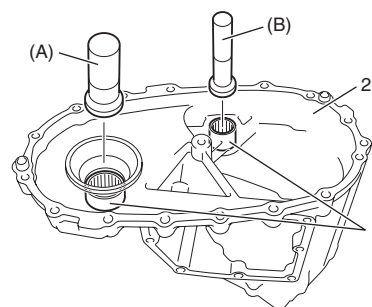


I5JB0A331018-01

- 10) Remove needle bearing (1), snap ring (2), washer (3) and shim(s) (4) from rear output shaft (5).

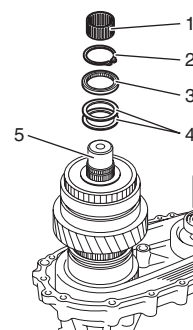

I5JB0A331019-01


- 11) Remove reduction shift sleeve (1), center differential and low gear from rear output shaft (2).

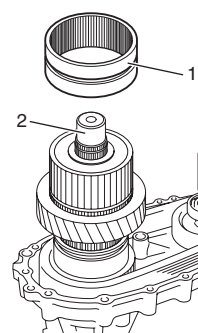

I5JB0A331020-02


3C-60 Transfer:

- 12) Remove needle bearings (1), front drive shaft (2) and thrust needle bearing (4) from rear output shaft (3).

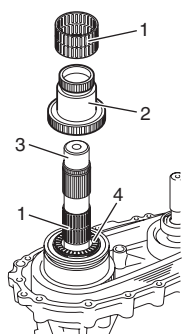


I5JB0A331021-01

- 13) Remove differential lock clutch sleeve (1) from rear output shaft (2).

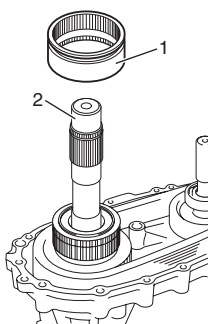


I5JB0A331022-01

- 14) Remove front drive sprocket bush (1) from rear output shaft (2).

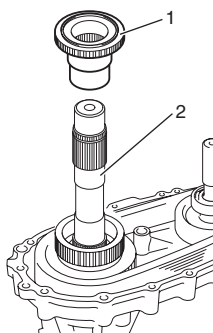


I5JB0A331023-01

- 15) Take out front drive sprocket (1), front output shaft assembly (2), drive chain (3) and needle bearing (4) from rear case (5) all at once.

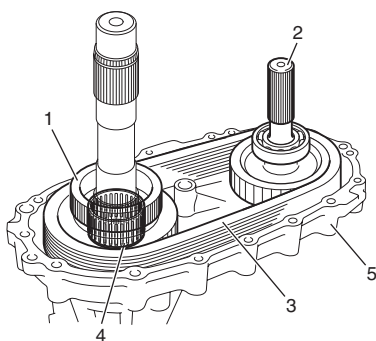


I5JB0A331024-01

- 16) Remove snap ring (1), and then remove rear output shaft assembly (2) from rear case (3).

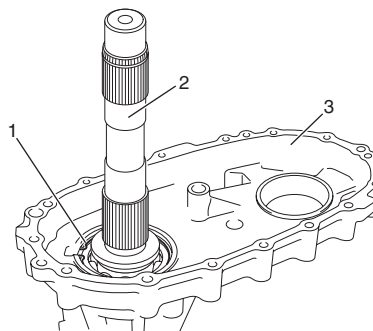

I5JB0A331025-01


- 17) Remove rear oil seal (1) from rear case (2) using flat end rod or the like, if necessary.

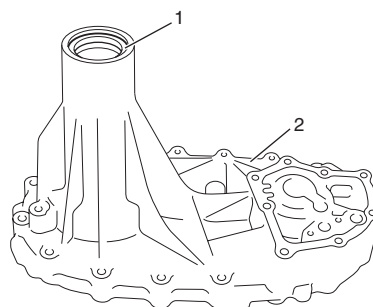

I5JB0A331026-01


- 18) Remove needle bearing (1) from rear case (2) using special tool, if necessary.

Special tool
(A): 09913-76010

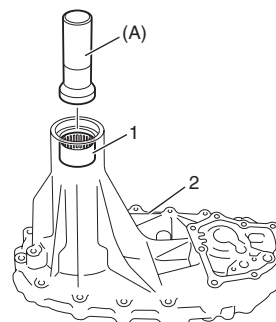


I5JB0A331027-01

- 19) Remove input gear plate bolts (1) from front case (2).

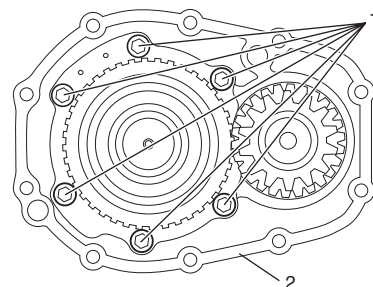


I5JB0A331028-02

- 20) Remove input gear assembly (1) and counter gear assembly (2) from front case (3) using plastic hammer.

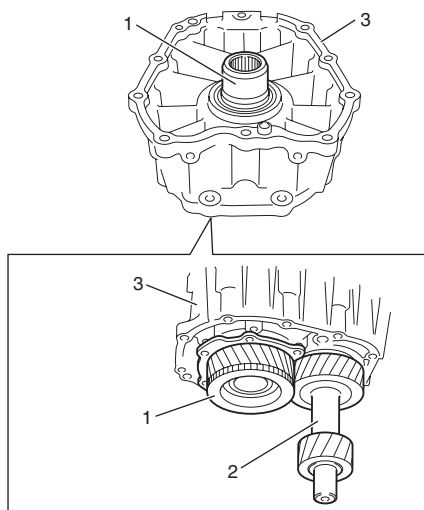

I5JB0A331029-01

- 21) Remove front oil seal No.2 (1) from front case (2) using flat end rod or the like, if necessary.

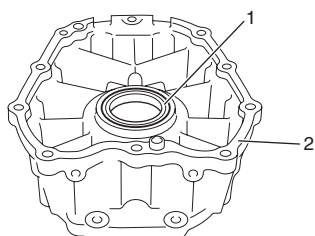

I5JB0A331030-01


Reassembly

- 1) Install new front oil seal No.2 to front case (1) using special tool, and then apply grease to oil seal lip.

: Grease 99000-25010 (SUZUKI Super Grease A)

Special tool

(A): 09913-85210


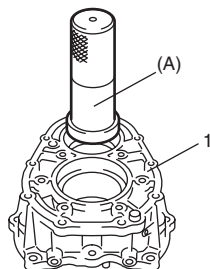


I5JB0A331033-01

- 2) Install counter gear assembly (1) to front case (2), and then install input gear assembly (3).

NOTE

Install input gear plate (4) so as not to hit counter gear assembly.

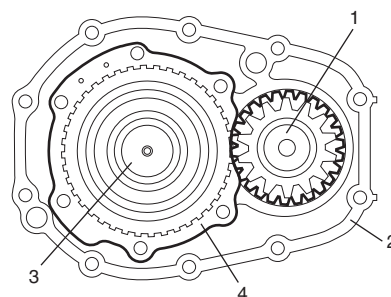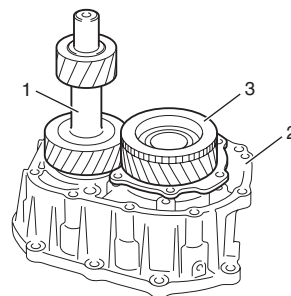


I5JB0A331034-02

- 3) Tighten new input gear plate bolts (1) to specified torque.

Tightening torque

Input gear plate bolt (a): 23 N·m (2.3 kgf-m, 17.0 lb-ft)

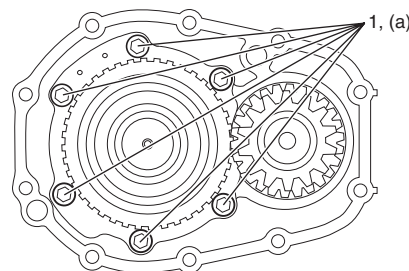


I5JB0A331035-03

3C-62 Transfer:

- 4) Install needle bearing (1) to rear case (2) using special tool as shown in figure.

Distance between case and needle bearing "a"
: 0 – 0.5 mm (0 – 0.008 in.)

Special tool
(A): 09913-76010

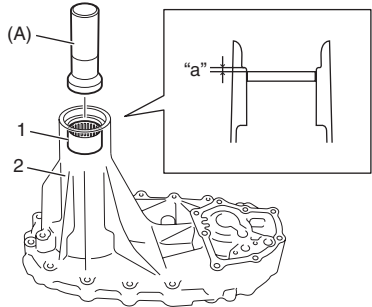


I5JB0A331036-02

- 5) Install new rear oil seal (1) to rear case (2) using special tool as shown in figure, and then apply grease to oil seal lip.

"A": Grease 99000-25010 (SUZUKI Super Grease A)


Distance between case and oil seal "a"
: 3.5 – 4.5 mm (0.138 – 0.177 in.)

Special tool
(A): 09913-70123

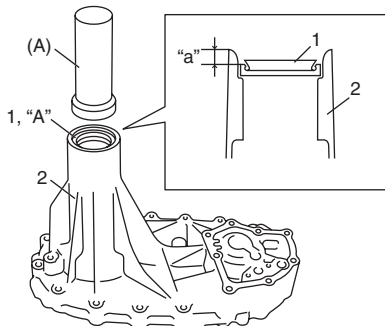


I5JB0A331037-04

- 6) Install rear output shaft assembly (1) to rear case (2), and then install snap ring (3).

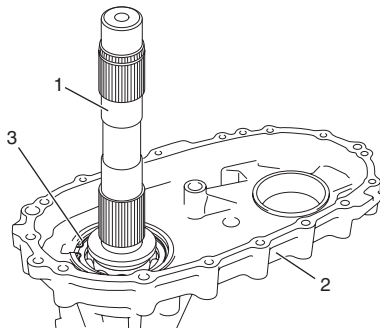


I5JB0A331038-01

- 7) Install front drive sprocket (1), front output shaft assembly (2), drive chain (3) and needle bearing (4) into rear case (5).

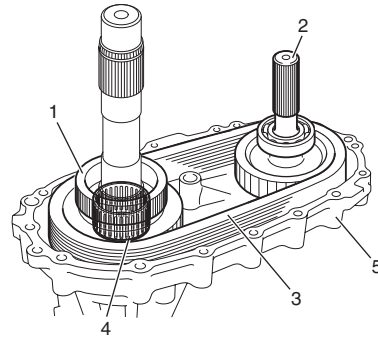


I5JB0A331024-01

- 8) Install front drive sprocket bush (1) into front drive sprocket (2).

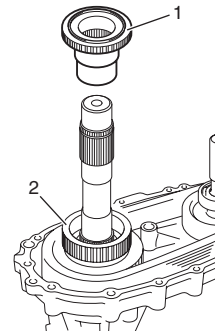


I5JB0A331039-01

- 9) Install differential lock clutch sleeve (1) to rear output shaft (2) as shown in figure.

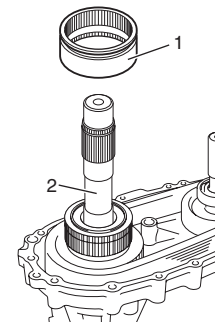


I5JB0A331040-01

- 10) Install thrust needle bearing (4), front drive shaft (1) and needle bearings (2) to rear output shaft (3).

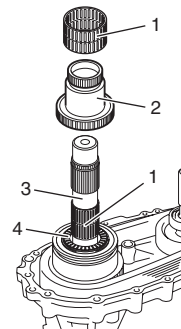

I5JB0A331041-02

- 11) Install low gear (3), center differential (4) and reduction shift sleeve (1) to rear output shaft (2).

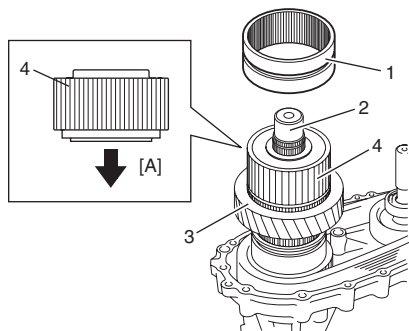

I5JB0A331042-02

[A]: Rear case side


- 12) Select shim (1) as follows.

- Install shim, washer (2) and used snap ring (3) into rear output shaft (4).
- Check clearance between shim and washer.
- If clearance is out of specified value, select shim from the following table so that clearance become specified value.

Clearance between shim and washer
: 0.1 – 0.3 mm (0.004 – 0.012 in.)


Available shim thickness

0.4 mm (0.016 in.)	1.6 mm (0.063 in.)
0.6 mm (0.024 in.)	1.8 mm (0.071 in.)
0.8 mm (0.031 in.)	2.0 mm (0.079 in.)
1.0 mm (0.039 in.)	2.2 mm (0.087 in.)
1.2 mm (0.047 in.)	2.4 mm (0.098 in.)
1.4 mm (0.055 in.)	

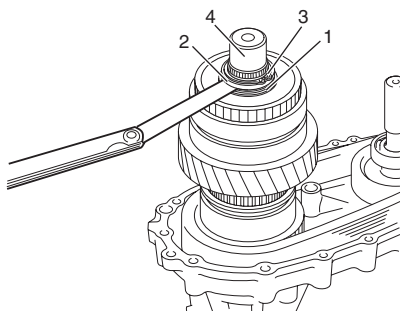

I5JB0A331043-01

- 13) Remove used snap ring, and then install new snap ring (2) and needle bearing (1) to rear output shaft (3).

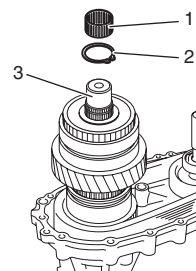

I5JB0A331044-02


- 14) Install needle bearings (1) to center case (2) using special tools as shown in figure.

Distance between case and needle bearing "a"
: 0 – 0.5 mm (0 – 0.008 in.)

Special tool

(A): 09913–76010

(B): 09925–98210

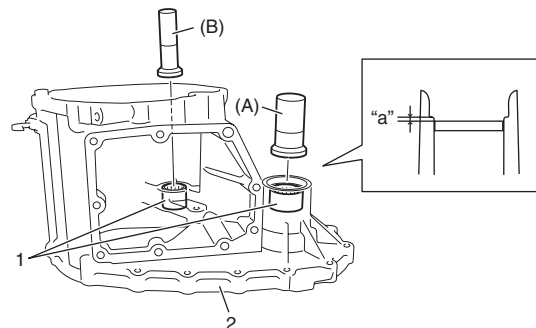

I5JB0A331045-02


3C-64 Transfer:

- 15) Install oil pipe (1) and knock pin (2) into center case (3).
- 16) Install new front oil seal No.1 (4) into center case using special tool as shown in figure, and then apply grease to oil seal lip.

Distance between case and oil seal "a"
: 3.5 – 4.5 mm (0.138 – 0.177 in.)

"A": Grease 99000–25010 (SUZUKI Super Grease A)

Special tool
(A): 09913–70123

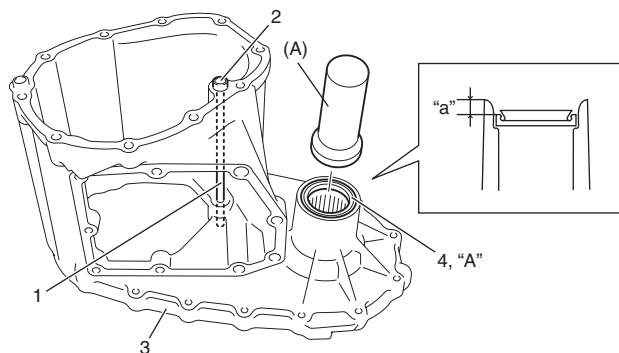


I5JB0A331046-03

- 17) Clean mating surface of both center case and rear case (1), apply sealant to rear case as shown in figure by such amount that its section is 1.2 mm (0.047 in.) in diameter, mate center case with rear case and then tighten bolts (2) to specified torque.

"A": Sealant 99000–31260 (SUZUKI Bond No.1217G)

Tightening torque
Rear case bolt (a): 23 N·m (2.3 kgf-m, 17.0 lb-ft)

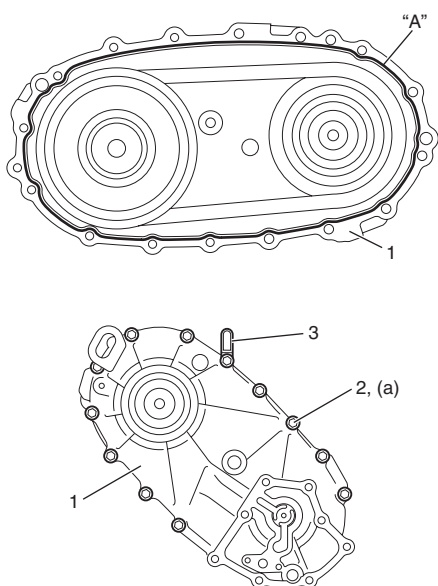


I5JB0A331047-02

- 18) Clean mating surface of both center case (1) and front case, apply sealant to center case as shown in figure by such amount that its section is 1.2 mm (0.047 in.) in diameter, mate front case (3) with center case and then tighten bolts (2) to specified torque.

"A": Sealant 99000–31260 (SUZUKI Bond No.1217G)

Tightening torque
Rear case bolt (a): 23 N·m (2.3 kgf-m, 17.0 lb-ft)

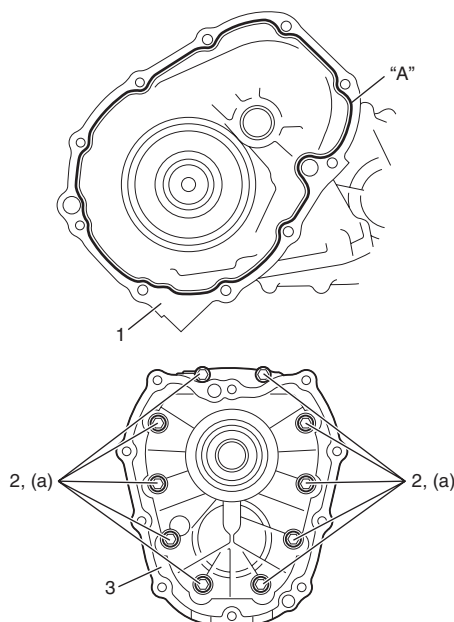


I5JB0A331048-03

- 19) Install oil strainer (1) to rear case (2).

Tightening torque
Strainer bolt (a): 10 N·m (1.0 kgf-m, 7.5 lb-ft)

- 20) Install oil pump inner rotor (3), outer rotor (4) and drive pin (5) to rear case (6).

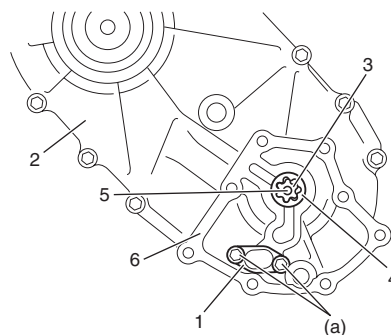


I5JB0A331050-01

- 21) Clean mating surface of oil pump cover (1) and rear case (2), apply sealant to rear case as shown in figure by such amount that its section is 1.2 mm (0.047 in.) in diameter, mate oil pump cover with rear case and then tighten bolts (3) to specified torque.

"A": Sealant 99000-31260 (SUZUKI Bond No.1217G)

Tightening torque

Oil pump cover bolt (a): 23 N·m (2.3 kgf-m, 17.0 lb-ft)

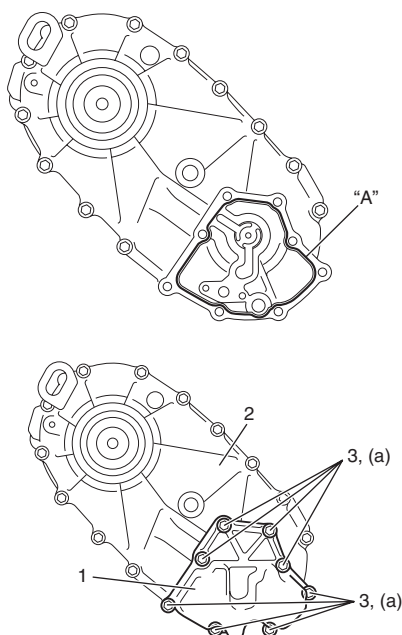

I5JB0A331049-02

- 22) Clean mating surface of control cover (1) and center case (2), apply sealant to center case as shown in figure by such amount that its section is 1.2 mm (0.047 in.) in diameter, confirm the each fork of control cover is in groove of the sleeve, mate control cover with center case and then tighten control cover bolts (3) to which thread lock cement has been applied and control cover dowel bolts (4) to specified torque.



"A": Sealant 99000-31260 (SUZUKI Bond No.1217G)

"B": Thread lock cement 99000-32110 (Thread Lock Cement Super 1322)

Tightening torque

Control cover bolt (a): 23 N·m (2.3 kgf-m, 17.0 lb-ft)

Control cover dowel bolt (b): 23 N·m (2.3 kgf-m, 17.0 lb-ft)

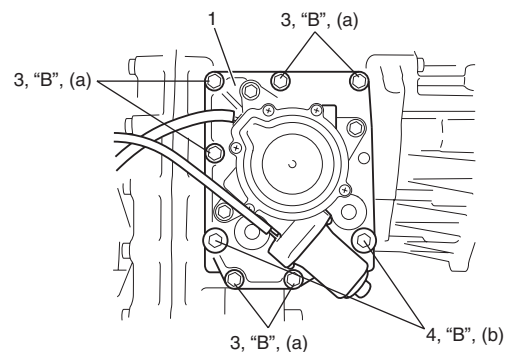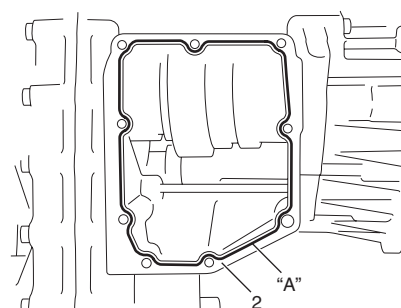


I5JB0A331051-04

- 23) Install center differential lock switch (1), 4L/N switch (2) and breather pipe (3).

Tightening torque

Center differential lock switch (a): 20 N·m (2.0 kgf-m, 14.5 lb-ft)

4L/N switch (b): 20 N·m (2.0 kgf-m, 14.5 lb-ft)

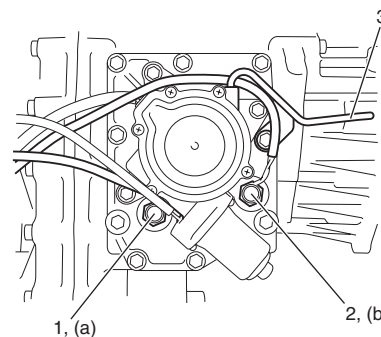


I5JB0A331052-02

- 24) Install harness bracket (1).

Tightening torque

Harness bracket bolt (a): 10 N·m (1.0 kgf-m, 7.5 lb-ft)

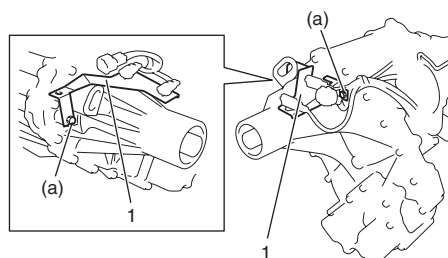


I5JB0A331053-01

Transfer Assembly Inspection

S6JB0B3306010


- Check needle bearing and bearing contacting surface for damage. Replace as required.
- Check gear tooth surface and shift mechanism in the same manner as with transmission. Correct or replace as necessary.
- Check drive chain and sprockets for abnormal wear or damage. Replace as required.
- Check transfer control cover assembly for abnormal wear or damage. Replace control cover assembly.
- Assemble input gear assembly (1), center differential assembly (2), low gear (3) and reduction shift sleeve (4), check whether reduction shift sleeve moves smoothly, and replace it if defect is found.

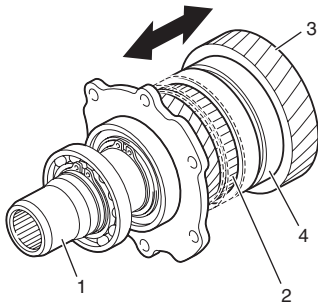

I5JB0A331054-01


- Measure the width of groove part of reduction shift sleeve (1). If measured value is out of specification, replace reduction sleeve.

Reduction shift sleeve groove width
: 6.9 – 7.1 mm (0.272 – 0.280 in.)

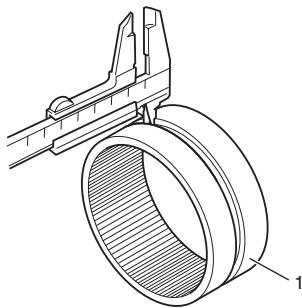

I5JB0A331055-01


- Assemble front drive shaft (1), front drive sprocket (2) and differential lock clutch sleeve (3), check whether differential lock clutch sleeve moves smoothly, and replace it if defect is found.

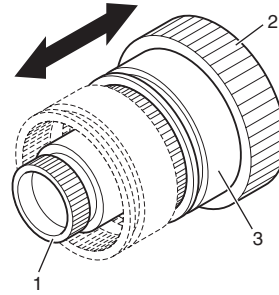

I5JB0A331056-01

- Measure the width of groove part of differential lock clutch sleeve (1). If measured value is out of specification, replace reduction sleeve.


Differential lock clutch sleeve groove width
: 6.9 – 7.1 mm (0.272 – 0.280 in.)

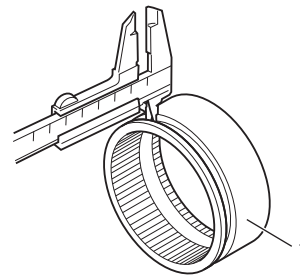

I5JB0A331057-01

- Measure thickness of shift fork. If thickness of shift fork is out of specification, replace control cover assembly.

Shift fork thickness
: 6.5 – 6.8 mm (0.256 – 0.268 in.)

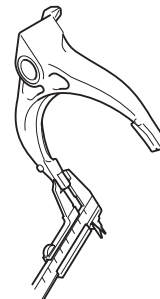


I5JB0A331082-01

- Check 4L/N switch and center differential lock switch for continuity between "a" and "b" terminals of switch. If check result is not as specified below, replace switch.

4L/N switch and center differential lock switch specification

Switch button (1) released: Continuity


Switch button (1) kept pushing: No continuity

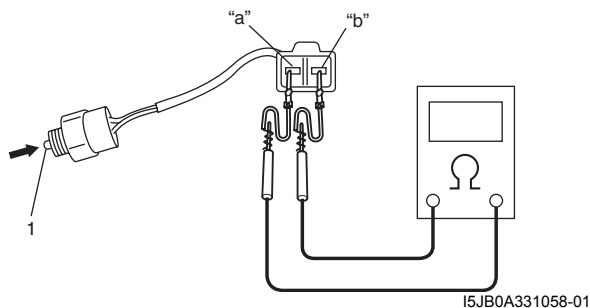

- Connect terminal "1" of transfer actuator (3) to the positive of battery (4) and terminal "2" to the negative, and confirm cam (2) rotates in the direction of A. At the same time, connect terminal "2" of transfer actuator (3) to the positive and terminal "1" to the negative, and confirm it rotates in the direction of B. If it doesn't operate correctly, replace transfer actuator assembly.

NOTE


- Do not rotate transfer actuator applying voltage, while transfer actuator removed from transfer control cover assembly (1).
- Do not apply voltage of the battery in the direction of rotation limit at rotation limit position of transfer actuator.

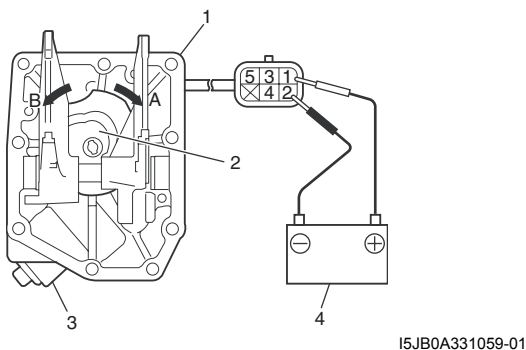

- Operate the motor, and measure the resistance between following terminals of transfer actuator when matching transfer actuator (1) to 4H-lock position and 4L-lock position. If measured value is out of specification, replace transfer actuator.

Transfer actuator resistance

Transfer position	Terminal	Resistance
4H-lock	4 - 5	385 - 400 Ω
4L-lock	3 - 4	

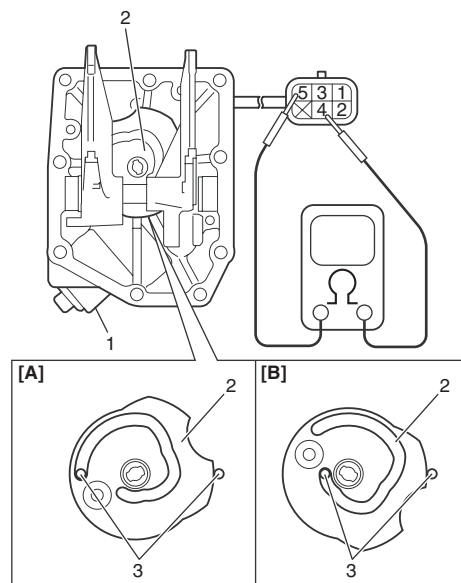

[A]: 4H-lock position


[B]: 4L-lock position

2. Cam

3. Shift fork pin

Input Gear Assembly, Counter Gear Assembly, Front Output Shaft Assembly and Rear Output Shaft Assembly Components

S6JB0B3306011

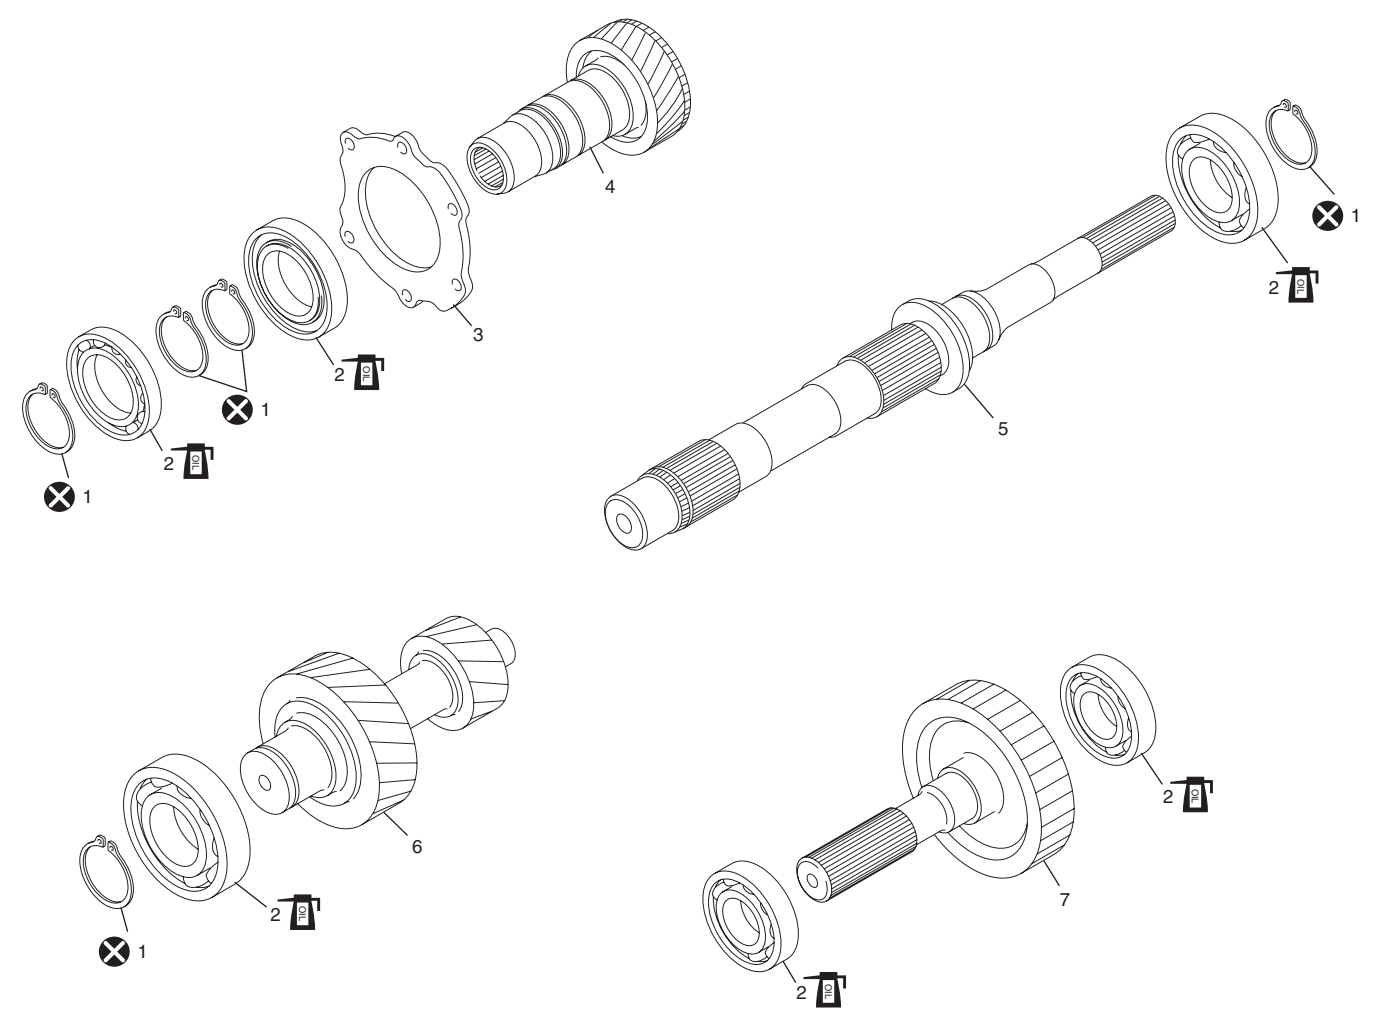

I5JB0A331061-02


1. Snap ring	6. Counter gear
2. Bearing	7. Front output shaft
3. Input gear plate	⊗ : Do not reuse.
4. Input gear	🛢️ : Apply transfer oil.
5. Rear output shaft	

Input Gear Assembly Disassembly and Reassembly

S6JB0B3306012


Disassembly

- 1) Remove snap ring (1) from input gear, and then remove bearing (2).

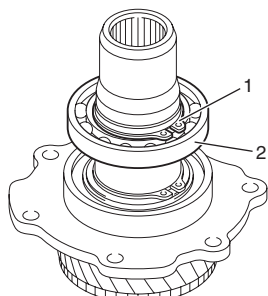


I5JB0A331062-01

- 2) Remove snap rings (1).

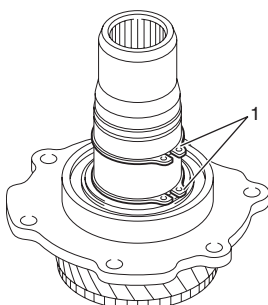

I5JB0A331063-01

- 3) Remove bearing (1) from input gear (2) using bearing puller (3) and press (4), and then remove input gear plate.

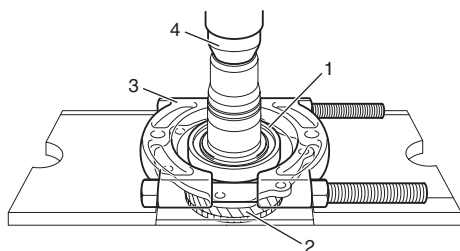

I5JB0A331064-01

Reassembly

- 1) Clean all components thoroughly, inspect them for any abnormality and replace with new ones as necessary.


- 2) Install input gear plate (1), and then press-fit bearing (2) using special tool, bearing puller (3) and press (4).

NOTE

Assemble bearing so that seal side (5) may come to the front side.

Special tool


(A): 09913-85210

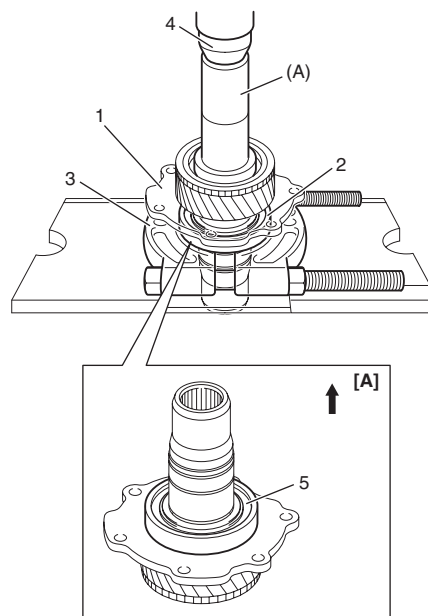

I5JB0A331065-02


[A]: Front side

- 3) Install snap rings (1) to input gear (2).

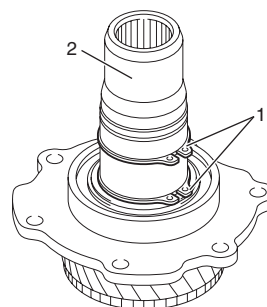

I5JB0A331066-01

- 4) Install bearing (1) and snap ring (2).

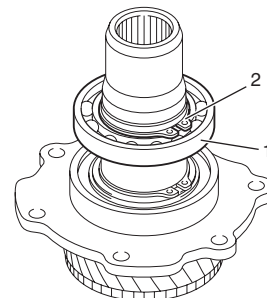


I5JB0A331067-01

Counter Gear Assembly Disassembly and Reassembly

S6JB0B3306013

Disassembly

- 1) Remove snap ring (1) from counter gear (2).

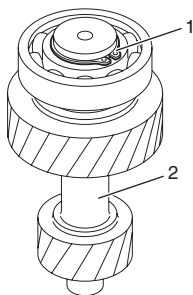


I5JB0A331068-01

- 2) Remove bearing (1) from counter gear (2) using special tool, bearing puller (3) and press (4).

Special tool

(A): 09913-80113

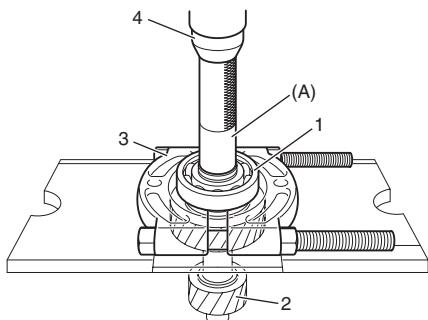


I5JB0A331069-02

Reassembly

- 1) Clean all components thoroughly, inspect them for any abnormality and replace with new ones as necessary.
- 2) Press-fit bearing (1) to counter gear using special tool and press.


Special tool

(A): 09913-70123

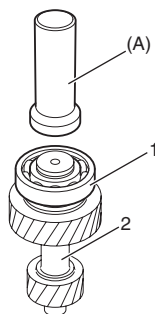

I5JB0A331070-01

- 3) Install snap ring (1) to counter gear (2).

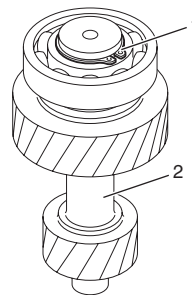

I5JB0A331068-01

Front Output Shaft Assembly Disassembly and Reassembly


S6JB0B3306014

Disassembly

- 1) Remove bearing (1) from front output shaft (2) using special tool, bearing puller (3) and press (4).


Special tool

(A): 09925-98221

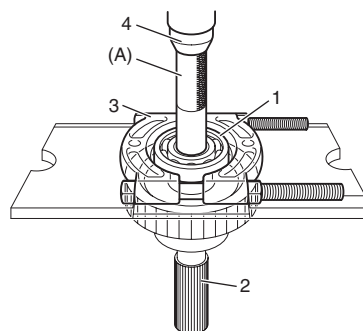

I5JB0A331071-01


- 2) Remove bearing (1) from front output shaft (2) using bearing puller (3) and press (4).

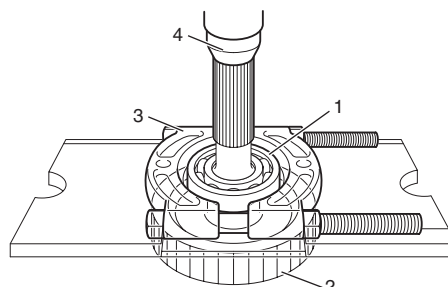

I5JB0A331072-01


Reassembly

- 1) Clean all components thoroughly, inspect them for any abnormality and replace with new ones as necessary.
- 2) Press-fit bearing (1) to front output shaft using special tool and press.

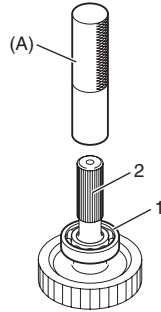Special tool**(A): 09913-84510**

I5JB0A331073-01

- 3) Press-fit bearing (1) to front output shaft using special tool and press.

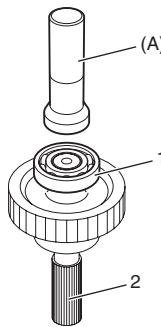Special tool**(A): 09913-76010**


I5JB0A331074-01

Rear Output Shaft Assembly Disassembly and Reassembly

S6JB0B3306015


Disassembly

- 1) Remove snap ring (1) from rear output shaft (2).

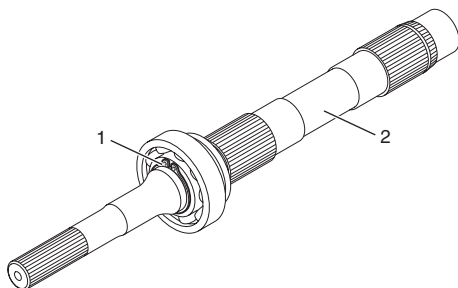

I5JB0A331075-01


- 2) Remove bearing (1) from rear output shaft (2) using bearing puller (3) and press (4).

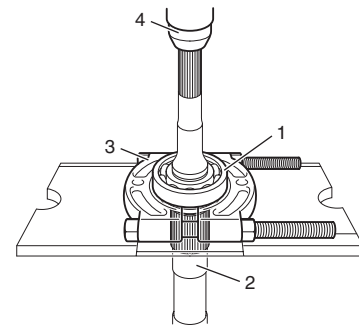

I5JB0A331076-01


Reassembly

- 1) Clean all components thoroughly, inspect them for any abnormality and replace with new ones as necessary.
- 2) To ensure lubrication of rear output shaft (1), air blow oil holes (2) and make sure that they are free from any obstruction.

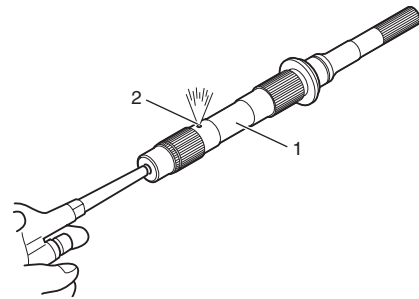


I5JB0A331077-01

- 3) Press-fit bearing (1) to rear output shaft using special tools and press.

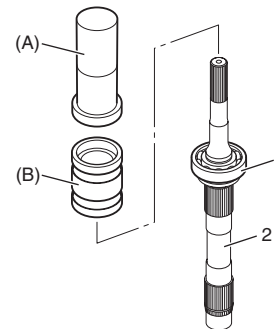Special tool**(A): 09913-85210****(B): 09940-54910**

I5JB0A331078-01

- 4) Install snap ring (1) to rear output shaft (2).

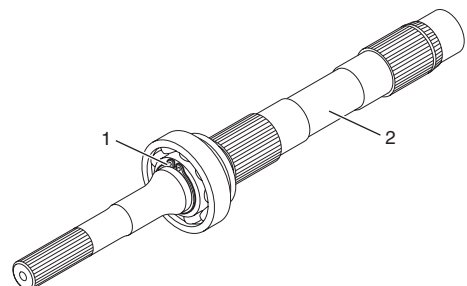

I5JB0A331075-01

Specifications

Tightening Torque Specifications

S6JB0B3307001

Fastening part	Tightening torque			Note
	N·m	kgf-m	lb-ft	
Transfer oil level / filler plug	23	2.3	17.0	🔩 / 🔩
Transfer oil drain plug	23	2.3	17.0	🔩
Input gear plate bolt	23	2.3	17.0	🔩
Rear case bolt	23	2.3	17.0	🔩 / 🔩
Strainer bolt	10	1.0	7.5	🔩
Oil pump cover bolt	23	2.3	17.0	🔩
Control cover bolt	23	2.3	17.0	🔩
Control cover dowel bolt	23	2.3	17.0	🔩
Center differential lock switch	20	2.0	14.5	🔩
4L/N switch	20	2.0	14.5	🔩
Harness bracket bolt	10	1.0	7.5	🔩

NOTE

The specified tightening torque is also described in the following.
 “Transfer Assembly Components”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Special Tools and Equipment

Recommended Service Material

S6JB0B3308001

Material	SUZUKI recommended product or Specification		Note
Grease	SUZUKI Super Grease A	P/No.: 99000-25010	🔩 / 🔩 / 🔩 / 🔩
Sealant	SUZUKI Bond No.1217G	P/No.: 99000-31260	🔩 / 🔩 / 🔩 / 🔩 / 🔩 / 🔩 / 🔩 / 🔩
Thread lock cement	Thread Lock Cement Super 1322	P/No.: 99000-32110	🔩





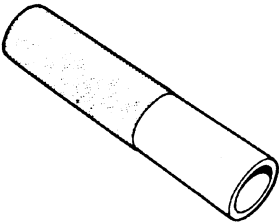
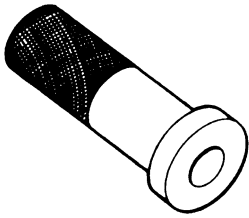
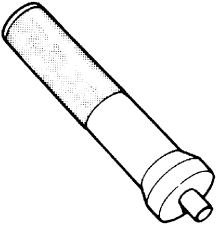
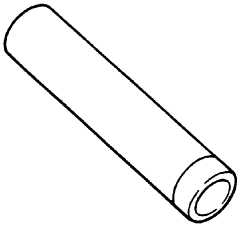
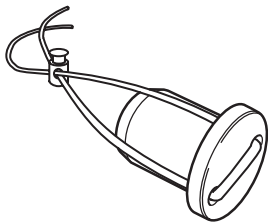
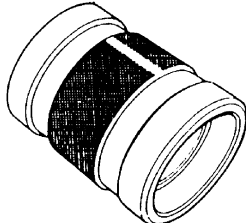
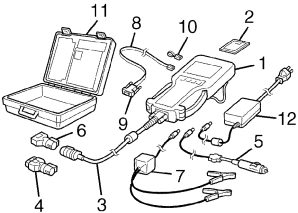
NOTE

Required service material is also described in the following.

“Transfer Assembly Components”

“Input Gear Assembly, Counter Gear Assembly, Front Output Shaft Assembly and Rear Output Shaft Assembly Components”

Special Tool

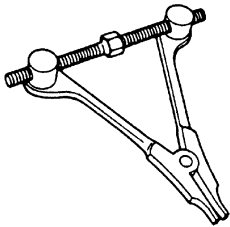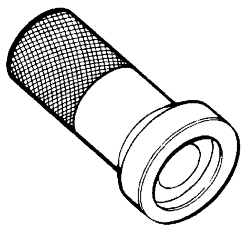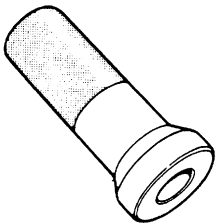09912-34510 Case separator 	09913-70123 Bearing installing tool 
09913-76010 Bearing installer 	09913-80113 Bearing installer 
09913-84510 Bearing installer 	09913-85210 Bearing installer 
09925-98210 Input shaft bearing installer 	09925-98221 Bearing installer 
09928-36510 Transfer cap 	09940-54910 Front fork oil seal install driver 
SUZUKI scan tool — This kit includes following items. 1. Tech 2, 2. PCMCIA card, 3. DLC cable, 4. SAE 16/19 adapter, 5. Cigarette cable, 6. DLC loop back adapter, 7. Battery power cable, 8. RS232 cable, 9. RS232 adapter, 10. RS232 loop back connector, 11. Storage case, 12. 	

Propeller Shaft

Precautions

Propeller Shaft Caution

S6JB0B3400001

⚠ CAUTION


- All propeller shaft fasteners are an important attaching part in that it could affect the performance of vital parts and systems, and/or could result in major repair expense. They must be replaced with one of the same part number or with an equivalent part if replacement becomes necessary. Do not use a replacement part of lesser quality or substitute design. Torque values must be used as specified during reassembly to assure proper retention of this part.
- Never attempt to heat, quench or straighten any propeller shaft part. Replace it with a new part, or damage to the part may result.

General Description

Propeller Shaft Construction

S6JB0B3401001

Most universal joints and ball joints require no maintenance. They are lubricated for life and can not be lubricated on the vehicle. If a universal joint becomes noisy or worn, it must be replaced.
The propeller shaft is a balanced unit. Handle it carefully so that balance can be maintained.

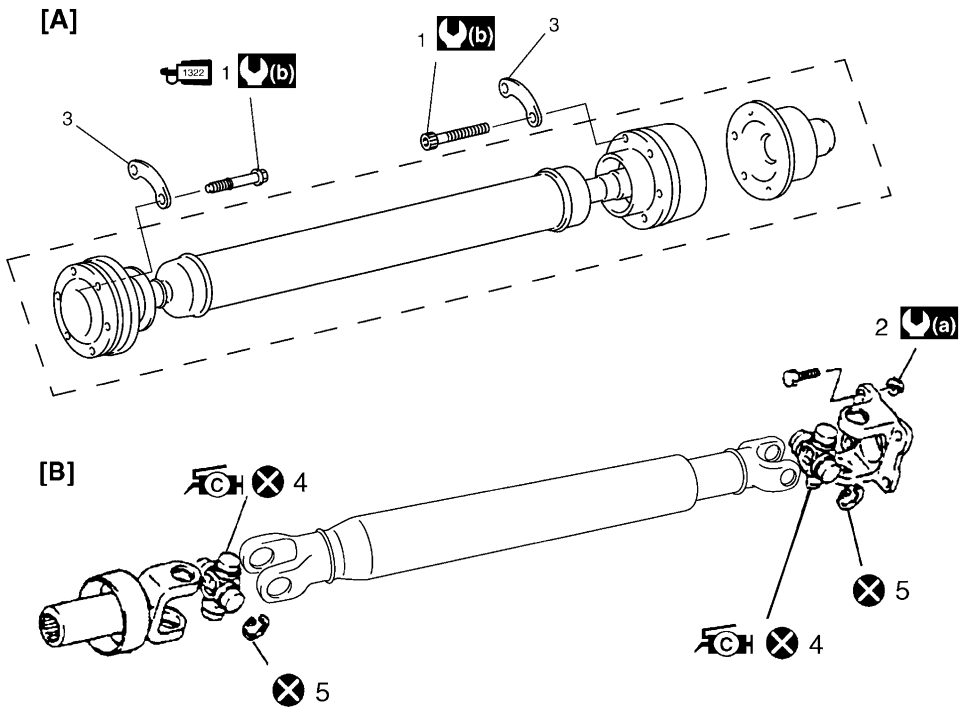

I5JB0A340001-02

[A]: Front propeller shaft	4. Spider joint assembly : Apply grease (99000-25030) to spider bearing race.
[B]: Rear propeller shaft	5. Circlip
1322 1. Front propeller shaft flange bolt : Apply thread lock 99000-32110 to bolt thread.	(a) : 85 N·m (8.5 kgf-m, 61.5 lb-ft)
2. Rear propeller shaft flange nut	(b) : 30 N·m (3.0 kgf-m, 22.0 lb-ft)
3. Support washer	: Do not reuse.

Diagnostic Information and Procedures

Propeller Shaft Symptom Diagnosis

S6JB0B3404001


Condition	Possible cause	Correction / Reference Item
Abnormal noise	Loose propeller shaft flange bolt and nut	<i>Tighten propeller shaft flange bolt and nut.</i>
	Spider bearing worn out or stuck	<i>Replace.</i>
	Wear spider	<i>Replace propeller shaft.</i>
Vibration	Deformed propeller shaft	<i>Replace.</i>

Repair Instructions

Propeller Shaft Joint Check

S6JB0B3406001

If universal joints and ball joints are suspected of producing chattering or rattling noise, inspect them for wear. For universal joint, check to see if cross spider rattles in yokes or if splines are worn down and replace defective propeller shaft assembly with new one. Noise coming from universal joint and ball joint can be easily distinguished from other noises because rhythm of chattering or rattling is in step with cruising speed. Noise is pronounced particularly on standing start or in coasting condition (when braking effect of engine is showing in the drive line).

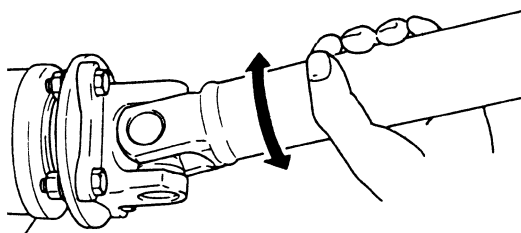



I5JB0A340003-01

Propeller Shaft Removal and Installation

S6JB0B3406002

Removal

- 1) Hoist vehicle.
- 2) Give match marks (1) on joint flange and propeller shaft as shown in the figure.

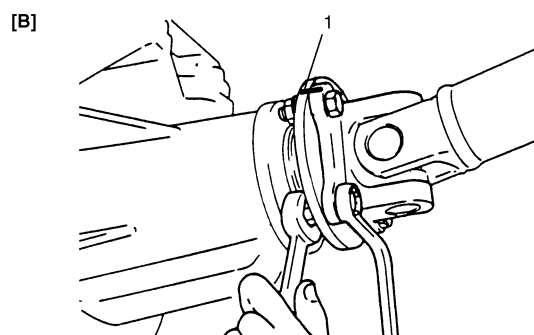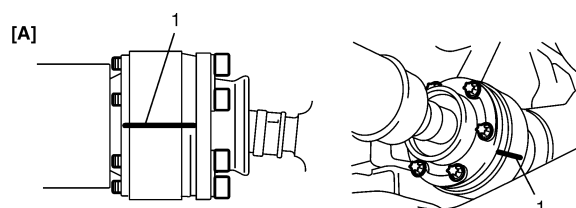

I5JB0A340002-02

[A]: Front propeller shaft

[B]: Rear propeller shaft

- 3) Remove rear propeller shaft.
- 4) Drain transfer oil when removed front propeller shaft from transfer.

3D-3 Propeller Shaft:


Installation

Reverse removal procedure to install propeller shaft noting the following points.

- Clean and inspect sliding portion of propeller shaft end (where oil seal contacts) before installation and if even small dent or scratch exists, correct end clean it again.

Then apply grease inside splines of propeller shaft.

“B”: Grease 99000–25010 (SUZUKI Super Grease A)

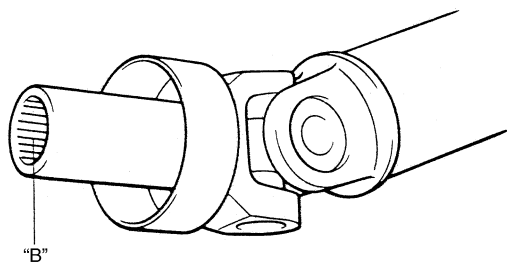

IYSQ01521009-01


- Install propeller shaft aligning match marks. Otherwise, vibration may occur during driving.
- Use the following specification to torque universal joint flange nuts and bolts. For front propeller shaft flange bolt (front differential side), apply thread lock cement to thread part of bolts if reused.
- Fill transfer oil, if removed front propeller shaft referring to “Transfer Oil Change in Section 3C”.

“A”: Thread lock cement 99000–32110 (Thread Lock Cement Super 1322)

Tightening torque

Front propeller shaft flange bolt (a): 30 N·m (3.0 kgf-m, 22.0 lb-ft)

Rear propeller shaft flange nut (b): 85 N·m (8.5 kgf-m, 61.5 lb-ft)

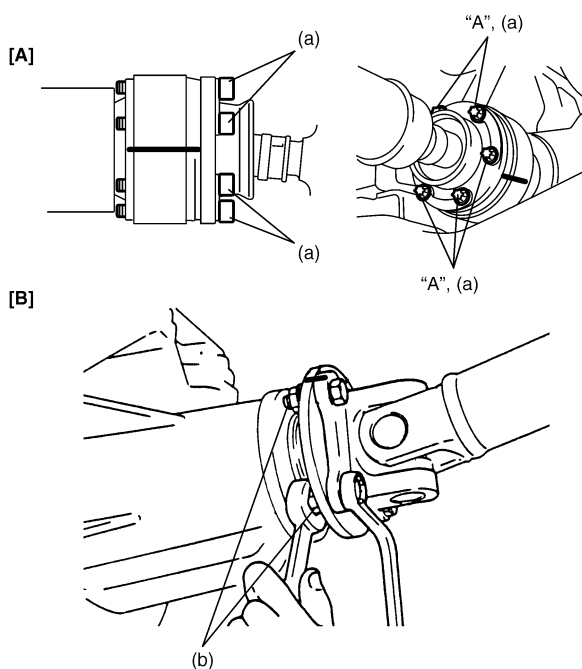

I5JB0A340004-01

[A]:	Front propeller shaft
[B]:	Rear propeller shaft

Propeller Shaft Disassembly and Assembly


S6JB0B3406003

CAUTION

Never disassemble each joint.
Performing this prohibited service will affect its original performance.


Disassembly

- 1) Give match marks (1) on flange yoke and shaft as shown in the figure.

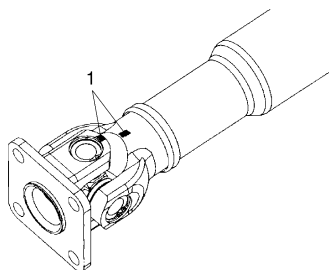

I5JB0A340007-01

- 2) Using snap ring plier (1), remove 2 circlips.

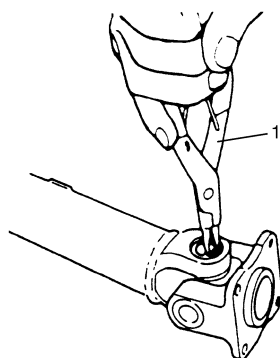

I5JB0A340005-02

- 3) Using special tool, push spider bearing race out 3 – 4 mm (0.12 – 0.16 in.) from shaft yoke race.

NOTE


Before pushing it out, apply penetrate lubricant between bearing race (1) and yoke race (2).

Special tool

(A): 09926-48010


Spider bearing race installing position (length "a")

"a": 3 – 4 mm (0.12 – 0.16 in.)

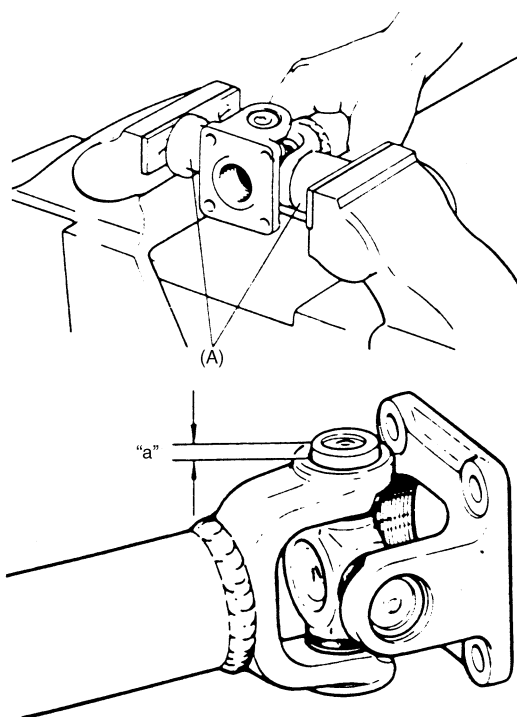

I5JB0A340006-01

- 4) Tapping yoke with a hammer, completely remove bearing race.

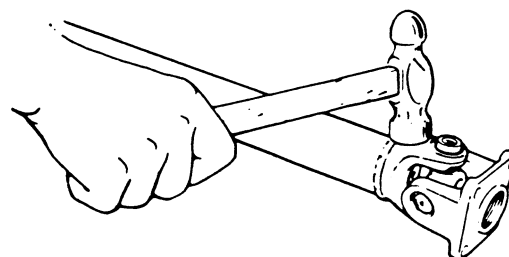


IYSQ01340007-01

3D-5 Propeller Shaft:

- 5) Take out bearing race on the other side in the same way as in Step 3) and 4).
- 6) Push out bearing race on flange yoke side as described in Step 2) and 3), and then, holding bearing race in a vise (1), tap flange yoke and take out race. (Refer to the figure.)
Remove bearing race on the opposite side in the same way.

NOTE

- Take care not to lose rollers in spider bearing race when removing it.
- Fit removed bearings temporarily in spider so that they can be reinstalled in their original positions.

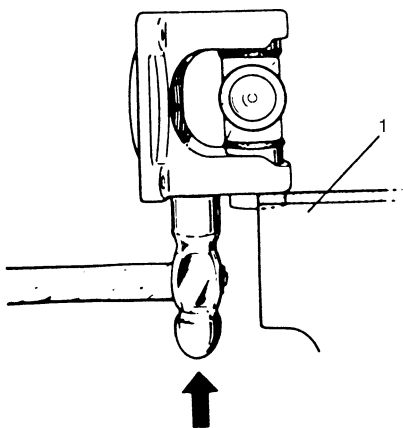

IYSQ01340008-01


Assembly

NOTE

Make sure that rollers inside spider bearing race are all in place.

⚠ CAUTION


In assembly, be sure to use new circlips, spider (1) and bearings (2). Reuse of circlips, spider (1) and bearings (2) once assembled is prohibited.

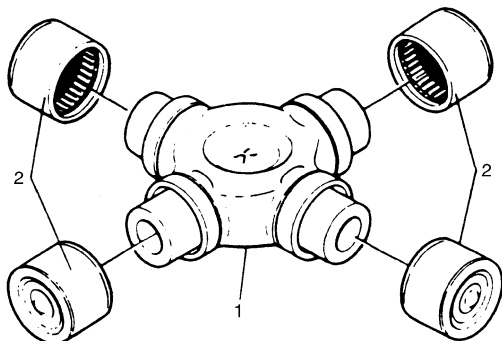

IYSQ01340010-01


- 1) Make sure to apply grease to spider bearing race.

“A”: Grease 99000-25030 (SUZUKI Super Grease C)

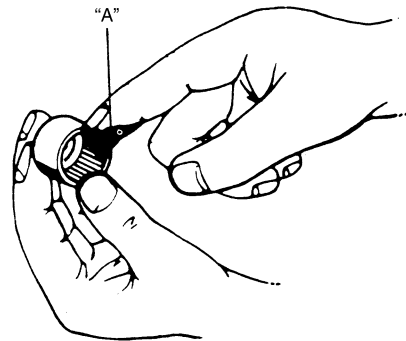

IYSQ01340009-01

- 2) Insert bearing race into yoke, using press, until it is flush with yoke face. When doing this, insert spider into bearing race to prevent rollers in bearing race from coming out.
- 3) Aligning match marks (1) and insert the other bearing race on the opposite side into yoke, using press until it is flush with yoke face.

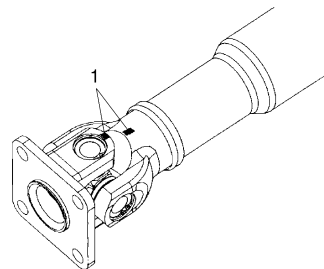

I5JB0A340007-01

- 4) Insert bearing races on the flange yoke side in the same way as described in Step 1) and 2).
- 5) Securely fit 4 circlips to shaft and flange yoke.

NOTE

- Make sure that each circlip is fitted in groove securely.

- 6) After assembly, check to ensure that both shaft yoke and flange yoke move smoothly.

Propeller Shaft Inspection


S6JB0B3406004

Inspect propeller shaft, universal joint and ball joint for damage, and propeller shaft for runout.

If damage is found or shaft runout exceeds its limit, replace.

Propeller shaft runout

Limit: 0.8 mm (0.031 in.)

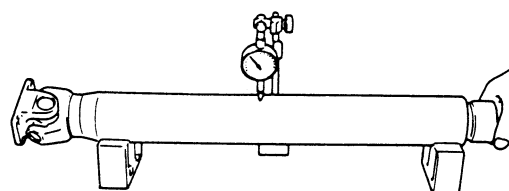

IYSQ01340013-01

Specifications**Tightening Torque Specifications**

S6JB0B3407001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lb·ft	
Front propeller shaft flange bolt	30	3.0	22.0	⌚
Rear propeller shaft flange nut	85	8.5	61.5	⌚

NOTE

The specified tightening torque is also described in the following.
“Propeller Shaft Construction”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Special Tools and Equipment**Recommended Service Material**

S6JB0B3408001

Material	SUZUKI recommended product or Specification		Note
Grease	SUZUKI Super Grease A	P/No.: 99000–25010	⌚
	SUZUKI Super Grease C	P/No.: 99000–25030	⌚
Thread lock cement	Thread Lock Cement Super 1322	P/No.: 99000–32110	⌚

NOTE

Required service material is also described in the following.
“Propeller Shaft Construction”

Special Tool

S6JB0B3408002

09926–48010 Universal joint assembling tool ⌚		
---	--	--

Section 4

Brakes

CONTENTS

Precautions	4-1	General Description	4B-1
Precautions.....	4-1	Front Disc Brake Caliper Assembly	
Precautions for Brakes.....	4-1	Construction	4B-1
Brake Control System and Diagnosis ...	4A-1	Repair Instructions	4B-2
General Description	4A-1	Front Disc Brake Components	4B-2
Brakes Construction.....	4A-1	Front Disc Brake Pad On-Vehicle Check	4B-3
Front Brake Hose / Pipe Construction.....	4A-2	Front Disc Brake Pad Removal and	
Rear Brake Hose / Pipe Construction	4A-3	Installation	4B-3
Master Cylinder Assembly Construction	4A-4	Front Brake Disc and Pad Inspection.....	4B-4
Booster Assembly Construction.....	4A-4	Front Disc Brake Caliper Removal and	
Diagnostic Information and Procedures	4A-5	Installation	4B-5
Brake Diagnosis Note	4A-5	Front Disc Brake Caliper Disassembly and	
Brakes Symptom Diagnosis	4A-5	Assembly.....	4B-6
Repair Instructions	4A-7	Front Disc Brake Caliper Inspection.....	4B-7
Excessive Pedal Travel Check.....	4A-7	Front Brake Disc Removal and Installation	4B-8
Brake Pedal Play Check	4A-8	Front Brake Disc Inspection	4B-8
Brake Fluid Level Check	4A-8	Specifications.....	4B-9
Air Bleeding of Brake System	4A-8	Tightening Torque Specifications	4B-9
Brake Pedal Free Height Adjustment.....	4A-9	Special Tools and Equipment	4B-9
Brake Light Switch Adjustment	4A-10	Recommended Service Material	4B-9
Brake Flexible Hose and Pipe Check.....	4A-10	Rear Brakes.....	4C-1
Master Cylinder Check.....	4A-10	General Description	4C-1
Flushing Brake Hydraulic System	4A-10	Rear Drum Brake Assembly Construction	4C-1
Booster Operation Check.....	4A-11	Repair Instructions	4C-1
Front Brake Hose / Pipe Removal and		Rear Drum Brake Assembly Components	4C-1
Installation	4A-12	Rear Brake Drum Removal and Installation.....	4C-2
Rear Brake Hose / Pipe Removal and		Rear Brake Drum and Shoe Inspection	4C-2
Installation	4A-12	Rear Brake Shoe On-Vehicle Check.....	4C-3
Master Cylinder Components.....	4A-13	Rear Brake Shoe Removal and Installation	4C-3
Master Cylinder Reservoir Removal and		Rear Brake Shoe Inspection	4C-5
Installation	4A-14	Wheel Cylinder Removal and Installation	4C-5
Master Cylinder Assembly Removal and		Wheel Cylinder Inspection	4C-6
Installation	4A-15	Rear Brake Back Plate Removal and	
Master Cylinder Assembly Inspection.....	4A-16	Installation	4C-6
Brake Booster Components	4A-17	Specifications.....	4C-6
Brake Booster Removal and Installation.....	4A-18	Tightening Torque Specifications	4C-6
Booster Push Rod Clevis Adjustment	4A-18	Special Tools and Equipment	4C-6
Specifications.....	4A-19	Recommended Service Material	4C-6
Tightening Torque Specifications.....	4A-19	Parking Brake	4D-1
Special Tools and Equipment	4A-19	Component Location	4D-1
Recommended Service Material	4A-19	Parking Brake Cable Location.....	4D-1
Special Tool	4A-19	Repair Instructions	4D-2
Front Brakes	4B-1		

Parking Brake Check and Adjustment	4D-2	DTC U1073: Control Module Communication Bus Off	4E-30
Parking Brake Lever Removal and Installation	4D-3	DTC U1100: Lost Communication with ECM (Reception Error).....	4E-32
Parking Brake Cable Removal and Installation	4D-4	Repair Instructions	4E-33
Specifications	4D-4	Hydraulic Unit Operation Check	4E-33
Tightening Torque Specifications	4D-4	ABS (ESP®) hydraulic unit / control module Assembly Components	4E-34
ABS	4E-1	ABS (ESP®) hydraulic unit / control module Assembly On-Vehicle Inspection	4E-35
Precautions	4E-1	ABS (ESP®) hydraulic unit / control module Assembly Removal and Installation	4E-35
Precautions in Diagnosing Troubles	4E-1	Front Wheel Speed Sensor On-Vehicle Inspection	4E-38
Precautions in On-Vehicle Service.....	4E-1	Front Wheel Speed Sensor Removal and Installation	4E-39
Precautions in Hydraulic Unit Operation Check	4E-1	Front Wheel Speed Sensor Inspection	4E-40
General Description	4E-2	Rear Wheel Speed Sensor On-Vehicle Inspection	4E-40
ABS Description	4E-2	Rear Wheel Speed Sensor Removal and Installation	4E-40
ABS (ESP®) hydraulic unit / control module Assembly Description	4E-2	Rear Wheel Speed Sensor Inspection	4E-41
CAN Communication System Description.....	4E-3	Front Wheel Encoder On-Vehicle Inspection	4E-41
Schematic and Routing Diagram	4E-4	Front Wheel Encoder Removal and Installation	4E-41
ABS Schematic	4E-4	Rear Wheel Encoder On-Vehicle Inspection.....	4E-41
ABS Wiring Circuit Diagram	4E-5	Rear Wheel Encoder Removal and Installation	4E-41
Component Location	4E-7	Specifications	4E-42
ABS Components Location	4E-7	Tightening Torque Specifications	4E-42
Diagnostic Information and Procedures	4E-8	Special Tools and Equipment	4E-42
ABS Check	4E-8	Special Tool	4E-42
ABS Warning Light Check.....	4E-10	Electronic Stability Program	4F-1
EBD Warning Light (Brake Warning Light) Check	4E-10	Precautions	4F-1
DTC Check.....	4E-11	Precautions in Diagnosing Troubles	4F-1
DTC Table.....	4E-11	Precautions in On-Vehicle Service.....	4F-1
DTC Clearance	4E-12	Precautions in Hydraulic Unit Operation Check	4F-1
Scan Tool Data	4E-12	Precautions in Sensor Calibration	4F-2
ABS Warning Light Does Not Come ON at Ignition Switch ON	4E-13	Precautions in Speedometer Test or Other Tests	4F-2
ABS Warning Light Comes ON Steady.....	4E-15	General Description	4F-2
EBD Warning Light (Brake Warning Light) Comes ON Steady	4E-16	Electronic Stability Program Description	4F-2
Serial Data Link Circuit Check	4E-17	ESP® Hydraulic Unit / Control Module Assembly Description.....	4F-3
DTC C1015: G Sensor Circuit Failure (Non- ESP® Model)	4E-19	Warning Light, Indicator Light Description	4F-3
DTC C1021, C1022 / C1025, C1026 / C1031, C1032 / C1035, C1036: Right-Front / Left- Front / Right-Rear / Left-Rear Wheel Speed Sensor Circuit or Encoder Failure	4E-20	CAN Communication System Description.....	4F-4
DTC C1041 / C1042 / C1043 / C1044 / C1045 / C1046 / C1051 / C1052 / C1053 / C1054 / C1055 / C1056: Inlet Solenoid Circuit Failure, Outlet Solenoid Circuit Failure, Master Cylinder Cut Solenoid Circuit Failure, Low Pressure Solenoid Circuit Failure	4E-23	CAN Communication System For Electronic Stability Program Description	4F-5
DTC C1057: ABS (ESP®) Control Module Power Supply Circuit Failure.....	4E-24	Schematic and Routing Diagram	4F-6
DTC C1061: ABS Pump Motor and/or Motor Driver Circuit Failure	4E-26	Electronic Stability Program Schematic	4F-6
DTC C1063: Solenoid Valve Power Supply Driver Circuit Failure	4E-27	Electronic Stability Program Wiring Circuit Diagram.....	4F-7
DTC C1071: ABS (ESP®) control module Internal Detect.....	4E-28	Component Location	4F-9
		Electronic Stability Program Component Location.....	4F-9
		Diagnostic Information and Procedures	4F-10
		Electronic Stability Program Check	4F-10

ESP® Warning Light Check.....	4F-12	DTC C1075 / 1076 / 1077 / 1078: Steering Angle Sensor / Master Cylinder Pressure Sensor / Longitudinal G Sensor / Lateral G Sensor in Yaw Rate / G Sensor Assembly Calibration Incomplete	4F-34
ABS Warning Light Check	4F-12	DTC C1090: ECM Detect Rolling Counter Failure from ESP® Control Module.....	4F-35
EBD Warning Light (Brake Warning Light) Check.....	4F-12	DTC C1091 / 1092 / 1093: ECM / TCM / 4WD Control Module Data in CAN Line Failure	4F-36
DTC Check	4F-13	DTC U1073: Control Module Communication Bus Off	4F-36
DTC Table.....	4F-13	DTC U1100: Lost Communication with ECM (Reception Error).....	4F-36
DTC Clearance	4F-16	DTC U1101: Lost Communication with TCM (Reception Error).....	4F-37
Fail-Safe Table.....	4F-16	DTC U1126: Lost Communication with Steering Angle Sensor (Reception Error).....	4F-39
Scan Tool Data	4F-18	DTC U1139: Lost Communication with 4WD Control Module (Reception Error)	4F-40
ESP® Warning Light Does Not Come ON at Ignition Switch ON	4F-19	DTC U1140: Lost Communication with BCM (Reception Error).....	4F-42
ESP® Warning Light Comes ON Steady	4F-20	Repair Instructions	4F-44
Serial Data Link Circuit Check	4F-22	Hydraulic Unit Operation Check.....	4F-44
DTC C1015 / C1017 / C1023: Longitudinal G Sensor / Lateral G Sensor / Yaw Rate Sensor in Yaw Rate / G Sensor Assembly Failure	4F-23	Sensor Calibration.....	4F-44
DTC C1016: Brake Light Switch Circuit Failure	4F-24	ESP® Hydraulic Unit / Control Module Assembly Components	4F-45
DTC C1018: Brake Fluid Level Switch Failure ..	4F-25	ESP® Hydraulic Unit / Control Module Assembly On-Vehicle Inspection	4F-45
DTC 1020: Master Cylinder Pressure Sensor Power Supply Failure	4F-26	ESP® Hydraulic Unit / Control Module Assembly Removal and Installation	4F-45
DTC C1021, C1022 / C1025, C1026 / C1031, C1032 / C1035, C1036: Right-Front / Left- Front / Right-Rear / Left-Rear Wheel Speed Sensor Circuit or Encoder Failure	4F-27	Front Wheel Speed Sensor On-Vehicle Inspection	4F-45
DTC C1024: Steering Angle Sensor Circuit Failure	4F-27	Front Wheel Speed Sensor Removal and Installation	4F-45
DTC C1027: ESP® OFF Switch Circuit Failure	4F-27	Front Wheel Speed Sensor Inspection	4F-45
DTC C1028: Master Cylinder Pressure Sensor Circuit Failure	4F-28	Rear Wheel Speed Sensor On-Vehicle Inspection	4F-45
DTC C1034: Yaw Rate / G Sensor Assembly Power Supply Failure	4F-29	Rear Wheel Speed Sensor Removal and Installation	4F-45
DTC C1037: Steering Angle Sensor Power Supply Failure	4F-30	Rear Wheel Speed Sensor Inspection	4F-45
DTC C1038: Steering Angle Sensor Detect Rolling Counter Failure from ESP® Control Module	4F-31	Front Wheel Encoder On-Vehicle Inspection	4F-45
DTC C1039: Yaw Rate / G Sensor Assembly Internal Failure	4F-32	Front Wheel Encoder Removal and Installation	4F-45
DTC C1040: Stability Control System Function Failure	4F-32	Rear Wheel Encoder On-Vehicle Inspection.....	4F-45
DTC C1041 / C1042 / C1043 / C1044 / C1045 / C1046 / C1051 / C1052 / C1053 / C1054 / C1055 / C1056: Inlet Solenoid Circuit Failure, Outlet Solenoid Circuit Failure, Master Cylinder Cut Solenoid Circuit Failure, Low Pressure Solenoid Circuit Failure	4F-33	Rear Wheel Encoder Removal and Installation	4F-45
DTC C1057: ESP® (ABS) control module power supply circuit failure.....	4F-33	Master Cylinder Pressure Sensor On-Vehicle Inspection	4F-45
DTC C1061: Pump Motor and/or Motor Driver Circuit Failure	4F-33	Yaw Rate / G Sensor Assembly On-Vehicle Inspection	4F-46
DTC C1063: Solenoid Valve Power Supply Driver Circuit Failure	4F-33	Yaw Rate / G Sensor Assembly Removal and Installation	4F-48
DTC C1071: ESP® (ABS) Control Module Internal Defect.....	4F-33	Yaw Rate / G Sensor Inspection	4F-49
DTC C1073: Lost Communication With Yaw Rate / G Sensor Assembly	4F-33	Steering Angle Sensor On-Vehicle Inspection ..	4F-49
		Steering Angle Sensor Removal and Installation	4F-50
		Steering Angle Sensor Inspection	4F-50
		ESP® OFF Switch Removal and Installation	4F-50
		ESP® OFF Switch Inspection	4F-50
		Specifications	4F-51

Tightening Torque Specifications.....	4F-51	Special Tools and Equipment	4F-51
		Special Tool	4F-51

Precautions

Precautions

Precautions for Brakes

S6JB0B4000001

Suspension Caution

Refer to "Suspension Caution in Section 00".

Wheels and Tires Caution

Refer to "Wheels and Tires Caution in Section 00".

Brake Caution

Refer to "Brakes Caution and Note in Section 00".

General Precautions

Refer to "General Precautions in Section 00".

Vehicle Lifting Points

Refer to "Vehicle Lifting Points in Section 0A".

Fastener Caution

Refer to "Fastener Caution in Section 00".

Fastener Information

Refer to "Fastener Information in Section 0A".

Brake Control System and Diagnosis

General Description


Brakes Construction

S6JB0B4101001

When the foot brake pedal is depressed, hydraulic pressure is developed in the master cylinder (2) to actuate pistons (two in front and four in rear). The master cylinder is a tandem master cylinder. Brake pipes are connected to the master cylinder and they make two independent circuits. One connects front right and rear left brakes and the other connects front left and rear right brakes. In this brake system, the disc brake type is used for the front wheel brake and a drum brake type (leading / trailing shoes) for the rear brake. The parking brake system is mechanical. It applies brake force to only rear wheels by means of the cable and mechanical linkage system. The same brake shoes are used for both parking and foot brakes.

NOTE

The difference between RHD model and LHD model is the location of the brake master and the brake booster only.

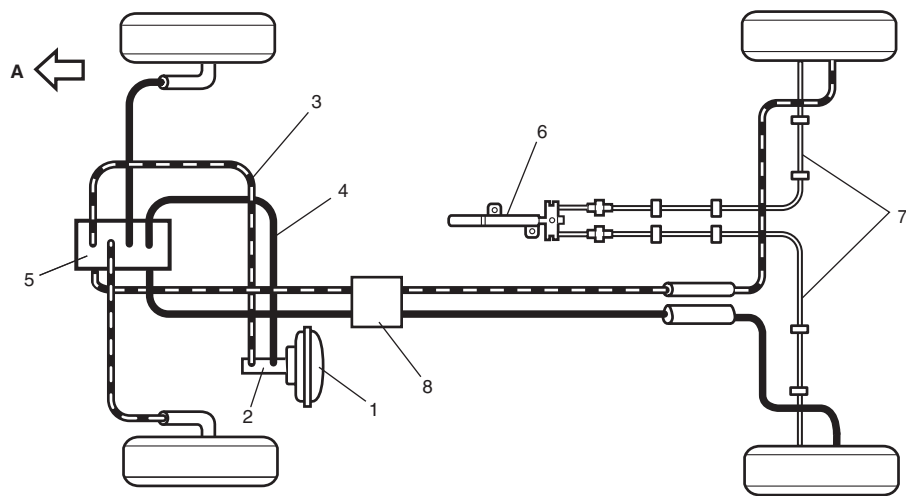


I5JB0A410001-02

1. Brake booster	4. Primary side	7. Parking brake cable
2. Master cylinder	5. ABS (ESP®) hydraulic unit / control module assembly	8. 4-way joint
3. Secondary side	6. Parking brake lever	A: Forward

Front Brake Hose / Pipe Construction


S6JB0B4101002

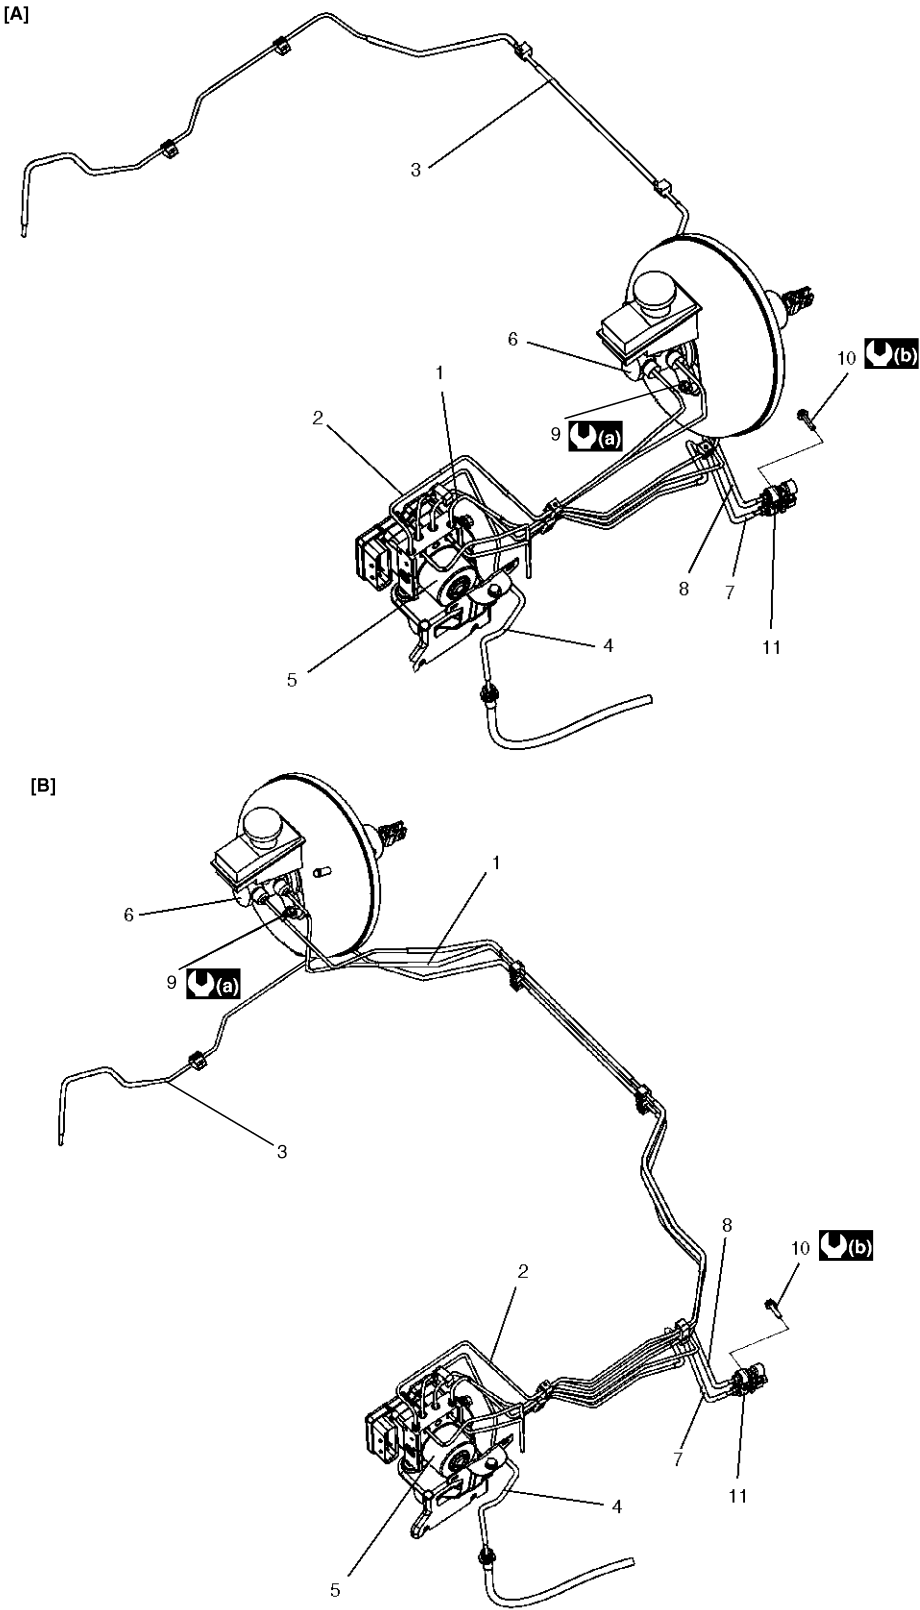

I5JB0A410002-03


[A]: LHD model	7. From ABS (ESP®) hydraulic unit to left rear brake
[B]: RHD model	8. From ABS (ESP®) hydraulic unit to right rear brake
1. From master cylinder primary to ABS (ESP®) hydraulic unit	9. Master cylinder fixing nut
2. From master cylinder secondary to ABS (ESP®) hydraulic unit	10. Brake joint bolt
3. From ABS (ESP®) hydraulic unit to right front brake	11. 4-way joint
4. From ABS (ESP®) hydraulic unit to left front brake	U(a) : 18 N·m (1.8 kgf-m, 13.0 lb-ft)

4A-3 Brake Control System and Diagnosis:

5. ABS (ESP®) hydraulic unit / control module assembly	 (b) : 11 N·m (1.1 kgf-m, 8.0 lb-ft)
6. Master cylinder	

Rear Brake Hose / Pipe Construction

S6JB0B4101003

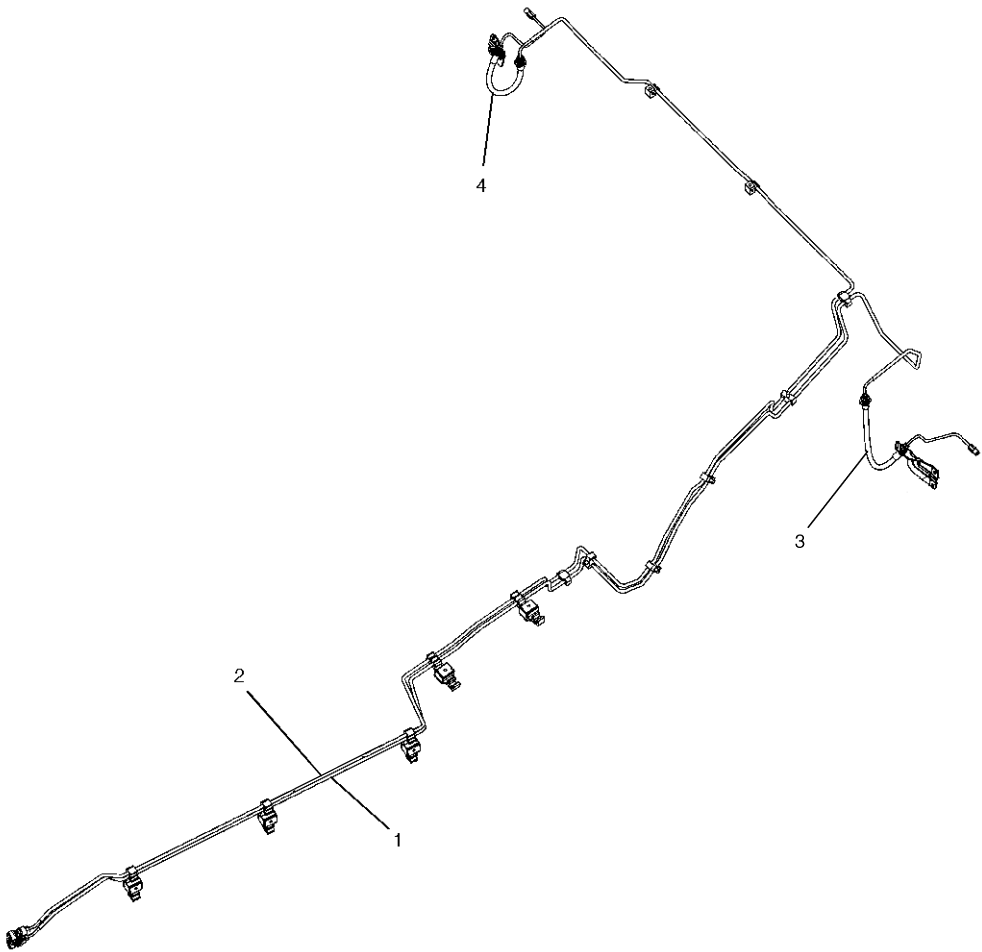

I5JB0A410003-02

1. To left rear brake hose	3. Left rear brake hose
2. To right rear brake hose	4. Right rear brake hose

Master Cylinder Assembly Construction

S6JB0B4101004

The master cylinder has two pistons, two pressure seal (3) and two separating seal (4). Its hydraulic pressure is produced in the primary (A in the figure) and secondary (B) chambers. The hydraulic pressure produced in the primary chamber (A) acts on the front right and rear left brakes.


Also, the hydraulic pressure produced in the secondary chamber (B) acts on the front left and rear right brakes.

⚠ WARNING

Brake master cylinder cannot be disassembled. When anything faulty is found in it, it must be replaced as an assembly.

⚠ CAUTION

Brake master cylinder cannot be disassembled in principle. Should primary piston (1) have come off from cylinder while dismounting or handling it, wash it in the same specified fluid as that in reservoir and place it back in cylinder.

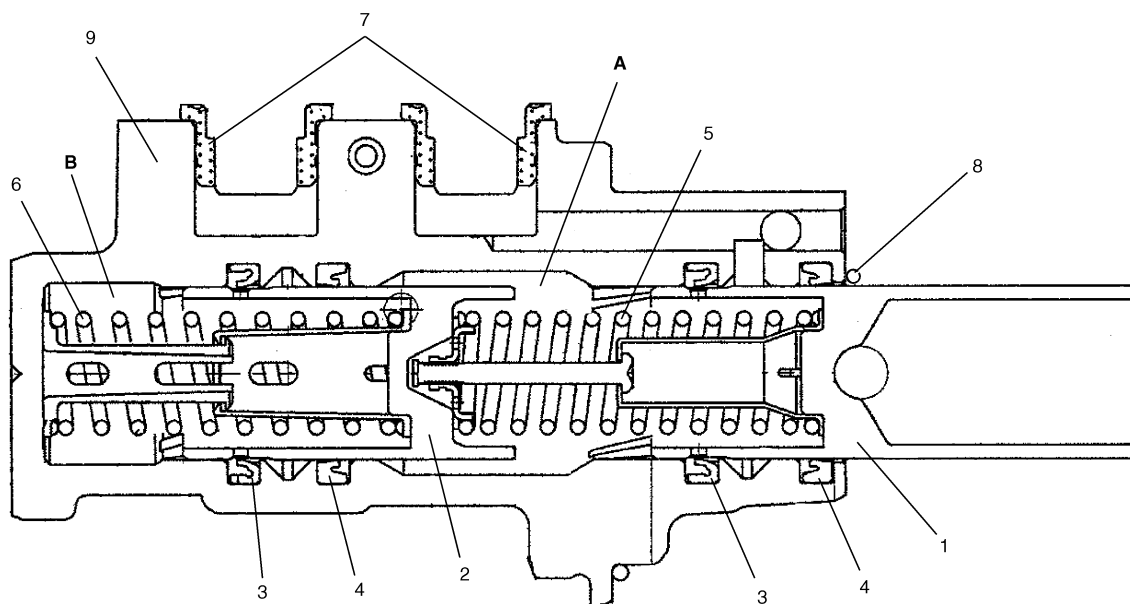

I5JB0A410004-01

2. Secondary piston	6. Secondary piston return spring	8. O-ring
5. Primary piston return spring	7. Grommet	9. Master cylinder body

Booster Assembly Construction

S6JB0B4101005

The booster is located between the master cylinder and the brake pedal. It is so designed that the force created when the brake pedal is depressed is mechanically increased combined with the engine vacuum.

⚠ CAUTION

- **Never disassemble brake booster assembly. If it is found faulty, replace it with new assembly.**
- **The torque values specified are for dry, unlubricated fasteners. If any hydraulic component is removed or brake line disconnected, bleed the brake system.**

Diagnostic Information and Procedures

Brake Diagnosis Note

S6JB0B4104001

Road Test for Brakes

Brakes should be tested on dry, clean, smooth and reasonably level roadway which is not crowned. Road test brakes by making brake applications with both light and heavy pedal forces at various speeds to determine if the vehicle stops evenly and effectively. Also drive vehicle to see if it leads to one side or the other without brake application. If it does, check the tire pressure, front end alignment and front suspension attachments for looseness. See diagnosis flow table for other causes.

Brake Fluid Inspection

Brake fluid leaks

Check the master cylinder fluid levels. While a slight drop in reservoir level does result from normal lining wear, an abnormally low level indicates a leak in the system. In such a case, check the entire brake system for leakage. If even a slight evidence of leakage is noted, the cause should be corrected or defective parts should be replaced.

If fluid level is lower than the minimum level of reservoir, refilling is necessary.

Fill reservoir with specified brake fluid.

Brake fluid

: Refer to reservoir cap.

CAUTION

Since brake system of this vehicle is factory filled with brake fluid indicated on reservoir cap, do not use or mix different type of fluid when refilling; otherwise serious damage will occur.

Do not use old or used brake fluid, or any fluid from a unsealed container.

Brakes Symptom Diagnosis

S6JB0B4104002

Condition	Possible cause	Correction / Reference Item
Not enough braking force	Brake fluid leakage	Locate leaking point and repair.
	Brake disc or pad stained with fluid	Clean or replace.
	Overheated brakes	Determine cause and repair.
	Poor contact of brake shoe on brake drum	Repair for proper contact.
	Brake shoe stained with fluid or wet with water	Clean or replace.
	Badly worn brake pad and brake shoe	Replace.
	Defective wheel cylinders	Repair or replace.
	Malfunctioning caliper assembly	Repair or replace.
	Air in system	Bleed system.
	Malfunctioning ABS (ESP®), if equipped	Check system and replace as necessary.

Condition	Possible cause	Correction / Reference Item
Brake pull (Brakes not working in unison)	Pad, disc, shoe and/or drum are wet with water or stained with fluid in some brakes	Clean or replace.
	Drum-to-shoe clearance out of adjustment in some brakes. (malfunctioning auto adjusting mechanism)	Check for inoperative auto adjusting mechanism.
	Drum is out of round in some brakes	Replace.
	Wheel tires are inflated unequally	Inflate equally.
	Malfunctioning wheel cylinders	Repair or replace.
	Disturbed front end alignment	Adjust as prescribed.
	Unmatched tires on same axle	Tires with approximately the same amount of tread should be used on the same axle.
	Restricted brake pipes or hoses	Check for soft hoses and damaged lines. Replace with new hoses and new brake piping.
	Malfunctioning caliper assembly	Check for stuck or sluggish pistons and proper lubrication of caliper slide bush.
	Loose suspension parts	Caliper should slide. Check all suspension mountings.
	Loose calipers	Check and torque bolts to specifications.
Brake locked	Malfunctioning ABS (ESP®)	Check system and replace as necessary.
Excessive pedal travel (Pedal stroke too large)	Partial brake system failure	Check brake systems and repair as necessary.
	Brake fluid leaking	Locate leaking point and repair. Then air bleed.
	Air in system (pedal soft / spongy)	Bleed system.
	Rear brake system not adjusted (malfunctioning auto adjusting mechanism)	Repair auto adjusting mechanism. Adjust rear brakes.
	Bent brake shoes	Replace brake shoes.
Dragging brakes (Without a very light drag is present in all disc brakes immediately after pedal is released)	Master cylinder pistons not returning correctly	Replace master cylinder.
	Restricted brake pipes or hoses	Check for soft hoses or damaged pipes and replace with new hoses and/or new brake pipes.
	Incorrect parking brake adjustment on rear brake	Check and adjust to correct specifications.
	Weakened or broken return springs in the rear brake	Replace.
	Sluggish parking-brake cables or linkage	Repair or replace.
	Wheel cylinder or brake caliper piston sticking	Repair as necessary.
	Malfunctioning ABS (ESP®)	Check system and replace as necessary.
Pedal pulsation (Pedal pulsates when depressed for braking)	Damaged wheel bearings	Replace wheel hub.
	Distorted steering knuckle or rear suspension knuckle	Replace knuckle.
	Excessive disc lateral runout	Check per instructions. If not within specifications, replace or machine the disc.
	Rear brake drum out of round	Check runout. Repair or replace drum as necessary.
	Brake caliper stick	Check slide pin of brake caliper.
Braking noise	Glazed brake pad and/or brake shoe	Repair or replace brake pad and/or brake shoe.
	Worn or distorted brake pad and/or brake shoe	Replace brake pad and/or brake shoe.
	Worn wheel bearings	Replace wheel hub.
	Distorted backing plates	Replace.

4A-7 Brake Control System and Diagnosis:

Condition	Possible cause	Correction / Reference Item
Brake warning light turns ON after engine start	Parking brake applied	Release parking brake and check that brake warning light turns off.
	Insufficient amount of brake fluid	Investigate leaky point, correct it and add brake fluid.
	Brake fluid leaking from brake line	Investigate leaky point, correct it and add brake fluid.
	Brake warning light circuit faulty	Repair circuit.
	Malfunctioning EBD system	Check system referring to "ABS Check in Section 4E" or "ESP® Warning Light Comes ON Steady in Section 4F".
Brake warning light turns on when brake is applied	Brake fluid leaking from brake line	Investigate leaky point, correct it and add brake fluid.
	Insufficient amount of brake fluid	Investigate leaky point, correct it and add brake fluid.
Brake warning light fails to turn on even when parking brake is applied	Bulb burnt out	Replace bulb.
	Brake warning light circuit faulty	Repair circuit.
ABS warning light does not turn ON for 2 – 3 sec. after ignition switch has turned ON	Bulb burnt out	Replace bulb.
	ABS warning light circuit open (including check relay)	Repair or replace.
	Malfunctioning ABS (ESP®)	Check system referring to "ABS Warning Light Does Not Come ON at Ignition Switch ON in Section 4E" or "ESP® Warning Light Does Not Come ON at Ignition Switch ON in Section 4F".
ABS warning light remains ON after ignition switch has turned ON for 2 – 3 sec.	Malfunctioning ABS (ESP®)	Check system referring to "ABS Warning Light Comes ON Steady in Section 4E" or "ESP® Warning Light Comes ON Steady in Section 4F".

Repair Instructions

Excessive Pedal Travel Check


S6JB0B4106001

- 1) Start engine.
- 2) Depress brake pedal a few times.
- 3) With brake pedal depressed with approximately 30 kg (66 lbs) load, measure pedal to carpet clearance "c".

If clearance "c" is less than specification, the most possible cause is either rear brake shoes are worn out beyond limit or air is in lines.
Should clearance "c" remain less than specification even after replacement of brake shoes and bleeding of system, other possible but infrequent cause is malfunction of rear brake shoe adjusters or booster push rod length out of adjustment.

Brake pedal arm to wall clearance "c"

When pedal depressed at 300 N (30 kg, 66 lbs): Over 70 mm (2.75 in.)

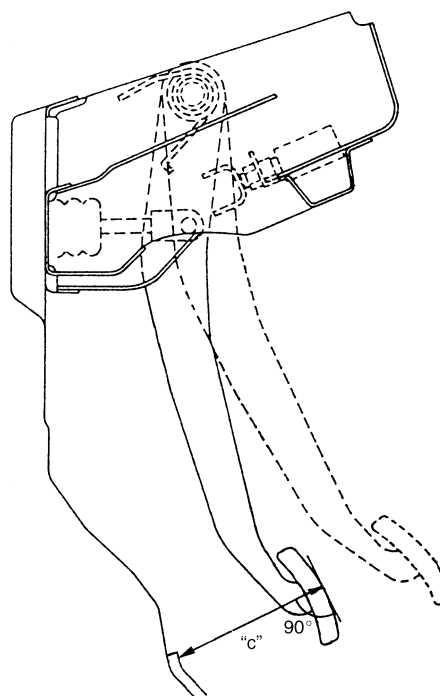

IYSQ01410009-01


Brake Pedal Play Check

S6JB0B4106002

Pedal play should be within specification. If out of specification, check brake light switch for proper installation position and adjust if necessary. Also check pedal shaft bolt and master cylinder pin installation for looseness and replace if defective.

Brake pedal play "d"

: 1 – 8 mm (0.04 – 0.32 in.)

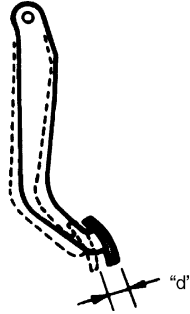

IYSQ01410010-01


Brake Fluid Level Check

S6JB0B4106003

Be sure to use particular brake fluid either as indicated on reservoir cap of that vehicle or recommended in owner's manual which comes along with that vehicle. Use of any other fluid is strictly prohibited. Fluid level should be between MIN and MAX lines marked on reservoir. When warning light lights sometimes during driving, replenish fluid to MAX line. When fluid decreases quickly, inspect brake system for leakage. Correct leaky points and then refill to specified level.

⚠ CAUTION

Do not use shock absorber fluid or any other fluid which contains mineral oil. Do not use a container which has been used for mineral oil or a container which is wet from water. Mineral oil will cause swelling and distortion of rubber parts in hydraulic brake system and water mixed into brake fluid will lower fluid boiling point. Keep all fluid containers capped to prevent contamination.

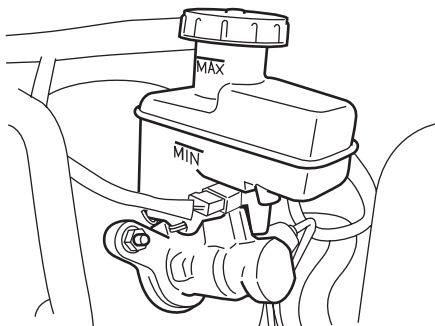

I5JB0A410005-01

Air Bleeding of Brake System

S6JB0B4106004

⚠ CAUTION

 
Brake fluid is extremely damaging to paint. If fluid should accidentally touch painted surface, immediately wipe fluid from paint and clean painted surface.

Bleeding operation is necessary to remove air whenever it entered hydraulic brake system.

Hydraulic lines of brake system are based on the diagonal split system. When a brake pipe or hose was disconnected at the wheel, bleeding operation must be performed at both ends of the line of the removed pipe or hose. When any joint part of the master cylinder or other joint part between the master cylinder and each brake (wheel) was removed, the hydraulic brake system must be bled at all 4 wheel brakes.

NOTE


Perform bleeding operation starting with wheel cylinder farthest from master cylinder and then at front caliper of the same brake line. Do the same on the other brake line.



I2RH01410013-01

1. Right brake caliper	4. Left wheel cylinder
2. Left brake caliper	[A]: FRONT
3. Right wheel cylinder	[B]: REAR


- 1) Fill master cylinder reservoir with specified brake fluid and keep at least one-half full of fluid during bleeding operation.
- 2) Remove bleeder plug cap. Attach a vinyl tube (1) to bleeder plug of wheel cylinder, and insert the other end into container (2).

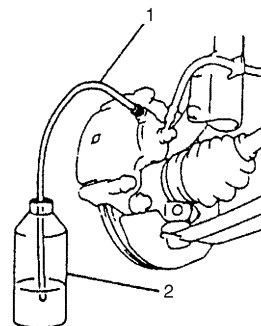

I2RH01410015-01


4A-9 Brake Control System and Diagnosis:

- 3) Depress brake pedal several times, and then while holding it depressed, loosen bleeder plug about one-third to one half turn.

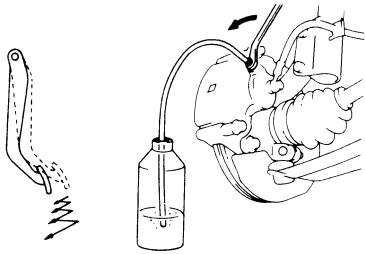

I2RH01410016-01

- 4) When fluid pressure in the cylinder is almost depleted, retighten bleeder plug.

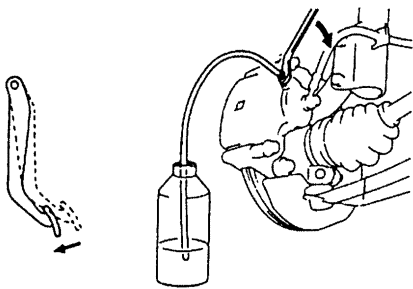

I2RH01410017-01


- 5) Repeat this operation until there are no more air bubbles in hydraulic line.
- 6) When bubbles stop, depress and hold brake pedal and tighten bleeder plug.

Tightening torque

Front brake caliper bleeder plug: 7 N·m (0.7 kgf-m, 5.0 lb-ft)

Rear wheel cylinder bleeder plug: 7 N·m (0.7 kgf-m, 5.0 lb-ft)

- 7) Then attach bleeder plug cap.
- 8) After completing bleeding operation, apply fluid pressure to pipe line and check for leakage.
- 9) Replenish fluid into reservoir up to "MAX" level.

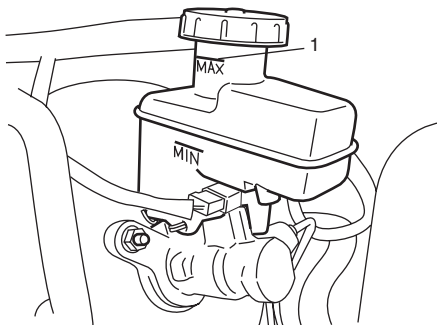

I5JB0A410006-01

1. MAX level mark

- 10) Check brake pedal for "sponginess". If found spongy, repeat entire procedure of bleeding.


Brake Pedal Free Height Adjustment

S6JB0B4106005

Measure brake pedal free height between pedal and carpet installed on dash panel.

If the measurement is not within the specification, check the position of booster push rod clevis and/or brake light switch, referring to, "Master Cylinder Assembly Inspection", "Booster Push Rod Clevis Adjustment" and/or "Brake Light Switch Adjustment". The free height varies depending on installation position of booster push rod clevis and brake light switch.

Brake pedal free height "a" from carpet
"a": 131 – 141 mm (5.16 – 5.55 in.)

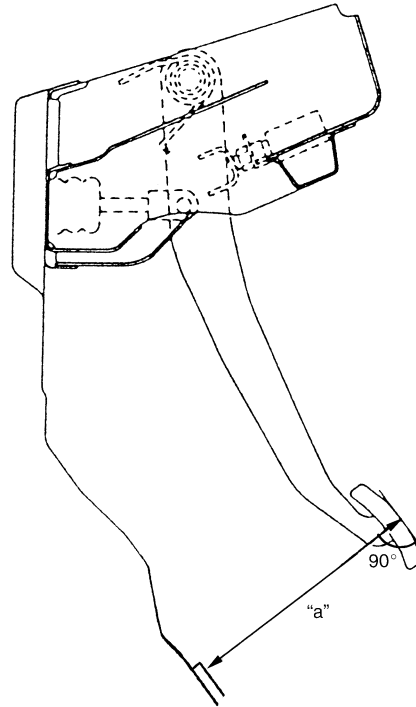

IYSQ01410007-01

Brake Light Switch Adjustment

S6JB0B4106006

⚠ CAUTION

Do not apply any oil or grease (including rust preventives, lubricant, etc.) to following sections.

- * Brake light switch (1) (including its tip end)
- * Switch (1) contacting section of brake pedal stay (3)

Oil or grease, if applied, will enter the contact point in the switch, causing contact failure.


Also, when checking, adjusting or replacing brake switch, check that no oil or grease is attached to switch contacting section on brake pedal side or tip end of switch.

Wipe off oil or grease being attached.

Adjustment should be made as follows when installing switch (1). Pull up brake pedal toward you and while holding it there, adjust switch position so that clearance between end of switch thread (2) and brake pedal stay (3).

Clearance "b" between end of thread and brake pedal stay

"b": 1.5 – 2.5 mm (0.06 – 0.10 in.)

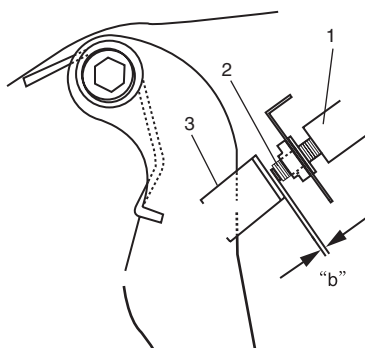


I3JA01410004-01

Brake Flexible Hose and Pipe Check

S6JB0B4106007

The brake hose assembly should be checked for road hazard damage, for cracks and chafing of the flexible hose, for leaks and blisters. A light and mirror may be needed for an adequate inspection. If any of the above conditions are observed on the brake flexible hose, it is necessary to replace it.

Inspect the pipe for damage, cracks, dents and corrosion. If any defect is found, replace it.

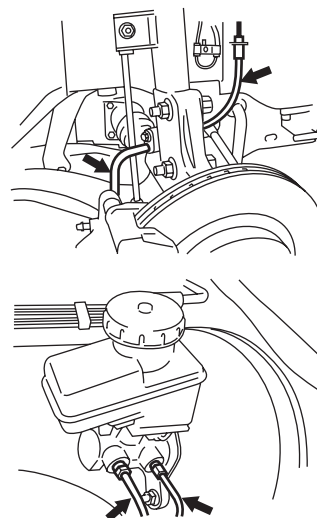


I5JB0A410007-01

Master Cylinder Check

S6JB0B4106008

Check for a cracked master cylinder casting or brake fluid around the master cylinder. Leaks are indicated only if there is at least a drop of fluid. A damp condition is not abnormal.

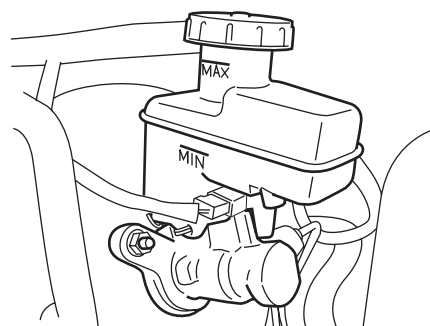

I5JB0A410005-01

Flushing Brake Hydraulic System

S6JB0B4106009

It is recommended that entire hydraulic system be thoroughly flushed with clean brake fluid whenever new parts are installed in hydraulic system.

Periodical change of brake fluid is also recommended.

Booster Operation Check

S6JB0B4106010

There are two ways to perform this inspection, with and without a tester. Ordinarily, it is possible to roughly determine its condition without using a tester.


NOTE

For this check, make sure that no air is in hydraulic line.

Inspection without Tester

Check air tightness

- 1) Start engine.
- 2) Stop engine after running for 1 to 2 minutes.
- 3) Depress brake pedal several times with the same load as in ordinary braking and observe pedal travel. If pedal goes down deep the first time but its travel decreases as it is depressed the second and more times, air tightness is obtained.

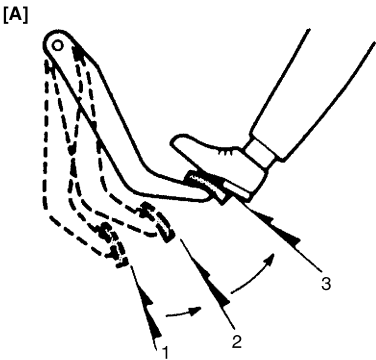


I5JB0A410008-01

[A]: Good	2. 2nd
1. 1st	3. 3rd

- 4) If pedal travel doesn't change, air tightness isn't obtained.

NOTE

If defective, inspect vacuum lines and sealing parts, and replace any faulty part. When this has been done, repeat the entire test.

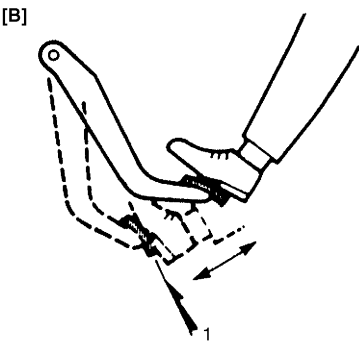


I5JB0A410009-01

[B]: No Good	1. 1st, 2nd, 3rd
--------------	------------------


Check operation

- 1) With engine stopped, depress brake pedal several times with the same load and make sure that pedal travel doesn't change.

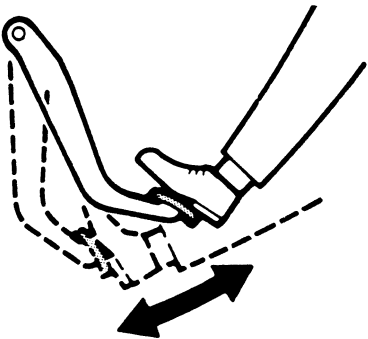

IYSQ01410018-01


- 2) Start engine while depressing brake pedal. If pedal travel increases a little, operation is satisfactory. But no change in pedal travel indicates malfunction.

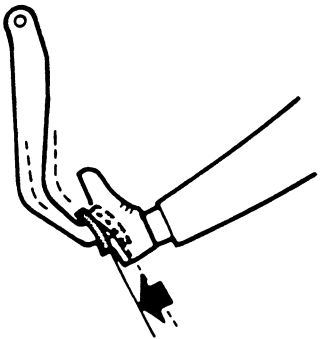

IYSQ01410019-01


Check air tightness under load

- 1) With engine running, depress brake pedal. Then stop engine while holding brake pedal depressed.

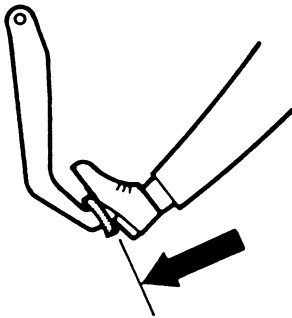

IYSQ01410020-01

- 2) Hold brake pedal depressed for 30 seconds. If pedal height does not change, condition is good. But it isn't if pedal rises.

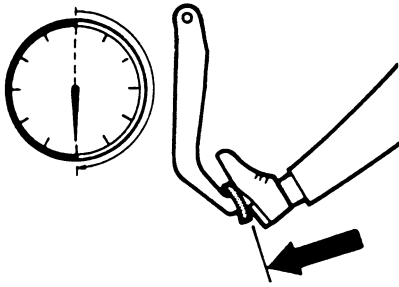

IYSQ01410021-01

Front Brake Hose / Pipe Removal and Installation

S6JB0B4106011

⚠ CAUTION

Do not allow brake fluid to get on painted surfaces. Painted surfaces will be damaged by brake fluid, flush it with water immediately if any fluid is spilled.

Removal

- 1) Raise and support vehicle properly. Remove tire and wheel.

NOTE

This operation is not necessary when removing pipes connecting master cylinder.

- 2) Clean dirt and foreign material from both flexible hose end and pipe end fittings.
- 3) Drain brake fluid in reservoir.
- 4) Remove brake flexible hose or pipe.

Installation

Reverse brake flexible hose removal procedure, noting the following.

- Tighten brake pipe flare nut to specified torque.

Tightening torque

Brake pipe flare nut (M10): 16 N·m (1.6 kgf-m, 12.0 lb-ft)

Brake pipe flare nut (M12): 19 N·m (1.9 kgf-m, 14.0 lb-ft)

- Make sure that steering wheel is in straight-forward position and flexible hose has not twist or kink.
- Check to make sure that flexible hose doesn't contact any part of suspension, both in extreme right and extreme left turn conditions.
If it does at any point, remove and correct. Fill and maintain brake fluid level in reservoir.
- Bleed brake system. Refer to "Air Bleeding of Brake System".

- Perform brake test and check installed part for fluid leakage.

Rear Brake Hose / Pipe Removal and Installation

S6JB0B4106012

⚠ CAUTION

Do not allow brake fluid to get on painted surfaces. Painted surfaces will be damaged by brake fluid, flush it with water immediately if any fluid is spilled.

Removal

- 1) Raise and support vehicle properly. Remove tire and wheel.
- 2) Clean dirt and foreign material from both flexible hose end and pipe end fittings.
- 3) Drain brake fluid in reservoir.
- 4) Remove brake flexible hose or pipe.

Installation

Reverse brake flexible hose removal procedure, noting the following.


- Fill and maintain brake fluid level in reservoir.
- Bleed brake system. Refer to "Air Bleeding of Brake System".
- Perform brake test and check each installed part for fluid leakage.
- Install clamps properly referring to the figure and tighten bolts.
- When installing hose, make sure that it has no twist or kink.

Master Cylinder Components





S6JB0B4106013

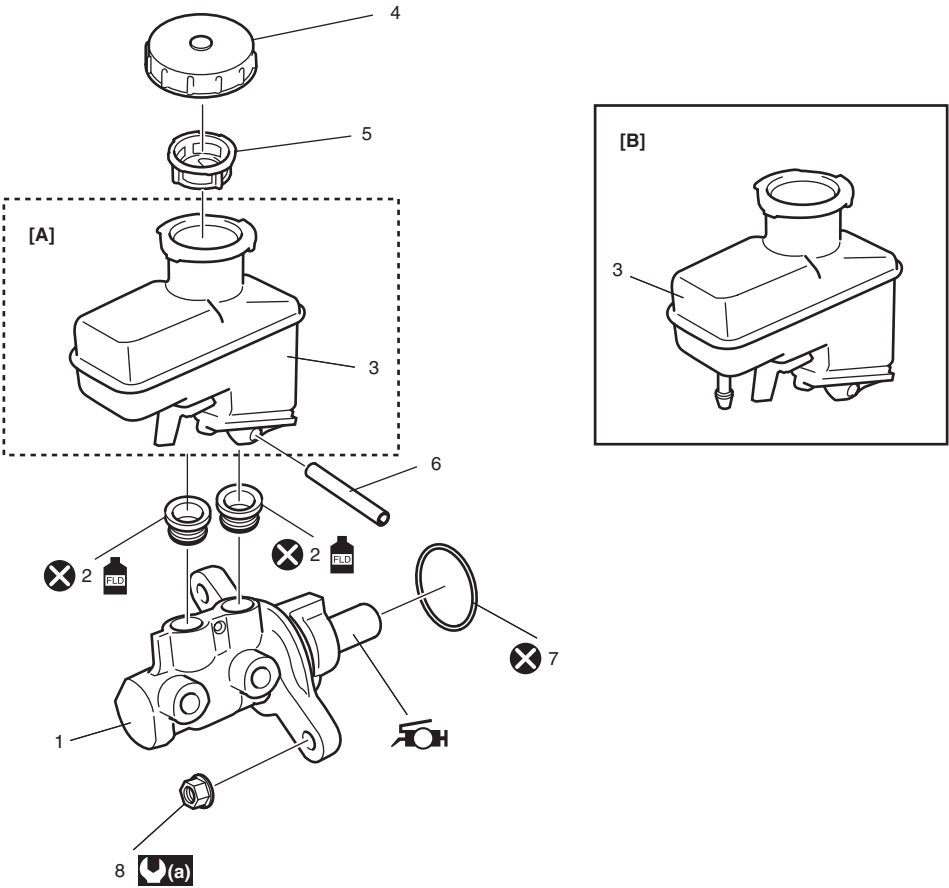⚠ CAUTION

Never disassemble master cylinder. Disassembly will spoil its original function. If faulty condition is found, replace it with new one as an assembly.



I6JB0B410002-01

[A]: A/T model	3. Reservoir	7. O-ring	 : Apply grease to piston rod (Grease included in spare parts)
[B]: M/T model	4. Reservoir cap	8. Master cylinder fixing nut	
1. Master cylinder body	5. Filter	 (a) : 18 N·m (1.8 kgf-m, 13.0 lb-ft)	
 2. Grommet : Apply brake fluid.	6. Reservoir connector pin	 : Do not reuse.	

Master Cylinder Reservoir Removal and Installation


S6JB0B4106014

⚠ CAUTION

Do not allow brake fluid to get on painted surfaces. Painted surfaces will be damaged by brake fluid, flush it with water immediately if any fluid is spilled.


Removal

- 1) Disconnect reservoir lead wire at coupler (1).
- 2) Clean outside of reservoir (2) and master cylinder (3).

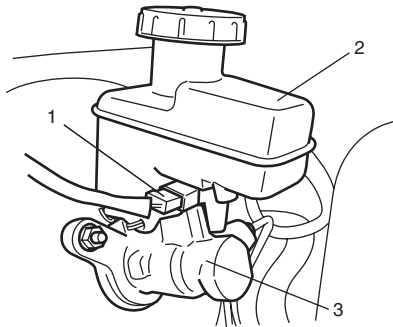

I5JB0A410011-02

- 3) Take out fluid with syringe or such.
- 4) Disconnect clutch reservoir hose (1) from reservoir (2) (M/T model).

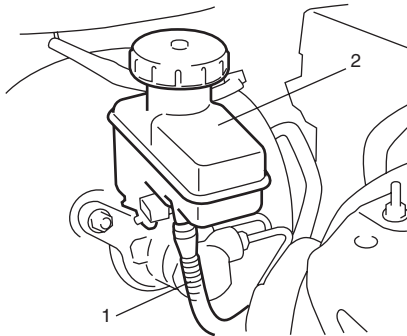


I5JB0A410012-02

- 5) Remove reservoir connector pin (1) by using special tool and then reservoir.

Special tool


(A): 09916-44310

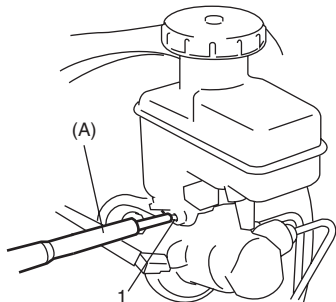

I5JB0A410013-02

Installation

- 1) When using new grommets (3), lubricate them with the same fluid as the one to fill reservoir (1) with. Then press-fit grommets (3) to master cylinder (2). Grommets (3) must be seated in place.

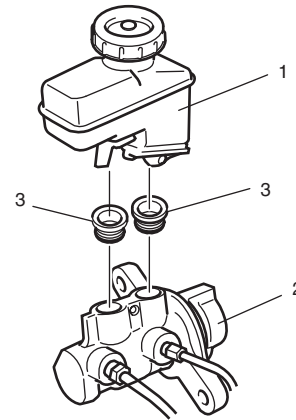


I5JB0A410014-01

- 2) Install reservoir (1) and drive in reservoir connector pin (2) by using special tool (A). till both of its ends at the right and left of reservoir becomes the same length.


Special tool

(A): 09916-44310

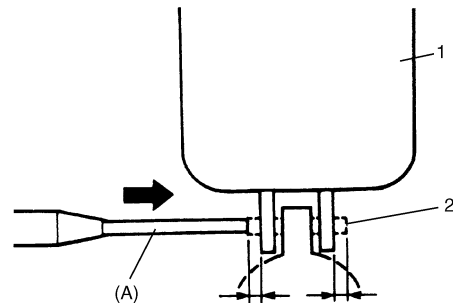

I5JB0A410015-01

- 3) Connect clutch reservoir hose (1) to reservoir (2) (M/T model).

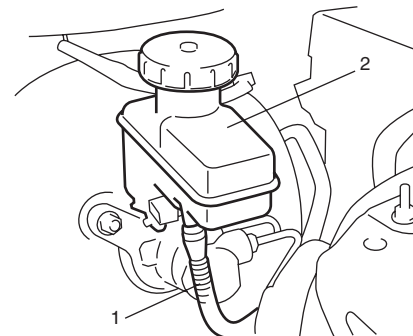

I5JB0A410012-02

4A-15 Brake Control System and Diagnosis:

- 4) Connect reservoir lead wire at coupler.
- 5) Fill reservoir with specified fluid.
- 6) After installing, bleed air from brake system referring to "Air Bleeding of Brake System" and at the same time bleed air from clutch system referring to "Air Bleeding of Clutch System in Section 5C" (M/T model).
- 7) Upon completion of installation, check for fluid leakage.

Master Cylinder Assembly Removal and Installation


S6JB0B4106015

⚠ CAUTION

- **Never disassemble master cylinder. Disassembly will spoil its original function. If faulty condition is found, replace it with new one as an assembly.**
- **Do not allow brake fluid to get on painted surfaces. Painted surfaces will be damaged by brake fluid, flush it with water immediately if any fluid is spilled.**


Removal

- 1) Disconnect reservoir lead wire at coupler (1).

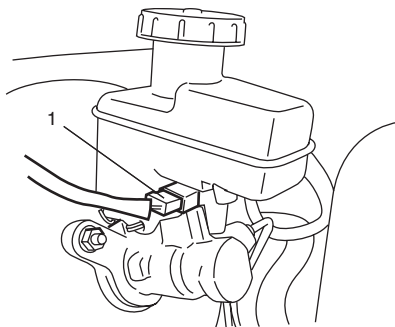


I5JB0A410016-02

- 2) Clean outside of master cylinder and take out fluid with syringe or such.
- 3) Disconnect clutch reservoir hose (1) from reservoir (2) (M/T model).

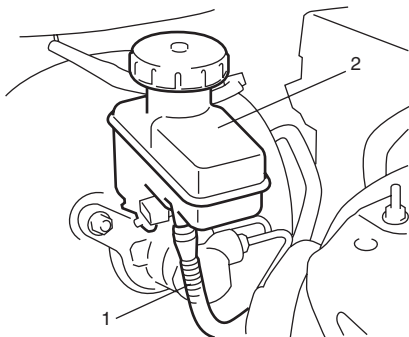


I5JB0A410012-02

- 4) Loosen brake pipe flare nuts (2) for master cylinder (1).
- 5) Disconnect brake pipes (3) from master cylinder (1).

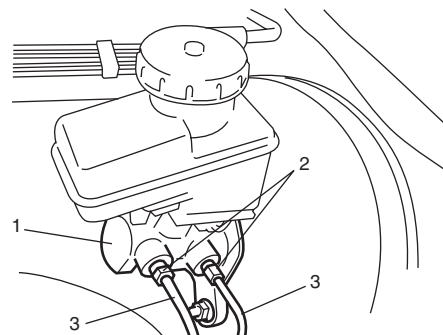

I5JB0A410017-01


- 6) Loosen master cylinder fixing nuts (1) and then remove master cylinder (2) with reservoir (3) from brake booster (4).

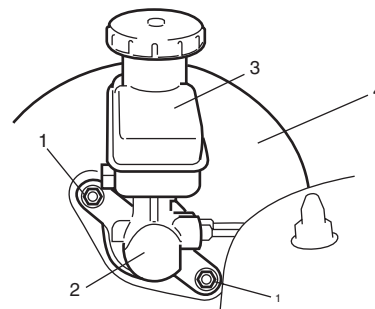

I5JB0A410018-02

Installation

- 1) Install new master cylinder O-ring (1) to master cylinder.
- 2) Apply grease to piston rod "A". Use specified grease to spare parts.
- 3) Install master cylinder (2) with reservoir (3) to brake booster (4).

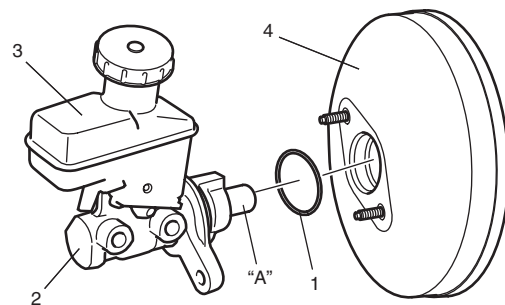


I6JB0B410003-01

- 4) Tighten master cylinder fixing nuts (1) to specified torque.

Tightening torque

Master cylinder fixing nut (a): 18 N·m (1.8 kgf-m, 13.0 lb-ft)

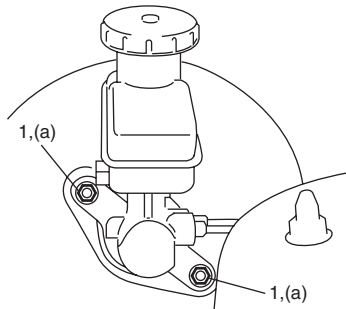


I5JB0A410021-02

- 5) Connect brake pipes to master cylinder and tighten brake pipe flare nuts (1) to specified torque.

Tightening torque


Brake pipe flare nut (M10) (a): 16 N·m (1.6 kgf-m, 12.0 lb-ft)

Brake pipe flare nut (M12) (a): 19 N·m (1.9 kgf-m, 14.0 lb-ft)

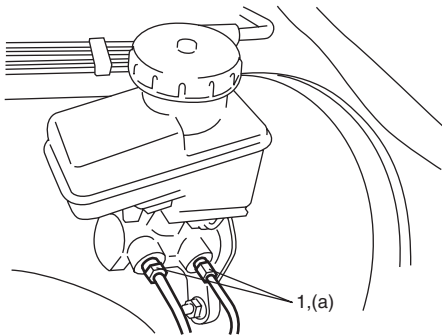

I5JB0A410020-01

- 6) Connect clutch reservoir hose (1) to reservoir (2) (M/T model).

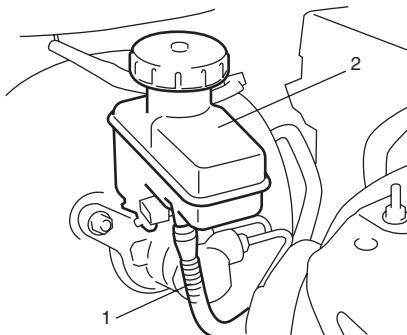

I5JB0A410012-02

- 7) Connect reservoir lead wire at coupler.

- 8) Fill reservoir with specified brake fluid.

- 9) After installing, bleed air from brake system referring to "Air Bleeding of Brake System" and at the same time bleed air from clutch system referring to "Air Bleeding of Clutch System in Section 5C" (M/T model).

- 10) Perform brake test and check each installed part for fluid leakage.


Master Cylinder Assembly Inspection

S6JB0B4106016

- Check master cylinder for corrosion and smooth operation.
- Inspect distance "a" to be the following.
If measurement is out of specification, replace master cylinder assembly.

Distance

"a": 72.0 mm (2.83 in.) or more

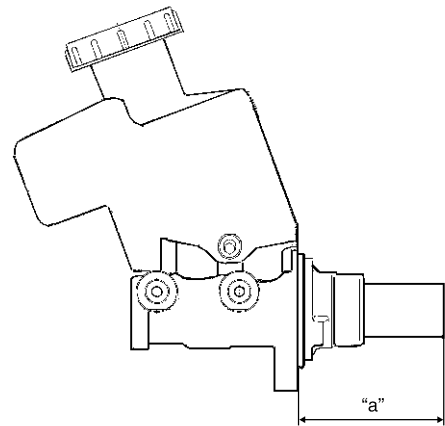




I5JB0A410022-01

Brake Booster Components

S6JB0B4106017

NOTE

The difference between RH steering vehicle and LH steering vehicle booster components is the location of vacuum hose.

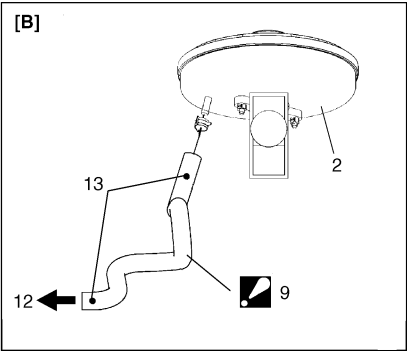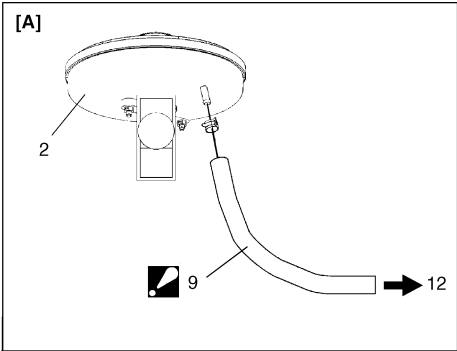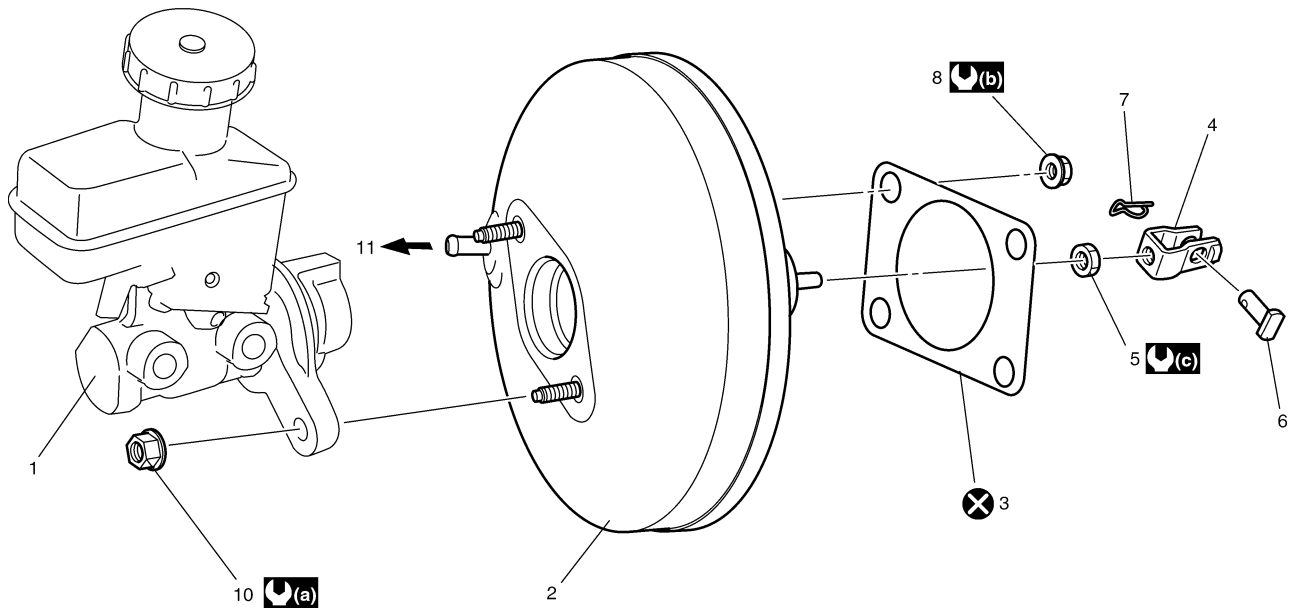

I6JB0B410001-02

[A]: RHD model	5. Clevis pin lock nut	11. To vacuum hose
[B]: LHD model	6. Clevis pin	(a) : 18 N·m (1.8 kgf-m, 13.0 lb-ft)
1. Brake master cylinder assembly	7. Clip	(b) : 13 N·m (1.3 kgf-m, 9.5 lb-ft)
2. Brake booster assembly	8. Booster attaching nut	(c) : 26 N·m (2.6 kgf-m, 19.0 lb-ft)
3. Gasket	9. Brake vacuum hose : Be sure to direct arrow mark to engine side (12) and location mark (13) to up side.	X : Do not reuse.
4. Push rod clevis	10. Master cylinder fixing nut	

Brake Booster Removal and Installation


S6JB0B4106018

⚠ CAUTION

**Never disassemble brake booster.
Disassembly will spoil its original function. If
is found faulty, replace it with new one.**

Removal

- 1) Disconnect brake pipes from ABS (ESP®) actuator.
- 2) Remove master cylinder assembly, referring to "Master Cylinder Assembly Removal and Installation".
- 3) Disconnect brake vacuum hose from brake booster.
- 4) Remove clip (2) and the disconnect clevis pin (3).
- 5) Remove attaching nuts (1) and then remove booster as shown in the figure.

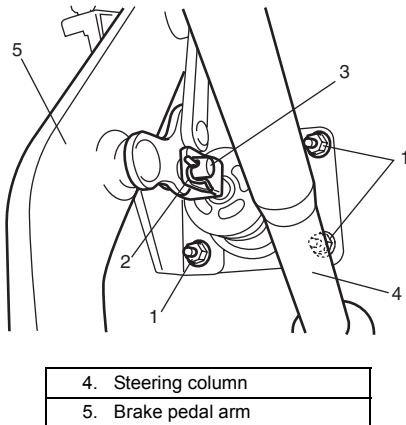

I5JB0A410024-01

Installation


NOTE

- Check length of push rod clevis (2). Refer to "Booster Push Rod Clevis Adjustment".

- 1) Install gasket to booster and then install booster to dash panel as shown in the figure. Then connect booster push rod clevis (2) to pedal arm (3) with clevis pin inserting from left (4) and clip (5).
- 2) Tighten booster attaching nuts (6) to the specified torque.

Tightening torque

Booster attaching nut (a): 13 N·m (1.3 kgf-m, 9.5 lb-ft)

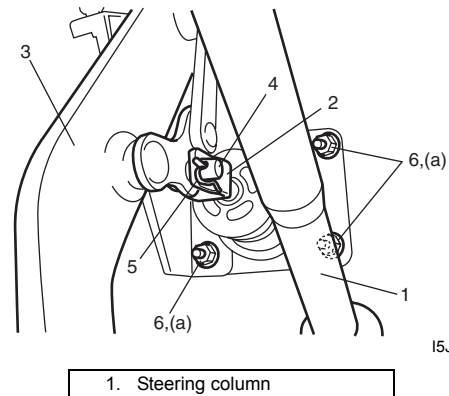

I5JB0A410025-01

- 3) Connect brake vacuum hose to brake booster referring to "Brake Booster Components".
- 4) Install master cylinder referring to "Master Cylinder Assembly Removal and Installation".
- 5) After installing, fill reservoir with specified brake fluid and bleed brake system. Check each installed part for fluid leakage and perform brake test.

Booster Push Rod Clevis Adjustment

S6JB0B4106019


Install push rod clevis (1) so that measurement "a" is obtained and torque nut (2) to specification.

Tightening torque

Clevis pin lock nut (a): 26 N·m (2.6 kgf-m, 19.0 lb-ft)

Clevis installing position (length "a")

"a": 133.5 – 134.5 mm (5.26 – 5.30 in.)

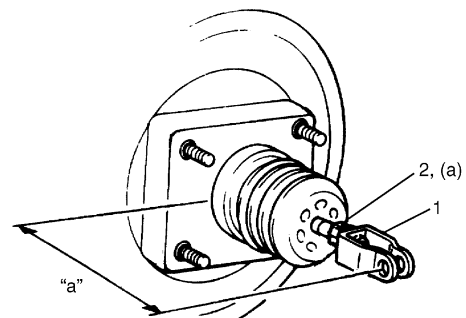

 

 
 
 




IYSQ01410050-01

Specifications

Tightening Torque Specifications

S6JB0B4107001

Fastening part	Tightening torque			Note
	N·m	kgf-m	lb-ft	
Front brake caliper bleeder plug	7	0.7	5.0	
Rear wheel cylinder bleeder plug	7	0.7	5.0	
Brake pipe flare nut (M10)	16	1.6	12.0	 / 
Brake pipe flare nut (M12)	19	1.9	14.0	 / 
Master cylinder fixing nut	18	1.8	13.0	
Booster attaching nut	13	1.3	9.5	
Clevis pin lock nut	26	2.6	19.0	

NOTE

The specified tightening torque is also described in the following.

“Front Brake Hose / Pipe Construction”

“Master Cylinder Components”

“Brake Booster Components”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Special Tools and Equipment

Recommended Service Material

S6JB0B4108001




NOTE

Required service material is also described in the following.

“Master Cylinder Components”

Special Tool

S6JB0B4108002

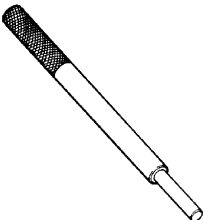09916-44310 Valve guide remover (5 mm)  /  	
--	--

Front Brakes

General Description

Front Disc Brake Caliper Assembly Construction

S6JB0B4201001

This caliper is mounted to the brake caliper carrier with two caliper pin bolts. Hydraulic force, created by applying force to the brake pedal, is converted by the caliper to friction. The hydraulic force acts equally against the piston and the bottom of the caliper bore to move the piston outward and to move (slide) the caliper inward, resulting in a clamping action on the disc. This clamping action forces the pads (linings) against the disc, creating friction to stop the vehicle. For components, refer to "Front Disc Brake Components".


NOTE

Lubricate parts as specified. Do not use lubricated shop air on brake parts as damage to rubber components may result. If any component is removed or line disconnected, bleed the brake system. Replace pads in axle sets only. The torque values specified are for dry, unlubricated fasteners.

Repair Instructions

Front Disc Brake Components

S6JB0B4206001

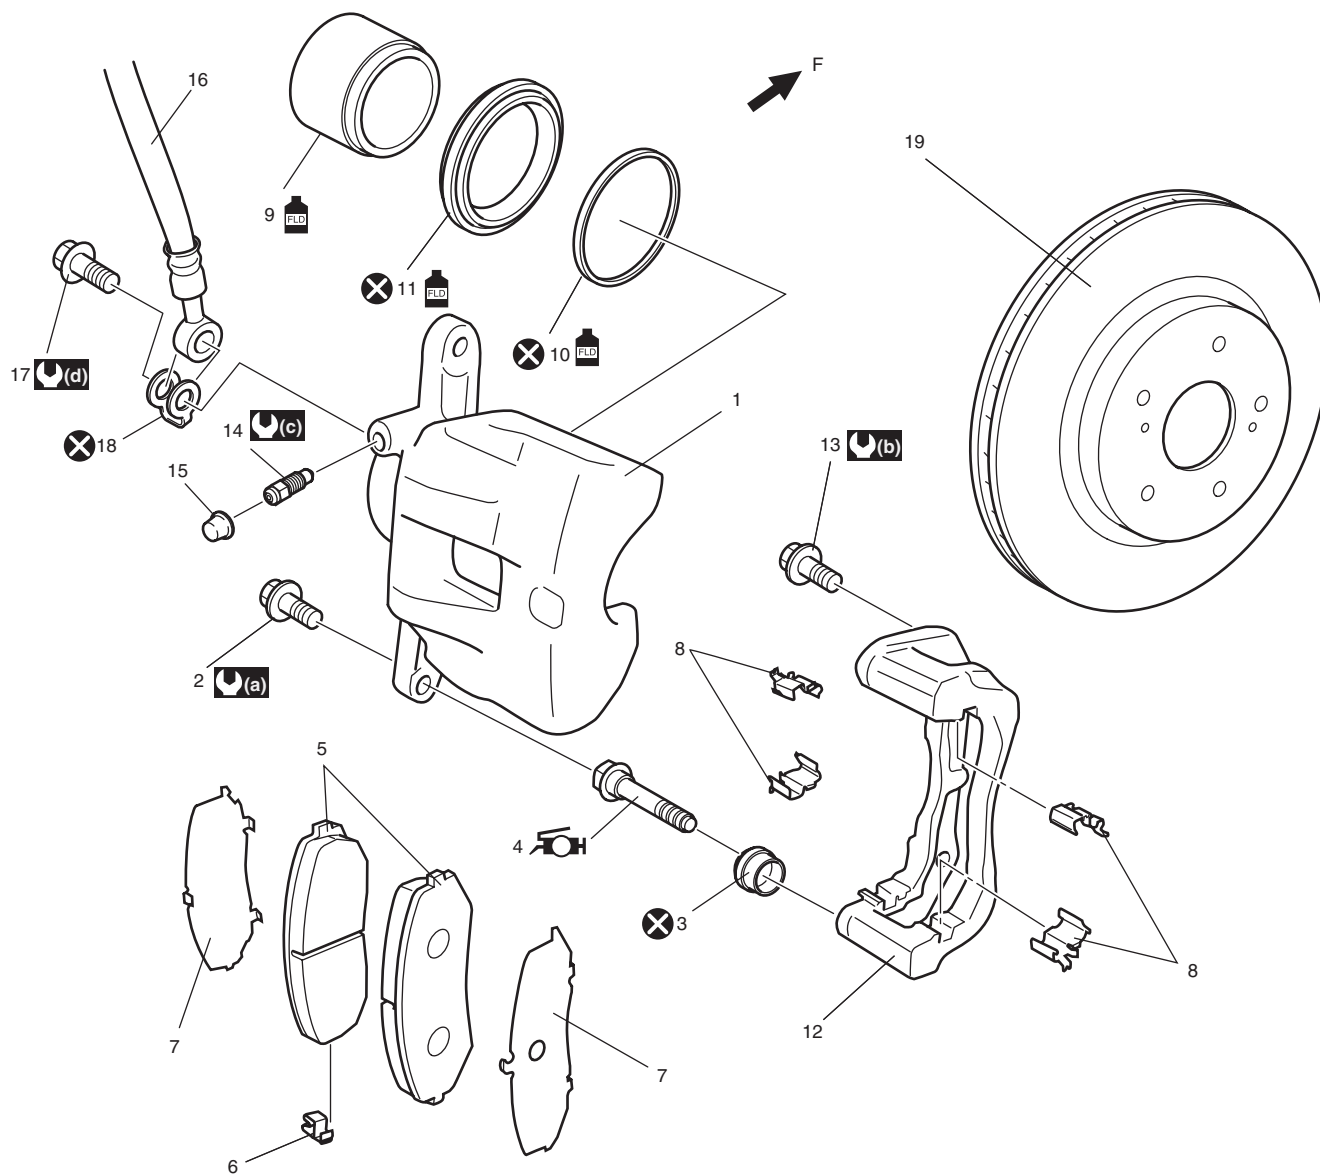

16JB0B420001-01


1. Caliper	10. Piston seal	19. Brake disc
2. Caliper pin bolt	11. Piston boot	F: Forward
3. Slide pin boot	12. Brake caliper carrier	(a) : 36 N·m (3.6 kgf-m, 26.0 lb-ft)
4. Slide pin : Use included grease for pin boot.	13. Caliper carrier bolt	(b) : 85 N·m (8.5 kgf-m, 61.5 lb-ft)
5. Brake pad	14. Front caliper bleeder plug	(c) : 7 N·m (0.7 kgf-m, 5.0 lb-ft)
6. Wear indicator (vehicle center side on right wheel brake only)	15. Bleeder plug cap	(d) : 23 N·m (2.3 kgf-m, 17.0 lb-ft)
7. Shim	16. Brake flexible hose	: Do not reuse.
8. Pad spring	17. Flexible hose joint bolt	: Apply brake fluid
9. Disk brake piston	18. Hose washer	

Front Disc Brake Pad On-Vehicle Check

S6JB0B4206002

Inspect pad linings periodically according to maintenance schedule whenever wheels are removed (for tire rotation or other reason). Take a look through hole of caliper and check lining thickness of outside and inside pads.

If one of brake pad is worn to service limit, all linings must be replaced at the same time.

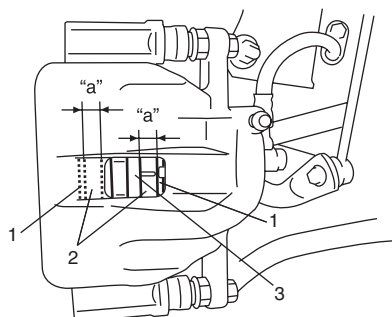Front brake pad thickness "a"**Standard: 11.0 mm (0.43 in.)****Limit: 2.0 mm (0.08 in.)**

I5JB0A420002-01

1. Pad rim	3. Disc
2. Lining	

Front Disc Brake Pad Removal and Installation


S6JB0B4206003

NOTE

When replacing brake pad, replace it on the right and left.

Removal

- 1) Hoist vehicle and remove front wheel.
- 2) Remove caliper pin bolts (2).

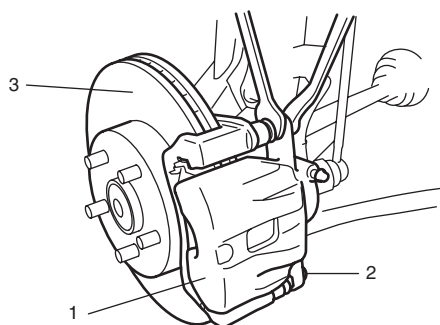

I5JB0A420003-01


1. Caliper
3. Disc

- 3) Remove caliper (1) from caliper carrier.

NOTE

Hang removed caliper (1) with a wire hook (2) or the like so as to prevent brake hose from bending and twisting excessively or being pulled. Don't operate brake pedal with pads removed.

- 4) Remove pads (3).

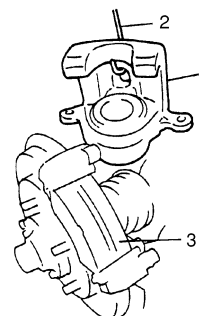


I1SQ01420004-01

Installation

- 1) Install pad spring (1), shims (6) and pads (2) to caliper carrier (4).

NOTE

Install brake pad with wear indicator (5) to vehicle center side on right wheel brake.

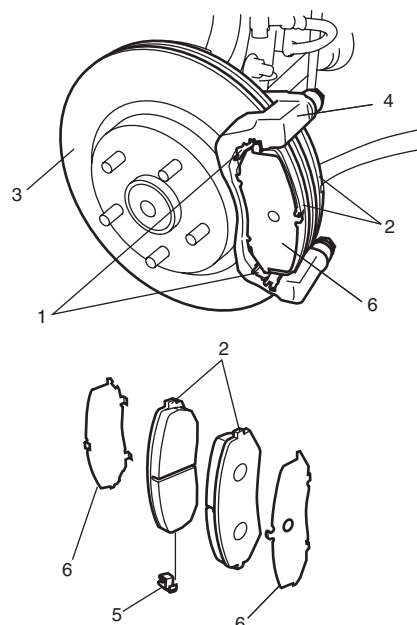

I5JB0A420004-01

3. Disc

4B-4 Front Brakes:


- 2) Install caliper and tighten caliper (slide) pin bolts (1) to specification.

NOTE

Make sure that boots are fit into groove securely.

Tightening torque

Caliper pin bolt (a): 36 N·m (3.6 kgf-m, 26.0 lb-ft)

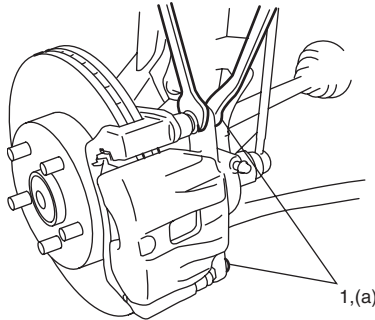

I5JB0A420005-01

- 3) Install front wheel referring to "Wheel Removal and Installation in Section 2D".
- 4) Upon completion of installation, perform brake test.

Front Brake Disc and Pad Inspection

S6JB0B4206004

Brake Pad

Check pad lining for wear. When wear exceeds limit, replace with new one.

⚠ CAUTION

Never polish pad lining with sandpaper. If lining is polished with sandpaper, hard particles of sandpaper will be deposited in lining and may damage disc. When pad lining requires correction, replace it with a new one.


NOTE

When pads are removed, visually inspect caliper for brake fluid leak. Correct leaky point, if any.

Front disc brake pad thickness (lining thickness)

Standard: 11.0 mm (0.43 in.)

Limit: 2.0 mm (0.08 in.)

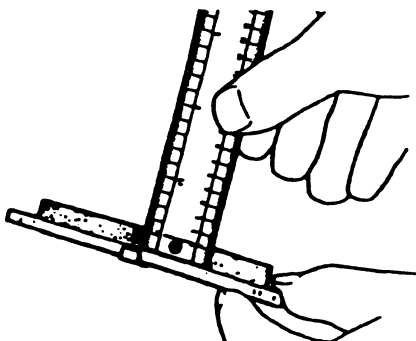

I2RH01420005-01

Brake Disc

Before this inspection, brake pads must be removed.

Check disc surface for scratches in wearing parts.


Scratches on disc surface noticed at the time of specified inspection or replacement are normal and disc is not defective unless they are serious.

But when there are deep scratches or scratches all over disc surface, replace it. When only one side is scratched, polish and correct that side.

Front brake disc thickness "a"

Standard: 25 mm (1.020 in.)

Limit: 23 mm (0.905 in.)

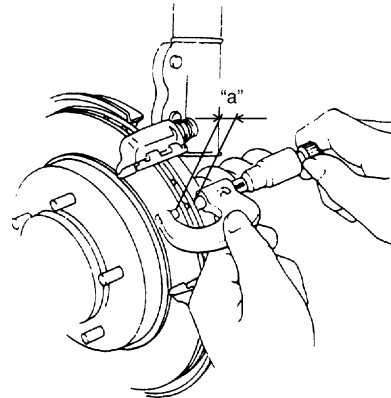

IYSQ01420008-01


Use wheel nuts (1) and suitable plain washers (2) to hold the disc securely against the hub, then mount a dial gauge (3) as shown in the figure and measure the runout at 25 mm (0.98 in.) from the outer edge of the disc.

NOTE

Check front wheel bearing for looseness before measurement.

Front brake disc deflection

Limit: 0.1 mm (0.004 in.)

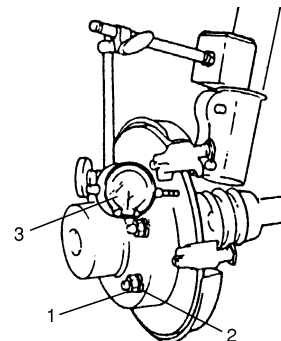


IYSQ01420009-01

Slide Pin Bolt / Cylinder Slide Pin

Check slide pin (bolt) for smooth movement as shown in the figure.

If it is found faulty, correct or replace. Apply grease (included with new pin boot) to slide pin (bolt) outer surface.

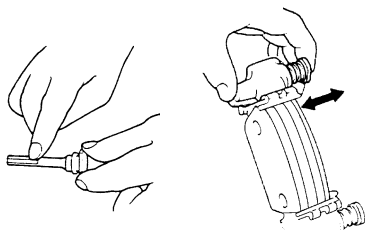

IYSQ01420021-01

Slide Pin Boot

Check boot for breakage, crack and damage. If defective, replace.

Front Disc Brake Caliper Removal and Installation


S6JB0B4206005

⚠ CAUTION

Be careful not to twist flexible hose while loosening the bolt.

Removal


- 1) Hoist vehicle and remove front wheel.
- 2) Remove brake flexible hose mounting bolt (1) from caliper (2). As this will allow fluid to flow out of hose (3), have a container ready beforehand.

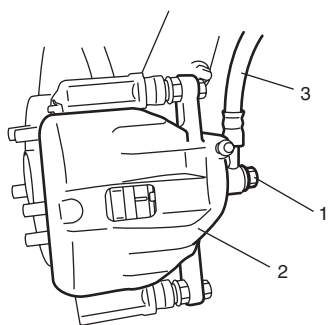

I5JB0A420006-01

- 3) Remove caliper pin bolts (1).

- 4) Remove caliper (2).

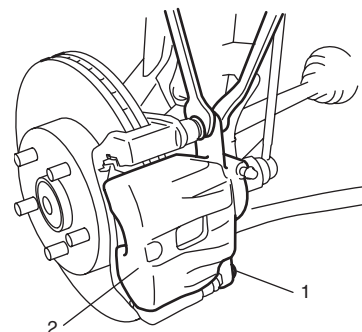

I5JB0A420007-01

Installation


- 1) Install caliper to caliper carrier.
Then tighten pin bolts to specified torque.

NOTE

Make sure that boots are fit into groove securely.

Tightening torque

Caliper pin bolt (a): 36 N·m (3.6 kgf-m, 26.0 lb-ft)

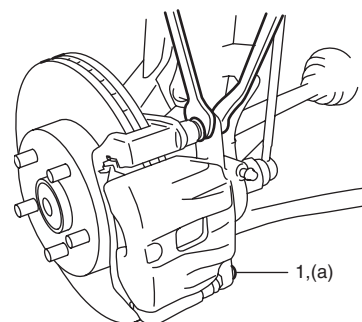


I5JB0A420008-01

- 2) Install brake flexible hose and new hose washer as shown and tighten flexible hose joint bolt (1) to specification.

Tightening torque

Flexible hose joint bolt (a): 23 N·m (2.3 kgf-m, 17.0 lb-ft)

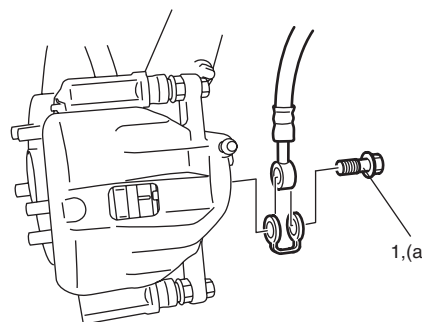

I5JB0A420009-02

4B-6 Front Brakes:

- 3) Install front wheel referring to "Wheel Removal and Installation in Section 2D".
- 4) After completing installation, fill reservoir with specified brake fluid and bleed brake system. Check each installed part for oil leakage and perform brake test.

Front Disc Brake Caliper Disassembly and Assembly

S6JB0B4206006

Disassembly


NOTE

Before disassembly, clean all around caliper with brake fluid.

- 1) Remove disc brake piston with air blown into flexible hose joint bolt installation hole.

⚠ WARNING

Do not apply too highly compressed air which will cause piston to jump out of cylinder. Place a cloth (1) to prevent piston from damage, it should be taken out gradually with moderately compressed air. Do not place your fingers in front of piston when using compressed air.

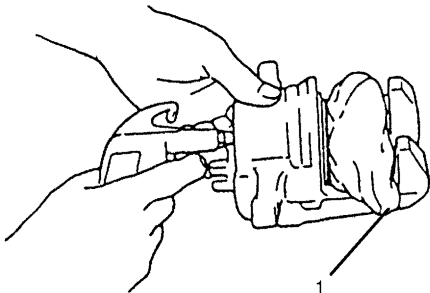

I2RH01420011-01

- 2) Remove cylinder boot.


⚠ CAUTION

Be careful not to damage inside (bore side) of cylinder.

- 3) Remove piston seal using a thin blade like a thickness gauge, etc.

⚠ CAUTION

Be careful not to damage inside (bore side) of cylinder.

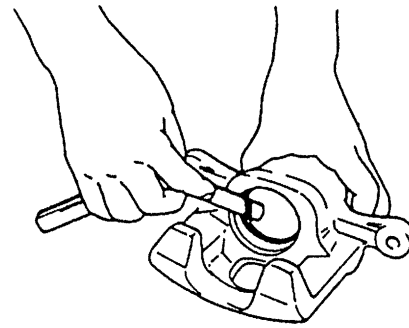

I2RH01420013-01

- 4) Remove bleeder plug and cap from caliper.

Assembly

Reassemble front brake in reverse order of disassembly, noting the following points.

⚠ CAUTION


- Wash each part cleanly before installation in the same fluid as the one used in master cylinder reservoir.
- Never use other fluid or thinner.
- Before installing piston and cylinder boot to cylinder, apply fluid to them.
- After reassembling brake lines, bleed air from them.
- Before installing piston to cylinder, apply rubber grease to inside (bore side) of cylinder.

Piston seal

Piston seal is used to seal piston and cylinder and to adjust clearance between pad and disc. Replace with a new one at every overhaul. Fit piston seal into groove in cylinder taking care not to twist it.

Piston and boot


- 1) Before inserting piston (1) into cylinder, apply brake fluid to new cylinder boot (a) and piston (1). Install cylinder boot onto piston as shown in the figure.

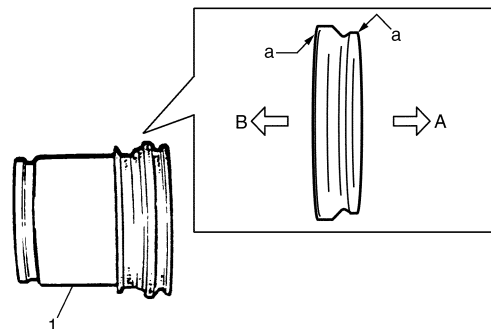

I4RS0B420015-01


- | |
|--|
| A: 1 grooved side directed cylinder side |
| B: 2 grooved side directed cylinder pad side |

- 2) Fit boot as it is in above figure into boot groove in cylinder with fingers.

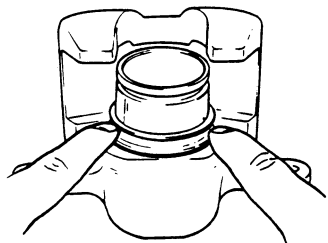

I2RH01420019-01

- 3) Insert piston into cylinder by hand and fit boot in boot groove in piston.

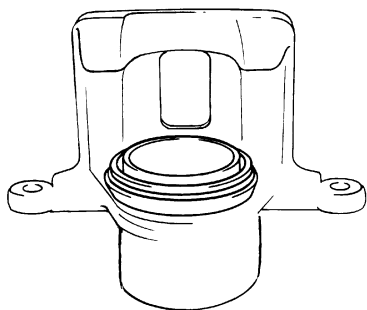


I2RH01420020-01

- 4) To confirm that boot is fitted in its groove in cylinder properly, pull piston out of cylinder a little but do not take it all out.

NOTE

Boot's face (1) should be at the same level from cylinder's face (2) all around.

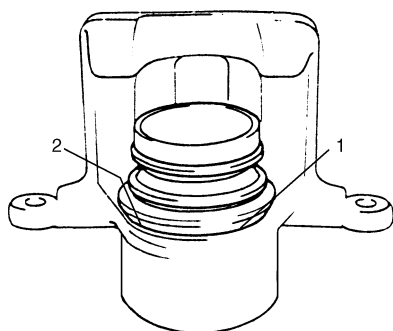

I4RS0A420004-01

- 5) Install piston into cylinder by hand.

Caliper


Before installing caliper (cylinder body) to carrier, check to ensure that guide pin (pin bolt) inserted in each caliper carrier hole can be moved smoothly in thrust direction.

Front Disc Brake Caliper Inspection

S6JB0B4206007

Cylinder Boot


Check boots for breakage, crack and damage. If defective, replace.

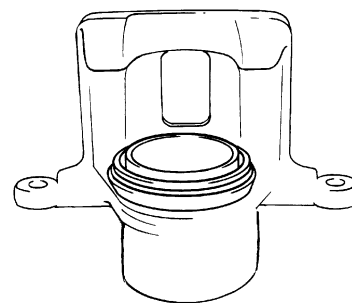

IYSQ01420022-01

Piston Seal

Excessive or uneven wear of pad lining may indicate unsmooth return of the piston. In such a case, replace rubber seal.

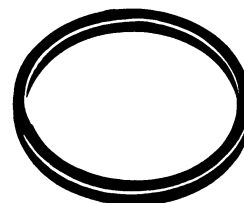

IYSQ01420023-01

Front Brake Disc Removal and Installation

S6JB0B4206008

Removal


- 1) Hoist vehicle and remove front wheel.
- 2) Remove caliper assembly (2) by loosening caliper carrier bolts (1) (2 pcs).

⚠ CAUTION

During removal, be careful not to damage brake flexible hose and not to depress brake pedal.


NOTE

Hang removed caliper with a wire hook or the like so as to prevent brake hose from bending and twisting excessively or being pulled.

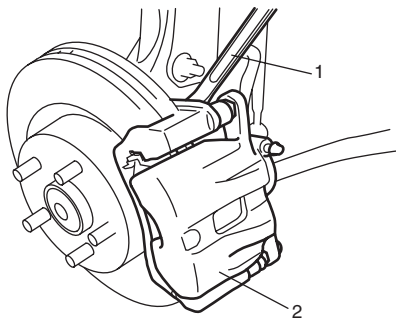

I5JB0A420010-01

- 3) Remove disc by using 8 mm bolts (1) (2 pcs).

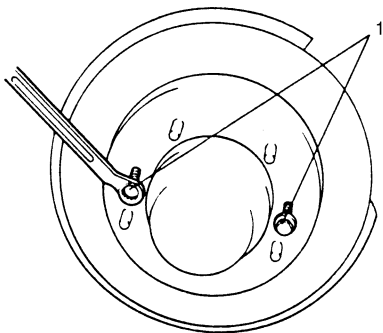


IYSQ01420025-01

Installation

- 1) Install disc to wheel hub.
- 2) Install caliper assembly to steering knuckle.
- 3) Tighten caliper carrier bolts (1) to specification.

Tightening torque

Caliper carrier bolt (a): 85 N·m (8.5 kgf-m, 61.5 lb-ft)

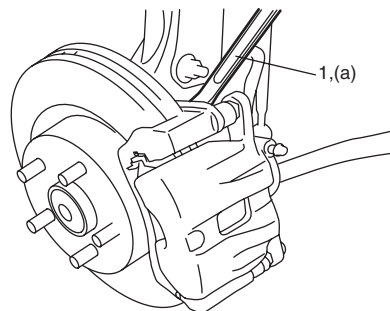

I5JB0A420011-01

- 4) Install front wheel referring to "Wheel Removal and Installation in Section 2D".
- 5) Upon completion of installation, perform brake test.

Front Brake Disc Inspection

S6JB0B4206009

Inspect front brake disc, referring to "Front Brake Disc and Pad Inspection".

Specifications

Tightening Torque Specifications

S6JB0B4207001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lb·ft	
Caliper pin bolt	36	3.6	26.0	🔩 / 🔩
Flexible hose joint bolt	23	2.3	17.0	🔩
Caliper carrier bolt	85	8.5	61.5	🔩

NOTE

The specified tightening torque is also described in the following.
 “Front Disc Brake Components”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Special Tools and Equipment

Recommended Service Material

S6JB0B4208001

NOTE

Required service material is also described in the following.
 “Front Disc Brake Components”

Rear Brakes

General Description

Rear Drum Brake Assembly Construction

S6JB0B4301001

The drum brake assembly has a self shoe clearance adjusting system so that drum-to-shoe clearance is maintained appropriate at all times. Rear brake is a drum type. It uses leading trailing operation when brake pedal is depressed and when parking brake is applied on level road.
For components, refer to “Rear Drum Brake Assembly Components”.

NOTE

Replace all components included in repair kits to service this drum brake. Lubricate parts as specified.


⚠ WARNING

If any hydraulic component is removed or brake line disconnected, bleed the brake system. The torque values specified are for dry, unlubricated fasteners.

Repair Instructions





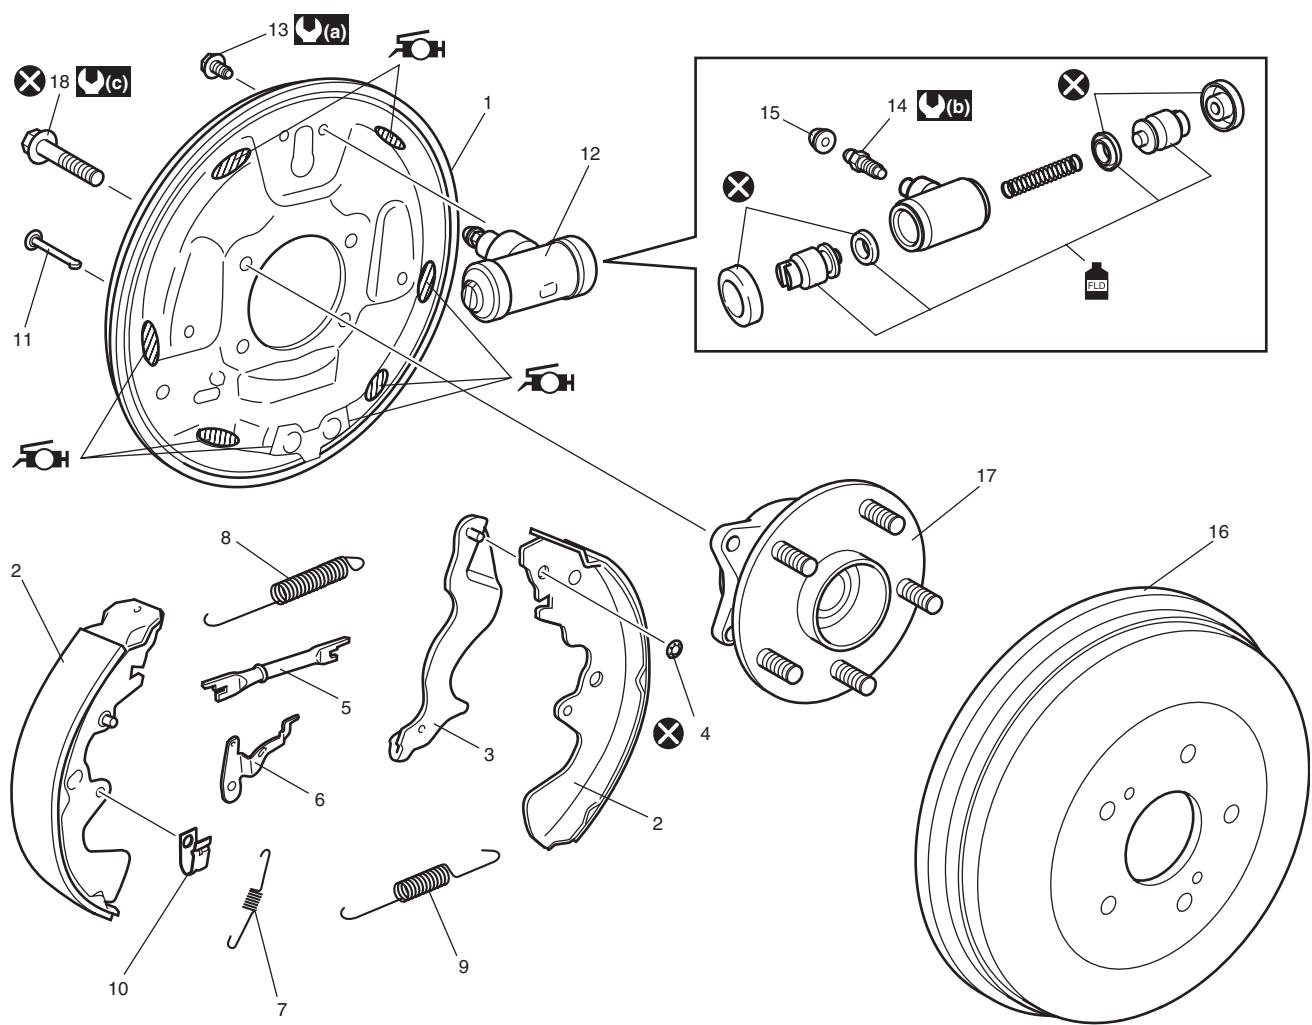

Rear Drum Brake Assembly Components

S6JB0B4306001



I6JB0B430001-04

1. Brake back plate	9. Shoe return lower spring	17. Rear wheel hub assembly
2. Brake shoe	10. Shoe hold down spring	18. Rear wheel hub housing bolt

3. Parking brake shoe lever	11. Shoe hold down pin	 (a) : 13 N·m (1.3 kgf-m, 9.5 lb-ft)
4. Push nut	 12. Wheel cylinder : Apply brake fluid to piston cup.	 (b) : 7 N·m (0.7 kgf-m, 5.0 lb-ft)
5. Brake adjuster (strut)	13. Wheel cylinder mounting bolt	 (c) : 50 N·m (5.0 kgf-m, 36.5 lb-ft)
6. Adjuster pawl lever	14. Rear wheel cylinder bleeder plug	 : Do not reuse.
7. Adjuster spring	15. Bleeder plug cap	 : High-temperature grease
8. Shoe return upper spring	16. Rear brake drum	

Rear Brake Drum Removal and Installation


S6JB0B4306002

NOTE

When replacing brake shoe, replace it on the right and left.

Removal

- 1) Hoist vehicle and remove rear wheel.
- 2) Release parking brake lever.
- 3) Remove brake drum (1) by using 8 mm bolts (2) (2 pcs).

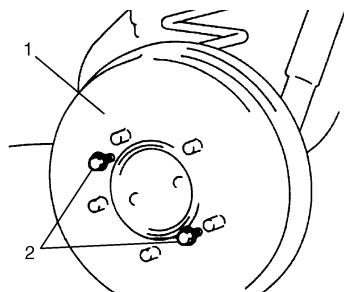


IYSQ01430004-01

Installation

- 1) Before installing brake drum, check outer diameter of brake shoes (1). If it is not within value as specified below, adjust it to specification by turning adjuster (2).

Rear brake shoe outer diameter "a"
253.3 – 253.7 mm (9.961 – 9.980 in.)

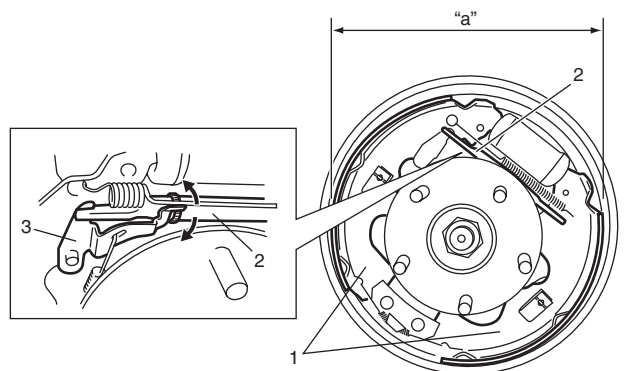

I5JB0A430003-01

3. Adjuster pawl lever

- 2) Install brake drum after making sure that inside of brake drum and brake shoes are free from dirt and oil.
- 3) Upon completion of all jobs, depress brake pedal with about 30 kg (66 lbs) load a few time so as to obtain proper drum-to-shoe clearance. Adjust parking brake cable. For adjustment, refer to "Parking Brake Check and Adjustment in Section 4D".
- 4) Install rear wheel referring to "Wheel Removal and Installation in Section 2D".
- 5) Check to ensure that brake drum is free from dragging and proper braking is obtained. Then remove vehicle from hoist and perform brake test (foot brake and parking brake).

Rear Brake Drum and Shoe Inspection

S6JB0B4306003

Brake Drum


Inspect brake drum for wear.

If drum inner diameter exceeds the limit or uneven or stepped wear is excessive, replace the drum.

Rear brake drum inner diameter "a"

Standard: 254 mm (10.00 in.)

Limit: 256 mm (10.07 in.)

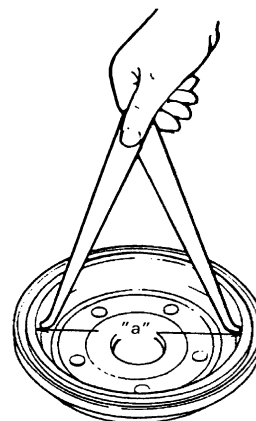

IYSQ01430007-01

4C-3 Rear Brakes:

Cracked, scored, or grooved drum

A cracked, drum is unsafe for further service and must be replaced.

Do not attempt to weld a cracked drum.

Smooth up any slight scores. Heavy or extensive scoring will cause excessive brake lining wear and it will probably be necessary to resurface drum braking surface.

If brake linings are slightly worn and drum is grooved, drum should be polished with fine emery cloth but should not be turned.

NOTE

When drum is removed, visually inspect wheel cylinder for brake fluid leakage. Correct leaky point, if any.

Brake Shoe

⚠ CAUTION


Never polish lining with sandpaper. If lining is polished with sandpaper, hard particles of sandpaper will be deposited in lining and may damage drum. When it is required to correct lining, replace it with a new one.

Measure the minimum thickness of brake lining (1). Also, check surface of lining for hardening, excessive wear and oil.

Rear brake shoe lining thickness "a"

Standard: 4.5 mm (0.18 in.)

Limit: 1.0 mm (0.04 in.)

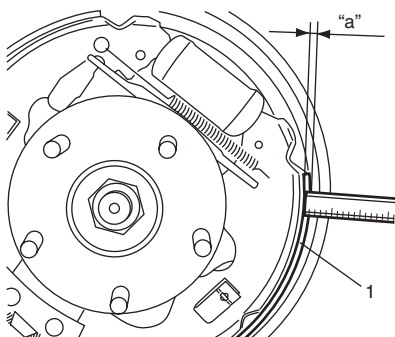

I5JB0A430004-02

Rear Brake Shoe On-Vehicle Check


S6JB0B4306004

Inspection should be carried out on the following points after brake pedal travel (pedal to silencer clearance) check as described on "Excessive Pedal Travel Check in Section 4A", even when it is more than specification. Amount of brake shoe wear can be checked as follows.

- 1) Hoist vehicle.
- 2) Remove rubber plug (1) from brake back plate.
- 3) Through hole of back plate, visually check for thickness of brake shoe lining (2). If lining thickness less than specified wear limit, replace with new brake shoes.

Lining thickness "a"

Service limit: 1.0 mm (0.04 in.)

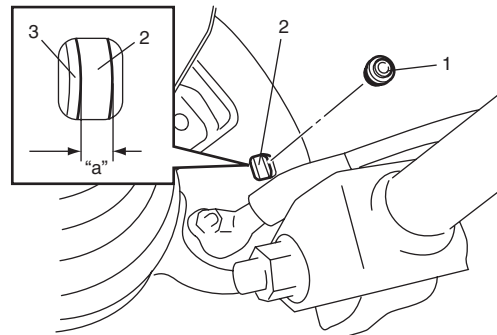

I5JB0A430005-01

3. Brake shoe rim

Rear Brake Shoe Removal and Installation


S6JB0B4306005

⚠ WARNING

Use special care when installing brake shoe return spring. Failure in its proper installation may allow it to springback and cause personal injury.

Removal


- 1) Remove brake drum referring to "Rear Brake Drum Removal and Installation".
- 2) Fully turn adjuster (1) to reduce brake shoe adjuster.

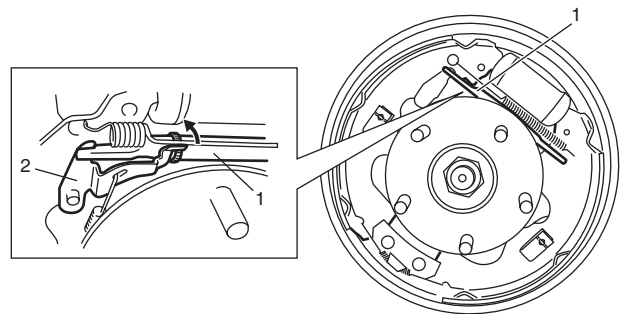

I5JB0A430019-01


2. Adjuster pawl lever

- 3) Remove shoe hold down springs (1) by turning shoe hold down pins (2).

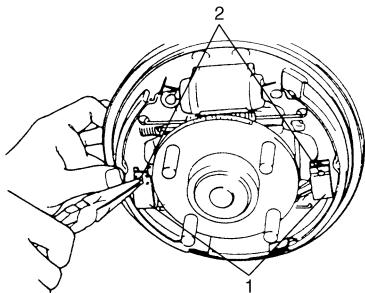


I2RH01430012-01

- 4) Remove upper shoe return spring (1), brake adjuster (2), adjuster pawl lever (3) and spring.
5) Remove brake shoes (4) and lower shoe return spring (5).

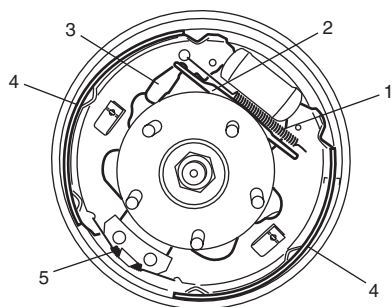


I5JB0A430006-01

- 6) Disconnect parking brake shoe lever (1) from parking brake cable (2).

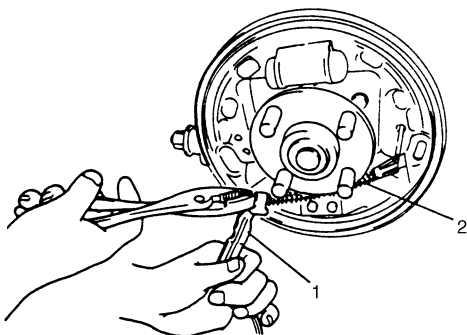

I2RH01430013-01


- 7) Remove push nut (1).
8) Remove parking brake shoe lever (2) from brake shoe (3).

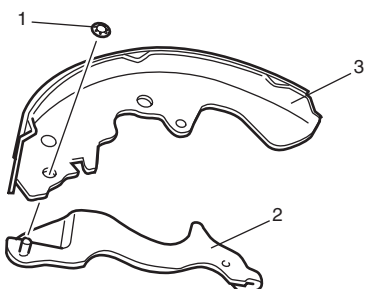

I5JB0A430007-01


Installation

- 1) Assemble parts in reverse order of removal procedure.
2) Before installing rear brake shoe to brake back plate, clean brake back plate and apply high-temperature grease to "a" on which shoe rims rest.

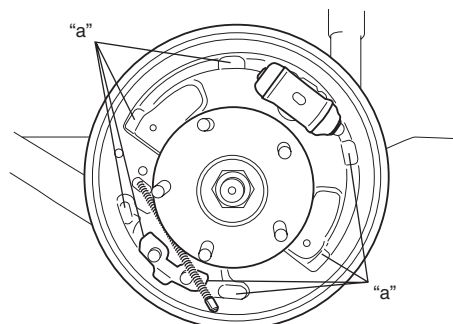


I6JB0B430002-02

- 3) Before install brake shoe, be sure to fully turn brake adjuster to reduce.
4) Install shoe hold down springs (1) by pushing them down in place and turning hold down pins (2).

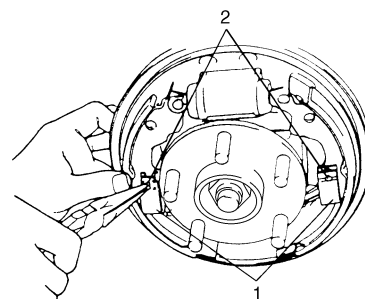

I5JB0A430010-01

- 5) Install brake adjuster (2) and upper shoe return spring (1).
6) Install adjuster pawl lever (3) and adjuster spring.

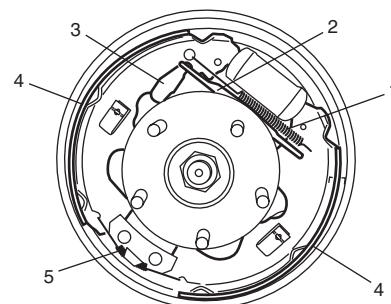

I5JB0A430006-01

- | |
|-----------------------------|
| 4. Brake shoe |
| 5. Lower shoe return spring |


- 7) For procedure hereafter, refer to "Rear Brake Drum Removal and Installation".

Rear Brake Shoe Inspection

S6JB0B4306006

Parking Brake Shoe Lever

Inspect brake shoe lever for free movement against brake shoe web. If defective, correct or replace.

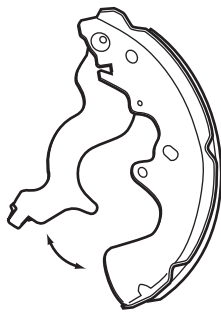


I5JB0A430009-02

Brake Adjuster

Check thread or ratchet of adjuster for wear, sticking and corrosion.

 If found defective, replace brake adjuster.




I5JB0A430011-01

Springs

Inspect for damage or weakening.

Inspect each part with arrow for rust. If found defective, replace.

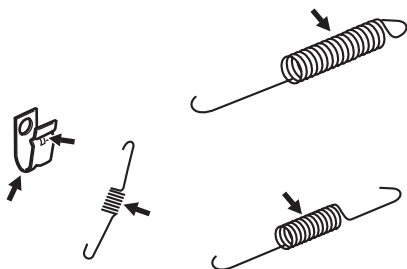

I5JB0A430012-02

Brake Shoe



Refer to "Rear Brake Drum and Shoe Inspection".

Wheel Cylinder Removal and Installation

S6JB0B4306007

Removal

- 1) Remove brake drum referring to "Rear Brake Drum Removal and Installation".
- 2) Remove brake shoe referring to "Rear Brake Shoe Removal and Installation".
- 3) Loosen brake pipe flare nut (1) but only within the extent that fluid does not leak.
- 4) Remove wheel cylinder mounting bolts (2). Disconnect brake pipe from wheel cylinder and put wheel cylinder bleeder plug cap (3) onto pipe to prevent fluid from spilling.

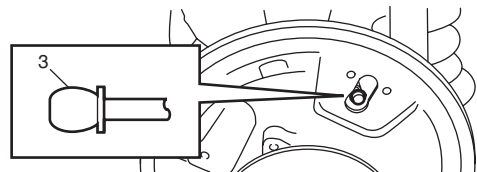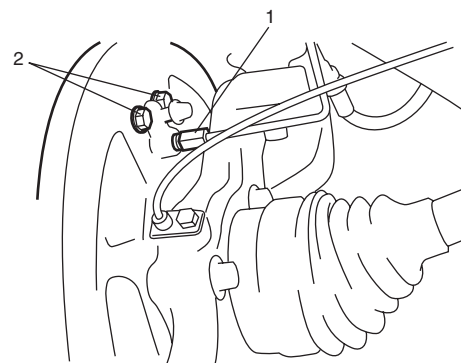

I5JB0A430013-01

Installation

- 1) Fit wheel cylinder to brake back plate, take off bleeder plug cap from brake pipe and connect pipe to wheel cylinder just enough to prevent fluid from leaking.
- 2) Tighten wheel cylinder mounting bolts to brake back plate (1) to specified torque.

Tightening torque


Wheel cylinder mounting bolt (a): 13 N·m (1.3 kgf-m, 9.5 lb-ft)

- 3) Tighten flare nut of brake pipe (2) to specified torque.

Tightening torque

Brake pipe flare nut (b): 16 N·m (1.6 kgf-m, 12.0 lb-ft)

- 4) Install bleeder plug cap (3) taken off from pipe back to bleeder plug.

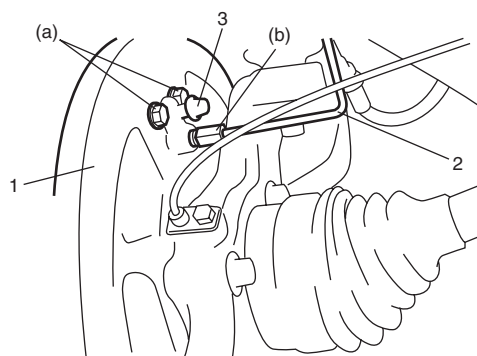

I5JB0A430014-01

- 5) Install brake shoe referring to "Rear Brake Shoe Removal and Installation".
- 6) Install brake drum referring to step 1) to 2) of "Installation" in "Rear Brake Drum Removal and Installation".
- 7) Fill reservoir with brake fluid and bleed brake system. For bleeding operation refer to "Air Bleeding of Brake System in Section 4A".
- 8) Adjust, check brake and install rear wheel referring to step 3) to 5) of "Installation" in "Rear Brake Drum Removal and Installation".


Wheel Cylinder Inspection

S6JB0B4306008

Inspect wheel cylinder disassembled parts for wear, cracks, corrosion or damage.

NOTE

Clean wheel cylinder components with brake fluid.

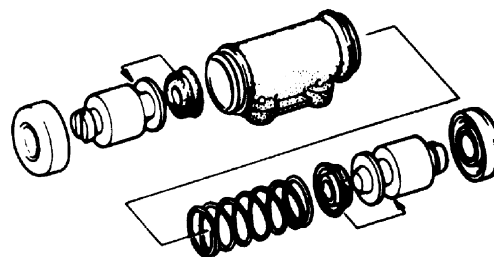

IYSQ01430019-01

Rear Brake Back Plate Removal and Installation

S6JB0B4306009

Refer to "Rear Wheel Hub Assembly Removal and Installation in Section 2C".

Specifications

Tightening Torque Specifications

S6JB0B4307001

Fastening part	Tightening torque			Note
	N·m	kgf-m	lb-ft	
Wheel cylinder mounting bolt	13	1.3	9.5	⌚
Brake pipe flare nut	16	1.6	12.0	⌚

NOTE

The specified tightening torque is also described in the following.
"Rear Drum Brake Assembly Components"

Reference:

For the tightening torque of fastener not specified in this section, refer to "Fastener Information in Section 0A".

Special Tools and Equipment

Recommended Service Material

S6JB0B4308001

NOTE


Required service material is also described in the following.
"Rear Drum Brake Assembly Components"

Parking Brake




Component Location

Parking Brake Cable Location

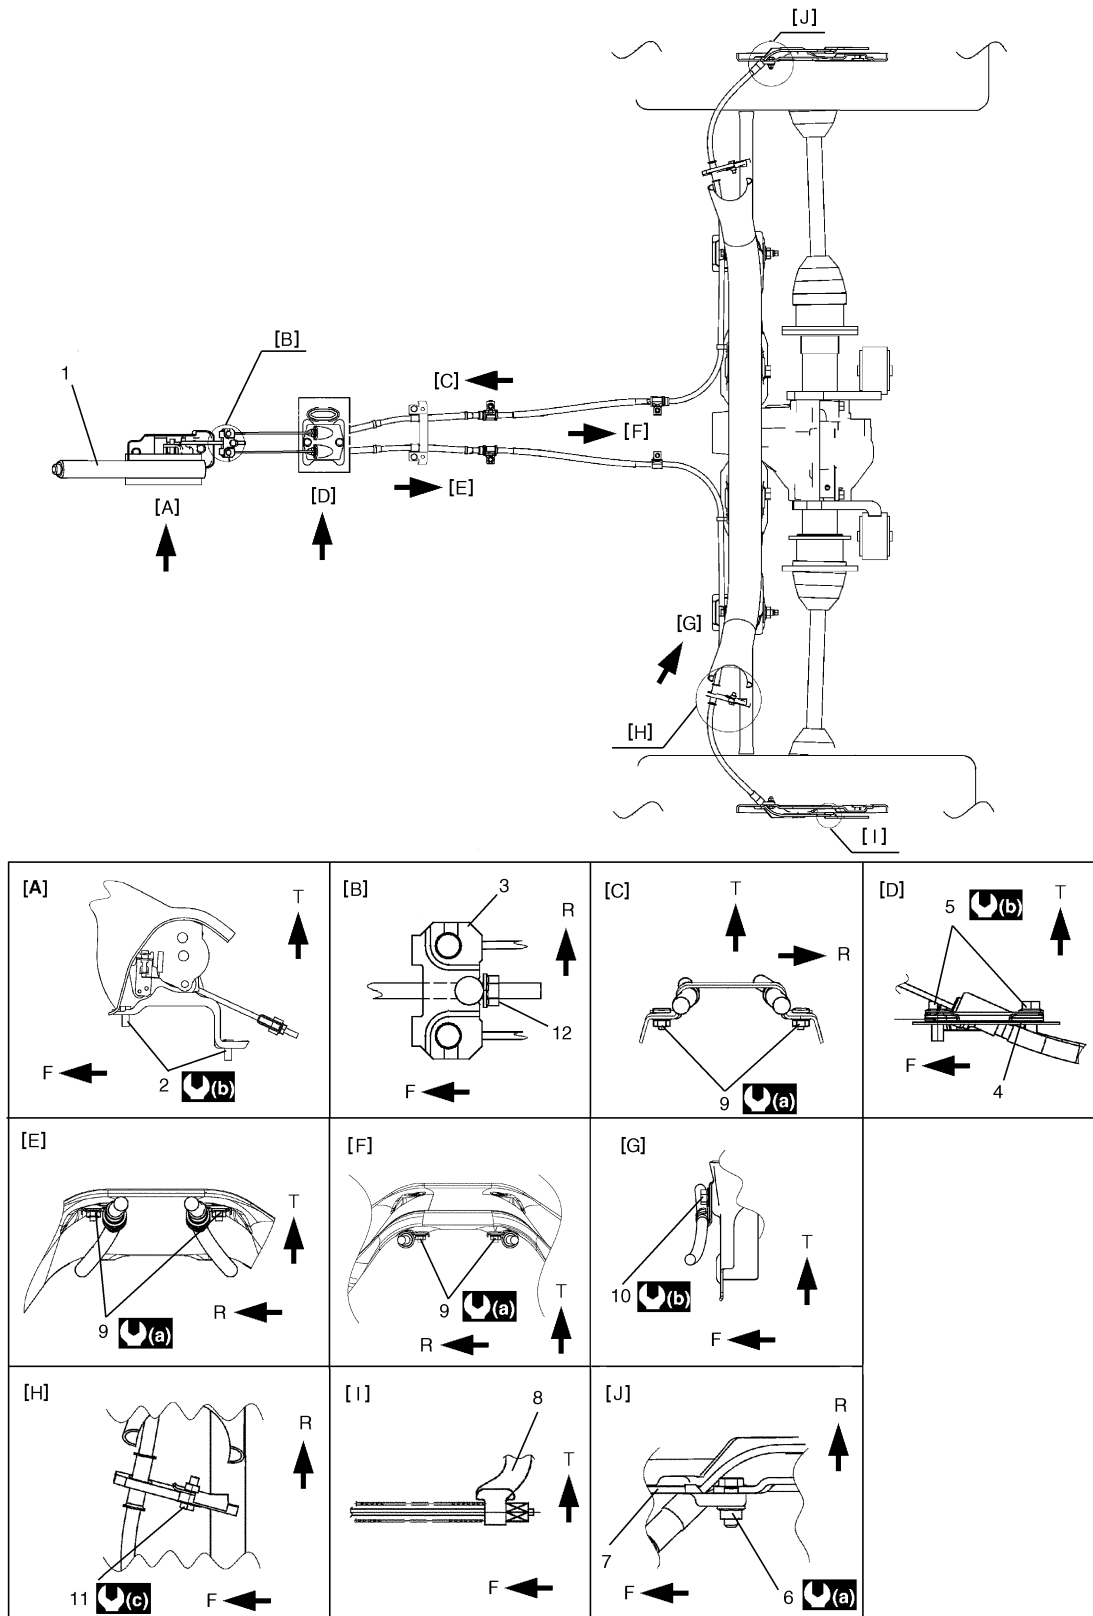S6JB0B4403001



I6JB0B440001-01

T: Top side	3. Equalizer	8. Parking brake shoe lever	 (a) : 11 N·m (1.1 kgf-m, 8.0 lb-ft)
F: Front side	4. Parking cable bracket	9. Parking cable clamp nut	 (b) : 25 N·m (2.5 kgf-m, 18.0 b-ft)
R: Right side	5. Parking cable bracket bolt	10. Parking cable clamp bolt	 (c) : 10 N·m (1.0 kgf-m, 7.5 lb-ft)
1. Parking brake lever assembly	6. Parking cable cap nut	11. Parking cable hanger bolt	
2. Parking brake lever bolt	7. Brake back plate	12. Adjusting nut	

Repair Instructions

Parking Brake Check and Adjustment

S6JB0B4406001

Check

Hold center of parking brake lever grip and pull it up with 200 N (20 kg, 44 lbs) force.

With parking brake lever pulled up as shown, count ratchet notches.

There should be 5 to 7 notches.

Also, check if both right and left rear wheels are locked firmly.


To count number of notches easily, listen to click sounds that ratchet makes while pulling parking brake lever without pressing its button.

One click sound corresponds to one notch.

If number of notches is out of specification, adjust cable by referring to adjustment procedure to obtain specified parking brake stroke.

NOTE

Check tooth tip of each notch for damage or wear. If any damage or wear is found, replace parking brake lever.

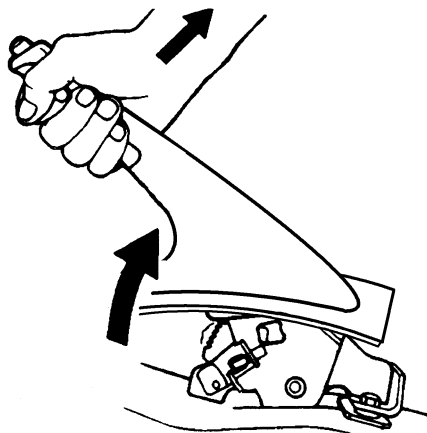

I3JA01440003-01

Adjustment

NOTE

Make sure for the following conditions before cable adjustment.

- No air is trapped in brake system.
- Brake pedal travel is proper.
- Brake pedal has been depressed a few times with about 300 N (30 kg, 66 lbs) load.
- If parking brake cable is replaced with new one, pull up parking brake lever a few times with about 500 N (50 kg, 110 lbs) force.
- Rear brake shoes are not worn beyond limit, and self adjusting mechanism operates properly.


After confirming that above 5 conditions are all satisfied, adjust parking brake lever stroke by loosening or tightening adjusting nut (1).

NOTE

Check brake drum for dragging after adjustment.

Parking brake stroke

When lever is pulled up at 200 N (20 kg, 44 lbs): 5 to 7 notches

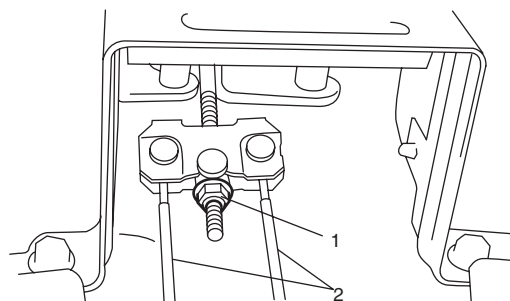

I5JB0A430002-02

2. Brake cable

Parking Brake Lever Removal and Installation

S6JB0B4406002


⚠ CAUTION

For ESP® model, the yaw rate / G sensor is set alongside the parking brake lever. When removing and installing the parking brake lever, do not use an impact wrench.

Otherwise, the yaw rate / G sensor may be damaged by shock of impact wrench.

Removal


- 1) Block vehicle wheels and release parking brake lever.
- 2) Remove console box.
- 3) Disconnect lead wire of parking brake switch at coupler.
- 4) Remove parking brake cable adjusting nut (1).

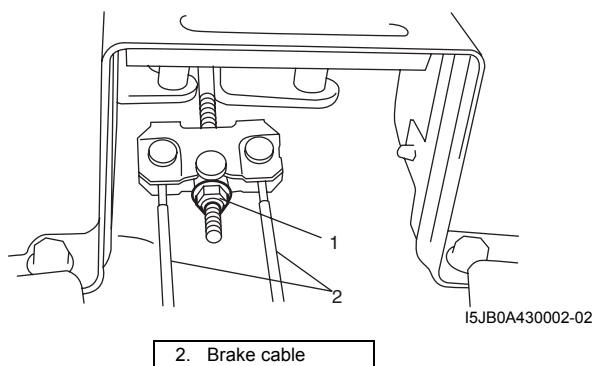

- 5) Remove parking brake lever bolts (4) and then remove parking brake lever assembly (1) from equalizer (3).
- 6) Remove equalizer (3) from parking brake cable (2).

NOTE

Don't disassemble parking brake lever switch. It must be removed and installed as a complete switch assembly.

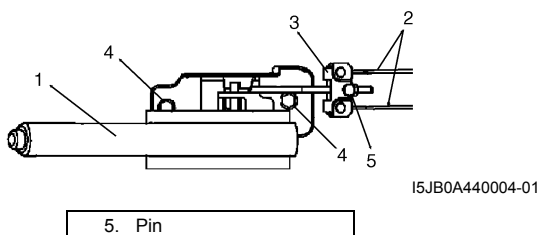

Installation

Install in reverse order of removal procedure, noting the following points.


- Check equalizer inclined angle.

Equalizer inclined angle

"a": within 15 degrees

Tightening torque

Parking brake lever bolt (a): 25 N·m (2.5 kgf-m, 18.0 lb-ft)

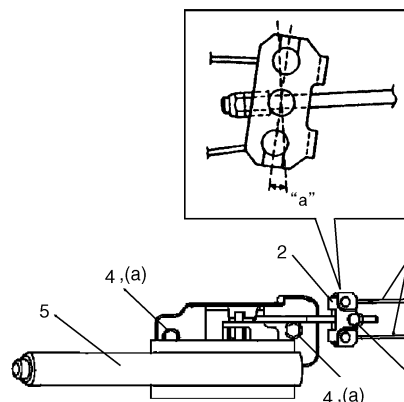

1. Parking brake cable	4. Parking brake lever bolt
2. Equalizer	5. Parking brake lever
3. Pin	

- 1) After all parts are installed, parking brake lever needs to be adjusted. Refer to "Parking Brake Check and Adjustment".
- 2) Check brake drum for dragging and brake system for proper performance. After removing vehicle from hoist, brake test should be performed.

Parking Brake Cable Removal and Installation

S6JB0B4406003

Removal**NOTE**

When it is necessary to remove both right and left parking brake cables, repeat the following steps 4) to 6) on right and left wheels.

- 1) Hoist vehicle.
- 2) Remove wheel.
- 3) Disconnect parking brake cable from equalizer (parking brake lever) and clamps.
- 4) Remove brake drum. Refer to "Rear Brake Drum Removal and Installation in Section 4C".
- 5) Disconnect parking brake cable from brake shoe lever referring to "Rear Brake Shoe Removal and Installation in Section 4C".
- 6) Remove parking brake cable and parking cable bracket.


Installation

Install it by reversing removal procedure, noting the following points.

- Install clamps properly referring to "Parking Brake Cable Location".
- Tighten bolts and nuts to specified torque referring to "Parking Brake Cable Location".
- Adjust parking brake cable. Refer to "Parking Brake Check and Adjustment".
- Check brake drum for dragging and brake system for proper performance. Brake test should be performed.

Specifications**Tightening Torque Specifications**

S6JB0B4407001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lb·ft	
Parking brake lever bolt	25	2.5	18.0	

NOTE

The specified tightening torque is also described in the following.
"Parking Brake Cable Location"

Reference:

For the tightening torque of fastener not specified in this section, refer to "Fastener Information in Section 0A".

ABS


Precautions

Precautions in Diagnosing Troubles

S6JB0B4500001

To ensure that the trouble diagnosis is done accurately and smoothly, observe the following and follow “ABS Check”.


- If the vehicles was operated in any of the following ways, ABS warning light may light momentarily but this does not indicate anything abnormal in ABS.
 - The vehicle was driven with parking brake pulled.
 - The vehicle was driven with brake dragging.
 - The vehicle was stuck in mud, sand, etc.
 - Wheel spin occurred while driving.
 - Wheel(s) was rotated while the vehicle was jacked up.
- Be sure to read “Precautions for Electrical Circuit Service in Section 00” before inspection and observe what is written there.
- Be sure to use the trouble diagnosis procedure as described in “ABS Check”. Failure to follow it may result in incorrect diagnosis. (Some other diagnosis trouble code may be stored by mistake in the memory of ABS (ESP®) control module during inspection.)
- When disconnecting ABS (ESP®) hydraulic unit / control module connector (1), pull down lock lever (2) of connector.
When connecting, set the connector on ABS (ESP®) hydraulic unit / control module assembly and pull up the lock lever (2) until it locks.

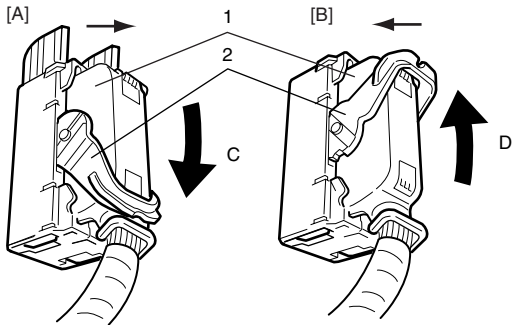

I4RH01450001-01

[A]: Disconnect	C: Pull down to disconnect
[B]: Connect	D: Pull up to connect

- When disconnecting ESP® hydraulic unit / control module connector (1), pull up lock lever (2) of connector.
When connecting, set the connector on ESP® hydraulic unit / control module assembly and pull down the lock lever (2) until it locks.

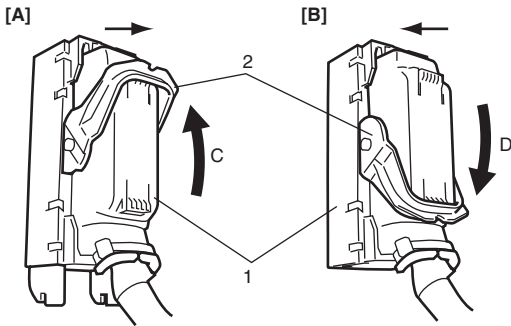

I6JB01450001-02

[A]: Disconnect	C: Pull up to disconnect
[B]: Connect	D: Pull down to connect

- Communication of ECM, TCM (A/T model), BCM, ABS (ESP®) control module, 4WD control module (if equipped), keyless start control module (if equipped) and combination meter is established by CAN (Controller Area Network).
Therefore, be sure to read “Precaution for CAN Communication System in Section 00” before inspection and handle CAN communication line.

Precautions in On-Vehicle Service

S6JB0B4500002

When connector is connected to ABS (ESP®) hydraulic unit / control module assembly, do not disconnect connectors of sensors with ignition switch ON. Otherwise, DTC will be set in ABS (ESP®) control module.

Precautions in Hydraulic Unit Operation Check

S6JB0B4500003

ABS (ESP®) hydraulic unit / control module assembly function is checked by correct wheel release condition when brake pressure is depressurized using SUZUKI scan tool. The hydraulic unit operation check referring to “Hydraulic Unit Operation Check” should be performed to confirm the correct brake pipe connection in the following cases.

- ABS (ESP®) hydraulic unit / control module ABS (ESP®) hydraulic unit / control module assembly was replaced.
- Brake pipe and/or hose were replaced.

General Description

ABS Description

S6JB0B4501001

The ABS (Antilock Brake System) controls the fluid pressure applied to the wheel cylinder of each brake from the master cylinder so that each wheel is not locked even when hard braking is applied.

This ABS has also the following function.

While braking is applied, but before ABS control becomes effective, braking force is distributed between the front and rear so as to prevent the rear wheels from being locked too early for better stability of the vehicle.

The main component parts of this ABS include the following parts in addition to those of the conventional brake system.

- Wheel speed sensor which senses revolution speed of each wheel and outputs its signal.
- ABS warning light which lights to inform abnormality when system fails to operate properly.
- ABS (ESP®) hydraulic unit / control module assembly is incorporated ABS (ESP®) control module, ABS hydraulic unit (actuator assembly), solenoid valve power supply driver (transistor), solenoid valve driver (transistor), pump motor driver (transistor).
 - ABS (ESP®) control module which sends operation signal to ABS hydraulic unit to control fluid pressure applied to each wheel cylinder based on signal from each wheel speed sensor so as to prevent wheel from locking.
 - ABS hydraulic unit which operates according to signal from ABS (ESP®) control module to control fluid pressure applied to wheel cylinder of each 4 wheels.
 - Solenoid valve power supply driver (transistor) which supplies power to solenoid valve in ABS hydraulic unit.
 - Solenoid valve driver (transistor) which controls each solenoid valves in ABS hydraulic unit.
 - Pump motor driver (transistor) which supplies power to pump motor in ABS hydraulic unit.

This ABS is equipped with Electronic Brake force Distribution (EBD) system that controls a fluid pressure of rear wheels to best condition, which is the same function as that of proportioning valve, by the signal from wheel sensor independently of change of load due to load capacity and so on. And if the EBD system fails to operate properly, the brake warning light lights to inform abnormality.


ABS (ESP®) hydraulic unit / control module Assembly Description

S6JB0B4501002

ABS (ESP®) control module is a component of ABS (ESP®) hydraulic unit / control module assembly and has the following functions.

Self-Diagnosis Function

ABS (ESP®) control module diagnoses conditions of the system component parts (whether or not there is any abnormality) all the time and indicates the results (warning of abnormality occurrence and DTC) through the ABS warning light (1) as described.

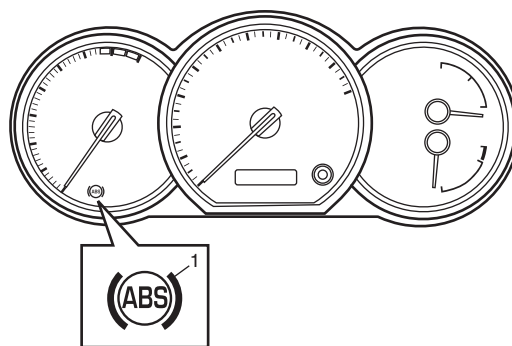

I5JB0A450001-01

- When ignition switch is turned ON, ABS warning light lights for 2 seconds to check its circuit.
- When no abnormality has been detected (the system is in good condition), ABS warning light turns OFF after 2 seconds.
- When an abnormality in the system is detected, ABS warning light lights and the area where that abnormality lies is stored in the memory of EEPROM in ABS (ESP®) control module.

CAN Communication System Description

S6JB0B4501003

Refer to “CAN Communication System Description in Section 1A” for CAN communication system description.
ABS communicates control data with each control module as follows.

ABS Transmission Data

				ECM	Combination Meter	4WD control module (if equipped)
ABS hydraulic unit / control module assembly	<div>Transmit</div>	DATA	Torque request signal	<div></div>		
			Wheel speed signal	<div></div>	<div></div>	<div></div>
			ABS active	<div></div>		<div></div>
			ABS indication on		<div></div>	
			EBD indication on		<div></div>	
			ABS diagnostic trouble codes		<div></div>	

I5JB0A450002-03

ABS Reception Data


				ECM
ABS hydraulic unit / control module assembly	<div>Receive</div>	DATA	Brake pedal switch active	<div></div>

I5JB0A450003-03

Schematic and Routing Diagram



ABS Schematic

S6JB0B4502001

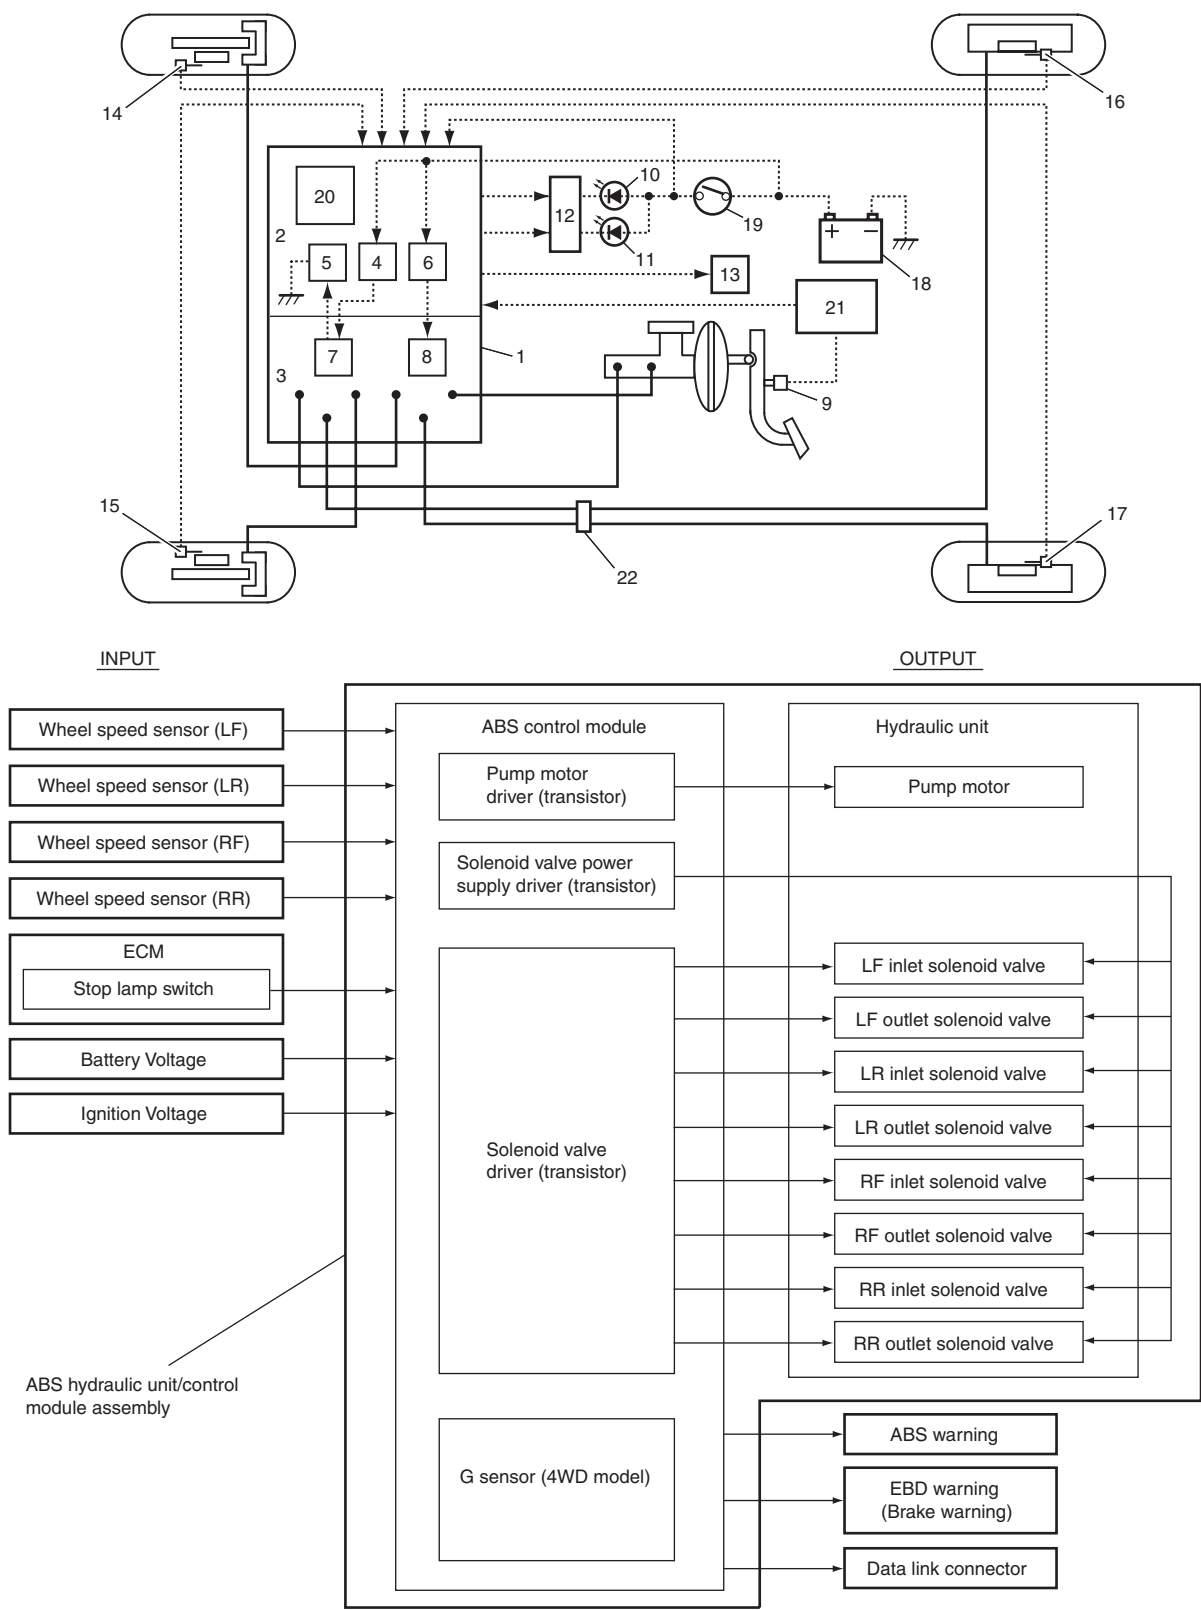

I6JB0B450001-02

1. ABS (ESP®) hydraulic unit / control module assembly	9. Brake light switch	17. Wheel speed sensor (Left-rear)
2. ABS (ESP®) control module	10. ABS warning light	18. Battery
3. ABS (ESP®) hydraulic unit	11. EBD warning light (Brake warning light)	19. Ignition switch
4. Solenoid valve power supply driver (transistor)	12. Light driver module	20. G sensor (4WD model)

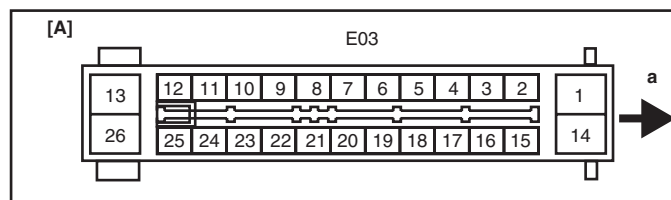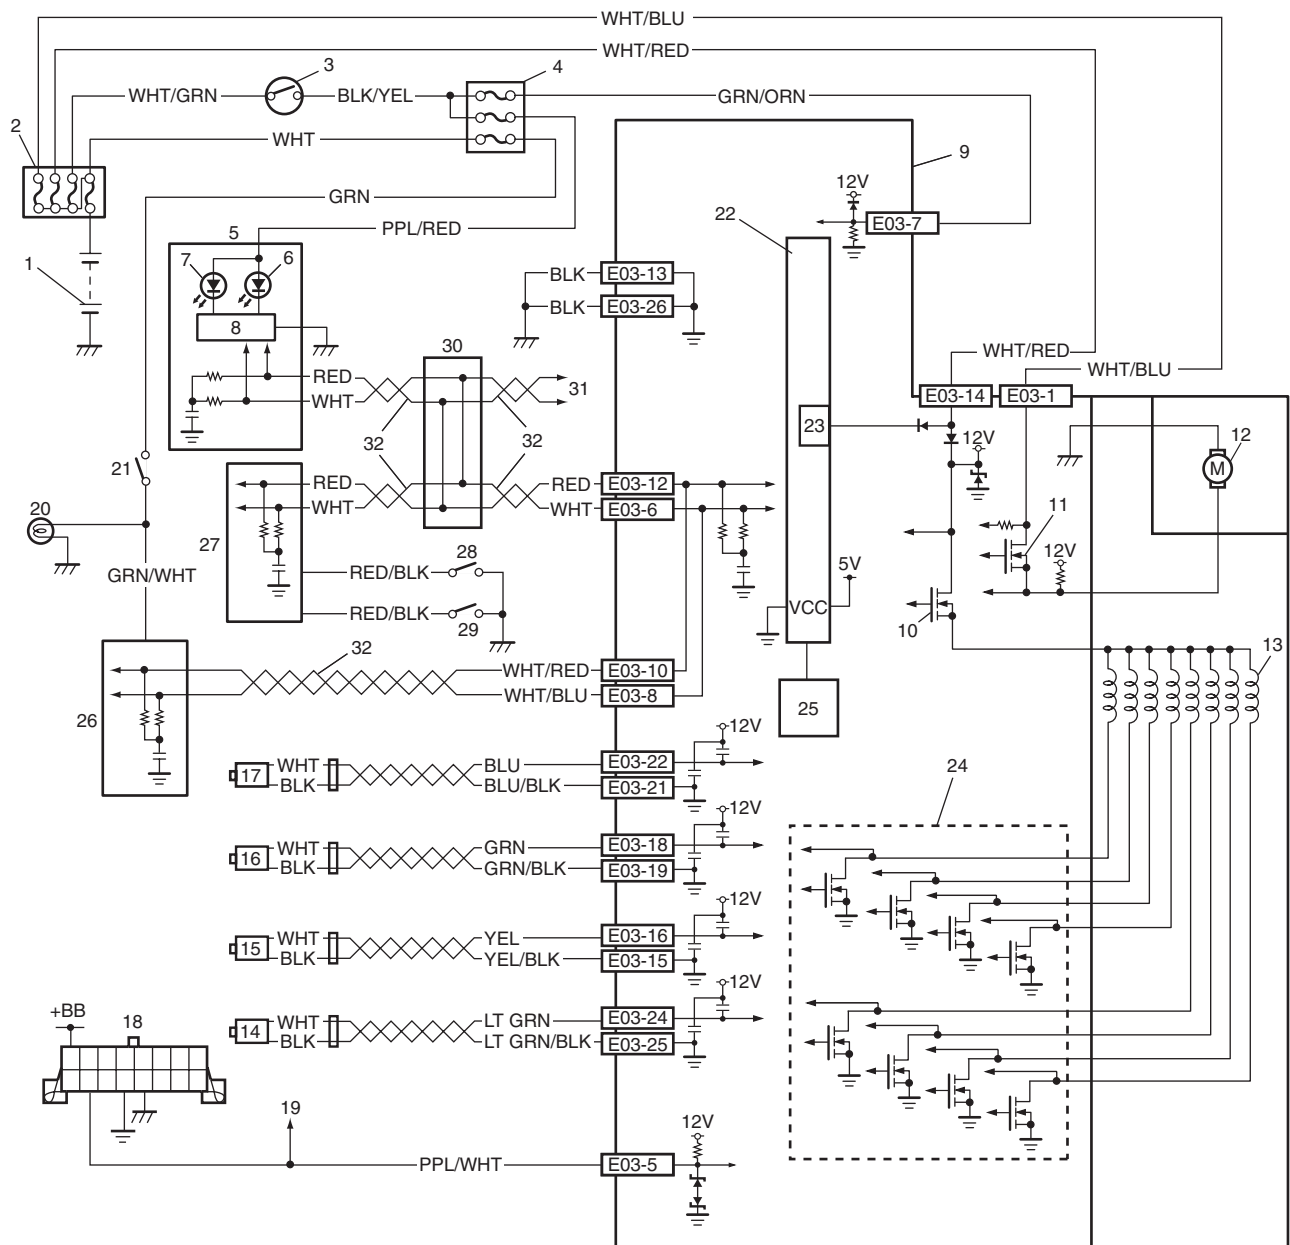

[A]: Terminal arrangement of ABS (ESP®) hydraulic unit / control module assembly	11. ABS pump motor driver (transistor)	23. Internal memory
a: Upside	12. Pump motor	24. Solenoid valve driver (transistor)
1. Battery	13. Solenoid valves	25. G sensor (4WD model)
2. Main fuse box	14. Right-rear wheel speed sensor	26. ECM
3. Ignition switch	15. Left-rear wheel speed sensor	27. BCM

4. Circuit fuse box	16. Right-front wheel speed sensor	28. Brake fluid level switch
5. Combination meter	17. Left-front wheel speed sensor	29. Parking brake switch
6. ABS warning light	18. Data link connector	30. CAN junction
7. EBD warning light (Brake warning light)	19. To ECM, TCM, SDM, BCM and 4WD control module	31. To TCM, 4WD control module and keyless start control module
8. Light driver module	20. Stop light	32. CAN communication line
9. ABS (ESP®) hydraulic unit / control module assembly	21. Brake light switch	
10. Solenoid valve power supply driver (transistor)	22. Power control unit	

	Terminal	Wire color	Circuit
E03	1	WHT/BLU	ABS pump motor driver (Transistor)
	2	—	—
	3	—	—
	4	—	—
	5	PPL/WHT	DATA link connector
	6	WHT	CAN communication line (low) for combination meter
	7	GRN/ORN	Ignition switch
	8	WHT/BLU	CAN communication line (low) for ECM
	9	—	—
	10	WHT/RED	CAN communication line (high) for ECM
	11	—	—
	12	RED	CAN communication line (high) for combination meter
	13	BLK	Ground
	14	WHT/RED	Solenoid valve power supply driver (Transistor)
	15	YEL/BLK	Left-rear wheel speed sensor (—)
	16	YEL	Left-rear wheel speed sensor (+)
	17	—	—
	18	GRN	Right-front wheel speed sensor (+)
	19	GRN/BLK	Right-front wheel speed sensor (—)
	20	—	—
	21	BLU/BLK	Left-front wheel speed sensor (—)
	22	BLU	Left-front wheel speed sensor (+)
	23	—	—
	24	LT GRN	Right-rear wheel speed sensor (+)
	25	LT GRN/BLK	Right-rear wheel speed sensor (—)
	26	BLK	Ground


Component Location

ABS Components Location

S6JB0B4503001

NOTE

As for the difference of RHD model and LHD model, the location of the combination meter, data link connector, brake light switch and the brake master cylinder assembly only changes.

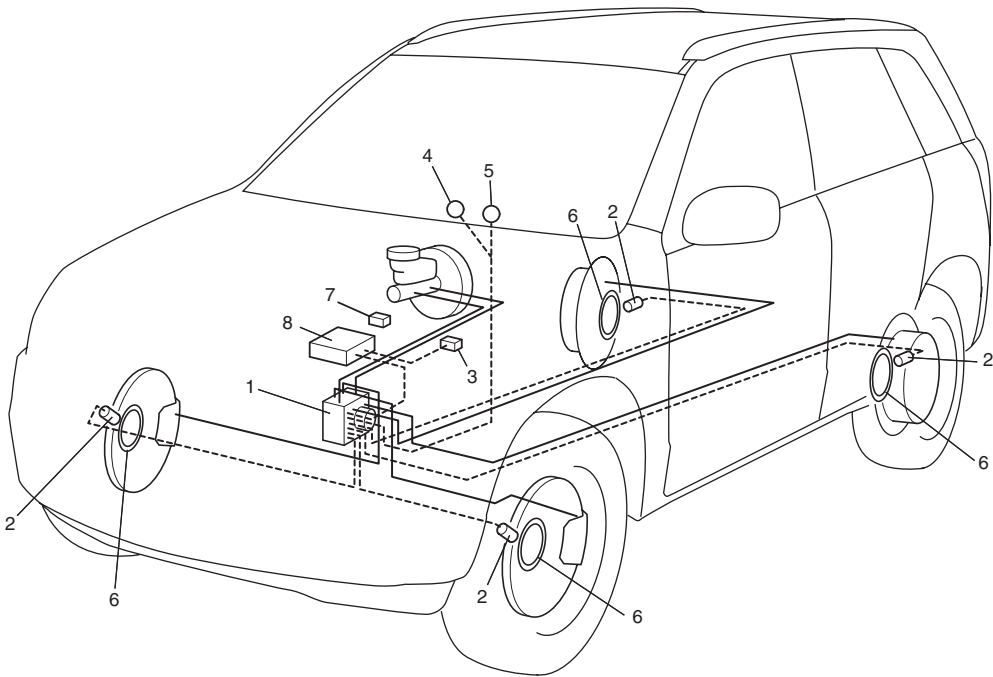

I5JB0A450006-01

1. ABS (ESP®) hydraulic unit / control module assembly	5. EBD warning light (Brake warning light)
2. Wheel speed sensors	6. Wheel encoder (included in wheel hub assembly)
3. Brake light switch	7. Data link connector
4. ABS warning light	8. ECM

Diagnostic Information and Procedures

ABS Check

S6JB0B4504001

Refer to the following items for the details of each step.

Step	Action	Yes	No
1	🔧 Malfunction analysis 1) Perform "Customer complaint analysis: ". 2) Perform "Problem symptom confirmation: ". 3) Perform "DTC check, record and clearance: " and recheck DTC. <i>Is there any malfunction DTC?</i>	Go to Step 4.	Go to Step 2.
2	🔧 Driving test 1) Perform "Step 2: Driving Test: ". <i>Is trouble symptom identified?</i>	Go to Step 3.	Go to Step 6.
3	🔧 DTC check 1) Perform "DTC Check". <i>Is it malfunction code?</i>	Go to Step 4.	Go to Step 5.
4	🔧 ABS check 1) Inspect and repair referring to applicable DTC flow. <i>Does trouble recur?</i>	Go to Step 5.	Go to Step 7.
5	🔧 Brakes diagnosis 1) Inspect and repair referring to "Brakes Symptom Diagnosis in Section 4A". <i>Does trouble recur?</i>	Go to Step 3.	Go to Step 7.
6	🔧 Check for intermittent problem 1) Check intermittent troubles referring to "Intermittent and Poor Connection Inspection in Section 00" and related circuit of trouble code recorded in Step 1. <i>Does trouble recur?</i>	Go to Step 4.	Go to Step 7.
7	🔧 Final confirmation test 1) Perform "Step 7: Final Confirmation Test: ". <i>Does trouble recur?</i>	Go to Step 3.	End.

Step 1: Malfunction Analysis**Customer complaint analysis**

Record details of the problem (failure, complaint) and how it occurred as described by the customer.

For this purpose, use of such a questionnaire form as shown in the following will facilitate collecting information to the point required for proper analysis and diagnosis.

Customer questionnaire (Example)

Customer's name:	Model:	VIN:	
Date of issue:	Date of Reg:	Date of problem:	Mileage:

Problem Symptoms	<ul style="list-style-type: none"> ● ABS warning lamp abnormal: fails to turn on/fails to go off/flashes ● Abnormal noise while vehicle is running: from motor, from valve, other_____ ● Wheel is locked at braking: ● Pump motor does not stop (running): ● Braking does not work: ● Other:
Frequency of occurrence	<ul style="list-style-type: none"> ● Continuous/Intermittent (_____ times a day, a month)/ other_____
Conditions for Occurrence of Problem	<ul style="list-style-type: none"> ● Vehicle at stop & ignition switch ON: ● When starting: at initial start only/at every start/Other_____ ● Vehicle speed: while accelerating/while decelerating/at stop/ while turning/while running at constant speed/ other_____ ● Road surface condition: Paved road/rough road/snow-covered road/ other_____ ● Chain equipment:
Environmental Condition	<ul style="list-style-type: none"> ● Weather: fair/cloudy/rain/snow/other_____ ● Temperature: °F (_____ °C)
Diagnostic Trouble Code	<ul style="list-style-type: none"> ● First check: _____ Normal code/malfunction code (_____) ● Second check after test drive: Normal code/malfunction code (_____)

I2RH01450014-01

Problem symptom confirmation

Check if what the customer claimed in "Customer Questionnaire" is actually found in the vehicle and if that symptom is found, whether it is identified as a failure. (This step should be shared with the customer if possible.) Check warning lights related to brake system referring to "EBD Warning Light (Brake Warning Light) Check" and "ABS Warning Light Check".

DTC check, record and clearance

Perform "DTC Check" procedure, record it and then clear it referring to "DTC Clearance".

Recheck DTC referring to "DTC Check".

When DTC which is recorded at DTC check procedure is detected again after performing DTC clearance, go to "Step 4: ABS Check: " to proceed the diagnosis.

When DTC which is recorded at DTC check procedure is not indicated anymore after performing DTC clearance, ABS (ESP®) control module does not perform the system diagnosis, or temporary abnormality may occur, therefore go to "Step 2: Driving Test: " to proceed the diagnosis.

Step 2: Driving Test

Test drive the vehicle at 40 km/h for more than a minute and check if any trouble symptom (such as abnormal lighting of ABS warning light) exists.

If the malfunction DTC is confirmed again at ignition switch ON, driving test as described is not necessary. Proceed to Step 3.

Step 3: DTC Check

Recheck DTC referring to "DTC Check".

Step 4: ABS Check

According to ABS Check for the DTC confirmation in Step 3, locate the cause of the trouble, namely in a sensor, switch, wire harness, connector, actuator assembly or other part and repair or replace faulty parts.

Step 5: Brakes Diagnosis

Check the parts or system suspected as a possible cause referring to "Brakes Symptom Diagnosis in Section 4A" and based on symptoms appearing on the vehicle (symptom obtained through Steps 1 and 2 and repair or replace faulty parts, if any).

Step 6: Check for Intermittent Problem

Check parts where an intermittent trouble is easy to occur (e.g., wire harness, connector, etc.), referring to "Intermittent and Poor Connection Inspection in Section 00" and related circuit of trouble code recorded in Step 1 to 3.


Step 7: Final Confirmation Test

Confirm that the problem symptom has gone and the ABS is free from any abnormal conditions. If what has been repaired is related to the malfunction DTC, clear the DTC once referring to "DTC Clearance" and perform test driving and confirm that no DTC is indicated.

ABS Warning Light Check

S6JB0B4504002

- 1) Turn ignition switch ON.
- 2) Check that ABS warning light (1) comes ON for about 2 seconds and then goes off.
If any faulty condition is found, advance to "ABS Warning Light Does Not Come ON at Ignition Switch ON" or "ABS Warning Light Comes ON Steady".

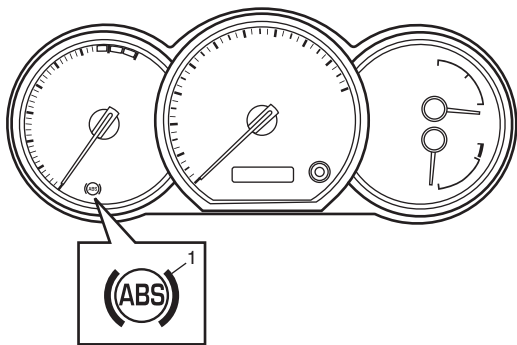

I5JB0A450001-01


EBD Warning Light (Brake Warning Light) Check

S6JB0B4504003

NOTE

Perform this check on a level place.

- 1) Turn ignition switch ON with parking brake applied.
- 2) Check that EBD warning light (brake warning light) (1) is turned ON.
- 3) Release parking brake with ignition switch ON and check that EBD warning light (brake warning light) goes off.
If it doesn't go off, go to "EBD Warning Light (Brake Warning Light) Comes ON Steady".

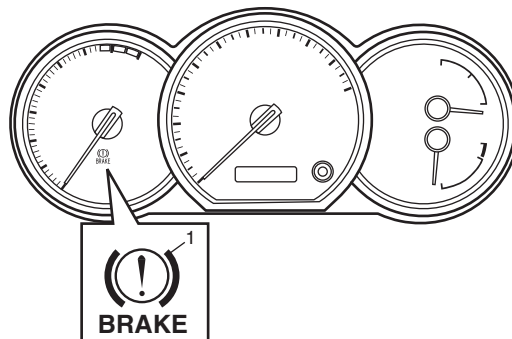

I5JB0A450007-01


DTC Check

S6JB0B4504004

- 1) Turn ignition switch to OFF position.
- 2) Connect SUZUKI scan tool to data link connector (1).

Special tool

(A): SUZUKI scan tool

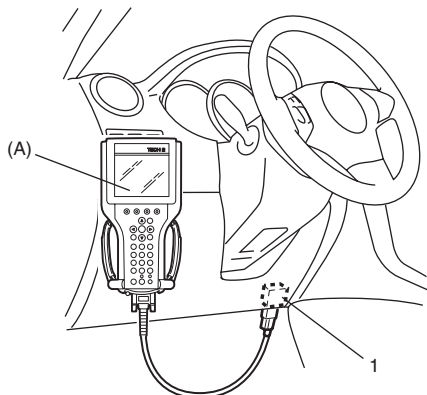

I5JB0A450008-01

- 3) Turn ignition switch to ON position.
- 4) Read DTC according to instructions displayed on SUZUKI scan tool and print it or write it down. Refer to SUZUKI scan tool operator's manual for further details.

NOTE

If SUZUKI scan tool can not communicate ABS (ESP®) hydraulic unit / control module, perform "Serial Data Link Circuit Check".

- 5) After completing the check, turn ignition switch off and disconnect SUZUKI scan tool from DLC.

DTC Table

S6JB0B4504005

⚠ CAUTION

Be sure to perform "ABS Check" before starting diagnosis.

DTC (displayed on SUZUKI scan tool)	Diagnostic Items	
NO DTC	Normal	
C1015	G sensor circuit	
C1021	RF	Wheel speed sensor circuit
C1025	LF	
C1031	RR	
C1035	LR	
C1022	RF	Wheel speed sensor or encoder
C1026	LF	
C1032	RR	
C1036	LR	
C1041	RF	Inlet solenoid valve circuit
C1042		Outlet solenoid valve circuit
C1045	LF	Inlet solenoid valve circuit
C1046		Outlet solenoid valve circuit
C1051	RR	Inlet solenoid valve circuit
C1052		Outlet solenoid valve circuit
C1055	LR	Inlet solenoid valve circuit
C1056		Outlet solenoid valve circuit
C1057	Power source	
C1061	ABS pump motor and/or motor driver circuit	
C1063	Solenoid valve power supply driver circuit	
C1071	ABS (ESP®) control module	
U1073	Control Module Communication Bus Off	
U1100	Lost Communication with ECM (Reception error)	

DTC Clearance

S6JB0B4504006

⚠ WARNING

When performing a driving test, select a safe place where there is neither any traffic nor any traffic accident possibility and be very careful during testing to avoid occurrence of an accident.

After repair or replace malfunction part(s), clear all DTCs by performing the following procedure or using SUZUKI scan tool.

- 1) Connect SUZUKI scan tool to data link connector in the same manner as when making this connection for DTC check.
- 2) Turn ignition switch to ON position.
- 3) Erase DTC according to instructions displayed on scan tool. Refer to scan tool operator's manual for further details.

NOTE

For DTC C 1021, C1022, C1025, C1026, C1031, C1032, C1035, C1036 and C1061, confirm that ABS warning light turns off after performing Step 2 of "Test Driving" under "ABS Check", and then clear the DTCs.

- 4) After completing the clearance, turn ignition switch OFF and disconnect scan tool from data link connector.
- 5) Perform "Driving Test" (Step 2 of "ABS Check") and "DTC Check" and confirm that NO DTC is displayed on scan tool.

Scan Tool Data

S6JB0B4504007

The parameter data below are values measured with the scan tool when the normally operating vehicle is under the following conditions. When taking measurements for comparison by using the scan tool, be sure to check that the vehicle is under the following conditions.

- Apply parking brake and block wheels.
- Ignition switch ON.
- Turn OFF air conditioner (if equipped).
- Apply no load to power steering (if equipped). (Don't turn it)
- Turn OFF all electric loads (except ignition).
- No DTC.
- ABS is not operated. (Normal braking operation)

Scan Tool Data	Standards	Condition
Battery Voltage	10.0 – 16.0 V	—
Pump Motor Driver	0.0 V	—
RF Wheel Speed	0 km/h, 0.0 MPH	Vehicle stop
LF Wheel Speed	0 km/h, 0.0 MPH	Vehicle stop
RR Wheel Speed	0 km/h, 0.0 MPH	Vehicle stop
LR Wheel Speed	0 km/h, 0.0 MPH	Vehicle stop
Brake Switch	ON	Brake pedal depressed
	OFF	Brake pedal released
G sensor	0 ± 0.09G	Place vehicle on the level

Scan Tool Data Definition

Battery Volt (V): Battery Voltage is an analog input signal read by the ABS (ESP®) control module. Certain ABS (ESP®) control module functions will be modified if the battery voltage falls below or rises above programmed thresholds.

Pump Motor Driver (V): This parameter indicates the operational condition of the pump motor driver (transistor).

RF Wheel Speed, LF Wheel Speed, RR Wheel Speed and LR Wheel Speed (km/h, MPH): Wheel speed is an ABS (ESP®) control module internal parameter. It is computed by reference pulses from the wheel speed sensor.


Brake Switch (ON, OFF): This switch signal informs the ABS (ESP®) control module whether the brake is active or not.

G Sensor (G): The G-Sensor converts gravity during the vehicle acceleration / deceleration in to a voltage conditions and controls the ABS for 4WD vehicle.

ABS Warning Light Does Not Come ON at Ignition Switch ON

S6JB0B4504008

Wiring Diagram

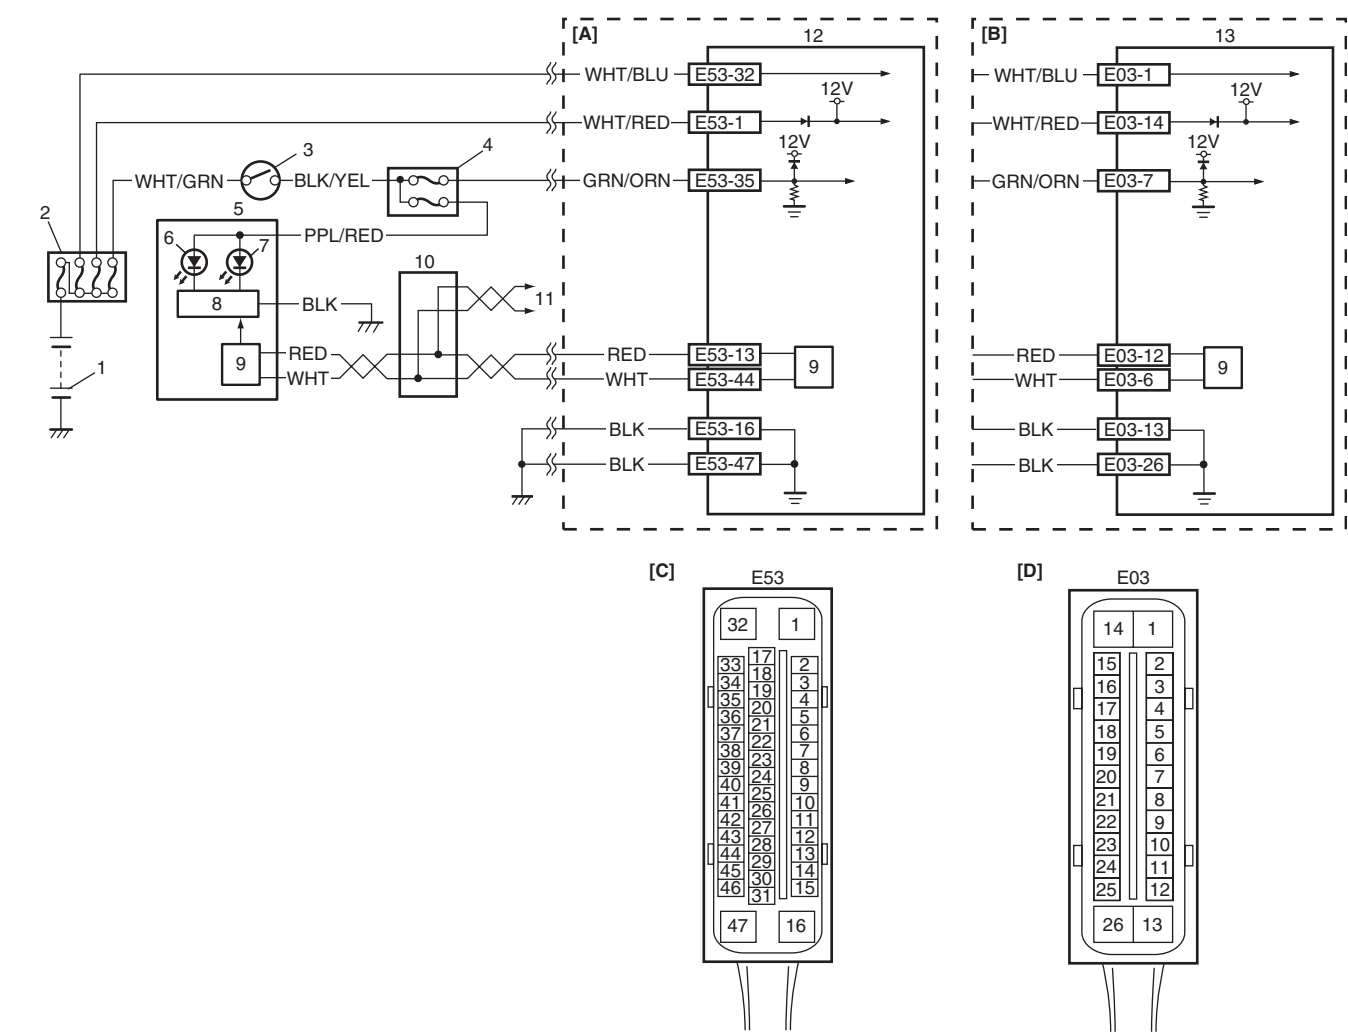

I6JB01450005-01

[A]: ESP® model	3. Ignition switch	9. CAN driver
[B]: Non-ESP® model	4. Circuit fuse (in junction block assembly)	10. CAN junction
[C]: ESP® hydraulic unit / control module connector (viewed from terminal side)	5. Combination meter	11. To TCM, BCM, 4WD control module, keyless start control module and steering angle sensor
[D]: ABS hydraulic unit / control module connector (viewed from terminal side)	6. ABS warning light	12. ESP® hydraulic unit / control module assembly
1. Battery	7. EBD warning light (Brake warning light)	13. ABS hydraulic unit / control module assembly
2. Main fuse box	8. Light driver module	

Circuit Description

Operation (ON/OFF) of ABS warning light is controlled by ABS (ESP®) control module through light driver module in combination meter.

If the antilock brake system is in good condition, ABS (ESP®) control module turns ABS warning light ON at the ignition switch ON, keeps it ON for 2 seconds and then turns it OFF. If an abnormality in the system is detected, ABS warning light is turned ON continuously by ABS (ESP®) control module. Also, it is turned ON continuously by light driver module when the connector of ABS (ESP®) control module is disconnected.

Troubleshooting

Step	Action	Yes	No
1	1) Turn ignition switch to ON position. <i>Do other warning lights come ON?</i>	Go to Step 2.	Go to Step 3.
2	1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ignition switch to OFF position and check DTC. <i>Is there DTC U1073?</i>	Go to "DTC U1073: Control Module Communication Bus Off".	Substitute a known-good combination meter and recheck. If ABS warning light remains OFF, substitute a known-good ABS (ESP®) hydraulic unit / control module assembly and recheck.
3	<i>Is Circuit fuse for combination meter in good condition?</i>	Go to Step 4.	Replace fuse and check for short circuit to ground.
4	Check CAN communication circuit between combination meter and ABS (ESP®) hydraulic unit / control module referring to "DTC U1073: Control Module Communication Bus Off". <i>Is CAN communication circuit in good condition?</i>	Go to Step 5.	Repair or replace.
5	1) Remove combination meter with ignition switch turned OFF. 2) Check for proper connection to "PPL/RED" and "BLK" wire of combination meter connector. 3) If OK, turn ON ignition switch and measure voltage at "PPL/RED" wire of combination meter connector and vehicle body ground. <i>Is it 10 – 14 V?</i>	Go to Step 6.	Repair power supply circuit for combination meter.
6	1) Measure resistance between "BLK" wire of combination meter connector and vehicle body ground. <i>Is resistance less than 2 Ω?</i>	Replace combination meter.	"BLK" circuit open or high resistance.

ABS Warning Light Comes ON Steady

Wiring Diagram

Refer to “ABS Warning Light Does Not Come ON at Ignition Switch ON”.

Circuit Description

Operation (ON/OFF) of ABS warning light is controlled by ABS (ESP®) control module through light driver module in combination meter.


If the Antilock brake system is in good condition, ABS (ESP®) control module turns ABS warning light ON at the ignition switch ON, keeps it ON for 2 seconds and then turns it OFF. If an abnormality in the system is detected, ABS warning light is turned ON continuously by ABS (ESP®) control module. Also, it is turned ON continuously by light driver module when the connector of ABS (ESP®) control module is disconnected.

Troubleshooting

Step	Action	Yes	No
1	1) Perform diagnostic trouble code check. <i>Is there any DTC(s)?</i>	Go to Step 7 of “ABS Check”.	Go to Step 2.
2	<i>Are main fuses for ABS pump motor and ABS solenoid in good condition?</i>	Go to Step 3.	Replace fuse and check circuit for short to ground.
3	1) Turn ignition switch to OFF. 2) Disconnect ABS (ESP®) hydraulic unit / control module connector. 3) Check for proper connection to ABS (ESP®) hydraulic unit / control module connector at terminals “E03-7”, “E03-13” and “E03-26” (or “E53-16”, “E53-35” and “E53-47”). 4) If OK then turn ignition switch to ON position and measure voltage between terminal “E03-7” (or “E53-35”) and vehicle body ground. <i>Is it 10 – 14 V?</i>	Go to Step 4.	“GRN/ORN” circuit open.
4	1) Turn ignition switch to OFF position. 2) Check for proper connection to ABS (ESP®) hydraulic unit / control module connector at terminals “E03-1” and “E03-14” (or “E53-1”, “E53-32”). 3) If OK then turn ignition switch to ON position and measure voltage between each terminal of “E03-1”, “E03-14” (or “E53-1”, “E53-32”) and vehicle body ground. <i>Are they 10 – 14 V?</i>	Go to Step 5.	“WHT/RED” and/or “WHT/BLU” circuit open.
5	1) Turn ignition switch to OFF and measure resistance between each terminal of “E03-13”, “E03-26” (or “E53-16”, “E53-47”) and vehicle body ground. <i>Is resistance less than 2 Ω?</i>	Go to Step 6.	Ground circuit for ABS (ESP®) hydraulic unit / control module open or high resistance.
6	Check CAN communication circuit between combination meter and ABS (ESP®) hydraulic unit / control module referring to “DTC U1073: Control Module Communication Bus Off”. <i>Is CAN communication circuit in good condition?</i>	Substitute a known-good combination meter and recheck. If ABS warning light remains ON, substitute a known-good ABS (ESP®) hydraulic unit / control module assembly and recheck.	Repair or replace.

EBD Warning Light (Brake Warning Light) Comes ON Steady

Wiring Diagram

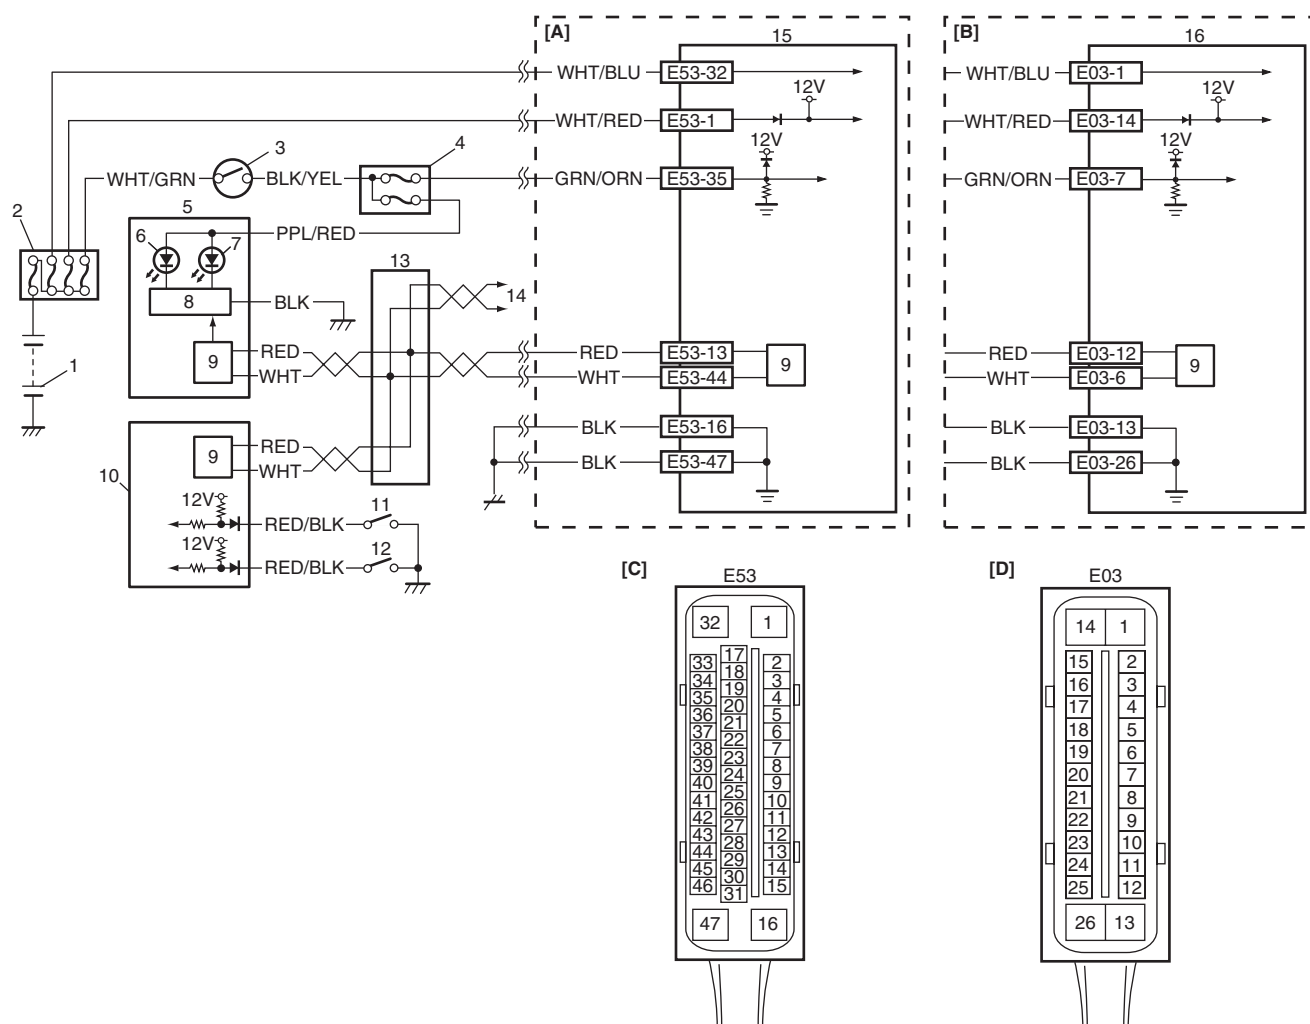

I6JB01450006-02

[A]: ESP® model	4. Circuit fuse (in junction block assembly)	11. Parking brake switch
[B]: Non-ESP® model	5. Combination meter	12. Brake fluid level switch
[C]: ESP® hydraulic unit / control module connector (viewed from terminal side)	6. ABS warning light	13. CAN junction
[D]: ABS hydraulic unit / control module connector (viewed from terminal side)	7. EBD warning light (Brake warning light)	14. To TCM, 4WD control module and keyless start control module
1. Battery	8. Light driver module	15. ESP® hydraulic unit / control module assembly
2. Main fuse box	9. CAN driver	16. ABS hydraulic unit / control module assembly
3. Ignition switch	10. BCM	

Circuit Description

EBD warning light (brake warning light) is controlled by parking brake switch, brake fluid level switch and ABS (ESP®) hydraulic unit / control module assembly through light driver module in combination meter.

EBD warning light turns ON when parking brake switch is ON and/or brake fluid level is lower than minimum level.


The information of parking brake switch and brake fluid level are transmitted from BCM to light driver module in combination meter through CAN communication line.

Troubleshooting

Step	Action	Yes	No
1	1) Make sure that: <ul style="list-style-type: none">• Parking brake is completely released.• Brake fluid level is upper than the minimum level. <p><i>Are the check results OK?</i></p>	Go to Step 2.	Release parking brake completely and/or replenish brake fluid.
2	1) Turn ignition switch to ON position. <p><i>Does “ABS” warning light come on steady?</i></p>	Perform “ABS Warning Light Comes ON Steady” previously outlined.	Go to Step 3.
3	1) CAN communication circuit between combination meter, ABS (ESP®) hydraulic unit / control module and BCM referring to “DTC U1073: Control Module Communication Bus Off”. <p><i>Is CAN communication circuit in good condition?</i></p>	Substitute a known-good combination meter and recheck. If ABS warning light remains ON, substitute a known-good ABS (ESP®) hydraulic unit / control module assembly and recheck.	Repair or replace.

Serial Data Link Circuit Check

S6JB0B4504011

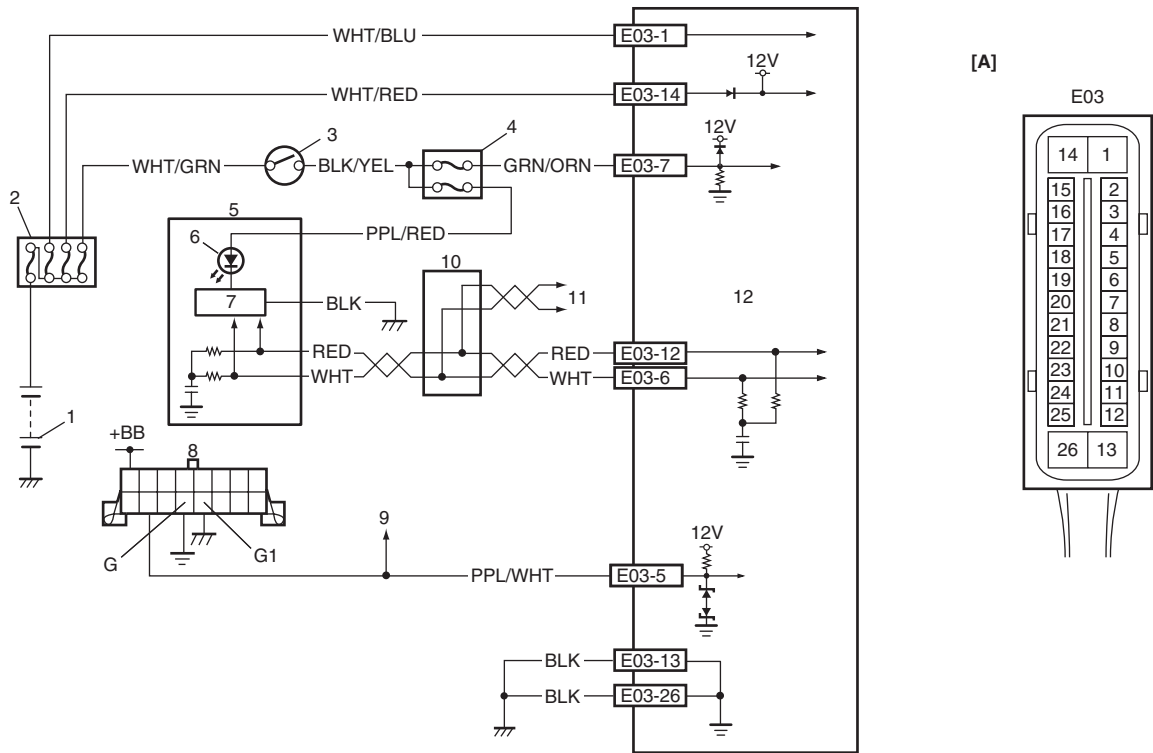


I5JB0A450012-02

[A]: ABS (ESP®) hydraulic unit / control module connector (viewed from terminal side)	5. Combination meter	10. CAN junction
1. Battery	6. EBD warning light (Brake warning light)	11. To TCM, 4WD control module and keyless start control module
2. Main fuse box	7. Light driver module	12. ABS (ESP®) hydraulic unit / control module assembly
3. Ignition switch	8. Data link connector (DLC)	
4. Circuit fuse (in junction block assembly)	9. To ECM, TCM, BCM, SDM and 4WD control module	

Inspection

Step	Action	Yes	No
1	1) Turn ignition switch to ON position. <i>Does ABS warning light come ON?</i>	Go to Step 2.	Go to Step 6.
2	1) Turn ignition switch to OFF position. <i>Are main fuses for ABS pump motor and ABS solenoid in good condition?</i>	Go to Step 3.	Replace fuse and check for short.
3	1) Disconnect ABS (ESP®) hydraulic unit / control module connector. 2) Check for proper connection to ABS (ESP®) hydraulic unit / control module connector at terminal "E03-7". 3) If OK then turn ignition switch to ON position and measure voltage between terminal "E03-7" and vehicle body ground. <i>Is it 10 – 14 V?</i>	Go to Step 4.	"GRN/ORN" wire circuit open.
4	1) Turn ignition switch to OFF position. 2) Check for proper connection to ABS (ESP®) hydraulic unit / control module connector at terminals "E03-1" and "E03-14". 3) If OK then turn ignition switch to ON position and measure voltage between each terminal of "E03-1", "E03-14" and vehicle body ground. <i>Are they 10 – 14 V?</i>	Go to Step 5.	"WHT/RED" and/or "WHT/BLU" wire circuit open.
5	1) Turn ignition switch to OFF position. 2) Check for proper connection to ABS (ESP®) hydraulic unit / control module connector at terminals "E03-13" and "E03-26". 3) If OK, measure resistance between each terminal of "E03-13", "E03-26" and vehicle body ground. <i>Are resistance less than 2 Ω?</i>	Go to Step 6.	Ground circuit for ABS (ESP®) hydraulic unit / control module open or high resistance.
6	1) Check if communication is possible by trying communication with other controller (ECM, TCM, BCM, 4WD control module or SDM). <i>Is it possible to communicate with other controller?</i>	Go to Step 7.	Repair open in common section of serial data circuit ("PPL/WHT" wire circuit) used by all controllers or short to ground or power circuit which has occurred somewhere in serial data circuit ("PPL/WHT" wire circuit).
7	1) Turn ignition switch to ON position. 2) Measure voltage between terminal B of data link connector and vehicle body ground. <i>Is voltage 10 – 12 V?</i>	Go to step 8.	Terminal B circuit open or shorted to ground.
8	1) Turn ignition switch to OFF position. 2) Measure resistance between the following terminals; <ul style="list-style-type: none"> Terminal G of data link connector and vehicle body ground. Terminal G1 of data link connector and vehicle body ground. <i>Is each resistance 1 Ω or less?</i>	Go to step 9.	Terminal G and/or G1 circuit open or high resistance.

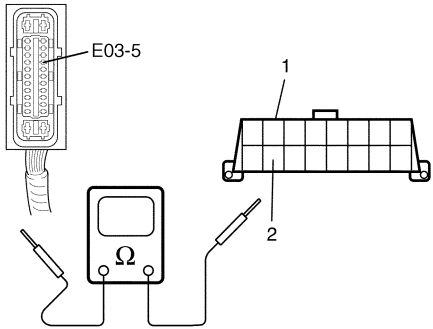Step	Action	Yes	No
9	<p>1) Turn ignition switch to OFF position.</p> <p>2) Check proper connection at "E03-5" ("PPL/WHT" wire) terminal for serial data circuit.</p> <p>3) If OK, then check resistance between "E03-5" ("PPL/WHT" wire) terminal and "PPL/WHT" wire terminal (2) for serial data circuit in DLC (1).</p> <p><i>Is resistance 1 Ω or less?</i></p>  <p style="text-align: right;">I4RS0A450013-02</p>	Substitute a known-good ABS (ESP®) hydraulic unit / control module and recheck.	Repair high resistance or open in "PPL/WHT" wire circuit for anti lock brake system.

DTC C1015: G Sensor Circuit Failure (Non-ESP® Model)

S6JB0B4504012

For ESP® model, go to "DTC C1015 / C1017 / C1023: Longitudinal G Sensor / Lateral G Sensor / Yaw Rate Sensor in Yaw Rate / G Sensor Assembly Failure in Section 4F".

Description

If the signal voltage of G sensor while at a stop does not vary of from that while running, this DTC is set. Therefore, this DTC may be set when a vehicle is lifted up and its wheel(s) is turned. In such case, clear the DTC and check again.


DTC Troubleshooting

- 1) Ignition switch OFF.
- 2) Check for proper connection from harness to control module.
- 3) If OK, substitute an ABS hydraulic unit/control module assembly with correct part number.
- 4) Recheck system.

DTC C1021, C1022 / C1025, C1026 / C1031, C1032 / C1035, C1036: Right-Front / Left-Front / Right-Rear / Left-Rear Wheel Speed Sensor Circuit or Encoder Failure

S6JB0B4504013

Wiring Diagram

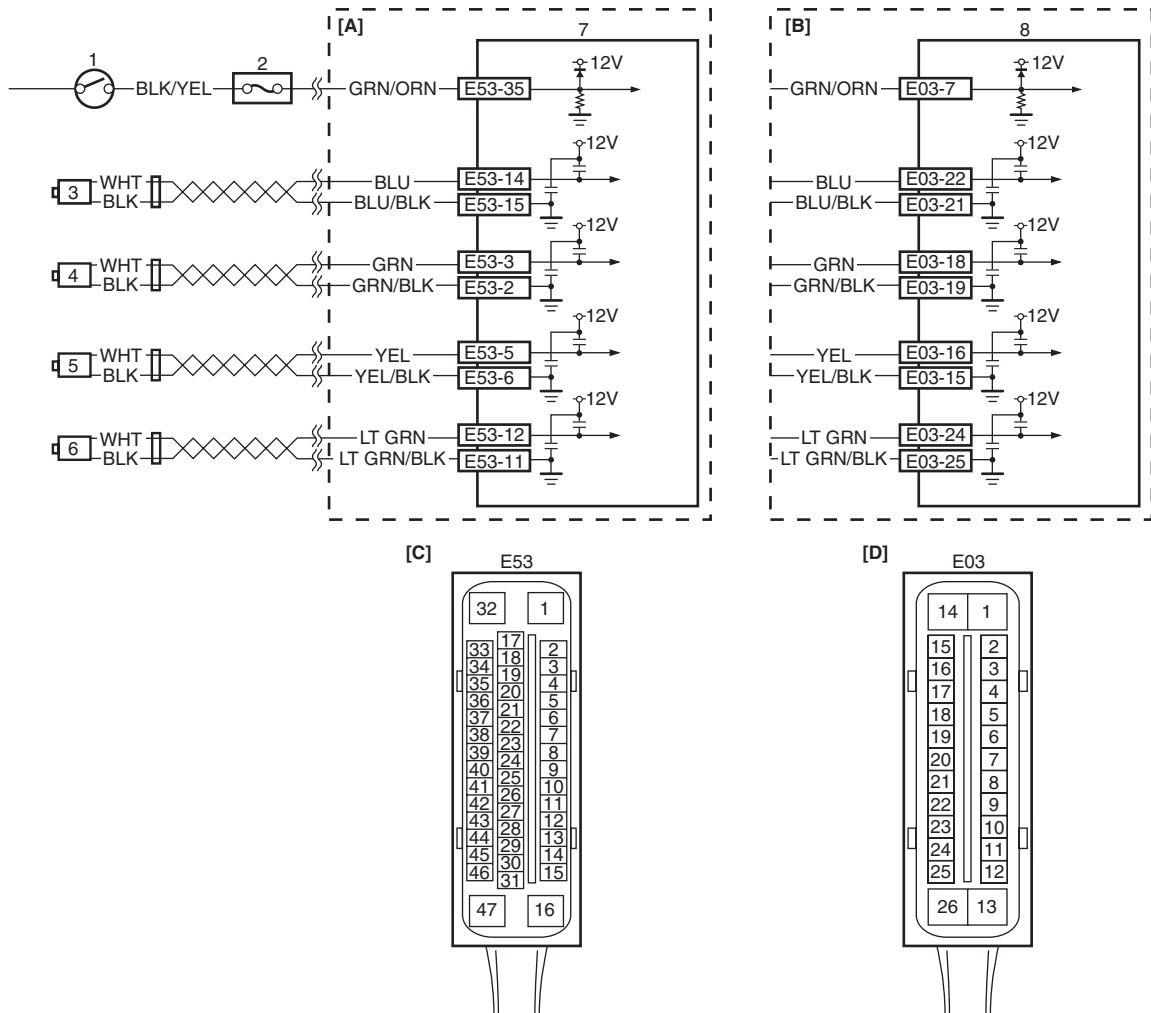

I6JB01450007-02

[A]: ESP® model	1. Ignition switch	5. Left-rear wheel speed sensor
[B]: Non-ESP® model	2. Circuit fuse (in junction block assembly)	6. Right-rear wheel speed sensor
[C]: ESP® hydraulic unit / control module connector (viewed from terminal side)	3. Left-front wheel speed sensor	7. ESP® hydraulic unit / control module assembly
[D]: ABS hydraulic unit / control module connector (viewed from terminal side)	4. Right-front wheel speed sensor	8. ABS hydraulic unit / control module assembly

DTC Detecting Condition


The ABS (ESP®) control module monitors the voltage at the terminal of each sensor while the ignition switch is ON. When the voltage is not within the specified range, an applicable DTC will be set. Also, when no sensor signal is inputted at running, an applicable DTC will be set.

NOTE

When the vehicle was operated in any of the following ways, one of these DTCs may be set even when the sensor is in good condition. If such possibility is suspected, clear DTC once referring to “DTC Clearance” and then performing the driving test as described in Step 2 of “ABS Check”, check whether or not any abnormality exists.

- The vehicle was driven with parking brake pulled.
- Wheel spin occurred while driving.
- Wheel(s) was turned while the vehicle was jacked up.
- The vehicle was stuck.

DTC Troubleshooting

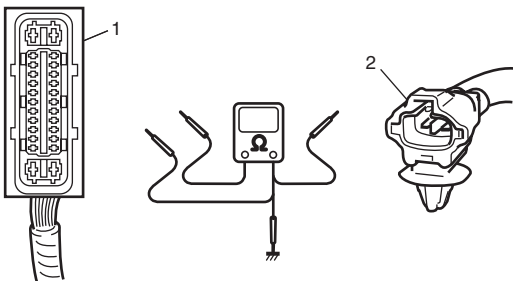Step	Action	Yes	No
1	Was “ABS Check” performed?	Go to Step 2.	Go to “ABS Check”.
2	1) Turn ignition switch OFF. 2) Disconnect ABS (ESP®) hydraulic unit / control module connector. 3) Check for proper connection to ABS (ESP®) control module at each sensor terminal. 4) If OK, then turn ignition switch ON and measure voltage between applicable sensor terminal of module connector and vehicle body ground. <i>Is it 0 V?</i>	Go to Step 4.	ABS wheel speed sensor circuit shorted to power.
3	1) Disconnect applicable ABS wheel speed sensor coupler with ignition switch OFF. 2) Measure resistance between the following points. <ul style="list-style-type: none"> • Both ABS (ESP®) hydraulic unit / control module connector (1) terminals a pair of applicable sensor terminals. This check result should be no continuity. • Between applicable sensor terminal of ABS (ESP®) hydraulic unit / control module connector and vehicle body ground. This check result should be no continuity. • Between applicable sensor terminal of module connector and corresponding terminal of ABS wheel speed sensor connector (2) in main harness (for front sensor) or floor harness (for rear sensor). This check result should be continuity.  <p style="text-align: center;">I5JB0A450014-02</p>	Go to Step 4.	Circuit open or short to ground.
	Are each check results OK?		

Step	Action	Yes	No
4	1) Remove applicable ABS wheel speed sensor. 2) Check sensor for damage or foreign material attached. <i>Is it in good condition?</i>	Go to Step 5.	Clean, repair or replace.
5	Check front and/or rear encoder for the following (remove front and/or rear drive shaft): <ul style="list-style-type: none"> Encoder surface neither crack nor damaged No foreign material being attached Encoder not being eccentric Wheel bearing free from excessive play <i>Are they in good condition?</i>	Go to Step 6.	Clean, repair or replace wheel hub assembly.
6	1) Install ABS wheel speed sensor to knuckle. 2) Tighten sensor bolt to specified torque and check that there is no clearance between sensor and knuckle. <i>Is it OK?</i>	Go to Step 7.	Replace ABS wheel speed sensor.
7	Refer to "Front Wheel Speed Sensor On-Vehicle Inspection" and/or "Rear Wheel Speed Sensor On-Vehicle Inspection", check output voltage or waveform. <i>Is specified voltage and/or waveform obtained?</i>	Substitute a known-good ABS (ESP®) hydraulic unit / control module assembly and recheck.	Replace sensor and recheck.


DTC C1041 / C1042 / C1043 / C1044 / C1045 / C1046 / C1051 / C1052 / C1053 / C1054 / C1055 / C1056: Inlet Solenoid Circuit Failure, Outlet Solenoid Circuit Failure, Master Cylinder Cut Solenoid Circuit Failure, Low Pressure Solenoid Circuit Failure

S6JB0B4504014

DTC C1041 / C1045 / C1051 / C1055: Right-Front / Left-Front / Right-Rear / Left-Rear Inlet Solenoid Circuit Failure
DTC C1042 / C1046 / C1052 / C1056: Right-Front / Left-Front / Right-Rear / Left-Rear Outlet Solenoid Circuit Failure
DTC C1043 / C1044: Master Cylinder Cut Solenoid Circuit No. 1 / No. 2 Failure
DTC C1053 / C1054: Low Pressure Solenoid Circuit No. 1 / No. 2 Failure

NOTE

The DTC C1043, C1044, C1053 and C1054 are DTC only for ESP® model.

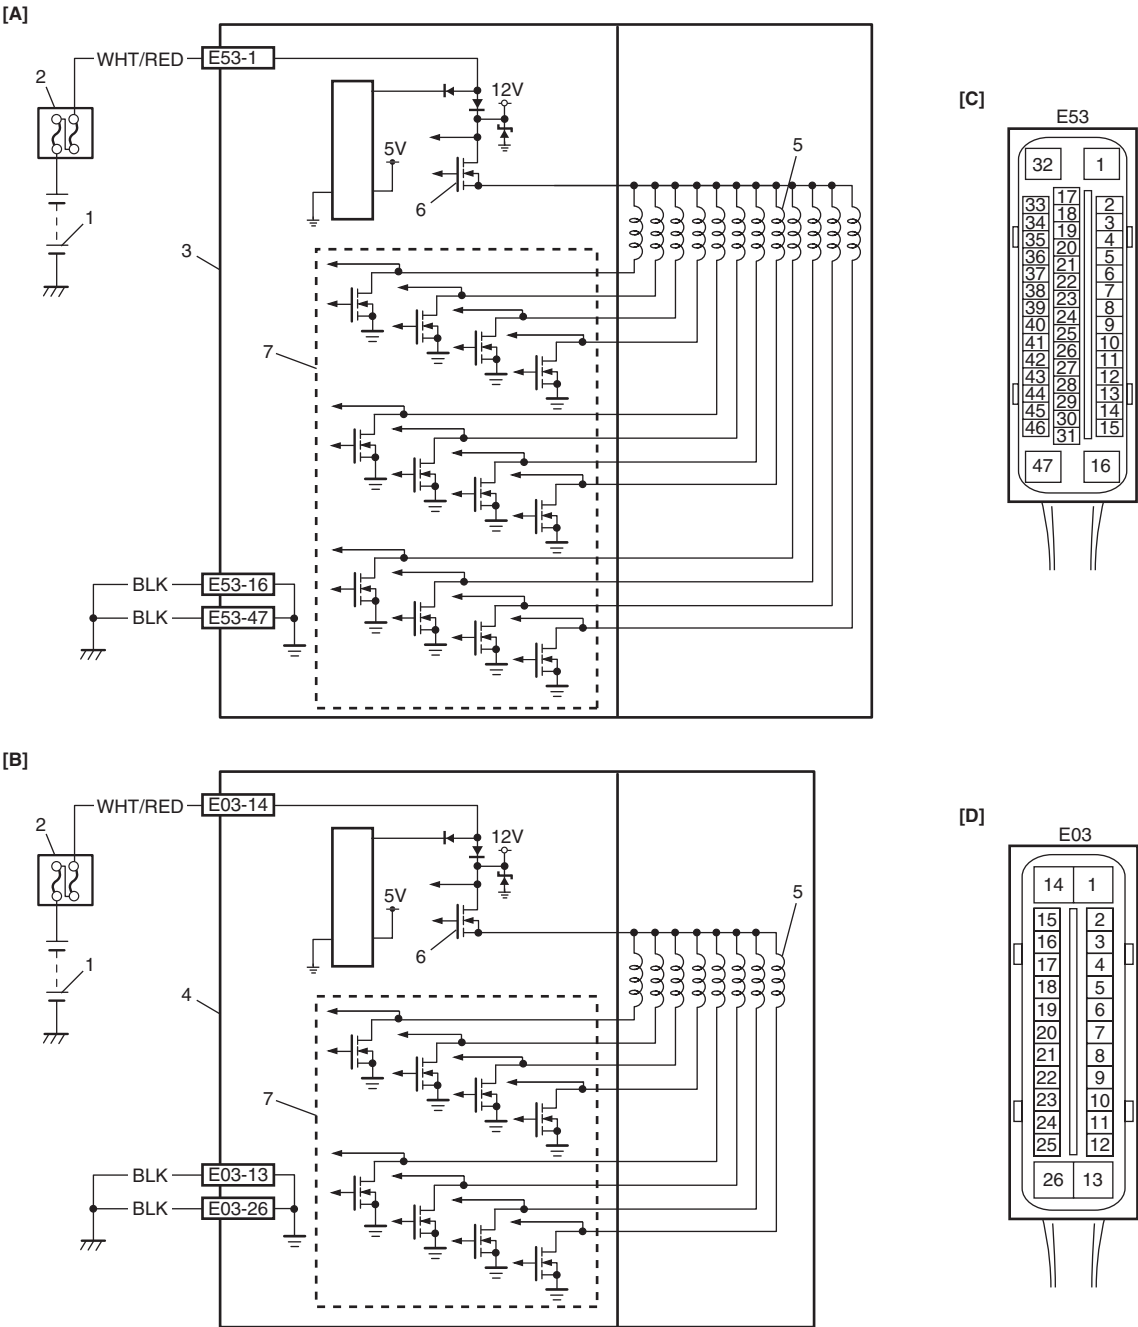

I6JB01450008-01

[A]: ESP® model	1. Battery	5. Solenoid valve
[B]: Non-ESP® model	2. Main fuse box	6. Solenoid valve power supply driver (transistor)

[C]: ESP® control module connector (viewed from terminal side)	3. ESP® hydraulic unit / control module assembly	7. Solenoid valve driver
[D]: ABS control module connector (viewed from terminal side)	4. ABS hydraulic unit / control module assembly	

DTC Detecting Condition

The ABS (ESP®) control module monitors the output from the valve.
When the output of each valve exceeds the specified value compared with the signal sent from ABS (ESP®) control module, this DTC is set.


DTC Troubleshooting

Step	Action	Yes	No
1	Was "ABS Check" performed?	Go to Step 2.	Go to "ABS Check".
2	1) Turn ignition switch to OFF position. 2) Disconnect ABS (ESP®) hydraulic unit / control module connector. 3) Check for proper connection to ABS (ESP®) hydraulic unit / control module connector at terminal "E03-14" (or "E53-1"). 4) If OK, then measure voltage between terminal "E03-14" (or "E53-1") of module connector and "E03-26" (or "E53-47"). <i>Is it 10 – 14 V?</i>	Substitute a known-good ABS (ESP®) hydraulic unit / control module assembly and recheck.	"WHT/RED" or "BLK" circuit open.

DTC C1057: ABS (ESP®) Control Module Power Supply Circuit Failure

S6JB0B4504015

Wiring Diagram

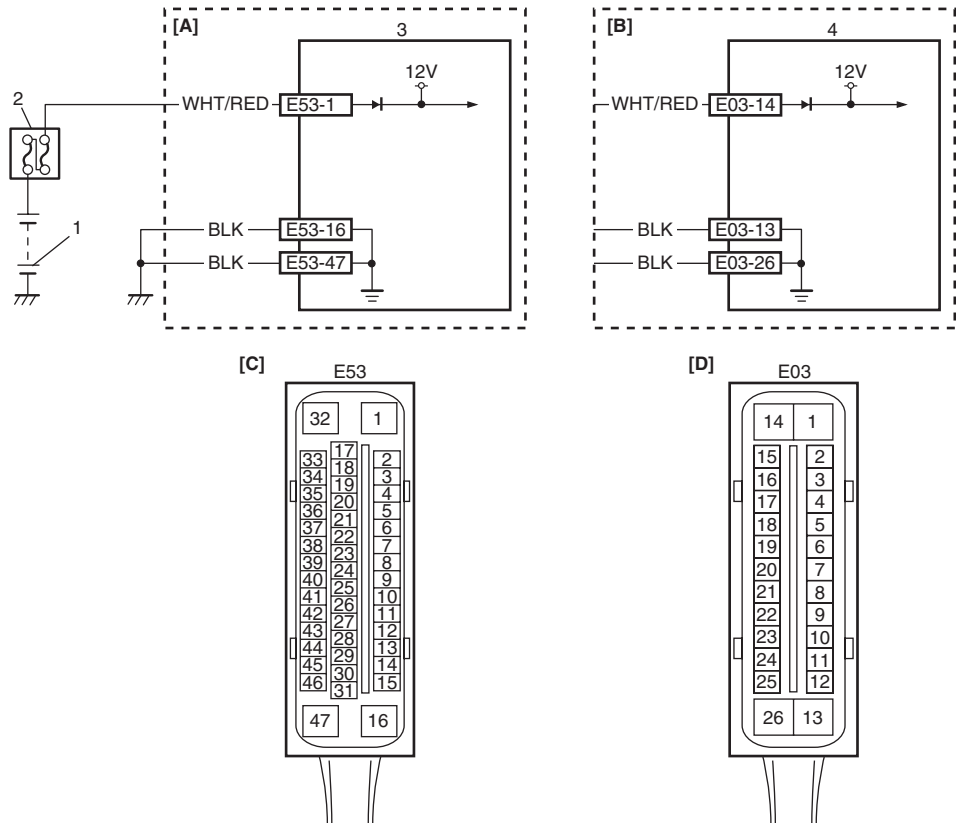

I6JB01450009-02

[A]: ESP® model	[D]: ABS hydraulic unit / control module connector (viewed from terminal side)	3. ESP® hydraulic unit / control module assembly
[B]: Non-ESP® model	1. Battery	4. ABS hydraulic unit / control module assembly
[C]: ESP® hydraulic unit / control module connector viewed	2. Main fuse box	

DTC Detecting Condition

The ABS (ESP®) control module monitors the power source voltage at terminal “E03-14” (or “E53-1”). When the power source voltage becomes extremely high or low while vehicle is running at more than 20 km/h (13 MPH), this DTC will be set. As soon as the power source voltage becomes normal, the ABS warning light will be turned off and the ABS (ESP®) control module will return to normal operation, but the set DTC will remain.


DTC Troubleshooting

Step	Action	Yes	No
1	Was “ABS Check” performed?	Go to Step 2.	Go to “ABS Check”.
2	1) Disconnect ABS (ESP®) hydraulic unit / control module connector with ignition switch turned OFF. 2) Check for proper connection to ABS (ESP®) hydraulic unit / control module connector at terminals “E03-14” and “E03-13” (or “E53-1” and “E53-16”). 3) If OK, then turn ignition switch to ON position and measure voltage between terminals “E03-14” and “E03-13” (or “E53-1” and “E53-16”). <i>Is voltage 9.7 ± 0.3 V or more?</i>	Go to Step 5.	Go to Step 3.
3	1) Turn ignition switch to OFF. 2) Check for proper connection to ABS (ESP®) hydraulic unit / control module connector at terminals “E03-13” and “E03-26” (or “E53-16” and “E53-47”). 3) If OK then turn ignition switch to ON and measure resistance between each terminal of “E03-13” and “E03-26” (or “E53-16” and “E53-47”) and vehicle body ground. <i>Is resistance less than 2 Ω?</i>	Go to Step 4.	“BLK” wire circuit in open or high resistance.
4	1) Measure voltage between positive battery terminal and vehicle body ground with engine running. <i>Is voltage 9.7 ± 0.3 V or more?</i>	Imperfect short between “WHT/RED” wire circuit and body ground.	Check charging system referring to “Generator Test (Undercharged Battery Check) in Section 1J”.
5	1) Measure voltage between terminals “E03-14” and “E03-13” (or “E53-1” and “E53-16”) with engine running. <i>Is voltage 18 ± 1.0 V or less?</i>	Poor connection of “E03-14” and/or “E03-13” (or “E53-1” and/or “E53-16”) terminals. If the terminals are in good condition, substitute a known-good ABS (ESP®) hydraulic unit / control module and recheck.	Check charging system referring to “Generator Test (Overcharged Battery Check) in Section 1J”.

DTC C1061: ABS Pump Motor and/or Motor Driver Circuit Failure

S6JB0B4504016

Wiring Diagram

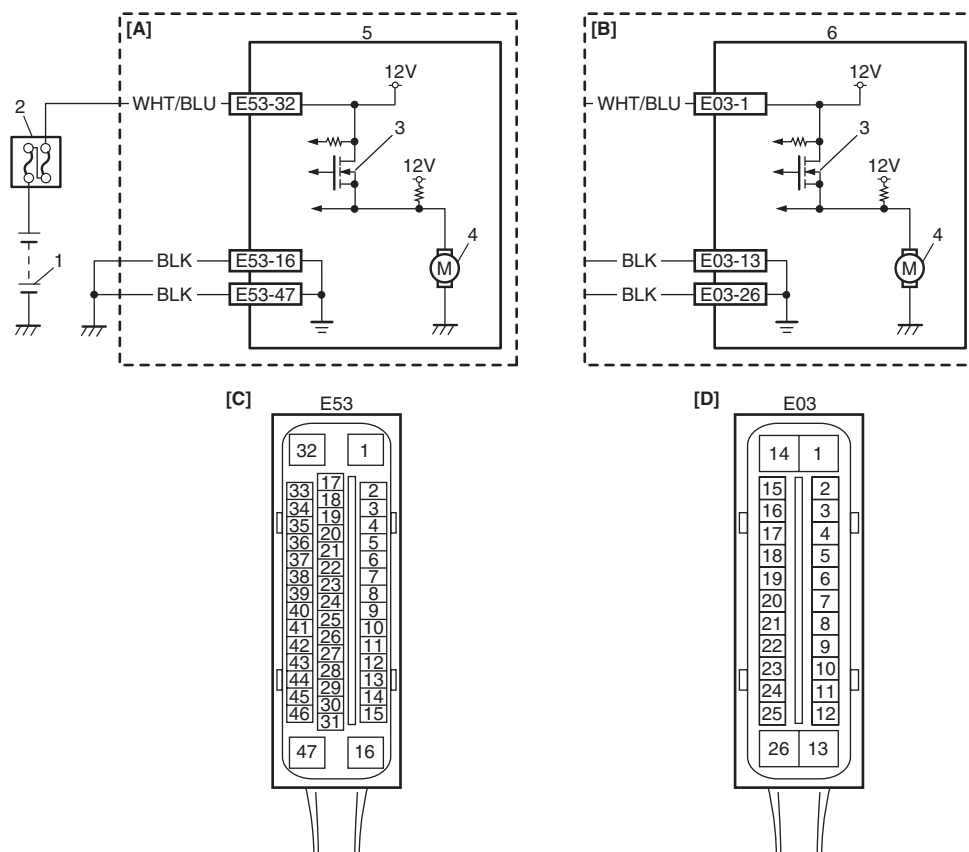

I6JB01450010-01

[A]: ESP® model	2. Main fuse box
[B]: Non-ESP® model	3. Pump motor driver (transistor)
[C]: ESP® hydraulic unit / control module connector (viewed from terminal side)	4. ABS pump motor
[D]: ABS hydraulic unit / control module connector (viewed from terminal side)	5. ESP® hydraulic unit / control module assembly
1. Battery	6. ABS hydraulic unit / control module assembly

DTC Detecting Condition

The ABS (ESP®) control module monitors the voltage at monitor terminal of pump motor circuit constantly with the ignition switch turned ON. It sets this DTC when the voltage at the monitor terminal does not become high / low according to ON/OFF commands to the motor driver (transistor) of the module (does not follow these commands).

DTC Troubleshooting


Step	Action	Yes	No
1	Was "ABS Check" performed?	Go to Step 2.	Go to "ABS Check".
2	1) Turn Ignition switch to OFF position. 2) Disconnect ABS (ESP®) hydraulic unit / control module connector. 3) Check for proper connection to ABS (ESP®) hydraulic unit / control module connector at terminal "E03-1" (or "E53-32"). 4) If OK, then measure voltage between terminal "E03-1" of module connector and body ground. Is it 10 – 14 V?	Go to Step 3.	"WHT/BLU" circuit open.

Step	Action	Yes	No
3	Measure resistance between terminal “E03-13” and “E03-26” (or “E53-16” and “E53-47”) of ABS (ESP®) hydraulic unit / control module connector and vehicle body ground. <i>Is resistance less than 1 Ω?</i>	Substitute a known-good ABS (ESP®) hydraulic unit / control module assembly and recheck.	Ground circuit for ABS (ESP®) hydraulic unit / control module open or high resistance.

DTC C1063: Solenoid Valve Power Supply Driver Circuit Failure

S6JB0B4504017

Wiring Diagram

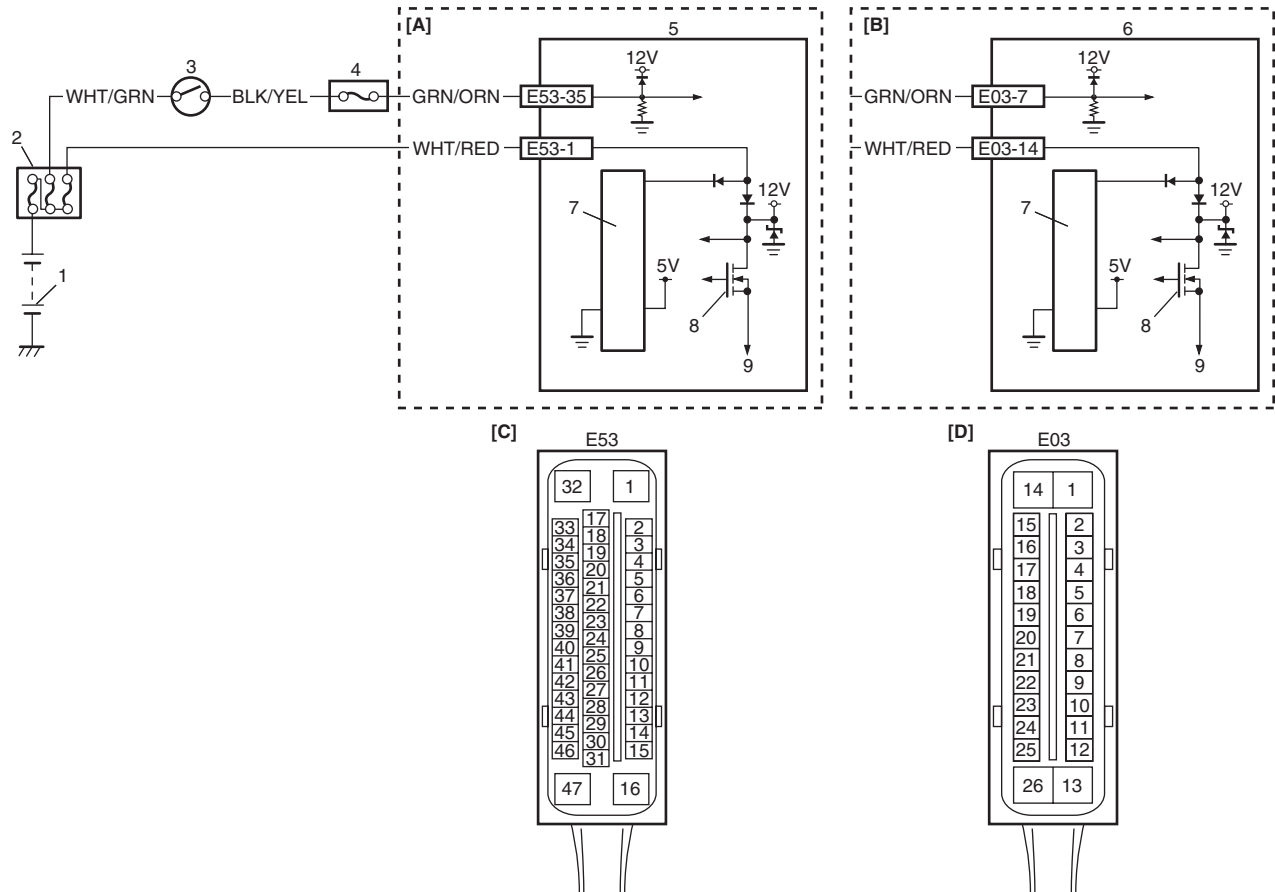

I6JB01450011-02

[A]: ESP® model	2. Main fuse box	7. Power control unit
[B]: Non-ESP® model	3. Ignition switch	8. Solenoid valve power supply driver (transistor)
[C]: ESP® hydraulic unit / control module connector (viewed from terminal side)	4. Circuit fuse box (in junction block assembly)	9. To solenoid valve
[D]: ABS hydraulic unit / control module connector (viewed from terminal side)	5. ESP® hydraulic unit / control module assembly	
1. Battery	6. ABS hydraulic unit / control module assembly	

DTC Detecting Condition

ABS (ESP®) control module monitors the voltage at the terminal of solenoid circuit constantly with ignition switch turned ON. Also, immediately after ignition switch is turned ON, perform initial check as follows. Switch solenoid valve power supply driver (transistor) in the order of OFF → ON and check if voltage changes to Low → High. If anything faulty is found in the initial check and when the voltage is low with ignition switch turned ON, this DTC will be set.


DTC Troubleshooting

Step	Action	Yes	No
1	Was "ABS Check" performed?	Go to Step 2.	Go to "ABS Check".
2	Check battery voltage. <i>Is it about 11 V or higher?</i>	Go to Step 3.	Check charging system referring to "Battery Inspection in Section 1J" and "Generator Test (Undercharged Battery Check) in Section 1J".
3	Check main fuse for ABS solenoid and its terminal. <i>Is it in good condition?</i>	Go to Step 4.	Replace fuse and check for short circuit to ground.
4	1) Turn ignition switch to OFF position. 2) Disconnect ABS (ESP®) hydraulic unit / control module connector. 3) Check for proper connection to ABS (ESP®) hydraulic unit / control module at terminal "E03-14" (or "E53-1"). 4) If OK, then measure voltage between connector terminal "E03-14" (or "E53-1") and body ground. <i>Is it 10 – 14 V?</i>	Substitute a known-good ABS (ESP®) hydraulic unit / control module assembly and recheck.	"WHT/RED" circuit imperfect short to ground.

DTC C1071: ABS (ESP®) control module Internal Detect

S6JB0B4504018

Wiring Diagram

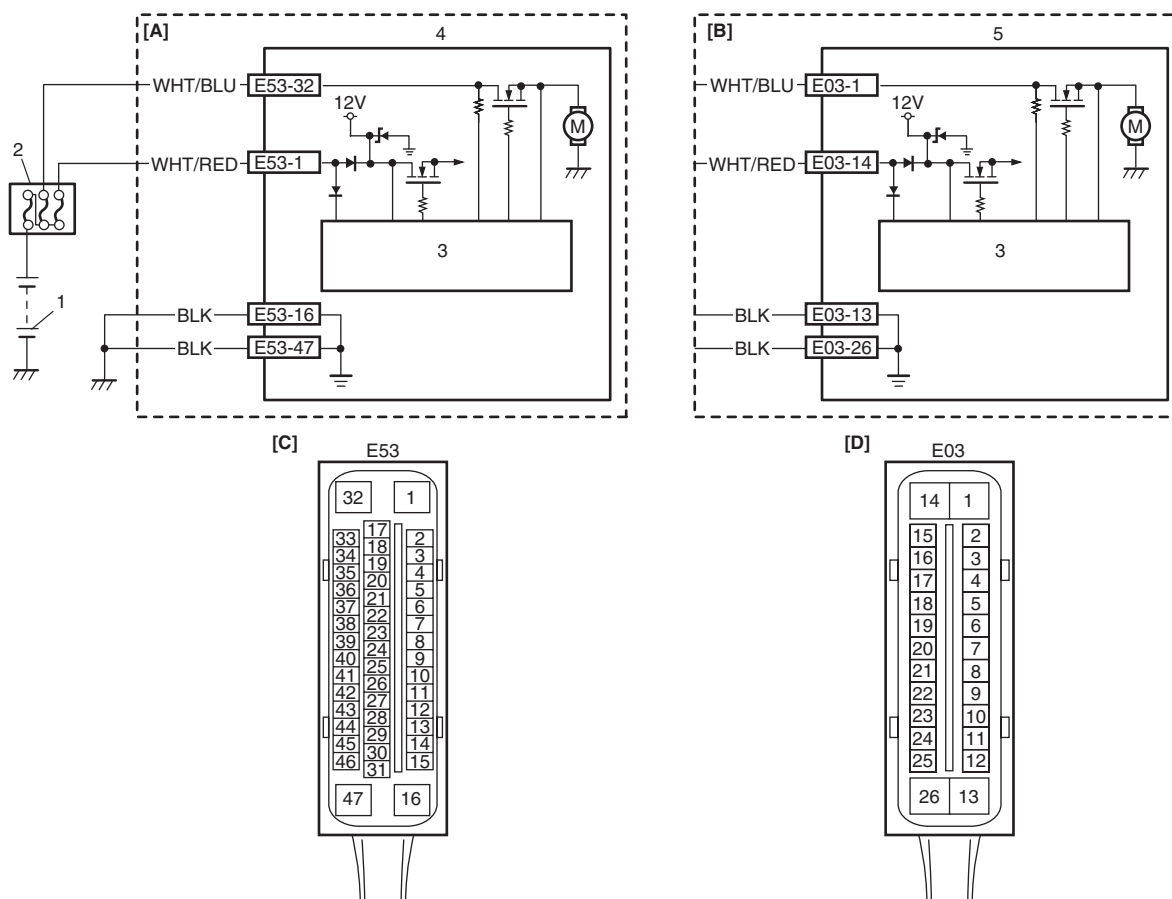

I6JB01450012-02

[A]: ESP® model	2. Main fuse box
[B]: Non-ESP® model	3. Power control unit
[C]: ESP® hydraulic unit / control module connector (viewed from terminal side)	4. ESP® hydraulic unit / control module assembly
[D]: ABS hydraulic unit / control module connector (viewed from terminal side)	5. ABS hydraulic unit / control module assembly
1. Battery	

DTC Detecting Condition


This DTC will be set when an internal malfunction is detected in the ABS (ESP®) control module.

DTC Troubleshooting

Step	Action	Yes	No
1	<i>Was "ABS Check" performed?</i>	Go to Step 2.	Go to "ABS Check".
2	Clear all DTCs and check DTC. <i>Is it DTC C1071?</i>	Go to Step 3.	Could be a temporary malfunction of the ABS (ESP®) control module.
3	1) Check for proper connection of ABS (ESP®) hydraulic unit / control module connector. 2) If OK, disconnect ABS (ESP®) hydraulic unit / control module connector and check the following. <ul style="list-style-type: none"> • Voltage "E03-1" (or "E53-32") terminal: 10 – 14 V • Voltage "E03-14" (or "E53-1") terminal: 10 – 14 V • Resistance between "E03-13" (or "E53-16") and body ground: Continuity • Resistance between "E03-26" (or "E53-47") and body ground: Continuity <i>Are the check result as specified?</i>	Replace ABS (ESP®) hydraulic unit / control module assembly.	Repair "WHT/RED", "WHT/BLU" and/or "BLK" circuit and recheck.

DTC U1073: Control Module Communication Bus Off

Wiring Diagram

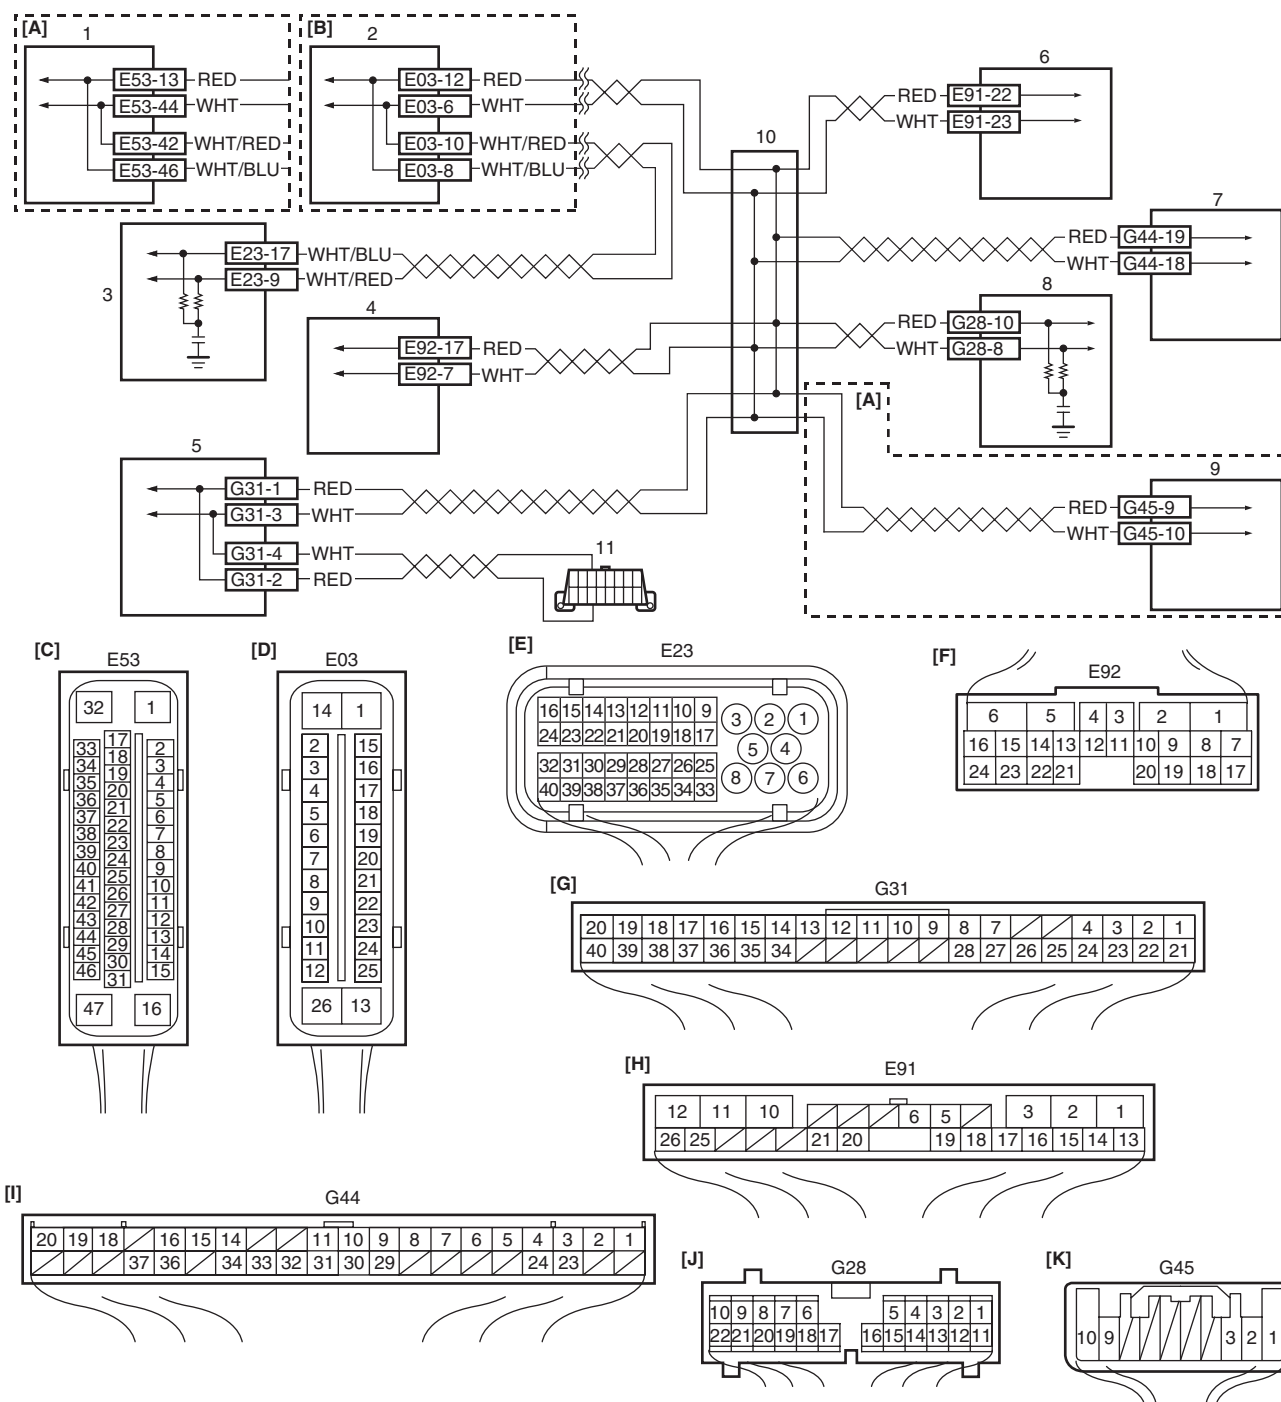

I6JB01450013-05

[A]: ESP® model	[I]: Keyless start control module connector (viewed from harness side)	6. 4WD control module (if equipped)
[B]: Non-ESP® model	[J]: Combination meter connector (viewed from harness side)	7. Keyless start control module (if equipped)
[C]: ESP® control module connector (viewed from terminal side)	[K]: Steering angle sensor connector (viewed from harness side)	8. Combination meter
[D]: ABS control module connector (viewed from terminal side)	1. ESP® hydraulic unit / control module assembly	9. Steering angle sensor (if equipped)
[E]: ECM connector (viewed from harness side)	2. ABS hydraulic unit / control module assembly	10. Junction connector
[F]: TCM connector (viewed from harness side)	3. ECM	11. Data link connector (DLC)
[G]: BCM connector (viewed from harness side)	4. TCM	
[H]: 4WD control module connector (viewed from harness side)	5. BCM	

DTC Detecting Condition

Transmission error that is inconsistent between transmission data and transmission monitor (CAN bus monitor) data is detected more than 7 times continuously.

DTC Troubleshooting

Step	Action	Yes	No
1	<i>Was "ABS Check" performed?</i>	Go to Step 2.	Go to "ABS Check".
2	1) Check connection of connectors of all control modules communicating by means of CAN. 2) Recheck DTC. <i>Is DTC U1073 indicated?</i>	Go to Step 3.	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".
3	1) Turn ignition switch to OFF position. 2) Disconnect connectors of all control modules communicating by means of CAN. 3) Check CAN communication circuit between control modules for open, short and high resistance. <i>Is each CAN communication circuit in good condition?</i>	Go to Step 4.	Repair insulation of CAN communication line circuit referring to "Precaution for CAN Communication System in Section 00".
4	1) Connect connectors of disconnected control modules communicating by means of CAN. 2) Disconnect each connector and check DTC for ABS in turn. <ul style="list-style-type: none"> • ECM • TCM (A/T model) • BCM • 4WD control module (if equipped) • Keyless start control module (if equipped) • Combination meter • Steering angle sensor (ESP® model) <i>Is DTC U1073 detected?</i>	Check ABS (ESP®) control module power and ground circuit. If circuits are OK, substitute a known-good ABS (ESP®) hydraulic unit / control module assembly and recheck.	Check applicable control module power and ground circuit. If circuit is OK, substitute a known-good applicable control module and recheck.

DTC U1100: Lost Communication with ECM (Reception Error)

S6JB0B4504020

Wiring Diagram

Refer to "DTC U1073: Control Module Communication Bus Off".

DTC Detecting Condition

Reception error of communication data for ECM is detected more than specified time continuously.

DTC Troubleshooting

Step	Action	Yes	No
1	Was "ABS Check" performed?	Go to Step 2.	Go to "ABS Check".
2	Check DTC for ABS. <i>Is DTC U1073 detected?</i>	Go to "DTC U1073: Control Module Communication Bus Off".	Go to Step 3.
3	1) Check DTC for ECM. <i>Is DTC U0073 detected?</i>	Go to "DTC U0073: Control Module Communication Bus Off in Section 1A".	Go to Step 4.
4	1) Check for proper connection at each ABS and ECM terminals with ignition switch turned OFF. 2) If connections are OK, recheck ABS for DTC with engine running. <i>Is there DTC U1100?</i>	Go to Step 5.	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".
5	1) Check connection of connectors of all control modules communicating by means of CAN. 2) Check DTC for ABS. <i>Is DTC U1100 detected?</i>	Go to Step 6.	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".
6	1) Turn ignition switch to OFF position. 2) Disconnect connectors of ABS (ESP®) control module and ECM. 3) Check CAN communication circuit between ABS and ECM for open, short and high resistance. <i>Is CAN communication circuit in good condition?</i>	Go to Step 7.	Repair insulation of CAN communication line circuit referring to "Precaution for CAN Communication System in Section 00".
7	1) Disconnect connectors of all control modules communicating by means of CAN. 2) Check CAN communication circuit between control modules other than Step 6 for open, short and high resistance. <i>Is each CAN communication circuit in good condition?</i>	Go to Step 8.	Repair or replace the CAN communication line.
8	1) Connect connectors of disconnected control modules communicating by means of CAN. 2) Disconnect each connector and check DTC for ABS in turn. <ul style="list-style-type: none"> • ECM • TCM (A/T model) • BCM • 4WD control module (if equipped) • Keyless start control module (if equipped) • Combination meter • Steering angle sensor (ESP® model) <i>Is DTC U1073 detected?</i>	Check ABS (ESP®) control module power and ground circuit. If circuits are OK, substitute a known-good ABS (ESP®) hydraulic unit / control module assembly and recheck.	Check applicable control module power and ground circuit. If circuit is OK, substitute a known-good applicable control module and recheck.

Repair Instructions


Hydraulic Unit Operation Check

S6JB0B4506001

- 1) Check that basic brake system other than ABS is in good condition.
- 2) Check that battery voltage is 11 V or higher.
- 3) Lift up vehicle.
- 4) Set transmission to neutral and release parking brake.
- 5) Turn each wheel gradually by hand to check if brake dragging occurs. If it does, correct.
- 6) Connect SUZUKI scan tool to data link connector (DLC) (1) with ignition switch OFF.

Special tool

(A): SUZUKI scan tool

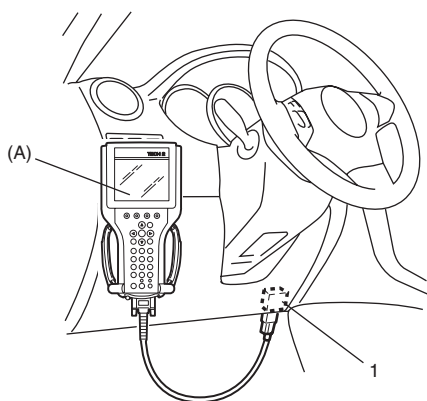


I5JB0A450008-01

- 7) Turn ignition switch to ON position and select menu to "HYDRAULIC CONTROL TEST" under "miscellaneous test" ("MISC. TEST") mode of SUZUKI scan tool.

- 8) Perform the following checks with help of another person.

Brake pedal (1) should be depressed and then select testing wheel by SUZUKI scan tool and the wheel (2) should be turned by another person's hand. At this time, check that:

- Operation sound of solenoid is heard and the wheel turns only about 0.5 sec. (Brake force is depressurized).
- Operation sound of pump motor is heard and pulsation is felt at brake pedal.

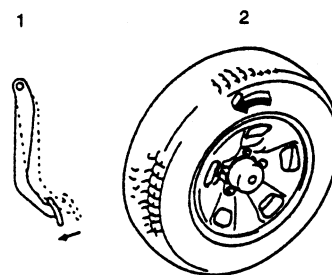

I4RH01450021-01


- 9) Check for all 4-wheels condition respectively. If a faulty condition is found, replace hydraulic unit / control module assembly.
- 10) After completing the check, turn ignition switch to OFF position and disconnect SUZUKI scan tool from DLC.

ABS (ESP®) hydraulic unit / control module Assembly Components

S6JB0B4506002

CAUTION

Never disassemble ABS (ESP®) hydraulic unit / control module assembly, loosen blind plug or remove motor. Performing any of these prohibited services will affect original performance of ABS (ESP®) hydraulic unit / control module assembly.

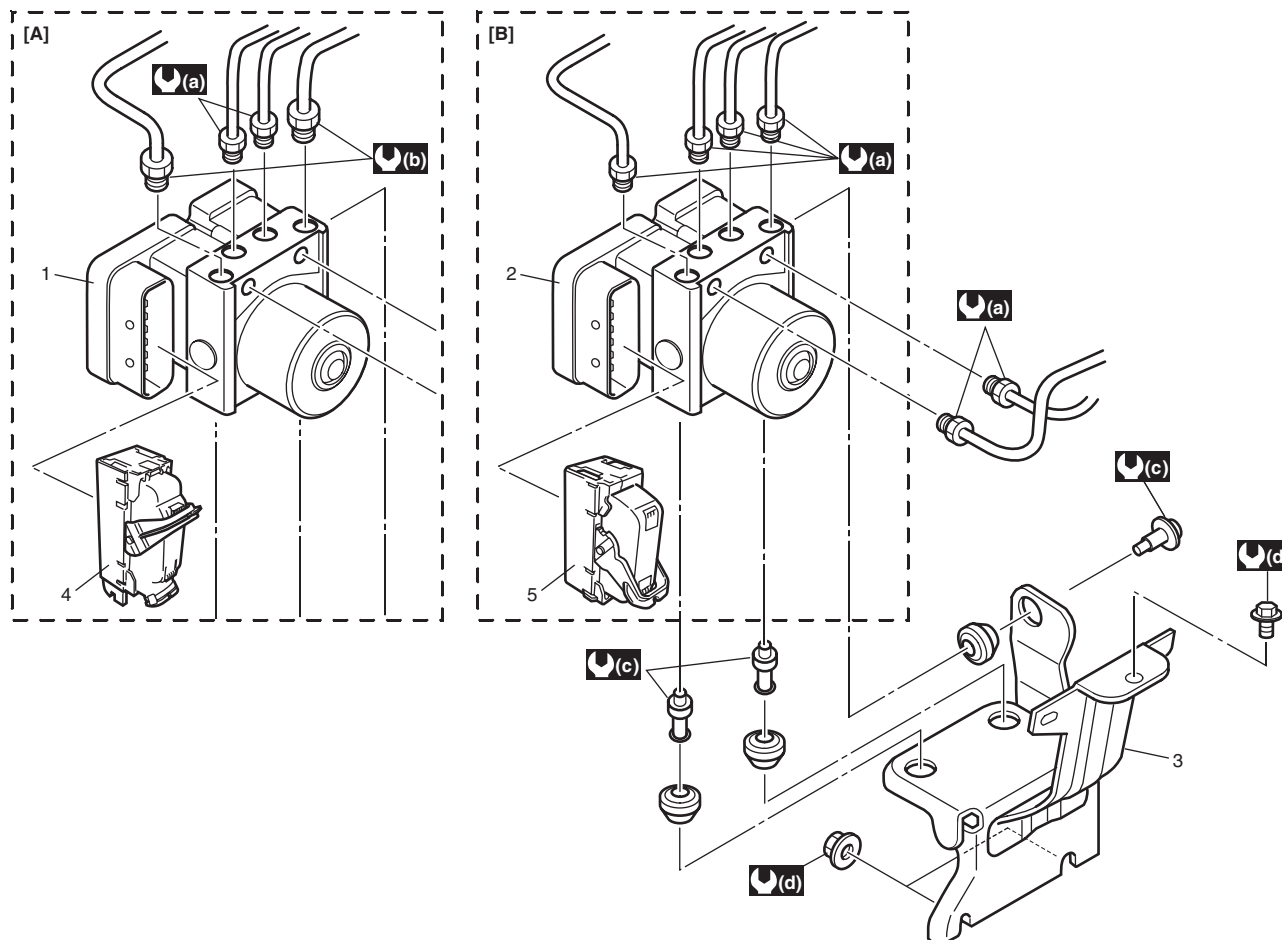

I6JB01450015-05

[A]: ESP® model	3. Bracket	(b) : 19 N·m (1.9 kgf-m, 14.0 lb-ft)
[B]: Non-ESP® model	4. ESP® control module connector	(c) : 9 N·m (0.9 kgf-m, 6.5 lb-ft)
1. ESP® hydraulic unit / control module assembly	5. ABS control module connector	(d) : 25 N·m (2.5 kgf-m, 18.0 lb-ft)
2. ABS hydraulic unit / control module assembly	(a) : 16 N·m (1.6 kgf-m, 11.5 lb-ft)	

ABS (ESP®) hydraulic unit / control module
Assembly On-Vehicle Inspection

S6JB0B4506003

⚠ CAUTION

Never disassemble ABS (ESP®) hydraulic unit / control module assembly, loosen blind plug or remove motor. Performing any of these prohibited services will affect original performance of ABS (ESP®) hydraulic unit / control module assembly.

Check hydraulic unit for fluid leakage.
If any, repair or replace.

ABS (ESP®) hydraulic unit / control module
Assembly Removal and Installation


S6JB0B4506004

⚠ CAUTION

Never disassemble ABS (ESP®) hydraulic unit / control module assembly, loosen blind plug or remove motor. Performing any of these prohibited services will affect original performance of ABS (ESP®) hydraulic unit / control module assembly.

NOTE

- For ESP® model, be sure to perform “Sensor Calibration in Section 4F” before performing hydraulic unit operation check when ESP® hydraulic unit / control module is replaced.
- When ignition switch is turned to ON position after replacing ESP® hydraulic unit / control module, DTC C1075, C1076, C1078 and C1077 are stored in ESP® control module and the following lights light up or flash. However, these are in normal operation. These DTCs are cleared and lights are turned off if the following operations are performed in order.
 - 1) “Sensor Calibration in Section 4F”.
 - 2) “Hydraulic Unit Operation Check”.
 - 3) Ignition switch OFF and ON.

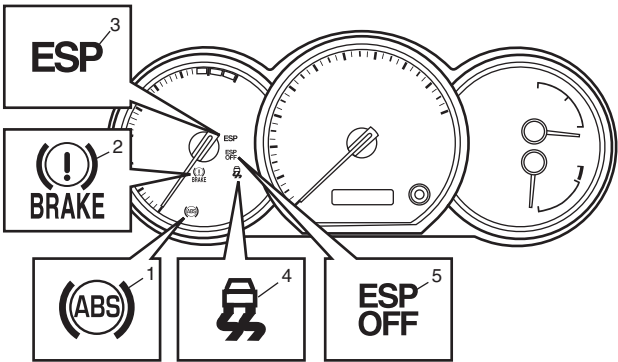


I6JB01460002-02

1. ABS warning light	4. SLIP indicator light
2. EBD warning light (brake warning light)	5. ESP® OFF light
3. ESP® warning light	

Removal

- 1) Disconnect negative cable from battery.
- 2) Remove ECM referring to "Engine Control Module (ECM) Removal and Installation in Section 1C".
- 3) Disconnect ABS (ESP®) hydraulic unit / control module assembly connector (1) as shown in figure.

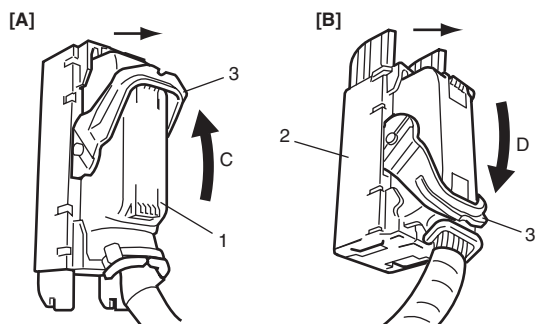

I6JB01450016-02


[A]: ESP® model	1. ESP® control module connector
[B]: Non-ESP® model	2. ABS control module connector
C: Pull up to disconnect	3. Lock
D: Pull down to disconnect	

- 4) Using special tool, loosen flare nuts (1) and disconnect brake pipes (2) from ABS (ESP®) hydraulic unit / control module assembly (3).

Special tool**(A): 09950-78220****NOTE**

Put bleeder plug cap or the like onto pipe to prevent fluid from spilling. Do not allow brake fluid to get on painted surfaces.

- 5) Disconnect harness clamps (4) from bracket (5).

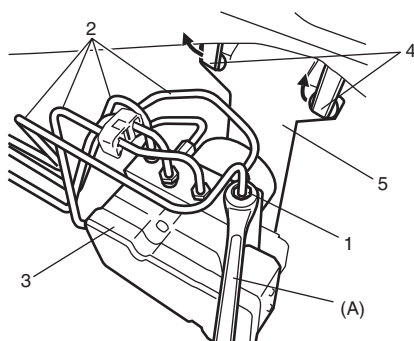


I5JB0A450023-01

- 6) Remove ABS (ESP®) hydraulic unit / control module with bracket from vehicle by removing bracket bolt and two bracket nuts.
- 7) Remove bolt and pull out ABS (ESP®) hydraulic unit / control module assembly (1) from bracket (3) using flat end rod or the like (2).

CAUTION

- Do not give an impact to hydraulic unit.
- Use care not to allow dust to enter hydraulic unit.
- Do not place hydraulic unit on its side or upside down. Handling it in inappropriate way will affect its original performance.

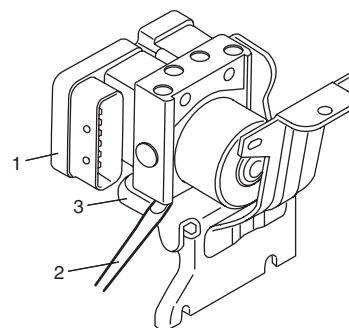

I5JB0A450024-01

Installation

1) Install hydraulic unit / control module assembly by reversing removal procedure.

Tightening torque


Brake pipe flare nut (M10) (a): 16 N·m (1.6 kgf-m, 11.5 lb-ft)

Brake pipe flare nut (M12) (b): 19 N·m (1.9 kgf-m, 14.0 lb-ft)

ABS (ESP®) hydraulic unit / control module assembly bolt (c): 9 N·m (0.9 kgf-m, 6.5 lb-ft)

ABS (ESP®) hydraulic unit / control module assembly bracket bolt (d): 25 N·m (2.5 kgf-m, 18.0 lb-ft)


ABS (ESP®) hydraulic unit / control module assembly bracket nut (e): 25 N·m (2.5 kgf-m, 18.0 lb-ft)

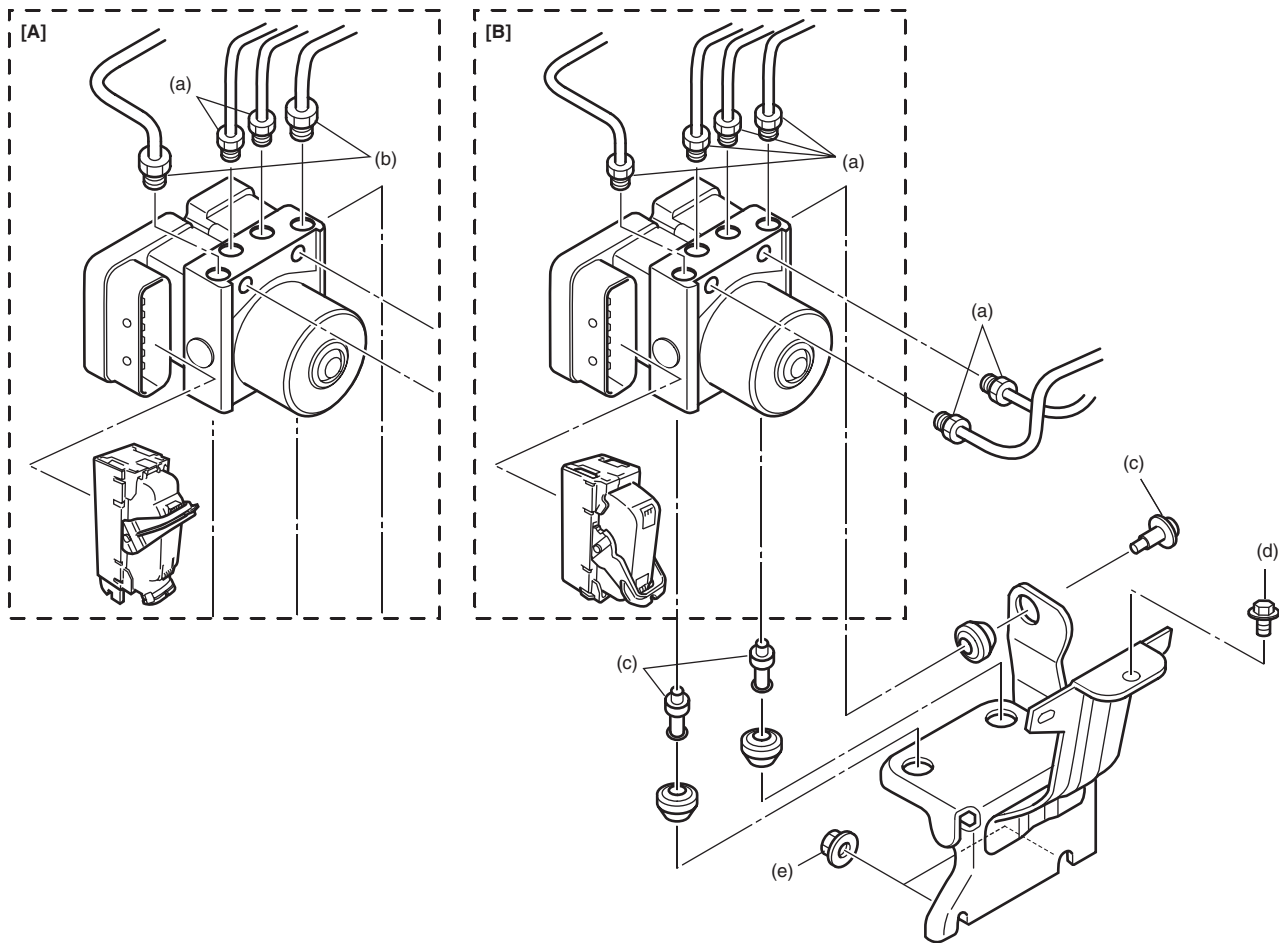

I6JB01450017-06

[A]: ESP® model	[B]: Non-ESP® model
-----------------	---------------------

2) Connect ABS (ESP®) control module connector and lock it as shown in figure.

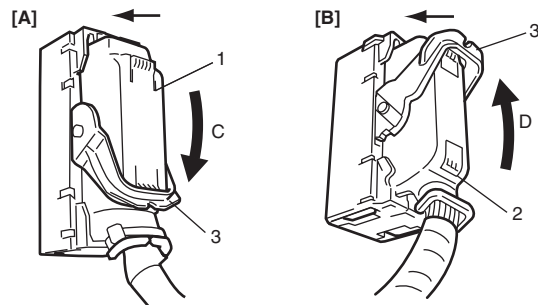

I6JB01450018-03

[A]: ESP® model	1. ESP® control module connector
[B]: Non-ESP® model	2. ABS control module connector
C: Pull down until lock to disconnect	3. Lock
D: Pull up until lock to disconnect	

- 3) Connect harness clamp to bracket.
- 4) Install ECM referring to "Engine Control Module (ECM) Removal and Installation in Section 1C".
- 5) Connect negative cable at battery.
- 6) Bleed air from brake system referring to "Air Bleeding of Brake System in Section 4A".
- 7) Check each installed part for fluid leakage.
- 8) For ESP® model, perform "Sensor Calibration in Section 4F".
- 9) Perform "Hydraulic Unit Operation Check".
- 10) Turn ignition switch to OFF position once and then ON position. In this state, make sure that warning / indicator lights are turn off.
- 11) Check DTC(s) are not stored in hydraulic unit / control module.

Front Wheel Speed Sensor On-Vehicle Inspection


S6JB0B4506005

Output Voltage Inspection

- 1) Disconnect negative cable from battery.
- 2) Hoist vehicle a little.
- 3) Disconnect wheel speed sensor connector.
- 4) Disconnect wheel speed grommet from vehicle body.
- 5) Set up measuring devices as shown in figure, the resistance to 115 Ω and the power supply voltage to 12 V.

⚠ CAUTION

Incorrect voltage and/or wrong connection cause damage to wheel speed sensor.

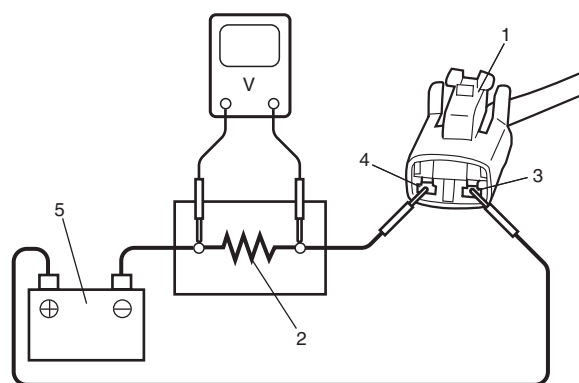

I5JB0A450026-03

1. Wheel speed sensor connector	4. "BLK" wire terminal
2. Resistance (115 Ω)	5. Power supply (12 V)
3. "WHT" wire terminal	

- 6) Measure voltage at resistance without wheel rotation.
If voltage is out of specification, check sensor, mating encoder and their installation conditions.


Voltage at the resistance (115 Ω) without wheel rotation
680 to 960 mV

- 7) Measure voltage at resistance with wheel rotation and confirm voltage alternately changes between high and low voltages.
If voltage does not change with wheel rotation, check sensor, mating encoder and their installation conditions.

Voltage at the resistance (115 Ω) with wheel rotation

High voltage "a": 1360 to 1930 mV

Low voltage "b": 680 to 960 mV

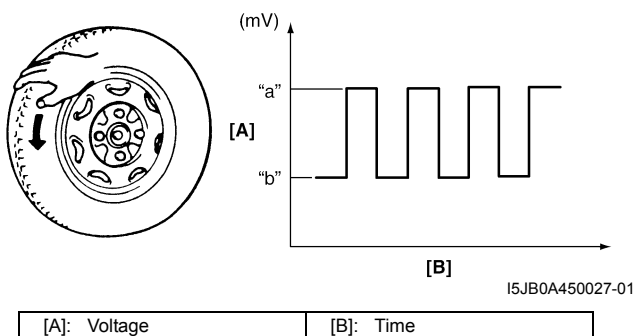

I5JB0A450027-01


Reference

When using oscilloscope for this check, check if peak-to-peak voltage and waveform meet specification.

Peak-to-peak Voltage at the resistance (115 Ω) with wheel rotation

High voltage "a": 1360 to 1930 mV

Low voltage "b": 680 to 960 mV

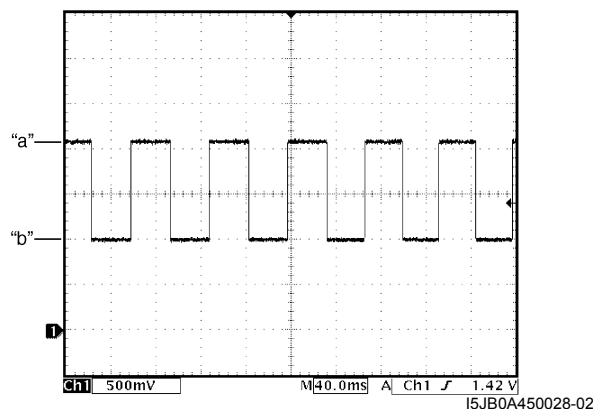

I5JB0A450028-02

Front Wheel Speed Sensor Removal and Installation


S6JB0B4506006

⚠ CAUTION

- Do not pull wire harness when removing and installing front wheel speed sensor.
- Do not cause damage to surface of front wheel speed sensor and do not allow dust, etc. to enter its installation hole.

Removal

- 1) Disconnect negative cable from battery.
- 2) Disconnect front wheel speed sensor coupler (1).
- 3) Hoist vehicle and remove wheel.
- 4) Remove harness clamp, clamp bolts (2) and grommet (3).
- 5) Remove front wheel speed sensor (4) from knuckle.

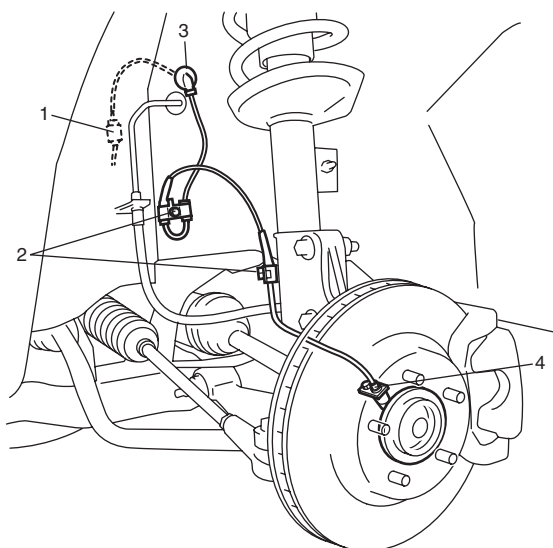

I5JB0A450029-01

Installation



- 1) Check that no foreign material is attached to sensor (1) and mating encoder (2).
- 2) Install it by reversing removal procedure.

Tightening torque

Front wheel speed sensor bolt (a): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

Front wheel speed sensor harness clamp bolt (b): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

- 3) Check that there is no clearance between sensor and knuckle.

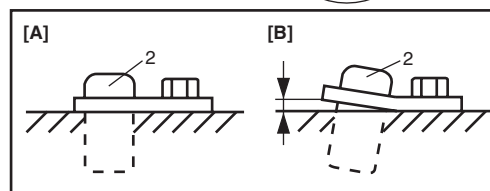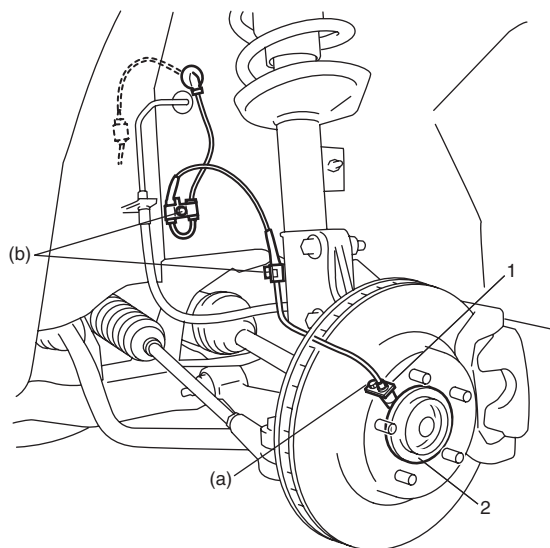

I5JB0A450030-01


[A]: OK

[B]: NG

Front Wheel Speed Sensor Inspection

S6JB0B4506007

Check sensor for damage.
If any malfunction is found, replace.

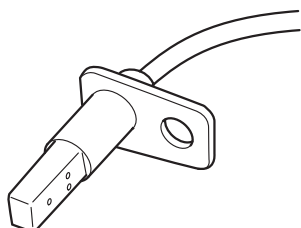

I5JB0A450031-01

Rear Wheel Speed Sensor On-Vehicle Inspection

S6JB0B4506008

Refer to "Front Wheel Speed Sensor On-Vehicle Inspection" since rear wheel speed sensor is the same as front wheel speed sensor.

Rear Wheel Speed Sensor Removal and Installation


S6JB0B4506009

⚠ CAUTION

- Do not pull wire harness when removing and installing rear wheel speed sensor.
- Do not cause damage to surface of rear wheel speed sensor and do not allow dust, etc. to enter its installation hole.

Removal

- 1) Disconnect negative cable from battery.
- 2) Disconnect rear wheel speed sensor coupler (1).
- 3) Hoist vehicle and remove wheel.
- 4) Remove harness clamp (4) and clamp bolts (2).
- 5) Remove rear wheel speed sensor (3) from knuckle.

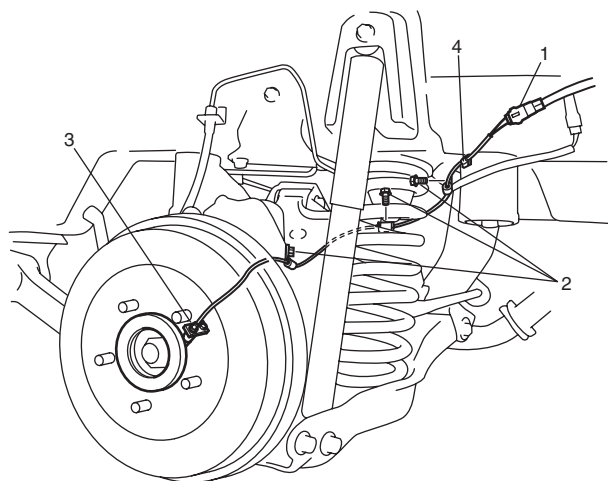

I5JB0A450032-02

Installation

Reverse removal procedure for installation noting the following.



- Check that no foreign material is attached to sensor (1) and mating encoder (2).
- Be sure to install wheel speed sensor (1) and its bolt at the correct (upper) position as shown in figure. Tighten sensor bolt and harness clamp bolts to specified torque.

Tightening torque

Rear wheel speed sensor bolt (a): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

Rear wheel speed sensor harness clamp bolt (b): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

- Check that there is no clearance between sensor and brake back plate.

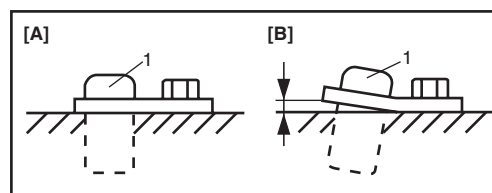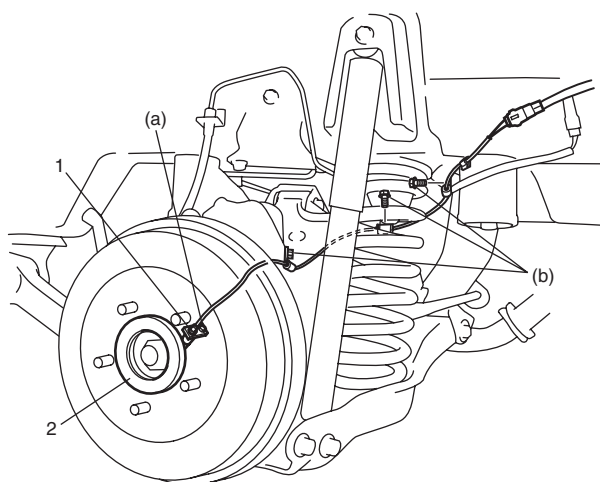

I5JB0A450033-01

[A]: OK

[B]: NG

Rear Wheel Speed Sensor Inspection

S6JB0B4506010

Refer to "Front Wheel Speed Sensor Inspection" since rear wheel speed sensor is the same as front wheel speed sensor.


Front Wheel Encoder On-Vehicle Inspection

S6JB0B4506011

Before inspect front wheel encoder, remove front drive shaft referring to "Front Drive Shaft Assembly Removal and Installation: Front in Section 3A".

- Check encoder (1) for being crack, damaged or deformed.
- Turn wheel and check if encoder rotation is free from eccentricity and looseness.
- Check that no foreign material is attached.

If any faulty is found, repair or replace. Refer to "Front Wheel Hub Assembly Removal and Installation in Section 2B".

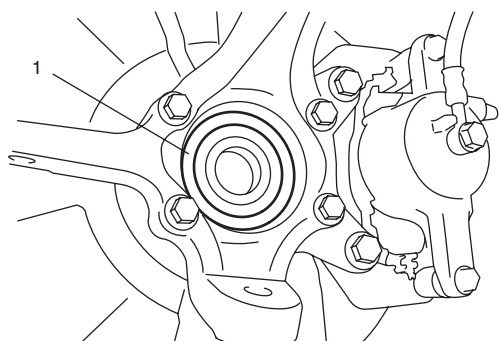

I5JB0A450034-01

Front Wheel Encoder Removal and Installation

S6JB0B4506012

⚠ CAUTION

Front wheel encoder is included in front wheel hub assembly. If front wheel encoder needs to be replaced, replace it as a front wheel hub assembly.


For removal and installation of front wheel hub assembly, referring to "Front Wheel Hub Assembly Removal and Installation in Section 2B".

Rear Wheel Encoder On-Vehicle Inspection

S6JB0B4506013

Before inspect rear wheel encoder, remove rear drive shaft referring to "Rear Drive Shaft Assembly Removal and Installation: Rear in Section 3A".

- Check encoder (1) for being crack, damaged or deformed.
 - Turn wheel and check if encoder rotation is free from eccentricity and looseness.
 - Check that no foreign material is attached.
- If any faulty is found, repair or replace. Refer to "Rear Wheel Hub Assembly Removal and Installation in Section 2C".

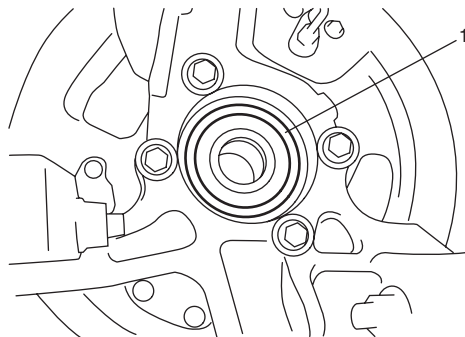

I5JB0A450035-01

Rear Wheel Encoder Removal and Installation

S6JB0B4506014

⚠ CAUTION

Rear wheel encoder is included in rear wheel hub assembly. If rear wheel encoder needs to be replaced, replace it as a rear wheel hub assembly.

For removal and installation of rear wheel hub assembly, referring to "Rear Wheel Hub Assembly Removal and Installation in Section 2C".

Specifications

Tightening Torque Specifications

S6JB0B4507001

Fastening part	Tightening torque			Note
	N·m	kgf-m	lb-ft	
Brake pipe flare nut (M10)	16	1.6	11.5	🔧
Brake pipe flare nut (M12)	19	1.9	14.0	🔧
ABS (ESP®) hydraulic unit / control module assembly bolt	9	0.9	6.5	🔧
ABS (ESP®) hydraulic unit / control module assembly bracket bolt	25	2.5	18.0	🔧
ABS (ESP®) hydraulic unit / control module assembly bracket nut	25	2.5	18.0	🔧
Front wheel speed sensor bolt	11	1.1	8.0	🔧
Front wheel speed sensor harness clamp bolt	11	1.1	8.0	🔧
Rear wheel speed sensor bolt	11	1.1	8.0	🔧
Rear wheel speed sensor harness clamp bolt	11	1.1	8.0	🔧

NOTE

The specified tightening torque is also described in the following.
“ABS (ESP®) hydraulic unit / control module Assembly Components”


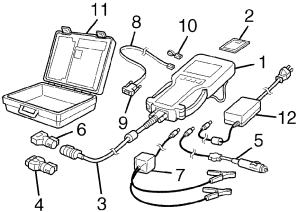
Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Special Tools and Equipment

Special Tool

S6JB0B4508001

<p>09950-78220 Flare nut wrench (10 mm)</p> <p>🔧</p> 	<p>SUZUKI scan tool</p> <p>—</p> <p>This kit includes following items. 1. Tech 2, 2. PCMCIA card, 3. DLC cable, 4. SAE 16/19 adapter, 5. Cigarette cable, 6. DLC loop back adapter, 7. Battery power cable, 8. RS232 cable, 9. RS232 adapter, 10. RS232 loop back connector, 11. Storage case, 12. 🧰 / 🧰</p> 
--	--

Electronic Stability Program

Precautions

Precautions in Diagnosing Troubles

S6JB0B4600001

To ensure that the trouble diagnosis is done accurately and smoothly, observe the following and follow "Electronic Stability Program Check".

- Diagnostic information stored in ESP® control module memory can be cleared as well as checked by using SUZUKI scan tool. Before using scan tool, read its Operator's (Instruction) Manual carefully to have good understanding as to what functions are available and how to use it.
- If the vehicles was operated in any of the following ways, ESP® warning light may light momentarily but this does not indicate anything abnormal in ESP®.
 - The vehicle was driven with parking brake pulled.
 - The vehicle was driven with brake dragging.
 - The vehicle was stuck in mud, sand, etc.
 - Wheel spin occurred while driving.
 - Wheel(s) was rotated while the vehicle was jacked up.
- Be sure to read "Precaution for CAN Communication System in Section 00" before inspection and observe what is written there.
- Be sure to use the trouble diagnosis procedure as described in "Electronic Stability Program Check". Failure to follow it may result in incorrect diagnosis. (Some other diagnosis trouble code may be stored by mistake in the memory of ESP® control module during inspection.)
- When disconnecting ESP® control module connector (1), pull up lock lever (2) of connector. When connecting, set the connector on ESP® hydraulic unit / control module assembly and pull down the lock lever (2) until it locks.

- Communication of ECM, TCM (A/T model), BCM, ESP® (ABS) control module (if equipped), 4WD control module (if equipped), keyless start control module (if equipped) and combination meter is established by CAN (Controller Area Network). Therefore, be sure to read "Precaution for CAN Communication System in Section 00" before inspection and handling CAN communication line.

Precautions in On-Vehicle Service

S6JB0B4600002


When connector is connected to ESP® hydraulic unit / control module assembly, do not disconnect connectors of sensors with ignition switch ON. Otherwise, DTC will be set in ESP® control module.

Precautions in Hydraulic Unit Operation Check

S6JB0B4600003

ESP® hydraulic unit / control module assembly function is checked by correct wheel lock / release condition when brake pressure is pressurized / depressurized using SUZUKI scan tool. The hydraulic unit operation check referring to "Hydraulic Unit Operation Check in Section 4E" should be performed to confirm the correct brake pipe connection in the following cases.

- ESP® hydraulic unit / control module assembly was replaced.
- Brake pipe and/or hose were replaced.

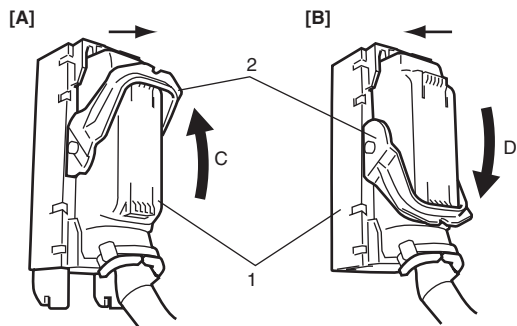

I6JB01460001-01

[A]: Disconnect	C: Pull up to disconnect
[B]: Connect	D: Pull down to connect

Precautions in Sensor Calibration

S6JB0B4600004

ESP® control module stores calibration points data of yaw rate / G sensor assembly and master cylinder pressure sensor. Steering angle sensor stores calibration point data of itself.

TCS and stability control system use these sets of data.

When the following operation is done, calibration should be performed since the original calibration points are deleted.

Sensor	Procedures required calibration
Steering angle sensor	<ul style="list-style-type: none"> Power is not supplied to steering angle sensor. (battery and/or fuse is removed.) Steering angle sensor is replaced. Power is not supplied to ESP® control module. (battery, fuse and/or connector is removed.) ESP® hydraulic unit / control module assembly is replaced.
Master cylinder pressure sensor	<ul style="list-style-type: none"> ESP® hydraulic unit / control module assembly is removed or replaced.
Yaw rate / G sensor assembly	<ul style="list-style-type: none"> Yaw rate / G sensor assembly is removed or replaced. ESP® hydraulic unit / control module assembly is replaced.

Perform sensor calibration according to "Sensor Calibration".

Precautions in Speedometer Test or Other Tests

S6JB0B4600005

When performing speedometer or a bench test while rotating a tire, ESP® function must be kept at stop. It is possible to stop ESP® function temporarily by ESP® OFF switch. In this case, however, the function is forced to come back to work when the speed exceeds 30km/h (18.5 mph) and may hinder accurate testing.

There are two ways to stop the ESP® function completely as described below.

- Connect the SUZUKI scan tool, set to the "MISC. TEST" mode to stop the ESP® function. Refer to SUZUKI scan tool operator's manual for further details.
- Disconnect the connector of the steering angle sensor, and ESP® function is forced to enter the fail-safe mode, then ESP® function is stopped.

However, when this method is used, DTC remains in the memory of the ESP® control module. Therefore, after the test, re-connect the connector, clear DTC in the memory of the ESP® control module. And calibrate steering angle sensor referring to "Sensor Calibration".

General Description

Electronic Stability Program Description

S6JB0B4601001

Electronic Stability Program (ESP®) main function is to control ABS / EBD, TCS and stability.

- ABS / EBD
ABS function is that four wheel brake forces are independently varied with referring each wheel slip condition.
EBD function is that front and rear wheel braking forces are varied with referring loading distribution of the vehicle.
ABS improves the vehicle stability, controllability and braking performance.
For the details, refer to "ABS Description in Section 4E".
- TCS (Traction Control System)
TCS function is that engine torque is controlled and brake is applied with referring wheel spin condition during vehicle starting and accelerating.
- Stability control system
Stability control system is that engine torque is controlled and brake is applied with referring vehicle condition (over steering, under steering) during cornering.

ESP® is a registered trademark of Daimler Chrysler AG.

ESP® Hydraulic Unit / Control Module Assembly Description


ESP® control module is a component of ESP® hydraulic unit / control module assembly and has the following functions.

Self-Diagnosis Function

ESP® control module monitors each input and output signals. When ESP® control module detects any malfunction, some of ABS warning light (1), EBD warning light (brake warning light) (2), ESP® warning light (3), SLIP indicator light (4), ESP® OFF light (5) are turned ON and indicate the abnormality to driver.

- When ignition switch is turned ON, ABS warning, EBD warning, ESP® warning, SLIP indicator and ESP® OFF light for 2 seconds to check its circuit.
- When no abnormality is detected (the system is in good condition), ABS warning, EBD warning, ESP® warning, SLIP indicator and ESP® OFF turn OFF after 2 seconds.

- When an abnormality in the system is detected, some of ABS warning light, EBD warning light (brake warning light), ESP® warning light, SLIP indicator light and/or ESP® OFF light are turned ON and the area where that abnormality lies is stored in the memory in ESP® control module.

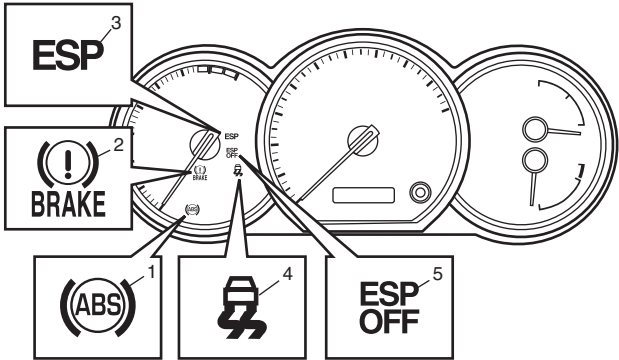


I6JB01460002-02

Fail-Safe Mode

When ESP® control module detects abnormality, the system goes into fail-safe mode. And some of functions of ABS, TCS, stability control system are shut down. For details of fail safe mode, refer to “Fail-Safe Table”.

Warning Light, Indicator Light Description

There are five types of warning light and indicator light in instrument cluster, which are controlled by ESP® control module. They give warning / indication to driver by changing the modes light ON / blinking / light OFF.

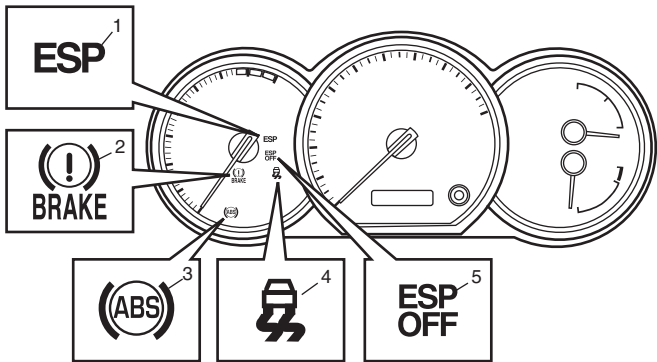

I6JB01460003-02

1. ESP® warning light	3. ABS warning light	5. ESP® OFF light
2. EBD warning light (brake warning light)	4. SLIP indicator light	

The followings are the condition and operation of warning lights and indicator lights.

Warning light / Indicator light	Condition and operation
ABS warning light	If ABS has abnormality, the light turns "ON".
EBD warning light (brake warning light)	<ul style="list-style-type: none"> If EBD system has abnormality, the light turns "ON". If brake fluid level in reservoir is lower than minimum level, the light turns "ON". Parking brake switch is ON, the light turns "ON".
ESP® warning light	If ESP® systems (other than ABS) has abnormality, the light turns "ON".
SLIP indicator light	<ul style="list-style-type: none"> If stability control system and traction control system is active, the light blinks at 5 Hz. If Steering angle sensor calibration is incompleted, the light blinks at 1 Hz.
ESP® OFF light	<ul style="list-style-type: none"> If ESP® OFF switch is turned "ON", the ESP® OFF light light up. When it is "ON", TCS and stability control system functions are controlled not to work. However, when the speed is over 30 km/h (18.5 mph), ESP® OFF light is turned "OFF" and TCS and stability control system function is back to work automatically. When transfer shift position (if equipped) is in 4L-lock, the ESP® OFF light light up to indicate engine torque down and stability control system in TCS are controlled not to activate to increase the driving force. However, the brake-traction control works through ESP® OFF light light up. ESP® OFF light light up to indicate that brake control of traction control function is controlled not to act if brake pad temperature is over 350 °C (662 °F) and any of wheel is in wheel spin condition.

CAN Communication System Description

S6JB0B4601004

Refer to "CAN Communication System Description in Section 1A" for CAN communication system description. ESP® control module communicates control data with each control module as follows.

ESP® Control Module Transmission Data

			ECM	Combination Meter	4WD control module (if equipped)	Steering angle sensor
ESP® control module	Transmit	DATA	Torque up request	○		
			Torque down request	○		
			Wheel speed signal (front)	○	○	
			Wheel speed signal (rear right)	○	○	
			Wheel speed signal (rear left)	○	○	
			ESP® system (other than ABS) active	○	○	
			ABS active	○	○	
			ESP® OFF indication ON	○		
			ESP® indication ON		○	
			ABS indication ON		○	
			EBD indication ON		○	
			Steering angle neutral position			○

I6JB01460004-02

ESP® Control Module Reception Data


				ECM	TCM (A/T model)	BCM	4WD control module (if equipped)	Steering angle sensor
ESP® control module	<div>← Receive</div>	DATA	Engine torque signal	○				
			Accelerator pedal position	○				
			Engine speed	○				
			Cruise control signal (if equipped)	○				
			Brake pedal switch signal	○				
			Transmission gear selector position		○			
			Brake fluid level switch signal			○		
			Parking brake switch signal			○		
			4WD shift position (if equipped)				○	
			Steering angle signal					○

I6JB0B460001-02

CAN Communication System For Electronic Stability Program Description

S6JB0B4601005

There is CAN communication system only for ESP® control module (1) and yaw rate / G sensor assembly (2). This CAN communication system is independent from other control modules.

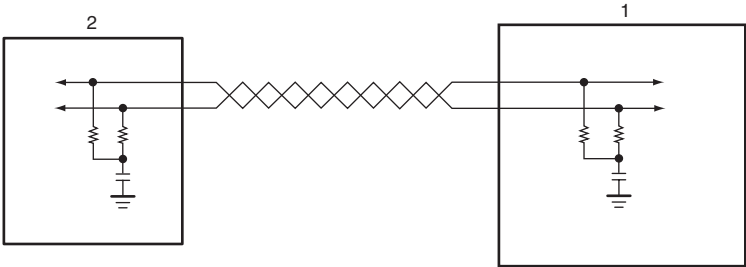

I6JB01460006-01

ESP® communicates control data with yaw rate / G sensor assembly as follows.

ESP® Transmission Data to Yaw Rate / G Sensor Assembly

- Longitudinal G neutral position
- Lateral G neutral position


ESP® Reception Data from Yaw Rate / G Sensor Assembly

- Vehicle yaw rate signal
- Vehicle longitudinal G signal
- Vehicle lateral G signal
- Yaw rate / G sensor assembly related malfunction

Schematic and Routing Diagram


Electronic Stability Program Schematic

S6JB0B4602001

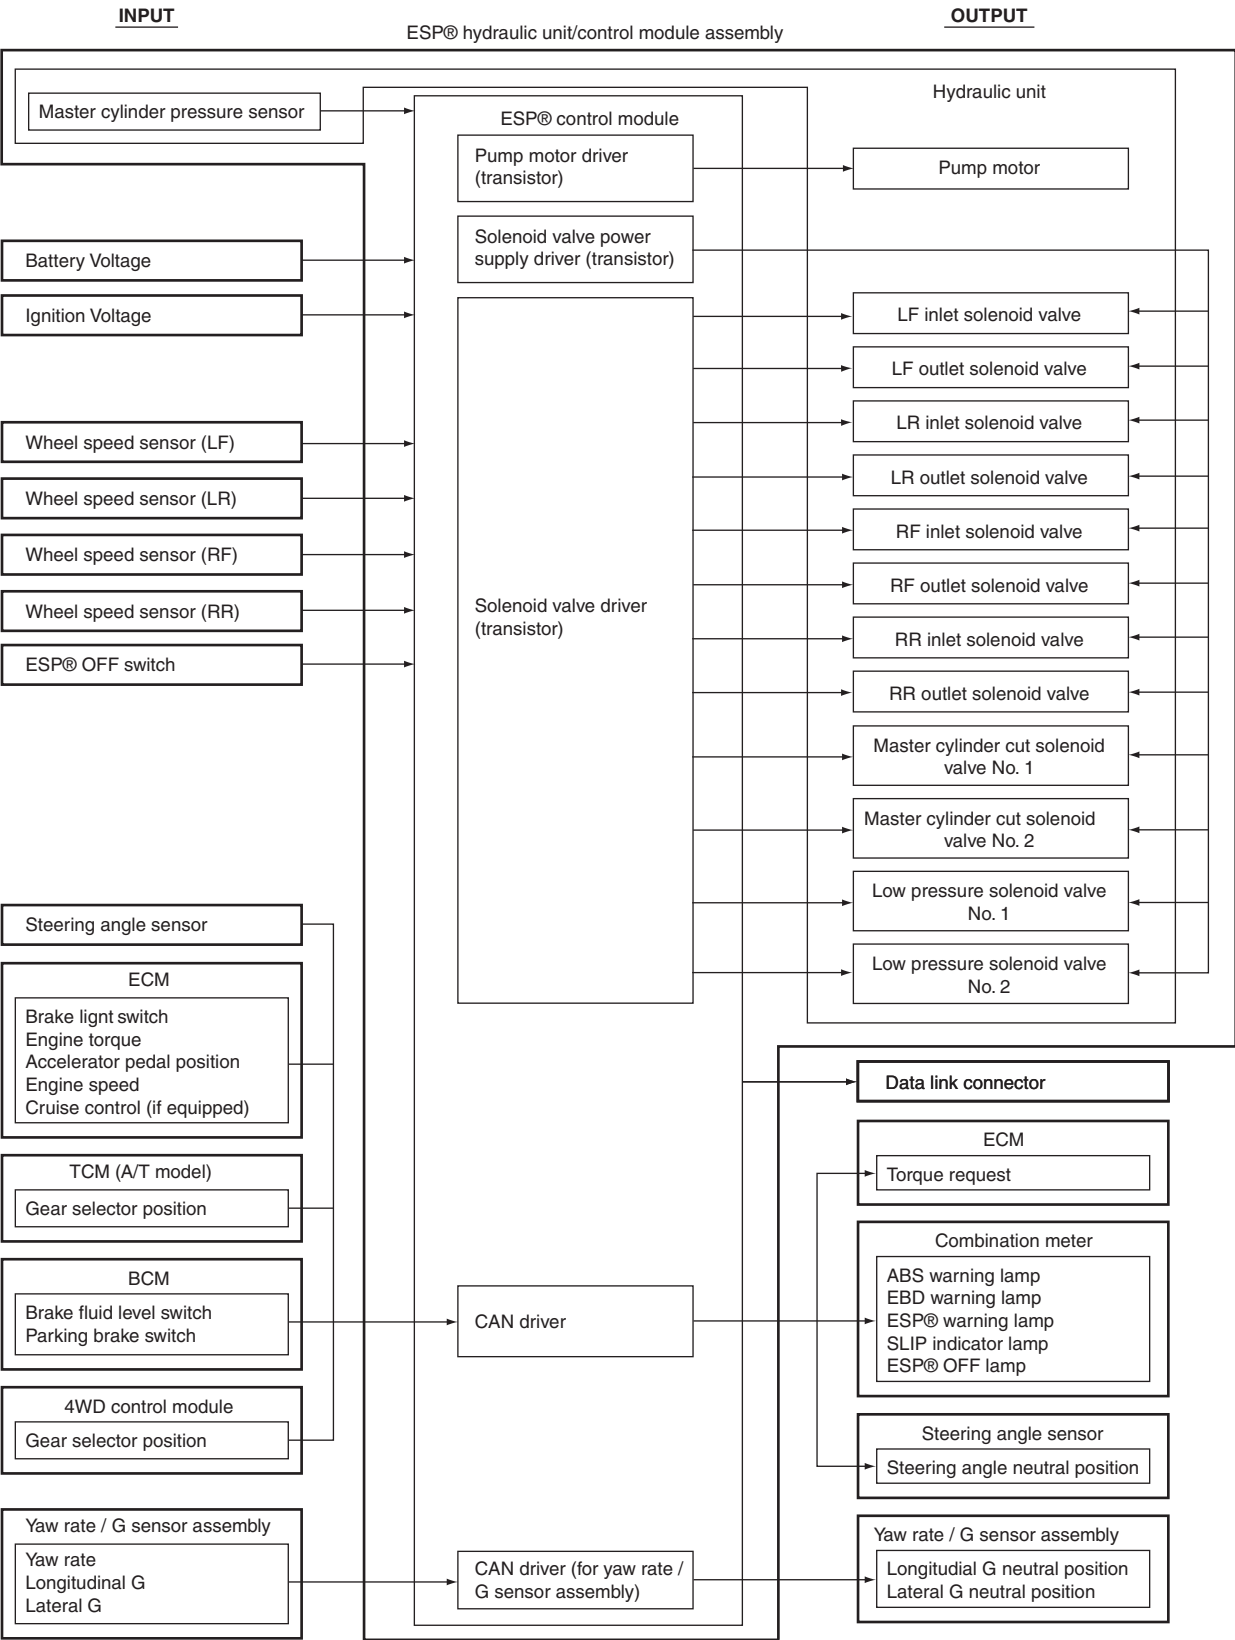

Electronic Stability Program Wiring Circuit Diagram

S6JB0B4602002

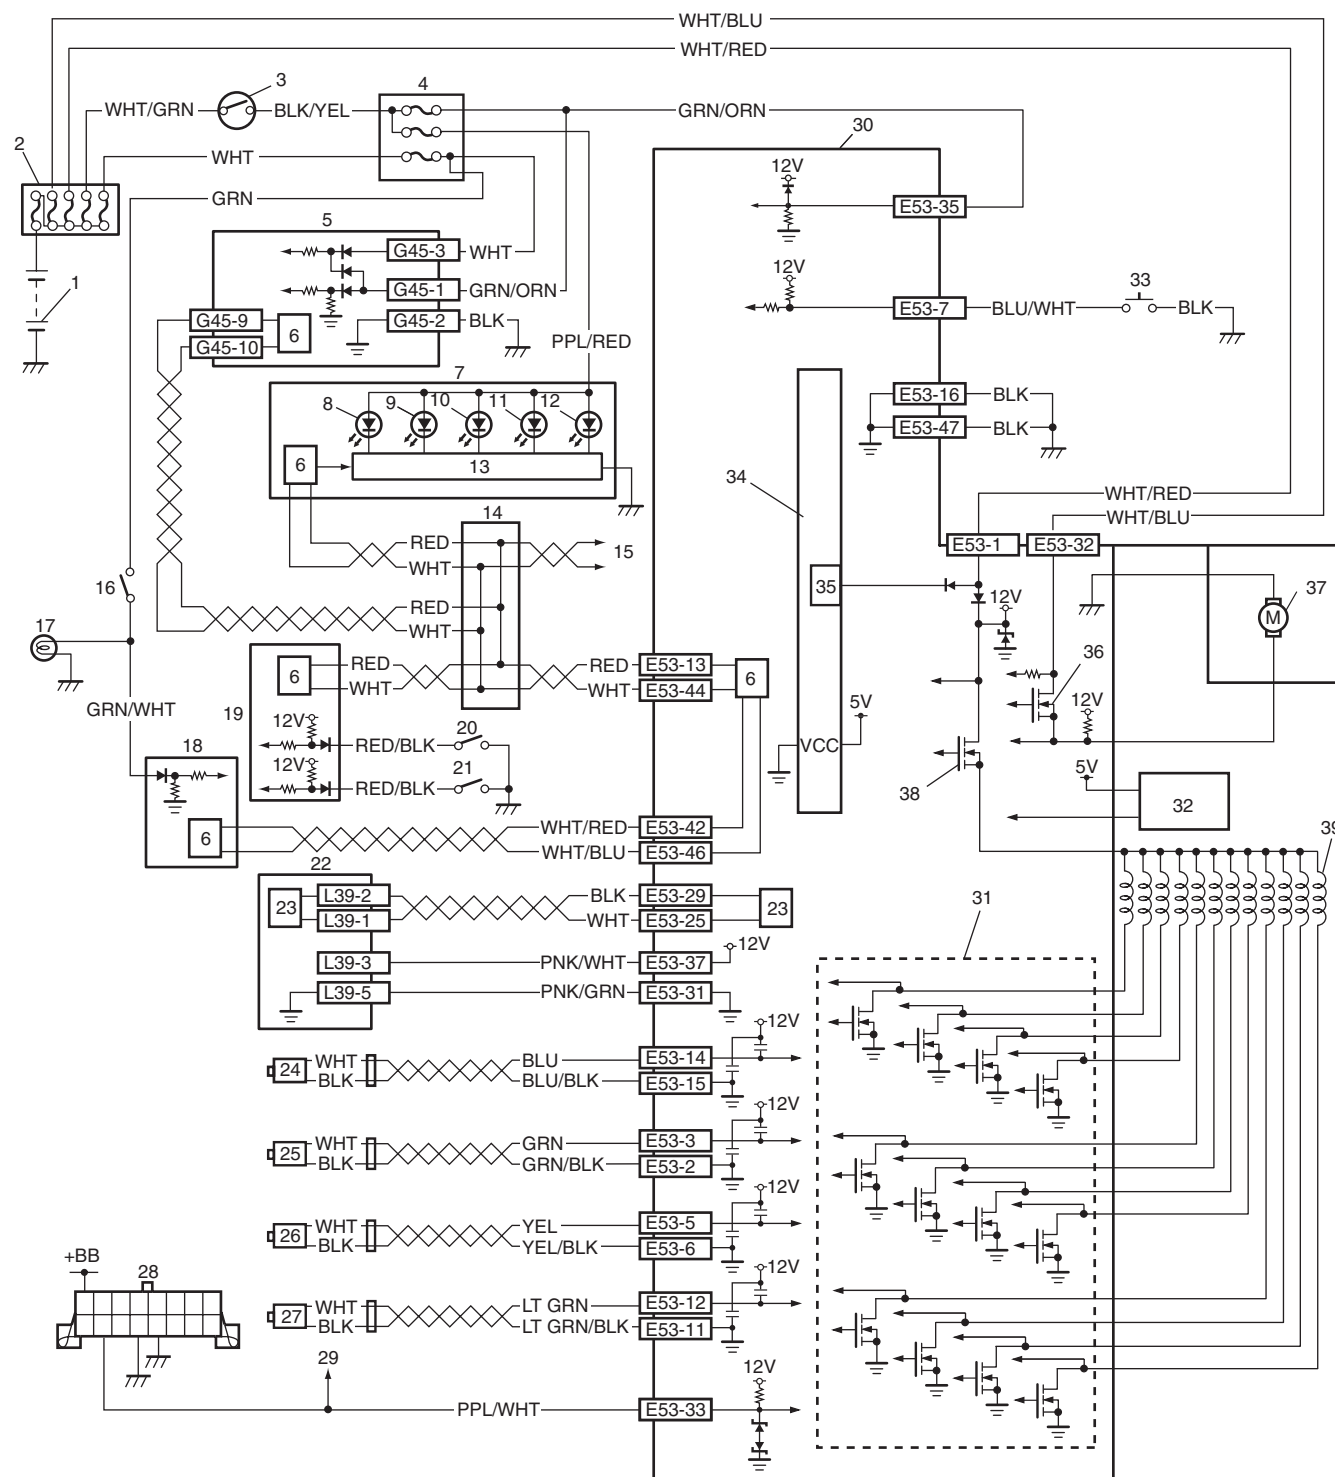


I6JB0B460004-01

1. Battery	14. Junction connector	27. Right-rear wheel speed sensor
2. Main fuse box	15. To TCM, 4WD control module and keyless start control module	28. Data link connector
3. Ignition switch	16. Brake light switch	29. To ECM, TCM, SDM, BCM and 4WD control module
4. Junction block assembly	17. Brake light	30. ESP® hydraulic unit / control module assembly
5. Steering angle sensor	18. ECM	31. Solenoid valve driver (transistor)
6. CAN driver	19. BCM	32. Master cylinder pressure sensor
7. Combination meter	20. Brake fluid level switch	33. ESP® OFF switch
8. SLIP indicator light	21. Parking brake switch	34. Power control unit
9. ESP® OFF light	22. Yaw rate / G sensor assembly	35. Internal memory

10. ESP® warning light	23. CAN driver (for yaw rate / G sensor assembly)	36. Pump motor driver (transistor)
11. ABS warning light	24. Left-front wheel speed sensor	37. Pump motor
12. EBD warning light (brake warning light)	25. Right-front wheel speed sensor	38. Solenoid valve power supply driver (transistor)
13. Light driver module	26. Left-rear wheel speed sensor	39. Solenoid valves

Terminal Arrangement of ESP® Control Module Connector (Viewed from Terminal Side)

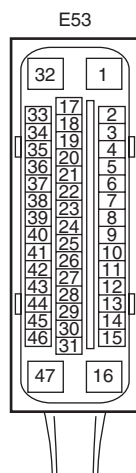


I6JB01460009-02

Terminal	Circuit	Terminal	Circuit
E53-1	Solenoid valve power supply driver (transistor)	E53-25	CAN communication line (low) for yaw rate / G sensor assembly
E53-2	Right-front wheel speed sensor (–)	E53-26	—
E53-3	Right-front wheel speed sensor (+)	E53-27	—
E53-4	—	E53-28	—
E53-5	Left-rear wheel speed sensor (+)	E53-29	CAN communication line (high) for yaw rate / G sensor assembly
E53-6	Left-rear wheel speed sensor (–)	E53-30	—
E53-7	Fluid pressure switch signal	E53-31	Ground for yaw rate / G sensor assembly
E53-8	—	E53-32	Pump motor driver (transistor)
E53-9	—	E53-33	Data link connector
E53-10	—	E53-34	—
E53-11	Right-rear wheel speed sensor (–)	E53-35	Ignition switch
E53-12	Right-rear wheel speed sensor (+)	E53-36	—
E53-13	CAN communication line (high)	E53-37	Power source for yaw rate / G sensor assembly
E53-14	Left-front wheel speed sensor (+)	E53-38	—
E53-15	Left-front wheel speed sensor (–)	E53-39	—
E53-16	Ground	E53-40	—
E53-17	—	E53-41	—
E53-18	—	E53-42	CAN communication line (high) for ECM
E53-19	—	E53-43	—
E53-20	—	E53-44	CAN communication line (low)
E53-21	—	E53-45	—
E53-22	—	E53-46	CAN communication line (low) for ECM
E53-23	—	E53-47	Ground
E53-24	—		

Component Location

Electronic Stability Program Component Location

S6JB0B4603001

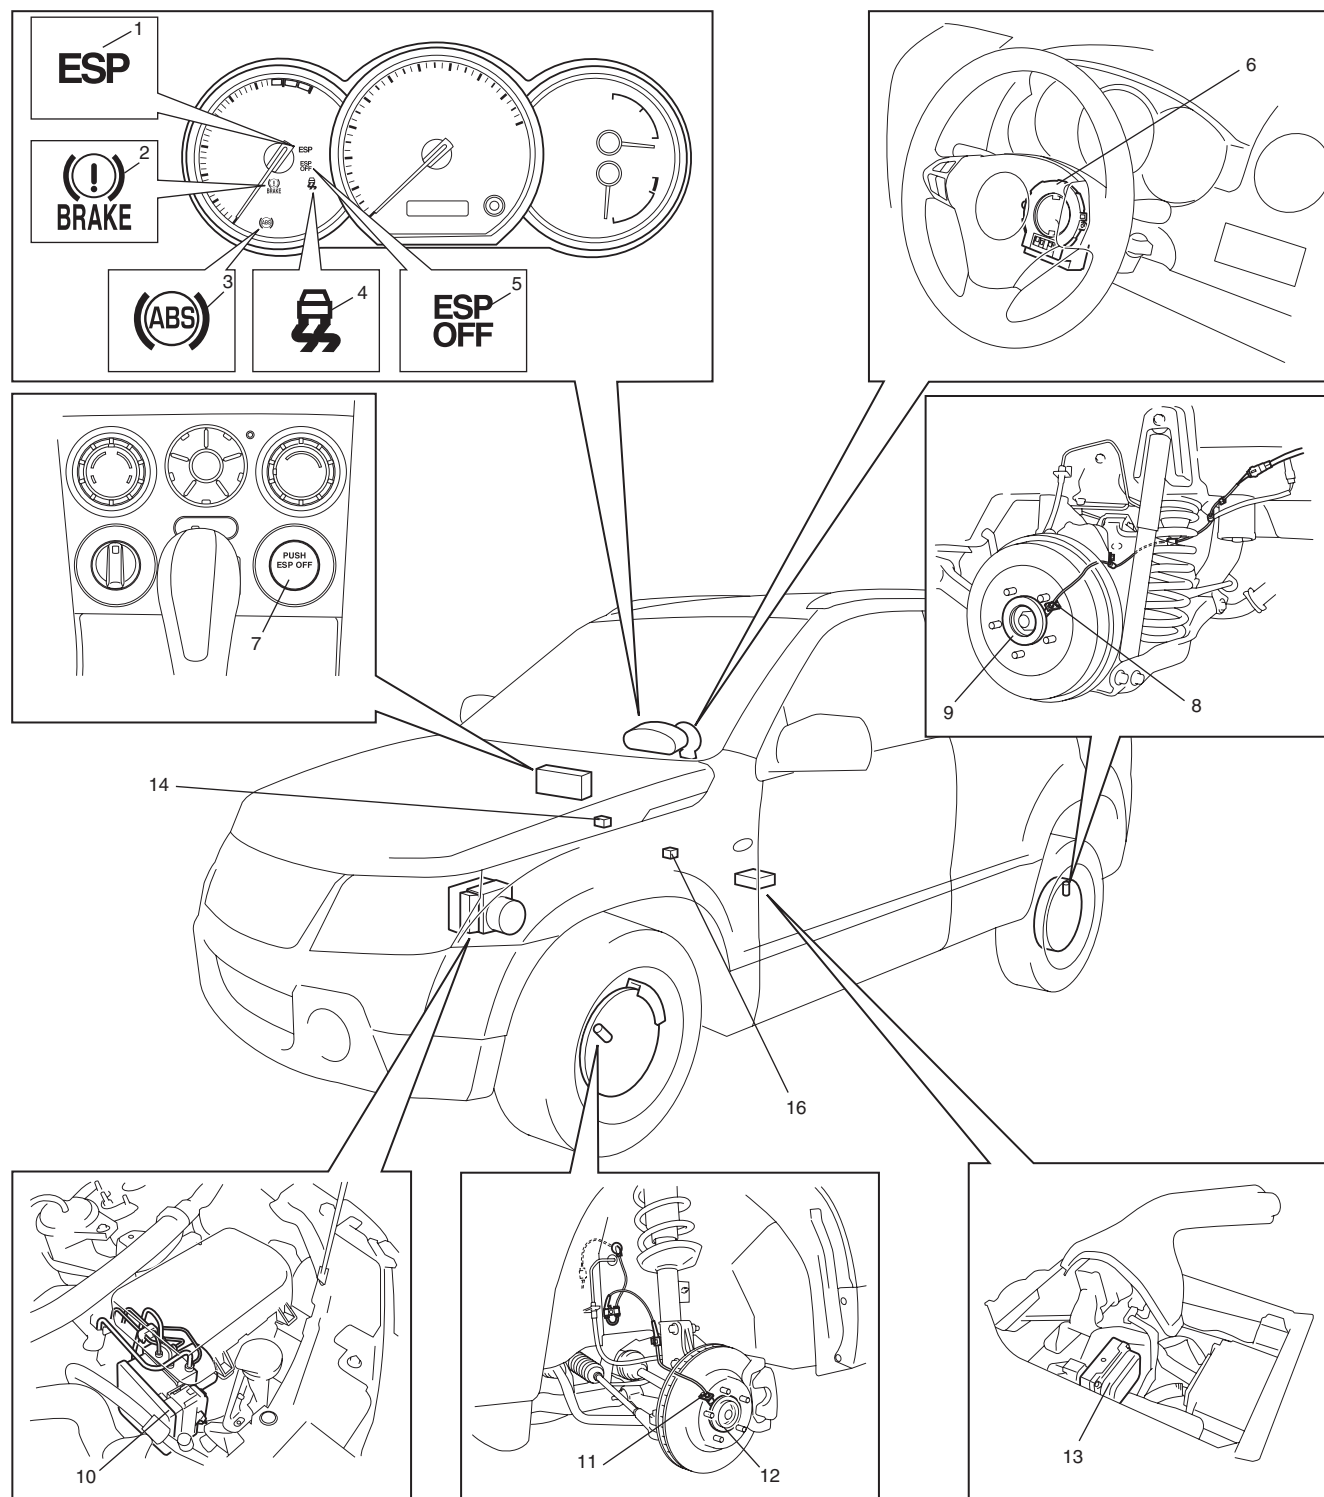

16JB0B460005-02

1. ESP® warning light	6. Steering angle sensor	11. Front wheel speed sensor
2. EBD warning light (brake warning light)	7. ESP® OFF switch	12. Front wheel encoder
3. ABS warning light	8. Rear wheel speed sensor	13. Yaw rate / G sensor assembly
4. SLIP indicator light	9. Rear wheel encoder	14. Data link connector
5. ESP® OFF light	10. ESP® hydraulic unit / control module assembly	15. Brake light switch

Diagnostic Information and Procedures

Electronic Stability Program Check

S6JB0B4604001

Refer to the following items for the details of each step.

Step	Action	Yes	No
1	🔧 Malfunction analysis 1) Perform "Customer complaint analysis: ". 2) Perform "Problem symptom confirmation: ". 3) Perform "DTC check, record and clearance: " and recheck DTC. <i>Is there any malfunction DTC?</i>	Go to Step 4.	Go to Step 2.
2	🔧 Driving test 1) Perform "Step 2: Driving Test: ". <i>Is trouble symptom identified?</i>	Go to Step 3.	Go to Step 6.
3	🔧 DTC check 1) Perform "DTC Check". <i>Is it malfunction code?</i>	Go to Step 4.	Go to Step 5.
4	🔧 ESP® check 1) Inspect and repair referring to applicable DTC flow. <i>Does trouble recur?</i>	Go to Step 5.	Go to Step 7.
5	🔧 Brakes diagnosis 1) Inspect and repair referring to "Brakes Symptom Diagnosis in Section 4A". <i>Does trouble recur?</i>	Go to Step 3.	Go to Step 7.
6	🔧 Check for intermittent problem 1) Check intermittent troubles referring to "Intermittent and Poor Connection Inspection in Section 00" and related circuit of trouble code recorded in Step 1. <i>Does trouble recur?</i>	Go to Step 4.	Go to Step 7.
7	🔧 Final confirmation test 1) Perform "Step 7: Final Confirmation Test: ". <i>Does trouble recur?</i>	Go to Step 3.	End.

Step 1: Malfunction Analysis**Customer complaint analysis**

Record details of the problem (failure, complaint) and how it occurred as described by the customer.

For this purpose, use of such a questionnaire form as shown in the following will facilitate collecting information to the point required for proper analysis and diagnosis.

Customer questionnaire (Example)

Customer's name:	Model:	VIN:	
Date of issue:	Date of Reg:	Date of problem:	Mileage:
Problem Symptoms	<ul style="list-style-type: none"> ● ESP® warning lamp abnormal: fails to turn on / fails to turn off ● ABS warning lamp abnormal: fails to turn on / fails to turn off ● EBD warning lamp abnormal: fails to turn on / fails to turn off ● Abnormal noise while vehicle is running: from motor, from valve, other_____ ● Wheel is locked at braking: ● Wheel is skidded at turning. ● Pump motor does not stop (running): ● Braking does not work: ● Other: 		
Frequency of occurrence	<ul style="list-style-type: none"> ● Continuous/Intermittent (_____ times a day, a month) / other_____ 		
Conditions for Occurrence of Problem	<ul style="list-style-type: none"> ● Vehicle at stop & ignition switch ON: ● When starting: at initial start only / at every start / Other_____ ● Vehicle speed: while accelerating / while decelerating / at stop / while turning / while running at constant speed / other_____ ● Road surface condition: Paved road / rough road / snow-covered road / other_____ ● Chain equipment: 		
Environmental Condition	<ul style="list-style-type: none"> ● Weather: fair / cloudy / rain / snow / other_____ ● Temperature: °F (_____ °C) 		
Diagnostic Trouble Code	<ul style="list-style-type: none"> ● First check: _____ Normal code / malfunction code (_____) ● Second check after test drive: Normal code / malfunction code (_____) 		

I6JB01460011-02

Problem symptom confirmation

If symptom in "Customer Questionnaire" is found or reproduced in the vehicle, confirm the symptom is problem or not. (This step should be done with the customer if possible.) Check warning lights related to brake system referring to "EBD Warning Light (Brake Warning Light) Comes ON Steady in Section 4E", "ABS Warning Light Check in Section 4E" and "ESP® Warning Light Check".

DTC check, record and clearance

Perform "DTC Check" procedure, record it and then clear it referring to "DTC Clearance".

Recheck DTC referring to "DTC Check".

When DTC which is recorded at DTC check procedure is detected again after performing DTC clearance, go to "Step 4: ESP® Check: " to proceed the diagnosis.

When DTC which is recorded at DTC check procedure is not indicated anymore after performing DTC clearance, ESP® control module does not perform the system diagnosis, or temporary abnormality may occur, therefore go to "Step 2: Driving Test: " to proceed the diagnosis.

Step 2: Driving Test

Test the vehicle at 40 km/h for more than a minute including left and right turns and check if any trouble symptom (such as ESP® warning light and/or ABS warning light) exists.

If the malfunction DTC is confirmed at ignition switch ON, proceed to Step 3.

If the malfunction DTC is not confirmed at ignition switch ON, proceed to Step 6.

Step 3: DTC Check

Recheck DTC referring to "DTC Check".

Step 4: ESP® Check

According to ESP® Check for the DTC confirmation in Step 3, locate the cause of the trouble, namely in a sensor, switch, wire harness, connector, actuator assembly or other part and repair or replace faulty parts.

Step 5: Brakes Diagnosis

Check the parts or system suspected as a possible cause referring to "Brakes Symptom Diagnosis in Section 4A" and based on symptoms appearing on the vehicle (symptom obtained through Steps 1 and 2 and repair or replace faulty parts, if any).

Step 6: Check for Intermittent Problem

Check parts where an intermittent trouble is easy to occur (e.g., wire harness, connector, etc.), referring to "Intermittent and Poor Connection Inspection in Section 00" and related circuit of trouble code recorded in Step 1 to 3.


Step 7: Final Confirmation Test

Confirm that the problem symptom has gone and the ESP® is free from any abnormal conditions. If what has been repaired is related to the malfunction DTC, clear the DTC once referring to "DTC Clearance" and perform test driving and confirm that no DTC is indicated.

ESP® Warning Light Check

S6JB0B4604022

- 1) Turn ignition switch ON.
- 2) Check that ESP® warning light (1) comes ON for about 2 seconds and then goes off.
If any faulty condition is found, advance to "ESP® Warning Light Does Not Come ON at Ignition Switch ON" or "ESP® Warning Light Comes ON Steady".

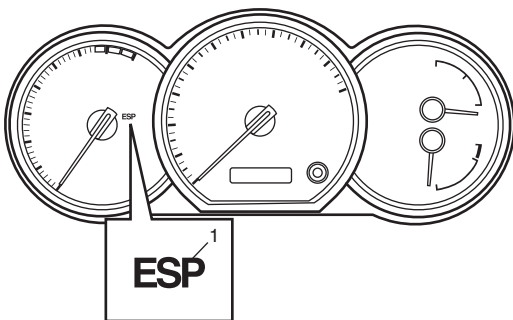

I6JB01460012-01

ABS Warning Light Check

S6JB0B4604002

Refer to "ABS Warning Light Check in Section 4E".

EBD Warning Light (Brake Warning Light) Check

S6JB0B4604003

Refer to "EBD Warning Light (Brake Warning Light) Check in Section 4E".


DTC Check

S6JB0B4604004

- 1) Turn ignition switch to OFF position.
- 2) Connect SUZUKI scan tool to data link connector (1).

Special tool

(A): SUZUKI scan tool

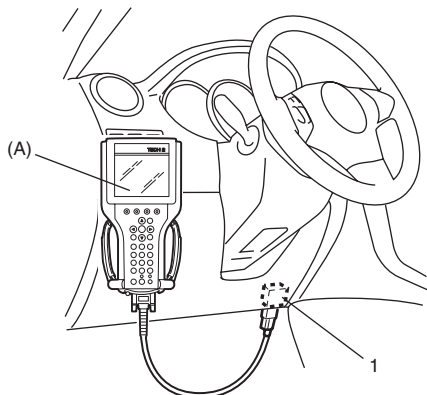

I5JB0A450008-01

- 3) Turn ignition switch to ON position.
- 4) Read DTC according to instructions displayed on SUZUKI scan tool and print it or write it down. Refer to SUZUKI scan tool operator's manual for further details.

NOTE

If SUZUKI scan tool can not communicate ESP® control module, perform "Serial Data Link Circuit Check".

- 5) After completing the check, turn ignition switch off and disconnect SUZUKI scan tool from DLC.

DTC Table

S6JB0B4604005

⚠ CAUTION

Be sure to perform "Electronic Stability Program Check" before starting diagnosis.

DTC (displayed on SUZUKI scan tool)	Diagnostic Items		Detecting condition (DTC will be set when detecting)	ABS warning light	EBD warning light	ESP® warning light
NO DTC	Normal		—	—	—	—
☞ C1015	Longitudinal G sensor in yaw rate / G sensor assembly failure		Longitudinal G sensor signal is out of specified range. (4WD model)	○	—	○
☞ C1016	Brake light switch failure		Vehicle behavior and brake light switch signal is disagreed for specified time.	—	—	—
☞ C1017	Lateral G sensor in yaw rate / G sensor assembly failure		Lateral G sensor signal is out of specified range.	—	—	○
☞ C1018	Brake fluid level switch failure		<ul style="list-style-type: none"> Brake fluid level is too low. Input voltage of brake fluid level switch to BCM is low. 	—	—	○
☞ C1020	Master cylinder pressure sensor power supply failure		Power supply voltage to master cylinder pressure sensor in ESP® hydraulic unit / control module assembly is too low.	—	—	○
☞ C1021	RF	Wheel speed sensor circuit failure	Wheel sensor signal is out of specified range.	○	*1	○
☞ C1025	LF					
☞ C1031	RR					
☞ C1035	LR					
☞ C1022	RF	Wheel speed sensor or encoder failure	Abnormal wheel speed sensor signal is detected.	○	*1	○
☞ C1026	LF					
☞ C1032	RR					
☞ C1036	LR					

DTC (displayed on SUZUKI scan tool)	Diagnostic Items		Detecting condition (DTC will be set when detecting)	ABS warning light	EBD warning light	ESP® warning light
C1023	Yaw rate sensor in yaw rate / G sensor assembly failure		<ul style="list-style-type: none">Yaw rate sensor signal is out of range.Vehicle behavior and yaw rate signal is disagreed.	—	—	○
C1024	Steering angle sensor circuit failure		<ul style="list-style-type: none">Steering angle sensor internal defect is detected by CPU in steering angle sensor.Steering angle sensor signal is out of specified range.	—	—	○
C1027	ESP® OFF switch circuit failure		Mechanical switch failure, failure in switch wiring is shorted to ground.	—	—	—
C1028	Master cylinder pressure sensor circuit failure		Input signal voltage from master cylinder pressure sensor in ESP® control module is too high or low.	—	—	○
C1034	Yaw rate / G sensor assembly power supply failure		Power supply voltage of yaw rate / G sensor assembly is too high when ignition switch OFF. Power supply voltage of yaw rate / G sensor assembly is too low when ignition switch ON.	—	—	○
C1037	Steering angle sensor power supply failure		Power supply voltage to steering angle sensor is too low.	—	—	○
C1038	Steering angle sensor detect rolling counter failure from ESP® control module		ESP® control module rolling counter failure is detected by steering angle sensor.	—	—	○
C1039	Yaw rate / G sensor assembly internal failure		Yaw rate / G sensor assembly internal failure is detected.	—	—	○
C1040	Stability control system function failure		Stability control is active for more than specified time without yaw rate change.	—	—	○
C1041	RF	Inlet solenoid valve circuit failure	Mismatching solenoid output and solenoid monitor is detected.	○	○	○
C1042		Outlet solenoid valve circuit failure				
C1045	LF	Inlet solenoid valve circuit failure				
C1046		Outlet solenoid valve circuit failure				
C1051	RR	Inlet solenoid valve circuit failure				
C1052		Outlet solenoid valve circuit failure				
C1055	LR	Inlet solenoid valve circuit failure				
C1056		Outlet solenoid valve circuit failure				
C1043	Master cylinder cut solenoid valve circuit No.1 failure					
C1044	Master cylinder cut solenoid valve circuit No.2 failure					
C1053	Low pressure solenoid valve circuit No.1 failure					
C1054	Low pressure solenoid valve circuit No.2 failure					

4F-15 Electronic Stability Program:

DTC (displayed on SUZUKI scan tool)	Diagnostic Items	Detecting condition (DTC will be set when detecting)	ABS warning light	EBD warning light	ESP® warning light
☞ C1057	ESP® (ABS) control module power supply circuit failure *3	ESP® (ABS) control module power supply voltage is too high.	○	○	○
		ESP® (ABS) control module power supply voltage is too low.	○	*2	○
☞ C1061	Pump motor and/or motor circuit failure	Defective pump motor and/or motor power supply voltage is too low.	○	—	○
☞ C1063	Solenoid valve power supply driver circuit failure	Mismatching solenoid output and solenoid monitor is detected.	○	○	○
☞ C1071	ESP® (ABS) control module internal defect	ESP® (ABS) control module internal defect is detected.	○	○	○
☞ C1073	Lost communication with yaw rate / G sensor assembly	CAN line communication error in ESP® control module and yaw rate / G sensor assembly is detected.	—	—	○
☞ C1075	Steering angle sensor calibration incomplete *4	Missing steering angle sensor calibration point data is detected.	—	—	○
☞ C1076	Master cylinder pressure sensor calibration incomplete	Master cylinder pressure sensor calibration is incompleted.	—	—	○
☞ C1077	Longitudinal G sensor in yaw rate / G sensor assembly calibration incomplete	Longitudinal G sensor in yaw rate / G sensor assembly calibration is incompleted. (4WD model)	○	—	○
☞ C1078	Lateral G sensor in yaw rate / G sensor assembly calibration incomplete	Lateral G sensor in yaw rate / G sensor assembly calibration is incompleted.	—	—	○
☞ C1090	ECM detect rolling counter failure from ESP® control module	ESP® control module rolling counter failure is detected by ECM.	—	—	○
☞ C1091	ECM data in CAN line failure	ECM sent invalid signal to ESP® control module.	—	—	○
☞ C1092	TCM data in CAN line failure	TCM sent invalid signal to ESP® control module. (A/T model)			
☞ C1093	4WD control module data in CAN line failure	4WD control module sent invalid signal to ESP® control module. (if equipped 4WD control module)			
☞ U1073	Control module communication bus off	Transmission error that is inconsistent between transmission data and transmission monitor (CAN bus monitor) data is detected more than 7 times continuously.	—	—	○
☞ U1100	Lost communication with ECM (reception error)	ECM message data is missing from CAN communication.	—	—	○
☞ U1101	Lost communication with TCM (reception error)	TCM message data is missing from CAN communication. (A/T model)			
☞ U1126	Lost communication with steering angle sensor (reception error)	Steering angle sensor message data is missing from CAN communication.			
☞ U1139	Lost communication with 4WD control module (reception error)	4WD control module message data is missing from CAN communication. (if equipped 4WD control module)			
☞ U1140	Lost communication with BCM (reception error)	BCM message data is missing from CAN communication.			

NOTE

- “O” in ABS warning light, EBD warning light and ESP® warning light column of the above table means warning light is lit when DTC is detected.
- *1: If two or more wheel speed sensor are defective, ABS warning light, EBD warning light and ESP® warning light are lit and all the control functions are deactivated. If one wheel speed sensor is defective, ABS warning light and ESP® warning light are lit and ABS and TCS / stability control are deactivated.
- *2: EBD warning light is lit when power supply circuit voltage is too low.
- *3: SLIP indicator light and ESP® OFF light turn ON when power supply circuit voltage is low.
- *4: SLIP indicator light flashes continuously at Intervals of 1 Hz.

DTC Clearance

S6JB0B4604006

⚠ WARNING

When performing a driving test, select a safe place where there is neither any traffic nor any traffic accident possibility and be very careful during testing to avoid occurrence of an accident.

After repair or replace malfunction part(s), clear all DTCs by performing the following procedure or using SUZUKI scan tool.

- 1) Connect SUZUKI scan tool to data link connector in the same manner as when making this connection for DTC check.
- 2) Turn ignition switch to ON position.
- 3) Erase DTC according to instructions displayed on scan tool. Refer to scan tool operator's manual for further details.

NOTE
















For DTC C 1021, C1022, C1025, C1026, C1031, C1032, C1035, C1036 and C1061, confirm that ABS warning light turns off after performing Step 2 of “Test Driving” under “Electronic Stability Program Check”, and then clear the DTCs.

- 4) After completing the clearance, turn ignition switch OFF and disconnect scan tool from data link connector.
- 5) Perform “Driving Test” (Step 2 of “Electronic Stability Program Check”) and “DTC Check” and confirm that NO DTC is displayed on scan tool.

Fail-Safe Table

S6JB0B4604023

When any of the following DTC(s) is detected, ESP® system is in fail-safe mode per its DTC and ABS, EBD and/or TCS / stability functions are deactivated until the resolution is applied.

DTC No.	Fail-safe operation			Fail-safe condition resolvable
	ABS	EBD	TCS / stability	
 C1015	X	○	X	When ESP® control module detects the system as normal, after ignition switch turned OFF to ON.
 C1016	○	○	○	—
 C1017	○	○	X	When ESP® control module detects the system as normal, after ignition switch turned OFF to ON.
 C1018	○	○	X	
 C1020	○	○	X	
 C1021	X	*1	X	When estimated vehicle speed exceeds 10 km/h (6.5 mile/h) and detects system as normal.
 C1025				
 C1031				
 C1035				
 C1022	X	*1	X	
 C1026				
 C1032				
 C1036				
 C1023	○	○	X	When ESP® control module detects the system as normal, after ignition switch turned OFF to ON.
 C1024	○	○	X	

4F-17 Electronic Stability Program:

DTC No.	Fail-safe operation			Fail-safe condition resoluteive
	ABS	EBD	TCS / stability	
☞ C1027 *3	○	○	○	—
☞ C1028	○	○	X	When ESP® control module detects the system as normal, after ignition switch turned OFF to ON.
☞ C1034	○	○	X	
☞ C1037	○	○	X	
☞ C1038	○	○	X	
☞ C1039	○	○	X	
☞ C1040	○	○	X	
☞ C1041	X	X	X	When ESP® control module detects the system as normal, after ignition switch turned OFF to ON.
☞ C1042				
☞ C1043				
☞ C1044				
☞ C1045				
☞ C1046				
☞ C1051				
☞ C1052				
☞ C1053				
☞ C1054				
☞ C1055				
☞ C1056				
☞ C1057	X	*2	X	When ESP® control module detects the system as normal, after ignition switch turned OFF to ON.
☞ C1061	X	○	X	When estimated vehicle speed exceeds 10 km/h (6.5 mile/h) and detects system as normal.
☞ C1063	X	X	X	When ESP® control module detects the system as normal, after ignition switch turned OFF to ON.
☞ C1071	X	X	X	
☞ C1073	○	○	X	
☞ C1075	○	○	X	Steering angle sensor calibration completed.
☞ C1076	○	○	X	Master cylinder pressure sensor calibration completed.
☞ C1077	X	○	X	Yaw rate / G sensor assembly calibration completed.
☞ C1078	○	○	X	
☞ C1090	○	○	X	
☞ C1091	○	○	X	When ESP® control module detects the system as normal, after ignition switch turned OFF to ON.
☞ C1092				
☞ C1093				
☞ U1073	○	○	X	
☞ U1100	○	○	X	
☞ U1101				
☞ U1126				
☞ U1139				
☞ U1140				

NOTE

- **O: Activated**
- **X: Deactivated**
- ***1: If two or more wheel speed sensor are defective, ABS warning light, EBD warning light and ESP® warning light are lit and all the control functions are deactivated. If one wheel speed sensor is defective, ABS warning light and ESP® warning light are lit and ABS and TCS / stability control are deactivated.**
- ***2: EBD control function is activated only if power supply circuit is low voltage malfunction.**
- ***3: ESP® OFF mode is cancelled and all control functions are activated.**

Scan Tool Data

S6JB0B4604024

The parameter data below are values measured with the scan tool when the normally operating vehicle is under the following conditions. When taking measurements for comparison by using the scan tool, be sure to check that the vehicle is under the following conditions.

- Apply parking brake and block wheels.
- Ignition switch ON.
- Turn OFF air conditioning (if equipped).
- Set the wheel in straight-ahead position and hands off steering wheel.
- Turn OFF all electric loads (except ignition).
- Check that there is no DTC.

Scan Tool Data	Standards	Condition
Battery Voltage	10.0 – 16.0 V	—
Pump Motor Driver	0.0 V	—
RF Wheel Speed	0 km/h, 0.0 MPH	Vehicle is in stationary condition.
LF Wheel Speed	0 km/h, 0.0 MPH	Vehicle is in stationary condition.
RR Wheel Speed	0 km/h, 0.0 MPH	Vehicle is in stationary condition.
LR Wheel Speed	0 km/h, 0.0 MPH	Vehicle is in stationary condition.
Brake Switch	ON	Brake pedal is depressed
	OFF	Brake pedal is released
G sensor	0 ± 0.1 G	Vehicle is on the level
Master Cyl Press	0 ± 0.8 MPa	Brake pedal is released
G Sensor (lateral)	0 ± 0.1 G	Vehicle is on the level
Yaw rate sensor	0 ± 4 Deg/s	Vehicle is on the level
Steering angle Sen	$0 \pm 3^\circ$	Front wheels are in straight-ahead position
Stability control	INACTIVE	Stability control system is not working
TCS control (brake)	INACTIVE	Brake function by TCS is not working
TCS control (engine)	INACTIVE	Torque control by TCS is not working
ESP® off state (cont)	ESP® ON	ESP® OFF switch is OFF condition
	ESP® OFF	ESP® OFF switch is ON condition
Steering angle Sen	Neutral	Front wheels are in straight-ahead position

Scan Tool Data Definition

Battery Volt (V): Battery Voltage is an analog input signal read by the ESP® control module. Certain ESP® control module functions will be modified if the battery voltage falls below or rises above programmed thresholds.

Pump Motor Driver (V): This parameter indicates the operational condition of the pump motor driver (transistor).

RF Wheel Speed, LF Wheel Speed, RR Wheel Speed and LR Wheel Speed (km/h, MPH): Wheel speed is ESP® control module internal parameter. It is computed by reference pulses from the wheel speed sensor.

Brake Switch (ON, OFF): This switch signal informs the ESP® control module whether the brake is active or not.

G Sensor (G): Vehicle acceleration is measured by yaw rate / G sensor assembly and output to ESP® control module by pulse signal for 4WD model.

Master Cyl Press (MPa): Brake fluid pressure from brake master cylinder.

G Sensor (lateral) (G): Lateral acceleration is measured by yaw rate / G sensor assembly and output to ESP® control module by pulse signal.

Yaw rate sensor (Deg/s): Yaw rate sensor is measured by yaw rate / G sensor assembly and output to ESP® control module by pulse signal.

Steering angle Sen (°): Steering wheel rotation angle is measured by steering angle sensor and output to ESP® control module by pulse signal.

Stability control (ACTIVE, INACTIVE): This indicates stability control in activation / deactivation.

TCS control (brake) (ACTIVE, INACTIVE): This indicates brake function of TCS in activation / deactivation.

TCS control (engine) (ACTIVE, INACTIVE): This indicates torque control of TCS in activation / deactivation.


ESP® off state (cont) (ESP® ON, ESP® OFF): State of ESP® OFF switch.

Steering angle Sen (Neutral, NON neutral): This indicates steering wheel angle measured by steering angle sensor is in straight-ahead or not.

ESP® Warning Light Does Not Come ON at Ignition Switch ON

S6JB0B4604008

Wiring Diagram

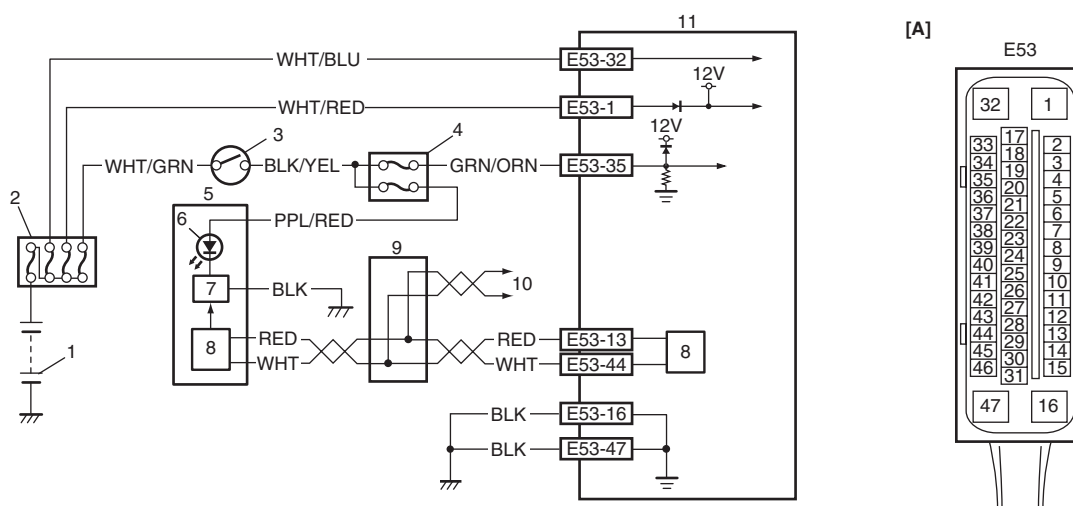

16JB01460013-01

[A]: ESP® control module connector (viewed from terminal side)	4. Junction block assembly	8. CAN driver
1. Battery	5. Combination meter	9. Junction connector
2. Main fuse box	6. ESP® warning light	10. To TCM, BCM, 4WD control module, keyless start control module and steering angle sensor
3. Ignition switch	7. Light driver module	11. ESP® hydraulic unit / control module assembly

Circuit Description

Operation (ON/OFF) of ESP® warning light is controlled by ESP® control module through light driver module in combination meter.

If ESP® system is in good condition, ESP® control module turns ESP® warning light ON at the ignition switch ON, keeps it ON for 2 seconds and then turns it OFF. If an abnormality in the system is detected, ESP® warning light is turned ON continuously by ESP® control module. Also, it is turned ON continuously by light driver module when the connector of ESP® control module is disconnected.

Troubleshooting


Step	Action	Yes	No
1	1) Turn ignition switch to ON position. <i>Do other warning lights come ON?</i>	Go to Step 2.	Go to Step 3.
2	1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ignition switch to OFF position and check DTC. <i>Is there DTC U1073?</i>	Go to "DTC U1073: Control Module Communication Bus Off" for troubleshooting.	Substitute a known-good combination meter and recheck. If ESP® warning light remains OFF, substitute a known-good ESP® hydraulic unit / control module assembly and recheck.
3	<i>Is Circuit fuse for combination meter in good condition?</i>	Go to Step 4.	Replace fuse and check for short circuit to ground.
4	1) Check CAN communication circuit between combination meter and ESP®, control module referring to "DTC U1073: Control Module Communication Bus Off" <i>Is CAN communication circuit in good condition?</i>	Go to Step 5.	Repair or replace.

Step	Action	Yes	No
5	1) Remove combination meter with ignition switch turned OFF. 2) Check for proper connection to “PPL/RED” and “BLK” wire of combination meter connector. 3) If OK, turn ON ignition switch and measure voltage at “PPL/RED” wire of combination meter connector and vehicle body ground. <i>Is it 10 – 14 V?</i>	Go to Step 6.	Repair power supply circuit for combination meter.
6	1) Measure resistance between “BLK” wire of combination meter connector and vehicle body ground. <i>Is resistance less than 2 Ω?</i>	Replace combination meter.	“BLK” circuit open or high resistance.


ESP® Warning Light Comes ON Steady

S6JB0B4604009

Wiring Diagram

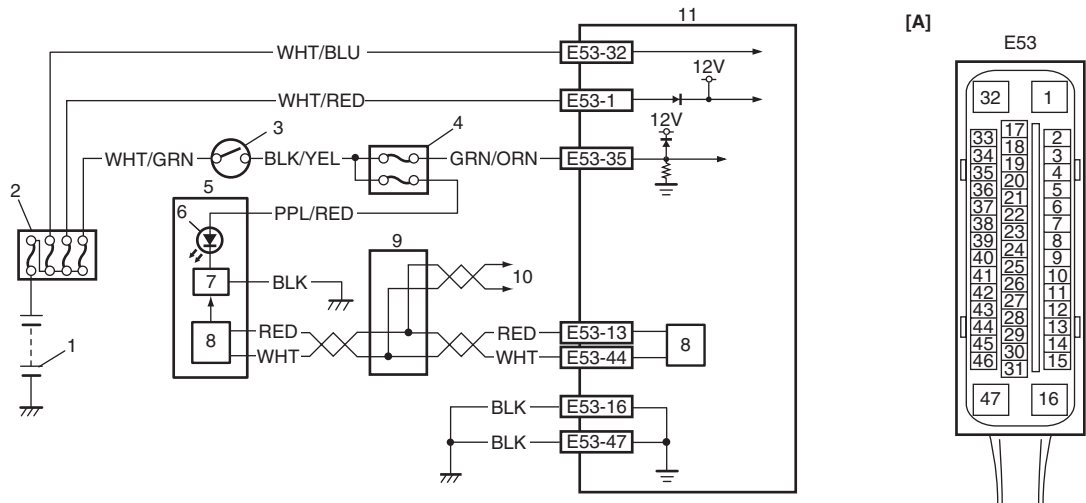

[A]

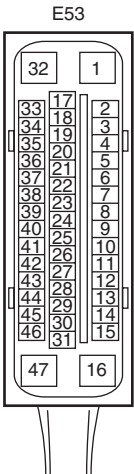

I6JB01460013-01

[A]: ESP® control module connector (viewed from terminal side)	4. Junction block assembly	8. CAN driver
1. Battery	5. Combination meter	9. Junction connector
2. Main fuse box	6. ESP® warning light	10. To TCM, BCM, 4WD control module, keyless start control module and steering angle sensor
3. Ignition switch	7. Light driver module	11. ESP® hydraulic unit / control module assembly

Circuit Description

Operation (ON/OFF) of ESP® warning light is controlled by ESP® control module through light driver module in combination meter.


If ESP® system is in good condition, ESP® control module turns ESP® warning light ON at the ignition switch ON, keeps it ON for 2 seconds and then turns it OFF. If an abnormality in the system is detected, ESP® warning light is turned ON continuously by ESP® control module. Also, it is turned ON continuously by light driver module when the connector of ESP® control module is disconnected.

Troubleshooting

Step	Action	Yes	No
1	1) Perform diagnostic trouble code check. <i>Is there any DTC(s)?</i>	Go to applicable DTC diagnosis flow for troubleshooting.	Go to Step 2.
2	<i>Are main fuses for ABS pump motor and ABS solenoid in good condition?</i>	Go to Step 3.	Replace fuse and check circuit for short to ground.
3	1) Turn ignition switch to OFF. 2) Disconnect ESP® control module connector. 3) Check for proper connection to ESP® control module connector at terminals “E53-35”, “E53-16” and “E53-47”. 4) If OK then turn ignition switch to ON position and measure voltage between terminal “E53-35” and vehicle body ground. <i>Is it 10 – 14 V?</i>	Go to Step 4.	“GRN/ORN” circuit open.
4	1) Turn ignition switch to OFF position. 2) Check for proper connection to ESP® control module connector at terminals “E53-1” and “E53-32”. 3) If OK then turn ignition switch to ON position and measure voltage between each terminal of “E53-1”, “E53-32” and vehicle body ground. <i>Are they 10 – 14 V?</i>	Go to Step 5.	“WHT/RED” and/or “WHT/BLU” circuit open.
5	1) Turn ignition switch to OFF and measure resistance between each terminal of “E53-16”, “E53-47” and vehicle body ground. <i>Is resistance less than 2 Ω?</i>	Go to Step 6.	Ground circuit for ESP® control module open or high resistance.
6	1) Check CAN communication circuit between combination meter and ESP® control module referring to “DTC U1073: Control Module Communication Bus Off”. <i>Is CAN communication circuit in good condition?</i>	Substitute a known-good combination meter and recheck. If ABS warning light remains ON, substitute a known-good ESP® hydraulic unit / control module assembly and recheck.	Repair or replace.

Step	Action	Yes	No
1	1) Turn ignition switch to ON position. <i>Does ESP® warning light come ON?</i>	Go to Step 2.	Go to Step 6.
2	1) Turn ignition switch to OFF position. <i>Are main fuses for ABS pump motor and ABS solenoid in good condition?</i>	Go to Step 3.	Replace fuse and check for short.
3	1) Disconnect ESP® control module connector. 2) Check for proper connection to ESP® control module connector at terminal “E53-35”. 3) If OK then turn ignition switch to ON position and measure voltage between terminal “E53-35” and vehicle body ground. <i>Is it 10 – 14 V?</i>	Go to Step 4.	“GRN/ORN” wire circuit open.
4	1) Turn ignition switch to OFF position. 2) Check for proper connection to ESP® control module connector at terminals “E53-1” and “E53-32”. 3) If OK then turn ignition switch to ON position and measure voltage between each terminal of “E53-1”, “E53-32” and vehicle body ground. <i>Are they 10 – 14 V?</i>	Go to Step 5.	“WHT/RED” and/or “WHT/BLU” wire circuit open.
5	1) Turn ignition switch to OFF position. 2) Check for proper connection to ESP® control module connector at terminals “E53-16” and “E53-47”. 3) If OK, measure resistance between each terminal of “E53-16”, “E53-47” and vehicle body ground. <i>Are resistance less than 2 Ω?</i>	Go to Step 6.	Ground circuit for ESP® control module open or high resistance.

4F-23 Electronic Stability Program:

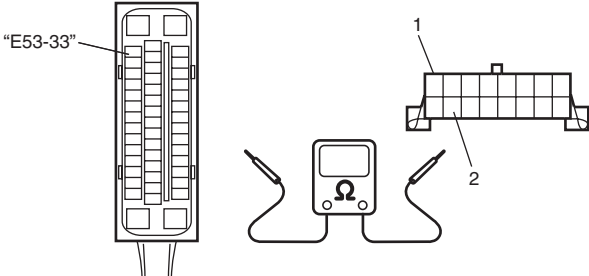Step	Action	Yes	No
6	<p>1) Check if communication is possible by trying communication with other controller (ECM, TCM, BCM, 4WD control module or SDM).</p> <p><i>Is it possible to communicate with other controller?</i></p>	Go to Step 7.	Repair open in common section of serial data circuit ("PPL/WHT" wire circuit) used by all controllers or short to ground or power circuit which has occurred somewhere in serial data circuit ("PPL/WHT" wire circuit).
7	<p>1) Turn ignition switch to ON position.</p> <p>2) Measure voltage between terminal B of data link connector and vehicle body ground.</p> <p><i>Is voltage 10 – 12 V?</i></p>	Go to step 8.	Terminal B circuit open or shorted to ground.
8	<p>1) Turn ignition switch to OFF position.</p> <p>2) Measure resistance between the following terminals;</p> <ul style="list-style-type: none"> Terminal G of data link connector and vehicle body ground. Terminal G1 of data link connector and vehicle body ground. <p><i>Is each resistance 1 Ω or less?</i></p>	Go to step 9.	Terminal G and/or G1 circuit open or high resistance.
9	<p>1) Turn ignition switch to OFF position.</p> <p>2) Check proper connection at "E53-33" ("PPL/WHT" wire) terminal for serial data circuit.</p> <p>3) If OK, then check resistance between "E53-33" ("PPL/WHT" wire) terminal and "PPL/WHT" wire terminal (2) for serial data circuit in DLC (1).</p> <p><i>Is resistance 1 Ω or less?</i></p> <div style="text-align: center;">  </div>	Substitute a known-good ESP® hydraulic unit / control module and recheck.	Repair high resistance or open in "PPL/WHT" wire circuit for anti lock brake system.

I6JB01460015-01

DTC C1015 / C1017 / C1023: Longitudinal G Sensor / Lateral G Sensor / Yaw Rate Sensor in Yaw Rate / G Sensor Assembly Failure

S6JB0B4604025

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
<p>C1015: Longitudinal G sensor signal is out of specified range. (4WD model)</p> <p>C1017: Lateral G sensor signal is out of specified range.</p> <p>C1023:</p> <ul style="list-style-type: none"> Yaw rate sensor signal is out of range. Vehicle behavior and yaw rate signal is disagreed. 	<ul style="list-style-type: none"> Yaw rate / G sensor assembly ESP® control module


DTC Troubleshooting

Step	Action	Yes	No
1	Was "Electronic Stability Program Check" performed?	Go to Step 2.	Go to "Electronic Stability Program Check".
2	DTC check for ESP® 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ignition switch ON and check DTC for ESP®. <i>Are DTC C1034 and/or C1073 detected?</i>	Go to applicable DTC diagnosis flow for troubleshooting.	Go to Step 3.
3	Check sensor calibration 1) Calibrate yaw rate / G sensor assembly referring to "Sensor Calibration". 2) Clear all DTCs and check DTC for ESP®. <i>Are DTC C1015, C1017 and/or C1023 still detected?</i>	Go to Step 4.	Yaw rate / G sensor assembly calibration is incompleting.
4	Check yaw rate / G sensor assembly 1) Check yaw rate / G sensor assembly referring to "Yaw Rate / G Sensor Assembly On-Vehicle Inspection". <i>Is it good condition?</i>	Substitute a known-good ESP® hydraulic unit / control module assembly and check DTC.	Replace yaw rate / G sensor assembly.

DTC C1016: Brake Light Switch Circuit Failure

S6JB0B4604026

Wiring Diagram

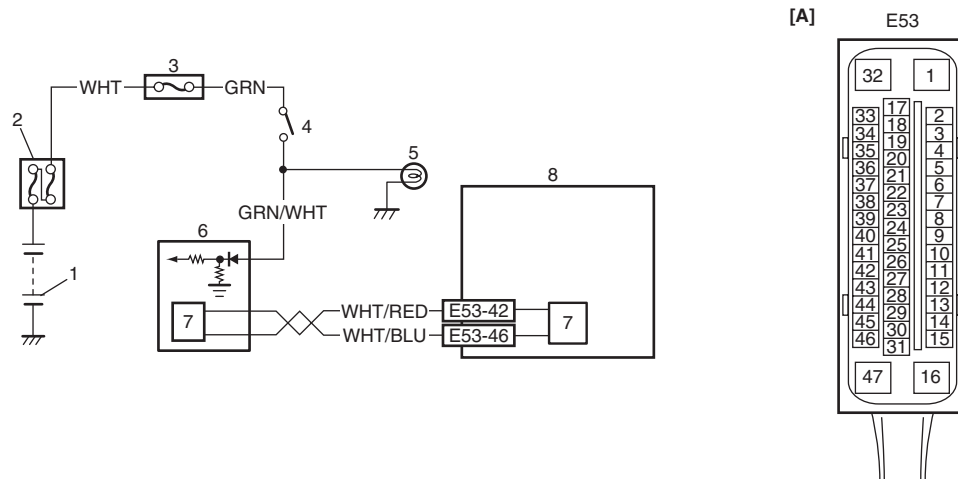

I6JB01460016-01

[A]: ESP® control module connector (viewed from terminal side)	3. Junction block assembly	6. ECM
1. Battery	4. Brake light switch	7. CAN driver
2. Main fuse box	5. Brake light	8. ESP® hydraulic unit control module assembly

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Vehicle behavior and brake light switch signal is disagreed for specified time.	<ul style="list-style-type: none"> Brake light switch circuit Brake light switch ECM ESP® control module


DTC Troubleshooting

Step	Action	Yes	No
1	Was "Electronic Stability Program Check" performed?	Go to Step 2.	Go to "Electronic Stability Program Check".
2	DTC check for ESP® 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ignition switch ON and check DTC for ESP®. <i>Is DTC U1100 detected?</i>	Go to "DTC U1100: Lost Communication with ECM (Reception Error)" for troubleshooting.	Go to Step 3.
3	DTC check for ECM 1) Check DTC for ECM. <i>Is there any DTC(s) for ECM?</i>	Go to applicable DTC diagnosis flow for troubleshooting.	Substitute a known-good ESP® hydraulic unit / control module assembly and check DTC.

DTC C1018: Brake Fluid Level Switch Failure

S6JB0B4604027

Wiring Diagram

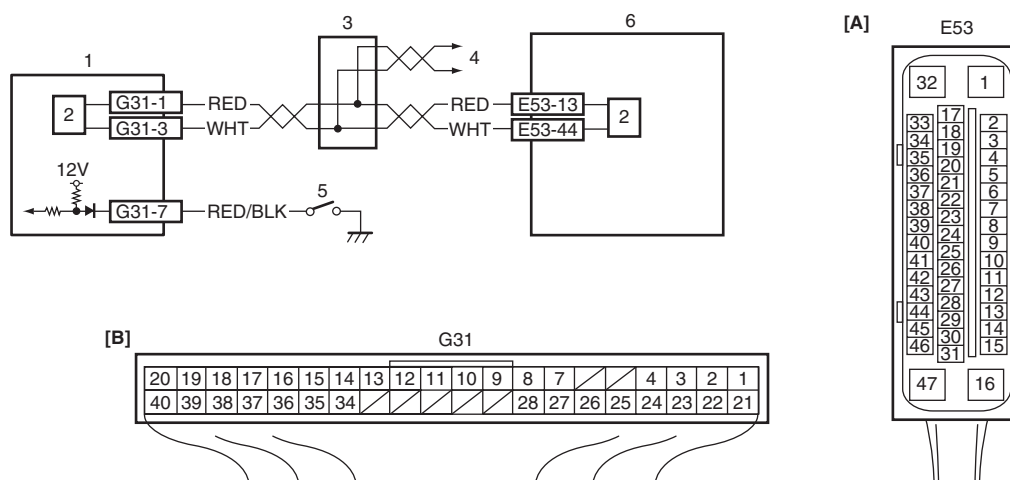

I6JB01460017-02

[A]: ESP® control module connector (viewed from terminal side)	2. CAN driver	5. Brake fluid level switch
[B]: BCM connector (viewed from harness side)	3. Junction connector	6. ESP® hydraulic unit control module assembly
1. BCM	4. To TCM, 4WD control module, keyless start control module, combination meter and steering angle sensor	

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
<ul style="list-style-type: none"> Brake fluid level is too low. Input voltage of brake fluid level switch to BCM is low. 	<ul style="list-style-type: none"> Brake fluid level Brake fluid level switch circuit Brake fluid level switch BCM ESP® control module

DTC Troubleshooting

Step	Action	Yes	No
1	Was "Electronic Stability Program Check" performed?	Go to Step 2.	Go to "Electronic Stability Program Check".
2	Check brake fluid level 1) Check brake fluid level in reservoir. <i>Is brake fluid level upper than the minimum level?</i>	Go to Step 3.	Replenish brake fluid to reservoir.
3	DTC check for ESP® 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ignition switch ON and check DTC for ESP®. <i>Is DTC U1140 detected?</i>	Go to "DTC U1140: Lost Communication with BCM (Reception Error)".	Go to Step 3.
4	Check brake fluid level switch 1) Turn ignition switch to OFF position. 2) Disconnect brake fluid level switch connector. 3) Check for proper connection at each terminal of brake fluid level switch connector. 4) If OK, then check brake fluid level switch referring to "Brake Fluid Level Switch Inspection in Section 9C". <i>Is check result OK?</i>	Go to Step 5.	Replace brake fluid level switch.
5	Check brake fluid level switch circuit 1) Disconnect BCM connector. 2) Check for proper connection to BCM connector at "G31-7" terminal. 3) If OK, then check resistance between "G31-7" terminal and vehicle body ground. <i>Is resistance infinity?</i>	Go to Step 6.	"BLKL/RED" wire circuit is shorted to ground.
6	Check BCM 1) Connect brake fluid level switch connector and BCM connector. 2) Check DTC for BCM. <i>Is there any DTC(s) in BCM?</i>	Go to applicable DTC diagnosis flow for troubleshooting.	Substitute a known-good ESP® hydraulic unit / control module assembly and check DTC.

DTC 1020: Master Cylinder Pressure Sensor Power Supply Failure

S6JB0B4604028

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Power supply voltage to master cylinder pressure sensor in ESP® hydraulic unit / control module assembly is too low.	• ESP® control module

DTC Troubleshooting

- 1) Turn ignition switch to OFF position.
- 2) Check for proper connection from harness to ESP® control module.
- 3) If OK, substitute an ESP® hydraulic unit / control module assembly with correct part number.
- 4) Recheck system.

DTC C1021, C1022 / C1025, C1026 / C1031, C1032 / C1035, C1036: Right-Front / Left-Front / Right-Rear / Left-Rear Wheel Speed Sensor Circuit or Encoder Failure

S6JB0B4604014

Refer to “DTC C1021, C1022 / C1025, C1026 / C1031, C1032 / C1035, C1036: Right-Front / Left-Front / Right-Rear / Left-Rear Wheel Speed Sensor Circuit or Encoder Failure in Section 4E”.

DTC C1024: Steering Angle Sensor Circuit Failure

S6JB0B4604029

DTC Detecting Condition and Trouble Area


DTC Detecting Condition	Trouble Area
<ul style="list-style-type: none"> Steering angle sensor internal defect is detected by CPU in steering angle sensor. Steering angle sensor signal is out of specified range. 	<ul style="list-style-type: none"> Steering angle sensor ESP® control module

DTC Troubleshooting

Step	Action	Yes	No
1	Was “Electronic Stability Program Check” performed?	Go to Step 2.	Go to “Electronic Stability Program Check”.
2	DTC check for ESP® 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ignition switch ON and check DTC for ESP®. <i>Are DTC C1037 and/or U1126 detected?</i>	Go to applicable DTC diagnosis flow for troubleshooting.	Go to Step 3.
3	Check sensor calibration 1) Calibrate steering angle sensor referring to “Sensor Calibration”. 2) Clear all DTC(s) and check DTC for ESP®. <i>Is DTC C1024 still detected?</i>	Go to Step 4.	Steering angle sensor calibration was incomplete.
4	Check steering angle sensor 1) Check steering angle sensor referring to “Steering Angle Sensor On-Vehicle Inspection”. <i>Is it good condition?</i>	Substitute a known-good ESP® hydraulic unit / control module assembly and check DTC.	Replace steering angle sensor.

DTC C1027: ESP® OFF Switch Circuit Failure

S6JB0B4604030

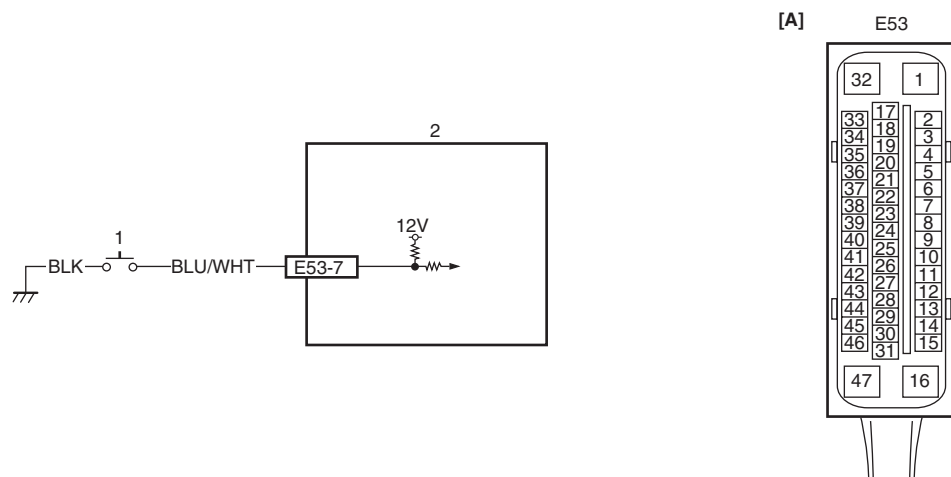Wiring Diagram

I6JB01460018-01

[A]: ESP® control module connector (viewed from terminal side)	1. ESP® OFF Switch	2. ESP® hydraulic unit control module assembly
--	--------------------	--

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Mechanical switch failure, failure in switch wiring is shorted to ground.	<ul style="list-style-type: none"> • ESP® OFF switch • ESP® OFF switch circuit • ESP® control module

DTC Troubleshooting

Step	Action	Yes	No
1	Was "Electronic Stability Program Check" performed?	Go to Step 2.	Go to "Electronic Stability Program Check".
2	Check ESP® OFF switch condition <i>Is ESP® OFF switch is OFF condition?</i>	Go to Step 3.	ESP® OFF switch turned OFF condition and recheck.
3	Check ESP® OFF switch 1) Turn ignition switch to OFF position. 2) Remove ESP® OFF switch referring to "ESP® OFF Switch Removal and Installation". 3) Check for proper connection at each terminal of ESP® OFF switch. 4) If OK, then check ESP® OFF switch referring to "ESP® OFF Switch Inspection". <i>Is it good condition?</i>	Go to Step 4.	Replace ESP® OFF switch.
4	Check ESP® OFF switch circuit 1) Disconnect ESP® control module connector. 2) Check for proper connection to ESP® control module connector at "E53-7" terminal. 3) If OK, then check resistance between "E53-7" terminal and vehicle body ground. <i>Is resistance infinity?</i>	Substitute a known-good ESP® hydraulic unit / control module assembly and check DTC.	"BLU/WHT" wire circuit is shorted to ground.

DTC C1028: Master Cylinder Pressure Sensor Circuit Failure

S6JB0B4604031

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Input signal voltage from master cylinder pressure sensor in ESP® control module is too high or low.	<ul style="list-style-type: none"> • Leakage or air in the hydraulic brake system • Clearance between brake pad and disc too high


DTC Troubleshooting

Step	Action	Yes	No
1	Was "Electronic Stability Program Check" performed?	Go to Step 2.	Go to "Electronic Stability Program Check".
2	Check brake system 1) Check brake system as follows. <ul style="list-style-type: none"> • Leakage or air in the hydraulic brake system • Clearance between brake pad and disc too high <i>Are they in good condition?</i>	Go to Step 3.	Repair, replace or adjust.
3	Check sensor calibration 1) Calibrate master cylinder pressure sensor referring to "Sensor Calibration". 2) Clear all DTC(s) and recheck DTC. <i>Is DTC C1028 still detected?</i>	Substitute a known-good ESP® hydraulic unit / control module assembly and check DTC.	Master cylinder pressure sensor calibration was incompleting.

DTC C1034: Yaw Rate / G Sensor Assembly Power Supply Failure

S6JB0B4604032

Wiring Diagram

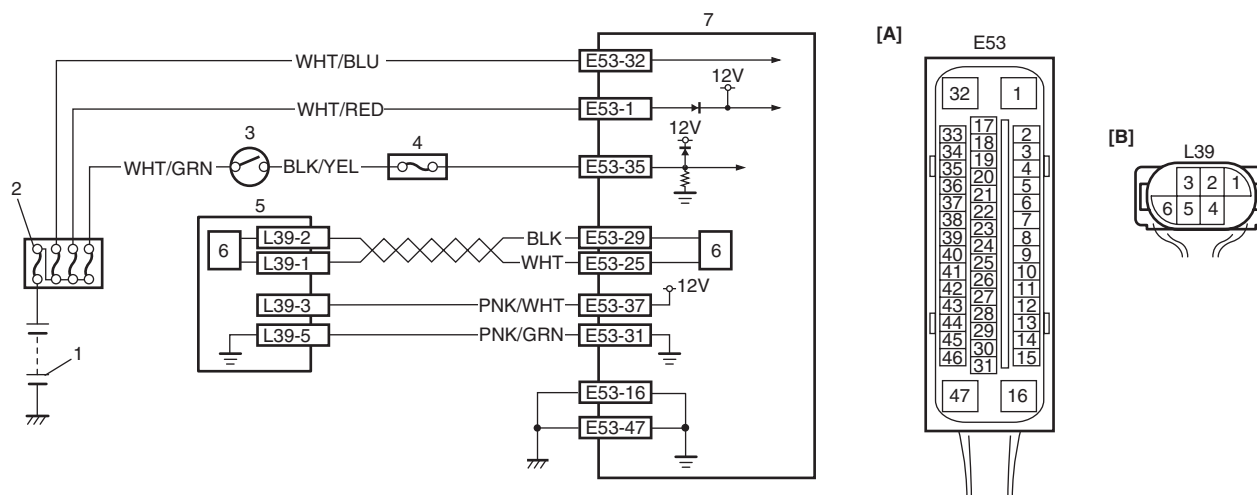

I6JB01460019-03

[A]: ESP® control module connector (viewed from terminal side)	2. Main fuse box	5. Yaw rate / G sensor assembly
[B]: Yaw rate / G sensor assembly connector (viewed from harness side)	3. Ignition switch	6. CAN driver
1. Battery	4. Junction block assembly	7. ESP® hydraulic unit / control module assembly

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
<ul style="list-style-type: none"> Power supply voltage of yaw rate / G sensor assembly is too high when ignition switch OFF. Power supply voltage of yaw rate / G sensor assembly is too low when ignition switch ON. 	<ul style="list-style-type: none"> Yaw rate / G sensor assembly power supply circuit ESP® control module power supply circuit Yaw rate / G sensor assembly ESP® control module

DTC Troubleshooting


Step	Action	Yes	No
1	Was "Electronic Stability Program Check" performed?	Go to Step 2.	Go to "Electronic Stability Program Check".
2	DTC check for ESP® 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ignition switch ON and check DTC for ESP®. Are DTC C1057 and/or C1073 detected?	Go to applicable DTC diagnosis flow for troubleshooting.	Go to Step 3.
3	Check yaw rate / G sensor assembly power supply circuit 1) Turn ignition switch to OFF position. 2) Disconnect yaw rate / G sensor assembly connector. 3) Check for proper connection to yaw rate / G sensor assembly connector terminals at "L39-3" and "L39-5". 4) If OK, then measure voltage between connector terminal "L39-3" and vehicle body ground. Is it 0 V?	Go to Step 4.	Go to Step 5.

Step	Action	Yes	No
4	Check yaw rate / G sensor assembly power supply circuit 1) Measure voltage between connector terminal “L39-3” and “L39-5” with ignition switch turned ON. <i>Is it 10 – 14 V?</i>	Substitute a known-good yaw rate / G sensor assembly and check DTC.	Go to Step 5.
5	Check yaw rate / G sensor assembly power supply circuit 1) Turn ignition switch to OFF position. 2) Disconnect ESP® control module connector. 3) Check for proper connection to ESP® control module connector terminals at “E53-31” and “E53-37”. 4) If OK, then measure voltage between connector terminal “E53-37” and vehicle body ground. <i>Is it 0 V?</i>	Go to Step 6.	“PNK/WHT” wire circuit is shorted to power circuit.
6	Check yaw rate / G sensor assembly power supply circuit 1) Measure resistance between the following points. <ul style="list-style-type: none"> Between terminal “E53-37” of module connector and terminal “L39-3” of sensor terminal. Between terminal “E53-31” of module connector and terminal “L39-5” of sensor terminal. <i>Are resistance less than 2 Ω?</i>	Substitute a known-good ESP® hydraulic unit / control module assembly and check DTC.	“PNK/WHT” and/or “PNK/GRN” wire circuit open or high resistance.

DTC C1037: Steering Angle Sensor Power Supply Failure

S6JB0B4604033

Wiring Diagram

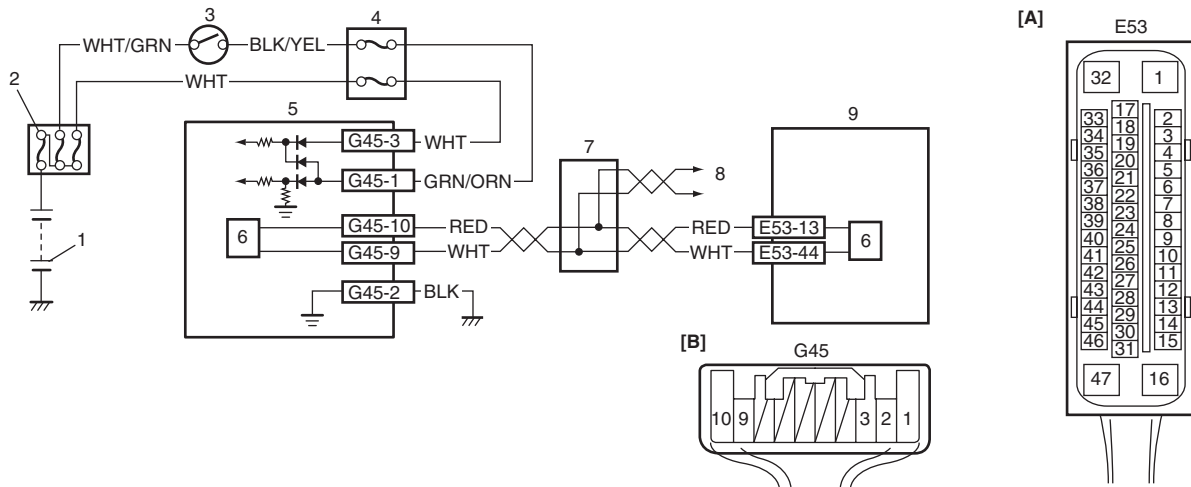

I6JB01460020-02

[A]: ESP® control module connector (viewed from terminal side)	3. Ignition switch	7. Junction connector
[B]: Steering angle sensor connector (viewed from harness side)	4. Junction block assembly	8. To TCM, BCM, 4WD control module, keyless start control module and combination meter
1. Battery	5. Steering angle sensor	9. ESP® hydraulic unit / control module assembly
2. Main fuse box	6. CAN driver	

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Power supply voltage to steering angle sensor is too low.	<ul style="list-style-type: none"> Steering angle sensor power supply circuit Steering angle sensor ESP® control module

DTC Troubleshooting

Step	Action	Yes	No
1	Was "Electronic Stability Program Check" performed?	Go to Step 2	Go to "Electronic Stability Program Check".
2	Check steering angle sensor power supply circuit 1) Check circuit fuses for steering angle sensor and its circuit. <i>Is it good condition?</i>	Go to Step 3.	Replace fuse and check for short circuit to ground.
3	Check steering angle sensor power supply circuit 1) Turn ignition switch to OFF position. 2) Disconnect steering angle sensor connector. 3) Check for proper connection to steering angle sensor connector terminals at "E45-1", "E45-2" and "E45-3". 4) If OK, then measure voltage between connector terminal "E45-3" and vehicle body ground. <i>Is it 10 – 14 V?</i>	Go to Step 4.	"WHT" wire circuit open.
4	Check steering angle sensor power supply circuit 1) Measure voltage between connector terminal "E45-1" and vehicle body ground with ignition switch turned ON. <i>Is it 10 – 14 V?</i>	Go to Step 5.	"GRN/ORN" wire circuit open.
5	Check steering angle sensor power supply circuit 1) Turn ignition switch to OFF position. 2) Measure resistance between connector terminal "E45-2" and vehicle body ground. <i>Is resistance less than 2 Ω?</i>	Go to Step 6.	"BLK" wire circuit open or high resistance.
6	Check steering angle sensor 1) Connect steering angle sensor connector. 2) Check steering angle sensor referring to "Steering Angle Sensor On-Vehicle Inspection". <i>Is it good condition?</i>	Substitute a known-good ESP® hydraulic unit / control module assembly and check DTC.	Replace steering angle sensor.

DTC C1038: Steering Angle Sensor Detect Rolling Counter Failure from ESP® Control Module

S6JB0B4604034

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
ESP® control module rolling counter failure is detected by steering angle sensor.	<ul style="list-style-type: none"> CAN communication circuit Steering angle sensor ESP® control module

DTC Troubleshooting

Step	Action	Yes	No
1	Was "Electronic Stability Program Check" performed?	Go to Step 2.	Go to "Electronic Stability Program Check".
2	Check DTC 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ignition switch ON and check DTC. <i>Is there any DTC(s) other than C1038 and C1090?</i>	Go to applicable DTC diagnosis flow for troubleshooting.	Go to Step 3.

Step	Action	Yes	No
3	Check ESP® control module 1) Turn ignition switch to OFF position. 2) Substitute a known-good steering angle sensor. 3) Calibrate steering angle sensors referring to "Sensor Calibration". 4) Clear all DTC(s) and recheck DTC. <i>Is DTC C1038 still detected?</i>	Substitute a known-good ESP® hydraulic unit / control module assembly and check DTC.	Steering angle sensor was malfunction.

DTC C1039: Yaw Rate / G Sensor Assembly Internal Failure

S6JB0B4604035

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Yaw rate / G sensor assembly internal failure is detected.	<ul style="list-style-type: none"> Yaw rate / G sensor assembly ESP® control module

DTC Troubleshooting

Step	Action	Yes	No
1	<i>Was "Electronic Stability Program Check" performed?</i>	Go to Step 2.	Go to "Electronic Stability Program Check".
2	DTC check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ignition switch ON and check DTC. <i>Are DTC C1034 and/or C1073 detected?</i>	Go to applicable DTC diagnosis flow for troubleshooting.	Go to Step 3.
3	Check sensor calibration 1) Calibrate yaw rate / G sensor assembly referring to "Sensor Calibration". 2) Clear all DTC(s) and recheck DTC. <i>Is DTC C1039 still detected?</i>	Go to Step 4.	Yaw rate / G sensor assembly calibration was incompleting.
4	Check yaw rate / G sensor assembly 1) Check yaw rate / G sensor assembly referring to "Yaw Rate / G Sensor Assembly On-Vehicle Inspection". <i>Is it good condition?</i>	Substitute a known-good ESP® hydraulic unit / control module assembly and check DTC.	Replace yaw rate / G sensor assembly.

DTC C1040: Stability Control System Function Failure

S6JB0B4604036

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Stability control is active for more than specified time without yaw rate change.	<ul style="list-style-type: none"> ESP® control module

DTC Troubleshooting

Step	Action	Yes	No
1	<i>Was "Electronic Stability Program Check" performed</i>	Go to Step 2.	Go to "Electronic Stability Program Check".
2	Check DTC for ESP® 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ignition switch ON and check DTC for ESP®. <i>Is there any DTC(s) other than C1040?</i>	Go to applicable DTC diagnosis flow for troubleshooting.	Substitute a known-good ESP® hydraulic unit / control module assembly and check DTC.

DTC C1041 / C1042 / C1043 / C1044 / C1045 / C1046 / C1051 / C1052 / C1053 / C1054 / C1055 / C1056:
Inlet Solenoid Circuit Failure, Outlet Solenoid Circuit Failure, Master Cylinder Cut Solenoid Circuit Failure, Low Pressure Solenoid Circuit Failure

S6JB0B4604015

DTC C1041 / C1045 / C1051 / C1055: Right-Front / Left-Front / Right-Rear / Left-Rear Inlet Solenoid Circuit Failure

DTC C1042 / C1046 / C1052 / C1056: Right-Front / Left-Front / Right-Rear / Left-Rear Outlet Solenoid Circuit Failure

DTC C1043 / C1044: Master Cylinder Cut Solenoid Circuit No. 1 / No. 2 Failure

DTC C1053 / C1054: Low Pressure Solenoid Circuit No. 1 / No. 2 Failure

Refer to “DTC C1041 / C1042 / C1043 / C1044 / C1045 / C1046 / C1051 / C1052 / C1053 / C1054 / C1055 / C1056: Inlet Solenoid Circuit Failure, Outlet Solenoid Circuit Failure, Master Cylinder Cut Solenoid Circuit Failure, Low Pressure Solenoid Circuit Failure in Section 4E”.

DTC C1057: ESP® (ABS) control module power supply circuit failure

S6JB0B4604016

Refer to “DTC C1057: ABS (ESP®) Control Module Power Supply Circuit Failure in Section 4E”.

DTC C1061: Pump Motor and/or Motor Driver Circuit Failure

S6JB0B4604017

Refer to “DTC C1061: ABS Pump Motor and/or Motor Driver Circuit Failure in Section 4E”.

DTC C1063: Solenoid Valve Power Supply Driver Circuit Failure

S6JB0B4604018

Refer to “DTC C1063: Solenoid Valve Power Supply Driver Circuit Failure in Section 4E”.

DTC C1071: ESP® (ABS) Control Module Internal Defect


S6JB0B4604019

Refer to “DTC C1071: ABS (ESP®) control module Internal Detect in Section 4E”.

DTC C1073: Lost Communication With Yaw Rate / G Sensor Assembly

S6JB0B4604038

Wiring Diagram

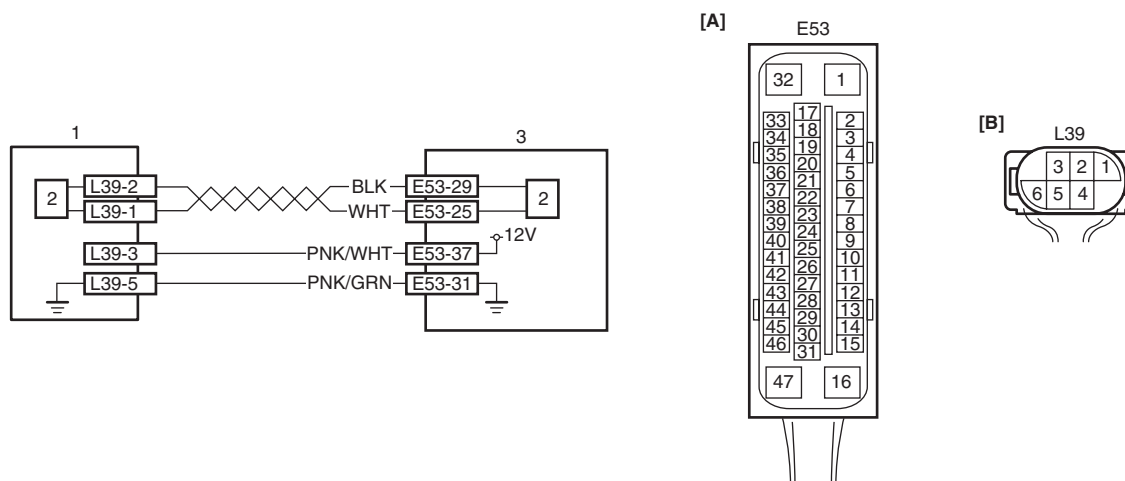

I6JB01460022-03

[A]: ESP® control module connector (viewed from terminal side)	1. Yaw rate / G sensor assembly	3. ESP® hydraulic unit control module assembly
[B]: Yaw rate / G sensor assembly connector (viewed from harness side)	2. CAN driver (for yaw rate / G sensor assembly)	

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
CAN line communication error in ESP® control module and yaw rate / G sensor assembly is detected.	<ul style="list-style-type: none"> CAN communication circuit (for yaw rate / G sensor assembly) Yaw rate / G sensor assembly ESP® control module

DTC Troubleshooting

Step	Action	Yes	No
1	Was "Electronic Stability Program Check" performed?	Go to Step 2.	Go to "Electronic Stability Program Check".
2	DTC check for ESP® 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ignition switch ON and check DTC for ESP®. <i>Is DTC C1057 detected?</i>	Go to applicable DTC diagnosis flow for troubleshooting.	Go to Step 3.
3	Check each control module connectors 1) Check connection of connectors of all control modules communicating by means of CAN (for yaw rate / G sensor assembly). 2) Check DTC for ESP®. <i>Is DTC C1073 detected?</i>	Go to Step 4.	Check for intermittent trouble referring to "Intermittent and Poor Connection Inspection in Section 00".
4	CAN communication circuit check 1) Turn ignition switch to OFF position. 2) Disconnect connectors of ESP® control module and yaw rate / G sensor assembly. <i>Is each CAN communication circuit between ESP® control module and yaw rate / G sensor assembly opened, shorted or high resistance?</i>	Repair or replace the CAN communication line.	Go to Step 5.
5	Check yaw rate / G sensor assembly 1) Substitute a known-good yaw rate / G sensor assembly. 2) Connect connectors to ESP® control module and yaw rate / G sensor assembly. 3) Clear all DTC(s) and check DTC for ESP®. <i>Is DTC C1073 still detected?</i>	Substitute a known-good ESP® hydraulic unit / control module assembly and check DTC.	Yaw rate / G sensor assembly was malfunction.

DTC C1075 / 1076 / 1077 / 1078: Steering Angle Sensor / Master Cylinder Pressure Sensor / Longitudinal G Sensor / Lateral G Sensor in Yaw Rate / G Sensor Assembly Calibration Incomplete

S6JB0B4604039

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
C1075: Missing steering angle sensor calibration point data is detected.	<ul style="list-style-type: none"> Steering angle sensor Steering angle sensor calibration is incompleted ESP® control module
C1076: Master cylinder pressure sensor calibration is incompleted.	<ul style="list-style-type: none"> Master cylinder pressure sensor Master cylinder pressure sensor calibration is incompleted ESP® control module
C1077: Longitudinal G sensor in yaw rate / G sensor assembly calibration is incompleted. (4WD model)	<ul style="list-style-type: none"> Yaw rate / G sensor assembly Longitudinal G sensor calibration is incompleted ESP® control module
C1078: Lateral G sensor in yaw rate / G sensor assembly calibration is incompleted.	<ul style="list-style-type: none"> Yaw rate / G sensor assembly Lateral G sensor calibration is incompleted ESP® control module

DTC Troubleshooting

Step	Action	Yes	No
1	Was "Electronic Stability Program Check" performed?	Go to Step 2.	Go to "Electronic Stability Program Check".
2	DTC check for ESP® 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ignition switch ON and check DTC for ESP®. <i>Is there any DTC(s) other than C1075, C1076, C1077 and C1078?</i>	Go to applicable DTC diagnosis flow for troubleshooting.	Go to Step 3.
3	Check sensor calibration 1) Calibrate all sensors referring to "Sensor Calibration". 2) Clear all DTC(s) and check DTC for ESP®. <i>Is DTC C1075, C1076, C1077 and/or C1078 still detected?</i>	DTC C1075: Replace steering angle sensor. DTC C1076: Replace ESP® hydraulic unit / control module assembly. DTC C1077 / 1078: Replace yaw rate / G sensor assembly.	Calibration was incompleting.

DTC C1090: ECM Detect Rolling Counter Failure from ESP® Control Module

S6JB0B4604040

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
ESP® control module rolling counter failure is detected by ECM.	<ul style="list-style-type: none"> CAN communication circuit ECM ESP® control module

DTC Troubleshooting

Step	Action	Yes	No
1	Was "Electronic Stability Program Check" performed?	Go to Step 2.	Go to "Electronic Stability Program Check".
2	DTC check for ESP® 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ignition switch ON and check DTC for ESP®. <i>Is there any DTC(s) other than C1038 and C1090?</i>	Go to applicable DTC diagnosis flow for troubleshooting.	Go to Step 3.
3	DTC check for ECM 1) Check DTC for ECM. <i>Is DTC U0073 and/or DTC U0121 detected?</i>	Go to applicable DTC diagnosis flow for troubleshooting.	Substitute a known-good ESP® hydraulic unit / control module assembly and check DTC.

DTC C1091 / 1092 / 1093: ECM / TCM / 4WD Control Module Data in CAN Line Failure

S6JB0B4604041

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
C1091: ECM sent invalid signal to ESP® control module.	<ul style="list-style-type: none"> • Engine control system • ECM • ESP® control module
C1092: TCM sent invalid signal to ESP® control module. (A/T model)	<ul style="list-style-type: none"> • A/T system • TCM • ESP® control module
C1093: 4WD control module sent invalid signal to ESP® control module. (if equipped 4WD control module)	<ul style="list-style-type: none"> • 4WD control system • 4WD control module • ESP® control module

DTC Troubleshooting

Step	Action	Yes	No
1	Was "Electronic Stability Program Check" performed?	Go to Step 2.	Go to "Electronic Stability Program Check".
2	DTC check other control module than ESP® 1) Check DTC for ECM, TCM and/or 4WD control module. <i>Is there any DTC(s)?</i>	Go to applicable DTC diagnosis flow for troubleshooting.	Substitute a known-good ESP® hydraulic unit / control module assembly and check DTC.

DTC U1073: Control Module Communication Bus Off

S6JB0B4604020

Refer to "DTC U1073: Control Module Communication Bus Off in Section 4E".

DTC U1100: Lost Communication with ECM (Reception Error)


S6JB0B4604021

Refer to "DTC U1100: Lost Communication with ECM (Reception Error) in Section 4E".

DTC U1101: Lost Communication with TCM (Reception Error)

S6JB0B4604042

Wiring Diagram

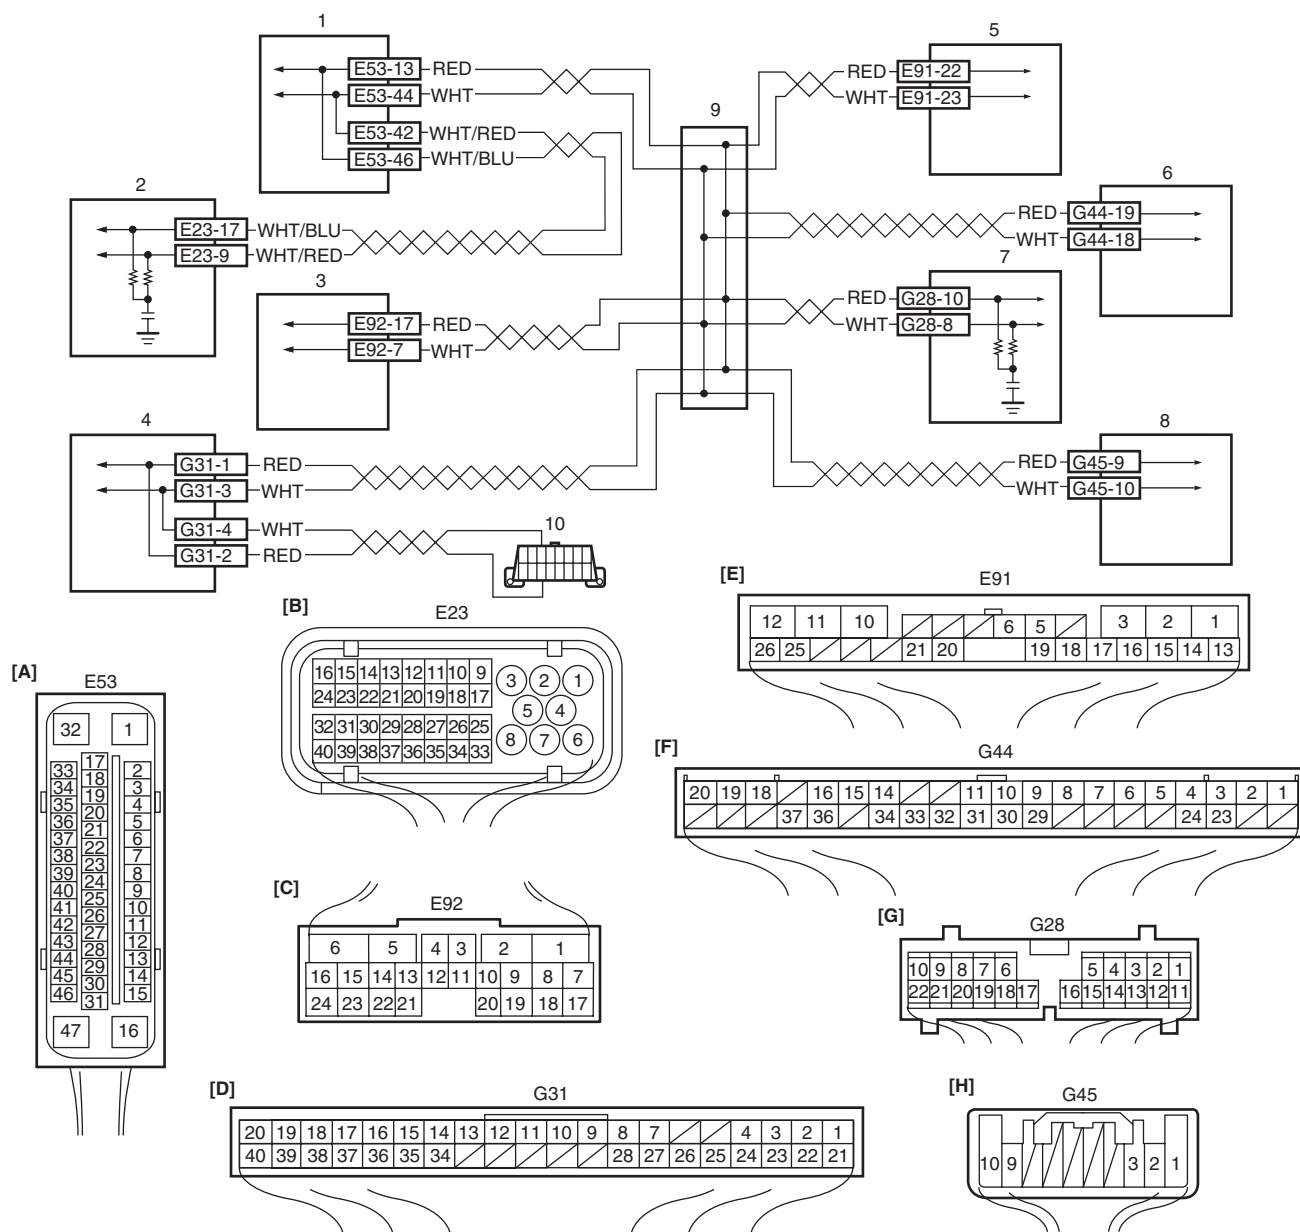

I6JB01460023-02

[A]: ESP® control module connector (viewed from terminal side)	[G]: Combination meter connector (viewed from harness side)	5. 4WD control module (if equipped)
[B]: ECM connector (viewed from harness side)	[H]: Steering angle sensor connector (viewed from harness side)	6. Keyless start control module (if equipped)
[C]: TCM connector (viewed from harness side)	1. ESP® hydraulic unit / control module assembly	7. Combination meter
[D]: BCM connector (viewed from harness side)	2. ECM	8. Steering angle sensor (if equipped)
[E]: 4WD control module connector (viewed from harness side)	3. TCM	9. Junction connector
[F]: Keyless start control module connector (viewed from harness side)	4. BCM	10. Data link connector (DLC)

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
TCM message data is missing from CAN communication. (A/T model)	<ul style="list-style-type: none"> CAN communication circuit TCM ESP® control module

DTC Troubleshooting

Step	Action	Yes	No
1	Was "Electronic Stability Program Check" performed?	Go to Step 2.	Go to "Electronic Stability Program Check".
2	DTC check for ESP® 1) Check DTC for ESP®. <i>Is DTC U1101 and DTC U1073 detected together?</i>	Go to "DTC U1073: Control Module Communication Bus Off in Section 4E" for troubleshooting.	Go to Step 3.
3	DTC check for TCM 1) Check DTC for TCM. <i>Is DTC U0073 detected?</i>	Go to "DTC U0073: Control Module Communication Bus Off in Section 5A" for troubleshooting.	Go to Step 4.
4	Check each control module connectors 1) Check connection of connectors of all control modules communicating by means of CAN. 2) Check DTC for ESP®. <i>Is DTC U1101 detected?</i>	Go to Step 5.	Check for intermittent trouble referring to "Intermittent and Poor Connection Inspection in Section 00".
5	CAN communication circuit check 1) Turn ignition switch to OFF position. 2) Disconnect connectors of ESP® control module, TCM and BCM communicating by means of CAN. <i>Is each CAN communication circuit between ESP® control module, TCM and BCM opened, shorted or high resistance?</i>	Repair or replace the CAN communication line.	Go to Step 6.
6	DTC check for ESP® 1) Turn ignition switch to OFF position. 2) Disconnect connectors of all control modules communicating by means of CAN. 3) Connect connectors to ESP® control module and TCM. 4) Check DTC for ESP®. <i>Is DTC U1101 detected?</i>	Go to Step 7.	Go to Step 8.
7	DTC Check for BCM 1) Turn ignition switch to OFF position. 2) Connect connector to BCM. 3) Check DTC for BCM. <i>Is DTC U1101 detected?</i>	Check TCM power and ground circuit. If circuit is OK, substitute a known-good TCM and check DTC.	Check ESP® power and ground circuit. If circuit is OK, substitute a known-good ESP® hydraulic unit / control module assembly and check DTC.
8	CAN communication circuit check 1) Turn ignition switch to OFF position. <i>Is each CAN communication circuit between disconnected control modules (other than ESP® control module and TCM) opened, shorted or high resistance?</i>	Repair or replace the CAN communication line.	Go to Step 9.

4F-39 Electronic Stability Program:

Step	Action	Yes	No
9	DTC check for ESP® 1) Connect connectors of disconnected control modules communicating by means of CAN. 2) Disconnect each connector. <ul style="list-style-type: none"> • ECM • TCM • BCM • 4WD control module (if equipped) • Keyless start control module (if equipped) • Steering angle sensor 3) Check DTC for ESP®. <i>Is DTC U1101 detected?</i>	Check ESP® control module power and ground circuit. If circuits are OK, substitute a known-good ESP® hydraulic unit / control module assembly and check DTC.	Check applicable control module power and ground circuit. If circuit is OK, substitute a known-good applicable control module and check DTC.

DTC U1126: Lost Communication with Steering Angle Sensor (Reception Error)

S6JB0B4604043

Wiring Diagram

Refer to "DTC U1101: Lost Communication with TCM (Reception Error)".

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Steering angle sensor message data is missing from CAN communication.	<ul style="list-style-type: none"> • CAN communication circuit • Steering angle sensor • ESP® control module

DTC Troubleshooting

Step	Action	Yes	No
1	<i>Was "Electronic Stability Program Check" performed?</i>	Go to Step 2.	Go to "Electronic Stability Program Check".
2	DTC check for ESP® 1) Check DTC for ESP®. <i>Is DTC U1126 and DTC U1073 detected together?</i>	Go to "DTC U1073: Control Module Communication Bus Off in Section 4E" for troubleshooting.	Go to Step 3.
3	Check each control module connectors 1) Check connection of connectors of all control modules communicating by means of CAN. 2) Check DTC for ESP®. <i>Is DTC U1126 detected?</i>	Go to Step 4.	Check for intermittent trouble referring to "Intermittent and Poor Connection Inspection in Section 00".
4	CAN communication circuit check 1) Turn ignition switch to OFF position. 2) Disconnect connectors of ESP® control module and steering angle sensor communicating by means of CAN. <i>Is each CAN communication circuit between ESP® control module and steering angle sensor opened, shorted or high resistance?</i>	Repair or replace the CAN communication line.	Go to Step 5.

Step	Action	Yes	No
5	DTC check for ESP® 1) Turn ignition switch to OFF position. 2) Disconnect connectors of all control modules communicating by means of CAN. 3) Connect connectors to ESP® control module and steering angle sensor. 4) Check DTC for ESP®. <i>Is DTC U1126 detected?</i>	Go to Step 6.	Go to Step 7.
6	Check steering angle sensor 1) Turn ignition switch to OFF position. 2) Check steering angle sensor power and ground circuit. 3) If OK, then substitute a known-good steering angle sensor. 4) Connect connectors of disconnected control modules communicating by means of CAN. 5) Calibrate steering angle sensor referring to "Sensor Calibration". 6) Clear all DTC(s) and check DTC for ESP®. <i>Is DTC U1126 detected?</i>	Check ESP® power and ground circuit. If circuit is OK, substitute a known-good ESP® hydraulic unit / control module assembly and check DTC.	Steering angle sensor was malfunction.
7	CAN communication circuit check 1) Turn ignition switch to OFF position. <i>Is each CAN communication circuit between disconnected control modules (other than ESP® control module and steering angle sensor) opened, shorted or high resistance?</i>	Repair or replace the CAN communication line.	Go to Step 8.
8	DTC check for ESP® 1) Connect connectors of disconnected control modules communicating by means of CAN. 2) Disconnect each connector. <ul style="list-style-type: none"> • ECM • TCM (A/T model) • BCM • 4WD control module (if equipped) • Keyless start control module (if equipped) • Steering angle sensor 3) Check DTC for ESP®. <i>Is DTC U1126 detected?</i>	Check ESP® control module power and ground circuit. If circuits are OK, substitute a known-good ESP® hydraulic unit / control module assembly and check DTC.	Check applicable control module power and ground circuit. If circuit is OK, substitute a known-good applicable control module and check DTC.

DTC U1139: Lost Communication with 4WD Control Module (Reception Error)

S6JB0B4604044

Wiring Diagram

Refer to "DTC U1101: Lost Communication with TCM (Reception Error)".

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
4WD control module message data is missing from CAN communication. (if equipped 4WD control module)	<ul style="list-style-type: none"> • CAN communication circuit • 4WD control module • ESP® control module

DTC Troubleshooting

Step	Action	Yes	No
1	Was "Electronic Stability Program Check" performed?	Go to Step 2.	Go to "Electronic Stability Program Check".
2	DTC check for ESP® 1) Check DTC for ESP®. <i>Is DTC U1139 and DTC U1073 detected together?</i>	Go to "DTC U1073: Control Module Communication Bus Off in Section 4E" for troubleshooting.	Go to Step 3.
3	DTC check for 4WD control module 1) Check DTC for 4WD control module. <i>Is DTC P1073 detected?</i>	Go to "DTC U1073: Control Module Communication Bus Off in Section 3C" for troubleshooting.	Go to Step 4.
4	Check each control module connectors 1) Check connection of connectors of all control modules communicating by means of CAN. 2) Check DTC for ESP®. <i>Is DTC U1139 detected?</i>	Go to Step 4.	Check for intermittent trouble referring to "Intermittent and Poor Connection Inspection in Section 00".
5	CAN communication circuit check 1) Turn ignition switch to OFF position. 2) Disconnect connectors of ESP® control module and 4WD control module communicating by means of CAN. <i>Is each CAN communication circuit between ESP® control module and 4WD control module opened, shorted or high resistance?</i>	Repair or replace the CAN communication line.	Go to Step 6.
6	DTC check for ESP® 1) Turn ignition switch to OFF position. 2) Disconnect connectors of all control modules communicating by means of CAN. 3) Connect connectors to ESP® control module and 4WD control module. 4) Check DTC for ESP®. <i>Is DTC U1139 detected?</i>	Go to Step 7.	Go to Step 8.
7	Check 4WD control module 1) Turn ignition switch to OFF position. 2) Check 4WD control module power and ground circuit. 3) If OK, then substitute a known-good 4WD control module. 4) Connect connectors of disconnected control modules communicating by means of CAN. 5) Clear all DTC(s) and check DTC for ESP®. <i>Is DTC U1139 detected?</i>	Check ESP® power and ground circuit. If circuit is OK, substitute a known-good ESP® hydraulic unit / control module assembly and check DTC.	4WD control module was malfunction.
8	CAN communication circuit check 1) Turn ignition switch to OFF position. <i>Is each CAN communication circuit between disconnected control modules (other than ESP® control module and 4WD control module) opened, shorted or high resistance?</i>	Repair or replace the CAN communication line.	Go to Step 9.

Step	Action	Yes	No
9	DTC check for ESP® 1) Connect connectors of disconnected control modules communicating by means of CAN. 2) Disconnect each connector. <ul style="list-style-type: none"> • ECM • TCM (A/T model) • BCM • 4WD control module • Keyless start control module (if equipped) • Steering angle sensor 3) Check DTC for ESP®. <i>Is DTC U1139 detected?</i>	Check ESP® control module power and ground circuit. If circuits are OK, substitute a known-good ESP® hydraulic unit / control module assembly and check DTC.	Check applicable control module power and ground circuit. If circuit is OK, substitute a known-good applicable control module and check DTC.

DTC U1140: Lost Communication with BCM (Reception Error)

S6JB0B4604045

Wiring Diagram

Refer to "DTC U1101: Lost Communication with TCM (Reception Error)".

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
BCM message data is missing from CAN communication.	<ul style="list-style-type: none"> • CAN communication circuit • 4WD control module • ESP® control module

DTC Troubleshooting

Step	Action	Yes	No
1	<i>Was "Electronic Stability Program Check" performed?</i>	Go to Step 2.	Go to "Electronic Stability Program Check".
2	DTC check for ESP® 1) Check DTC for ESP®. <i>Is DTC U1140 and DTC U1073 detected together?</i>	Go to "DTC U1073: Control Module Communication Bus Off in Section 4E" for troubleshooting.	Go to Step 3.
3	DTC check for BCM 1) Check DTC for BCM. <i>Is DTC U1073 detected?</i>	Go to "DTC U1073 (No. 1073): Control Module Communication Bus Off in Section 10B" for troubleshooting.	Go to Step 4.
4	Check each control module connectors 1) Check connection of connectors of all control modules communicating by means of CAN. 2) Check DTC for ESP®. <i>Is DTC U1140 detected?</i>	Go to Step 4.	Check for intermittent trouble referring to "Intermittent and Poor Connection Inspection in Section 00".
5	CAN communication circuit check 1) Turn ignition switch to OFF position. 2) Disconnect connectors of ESP® control module, BCM and ECM communicating by means of CAN. <i>Is each CAN communication circuit between ESP® control module, BCM and ECM opened, shorted or high resistance?</i>	Repair or replace the CAN communication line.	Go to Step 6.

4F-43 Electronic Stability Program:

Step	Action	Yes	No
6	DTC check for ESP® 1) Turn ignition switch to OFF position. 2) Disconnect connectors of all control modules communicating by means of CAN. 3) Connect connectors to ESP® control module and BCM. 4) Check DTC for ESP®. <i>Is DTC U1140 detected?</i>	Go to Step 7.	Go to Step 9.
7	DTC Check for ECM 1) Check DTC for ECM. <i>Is DTC U0140 detected?</i>	Go to Step 8.	Check ESP® control module power and ground circuit. If circuit is OK, substitute a known-good ESP® control module and check DTC.
8	CAN communication circuit check 1) Turn ignition switch to OFF position 2) Disconnect connectors of ESP® control module, BCM and ECM communicating by means of CAN. 3) Measure resistance at following terminals. <ul style="list-style-type: none">• Between “WHT/BLU” and “WHT” wire terminals of ESP® control module connector• Between “WHT/RED” and “RED” wire terminals of ESP® control module connector <i>Is resistance below 1 Ω?</i>	Check BCM power and ground circuit. If circuit is OK, substitute a known-good BCM and check DTC.	Substitute a known-good ESP® control module and check DTC.
9	CAN communication circuit check 1) Turn ignition switch to OFF position. <i>Is each CAN communication circuit between disconnected control modules (other than ESP® control module and BCM) opened, shorted or high resistance?</i>	Repair or replace the CAN communication line.	Go to Step 10.
10	DTC check for ESP® 1) Connect connectors of disconnected control modules communicating by means of CAN. 2) Disconnect each connector. <ul style="list-style-type: none">• ECM• TCM (A/T model)• BCM• 4WD control module (if equipped)• Keyless start control module (if equipped)• Steering angle sensor 3) Check DTC for ESP®. <i>Is DTC U1140 detected?</i>	Check ESP® control module power and ground circuit. If circuits are OK, substitute a known-good ESP® hydraulic unit / control module assembly and check DTC.	Check applicable control module power and ground circuit. If circuit is OK, substitute a known-good applicable control module and check DTC.

Repair Instructions

Hydraulic Unit Operation Check

S6JB0B4606001

Refer to "Hydraulic Unit Operation Check in Section 4E".

Sensor Calibration

S6JB0B4606015

⚠ CAUTION

If any DTC(s) other than C1075, C1076, C1077 or C1078 are detected, sensor calibration can not be completed. Repair the detected DTC first.

NOTE

Steering angle sensor calibration is needed when battery, dome fuse or the steering angle sensor is removed.

This sensor calibration can be done with/without SUZUKI Scan Tool.


When ESP® control module and/or yaw rate / G sensor assembly is removed, sensor calibration is needed with SUZUKI Scan Tool.

Sensor Calibration (Using SUZUKI Scan Tool)

- 1) Set steering wheel in straight-ahead position.
- 2) Connect SUZUKI scan tool to data link connector (DLC) (1) with ignition switch OFF.

Special tool

(A): SUZUKI scan tool

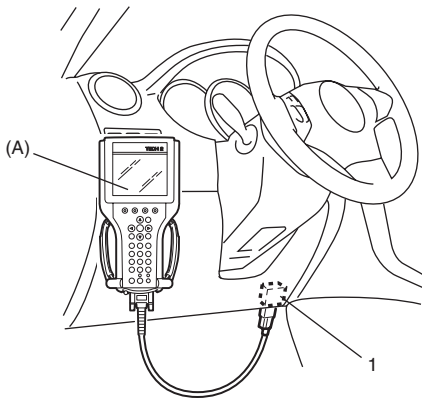

I5JB0A450008-01

- 3) Turn ignition switch to ON position and confirm that only any of DTC(s) C1075, C1076, C1077 and/or C1078 is detected. If any other DTC are detected, repair the detected DTC.

- 4) Park and level the vehicle with parking brake, stop engine with ignition switch ON, set steering in straight and without stepping on the brake pedal.

⚠ CAUTION

Hold the above condition in Step 4) to calibrate sensor correctly until sensor calibration is completed.

- 5) Select menu "SENSOR CALIBRATION" under "MISC. TEST" mode of SUZUKI scan tool and calibrate sensor. Refer to scan tool operator's manual for further details.
- 6) After completing the calibration, turn ignition switch to OFF position and disconnect SUZUKI scan tool from DLC.

Steering Angle Sensor Calibration (Not Using SUZUKI Scan Tool)

⚠ CAUTION


When power is not supplied to the steering angle sensor by removing battery or fuse, steering angle sensor should be calibrated.

- 1) Set steering wheel in straight-ahead position.
- 2) Connect battery terminals and/or fuse and start engine.

⚠ CAUTION

When power is not supplied to the steering angle sensor by removing battery or fuse, DTC C1075 is detected and SLIP indicator light (1) flashes.

If DTC other than C1075 is detected, SLIP indicator light flashes and other indicator illuminate. In that case, repair the detected DTC first.

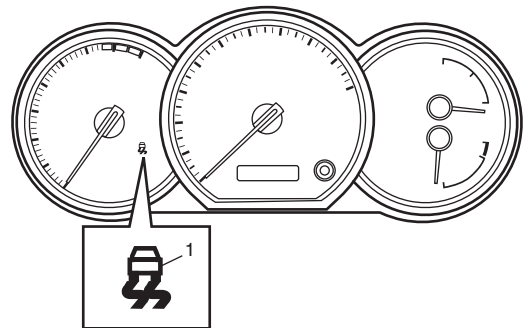

I6JB01460024-02

- 3) Drive vehicle straight on level ground at 15 km/h (9.5 mph) or above for few seconds without spinning wheels. And confirm that SLIP indicator light is OFF.

ESP® Hydraulic Unit / Control Module Assembly Components

S6JB0B4606002

Refer to “ABS (ESP®) hydraulic unit / control module Assembly Components in Section 4E”.

ESP® Hydraulic Unit / Control Module Assembly On-Vehicle Inspection

S6JB0B4606003

Refer to “ABS (ESP®) hydraulic unit / control module Assembly On-Vehicle Inspection in Section 4E”.

ESP® Hydraulic Unit / Control Module Assembly Removal and Installation

S6JB0B4606004

Refer to “ABS (ESP®) hydraulic unit / control module Assembly Removal and Installation in Section 4E”.

Front Wheel Speed Sensor On-Vehicle Inspection

S6JB0B4606005

Refer to “Front Wheel Speed Sensor On-Vehicle Inspection in Section 4E”.

Front Wheel Speed Sensor Removal and Installation

S6JB0B4606006

Refer to “Front Wheel Speed Sensor Removal and Installation in Section 4E”.

Front Wheel Speed Sensor Inspection

S6JB0B4606007

Refer to “Front Wheel Speed Sensor Inspection in Section 4E”.

Rear Wheel Speed Sensor On-Vehicle Inspection

S6JB0B4606008

Refer to “Front Wheel Speed Sensor On-Vehicle Inspection” since rear wheel speed sensor is the same as front wheel speed sensor.

Rear Wheel Speed Sensor Removal and Installation

S6JB0B4606009

Refer to “Rear Wheel Speed Sensor Removal and Installation in Section 4E”.

Rear Wheel Speed Sensor Inspection

S6JB0B4606010

Refer to “Front Wheel Speed Sensor Inspection” since rear wheel speed sensor is the same as front wheel speed sensor.

Front Wheel Encoder On-Vehicle Inspection

S6JB0B4606011

Refer to “Front Wheel Encoder On-Vehicle Inspection in Section 4E”.

Front Wheel Encoder Removal and Installation

S6JB0B4606012

⚠ CAUTION

Front wheel encoder is included in front wheel hub assembly. If front wheel encoder needs to be replaced, replace it as a front wheel hub assembly.

For removal and installation of front wheel hub assembly, referring to “Front Wheel Hub Assembly Removal and Installation in Section 2B”.

Rear Wheel Encoder On-Vehicle Inspection

S6JB0B4606013

Refer to “Rear Wheel Encoder On-Vehicle Inspection in Section 4E”.

Rear Wheel Encoder Removal and Installation

S6JB0B4606014

⚠ CAUTION

Rear wheel encoder is included in rear wheel hub assembly. If rear wheel encoder needs to be replaced, replace it as a rear wheel hub assembly.

For removal and installation of front wheel hub assembly, referring to “Rear Wheel Hub Assembly Removal and Installation in Section 2C”.


Master Cylinder Pressure Sensor On-Vehicle Inspection

S6JB0B4606016

- 1) Calibrate yaw rate / G sensor assembly referring to “Sensor Calibration”.
- 2) Check that basic brake system other than ESP® refer to “Brake Diagnosis Note in Section 4A”.
- 3) Connect SUZUKI scan tool to data link connector (DLC) (1) with ignition switch OFF.

Special tool

(A): SUZUKI scan tool

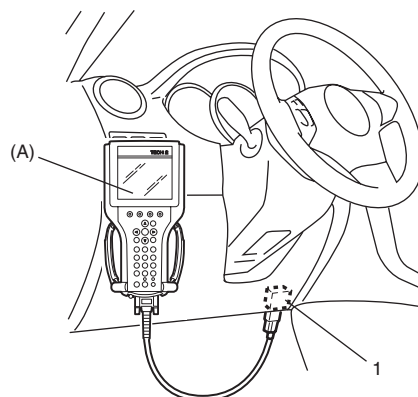

I5JB0A450008-01

- 4) Turn ignition switch to ON position and select menu "DATA LIST" mode of SUZUKI scan tool. Refer to scan tool operator's manual for further details.
- 5) When brake pedal is released, check "Master Cyl Press" under "DATA LIST" of SUZUKI scan tool. If pressure is out of specification, replace ESP® hydraulic unit / control module assembly.


Master cylinder pressure specification

Brake pedal released: 0 ± 0.8 MPa (0 ± 8 kg/cm², 0 ± 113 psi)

- 6) Hoist vehicle and remove right-side front wheel.
- 7) Connect special tool with rubber hose (1) to Front brake caliper bleeder plug (2).

Special tool

(A): 09956-02311

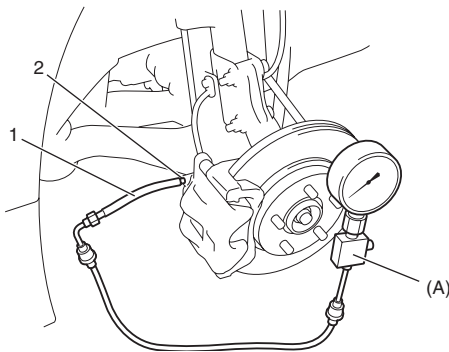

I6JB01460025-01

- 8) When bleeder plug loosens and depress brake pedal to make special tool gauge reading 10 MPa (100 kg/cm², 1422 psi), check "Master Cyl Press" under "DATA LIST" of SUZUKI scan tool. If pressure displayed on SUZUKI scan tool is out of specification, replace ESP® hydraulic unit / control module assembly.

Master cylinder pressure specification

Brake pedal depressed 10 MPa (100 kg/cm², 1422 psi): 10 ± 1.2 MPa (100 ± 12 kg/cm², 1422 ± 170 psi)

- 9) After completing the check, turn ignition switch to OFF position and disconnect SUZUKI scan tool from DLC.
- 10) Tighten bleeder plug and bleed air from brake system, referring to "Air Bleeding of Brake System in Section 4A".

Yaw Rate / G Sensor Assembly On-Vehicle Inspection

S6JB0B4606017


Longitudinal G Inspection

- 1) Calibrate yaw rate / G sensor assembly referring to "Sensor Calibration".
- 2) Park and level the vehicle with parking brake and fix wheels with chokes.
- 3) Check yaw rate / G sensor assembly installation condition.

- 4) Connect SUZUKI scan tool to data link connector (DLC) (1) with ignition switch OFF.

Special tool

(A): SUZUKI scan tool

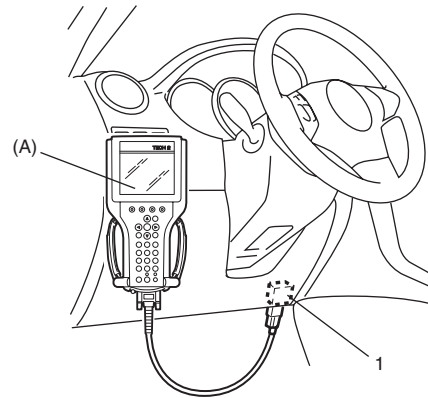

I5JB0A450008-01

- 5) Turn ignition switch to ON position and select menu "DATA LIST" mode of SUZUKI scan tool. Refer to scan tool operator's manual for further details.
- 6) Check "G Sensor" under "DATA LIST" of SUZUKI scan tool in the following vehicle conditions.


- Level condition
- Front-up condition
- Rear-up condition

If Longitudinal G condition is out of specification, replace yaw rate / G sensor assembly.


Longitudinal G specification

Vehicle condition	Longitudinal G
Level condition	0 ± 0.1 G
Front-up condition	0.1 ± 0.1 G
Rear-up condition	-0.1 ± 0.1 G

[A]

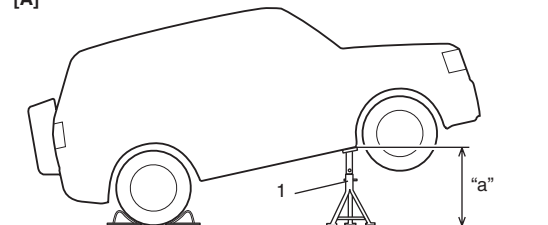

[B]

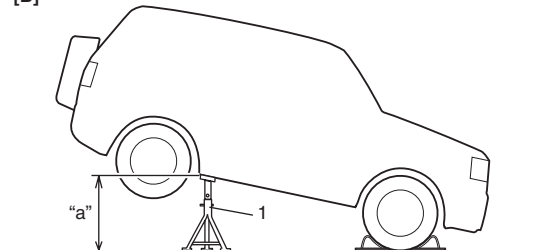

I6JB01460026-02


[A]: Front-up condition	"a": Approx 400 mm (15.75 in.)
[B]: Rear-up condition	1. Safety stand

Lateral G Inspection

- 1) Calibrate yaw rate / G sensor assembly referring to "Sensor Calibration".
- 2) Park and level the vehicle with parking brake and fix wheels with chokes.
- 3) Check yaw rate / G sensor assembly installation condition.
- 4) Connect SUZUKI scan tool to data link connector (DLC) (1) with ignition switch OFF.

Special tool

(A): SUZUKI scan tool

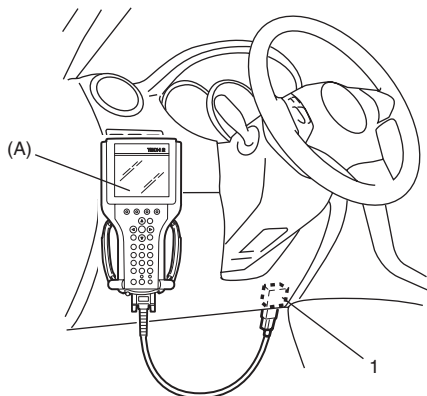

I5JB0A450008-01

- 5) Turn ignition switch to ON position and select menu "DATA LIST" mode of SUZUKI scan tool. Refer to scan tool operator's manual for further details.
- 6) Check "G Sensor (lateral)" under "DATA LIST" of SUZUKI scan tool in the following vehicle conditions.


- Level condition
- Right-up condition
- Left-up condition

If Lateral G condition is out of specification, replace yaw rate / G sensor assembly.


Lateral G specification

Vehicle condition	G Sensor (lateral)
Level condition	$0 \pm 0.1 \text{ G}$
Right -up condition	$0.1 \pm 0.1 \text{ G}$
Left-up condition	$-0.1 \pm 0.1 \text{ G}$

[A]

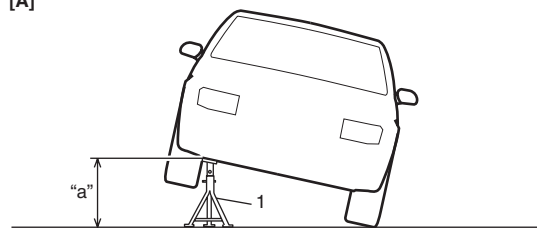

[B]

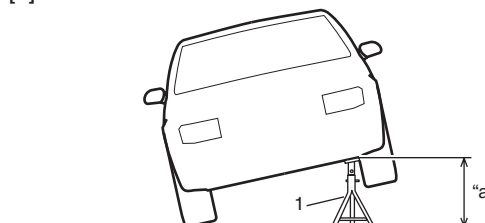

I6JB01460027-01


[A]: Right-up condition	"a": Approx 350 mm (13.78 in.)
[B]: Left-up condition	1. Safety stand

Yaw Rate Inspection

- 1) Calibrate yaw rate / G sensor assembly referring to "Sensor Calibration".
- 2) Check yaw rate / G sensor assembly installation condition.
- 3) Connect SUZUKI scan tool to data link connector (DLC) (1) with ignition switch OFF.

Special tool

(A): SUZUKI scan tool

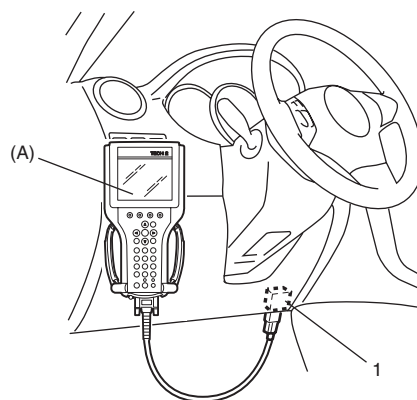

I5JB0A450008-01

- 4) Turn ignition switch to ON position and select menu "DATA LIST" mode of SUZUKI scan tool. Refer to scan tool operator's manual for further details.
- 5) Check "Yaw rate sensor" under "DATA LIST" of SUZUKI scan tool in the following vehicle conditions.

- Parking condition
- Drive vehicle in right turning condition with steering wheel fully turned
- Drive vehicle in left turning condition with steering wheel fully turned

If yaw rate condition is out of specification, replace yaw rate / G sensor assembly.


Yaw rate specification

Vehicle condition	Yaw rate
Parking	$0 \pm 4 \text{ deg/s}$
Right turning	$30 \pm 4 \text{ deg/s}$
Left turning	$-30 \pm 4 \text{ deg/s}$


NOTE

- Drive the vehicle on level ground and at 10 km/h (6.2 mph).
- Minimum turning radius is 5.3 m (17.4 ft).

[A]

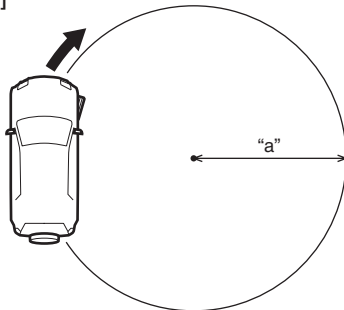

[B]

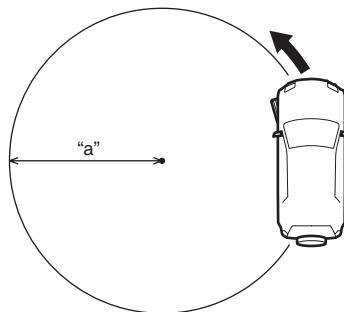

I6JB01460028-01

[A]: Right turning	"a": Approx 5.3 m (17.4 ft.)
[B]: Left turning	

Yaw Rate / G Sensor Assembly Removal and Installation

S6JB0B4606018

⚠ CAUTION


- When yaw rate / G sensor assembly is replaced, ESP® control module needs zero calibration. Perform zero calibration by SUZUKI scan tool referring to "Sensor Calibration".
- Regarding yaw rate / G sensor assembly removal/installation, confirm specified torque and never use impact wrench to avoid damage.
- When handling the yaw rate / G sensor assembly, be careful not to drop it or apply an impact to it.
If an excessive impact was applied, never attempt disassembly or repair but replace it with a new one.

Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Remove console rear panel referring to "Console Box Components in Section 9H".
- 3) Remove yaw rate / G sensor assembly from floor panel.

Installation

- 1) Before installing yaw rate / G sensor assembly (1), check installing condition as follows.
 - Deformations around sensor installation area (2) (in floor panel).
 - Foreign matters on mating surface between sensor and floor panel.

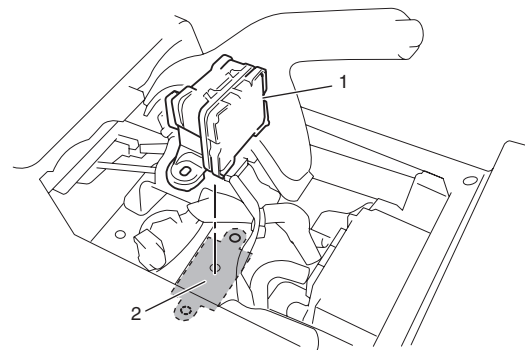


I6JB01460029-05

- 2) Install yaw rate / G sensor assembly (1) to floor panel.

Tightening torque

Yaw rate / G sensor assembly bolt (a): 8 N·m (0.8 kgf-m, 6.0 lb-ft)

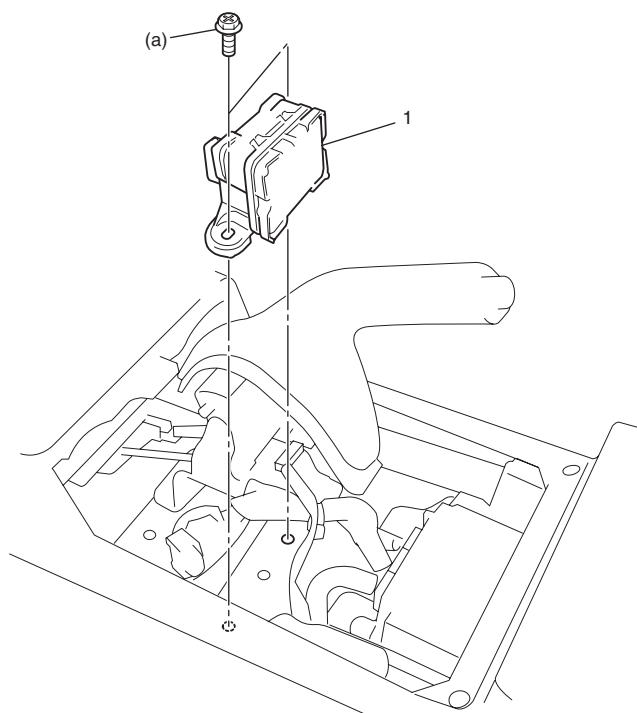


I6JB01460030-02

- 3) Install console rear panel referring to "Console Box Components in Section 9H".
- 4) Connect negative (–) cable to battery.
- 5) After completing installation, calibrate yaw rate / G sensor assembly referring to "Sensor Calibration".

Yaw Rate / G Sensor Inspection

S6JB0B4606019

- Check sensor for dents, cracks or deformation.
- Check sensor connector (sensor side and harness side) and sensor connector lock mechanism for damage or crack.
- Check connector terminals for bend, corrosion or rust. If it is found faulty, replace yaw rate / G sensor assembly.

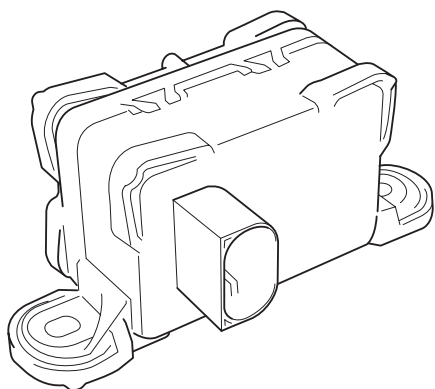

I6JB01460031-01

Steering Angle Sensor On-Vehicle Inspection

S6JB0B4606020


⚠ CAUTION

Before each inspection, confirm steering angle sensor calibration is completed. If calibration is incompleted, calibrate sensor referring to "Sensor Calibration".

- 1) Connect SUZUKI scan tool to data link connector (DLC) (1) with ignition switch OFF.

Special tool

(A): SUZUKI scan tool

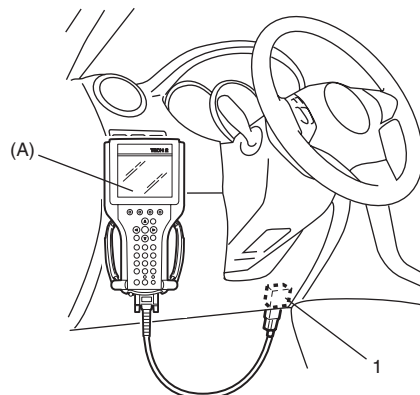


I5JB0A450008-01

- 2) Turn ignition switch to ON position and select menu "DATA LIST" mode of SUZUKI scan tool. Refer to scan tool operator's manual for further details.
- 3) Check "Steering angle Sen" under "DATA LIST" of SUZUKI scan tool in the following steering wheel conditions.
 - Front wheels in straight-ahead position
 - Rotate steering wheel a round in clockwise (counter clockwise) from straight-ahead position

If steering angle condition is out of specification, replace steering angle sensor.

Steering angle Specification

Vehicle condition	Steering angle
Front wheels in straight-ahead position	$0 \pm 3^\circ$
Rotate steering wheel a round in clockwise	$360 \pm 3^\circ$
Rotate steering wheel a round in counterclockwise	$-360 \pm 3^\circ$

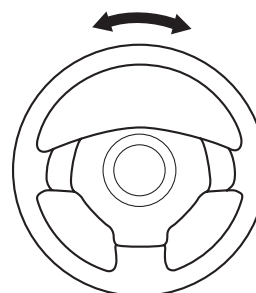

I6JB01460032-01

Steering Angle Sensor Removal and Installation


S6JB0B4606021

Refer to “Steering Angle Sensor Removal and Installation (ESP® Model) in Section 6B”.

Steering Angle Sensor Inspection

S6JB0B4606022

- Check sensor for dents, cracks or deformation.
- Check sensor connector (sensor side and harness side) and sensor connector lock mechanism for damage or crack.
- Check connector terminals for bend, corrosion or rust. If it is found faulty, replace steering angle sensor (1).

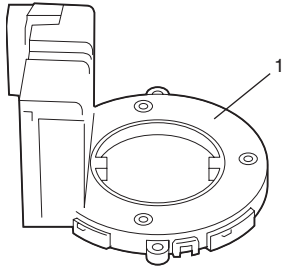


I6JB01460033-01

ESP® OFF Switch Removal and Installation

S6JB0B4606023

Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Remove center garnish with audio unit (if equipped) and HVAC control module referring to “Audio Unit Removal and Installation in Section 9C”.
- 3) Remove HVAC control module from center garnish, referring to “Air Flow Control Actuator Removal and Installation in Section 7A”.
- 4) Remove ESP® OFF Switch (1) from center garnish (2).

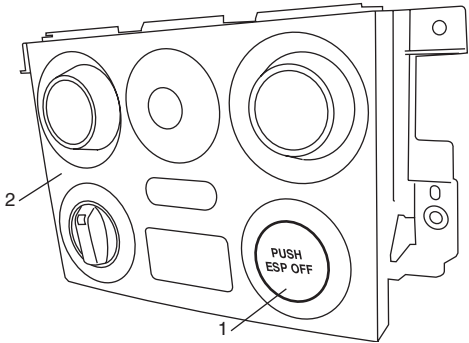

I6JB01460034-01

Installation


Reverse removal procedure.

ESP® OFF Switch Inspection

S6JB0B4606024

Check for continuity between terminals at each switch position.

If check result is not as specified, replace ESP® OFF switch.

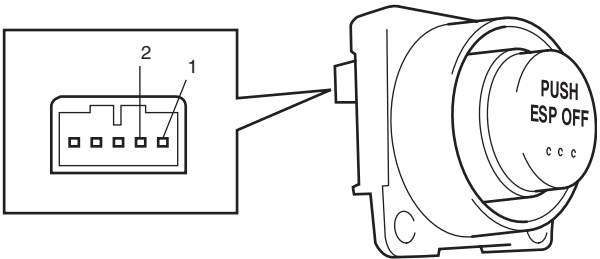

Terminal	1	2
ESP OFF switch		
FREE		
PUSH	○	○

I6JB01460035-02

Specifications

Tightening Torque Specifications

S6JB0B4607001

Fastening part	Tightening torque			Note
	N·m	kgf-m	lb-ft	
Yaw rate / G sensor assembly bolt	8	0.8	6.0	



Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Special Tools and Equipment

Special Tool

S6JB0B4608001

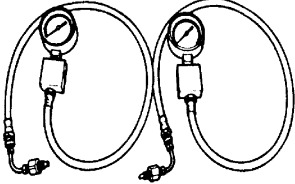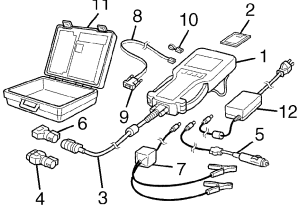09956-02311 Brake pressure gauge 	SUZUKI scan tool — This kit includes following items. 1. Tech 2, 2. PCMCIA card, 3. DLC cable, 4. SAE 16/19 adapter, 5. Cigarette cable, 6. DLC loop back adapter, 7. Battery power cable, 8. RS232 cable, 9. RS232 adapter, 10. RS232 loop back connector, 11. Storage case, 12. 
--	---

Section 5

Transmission / Transaxle

CONTENTS

Precautions	5-1	A/T Basic Check.....	5A-28
Precautions.....	5-1	Road Test.....	5A-29
Precautions for Transmission / Transaxle.....	5-1	Manual Road Test.....	5A-30
Automatic Transmission/Transaxle	5A-1	Stall Test	5A-31
Precautions.....	5A-1	Time Lag Test	5A-32
Precautions in Diagnosing Trouble	5A-1	Line Pressure Test	5A-33
General Service Procedure Information.....	5A-1	Engine Brake Test.....	5A-34
Precautions for Disassembly and		“P” Range Test.....	5A-34
Reassembly	5A-1	A/T Symptom Diagnosis.....	5A-35
General Description	5A-2	No Gear Shift to 5th gear	5A-39
Automatic Transmission Description.....	5A-2	No Lock-Up Occurs.....	5A-40
Clutch / Brake Functions of Automatic		Transmission Warning Light Circuit Check –	
Transmission.....	5A-5	Light Does Not Come “ON” at Ignition Switch	
Table of A/T Component Operation	5A-6	ON (Non-E-OBd model)	5A-41
Operation of Shift Solenoids and TCC		Transmission Warning Light Circuit Check –	
Solenoid	5A-6	Light Remains “ON” at Ignition Switch ON	
Automatic Gear Shift Table	5A-7	(Non-E-OBd model).....	5A-41
CAN Communication System Description.....	5A-8	“POWER” Light Circuit Check – Light Does	
Electronic Shift Control Input / Output Table.....	5A-9	Not Come “ON” at Ignition Switch ON.....	5A-41
Brake Interlock System Description	5A-9	DTC P0705: Transmission Range Sensor	
A/T Diagnosis General Description	5A-10	Circuit Malfunction.....	5A-42
On-Board Diagnostic System Description.....	5A-10	DTC P0707: Transmission Range Sensor	
Schematic and Routing Diagram.....	5A-12	Circuit Low	5A-44
Electronic Shift Control Input / Output		DTC P0711: Transmission Fluid Temperature	
Diagram	5A-12	Sensor Range / Performance.....	5A-45
Electronic Shift Control System Wiring		DTC P0712: Transmission Fluid Temperature	
Diagram	5A-13	Sensor “A” Circuit Low	5A-46
Component Location	5A-15	DTC P0713: Transmission Fluid Temperature	
Electronic Shift Control System Components		Sensor “A” Circuit High	5A-47
Location	5A-15	DTC P0717: Input / Turbine Speed Sensor	
Diagnostic Information and Procedures	5A-16	Circuit No Signal	5A-48
A/T System Check	5A-16	DTC P0722: Output Speed Sensor Circuit No	
Malfunction Indicator Lamp (MIL) Check (E-		Signal	5A-50
OBd model)	5A-18	DTC P0741 / P0742: TCC Circuit	
Transmission Warning Light Operation Check		Performance or Stuck OFF / TCC Circuit	
(Non-E-OBd model).....	5A-18	Stuck ON.....	5A-51
“POWER” Lamp Operation Check	5A-18	DTC P0751 / P0752: Shift Solenoid-A	
DTC Table.....	5A-19	Performance or Stuck OFF / Shift Solenoid-	
DTC Check	5A-22	A Stuck ON	5A-52
DTC Clearance	5A-22	DTC P0756 / P0757: Shift Solenoid-B	
Fail Safe Table.....	5A-23	Performance or Stuck OFF / Shift Solenoid-	
Scan Tool Data	5A-25	B Stuck ON	5A-53
Visual Inspection.....	5A-28	DTC P0771 / P0772: Shift Solenoid-E	
		Performance or Stuck OFF / Shift Solenoid-	
		E Stuck ON	5A-55

DTC P0781: 1-2 Shift	5A-56	Transmission Range Sensor Removal and Installation	5A-91
DTC P0797: Pressure Control Solenoid "C" Stuck ON	5A-57	Transmission Range Sensor Inspection and Adjustment	5A-92
DTC P0962 / P0966 / P0970: Pressure Control Solenoid "A" Control Circuit Low / Pressure Control Solenoid "B" Control Circuit Low / Pressure Control Solenoid "C" Control Circuit Low	5A-58	Key Interlock Cable Removal and Installation	5A-93
DTC P0963 / P0967 / P0971: Pressure Control Solenoid "A" Control Circuit High / Pressure Control Solenoid "B" Control Circuit High / Pressure Control Solenoid "C" Control Circuit High	5A-60	Brake and key Interlock System Inspection	5A-95
DTC P0973 / P0976 / P0985: Shift Solenoid "A" Control Circuit Low / Shift Solenoid "B" Control Circuit Low / Shift Solenoid "E" Control Circuit Low	5A-61	Input Shaft Speed Sensor Removal and Installation	5A-95
DTC P0974 / P0977 / P0986: Shift Solenoid "A" Control Circuit High / Shift Solenoid "B" Control Circuit High / Shift Solenoid "E" Control Circuit High	5A-62	Input Shaft Speed Sensor Inspection	5A-96
DTC P1702: Internal Control Module Memory Check Sum Error	5A-64	Output Shaft Speed Sensor Removal and Installation	5A-96
DTC P1703: CAN Invalid Data - TCM	5A-64	Output Shaft Speed Sensor Inspection	5A-97
DTC P1723: Range Select Switch Malfunction	5A-65	Solenoid Valves (Shift Solenoid-A, Shift Solenoid-B, Shift Solenoid-E, TCC Solenoid, Pressure Control Solenoid-A, Pressure Control Solenoid-B, and Pressure Control Solenoid-C) Removal and Installation	5A-97
DTC P1874: 4L Switch Circuit Malfunction (Short)	5A-66	Solenoid Valves (Shift Solenoid-A, Shift Solenoid-B, Shift Solenoid-E, TCC Solenoid, Pressure Control Solenoid-A, Pressure Control Solenoid-B, and Pressure Control Solenoid-C) Inspection	5A-98
DTC P1875: 4L Switch Circuit Malfunction (Open)	5A-67	Transmission Fluid Temperature Sensor Removal and Installation	5A-100
DTC P2742: Transmission Fluid Temperature Sensor "B" Circuit Low	5A-69	Transmission Fluid Temperature Sensor Inspection	5A-101
DTC P2743: Transmission Fluid Temperature Sensor "B" Circuit High	5A-70	Transmission Control Module (TCM) Removal and Installation	5A-101
DTC P2763: Torque Converter Clutch (TCC) Circuit High	5A-71	A/T Relay Inspection	5A-102
DTC P2764: Torque Converter Clutch (TCC) Circuit Low	5A-72	Oil Cooler Pipes Removal and Installation	5A-102
DTC U0073: Control Module Communication Bus Off	5A-74	Automatic Transmission Unit Components	5A-103
DTC U0100: Lost Communication with ECM	5A-77	Automatic Transmission Assembly Dismounting and Remounting	5A-104
DTC U0140: Lost Communication with Body Control Module	5A-78	Automatic Transmission Unit Components	5A-105
Inspection of TCM and Its Circuits	5A-79	Automatic Transmission Unit Disassembly	5A-106
TCM Power and Ground Circuit Check	5A-84	Oil Pump Assembly Components	5A-117
Repair Instructions	5A-85	Oil Pump Disassembly and Assembly	5A-118
Learning Control Initialization	5A-85	Oil Pump Inspection	5A-120
A/T Fluid Level Check	5A-85	Clutch Drum & Input Shaft Assembly Components	5A-121
A/T Fluid Change	5A-86	Clutch Drum & Input Shaft Assembly Disassembly	5A-122
Oil Cooler Hoses Replacement	5A-87	Clutch Drum & Input Shaft Assembly Reassembly	5A-126
Manual Selector Assembly Components	5A-88	Clutch Drum & Input Shaft Assembly Inspection	5A-134
Manual Selector Assembly Removal and Installation	5A-88	Valve Body Assembly Components	5A-136
Select Lever Knob Installation	5A-88	Automatic Transmission Unit Assembly	5A-137
Manual Selector Assembly Inspection	5A-88	Automatic Transmission Unit Assembly Inspection	5A-154
"4" Position Switch Inspection	5A-89	Specifications	5A-158
Mode Select Switch Inspection	5A-89	Bearing and Race Installation Specification	5A-158
Select Cable Component	5A-90	Tightening Torque Specifications	5A-159
Select Cable Adjustment	5A-91	Special Tools and Equipment	5A-160
		Recommended Service Material	5A-160
		Special Tool	5A-160
		Manual Transmission/Transaxle	5B-1
		General Description	5B-1
		Manual Transmission Construction	5B-1

Diagnostic Information and Procedures	5B-2	Manual Transmission Front Case	
Manual Transmission Symptom Diagnosis.....	5B-2	Disassembly and Assembly	5B-29
Repair Instructions	5B-3	Manual Transmission Adapter Case	
Manual Transmission Assembly Components	5B-3	Disassembly and Assembly	5B-30
Gear Shift Control Lever Rear Case		Specifications	5B-30
Assembly Components	5B-4	Tightening Torque Specifications	5B-30
Gear Shift Lever Front Case Assembly		Special Tools and Equipment	5B-31
Components.....	5B-5	Recommended Service Material	5B-31
Gear Shift Shaft and Fork Components.....	5B-6	Special Tool	5B-31
Input Shaft Assembly, Output Shaft Assembly		Clutch	5C-1
and Countershaft Assembly Components	5B-7	General Description	5C-1
Manual Transmission Oil Change	5B-8	Clutch (Hydraulic Type) Construction	5C-1
Transmission Shift Control Lever Removal		Component Location	5C-2
and Installation.....	5B-9	Clutch Fluid Pipe and Hose Location	5C-2
Transmission Shift Control Lever Inspection.....	5B-9	Diagnostic Information and Procedures	5C-3
Back Up Light Switch Removal and		Clutch (Hydraulic Type) Symptom Diagnosis.....	5C-3
Installation	5B-10	Repair Instructions	5C-4
Back Up Light Switch Inspection.....	5B-10	Clutch Pedal Height Inspection	5C-4
Gear Shift Control Lever Rear Case		Clutch Pedal Free Travel Check	5C-4
Assembly Removal and Installation	5B-10	Clutch Fluid Inspection.....	5C-4
Gear Shift Control Lever Rear Case		Air Bleeding of Clutch System.....	5C-4
Assembly Disassembly and Reassembly	5B-11	Clutch Pedal Position (CPP) Switch Removal	
Gear Shift Control Lever Rear Case		and Installation	5C-5
Assembly Inspection	5B-11	Clutch Pedal Position (CPP) Switch	
Gear Shift Lever Front Case Assembly		Inspection and Adjustment.....	5C-5
Removal and Installation.....	5B-11	Clutch Fluid Pipe and Hose Removal and	
Gear Shift Lever Front Case Assembly		Installation	5C-5
Disassembly and Reassembly	5B-12	Clutch Fluid Pipe and Hose Inspection	5C-6
Gear Shift Lever Front Case Assembly		Clutch Master Cylinder Removal and	
Inspection.....	5B-13	Installation	5C-6
Engine Rear Mounting Replacement	5B-13	Clutch Master Cylinder Inspection	5C-7
Manual Transmission Assembly Dismounting		Clutch Operating Cylinder Assembly	
and Remounting.....	5B-14	Removal and Installation.....	5C-7
Manual Transmission Unit Disassembly	5B-16	Clutch Cover, Clutch Disc and Flywheel	
Manual Transmission Unit Reassembly.....	5B-17	Components.....	5C-8
Locating Spring Inspection.....	5B-20	Clutch Cover, Clutch Disc and Flywheel	
Input Shaft Disassembly	5B-20	Removal and Installation.....	5C-9
Input Shaft Inspection	5B-21	Clutch Cover, Clutch Disc and Flywheel	
Input Shaft Reassembly.....	5B-22	Inspection	5C-10
Countershaft Disassembly and Assembly.....	5B-24	Specifications	5C-11
Countershaft and Reverse Idle Gear		Tightening Torque Specifications	5C-11
Inspection.....	5B-27	Special Tools and Equipment	5C-11
Output Shaft Disassembly and Assembly.....	5B-28	Recommended Service Material	5C-11
Output Shaft Inspection	5B-29	Special Tool	5C-11

Precautions

Precautions

Precautions for Transmission / Transaxle

S6JB0B5000001

Air Bag Warning

Refer to “Air Bag Warning in Section 00”.

Fastener Caution

Refer to “Fastener Caution in Section 00”.

Precautions in Diagnosing Trouble (for A/T)

Refer to “Precautions in Diagnosing Trouble in Section 5A”.

Precautions for Disassembly and Reassembly (for A/T)

Refer to “Precautions for Disassembly and Reassembly in Section 5A”.

Automatic Transmission/Transaxle

Precautions

Precautions in Diagnosing Trouble

S6JB0B5100001

- Do not disconnect couplers from TCM, battery cable from battery, TCM ground wire harness from engine or main fuse before checking the diagnostic information (DTC, freeze frame data, etc.) stored in TCM memory. Such disconnection will clear memorized information in TCM memory.
- Diagnostic information stored in TCM memory can be cleared as well as checked by using SUZUKI scan tool or OBD generic scan tool. Before using scan tool, read its Operator's (Instruction) Manual carefully to have good understanding as to what functions are available and how to use it.
It is indistinguishable which module turns on MIL because not only ECM but also TCM turns on MIL. Therefore, check both ECM and TCM for DTC when MIL lights on.
When checking TCM for DTC, keep in mind that DTC is displayed on the scan tool as follows depending on the scan tool used.
 - SUZUKI scan tool displays DTC detected by TCM.
 - OBD generic scan tool displays DTC detected by each of ECM and TCM simultaneously.
- When replacing TCM with used one, all learned controls which are stored in TCM memory should be erased after the replacement referring to "Learning Control Initialization". Neglecting this initialization may cause excessive shift shock.
- Be sure to read "Precaution for CAN Communication System in Section 00" before inspection and observe what is written there.
- TCM and/or ECM replacement:
When substituting a known-good TCM and/or ECM, check for the following conditions.
Neglecting this check may result in damage to a good TCM and/or ECM.
 - All relays and actuators have resistance of specified value.
 - MAF sensor, Manifold absolute pressure (MAP) sensor, TP sensor and fuel tank pressure sensor are in good condition. Also, the power circuit of these sensors is not shorted to the ground.
- Communication of ECM, BCM, combination meter, keyless start control module (if equipped), ABS/ESP® control module, 4WD control module (if equipped), TCM and steering angle sensor (ESP® model), is established by CAN (Controller Area Network). (For more detail of CAN communication for ECM, refer to "CAN Communication System Description"). Therefore, handle CAN communication line with care referring to "Precautions for Installing Mobile Communication Equipment in Section 00".

General Service Procedure Information

S6JB0B5100002

When repairing automatic transmission, it is necessary to conduct the on-vehicle test to investigate where the cause of the trouble lies first.
Then whether overhaul should be done or not is determined. If the transmission is disassembled without such preliminary procedure, not only the cause of the trouble would be unknown, but also a secondary trouble may occur and often time would be wasted.

Precautions for Disassembly and Reassembly

S6JB0B5100003

As the automatic transmission consists of high precision components, the following cautions should be strictly observed when handling its parts in disassembly and reassembly.

- Disassembling valve body assembly is prohibited in principle. However, a few parts can be disassembled. When disassembling valve body component parts, confirm whether these parts are allowed to disassemble or not referring to "Valve Body Assembly Components".
- Make sure to wash dirt off from the transmission so that no such dirt will enter the transmission during dismounting and remounting.
- Select a clean place free from dust and dirt for overhauling.
- Place a rubber mat on the work bench to protect parts from damage.
- Work gloves or shop cloth should not be used. (Use nylon cloth or paper towel.)
- When separating the case joint, do not pry with a screwdriver or such but tap with a plastic hammer lightly.
- Make sure to wash dirt off from the transmission so that no such dirt will enter the transmission during disassembly and reassembly.
- Wash the disassembled parts in ATF (Automatic Transmission Fluid) or kerosene (using care not to allow ATF or kerosene to get on your face, etc.) and confirm that each fluid passage is not clogged by blowing air into it. But use ATF to wash the disc, resin washers and rubber parts.
- Replace each gasket, oil seal and O-ring with a new one.
- Apply ATF to sliding or rotating parts before reassembly.
- A new disc should be soaked in ATF at least 15 minutes before use.

Part Inspection and Correction Table


Part	Inspect for	Correction
Casted part, machined part	Small flaw, burr Deep or grooved flaw Clogged fluid passage Flaw on installing surface, residual gasket Crack	Remove with oil stone. Replace part. Clean with air or wire. Remove with oil stone or replace part. Replace part.
Bearing	Unsmooth rotation Streak, pitting, flaw, crack	Replace. Replace.
Bushing, thrust washer	Flaw, burr, wear, burning	Replace.
Oil seal, gasket	Flawed or hardened seal ring Worn seal ring on its periphery or side Piston seal ring, oil seal, gasket, etc.	Replace. Replace. Replace.
Gear	Flaw, burr Worn gear tooth	Replace. Replace.
Splined part	Burr, flaw, torsion	Correct with oil stone or replace.
Snap ring	Wear, flaw, distortion No interference	Replace. Replace.
Thread	Burr Damage	Replace. Replace.
Spring	Settling, sign of burning	Replace.
Clutch disc, brake disc	Wear, burning, distortion, damaged claw	Replace.
Clutch plate, brake plate	Wear, burning, distortion, damaged claw	Replace.
Sealing surface (where lip contacts)	Flaw, rough surface, stepped wear, foreign material	Replace.

General Description

Automatic Transmission Description

S6JB0B5101001

- This automatic transmission is a full automatic type with 4-speed plus overdrive (O/D).
The torque converter is a 3-element, 1-step and 2-phase type and is equipped with an electronically controlled lock-up mechanism. The gear shift device consists of 3 sets of planetary gear units, 3 disc type clutches, 4 disc type brakes and 3 one-way clutches. The gear shift is done by selecting one of 7 positions ("P", "R", "N", "D", "4", "3" and "L") by means of the select lever installed on the floor.
- This automatic transmission has the clutch-to-clutch (brake) control function when the gear is upshifted from the 4th gear to the 5th gear and downshifted from the 5th gear to the 4th gear. With this function, gears are synchronized by controlling the hydraulic pressure to the forward clutch and No.1 brake without using the one-way clutch. This automatic transmission also has the line pressure learning control function to achieve gear changes smoothly. Therefore, when any of the following conditions applies, initialize the line pressure learning control of TCM referring to "Learning Control Initialization". Neglecting this initialization may cause excessive shift shock.
- The A/T unit has been overhauled
- The A/T unit has been replaced
- The engine has been overhauled
- The engine has been replaced
- TCM has been replaced with used one

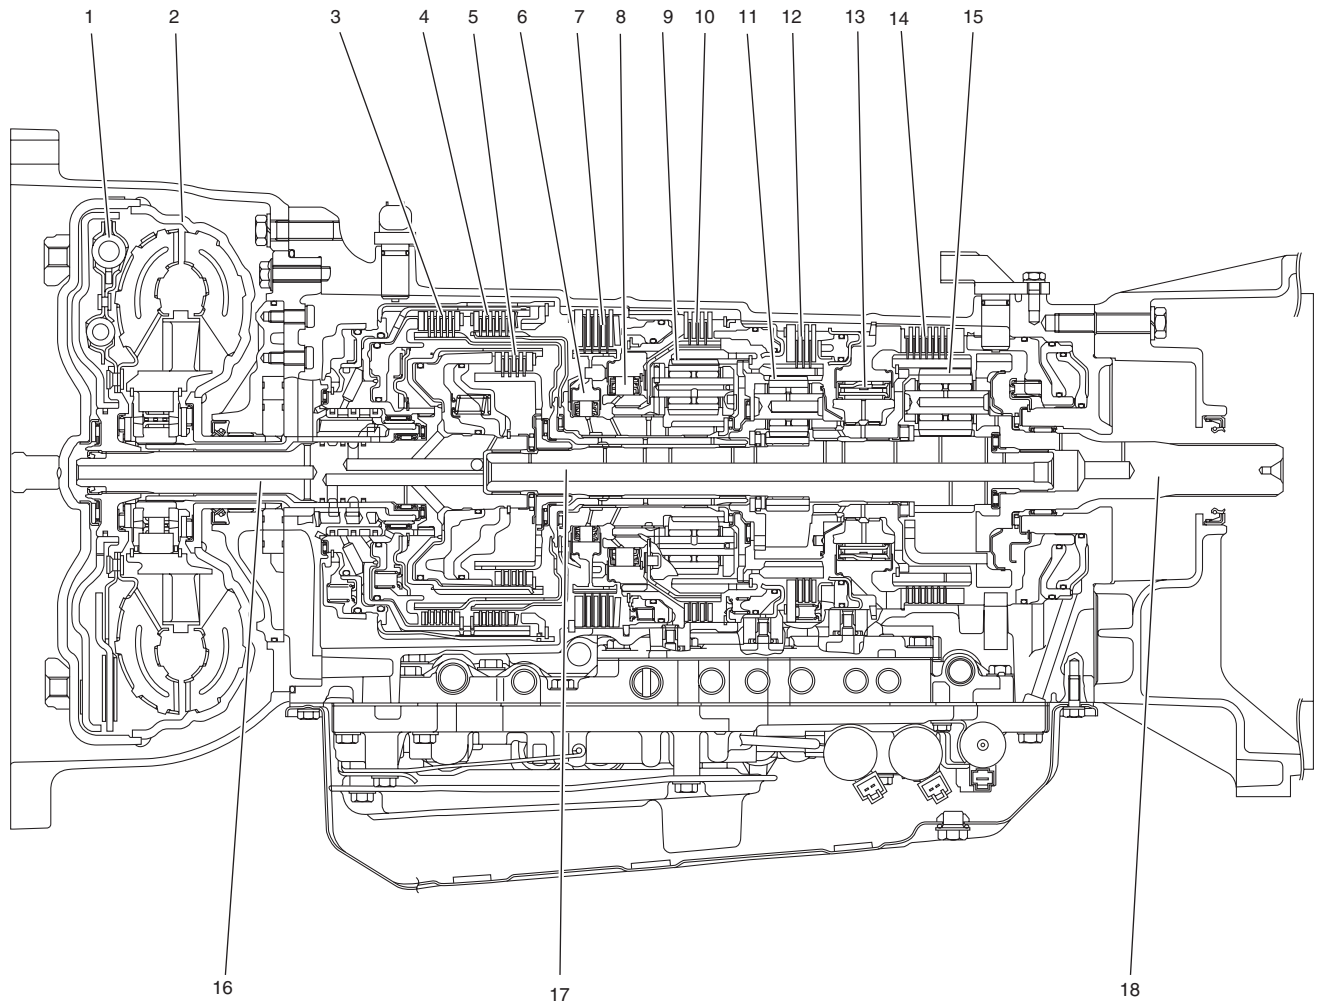

I6JB01510046-01


1. Torque converter clutch (TCC)	7. 2nd brake	13. One-way No.3 clutch
2. Torque converter	8. One-way No.1 clutch	14. 1st and reverse brake
3. Direct clutch	9. Front planetary gear	15. Rear planetary
4. Reverse clutch	10. No.1 brake	16. Input shaft
5. Forward clutch	11. Middle planetary gear	17. Intermediate shaft
6. One-way No.2 clutch	12. No.2 brake	18. Output shaft

5A-4 Automatic Transmission/Transaxle:

Item		Specifications	
Torque converter	Type	3-element, 1-step, 2-phase type (with TCC (lock-up) mechanism)	
	Stall torque ratio	1.75	
Oil pump	Type	Trochoid type oil pump	
	Drive system	Engine driven	
Gear change device	Type	Forward 5-step, reverse 1-step planetary gear type	
	Shift position	"P" range	Gear in neutral, output shaft fixed, engine start
		"R" range	Reverse
		"N" range	Gear in neutral, engine start
		"D" range (Transfer 4H)	Forward 1st ↔ 2nd ↔ 3rd ↔ 4th ↔ 5th automatic gear change
		"4" range (Transfer 4H)	Forward 1st ↔ 2nd ↔ 3rd ↔ 4th automatic gear change
		"D" range (Transfer 4L)	Forward 1st ↔ 2nd ↔ 3rd ↔ 4th automatic gear change
		"3" range	Forward 1st ↔ 2nd ↔ 3rd ← 4th ← 5th automatic gear change
		"L" range	Forward 1st ← 2nd ← 3rd ← 4th ← 5th reduction, and fixed at 1st gear
	Gear ratio	1st	3.520
		2nd	2.043
		3rd	1.401
		4th	1.000
		5th	0.717
		Reverse	3.224
	Control elements	Wet type multi-disc clutch ... 3 sets Wet type multi-disc brake ... 4 sets One-way clutch ... 3 sets	
	Transfer	Hi: 1.000 Lo: 1.970	
	Final gear reduction ratio	4.300	
Lubrication	Lubrication system	Forced feed system by oil pump	
Cooling	Cooling system	Radiator assisted cooling (water-cooled)	
Fluid used		SUZUKI ATF 3317 or Mobil ATF 3309	

Clutch / Brake Functions of Automatic Transmission

S6JB0B5101002

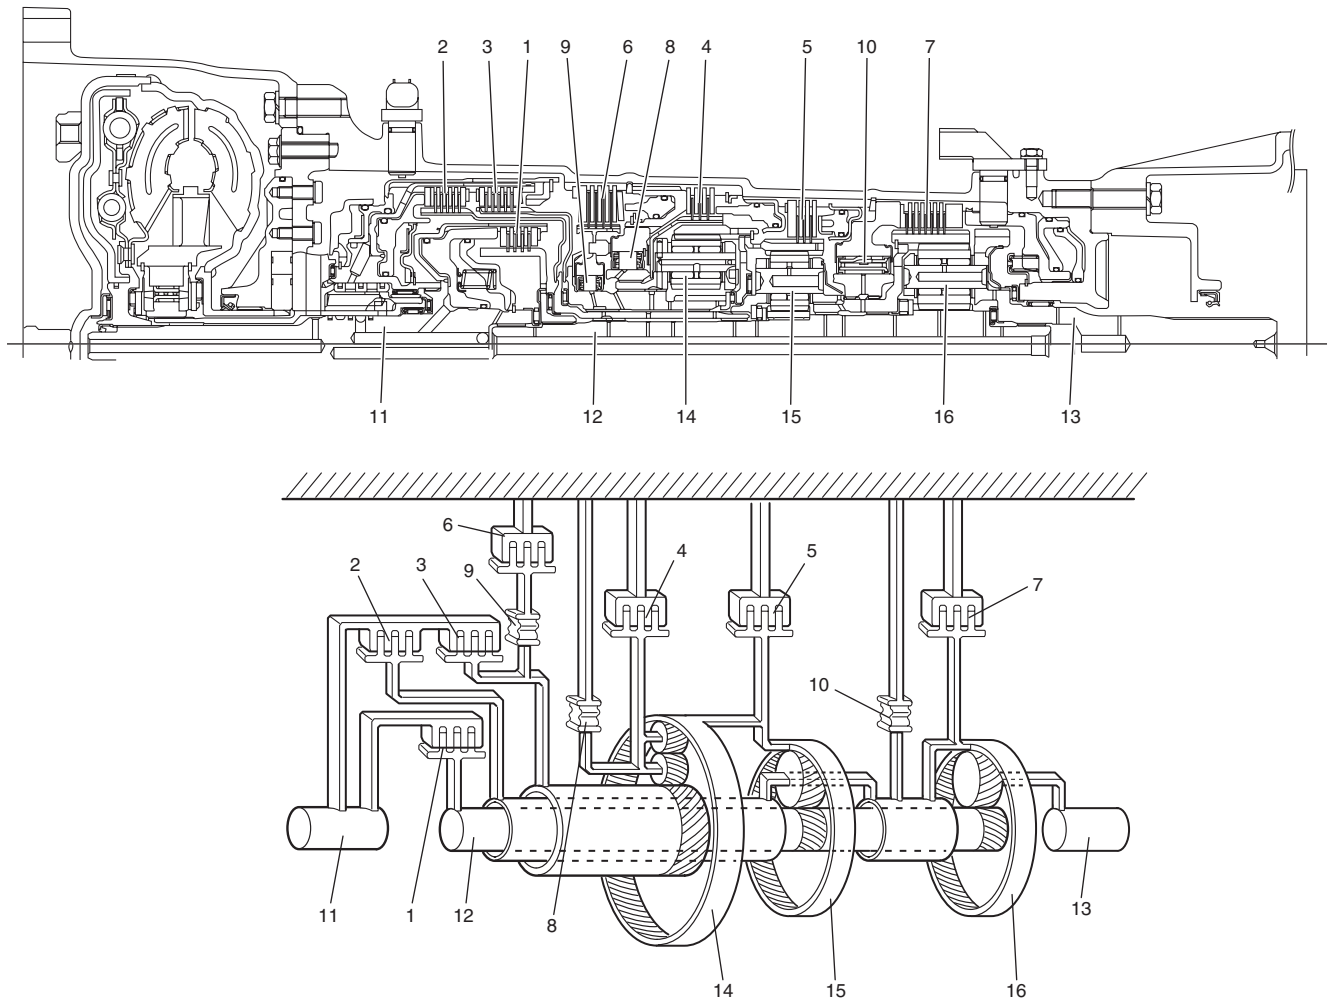

I6JB01510004-01

1. Forward clutch	5. No.2 brake	9. One-way No.2 clutch	13. Output shaft
2. Direct clutch	6. 2nd brake	10. One-way No.3 clutch	14. FR planetary
3. Reverse clutch	7. 1st and reverse brake	11. Input shaft	15. MD planetary
4. No.1 brake	8. One-way No.1 clutch	12. Intermediate shaft	16. RR planetary

Part Name	Function
Forward clutch	Meshes input shaft and intermediate shaft.
Direct clutch	Meshes input shaft and MD planetary carrier.
Reverse clutch	Meshes input shaft and FR sun gear.
No.1 brake	Fixes FR planetary carrier.
No.2 brake	Fixes FR and MD ring gear.
2nd brake	Fixes outer race of one-way No.2 clutch, to prevent FR sun gear from turning counterclockwise (reverse direction of engine input rotation direction).
1st and reverse brake	Fixes RR ring gear.
One-way No.1	Prevent FR planetary carrier from turning counterclockwise.
One-way No.2	Prevent FR sun gear from turning counterclockwise only when 2nd brake is at work.
One-way No.3	Prevent RR ring gear from turning counterclockwise.

Table of A/T Component Operation

S6JB0B5101003

	Forward clutch	Direct clutch	Reverse clutch	No.1 brake	No.2 brake	2nd brake	1st and Reverse brake	One-way No.1 clutch	One-way No.2 clutch	One-way No.3 clutch
P	—	—	—	—	—	—	—	—	—	—
R	—	—	○	○	—	—	○	○	—	—
N	—	—	—	—	—	—	—	—	—	—
D	1st	○	—	—	—	—	—	—	—	○
	2nd	○	—	—	—	○	—	○	○	—
	3rd	○	—	○	—	○	—	○	—	—
	4th	○	○	○	—	○	—	—	—	—
	5th	—	○	○	○	○	—	—	—	—
3	1st	○	—	—	—	—	—	—	—	○
	2nd	○	—	—	—	○	—	○	○	—
	3rd	○	—	○	○	○	—	—	—	—
L	1st	○	—	—	—	—	○	—	—	—

○: Operating

Operation of Shift Solenoids and TCC Solenoid

S6JB0B5101009

Range		D					3			L	R		P & N
Gear		1st	2nd	3rd	4th	5th	1st	2nd	3rd	1st	Rev (≥ 11 km/h)	Rev (< 11 km/h)	—
Solenoids	Shift solenoid valve-A	○	○	X	X	X	○	○	X	○	X	○	○
	Shift solenoid valve-B	X	○	○	X	X	X	○	○	X	○	X	X
	Shift solenoid valve-E	X	X	X	X	○	X	X	X	X	X	X	X
	Pressure control solenoid valve-B	X	X	X	X	○	X	X	X	X	X	X	X
	Pressure control solenoid valve-C	○	○	○	○	X	○	○	X	X	○	○	○
	TCC solenoid valve	X	X	X	(○)	(○)	X	X	X	X	X	X	X

○: ON (Turn power on)

X: OFF (Turn power off)

Automatic Gear Shift Table

S6JB0B5101010

Automatic gear shift schedule is shown in the following table. Test-drive the vehicle on a flat road in the D position.

1. Shift Point in D position and transfer shift position in 4H

	Throttle opening (%)	Shift	Vehicle speed km/h (mph)	Remark
UP shift	Over 90%	1st → 2nd	45 – 50 (28 – 31)	
		2nd → 3rd	85 – 90 (53 – 56)	
		3rd → 4th	132 – 137 (82 – 85)	
		4th → 5th	177 – 182 (110 – 113)	
	50%	1st → 2nd	24 – 29 (15 – 18)	
		2nd → 3rd	52 – 57 (32 – 35)	
		3rd → 4th	77 – 82 (48 – 51)	
		4th → 5th	143 – 148 (89 – 92)	
	10%	1st → 2nd	10 – 15 (6 – 9)	
		2nd → 3rd	17 – 22 (11 – 14)	
		3rd → 4th	33 – 38 (21 – 24)	
		4th → 5th	48 – 53 (30 – 33)	
DOWN shift	Over 90%	5th → 4th	167 – 172 (104 – 107)	
		4th → 3rd	122 – 127 (76 – 79)	
		3rd → 2nd	45 – 50 (28 – 31)	
		2nd → 1st	30 – 35 (19 – 22)	
	50%	5th → 4th	68 – 73 (42 – 45)	
		4th → 3rd	43 – 48 (27 – 30)	
		3rd → 2nd	18 – 23 (11 – 14)	
		2nd → 1st	6 – 11 (4 – 7)	
	0%	5th → 4th	20 – 25 (12 – 16)	With applying brake pedal (coast down condition)
		4th → 3rd	17 – 22 (11 – 14)	
		3rd → 2nd	7 – 12 (4 – 7)	
		2nd → 1st	3 – 8 (2 – 5)	

2. TCC lock-up point in D position and/or 4 position mode

	TCC status	Throttle opening (%)	Vehicle speed km/h (mph)	Remark
4 th gear lock-up	ON	50%	152 – 157 (94 – 98)	With “4” range condition
		20 – 30%	53 – 67 (33 – 41)	
	OFF	50%	70 – 75 (44 – 47)	
		20 – 30%	44 – 49 (27 – 30)	
5 th gear lock-up	ON	50%	174 – 179 (108 – 111)	
		20 – 30%	71 – 90 (44 – 56)	
	OFF	50%	147 – 152 (91 – 94)	
		20 – 30%	62 – 67 (39 – 42)	

NOTE

The gear change is done at the shift point different from the above while any of the following control functions is working. Bear this in mind when performing inspection.

- Slope Shift Control
When TCM makes up-slope judgment, Slope Shift Control (on up-slope) is executed by changing the gear change point to the high-speed side so as to reduce frequent up-shift and down-shift operations.
When TCM makes down-shift judgment, Slope Shift Control (on down-slope) is executed by changing the gear change point to the low-speed side so as to use engine-brake function effectively while driving on a down-slope.
- Cruise Shift Control
Cruise Shift Control is executed by selecting appropriate gear according to requirement for retaining a constant vehicle speed or acceleration so as to reduce frequent up-shift and down-shift operations while cruising.

CAN Communication System Description

S6JB0B5101004

Refer to “CAN Communication System Description in Section 1A” for CAN communication System description.
TCM communicates control data with each control module as follows.

TCM Transmission Data

Reception unit Transmit data of TCM	ECM	Combination meter	ESP® control module (if equipped)	BCM	4WD control module (if equipped)
Transmission output speed	○				
Transmission malfunction indication ON	○ *1	○ *1			
Transmission emissions related malfunction	○ *2	○ *2			
Transmission gear selector position	○	○		○	○
Transmission actual gear	○		○		○
Transmission oil temperature	○				

I6JB0B510001-02

*1: Non-E-OBD model

*2: E-OBD model

TCM Reception Data

Transmission unit Reception data of TCM	ECM	BCM
Engine torque actual	○	
Accelerator actual position	○	
Engine speed	○	
Throttle position	○	
Air conditioning compressor clutch engaged	○	
Engine coolant temperature	○	
Cruise control signal	○	
Brake pedal switch active	○	
AT mode status		○

I6JB0B510002-01

Electronic Shift Control Input / Output Table

S6JB0B5101005

INPUT / OUTPUT		CONTROL											
		Gear Shift control	Shift timing control	5th gear inhibit control	Slope shift control	Cruise shift control	Lock-up control	Line pressure control	Torque control	Overrun control	Reverse control	Squat control	Speed meter indication
Input	Accelerator pedal position	○	○		○	○	○	○	○			○	
	Throttle position					○							
	Coolant temperature			○			○	○					
	Engine torque		○						○				
	Engine speed						○	○				○	
	A/C ON/OFF		○										
	Brake light switch	○	○		○		○					○	
	Vehicle speed												○
	Cruise control signal					○							
	"4" position switch	○			○		○			○			
	Input shaft speed sensor	○	○				○	○	○			○	
	Output shaft speed sensor	○		○	○	○	○	○	○	○	○	○	
	ATF temperature sensor A		○	○	○			○				○	
	Transfer 4L/N switch	○	○	○		○	○			○	○		
	Transmission range sensor	○	○	○	○	○	○	○		○	○	○	
	P/N mode switch	○				○							
Output	Torque reduction request		○						○				
	Shift solenoid valve-A	○		○	○	○				○	○	○	
	Shift solenoid valve-B	○		○	○	○				○	○	○	
	Shift solenoid valve-E	○		○	○	○				○	○	○	
	Pressure control solenoid valve-A		○					○				○	
	Pressure control solenoid valve-B	○	○		○	○		○		○		○	
	Pressure control solenoid valve-C	○	○		○	○		○		○		○	
	TCC pressure control solenoid valve					○	○						

I5JB0C510004-02

Brake Interlock System Description

S6JB0B5101006

Shift Lock Solenoid Control

This system consists of shift lock solenoid control system and interlock cable control system.

The shift lock solenoid control system is so designed that the select lever can not be shifted from "P" range position unless the ignition switch is turned ON and the brake pedal is depressed. And the interlock cable control system is so designed that the ignition key cannot be pulled out of the key slot unless the select lever is in "P" range.

A/T Diagnosis General Description


S6JB0B5101007

This vehicle is equipped with an electronic transmission control system, which control the automatic shift up and shift down timing, TCC operation, etc. suitably to vehicle driving conditions.

TCM has an On-Board Diagnosis system which detects a malfunction in this system and abnormality of those parts that influence the engine exhaust emission. When diagnosing a trouble in the transmission including this system, be sure to have full understanding of the outline of "On-Board Diagnostic System Description" and each item in "Precautions in Diagnosing Trouble" and execute diagnosis according to "A/T System Check" to obtain correct result smoothly.

NOTE

There are two type of On-Board Diagnostic System, E-OBD system and non-E-OBD system, depending on vehicle specifications. E-OBD model is equipped with HO2S-2 (1) on exhaust No.1 pipe (2). Identify the type of system for vehicle being serviced by whether the vehicle equipped with HO2S-2 (1) on exhaust No.1 pipe (2) or not.

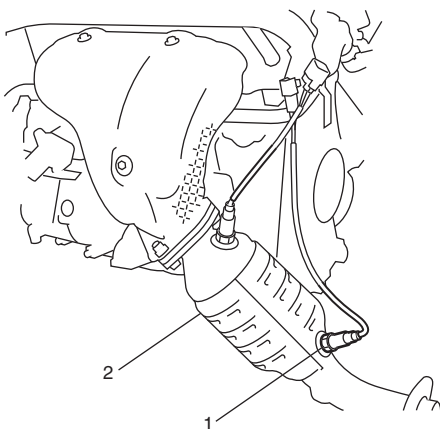

I6JB0B510012-01



On-Board Diagnostic System Description

S6JB0B5101008

For E-OBD model

For automatic transmission control system, TCM has the following functions. Refer to "Inspection of TCM and Its Circuits".

- When the ignition switch is turned ON with the engine at a stop, malfunction indicator lamp (MIL) (1) turns ON to check the bulb of the MIL.
- When TCM detects a malfunction in A/T control system (and/or a malfunction which gives an adverse effect to vehicle emission) while the engine is running, TCM requires ECM to make the malfunction indicator lamp in the meter cluster of the instrument panel turn ON. TCM stores the malfunction area (DTC according to SAE J2012) in TCM memory.
(If it detects that continuously 3 driving cycles are normal after detecting a malfunction, however, it makes MIL turn OFF although DTC stored in its memory will remain.)
- It is possible to communicate through DLC (3) by using not only SUZUKI scan tool (2) but also OBD generic scan tool which are in compliance with SAEJ1978. (Diagnostic information can be accessed by using a scan tool.)

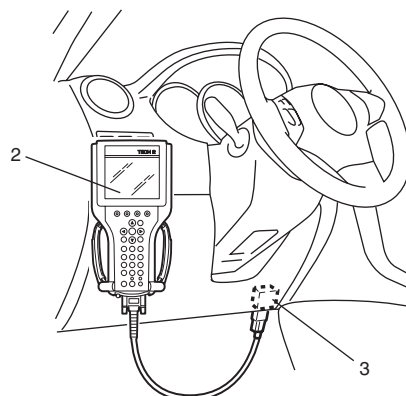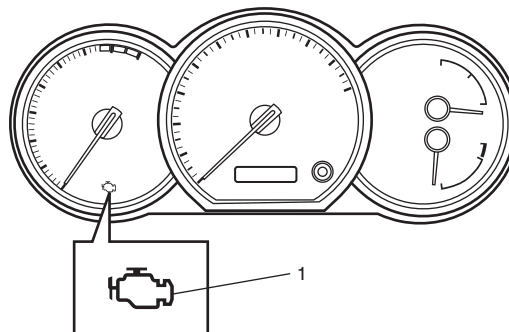


I5JB0A510011-01

For Non-E-OBd model

For automatic transmission control system, TCM has the following functions. Refer to "Inspection of TCM and Its Circuits".

- When ignition switch is turned ON with no malfunction in A/T control system is detected, transmission warning light (1) lights for about 2 seconds after ignition switch is turned ON and then goes OFF for bulb check.
- When TCM detects a malfunction in A/T control system, it indicates transmission warning light (1) and stores malfunction DTC in its memory.
- It is possible to communicate with TCM through data link connector (DLC) (3) by using SUZUKI scan tool (2). Diagnostic information can be checked and erased by using SUZUKI scan tool.

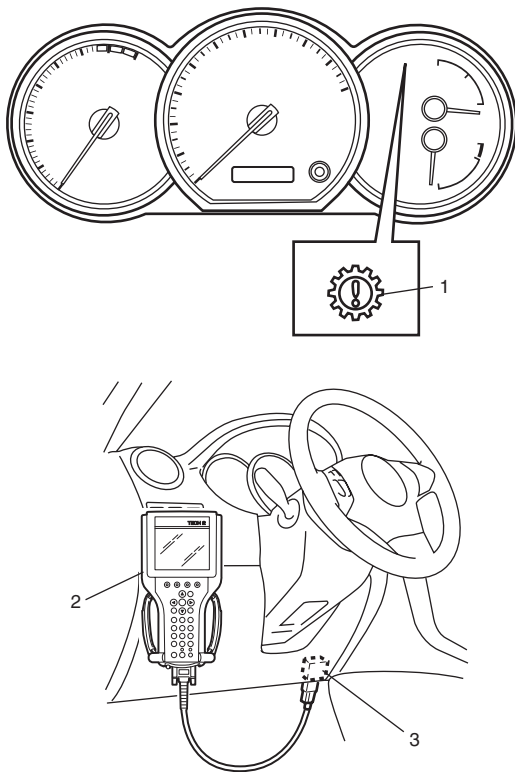

I6JB0B510013-01

2 Driving Cycle Detection Logic

The malfunction detected in the first driving cycle is stored in TCM memory (in the form of pending DTC and freeze frame data) but the malfunction indicator lamp does not light at this time. It lights up at the second detection of same malfunction also in the next driving cycle.

Pending DTC

Pending DTC means a DTC detected and stored temporarily at 1 driving cycle of the DTC which is detected in the 2 driving cycle detection logic.


Freeze Frame Data

TCM stores the engine and driving conditions at the moment of the detection of a malfunction in its memory. This data is called "Freeze frame data". Therefore, it is possible to know engine and driving conditions (e.g., whether the engine was warm or not, where the vehicle was running or stopped) when a malfunction was detected by checking the freeze frame data.

Schematic and Routing Diagram

Electronic Shift Control Input / Output Diagram

S6JB0B5102003

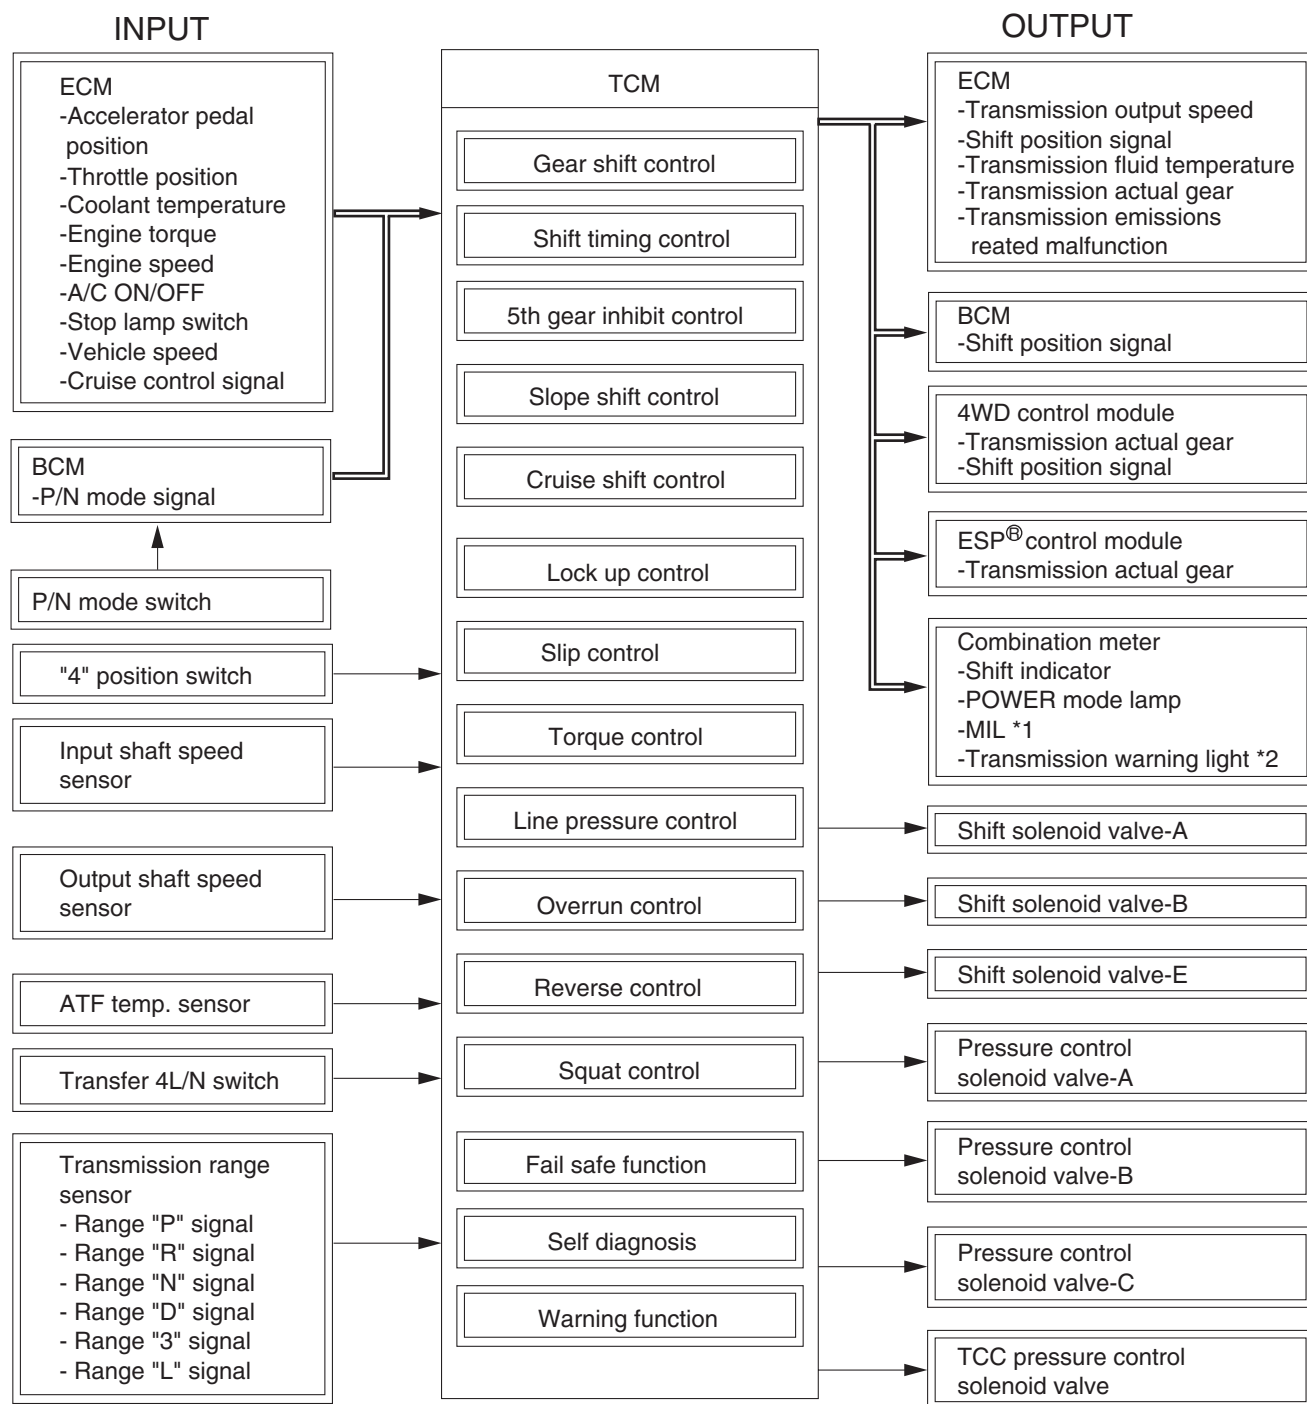

⇒ Signal on CAN communication line


I6JB0B510003-02

*1: E-OBD model


*2: Non-E-OBD model

Electronic Shift Control System Wiring Diagram

S6JB0B5102004

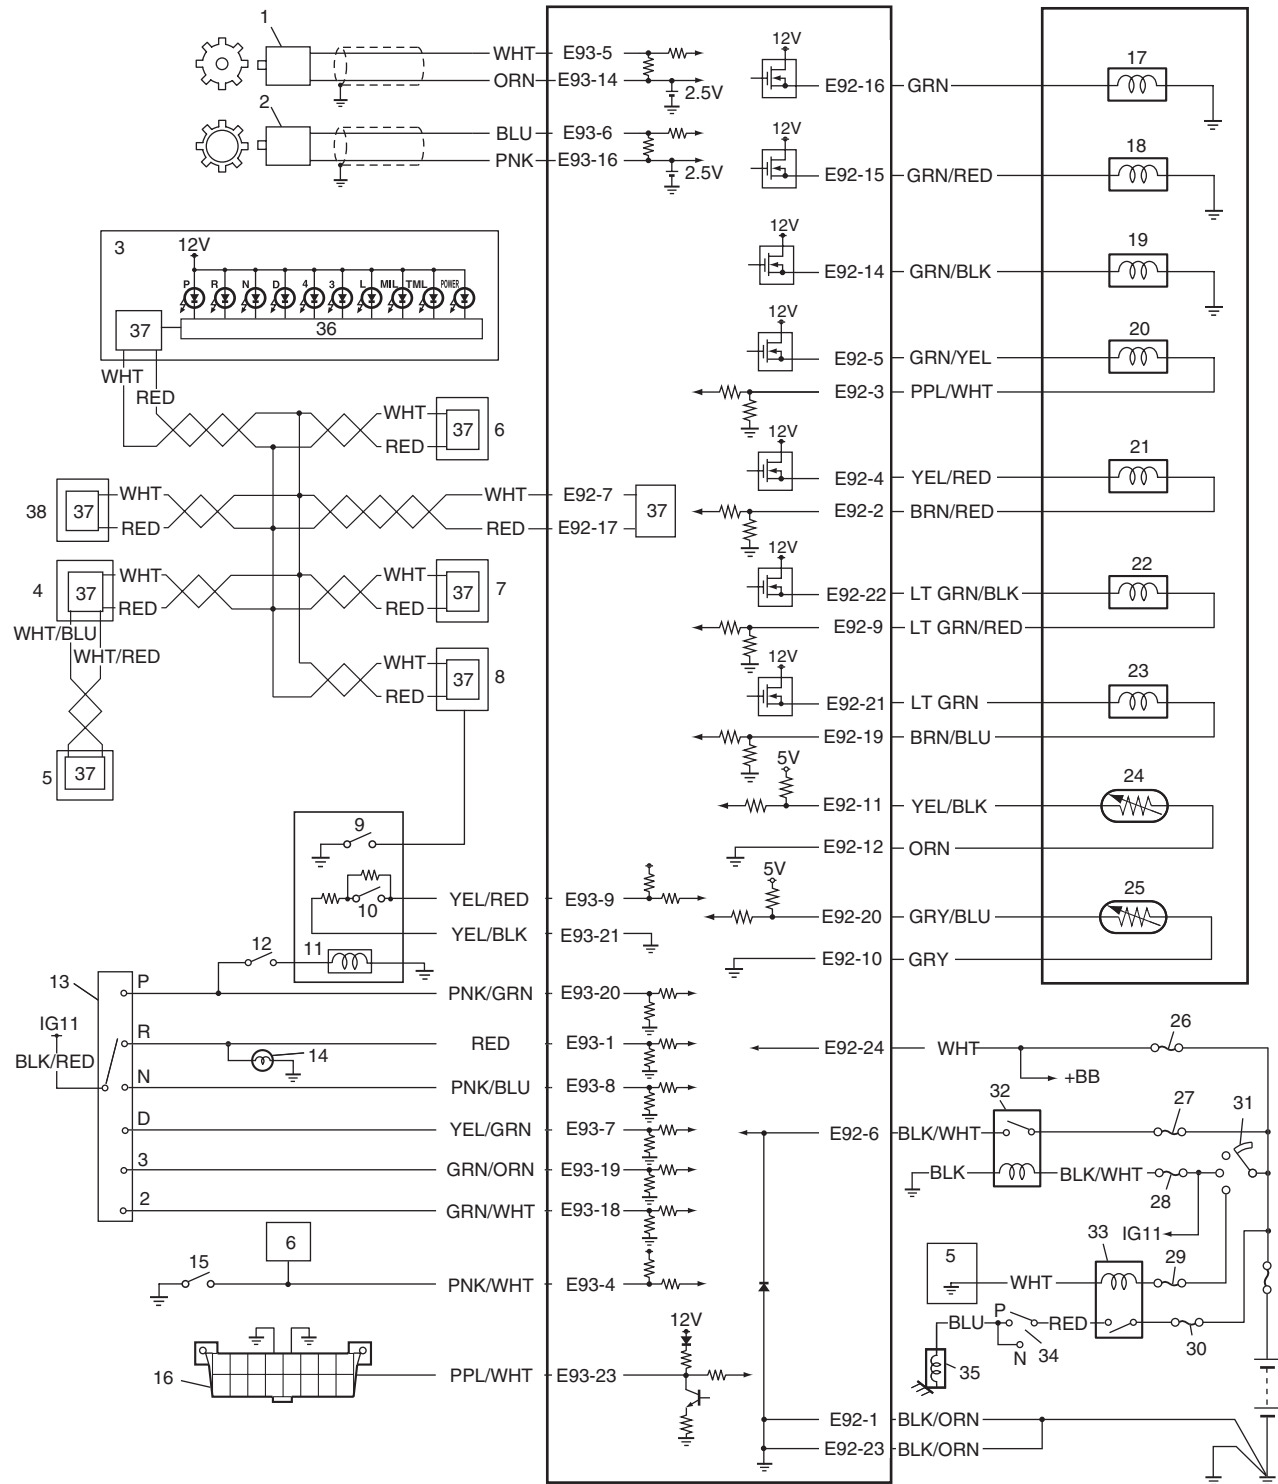

[A]

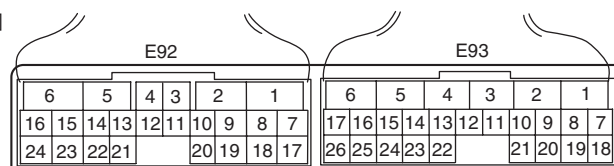

I6JB0B510004-02

1. Output shaft speed sensor	11. Shift lock solenoid	21. Pressure control solenoid valve-A	31. Ignition switch
2. Input shaft speed sensor	12. Brake light switch	22. Pressure control solenoid valve-B	32. AT relay in integration relay No.2
3. Combination meter	13. Transmission range sensor	23. Pressure control solenoid valve-C	33. Starting motor relay
4. ABS/ESP® control module	14. Back-up light	24. Transmission fluid temperature sensor A	34. Inhibit switch


5A-14 Automatic Transmission/Transaxle:

5. ECM	15. Transfer 4L/N switch	25. Transmission fluid temperature sensor B (if equipped)	35. Starting motor
6. 4WD control module (if equipped)	16. DLC	26. "DOME" fuse	36. Meter driver
7. Keyless start control module (keyless start model)	17. Shift solenoid valve-A	27. "AT" fuse	37. CAN driver
8. BCM	18. Shift solenoid-B	28. "IG COIL" fuse	38. Steering angle sensor (ESP® model)
9. P/N mode switch	19. Shift solenoid valve-E	29. "ST SIG" fuse	[A]: TCM connector (viewed from harness side)
10. "4" position switch	20. TCC pressure control solenoid valve	30. "ST" fuse	

Component Location

Electronic Shift Control System Components Location

S6JB0B5103001

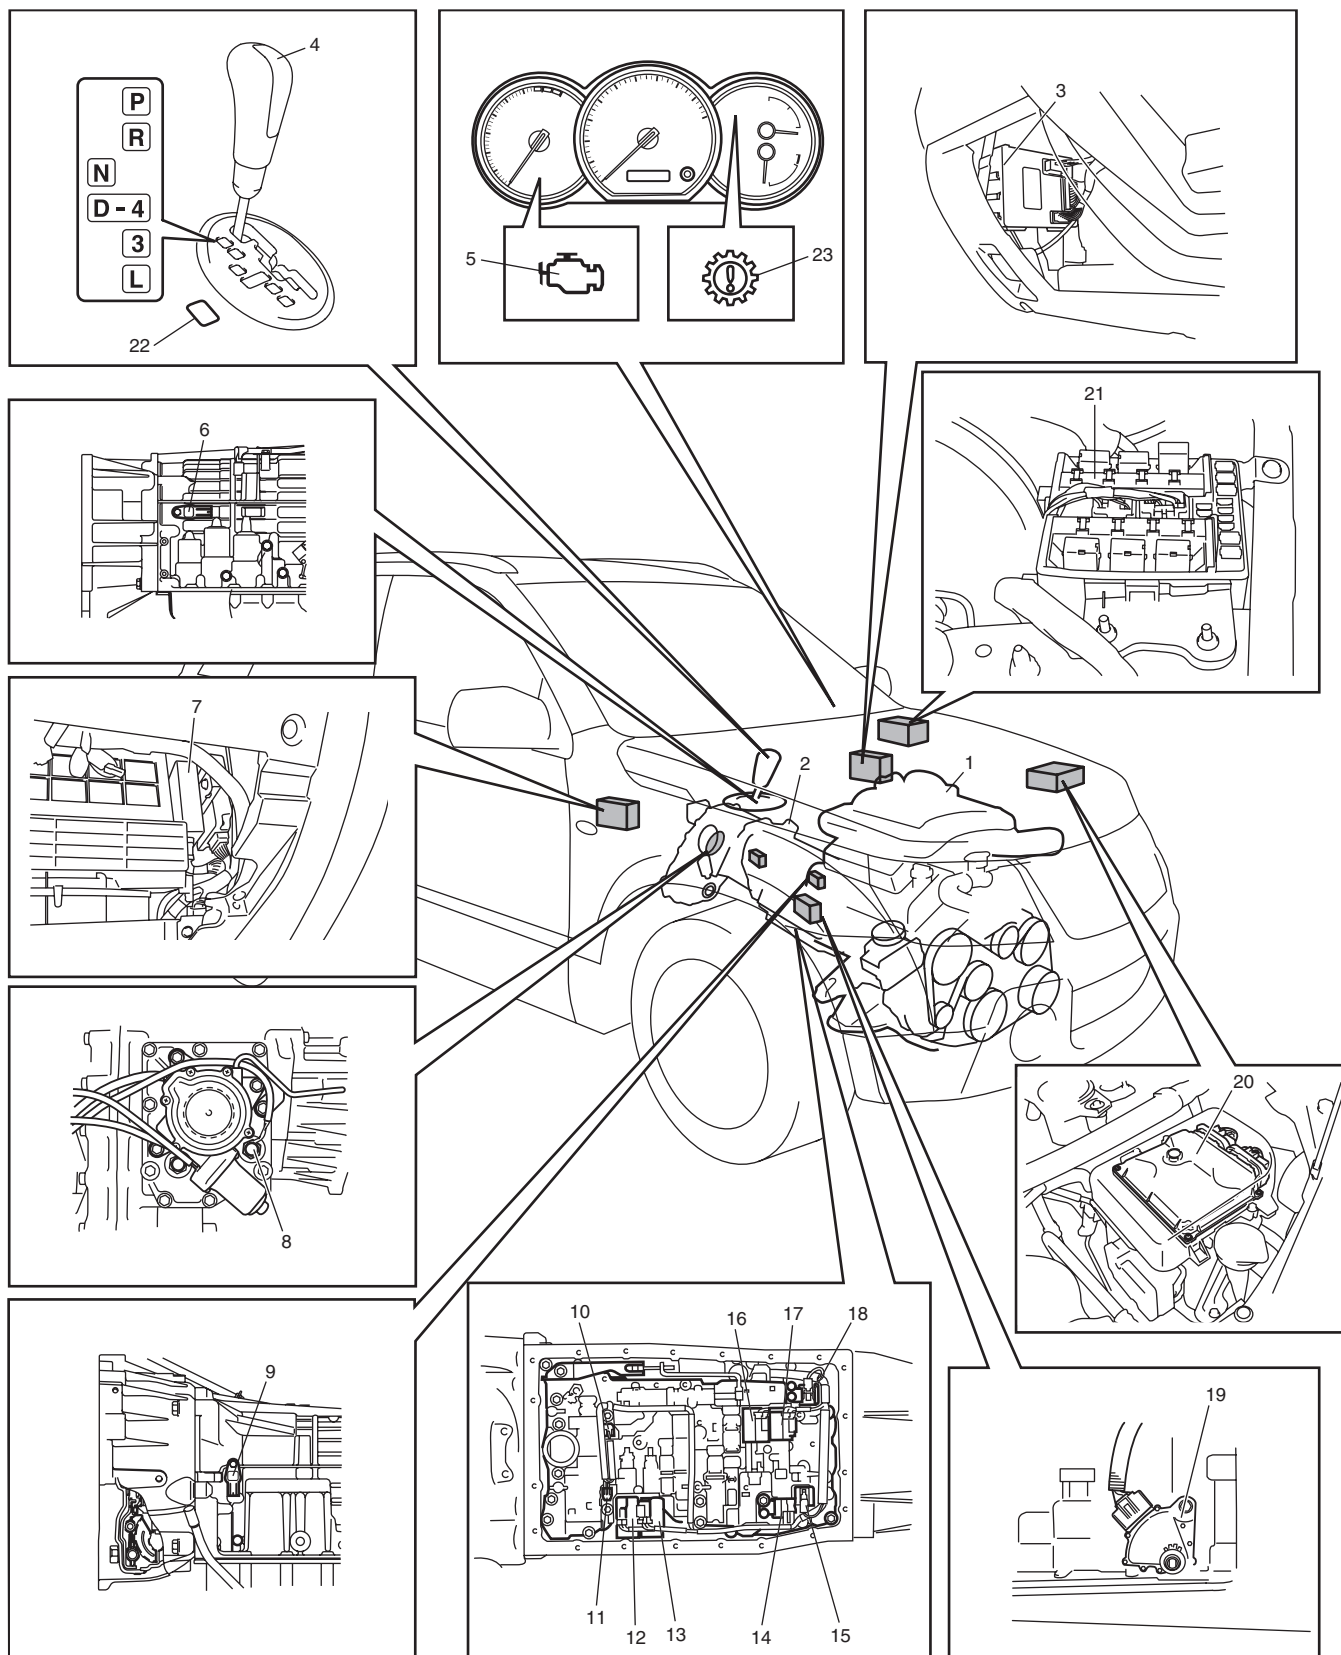

I6JB0B510005-02

1. Engine	7. TCM	13. Pressure control solenoid valve-B	19. Transmission range sensor
2. Transmission	8. Transfer 4L/N switch	14. Shift solenoid valve-A	20. ECM

5A-16 Automatic Transmission/Transaxle:

3. BCM	9. Input shaft speed sensor	15. Shift solenoid valve-B	21. AT relay in integration relay No.2
4. Select lever assembly including "4" position switch	10. Transmission fluid temperature sensor-A	16. Pressure control solenoid valve-C	22. P/N mode switch
5. MIL	11. Transmission fluid temperature sensor-B (if equipped)	17. TCC pressure control solenoid valve	23. Transmission warning light (non-E-OBD model)
6. Output shaft speed sensor	12. Pressure control solenoid valve-A	18. Shift solenoid valve-E	

Diagnostic Information and Procedures**A/T System Check**

S6JB0B5104001

Refer to the following items for the details of each step.

Step	Action	Yes	No
1	☞ Customer complaint analysis 1) Perform customer complaint analysis. <i>Was customer complaint analysis performed according to instruction?</i>	Go to Step 2.	Perform customer complaint analysis.
2	☞ DTC / Freeze frame data check, record and clearance 1) Check for DTC (including pending DTC) <i>Is there any DTC (s)?</i>	Print DTC and freeze frame data or write them down and clear them by referring to "DTC Clearance". Go to Step 3.	Go to Step 4.
3	☞ Visual inspection 1) Perform visual inspection. <i>Is there any faulty condition?</i>	Repair or replace malfunction part. Go to Step 11.	Go to Step 5.
4	☞ Visual inspection 1) Perform visual inspection. <i>Is there any faulty condition?</i>	Repair or replace malfunction part. Go to Step 11.	Go to Step 8.
5	☞ Trouble symptom confirmation 1) Confirm trouble symptom. <i>Is trouble symptom identified?</i>	Go to Step 6.	Go to Step 7.
6	☞ Rechecking and record of DTC / Freeze frame data 1) Recheck for DTC and freeze frame data referring to "DTC Check". <i>Is there any DTC (s)?</i>	Go to Step 9.	Go to Step 8.
7	☞ Rechecking and record of DTC / Freeze frame data 1) Recheck for DTC and freeze frame data referring to "DTC Check". <i>Is there any DTC (s)?</i>	Go to Step 9.	Go to Step 10.
8	☞ A/T Basic Check and A/T Trouble Diagnosis 1) Check and repair according to "A/T Basic Check" and "A/T Symptom Diagnosis". <i>Are check and repair complete?</i>	Go to Step 11.	Check and repair malfunction part(s). Go to Step 11.
9	☞ Troubleshooting for DTC 1) Check and repair according to applicable DTC diag. flow. <i>Are check and repair complete?</i>	Go to Step 11.	Check and repair malfunction part(s). Go to Step 11.
10	☞ Check for intermittent problem 1) Check for intermittent problem. <i>Is there any faulty condition?</i>	Repair or replace malfunction part(s). Go to Step 11.	Go to Step 11.

Step	Action	Yes	No
11	Final confirmation test 1) Clear DTC if any. 2) Perform final confirmation test. <i>Is there any problem symptom, DTC or abnormal condition?</i>	Go to Step 6.	End.

Step 1. Customer Complaint Analysis

Record details of the problem (failure, complaint) and how it occurred as described by the customer.

For this purpose, use of such a inspection form will facilitate collecting information to the point required for proper analysis and diagnosis.

Customer problem inspection form (example)

User name:		Model:		VIN:	
Date of issue:		Date of Reg:		Date of problem:	
				Mileage:	
PROBLEM SYMPTOMS					
<input type="checkbox"/> Engine does not start <input type="checkbox"/> Vehicle does not move (forward, rearward) <input type="checkbox"/> No lock-up (TCC clutch operation) <input type="checkbox"/> Shift point too high or too low <input type="checkbox"/> Excessive gear change shock			<input type="checkbox"/> Engine stops <input type="checkbox"/> Transmission does not shift (1st, 2nd, 3rd, 4th, 5th, Rev) gear <input type="checkbox"/> Automatic shift does not occur <input type="checkbox"/> Transmission slipping in (1st, 2nd, 3rd, 4th, 5th, Rev) gear <input type="checkbox"/> Other:		
VEHICLE/ ENVIRONMENTAL CONDITION WHEN PROBLEM OCCURS					
Environmental Condition					
Weather	<input type="checkbox"/> Fair/ <input type="checkbox"/> Cloudy/ <input type="checkbox"/> Rain/ <input type="checkbox"/> Snow/ <input type="checkbox"/> Always/ <input type="checkbox"/> Other ()				
Temperature	<input type="checkbox"/> Hot/ <input type="checkbox"/> Warm/ <input type="checkbox"/> Cool/ <input type="checkbox"/> Cold/ <input type="checkbox"/> (°C °F)/ <input type="checkbox"/> Always				
Frequency	<input type="checkbox"/> Always/ <input type="checkbox"/> Sometimes/ <input type="checkbox"/> (times/ day, month)/ <input type="checkbox"/> Only Once				
Road	<input type="checkbox"/> Urban/ <input type="checkbox"/> Suburb/ <input type="checkbox"/> Highway/ <input type="checkbox"/> Mountainous (uphill/downhill)/ <input type="checkbox"/> Paved road/ <input type="checkbox"/> Gravel/ <input type="checkbox"/> Other()				
Vehicle Condition					
Transmission range	<input type="checkbox"/> (P,R,N,D,4,3,L) range/ <input type="checkbox"/> (→) range				
Transmission temp.	<input type="checkbox"/> Cold/ <input type="checkbox"/> Warming up phase/ <input type="checkbox"/> Warmed up				
Vehicle	<input type="checkbox"/> At stop/ <input type="checkbox"/> During driving (constant speed/accelerating/decelerating/ right hand corner/left hand corner)/ <input type="checkbox"/> Other ()/ <input type="checkbox"/> Speed (km/h mile/h)				
Engine	<input type="checkbox"/> Speed(r/min)/ <input type="checkbox"/> Throttle opening(idle/about %/full)				
Brake	<input type="checkbox"/> Apply/ <input type="checkbox"/> Not apply				
O/D OFF switch	<input type="checkbox"/> ON/ <input type="checkbox"/> OFF				
P/N change switch	<input type="checkbox"/> Power/ <input type="checkbox"/> Normal				
Malfunction indicator lamp("SERVICE ENGINE SOON" light) condition					
<input type="checkbox"/> Always ON		<input type="checkbox"/> Sometimes ON		<input type="checkbox"/> Always OFF	
				<input type="checkbox"/> Good condition	
Diagnostic trouble code		First check : <input type="checkbox"/> No code		<input type="checkbox"/> Malfunction code()	
		Second check : <input type="checkbox"/> No code		<input type="checkbox"/> Malfunction code()	

I6JB01510010-01

NOTE

The form is a standard sample. It should be modified according to conditions characteristic of each market.

Step 2. DTC/Freeze Frame Data Check, Record and Clearance

 

First, referring to “DTC Check”, check DTC (including pending DTC). If DTC exists, print or write down DTC and freeze frame data and then clear them by referring to “DTC Clearance”. DTC indicates malfunction in the system but it is not possible to know from it whether the malfunction is occurring now or it occurred in the past and normal condition has been restored. In order to know that, check symptom in question according to Step 5 and then recheck DTC according to Step 6.

Diagnosing a trouble based on the DTC in this step only or failure to clear the DTC in this step may result in a faulty diagnosis, trouble diagnosis of a normal circuit or difficulty in troubleshooting which is otherwise unnecessary.

Step 3 and Step 4. Visual Inspection

As a preliminary step, be sure to perform visual check of the items that support proper function of the A/T and engine referring to “Visual Inspection”.

Step 5. Trouble Symptom Confirmation

Check trouble symptoms based on information obtained in Step 1  “Customer Complaint Analysis” and Step 2  “DTC/Freeze Frame Data Check, Record and Clearance”.

Also, recheck DTC according to “DTC Confirmation Procedure” described in each DTC flow.

Step 6 and Step 7. Recheck and Record of DTC / Freeze Frame Data

Refer to “DTC Check” for checking procedure.

Step 8. A/T Basic Check and A/T Trouble Diagnosis

Perform A/T basic check according to “A/T Basic Check” first. When the end of the flow has been reached, check the parts of the system suspected as a possible cause referring to “A/T Symptom Diagnosis” and based on symptoms appearing on the vehicle (symptoms obtained through steps of customer complaint analysis, trouble symptom confirmation and/or A/T basic check) and repair or replace faulty parts, if any.

Step 9. Troubleshooting for DTC

Based on the DTC indicated in Step 6 and 7 and referring to applicable DTC flow, locate the cause of the trouble, namely in a sensor, switch, wire harness, connector, actuator, TCM or other part and repair or replace faulty parts.

Step 10. Check for Intermittent Problem

Check parts where an intermittent trouble is easy to occur (e.g., wire harness, connector, etc.), referring to “Intermittent and Poor Connection Inspection in Section 00” and related circuit of DTC recorded in Step 2.

Step 11. Final Confirmation Test

Confirm that the problem symptom has gone and the A/T is free from any abnormal conditions.

If what has been repaired is related to the malfunction DTC, clear the DTC once, set conditions under which DTC was detected and A/T and/or vehicle was repaired and confirm that no DTC is indicated.

Malfunction Indicator Lamp (MIL) Check (E-OBD model)

S6JB0B5104002

Refer to “Malfunction Indicator Lamp (MIL) Check in Section 1A”.

Transmission Warning Light Operation Check (Non-E-OBD model)

S6JB0B5104051

- 1) Turn ignition switch ON.
- 2) Check that transmission warning light lights for about 2 – 4 sec. and then goes OFF. If anything faulty is found, advance “Transmission Warning Light Circuit Check – Light Does Not Come “ON” at Ignition Switch ON (Non-E-OBD model)” or “Transmission Warning Light Circuit Check – Light Remains “ON” at Ignition Switch ON (Non-E-OBD model)”.

“POWER” Lamp Operation Check

S6JB0B5104052

- 1) Turn ignition switch ON.
- 2) Check that “POWER” lamp lights for about 2 – 4 sec. and then goes OFF.
If anything faulty is found, advance to ““POWER” Light Circuit Check – Light Does Not Come “ON” at Ignition Switch ON”.

DTC Table

S6JB0B5104003

NOTE

A: Driving cycles when MIL lighting and storing DTC in TCM memory for E-OBD model.

B: Driving cycles when transmission warning light lighting and storing DTC in TCM memory for non-E-OBD model.

DTC No.	Detecting Item	Detecting Condition (DTC will set when detecting)	Driving Cycle	
			A	B
P0705	Transmission Range Sensor Circuit Malfunction (PRNDL Input)	Multiple signals are inputted simultaneously.	1 driving cycle	1 driving cycle
P0707	Transmission Range Sensor Circuit Low	No sensor signal is inputted.	2 driving cycles	2 driving cycles
P0711	Transmission Fluid Temperature Sensor Range / Performance	Transmission Fluid Temperature Sensor variation is less than specified value even though engine was running for specified time after engine start.	2 driving cycles	2 driving cycles *2
P0712	Transmission Fluid Temperature Sensor "A" Circuit Low	Sensor output voltage is too low.	1 driving cycle	1 driving cycle
P0713	Transmission Fluid Temperature Sensor "A" Circuit High	Sensor output voltage is too high.	1 driving cycle	1 driving cycle
P0717	Input / Turbine Speed Sensor Circuit No Signal	No sensor signal is detected although output speed sensor signal is inputted.	1 driving cycle	1 driving cycle
P0722	Output Speed Sensor Circuit No Signal	No sensor signal is inputted although input speed sensor signal is inputted.	1 driving cycle	1 driving cycle
P0741	Torque Converter Clutch Circuit Performance or Stuck Off	Difference in revolution between engine and input shaft is too large although TCM is commanding TCC solenoid to turn ON.	2 driving cycles	2 driving cycles *2
P0742	Torque Converter Clutch Circuit Stuck On	Difference in revolution between engine and input shaft is too small although TCM is commanding TCC solenoid to turn OFF.	2 driving cycles	2 driving cycles *2
P0751	Shift Solenoid "A" Performance or Stuck Off	The gear commanded by TCM does not match the actual gear when driving.	2 driving cycles	2 driving cycles *2
P0752	Shift Solenoid "A" Stuck On	The gear commanded by TCM does not match the actual gear when driving.	2 driving cycles	2 driving cycles *2
P0756	Shift Solenoid "B" Performance or Stuck Off	The gear commanded by TCM does not match the actual gear when driving.	2 driving cycles	2 driving cycles *2
P0757	Shift Solenoid "B" Stuck On	The gear commanded by TCM does not match the actual gear when driving.	2 driving cycles	2 driving cycles *2
P0771	Shift Solenoid "E" Performance or Stuck Off	The gear commanded by TCM does not match the actual gear when driving.	2 driving cycles	2 driving cycles *2
P0772	Shift Solenoid "E" Stuck On	The gear commanded by TCM does not match the actual gear when driving.	2 driving cycles	2 driving cycles *2

5A-20 Automatic Transmission/Transaxle:

DTC No.	Detecting Item	Detecting Condition (DTC will set when detecting)	Driving Cycle	
			A	B
☞ P0781	1-2 Shift	The gear commanded by TCM does not match the actual gear when driving.	2 driving cycles	2 driving cycles *2
☞ P0797	Pressure Control Solenoid "C" Stuck On	The gear commanded by TCM does not match the actual gear when driving.	2 driving cycles	2 driving cycles *2
☞ P0962	Pressure Control Solenoid "A" Control Circuit Low	No electric flow is detected on pressure control solenoid circuit.	1 driving cycle	1 driving cycle
☞ P0963	Pressure Control Solenoid "A" Control Circuit High	Too much electric flow is detected on pressure control solenoid circuit.	1 driving cycle	1 driving cycle
☞ P0966	Pressure Control Solenoid "B" Control Circuit Low	No electric flow is detected on pressure control solenoid circuit.	1 driving cycle	1 driving cycle
☞ P0967	Pressure Control Solenoid "B" Control Circuit High	Too much electric flow is detected on pressure control solenoid circuit.	1 driving cycle	1 driving cycle
☞ P0970	Pressure Control Solenoid "C" Control Circuit Low	No electric flow is detected on pressure control solenoid circuit.	1 driving cycle	1 driving cycle
☞ P0971	Pressure Control Solenoid "C" Control Circuit High	Too much electric flow is detected on pressure control solenoid circuit.	1 driving cycle	1 driving cycle
☞ P0973	Shift Solenoid "A" Control Circuit Low	Voltage of shift solenoid terminal is low although TCM is commanding shift solenoid to turn ON.	1 driving cycle	1 driving cycle
☞ P0974	Shift Solenoid "A" Control Circuit High	Voltage of shift solenoid terminal is high although TCM is commanding shift solenoid to turn OFF.	1 driving cycle	1 driving cycle
☞ P0976	Shift Solenoid "B" Control Circuit Low	Voltage of shift solenoid terminal is low although TCM is commanding shift solenoid to turn ON.	1 driving cycle	1 driving cycle
☞ P0977	Shift Solenoid "B" Control Circuit High	Voltage of shift solenoid terminal is high although TCM is commanding shift solenoid to turn OFF.	1 driving cycle	1 driving cycle
☞ P0985	Shift Solenoid "E" Control Circuit Low	Voltage of shift solenoid terminal is low although TCM is commanding shift solenoid to turn ON.	1 driving cycle	1 driving cycle
☞ P0986	Shift Solenoid "E" Control Circuit High	Voltage of shift solenoid terminal is high although TCM is commanding shift solenoid to turn OFF.	1 driving cycle	1 driving cycle
☞ P1702	Internal Control Module Memory Check Sum Error	Calculation of current data stored in TCM is not correct comparing with pre-stored checking data in TCM.	1 driving cycle	1 driving cycle
☞ P1703	CAN Invalid Data - TCM	TCM receives malfunction signal of throttle position, engine coolant temperature, engine revolution and engine torque from ECM.	1 driving cycle	1 driving cycle *2
☞ P1723	Range Select Switch Malfunction	4 position switch signal is inputted out of specified value.	1 driving cycle *1	1 driving cycle *2

DTC No.	Detecting Item	Detecting Condition (DTC will set when detecting)	Driving Cycle	
			A	B
☞ P1874	4WD Low switch circuit malfunction (Short)	Actual transfer position is 2H or 4H although transfer low signal is inputted.	1 driving cycle	1 driving cycle *2
☞ P1875	4WD Low switch circuit malfunction (Open)	Actual transfer position is 4L although transfer low signal is not inputted.	1 driving cycle	1 driving cycle *2
☞ P2742	Transmission Fluid Temperature Sensor "B" Circuit Low	Sensor output voltage is too low.	1 driving cycle	1 driving cycle
☞ P2743	Transmission Fluid Temperature Sensor "B" Circuit High	Sensor output voltage is too high.	1 driving cycle	1 driving cycle
☞ P2763	Torque Converter Clutch Circuit High	Too much electric flow is detected on TCC solenoid circuit.	1 driving cycle	1 driving cycle
☞ P2764	Torque Converter Clutch Circuit Low	No electric flow is detected on TCC solenoid circuit.	1 driving cycle	1 driving cycle
☞ U0073	Control Module Communication Bus Off	Transmitting error detected to TCM for specified time continuously.	1 driving cycle	1 driving cycle
☞ U0100	Lost Communication With ECM	Receiving error from ECM detected to TCM for specified time continuously.	1 driving cycle	1 driving cycle
☞ U0140	Lost Communication With Body Control Module	Receiving error from BCM detected to TCM for specified time continuously.	1 driving cycle *1	1 driving cycle *2

NOTE

*1: TCM does not output MIL ON signal to combination meter but DTC is stored in TCM.

*2: TCM does not output transmission warning light ON signal to combination meter but DTC is stored in TCM.


DTC Check

S6JB0B5104004

NOTE

The MIL is turned on when the ECM and/or TCM detect malfunction(s). Each ECU stores diagnostic information as the diagnostic trouble code (DTC) in its memory and outputs the DTC to the scan tool. Therefore, check both of the ECUs for any DTC with the scan tool because the DTC stored in ECU and TCM is not read and displayed at a time. However, each of the ECUs needs not to be checked with the generic scan tool because the DTC stored in ECM and TCM is read and displayed at a time.

- 1) Turn ignition switch OFF.
- 2) Connect SUZUKI scan tool to data link connector (DLC).

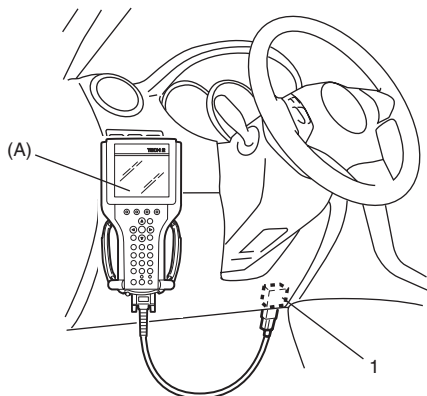Special tool**(A): SUZUKI scan tool**

I5JB0A510016-01

- 3) Read DTC according to instructions displayed on SUZUKI scan tool and write it down. Refer to SUZUKI scan tool operator's manual for further details.
- 4) After completing the check, turn ignition switch OFF and disconnect SUZUKI scan tool from data link connector (DLC).

DTC Clearance


S6JB0B5104005

NOTE

DTC and freeze frame data stored in TCM memory are also cleared in following cases. Be careful not to clear them before keeping their record.

- When power to TCM is cut off (by disconnecting battery cable, removing fuse or disconnecting TCM connector).
- When the same malfunction (DTC) is not detected again during 40 engine warm-up cycles.

- 1) Turn ignition switch OFF.
- 2) Connect SUZUKI scan tool to data link connector (DLC) (1).

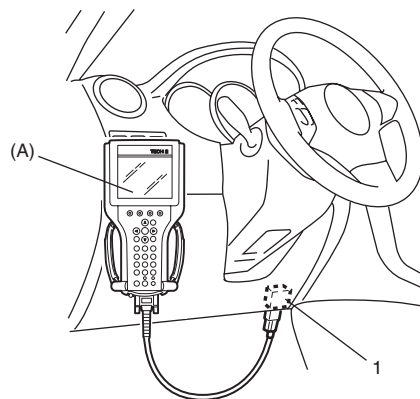Special tool**(A): SUZUKI scan tool**

I5JB0A510016-01

- 3) Clear DTC according to instructions displayed on SUZUKI scan tool. Refer to SUZUKI scan tool operator's manual for further details.
- 4) Clear DTC according to instructions displayed on SUZUKI scan tool. Refer to SUZUKI scan tool operator's manual for further details.

Fail Safe Table

When any of the following DTCs is detected, TCM enters fail-safe mode as long as malfunction continues to exist but that mode is canceled when TCM detects normal condition after that.

DTC No.	Trouble Area	Fail Safe Operation
P0705	Transmission Range Sensor Circuit Malfunction (PRNDL Input)	<ul style="list-style-type: none"> TCM control is performed in priority order below. 4> D> 3> L> R> N> P
P0707	Transmission Range Sensor Circuit Low	<ul style="list-style-type: none"> Range is assumed to be "D" range.
P0712	Transmission Fluid Temperature Sensor "A" Circuit Low	<ul style="list-style-type: none"> A/T fluid temperature is assumed to be 80 °C (176 °F).
P0713	Transmission Fluid Temperature Sensor "A" Circuit High	<ul style="list-style-type: none"> Upshifting to 5th gear is inhibited. Learning control is inhibited. Slope shift control is inhibited.
P0717	Input/Turbine Speed Sensor Circuit No Signal	<ul style="list-style-type: none"> Upshifting to 5th gear is inhibited. Torque reducing request to ECM (torque reduction control) is inhibited. Learning control is inhibited. Slope shift control is inhibited.
P0722	Output Speed Sensor Circuit No Signal	<ul style="list-style-type: none"> Vehicle speed which is calculated by input shaft speed sensor signal is used for gear shifting control instead of vehicle speed calculated by output shaft speed sensor signal. Upshifting to 5th gear is inhibited. Torque reducing request to ECM (torque reduction control) is inhibited. Learning control is inhibited. Slope shift control is inhibited.
P0752	Shift Solenoid "A" Stuck On	Upshifting to 4th and 5th gear is inhibited.
P0756	Shift Solenoid "B" Performance or Stuck Off	Shift changing to 1st and 2nd gear in L range is inhibited.
P0757	Shift Solenoid "B" Stuck On	Upshifting to 4th and 5th gear is inhibited.
P0772	Shift Solenoid "E" Stuck On	Shift changing to 1st and 2nd gear in L range is inhibited.
P0781	1-2 Shift	<ul style="list-style-type: none"> Upshifting to 4th and 5th gear is inhibited. Shift changing to 1st and 2nd gear in L range is inhibited.
P0797	Pressure Control Solenoid "C" Stuck On	Upshifting to 4th and 5th gear is inhibited.
P0962	Pressure Control Solenoid "A" Control Circuit Low	<ul style="list-style-type: none"> Power supply for all solenoid valves is cut. Gear position is fixed according to select lever position as shown in the following. R: Reverse D: 4th 3: 3rd L: 3rd Learning control is inhibited. Slope shift control is inhibited.
P0963	Pressure Control Solenoid "A" Control Circuit High	
P0966	Pressure Control Solenoid "B" Control Circuit Low	
P0967	Pressure Control Solenoid "B" Control Circuit High	
P0970	Pressure Control Solenoid "C" Control Circuit Low	
P0971	Pressure Control Solenoid "C" Control Circuit High	
P0973	Shift Solenoid "A" Control Circuit Low	
P0974	Shift Solenoid "A" Control Circuit High	
P0976	Shift Solenoid "B" Control Circuit Low	
P0977	Shift Solenoid "B" Control Circuit High	
P0985	Shift Solenoid "E" Control Circuit Low	
P0986	Shift Solenoid "E" Control Circuit High	

5A-24 Automatic Transmission/Transaxle:

DTC No.	Trouble Area	Fail Safe Operation
☞ P1702	Internal Control Module Memory Check Sum Error	<ul style="list-style-type: none"> Power supply for all solenoid valves is cut. Gear position is fixed according to select lever position as shown in the following. R: Reverse D: 4th 3: 3rd L: 3rd
☞ P1703	CAN Invalid Data-TCM	<p>In case of accelerator pedal and/or throttle position signal malfunction:</p> <ul style="list-style-type: none"> Accelerator pedal and/or throttle opening used for line pressure control is assumed to be 100%. Accelerator pedal and/or throttle opening used for gear shifting control is assumed to be 0%. Upshifting to 5th gear is inhibited. Lock-up function is inhibited to operate. Line pressure control at gear shifting is inhibited. Slope shift control is inhibited. <p>In case of engine coolant temperature signal malfunction:</p> <ul style="list-style-type: none"> Engine coolant temperature is assumed to be warming up condition. Slope shift control is inhibited. <p>In case of engine revolution signal malfunction:</p> <ul style="list-style-type: none"> Engine revolution is assumed to be max value. Lock-up function is inhibited to operate. Slope shift control is inhibited. Learning control is inhibited. <p>In case of engine torque signal malfunction:</p> <ul style="list-style-type: none"> Engine torque is assumed to be max value. Slope shift control is inhibited. <p>In case of vehicle speed signal.</p> <ul style="list-style-type: none"> Slope shift control is inhibited.
☞ P1723	Range Select Switch Malfunction	<ul style="list-style-type: none"> 4 position switch signal is invalidity.
☞ P0073	Control Module Communication Bus Off	<ul style="list-style-type: none"> Throttle opening used for line pressure control is assumed to be 100%. Throttle opening used for gear shifting control is assumed to be 0%. Engine revolution is assumed to be max value. Engine torque is assumed to be max value. Engine coolant temperature is assumed to be warming up condition. Lock-up function is inhibited to operate. Upshifting to 5th gear is inhibited. Slope shift control is inhibited.
☞ U0100	Lost Communication With ECM	
☞ U0140	Lost Communication With Body Control Module	<ul style="list-style-type: none"> Power mode is inhibited.
☞ P2763	Torque Converter Clutch Circuit High	<ul style="list-style-type: none"> Power supply for TCC solenoid is cut. Learning control is inhibited. Vehicle starting at 2nd gear is inhibited.
☞ P2764	Torque Converter Clutch Circuit Low	

Scan Tool Data

S6JB0B5104007

As the data values given in the following table are standard values estimated on the basis of values obtained from the normally operating vehicles by using a scan tool, use them as reference value. Even when the vehicle is in good condition, there may be cases where the checked value does not fall within each specified data range. Therefore, judgment as abnormal should not be made by checking with these data alone.

Also, condition in the following table that can be checked by the scan tool are those detected by TCM and output from TCM as commands and there may be cases where the automatic transmission or actuator is not operating (in the condition) as indicated by the scan tool.

Scan Tool Data	Vehicle Condition		Normal Condition / Reference Values
Gear Position	Ignition switch ON POWER mode OFF	Select lever is in "P" position	P/N
		Select lever is in "R" position	R
		Select lever is in "N" position	P/N
		Select lever is in "D" position	1st
		Select lever is in "4" position	1st
		Select lever is in "3" position	1st
		Select lever is in "L" position	1st
Throttle Position	Ignition switch ON	Accelerator pedal is depressed	0 – 100% (varies depending on depressed value)
		Accelerator pedal is released	0 – 5%
Input Shaft Rev	At engine idle speed and selector lever is in "P" position		(Engine idle speed is displayed in increments of 50 rpm)
	At 60 km/h (37.5 mile/h) constant speed, 20% or less throttle opening and 4th gear		2300 RPM (displayed in increments of 50 rpm)
Output Shaft Rev	At vehicle stop		0 RPM
	At 60 km/h (37.5 mile/h) constant speed, 20% or less throttle opening and 4th gear		2300 RPM (displayed in increments of 50 rpm)
Vehicle Speed 1	At vehicle stop		0 km/h, 0 MPH
Battery Voltage	Ignition switch ON and engine stop		Battery voltage is displayed (8 – 16 V)
ATF Temp	After driving at 60 km/h (37.5 mile/h) for 15 minutes or more, and A/T fluid temperature around sensor reaches 70 – 80 °C (158 – 176 °F)		70 – 80 °C (158 – 176 °F)
Accel Effective Pos	Ignition switch ON	Accelerator pedal is depressed	0 – 100% (varies depending on depressed value)
		Accelerator pedal is released	0%
Press Cont Sol	At vehicle stop, closed throttle, engine idle speed and 1st gear		9.5%
Slip RPM	Engine running at idle speed and selector lever is in "P" range		0 ± 25 RPM
	Engine running, vehicle stop and selector lever is in "D" range		Engine speed is displayed
ATF Temp 2	After driving at 60 km/h (37.5 mile/h) for 15 minutes or more, and A/T fluid temperature around sensor reaches 70 – 80 °C (158 – 176 °F)		70 – 80 °C (158 – 176 °F)
Engine Speed	At engine idle speed		Engine idle speed is displayed
Coolant Temp	Ignition switch ON		Engine coolant temperature is displayed
Target Engine Torque	Ignition switch ON		0 N·m
Engine Torque	Ignition switch ON		0 N·m
MIL request	Ignition switch ON		OFF
Fuel Cut Flag	Ignition switch ON		OFF
O/D Off Switch	Ignition switch ON	Shift selector lever to other below range	ON
		Shift selector lever to "P", "N" and "D" range	OFF

Scan Tool Data	Vehicle Condition		Normal Condition / Reference Values
Trans Range	Ignition switch ON	Select lever is in "P" position	P
		Select lever is in "R" position	R
		Select lever is in "N" position	N
		Select lever is in "D" position	D
		Select lever is in "4" position	D
		Select lever is in "3" position	3
		Select lever is in "L" position	L
Shift Sol A Con	At vehicle stop, closed throttle and 1st gear		ON
	At 30 km/h (18.5 mile/h) constant speed, 20% or less throttle opening and 3rd gear		OFF
Shift Sol A Mon	At vehicle stop, closed throttle and 1st gear		ON
	At 30 km/h (18.5 mile/h) constant speed, 20% or less throttle opening and 3rd gear		OFF
Shift Sol B Con	At vehicle stop, closed throttle and 1st gear		OFF
	At 20 km/h (12.5 mile/h) constant speed, 20% or less throttle opening and 2nd gear		ON
Shift Sol B Mon	At vehicle stop, closed throttle and 1st gear		OFF
	At 20 km/h (12.5 mile/h) constant speed, 20% or less throttle opening and 2nd gear		ON
4WD Low Switch	Ignition switch ON, transfer position switch is "4H"		OFF
	Ignition switch ON, transfer position switch is "4L"		ON
D Range Signal	Ignition switch ON	Select lever is in "P" position	P/N range
		Select lever is in "R" position	D range
		Select lever is in "N" position	P/N range
		Select lever is in "D" position	D range
		Select lever is in "4" position	D range
		Select lever is in "3" position	D range
		Select lever is in "L" position	D range
A/C switch	Ignition switch ON and air conditioner switch OFF		Cancel
Brake Switch	Ignition switch ON	Brake pedal is depressed	ON
		Brake pedal is released	OFF
TCC Sol Duty	At vehicle stop, closed throttle and 1st gear		0%
	At 80 km/h (50 mile/h) constant speed, 30% or less throttle opening and 4th gear. ("4" range)		100%
Vehicle Speed 2	At vehicle stop		0 km/h, 0 MPH
Press cont sol B	At vehicle stop, closed throttle and 1st gear		0%
	At 80 km/h (50 mile/h) constant speed, 30% or less throttle opening and 5th gear		100%
Press cont sol C	At vehicle stop, closed throttle and 1st gear		100%
	At 80 km/h (50 mile/h) constant speed, 30% or less throttle opening and 5th gear		0%
Shift Sol E Con	At vehicle stop, closed throttle and 1st gear		OFF
	At 80 km/h (50 mile/h) constant speed, 30% or less throttle opening and 5th gear		ON
Shift Sol E Mon	At vehicle stop, closed throttle and 1st gear		OFF
	At 80 km/h (50 mile/h) constant speed, 30% or less throttle opening and 5th gear		ON

Scan Tool Data Definitions

Gear Position (1ST, 2ND, 3RD, 4TH, 5TH, N, R): This parameter is indicated actual gear position.

Throttle Position (%): It indicates throttle valve opening ratio sent from ECM through CAN communication line.

Input Shaft Rev (RMP): It indicates input shaft revolution computed by reference pulses coming from input shaft speed sensor on transmission case.

Output Shaft Rev (RMP): It indicates output shaft revolution computed by reference pulses coming from output shaft speed sensor on transmission case.

Vehicle Speed 1 (Km/h): This parameter is computed by output shaft speed sensor and 4L/N switch on TCM. Gear shift schedule relate this parameter.

Battery Voltage (V): It indicates battery voltage read by TCM as analog input signal by TCM.

ATF Temp (°C): It indicates ATF temperature detected by signal from transmission fluid temperature sensor-A installed in valve body.

Accel Effective Pos (%): It indicates accelerator pedal opening ratio detected by signal through CAN communication line fed from ECM.

Press Cont Sol (%): Electric current value ratio between electric current value being outputted from TCM to pressure control solenoid-A and maximum value can be outputted by TCM.

Slip RPM (RMP): This parameter indicates slipping rotation in the torque converter (difference between input shaft rotation and engine rotation)

ATF Temp 2 (°C): It indicates ATF temperature detected by signal from transmission fluid temperature sensor-B installed in valve body.

Engine Speed (RPM): It indicates engine speed computed by signal through CAN communication line fed from ECM.

Coolant Temp (°C): It indicates engine coolant temperature detected by signal through CAN communication line fed from ECM.

Target Engine Torque (Nm): It indicates target engine torque detected by signal through CAN communication line fed from ECM.

Engine Torque (Nm): It indicates actual engine torque detected by signal through CAN communication line fed from ECM.

MIL Request (ON, OFF): ON: Signal which TCM requires combination meter to turn ON malfunction indicator lamp.
OFF: Signal which TCM does not require combination meter to turn ON malfunction indicator lamp.

Fuel Cut Flag: ON: Signal which inform that fuel cut is operating.
OFF: Signal which inform that fuel cut is not operating.

O/D Off Switch (ON, OFF): Inputted signal from "4" position switch in select lever assembly.
ON: Shift selector lever to other below range.
OFF: Shift selector lever to P, N and D range.

Trans Range (P, R, N, D, 3, L): It indicates transmission range according to transmission range switch signal.

Shift Sol A Con / MON (ON, OFF): COM-ON: ON command being outputted to shift solenoid-A.
COM-OFF: OFF command not being outputted to shift solenoid-A.
MON-ON: Electricity being passed to shift solenoid-A.
MON-OFF: Electricity not being passed to shift solenoid-A.

Shift Sol B Con / MON (ON, OFF): COM-ON: ON command being outputted to shift solenoid-B.
COM-OFF: OFF command not being outputted to shift solenoid-B.
MON-ON: Electricity being passed to shift solenoid-B.
MON-OFF: Electricity not being passed to shift solenoid-B.

4WD Low Switch (ON, OFF): Inputted signal from 4WD low switch on transfer case.
ON: Transfer gear position is 4L
OFF: Transfer gear position is 4H

D RANGE SIGNAL (P/N range, D range): ON: Signal which TCM require ECM to increase idle speed
OFF: Signal which TCM does not require ECM to increase idle speed

A/C Switch (ON, OFF): ON: Signal which inform that air conditioner compressor is turned ON.
OFF: Signal which inform that air conditioner compressor is turned OFF.

Brake Switch (ON, OFF): Brake light switch position detected by signal through CAN communication line fed from ECM.
ON: Brake pedal depressed
OFF: Brake pedal released

TCC Sol Duty (%): Electric current value ration between electric current value being outputted from TCM to TCC solenoid and maximum value can be outputted by TCM.

Vehicle Speed 2 (Km/h): It indicates actual vehicle speed detected by signal through CAN communication line fed from ECM.

Press Cont Sol B (%): Electric current value ratio between electric current value being outputted from TCM to pressure control solenoid-B and maximum value can be outputted by TCM.

Press Cont Sol C (%): Electric current value ratio between electric current value being outputted from TCM to pressure control solenoid-C and maximum value can be outputted by TCM.

Shift Sol E Con / MON (ON, OFF): COM-ON: ON command being outputted to shift solenoid-E.
COM-OFF: OFF command not being outputted to shift solenoid-E.
MON-ON: Electricity being passed to shift solenoid-E.
MON-OFF: Electricity not being passed to shift solenoid-E.

Visual Inspection

Visually check the following parts and systems.

Inspection Item		Referring
A/T fluid	Level, leakage, color	"A/T Fluid Level Check"
A/T fluid hoses	Disconnection, looseness, deterioration	"Oil Cooler Hoses Replacement"
A/T select cable	Installation, operation	"Select Cable Adjustment"
Engine oil	Level, leakage	"Engine Oil and Filter Change in Section 0B"
Engine coolant	Level, leakage	"Engine Coolant Change in Section 0B"
Battery	Fluid level, corrosion of terminal	
Connectors of electric wire harness	Disconnection friction	"Intermittent and Poor Connection Inspection in Section 00"
Fuses	Burning	"Cautions in Body Electrical System Servicing in Section 9A"
Parts	Installation, damage	
Bolt	Looseness	
Malfunction indicator lamp	Operation at engine start	"Malfunction Indicator Lamp (MIL) Check in Section 1A"
Charge warning light	Operation at engine start	"Generator Symptom Diagnosis in Section 1J"
Engine oil pressure warning light	Operation at engine start	"Oil Pressure Switch Inspection in Section 9C"
Engine coolant temp. meter	Operation at engine start	
Other parts that can be checked visually		

A/T Basic Check

This check is important for troubleshooting when TCM has detected no DTC and no abnormality has been noted in visual inspection. Follow the flow table carefully.

Step	Action	Yes	No
1	Was "A/T System Check" performed?	Go to Step 2.	Go to "A/T System Check".
2	Perform "Road Test" <i>Is it OK?</i>	Go to Step 3.	Proceed to "Troubleshooting" in "Road Test".
3	Perform "Manual Road Test" <i>Is it OK?</i>	Go to Step 4.	Proceed to "Troubleshooting" in "Manual Road Test".
4	Perform "Engine Brake Test" <i>Is it OK?</i>	Go to Step 5.	Proceed to "Troubleshooting" in "Engine Brake Test".
5	Perform "Stall Test" <i>Is it OK?</i>	Go to Step 6.	Proceed to "Troubleshooting" in "Stall Test".
6	Perform "Time Lag Test" <i>Is it OK?</i>	Go to Step 7.	Proceed to "Troubleshooting" in "Time Lag Test".
7	Perform "Line Pressure Test" <i>Is it OK?</i>	Go to Step 8.	Proceed to "Troubleshooting" in "Line Pressure Test".
8	1) Proceed to "Trouble Diagnosis 1" in "A/T Symptom Diagnosis". <i>Is trouble identified?</i>	Repair or replace faulty parts.	Go to Step 9.
9	1) Proceed to "Trouble Diagnosis 2" in "A/T Symptom Diagnosis". <i>Is trouble identified?</i>	Repair or replace faulty parts.	Proceed to "Trouble Diagnosis 3" in "A/T Symptom Diagnosis".

Road Test

S6JB0B5104010

This test is to check if upshift, downshift and lock-up take place at specified speeds while actually driving vehicle on a level road.

⚠ WARNING

- Carry out test in very little traffic area to prevent an accident.
- Test requires 2 persons, a driver and a tester.

- 1) Warm up engine.
- 2) With engine running at idle, shift select "D".
- 3) Accelerate vehicle speed by depressing accelerator pedal gradually.
- 4) While driving in "D" range, check if gear shift and lock-up occur properly as shown in "Automatic Gear Shift Table".

Troubleshooting

Condition	Possible cause	Correction / Reference Item
Unable to run in all range	Faulty oil pump	<i>Inspect. If NG, replace.</i>
	Seized or broken planetary gear	<i>Inspect. If NG, replace.</i>
	Faulty torque converter	<i>Inspect. If NG, replace.</i>
	Damaged drive plate	<i>Inspect. If NG, replace.</i>
	Faulty valve body component	<i>Replace valve body assembly.</i>
Unable to run in reverse position	Faulty reverse clutch	<i>Inspect. If NG, replace.</i>
	Faulty 1st & reverse brake	<i>Inspect. If NG, replace.</i>
1 → 2 upshift fails to occur	Malfunction of transmission range sensor	<i>Inspect. If NG, replace.</i>
	Maladjust shift control cable	<i>Adjust.</i>
	Faulty valve body component	<i>Replace valve body component.</i>
	Faulty 2nd brake	<i>Inspect. If NG, replace.</i>
	Faulty one-way No.1 clutch	<i>Inspect. If NG, replace.</i>
	Faulty one-way No.2 clutch	<i>Inspect. If NG, replace.</i>
2 → 3 upshift fails to occur	Malfunction of transmission range sensor	<i>Inspect. If NG, replace.</i>
	Faulty valve body component	<i>Replace valve body component.</i>
	Faulty reverse clutch	<i>Inspect. If NG, replace.</i>
3 → 4 upshift fails to occur	Malfunction of transmission range sensor	<i>Inspect. If NG, replace.</i>
	Faulty valve body component	<i>Replace valve body component.</i>
	Faulty direct clutch	<i>Inspect. If NG, replace.</i>
4 → 5 upshift fails to occur	Malfunction of transmission range sensor	<i>Inspect. If NG, replace.</i>
	Malfunction of input shaft speed sensor	<i>Inspect. If NG, replace.</i>
	Faulty valve body component	<i>Replace valve body component.</i>
	Faulty forward clutch	<i>Inspect. If NG, replace.</i>
	Faulty No.1 brake	<i>Inspect. If NG, replace.</i>
Incorrect gear shift point	Malfunction of throttle position sensor	<i>Inspect. If NG, replace.</i>
	Malfunction of input shaft speed sensor	<i>Inspect. If NG, replace.</i>
	Malfunction of output shaft speed sensor	<i>Inspect. If NG, replace.</i>
	Malfunction of power mode switch	<i>Inspect. If NG, replace.</i>
	Malfunction of transmission fluid temperature sensor A	<i>Inspect. If NG, replace.</i>
TCC (lock-up) function does not operate	Malfunction of engine coolant temperature (ECT) sensor	<i>Inspect. If NG, replace.</i>
	Malfunction of brake light switch	<i>Inspect. If NG, replace.</i>
	Malfunction of throttle position sensor	<i>Inspect. If NG, replace.</i>
	Faulty valve body component	<i>Replace valve body component.</i>
	Faulty torque converter	<i>Replace torque converter.</i>


Manual Road Test

⚠ WARNING

- Carry out test in very little traffic area to prevent an accident.
- Test requires 2 persons, a driver and a tester.


The purpose of this test is to judge whether causal factor of trouble which occurred in automatic transaxle is electrical or mechanical by disconnecting transmission wire connector (1) and fixing automatic transaxle gear position (fail-safe function).

- 1) Start engine and warm it up to normal operating temperature.
- 2) After warming up engine, turn ignition switch to OFF position and disconnect transmission wire connector (1).

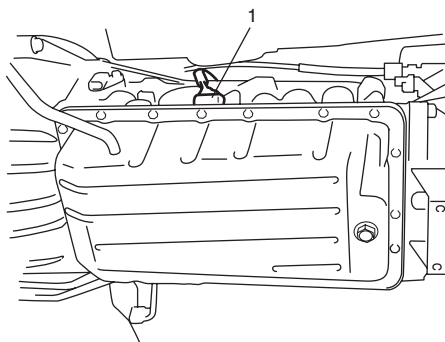

I6JB0B510014-01

- 3) Turn transfer switch (1) to 4H position (2) (motor-shift type).

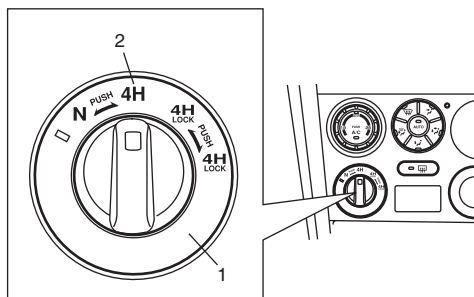

I6JB0B510015-01

- 4) Turn OFF all electrical loads.
With shift select lever shifted to each range ("L", "3" and "D") drive vehicle at 1,000 rpm engine speed and then check vehicle speed by referring to "Fixed gear position".
If vehicle speed is not as specified in "Fixed gear position" table, go to troubleshooting.
- 5) Connect transmission wire connector and clear DTC.

Fixed gear position

Selector lever position	Gear position	Vehicle speed
L range	3rd gear	Approx. 22 km/h (14 mile/h)
3 range	3rd gear	Approx. 22 km/h (14 mile/h)
D range	4th gear	Approx. 31 km/h (19 mile/h)

Troubleshooting

Condition	Possible cause	Correction / Reference Item
Selected gear is incorrect	Faulty valve body component	Replace valve body assembly.
	Faulty clutch or brake	Inspect clutch and brake. If any parts are faulty, replace them.

Stall Test

S6JB0B5104012

This test is to check overall performance of automatic transmission and engine by measuring stall speed at "D" and "R" ranges. Be sure to perform this test only when transmission fluid is at normal operating temperature and its level is between FULL and LOW marks.

⚠ CAUTION

- Do not run engine at stall more than 5 seconds continuously, for fluid temperature may rise excessively high.
- After performing stall test, be sure to leave engine running at idle for longer than 1 minute before another stall test.
- Do not perform stall test at transfer position in 4L.

- 1) Apply parking brake and block wheels.
- 2) Install tachometer.
- 3) Start engine with select lever shifted to "P".
- 4) Depress brake pedal fully.
- 5) Shift select lever to "D" and depress accelerator pedal fully while watching tachometer. Read engine rpm quickly when it has become constant (stall speed).
- 6) Release accelerator pedal immediately after stall speed is checked.
- 7) In the same way, check stall speed in "R" range.
- 8) Stall speed should be within following specification.

Engine stall speed

Standard: 2,320 – 2,620 rpm

Troubleshooting

Condition	Possible cause	Correction / Reference Item
Lower than standard level in both "D" and "R" range	Engine output torque failure	<i>Inspect and repair engine.</i>
	Faulty one-way clutch of torque converter	<i>Replace torque converter.</i>
Higher than standard level in "D" range	Malfunction of pressure control solenoid valve (Low line pressure)	<i>Inspect. If NG, replace valve body assembly.</i>
	Malfunction of primary regulator valve (Low line pressure)	<i>Replace valve body assembly.</i>
	Slippery forward clutch	<i>Inspect. If NG, replace.</i>
	Faulty one-way No.3 clutch	<i>Inspect. If NG, replace.</i>
	Leakage from "D" range fluid pressure circuit	<i>Overhaul or replace valve body assembly.</i>
Higher than standard level in "R" range	Malfunction of pressure control solenoid valve (Low line pressure)	<i>Inspect. If NG, replace valve body assembly.</i>
	Malfunction of primary regulator valve (Low line pressure)	<i>Replace valve body assembly.</i>
	Slippery reverse clutch	<i>Inspect. If NG, replace.</i>
	Slippery 1st and reverse brake	<i>Inspect. If NG, replace.</i>
	Faulty one-way No.1 clutch	<i>Inspect. If NG, replace.</i>
	Leakage from "R" range fluid pressure circuit	<i>Overhaul or replace valve body assembly.</i>
Higher than standard level in both "D" and "R" range	Malfunction of pressure control solenoid valve (Low line pressure)	<i>Inspect. If NG, replace valve body assembly.</i>
	Malfunction of primary regulator valve (Low line pressure)	<i>Replace valve body assembly.</i>
	Clogged oil strainer	<i>Replace.</i>
	Faulty oil pump	<i>Inspect. If NG, replace.</i>
	Leakage from both "D" and "R" range fluid pressure circuit	<i>Overhaul or replace valve body assembly.</i>

Time Lag Test

This test is to check conditions of clutch, reverse brake and fluid pressure. "Time lag" means time elapsed since select lever is shifted with engine idling till shock is felt.

- 1) With chocks placed before and behind front and rear wheels respectively, depress brake pedal.
- 2) Start engine.
- 3) With stop watch ready, shift select lever from "N" to "D" range and measure time from that moment till shock is felt.
- 4) Similarly measure time lag by shifting select lever from "N" to "R" range.

Gear shifting time lag

"N" → "D": Less than 1.0 sec.

"N" → "R": Less than 1.2 sec.

NOTE

- When repeating this test, be sure to wait at least one minute after select lever is shifted back to "N" range.
- Engine should be warmed up fully for this test.
- Repeat test 3 times and take average of those data for final time lag data.

Troubleshooting

Condition	Possible cause	Correction / Reference Item
"N" → "D" time lag exceeds specification	Malfunction of pressure control solenoid valve (Low line pressure)	<i>Inspect. If NG, replace valve body assembly.</i>
	Malfunction of primary regulator valve (Low line pressure)	<i>Replace valve body assembly.</i>
	Clogged oil strainer	<i>Replace.</i>
	Faulty oil pump	<i>Inspect. If NG, replace.</i>
	Faulty forward clutch	<i>Inspect. If NG, replace.</i>
	Faulty one-way No.3 clutch	<i>Inspect. If NG, replace.</i>
	Leakage from "D" range fluid pressure circuit	<i>Overhaul or replace valve body assembly.</i>
"N" → "R" time lag exceeds specification	Malfunction of pressure control solenoid valve (Low line pressure)	<i>Inspect. If NG, replace valve body assembly.</i>
	Malfunction of primary regulator valve (Low line pressure)	<i>Replace valve body assembly.</i>
	Clogged oil strainer	<i>Replace.</i>
	Faulty oil pump	<i>Inspect. If NG, replace.</i>
	Faulty reverse clutch	<i>Inspect. If NG, replace.</i>
	Faulty 1st and reverse brake	<i>Inspect. If NG, replace.</i>
	Faulty one-way No.1 clutch	<i>Inspect. If NG, replace.</i>
	Leakage from "R" range fluid pressure circuit	<i>Overhaul or replace valve body assembly.</i>

Line Pressure Test

Purpose of this test is to check operating conditions of each part by measuring fluid pressure in fluid pressure line. Line pressure test requires following conditions.


- Automatic fluid is at normal operating temperature (70 – 80 °C / 158 – 176 °F).
 - Fluid is filled to proper level (between FULL and LOW on dipstick).
 - Air conditioner switch is turned OFF.
- 1) Apply parking brake securely and place chocks against wheels.
 - 2) Remove fluid pressure check hole plug bolt.
 - 3) Attach oil pressure gauge to fluid pressure check hole in transmission case.

Special tool

(A): 09925–37811–001

⚠ CAUTION

After attaching oil pressure gauge, check that no fluid leakage exists.

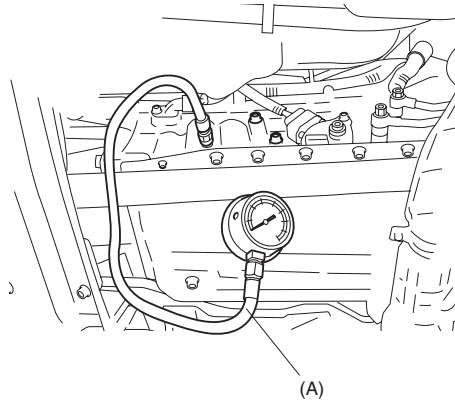

I6JB01510011-01

- 4) Depress foot brake fully, run engine at idle and stall then check fluid pressure in “D” or “R” range.

⚠ CAUTION

- Do not continue running engine at stall speed longer than 5 seconds.
- After performing line pressure test, be sure to leave engine running at idle for longer than one minute before performing another line pressure test.

Automatic transmission line pressure

	“D” range	“R” range
At idle speed	356 – 416 kPa (3.6 – 4.1 kg/cm ² , 52 – 58 psi)	482 – 562 kPa (4.9 – 5.6 kg/cm ² , 70 – 79 psi)
At stall speed	1370 – 1480 kPa (13.7 – 14.8 kg/cm ² , 195 – 210 psi)	1642 – 1850 kPa (16.5 – 18.5 kg/cm ² , 235 – 263 psi)

- 5) If check result is OK, disconnect special tool, then tighten fluid pressure check hole bolt to specified torque.

Tightening torque

Fluid pressure check hole bolt: 8 N·m (0.8 kgf-m, 6.0 lb-ft)

Troubleshooting

Condition	Possible cause	Correction / Reference Item
Higher than standard level in each range	Malfunction of pressure control solenoid valve-A (Low line pressure)	<i>Inspect. If NG, replace valve body assembly.</i>
	Malfunction of primary regulator valve (Low line pressure)	<i>Replace valve body assembly.</i>
Lower than standard level in each range	Malfunction of pressure control solenoid valve-A (Low line pressure)	<i>Inspect. If NG, replace valve body assembly.</i>
	Malfunction of primary regulator valve (Low line pressure)	<i>Replace valve body assembly.</i>
	Clogged oil strainer	<i>Replace.</i>
	Faulty oil pump	<i>Inspect. If NG, replace.</i>
	Leakage from both "D" and "R" range fluid pressure circuit	<i>Overhaul or replace valve body assembly.</i>
	Leakage from "D" range fluid pressure circuit	<i>Overhaul or replace valve body assembly.</i>
Lower than standard level only in "D" range	Faulty forward clutch	<i>Inspect. If NG, replace.</i>
	Leakage from "R" range fluid pressure circuit	<i>Overhaul or replace valve body assembly.</i>
Lower than standard level only in "R" range	Faulty reverse clutch	<i>Inspect. If NG, replace.</i>
	Faulty 1st and reverse brake	<i>Inspect. If NG, replace.</i>

Engine Brake Test

S6JB0B5104015

▲ WARNING

Before test, make sure that there is no vehicle behind so as to prevent rear-end collision.

- 1) While driving vehicle in 4th gear of "D" range, shift select lever down to "3" range and check if engine brake operates.
- 2) In the same way as in Step 1), check engine brake for operation when select lever is shifted down to "L" range.
- 3) Engine brake should operate in the test.

Troubleshooting

Condition	Possible cause	Correction / Reference Item
Failure to operate when shifted down to "3" range	Faulty No.1 brake	<i>Inspect. If NG, replace.</i>
	Faulty No.2 brake	<i>Inspect. If NG, replace.</i>
Failure to operate when shifted down to "L" range	Faulty 1st / reverse brake	<i>Inspect. If NG, replace.</i>

"P" Range Test

S6JB0B5104016

- 1) Stop vehicle on a slope of 5 degrees or more, shift select lever to "P" range and at the same time apply parking brake.
- 2) After stopping engine, depress brake pedal and release parking brake.
- 3) Then, release brake pedal gradually and check that vehicle remains stationary.
- 4) Depress brake pedal and shift select lever to "N" range.
- 5) Then, release brake pedal gradually and check that vehicle moves.

▲ WARNING

Before test, make sure no one is around vehicle or down on a slope and keep watchful for safety during test.

Troubleshooting

Condition	Possible cause	Correction / Reference Item
Vehicle moves at "P" range or remains stationary at "N" range	Defective parking lock pawl or spring	<i>Inspect. If NG, repair.</i>

A/T Symptom Diagnosis

S6JB0B5104017

Trouble Diagnosis 1

Electrical repair

Condition	Possible cause	Correction / Reference Item
Poor 1 → 2 and/or 2 → 1 shift	Transmission range sensor circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	Shift solenoid valve-B circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	TCM	<i>Substitute a known-good TCM and recheck.</i>
Poor 2 → 3 and/or 3 → 2 shift	Transmission range sensor circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	TCM	<i>Substitute a known-good TCM and recheck.</i>
Poor 3 → 4 and/or 4 → 3 shift	Transmission range sensor circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	TCM	<i>Substitute a known-good TCM and recheck.</i>
Poor 4 → 5 and/or 5 → 4 shift	Transmission range sensor	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	Shift solenoid valve-E circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	Pressure control solenoid valve-B circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	Pressure control solenoid valve-C circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	Input shaft speed sensor circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	TCM	<i>Substitute a known-good TCM and recheck.</i>
Incorrect gear shift point	Accelerator pedal position (APP) sensor circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	Input shaft speed sensor circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	Output shaft speed sensor circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	Pressure control solenoid valve-A circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	Transmission fluid temperature sensor A circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	TCM	<i>Substitute a known-good TCM and recheck.</i>
TCC (lock-up) function does not operate	TCC solenoid valve circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	Engine coolant temperature (ECT) sensor circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	TCM	<i>Substitute a known-good TCM and recheck.</i>
	ECM	<i>Substitute a known-good ECM and recheck.</i>
No kick down	Shift solenoid valve-A circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	Shift solenoid valve-B circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
Higher or lower stall speed	Pressure control solenoid valve-A circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	TCM	<i>Substitute a known-good TCM and recheck.</i>

Condition	Possible cause	Correction / Reference Item
Higher or lower line pressure	Pressure control solenoid valve-A circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	TCM	<i>Substitute a known-good TCM and recheck.</i>
Excessive shock at "N" → "D"	Accelerator pedal position (APP) sensor circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	Input shaft speed sensor circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	Shift solenoid valve-A circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	Pressure control solenoid valve-A circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	Pressure control solenoid valve-B circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	Transmission fluid temperature sensor A circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	TCM	<i>Substitute a known-good TCM and recheck.</i>
Excessive shock at "N" → "R"	Accelerator pedal position (APP) sensor circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	Shift solenoid valve-A circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	Pressure control solenoid valve-A circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	TCM	<i>Substitute a known-good TCM and recheck.</i>
Excessive shock at shift up and down	Accelerator pedal position (APP) sensor circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	Shift solenoid valve-A circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	Shift solenoid valve-B circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	Shift solenoid valve-E circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	Pressure control solenoid valve-A circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	Pressure control solenoid valve-B circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	Pressure control solenoid valve-C circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	Transmission fluid temperature sensor A circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	TCM	<i>Substitute a known-good TCM and recheck.</i>
Excessive shock at kick down	Accelerator pedal position (APP) sensor circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	Shift solenoid valve-A circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	Shift solenoid valve-B circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>
	Shift solenoid valve-E circuit faulty	<i>Inspect circuit for open, short and intermittent trouble. If NG, repair.</i>

Trouble Diagnosis 2

On-vehicle repair

Condition	Possible cause	Correction / Reference Item
Unable to run in all range	Faulty shift control cable	<i>Inspect. If NG, replace.</i>
	Faulty valve body component	<i>Replace valve body assembly.</i>
Poor 1 → 2 shift, excessive shock or slippage	Maladjust shift control cable	<i>Adjust.</i>
	Faulty transmission range sensor	<i>Inspect. If NG, replace.</i>
	Faulty shift solenoid valve-A	<i>Inspect. If NG, replace.</i>
	Faulty input shaft speed sensor	<i>Inspect. If NG, replace.</i>
	Faulty pressure control solenoid valve-A	<i>Inspect. If NG, replace valve body component.</i>
	Faulty pressure control solenoid valve-B	<i>Inspect. If NG, replace valve body component.</i>
	Faulty valve body component	<i>Replace valve body assembly.</i>
Poor 2 → 3 shift, excessive shock or slippage	Faulty transmission range sensor	<i>Inspect. If NG, replace.</i>
	Faulty input shaft speed sensor	<i>Inspect. If NG, replace.</i>
	Faulty pressure control solenoid valve-A	<i>Inspect. If NG, replace valve body component.</i>
	Faulty pressure control solenoid valve-B	<i>Inspect. If NG, replace valve body component.</i>
	Faulty valve body component	<i>Replace valve body assembly.</i>
Poor 3 → 4 shift, excessive shock or slippage	Faulty transmission range sensor	<i>Inspect. If NG, replace.</i>
	Faulty input shaft speed sensor	<i>Inspect. If NG, replace.</i>
	Faulty shift solenoid valve-A	<i>Inspect. If NG, replace.</i>
	Faulty pressure control solenoid valve-A	<i>Inspect. If NG, replace valve body component.</i>
	Faulty pressure control solenoid valve-B	<i>Inspect. If NG, replace valve body component.</i>
	Faulty valve body component	<i>Replace valve body assembly.</i>
Poor 4 → 5 shift, excessive shock or slippage	Faulty transmission range sensor	<i>Inspect. If NG, replace.</i>
	Faulty shift solenoid valve-A	<i>Inspect. If NG, replace.</i>
	Faulty shift solenoid valve-E	<i>Inspect. If NG, replace.</i>
	Faulty input shaft speed sensor	<i>Inspect. If NG, replace.</i>
	Faulty pressure control solenoid valve-A	<i>Inspect. If NG, replace valve body component.</i>
	Faulty pressure control solenoid valve-B	<i>Inspect. If NG, replace valve body component.</i>
	Faulty pressure control solenoid valve-C	<i>Inspect. If NG, replace valve body component.</i>
	Faulty valve body component	<i>Replace valve body assembly.</i>
Incorrect gear shift point	Faulty throttle position sensor	<i>Inspect. If NG, replace.</i>
	Faulty input shaft speed sensor	<i>Inspect. If NG, replace.</i>
	Faulty output shaft speed sensor	<i>Inspect. If NG, replace.</i>
	Faulty power mode switch	<i>Inspect. If NG, replace.</i>
	Faulty pressure control solenoid valve-A	<i>Inspect. If NG, replace valve body component.</i>
	Faulty transmission fluid temperature sensor A	<i>Inspect. If NG, replace.</i>
TCC (lock-up) function does not operate	Faulty TCC solenoid valve	<i>Inspect. If NG, replace valve body component.</i>
	Faulty valve body component	<i>Replace valve body component.</i>
	Faulty torque converter	<i>Replace torque converter.</i>
Excessive shock at "N" → "D"	Faulty input shaft speed sensor	<i>Inspect. If NG, replace.</i>
	Faulty shift solenoid valve-A	<i>Inspect. If NG, replace.</i>
	Faulty pressure control solenoid valve-A	<i>Inspect. If NG, replace valve body component.</i>
	Faulty transmission fluid temperature sensor A	<i>Inspect. If NG, replace.</i>
	Faulty valve body component	<i>Replace valve body component.</i>
Excessive shock at "N" → "R"	Faulty shift solenoid valve-A	<i>Inspect. If NG, replace.</i>
	Faulty pressure control solenoid valve-A	<i>Inspect. If NG, replace valve body component.</i>
	Faulty valve body component	<i>Replace valve body component.</i>
Poor engine brake in downshift to "3" range	Faulty valve body component	<i>Replace valve body component.</i>
Poor engine brake in downshift to "L" range	Faulty valve body component	<i>Replace valve body component.</i>

Trouble Diagnosis 3

Off-vehicle repair

Condition	Possible cause	Correction / Reference Item
Unable to run in all range	Faulty oil pump	<i>Inspect. If NG, replace.</i>
	Seized or broken planetary gear	<i>Inspect. If NG, replace.</i>
	Faulty torque converter	<i>Inspect. If NG, replace.</i>
	Damaged drive plate	<i>Inspect. If NG, replace.</i>
Unable to run in reverse position	Faulty reverse clutch	<i>Inspect. If NG, replace.</i>
	Faulty 1st & reverse brake	<i>Inspect. If NG, replace.</i>
Poor 1 → 2 shift, excessive shock or slippage	Faulty 2nd brake	<i>Inspect. If NG, replace.</i>
	Faulty one-way No.1 clutch	<i>Inspect. If NG, replace.</i>
	Faulty one-way No.2 clutch	<i>Inspect. If NG, replace.</i>
Poor 2 → 3 shift, excessive shock or slippage	Faulty reverse clutch	<i>Inspect. If NG, replace.</i>
Poor 3 → 4 shift, excessive shock or slippage	Faulty direct clutch	<i>Inspect. If NG, replace.</i>
Poor 4 → 5 shift, excessive shock or slippage	Faulty forward clutch	<i>Inspect. If NG, replace.</i>
	Faulty No.1 brake	<i>Inspect. If NG, replace.</i>
TCC (lock-up) function does not operate	Faulty torque converter	<i>Replace torque converter.</i>
Excessive "N" → "D"	Faulty oil pump	<i>Inspect. If NG, replace.</i>
	Faulty forward clutch	<i>Inspect. If NG, replace.</i>
	Faulty one-way No.3 clutch	<i>Inspect. If NG, replace.</i>
Excessive "N" → "R"	Faulty oil pump	<i>Inspect. If NG, replace.</i>
	Faulty reverse clutch	<i>Inspect. If NG, replace.</i>
	Faulty 1st & reverse brake	<i>Inspect. If NG, replace.</i>
	Faulty one-way No.1 clutch	<i>Inspect. If NG, replace.</i>
Poor engine brake in downshift to "3" range	Faulty 2nd brake	<i>Inspect. If NG, replace.</i>
Poor engine brake in downshift to "L" range	Faulty 1st & reverse brake	<i>Inspect. If NG, replace.</i>

No Gear Shift to 5th gear

System Description

TCM does not shift to 5th gear under any of the following condition.

- 4 position switch signal is inputted.
- 4L/N switch is turned ON. (4L mode)
- Engine coolant temperature is lower than 50 °C (122 °F).
- A/T fluid temperature is lower than 15 ± 3 °C (59 ± 5.4 °F).
- TCM detects the following DTCs.

DTC P0712, P0713, P0717, P0722, P0752, P0757, P0781, P0797, P0962, P0963, P0966, P0967, P0970, P0971, P0973, P0974, P0976, P0977, P0985, P0986, P1702, P1703, U0073 and/or U0100

Troubleshooting

▲ WARNING

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and be very careful during testing to avoid occurrence of an accident.
- Road test should be carried out with 2 persons, a driver and tester, on a level road.

Step	Action	Yes	No
1	Was "A/T System Check" performed?	Go to Step 2.	Go to "A/T System Check".
2	Check DTC Is DTC P0712, P0713, P0717, P0722, P0752, P0757, P0781, P0797, P0962, P0963, P0966, P0967, P0970, P0971, P0973, P0974, P0976, P0977, P0985, P0986, P1703, U0073 or U0100 detected?	Perform DTC Flow to repair and retry.	Go to Step 3.
3	ECT check 1) Warm up engine to normal operating temperature. 2) Check ECT monitored by TCM using scan tool. Is ECT more than 50 °C (122 °F)?	Go to Step 4.	Faulty ECT sensor, its circuit or engine cooling system. If OK, substitute a known-good TCM and recheck.
4	A/T fluid temperature check 1) Warm up engine to normal operating temperature. 2) Check A/T fluid temperature using scan tool. Is A/T fluid temperature more than 30 °C (86 °F)?	Go to Step 5.	Faulty A/T fluid temperature sensor or transmission. If OK, substitute a known-good TCM and recheck.
5	"4" position switch signal inspection 1) With ignition switch ON, check voltage between terminal "E93-9" of TCM connector and ground under the following conditions. <u>"4" position switch specification</u> Shift selector lever to "P", "N" or "D" range: 2.9 – 3.8 V Shift selector lever to "R", "4", "3" or "2" range: 1.4 – 2.0 V Is result as specified?	Go to Step 6.	Faulty "4" position switch or its circuit. If OK, substitute a known-good TCM and recheck.
6	"4L/N" switch signal inspection 1) With ignition switch ON, check voltage between terminal "E93-4" of TCM connector and ground. <u>"4WD LOW" switch specification</u> Transfer gear position "4H": Battery voltage Transfer gear position "4L": 0 – 2 V Is result as specified?	Go to Step 7.	Faulty "4L/N" switch or its circuit. If OK, substitute a known-good TCM and recheck.

No Lock-Up Occurs

System Description

TCM turns TCC solenoid OFF under any of the following conditions.

- Engine coolant temperature is lower than 60 °C (140 °F).
- 4L/N switch is turned ON. (4L mode)
- Brake light switch is turned ON. (Brake pedal is depressed)
- TCM detects the following DTCs.
P0962, P0963, P0966, P0967, P0970, P0971, P0973, P0974, P0976, P0977, P0985, P0986, P1702, P1703, P2763, P2764, U0073 and/or U0100

Troubleshooting

⚠ WARNING

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and be very careful during testing to avoid occurrence of an accident.
- Road test should be carried out with 2 persons, a driver and tester, on a level road.

Step	Action	Yes	No
1	Was "A/T System Check" performed?	Go to Step 2.	Go to "A/T System Check".
2	Check DTC <i>Is DTC P0962, P0963, P0966, P0967, P0970, P0971, P0973, P0974, P0976, P0977, P0985, P0986, P1702, P1703, P2763, P2764, U0073 or U0100 detected?</i>	Perform DTC Flow to repair and retry.	Go to Step 3.
3	ECT check 1) Warm up engine to normal operating temperature. 2) Check ECT using scan tool. <i>Is ECT more than 50 °C (122 °F)?</i>	Go to Step 4.	Faulty ECT sensor, its circuit or engine cooling system. If OK, substitute a known-good TCM and recheck.
4	4L/N switch signal inspection 1) With ignition switch ON, check voltage between terminal "E93-4" of TCM connector and ground. 4L/N switch specification Transfer gear position "4H": Battery voltage Transfer gear position "4L": 0 – 2 V <i>Is result as specified?</i>	Go to Step 5.	Faulty 4L/N switch or its circuit. If OK, substitute a known-good TCM and recheck.
5	Brake light switch signal inspection 1) With ignition switch ON, check voltage between terminal of ECM connector and ground. Brake light switch specification Brake pedal is released: 0 – 1 V Brake pedal is depressed: Battery voltage <i>Is result as specified?</i>	Go to Step 6.	Mis-adjusted brake light switch, faulty brake light switch or its circuit. If OK, substitute a known-good TCM and recheck.

Transmission Warning Light Circuit Check – Light Does Not Come “ON” at Ignition Switch ON (Non-E-OBD model)

S6JB0B5104053

Troubleshooting

Step	Action	Yes	No
1	Combination Meter Power Supply Check 1) Turn ignition switch ON. <i>Does other indicator / warning light in combination meter comes ON?</i>	Go to Step 2.	Repair combination meter power supply circuit referring to “Combination Meter Circuit Diagram in Section 9C”.
2	1) TCM power and ground circuit check referring to “TCM Power and Ground Circuit Check” <i>Is it in good condition?</i>	Go to Step 3.	Repair or replace.
3	DTC check 1) Check DTC referring to “DTC Check”. <i>Is there DTC P1774 or P1775?</i>	Go to applicable DTC diag. flow.	Go to Step 4.
4	Combination Meter Function Check 1) Turn ignition switch ON. <i>Does A/T selector position indicator show correct select lever position?</i>	Replace combination meter.	Substitute a known-good TCM and recheck.

Transmission Warning Light Circuit Check – Light Remains “ON” at Ignition Switch ON (Non-E-OBD model)

S6JB0B5104054

Troubleshooting

Step	Action	Yes	No
1	Diagnostic Trouble Code (DTC) Check. 1) Check DTC referring to “DTC” Check. <i>Is there any DTC (s)?</i>	Perform DTC Flow to repair and retry.	Substitute a known-good TCM and recheck. If OK, substitute a known-good combination meter and recheck.

“POWER” Light Circuit Check – Light Does Not Come “ON” at Ignition Switch ON

S6JB0B5104055


Troubleshooting

Step	Action	Yes	No
1	Combination Meter Power Supply Check 1) Turn ignition switch ON. <i>Does other indicator / warning light in combination meter comes ON?</i>	Go to Step 2.	Repair combination meter power supply circuit referring to “Combination Meter Circuit Diagram in Section 9C”.
2	1) TCM power and ground circuit check referring to “TCM Power and Ground Circuit Check” <i>Is it in good condition?</i>	Go to Step 3.	Repair or replace.
3	DTC check 1) Check DTC referring to “DTC Check”. <i>Is there DTC P1774 or P1775?</i>	Go to applicable DTC diag. flow.	Go to Step 4.
4	Combination Meter Function Check 1) Turn ignition switch ON. <i>Does A/T selector position indicator show correct select lever position?</i>	Replace combination meter.	Substitute a known-good TCM and recheck.

DTC P0705: Transmission Range Sensor Circuit Malfunction

S6JB0B5104020

Wiring Diagram

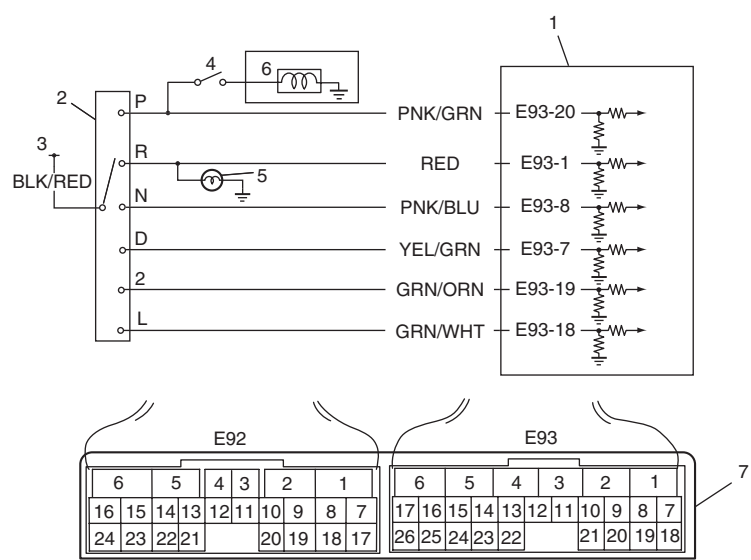

I5JB0A510020-01

1. TCM	4. Brake light switch	7. Terminal arrangement of TCM (viewed from harness side)
2. Transmission range sensor (switch)	5. Back-up light	
3. From ignition switch	6. Shift lock solenoid	

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Multiple signal are inputted simultaneously for 2 seconds. (1 driving cycle detection logic)	<ul style="list-style-type: none">Select cable maladjusted.Transmission range sensor (switch) maladjusted.Transmission range sensor (switch) or its circuit malfunction.TCM

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch OFF.
- 2) Clear DTCs in TCM and ECM memories by using tool.
- 3) Start engine and shift select lever to "D" range.
- 4) Keep engine running at idle speed for 25 seconds or more.
- 5) Check DTC, pending DTC and freeze-frame data.

DTC Troubleshooting

Step	Action	Yes	No
1	Was "A/T System Check" performed?	Go to Step 2.	Go to "A/T System Check".
2	Do you have SUZUKI scan tool?	Go to Step 3.	Go to Step 4.
3	Check transmission range sensor (switch) circuit for operation Check by using SUZUKI scan tool: 1) Connect SUZUKI scan tool to DLC with ignition switch OFF. 2) Turn ignition switch ON and check transmission range sensor signal ("P", "R", "N", "D", "3" or "L") on display when shifting select lever to each range. <i>Is applicable range indicated?</i>	Intermittent trouble. Check for intermittent trouble referring to "Intermittent and Poor Connection Inspection in Section 00".	Go to Step 5
4	Check transmission range sensor (switch) circuit for operation Check by not using SUZUKI scan tool: 1) Turn ignition switch ON. 2) Check voltage at terminals "E93-1", "E93-7", "E93-8", "E93-18", "E93-19" and "E93-20" respectively with select lever shifted to each range. Taking terminal "E93-1" as an example, is battery voltage will be indicated only when shift lever is shifted to "R" range and 0 V for other ranges as shown in table. Check voltage at other terminals likewise, referring to table. <i>Are check results satisfactory?</i>	Intermittent trouble. Check for intermittent trouble referring to "Intermittent and Poor Connection Inspection in Section 00".	Go to Step 5.
5	Check transmission range sensor (switch) for installation position 1) Check transmission range sensor (switch) for installation position referring to "Transmission Range Sensor Inspection and Adjustment". <i>Is it adjusted correctly?</i>	Go to Step 6.	Adjust transmission range sensor (switch) and recheck.
6	Check select cable for adjustment 1) Check select cable for adjustment referring to "Select Cable Adjustment". <i>Is it adjusted correctly?</i>	Go to Step 7.	Adjust select cable and recheck.
7	Check transmission range sensor (switch) 1) Check transmission range sensor (switch) referring to "Transmission Range Sensor Inspection and Adjustment". <i>Are check results satisfactory?</i>	Transmission range sensor circuit shorted to power circuit or shorted each other. If wires and connections are OK, substitute a known-good TCM and recheck.	Replace transmission range sensor (switch).

		Terminal					
		E93-20	E93-1	E93-8	E93-7	E93-19	E93-18
Select lever position	P	8 – 14 V	0 V	0 V	0 V	0 V	0 V
	R	0 V	8 – 14 V	0 V	0 V	0 V	0 V
	N	0 V	0 V	8 – 14 V	0 V	0 V	0 V
	D or 4	0 V	0 V	0 V	8 – 14 V	0 V	0 V
	3	0 V	0 V	0 V	0 V	8 – 14 V	0 V
	L	0 V	0 V	0 V	0 V	0 V	8 – 14 V

DTC P0707: Transmission Range Sensor Circuit Low**Wiring Diagram**

Refer to "DTC P0705: Transmission Range Sensor Circuit Malfunction".

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Transmission range switch signal (P, R, N, D, 3, L) is not inputted for more than 2 seconds in the following condition. <ul style="list-style-type: none"> • Vehicle speed is more than 30 km/h (19 mile/h). • Engine speed is more than 1500 rpm. (2 driving cycle detection logic) 	<ul style="list-style-type: none"> • Select cable maladjusted. • Transmission range sensor (switch) maladjusted. • Transmission range sensor (switch) or its circuit malfunction. • TCM

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch OFF.
- 2) Clear DTCs in TCM and ECM memory by using scan tool.
- 3) Start engine and shift select lever to "D" range.
- 4) Start vehicle and increase vehicle speed to 50 km/h (31 mile/h) or more for 2 minutes.
- 5) Stop vehicle and turn ignition switch OFF.
- 6) Repeat Step 3) to 5) one time.
- 7) Stop vehicle.
- 8) Check DTC, pending DTC and freeze-frame data.

DTC Troubleshooting

Step	Action	Yes	No
1	<i>Was "A/T System Check" performed?</i>	Go to Step 2.	Go to "A/T System Check".
2	<i>Do you have SUZUKI scan tool?</i>	Go to Step 3.	Go to Step 4.
3	Check transmission range sensor (switch) circuit for operation Check by using SUZUKI scan tool: 1) Connect SUZUKI scan tool to DLC with ignition switch OFF. 2) Turn ignition switch ON and check transmission range signal ("P", "R", "N", "D", "3" or "L") on display when shifting select lever to each range. <i>Is applicable range indicated?</i>	Intermittent trouble. Check for intermittent trouble to "Intermittent and Poor Connection Inspection in Section 00".	Go to Step 5.
4	Check transmission range sensor (switch) circuit for operation Check without using SUZUKI scan tool: 1) Turn ignition switch ON. 2) Check voltage at terminals "E93-1", "E93-8", "E93-8", "E93-18", "E93-19" and "E93-20" respectively with select lever shifted to each range. Taking terminal "E93-1" as an example, is battery voltage will be indicated only when shift lever is shifted to "R" range and 0 V for other ranges as shown in table. Check voltage at other terminals likewise, referring to table. <i>Are check results satisfactory?</i>	Intermittent trouble. Check for intermittent trouble referring to "Intermittent and Poor Connection Inspection in Section 00".	Go to Step 5.

Step	Action	Yes	No
5	Check transmission range sensor (switch) for installation position 1) Check transmission range sensor (switch) for installation position referring to "Transmission Range Sensor Inspection and Adjustment". <i>Is it adjusted correctly?</i>	Go to Step 6.	Adjust transmission range sensor (switch) and recheck.
6	Check select cable for adjustment 1) Check select cable for adjustment referring to "Select Cable Adjustment". <i>Is it adjusted correctly?</i>	Go to Step 7.	Adjust select cable and recheck.
7	Check transmission range sensor (switch) 1) Check transmission range sensor (switch) referring to "Transmission Range Sensor Inspection and Adjustment". <i>Are check results satisfactory?</i>	Transmission range sensor circuit open or shorted to ground. If wires and connections are OK, substitute a known-good TCM and recheck.	Replace transmission range sensor (switch).

		Terminal					
		E93-20	E93-1	E93-8	E93-7	E93-19	E93-18
Select lever position	P	8 – 14 V	0 V	0 V	0 V	0 V	0 V
	R	0 V	8 – 14 V	0 V	0 V	0 V	0 V
	N	0 V	0 V	8 – 14 V	0 V	0 V	0 V
	D or 4	0 V	0 V	0 V	8 – 14 V	0 V	0 V
	3	0 V	0 V	0 V	0 V	8 – 14 V	0 V
	L	0 V	0 V	0 V	0 V	0 V	8 – 14 V

DTC P0711: Transmission Fluid Temperature Sensor Range / Performance

S6JB0B5104022

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Transmission fluid temperature sensor variation is less than specified value even though engine was running for specified time after engine start. (2 driving cycle detection logic)	<ul style="list-style-type: none"> Transmission fluid temperature sensor A or its circuit. TCM

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch OFF.
- 2) Clear DTCs in TCM and ECM memories by using scan tool.
- 3) Start engine and warm it up to normal operating temperature.
- 4) Shift select lever to "D" range.
- 5) Start vehicle and increase vehicle speed to 50 km/h (31 mile/h) or more with throttle position 10% for 30 minutes.
- 6) Stop vehicle and turn ignition switch OFF.
- 7) Repeat Step 3) to 4) one time.
- 8) Stop vehicle.
- 9) Check DTC, pending DTC and freeze-frame data.


DTC Troubleshooting

Step	Action	Yes	No
1	Was "A/T System Check" performed?	Go to Step 2.	Go to "A/T System Check".
2	Inspection transmission fluid temperature sensor A 1) Inspection transmission fluid temperature sensor A referring to "Transmission Fluid Temperature Sensor Inspection". <i>Is check result satisfactory?</i>	Intermittent trouble or faulty TCM. Check for intermittent trouble referring to "Intermittent and Poor Connection Inspection" in Section 00". If OK, substitute a known-good TCM and recheck.	Replace valve body harness including transmission fluid temperature sensor A referring to "Transmission Fluid Temperature Sensor Removal and Installation".

DTC P0712: Transmission Fluid Temperature Sensor "A" Circuit Low

S6JB0B5104023

Wiring Diagram

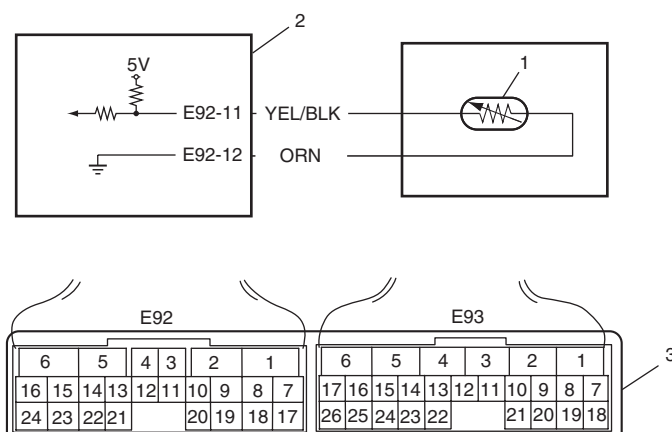

I6JB01510012-01

1. Transmission fluid temperature sensor A	3. Terminal arrangement of TCM connector (viewed from harness side)
2. TCM	

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Transmission temperature sensor terminal voltage is less than 0.05 V for 10 seconds minutes or more after ignition switch ON. (1 driving cycle detection logic)	<ul style="list-style-type: none"> Transmission fluid temperature sensor A or its circuit. TCM

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch OFF.
- 2) Clear DTCs in TCM and ECM memories by using scan tool.
- 3) Start engine.
- 4) Keep engine running at idle speed for 1 minute or more.
- 5) Check DTC, pending DTC and freeze-frame data.

DTC Troubleshooting

Step	Action	Yes	No
1	Was "A/T System Check" performed?	Go to Step 2.	Go to "A/T System Check".
2	Check transmission fluid temperature sensor A circuit for ground short 1) Turn ignition switch OFF. 2) Disconnect TCM connectors from TCM. 3) Check for proper connection to transmission fluid temperature sensor A at terminal "E92-11" and "E92-12". 4) If OK, check continuity between terminal "E92-11" of disconnected harness side TCM connector and ground. <i>Is continuity indicated?</i>	"Transmission fluid temperature sensor A signal" circuit shorted to ground. If circuit is OK, go to Step 3.	Go to Step 3.
3	Inspection transmission fluid temperature sensor A 1) Inspection transmission fluid temperature sensor A referring to "Transmission Fluid Temperature Sensor Inspection". <i>Is check result satisfactory?</i>	Intermittent trouble or faulty TCM. Check for intermittent trouble referring to "Intermittent and Poor Connection Inspection in Section 00". If OK, substitute a known-good TCM and recheck.	Replace valve body harness including transmission fluid temperature sensor A referring to "Transmission Fluid Temperature Sensor Inspection".

DTC P0713: Transmission Fluid Temperature Sensor "A" Circuit High

S6JB0B5104024

Wiring Diagram

Refer to "DTC P0712: Transmission Fluid Temperature Sensor "A" Circuit Low".

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Transmission temperature sensor terminal voltage is less than 4.89 V under vehicle condition shown in the following. <ul style="list-style-type: none"> Ignition switch is turned on for 15 minutes or more Engine coolant temperature is more than 50 °C (122 °F) (1 driving cycle detection logic) 	<ul style="list-style-type: none"> Transmission fluid temperature sensor or its circuit. TCM

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch OFF.
- 2) Clear DTCs in TCM and ECM memories by using scan tool.
- 3) Start engine.
- 4) Start vehicle and increase vehicle speed to about 40 km/h (25 mile/h) for 20 minutes or more.
- 5) Stop vehicle.
- 6) Check DTC, pending DTC and freeze-frame data.


DTC Troubleshooting

Step	Action	Yes	No
1	Was "A/T System Check" performed?	Go to Step 2.	Go to "A/T System Check".
2	Check transmission fluid temperature sensor A circuit for open 1) Turn ignition switch OFF. 2) Disconnect TCM connectors from TCM. 3) Check for proper connection to transmission fluid temperature sensor A at terminal "E92-11" and "E92-12". 4) If OK, check continuity between terminal "E92-11" and "E92-12" of disconnected harness side TCM connector. <i>Is continuity indicated?</i>	Go to Step 3.	Transmission fluid temperature sensor A signal or ground, circuit is open circuit. If circuit is OK, go to Step 4.
3	Check transmission fluid temperature sensor A circuit for IG short 1) Cool down A/T fluid temperature under ambient temperature. 2) Connect TCM connectors to TCM with ignition switch OFF. 3) Turn ignition switch ON. 4) Measure voltage between terminal "E92-11" of TCM connector and ground. <i>Is it 4.89 V or more?</i>	"Transmission fluid temperature sensor A signal" circuit shorted to power supply circuit. If circuit is OK, go to Step 4.	Intermittent trouble or faulty TCM. Check for intermittent trouble referring to "Intermittent and Poor Connection Inspection in Section 00". If OK, substitute a known-good TCM and recheck.
4	Inspection transmission fluid temperature sensor A 1) Inspection transmission fluid temperature sensor A referring to "Transmission Fluid Temperature Sensor Removal and Installation". <i>Is check result satisfactory?</i>	Intermittent trouble or faulty TCM. Check for intermittent trouble referring to "Intermittent and Poor Connection Inspection in Section 00". If OK, substitute a known-good TCM and recheck.	Replace valve body harness including transmission fluid temperature sensor A referring to "Transmission Fluid Temperature Sensor Removal and Installation"

DTC P0717: Input / Turbine Speed Sensor Circuit No Signal

S6JB0B5104025

Wiring Diagram

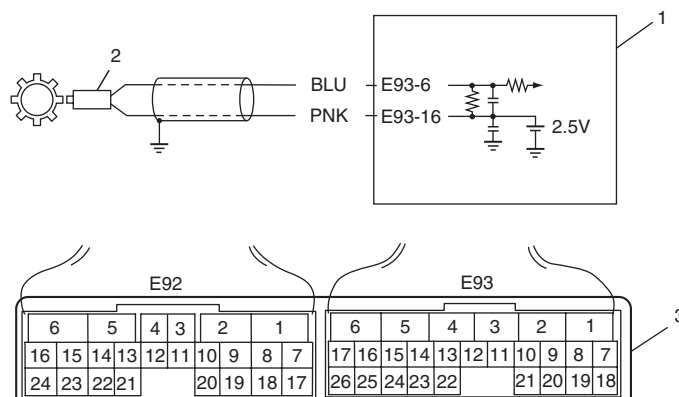

15JB0A510022-01

1. TCM	3. Terminal arrangement of TCM connector (viewed from harness side)
2. Input shaft speed sensor	


DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
No pulse signal of input shaft speed sensor is inputted for 5 pulses period of output shaft speed sensor through it is detected more than 600 rpm. (1 driving cycle detection logic)	<ul style="list-style-type: none"> • Input shaft speed sensor or its circuit malfunction. • Improper input shaft speed sensor installation. • Damaged clutch drum. • Foreign material attachment to sensor or drum. • TCM

DTC Confirmation Procedure


- 1) Connect scan tool to DLC with ignition switch OFF.
- 2) Clear DTCs in TCM and ECM memories by using scan tool.
- 3) Start engine and shift select lever to "D" range.
- 4) Start vehicle and increase vehicle speed to about 40 km/h (25 mile/h) for 3 minutes or more.
- 5) Stop vehicle.
- 6) Check DTC, pending DTC and freeze-frame data.

DTC Troubleshooting

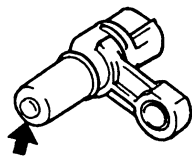Step	Action	Yes	No
1	Was "A/T System Check" performed?	Go to Step 2.	Go to "A/T System Check"
2	Check input shaft speed sensor circuit <ol style="list-style-type: none"> 1) Disconnect TCM connectors with ignition switch OFF. 2) Check for proper connection to input shaft speed sensor at "E93-6" and "E93-16" terminals. 3) If OK, check resistance of sensor circuit. <p>Resistance of input shaft speed sensor circuit Between terminals "E93-6" and "E93-16" of disconnected harness side TCM connector: 560 – 680 Ω at 20 °C (68 °F) Between terminals "E93-16" of disconnected harness side TCM connector and ground: No continuity</p> <p><i>Are check results satisfactory?</i></p>	Go to Step 4.	Go to Step 3.
3	Inspection input shaft speed sensor Inspect input shaft speed sensor referring to "Input Shaft Speed Sensor Inspection". <i>Is check result satisfactory?</i>	Input shaft speed sensor signal or ground circuit is malfunction.	Go to Step 4.
4	Check visually input shaft speed sensor and clutch drum using mirror for following <ul style="list-style-type: none"> • No damage • No foreign material attached • Correct installation  <p>I2RH01510023-01</p> <p><i>Are they in good condition?</i></p>	Intermittent trouble. Check for intermittent trouble referring to "Intermittent and Poor Connection Inspection in Section 00".	Clean, repair or replace.

DTC P0722: Output Speed Sensor Circuit No Signal

S6JB0B5104026

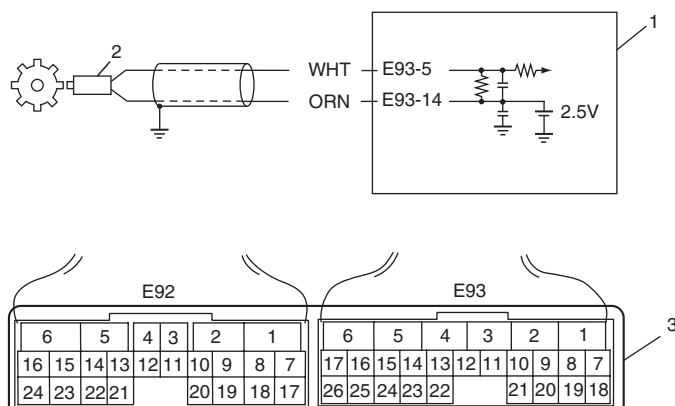Wiring Diagram

I5JB0A510023-01

1. TCM	3. Terminal arrangement of TCM connector (viewed from harness side)
2. Output shaft speed sensor	

DTC Detecting Condition and Trouble Area


DTC Detecting Condition	Trouble Area
No pulse signal of output shaft speed sensor is inputted for 18 pulses period of input shaft speed sensor. (1 driving cycle detection logic)	<ul style="list-style-type: none"> Output shaft speed sensor or its circuit malfunction. Improper output shaft speed sensor installation. Damaged sensor rotor. Foreign material attachment to sensor or rotor. TCM

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch OFF.
- 2) Clear DTCs in TCM and ECM memories by using scan tool.
- 3) Start engine and shift select lever to "D" range.
- 4) Start vehicle and increase vehicle speed to about 80 km/h (50 mile/h) for 2 minutes or more.
- 5) Stop vehicle.
- 6) Check DTC, pending DTC and freeze-frame data.

DTC Troubleshooting

Step	Action	Yes	No
1	Was "A/T System Check" performed?	Go to Step 2.	Go to "A/T System Check".
2	Check input shaft speed sensor circuit <ol style="list-style-type: none"> 1) Disconnect TCM connectors with ignition switch OFF. 2) Check for proper connection to input shaft speed sensor at "E93-5" and "E93-14" terminals. 3) If OK, check resistance of sensor circuit. <p>Resistance of input shaft speed sensor circuit Between terminals "E93-5" and "E93-14" of disconnected harness side TCM connector: 560 – 680 Ω at 20 °C (68 °F) Between terminals "E93-14" of disconnected harness side TCM connector and ground: No continuity</p> <p>Are check results satisfactory?</p>	Go to Step 4.	Go to Step 3.

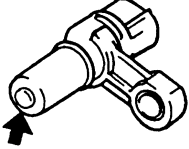Step	Action	Yes	No
3	Inspection output shaft speed sensor Inspect input shaft speed sensor referring to "Output Shaft Speed Sensor Inspection". <i>Is check result satisfactory?</i>	Output shaft speed sensor signal or ground circuit is malfunction.	Go to Step 4.
4	Check visually Output shaft speed sensor and sensor rotor using mirror for following <ul style="list-style-type: none"> No damage No foreign material attached Correct installation  <p style="text-align: right;">I2RH01510023-01</p> <i>Are they in good condition?</i>	Intermittent trouble. Check for intermittent trouble referring to "Intermittent and Poor Connection Inspection in Section 00".	Clean, repair or replace.

DTC P0741 / P0742: TCC Circuit Performance or Stuck OFF / TCC Circuit Stuck ON

S6JB0B5104027

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
DTC P0741: When driving vehicle with 4th or 5th gear in "D" range, difference in revolution between engine and A/T input (input shaft speed) is larger than specification although TCM commanded TCC solenoid to turn ON. (2 driving cycle detection logic)	<ul style="list-style-type: none"> Mechanical malfunction of TCC solenoid valve. Malfunction of valve body assembly. Fluid passage clogged or leaking. Torque converter clutch malfunction.
DTC P0742: When driving vehicle with 2nd, 3rd, 4th or 5th gear in "D" range, difference in revolution between engine and A/T input (input shaft speed) is smaller than specification although TCM commanded TCC solenoid to turn OFF. (2 driving cycle detection logic)	

DTC Confirmation Procedure**▲ WARNING**

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and be very careful during testing to avoid occurrence of an accident.
- Road test should be carried out with 2 persons, a driver and tester, on a level road.

- Connect scan tool to DLC with ignition switch OFF.
- Clear DTCs in TCM and ECM memories by using scan tool.
- Start engine and warm it up to normal operating temperature.
- Shift select lever to "N" and "D" range for each 10 seconds.
- Drive vehicle with 5th in "D" range and lock-up ON for 20 seconds or longer referring to "Automatic Gear Shift Table".
- Drive vehicle with 2nd or 3rd gear in "D" range, 15 – 20% throttle opening and at vehicle speed of 40 km/h (25 mile/h).
- Stop vehicle and turn ignition switch OFF.
- Repeat Step 3) to 6) one time.
- Stop vehicle.
- Check DTC, pending DTC and freeze-frame data.

DTC Troubleshooting

Step	Action	Yes	No
1	Was "A/T System Check" performed?	Go to Step 2.	Go to "A/T System Check".
2	Check TCC solenoid valve for operation referring to "Solenoid Valves (Shift Solenoid-A, Shift Solenoid-B, Shift Solenoid-E, TCC Solenoid, Pressure Control Solenoid-A, Pressure Control Solenoid-B, and Pressure Control Solenoid-C) Inspection". <i>Are they in good condition?</i>	Clean fluid passage or replace valve body assembly.	Replace TCC solenoid valve.

DTC P0751 / P0752: Shift Solenoid-A Performance or Stuck OFF / Shift Solenoid-A Stuck ON

S6JB0B5104028

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
DTC P0751: 4th gear ratio is detected although TCM command is for 1st gear and 3rd gear ratio is detected although TCM command is for 2nd gear while vehicle running at 2 km/h (1.5 mile/h) or more in "D" range after engine being warmed up. (2 driving cycle detection logic)	<ul style="list-style-type: none"> • Mechanical malfunction of shift solenoid valve-A. • Malfunction of valve body assembly. • Fluid passage clogged or leaking. • Mechanical malfunction of automatic transmission (clutch, brake or gear etc.).
DTC P0752: When one of the following condition was detected while vehicle running at 2 km/h (1.5 mile/h) or more in "D" range after engine being warmed up. <ul style="list-style-type: none"> • 2nd gear ratio is detected although TCM command is for 3rd gear and 1st gear is detected although TCM command is for 4th gear (See table below *1). Or <ul style="list-style-type: none"> • 2nd gear ratio is detected although TCM command is for 3rd gear and Neutral gear is detected although TCM command is for 5th gear (See table below *2). Or <ul style="list-style-type: none"> • 1st gear ratio is detected although TCM command is for 4th gear and Neutral gear is detected although TCM command is for 5th gear (See table below *3). (2 driving cycle detection logic)	

Table for detecting condition

TCM output gear position		1st	2nd	3rd	4th	5th
Actual gear position	Stuck OFF (DTC P0751)	4th	3rd	3rd	4th	5th
	Stuck ON (DTC P0752)	1st	2nd	2nd*1, *2	1st*1, *3	Neutral*2, *3

DTC Confirmation Procedure

⚠ WARNING

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and be very careful during testing to avoid occurrence of an accident.
- Road test should be carried out with 2 persons, a driver and tester, on a level road.

- 1) Connect scan tool to DLC with ignition switch OFF.
- 2) Clear DTCs in TCM and ECM memories by using scan tool.
- 3) Start engine and warm it up to normal operating temperature.
- 4) Shift select lever to "N" and "D" range for each 10 seconds.
- 5) Start vehicle and increase vehicle speed to 65 km/h (40 mile/h) with throttle position 10% or more.
- 6) Stop vehicle and turn ignition switch OFF.
- 7) Repeat Step 3) to 5) one time.
- 8) Stop vehicle.
- 9) Check DTC, pending DTC and freeze-frame data.

DTC Troubleshooting

Step	Action	Yes	No
1	Was "A/T System Check" performed?	Go to Step 2.	Go to "A/T System Check".
2	Check shift solenoid valve-A for operation referring to "Solenoid Valves (Shift Solenoid-A, Shift Solenoid-B, Shift Solenoid-E, TCC Solenoid, Pressure Control Solenoid-A, Pressure Control Solenoid-B, and Pressure Control Solenoid-C) Inspection". Are they in good condition?	Clean fluid passage or replace valve body assembly.	Replace shift solenoid valve-A.

DTC P0756 / P0757: Shift Solenoid-B Performance or Stuck OFF / Shift Solenoid-B Stuck ON

S6JB0B5104029

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
DTC P0756: Gear ratio is detected although TCM command is for 2nd gear and 4th gear ratio is detected although TCM command is for 3rd gear while vehicle running at 2 km/h (1.5 mile/h) or more in "D" range after engine being warmed up. (2 driving cycle detection logic)	<ul style="list-style-type: none"> • Mechanical malfunction of shift solenoid valve-B. • Malfunction of valve body assembly. • Fluid passage clogged or leaking. • Mechanical malfunction of automatic transmission (clutch, brake or gear etc.).
DTC P0757: When one of the following condition was detected while vehicle running at 2 km/h (1.5 mile/h) or more in "D" range after engine being warmed up. <ul style="list-style-type: none"> • 2nd gear ratio is detected although TCM command is for 1st gear and Neutral gear is detected although TCM command is for 5th gear (See table below *1). Or <ul style="list-style-type: none"> • 3rd gear ratio is detected although TCM command is for 4th gear and Neutral gear is detected although TCM command is for 5th gear (See table below *2). Or <ul style="list-style-type: none"> • 2nd gear ratio is detected although TCM command is 1st gear and 3rd gear ratio is detected although TCM command is 4th gear. (2 driving cycle detection logic)	

Table for detecting condition

TCM output gear position		1st	2nd	3rd	4th	5th
Actual gear position	Stuck OFF (DTC P0756)	1st	1st	4th	4th	5th
	Stuck ON (DTC P0757)	2nd*1, *3	2nd	3rd	3rd*2, *3	Neutral*1, *2

DTC Confirmation Procedure**⚠ WARNING**

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and be very careful during testing to avoid occurrence of an accident.
- Road test should be carried out with 2 persons, a driver and tester, on a level road.

- 1) Connect scan tool to DLC with ignition switch OFF.
- 2) Clear DTCs in TCM and ECM memories by using scan tool.
- 3) Start engine and warm it up to normal operating temperature.
- 4) Shift select lever to “N” and “D” range for each 10 seconds.
- 5) Start vehicle and increase vehicle speed to 65 km/h (40 mile/h) with throttle position 10% or more.
- 6) Stop vehicle and turn ignition switch OFF.
- 7) Repeat Step 3) to 5) one time.
- 8) Stop vehicle.
- 9) Check DTC, pending DTC and freeze-frame data.

DTC Troubleshooting

Step	Action	Yes	No
1	Was “A/T System Check” performed?	Go to Step 2.	Go to “A/T System Check”.
2	Check shift solenoid valve-B for operation referring to “Solenoid Valves (Shift Solenoid-A, Shift Solenoid-B, Shift Solenoid-E, TCC Solenoid, Pressure Control Solenoid-A, Pressure Control Solenoid-B, and Pressure Control Solenoid-C) Inspection”. Are they in good condition?	Clean fluid passage or replace valve body assembly.	Replace shift solenoid valve-B.

DTC P0771 / P0772: Shift Solenoid-E Performance or Stuck OFF / Shift Solenoid-E Stuck ON

S6JB0B5104030

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
DTC P0771: 4th gear ratio is detected although TCM command is for 5th gear while vehicle running at 2 km/h (1.5 mile/h) or more in "D" range after engine being warmed up. (2 driving cycle detection logic)	<ul style="list-style-type: none"> • Mechanical malfunction of shift solenoid valve-E. • Malfunction of valve body assembly. • Fluid passage clogged or leaking. • Mechanical malfunction of automatic transmission (clutch, brake or gear etc.).
DTC P0772: TCM detected the turn rise of input speed over the specified value when upshifting 1st to 2nd gear. (2 driving cycle detection logic)	

Table for detecting condition

TCM output gear position		1st	2nd	3rd	4th	5th
Actual gear position	Stuck OFF (DTC P0771)	1st	2nd	3rd	4th	4th
	Stuck ON (DTC P0772)	1st	2nd	3rd	4th	5th

DTC Confirmation Procedure**▲ WARNING**

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and be very careful during testing to avoid occurrence of an accident.
- Road test should be carried out with 2 persons, a driver and tester, on a level road.

- 1) Connect scan tool to DLC with ignition switch OFF.
- 2) Clear DTCs in TCM and ECM memories by using scan tool.
- 3) Start engine and warm it up to normal operating temperature.
- 4) Shift select lever to "N" and "D" range for each 10 seconds.
- 5) Start vehicle and increase vehicle speed to 65 km/h (40 mile/h) with throttle position 10% or more.
- 6) Stop vehicle.
- 7) Start vehicle and increase vehicle speed to 65 km/h (40 mile/h) with throttle position 10% or more.
- 8) Stop vehicle and turn ignition switch OFF.
- 9) Repeat Step 3) to 7) one time.
- 10) Stop vehicle.
- 11) Check DTC, pending DTC and freeze-frame data.

DTC Troubleshooting

Step	Action	Yes	No
1	Was "A/T System Check" performed?	Go to Step 2.	Go to "A/T System Check".
2	Check shift solenoid valve-E for operation referring to "Solenoid Valves (Shift Solenoid-A, Shift Solenoid-B, Shift Solenoid-E, TCC Solenoid, Pressure Control Solenoid-A, Pressure Control Solenoid-B, and Pressure Control Solenoid-C) Inspection". Are they in good condition?	Clean fluid passage or replace valve body assembly.	Replace shift solenoid valve-E.

DTC P0781: 1-2 Shift**DTC Detecting Condition and Trouble Area**

DTC Detecting Condition	Trouble Area
DTC P0781: When one of the following condition was detected while vehicle running at 2 km/h (1.5 mile/h) or more in "D" range after engine being warmed up. <ul style="list-style-type: none"> 1st gear ratio is detected although TCM command is for 2nd gear and 4th gear is detected although TCM command is for 4th gear (See table below *1). Or <ul style="list-style-type: none"> 1st gear ratio is detected although TCM command is for 2nd gear and Neutral gear is detected although TCM command is for 5th gear (See table below *2). (2 driving cycle detection logic)	<ul style="list-style-type: none"> Mechanical malfunction of 1-2 shift valve. Malfunction of valve body assembly. Mechanical malfunction of automatic transmission (clutch, brake or gear etc.).

Table for detecting condition

TCM output gear position		1st	2nd	3rd	4th	5th
Actual gear position	1-2 Shift (DTC P0781)	1st	1st*1, *2	3rd	4th*1	Neutral*2

DTC Confirmation Procedure**▲ WARNING**

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and be very careful during testing to avoid occurrence of an accident.
- Road test should be carried out with 2 persons, a driver and tester, on a level road.

- 1) Connect scan tool to DLC with ignition switch OFF.
- 2) Clear DTCs in TCM and ECM memories by using scan tool.
- 3) Start engine and warm it up to normal operating temperature.
- 4) Shift select lever to "N" and "D" range for each 10 seconds.
- 5) Start vehicle and increase vehicle speed to 65 km/h (40 mile/h) with throttle position 10% or more.
- 6) Stop vehicle.
- 7) Start vehicle and increase vehicle speed to 65 km/h (40 mile/h) with throttle position 10% or more.
- 8) Stop vehicle and turn ignition switch OFF.
- 9) Repeat Step 3) to 7) one time.
- 10) Stop vehicle.
- 11) Check DTC, pending DTC and freeze-frame data.

DTC Troubleshooting

Step	Action	Yes	No
1	Was "A/T System Check" performed?	Repair or replace transmission valve body assembly.	Go to "A/T System Check".

DTC P0797: Pressure Control Solenoid “C” Stuck ON

S6JB0B5104032

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
DTC P0797: 4th gear ratio is detected although TCM command is for 4th gear and Neutral gear is detected although TCM command is for 5th gear while vehicle running at 2 km/h (1.5 mile/h) or more in “D” range after engine being warmed up. (2 driving cycle detection logic)	<ul style="list-style-type: none"> • Mechanical malfunction of pressure control solenoid valve-C. • Malfunction of valve body assembly. • Fluid passage clogged or leaking. • Mechanical malfunction of automatic transmission.

Table for detecting condition

TCM output gear position		1st	2nd	3rd	4th	5th
Actual gear position	Stuck ON (DTC P0797)	1st	2nd	3rd	4th	Neutral

DTC Confirmation Procedure**⚠ WARNING**

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and be very careful during testing to avoid occurrence of an accident.
- Road test should be carried out with 2 persons, a driver and tester, on a level road.

- 1) Connect scan tool to DLC with ignition switch OFF.
- 2) Clear DTCs in TCM and ECM memories by using scan tool.
- 3) Start engine and warm it up to normal operating temperature.
- 4) Shift select lever to “N” and “D” range for each 10 seconds.
- 5) Start vehicle and increase vehicle speed to 65 km/h (40 mile/h) with throttle position 10% or more.
- 6) Stop vehicle and turn ignition switch OFF.
- 7) Repeat Step 3) to 5) one time.
- 8) Stop vehicle.
- 9) Check DTC, pending DTC and freeze-frame data.


DTC Troubleshooting

Step	Action	Yes	No
1	Was “A/T System Check” performed?	Go to Step 2.	Go to “A/T System Check”.
2	Check pressure control solenoid valve-C for operation referring to “Solenoid Valves (Shift Solenoid-A, Shift Solenoid-B, Shift Solenoid-E, TCC Solenoid, Pressure Control Solenoid-A, Pressure Control Solenoid-B, and Pressure Control Solenoid-C) Inspection”. <i>Are they in good condition?</i>	Clean fluid passage or replace valve body assembly.	Replace pressure control solenoid valve-C.

DTC P0962 / P0966 / P0970: Pressure Control Solenoid “A” Control Circuit Low / Pressure Control Solenoid “B” Control Circuit Low / Pressure Control Solenoid “C” Control Circuit Low

S6JB0B5104033

Wiring Diagram

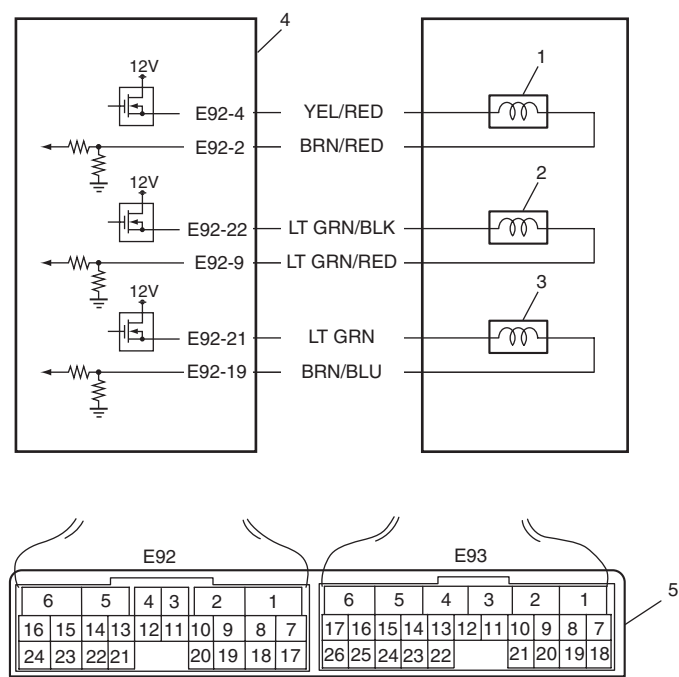

I6JB01510013-01

1. Pressure control solenoid valve-A	3. Pressure control solenoid valve-C	5. Terminal arrangement of TCM connector (viewed from harness side)
2. Pressure control solenoid valve-B	4. TCM	

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Pressure control solenoid valve output voltage is too low comparing with TCM command value. (1 driving cycle detection logic)	<ul style="list-style-type: none">Pressure control solenoid valve circuit open or shorted to ground.Malfunction of pressure control solenoid valve.TCM

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch OFF.
- 2) Clear DTCs in TCM and ECM memories by using scan tool.
- 3) Start engine.
- 4) Keep engine running at idle speed for 30 seconds or more.
- 5) Check DTC, pending DTC and freeze-frame data.

DTC Troubleshooting

Step	Action	Yes	No
1	Was "A/T System Check" performed?	Go to Step 2.	Go to "A/T System Check".
2	Check pressure control solenoid valve circuit for ground short 1) Disconnect TCM connectors. 2) Check for proper connection to TCM at terminals "E92-2" and "E92-4" (for pressure control solenoid valve-A), "E92-9" and "E92-22" (for pressure control solenoid valve-B) or "E92-19" and "E92-21" (for pressure control solenoid valve-C). 3) If connection is OK, check continuity between terminal "E92-2" (for pressure control solenoid valve-A), "E92-9" (for pressure control solenoid valve-B) or "E92-19" (for pressure control solenoid valve-C) of disconnected harness side TCM connector and ground. <i>Is continuity indicated?</i>	Pressure control solenoid valve-A, -B or -C control or ground circuit is shorted to ground circuit. If circuit is OK, go to Step 4.	Go to Step 3.
3	Check pressure control solenoid valve circuit for open 1) Check resistance between terminals "E92-2" and "E92-4" (for pressure control solenoid valve-A), "E92-9" and "E92-22" (for pressure control solenoid valve-B) or "E92-19" and "E92-21" (for pressure control solenoid valve-C) of disconnected harness side TCM connector. <i>Is it infinity?</i>	Pressure control solenoid valve-A, -B or -C control or ground circuit is open circuit. If circuit is OK, go to step 4.	Go to Step 4.
4	Inspection pressure control solenoid valve Inspection pressure control solenoid valve referring to "Solenoid Valves (Shift Solenoid-A, Shift Solenoid-B, Shift Solenoid-E, TCC Solenoid, Pressure Control Solenoid-A, Pressure Control Solenoid-B, and Pressure Control Solenoid-C) Inspection" <i>Is check results satisfactory?</i>	Intermittent trouble or faulty TCM. Check for intermittent trouble referring "Intermittent and Poor Connection Inspection in Section 00". If OK, substitute a known-good TCM and recheck.	Replace defective pressure control solenoid valve referring "Solenoid Valves (Shift Solenoid-A, Shift Solenoid-B, Shift Solenoid-E, TCC Solenoid, Pressure Control Solenoid-A, Pressure Control Solenoid-B, and Pressure Control Solenoid-C) Removal and Installation".

DTC P0963 / P0967 / P0971: Pressure Control Solenoid “A” Control Circuit High / Pressure Control Solenoid “B” Control Circuit High / Pressure Control Solenoid “C” Control Circuit High

S6JB0B5104034

Wiring Diagram

Refer to “DTC P0962 / P0966 / P0970: Pressure Control Solenoid “A” Control Circuit Low / Pressure Control Solenoid “B” Control Circuit Low / Pressure Control Solenoid “C” Control Circuit Low”

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Pressure control solenoid valve output voltage is too high comparing with TCM command value. (1 driving cycle detection logic)	<ul style="list-style-type: none"> • Pressure control solenoid valve circuit shorted to power circuit. • Pressure control solenoid valve malfunction. • TCM

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch OFF.
- 2) Clear DTCs in TCM and ECM memories by using scan tool.
- 3) Start engine.
- 4) Keep engine running at idle speed for 10 seconds or more.
- 5) Check DTC, pending DTC and freeze-frame data.


DTC Troubleshooting

Step	Action	Yes	No
1	<i>Was “A/T System Check” performed?</i>	Go to Step 2.	Go to “A/T System Check”.
2	Check pressure control solenoid valve circuit for power supply short 1) Disconnect TCM connectors. 2) Check for proper connection to TCM at terminals “E92-2” and “E92-4” (for pressure control solenoid valve-A), “E92-9” and “E92-22” (for pressure control solenoid valve-B) or “E92-19” and “E92-21” (for pressure control solenoid valve-C). 3) If connection is OK, turn ignition switch ON and measure voltage between terminal “E92-2” (for pressure control solenoid valve-A), “E92-9” (for pressure control solenoid valve-B) or “E92-19” (for pressure control solenoid valve-C) of disconnected harness side TCM connector and ground. <i>Is it 0 – 2 V?</i>	Go to Step 3.	Pressure control solenoid valve-A, -B or -C control or ground circuit is shorted to power supply circuit.
3	Inspection pressure control solenoid valve Inspection pressure control solenoid valve referring to “Solenoid Valves (Shift Solenoid-A, Shift Solenoid-B, Shift Solenoid-E, TCC Solenoid, Pressure Control Solenoid-A, Pressure Control Solenoid-B, and Pressure Control Solenoid-C) Inspection” <i>Is check results satisfactory?</i>	Intermittent trouble or faulty TCM. Check for intermittent trouble referring to “Intermittent and Poor Connection Inspection in Section 00”. If OK, substitute a known-good TCM and recheck.	Replace defective pressure control solenoid valve referring “Solenoid Valves (Shift Solenoid-A, Shift Solenoid-B, Shift Solenoid-E, TCC Solenoid, Pressure Control Solenoid-A, Pressure Control Solenoid-B, and Pressure Control Solenoid-C) Removal and Installation”.

DTC P0973 / P0976 / P0985: Shift Solenoid “A” Control Circuit Low / Shift Solenoid “B” Control Circuit Low / Shift Solenoid “E” Control Circuit Low

S6JB0B5104035

Wiring Diagram

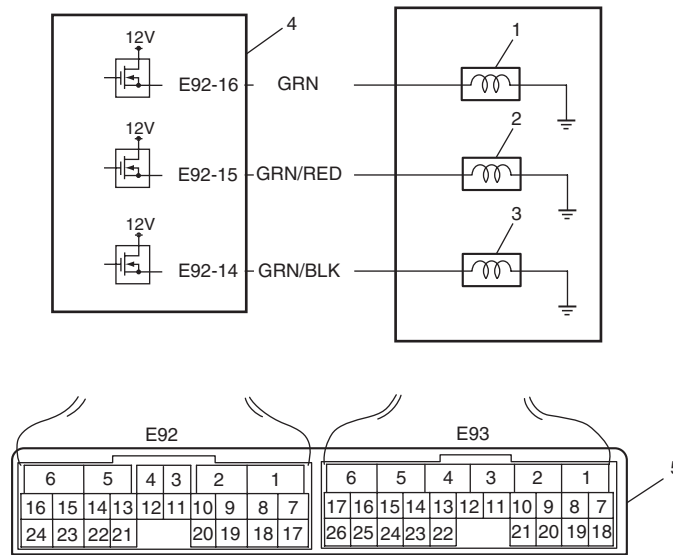

I6JB01510014-01

1. Shift solenoid valve-A	3. Shift solenoid valve-E	5. Terminal arrangement of TCM connector (viewed from harness side)
2. Shift solenoid valve-B	4. TCM	

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Voltage of shift solenoid valve TCM terminal is low although TCM is commanding shift solenoid to turn ON. (1 driving cycle detection logic)	<ul style="list-style-type: none"> Shift solenoid valve circuit shorted to ground. Malfunction of shift solenoid valve. TCM

DTC Confirmation Procedure

DTC P0973 / P0985:

- 1) Connect scan tool to DLC with ignition switch OFF.
- 2) Clear DTCs in TCM and ECM memories by using scan tool.
- 3) Start engine.
- 4) Shift select lever to “N” and “D” range for each 20 seconds.
- 5) Check DTC, pending DTC and freeze-frame data.

DTC P0976:

- 1) Connect scan tool to DLC with ignition switch OFF.
- 2) Clear DTCs in TCM and ECM memories by using scan tool.
- 3) Start engine and shift select lever to “D” range.
- 4) Start vehicle and increase vehicle speed to 60 km/h (37 mile/h) in “D” range.
- 5) Keep on driving in the speed for 20 seconds and decrease vehicle speed gradually.
- 6) Stop vehicle.
- 7) Check DTC, pending DTC and freeze-frame data.

DTC Troubleshooting

Step	Action	Yes	No
1	Was "A/T System Check" performed?	Go to Step 2.	Go to "A/T System Check".
2	Check solenoid valve circuit for ground short 1) Disconnect TCM connectors. 2) Check for proper connection to TCM at terminals "E92-16" (for solenoid valve-A), "E92-15" (for solenoid valve-B) or "E92-14" (for solenoid valve-E). 3) If connection is OK, measure resistance between terminal "E92-16" (for solenoid valve-A), "E92-15" (for solenoid valve-B) or "E92-14" (for solenoid valve-E) of disconnected harness side TCM connector and ground. <i>Is it less than 11 Ω?</i>	Solenoid valve-A, -B or -E control circuit is shorted to ground. If circuit is OK, go to step 3.	Go to Step 3.
3	Inspection solenoid valve Inspection pressure control solenoid valve referring to "Solenoid Valves (Shift Solenoid-A, Shift Solenoid-B, Shift Solenoid-E, TCC Solenoid, Pressure Control Solenoid-A, Pressure Control Solenoid-B, and Pressure Control Solenoid-C) Inspection". <i>Is check results satisfactory?</i>	Intermittent trouble or faulty TCM. Check for intermittent trouble referring to "Intermittent and Poor Connection Inspection in Section 00". If OK, substitute a known-good TCM and recheck.	Replace defective solenoid valve referring "Solenoid Valves (Shift Solenoid-A, Shift Solenoid-B, Shift Solenoid-E, TCC Solenoid, Pressure Control Solenoid-A, Pressure Control Solenoid-B, and Pressure Control Solenoid-C) Removal and Installation".

DTC P0974 / P0977 / P0986: Shift Solenoid "A" Control Circuit High / Shift Solenoid "B" Control Circuit High / Shift Solenoid "E" Control Circuit High

S6JB0B5104036

Wiring Diagram

Refer to "DTC P0973 / P0976 / P0985: Shift Solenoid "A" Control Circuit Low / Shift Solenoid "B" Control Circuit Low / Shift Solenoid "E" Control Circuit Low"

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Voltage of shift solenoid valve TCM terminal is high although TCM is commanding shift solenoid to turn OFF. (1 driving cycle detection logic)	<ul style="list-style-type: none"> Shift solenoid valve circuit open or shorted to power circuit. Malfunction of shift solenoid valve. TCM

DTC Confirmation Procedure

⚠ WARNING

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and be very careful during testing to avoid occurrence of an accident.
- Road test should be carried out with 2 persons, a driver and tester, on a level road.

- 1) Connect scan tool to DLC with ignition switch OFF.
- 2) Clear DTCs in TCM and ECM memories by using scan tool.
- 3) Start engine and shift select lever to "D" range.
- 4) Start vehicle and increase vehicle speed to 60 km/h (37 mile/h) in "D" range.
- 5) Keep on driving in the speed for 20 seconds and decrease vehicle speed gradually.
- 6) Stop vehicle.
- 7) Check DTC, pending DTC and freeze-frame data.

DTC Troubleshooting

Step	Action	Yes	No
1	Was "A/T System Check" performed?	Go to Step 2.	Go to "A/T System Check".
2	Check solenoid valve circuit for power supply short <ol style="list-style-type: none"> 1) Disconnect TCM connectors. 2) Check for proper connection to TCM at terminals "E92-16" (for solenoid valve-A), "E92-15" (for solenoid valve-B) or "E92-14" (for solenoid valve-E). 3) If connection is OK, turn ignition switch ON and measure voltage between terminal "E92-16" (for solenoid valve-A), "E92-15" (for solenoid valve-B) or "E92-14" (for solenoid valve-E) of disconnected harness side TCM connector and ground. <p>Is it 0 – 2 V?</p>	Solenoid valve-A, -B or -E control circuit is shorted to power supply circuit.	Go to Step 3.
3	Check solenoid valve circuit for open <ol style="list-style-type: none"> 1) Check continuity between terminal "E92-16" (for solenoid valve-A), "E92-15" (for solenoid valve-B) or "E92-14" (for solenoid valve-E) of disconnected harness side TCM connector and ground. <p>Is it infinity?</p>	Solenoid valve-A, -B or -E control circuit is open circuit. If circuit is OK, go to step 4.	Go to Step 4.
4	Inspection solenoid valve Inspection solenoid valve referring to "Solenoid Valves (Shift Solenoid-A, Shift Solenoid-B, Shift Solenoid-E, TCC Solenoid, Pressure Control Solenoid-A, Pressure Control Solenoid-B, and Pressure Control Solenoid-C) Inspection". <p>Is check results satisfactory?</p>	Intermittent trouble or faulty TCM. Check for intermittent trouble referring to "Intermittent and Poor Connection Inspection in Section 00". If OK, substitute a known-good TCM and recheck.	Replace defective solenoid valve referring "Solenoid Valves (Shift Solenoid-A, Shift Solenoid-B, Shift Solenoid-E, TCC Solenoid, Pressure Control Solenoid-A, Pressure Control Solenoid-B, and Pressure Control Solenoid-C) Removal and Installation".

DTC P1702: Internal Control Module Memory Check Sum Error

S6JB0B5104037

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
An internal TCM fault is detected by TCM (1 driving cycle detection logic)	<ul style="list-style-type: none"> • TCM

NOTE

DTC P1702 can never be cleared once it has been set.

- 1) Ignition switch OFF.
- 2) Replace TCM.
- 3) Repeat "A/T System Check".

DTC P1703: CAN Invalid Data - TCM

S6JB0B5104038

DTC Detecting Condition and Trouble Area


DTC Detecting Condition	Trouble Area
When abnormality on the gear shift control signal from ECM is detected by TCM, TCM sets DTC P1703. (1 driving cycle detection logic)	<ul style="list-style-type: none"> • Engine control system • TCM • ECM

DTC Troubleshooting

Step	Action	Yes	No
1	Was "A/T System Check" performed?	Go to Step 2.	Go to "A/T System Check".
2	DTC Check Check DTC in ECM referring to "DTC Check in Section 1A". <i>Is there any DTC(s)?</i>	Go to applicable DTC troubleshooting.	Substitute a known-good ECM and recheck.

DTC P1723: Range Select Switch Malfunction

S6JB0B5104039

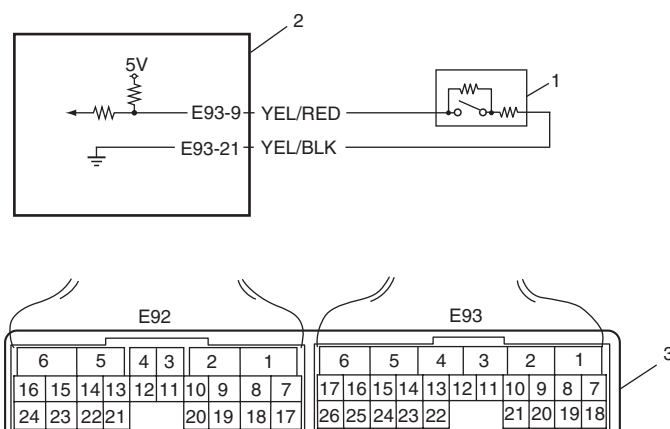Wiring Diagram

I6JB01510016-01

1. "4" position switch	3. Terminal arrangement of TCM connector (viewed from harness side)
2. TCM	

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
"4" position switch signal is inputted out of specified value. (1 driving cycle detection logic but MIL does not light up)	<ul style="list-style-type: none"> "4" position switch or its circuit malfunction TCM

DTC Confirmation Procedure


- 1) Connect scan tool to DLC with ignition switch OFF.
- 2) Clear DTCs in TCM and ECM memories by using scan tool.
- 3) Start engine and run it for 20 sec. or more.
- 4) Check DTC, pending DTC and freeze-frame data.

DTC Troubleshooting

Step	Action	Yes	No
1	Was "A/T System Check" performed?	Go to Step 2.	Go to "A/T System Check".
2	Check "4" position switch circuit 1) Disconnect TCM connector with ignition switch OFF. 2) Check for proper connection to "4" position switch at "E93-9" and "E93-21" terminals. 3) If OK, check resistance of switch circuit between terminals "E93-9" and "E93-21" of disconnected harness side TCM connector. "4" position switch circuit Shift selector lever to "P", "N" or "D" range: 3.96 – 4.04 kΩ Shift selector lever to "R", "4", "3", or "L", range: 0.99 – 1.01 kΩ <i>Is check result as specified?</i>	Intermittent trouble or faulty TCM. Check for intermittent trouble referring to "Intermittent and Poor Connection Inspection in Section 00". If OK, substitute a known-good TCM and recheck.	Go to Step 3.
3	Check "4" position switch Check "4" position switch referring to "4" Position Switch Inspection" <i>Is check result as specified?</i>	Replace "4" position switch.	"4" position switch circuit is malfunction.

DTC P1874: 4L Switch Circuit Malfunction (Short)

S6JB0B5104040

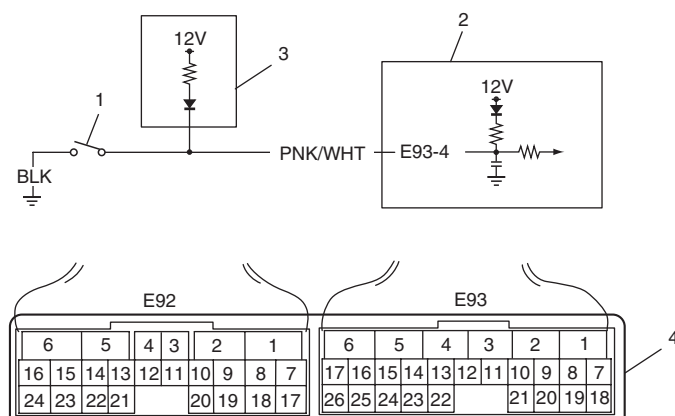Wiring Diagram

I5JB0A510026-01

1. 4L/N switch	3. 4WD control module
2. TCM	4. Terminal arrangement of TCM connector (viewed from harness side)

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Actual transfer position is 4H although TCM detected 4L/N switch is turned ON with vehicle speed between 29 km/h (18 mile/h) and 88 km/h (55 mile/h). (1 driving cycle detection logic)	<ul style="list-style-type: none"> 4L/N switch or its circuit TCM

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch OFF.
- 2) Clear DTCs in TCM and ECM memories by using scan tool.
- 3) Start engine and transfer position switch to "4H" position.
- 4) Keep engine running at idle speed for 10 seconds or more with select "D" range.
- 5) Start vehicle and increase vehicle speed to about 60 km/h (37 mile/h) for 2 minutes.
- 6) Stop vehicle.
- 7) Check DTC, pending DTC and freeze frame data.

DTC Troubleshooting

Step	Action	Yes	No
1	Vehicle speed signal check 1) Check DTC in ECM and ABS control module referring to "DTC Check in Section 1A" and "DTC Check in Section 4E". <i>Is there DTC P0500: Vehicle speed sensor (VSS) malfunction in ECM and/or DTC C1021, C1022, C1025, C1026, C1031, C1032, C1035 and/or C1036 in ABS control module?</i>	Go to applicable DTC diag. flow.	Go to Step 2.
2	<i>Was "A/T System Check" performed?</i>	Go to Step 2.	Go to "A/T System Check".
3	<i>Do you have SUZUKI scan tool?</i>	Go to Step 4.	Go to Step 5.

Step	Action	Yes	No
4	4L switch and its circuit check 1) Connect SUZUKI scan tool to DLC with ignition switch OFF. 2) Turn ignition switch ON. 3) Select "DATA LIST" mode on scan tool. 4) Check 4L/N switch signal (ON or OFF) on display when turning transfer position switch to each position. <u>4L/N switch specifications (scan tool)</u> "4H" position: OFF "4L" position: ON <i>Is OFF / ON displayed as described above?</i>	Intermittent trouble of faulty TCM. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00". If OK, substitute a known-good TCM and recheck.	Go to Step 6.
5	4L/N switch and its circuit check 1) Turn ignition switch ON. 2) Check terminal voltage "E93-4" of TCM connector connected when turning transfer position switch to each position. <u>4L/N switch specifications</u> "4H" position: 10 – 14 V "4L" position: 0 – 1 V <i>Is voltage as specified?</i>	Intermittent trouble or faulty TCM. Check for intermittent trouble referring to "Intermittent and Poor Connection Inspection in Section 00". If OK, substitute a known-good TCM and recheck.	Go to Step 6.
6	4L/N switch check 1) Check 4L/N switch for operation referring to "Transfer Assembly Inspection in Section 3C". <i>Is check result satisfactory?</i>	4L/N circuit is shorted to ground. If wire and connections are OK, substitute a known-good TCM and recheck.	Replace 4L/N switch.

DTC P1875: 4L Switch Circuit Malfunction (Open)

S6JB0B5104041

Wiring Diagram

Refer to "DTC P1874: 4L Switch Circuit Malfunction (Short)".

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Actual transfer position is 4L although TCM detected low switch is turned OFF with vehicle speed between 29 km/h (18 mile/h) and 88 km/h (55 mile/h). (1 driving cycle detection logic)	<ul style="list-style-type: none"> • 4L/N switch or its circuit • TCM

DTC Confirmation Procedure


- 1) Connect scan tool to DLC with ignition switch OFF.
- 2) Clear DTCs in TCM and ECM memories by using scan tool.
- 3) Start engine and transfer position switch to "4L" position.
- 4) Keep engine running at idle speed for 10 seconds or more with select lever "D" range.
- 5) Start vehicle and increase vehicle speed to about 50 km/h (31 mile/h) in "4L" position for 2 minutes.
- 6) Stop vehicle.
- 7) Check DTC, pending DTC and freeze-frame data.

DTC Troubleshooting

Step	Action	Yes	No
1	Vehicle speed signal check 1) Check DTC in ECM and ABS control module referring to "DTC Check in Section 1A" and "DTC Check in Section 4E". <i>Is there DTC P0500: Vehicle speed sensor (VSS) malfunction in ECM and/or DTC C1021, C1022, C1025, C1026, C1031, C1032, C1035 and/or C1036 in ABS control module?</i>	Go to applicable DTC diag. flow.	Go to Step 2.
2	Was "A/T System Check" performed?	Go to Step 3.	Go to "A/T System Check".
3	Do you have SUZUKI scan tool?	Go to Step 4.	Go to Step 5.
4	4L switch and its circuit check 1) Connect SUZUKI scan tool to DLC with ignition switch OFF. 2) Turn ignition switch ON. 3) Select "DATA LIST" mode on scan tool. 4) Check 4L/N switch signal (ON or OFF) on display when turning transfer position switch to each position. <u>4L/N switch specifications</u> "4H" position: OFF "4L" position: ON <i>Is OFF / ON displayed as described above?</i>	Intermittent trouble or faulty TCM. Check for intermittent trouble referring to "Intermittent and Poor Connection Inspection in Section 00". If OK, substitute a known-good TCM and recheck.	Go to Step 6.
5	4L/N switch and its circuit check 1) Turn ignition switch ON. 2) Check terminal voltage "E93-4" of TCM connector connected when turning transfer position switch to each position. <u>4L/N switch specifications</u> "4H" position: 10 – 14 V "4L" position: 0 – 1 V <i>If voltage as specified?</i>	Intermittent trouble or faulty TCM. Check for intermittent trouble referring to "Intermittent and Poor Connection Inspection in Section 00". If OK, substitute a known-good TCM and recheck.	Go to Step 6.
6	4L/N switch check 1) Check 4L/N switch for operation referring to "Transfer Assembly Inspection in Section 3C". <i>Is check result satisfactory?</i>	4L/N switch circuit open. If wire and connections are OK, substitute a known-good TCM and recheck.	Replace 4L/N switch.

DTC P2742: Transmission Fluid Temperature Sensor “B” Circuit Low

S6JB0B5104042

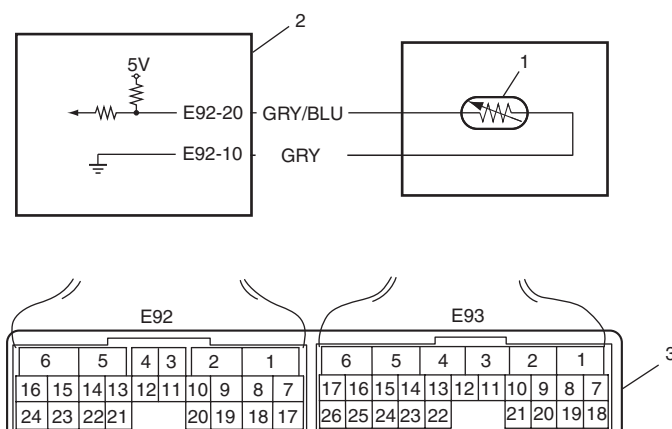Wiring Diagram

I6JB01510015-01

1. Transmission fluid temperature sensor B	3. Terminal arrangement of TCM connector (viewed from harness side)
2. TCM	

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Transmission temperature sensor terminal voltage is less than 0.05 V for 6 minutes or more after ignition switch ON. (1 driving cycle detection logic)	<ul style="list-style-type: none"> Transmission fluid temperature sensor B or its circuit. TCM

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch OFF.
- 2) Clear DTCs in TCM and ECM memories by using scan tool.
- 3) Start engine.
- 4) Keep engine running at idle speed for 1 minutes or more.
- 5) Check DTC, pending DTC and freeze-frame data.

DTC Troubleshooting

Step	Action	Yes	No
1	Was “A/T System Check” performed?	Go to Step 2.	Go to “A/T System Check”.
2	Check transmission fluid temperature sensor B circuit for ground short <ol style="list-style-type: none"> 1) Turn ignition switch OFF. 2) Disconnect TCM connectors from TCM. 3) Check for proper connection to transmission fluid temperature sensor B at terminal “E92-10” and “E92-20”. 4) If OK, check continuity between terminal “E92-20” of disconnected harness side TCM connector and ground. Is continuity indicated?	Transmission fluid temperature sensor B signal circuit shorted to ground.	Go to Step 3.
3	Inspection transmission fluid temperature sensor B <ol style="list-style-type: none"> 1) Inspection transmission fluid temperature sensor B referring to “Transmission Fluid Temperature Sensor Inspection”. Is check result satisfactory?	Intermittent trouble or faulty TCM. Check for intermittent trouble referring to “Intermittent and Poor Connection Inspection in Section 00”. If OK, substitute a known-good TCM and recheck.	Replace valve body harness including transmission fluid temperature sensor B referring to “Transmission Fluid Temperature Sensor Removal and Installation”.

DTC P2743: Transmission Fluid Temperature Sensor “B” Circuit High**Wiring Diagram**

Refer to “DTC P2742: Transmission Fluid Temperature Sensor “B” Circuit Low”

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Transmission temperature sensor terminal voltage is less than 4.89 V under vehicle condition shown in the following. <ul style="list-style-type: none"> Ignition switch is turned on for 15 minutes or more Engine coolant temperature is more than 50 °C (122 °F) (1 driving cycle detection logic) 	<ul style="list-style-type: none"> Transmission fluid temperature sensor B or its circuit. TCM

DTC Confirmation Procedure


- 1) Connect scan tool to DLC with ignition switch OFF.
- 2) Clear DTCs in TCM and ECM memories by using scan tool.
- 3) Start engine and warm it up to normal operating temperature.
- 4) Start vehicle and increase vehicle speed to about 40 km/h (25 mile/h) in “D” range for 20 minutes or more.
- 5) Stop vehicle.
- 6) Check DTC, pending DTC and freeze-frame data.

DTC Troubleshooting

Step	Action	Yes	No
1	<i>Was “A/T System Check” performed?</i>	Go to Step 2.	Go to “A/T System Check”.
2	Check transmission fluid temperature sensor B circuit for open <ol style="list-style-type: none"> 1) Turn ignition switch OFF. 2) Disconnect TCM connectors from TCM. 3) Check for proper connection to transmission fluid temperature sensor B at terminal “E92-10” and “E92-20”. 4) If OK, check continuity between terminal “E92-10” and “E92-20” of disconnected harness side TCM connector. <i>Is continuity indicated?</i>	Go to Step 3.	Transmission fluid temperature sensor B signal or ground circuit is open circuit.
3	Check transmission fluid temperature sensor B circuit for IG short <ol style="list-style-type: none"> 1) Cool down A/T fluid temperature under ambient temperature. 2) Connect TCM connectors to TCM with ignition switch OFF. 3) Turn ignition switch ON. 4) Measure voltage between terminal “E92-20” of TCM connector and ground. <i>Is it 4.89 V or more?</i>	Transmission fluid temperature sensor B signal circuit shorted to power supply circuit. If circuit is OK, go to Step 4.	Intermittent trouble or faulty TCM. Check for intermittent trouble referring to “Intermittent and Poor Connection Inspection in Section 00”. If OK, substitute a known-good TCM and recheck.
4	Inspection transmission fluid temperature sensor B <ol style="list-style-type: none"> 1) Inspection transmission fluid temperature sensor B referring to “Transmission Fluid Temperature Sensor Inspection”. <i>Is check result satisfactory?</i>	Intermittent trouble or faulty TCM. Check for intermittent trouble referring to “Intermittent and Poor Connection Inspection in Section 00”. If OK, substitute a known-good TCM and recheck.	Replace valve body harness including transmission fluid temperature sensor B referring to “Transmission Fluid Temperature Sensor Removal and Installation”.

DTC P2763: Torque Converter Clutch (TCC) Circuit High

S6JB0B5104044

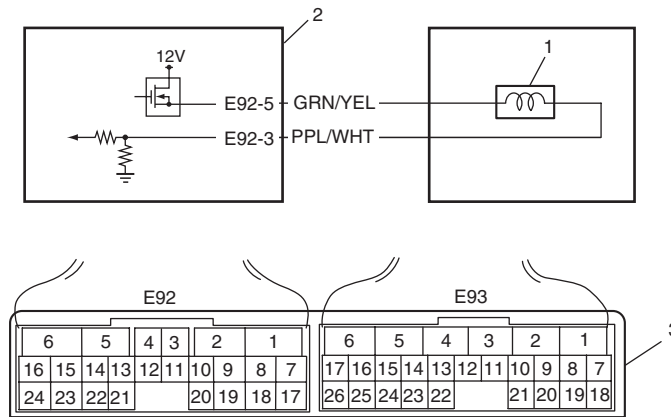Wiring Diagram

I5JB0A510027-01

1. TCC pressure control solenoid valve	3. Terminal arrangement of TCM connector (viewed from harness side)
2. TCM	

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Voltage of TCC pressure control solenoid valve TCM terminal is high although TCM is commanding TCC pressure control solenoid to turn OFF. (1 driving cycle detection logic)	<ul style="list-style-type: none"> TCC pressure control solenoid valve circuit shorted to power circuit. Malfunction of TCC pressure control solenoid valve. TCM

DTC Confirmation Procedure**⚠ WARNING**

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and be very careful during testing to avoid occurrence of an accident.
- Road test should be carried out with 2 persons, a driver and a tester, on a level road.

- Connect scan tool to DLC with ignition switch OFF.
- Clear DTCs in TCM and ECM memories by using scan tool.
- Start engine.
- Keep engine running at idle speed in "P" range for 10 seconds or more.
- Check DTC, pending DTC and freeze-frame data.

DTC Troubleshooting

Step	Action	Yes	No
1	Was "A/T System Check" performed?	Go to Step 2.	Go to "A/T System Check".
2	Check TCC pressure control solenoid valve circuit for power supply short 1) Disconnect TCM connectors. 2) Check for proper connection to TCM at terminal "E92-3" and "E92-5". 3) If connection is OK, turn ignition switch ON and measure voltage between terminal "E92-3" of disconnected harness side TCM connector and ground. <i>Is it 0 – 2 V?</i>	Go to Step 3.	TCC pressure control solenoid valve control or ground circuit is shorted to power supply circuit. If circuit is OK, go to Step 3.
3	Inspection TCC pressure control solenoid valve 1) Inspection TCC pressure control solenoid valve referring to "Solenoid Valves (Shift Solenoid-A, Shift Solenoid-B, Shift Solenoid-E, TCC Solenoid, Pressure Control Solenoid-A, Pressure Control Solenoid-B, and Pressure Control Solenoid-C) Inspection" <i>Is check results satisfactory?</i>	Intermittent trouble or faulty TCM. Check for intermittent trouble referring to "Intermittent and Poor Connection Inspection" in Section 00". If OK, substitute a known-good TCM and recheck.	Replace TCC pressure control solenoid valve referring to "Transmission Fluid Temperature Sensor Removal and Installation".

DTC P2764: Torque Converter Clutch (TCC) Circuit Low

S6JB0B5104045

Wiring Diagram

Refer to "DTC P2763: Torque Converter Clutch (TCC) Circuit High"

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Voltage of TCC pressure control solenoid valve TCM terminal is low although TCM is commanding TCC pressure control solenoid to turn ON. (1 driving cycle detection logic)	<ul style="list-style-type: none"> TCC pressure control solenoid valve circuit open or shorted to ground. Malfuction of TCC pressure control solenoid valve TCM

DTC Confirmation Procedure

▲ WARNING

- When performing a road test, select a place where there is no traffic or possibility of a traffic accident and be very careful during testing to avoid occurrence of an accident.
- Road test should be carried out with 2 persons, a driver and tester, on a level road.

- 1) Connect scan tool to DLC with ignition switch OFF.
- 2) Clear DTCs in TCM and ECM memories by using scan tool.
- 3) Start engine.
- 4) Keep engine running at idle speed in "P" range for 20 seconds or more.
- 5) Check DTC, pending DTC and freeze-frame data.


DTC Troubleshooting

Step	Action	Yes	No
1	Was "A/T System Check" performed?	Go to Step 2.	Go to "A/T System Check".
2	Check TCC pressure control solenoid valve circuit for ground short 1) Disconnect TCM connectors. 2) Check for proper connection to TCM at terminals "E92-3" and "E92-5". 3) If connection is OK, check continuity between terminal "E92-5" of disconnected harness side TCM connector and ground. <i>Is continuity indicated?</i>	TCC pressure control solenoid valve control and ground circuit is shorted to ground. If circuit is OK, go to Step 4.	Go to Step 4.
3	Check TCC pressure control solenoid valve circuit for open 1) Check resistance between terminal "E92-3" and "E92-5" of disconnected harness side TCM connector. <i>Is it infinity?</i>	TCC pressure control solenoid valve control and ground circuit is open. If circuit is OK, go to Step 4.	Go to Step 4.
4	Inspection TCC pressure control solenoid valve 1) Inspection TCC pressure control solenoid valve referring to "Solenoid Valves (Shift Solenoid-A, Shift Solenoid-B, Shift Solenoid-E, TCC Solenoid, Pressure Control Solenoid-A, Pressure Control Solenoid-B, and Pressure Control Solenoid-C) Inspection". <i>Is check results satisfactory?</i>	Intermittent trouble or faulty TCM. Check for intermittent trouble referring to "Intermittent and Poor Connection Inspection in Section 00". If OK, substitute a known-good TCM and recheck.	Replace TCC pressure control solenoid valve referring to "Solenoid Valves (Shift Solenoid-A, Shift Solenoid-B, Shift Solenoid-E, TCC Solenoid, Pressure Control Solenoid-A, Pressure Control Solenoid-B, and Pressure Control Solenoid-C) Removal and Installation".

DTC U0073: Control Module Communication Bus Off

S6JB0B5104046

Wiring Diagram

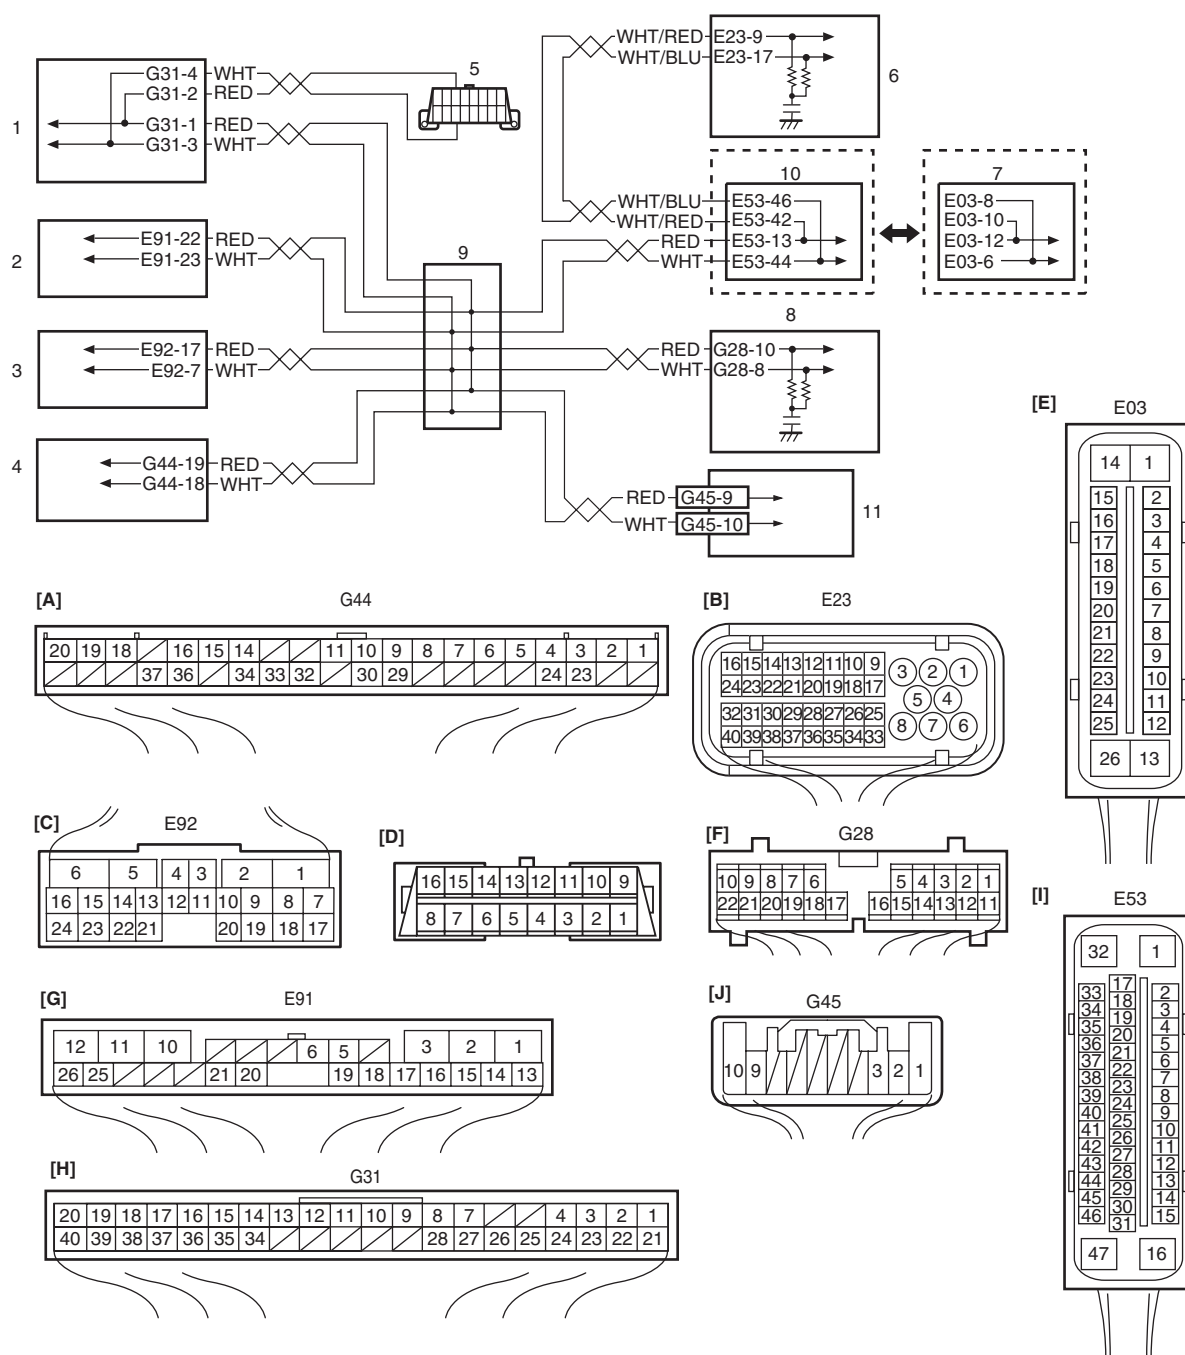

I6JB0B510006-01

[A]: Keyless start control module connector (viewed from harness side)	2. 4WD control module
[B]: ECM connector (viewed from harness side)	3. TCM
[C]: TCM connector (viewed from harness side)	4. Keyless start control module (if equipped)
[D]: DLC connector (viewed from harness side)	5. DLC
[E]: ABS hydraulic unit/control module connector (viewed from harness side)	6. ECM
[F]: Combination meter connector (viewed from harness side)	7. ABS hydraulic unit/control module
[G]: 4WD control module connector (viewed from harness side)	8. Combination meter
[H]: BCM connector (viewed from harness side)	9. Junction connector
[I]: ESP® control module connector (viewed from harness side)	10. ESP® control module (ESP® model)
[J]: Steering angle sensor connector (viewed from harness side)	11. Steering angle sensor (ESP® model)
1: BCM	

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Transmission error that is inconsistent between transmission data and transmission monitor (CAN bus monitor) data is detected more than 7 times continuously. (1 driving cycle detection logic)	<ul style="list-style-type: none">• ECM• TCM• Combination meter• BCM• ABS or ESP® control module• 4WD control module• Keyless start control module (if equipped)• Steering angle sensor (ESP® model)• CAN communication line circuit

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch turned OFF.
- 2) Turn ON ignition switch and clear DTC by using scan tool.
- 3) Start engine and run it for 1 min. or more.
- 4) Check DTC and pending DTC.

DTC Troubleshooting

NOTE

Upon completion of inspection and repair work, perform "Intermittent and Poor Connection Inspection in Section 00" and confirm that the trouble has been corrected.

Step	Action	Yes	No
1	Was "A/T System Check" performed?	Go to Step 2.	Go to "A/T System Check".
2	Control module connector check 1) Check connection of connectors of all control modules communicating by means of CAN. 2) Recheck DTC in TCM. <i>Is there DTC U0073?</i>	Go to Step 3.	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".
3	CAN communication circuit check 1) Turn ignition switch to OFF position. 2) Disconnect connectors of all control modules communicating by means of CAN. 3) Check CAN communication circuit between control modules for open, short and high resistance. <i>Is each CAN communication circuit in good condition?</i>	Go to Step 4.	Repair circuit.
4	DTC check 1) Turn ignition switch to OFF position. 2) Connect connectors of disconnected control modules communicating by means of CAN. 3) Disconnect connector of any one of control module other than TCM. 4) Recheck DTC for TCM. <i>Is DTC U0073 detected?</i>	Disconnect connectors of control modules other than the one whose connector is disconnected in Step 3) one by one and check that DTC U0073 is detected by TCM each time connector is disconnected. When DTC U0073 is not detected by TCM while checking in this way, go to description under "NO" below. If DTC U0073 is detected by TCM even when connectors of all control modules that use CAN communication with TCM are disconnected, substitute a known good TCM and recheck.	Check power and ground circuit of control module disconnected in Step 3). If circuit is OK, substitute a known good control module disconnected in Step 3) and recheck.

DTC U0100: Lost Communication with ECM

S6JB0B5104047

Wiring Diagram

Refer to "DTC U0073: Control Module Communication Bus Off".

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Reception error of communication data for ECM is detected for longer than specified time continuously. (1 driving cycle detection logic)	<ul style="list-style-type: none"> • ECM • ABS or ESP® control module • TCM • CAN communication line circuit

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch turned OFF.
- 2) Turn ON ignition switch and clear DTC by using scan tool.
- 3) Start engine and run it for 1 min. or more.
- 4) Check DTC and pending DTC.

DTC Troubleshooting**NOTE**

Upon completion of inspection and repair work, perform "Intermittent and Poor Connection Inspection in Section 00" and confirm that the trouble has been corrected.

Step	Action	Yes	No
1	Was "A/T System Check" performed?	Go to Step 2.	Go to "A/T System Check".
2	Control module connector check 1) Check connection of connectors of all control modules communicating by means of CAN. 2) Recheck DTC in TCM. <i>Is there DTC U0100?</i>	Go to Step 3.	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".
3	DTC check in ABS or ESP® control module 1) Check DTC in ABS or ESP® control module. <i>Is there DTC U1100?</i>	Go to Step 4.	Go to Step 5.
4	DTC check 1) Check DTC in ECM. <i>Is there DTC U0073?</i>	Go to "DTC U0073: Control Module Communication Bus Off in Section 1A".	Check ECM power and ground circuit. If circuit is OK, CAN communication circuit between ECM and ABS or ESP® control module is open circuit.
5	CAN communication circuit check 1) Turn ignition switch to OFF position. 2) Disconnect connectors of all control modules communicating by means of CAN. 3) Check CAN communication circuit between control modules for open, short and high resistance. <i>Is each CAN communication circuit in good condition?</i>	Check TCM power and ground circuit. If circuit is OK, substitute a known-good TCM and recheck.	Repair circuit.

DTC U0140: Lost Communication with Body Control Module**Wiring Diagram**

Refer to "DTC U0073: Control Module Communication Bus Off".

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Reception error of communication data for BCM is detected for longer than specified time continuously. (1 driving cycle detection logic but MIL does not light up)	<ul style="list-style-type: none"> • BCM • TCM • CAN communication line circuit

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch turned OFF.
- 2) Turn ON ignition switch and clear DTC by using scan tool.
- 3) Start engine and run it for 1 min. or more.
- 4) Check DTC and pending DTC.

DTC Troubleshooting**NOTE**

Upon completion of inspection and repair work, perform "Intermittent and Poor Connection Inspection in Section 00" and confirm that the trouble has been corrected.

Step	Action	Yes	No
1	Was "A/T System Check" performed?	Go to Step 2.	Go to "A/T System Check".
2	Control module connector check 1) Check connection of connectors of all control modules communicating by means of CAN. 2) Recheck DTC in TCM. <i>Is there DTC U0140?</i>	Go to Step 3.	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".
3	DTC check in BCM (bus off) 1) Check DTC in BCM. <i>Is there DTC U1073?</i>	Go to "DTC U1073 (No. 1073): Control Module Communication Bus Off in Section 10B".	Go to Step 4.
4	DTC check 1) Check DTC in ECM. <i>Is there DTC U0140?</i>	Check BCM power and ground circuit. If circuit is OK, substitute a known-good BCM and recheck.	Go to Step 5.
5	CAN communication circuit check 1) Turn ignition switch to OFF position. 2) Disconnect connectors of all control modules communicating by means of CAN. 3) Check CAN communication circuit between control modules for open, short and high resistance. <i>Is each CAN communication circuit in good condition?</i>	Check TCM power and ground circuit. If circuit is OK, substitute a known-good TCM and recheck.	Repair circuit.

Inspection of TCM and Its Circuits

TCM and its circuits can be checked at TCM wiring connectors by measuring voltage, pulse signal and resistance.


⚠ CAUTION

TCM cannot be checked by itself, it is strictly prohibited to connect voltmeter or ohmmeter to TCM with connector disconnected from it.


- 1) Remove TCM (1) from vehicle referring to "Transmission Control Module (TCM) Removal and Installation".
- 2) Connect TCM connectors (2) to TCM.
- 3) Check voltage and/or pulse signal at each terminal of connectors connected using voltmeter (3) and oscilloscope (4).

NOTE

- As each terminal voltage is affected by battery voltage, confirm that it is 11 V or more when ignition switch is ON.
- Voltage with asterisk (*) cannot be measured by voltmeter because it is pulse signal. Check it with oscilloscope if necessary.

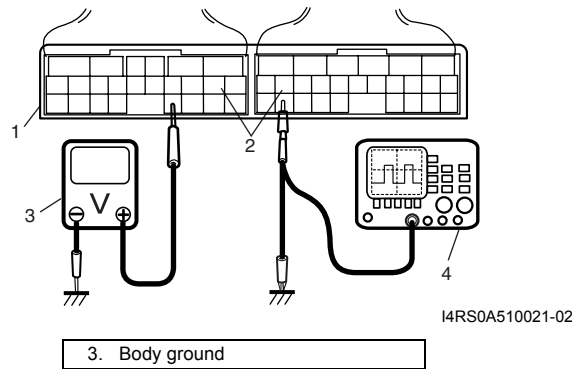

Terminal arrangement of TCM coupler (Viewed from harness side)

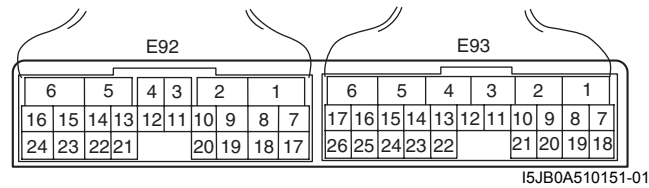

Connector "E92"

Terminal number	Wire color	Circuit	Normal Voltage	Condition
1	BLK/ORN	Ground	0 – 1 V	Ignition switch ON
2	BRN/RED	Pressure control solenoid valve (–)	0.6 – 1.0 V	Ignition switch ON
3	PPL/WHT	TCC pressure control solenoid valve (–)	0.6 – 1.0 V	Ignition switch ON
4	YEL/RED	Pressure control solenoid valve-A (+)	*0 – 0.6 V ↑↓ 10 – 14 V ("Reference Waveform No. 1: ")	Engine running at idling. (Output signal is duty pulse. Duty ratio varies depending on throttle valve opening.)

5A-80 Automatic Transmission/Transaxle:

Terminal number	Wire color	Circuit	Normal Voltage	Condition
5	GRN/YEL	TCC pressure control solenoid valve (+)	*0 – 0.6 V ↑↓ 10 – 14 V ("Reference Waveform No. 2: ")	Engine running at idling. (Output signal is duty pulse. Duty ratio varies depending on torque converter clutch opening condition.)
6	BLK/WHT	Power source	10 – 14 V	Ignition switch ON
7	WHT	CAN communication line (active low signal)	*1.6 – 2.8 V ("Reference Waveform No. 3: ")	Engine running at specified idling speed. (CAN communication signal is pulse. Pulse signal frequency varies depending on engine condition.)
8	—	—	—	—
9	LT GRN/RED	Pressure control solenoid valve-B (–)	0.6 – 1.0 V	Ignition switch ON
10	GRY	Transmission fluid temperature sensor-B (–) (if equipped)	0 – 1 V	Ignition switch ON
11	YEL/BLK	Transmission fluid temperature sensor-A (+)	2.9 – 3.1 V	Ignition switch ON, fluid temperature is 20 °C (68 °F)
			0.3 – 0.5 V	Ignition switch ON, fluid temperature is 100 °C (212 °F)
12	ORN	Transmission fluid temperature sensor-A (–)	0 – 1 V	Ignition switch ON
13	—	—	—	—
14	GRN/RED	Shift solenoid valve-E	0 – 1 V	Ignition switch ON
15	GRN/RED	Shift solenoid valve-B	0 – 1 V	Ignition switch ON, select lever in "P" range
16	GRN	Shift solenoid valve-A	9 – 14 V	Ignition switch ON, select lever in "P" range
17	RED	CAN communication line (active high signal)	*2.5 – 3.8 V ("Reference Waveform No. 3: ")	Engine running at specified idling speed. (CAN communication signal is pulse. Pulse signal frequency varies depending on engine condition.)
18	—	—	—	—
19	BRN/BLU	Pressure control solenoid valve-C (–)	0.6 – 1.0 V	Ignition switch ON
20	GRY/BLU	Transmission fluid temperature sensor-B (+) (if equipped)	2.9 – 3.1 V	Ignition switch ON, fluid temperature is 20 °C (68 °F)
			0.3 – 0.5 V	Ignition switch ON, fluid temperature is 100 °C (212 °F)
21	LT GRN	Pressure control solenoid valve-C (+)	*0 – 0.6 V ↑↓ 10 – 14 V ("Reference Waveform No. 4: ")	Ignition switch ON, select lever in "P" range (Output signal is duty pulse.)
22	LT GRN/BLK	Pressure control solenoid valve-B (+)	*0 – 0.6 V ↑↓ 10 – 14 V ("Reference Waveform No. 5: ")	Engine running at idling (Output signal is duty pulse.)
23	BLK/ORN	Ground	0 – 1 V	Ignition switch ON
24	WHT	Power source for back-up	10 – 14 V	Constantly


Connector "E93"

Terminal	Wire color	Circuit	Standard voltage	Condition
1	RED	Transmission range sensor ("R" range)	8 – 14 V	Ignition switch ON, selector lever at "R" range
			0 – 1 V	Ignition switch ON, selector lever at other than "R" range
2	—	—	—	—
3	—	—	—	—
4	PNK/WHT	4L/N switch	8 – 14 V	Ignition switch ON, transfer position in 4H
			0 – 1 V	Ignition switch OFF, transfer position in 4L and N
5	WHT	Output shaft speed sensor (+)	2 – 3 V	Ignition switch turned ON, engine stops.
			*("Reference Waveform No. 6: ")	While engine running. (Output signal is waveform. Waveform frequency varies depending on output shaft speed. (18 pulses are generated per 1 input shaft revolution.))
6	BLU	Input shaft speed sensor (+)	2 – 3 V	Ignition switch turned ON, engine stops.
			*("Reference Waveform No. 7: ")	While engine running. (Output signal is waveform. Waveform frequency varies depending on input shaft speed. (24 pulses are generated per 1 input shaft revolution.))
7	YEL/GRN	Transmission range sensor ("D" range)	8 – 14 V	Ignition switch ON, selector lever at "R" range
			0 – 1 V	Ignition switch ON, selector lever at other than "R" range
8	PNK/BLU	Transmission range sensor ("N" range)	8 – 14 V	Ignition switch ON, selector lever at "N" range
			0 – 1 V	Ignition switch ON, selector lever at other than "N" range
9	YEL/RED	"4" position switch (+)	2.4 – 4.3 V	Ignition switch ON, select lever in "P", "N" or "D" range
			8 – 14 V	Ignition switch ON, select lever in "R", "3", "2" or "L" range
10	—	—	—	—
11	—	—	—	—
12	—	—	—	—
13	—	—	—	—
14	ORN	Output shaft speed sensor (–)	2 – 3 V	Ignition switch ON, vehicle at stop
15	—	—	—	—
16	PNK	Input shaft speed sensor (–)	2 – 3 V	Ignition switch ON, engine at stop
17	—	—	—	—
18	GRN/WHT	Transmission range sensor ("L" range)	8 – 14 V	Ignition switch ON, select lever at "L" range
			0 – 1 V	Ignition switch ON, select lever at other than "L" range
19	GRN/ORN	Transmission range sensor ("3" range)	8 – 14 V	Ignition switch ON, select lever at "3" range
			0 – 1 V	Ignition switch ON, select lever at other than "3" range
20	PNK/GRN	Transmission range sensor ("P" range)	8 – 14 V	Ignition switch ON, select lever at "P" range
			0 – 1 V	Ignition switch ON, select lever at other than "P" range
21	YEL/BLK	"4" position switch (–)	0 – 1 V	Ignition switch ON
22	—	—	—	—
23	PPL/WHT	Data link connector	8 – 14 V	Ignition switch ON
24	—	—	—	—
25	—	—	—	—
26	—	—	—	—

Reference Waveform No. 1


Pressure control solenoid valve-A signal at ignition switch ON position

Measurement terminal	CH1: E92-4 to E92-1
Oscilloscope setting	CH1: 5 V/DIV TIME: 2 ms/DIV
Measurement condition	<ul style="list-style-type: none"> Ignition switch turned ON Select lever at "P" range

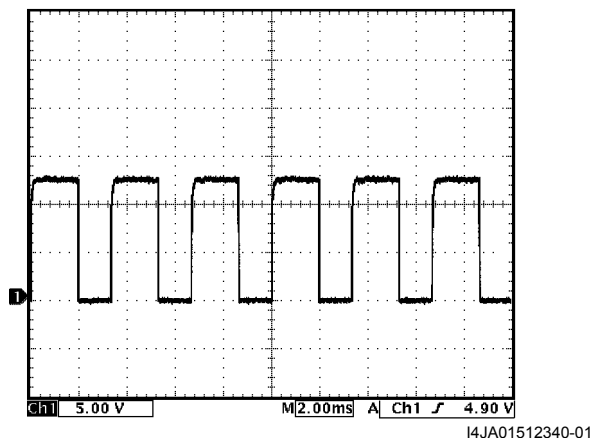**Reference Waveform No. 2**


TCC pressure control solenoid valve signal at ignition switch ON position

Measurement terminal	CH1: E92-5 to E92-1
Oscilloscope setting	CH1: 5 V/DIV TIME: 2 ms/DIV
Measurement condition	<ul style="list-style-type: none"> Ignition switch turned ON Select lever at "P" range

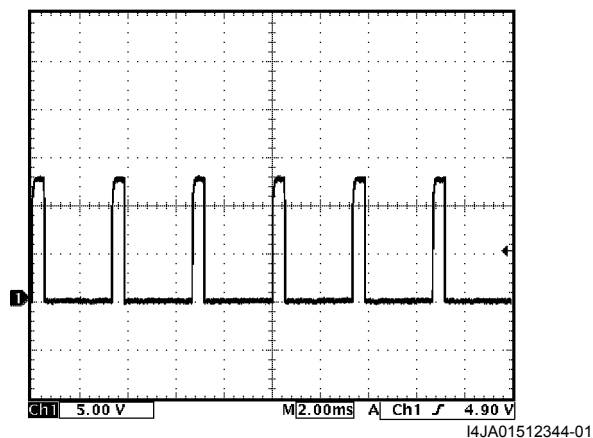**Reference Waveform No. 3**


CAN communication line signal at engine idling

Measurement terminal	CH1: E92-17 to E92-1, CH2: E92-7 to E92-1
Oscilloscope setting	CH1: 1 V/DIV, CH2: 1 V/DIV TIME: 100 μ s/DIV
Measurement condition	<ul style="list-style-type: none"> After warmed up to normal operating temperature Engine at idling speed (700 r/min.)

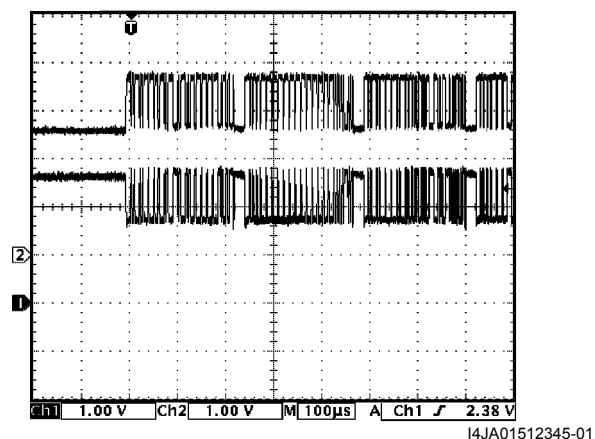**Reference Waveform No. 4**

Pressure control solenoid valve-C signal at ignition switch ON position


Measurement terminal	CH1: E92-21 to E92-1
Oscilloscope setting	CH1: 5 V/DIV TIME: 2 ms/DIV
Measurement condition	<ul style="list-style-type: none"> Ignition switch turned ON Select lever at "P" range

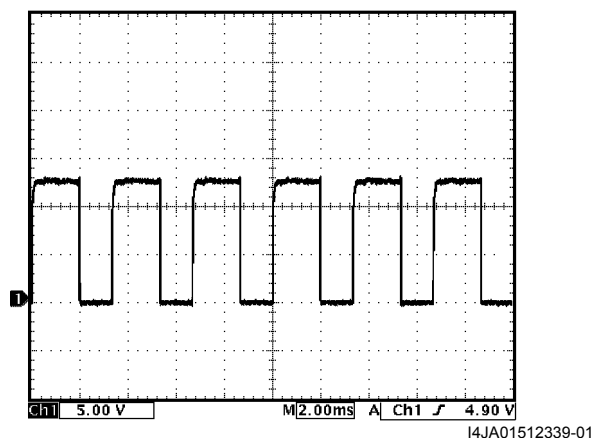

Reference Waveform No. 5


Pressure control solenoid valve-B signal at ignition switch ON position

Measurement terminal	CH1: E92-22 to E92-1
Oscilloscope setting	CH1: 5 V/DIV TIME: 2 ms/DIV
Measurement condition	<ul style="list-style-type: none"> Ignition switch turned ON Select lever at "P" range

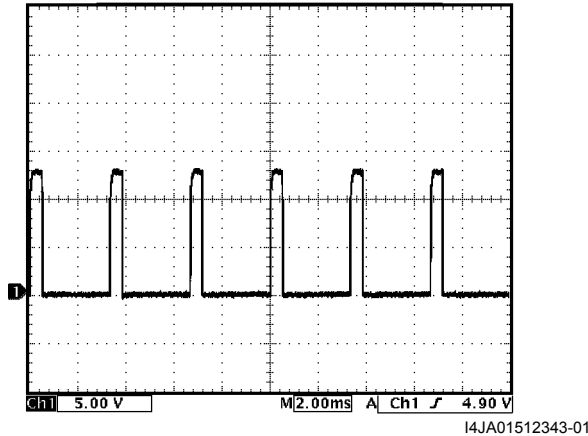**Reference Waveform No. 6**


Output shaft speed sensor signal at vehicle speed 20 km/h, 12.5 mile/h

Measurement terminal	CH1: E93-5 to E92-1
Oscilloscope setting	CH1: 5 V/DIV TIME: 2 ms/DIV
Measurement condition	<ul style="list-style-type: none"> After warmed up to normal operating temperature Vehicle speed at 20 km/h, 12.5 mile/h

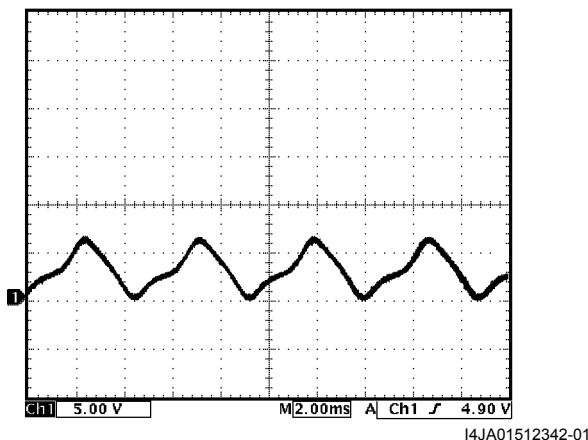**Reference Waveform No. 7**

Input shaft speed sensor signal at engine idling

Measurement terminal	CH1: E93-6 to E92-1
Oscilloscope setting	CH1: 5 V/DIV TIME: 2 ms/DIV
Measurement condition	<ul style="list-style-type: none"> After warmed up to normal operating temperature Engine at idling speed (700 r/min.)

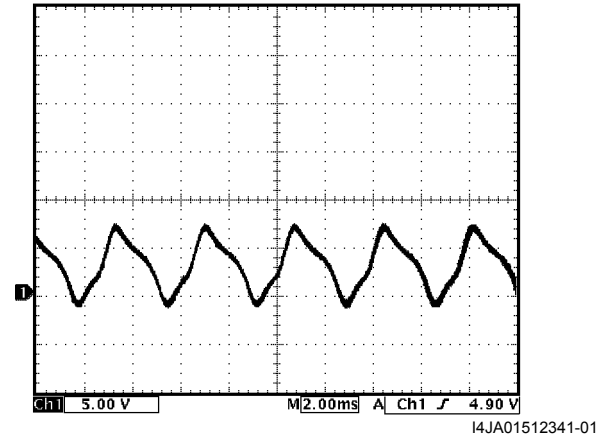

Step	Action	Yes	No
1	Check TCM back-up power circuit 1) Disconnect TCM connector with ignition switch OFF. 2) Check for proper connection to TCM at "E92-24" terminal. 3) If OK, check voltage at terminal "E92-24" of disconnected TCM connector. <i>Is it 10 – 14 V?</i>	Go to Step 2.	"WHT" circuit open or shorted to ground.
2	Check TCM power circuit 1) Disconnect TCM connector with ignition switch OFF. 2) Check for proper connection to TCM at "E92-6" terminal. 3) If OK, turn ignition switch ON and check voltage at terminal "E92-6" of disconnected TCM connector. <i>Is it 10 – 14 V?</i>	Go to Step 4.	Go to Step 3.
3	Check A/T relay operation 1) Check A/T relay operation referring to "A/T Relay Inspection". <i>Is check result satisfactory?</i>	"BLK/WHT", "WHT/GRN", or "BLK" circuit for power supply open.	Replace A/T relay included in power integration No.2 in main fuse box.

Step	Action	Yes	No
4	Replace A/T relay included in power integration No.2 in main fuse box. 1) Turn ignition switch OFF. 2) With TCM connectors disconnected, check for proper connection to TCM at "E92-1" / "E92-23" terminal. 3) If OK, check resistance between "E92-1" / "E92-23" terminal of disconnected TCM connector and body ground. <i>Is continuity indicated?</i>	TCM power and ground circuits are in good condition.	"BLK" circuit for TCM ground open.

Repair Instructions


Learning Control Initialization

S6JB0B5106001

- 1) Connect scan tool to DLC (1) with ignition switch OFF.

Special tool

(A): SUZUKI scan tool

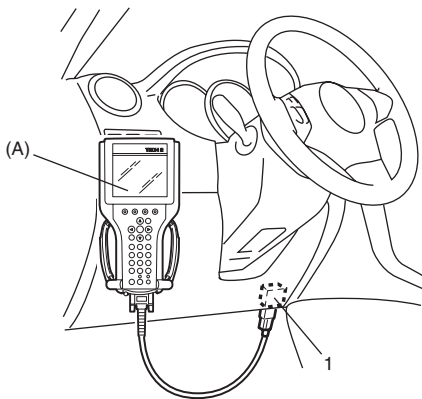

I6JB01510049-01

- 2) Start engine and shift selector lever to "P" range.
- 3) Select "Misc Test" mode on scan tool.
- 4) Perform "AT learned initialize" on scan tool.

A/T Fluid Level Check

S6JB0B5106002

At Normal Operating Temperature

- 1) Drive vehicle so that A/T fluid temperature reach the normal operating temperature (70 – 80 °C (158 – 176 °F)).
- 2) Stop vehicle with engine running and place it level.
- 3) With select lever at "P" range, apply parking brake and place chocks against wheels.
- 4) Keep engine idling and shift selector slowly to "L" and back to "P" range.
- 5) With engine idling, pull out dipstick (1), wipe it off with a clean cloth and put it back into place.



- 6) Pull out dipstick (1) again and check fluid level indicated on it. Fluid level should be between FULL HOT and LOW HOT. If it is below LOW HOT, add specified A/T fluid up to FULL HOT.

A/T fluid specification

SUZUKI ATF 3317 or Mobil ATF 3309

NOTE

- **DO NOT RACE ENGINE** while checking fluid level, even after engine is started.
- **DO NOT OVERFILL.** Overfilling can causes foaming and loss of fluid through breather. Then slippage and transmission failure can result.
- If vehicle was driven under high load such as pulling a trailer, fluid level should be checked about half an hour after it is stopped.

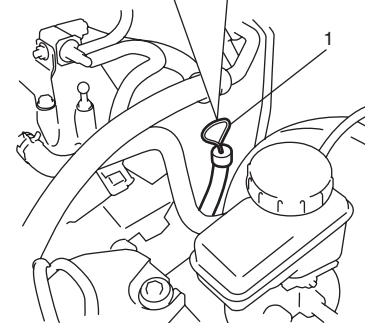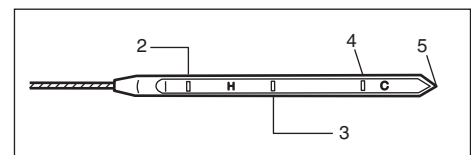


I6JB01510025-01

2. "FULL HOT"	4. "FULL COLD"
3. "LOW HOT"	5. "LOW COLD"

At Room Temperature

The fluid level check at room temperature performed after repair or fluid change before test driving is just preparation for level check of normal operating temperature. The checking procedure itself is the same as that described in “At Normal Operating Temperature:”. If the fluid level is between FULL COLD and LOW COLD, proceed to test drive. And when the fluid temperature has reached the normal operating temperature, check fluid level again and adjust it as necessary.

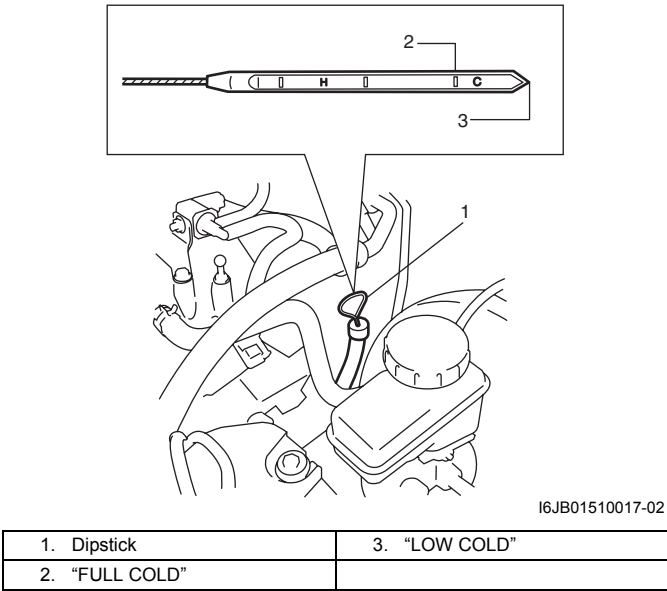


A/T Fluid Change

S6JB0B5106003

- 1) Lift up vehicle.
- 2) When engine is cool, remove drain plug (1) from oil pan and drain A/T fluid.
- 3) Install drain plug with new gasket.

Tightening torque

A/T fluid drain plug (a): 20 N·m (2.0 kgf-m, 14.5 lb-ft)

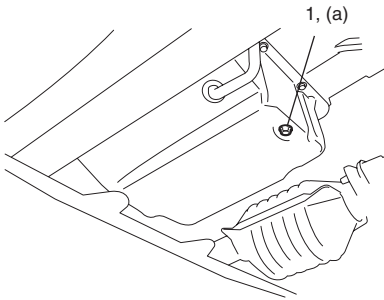

- 4) Lower vehicle and fill proper amount of specified fluid.
- 5) Check fluid level referring to “At Normal Operating Temperature” under “A/T Fluid Level Check”.


A/T fluid specification

: SUZUKI ATF 3317 or Mobil ATF 3309

A/T fluid capacity reference value

When draining from drain plug hole: Approx. 3.0 liters (6.34/5.28 US/Imp. pt.)

When overhauling: Approx. 9.9 liters (20.92/17.42 US/Imp. pt.)


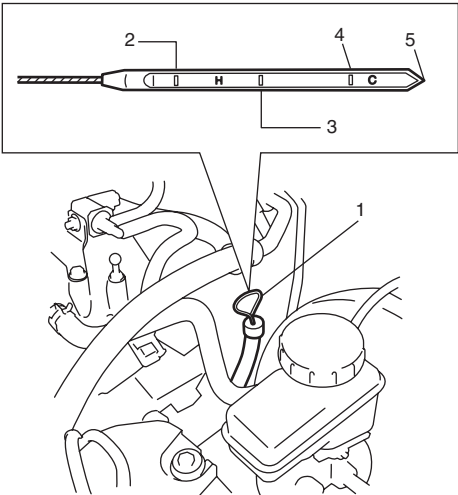


Oil Cooler Hoses Replacement

S6JB0B5106004

When replace them, make sure to note the followings.

- to replace clamps at the same time
- to insert hose as far as bulge of pipe
- to clamp hose securely

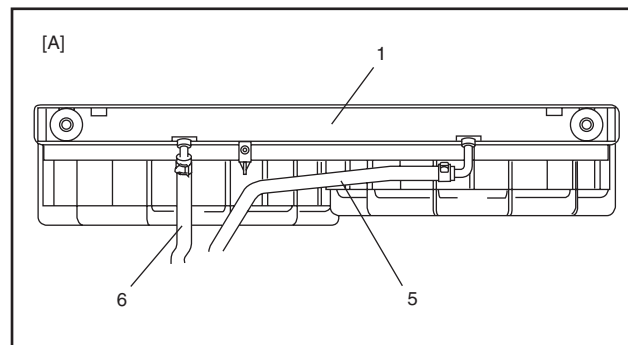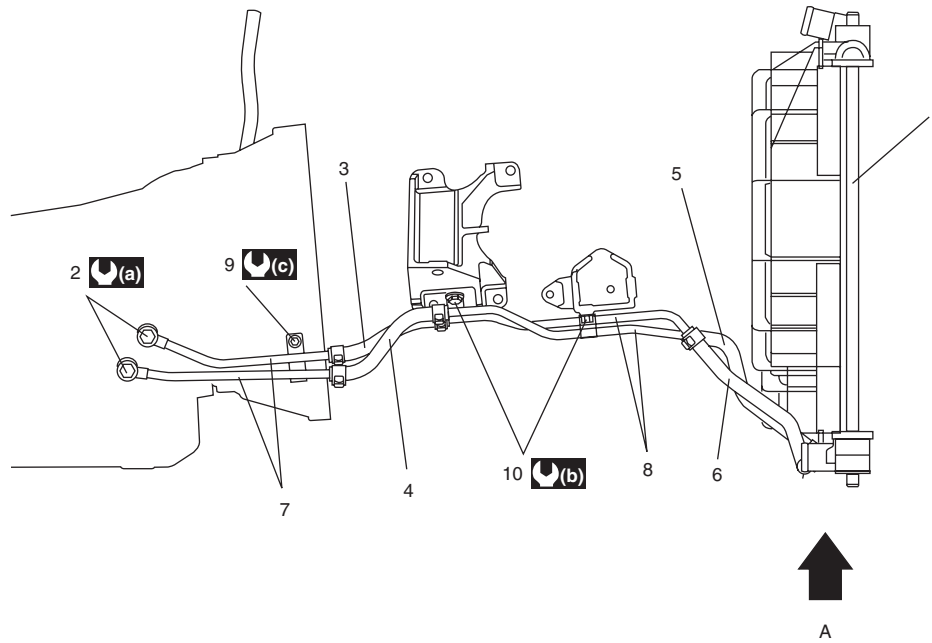


I6JB01510018-01

[A]: View from A side	3. Oil hose No.2	6. Oil hose No.4	9. Oil pipe No.1 bolt	: 23 N·m (2.3 kgf-m, 17.0 lb-ft.)
1. Radiator	4. Oil hose No.3	7. Oil pipe No.1	10. Oil pipe No.2 bolt	: 10 N·m (1.0 kgf-m, 7.5 lb-ft.)
2. Oil pipe union bolt	5. Oil hose No.1	8. Oil pipe No.2	: 25 N·m (2.5 kgf-m, 18.0 lb-ft.)	

Manual Selector Assembly Components

S6JB0B5106005

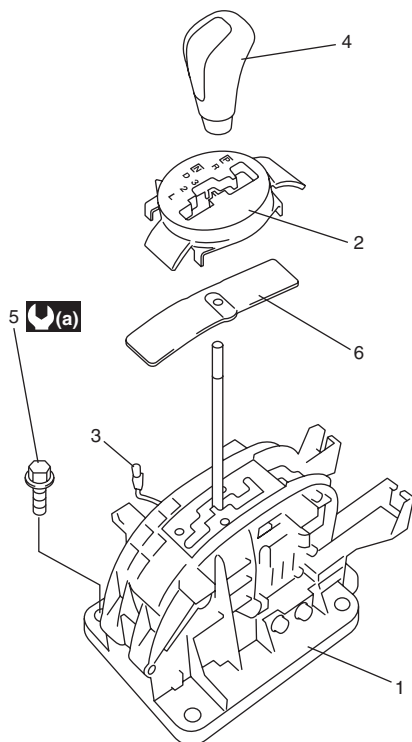

I5JB0A510033-01


1. Manual lever assembly
2. Select indicator assembly
3. Illumination light assembly
4. Knob
5. Manual selector assembly mounting bolt
6. Slide cover
(a) : 1.8 N·m (1.8 kgf-m, 13.0 lb-ft.)

Manual Selector Assembly Removal and Installation

S6JB0B5106006

Removal

- 1) Disconnect negative cable at battery.
- 2) Remove front center console box.
- 3) Disconnect shift lever switch connector.
- 4) Remove manual selector assembly mounting bolts.
- 5) Disconnect select cable (1) from manual selector assembly (2) expanding select cable clip (3).

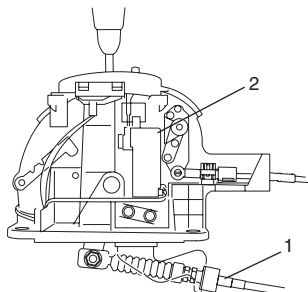

I5JB0A510034-02


Installation

Reverse removal procedure to install manual selector assembly noting the following instructions.

- Tighten manual selector assembly mounting bolts to specified torque.

Tightening torque

Manual selector assembly mounting bolt: 18 N·m (1.8 kgf-m, 13.0 lb-ft)

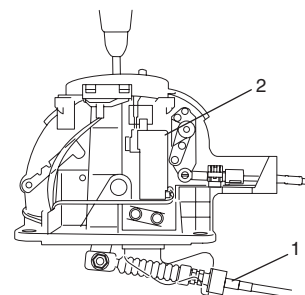

I5JB0A510034-02

Select Lever Knob Installation

S6JB0B5106007


Screw select lever knob onto select lever by specified numbers of rotation below.

Rotation numbers for select lever knob

Installation (a): 13 – 14 rotations

⚠ CAUTION

When installing select lever knob, do not turn more than specified numbers of rotation. Otherwise select lever knob is damaged.

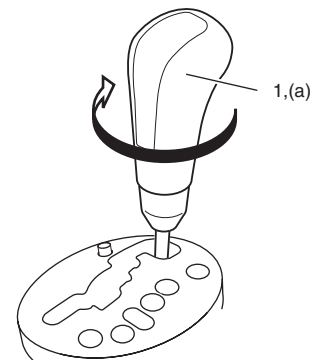

I4RS0A510058-01

Manual Selector Assembly Inspection

S6JB0B5106008

Check select lever for smooth and clear-cut movement individually and position indicator for correct indication. If a malfunction is found, replace select lever assembly.

"4" Position Switch Inspection


S6JB0B5106009

- 1) Disconnect negative cable at battery.
- 2) Remove front console box.
- 3) Disconnect manual selector connector (1).
- 4) Measure resistance between "4" position switch terminals.

"4" position switch specification

Shift selector lever to "P", "N" or "D" range: 3.96 – 4.04 k Ω

Shift selector lever to "R", "4", "3" or "L" range: 0.99 – 1.01 k Ω

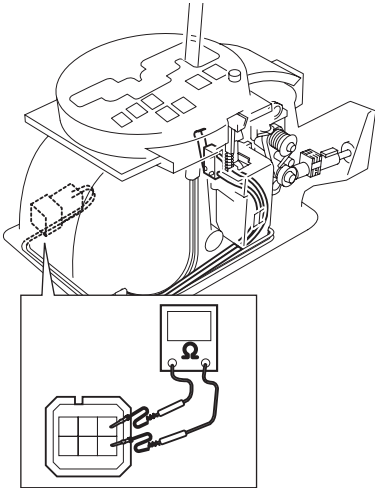

I5JB0A510164-01



Mode Select Switch Inspection

S6JB0B5106010

- 1) Pull out mode select switch from front center console box.
- 2) Disconnect mode select switch connector.
- 3) Check continuity between mode select switch terminals.

Mode select switch specification

Mode select switch	Normal position	Power position
Continuity	No continuity	Continuity

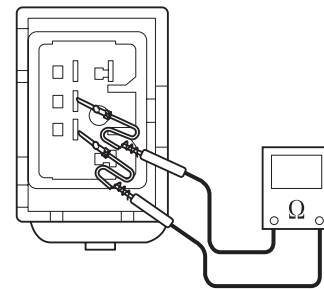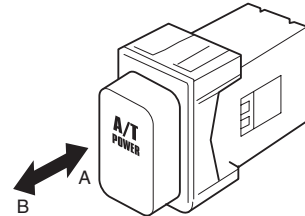



I5JB0A510042-01

A: Push

B: Push again to release

Select Cable Component

S6JB0B5106011

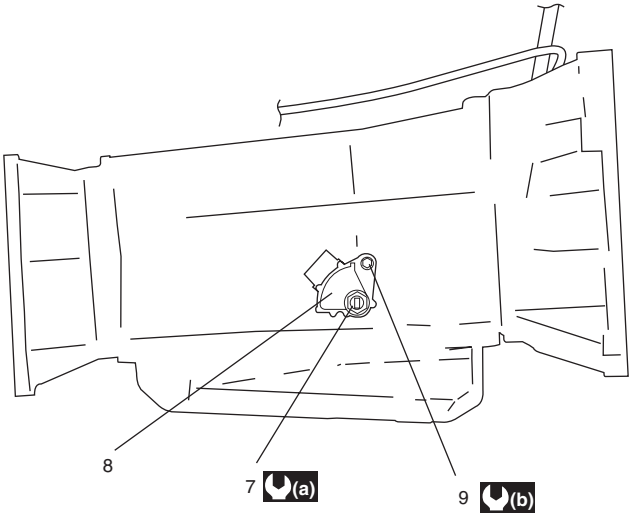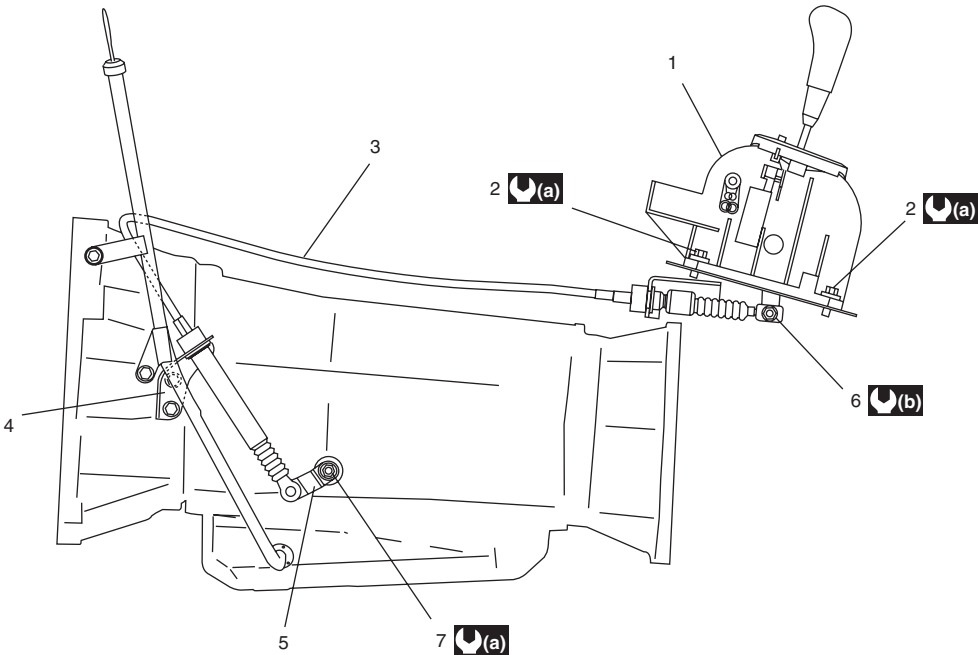

I6JB01510019-01

1. Manual selector assembly	5. Manual select lever	9. Transmission range sensor bolt
2. Manual selector assembly mounting bolt	6. Manual select cable end nut	(a) : 18 N·m (1.8 kgf-m, 13.0 lb-ft.)
3. Select cable	7. Manual select lever nut	(b) : 13 N·m (1.3 kgf-m, 9.5 lb-ft.)
4. Select cable bracket	8. Transmission range sensor	(c) : 12.5 N·m (1.25 kgf-m, 9.0 lb-ft.)


Select Cable Adjustment

S6JB0B5106012

- 1) Remove manual selector, refer to "Manual Selector Assembly Removal and Installation" with select cable connected.
- 2) Loosen manual select cable end nut (1).
- 3) Shift select lever (2) and manual select lever (3) to "N".
- 4) Tighten manual select cable end nut (1) to specified torque.

Tightening torque

Manual select cable end nut (a): 13 N·m (1.3 kgf-m, 9.5 lb-ft)

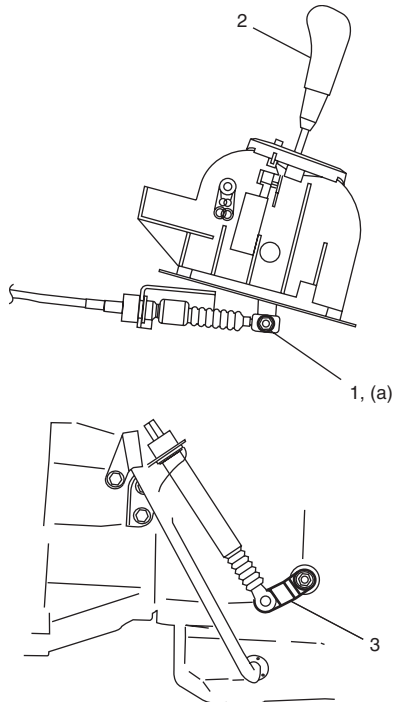

I6JB01510020-01


- 5) After select cable was installed, check for the following.
 - Push vehicle with selector lever shifted to "P". Vehicle should not move.
 - Vehicle can not be driven in "N".
 - Vehicle can be driven in "D", "4" and "L".
 - Vehicle can be backed in "R".

Transmission Range Sensor Removal and Installation

S6JB0B5106013


Removal

- 1) Disconnect negative cable at battery.
- 2) Hoist vehicle.
- 3) Disconnect transmission range sensor connector (1).

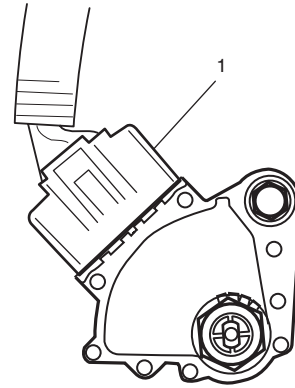

I6JB01510021-01

- 4) Unbend bend parts of lock washer (1), then remove manual shift shaft nut (2), lock washer (1) and grommet.
- 5) Remove transmission range sensor (3) by removing sensor bolt (4).

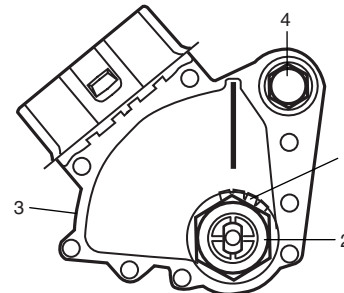


I4JA01512011-01

Installation


- 1) Install transmission range sensor (3) and tighten sensor bolt (4) temporarily.
- 2) Install grommet, lock washer (1) and manual shift shaft nut (2).
Tighten nut to specified torque. After tightening it, bend claws of lock washer (1).
- Tightening torque**
Manual shift shaft nut (a): 7 N·m (0.7 kgf-m, 5.0 lb-ft)
- 3) After turning manual shift shaft fully counterclockwise, turn it clockwise by 2 notches and set it to “N” range.
- 4) With “N” reference line (5) on range sensor and shaft center (6) aligned, tighten transmission range sensor bolt (4) to specified torque.

Tightening torque
Transmission range sensor bolt (b): 13 N·m (1.3 kgf-m, 9.5 lb-ft)

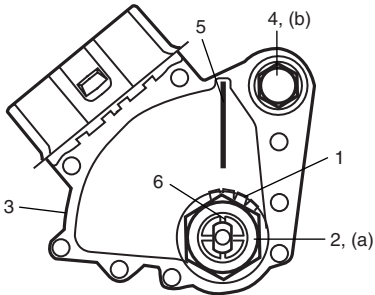

I4JA01512012-01

- 5) Connect transmission range sensor connector (1).
- 6) Connect negative cable at battery.

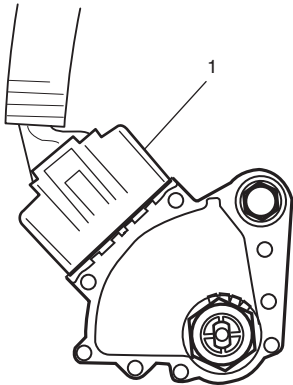


I6JB01510021-01

Transmission Range Sensor Inspection and Adjustment


S6JB0B5106014

- 1) Manual select lever to “N” range.
- 2) Check that center line (2) on manual shift and “N” reference line (1) on sensor are aligned. If not, loosen sensor bolt (3) and align them.

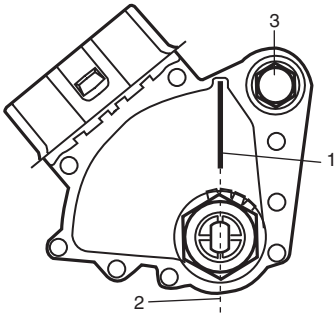

I6JB01510022-01

- 3) Check that engine starts in “N” and “P” ranges but it doesn’t start in “D”, “4”, “3”, “L” or “R” range. Also, check that back-up light lights in “R” range. If faulty condition cannot be corrected by adjustment, disconnect transmission range sensor connector and check that continuity exists as shown by moving select lever.

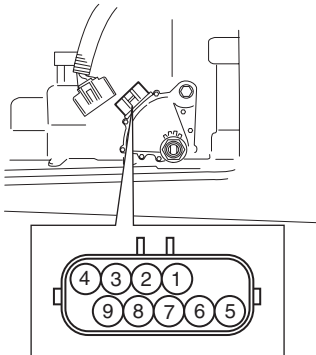

[A]	[B]	1	2	3	4	5	6	7	8	9
P										
R										
N										
D										
3										
L										

I6JB01510023-01

Key Interlock Cable Removal and Installation


S6JB0B5106015

NOTE

Do not bend interlock cable excessively when removing and installing it, or system will not operate correctly.


Removal

- 1) Disconnect negative (–) cable from battery.
- 2) If equipped with air bag system, disable air bag system. Refer to “Disabling Air Bag System in Section 8B”.
- 3) Remove steering column hole cover.
- 4) Tilt steering column if steering column is adjustable. If no adjustable, loosen steering column bolts.
- 5) Remove steering column cover.
- 6) Turn ignition switch to ACC position.
- 7) Pull out key interlock cable (1) from key cylinder cover (2) while pressing checkhook with slotted screwdriver or the like.

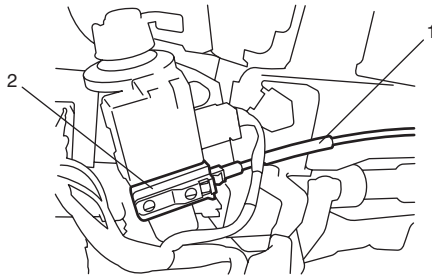

I5JB0A510062-01


- 8) Turn ignition switch to LOCK position.
- 9) Remove front console box.
- 10) Detach cable end (1) from interlock cam (2) while pressing claws (3) of interlock cam boss. At this time, be careful not to cause damage to its claws. Detach cable casing cap (4) from selector bracket (5) while pressing checkhook.
- 11) Remove interlock cable.

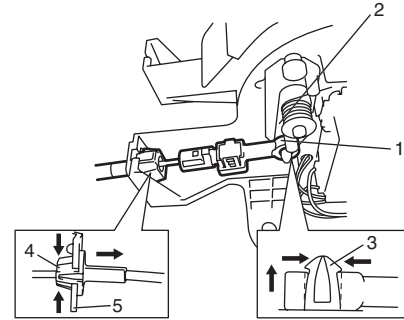

I5JB0A510063-01


Installation

- 1) Lay interlock cable to its original cabling route.
- 2) Turn ignition switch to “ACC” position.
- 3) Insert cable casing cap (1) into key cylinder cover (2) securely.

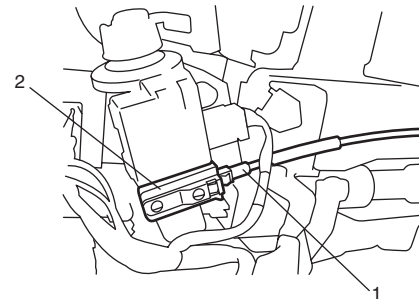

I5JB0A510064-01


4) Pass and connect interlock cable as shown in the figure.

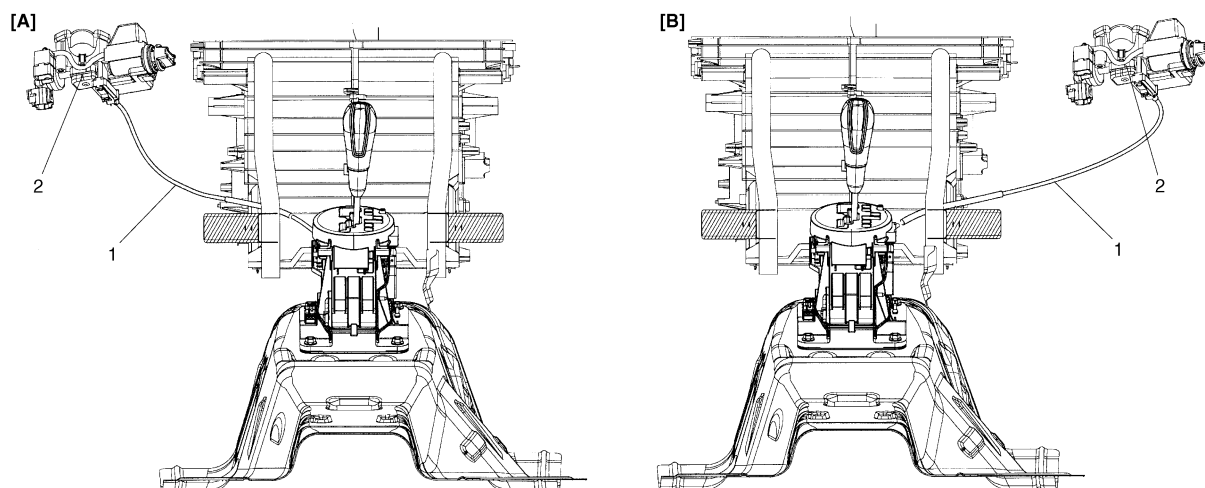

[A]: LHD model	1. Interlock cable
[B]: RHD model	2. Key cylinder

16JB0B510007-03

5) Pull out lock button (1) of selector side cable end (2).

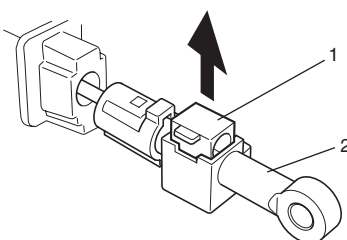


I5JB0A510066-01

6) Shift selector lever to "N" position.

7) Install cable casing cap (3) or selector bracket (4).

8) Connect cable end (1) to interlock cam (2) with ignition switch turned to "ACC" position.

9) Drive lock button (5) in cable end until it locks cable expansion and contraction.

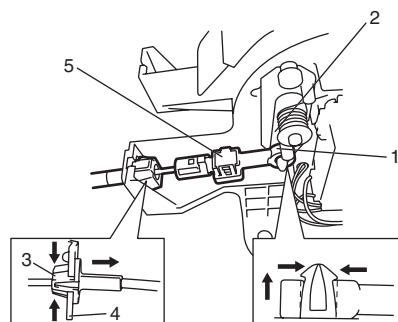

I5JB0A510067-01


10) Install steering column cover.

11) If the vehicle is equipped with air bag system, connect negative cable at battery and enable air bag system, referring to "Enabling Air Bag System in Section 8B".

Brake and key Interlock System Inspection

S6JB0B5106016


- 1) Check that selector lever cannot be moved to any other range from "P" range position when ignition switch key is at ACC position, at LOCK position or it is removed from keyhole of ignition switch, or brake pedal is not depressed.

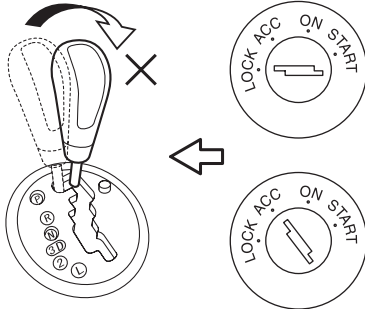

I5JB0A510165-01


- 2) Shift select lever to "P" range position, release knob button and check for the following.

- Ignition key can be turned between LOCK and ACC positions back and forth and also it can be removed from ignition switch.

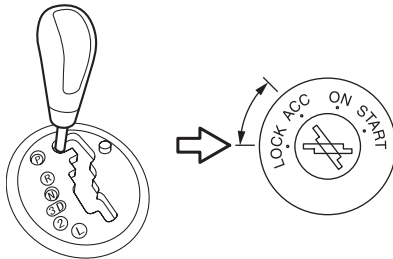


I5JB0A510166-01

- With shift lock solenoid release button (1) pushed and ignition key turned to ACC position, selector lever can be shifted from "P" range position to any other range.
- With shift lock solenoid release button (1) pushed and ignition key turned to LOCK position, selector lever can not be shifted from "P" range position to any other range.

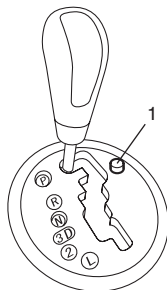


I5JB0A510167-01

- When ignition switch is turned ON and brake pedal is depressed, selector lever can be shifted from "P" range position to any other range.

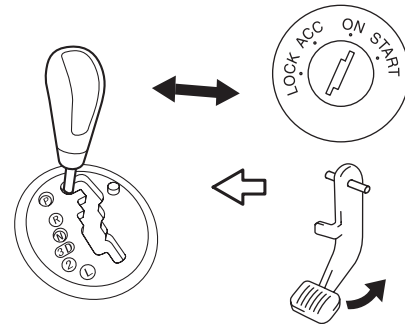

I5JB0A510169-01

- 3) With ignition lever shifted to any position other than "P" range, check that ignition key cannot be turned LOCK position and it cannot be removed from ignition switch unless it is at LOCK position.

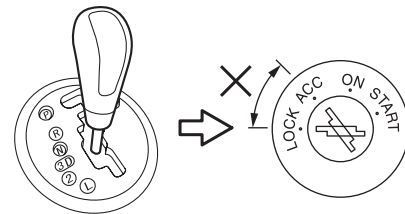


I5JB0A510170-01

Input Shaft Speed Sensor Removal and Installation

S6JB0B5106017

Removal

- 1) Disconnect negative cable at battery.
- 2) Hoist vehicle.
- 3) Disconnect input shaft speed sensor connector.
- 4) Remove input shaft speed sensor (1) from transmission.

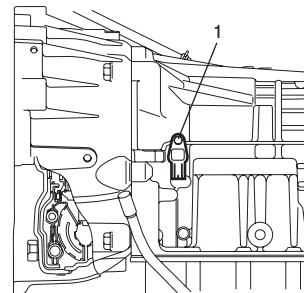


I4JA01512018-01

Installation

- 1) Check that sensor is free from any metal particles and damage.
- 2) Apply A/T fluid to new O-ring and then install input shaft speed sensor (1) to transmission. Tighten sensor bolt to specified torque.

Tightening torque

Input shaft speed sensor bolt (a): 5.5 N·m (0.55 kgf-m, 4.0 lb-ft)

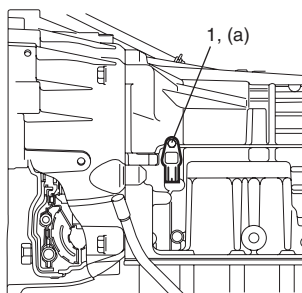

I4JA01512019-01

- 3) Connect input shaft speed sensor connector.
- 4) Lower hoist.
- 5) Connect negative cable at battery.


Input Shaft Speed Sensor Inspection

S6JB0B5106018

- 1) Disconnect negative cable at battery.
- 2) Hoist vehicle.
- 3) Disconnect input shaft speed sensor connector.
- 4) Check input shaft speed sensor (1) for resistance between terminals of sensor.

Input shaft speed sensor resistance

Standard: 560 – 680 Ω (at 20 °C (68 °F))

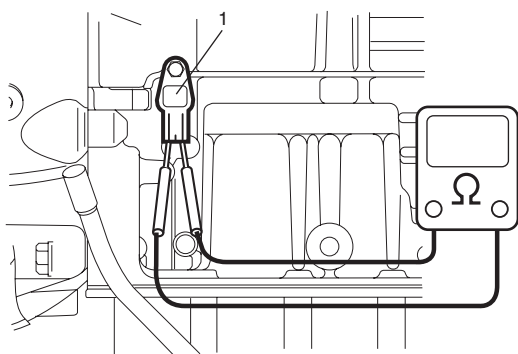


I4JA01512020-01

Output Shaft Speed Sensor Removal and Installation

S6JB0B5106019

Removal

- 1) Disconnect negative cable at battery.
- 2) Hoist vehicle.
- 3) Disconnect output shaft speed sensor connector.
- 4) Remove output shaft speed sensor (1) from transmission.

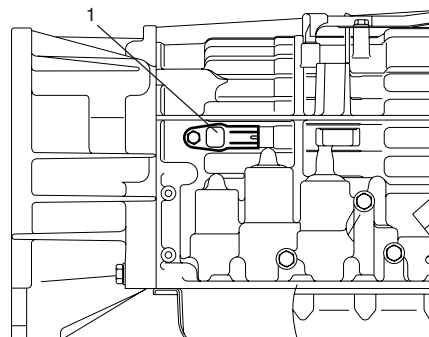


I4JA01512021-01

Installation

- 1) Check that sensor is free from any metal particles and damage.
- 2) Apply A/T fluid to new O-ring and then install output shaft speed sensor (1) to transmission. Tighten sensor bolt to specified torque.

Tightening torque

Output shaft speed sensor bolt (a): 5.5 N·m (0.55 kgf-m, 4.0 lb-ft)

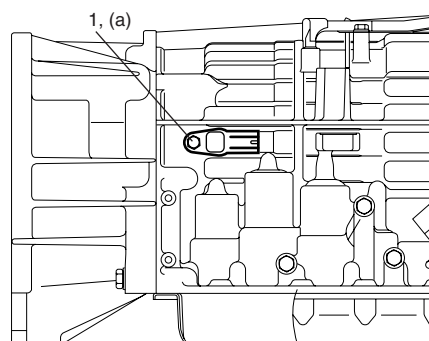

I4JA01512022-01


- 3) Connect output shaft speed sensor connector.
- 4) Lower hoist.
- 5) Connect negative cable at battery.

Output Shaft Speed Sensor Inspection

S6JB0B5106020

- 1) Disconnect negative cable at battery.
- 2) Hoist vehicle.
- 3) Disconnect output shaft speed sensor connector.
- 4) Check output shaft speed sensor (1) for resistance between terminals of sensor.

Output shaft speed sensor resistance
Standard: 560 – 680 Ω (at 20 °C (68 °F))

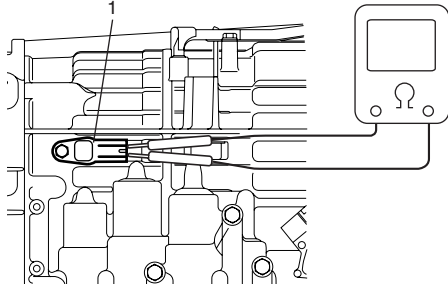


I4JA01512023-01

Solenoid Valves (Shift Solenoid-A, Shift Solenoid-B, Shift Solenoid-E, TCC Solenoid, Pressure Control Solenoid-A, Pressure Control Solenoid-B, and Pressure Control Solenoid-C) Removal and Installation

S6JB0B5106021


Removal

- 1) Disconnect negative cable at battery.
- 2) Pull out fluid level gauge and lift up vehicle.
- 3) Remove exhaust No.1 pipe (1).
- 4) Remove drain plug (2) and drain A/T fluid.
- 5) Install drain plug (2).

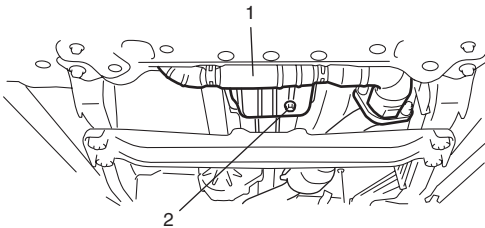


I6JB01510026-01

- 6) Remove A/T oil pan (1).

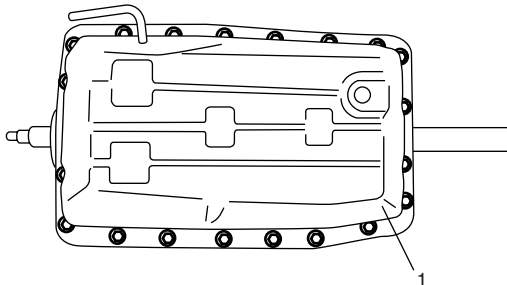

I4JA01512025-01


- 7) Remove A/T oil strainer (1).

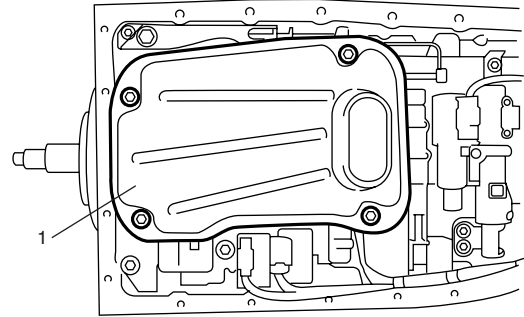

I4JA01512026-01

- 8) Disconnect shift solenoid-A connector (1), shift solenoid-B connector (2), shift solenoid-E connector (3), TCC solenoid connector (4), Pressure control solenoid-A connector (5), Pressure control solenoid-B connector (6) and Pressure control solenoid-C connector (7).

- 9) Remove solenoid valves.

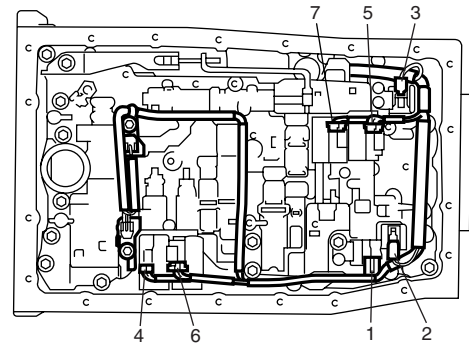

I4JA01512027-01

Installation

Remove removal procedure to install solenoid valves, noting the following points.

- For details of solenoid valves and their connectors installation, refer to "Automatic Transmission Unit Assembly". Use new O-ring.
- For details of A/T oil pan installation, refer to "Automatic Transmission Unit Assembly".
- Tighten exhaust No.1 pipe bolts & nuts and exhaust bracket bolts & nuts.
- Fill A/T fluid and check fluid level according to procedure described in "A/T Fluid Change".
- Check for fluid leakage after warming up A/T.

Solenoid Valves (Shift Solenoid-A, Shift Solenoid-B, Shift Solenoid-E, TCC Solenoid, Pressure Control Solenoid-A, Pressure Control Solenoid-B, and Pressure Control Solenoid-C) Inspection

S6JB0B5106022

Solenoid Valves (Shift Solenoid-A, Shift Solenoid-B and Shift Solenoid-E)

Resistance check


⚠ CAUTION

Be very careful as dust etc. does not enter when solenoid valves are inspected.

Measure resistance between terminal (2) and solenoid valve body. If resistance is out of specification, replace solenoid valve.

Shift solenoid-A, Shift solenoid-B and Shift solenoid-E resistance

Standard: 11 – 15 Ω (at 20 °C (68 °F))

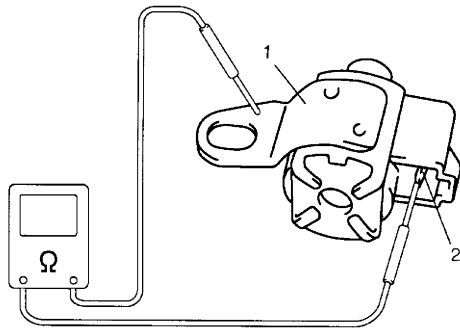


I4JA01512029-01

1. Shift solenoids

Operation Check

- With solenoid connected to battery (2) as shown in the figure, check that solenoid valve is actuated with click sound.

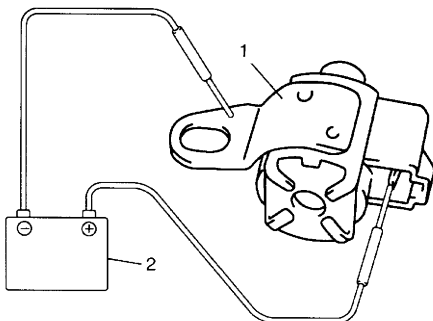



I4JA01512030-01

1. Shift solenoids

- With shift solenoid valve (1) connected to battery (2), confirm that shift solenoid valve is open by blowing air (50 – 200 kPa, 0.5 – 2.0 kg/cm², 7 – 28.5 psi) into solenoid valve as shown in the figure.
- With shift solenoid valve (1) not connected to battery (2), confirm that shift solenoid valve is closed by blowing air (50 – 200 kPa, 0.5 – 2.0 kg/cm², 7 – 28.5 psi) into solenoid valve as shown in the figure.

⚠ CAUTION

Do not insert air gun against strainer installed on inlet of solenoid valve too deeply, when blowing air into solenoid valve. If not, the strainer will be damaged.

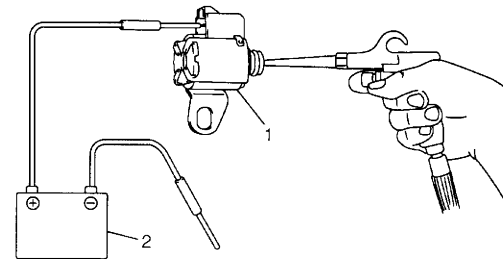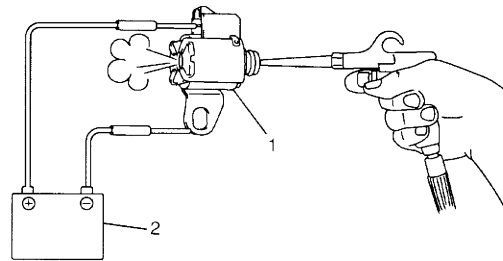

I4JA01512031-01

Pressure Control Solenoid Valves (Pressure Control Solenoid-A, Pressure Control Solenoid-B, Pressure Control Solenoid-C and TCC Solenoid Valve)
Resistance check


⚠ CAUTION

Be very careful as dust etc. does not enter when pressure control solenoid valves are inspected.

Measure resistance between pressure control solenoid valves (Pressure control solenoid-A, Pressure control solenoid-B, Pressure control solenoid-C and TCC solenoid) (1) terminals. If resistance is out of specification, replace valve body assembly.

Pressure control solenoid-A, Pressure control solenoid-B, Pressure control solenoid-C and TCC solenoid resistance

Standard: 5.0 – 5.6 Ω (at 20 °C (68 °F))

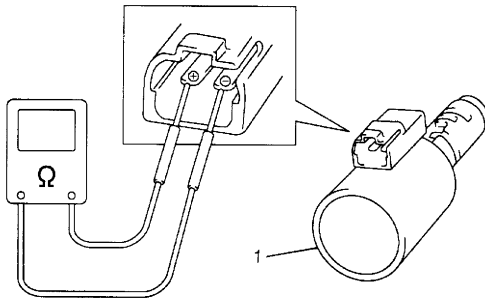

I4JA01512032-01

Operation check


Check pressure control solenoid valves (Pressure control solenoid-A, Pressure control solenoid-B, Pressure control solenoid-C and TCC solenoid) (1) operation in either of the following methods.

[Using regulated DC power supply]

- 1) Connect pressure control solenoid valve (1) with regulated DC power supply (2) as shown in the figure.
- 2) Turn regulated DC power supply switch ON, increase voltage of power supply keeping current within 1.0 A.
- 3) Check that valve (3) moves gradually in arrow "A" direction as voltage increases.
- 4) Check that valve (3) moves in arrow "B" direction as voltage decreases.
- 5) Turn power supply switch OFF.

⚠ CAUTION

Do not feed current 1.0 A or more, or pressure control solenoid will be burned out.

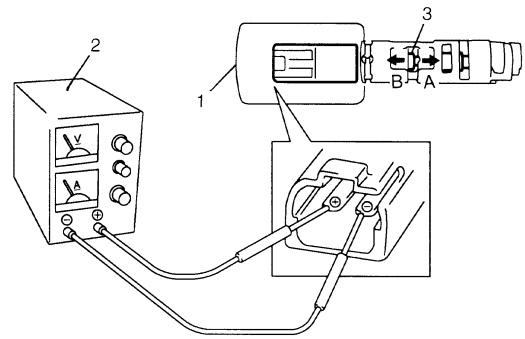


I4JA01512033-01

[Not using regulated DC power supply]

- 1) Connect pressure control solenoid valve (1) to battery (4) setting 21 W bulb (2) in between as shown in the figure.
- 2) Check that valve (3) moves in arrow "A" direction.
- 3) Disconnect pressure control solenoid valve (1) from battery (4) and check that valve (3) moves in arrow "B" direction as shown in the figure.

⚠ CAUTION

Set 21 W bulb in between, or pressure control solenoid valve will be burned out.

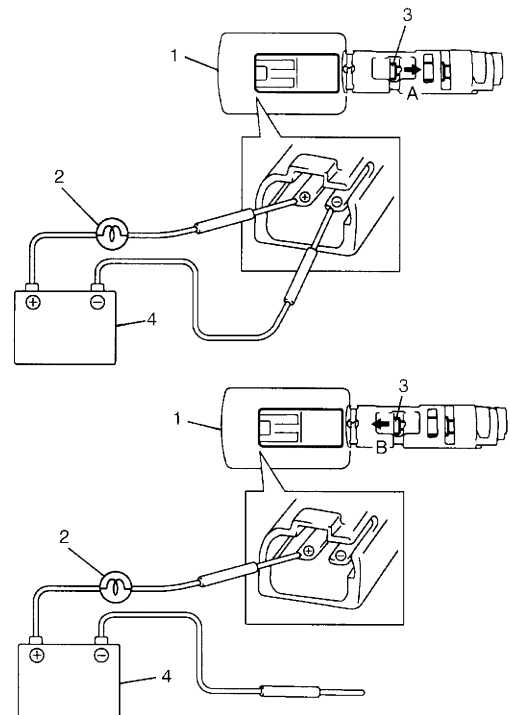


I4JA01512034-01

Transmission Fluid Temperature Sensor Removal and Installation

S6JB0B5106023


Removal

- 1) Disconnect negative cable at battery.
- 2) Pull out fluid level gauge and lift up vehicle.
- 3) Remove exhaust No.1 pipe (1).
- 4) Remove drain plug (2) and drain A/T fluid.
- 5) Install drain plug (2).

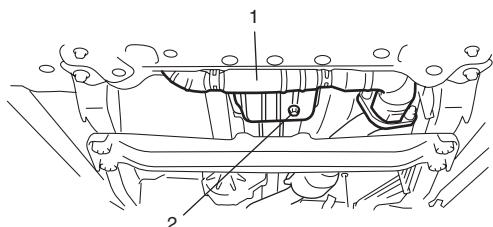


I6JB01510026-01

- 6) Remove A/T oil pan (1).

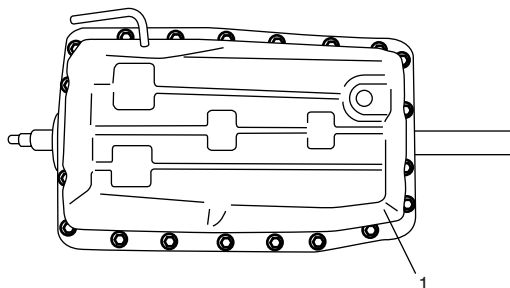

I4JA01512025-01


- 7) Remove A/T oil strainer (1).

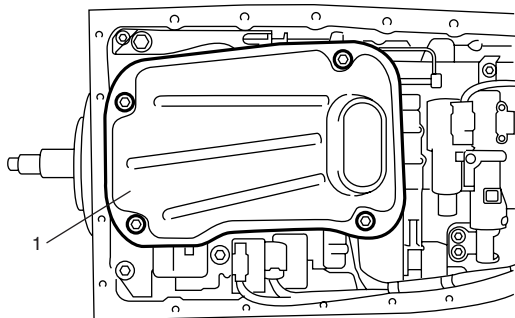

I4JA01512026-01

- 8) Remove transmission fluid temperature sensor A (8) and B (9) (if equipped).
- 9) Disconnect shift solenoid-A connector (1), shift solenoid-B connector (2), shift solenoid-E connector (3), TCC solenoid connector (4), Pressure control solenoid-A connector (5), Pressure control solenoid-B connector (6) and Pressure control solenoid-C connector (7).

- 10) Remove solenoid valves.

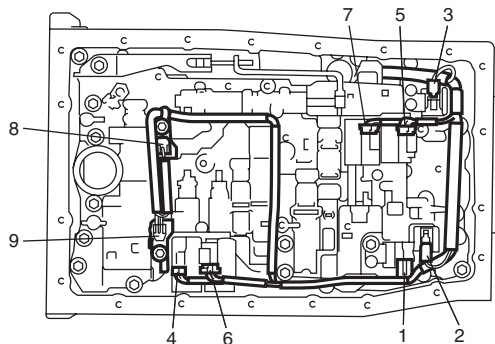


I6JB0B510008-01

- 11) After removing bolt (1) pull out transmission wire connector (2) from transmission case.

⚠ CAUTION

When pulling transmission wire harness out of transmission case, take care not to damage connectors and transmission fluid temperature sensors at narrow exist of case. Careless sensor treatment might cause sensor malfunction.

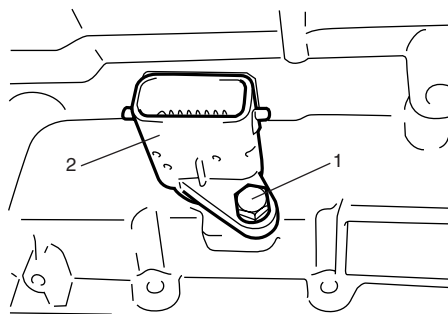

I4JA01512070-01

Installation

Remove removal procedure to install transmission fluid temperature sensor, noting the following points.

- For details of solenoid valves and their connectors installation, refer to "Automatic Transmission Unit Assembly". Use new O-ring.
- For details of A/T oil pan installation, refer to "Automatic Transmission Unit Assembly".
- Tighten exhaust No.1 pipe bolts & nuts.
- Fill A/T fluid and check fluid level according to procedure described in "A/T Fluid Change".
- Check for fluid leakage after warming up A/T.

Transmission Fluid Temperature Sensor Inspection

S6JB0B5106024


Immerse transmission fluid temperature sensor A (1) and B (3) (if equipped) in water or oil. Check transmission fluid temperature sensor A or B resistance between terminals of connector. Thus make sure its resistance decreases as temperature rises.

Transmission fluid temperature sensor A and B resistance

10 °C (50 °F): 6.445 kΩ

25 °C (77 °F): 3.5 kΩ

110 °C (230 °F): 0.247 kΩ

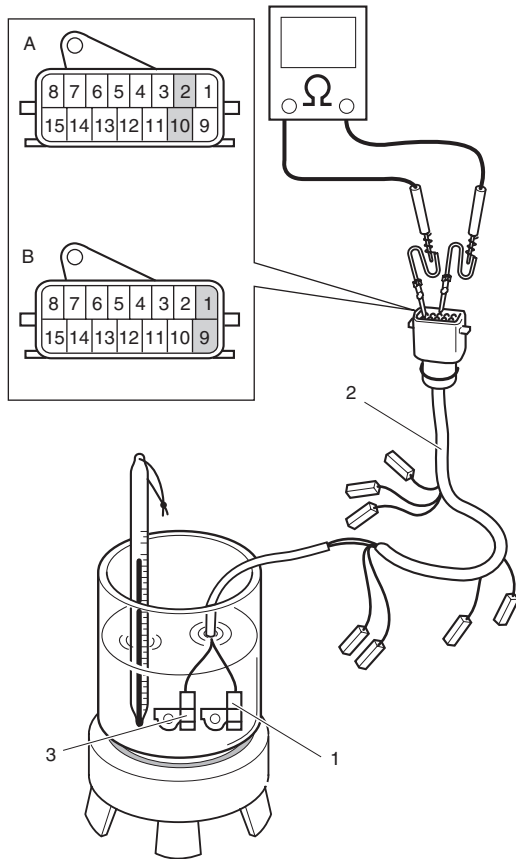

I6JB0B510010-01

Transmission Control Module (TCM) Removal and Installation


S6JB0B5106025

⚠ CAUTION

TCM consists of highly precise parts, so when handling it, be careful not to expose it to excessive shock.

Removal

- 1) Disconnect negative cable at battery.
- 2) Disable air bag system.
Refer to "Disabling Air Bag System in Section 8B".
- 3) Remove glove box.
- 4) Disconnect connectors from TCM (1).
- 5) Remove TCM with 4WD control module (2) by removing its nuts, and then separate TCM and 4WD control module.

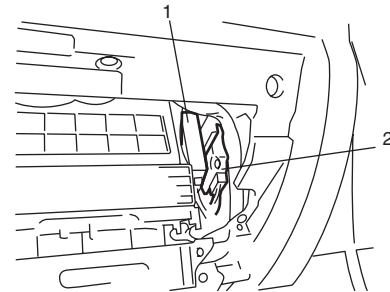

I6JB01510027-01

Installation


Reverse removal procedure noting the following points.

- Connect TCM connectors securely.
- Be sure to enable air bag system after TCM is back in place. Refer to "Enabling Air Bag System in Section 8B".

A/T Relay Inspection



S6JB0B5106026

- 1) Disconnect negative cable at battery.
- 2) Remove integration relay No.2 (1) from fuse box No.2 (2).

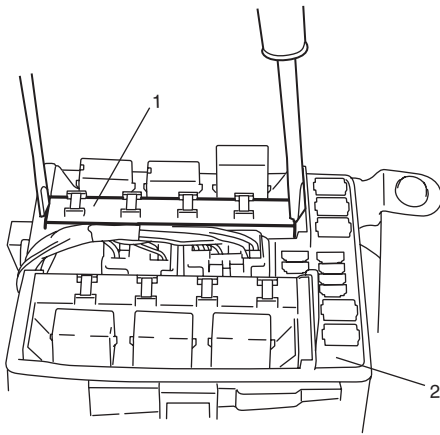

I5JB0A130031-02

- 3) Check that there is no continuity between terminals "E41-1" and "E38-8".
If there is continuity, replace relay.
- 4) Connect battery positive (+) terminal to terminal "E38-6" of relay. Connect battery negative (–) terminal to terminal "E38-7" of relay. Check for continuity between terminal "E41-1" and "E38-8". If there is no continuity when relay is connected to the battery, replace integration relay No.2.

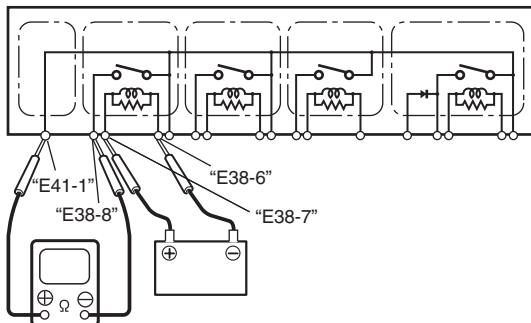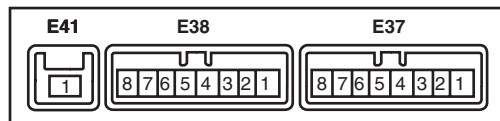

I5JB0A510159-01

Oil Cooler Pipes Removal and Installation

S6JB0B5106027

Removal

- 1) Lift up vehicle.
- 2) Make sure to wash dirt off from around pipe joints.
- 3) When engine is cool, loosen oil cooler pipe union bolts with oil outlet union locked and remove oil cooler pipes (1) from oil outlet union and hoses.

NOTE

To avoid fluid leakage, plug open ends of oil outlet unions and hoses right after they are disconnected.

Installation

- 1) Use new union gaskets and connect oil cooler pipes to oil outlet unions.
- 2) Connect hoses to pipes and clamp them securely.
- 3) Tighten union bolts (2) to specified torque with oil outlet union locked.


Tightening torque

Oil cooler pipe union bolt (a): 25 N·m (2.5 kgf-m, 18.0 lb-ft)

- 4) Tighten pipe clamp bolt (3) with specified torque.


Tightening torque



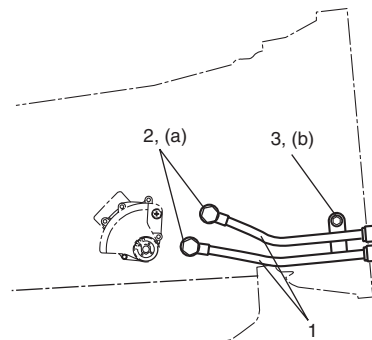

 
Pipe clamp bolt (b): 10 N·m (1.0 kgf-m, 7.5 lb-ft)






I6JB01510028-01

- 5) Check A/T fluid level according to procedure described in "A/T Fluid Change".
- 6) Check for fluid leakage after warming up A/T.



 1. Torque converter mounting bolt No.1 : After tightening torque converter mounting bolt No.1, tighten torque converter mounting bolt No.2.	11. Transmission to engine bolt No.1	21. Transmission range	31. Starting motor bolt
2. Torque converter mounting bolt No.2	12. Exhaust manifold left bracket bolt	22. Engine harness	32. Transmission
3. Drive plate	13. Transmission to engine bolt No.2	23. Transfer	33. Drive plate bolt
4. Torque converter	14. CKP sensor	24. Transfer to transmission bolt	 (a) : 65 N·m (6.5 kgf-m, 47.0 lb-ft)
5. Oil cooler hose	15. Engine to transmission nut	25. Engine rear mounting	 (b) : 10 N·m (1.0 kgf-m, 7.5 lb-ft)
6. Clamp	16. Exhaust manifold right bracket	26. Engine rear mounting bolt	 (c) : 80 N·m (8.0 kgf-m, 58.0 lb-ft)
7. Drive plate cover bolt	17. Exhaust manifold right bracket bolt	27. Engine rear mounting bracket	 (d) : 30 N·m (3.0 kgf-m, 22.0 lb-ft)

5A-104 Automatic Transmission/Transaxle:

8. Drive plate cover	18. Input shaft speed sensor	28. Engine rear mounting bracket bolt	 (e) : 23 N·m (2.3 kgf-m, 17.0 lb-ft)
9. Oil cooler pipe No.1	19. Output shaft speed sensor	29. Mounting member bolt	 (f) : 55 N·m (5.5 kgf-m, 40.0 lb-ft)
10. Exhaust manifold left bracket	20. Transmission wire connector	30. Starting motor	 (g) : 69 N·m (6.9 kgf-m, 50.0 lb-ft)

Automatic Transmission Assembly Dismounting and Remounting

S6JB0B5106029


Dismounting

- 1) Dismount engine with transmission and transfer referring to “Engine Assembly Removal and Installation in Section 1D”.
- 2) Remove transfer from transmission.
- 3) Remove engine rear mounting member and rear mounting.
- 4) Remove exhaust manifold left and right bracket.
- 5) Remove cooler hose and cooler pipe No.1.
- 6) Remove drive plate cover, and then remove drive plate bolts by holding crankshaft pulley bolt stationary.
- 7) Remove Starting Motor referring to “Starting Motor Dismounting and Remounting in Section 1I”.
- 8) Remove transmission assembly from engine assembly.

Installation

For remounting, reverse dismounting procedure noting the following points.

- Tighten each bolts and nuts referring to “Automatic Transmission Unit Components”
- Tighten drive plate bolt No.1 (1) first and then tighten drive plate bolts No.2 (2).

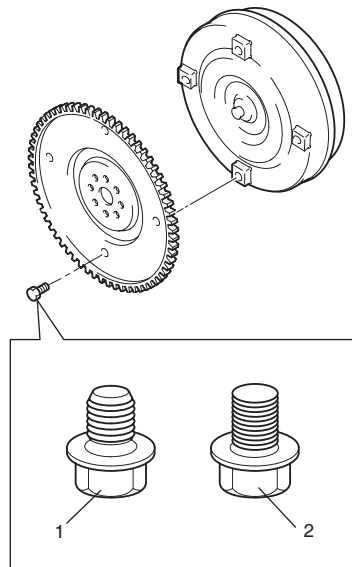


I6JB01510031-01

- Set each clamp for wiring securely.
- Fill A/T fluid referring to “A/T Fluid Change”.
- Connect battery and check function of engine and transmission.




 
Automatic Transmission Unit Components

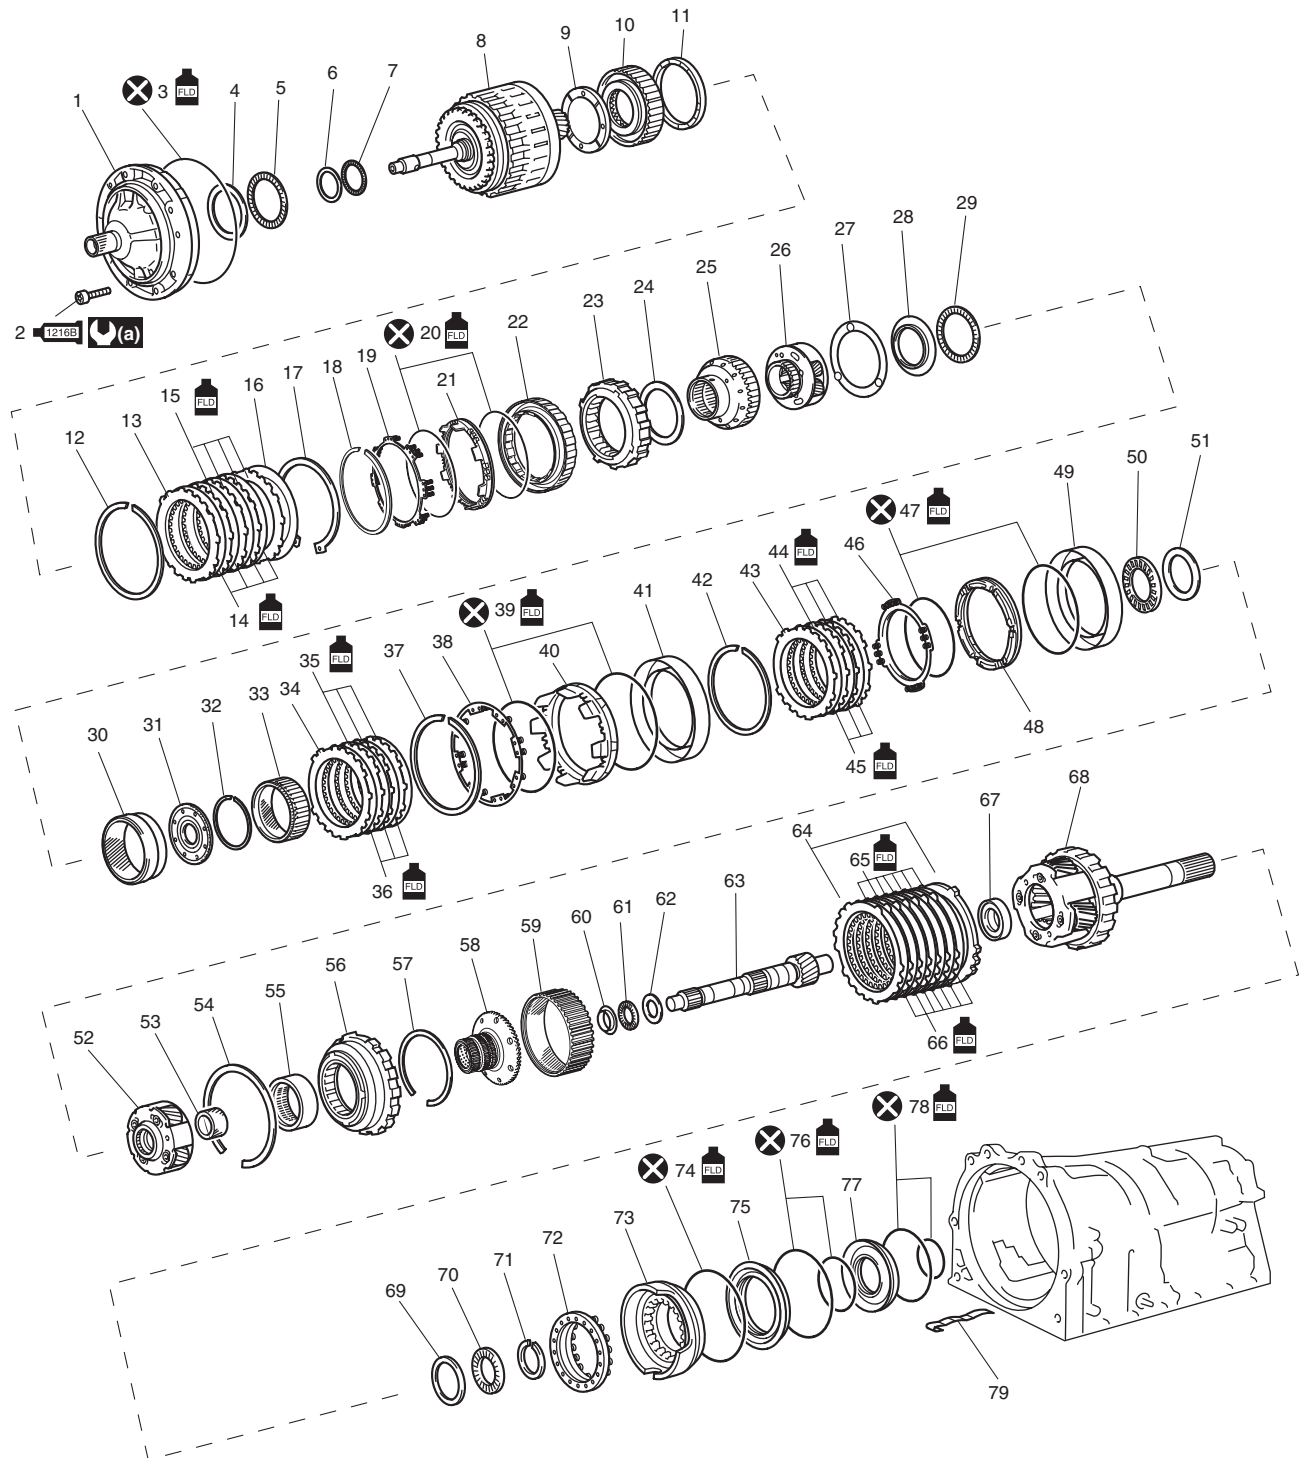S6JB0B5106030



I6JB01510029-01

1. Oil pump assembly	29. Thrust needle roller bearing	57. Snap ring
2. Oil pump bolt	30. Front planetary ring gear	58. Rear planetary flange
3. O-ring	31. Front planetary ring gear flange	59. Rear planetary ring gear
4. Thrust bearing race No.1	32. Snap ring	60. Thrust bearing race No.7
5. Thrust needle roller bearing No.1	33. Middle planetary ring gear	61. Thrust needle roller bearing
6. Thrust bearing race No.10	34. No.1 brake flange	62. Thrust bearing race No.8
7. Thrust needle roller bearing	35. No.1 brake disc	63. Intermediate shaft
8. Clutch drum and input shaft assembly	36. No.1 brake plate	64. 1st & reverse (No.4) brake flange
9. Clutch drum thrust washer No.2	37. Snap ring	65. 1st & reverse (No.4) brake disc
10. One-way No.2 clutch assembly	38. No.1 brake piston return spring	66. 1st & reverse (No.4) brake plate
11. Clutch hub thrust washer	39. O-ring	67. Thrust needle roller bearing
12. Snap ring	40. No.1 brake piston	68. Rear planetary gear assembly

13. 2nd (No.3) brake flange	41. No.1 brake cylinder	69. Thrust bearing race No.9
14. 2nd (No.3) brake disc	42. Snap ring	70. Thrust needle roller bearing
15. 2nd (No.3) brake plate	43. No.2 brake flange	71. Snap ring
16. 2nd (No.3) brake cushion plate	44. No.2 brake disc	72. 1st & reverse (No.4) brake return spring
17. Snap ring	45. No.2 brake plate	73. 1st & reverse (No.4) brake piston
18. Snap ring	46. No.2 brake piston return spring	74. O-ring
19. 2nd (No.3) brake return spring	47. O-ring	75. Brake reaction sleeve
20. O-ring	48. No.2 brake piston	76. O-ring
21. 2nd (No.3) brake piston	49. No.2 brake cylinder	77. 1st & reverse (No.4) brake inner piston
22. 2nd (No.3) brake cylinder	50. Thrust needle roller bearing	78. O-ring
23. One-way No.1 clutch assembly	51. Thrust bearing race No.4	79. Brake plate stopper spring
24. Planetary carrier thrust washer No.1	52. Middle planetary gear assembly	 (a) : 21 N·m (2.1 kgf-m, 15.5 lb-ft)
25. One-way No.1 clutch inner race	53. Planetary sun gear	 : Do not reuse.
26. Front planetary gear assembly	54. Snap ring	 : Apply A/T fluid
27. Planetary carrier thrust washer No.2	55. One-way No.3 clutch inner race	 1216B : Apply sealant 99000-31230 to bolt flange
28. Thrust bearing race No.3	56. One-way No.3 clutch assembly	

Automatic Transmission Unit Disassembly

S6JB0B5106031

Reference: "Automatic Transmission Assembly
Dismounting and Remounting"

CAUTION


- Keep component parts in group for each subassembly and avoid mixing them up.
- Clean all parts with cleaning solvent thoroughly and air dry them.
- Use kerosene or automatic transmission fluid as cleaning solvent.
- Do not use wiping cloths or rags to clean or dry parts.
- All oil passages should be blown out and checked to make sure that they are not obstructed.
- Keep face and eyes away from solvent spray while air blowing parts.
- Check mating surface for irregularities and remove them, if any, and clean it again.
- Soak new clutch discs and brake discs in transmission fluid for at least 2 hours before assembly.
- Replace all gaskets and O-rings with new ones.
- Apply automatic transmission fluid to all O-rings.

- When installing seal ring, be careful so that it is not expanded excessively, extruded or caught.
- Replace oil seals that are removed and apply grease to their lips.
- Before installing, be sure to apply automatic transmission fluid to sliding, rolling and thrusting surface of all component parts. Also after installation, make sure to check each part for proper operation.
- Always use torque wrench when tightening bolts.

1) Extract torque converter (1) from transmission.


CAUTION

Remove torque converter as much straight as possible.
Leaning it may cause to damage oil seal lip.

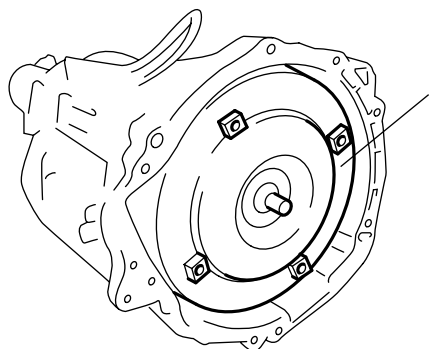



I4JA01512052-01

- 2) Remove breather pipe (1) from transmission.

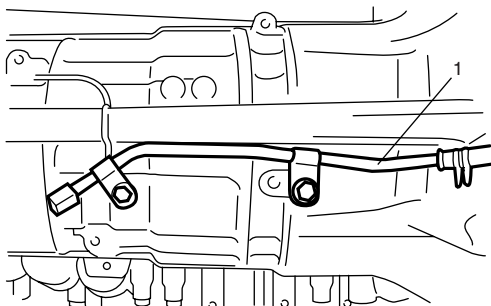


I4JA01512053-01

- 3) Remove output shaft speed sensor (1) and input shaft speed sensor (2).

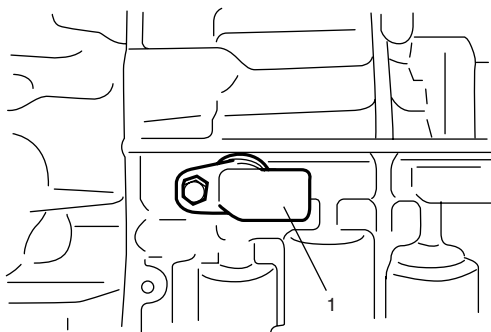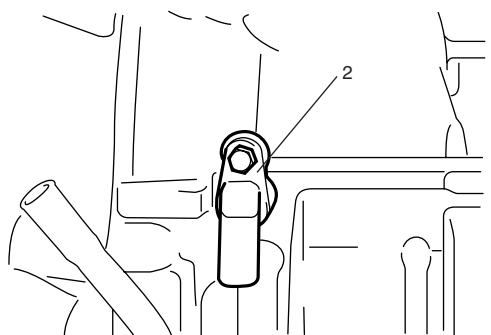


I5JA01512004-01

- 4) Remove the nut, the washer and manual select lever (1).

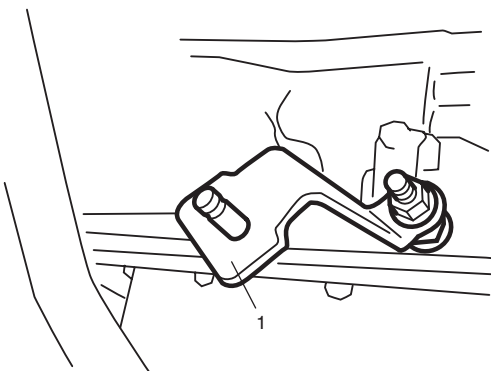


I6JB01510032-01

- 5) Unbend bend parts of lock washer (1) and then remove manual shift shaft nut (2), lock washer and grommet.
- 6) Remove transmission range sensor (3) by removing sensor bolt.

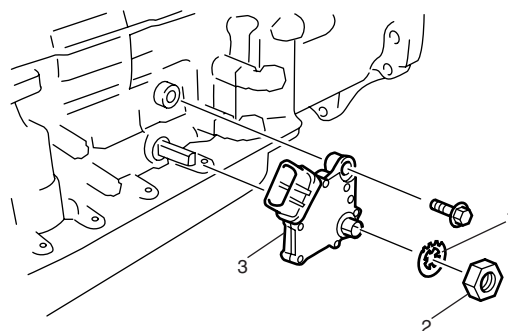


I4JA01512056-01

- 7) Remove oil cooler pipes (1) from transmission.

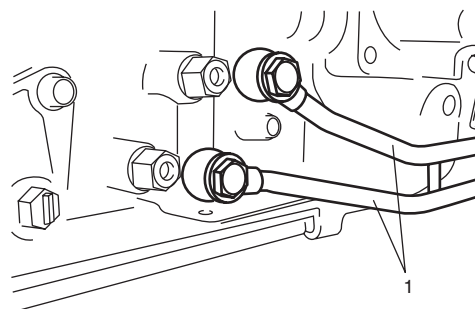


I6JB01510033-01

- 8) Remove converter housing (1) by removing 10 bolts.

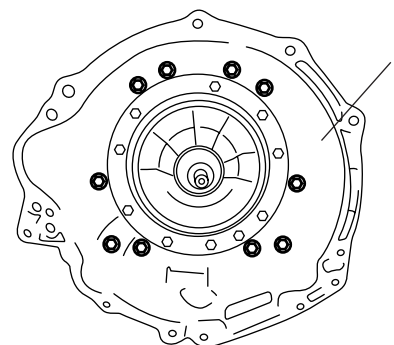


I4JA01512058-01

- 9) Remove transmission case adapter (1) by removing 8 bolts.

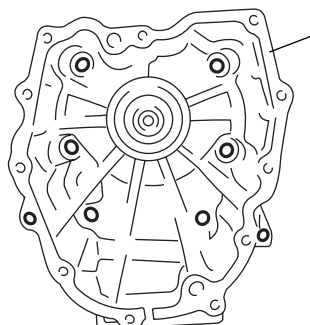


I4JA01512064-01

- 10) Remove oil pan bolts (1).
- 11) Remove oil pan and oil pan gasket from transmission case.

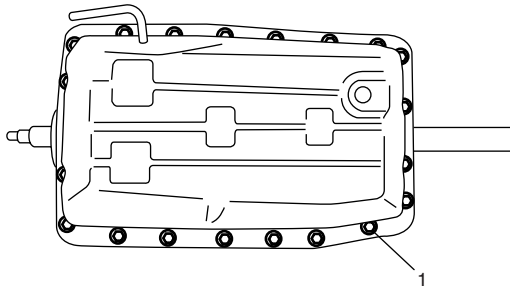


I4JA01512066-01

- 12) Remove the 4 magnets (1) and clean them to steel particles etc.

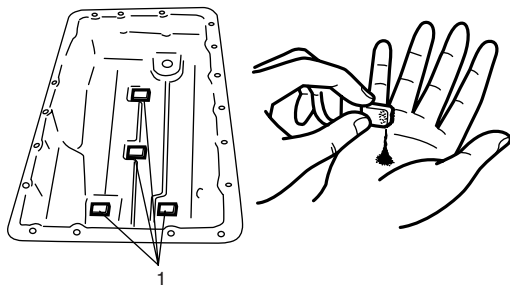


I4JA01512067-01

- 13) Remove oil strainer (1) from valve body assembly.

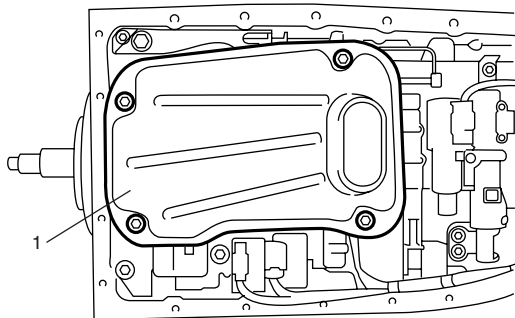

I4JA01512068-01

- 14) Remove transmission fluid temperature sensor A (1) and B (4) (if equipped) from sensor clamps (2).
- 15) Remove wire harness clamp (3).
- 16) Disconnect the following connectors from shift solenoid-A, shift solenoid-B, shift solenoid-E, TCC solenoid, pressure control solenoid-A, pressure control solenoid-B and pressure control solenoid-C.

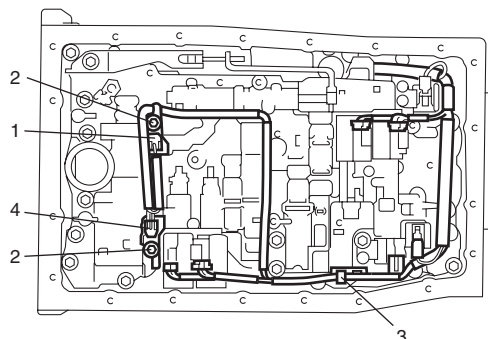


I6JB0B510009-01

- 17) After removing bolt (1) pull out transmission wire connector (2) from transmission case.


⚠ CAUTION

When pulling transmission wire harness out of transmission case, take care not to damage connectors and transmission fluid temperature sensors at narrow exist of case.

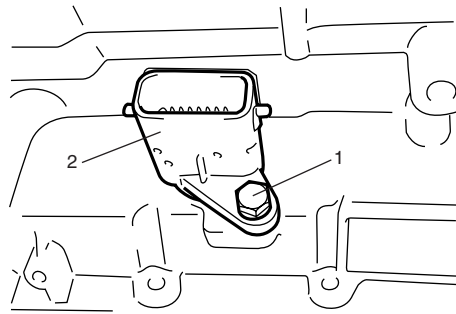


I4JA01512070-01

- 18) Remove spring plate (1) and manual shift lever spring (2).
- 19) Remove valve body assembly (3) by removing 19 bolts.

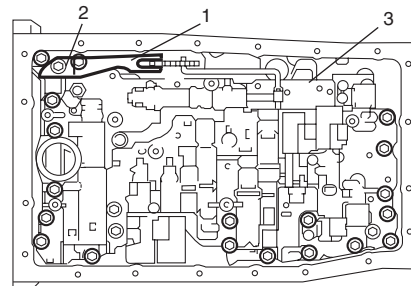


I4JA01512071-01

- 20) Remove check ball body (1) and spring (2).

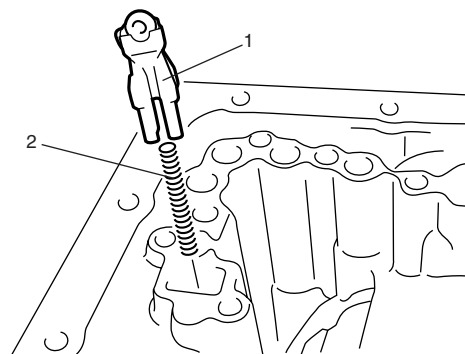


I4JA01512072-01

- 21) Remove transmission case gaskets (1).

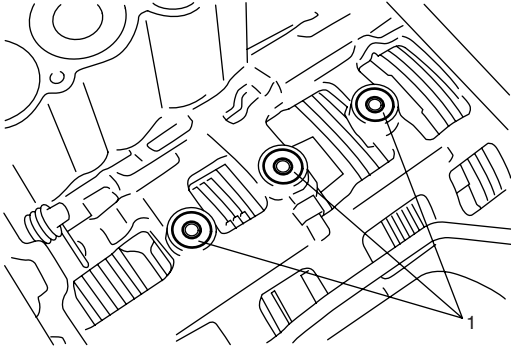

I4JA01512073-01

- 22) Remove brake drum gaskets (1) from transmission case.

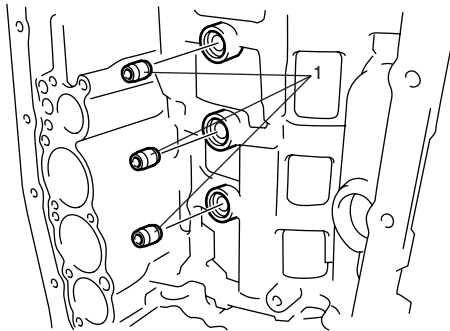


I4JA01512074-01

- 23) Remove direct clutch accumulator piston (1) by compressed air (392 kPa, 4.0 kg/cm², 57 psi) into hole (2).

NOTE

Cover accumulator piston (1) with shop cloth while blowing because A/T fluid should be spattered.

- 24) Remove direct clutch accumulator piston spring from transmission case.

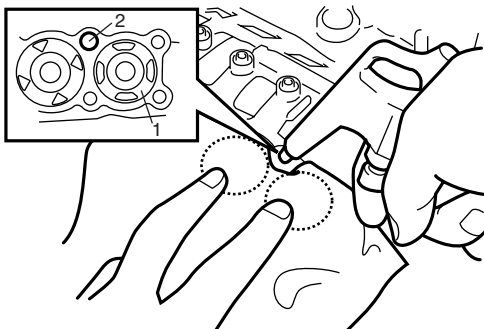


I4JA01512075-01

- 25) Remove 2nd (No.3) brake accumulator piston (1) by compressed air (392 kPa, 4.0 kg/cm², 57 psi) into hole (2).

NOTE

Cover accumulator piston (1) with shop cloth while blowing because A/T fluid should be spattered.

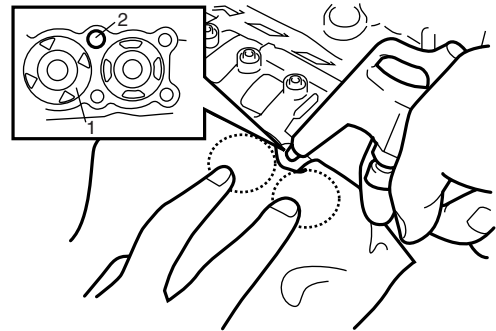


I4JA01512076-01

- 26) Remove 2nd (No.3) brake accumulator piston spring from transmission case.

- 27) Remove reverse clutch accumulator piston (1) by compressed air (392 kPa, 4.0 kg/cm², 57 psi) into hole (2).

NOTE


Cover accumulator piston (1) with shop cloth while blowing because A/T fluid should be spattered.

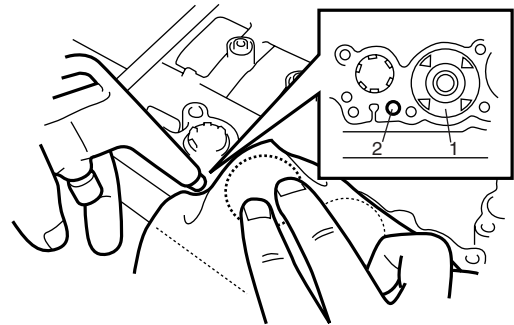

I4JA01512077-01

- 28) Remove reverse clutch accumulator piston springs from transmission case.

- 29) Remove forward clutch accumulator piston (1).

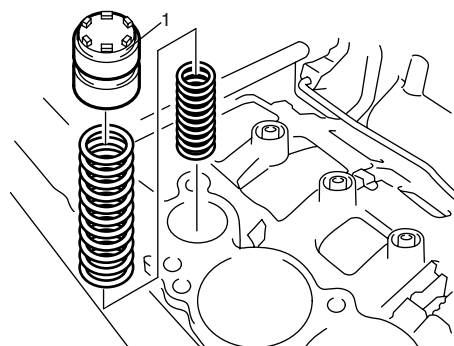


I4JA01512078-01

5A-110 Automatic Transmission/Transaxle:


30) Remove forward clutch accumulator piston springs from transmission case.

31) Remove parking pawl bracket (1).

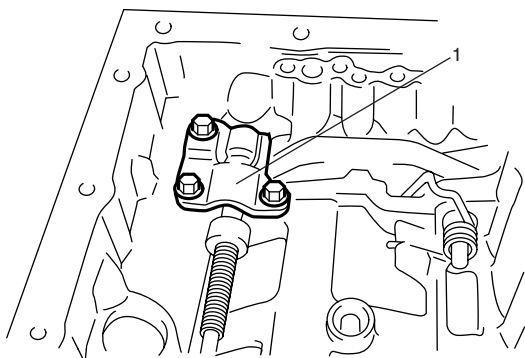


I4JA01512079-01

32) Remove parking lock rod (2) from manual shift lever (1).

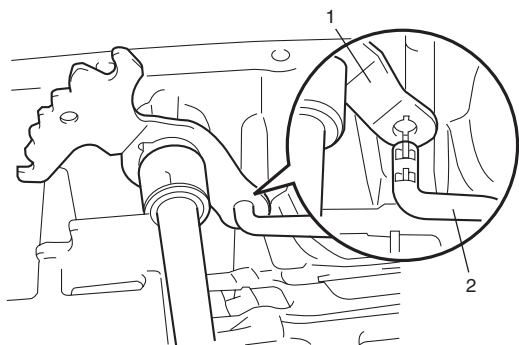

I4JA01512080-01


33) Pull out parking pawl pin (1) to oil pump side and then remove parking lock pawl (2) and parking pawl spring (3).

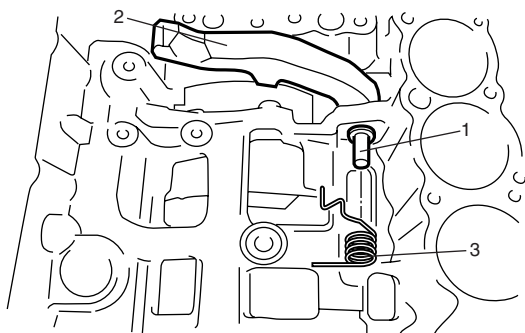

I4JA01512081-01

34) Remove manual shift shaft and lever as follows.

a) Undo caulking of sleeve cover (1) by using flat end rod or the like and hammer.


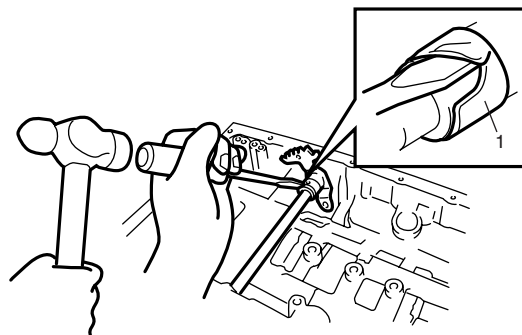


I4JA01512082-01

b) Drive out manual shift lever pin (1) by using special tool and hammer.


Special tool
(A): 09922-89810

c) Pull out manual shift shaft (2) from transmission case, and then remove manual shift lever (3) and sleeve cover (4).

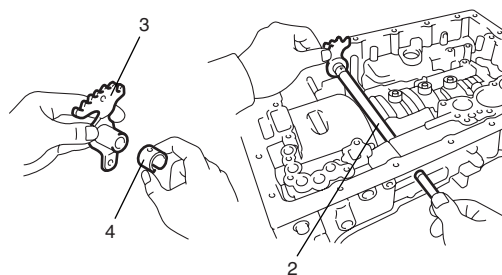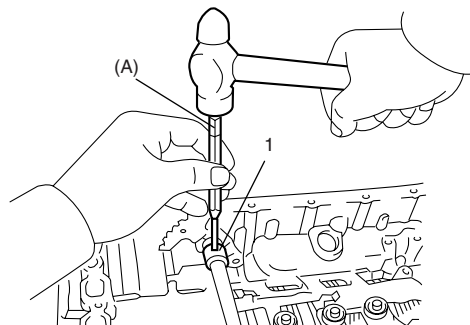

I4JA01512083-01

35) Remove 2 manual shift shaft oil seals (1) from transmission case by using flat end rod or the like.

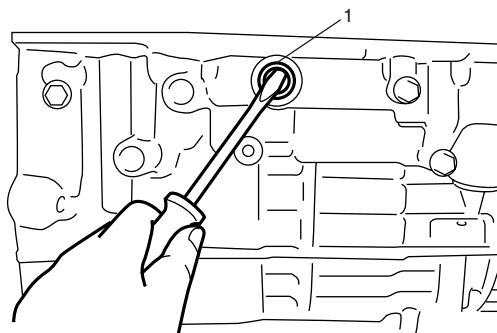


I4JA01512084-01

36) Place transmission on stand facing oil pump upward.

NOTE

- To prevent transmission case from getting damaged, protect its contacting surface with stand by using shop cloth or the like.
- A stand of such size as shown in the figure will facilitate work.

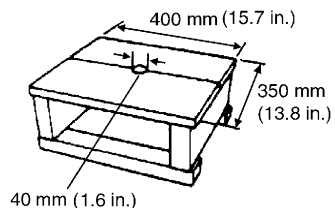


I4JA01512086-01

37) After removing oil pump bolts, remove oil pump assembly (1) by using special tool.

Special tool


(A): 09927-66520

(B): 09920-13120

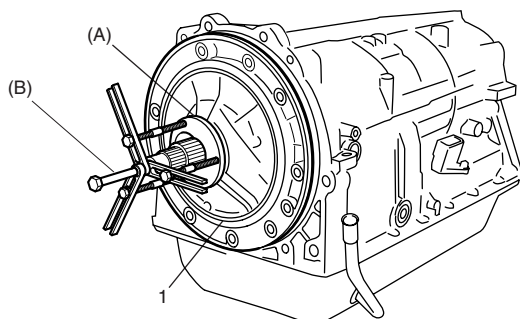


I4JA01512351-01

38) Remove thrust bearing race No.1 (1) and thrust bearing race No.10 (2) from oil pump assembly.

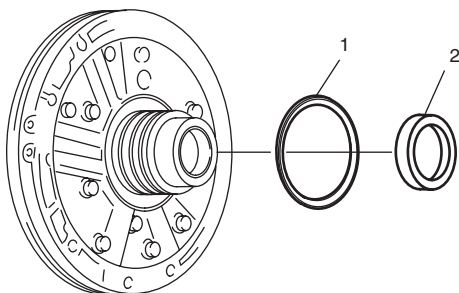


I6JB01510034-01

39) Remove clutch drum and input shaft assembly (1) from transmission case.

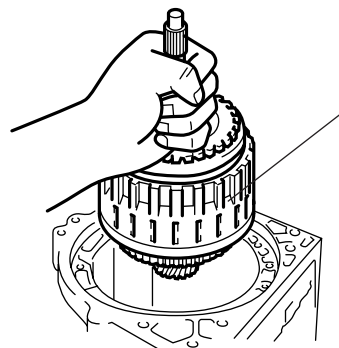


I4JA01512088-01

40) Remove clutch hub thrust washer (1) and thrust needle roller bearing No.1 (2) and thrust needle roller bearing (3) from clutch drum and input shaft assembly.

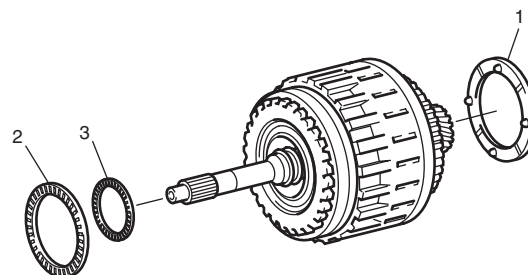


I6JB01510035-01

41) Remove one-way No.2 clutch assembly (1) and clutch drum thrust washer No.2 (2) from clutch drum & input shaft assembly.

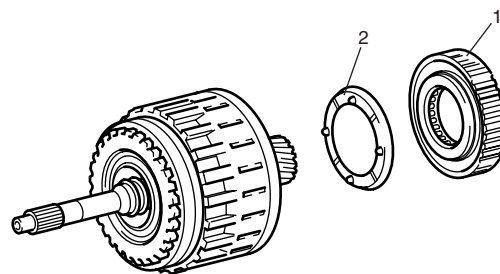


I4JA01512090-01

42) Remove snap ring (1) by using flat end rod or the like.

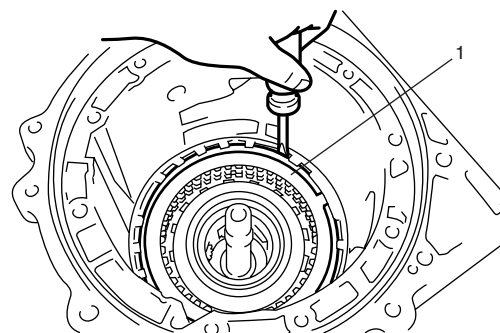

I4JA01512091-01

- 43) Remove 2nd (No.3) brake flange "F", 2nd (No.3) brake discs "D", 2nd (No.3) brake plates "P" and 2nd (No.3) brake cushion plate (1) from transmission case.

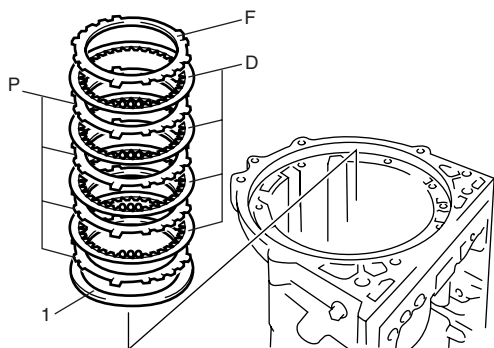


I4JA01512092-01

- 44) Remove snap ring (1) by using special tool.


Special tool

(A): 09900-06108

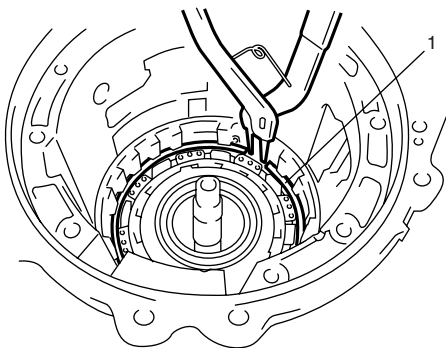


I4JA01512093-01

- 45) Remove one-way No.1 clutch assembly (1) and planetary carrier thrust washer No.1 (2) from transmission case.

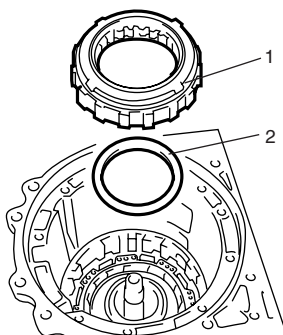

I4JA01512094-01

- 46) Remove 2nd (No.3) brake piston (1) including 2nd (No.3) brake cylinder (2) from transmission case.

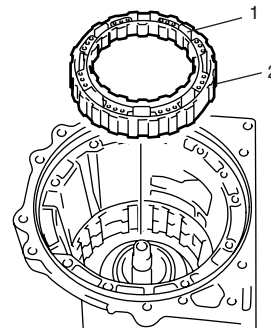

I4JA01512095-01


- 47) Compress 2nd (No.3) brake return spring (1) until 2nd (No.3) brake return spring is lowered to the place 1 – 2 mm (0.039 – 0.078 in.) from the snap ring groove by using special tool and then remove snap ring (2).

⚠ CAUTION

Be careful when applying pressure, for overpressure will cause 2nd (No.3) brake return spring to deform.


Special tool

(A): 09927-66540

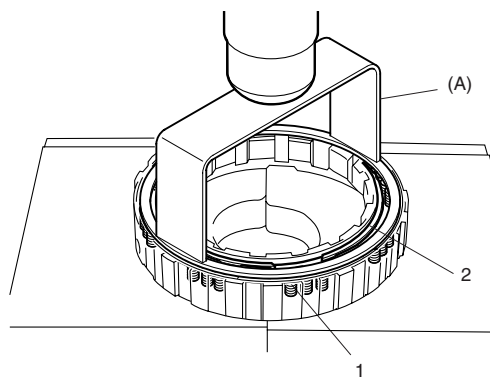


I4JA01512352-01

- 48) Remove 2nd (No.3) brake piston from 2nd (No.3) brake cylinder (1) by applying compressed air (392 kPa, 4.0 kg/cm², 57 psi) into oil hole (2) of 2nd (No.3) brake cylinder (1) as shown in figure.

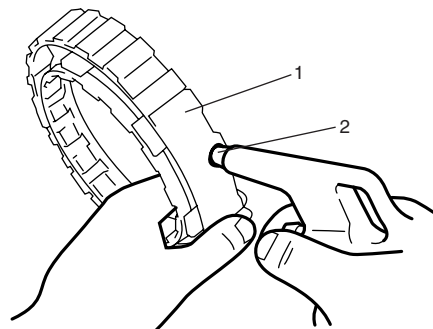


I4JA01512097-01

- 49) Remove front planetary gear assembly (1) and one-way No.1 clutch inner race (2) from transmission case.

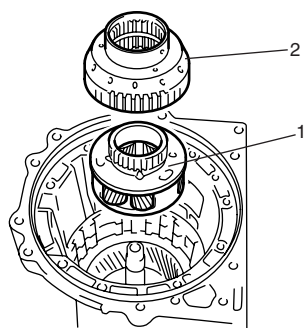


I4JA01512098-01

- 50) Remove thrust needle roller bearing (1), thrust bearing race No.3 (2) and planetary carrier thrust washer No.2 (3) from transmission case.

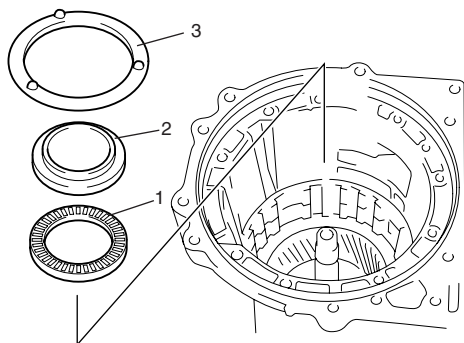


I4JA01512099-01

- 51) Remove front planetary ring gear assembly (1) and thrust needle roller bearing (2) from transmission case.

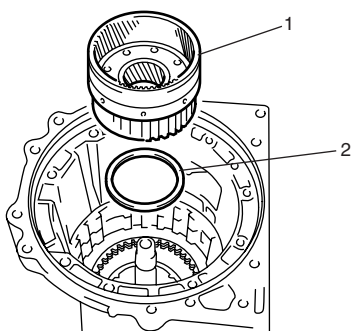


I4JA01512100-01

- 52) Remove snap ring (1) by using flat end rod or the like.

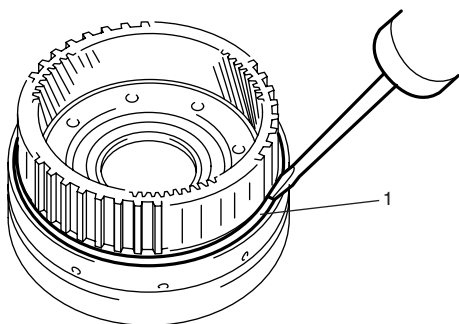


I4JA01512101-01

- 53) Remove middle planetary ring gear (1) and front planetary ring gear flange (2) from front planetary ring gear.

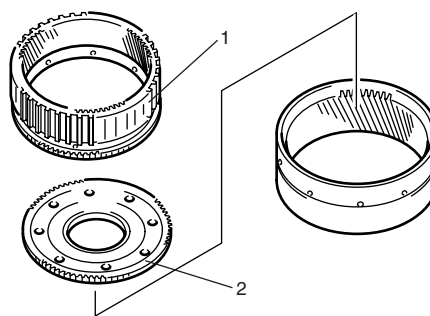


I4JA01512102-01

- 54) Remove No.1 brake flange "F", No.1 brake discs "D" and No.1 brake plates "P" from transmission case.

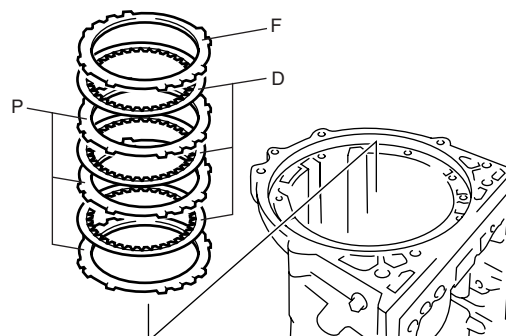


I4JA01512103-01

- 55) Remove snap ring (1) by using flat end rod or the like.

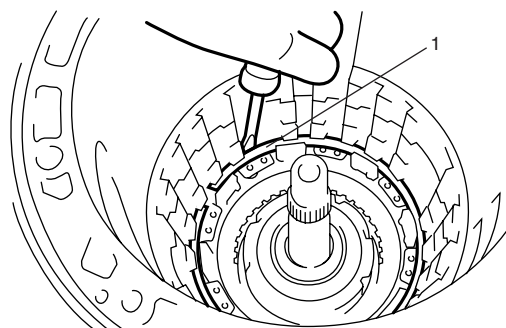

I4JA01512104-01


- 56) Remove No.1 brake piston return spring (1) and No.1 brake piston (2) from transmission case.

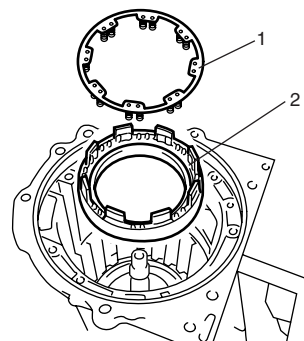

I4JA01512105-01


57) Remove No.1 brake piston from No.1 brake piston cylinder (1) by applying compressed air (392 kPa, 4.0 kg/cm², 57 psi) into oil hole (2) of No.1 brake piston cylinder (1) as shown in figure.

58) Remove O-ring from No.1 brake piston.

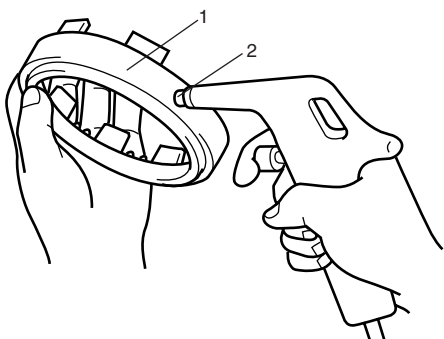


I4JA01512106-01

59) Remove snap ring (1) by using flat end rod or the like.

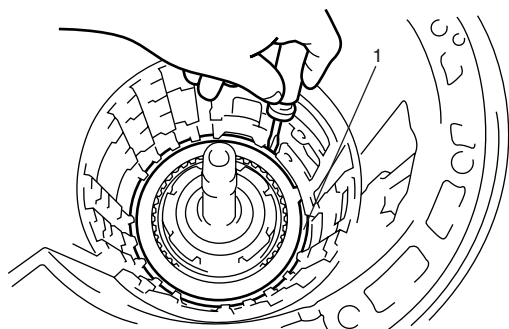

I4JA01512107-01

60) Remove No.2 brake flange "F", No.2 brake piston return spring (1), No.2 brake discs "D" and No.2 brake plates "P" from transmission case.

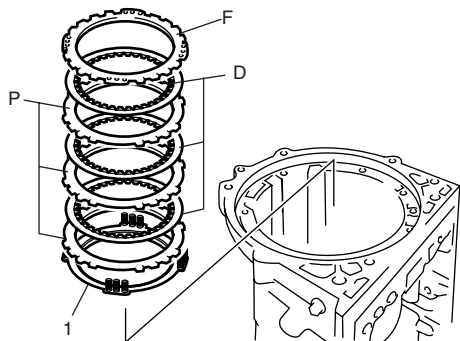


I4JA01512108-01

61) Remove No.2 brake cylinder including No.2 brake piston (1) by applying compressed air (392 kPa, 4.0 kg/cm², 57 psi) into oil hole (2) of transmission case.




I4JA01512109-01

62) Remove No.2 brake piston (1) from No.2 brake cylinder (2).

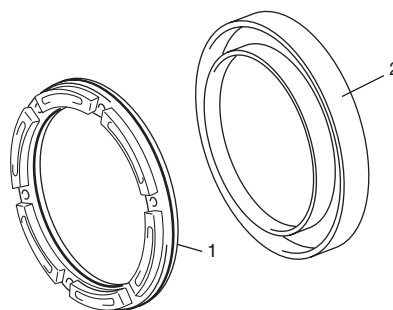

I4JA01512110-01


63) Remove middle planetary gear assembly (1), planetary sun gear (2) and thrust bearing race No.4 (3) from transmission case.

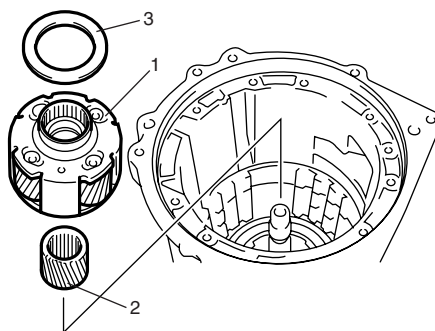

I4JA01512111-01


64) Remove snap ring (1) by using special tool.

Special tool
(A): 09900-06108

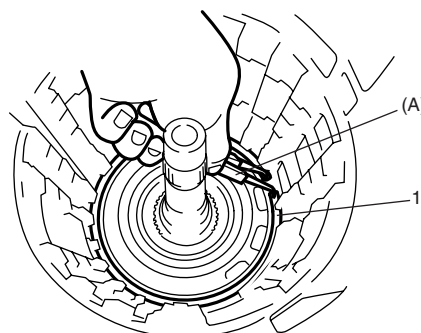


I4JA01512112-01

- 65) Remove intermediate shaft (1) and one-way No.3 clutch assembly (2) from transmission case.

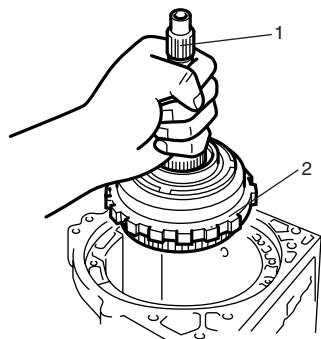


I4JA01512113-01

- 66) Remove one-way No.3 clutch assembly (1) and one-way No.3 clutch inner race (2) from intermediate shaft.

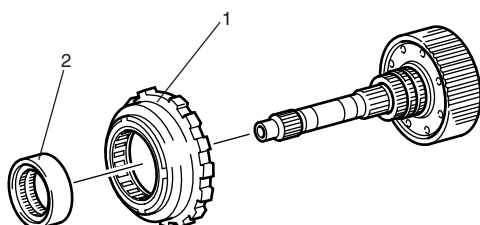


I4JA01512114-01

- 67) Remove thrust bearing race No.8 (1), thrust needle roller bearing (2), thrust bearing race No.7 (3) and planetary ring gear flange assembly (4) from intermediate shaft.

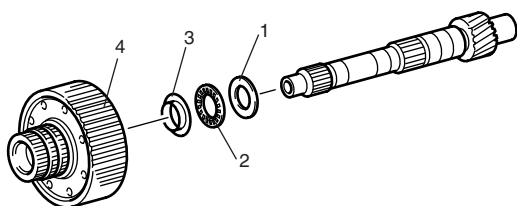


I4JA01512115-01

- 68) Remove snap ring (1) by using flat end rod or the like.

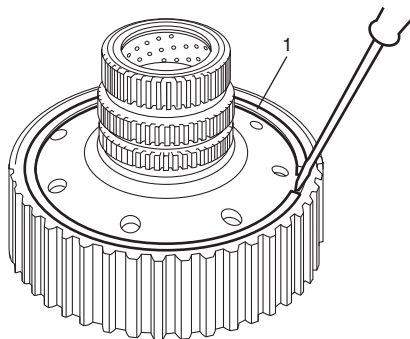


I4JA01512116-01

- 69) Remove rear planetary ring gear flange (1) from rear planetary ring gear (2).

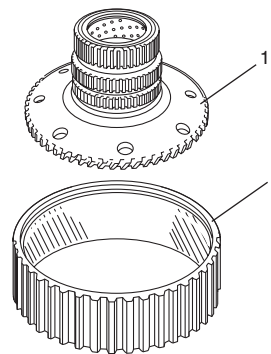

I4JA01512117-01

- 70) Remove brake plate stopper spring (1) from transmission case.

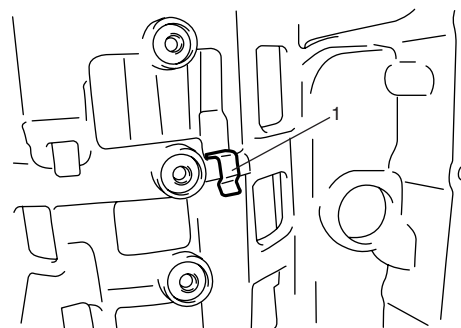


I4JA01512118-01

- 71) Remove 1st & reverse (No.4) brake flange (1) from transmission case.


- 72) Remove 1st & reverse (No.4) brake plates "P" and 1st & reverse (No.4) brake discs "D" from transmission case.

- 73) Remove 1st & reverse (No.4) brake flange "F" from transmission case.

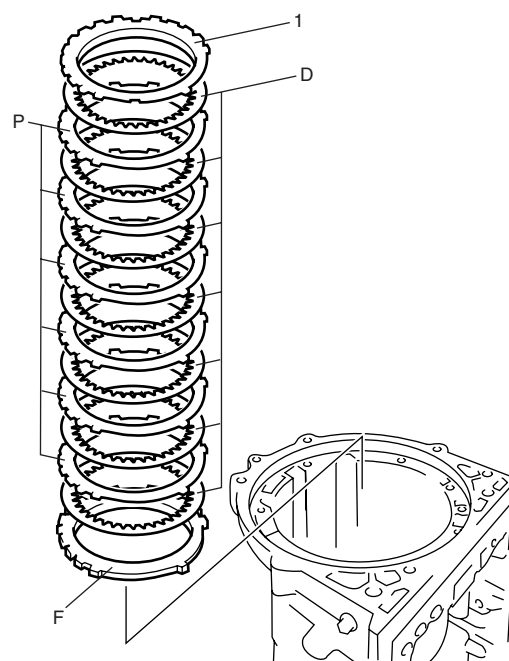


I4JA01512119-01

- 74) Remove rear planetary gear assembly (1) from transmission case.

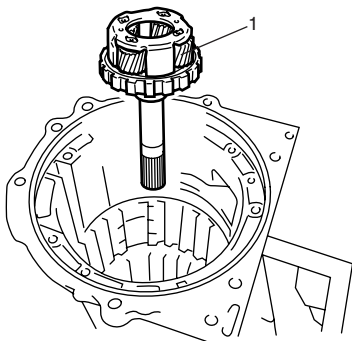


I4JA01512120-01

- 75) Remove thrust bearing race No.9 (1) and thrust needle roller bearing (2) from rear planetary gear assembly.

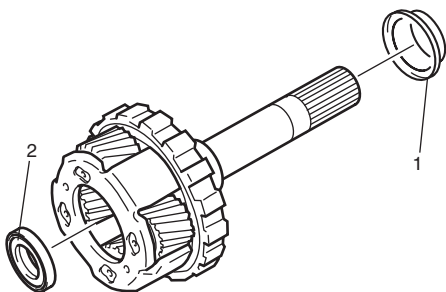

I6JB01510036-01

- 76) Remove thrust needle roller bearing (1) from transmission case.

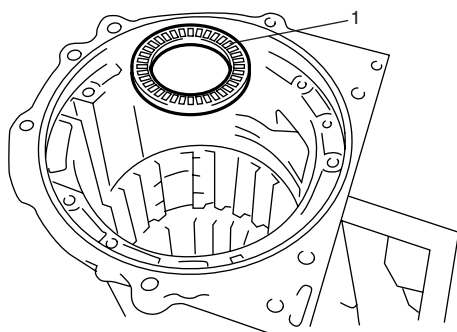

I4JA01512122-01


- 77) Compress 1st & reverse (No.4) brake return spring (2) until the 1st & reverse (No.4) return spring is lowered to the place 1 – 2 mm (0.039 – 0.078 in.) from the snap ring groove by using special tool and then remove snap ring (1).

⚠ CAUTION

Be careful when applying pressure, for overpressure will cause plate section of 1st & reverse (No.4) return spring to deform.


Special tool

(A): 09922-86010

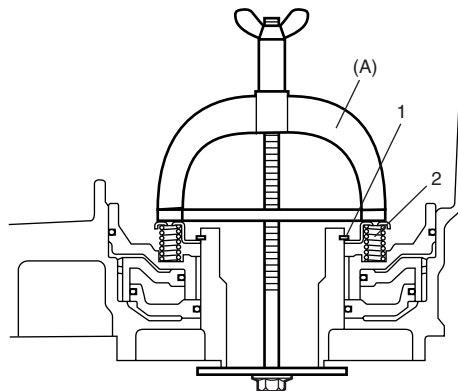

I4JA01512123-01


- 78) Remove 1st & reverse (No.4) brake return spring (1).

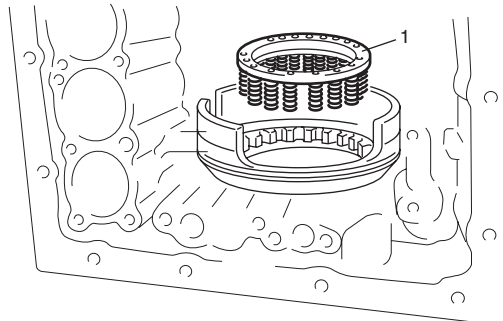

I4JA01512124-01

- 79) Remove 1st & reverse (No.4) brake piston (1) by applying compressed air (392 kPa, 4.0 kg/cm², 57 psi) into oil hole (2) of transmission case.


- 80) Remove O-ring from 1st & reverse (No.4) brake piston (1).

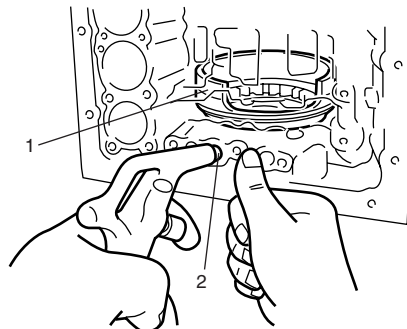

I4JA01512125-01

81) Remove brake reaction sleeve (1) by using special tools.


Special tool
(A): 09920-20310

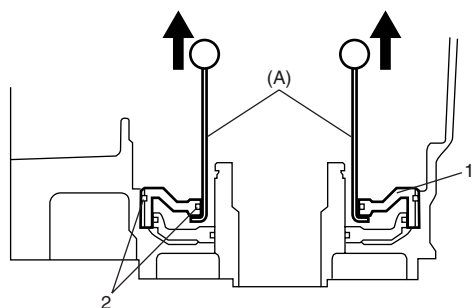

I4JA01512126-01

82) Remove 1st & reverse brake inner piston (1) by using special tools.


Special tool
(A): 09920-20310

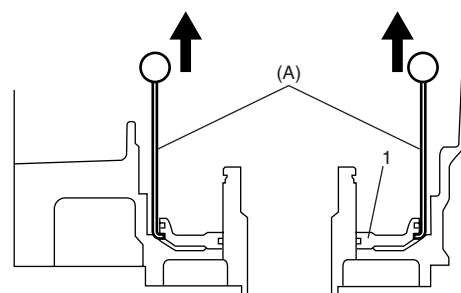

I4JA01512127-01

Oil Pump Assembly Components

S6JB0B5106032

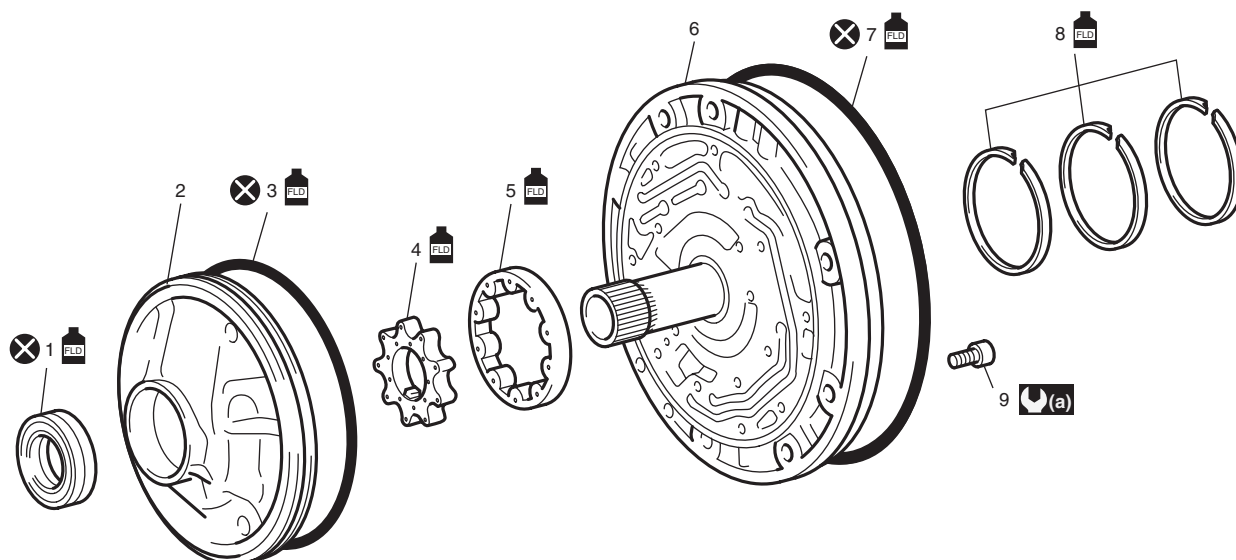

I6JB01510037-01

1. Oil pump oil seal	5. Oil pump driven gear	9. Oil pump body bolt
2. Oil pump body	6. Stator shaft assembly	(a) : 12 N·m (1.2 kgf-m, 9.0 lb-ft)
3. O-ring	7. O-ring	: Do not reuse.
4. Oil pump drive gear	8. Clutch drum oil seal ring	: Apply A/T fluid

Oil Pump Disassembly and Assembly

S6JB0B5106033

Disassembly


- 1) Remove oil pump oil seal (1) by using special tool.

⚠ CAUTION

Be careful not to damage bushing and oil pump body.

Special tool

(A): 09913-50121

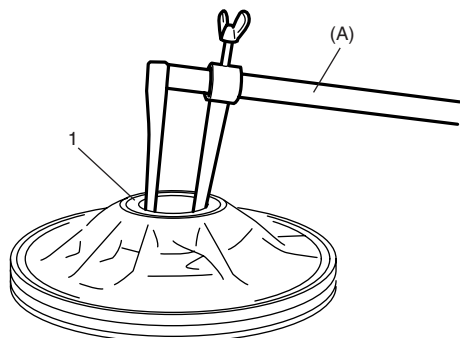


I4JA01512129-01

- 2) Remove 3 clutch drum oil seal rings (1).


NOTE

Be careful not to open seal ring more than necessary.

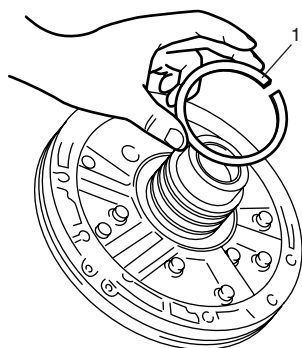


I4JA01512130-01

- 3) Remove stator shaft assembly (1) from oil pump body by removing 14 bolts.

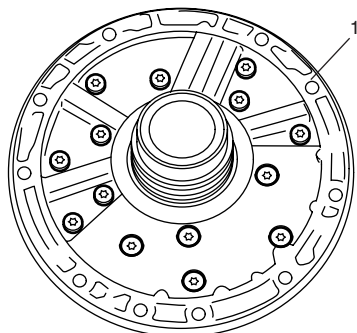

I4JA01512131-01

- 4) Give marks (1) on drive gear (2) and driven gear (3) by using water-proof paint.
- 5) Remove drive gear (2) and driven gear (3) from oil pump body.

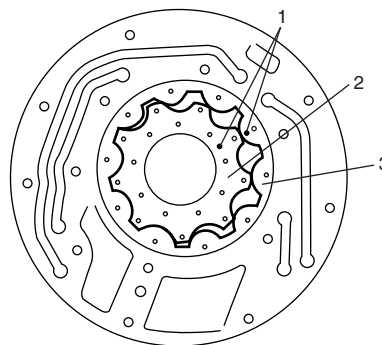


I4JA01512132-01

Assembly

- 1) Press-fit new oil pump oil seal (1) to oil pump body till its end face is flush with oil pump body end face, using special tool.


Special tool

(A): 09913-75810

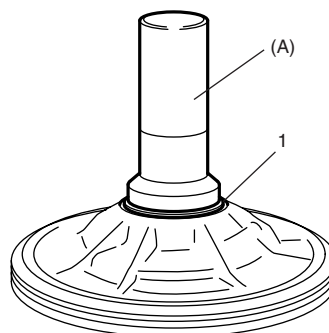


I4JA01512133-01

- 2) Install drive gear (1) and driven gear (2) to oil pump body aligning marks and facing marked surface (3) with the direction of stator shaft assembly side. Apply A/T fluid to gears and oil pump body.

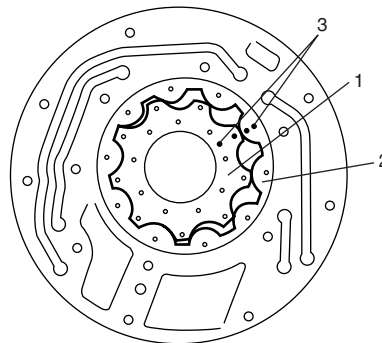

I4JA01512134-01

- 3) Apply A/T fluid to new O-ring (1) and then install O-ring to oil pump body.

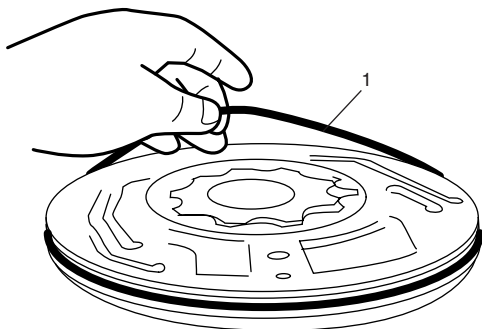


I4JA01512135-01

- 4) Install stator shaft assembly (1) to oil pump.
Tighten 14 bolts to specified torque.

Tightening torque

Oil pump body bolt (a): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

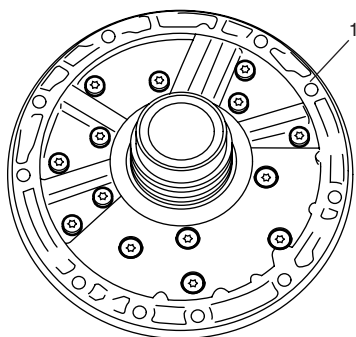


I4JA01512136-01

- 5) Apply A/T fluid to 3 clutch drum oil seal rings (1).
6) Squeeze ends of oil seal rings together with wrap distance 8 mm (0.314 in.) or less and then install them to stator shaft groove.

⚠ CAUTION

Do not spread seal ends excessively.

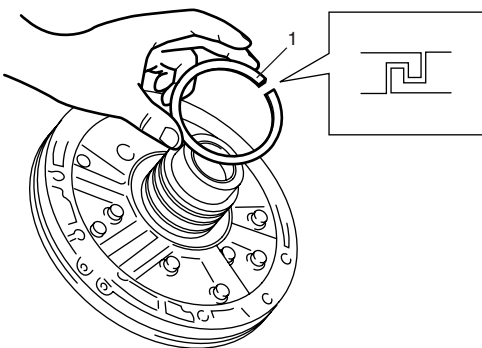


I4JA01512137-01

- 7) Check oil pump drive gear rotation as the following procedure.

- Place oil pump body (2) on torque converter (1).
- Make sure drive gear rotates smoothly.
- Remove oil pump body (2) from torque converter (1).


⚠ CAUTION

Be careful not to damage oil pump body oil seal.

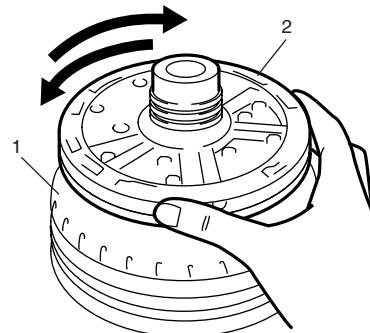

I4JA01512138-01

- 8) Apply A/T fluid to new O-ring (1) and then install O-ring to oil pump body.

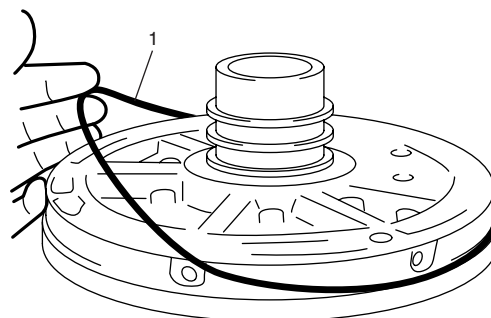


I4JA01512139-01

Oil Pump Inspection

S6JB0B5106034

- Measure inside diameter of oil pump body bushing. If inside diameter exceeds limit, replace oil pump body.

Oil pump body bushing inside diameter limit
38.188 mm (1.504 in.)

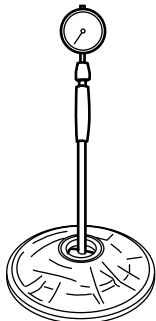


I4JA01512140-01

- Measure inside diameter of stator shaft assembly bushing. If inside diameter exceeds limit, replace stator shaft assembly.

Stator shaft assembly bushing inside diameter limit

Torque converter side: 21.577 mm (0.850 in.)
Output shaft side: 32.08 mm (1.263 in.)

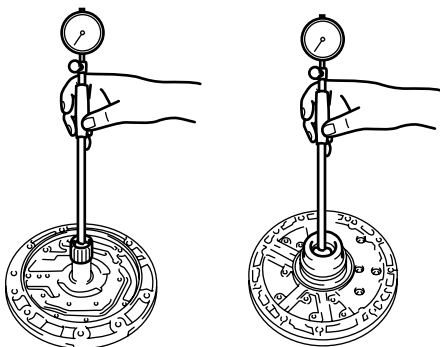


I4JA01512141-01

- Check oil pump body clearance of driven gear. Push driven gear (1) to one side of oil pump body (2). Using a feeler gauge, measure clearance between driven gear (1) and oil pump body (2). If clearance exceeds standard value, replace oil pump assembly.

Clearance between driven gear and oil pump body

Standard: 0.10 – 0.17 mm (0.004 – 0.007 in.)

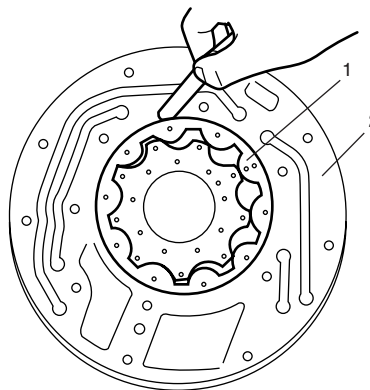


I4JA01512142-01

- Check tip clearance of driven gear. Measure radial clearance between driven and drive gears tooth tip. If clearance exceeds standard value, replace oil pump assembly.

Tip clearance between driven gear and drive gear

Standard: 0.07 – 0.15 mm (0.003 – 0.006 in.)

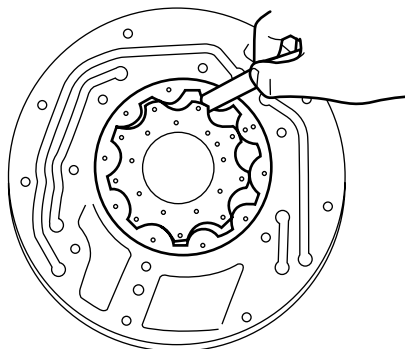


I4JA01512143-01

- Check side clearance of both gears. Using a straightedge (1) and a feeler gauge, measure side clearance between gears and oil pump body. If clearance exceeds standard value, replace oil pump assembly.

Side clearance between gears and oil pump body


Standard: 0.02 – 0.05 mm (0.0008 – 0.002 in.)

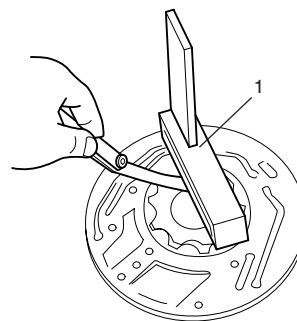

I4JA01512144-01

Clutch Drum & Input Shaft Assembly Components

S6JB0B5106035

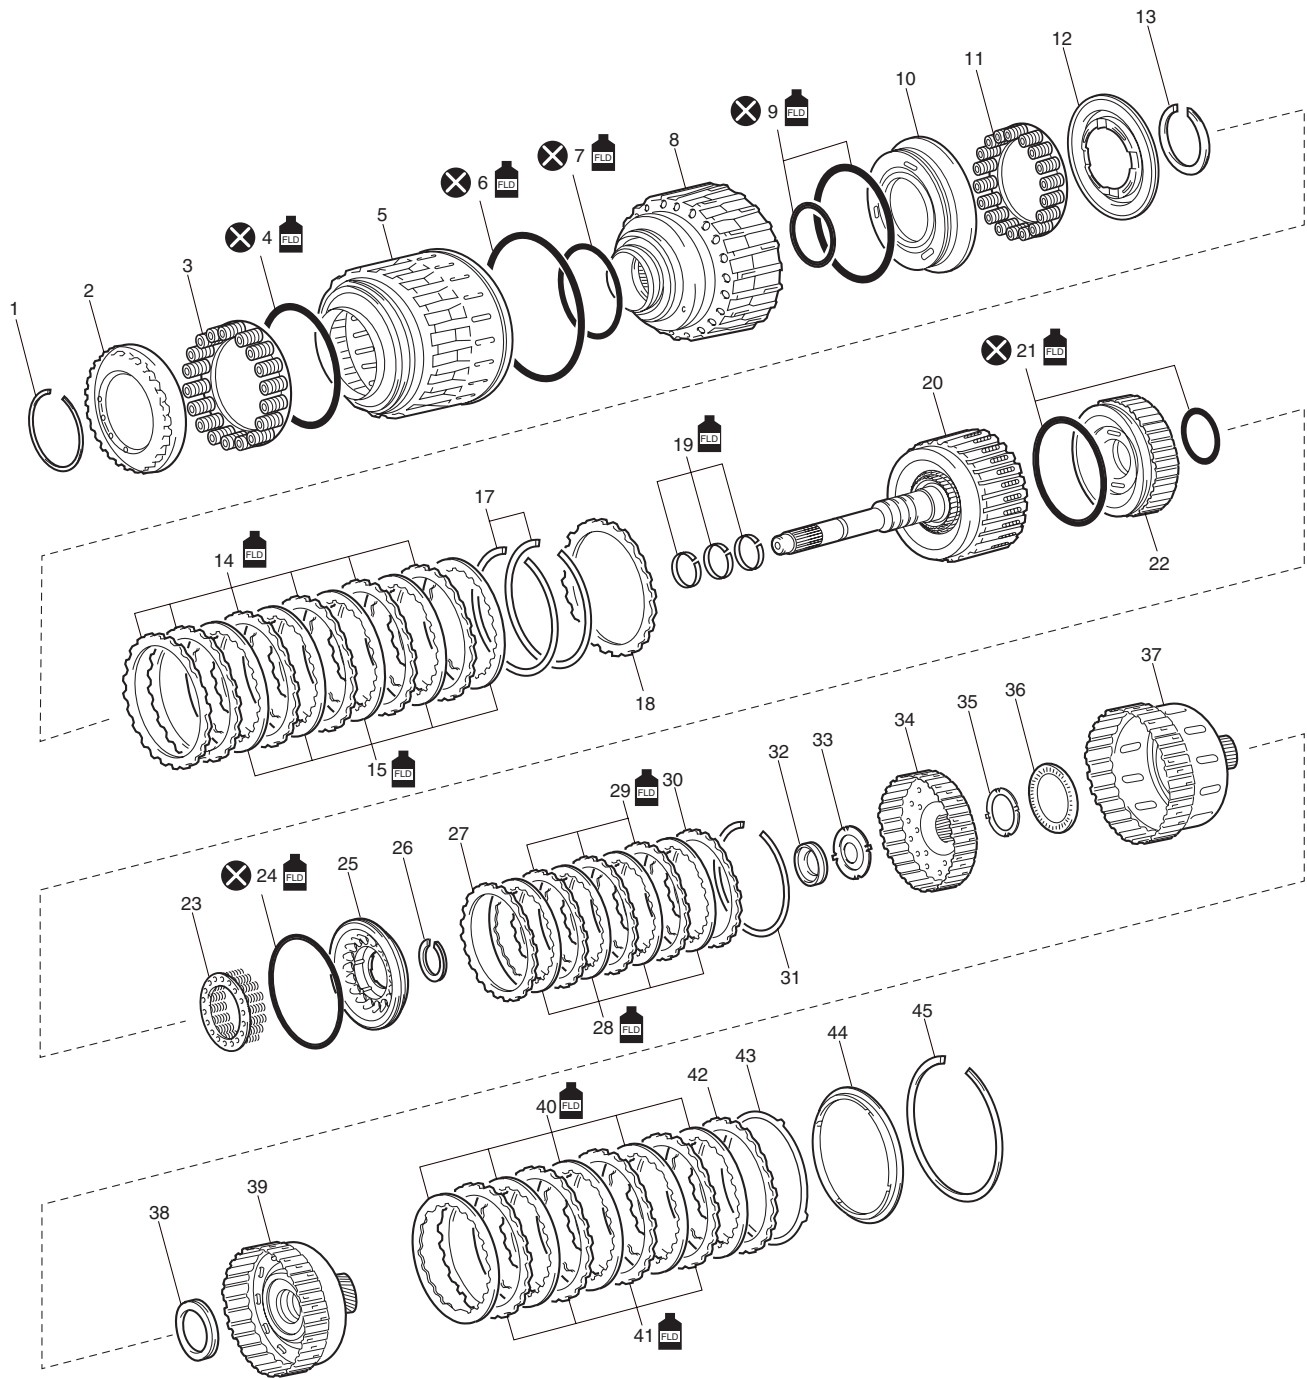


I6JB01510038-02

1. Snap ring	13. Snap ring	25. Clutch balancer No.1	37. Direct clutch hub
2. Clutch balancer No.3	14. Direct clutch plate	26. Snap ring	38. Thrust needle roller bearing
3. Reverse clutch return spring	15. Direct clutch disc	27. Forward clutch flange	39. Reverse clutch hub
4. O-ring	16. Direct clutch flange	28. Forward clutch disc	40. Reverse clutch disc
5. Reverse clutch piston	17. Snap ring	29. Forward clutch plate	41. Reverse clutch plate
6. O-ring	18. Reverse clutch flange	30. Forward clutch flange	42. Reverse clutch flange
7. O-ring	19. Input shaft oil seal ring	31. Snap ring	43. Clutch cushion plate
8. Clutch drum	20. Input shaft	32. Thrust needle roller bearing	44. Reverse clutch reaction sleeve
9. O-ring	21. O-ring	33. Thrust bearing race	45. Snap ring
10. Direct clutch piston	22. Forward clutch piston	34. Forward clutch hub	⊗ : Do not reuse.
11. Direct clutch return spring	23. Forward clutch return spring	35. Thrust bearing race No.2	FLD : Apply A/T fluid
12. Clutch balancer No.2	24. O-ring	36. Thrust needle roller bearing	

Clutch Drum & Input Shaft Assembly Disassembly


S6JB0B5106036

- 1) Place oil pump (1) onto torque converter (2), and then place clutch drum and input shaft assembly (3) onto oil pump (1).

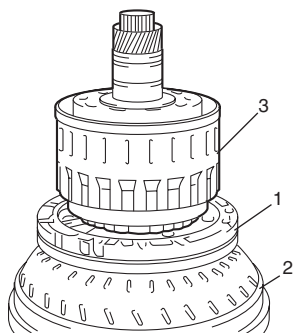


I4JA01512146-01

- 2) Remove snap ring (1) from clutch drum and input shaft assembly (2) by using flat end rod or the like.

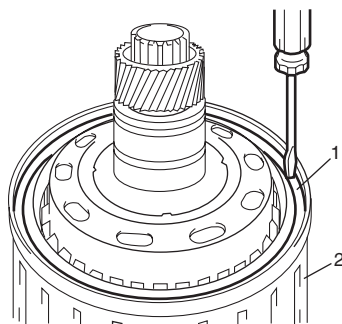


I4JA01512147-01

- 3) Remove reverse clutch hub (1) with reverse clutch reaction sleeve, clutch cushion plate, reverse clutch flange, 4 reverse clutch discs and 3 reverse clutch plates from clutch drum assembly.

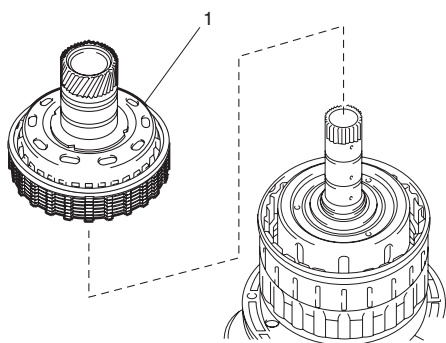


I4JA01512148-01

- 4) Remove reverse clutch reaction sleeve (1) from reverse clutch hub.

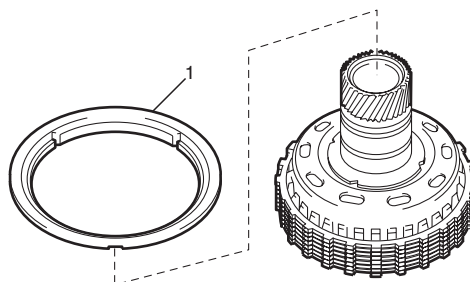


I4JA01512149-01

- 5) Remove clutch cushion plate (1), reverse clutch flange "F", reverse clutch plates "P" and reverse clutch discs "D" from reverse clutch hub.

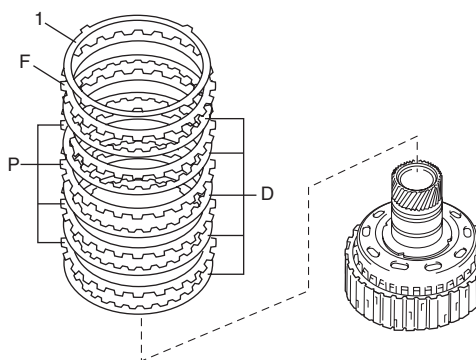


I6JB01510039-01

- 6) Remove direct clutch hub (1) from clutch drum assembly.

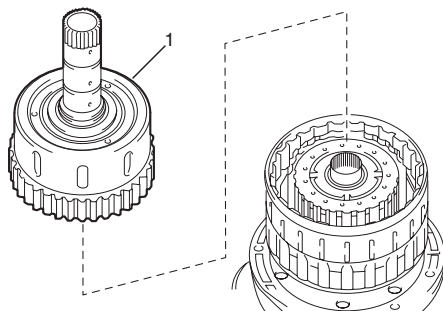


I4JA01512151-01

- 7) Remove 2 thrust needle roller bearings (1) from direct clutch hub.

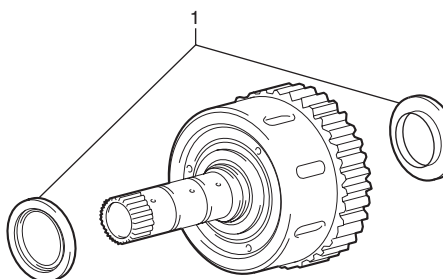


I4JA01512152-01

- 8) Remove forward clutch hub (1) from clutch drum assembly.

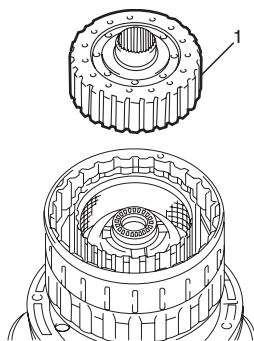


I4JA01512153-01

- 9) Remove thrust bearing race No.2 (1) and thrust bearing race (2) from forward clutch hub.

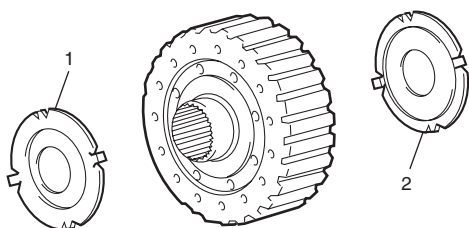


I4JA01512154-01

- 10) Remove thrust needle roller bearing (1) from clutch drum assembly.

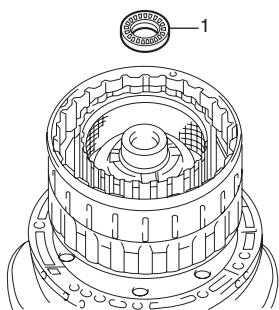


I4JA01512155-01

- 11) Remove input shaft assembly (1) from clutch drum assembly.

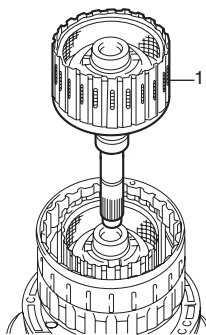


I4JA01512156-01

- 12) Remove 3 oil seal rings (1) from input shaft assembly.

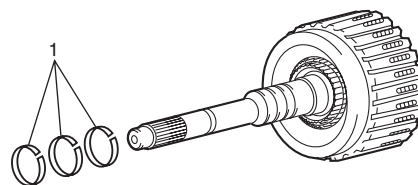


I4JA01512157-01

- 13) Remove snap ring (1) from input shaft assembly (2) by using flat end rod or the like.

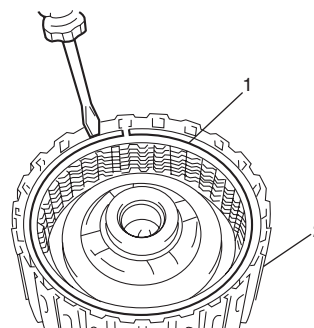

I4JA01512158-01

- 14) Remove forward clutch flanges "F", forward clutch discs "D" and forward clutch plates "P" from input shaft assembly.

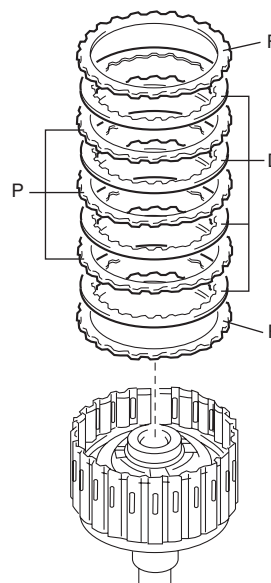

I4JA01512159-01

- 15) Compress clutch balancer No.1 and forward clutch return spring (1) until the clutch balancer No.1 is lowered to the place 1 – 2 mm (0.039 – 0.078 in.) from the snap ring groove by using special tool and hydraulic press, and then remove snap ring (2).

⚠ CAUTION


Be careful when applying pressure, for overpressure will cause forward clutch return spring to deform.

NOTE

Set special tool to the width of “a” 68 mm (2.652 in.) as shown in figure.


Special tool

(A): 09926–96520

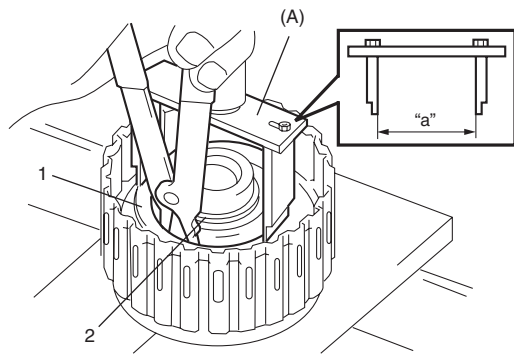


I4JA01512160-01

- 16) Remove clutch balancer No.1 (1) and forward clutch return spring (2) from input shaft assembly.

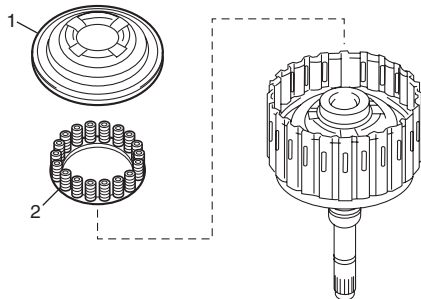


I4JA01512161-01

- 17) Remove forward clutch piston (1) from input shaft assembly (2) by applying compressed air (392 kPa, 4.0 kg/cm², 57 psi) into oil hole (3) of input shaft assembly as shown in figure.

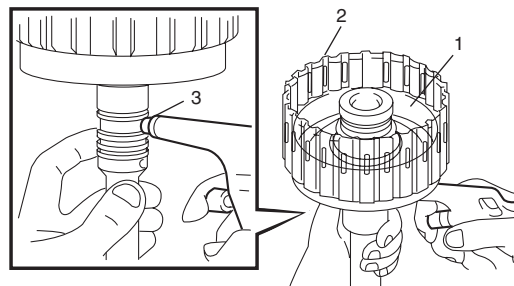


I4JA01512162-01

- 18) Remove reverse clutch flange (1) from clutch drum assembly (2).

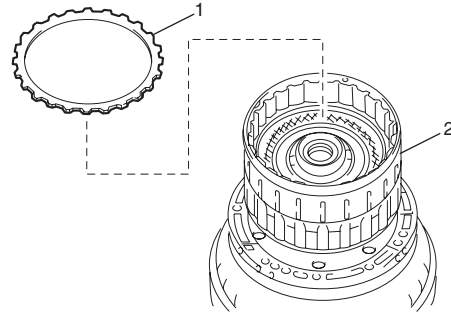


I4JA01512163-01

- 19) Remove 2 snap rings (1) from clutch drum assembly (2) by using flat end rod or the like.

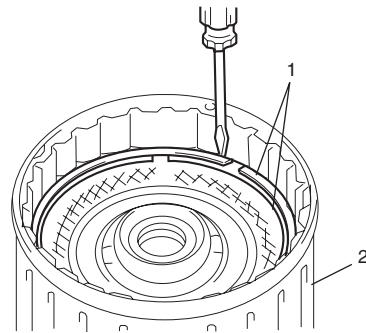

I4JA01512164-01

- 20) Remove direct clutch flange “F”, direct clutch plates “P” and direct clutch discs “D” from clutch drum assembly.

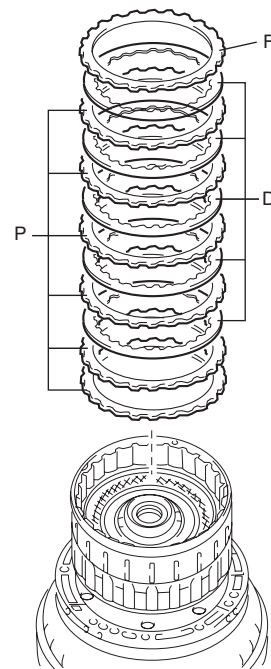

I6JB01510040-01


- 21) Compress clutch balancer No.3 and reverse clutch return spring (1) until the clutch balancer No.3 is lowered to the place 1 – 2 mm (0.039 – 0.078 in.) from the snap ring groove by using special tool and hydraulic press, and then remove snap ring (2).

⚠ CAUTION

Be careful when applying pressure, for overpressure will cause reverse clutch return spring to deform.


Special tool

(A): 09926-96040

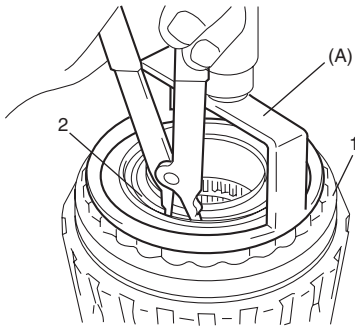


I4JA01512166-01

- 22) Remove reverse clutch return spring (1) and O-ring (2) from reverse clutch piston.

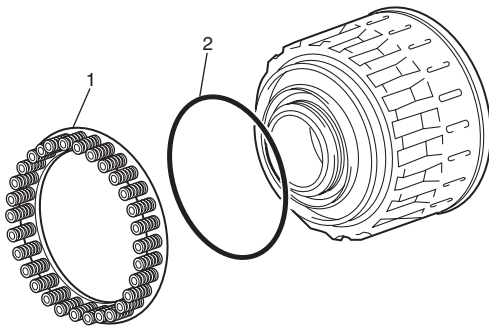

I4JA01512167-01

- 23) Remove reverse clutch piston sub assembly from clutch drum sub assembly (1).

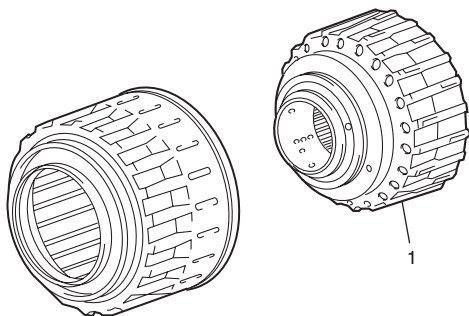

I4JA01512168-01


- 24) Compress clutch balancer No.2 and direct clutch return spring (1) until the clutch balancer No.2 is lowered to the place 1 – 2 mm (0.039 – 0.078 in.) from the snap ring groove by using special tool and hydraulic press, and then remove snap ring (2).

⚠ CAUTION

Be careful when applying pressure, for overpressure will cause direct clutch return spring to deform.


Special tool

(A): 09926-96040

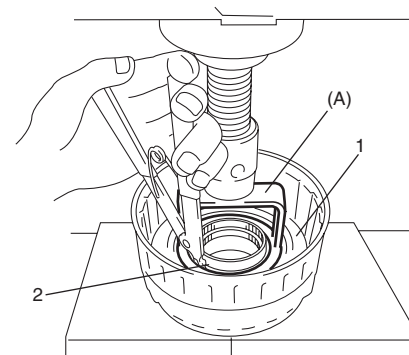


I4JA01512169-01

- 25) Using 2 screw drivers, remove direct clutch piston sub assembly (1) from clutch drum.

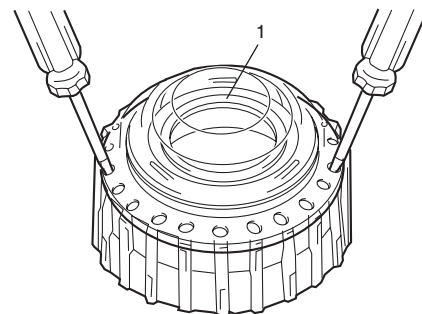

I4JA01512170-01

- 26) Remove clutch balancer No.2 (1) and direct clutch return spring (2) from direct clutch piston sub assembly.

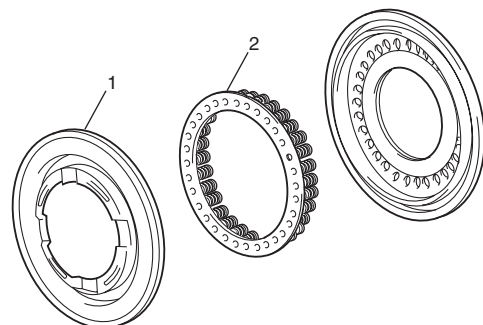


I4JA01512171-01

Clutch Drum & Input Shaft Assembly Reassembly


S6JB0B5106037

- 1) Apply A/T fluid to new 2 O-rings (1) and then install O-rings to direct clutch piston.

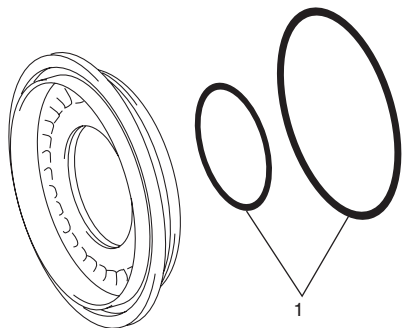


I4JA01512172-01

- 2) Install clutch balancer No.2 (1) and direct clutch return spring (2) to direct clutch piston sub assembly.

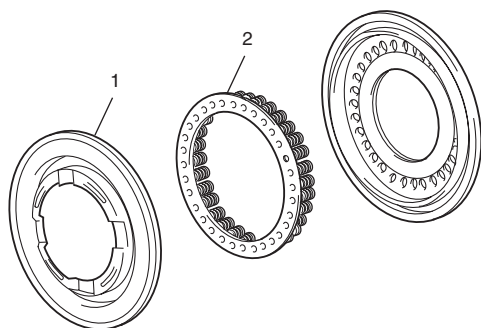

I4JA01512173-01

- 3) Apply A/T fluid to new O-ring (1), and then install O-ring to clutch drum sub assembly.
4) Press-fit direct clutch piston into clutch drum by hands.

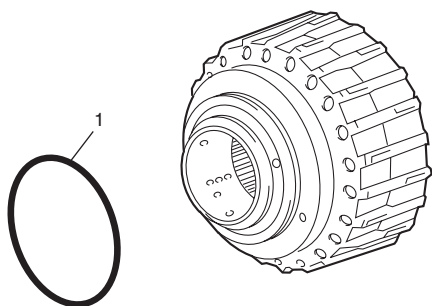

I4JA01512174-01


- 5) Compress clutch balancer No.2 (1) until the clutch balancer No.2 is lowered to the place 1 – 2 mm (0.039 – 0.078 in.) from the snap ring groove by using special tool and hydraulic press.

Special tool

(A): 09926-96040


⚠ CAUTION

Be careful when applying pressure, for overpressure will cause direct clutch return spring to deform.

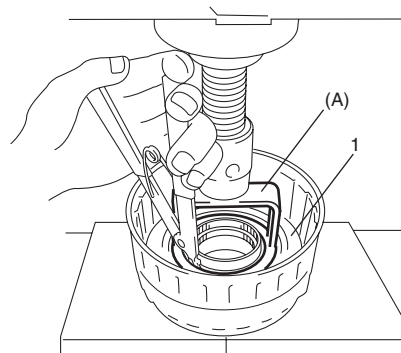


I4JA01512175-01

- 6) Install snap ring (1) as set snap ring end gap between snap ring stoppers (2) of clutch balancer No.2.

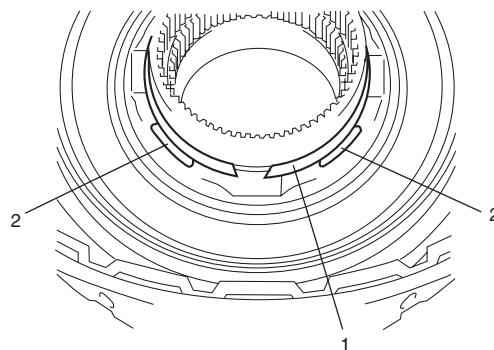

I4JA01512176-01

- 7) Apply A/T fluid to new O-ring (1), and then install O-ring to reverse clutch piston sub assembly.

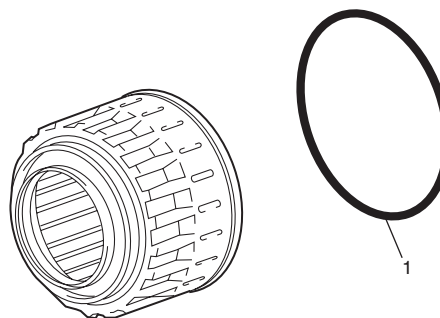


I4JA01512177-01

- 8) Press-fit clutch drum sub assembly (1) into reverse clutch piston (2) by hands.


⚠ CAUTION

Do not twist or deviate O-rings during installation.

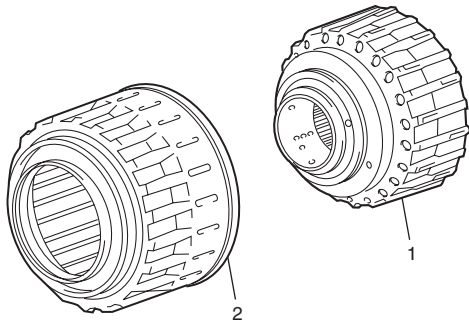

I4JA01512178-01

- 9) Apply A/T fluid to new O-ring (1), and then install O-ring to reverse clutch piston sub assembly.
10) Install reverse clutch return spring (2) onto reverse clutch piston sub assembly.

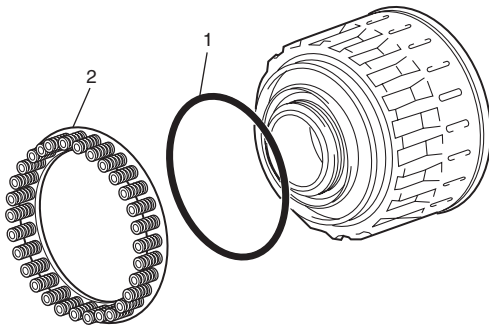

I4JA01512179-01

- 11) Place clutch balancer No.3 (1) onto reverse clutch piston sub assembly.

⚠ CAUTION

Do not twist or deviate O-ring during installation.


- 12) Compress clutch balancer No.3 (1) until the clutch balancer No.3 is lowered to the place 1 – 2 mm (0.039 – 0.078 in.) from the snap ring groove by using special tool and hydraulic press, and then install snap ring.

⚠ CAUTION

Be careful when applying pressure, for overpressure will cause reverse clutch return spring to deform.


Special tool

(A): 09926-96040

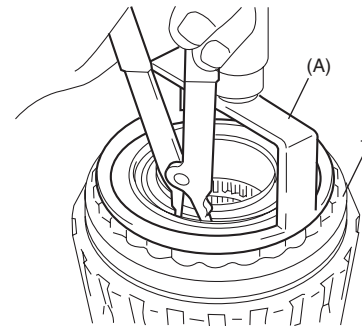

I4JA01512180-01

- 13) Set end gap of snap ring (1) in piston as shown in figure.

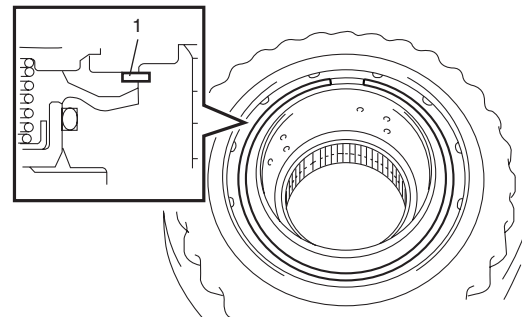


I4JA01512181-01

14) Install direct clutch plates "P" and direct clutch discs "D" in the following order.


P - P - D - P - D - P - D - P - D - P - D

15) Install direct clutch flange "F".

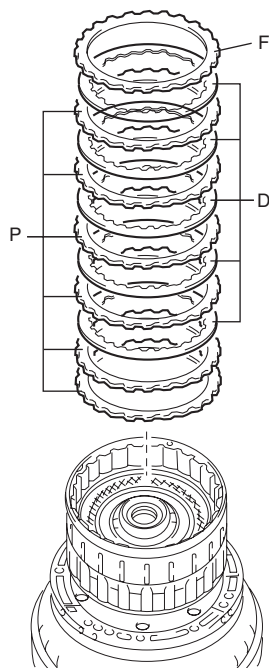

I6JB01510040-01

16) Install 2 snap rings (1) by using flat end rod or the like being sure not to align snap rings end gap with cut portion of clutch drum sub assembly.

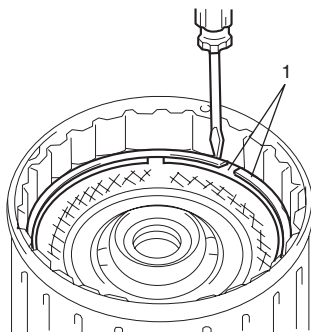

I4JA01512183-01

17) Measure pack clearance of direct clutch by applying compressed air (392 kPa, 4.0 kg/cm², 57 psi) into oil hole (1) of oil pump (2) as shown in figure.

Direct clutch pack clearance
0.50 – 0.80 mm (0.020 – 0.031 in.)

NOTE

Install a selective flange (t 3.4 mm) when measuring the moving distance. (shaded area in figure.)


- Flange moving distance A: 0.36 – 1.242 mm (0.0141 – 0.0489 in.)

Piston stroke: Flange moving distance A – 0.15 mm (0.0059 in.)

If the pack clearance is out of specification, select another flange with suitable thickness from the list below and replace it.


Available direct clutch flange thickness

Identification No.	Thickness	Identification No.	Thickness
0	3.0 mm (0.118 in.)	5	3.5 mm (0.138 in.)
1	3.1 mm (0.122 in.)	6	3.6 mm (0.142 in.)
2	3.2 mm (0.126 in.)	7	3.7 mm (0.146 in.)
3	3.3 mm (0.130 in.)	8	3.8 mm (0.150 in.)
4	3.4 mm (0.134 in.)	—	—

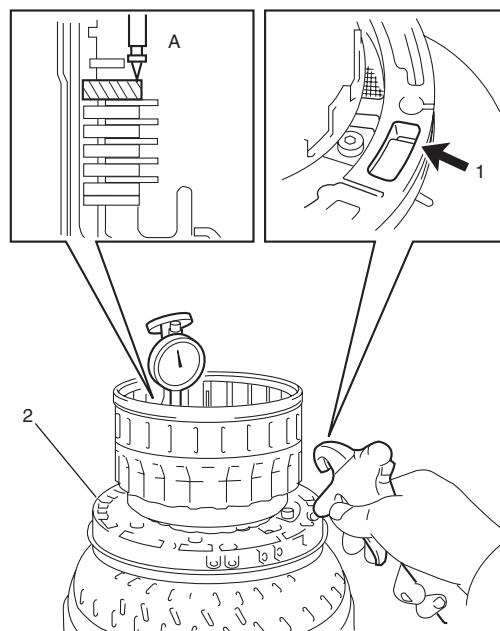

I4JA01512184-01


18) Install reverse clutch flange (1).

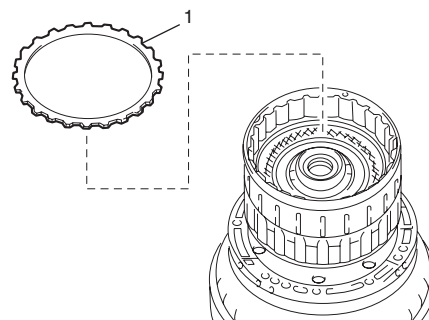

I4JA01512185-01


- 19) Install reverse clutch reaction sleeve (1), clutch cushion plate (2), reverse clutch flange "F", reverse clutch discs "D" and reverse clutch plates "P" in the following order.

D - P - D - P - D - P - D - P - D - F

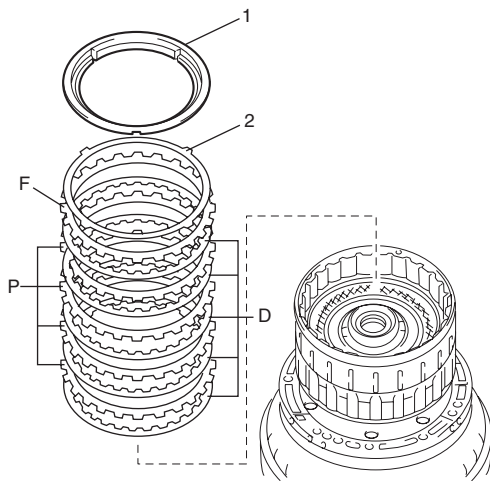

I6JB01510041-01

- 20) Install snap ring (1) by using flat end rod or the like being sure not to align snap ring end gap with cut portion of clutch drum sub assembly.

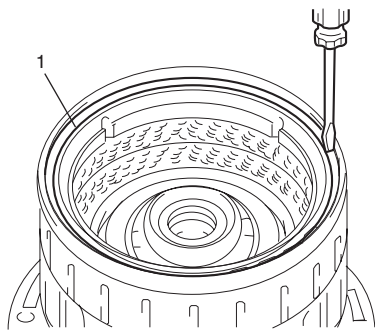

I4JA01512187-01

- 21) Measure reverse clutch piston stroke (A) and the moving distance (B) of reverse clutch flange at the both end across a diameter by applying compressed air (392 kPa, 4 kg/cm², 57 psi) into oil hole (1) of oil pump (2) as shown in figure.

Pack Clearance

0.5 – 0.8 mm (0.020 – 0.031 in.)



NOTE

Install selective flange (t 3.3 mm) when measuring the moving distance. (shaded area in figure)

- Piston stroke A: 1.69 – 2.81 mm (0.0665 – 0.11 in.)
Flange moving distance B: 1.20 – 1.68 mm (0.0472 – 0.0661 in.)
Pack clearance: Piston stroke A – Flange moving distance B – 0.16 mm (0.0063 in.)
If the pack clearance is out of specification, select another flange with suitable thickness from the list below and replace it.


Available reverse clutch flange thickness

Identification No.	Thickness	Identification No.	Thickness
0	2.8 mm (0.110 in.)	6	3.4 mm (0.134 in.)
1	2.9 mm (0.114 in.)	7	3.5 mm (0.138 in.)
2	3.0 mm (0.118 in.)	8	3.6 mm (0.142 in.)
3	3.1 mm (0.122 in.)	9	3.7 mm (0.146 in.)
4	3.2 mm (0.126 in.)	A	3.8 mm (0.150 in.)
5	3.3 mm (0.130 in.)	—	—

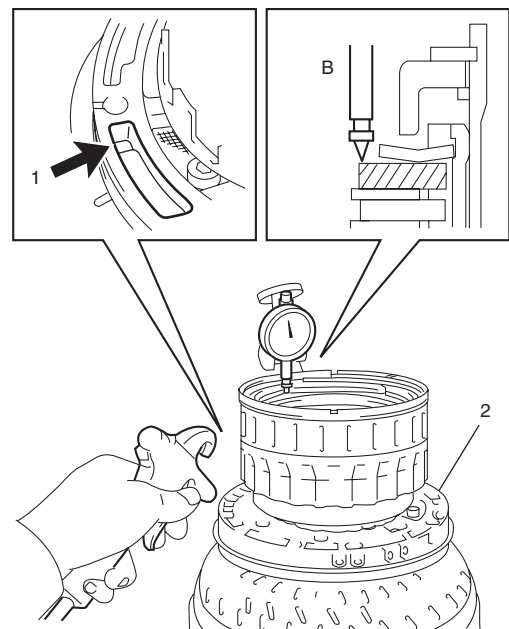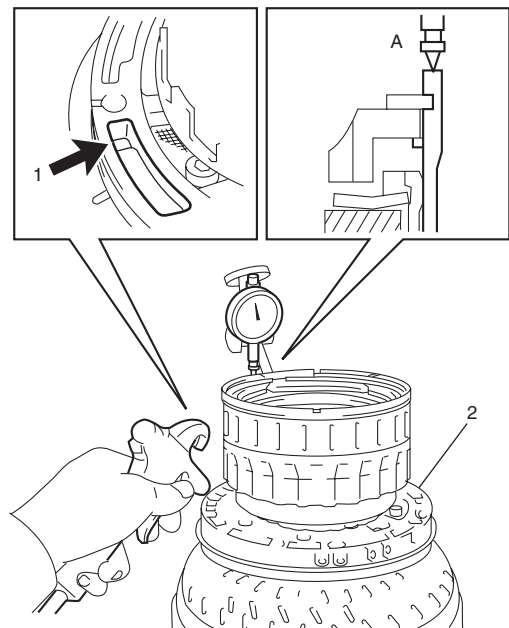


I4JA01512188-01

- 22) Remove snap ring (1) from clutch drum sub assembly by using flat end rod or the like.

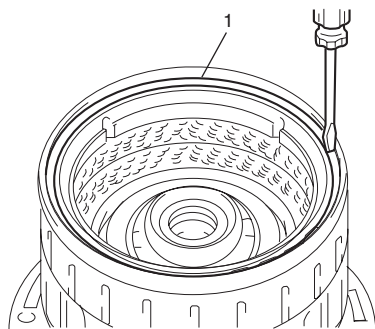


I4JA01512189-01

- 23) Remove reverse clutch reaction sleeve (1), clutch cushion plate (2), reverse clutch flange "F", reverse clutch discs "D" and clutch plates "P" from clutch drum sub assembly.

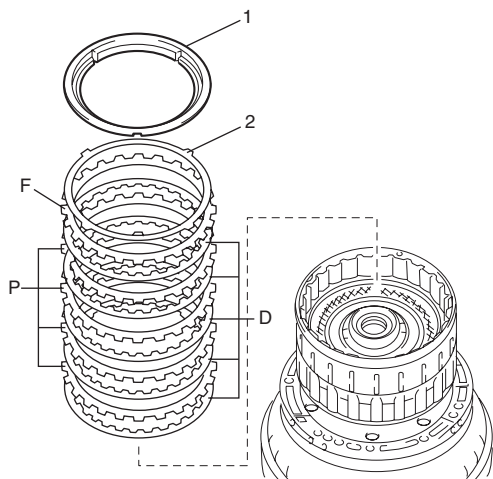


I6JB01510041-01

- 24) Apply A/T fluid to new 2 O-rings (1) and then install O-rings to forward clutch piston.

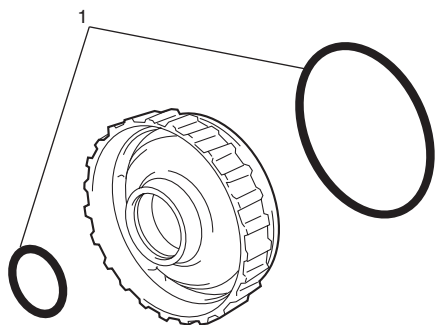

I4JA01512191-01

- 25) Apply A/T fluid to new O-ring (1), and then install O-ring to clutch balancer No.1.

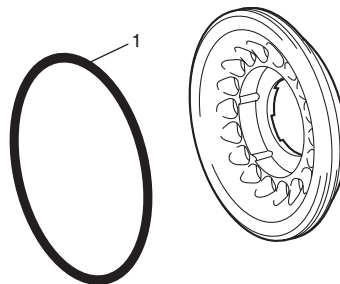


I4JA01512192-01

- 26) Install forward clutch piston (1), clutch balancer No.1 (3) and forward clutch return spring (2).

CAUTION

Do not twist or deviate O-rings during installation.

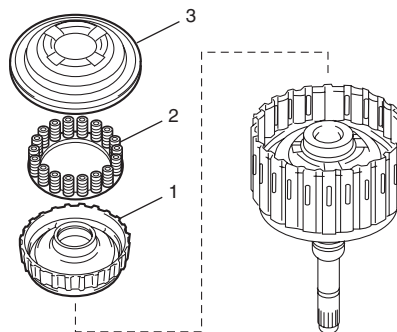

I4JA01512193-01

- 27) Compress clutch balancer No.1 (1) until the clutch balancer No.1 is lowered to the place 1 – 2 mm (0.039 – 0.078 in.) from the snap ring groove by using special tool and hydraulic press.

⚠ CAUTION


Be careful when applying pressure, for overpressure will cause forward clutch return spring to deform.

NOTE

Set special tool to the width of "a" 68 mm (2.652 in.) as shown in figure.


Special tool

(A): 09926-96520

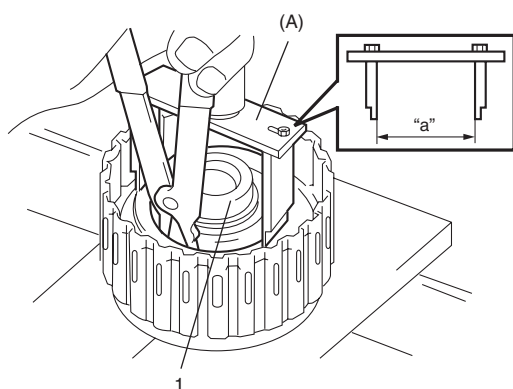

I4JA01512194-01


- 28) Install snap ring as set snap ring end gap between snap ring stoppers (2) of clutch balancer No.1.

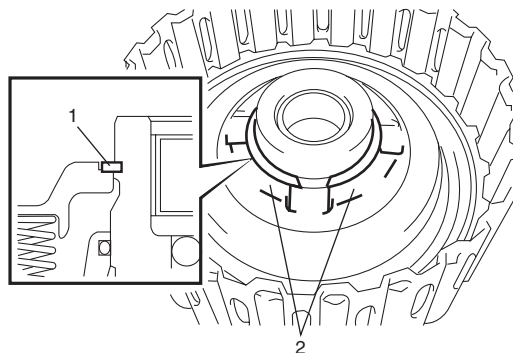

I4JA01512195-01


- 29) Install forward clutch flange "F".

- 30) Install clutch plates "P", forward clutch flange "F" and clutch discs "D" in the following order.
D - P - D - P - D - P - D - F

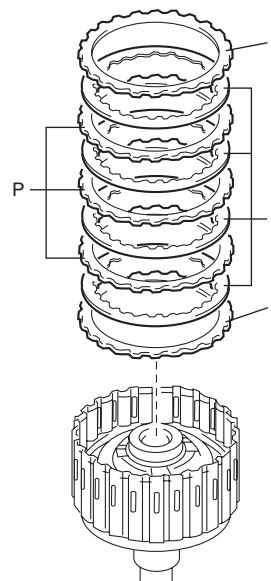

I4JA01512196-01

- 31) Install snap ring (1) by using flat end rod or the like being sure not to align snap ring end gap with cut portion of input shaft assembly.

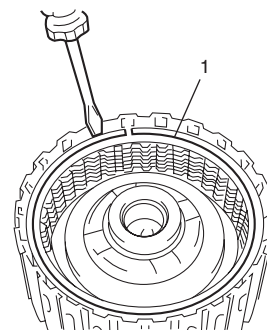

I4JA01512197-01


- 32) Apply A/T fluid to 3 oil seal rings (1).

- 33) Squeeze the ends of 3 oil seal rings (1) together, and then install oil seal rings to input shaft groove.

⚠ CAUTION

Do not spread seal excessively.

- 34) Check seals rotate smoothly.

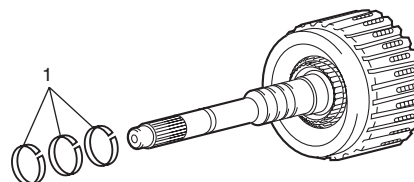

I4JA01512198-01

35) Measure forward clutch pack clearance (A) by applying compressed air (392 kPa, 4.0 kg/cm², 57 psi) into oil hole, (1) of input shaft as shown in figure.

Pack Clearance

0.4 – 0.7 mm (0.016 – 0.027 in.)


NOTE

Install a selective flange (t 3.4 mm) when measuring the moving distance. (shaded area in figure.)

- Flange moving distance A: 0.12 – 1.19 mm (0.00472 – 0.0468 in.)
Pack Clearance: Flange moving distance A – 0.01 mm (0.00039 in.)
If pack clearance is out of specification, select another flange with suitable thickness from the list below and replace it.


Available forward clutch flange thickness

Identification No.	Thickness	Identification No.	Thickness
0	3.0 mm (0.118 in.)	6	3.6 mm (0.142 in.)
1	3.1 mm (0.122 in.)	7	3.7 mm (0.146 in.)
2	3.2 mm (0.126 in.)	8	3.8 mm (0.150 in.)
3	3.3 mm (0.130 in.)	9	3.9 mm (0.154 in.)
4	3.4 mm (0.134 in.)	A	4.0 mm (0.158 in.)
5	3.5 mm (0.138 in.)	—	—

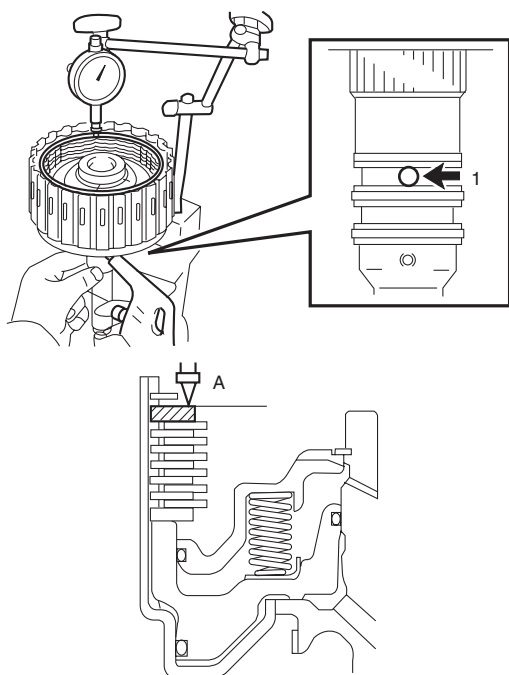


I4JA01512199-01

36) Install input shaft assembly (1) to clutch drum assembly.

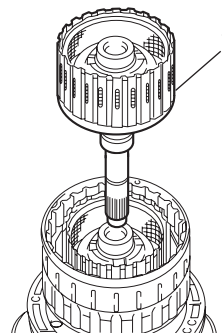


I4JA01512200-01

37) Install thrust needle roller bearing (1) to clutch drum assembly.

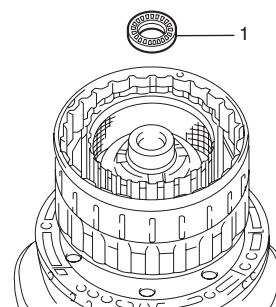


I4JA01512201-01

38) Install thrust bearing race No.2 (1) and input shaft thrust bearing race (2) to forward clutch hub.

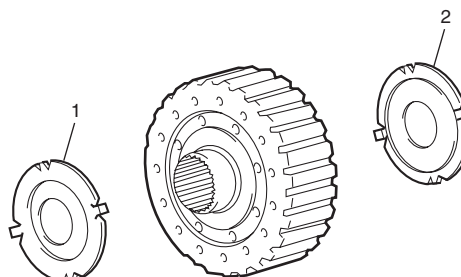


I4JA01512202-01

39) Install forward clutch hub (1) to clutch drum assembly.

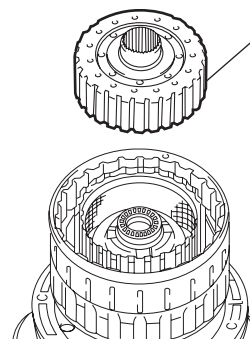


I4JA01512203-01

- 40) Install 2 thrust needle roller bearings (1) to direct clutch hub.

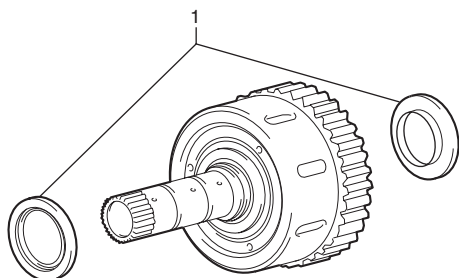

I4JA01512204-01

- 41) Install direct clutch hub (1) to clutch drum assembly.

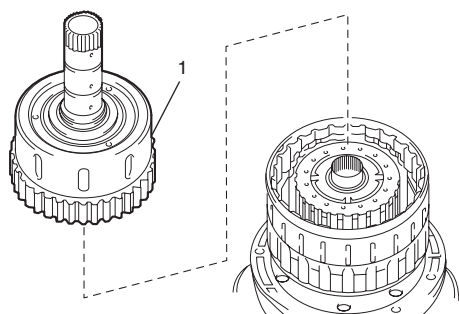


I4JA01512205-01

- 42) Install reverse clutch plates "P" and reverse clutch discs "D" to reverse clutch hub in the following order.
D - P - D - P - D - P - D - P - D


- 43) Install reverse clutch flange "F".

- 44) Install clutch cushion plate (1) to reverse clutch hub as shown in figure.

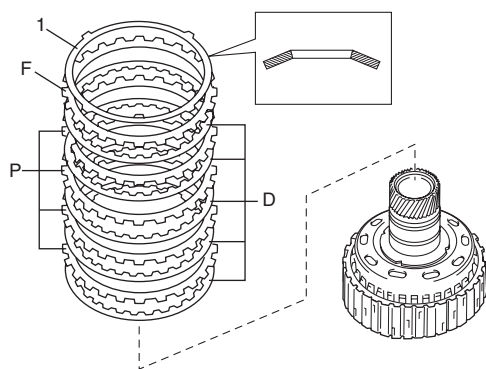


I6JB01510042-01

- 45) Install reverse clutch reaction sleeve (1) to reverse clutch hub.

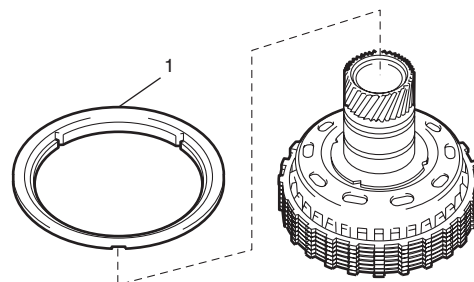


I4JA01512207-01

- 46) Install reverse clutch hub sub assembly (1) including reverse clutch reaction sleeve, clutch cushion plate, reverse clutch flange, 4 reverse clutch discs and 3 reverse clutch plates to clutch drum assembly.

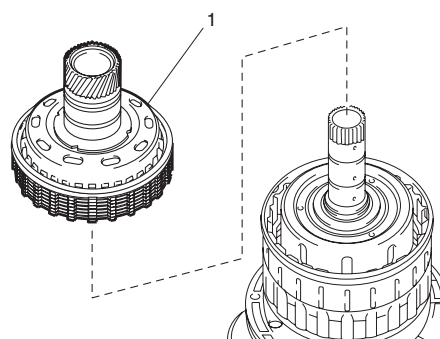

I4JA01512208-01

- 47) Install snap ring (1) on clutch drum and input shaft assembly by using flat end rod or the like.

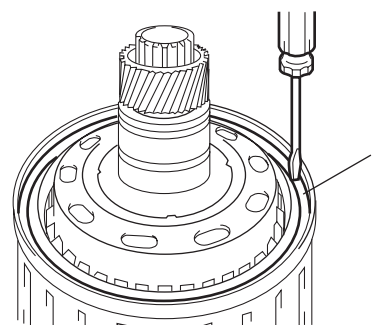

I4JA01512209-01


Clutch Drum & Input Shaft Assembly Inspection

S6JB0B5106038

- Check that sliding surface of discs, plate and flange are not worn or burnt. if necessary, replace them.

NOTE

- If disc lining is exfoliated, discolored or worn hardly, replace all discs.
- If only a part of printed numbers is corroded, replace all discs.
- Before assembling new discs, soak them in A/T fluid for at least 15 minutes.

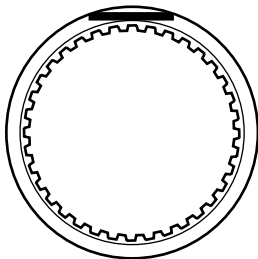


I4JA01512210-01

- Measure inside diameter of reverse clutch hub bushing. If inside diameter exceeds limit, replace reverse clutch hub.

Reverse clutch hub bushing inside diameter

Standard: 35.812 – 35.837 mm (1.4099 – 1.4109 in.)

Limit: 35.887 mm (1.4129 in.)

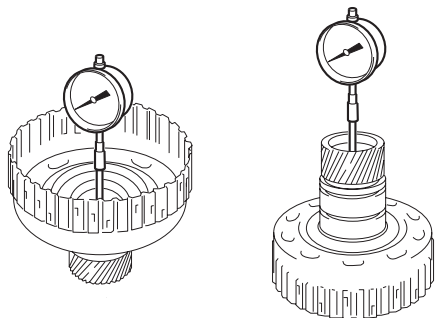


I4JA01512211-01

- Measure inside diameter of direct clutch hub bushing. If inside diameter exceeds limit, replace direct clutch hub.

Direct clutch hub bushing inside diameter

Standard: 26.037 – 26.062 mm (1.0251 – 1.0261 in.)

Limit: 26.112 mm (1.028 in.)

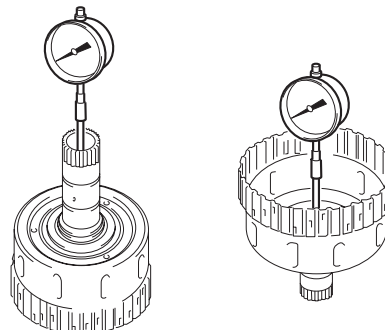

I4JA01512212-01


- Measure free length of forward clutch return spring including spring seat.

Forward clutch return spring free length

"a": 26.74 mm (1.053 in.)

NOTE

- Do not apply excessive force when measuring spring free length.
- Perform measurement at several points.

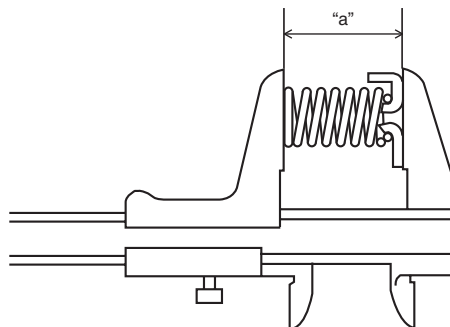


I4JA01512213-01

- Measure free length reverse clutch return spring including spring seat.

Reverse clutch return spring free length**"a": 21.04 mm (0.828 in.)****NOTE**

- Do not apply excessive force when measuring spring free length.
- Perform measurement at several points.

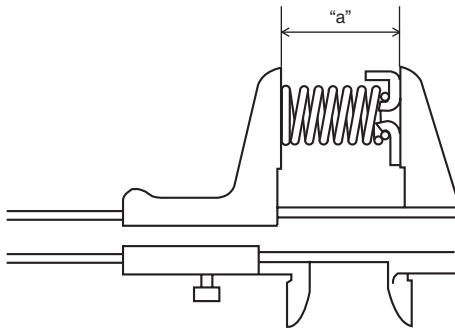


I4JA01512214-01

- Measure free length direct clutch return spring including spring seat.

Direct clutch return spring free length**"a": 19.51 mm (0.768 in.)****NOTE**


- Do not apply excessive force when measuring spring free length.
- Perform measurement at several points.

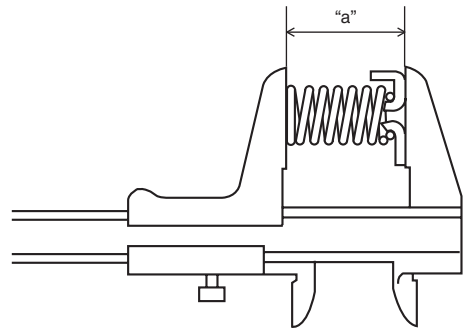

I4JA01512215-01

Valve Body Assembly Components

S6JB0B5106039

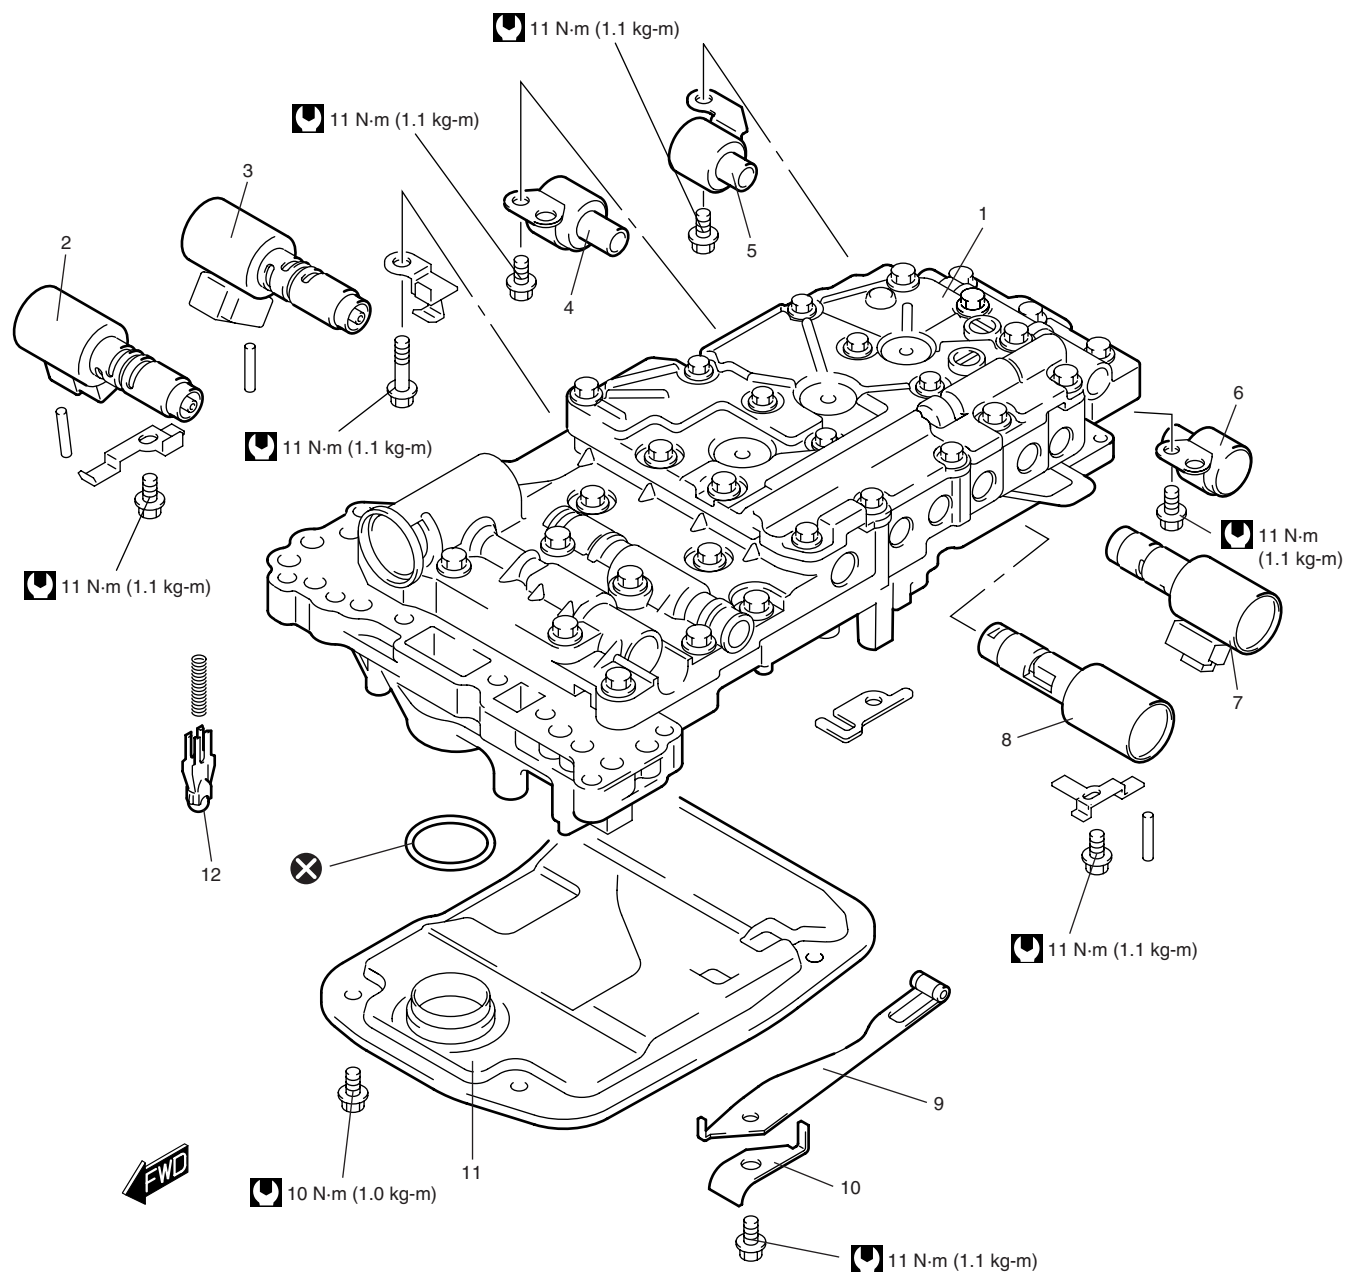

I4JA01512353-01

1. Valve body assembly	6. Shift solenoid valve-E	11. Oil strainer
2. Pressure control solenoid valve-A	7. Pressure control solenoid valve-C	12. Check ball body
3. Pressure control solenoid valve-B	8. TCC solenoid	🔧 : Tightening torque
4. Shift solenoid valve-A	9. Manual shift lever spring	⊗ : Do not reuse.
5. Shift solenoid valve-B	10. Spring plate	

⚠ CAUTION

When replacing pressure control solenoid valve-A, -B, -C and TCC solenoid valve, it is strictly required to replace it together with valve body assembly as a set.


Automatic Transmission Unit Assembly

S6JB0B5106040

- 1) After applying A/T fluid to new 4 O-rings (1) and then install O-rings to 1st & reverse (No.4) brake inner piston (2) and brake reaction sleeve (3).
- 2) Install 1st & reverse (No.4) brake inner piston (2) to brake reaction sleeve (3).

⚠ CAUTION

Do not twist or deviate O-rings (1) during installation.

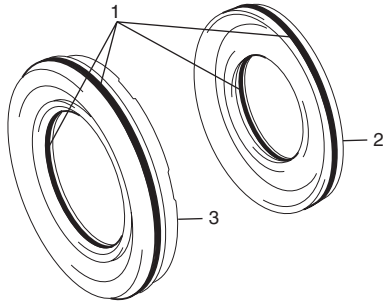


I4JA01512216-01

- 3) Install 1st & reverse (No.4) brake inner piston (1) including brake reaction sleeve (2) to transmission case.

⚠ CAUTION

Do not twist or deviate O-rings (3) during installation.

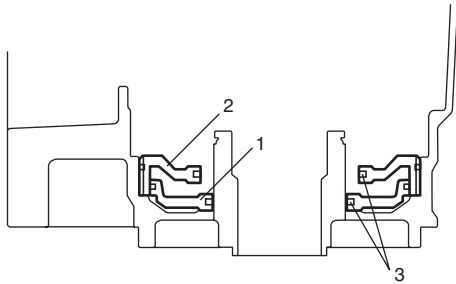


I4JA01512217-01

- 4) After applying A/T fluid to new O-ring (1) and then install O-ring to 1st & reverse (No.4) brake piston (2).
- 5) Install 1st & reverse (No.4) brake piston (2) to transmission case.


⚠ CAUTION

Do not twist or deviate O-ring (1) during installation.

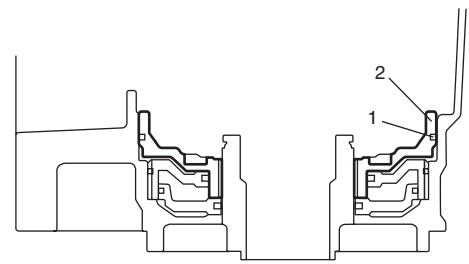

I4JA01512218-01

- 6) Place 1st & reverse (No.4) brake return spring (1) on 1st & reverse (No.4) brake piston (2).

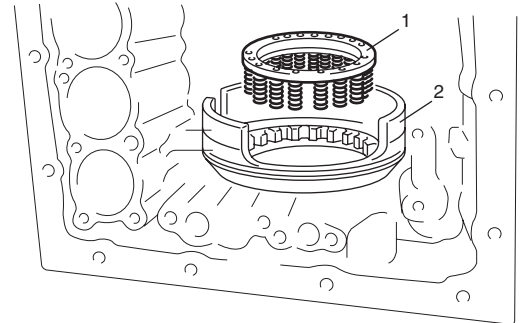

I4JA01512219-01

- 7) Place snap ring (1) on 1st & reverse (No.4) brake return spring and compress 1st & reverse (No.4) brake return spring (2) until the 1st & reverse (No.4) brake return spring is lowered to the place 1 – 2 mm (0.039 – 0.078 in.) from the snap ring groove by using special tool.


⚠ CAUTION

Be careful when applying pressure, for overpressure will cause plate section of 1st & reverse (No.4) brake return spring to deform.

Special tool


(A): 09922-86010

- 8) Install snap ring (1).

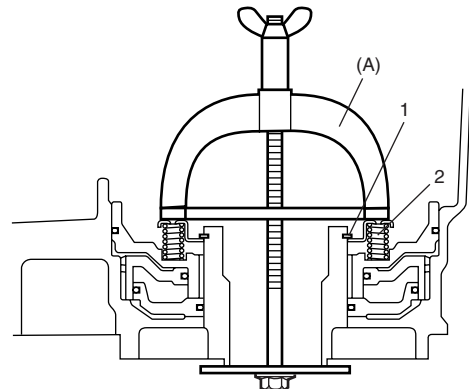

I4JA01512220-01

- 9) Make sure 1st & reverse (No.4) brake piston and 1st & reverse (No.4) brake inner piston move smoothly when applying low pressure compressed air (392 kPa, 4.0 kg/cm², 57 psi) into oil hole of transmission case.

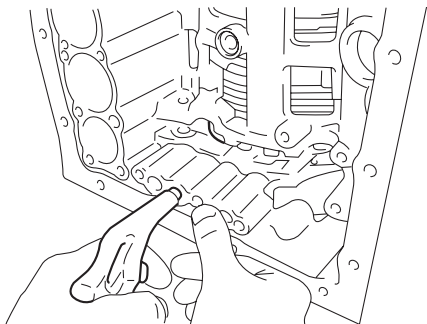


I4JA01512221-01

- 10) Using vernier calipers, measure the level difference (length A) between the upper surface of the 1st & reverse (No.4) brake piston and the hitting surface of 1st & reverse (No.4) brake flange at the both end across a diameter, and calculate the average.

NOTE

- 1st & reverse (No.4) brake piston must be installed tightly to the end face of transmission case.
- Length A:
32.68 – 33.42 mm (1.287 – 1.316 in.)

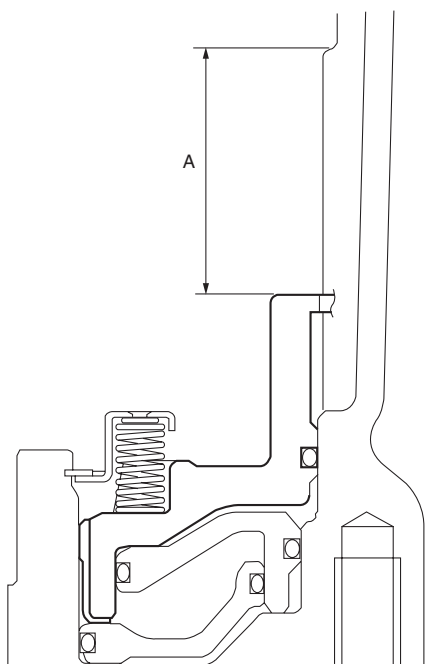

I4JA01512222-01

- 11) Using vernier calipers, measure the thickness (length B) of the 1st & reverse (No.4) brake flanges, the 1st & reverse (No.4) brake plates and the 1st & reverse (No.4) brake discs altogether at the both end across a diameter, and calculate the average.

Pack Clearance


0.7 – 1.0 mm (0.028 – 0.039 in.)

- Pack Clearance: Length A – Length B + 1.36 mm (0.0535 in.)
Length B: 30.59 – 31.62 mm (1.204 – 1.244 in.)

- 12) If the pack clearance is out of specification, select another flange with suitable thickness from the list below and replace it.


Available 1st & reverse (No.4) brake flange thickness

Identification No.	Thickness	Identification No.	Thickness
0	0 mm (0 in.)	8	0.8 mm (0.032 in.)
2	0.2 mm (0.008 in.)	10	1.0 mm (0.039 in.)
4	0.4 mm (0.016 in.)	12	1.2 mm (0.047 in.)
6	0.6 mm (0.024 in.)	14	1.4 mm (0.055 in.)

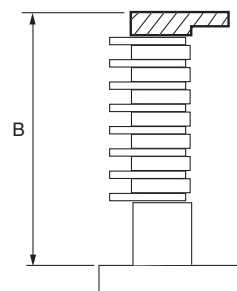


I4JA01512223-01

- 13) After applying A/T fluid to thrust needle roller bearing (1), install thrust bearing race No.9 (1) to transmission case.

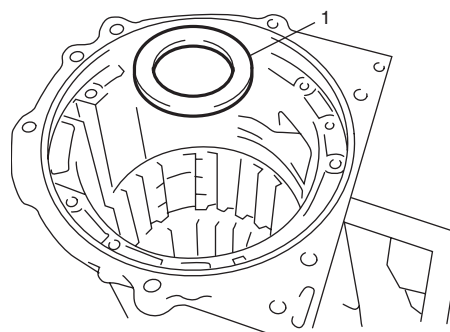


I6JB01510048-01

- 14) After applying A/T fluid to thrust needle roller bearing (2) and thrust needle roller bearing (1) and then install thrust needle roller bearing (2) and thrust bearing race No.9 (1) to rear planetary ring gear.

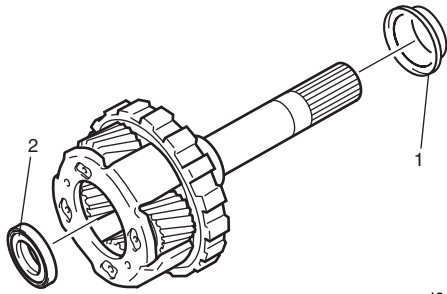


I6JB01510036-01

- 15) Install rear planetary gear assembly (1).

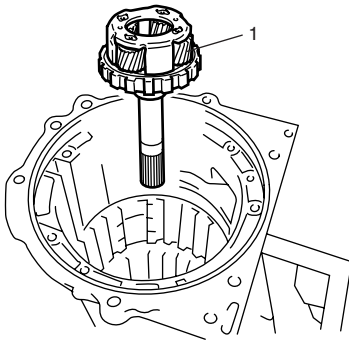


I4JA01512226-01

- 16) Place rear planetary flange (1) on rear planetary ring gear (2).

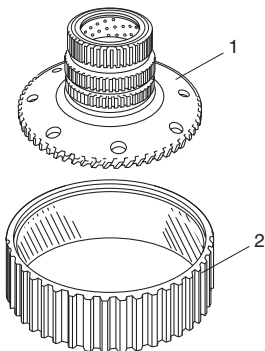


I4JA01512227-01

- 17) Install snap ring (1) by using flat end rod or the like.

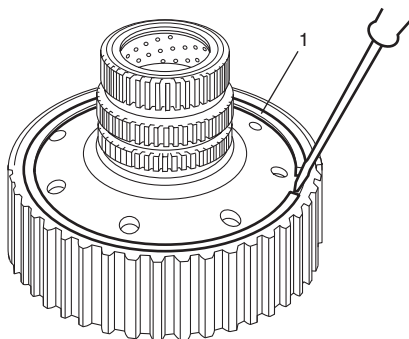


I4JA01512228-01

- 18) Install thrust bearing race No.8 (1), thrust needle roller bearing (2), thrust bearing race No.7 (3) and planetary ring gear flange assembly (4) to intermediate shaft.

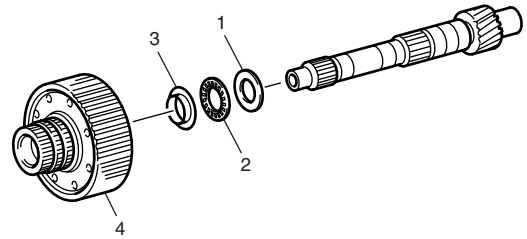

I4JA01512229-01


- 19) Install intermediate shaft (1) including planetary ring gear flange assembly (2) to transmission case.

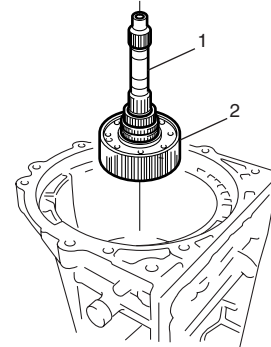

I4JA01512230-01


- 20) Install 1st & reverse (No.4) brake flange "F", 1st & reverse (No.4) brake discs "D" and 1st & reverse (No.4) brake plates "P" in the following order.
F - D - P - D - P - D - P - D - P - D - P - D - P - D

- 21) Install 1st & reverse (No.4) brake flange (1) with flat side of flange facing to toward the upside.

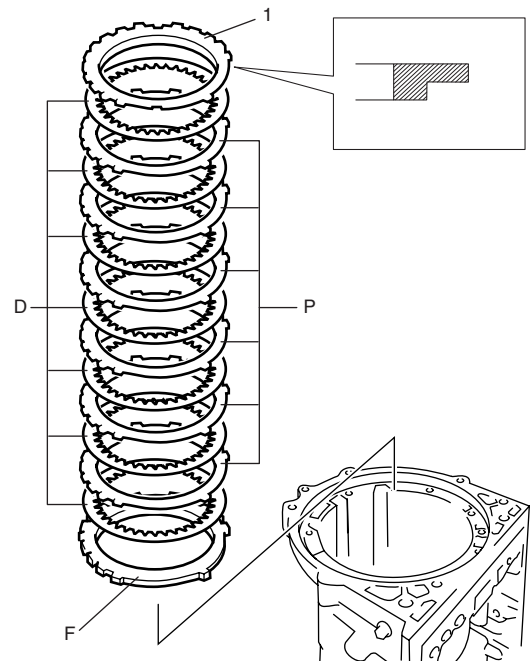


I4JA01512231-01

- 22) Install brake plate stopper spring (1) to transmission case.

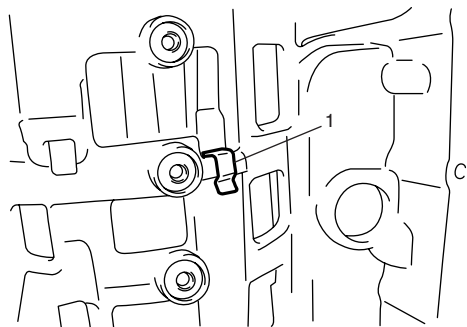

I4JA01512232-01


- 23) Install one-way No.3 clutch assembly (1) including one-way No.3 clutch inner race (2) to transmission case.

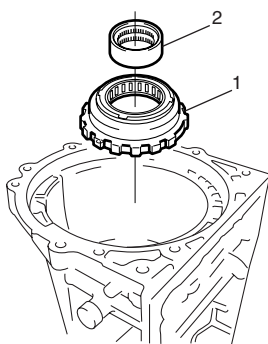

I4JA01512233-01

- 24) Install snap ring (1) by using special tool being sure not to align snap ring end gap with cut portion of transmission case.


Special tool
(A): 09900-06108

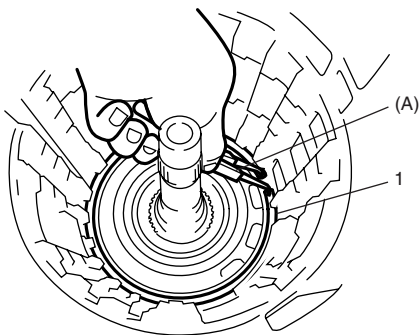

I4JA01512234-01

- 25) Install thrust bearing race No.4 (3) to middle planetary gear assembly (1).

- 26) Install middle planetary gear assembly (1) including planetary sun gear (2) into intermediate shaft.

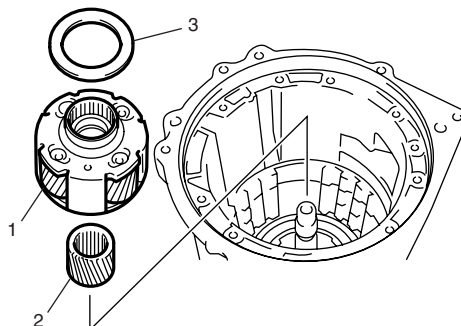


I4JA01512235-01

- 27) After applying A/T fluid to new 2 O-rings (1) and then install O-rings to No.2 brake piston (2).

- 28) Install No.2 brake piston (2) to No.2 brake cylinder (3).


⚠ CAUTION

Do not twist or deviate O-ring during installation.

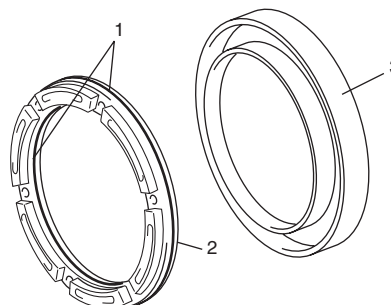


I4JA01512236-01

- 29) Install No.2 brake cylinder (2) including No.2 brake piston (1) to transmission case.

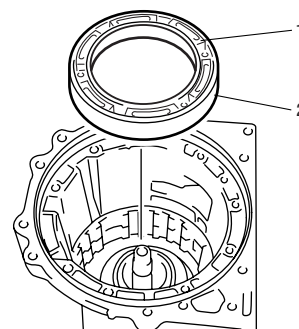

I4JA01512237-01

- 30) Install No.2 brake piston return spring (1) with spring side of plate facing to No.2 brake disc side.
- 31) Install No.2 brake discs "D" and No.2 brake plates "P" in the following order.
P - D - P - D - P - D
- 32) Install No.2 brake flange "F" with spring flange side of flange facing to No.2 brake disc side.

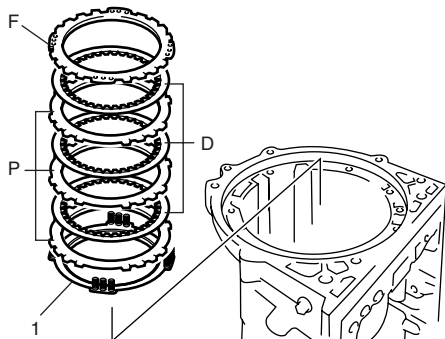

I4JA01512238-01

- 33) Compress No.2 brake piston return spring until the No.2 brake flange is lowered to the place 1 – 2 mm (0.039 – 0.078 in.) from the snap ring groove by using special tool.


⚠ CAUTION

Be careful when applying pressure, for overpressure will cause No.2 brake return spring to deform.

Special tool

- (A): 09927-66510
(B): 09913-85210
(C): 09920-13120

- 34) Place snap ring on No.2 brake flange being sure not to align snap ring end gap with cut portion transmission case.

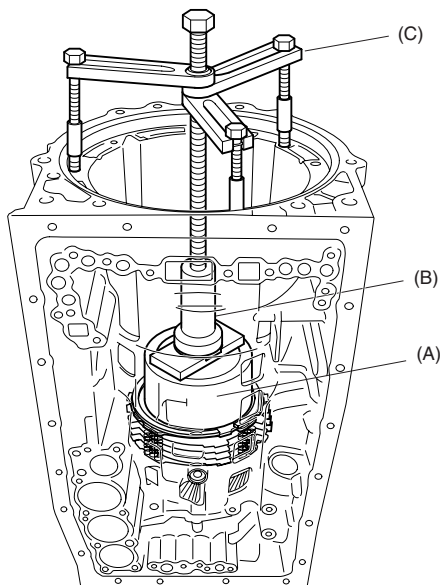


I4JA01512354-01

- 35) After applying A/T fluid to new 2 O-rings (1) and then install O-rings to No.1 brake piston (2).
- 36) Install No.1 brake piston (2) to No.1 brake cylinder (3).


⚠ CAUTION

Do not twist or deviate O-ring during installation.

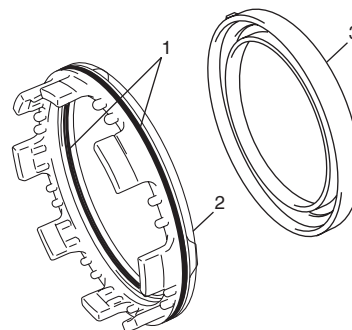

I4JA01512240-01

- 37) Install No.1 brake cylinder (2) including No.1 brake piston (1) to transmission case.
- 38) Place No.1 brake piston return spring (3) on No.1 brake piston (1).

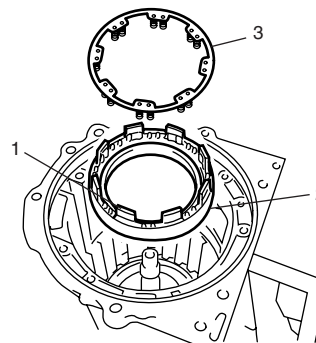

I4JA01512241-01

- 39) Compress No.1 brake piston return spring until the No.1 brake piston return spring is lowered to the place 1 – 2 mm (0.039 – 0.078 in.) from the snap ring groove by using special tool.

⚠ CAUTION

Be careful when applying pressure, for overpressure will cause plate section of No.1 brake piston return spring to deform.


Special tool

(A): 09927–66530

(B): 09913–85210


(C): 09920–13120

- 40) Place snap ring on No.1 brake piston being sure not to align snap ring end gap with cut portion transmission case.

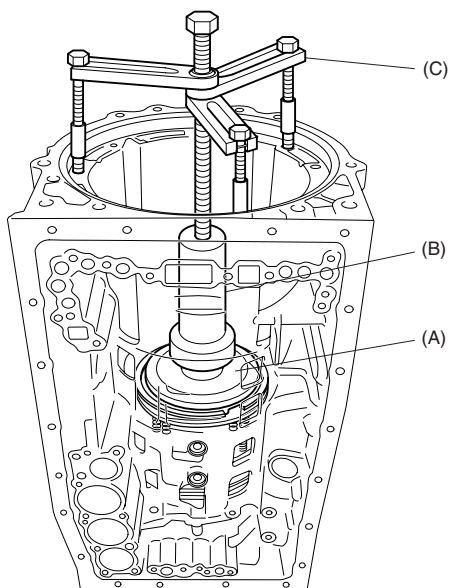


I4JA01512355-01

- 41) Install middle planetary ring gear (1) and front planetary ring gear flange (2) onto front planetary ring gear.

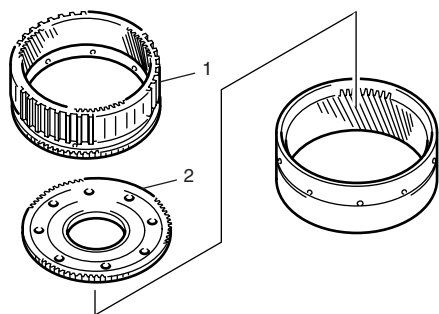

I4JA01512243-01


- 42) Install snap ring (1) by using flat end rod or the like.

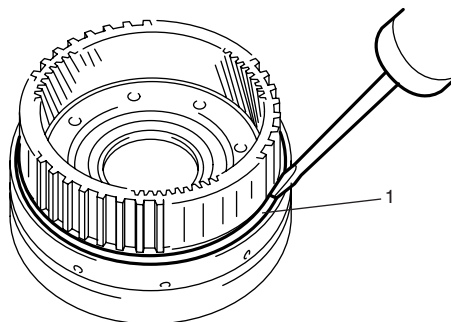

I4JA01512244-01


- 43) After applying petroleum jelly to thrust needle roller bearing (1) so that thrust needle roller bearing does not fall off.

- 44) Install front planetary ring gear (2) and thrust needle roller bearing (1) into intermediate shaft.

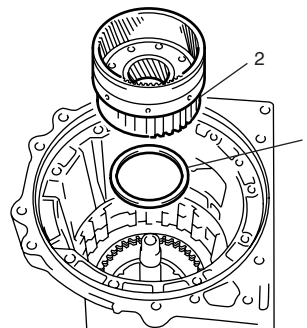

I4JA01512245-01

- 45) Install thrust needle roller bearing (1) and thrust bearing race No.3 (2) onto front planetary ring gear.

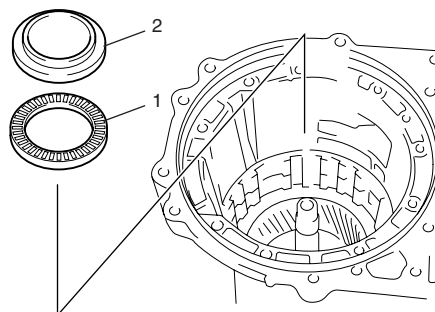

I4JA01512246-01

- 46) Fit planetary carrier thrust washer No.2 (1) to front planetary gear assembly (2) with petroleum jelly so that planetary carrier thrust washer No.2 (1) does not fall off.


NOTE

Make sure projection part of planetary carrier thrust washer No.2 fit into holes of front planetary gear assembly.

- 47) Install front planetary gear assembly (2) and one-way No.1 clutch inner race (3) onto front planetary ring gear.


NOTE

Make sure align front planetary gear assembly trenches (4) and one-way No.1 clutch inner race holes (5).

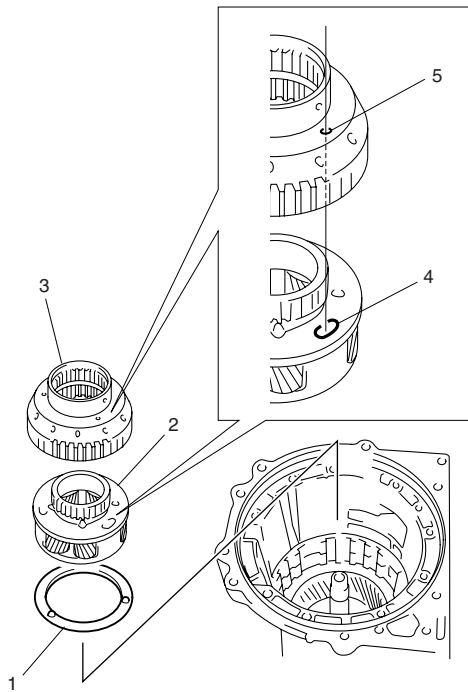

I4JA01512247-01

- 48) Install No.1 brake discs "D", No.1 brake plates "P" and No.1 brake flange "F" in the following order.
P - D - P - D - P - D - F

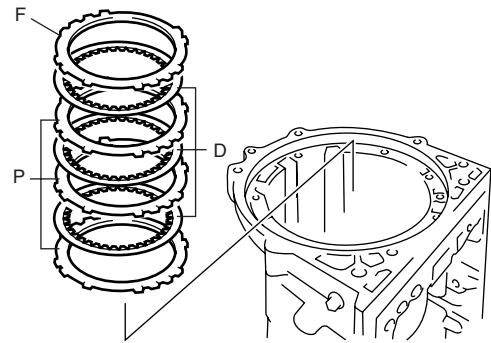


I4JA01512248-01

- 49) Using vernier calipers, measure the level difference (length A) between the upper surface of the No.1 brake piston and the hitting surface of No.1 brake flange at the both end across a diameter, and calculate the average.

NOTE

- No.1 brake piston must be installed tightly to the end face of transmission case.
- Length A:
15.29 – 15.77 mm (0.602 – 0.628 in.)

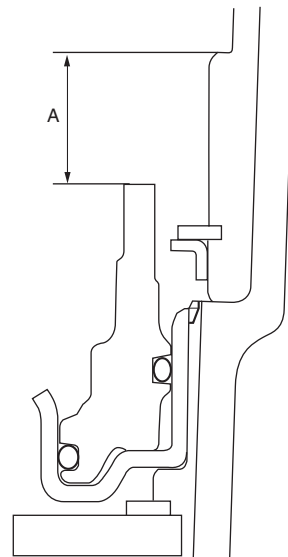

I4JA01512356-01

5A-144 Automatic Transmission/Transaxle:

- 50) Using vernier calipers, measure the thickness (length B) of the No.1 brake flanges, the No.1 brake plates and the No.1 brake discs altogether at the both end across a diameter, and calculate the average.

Pack Clearance


0.42 – 0.72 mm (0.017 – 0.028 in.)

- Pack Clearance: Length A – Length B
Length B: 14.72 – 15.12 mm (0.58 – 0.595 in.)

- 51) If the pack clearance is out of specification, select another flange with suitable thickness from the list below and replace it.

Available No.1 brake flange thickness

Identification No.	Thickness	Identification No.	Thickness
0	2.0 mm (0.079 in.)	2	2.4 mm (0.094 in.)
1	2.2 mm (0.087 in.)	3	2.6 mm (0.102 in.)

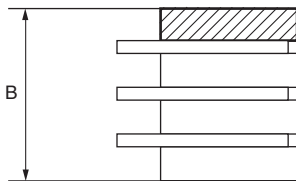


I4JA01512357-01

- 52) Install one-way No.1 clutch assembly (1) and planetary carrier thrust washer No.1 (2) to transmission case.

NOTE

Make sure projection part of planetary carrier thrust washer No.1 fit into holes of one-way No.1 clutch inner race.

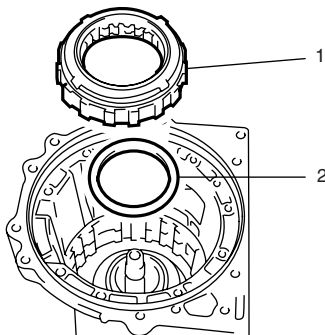


I4JA01512249-01

- 53) After applying A/T fluid to new 2 O-rings (1) and then install O-rings to 2nd (No.3) brake piston (2).
- 54) Install 2nd (No.3) brake piston (2) to 2nd (No.3) brake cylinder (3).

⚠ CAUTION

Do not twist or deviate O-ring during installation.

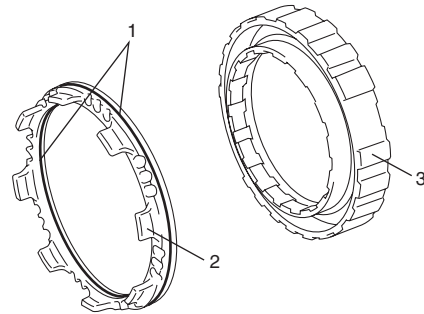

I4JA01512250-01

- 55) Place 2nd (No.3) brake piston return spring (1) on 2nd (No.3) brake piston.
- 56) Compress 2nd (No.3) brake piston return spring (1) until the 2nd (No.3) brake piston return spring is lowered to the place 1 – 2 mm (0.039 – 0.078 in.) from the snap ring groove by using special tool.


⚠ CAUTION

Be careful when applying pressure, for overpressure will cause plate section of 2nd (No.3) brake return spring to deform.

Special tool


(A): 09927–66540

- 57) Place snap ring (2) on 2nd (No.3) brake piston return spring retainer being sure not to align snap ring end gap with spring retainer claw.

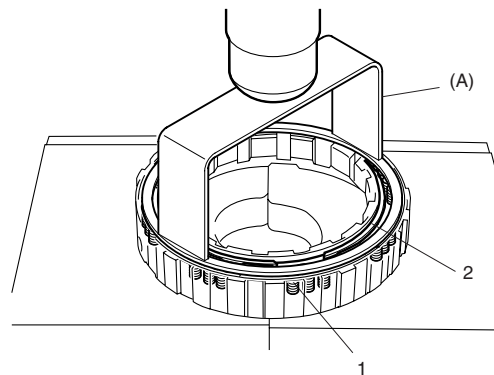

I4JA01512352-01


- 58) Install 2nd (No.3) brake piston (1) including 2nd (No.3) brake cylinder (2) to transmission case.

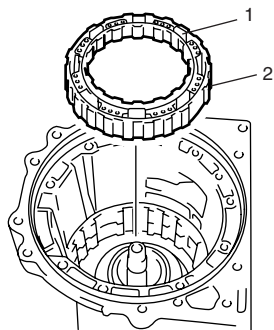

I4JA01512252-01

- 59) Install snap ring (1) by using special tool being sure not to align snap ring end gap with cut portion of transmission case.

Special tool
(A): 09900-06108

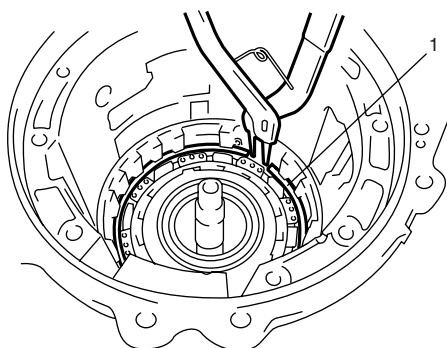


I4JA01512253-01

- 60) Fit clutch hub thrust washer (1) to one-way No.2 clutch assembly (2) with petroleum jelly so that clutch hub thrust washer (1) does not fall off.
- 61) Install clutch hub thrust washer (1) and one-way No.2 clutch assembly (2) to transmission case.


NOTE

Make sure projection part of clutch hub thrust washer fit into holes of one-way No.2 clutch assembly.

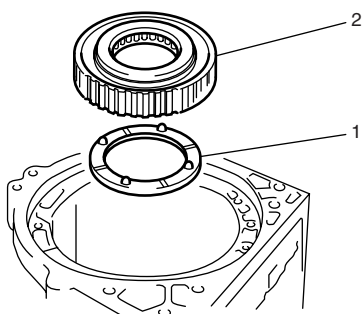


I4JA01512256-01

- 62) Install 2nd (No.3) brake cushion plate (1), 2nd (No.3) brake plates "P" and 2nd (No.3) brake discs "D".
P - D - P - D - P - D - P - D
- 63) Install 2nd (No.3) brake flange "F".

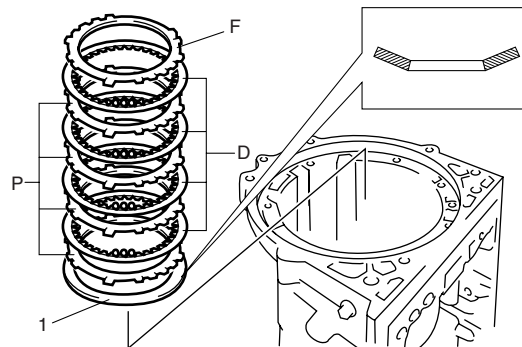

I4JA01512257-01

- 64) Install snap ring (1) by using flat end rod or the like being sure not to align snap ring end gap with cut portion of transmission case.

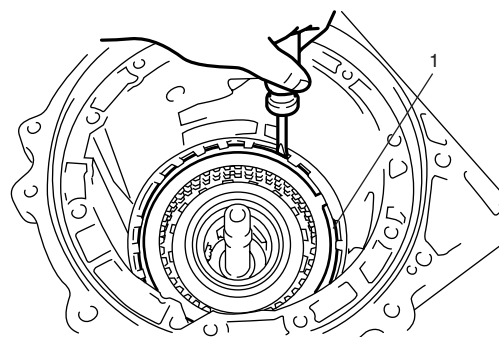


I4JA01512258-01

- 65) Fit clutch drum thrust washer No.2 (1) to clutch drum and input shaft assembly with petroleum jelly so that clutch drum thrust washer No.2 (1) does not fall off.

NOTE


Make sure projection part of clutch drum thrust washer No.2 fit into holes of reverse clutch hub.

- 66) Install thrust needle roller bearing No.1 (2) and thrust needle roller bearing No.2 (3) to clutch drum and input shaft assembly.

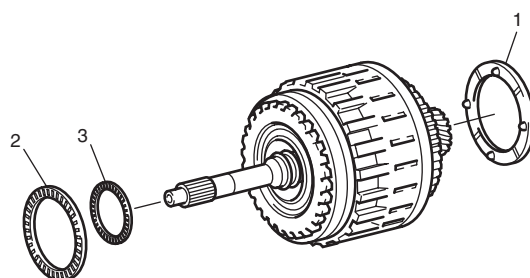


I6JB01510035-01

- 67) Install clutch drum and input shaft assembly (1) to transmission case.

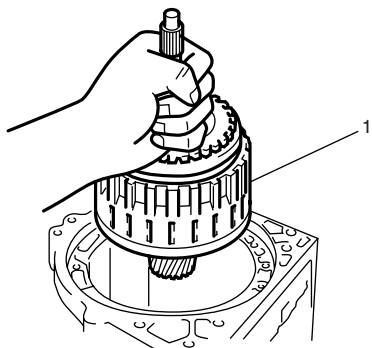


I4JA01512260-01

- 68) After applying petroleum jelly to thrust bearing race No.1 (1) and thrust bearing race No.2 (2) so that bearing race does not fall off, install it to oil pump assembly.

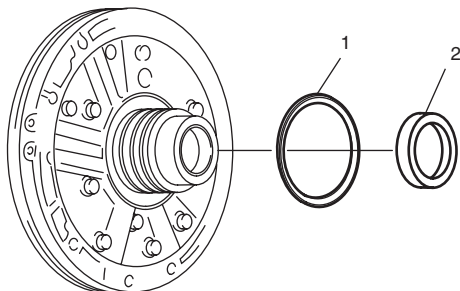

I6JB01510034-01

- 69) After applying A/T fluid to new O-ring (1) and then install O-ring to oil pump assembly (2).

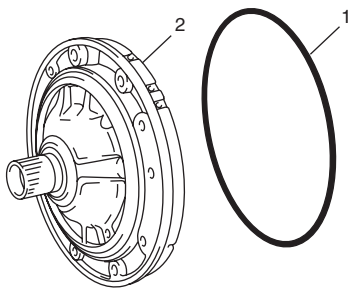

I4JA01512262-01

- 70) Install oil pump assembly aligning bolt holes in transmission case with oil pump assembly. Apply seal packing to 10 oil pump bolts and tighten them by certain amount of torque at each time one after another till specified torque is attained.


Tightening torque

Oil pump bolt (a): 21 N·m (2.1 kgf-m, 15.0 lb-ft)

"A": Sealant 99000-31230 (SUZUKI Bond No.1216B)

NOTE

Make sure input shaft rotates smoothly.

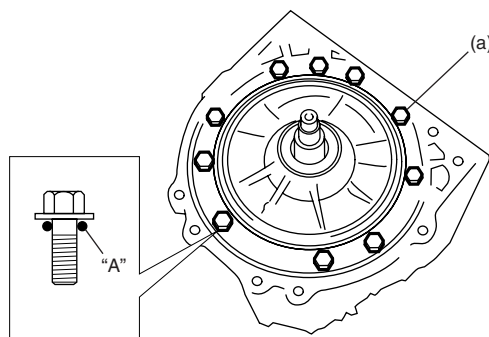


I4JA01512263-01

- 71) Install new 2 manual shift shaft oil seals (1) to transmission case by using special tools.

Special tool

(A): 09917-98221


(B): 09916-57330

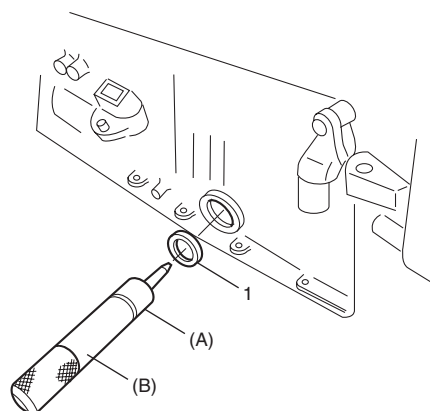

I4JA01512264-01

72) Apply compressed air (392 kPa, 4.0 kg/cm², 57 psi) into oil holes indicated in the figure. If there is no noise, disassemble and check installation condition of parts.

- When inspecting 1st & reverse (No.4) brake, check oil hole (8) closed.

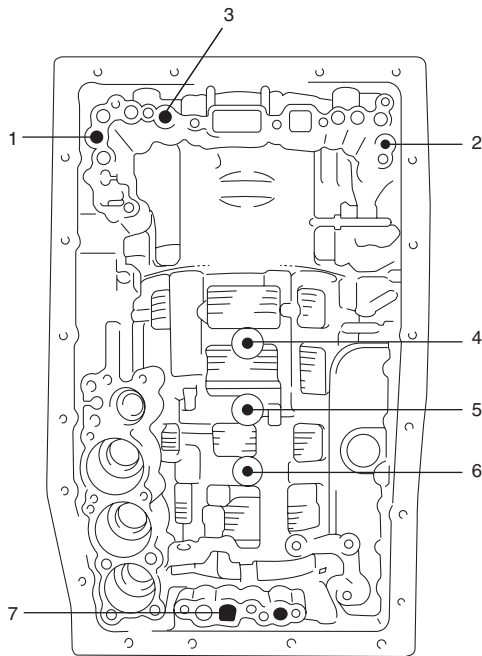


I6JB01510043-01

1. Direct clutch	5. No.1 brake
2. Reverse clutch	6. No.2 brake
3. Forward clutch	7. 1st & reverse (No.4) brake
4. 2nd (No.3) brake	


73) Install a new spacer (1) to manual shift lever (2).

74) Install manual shift shaft (3) to transmission case through manual shift lever.

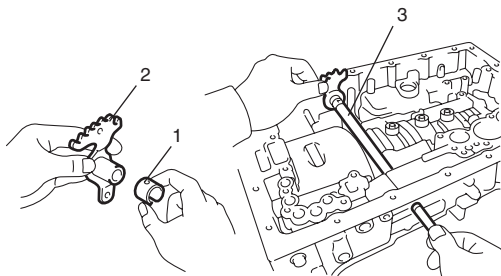


I4JA01512266-01

75) Drive in manual shift lever pin (1) by using hammer.

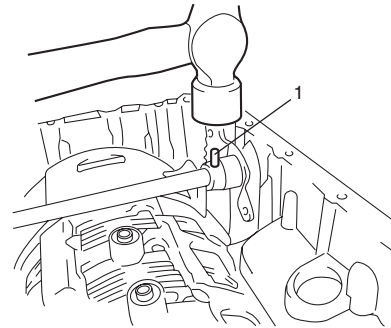


I4JA01512267-01

76) Align hole in sleeve cover with dent in manual shift lever and caulk securely with pin punch (1). Then check that manual shift shaft turns smoothly.

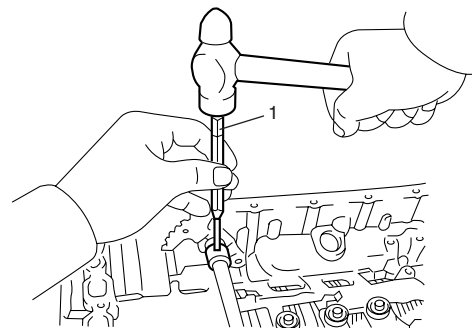


I4JA01512268-01

77) Install parking lock pawl (2), parking pawl pin (1) and parking pawl spring (3).

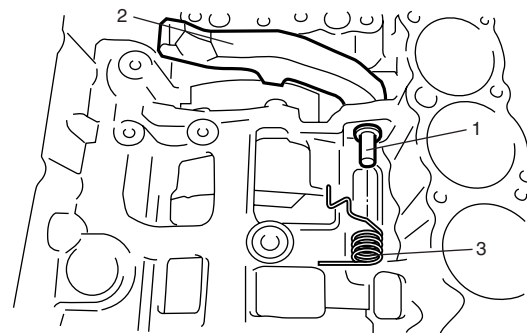

I4JA01512269-01

- 78) Connect parking lock rod (2) to manual shift lever (1) as shown in the figure.

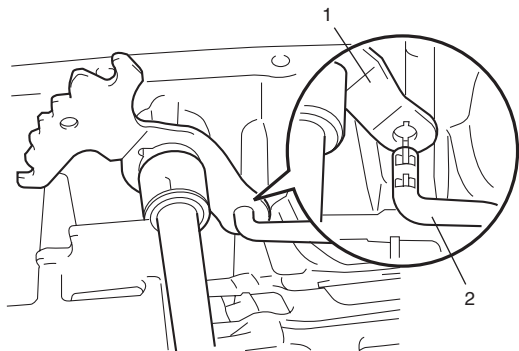


I4JA01512270-01

- 79) Install parking lock pawl bracket (1).
Tighten parking pawl bracket bolts (2) to specified torque.


Tightening torque

Parking pawl bracket bolt (a): 7.4 N·m (0.74 kgf-m, 5.5 lb-ft)

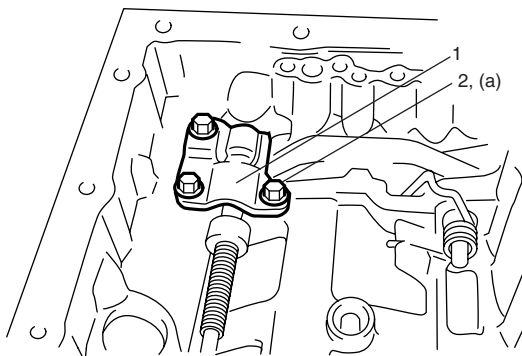

I4JA01512271-01

- 80) Turn manual shift lever (1) to "P" position, confirm that rear planetary ring gear (2) is correctly locked up by parking lock pawl (3).

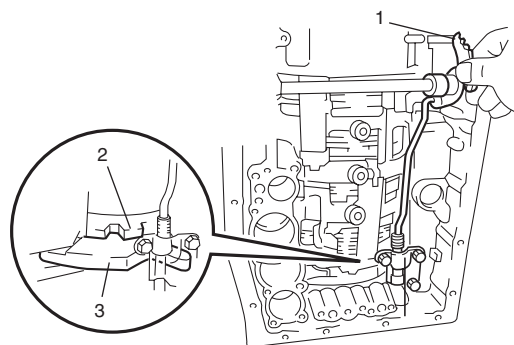


I4JA01512272-01

- 81) After applying A/T fluid to new O-rings and then install O-rings to accumulator pistons.

- 82) Install springs to transmission case.


Accumulator piston spring specification

Accumulator spring		Free length	Outside diameter	Identification painting
Forward clutch accumulator or (1)	Inner	30.40 mm (1.197 in.)	11.40 mm (0.449 in.)	Pink
	Outer	48.76 mm (1.920 in.)	16.60 mm (0.654 in.)	Green
Reverse clutch accumulator or (2)	Inner	44.0 mm (1.732 in.)	14.0 mm (0.551 in.)	Yellow
	Outer	73.35 mm (2.888 in.)	19.90 mm (0.784 in.)	Red
2nd (No.3) brake accumulator (3)		64.5 mm (2.540 in.)	19.5 mm (0.768 in.)	Orange
Direct clutch accumulator (4)		62.0 mm (2.441 in.)	15.9 mm (0.626 in.)	White

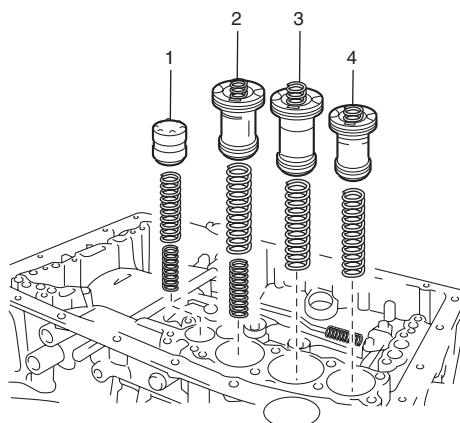


I4JA01512273-01

- 83) Install spring (2) and check ball body (1) to transmission case.

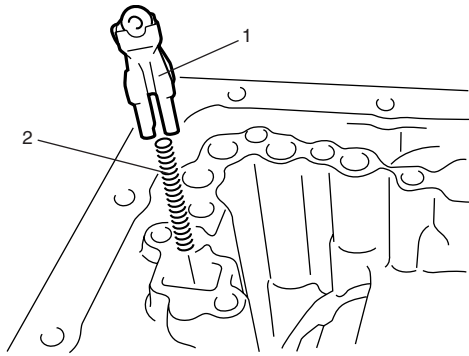


I4JA01512274-01

- 84) Install new brake drum gaskets (1).

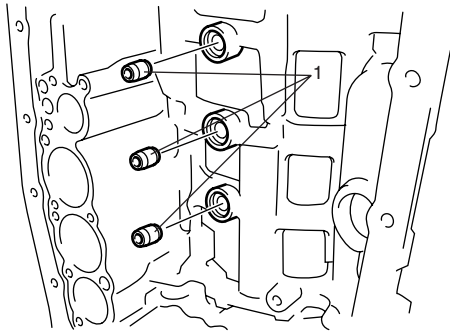

I4JA01512275-01

- 85) Install new transmission case gaskets (1).

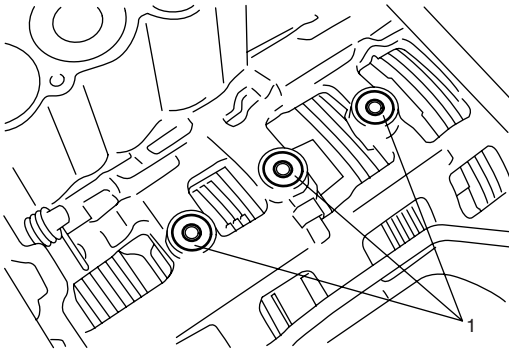

I4JA01512276-01

- 86) Align the groove of manual valve with pin of lever (1).
87) Install valve body assembly (2) by using bolts noting their length shown below.



Tightening torque

Valve body bolt (a): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

Valve body bolt length

Bolt	Length	Pieces
A	25.0 mm (0.984 in.)	16
B	36.0 mm (1.417 in.)	3

- 88) Install spring plate (3) and manual shift lever spring (4).

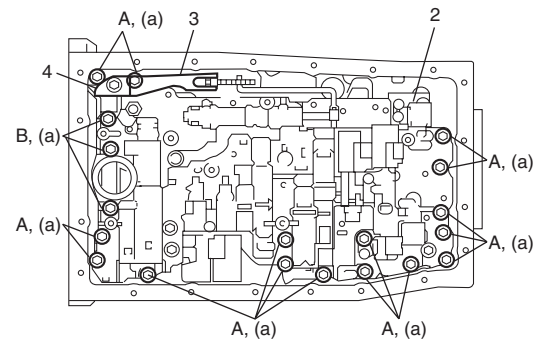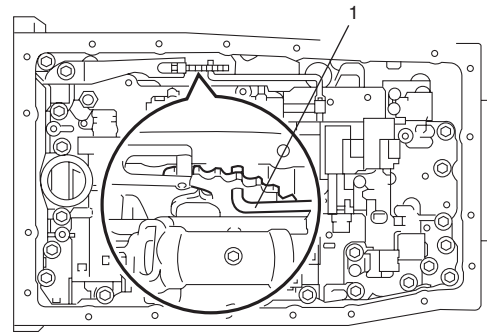


I4JA01512277-01

- 89) After applying A/T fluid to new O-ring and then install transmission wire connector (2).

Tighten transmission wire connector bolt (1) to specified torque.

Tightening torque

Transmission wire connector bolt (a): 5.5 N·m (0.55 kgf-m, 4.0 lb-ft)

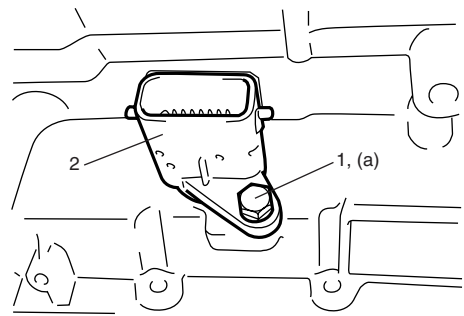

I4JA01512278-01

5A-150 Automatic Transmission/Transaxle:

- 90) Install transmission fluid temperature sensor A (1) and B (2) (if equipped).
- 91) Install clamp and bolts to specified torque.

Tightening torque

Transmission fluid temperature sensor clamp bolt (a): 11 N·m (1.1 kgf-m, 8.0 lb-ft)


Transmission fluid temperature sensor clamp bolt (b): 10 N·m (1.0 kgf-m, 7.0 lb-ft)

Transmission fluid temperature sensor clamp bolt length

Bolt	Length
A	36.0 mm (1.417 in.)
B	12.0 mm (0.472 in.)

Transmission fluid temperature sensor harness color

Fluid temperature sensor	Color
Transmission fluid temperature sensor A	Blue
Transmission fluid temperature sensor B	Orange

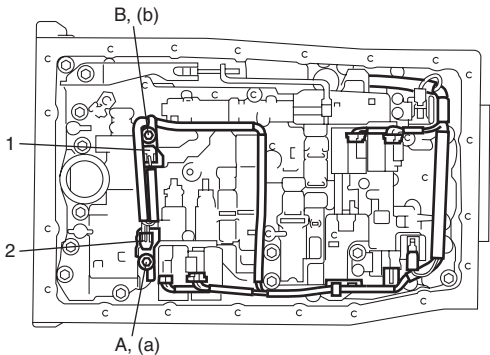


I6JB0B510011-01

- 92) Connect pressure control solenoid-A connector (1), pressure control solenoid-B connector (2), shift solenoid-A connector (3), shift solenoid-B connector (4), shift solenoid-E connector (5), TCC solenoid connector (6) and pressure control solenoid-C connector (7) to each solenoid valve.

Shift solenoid valve harness color

Solenoid valve	Harness color
Pressure control solenoid-A	Green/Gray
Pressure control solenoid-B	Blue/Red
Pressure control solenoid-C	Purple/Yellow
Shift solenoid-A	White
Shift solenoid-B	Black
Shift solenoid-E	Light blue
TCC solenoid	Light green/Brown

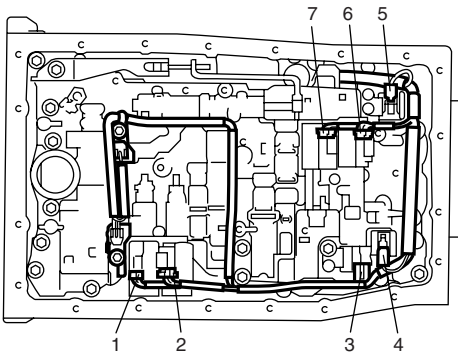


I4JA01512280-01

- 93) After applying A/T fluid to new O-ring and then install O-ring to oil strainer.
- 94) Install oil strainer (1) to valve body assembly. Tighten 4 oil strainer bolts to specified torque.


Tightening torque

Oil strainer bolt (a): 10 N·m (1.0 kgf-m, 7.0 lb-ft)

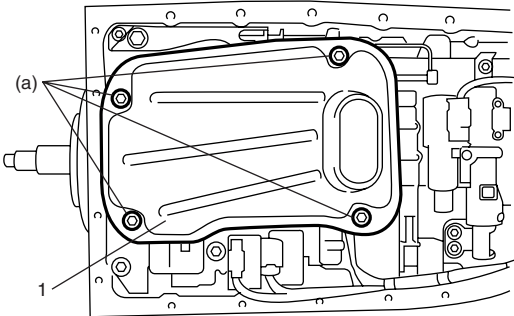

I4JA01512281-01

- 95) Install 4 transmission magnets (1).

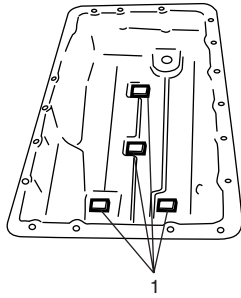

I4JA01512282-01

- 96) Install a new gasket to oil pan.

- 97) Install oil pan to transmission case.

Tighten 20 oil pan bolts (1) to specified torque.

Tightening torque


Oil pan bolt (a): 4.5 N·m (0.45 kgf-m, 3.5 lb-ft)

- 98) Install drain plug (2).

Tighten drain plug to specified torque.

Tightening torque

Drain plug (b): 20 N·m (2.0 kgf-m, 14.5 lb-ft)

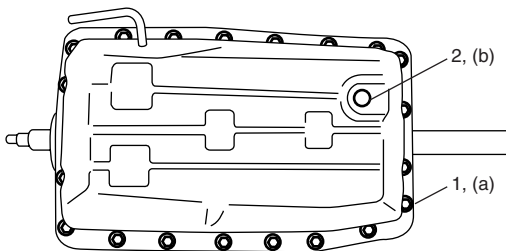


I4JA01512283-01

- 99) Install new oil seal (if removed) to transmission adapter case by using special tool and hammer.

Special tool


(A): 09913-75520

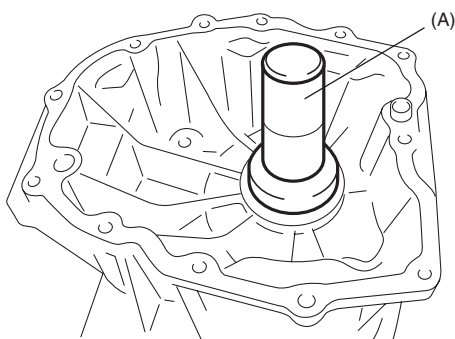

I4JA01512289-01

- 100) Apply sealant continuously to transmission case adapter sub assembly (1) mating surface as shown in figure.

“A”: Sealant 99000-31230 (SUZUKI Bond No.1216B)

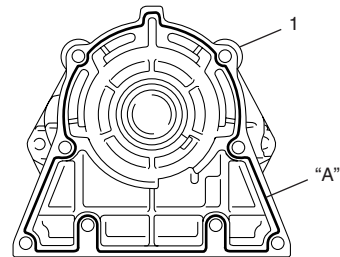

I4JA01512290-01

- 101) Install transmission case adapter sub assembly (1) to transmission case.

Tighten 8 transmission case adapter sub assembly bolts to specified torque.


NOTE

Make sure to use new transmission case adapter sub assembly bolts.

Tightening torque

Transmission case adapter sub assembly bolt (a): 34 N·m (3.4 kgf-m, 24.5 lb-ft)

Bolt	Length
A	50.0 mm (1.969 in.)
B	40.0 mm (1.575 in.)

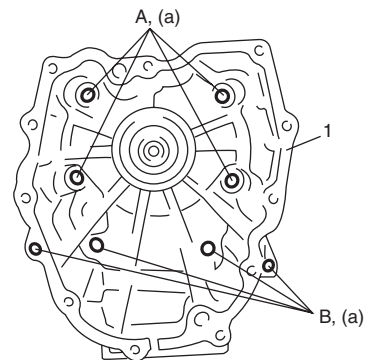

I4JA01512291-01

- 102) Clean threads of automatic transmission housing bolts and bolt holes of transmission case, install automatic transmission housing (1) to transmission case.
Tighten 10 automatic transmission housing bolts to specified torque.


NOTE

Make sure to use new converter housing bolts (2) and (3).

Tightening torque

Automatic transmission housing bolt (a): 57 N·m (5.7 kgf-m, 41.5 lb-ft)

Automatic transmission housing bolt (b): 34 N·m (3.4 kgf-m, 24.5 lb-ft)

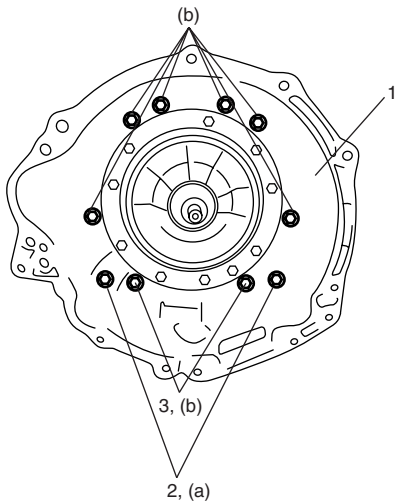


I4JA01512292-01

- 103) After applying A/T fluid to new O-ring and then install automatic transmission breather pipe (1).
104) Install automatic transmission breather hose.
Tightening 2 automatic transmission breather pipe bolts to specified torque.

Tightening torque

Automatic transmission breather pipe bolt (a): 5.5 N·m (0.55 kgf-m, 4.0 lb-ft)


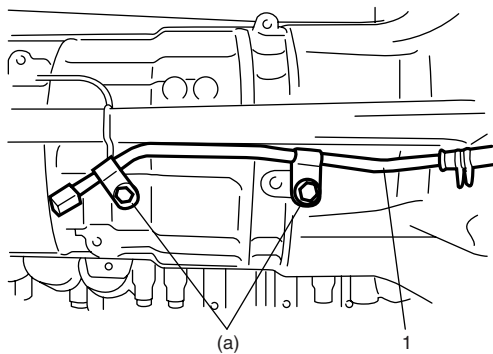


I4JA01512293-01

- 105) After applying A/T fluid to new O-rings and then install them to output shaft speed sensor (1) and input shaft speed sensor (2).
106) Install output shaft speed sensor (1) and input shaft speed sensor (2).
Tighten transmission speed sensor bolts to specified torque.

Tightening torque

Transmission speed sensor bolt (a): 5.5 N·m (0.55 kgf-m, 4.0 lb-ft)

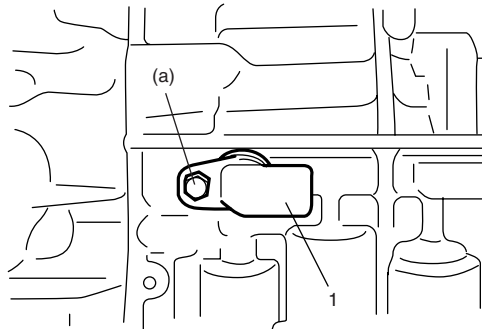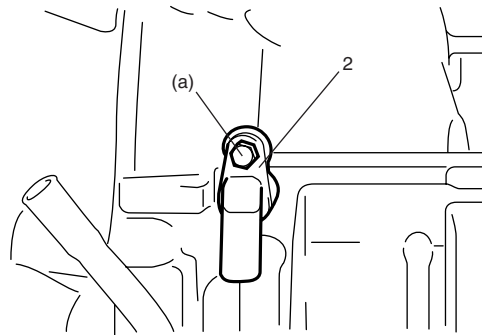


I5JA01512005-01

- 107) Apply A/T fluid to new 4 union gaskets and then install oil cooler pipes (1).
Tighten 2 oil cooler pipe union bolts to specified torque.

Tightening torque

Oil cooler pipe union bolt (a): 25 N·m (2.5 kgf-m, 18.0 lb-ft)

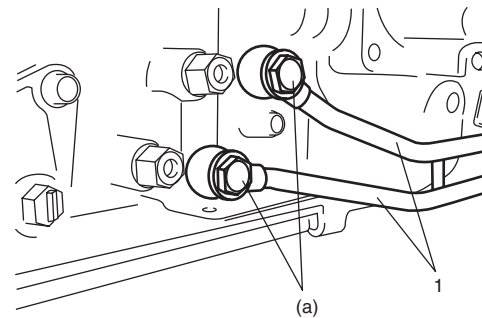

I6JB01510044-01

108) Install transmission range sensor (1) and tighten transmission range sensor bolt (4) temporarily.

109) Install grommet, lock washer (2) and nut (3). Tighten nut to specified torque. After tightening it, bend claws of lock washer.

Tightening torque



Manual shift shaft nut (a): 7 N·m (0.7 kgf-m, 5.0 lb-ft)

110) After turning manual lever shaft fully counterclockwise, turn it clockwise by 2 notches and set it to "N" range.

111) With neutral reference line (5) and groove (6) in transmission range sensor aligned. Tighten transmission range sensor bolt (4) to specified torque.

Tightening torque

Transmission range sensor bolt (b): 13 N·m (1.3 kgf-m, 9.5 lb-ft)

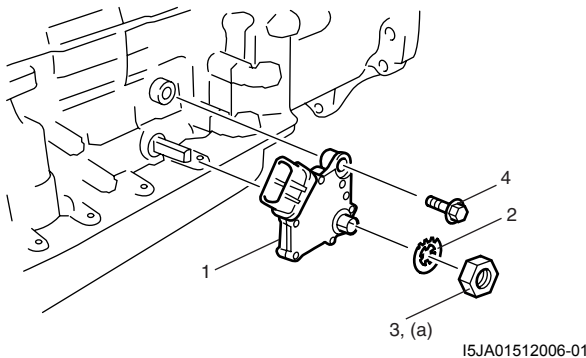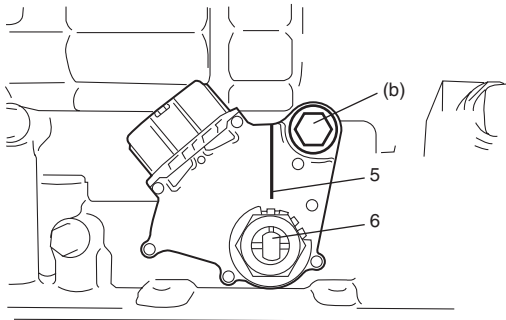


112) Install manual select lever (1).

Tighten manual select lever nut (2) to specified torque.

Tightening torque


Manual select lever nut (a): 12.5 N·m (1.25 kgf-m, 9.0 lb-ft)

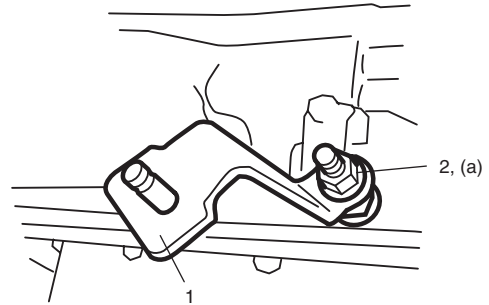

113) Install torque converter (1) to input shaft.

⚠ CAUTION


Install torque converter, using care not to damage oil seal lip of oil pump.

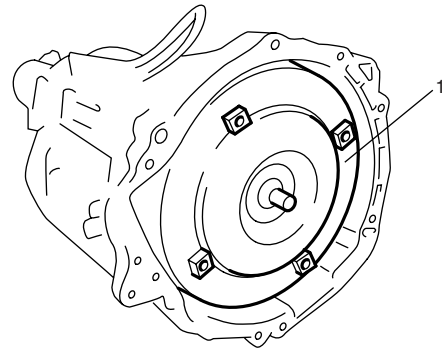

Automatic Transmission Unit Assembly Inspection

S6JB0B5106041

- Hold reverse clutch hub (1), and turn one-way No.2 clutch assembly (2). Check that one-way No.2 clutch assembly (2) can be turned freely (3) clockwise and locked (4) counterclockwise.

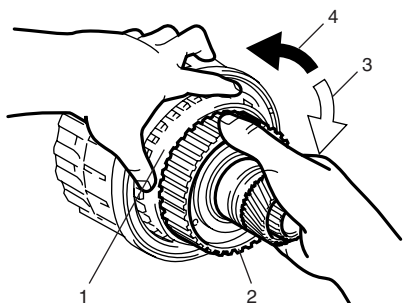


I4JA01512299-01

- Check that sliding surfaces of discs, plate and flange are not worn or burnt. If necessary replace them.

NOTE

- If disc lining is exfoliated, discolored or worn hardly, replace all discs.
- If only a part of printed numbers is corroded, replace all discs.
- Before assembling new discs, soak them in A/T fluid for at least 15 minutes.

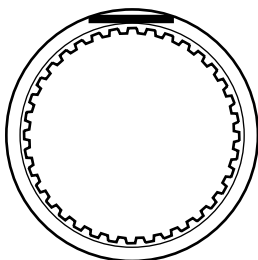


I4JA01512300-01

- Measure free length of 2nd (No.3) brake piston return spring including spring seat.

2nd (No.3) brake piston return spring free length
"a": 15.72 mm (0.619 in.)

NOTE


- Do not apply excessive force when measuring spring free length.
- Perform measurement at several points.

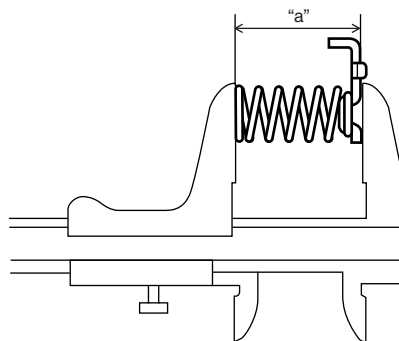

I4JA01512301-01

- Measure planetary pinion gear thrust clearance by using thickness gauge. If clearance exceeds limit, replace front planetary gear assembly.

Front planetary pinion gear thrust clearance
Standard: 0.20 – 0.60 mm (0.008 – 0.024 in.)
Limit: 0.65 mm (0.026 in.)

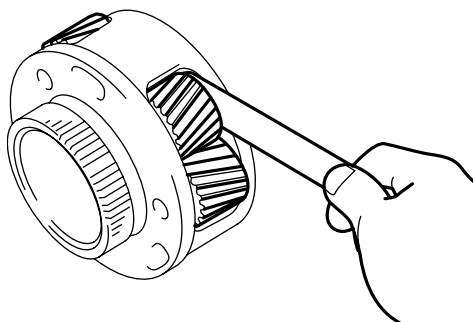


I4JA01512302-01

- Measure inside diameter of front planetary gear assembly bushing.
If inside diameter exceeds limit, replace front planetary gear assembly.


Front planetary gear assembly bushing inside diameter limit

57.48 mm (2.263 in.)

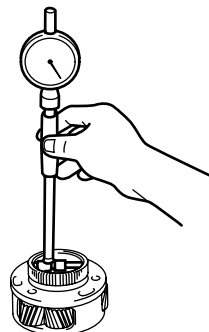

I4JA01512303-01

- Install one-way No.1 clutch assembly (1) to one-way No.1 clutch inner race (2).
Hold one-way No.1 clutch inner race (2), and turn one-way No.1 clutch assembly (1).
Check that one-way No.1 clutch assembly (1) can be turned freely (3) counterclockwise and locked (4) clockwise.
Remove one-way No.1 clutch assembly (1) from one-way No.1 clutch inner race (2).

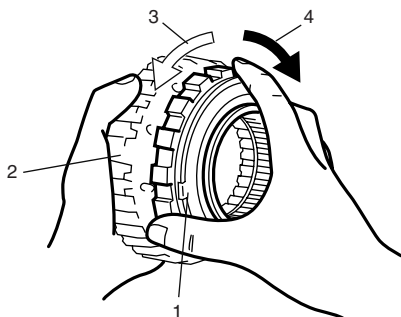

I4JA01512304-01


- Measure free length of No.1 brake piston return spring including spring seat.

No.1 brake piston return spring free length

"a": 17.05 mm (0.671 in.)

NOTE

- Do not apply excessive force when measuring spring free length.
- Perform measurement at several points.

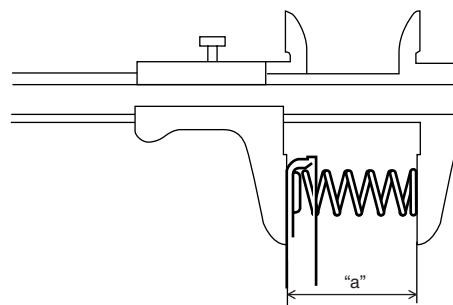

I4JA01512305-01


- Measure free length of No.2 brake piston return spring including spring seat.

No.2 brake piston return spring free length

"a": 17.45 mm (0.687 in.)

NOTE

- Do not apply excessive force when measuring spring free length.
- Perform measurement at several points.

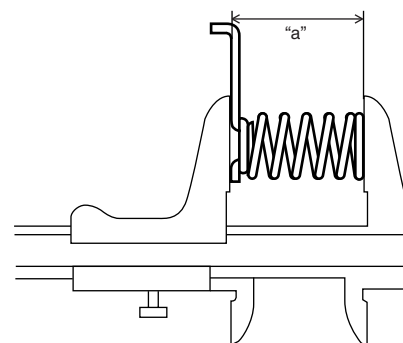


I4JA01512306-01

- Measure planetary pinion gear thrust clearance by using thickness gauge.
If clearance exceeds limit, replace middle planetary gear assembly.

Middle planetary pinion gear thrust clearance


Standard: 0.12 – 0.68 mm (0.005 – 0.027 in.)

Limit: 0.73 mm (0.029 in.)

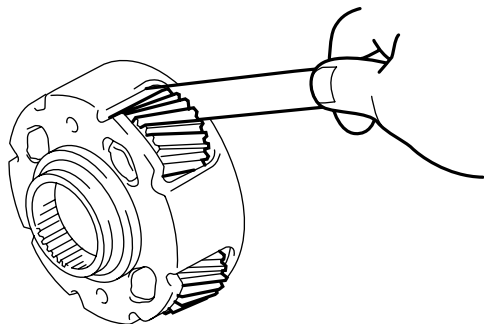

I4JA01512307-01

- Hold rear planetary ring gear flange sub assembly (1) and turn one-way No.3 clutch assembly (2). Check that one-way No.3 clutch assembly (2) can be turned freely (3) counterclockwise and locked (4) clockwise.

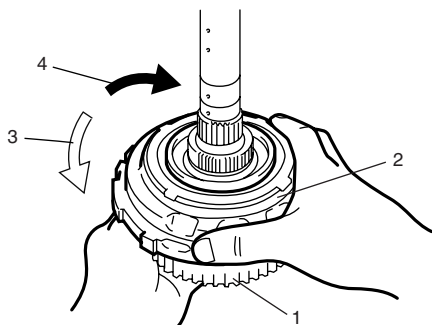


I4JA01512308-01

- Measure inside diameter of planetary ring gear assembly bushing.
If inside diameter exceeds limit, replace planetary ring gear.

Planetary ring gear bushing inside diameter limit

32.19 mm (1.267 in.)

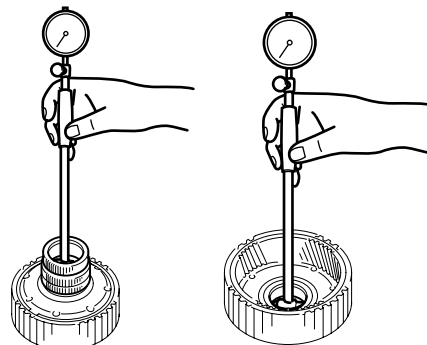


I4JA01512309-01

- Set intermediate shaft between two “V” blocks, and measure its runout by using a dial gauge.
If runout exceeds limit, replace intermediate shaft with new one.

Intermediate shaft runout limit

0.08 mm (0.003 in.)


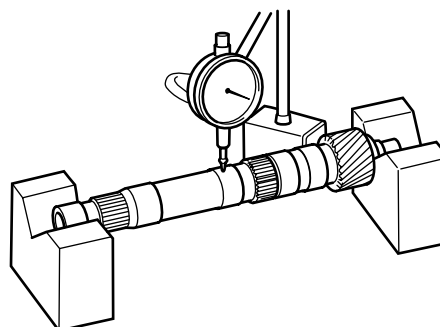


I4JA01512310-01

- Measure outside diameter of intermediate shaft positions shown in figure.
If outside diameter is below limit, replace intermediate shaft with new one.

Outside diameter of intermediate shaft

	Standard	Limit
A	25.962 – 25.975 mm (1.022 – 1.023 in.)	25.912 mm (1.020 in.)
B	25.962 – 25.975 mm (1.022 – 1.023 in.)	25.912 mm (1.020 in.)
C	32.062 – 32.075 mm (1.262 – 1.263 in.)	32.012 mm (1.260 in.)
D	32.062 – 32.075 mm (1.262 – 1.263 in.)	32.012 mm (1.260 in.)

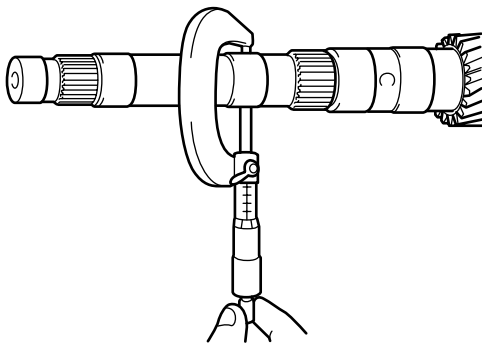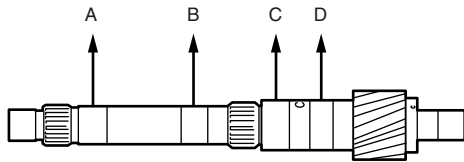


I5JA01512007-01

- Measure planetary pinion gear thrust clearance by using thickness gauge.
If clearance exceeds limit, replace rear planetary gear assembly.

Rear planetary pinion gear thrust clearance

Standard: 0.2 – 0.6 mm (0.008 – 0.024 in.)


Limit: 0.65 mm (0.026 in.)

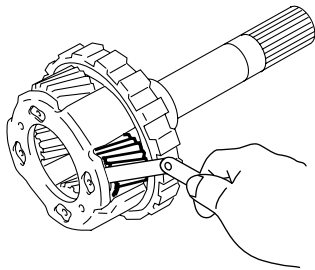

I4JA01512312-01

- Measure inside diameter of rear planetary gear assembly bushing.
If inside diameter exceeds limit, replace rear planetary gear assembly.

Rear planetary gear inside diameter limit 20.075 mm (0.790 in.)

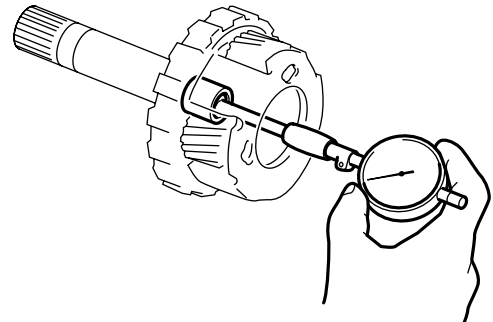

I4JA01512313-01


- Measure free length of 1st & reverse (No.4) brake return spring including spring seat.

1st & reverse (No.4) brake return spring free length

"a": 23.74 mm (0.935 in.)

NOTE

- Do not apply excessive force when measuring spring free length.
- Perform measurement at several points.

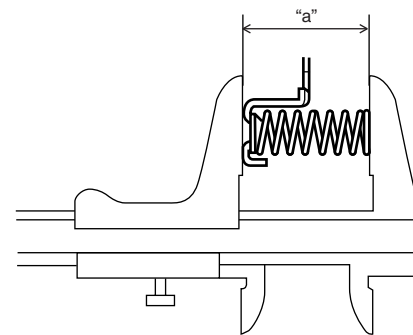


I4JA01512314-01

Specifications

Bearing and Race Installation Specification

S6JB0B5107001

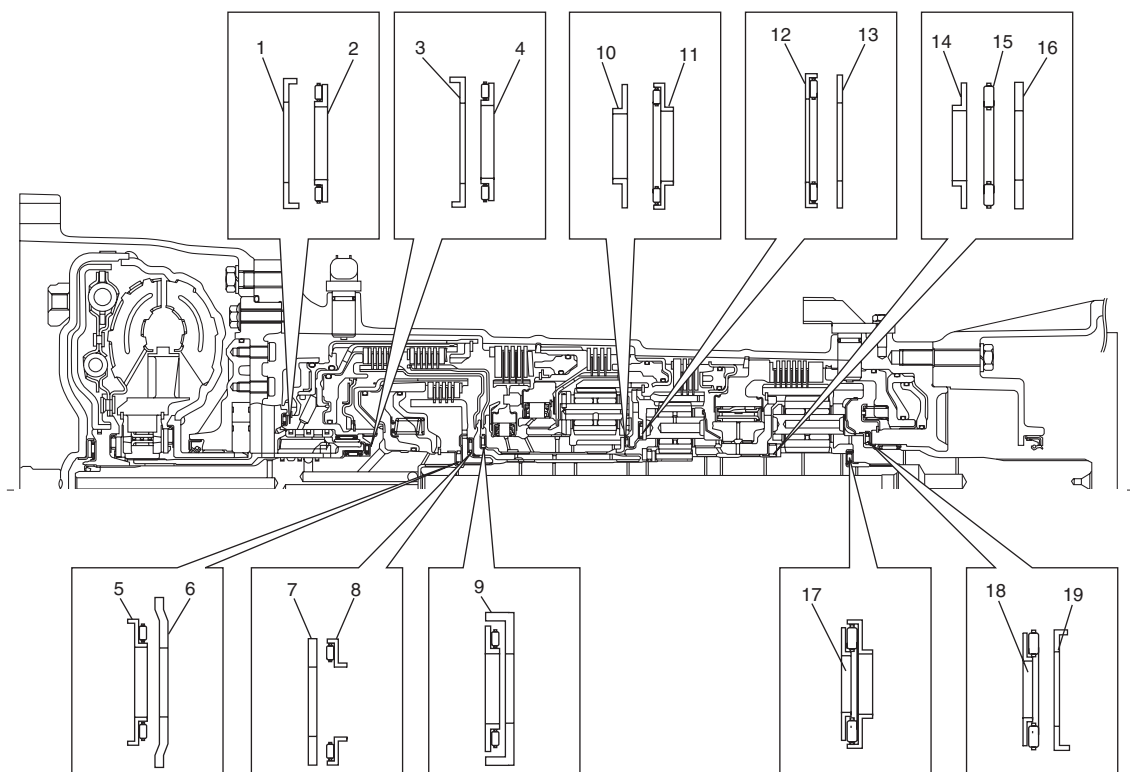

I6JB01510047-04

Bearing and Race Dimension

No.	Bearing and race	Inside diameter	Outside diameter
1	Thrust bearing race No.1	74.2 mm (2.921 in.)	87.74 mm (3.454 in.)
2	Thrust needle roller bearing	71.9 mm (2.831 in.)	85.6 mm (3.370 in.)
3	Thrust bearing race No.10	37.1 mm (1.461 in.)	52.2 mm (2.055 in.)
4	Thrust needle roller bearing	34.7 mm (1.366 in.)	52.1 mm (2.055 in.)
5	Thrust needle roller bearing	21.3 mm (0.839 in.)	41.1 mm (1.618 in.)
6	Thrust bearing race	22.6 mm (0.890 in.)	60.0 mm (2.362 in.)
7	Thrust bearing race No.2	38.4 mm (1.512 in.)	63.0 mm (2.480 in.)
8	Thrust needle roller bearing	42.5 mm (1.673 in.)	61.2 mm (2.409 in.)
9	Thrust needle roller bearing	33.3 mm (1.311 in.)	56.6 mm (2.228 in.)
10	Thrust bearing race No.3	38.0 mm (1.496 in.)	57.0 mm (2.244 in.)
11	Thrust needle roller bearing	43.4 mm (1.709 in.)	58.3 mm (2.295 in.)
12	Thrust needle roller bearing	55.7 mm (2.193 in.)	76.4 mm (3.008 in.)
13	Thrust bearing race No.4	53.7 mm (2.114 in.)	74.0 mm (2.913 in.)
14	Thrust bearing race No.7	33.4 mm (1.315 in.)	49.0 mm (1.929 in.)
15	Thrust needle roller bearing	32.1 mm (1.264 in.)	49.35 mm (1.943 in.)
16	Thrust bearing race No.8	32.1 mm (1.264 in.)	49.0 mm (1.929 in.)
17	Thrust needle roller bearing	21.5 mm (0.847 in.)	40.8 mm (1.606 in.)
18	Thrust needle roller bearing	48.5 mm (1.909 in.)	62.7 mm (2.469 in.)
19	Thrust bearing race No.9	45.9 mm (1.807 in.)	64.0 mm (2.520 in.)

Tightening Torque Specifications

S6JB0B5107002

Fastening part	Tightening torque			Note
	N·m	kgf·m	lb·ft	
Fluid pressure check hole bolt	8	0.8	6.0	⌚
A/T fluid drain plug	20	2.0	14.5	⌚
Manual selector assembly mounting bolt	18	1.8	13.0	⌚
Manual select cable end nut	13	1.3	9.5	⌚
Manual shift shaft nut	7	0.7	5.0	⌚ / ⌚
Transmission range sensor bolt	13	1.3	9.5	⌚ / ⌚
Input shaft speed sensor bolt	5.5	0.55	4.0	⌚
Output shaft speed sensor bolt	5.5	0.55	4.0	⌚
Oil cooler pipe union bolt	25	2.5	18.0	⌚ / ⌚
Pipe clamp bolt	10	1.0	7.5	⌚
Oil pump body bolt	11	1.1	8.0	⌚
Oil pump bolt	21	2.1	15.0	⌚
Parking pawl bracket bolt	7.4	0.74	5.5	⌚
Valve body bolt	11	1.1	8.0	⌚
Transmission wire connector bolt	5.5	0.55	4.0	⌚
Transmission fluid temperature sensor clamp bolt	11	1.1	8.0	⌚
Transmission fluid temperature sensor clamp bolt	10	1.0	7.0	⌚
Oil strainer bolt	10	1.0	7.0	⌚
Oil pan bolt	4.5	0.45	3.5	⌚
Drain plug	20	2.0	14.5	⌚
Transmission case adapter sub assembly bolt	34	3.4	24.5	⌚
Automatic transmission housing bolt	57	5.7	41.5	⌚
Automatic transmission housing bolt	34	3.4	24.5	⌚
Automatic transmission breather pipe bolt	5.5	0.55	4.0	⌚
Transmission speed sensor bolt	5.5	0.55	4.0	⌚
Manual select lever nut	12.5	1.25	9.0	⌚

NOTE

The specified tightening torque is also described in the following.

“Oil Cooler Hoses Replacement”

“Manual Selector Assembly Components”

“Select Cable Component”

“Automatic Transmission Unit Components”

“Automatic Transmission Unit Components”

“Oil Pump Assembly Components”

“Valve Body Assembly Components”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Special Tools and Equipment

Recommended Service Material

S6JB0B5108001

Material	SUZUKI recommended product or Specification		Note
Sealant	SUZUKI Bond No.1216B	P/No.: 99000-31230	⌚ / ⌚

NOTE

Required service material is also described in the following.








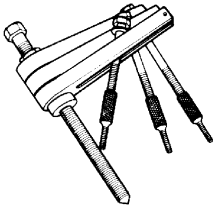
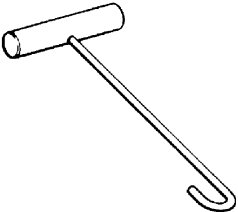
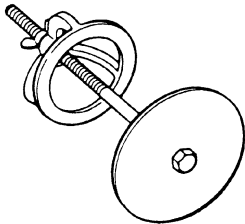
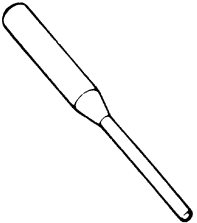
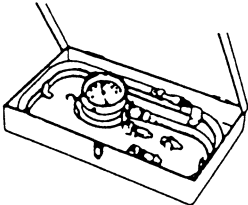
“Automatic Transmission Unit Components”










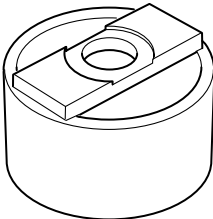

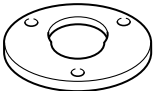

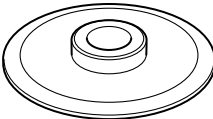


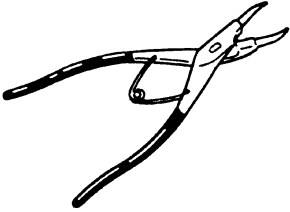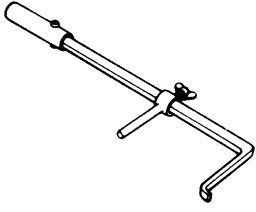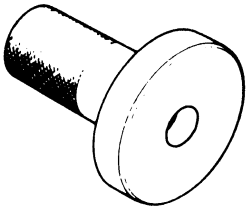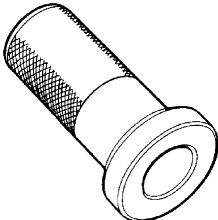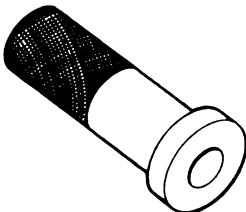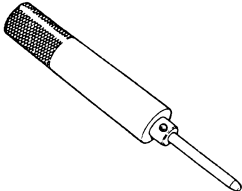



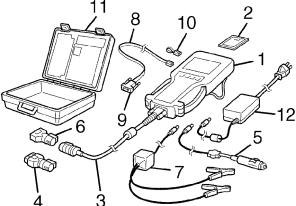
“Oil Pump Assembly Components”

“Clutch Drum & Input Shaft Assembly Components”

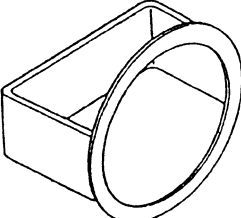Special Tool

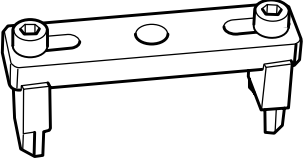S6JB0B5108002

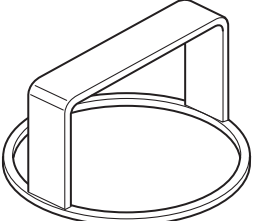09900-06108 Snap ring pliers (closing type) ⌚ / ⌚ / ⌚ / ⌚		09913-50121 Oil seal remover ⌚	
09913-75520 Bearing installer ⌚		09913-75810 Bearing installer ⌚	
09913-85210 Bearing installer ⌚ / ⌚		09916-57330 Valve guide installer handle ⌚	
09917-98221 Valve guide stem attachment ⌚		09920-13120 Crankcase separator ⌚ / ⌚ / ⌚	
09920-20310 Clutch spring hook ⌚ / ⌚		09922-86010 Clutch piston compressor ⌚ / ⌚	
09922-89810 Shifter lock pin remover (3.5 mm) ⌚		09925-37811-001 Oil pressure gauge ⌚	

<p>09926-96040 Clutch spring compressor No.8</p> <p> /  /  / </p> 	<p>09926-96520 Spring compressor</p> <p> / </p> 
<p>09927-66510 Spring compressor</p> <p></p> 	<p>09927-66520 Oil pump remover</p> <p></p> 
<p>09927-66530 Spring compressor</p> <p></p> 	<p>09927-66540 Spring compressor</p> <p> / </p> 
<p>SUZUKI scan tool</p> <p>—</p> <p>This kit includes following items. 1. Tech 2, 2. PCMCIA card, 3. DLC cable, 4. SAE 16/19 adapter, 5. Cigarette cable, 6. DLC loop back adapter, 7. Battery power cable, 8. RS232 cable, 9. RS232 adapter, 10. RS232 loop back connector, 11. Storage case, 12.  /  / </p> 	

Manual Transmission/Transaxle


General Description

Manual Transmission Construction

S6JB0B5201001

The manual transmission consists of the input shaft, output shaft, countershaft and reverse idle gear shaft which are installed in the die-cast aluminum alloy case. This transmission provides five forward speeds and one reverse speed. The 1st, 2nd, 3rd and 4th speeds are for speed reduction drive, 5th speed is for direct drive. The low speed (1st and 2nd) synchronizer is mounted on the countershaft and engaged with the countershaft 1st or 2nd gear. The high speed (3rd and 4th) synchronizer is mounted on of the input shaft and engaged with the input shaft 3rd and 4th gear. The 5th speed synchronizer is mounted on the input shaft and engaged with the output shaft. The gear shift lever case is located at the upper behind the transmission case and has a cam which prevents direct gear shifting from the 5th speed gear into the reverse gear.

As the die-cast aluminum alloy case are sealed with liquid type gasket, it is necessary to use genuine sealant or its equivalent on its mating surface when reassembling them. Also, the case fastening bolts must be tightened to specified torque by means of the torque wrench and tightening over or below the specified torque should be avoided. The description under "Repair Instructions" covers the transfer partially which is next to the transmission as well, but their gear boxes are independent and each of them has its own drain and filler plugs for the oil change or the level check.

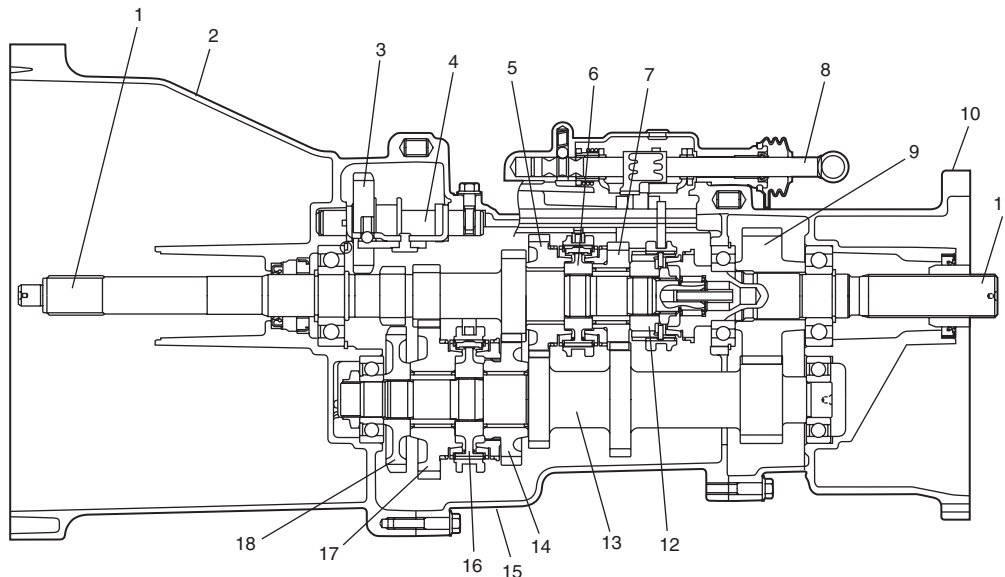

I5JB0A520017-02

1. Input shaft	7. 3rd gear	13. Countershaft
2. Transmission front case	8. Gear shift shaft	14. 2nd gear
3. Reverse idler gear	9. Output shaft gear	15. Transmission rear case
4. Reverse shaft	10. Adapter case	16. Low speed synchronizer hub
5. 4th gear	11. Output shaft	17. 1st gear
6. High speed synchronizer hub	12. 5th speed synchronizer hub	18. Reverse gear

Diagnostic Information and Procedures

Manual Transmission Symptom Diagnosis


S6JB0B5204001

Condition	Possible cause	Correction / Reference Item
<i>Gear slipping out of mesh</i>	Worn shift fork shaft	<i>Replace.</i>
	Worn shift fork or synchronizer sleeve	<i>Replace.</i>
	Weak or damaged locating spring	<i>Replace.</i>
	Worn bearings on input shaft, countershaft or output shaft	<i>Replace.</i>
	Worn chamfered tooth on sleeve or gear	<i>Replace sleeve and gear.</i>
	Missing or disengagement of snap ring(s)	<i>Install or replace.</i>
<i>Gears refusing to disengage</i>	Weakened or broken synchronizer spring	<i>Replace.</i>
	Distorted shift shaft or shift fork	<i>Replace.</i>
<i>Hard shifting</i>	Improper clutch pedal free travel	<i>Replace pedal arm and/or clutch master cylinder.</i>
	Distorted or broken clutch disc	<i>Replace.</i>
	Damaged clutch pressure plate	<i>Replace clutch cover.</i>
	Air in clutch hydraulic system	<i>Bleed air.</i>
	Fluid leakage from clutch fluid line	<i>Locate leaking point and repair.</i>
	Worn synchronizer ring	<i>Replace.</i>
	Worn chamfered tooth on sleeve or gear	<i>Replace sleeve and gear.</i>
	Distorted shift shaft	<i>Replace.</i>
<i>Noise</i>	Inadequate or insufficient lubricant	<i>Replenish.</i>
	Damaged or worn bearing(s)	<i>Replace.</i>
	Damaged or worn gear(s)	<i>Replace.</i>
	Damaged or worn synchronizer ring	<i>Replace.</i>
	Damaged or worn chamfered tooth on sleeve or gear	<i>Replace.</i>

Repair Instructions





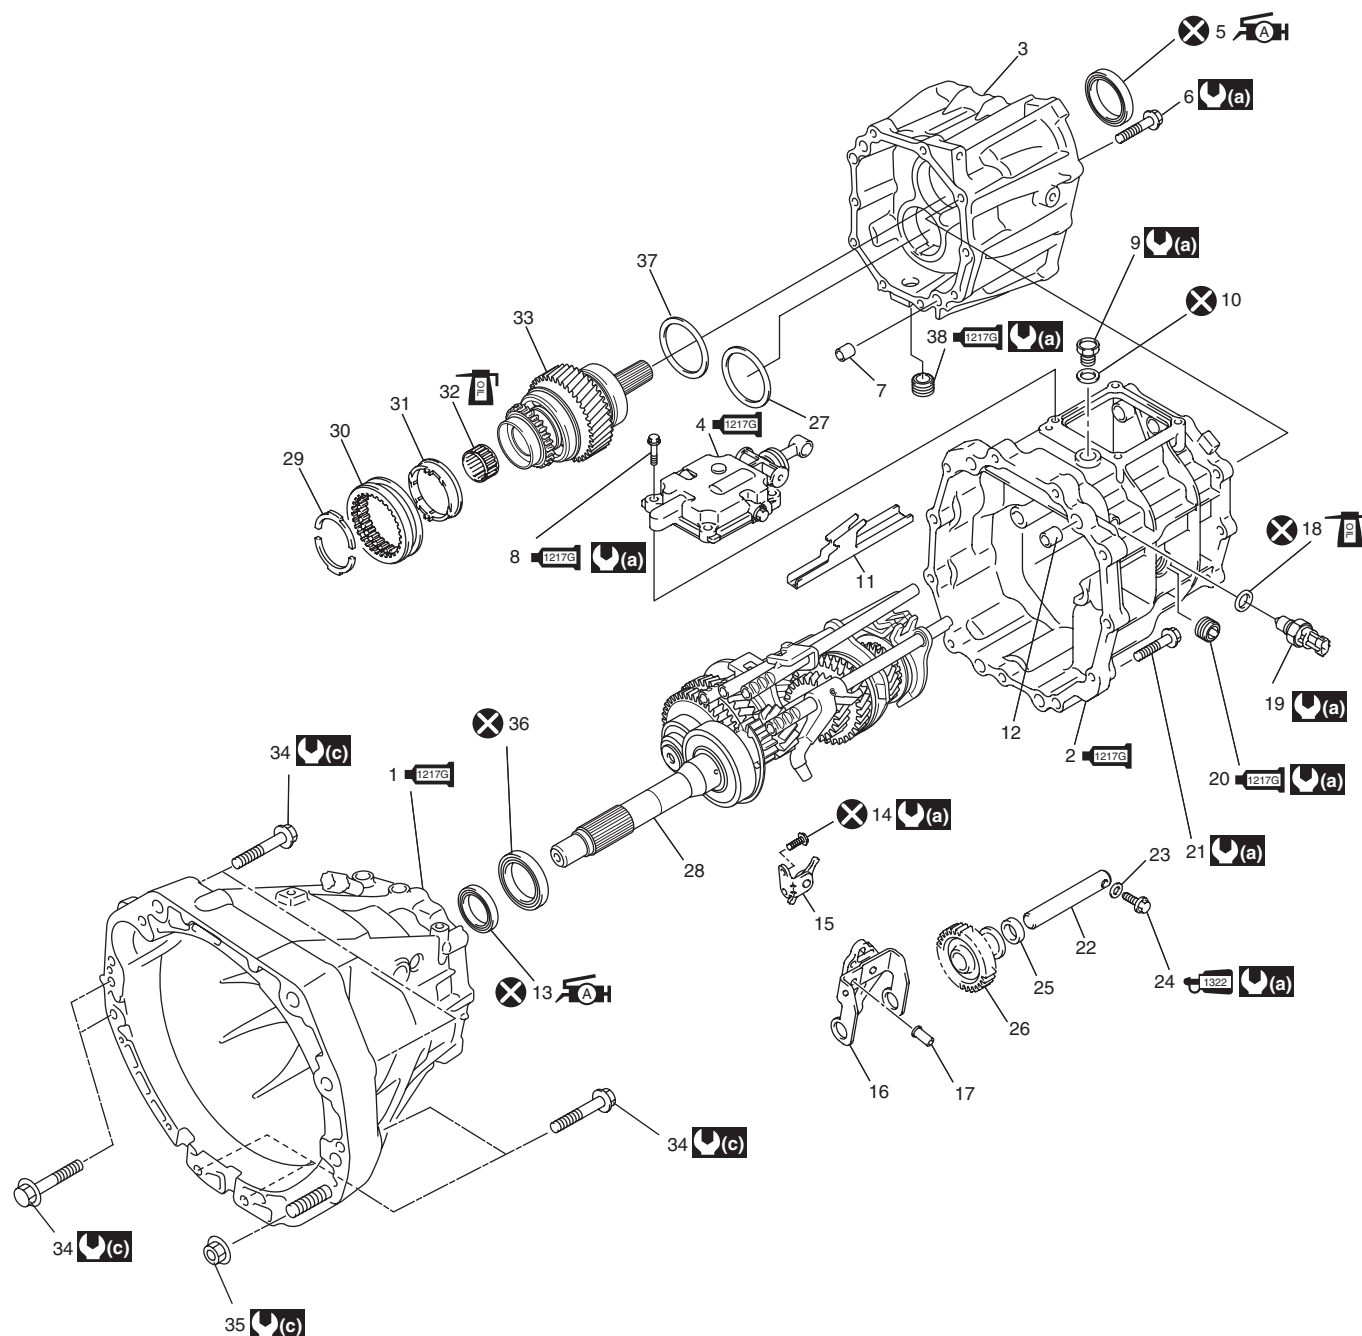



Manual Transmission Assembly Components

S6JB0B5206001




I5JB0A520018-04

1217G 1. Transmission front case : Apply sealant 99000-31260 to mating surface of front case and rear case.	15. Low gear shift inverse lever	29. 5th speed synchronizer lever
1217G 2. Transmission rear case : Apply sealant 99000-31260 to mating surface of rear case and adapter case.	16. Reverse gear shift lever	30. 5th speed synchronizer sleeve
3. Adapter case	17. Reverse shift locating	31. 5th speed synchronizer ring
1217G 4. Gear shift lever front case assembly : Apply sealant 99000-31260 to mating surface of rear case and gear shift lever front case assembly.	18. O-ring	32. Input shaft needle bearing
AH 5. Adapter case oil seal : Apply grease 99000-25010 to oil seal lip.	19. Back up light switch	33. Output shaft assembly
6. Adapter case bolt	1217G 20. Oil filler plug : Apply sealant 99000-31260 to all around thread part of bolt.	34. Transmission to engine bolt







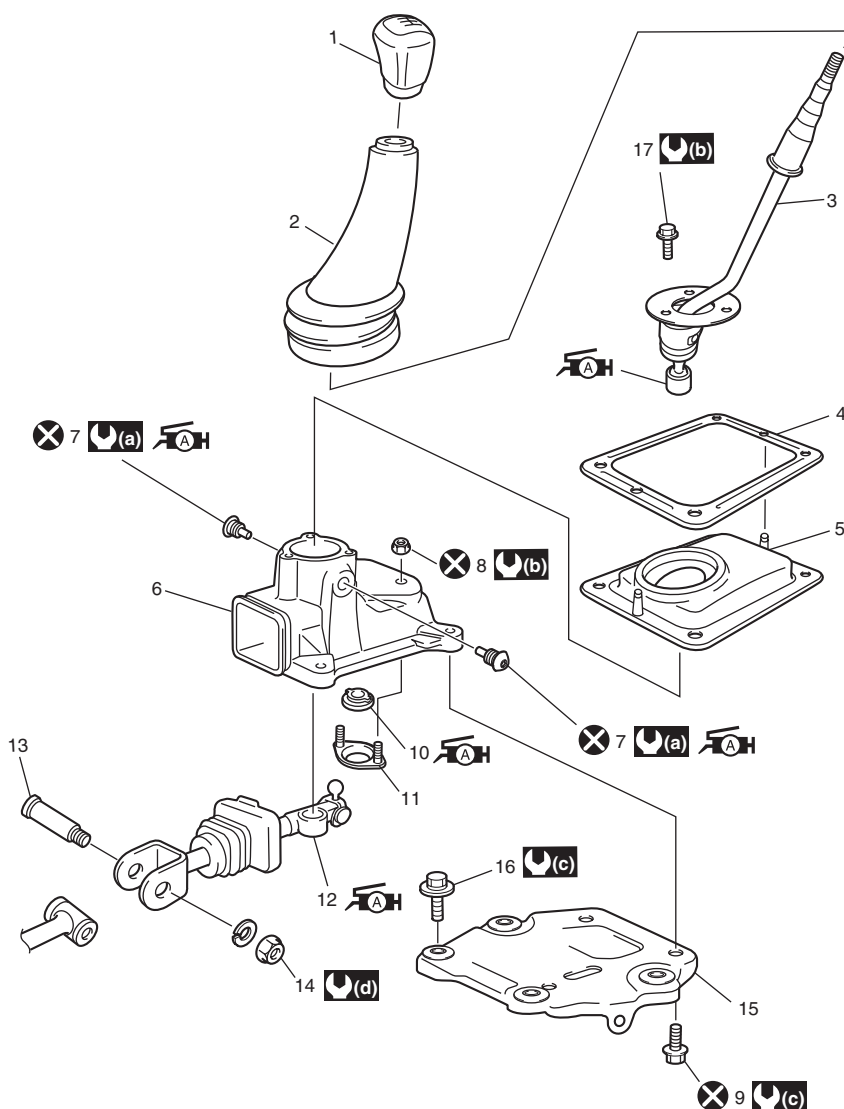


7. Knock pin	21. Transmission case bolt	35. Transmission to engine nut
 1322 8. Gear shift lever case bolt : Apply thread lock 99000-32110 to all around thread part of bolt.	22. Reverse gear shaft	36. Pump seal
9. Oil hole plug	23. Reverse shaft bolt washer	37. Output shaft shim
10. Oil hole gasket	 1322 24. Reverse shaft bolt : Apply thread lock 99000-32110 to all around thread part of bolt.	 1217G 38. Drain plug : Apply sealant 99000-31260 to all around thread part of bolt.
11. Oil gutter	25. Reverse gear shaft washer	 (a) : 23 N·m (2.3 kgf-m, 17.0 lb-ft)
12. Knock pin	26. Reverse idler gear	 (c) : 85 N·m (8.5 kgf-m, 61.5 lb-ft)
 13. Input shaft oil seal : Apply grease 99000-25010 to oil seal lip.	27. Countershaft shim	 : Do not reuse.
14. Low gear shift inverse lever bolt	28. Input shaft & countershaft assembly	 : Apply transmission oil.

Gear Shift Control Lever Rear Case Assembly Components

S6JB0B5206002



I5JB0A520019-08


1. Gear shift control lever knob	9. Gear shift lever rear case bolt	17. Gear shift lever case cover bolt
2. Gear shift control lever boot	 10. Gear shift control joint bush : Apply grease 99000-25010 to bush.	 (a) : 9 N·m (0.9 kgf-m, 6.5 lb-ft)
 3. Gear shift control lever assembly : Apply grease 99000-25010 to bush of lever.	11. Gear shift stopper plate	 (b) : 10 N·m (1.0 kgf-m, 7.5 lb-ft)
4. Gear shift control boot cover	 12. Gear shift control shaft : Apply grease 99000-25010 to sliding part of joint.	 (c) : 23 N·m (2.3 kgf-m, 17.0 lb-ft)
5. Gear shift control lever No.2 sheet	13. Control shaft joint bolt	 (d) : 18 N·m (1.8 kgf-m, 13.0 lb-ft)
6. Gear shift lever rear case	14. Control shaft joint nut	 : Do not reuse.
 7. Control lever locating bolt : Apply grease 99000-25010 to end of bolt.	15. Gear shift lever case plate	

5B-5 Manual Transmission/Transaxle:

8. Gear shift stopper plate nut	16. Gear shift lever rear case plate bolt	
---------------------------------	---	--

Gear Shift Lever Front Case Assembly Components

S6JB0B5206003

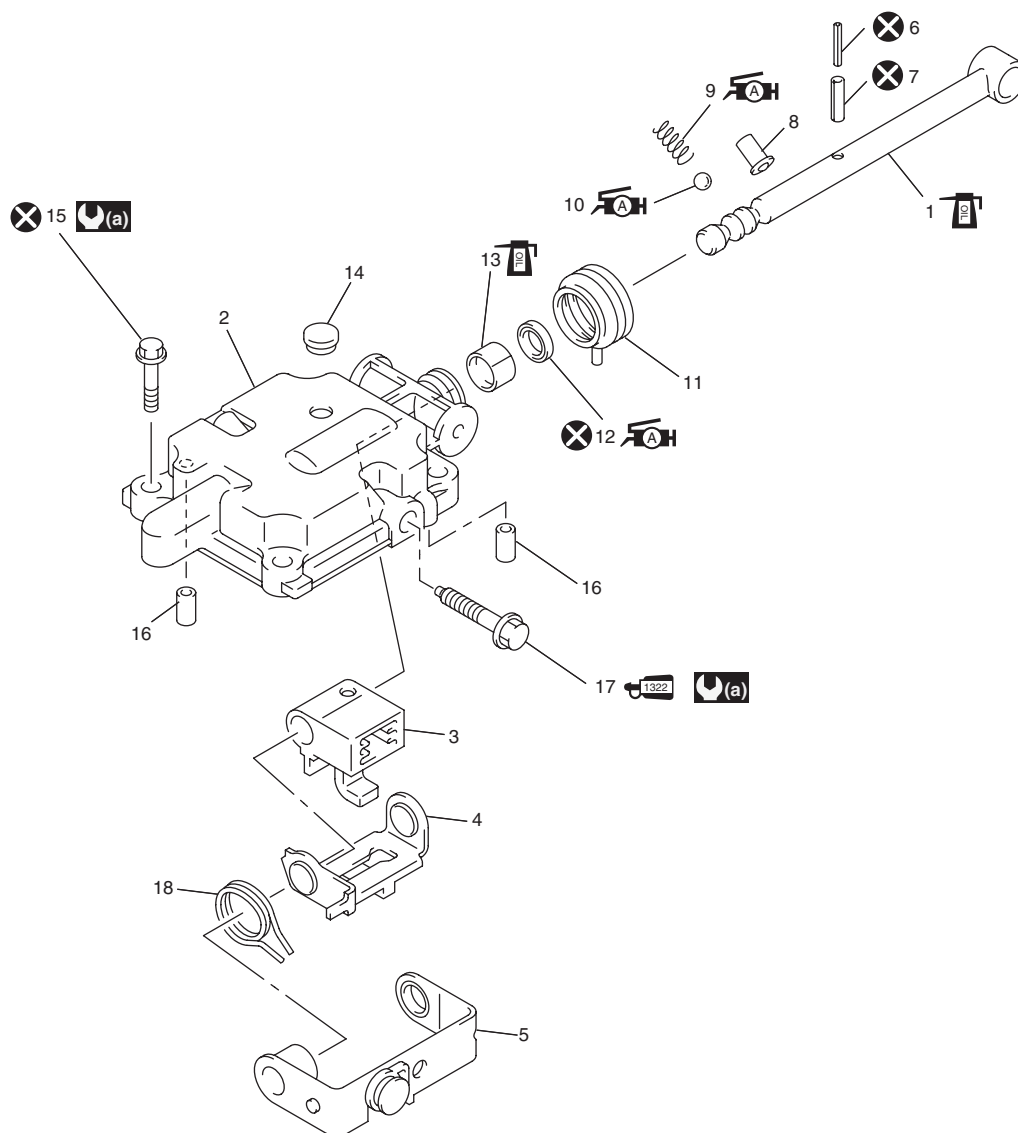


I5JB0A520001-02






1. Gear shift shaft	8. Gear shift locating retainer	15. Gear shift lever front case bolt
2. Gear shift lever front case	9. Gear shift locating spring : Apply grease 99000-25010 to spring.	16. Knock pin
3. Gear shift & select arm	10. Gear shift locating ball : Apply grease 99000-25010 to ball.	17. Gear shift stop bolt : Apply thread lock 99000-32110 to bolt thread.
4. Gear shift interlock plate	11. Gear shift shaft boot	18. Gear select return spring
5. Reverse gear shift limit plate	12. Gear shift shaft oil seal : Apply grease 99000-25010 to seal lip.	: 23 N·m (2.3 kgf-m, 17.0 lb-ft)
6. Gear shift arm inner pin	13. Gear shift case bush	: Do not reuse.
7. Gear shift arm outer pin	14. Gear shift case plug	: Apply transmission oil.

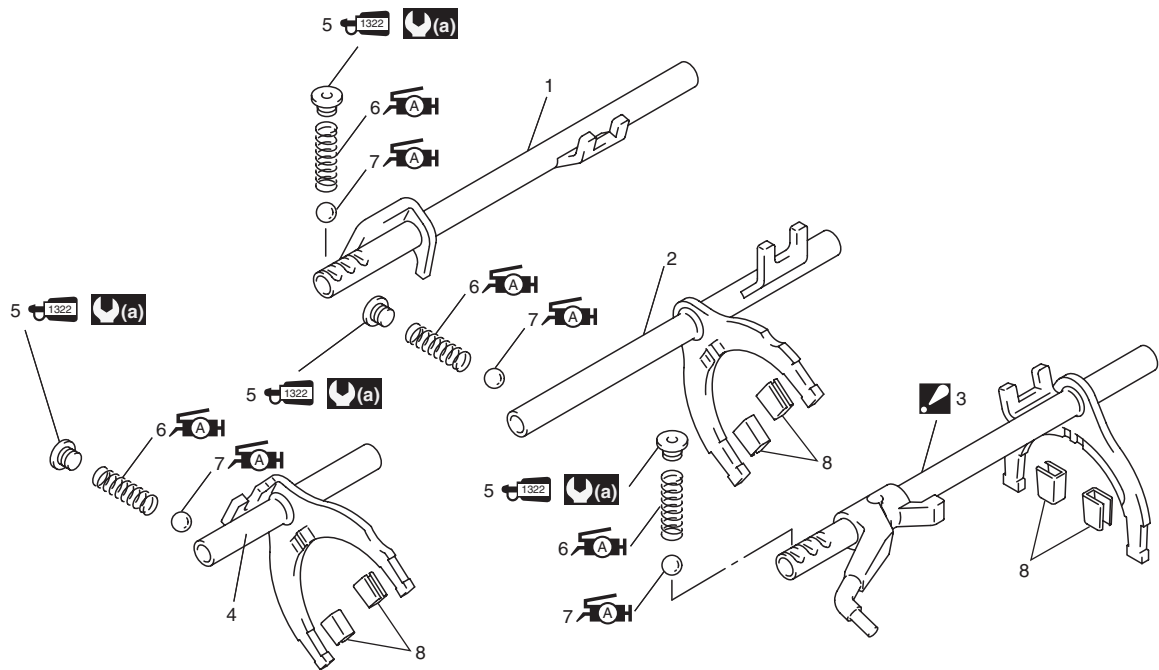Gear Shift Shaft and Fork Components

S6JB0B5206004




I5JB0A520002-02

1. Low speed gear shift shaft	4. Low speed gear shift fork	 7. Gear shift shaft ball : Apply grease 99000-25010 to ball.
2. High speed gear shift fork	 5. Gear shift locating bolt : Apply thread lock 99000-32110 to bolt thread.	8. Gear shift fork bush
 3. 5th & reverse gear shift fork : Never disassemble.	 6. Gear shift locating spring : Apply grease 99000-25010 to spring.	 : 23 N·m (2.3 kgf-m, 17.0 lb-ft)




Input Shaft Assembly, Output Shaft Assembly and Countershaft Assembly Components

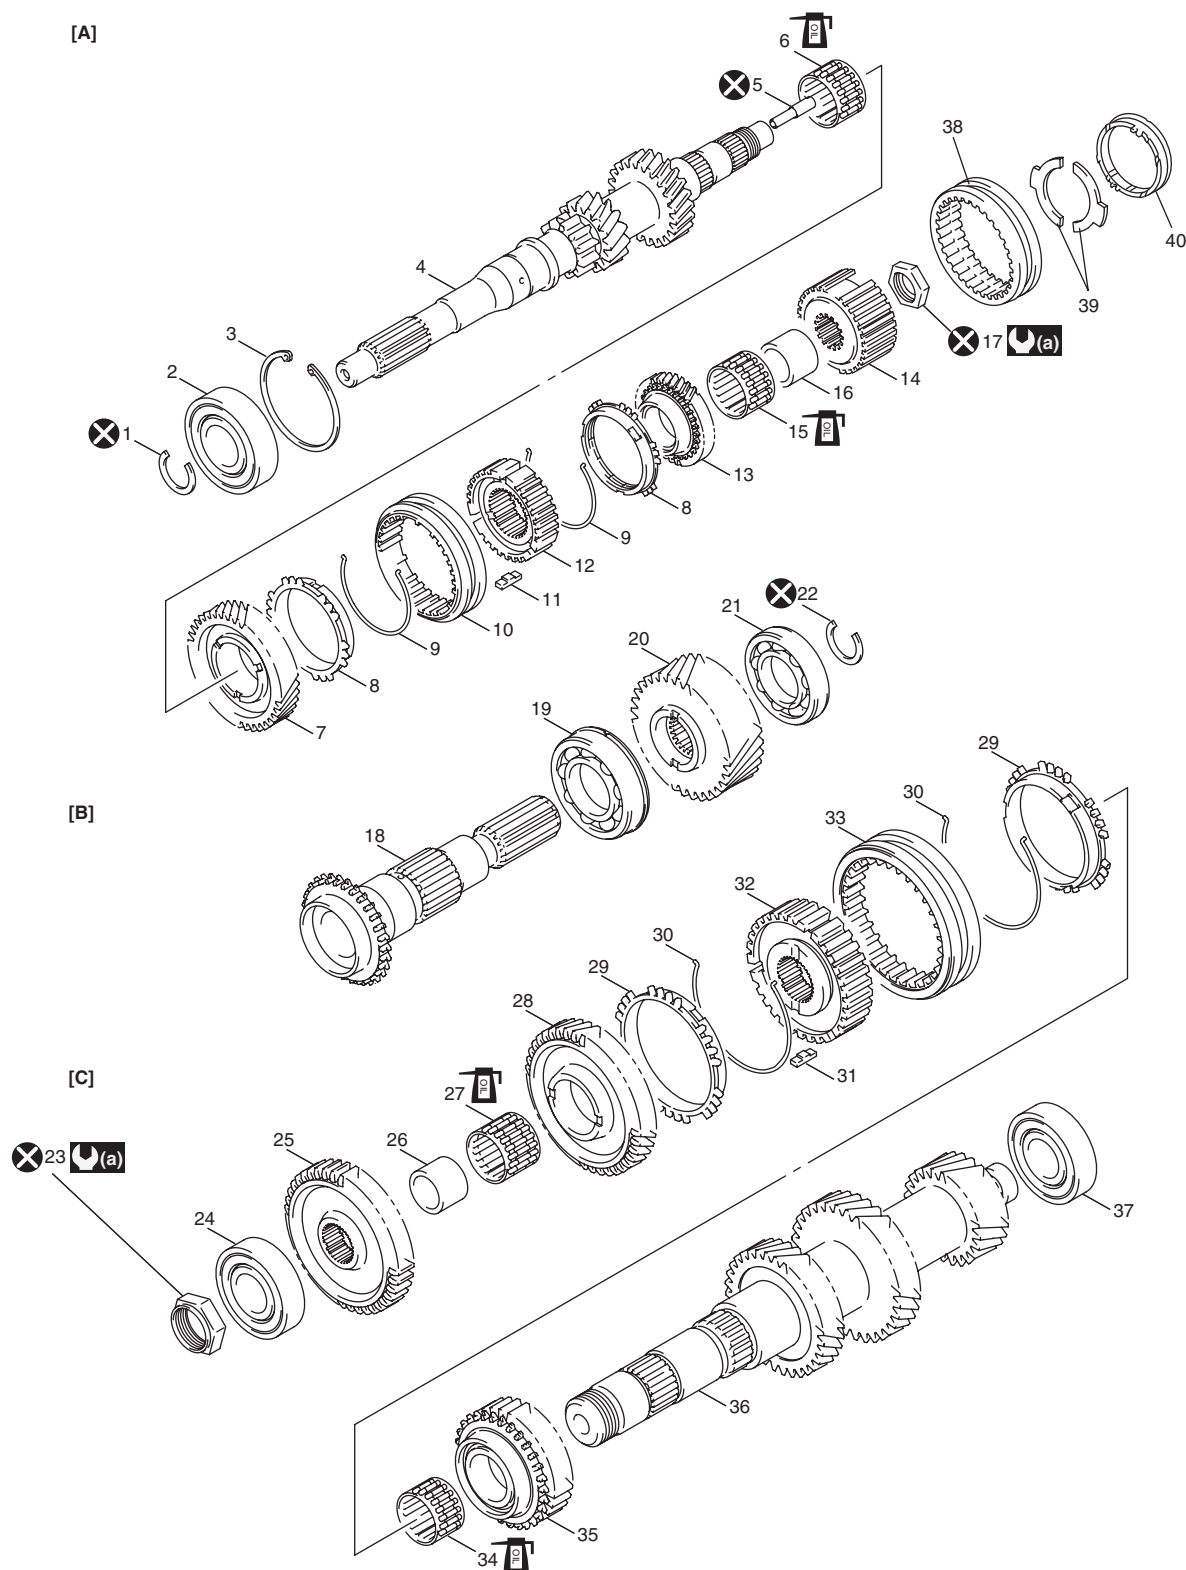S6JB0B5206005



15JB0A520003-01

[A]: Input shaft assembly	14. 5th speed synchronizer hub	30. Low speed synchronizer spring
[B]: Output shaft assembly	15. High speed gear needle bearing	31. Low speed synchronizer key
[C]: Countershaft assembly	16. Input shaft 3rd gear bush	32. Low speed synchronizer hub
1. Snap ring	17. Input shaft 5th hub nut	33. Low speed synchronizer sleeve
2. Input shaft front bearing	18. Output shaft	34. Countershaft gear needle bearing
3. Input shaft front bearing circlip	19. Output shaft front bearing	35. 2nd gear
4. Input shaft	20. Output shaft gear	36. Countershaft
5. Input shaft union	21. Output shaft rear bearing	37. Countershaft rear bearing

6. High speed gear needle bearing	22. Output shaft rear snap ring	38. 5th speed synchronizer sleeve
7. 4th gear	23. Countershaft front bearing nut	39. 5th speed synchronizer lever
8. High speed synchronizer ring	24. Countershaft front bearing	40. 5th speed synchronizer ring
9. High speed synchronizer spring	25. Countershaft reverse gear	 (a) : 210 N·m (21.0 kgf-m, 152.0 lb-ft)
10. High speed synchronizer sleeve	26. Countershaft low needle bush	 : Do not reuse.
11. High speed synchronizer key	27. Countershaft gear needle bearing	 : Apply transmission oil.
12. High speed synchronizer hub	28. 1st gear	
13. 3rd gear	29. Low speed synchronizer ring	

Manual Transmission Oil Change

S6JB0B5206006

- Before changing or inspecting oil, be sure to stop engine and lift vehicle horizontally.
- With vehicle lifted up, check oil level and leakage. If leakage exists, correct or repair it.

NOTE

Whenever vehicle is hoisted for any other service work than oil change, also be sure to check for oil leakage.

- Remove oil filler plug (2).
- Remove drain plug (1), and drain old oil.
- Apply sealant to thread of drain plug (1), and tighten it to specified torque.

“A”: Sealant 99000–31260 (SUZUKI Bond No.1217G)

Tightening torque

Transmission oil drain plug (a): 23 N·m (2.3 kgf-m, 17.0 lb-ft)

NOTE

If water or rust is mixed in drained oil, be sure to check breather hose and boot of transmission.

- Pour new specified oil until oil level reaches bottom of oil filler plug hole (3) as shown in figure.

NOTE

It is highly recommended to use API 75 W-90 gear oil.

Gear oil specifications

: API GL-4 (For SAE classification, refer to viscosity chart [A] in figure.)

Manual transmission gear oil capacity


Reference: 1.9 liters (4.0 / 3.3 US / Imp. pt)

- Apply sealant to thread of filler plug, and then tighten it to specified torque.


“A”: Sealant 99000–31260 (SUZUKI Bond No.1217G)

Tightening torque


Oil filler plug (b): 23 N·m (2.3 kgf-m, 17.0 lb-ft)

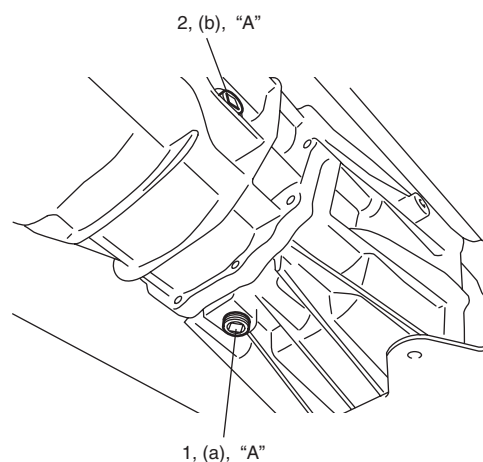

I5JB0A520020-01

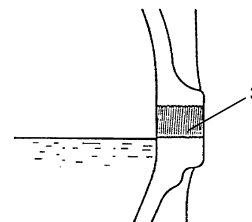

I5JB0A520022-02

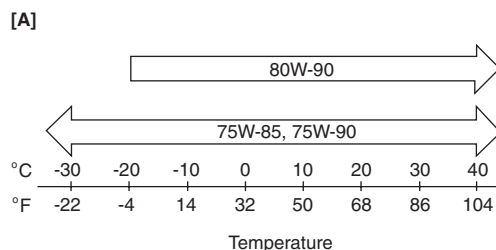


I5JB0A520021-02

Transmission Shift Control Lever Removal and Installation

S6JB0B5206007

Removal

- 1) Remove front console box referring to "Console Box Components in Section 9H".
- 2) Lift up boot cover (1), boot (2) and sheet (3).
- 3) Remove case cover (4) and take out shift control lever (5) from gear shift lever rear case (6).

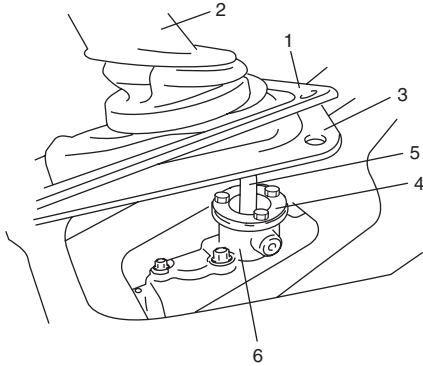

I5JB0A520023-02

Installation


- 1) Tighten new control lever locating bolts (1) to specified torque, if removed.

Tightening torque

Control lever locating bolt (a): 9 N·m (0.9 kgf-m, 6.5 lb-ft)

- 2) Apply grease to pivot portions and seat, then install shift control lever.

"A": Grease 99000-25010 (SUZUKI Super Grease A)

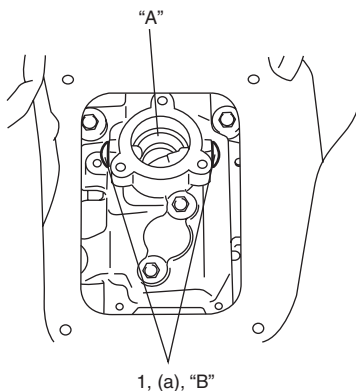


I5JB0A520024-03

- 3) Set shift control lever (2) to gear shift lever rear case.
- 4) Install case cover (1) to gear shift lever rear case (3). Tighten case cover bolt to specified torque.

Tightening torque

Case cover bolt (a): 10 N·m (1.0 kgf-m, 7.5 lb-ft)

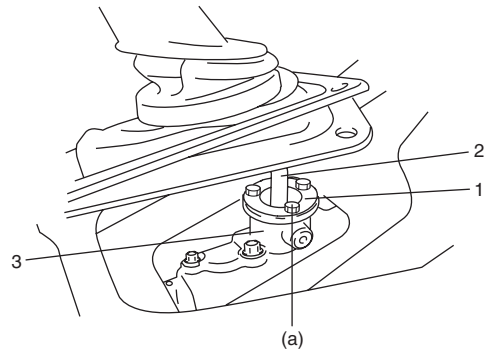


I5JB0A520025-02

- 5) Install sheet, boot (1) with boot cover (2) to floor panel.

Tightening torque

Control lever boot cover bolt (a): 12 N·m (1.2 kgf-m, 9.0 lb-ft)

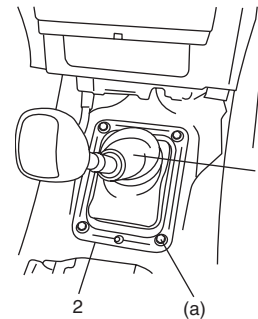

I5JB0A520027-02

- 6) Install front console box referring to "Console Box Components in Section 9H".

Transmission Shift Control Lever Inspection

S6JB0B5206008

- Check transmission shift control lever lower portion and control lever locating sheet for excessive wear.
 - Check boot for damage.
- Correct or replace if necessary.

Back Up Light Switch Removal and Installation

S6JB0B5206009


Removal**⚠ WARNING**

Refrain from work while exhaust No.2 pipe is hot.

NOTE

- When replacing switch, use care not to let dust enter transmission through switch hole.

- 1) Hoist vehicle and disconnect connector from back up light switch.
- 2) Remove back up light switch (1) from transmission rear case.

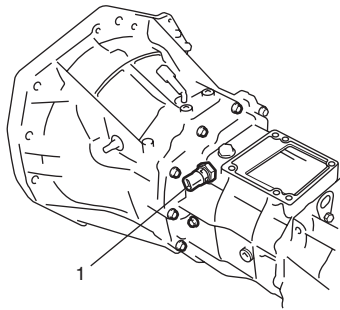

I5JB0A520005-01


Installation

Reverse removal procedure for installation noting the following.

- Apply oil to new O-ring (1) and then install back up light switch to transmission rear case.

Tightening torque

Back up light switch (a): 23 N·m (2.3 kgf-m, 17.0 lb-ft)

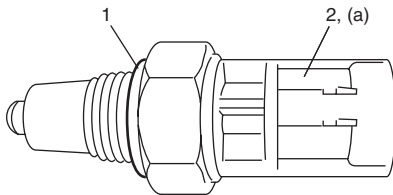

I5JB0A520004-01

- Check back up light for proper function with ignition switch turned ON and reverse position.

Back Up Light Switch Inspection


S6JB0B5206010

Check back up light switch for function using ohmmeter. If resistance is not as specified below, replace back up light switch.

Back up light switch specification

Switch ON (Push): Continuity

Switch OFF (Release): No continuity

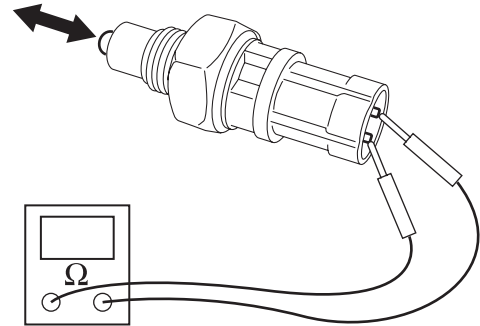


I5JB0A520006-01

Gear Shift Control Lever Rear Case Assembly Removal and Installation

S6JB0B5206011

Removal

- 1) Dismount transmission assembly from vehicle referring to "Manual Transmission Assembly Dismounting and Remounting"
- 2) Remove gear shift control lever rear case assembly (1) with plate (2) from transfer case.

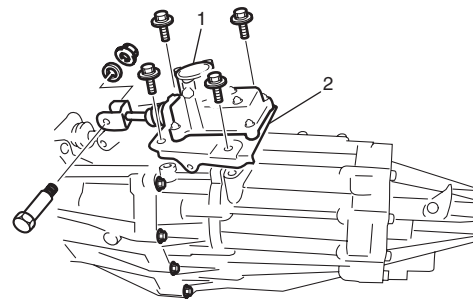

I5JB0A520007-03


Installation

- 1) Install gear shift control lever rear case assembly with its plate to transfer case referring to figure for proper installing direction of control shaft joint bolt (2). Tighten plate bolts (1) and control shaft joint nut (3) to specified torque.

Tightening torque

Plate bolt (a): 23 N·m (2.3 kgf-m, 17.0 lb-ft)

Control shaft joint nut (b): 18 N·m (1.8 kgf-m, 13.0 lb-ft)

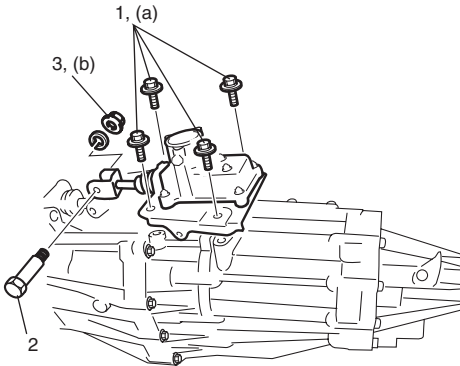

I5JB0A520008-03

- 2) Remount transmission assembly to vehicle referring to "Manual Transmission Assembly Dismounting and Remounting"

Gear Shift Control Lever Rear Case Assembly Disassembly and Reassembly

S6JB0B5206012

Disassembly and reassembly component parts referring to "Gear Shift Control Lever Rear Case Assembly Components".

Gear Shift Control Lever Rear Case Assembly Inspection

S6JB0B5206013


- Check that gear shift control shaft moves smoothly without abnormal noise. If abnormality is found, replace defective part.
- Check bush and boot for damage and deterioration. If abnormality is found, replace defective part.

Gear Shift Lever Front Case Assembly Removal and Installation

S6JB0B5206014

Removal

- 1) Dismount transmission assembly referring to "Manual Transmission Assembly Dismounting and Remounting"
- 2) Remove gear shift lever front case assembly (1) from transmission rear case.

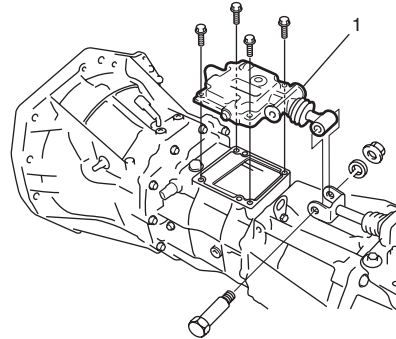


I5JB0A520009-03

Installation

NOTE

- Install gear shift lever front case to transmission rear case without using sealant for functional check.
- Install shift control lever and check to make sure that it shifts smoothly according to shift pattern as shown in the figure.

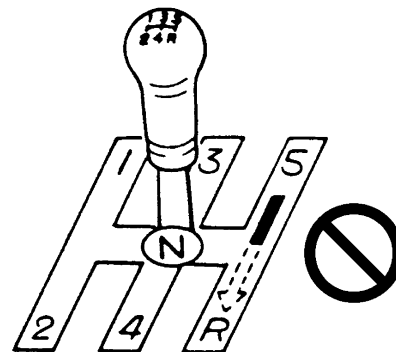

I5JB0A520010-01

- 1) Clean mating surface of both rear case and gear shift lever front case (2), and uniformly apply sealant to lever case as shown in figure by such amount that its section is 1.2 mm (0.047 in.) in diameter, and then mate it with gear shift lever front case.

“A”: Sealant 99000-31260 (SUZUKI Bond No.1217G)

- 2) Install lever case to rear case and then tighten new lever case bolts (1) to specified torque.


Tightening torque

Gear shift lever front case bolt (a): 23 N·m (2.3 kgf-m, 17.0 lb-ft)

- 3) Connect gear shift shaft (3) of lever case assembly to gear shift control shaft (4) of gear shift control lever rear case assembly referring to figure for proper installing direction of control shaft joint bolt (5). Tighten control shaft joint nut (6) to specified torque.

Tightening torque

Control shaft joint nut (b): 18 N·m (1.8 kgf-m, 13.0 lb-ft)

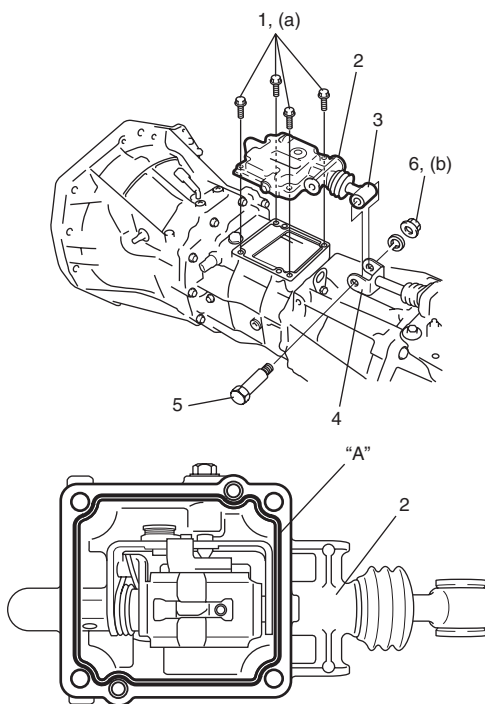

I5JB0A520011-04

- 4) Remount transmission assembly referring to “Manual Transmission Assembly Dismounting and Remounting”

Gear Shift Lever Front Case Assembly Disassembly and Reassembly

S6JB0B5206015

Disassembly


- 1) Remove gear shift case plug.
- 2) Drive out gear shift arm pin using special tool, and then disassemble components parts.

⚠ CAUTION

Be careful to disconnect gear shift shaft from gear shift lever front case so that gear shift locating ball and gear shift locating spring may be jumped out.

Special tool

(A): 09925-78210

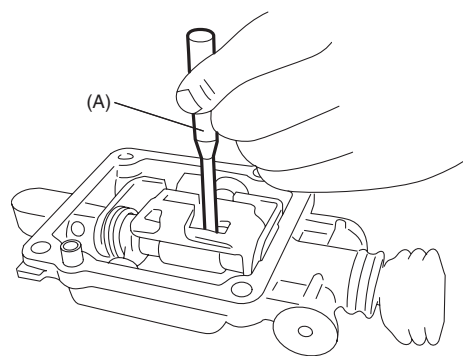


I5JB0A520012-01

Reassembly

- 1) Install new gear shift shaft oil seal (1) to gear shift lever front case using special tool.

Special tool

(A): 09923-46020

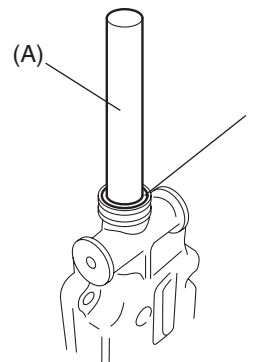


I5JB0A520013-01

- 2) Assemble components parts referring to "Gear Shift Lever Front Case Assembly Components".
- 3) Set new gear shift arm inner pin (1) and outer pin (2) facing each gap ("a", "b") as shown in figure. Drive gear shift arm pins by using special tool, till the length "c" becomes the specified. (The length "c" is the length of the pin protrusion from gear shift shaft (4) and select arm (3)).

Special tool

(A): 09925-78210

**Gear shift arm pin protrusion "c": 0.5–1.5 mm
(0.020–0.059 in.)**

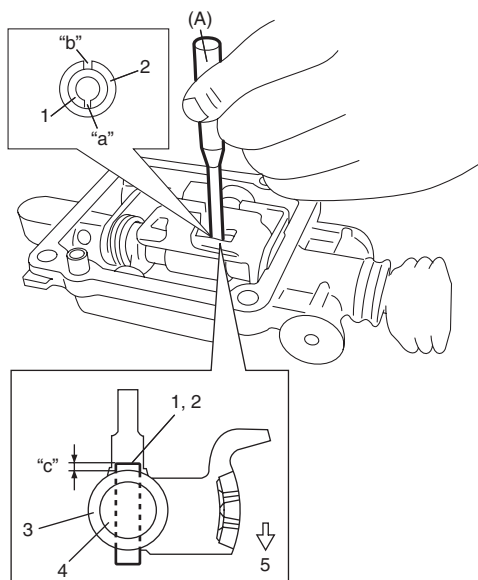

I5JB0A520014-01

5. Case side

Gear Shift Lever Front Case Assembly Inspection

S6JB0B5206016

- Check that gear shift shaft moves smoothly without abnormal noise. If abnormality is found, replace defective part.
- Check bushes and boot for damage and deterioration. If abnormality is found, replace defective part.

Engine Rear Mounting Replacement

S6JB0B5206017


When replacement of mounting parts are necessary, torque bolts as specified below.

Tightening torque

Engine rear mounting No.1 bolt (a): 55 N·m (5.5 kgf-m, 40.0 lb-ft)

Engine rear mounting member bolt (b): 55 N·m (5.5 kgf-m, 40.0 lb-ft)

Engine rear mounting No.2 bolt (c): 55 N·m (5.5 kgf-m, 40.0 lb-ft)

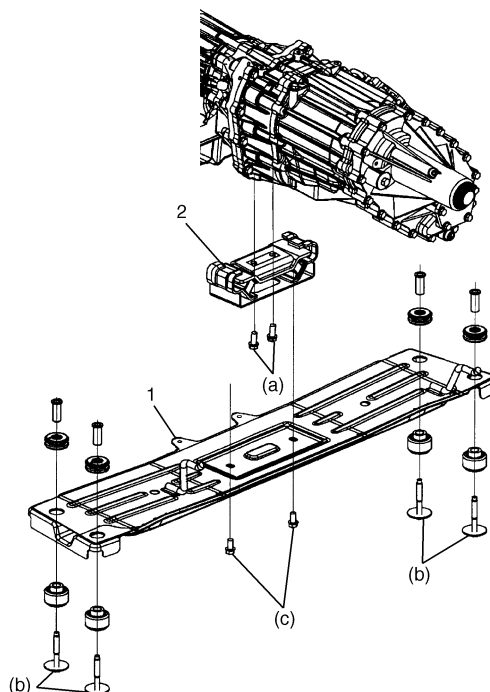

I5JB0A520015-01


- | |
|--------------------------------|
| 1. Engine rear mounting member |
| 2. Engine rear mounting |

Manual Transmission Assembly Dismounting and Remounting

S6JB0B5206018

Dismounting

- 1) Disconnect negative (–) cable of battery.
- 2) Remove transmission shift control lever referring to “Transmission Shift Control Lever Removal and Installation”.
- 3) Detach engine harness clamps and ground wire harness from transmission front case.
- 4) Remove starting motor fastening bolts (2) and transmission fastening bolts (1).

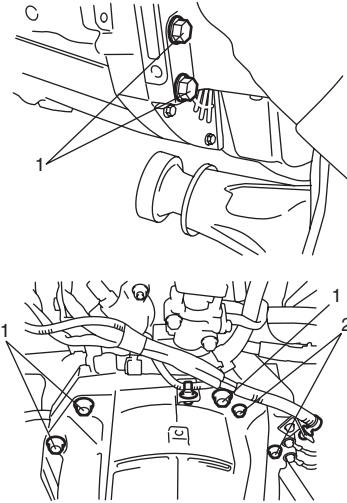

I5JB0A520016-01


- 5) Disconnect clutch fluid joint from pipe of clutch operating cylinder assembly referring to “Clutch Operating Cylinder Assembly Removal and Installation in Section 5C”.
- 6) Hoist vehicle.
- 7) Drain oil from transmission and transfer.
- 8) Remove propeller shafts referring to “Propeller Shaft Removal and Installation in Section 3D”.
- 9) Remove exhaust No. 2 pipe.
- 10) Remove engine under cover.
- 11) Remove clutch housing lower plates (1).

- 12) Remove transmission fastening nut (2) and bolts (3).




I5JB0A520028-01

- 13) Disconnect the following couplers and release their harness from clamps.
 - Back up light switch
 - Transfer shift actuator
 - 4L/N switch
 - Center differential lock switch
- 14) Apply transmission jack (1) and remove engine rear mounting member (2) taking off its bolts.

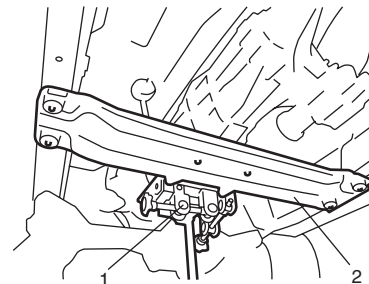

I5JB0A520029-01

- 15) After removing mounting member, move rearward transmission and transfer assemblies placed on jack and then lower them.
- 16) Separate gear shift control lever rear case assembly (2) and transfer assembly (3) from transmission assembly (1).

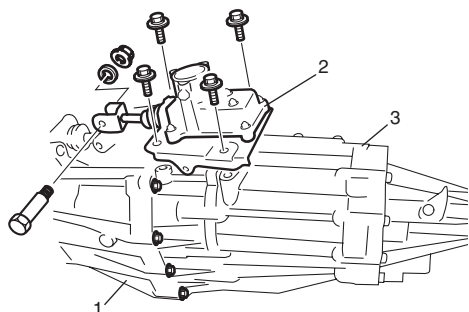


I5JB0A520030-03

Remounting

For remounting, reverse dismounting procedure.


- Apply grease to input shaft.

“A”: Grease 99000–25010 (SUZUKI Super Grease A)

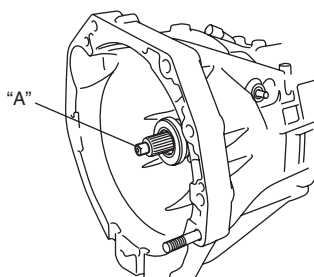

I5JB0A520031-01

- Slant the rear of the engine down, using support device (1) and install transmission to engine.

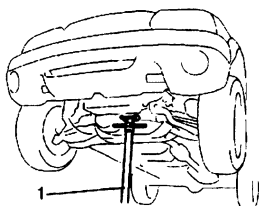

I3JA01520024-01

- Use specified torques as given below.

Tightening torque




Transmission to engine bolt and nut (a): 85 N·m (8.5 kgf-m, 61.5 lb-ft)

Engine rear mounting member bolt (b): 55 N·m (5.5 kgf-m, 40.0 lb-ft)

Clutch housing lower plate bolt (c): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

Engine rear mounting No.2 bolt (d): 55 N·m (5.5 kgf-m, 40.0 lb-ft)

- Set each clamp for wiring and hose securely.
- Install shift control lever referring to “Transmission Shift Control Lever Removal and Installation”.
- Connect clutch fluid joint to pipe of clutch operating cylinder assembly referring to “Clutch Operating Cylinder Assembly Removal and Installation in Section 5C”.
- Install exhaust No.2 pipe referring to “Exhaust System Components in Section 1K”.
- Fill gear oil to transmission referring to “Manual Transmission Oil Change”.
- Fill gear oil to transfer referring to “Transfer Oil Change in Section 3C”.
- Connect battery and check function of engine, clutch, transmission and transfer.
- Install propeller shafts referring to “Propeller Shaft Removal and Installation in Section 3D”.

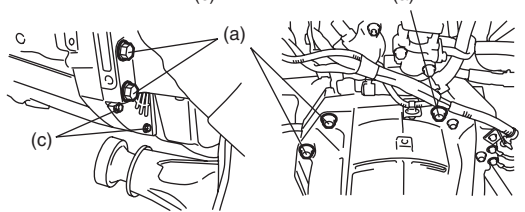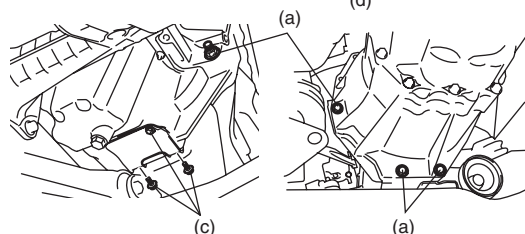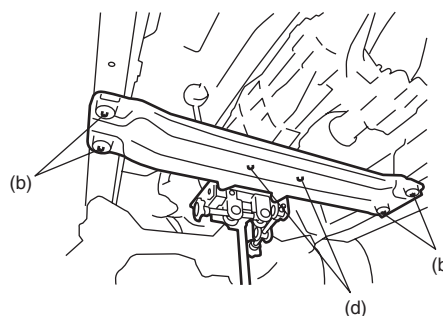


I5JB0A520032-01

Manual Transmission Unit Disassembly


S6JB0B5206019

- 1) Remove clutch operating cylinder assembly from transmission front case referring to "Clutch Operating Cylinder Assembly Removal and Installation in Section 5C"
- 2) Remove gear shift control lever rear case assembly and gear shift lever front case assembly referring to "Gear Shift Control Lever Rear Case Assembly Removal and Installation" and "Gear Shift Lever Front Case Assembly Removal and Installation".
- 3) Separate transfer assembly (1) from transmission assembly.

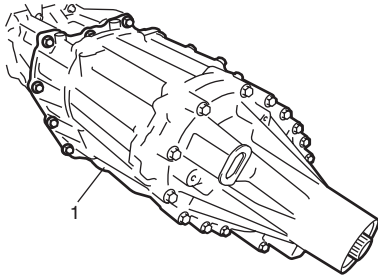


I5JB0A520033-01

- 4) Remove adapter case (1) from rear case (2).
- 5) Remove output shaft assembly (3) from adapter case.

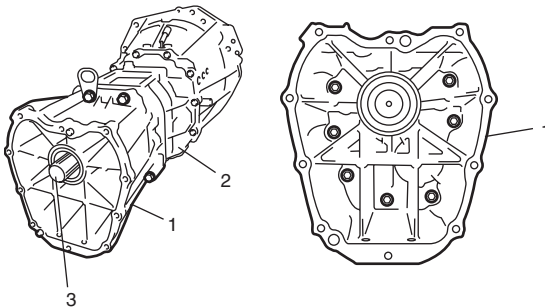


I5JB0A520034-01

- 6) Remove reverse shaft bolt (1) and back up light switch (2).

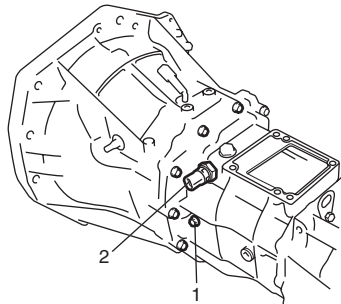


I5JB0A520035-01

- 7) Remove gear shift locating bolts (1), then take out locating springs (2) and gear shift shaft balls (3).
- 8) Remove rear to front case bolts (4), then separate rear case from front case tapping front case flange with plastic hammer.

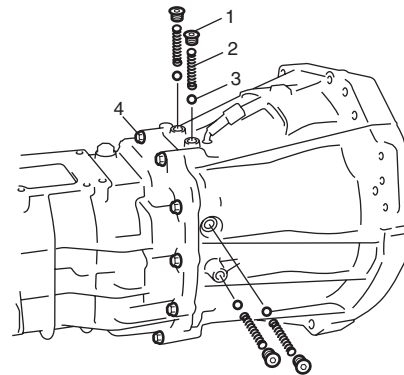


I5JB0A520036-01

- 9) Remove oil gutter.
- 10) Remove reverse shaft assembly (1).
- 11) Remove low gear shift inverse lever (4).
- 12) Remove low speed gear shift shaft (2) and 5th & reverse gear shift fork (3) with 5th speed synchronizer sleeve (5).

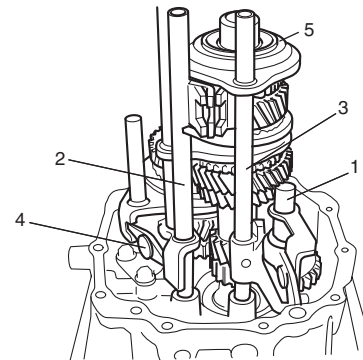


I5JB0A520037-01

- 13) Remove input shaft needle bearing, 5th speed synchronizer ring and 5th speed synchronizer levers.
- 14) Remove input shaft front bearing circlip (1) from case using special tool.

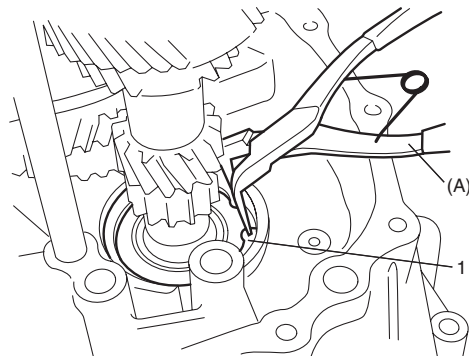Special tool**(A): 09900-06106**

I5JB0A520038-01

- 15) Remove input shaft assembly (1), countershaft assembly (2), high speed gear shift fork (3) and low speed gear shift fork (4) as assembly from front case (5) tapping input shaft end by plastic hammer lightly.

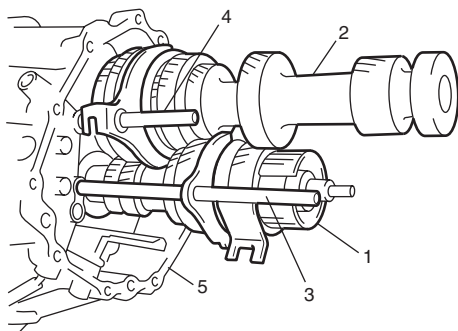

I5JB0A520039-01


Manual Transmission Unit Reassembly

S6JB0B5206020

- 1) Assemble input shaft assembly (1), countershaft assembly (2), high speed gear shift fork (3) and low speed gear shift fork (4), then install them all together into front case (5).

⚠ CAUTION

Take care not to damage oil seal lip by input shaft, or oil leakage may take place.

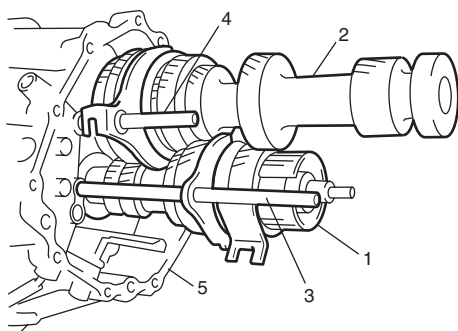


I5JB0A520039-01

- 2) Install input shaft front bearing snap ring (1) using special tool.

Special tool

(A): 09900-06106

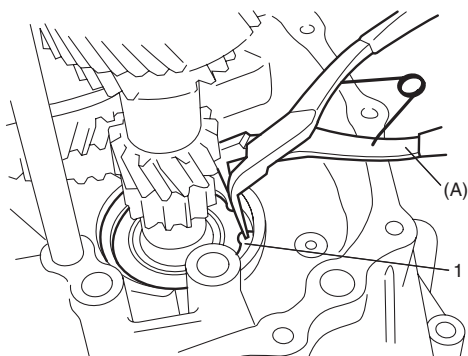


I5JB0A520040-01

- 3) Install low speed gear shift shaft (1) and low gear shift inverse lever (2) and tighten with new bolt (3).


Tightening torque

Low gear shift inverse lever bolt (a): 23 N·m (2.3 kgf-m, 17.0 lb-ft)

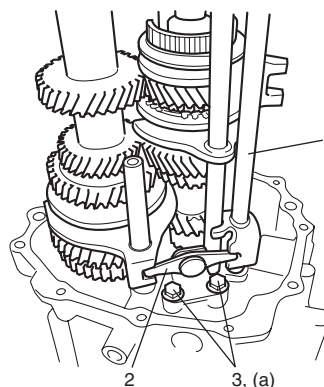


I5JB0A520041-02

- 4) Fit 5th & reverse gear shift fork (1) to 5th speed synchronizer sleeve (2), and install them into input shaft and front case in specified direction as shown in figure.

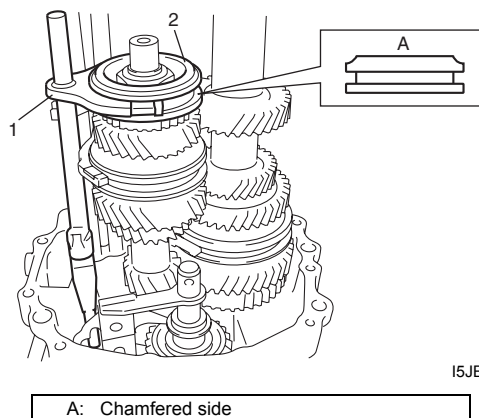


I5JB0A520042-01

- 5) Set reverse idler gear (1), reverse gear shift lever (2) and reverse gear shaft washer (4), insert reverse gear shaft (3) into case through idler gear and then align hole "B" in shaft with protrusion "A" in case.

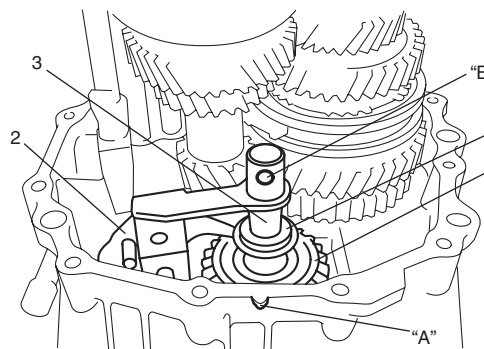


I5JB0A520043-01

- 6) Install oil gutter.
- 7) Install 5th speed synchronizer levers and 5th speed synchronizer ring as follows.
 - a) Fit 5th speed synchronizer levers (1) to hub (2) aligning protrusion "A" of 5th speed synchronizer levers with groove of hub.

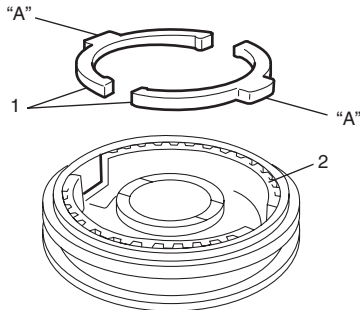

I5JB0A520044-01


- b) Install synchronizer ring (1) to hub (2) in specified direction as shown in figure.

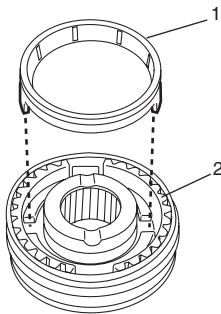

I5JB0A520045-01

- 8) Install input shaft needle bearing to end of input shaft.
- 9) Clean mating surfaces of both front and rear cases, and uniformly apply sealant to front case (1) as shown in figure by such amount that its section is 1.2 mm (0.047 in.) in diameter, and then mate it with rear case.

"A": Sealant 99000-31260 (SUZUKI Bond No.1217G)

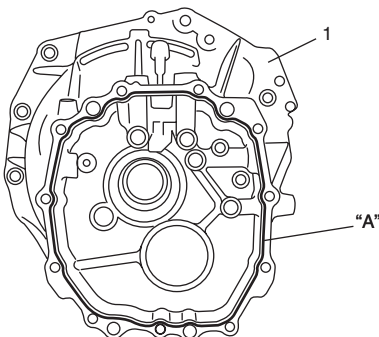

I5JB0A520046-01

- 10) Install rear case to front case. Tighten case bolts (1) to specified torque.

Tightening torque

Transmission case bolt (a): 23 N·m (2.3 kgf-m, 17.0 lb-ft)


- 11) Apply thread lock cement to reverse shaft bolt (2), and tighten it.

"B": Thread lock cement 99000-32110 (Thread Lock Cement Super 1322)

Tightening torque

Reverse shaft bolt (b): 23 N·m (2.3 kgf-m, 17.0 lb-ft)

- 12) Install back up light switch (3) referring to "Back Up Light Switch Removal and Installation".

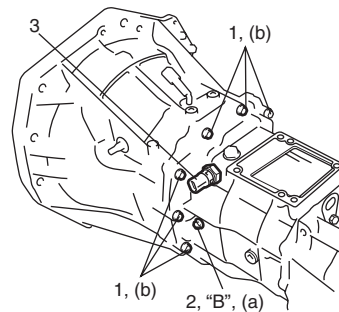

I5JB0A520047-01


- 13) Apply grease to gear shift shaft balls (1) and locating springs (2), then install them. Apply thread lock cement to gear shift locating bolts (3), and then tighten them.

"A": Grease 99000-25010 (SUZUKI Super Grease A)

"B": Thread lock cement 99000-32110 (Thread Lock Cement Super 1322)

Tightening torque

Gear shift locating bolt (a): 23 N·m (2.3 kgf-m, 17.0 lb-ft)

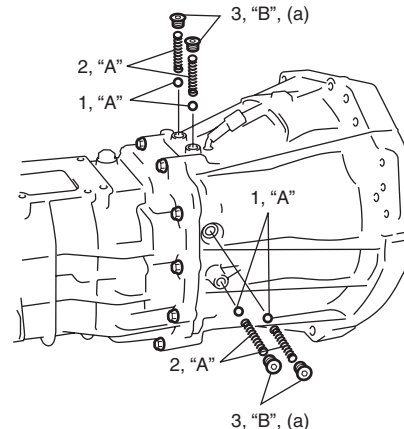

I5JB0A520048-01


- 14) Install output shaft assembly into rear case.
- 15) Select a countershaft shim and output shaft shim as follows.
- Measure depth "a" from mating surface of adapter case (1) to face processed for installation of countershaft rear bearing (2) and measure depth "c" from mating surface of adapter case to face processed for installation of output shaft rear bearing (5) using vernier caliper.
 - Measure height "b" from mating surface of rear case (3) to countershaft rear bearing (2) and "d" from mating surface of rear case (3) to output shaft bearing (6) using vernier caliper.
 - Calculate "a" – "b" and "c" – "d", and select a shim according to the following table.

Countershaft shim selection table

Clearance "a" – "b"	Thickness of countershaft shim
1.15 – 1.24 mm (0.046 – 0.048 in.)	0.90 mm (0.035 in.)
1.25 – 1.34 mm (0.050 – 0.052 in.)	1.00 mm (0.039 in.)
1.35 – 1.44 mm (0.054 – 0.056 in.)	1.10 mm (0.043 in.)
1.45 – 1.54 mm (0.057 – 0.060 in.)	1.20 mm (0.047 in.)
1.55 – 1.64 mm (0.061 – 0.064 in.)	1.30 mm (0.051 in.)
1.65 – 1.74 mm (0.065 – 0.068 in.)	1.40 mm (0.055 in.)
1.75 – 1.84 mm (0.069 – 0.072 in.)	1.50 mm (0.059 in.)
1.85 – 1.94 mm (0.073 – 0.076 in.)	1.60 mm (0.063 in.)
1.95 – 2.04 mm (0.077 – 0.080 in.)	1.70 mm (0.067 in.)
2.05 – 2.14 mm (0.081 – 0.084 in.)	1.80 mm (0.071 in.)
2.15 – 2.24 mm (0.085 – 0.088 in.)	1.90 (0.90 + 1.00) mm (0.075 (0.035 + 0.039) in.)

Output shaft shim selection table

Clearance "c" – "d"	Thickness of countershaft shim
0 – 0.09 mm (0 – 0.04 in.)	—
0.1 – 0.19 mm (0.004 – 0.007 in.)	0.1 mm (0.004 in.)
0.2 – 0.29 mm (0.008 – 0.011 in.)	0.2 mm (0.008 in.)
0.3 – 0.39 mm (0.012 – 0.015 in.)	0.3 mm (0.012 in.)
0.4 – 0.49 mm (0.016 – 0.019 in.)	0.4 mm (0.016 in.)
0.5 – 0.59 mm (0.020 – 0.023 in.)	0.5 mm (0.020 in.)
0.6 – 0.69 mm (0.024 – 0.027 in.)	0.6 mm (0.024 in.)
0.7 – 0.79 mm (0.028 – 0.031 in.)	0.7 mm (0.028 in.)

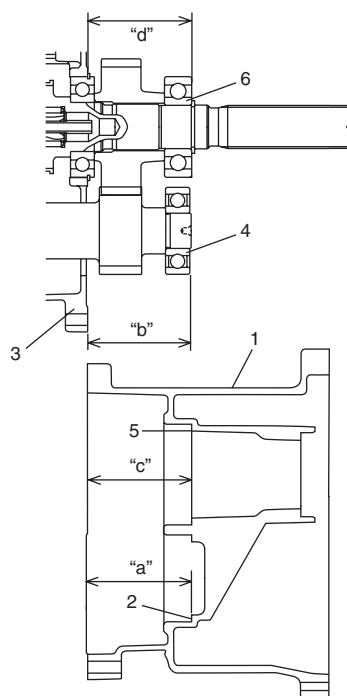

I5JB0A520049-02


- 16) Install selected countershaft shim and output shaft shim to adapter case.
- 17) Clean mating surface of both rear case (1) and adapter case, and uniformly apply sealant to rear case as shown in figure by such amount that its section is 1.2 mm (0.047 in.) in diameter, and then mate it with adapter case.

“A”: Sealant 99000–31260 (SUZUKI Bond No.1217G)

- 18) Install rear case to adapter case. Tighten case bolts (2) to specified torque.

Tightening torque

Adapter case bolt (a): 23 N·m (2.3 kgf-m, 17.0 lb-ft)

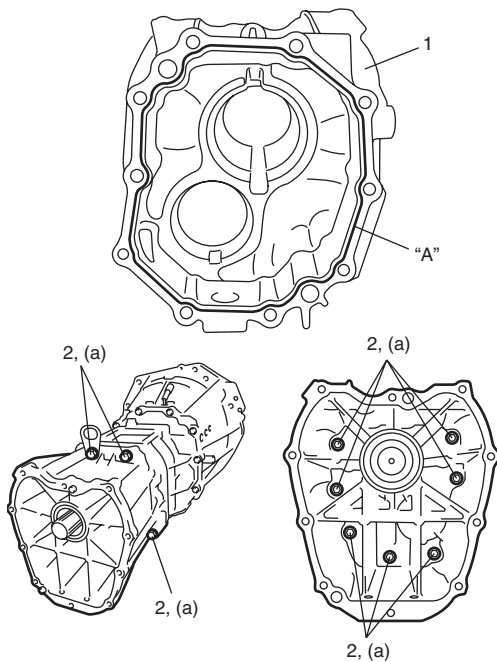

- 19) Install transfer assembly to transmission assembly. Tighten transfer fastening bolts to specified torque referring to “Transfer Assembly Components in Section 3C”.
- 20) Install gear shift control lever rear case assembly and gear shift lever front case assembly referring to “Gear Shift Control Lever Rear Case Assembly Removal and Installation” and “Gear Shift Lever Front Case Assembly Removal and Installation”.
- 21) Install clutch operating cylinder assembly to transmission front case referring to “Clutch Operating Cylinder Assembly Removal and Installation in Section 5C”.

Locating Spring Inspection

S6JB0B5206021

Check locating springs for deterioration and replace with new ones if necessary.

Locating spring free length


Standard: 44.6 mm (1.756 in.)

Service limit: 40.1 mm (1.579 in.)

Input Shaft Disassembly

S6JB0B5206022


- 1) Remove snap ring.
- 2) Remove input shaft front bearing (1) using bearing puller and hydraulic press.

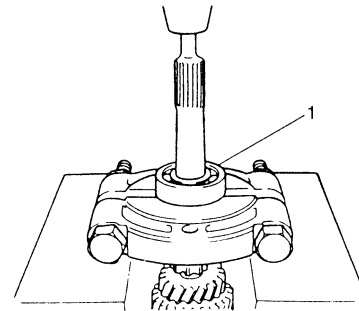

- 3) Remove input shaft union.
- 4) Hold hatched area (5) of input shaft assembly (1) with “V” blocks (4) on vise (2) or the like to stop rotation of shaft, undo caulking and input shaft 5th hub nut (3).

⚠ CAUTION


Do not hold spline, gear teeth or abraded surface of shaft with vise through “V” blocks or the like, otherwise shaft components may be damaged.

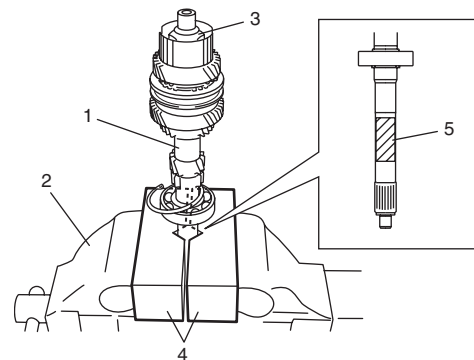

- 5) Apply bearing puller to 4th gear (1), and drive out 5th speed synchronizer hub (2), 3rd gear (3), high speed gear needle bearings, 3rd gear bush, high speed synchronizer assembly (4) and 4th gear all at once from input shaft using metal stick (5) and press.

⚠ CAUTION

To avoid gear teeth from being damaged, support 4th gear at flat side of bearing puller.

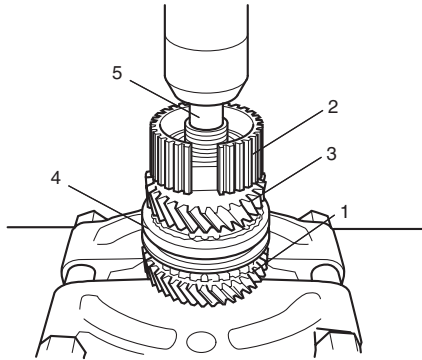

I5JB0A520053-01

Input Shaft Inspection

S6JB0B5206023

- Check clearance "a" between synchronizer ring (2) and gear (1), key slot width "b" in synchronizer ring and each chamfered tooth of gear and synchronizer ring and replace with new one, if necessary. Also, check gear tooth.

Clearance "a" between synchronizer ring and gear (Input shaft) (3rd and 4th)


Standard: 1.0 – 1.4 mm (0.040 – 0.055 in.)

Service limit: 0.5 mm (0.020 in.)

Key slot width "b" (3rd and 4th synchronizer ring)

Standard: 10.0 – 10.2 mm (0.394 – 0.401 in.)

Limit: 10.45 mm (0.411 in.)

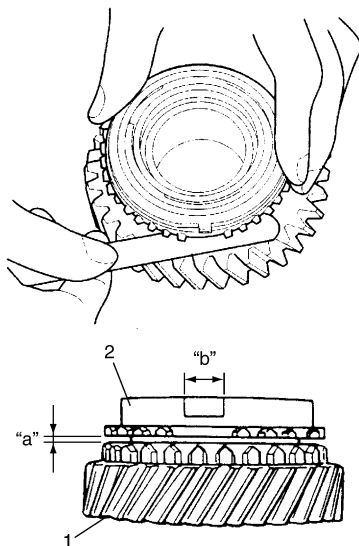

I5JB0A520054-01

- Measure width of high speed gear shift fork end "a" and groove width of high speed synchronizer sleeve "b", 5th & reverse gear shift fork end "a" and groove width of 5th speed synchronizer sleeve "b" and then calculate clearance "c" as follows:


$$\text{Clearance "c"} = \text{"b"} - \text{"a"}$$

If clearance exceeds limit, replace fork bush (1) and sleeve.

Clearance "c" between fork and sleeve for high speed and 5th speed

Standard: 0.3 – 0.5 mm (0.012 – 0.020 in.)

Limit: 1.0 mm (0.039 in.)

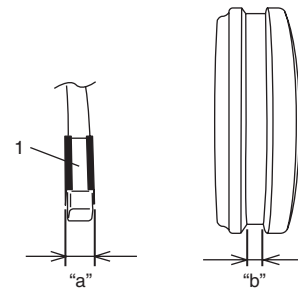


I5JB0A520055-01

- Check diameter of input shaft (1) and needle bush (2) as shown in the figure. If measured value is out of specification, replace input shaft and/or bush.


Input shaft and needle bush specifications (diameter)

Measuring portion	Standard
"a"	30.002 – 30.015 mm (1.1812 – 1.1816 in.)
"b"	34.950 – 34.991 mm (1.3760 – 1.3775 in.)
"c"	30.959 – 30.975 mm (1.2189 – 1.2194 in.)
"d"	27.987 – 28.000 mm (1.1018 – 1.1023 in.)
"e"	27.967 – 27.980 mm (1.1011 – 1.1015 in.)
"f"	19.975 – 19.991 mm (0.7865 – 0.7870 in.)
"g"	28.000 – 28.013 mm (1.1024 – 1.1028 in.)
"h"	34.975 – 34.991 mm (1.3770 – 1.3775 in.)

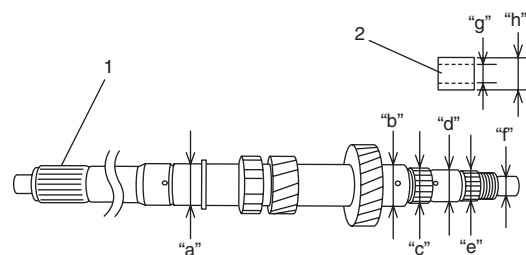


I5JB0A520056-01

- Using "V" blocks (1) and dial gauge (2), check runout. If runout exceeds limit below, replace input shaft (3).

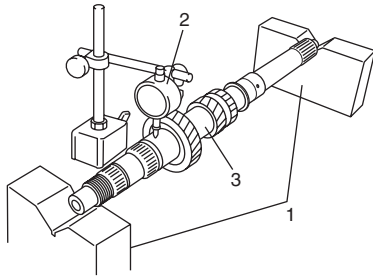Input shaft runout**Limit: 0.02 mm (0.0008 in.)**

I5JB0A520057-01

 - Using cylinder gauge (1), check inside diameter of each gear. If its inside diameter exceeds specification, replace it.

Inside diameter (standard) of gear**3rd and 4th gear: 40.000 – 40.025 mm (1.5748 – 1.5757 in.)**

IYSQ01522099-01

- Check chamfered part of each sleeve for damage and excessive wear, and replace as necessary.
- Check each synchronizer key and synchronizer spring and replace as necessary.
- Check spline portions and replace parts if excessive wear is found.


Input Shaft Reassembly

S6JB0B5206024

NOTE

- Before installation, wash each part and apply specified gear oil to sliding faces of bearing and gear.
- Use new snap rings on shaft for installation. Don't reuse snap rings.

- Clean all components thoroughly, inspect them for any abnormality and replace with new ones as necessary.
- To ensure lubrication, air blow oil holes (1) and make sure that they are free from any obstruction.

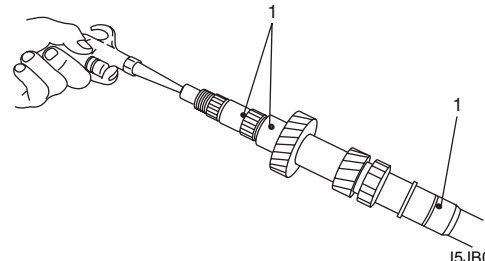


I5JB0A520058-01

- Drive in input shaft front bearing (1) to input shaft using special tool and hammer and then install snap ring in specified direction as shown in figure.

Special tool**(A): 09940-51710****NOTE**

Input shaft front bearing circlip (2) must be installed before input shaft front bearing is installed.

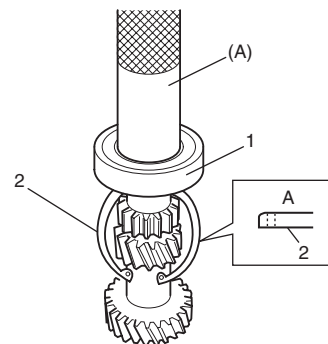

I5JB0A520059-01


A: Bearing side

- Apply oil to high speed gear needle bearing (5), and then install needle bearing, 4th gear (5) and high speed synchronizer ring (7) to input shaft.

- 5) Assemble synchronizer sleeve (4) and hub (3) as follows.
 - a) Fit high speed synchronizer sleeve to hub in specified direction as shown in figure.
 - b) Insert 3 keys (2) to hub.
 - c) Set springs (1) at specified position as shown in figure.

Synchronizer key installation position

: A = B

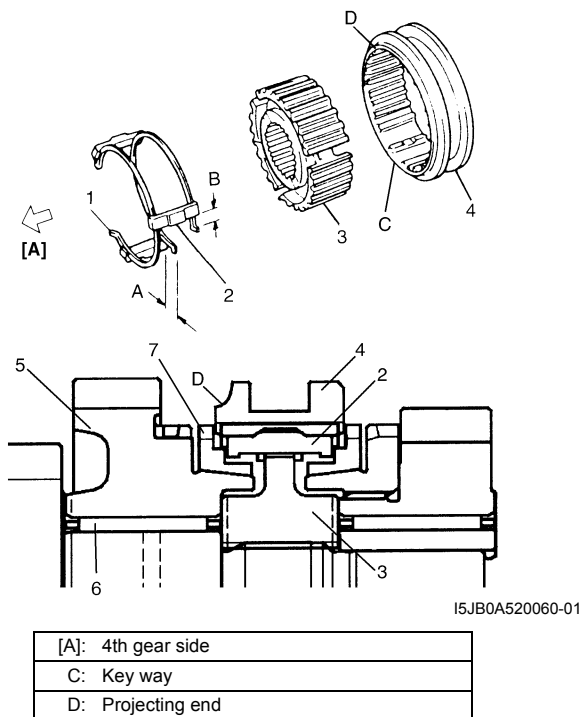


- 6) Drive in high speed synchronizer assembly (1) using special tool and hammer.

NOTE

- While press-fitting sleeve & hub, make sure that synchronizer ring key slots (2) are aligned with keys in sleeve & hub assembly.
- Check free rotation of 4th gear after press fitting sleeve & hub assembly.

Special tool


(A): 09913-84510

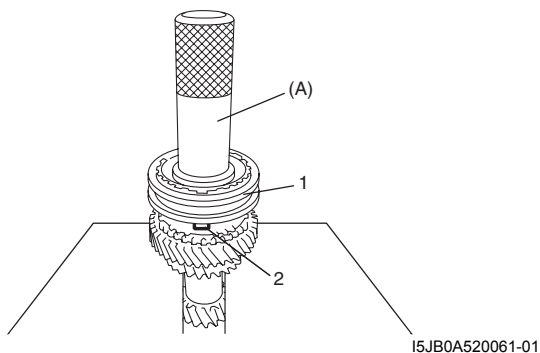


- 7) Check 4th gear (1) thrust clearance by using thickness gauge. If clearance is out of specification, repress-fit or replace defective part.

4th gear thrust clearance

"a": 0.10 – 0.25 mm (0.004 – 0.010 in.)

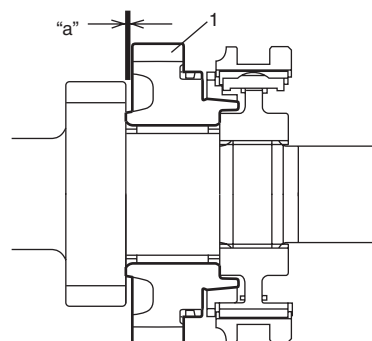


- 8) Apply oil to high speed gear needle bearing, and then install 3rd gear bush (1), high speed gear needle bearing (2) and 3rd gear (3).

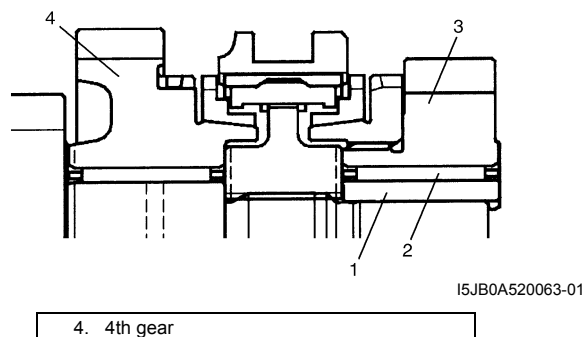

- 9) Press-fit 5th speed synchronizer hub (1) using special tool and hammer.

Special tool


(A): 09913-84510

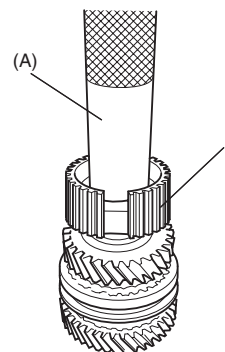

- 10) Check 3rd gear (1) thrust clearance by using thickness gauge. If clearance is out of specification, repress-fit or replace defective part.

3rd gear thrust clearance

"a": 0.10 – 0.25 mm (0.004 – 0.010 in.)

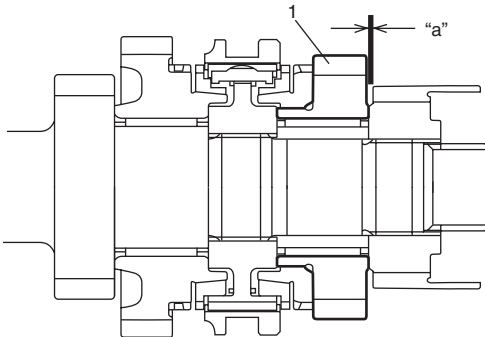

I5JB0A520065-01

- 11) Tighten input shaft 5th hub nut to specified torque in the same manner as step 4) of "Input Shaft Disassembly".


⚠ CAUTION

Do not hold spline, gear teeth or abraded surface of shaft with vise through "V" blocks or the like, otherwise shaft components may be damaged.

Tightening torque

Input shaft 5th hub nut: 210 N·m (21.0 kgf·m, 152.0 lb·ft)

- 12) Caulk input shaft 5th hub nut (2) using caulking tool.
13) Drive in new input shaft union (1) using puller and hydraulic press.

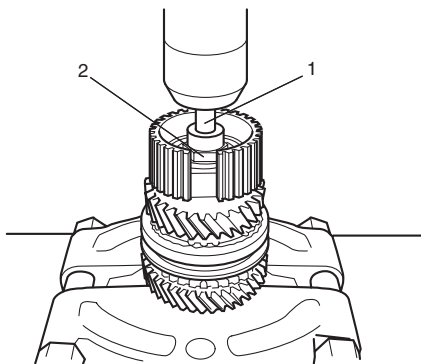


I5JB0A520066-01

Countershaft Disassembly and Assembly

S6JB0B5206025

Disassembly

- 1) Remove countershaft rear bearing (1) using bearing puller, metal stick (2) and hydraulic press.

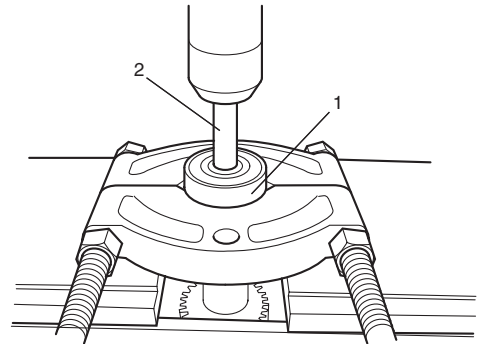


I5JB0A520067-01

- 2) Hold hatched area (5) of countershaft assembly (1) with "V" blocks (4) on vise (2) or the like to stop rotation of shaft, undo caulking and countershaft front bearing nut (3).

⚠ CAUTION

Do not hold spline, gear teeth or abraded surface of shaft with "V" blocks on vise or the like, otherwise shaft may be damaged.

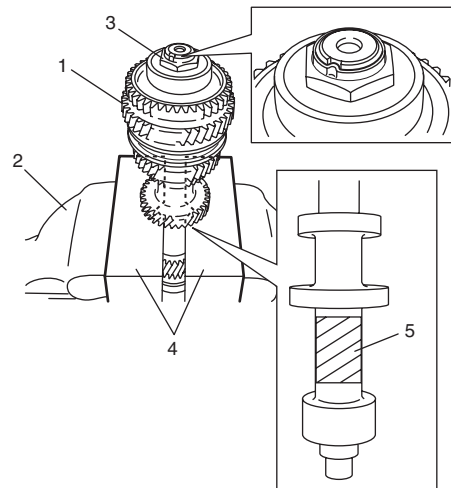


I5JB0A520068-01

- 3) Apply bearing puller to 2nd gear (1), and drive out countershaft front bearing (2), countershaft reverse gear (3), 1st gear (4), countershaft gear needle bearings, countershaft low needle bearing bush, low speed synchronizer assembly (5) and 2nd gear all at once from countershaft using metal stick (6) and hydraulic press.

⚠ CAUTION


To avoid gear teeth from being damaged, support 2nd gear at flat side of bearing puller.

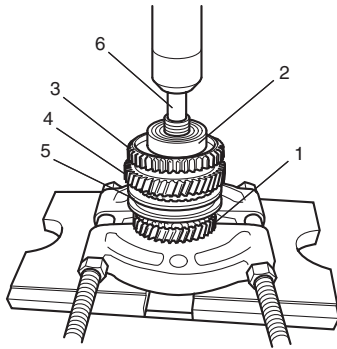

I5JB0A520069-01

Assembly

- 1) Clean all components thoroughly, inspect them for any abnormality and replace with new ones as necessary.
- 2) To ensure lubrication, air blow oil holes (1) and make sure that they are free from any obstruction.

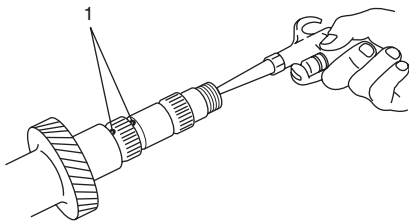


I5JB0A520070-01

- 3) Drive in countershaft rear bearing (1) using special tool and hammer.

Special tool

(A): 09913-84510


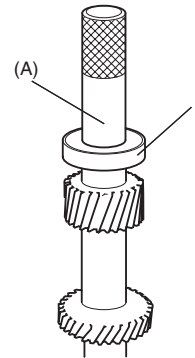


I5JB0A520071-01

- 4) Apply oil to countershaft gear needle bearing (6), and then install needle bearing, 2nd gear (5) and low speed synchronizer ring (7).
- 5) Assemble synchronizer sleeve (4) and hub (3) as follows.
 - a) Fit low speed synchronizer sleeve to hub in specified direction as shown in figure.
 - b) Insert 3 keys (2) to hub.
 - c) Set springs (1) at specified position as shown in figure.

Synchronizer key installation position

: A = B

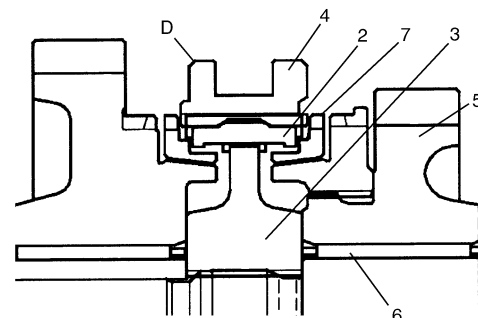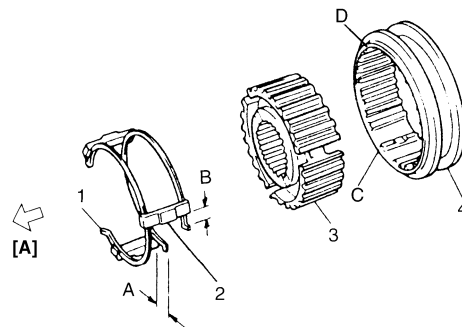

I5JB0A520072-01

[A]: 1st gear side

C: Key way

D: Chamfered side


- 6) Drive in low speed synchronizer assembly (1) using special tool and hammer.

NOTE

- While press-fitting sleeve & hub, make sure that synchronizer ring key slots (2) are aligned with keys in sleeve & hub assembly.
- Check free rotation of 2nd gear after press-fitting sleeve & hub assembly.

Special tool

(A): 09913-84510

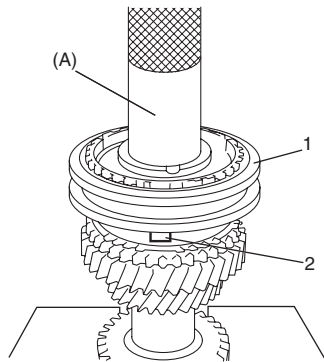


I5JB0A520073-01

- 7) Check 2nd gear (1) thrust clearance by using thickness gauge. If clearance is out of specification, repress-fit or replace defective part.

2nd gear thrust clearance

"a": 0.10 – 0.25 mm (0.004 – 0.010 in.)

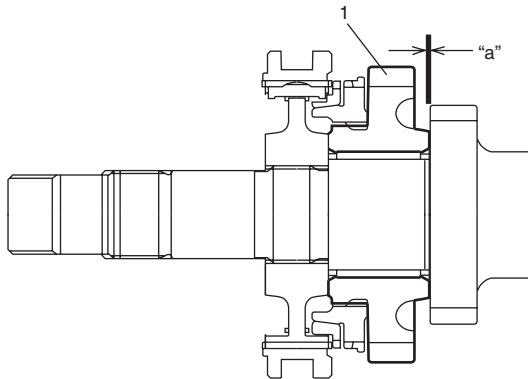


I5JB0A520074-01

- 8) Apply oil to countershaft gear needle bearing, and then countershaft low needle bush, needle bearing and 1st gear (1) to countershaft.

- 9) Press-fit countershaft reverse gear (2) using special tool and hammer.

Special tool

(A): 09913-80113

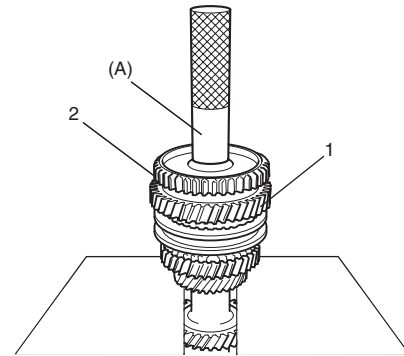


I5JB0A520075-01

- 10) Press-fit countershaft front bearing (1) using special tool and hammer.

Special tool

(A): 09913-84510

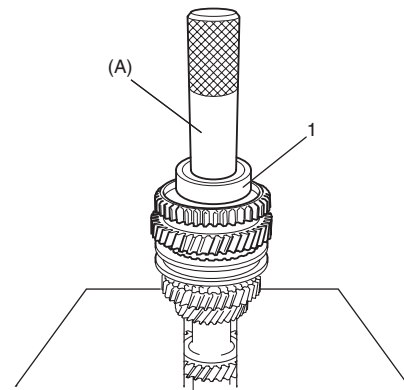


I5JB0A520076-01

- 11) Check low gear (1) thrust clearance by using thickness gauge. If clearance is out of specification, repress-fit or replace defective part.

Low gear thrust clearance

"a": 0.10 – 0.25 mm (0.004 – 0.010 in.)

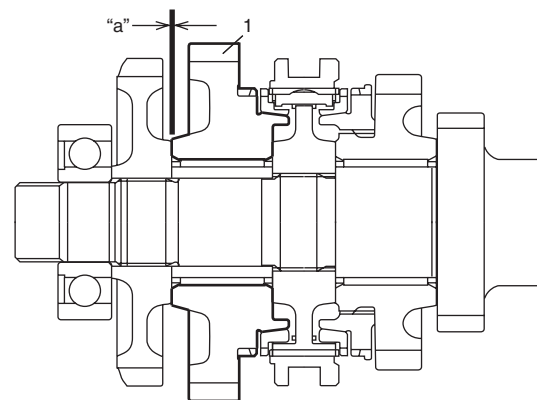

I5JB0A520077-01

- 12) Tighten countershaft front bearing nut to specified torque while locking counter shaft in the same manner as step 2) of "Disassembly" under "Countershaft Disassembly and Assembly".

⚠ CAUTION

Do not hold spline, gear teeth or abraded surface of shaft with vise through "V" blocks or the like, otherwise shaft may be damaged.

Tightening torque

Countershaft front bearing nut: 210 N·m (21.0 kgf-m, 152.0 lb-ft)

- 13) Caulk countershaft front bearing nut using caulking tool and hammer.


Countershaft and Reverse Idle Gear Inspection

S6JB0B5206026

- Using micrometer, check diameter of countershaft (1) and needle bush (2) as shown. If measured value is out of specification, replace counter and/or bush.

Countershaft diameter (standard)

Measuring portion	Standard
"a"	25.002 – 25.015 mm (0.9843 – 0.9848 in.)
"b"	27.987 – 28.000 mm (1.1019 – 1.1023 in.)
"c"	27.987 – 28.000 mm (1.1019 – 1.1023 in.)
"d"	30.959 – 30.975 mm (1.2189 – 1.2194 in.)
"e"	34.975 – 34.991 mm (1.3770 – 1.3775 in.)
"f"	30.002 – 30.015 mm (1.1812 – 1.1816 in.)
"g"	28.000 – 28.013 mm (1.1023 – 1.1028 in.)
"h"	34.975 – 34.991 mm (1.3770 – 1.3776 in.)

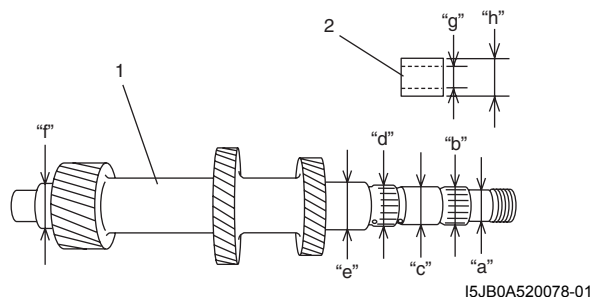

I5JB0A520078-01

- Measure width "a" of low speed gear shift fork and groove width "b" of low speed gear synchronizer sleeve and then calculate clearance "c" as follows:


$$\text{Clearance "c"} = \text{"b"} - \text{"a"}$$

If clearance exceeds limit, replace fork bush (1) and sleeve.

Clearance "c" between fork and sleeve

Standard: 0.3 – 0.5 mm (0.012 – 0.020 in.)

Limit: 1.0 mm (0.039 in.)

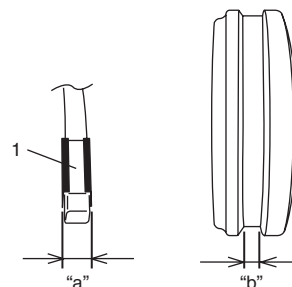

I5JB0A520055-01

- Check clearance "a" between synchronizer ring (2) and gear (1), key slot width "b" in synchronizer ring and each chamfered tooth of gear and synchronizer ring and replace with new one, if necessary. Also, check gear tooth.

Clearance "a" between synchronizer ring and gear (Countershaft) (1st and 2nd)


Standard: 1.0 – 1.4 mm (0.040 – 0.055 in.)

Service limit: 0.5 mm (0.020 in.)

Key slot width "b" (1st and 2nd synchronizer ring)

Standard: 10.0 – 10.2 mm (0.394 – 0.401 in.)

Limit: 10.45 mm (0.411 in.)

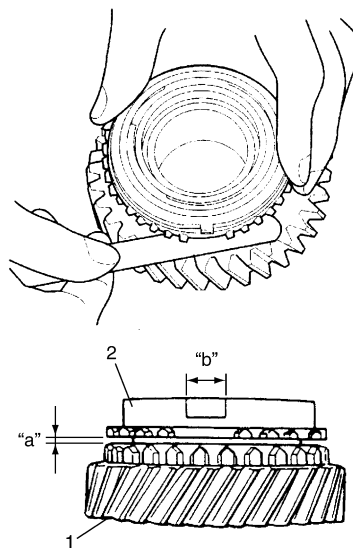


I5JB0A520079-01

- Using cylinder gauge (1), check inside diameter of countershaft 1st and 2nd gears (2). If measured value exceeds specification, replace countershaft 5th gear.

Countershaft 1st and 2nd gears diameter

Standard: 40.000 – 40.025 mm (1.5748 – 1.5757 in.)

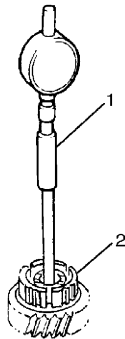

IYSQ01522122-01

- Check oil clearance between reverse idle gear (2) and shaft (1) measuring inside diameter “a” of gear and diameter “b” of shaft and calculate as follows:


$$\text{Clearance "c"} = \text{"b"} - \text{"a"}$$

If clearance exceeds limit, replace gear and shaft.

Oil clearance “c” between reverse idle gear and shaft

Standard: 0.016 – 0.045 mm (0.0006 – 0.0018 in.)

Limit: 0.13 mm (0.005 in.)

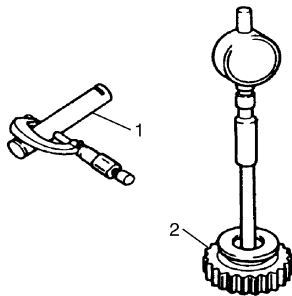


IYSQ01522123-01

- Check clearance between reverse idle gear (2) and lever (1) of reverse gear shift link. If clearance exceeds limit, replace gear and lever.

Clearance between reverse idle gear and lever

Standard: 0.05 mm – 0.35 mm (0.002 – 0.014 in.)

Limit: 0.5 mm (0.020 in.)

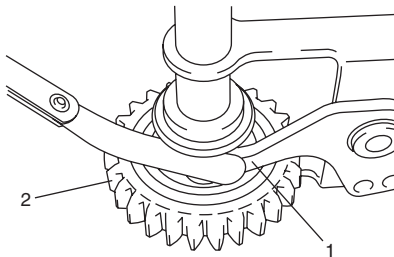


I5JB0A520080-01

Output Shaft Disassembly and Assembly

S6JB0B5206027

Disassembly

- Remove output shaft rear snap ring.
- Apply bearing puller to output shaft front bearing (1), and drive out output shaft front bearing, output shaft gear (2) and output shaft rear bearing (3) all at once from output shaft using press.

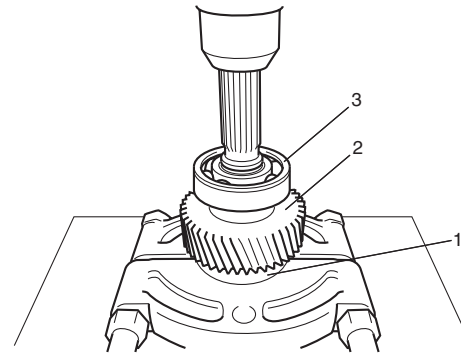


I5JB0A520081-01

Assembly

- Clean all components thoroughly, inspect them for any abnormality and replace with new ones as necessary.
- Put front bearing (1) onto output shaft facing groove (4) side to output shaft gear (2) and drive in output shaft front bearing, output shaft gear and output shaft rear bearing (3) all together using special tool and hammer.

Special tool

(A): 09940–51710

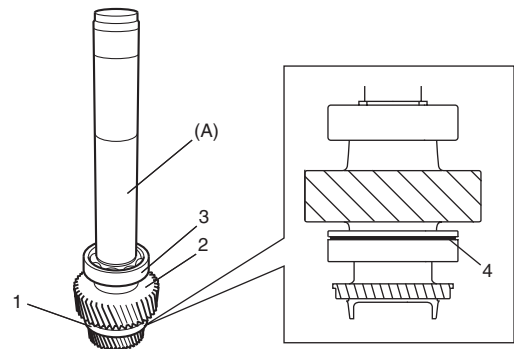

I5JB0A520082-01

- Install new output shaft rear snap ring.

Output Shaft Inspection


S6JB0B5206028

Check clearance "a" between ring (2) and output shaft (1), each chamfered teeth of gear, ring and sleeve, then determine parts replacement.

Clearance between synchronizer ring and output shaft

Standard "a": 1.0 - 1.4 mm (0.040 - 0.055 in.)

Service limit "a": 0.5 mm (0.020 in.)

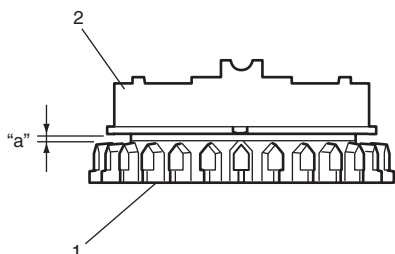

I5JB0A520083-01

Manual Transmission Front Case Disassembly and Assembly

S6JB0B5206029


Disassembly

Remove pump seal (1) and oil seal (2) from front case using special tools.

Special tool

(A): 09941-64511

(B): 09930-30104

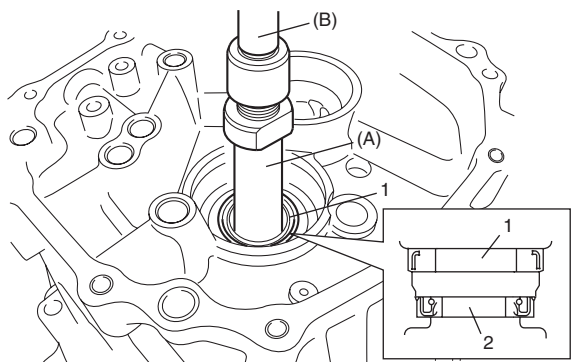

I5JB0A520084-02


Assembly

- 1) Set new oil seal to front case with its spring side facing rear case side.
- 2) Install oil seal until it becomes flush with case surface using special tool and hammer and apply grease to oil seal lip.

Special tool

(A): 09940-51710

: Grease 99000-25010 (SUZUKI Super Grease A)

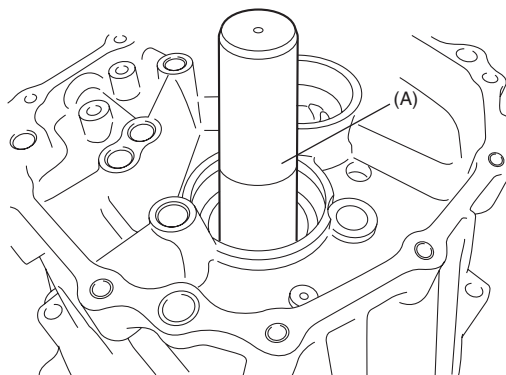


I5JB0A520085-02

- 3) Install pump seal to front case using special tool and hammer.

Special tool

(A): 09913-75810

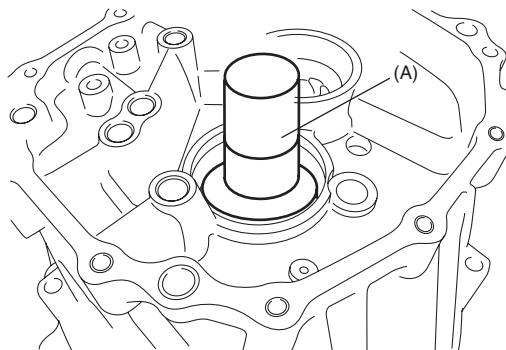

I5JB0A520088-01

Manual Transmission Adapter Case Disassembly and Assembly


S6JB0B5206030

Disassembly

Remove oil seal (1) from adapter case using special tool.

Special tool

(A): 09913-50121

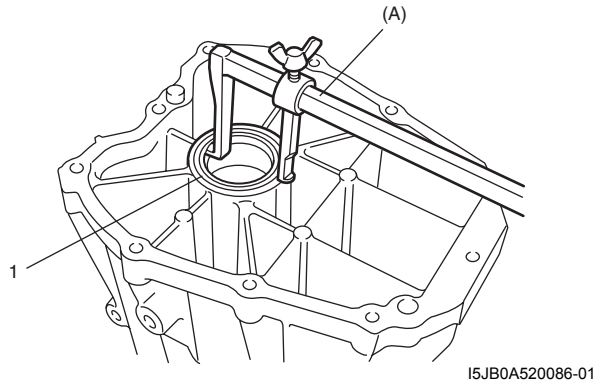


Assembly

- 1) Set new oil seal to adapter case with its spring side facing rear case side.
- 2) Install oil seal until it becomes flush with case surface using special tool and hammer and apply grease to oil seal lip.

Special tool

(A): 09913-85210

: Grease 99000-25010 (SUZUKI Super Grease A)

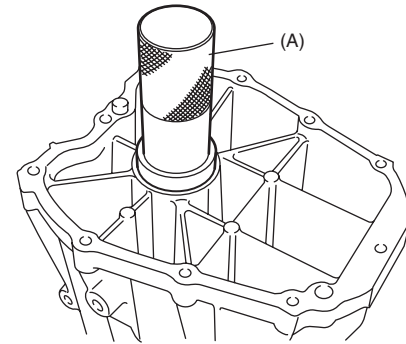

Specifications

Tightening Torque Specifications

S6JB0B5207001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lb·ft	
Transmission oil drain plug	23	2.3	17.0	⌚
Oil filler plug	23	2.3	17.0	⌚
Control lever locating bolt	9	0.9	6.5	⌚
Case cover bolt	10	1.0	7.5	⌚
Control lever boot cover bolt	12	1.2	9.0	⌚
Back up light switch	23	2.3	17.0	⌚
Plate bolt	23	2.3	17.0	⌚
Control shaft joint nut	18	1.8	13.0	⌚ / ⌚
Gear shift lever front case bolt	23	2.3	17.0	⌚
Engine rear mounting No.1 bolt	55	5.5	40.0	⌚
Engine rear mounting member bolt	55	5.5	40.0	⌚ / ⌚
Engine rear mounting No.2 bolt	55	5.5	40.0	⌚ / ⌚
Transmission to engine bolt and nut	85	8.5	61.5	⌚
Clutch housing lower plate bolt	11	1.1	8.0	⌚
Low gear shift inverse lever bolt	23	2.3	17.0	⌚
Transmission case bolt	23	2.3	17.0	⌚
Reverse shaft bolt	23	2.3	17.0	⌚
Gear shift locating bolt	23	2.3	17.0	⌚
Adapter case bolt	23	2.3	17.0	⌚
Input shaft 5th hub nut	210	21.0	152.0	⌚
Countershaft front bearing nut	210	21.0	152.0	⌚

NOTE

The specified tightening torque is also described in the following.

“Manual Transmission Assembly Components”

“Gear Shift Control Lever Rear Case Assembly Components”

“Gear Shift Lever Front Case Assembly Components”

“Gear Shift Shaft and Fork Components”

“Input Shaft Assembly, Output Shaft Assembly and Countershaft Assembly Components”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Special Tools and Equipment

Recommended Service Material

S6JB0B5208001

Material	SUZUKI recommended product or Specification		Note
Grease	SUZUKI Super Grease A	P/No.: 99000–25010	🔧 / 🔧 / 🔧 / 🔧 / 🔧
Sealant	SUZUKI Bond No.1217G	P/No.: 99000–31260	🔧 / 🔧 / 🔧 / 🔧 / 🔧
Thread lock cement	Thread Lock Cement Super 1322	P/No.: 99000–32110	🔧 / 🔧

NOTE

Required service material is also described in the following.

“Manual Transmission Assembly Components”

“Gear Shift Control Lever Rear Case Assembly Components”





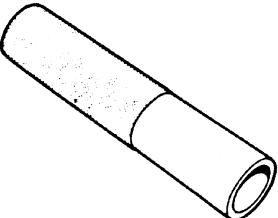
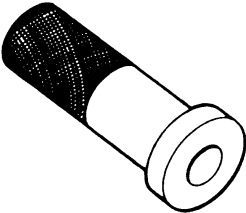
“Gear Shift Lever Front Case Assembly Components”


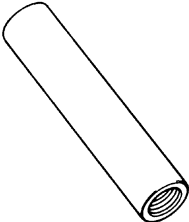

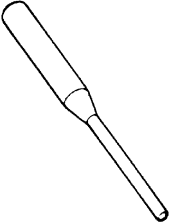

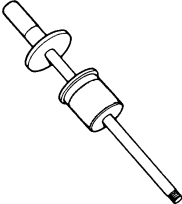

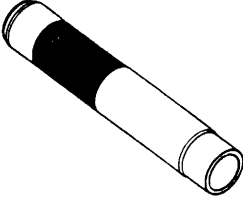

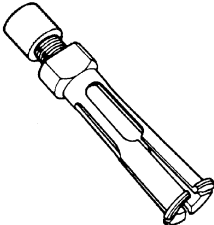
“Gear Shift Shaft and Fork Components”

“Input Shaft Assembly, Output Shaft Assembly and Countershaft Assembly Components”

Special Tool

S6JB0B5208002

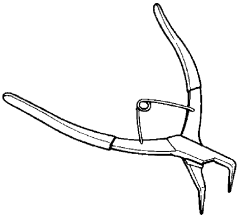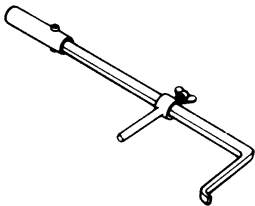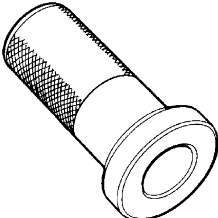09900–06106 Snap ring pliers (closing type) 🔧 / 🔧		09913–50121 Oil seal remover 🔧	
09913–75810 Bearing installer 🔧		09913–80113 Bearing installer 🔧	
09913–84510 Bearing installer 🔧 / 🔧 / 🔧 / 🔧 / 🔧		09913–85210 Bearing installer 🔧	

<div>09923-46020</div> <div>Joint pipe</div> <div></div> <div></div>	<div>09925-78210</div> <div>Spring pin remover (6 mm)</div> <div></div> <div></div>
<div>09930-30104</div> <div>Sliding shaft</div> <div></div> <div></div>	<div>09940-51710</div> <div>Bearing installer</div> <div></div> <div></div>
<div>09941-64511</div> <div>Bearing and oil seal remover (30 mm Min.)</div> <div></div> <div></div>	

Clutch

General Description


Clutch (Hydraulic Type) Construction

S6JB0B5301001

The clutch is a diaphragm-spring clutch of a dry single disc type. The diaphragm spring is of a tapering-finger type, which is a solid ring in the outer diameter part, with a series of tapered fingers pointing inward. The disc, carrying torsional coil springs, is positioned on the transmission input shaft with an involute spline fit. The clutch cover is secured to the flywheel, and carries the diaphragm spring in such a way that the peripheral edge part of the spring pushes on the pressure plate against the flywheel (with the disc in between), when the clutch release bearing (incorporated in clutch operating cylinder) is held back. This is the engaged condition of the clutch.

Depressing the clutch pedal causes the release bearing (incorporated in clutch operating cylinder) to advance and pushes on the tips of the tapered fingers of the diaphragm spring. When this happens, the diaphragm spring pulls the pressure plate away from the flywheel, thereby interrupting the flow of drive from flywheel through clutch disc to transmission input shaft.

Clutch fluid is supplied from brake fluid reservoir. Clutch fluid level can be checked by brake fluid level of brake fluid reservoir.

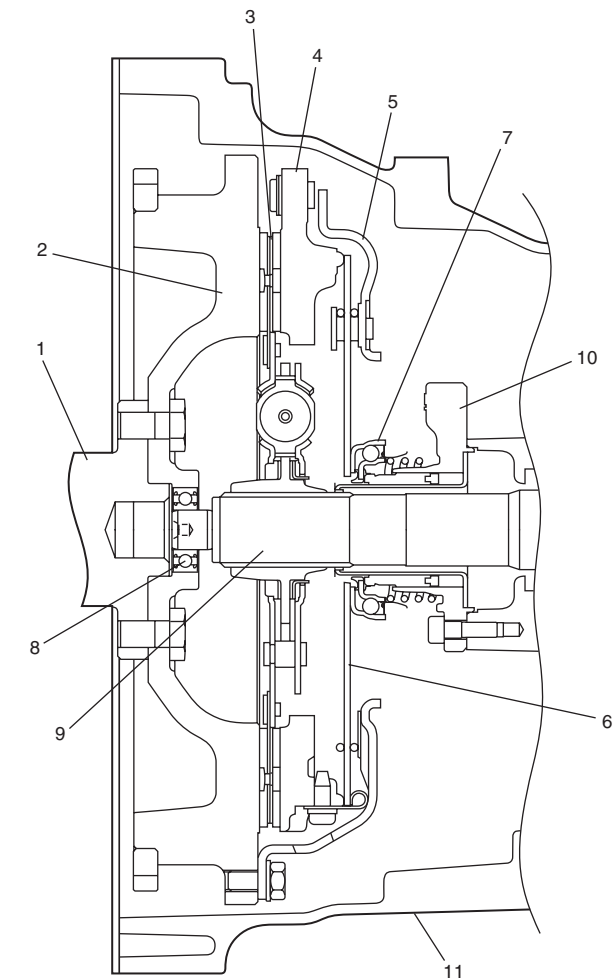


I5JB0A530001-01

1. Crankshaft	7. Release bearing
2. Flywheel	8. Input shaft bearing
3. Clutch disc	9. Input shaft
4. Pressure plate	10. Operating cylinder
5. Clutch cover	11. Clutch housing
6. Diaphragm spring	

Component Location

Clutch Fluid Pipe and Hose Location

S6JB0B5303001

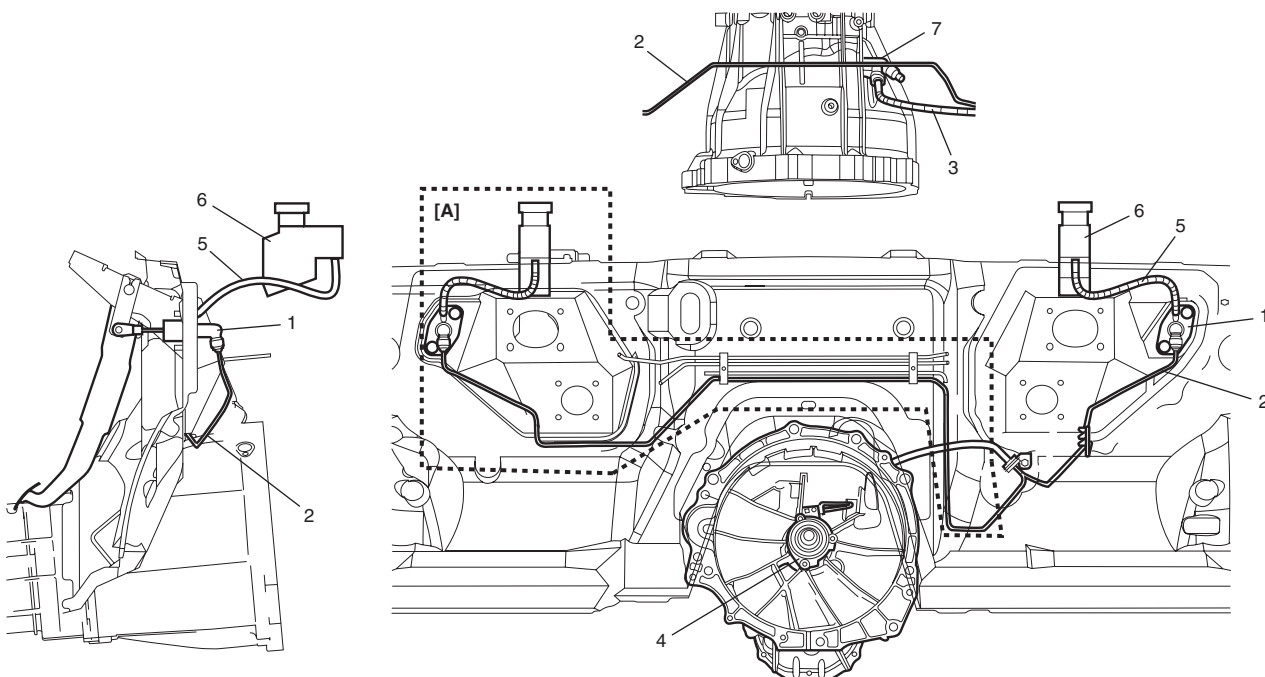

I5JB0A530002-03

[A]: Right-hand steering vehicle		
1. Clutch master cylinder	3. Clutch fluid hose	6. Brake master cylinder reservoir
2. Clutch fluid pipe	4. Clutch operating cylinder assembly	7. Clutch fluid pipe joint
	5. Clutch reservoir hose	

Diagnostic Information and Procedures

Clutch (Hydraulic Type) Symptom Diagnosis

S6JB0B5304001

Condition	Possible cause	Correction / Reference Item
Slipping	Improper clutch pedal free travel	<i>Bleed air or replace master cylinder.</i>
	Worn or oily clutch disc facing	<i>Replace disc.</i>
	Warped disc, pressure plate or flywheel surface	<i>Replace disc, clutch cover or flywheel.</i>
	Weakened diaphragm spring	<i>Replace clutch cover.</i>
	Master cylinder piston or seal cup not returning	<i>Repair master cylinder.</i>
Dragging clutch	Improper clutch pedal free travel	<i>Bleed air or replace master cylinder.</i>
	Weakened diaphragm spring, or worn spring tip	<i>Replace clutch cover.</i>
	Rusted input shaft splines	<i>Lubricate.</i>
	Damaged or worn splines of transmission input shaft	<i>Replace input shaft.</i>
	Excessively wobbly clutch disc	<i>Replace disc.</i>
	Clutch facings broken or dirty with oil	<i>Replace disc.</i>
	Fluid leakage	<i>Repair or replace.</i>
Clutch vibration	Glazed (glass-like) clutch facings	<i>Repair or replace disc.</i>
	Clutch facings dirty with oil	<i>Replace disc.</i>
	Release bearing slides unsmoothly	<i>Replace clutch operating cylinder assembly.</i>
	Wobbly clutch disc, or poor facing contact	<i>Replace disc.</i>
	Weakened torsion springs in clutch disc	<i>Replace disc.</i>
	Clutch disc rivets loose	<i>Replace disc.</i>
	Distorted pressure plate or flywheel surface	<i>Replace clutch cover or flywheel.</i>
	Weakened or loosened engine mounting bolt or nut	<i>Retighten or replace mounting.</i>
Noisy clutch	Worn or broken release bearing	<i>Replace clutch operating cylinder assembly.</i>
	Input shaft front bearing worn down	<i>Replace input shaft bearing.</i>
	Excessive rattle of clutch disc hub	<i>Replace disc.</i>
	Cracked clutch disc	<i>Replace disc.</i>
	Pressure plate and diaphragm spring rattling	<i>Replace clutch cover.</i>
Grabbing clutch	Clutch disc facings soaked with oil	<i>Replace disc.</i>
	Clutch disc facings excessively worn	<i>Replace disc.</i>
	Rivet heads showing out of facing	<i>Replace disc.</i>
	Weakened torsion springs	<i>Replace disc.</i>

Repair Instructions


Clutch Pedal Height Inspection

S6JB0B5306011

Measure clutch pedal height "a" from brake pedal (2). If pedal height is excessive low or high, check installation position of clutch position switch, clutch fluid leakage, bending of clutch pedal arm and bending of push rod of clutch master cylinder (3). If any abnormality is found, adjust or replace it with a new one.

Clutch pedal height

"a": Approx. 20 mm (0.79 in.)

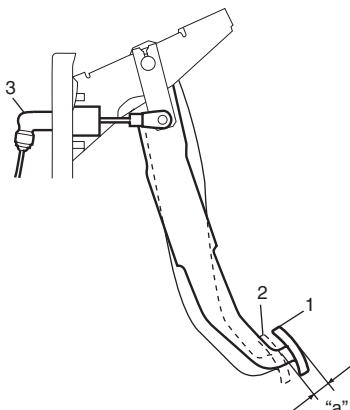

I5JB0A530003-01

1. Clutch pedal


Clutch Pedal Free Travel Check

S6JB0B5306012

Depress clutch pedal (1), stop the moment clutch resistance is felt and measure distance (clutch pedal free travel). Free travel should be within the following specification. If free travel is out of specification, check installation position of clutch pedal position switch, clutch fluid leakage, bending of clutch pedal arm and bending of push rod of clutch master cylinder. If any abnormality is found, adjust or replace it with a new one.

Clutch pedal free travel "a"

: 0 – 10 mm (0 – 0.4 in.)

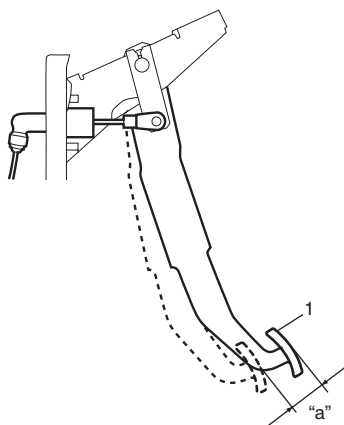

I5JB0A530004-01

Clutch Fluid Inspection

S6JB0B5306013

Refer to "Brake Fluid Level Check in Section 4A".

Clutch Fluid

: Refer to brake reservoir cap


Air Bleeding of Clutch System

S6JB0B5306014

⚠ CAUTION

- Brake fluid is extremely damaging to paint. If fluid should accidentally touch painted surface, immediately wipe fluid from paint and clean painted surface.
- When operating the pedal stroke for air bleeding of clutch system, after releasing the clutch pedal, be sure to wait 1 second or more before depressing it again. Otherwise, the oil seal of operating cylinder will be damaged, resulting in oil leakage.

Bleed air from clutch system. Refer to "Air Bleeding of Brake System in Section 4A" for air bleeding procedure.

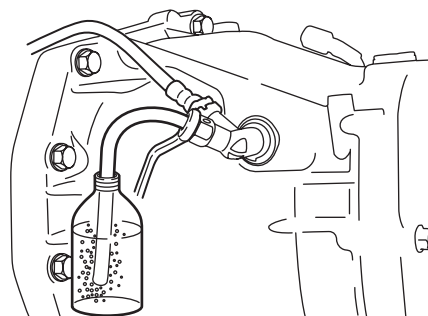

I5JB0A530015-03


5C-5 Clutch:

Clutch Pedal Position (CPP) Switch Removal and Installation

S6JB0B5306001

Removal

- 1) Disconnect connector of CPP switch (1) with ignition switch OFF.
- 2) Remove CPP switch (1) from pedal bracket.

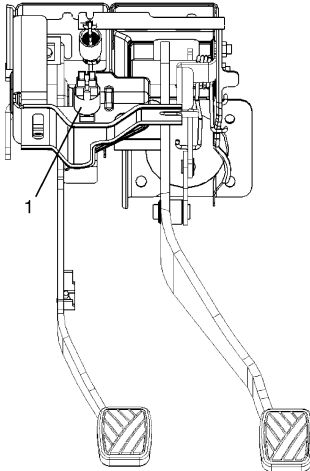

I5JB0A530005-02

Installation

- 1) Instal CPP switch to pedal bracket.
- 2) Adjust switch position referring to "Clutch Pedal Position (CPP) Switch Inspection and Adjustment".
- 3) Connect connector to CPP switch securely.

Clutch Pedal Position (CPP) Switch Inspection and Adjustment

S6JB0B5306002


Inspection

Check for resistance between terminals under each condition below. If check result is not satisfactory, replace.

CPP switch resistance

When switch shaft is pushed (1): Continuity

When switch shaft is free (2): No continuity

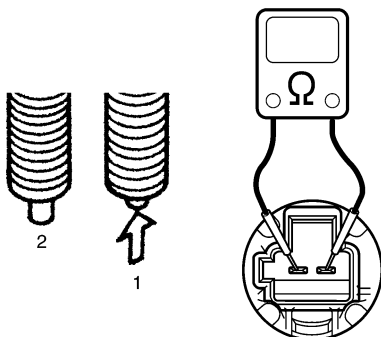


I5JB0A530006-01

Adjustment

With clutch pedal (1) released, adjust switch (2) position so that clearance between end of thread and clutch pedal arm is within specification.

Clearance between end of thread and clutch pedal arm

"a": 0.5 – 1.5 mm (0.02 – 0.06 in.)

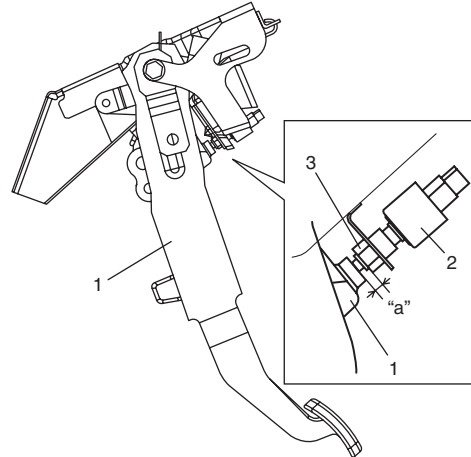

I5JB0A530007-02

Clutch Fluid Pipe and Hose Removal and Installation


S6JB0B5306003

⚠ CAUTION

Do not allow fluid to get on painted surface. It may cause painted surface damage.


Removal

- 1) Remove dust and dirt from each joint of hose and pipe to be disconnected and clean around reservoir cap of brake master cylinder.
- 2) Take out fluid with syringe or such.
- 3) Remove clamp (1) of clutch master cylinder (2) and disconnect fluid pipe (3).

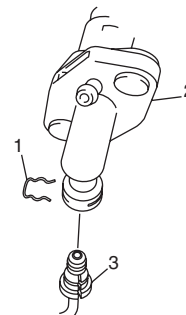

I5JB0A530008-01

- 4) Pull clamp (1) of fluid pipe joint (2) and disconnect fluid hose (3).

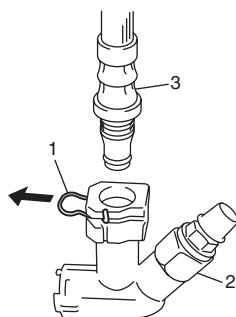

I5JB0A530010-02

Installation


Reverse removal sequence noting the following points.

- Tighten hose bracket nut (1) to specified torque.

Tightening torque

Clutch fluid hose bracket nut (a): 10 N·m (1.0 kgf-m, 7.5 lb-ft)

- Install each clamp securely.
- After installation, check clutch pedal free travel and bleed air from system.
- Check fluid leakage.
- Add fluid close to MAX level of reservoir.

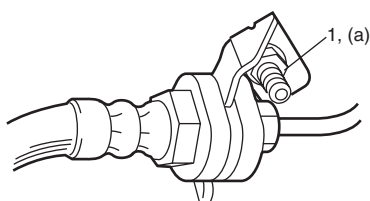


I6JB01530001-02

Clutch Fluid Pipe and Hose Inspection

S6JB0B5306004

Check pipe (1) and hose (2) for dent, kink, crack, dirt and dust. Replace if check result is not satisfactory.

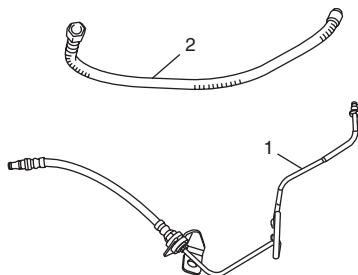

I6JB01530002-02

Clutch Master Cylinder Removal and Installation


S6JB0B5306005

⚠ CAUTION

- Do not allow fluid to get on painted surfaces. It may cause painted surface damage.
- Do not disassemble clutch master cylinder.

Removal

- 1) Clean around reservoir cap of brake master cylinder and take out fluid with syringe or such.
- 2) Detach main fuse box.
- 3) Disconnect fluid pipe (2) and reservoir hose (4) from master cylinder assembly (1).
- 4) Remove clip (6) and push rod clevis pin (5).
- 5) Remove master cylinder attaching nuts (3).
- 6) Remove master cylinder assembly (1) and gasket.

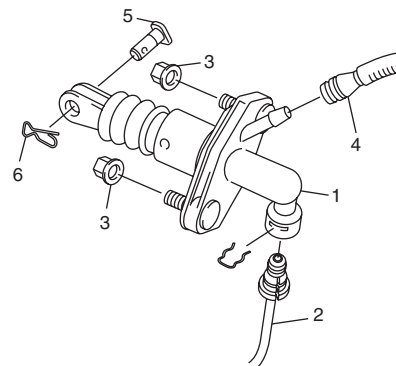

I5JB0A530013-01

5C-7 Clutch:

Installation

Reverse removal procedure for installation noting the following.


- Apply grease to push rod clevis pin (1).

"A": Grease 99000–25100 (SUZUKI Silicone Grease)

- Tighten master cylinder attaching nuts (2) to specified torque.


Tightening torque

Clutch master cylinder attaching nut (a): 23 N·m (2.3 kgf-m, 17.0 lb-ft)

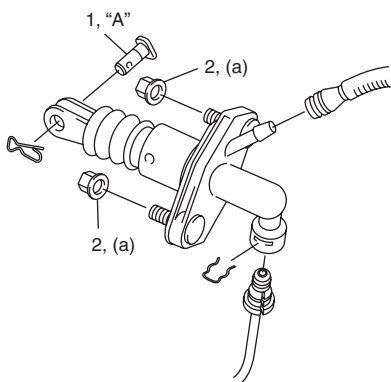

I5JB0A530014-01

- Fill reservoir with specified brake fluid and check fluid leakage.
- After installation, bleed air from clutch system and check clutch pedal free travel. Refer to "Air Bleeding of Brake System in Section 4A" for air bleeding procedure.

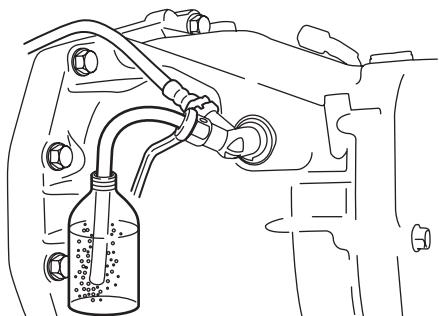

I5JB0A530015-03

Clutch Master Cylinder Inspection

S6JB0B5306006

- Check master cylinder (1) for damage and fluid leakage, boot for damage and deterioration, gasket for damage and deterioration.
- Check for push rod clevis distance "a" and clevis pin hole diameter "b" as shown.


If any malfunction is found, replace master cylinder.

Push rod clevis distance "a":

106.1 – 107.1 mm (4.18 – 4.22 in.)

Clevis pin hole diameter "b":

10.05 – 10.15 mm (0.396 – 0.399 in.)

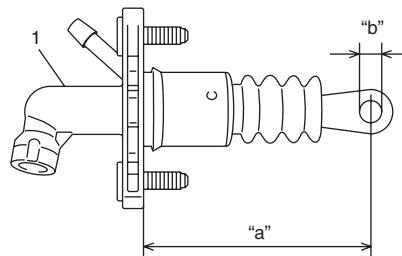

I5JB0A530016-01

Clutch Operating Cylinder Assembly Removal and Installation


S6JB0B5306007

⚠ CAUTION

- **Do not allow fluid to get on painted surfaces. It may cause painted surface damage.**
- **Do not disassemble clutch operating cylinder assembly.**

Removal

- 1) Clean around reservoir cap of brake master cylinder and take out fluid with syringe or such.
- 2) Dismount transmission assembly referring to "Manual Transmission Assembly Dismounting and Remounting in Section 5B".
- 3) Loosen clutch fluid pipe flare nut (1) of clutch operating cylinder assembly (2).
- 4) Remove clutch pipe joint sleeve (3) from transmission front case and then remove clutch fluid pipe (4).
- 5) Remove clutch operating cylinder assembly from transmission front case.

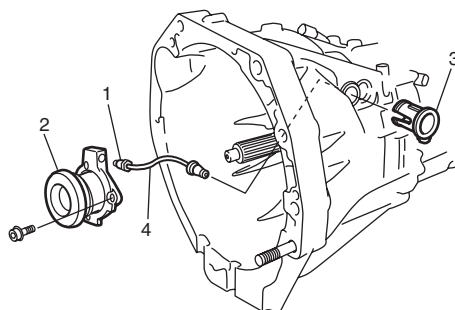

I5JB0A530017-01

Installation

- 1) Install clutch operating cylinder assembly (2) to transmission front case. Tighten mounting bolts to specified torque.


Tightening torque

Clutch operating cylinder assembly mounting bolt (a): 10 N·m (1.0 kgf-m, 7.5 lb-ft)

- 2) Connect clutch fluid pipe (4) to clutch operating cylinder assembly temporarily.
- 3) Install clutch pipe joint sleeve (3) to transmission front case securely and then tighten clutch fluid pipe flare nut (1) to specified torque.


Tightening torque

Clutch fluid pipe flare nut (b): 16 N·m (1.6 kgf-m, 11.5 lb-ft)

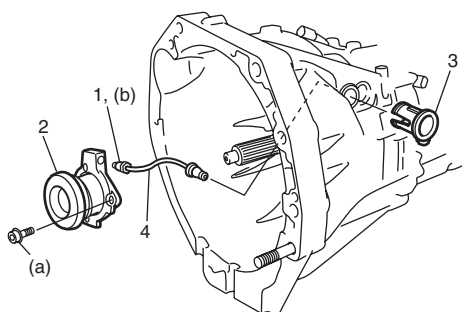

I5JB0A530018-01

- 4) Remount transmission assembly referring to "Manual Transmission Assembly Dismounting and Remounting in Section 5B".
- 5) Fill reservoir with specified brake fluid and check for fluid leakage.
- 6) Bleed air from system and check clutch pedal free travel. Refer to "Air Bleeding of Brake System in Section 4A" for air bleeding procedure.

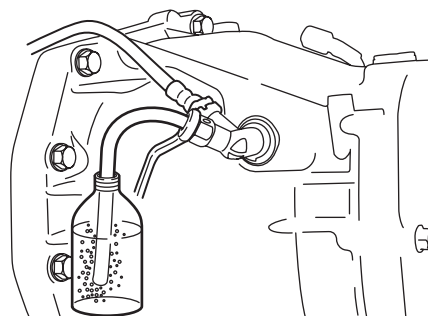


I5JB0A530015-03

Clutch Operating Cylinder Assembly Inspection

Check clutch fluid leakage, spring for damage and bearing for smooth rotation. If malfunction is found, replace clutch operating cylinder assembly.

Clutch Cover, Clutch Disc and Flywheel Components

S6JB0B5306008

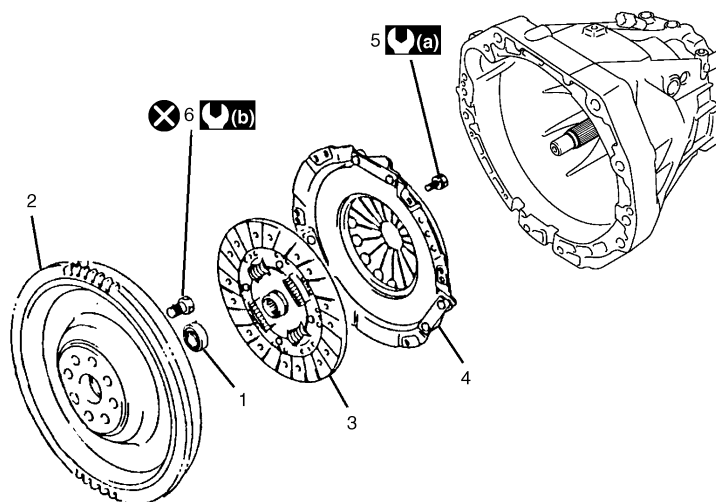

I5JB0A530022-01

1. Input shaft bearing	4. Clutch cover	(a) : 23 N·m (2.3 kgf-m, 17.0 lb-ft)
2. Flywheel	5. Clutch cover bolt	(b) : 68.5 N·m (6.9 kgf-m, 49.5 lb-ft)
3. Clutch disc	6. Flywheel bolt	: Do not reuse.

Clutch Cover, Clutch Disc and Flywheel Removal and Installation


S6JB0B5306009

Removal

- 1) Dismount transmission assembly referring to "Manual Transmission Assembly Dismounting and Remounting in Section 5B".
- 2) Hold flywheel stationary with special tool and remove clutch cover bolts (1), clutch cover (2) and clutch disc.

Special tool

(A): 09924-17811

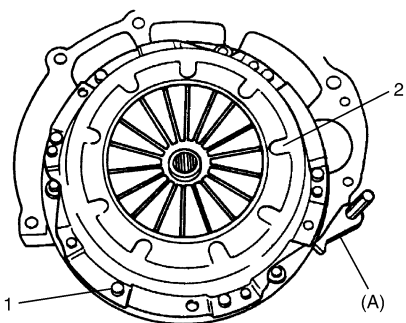


IYSQ01530019-01

- 3) Pull out input shaft bearing (1) by using special tools.

Special tool

(A): 09921-26020

(B): 09930-30104

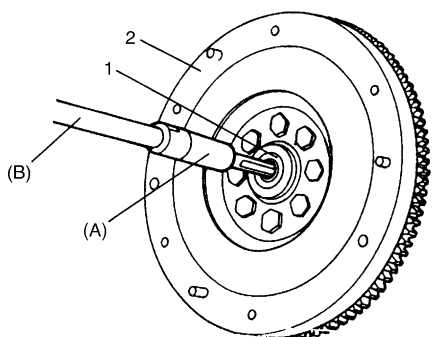

I2RH01530023-01

- 4) Remove flywheel from crankshaft.

Installation

NOTE

Before installation, make sure that flywheel surface and pressure plate surface have been cleaned and dried thoroughly.


- 1) Install flywheel (1) to crankshaft and tighten new bolts (2) to specification.

Special tool

(A): 09924-17811

Tightening torque

Flywheel bolt (a): 68.5 N·m (6.9 kgf-m, 49.5 lb-ft)

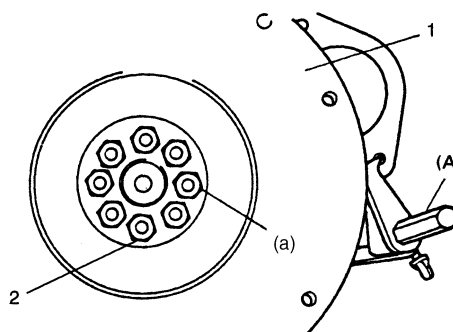


I5JB0A530020-01

- 2) Using special tool, install input shaft bearing to flywheel.

Special tool

(B): 09925-98210

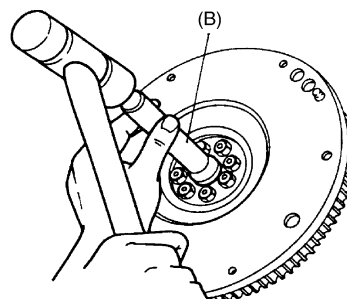

IYSQ01530022-01

- 3) Aligning clutch disc to flywheel center by using special tool, install clutch cover (1) and bolts (2). Then tighten bolts to specification.

NOTE

- While tightening clutch cover bolts, compress clutch disc with special tool by hand so that disc centered.
- Tighten cover bolts little by little evenly in diagonal order.


Special tool

(A): 09924-17811

(C): 09923-36320

Tightening torque

Clutch cover bolt (b): 23 N·m (2.3 kgf-m, 17.0 lb-ft)

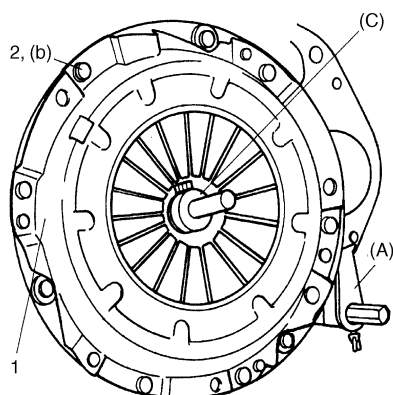

IYSQ01530023-01


- 4) Slightly apply grease to input shaft (1).

“A”: Grease 99000-25210 (SUZUKI Super Grease I)

- 5) Join transmission assembly with engine. Refer to “Manual Transmission Assembly Dismounting and Remounting in Section 5B”.

NOTE

Turn crankshaft with wrench from front while inserting transmission input shaft (1) to clutch disc until splines mesh.

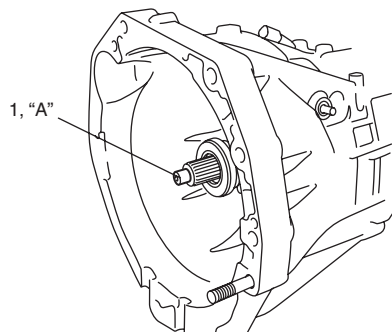

I5JB0A530021-01

Clutch Cover, Clutch Disc and Flywheel Inspection

S6JB0B5306010

Input Shaft Bearing

Check bearing for smooth rotation and replace it if abnormality is found.


Clutch Disc

Measure depth of rivet head depression, i.e. distance between rivet head and facing surface. If depression is found to have reached service limit at any of holes, replace disc assembly.

Rivet head depth

Standard: 1.5 mm (0.06 in.)

Service limit: 0.5 mm (0.02 in.)

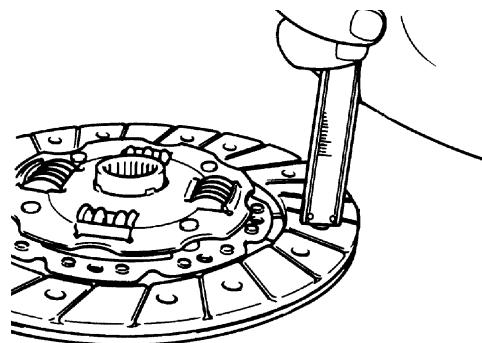

IYSQ01530025-01

Clutch Cover

- Check diaphragm spring for abnormal wear or damage.
- Inspect pressure plate for wear or heat spots. If abnormality is found, replace it as assembly. Do not disassemble it into diaphragm and pressure plate.

Flywheel

Check surface contacting clutch disc for abnormal wear or heat spots. Replace or repair as required.

Specifications

Tightening Torque Specifications

S6JB0B5307001

Fastening part	Tightening torque			Note
	N·m	kgf-m	lb-ft	
Clutch fluid hose bracket nut	10	1.0	7.5	🔧
Clutch master cylinder attaching nut	23	2.3	17.0	🔧
Clutch operating cylinder assembly mounting bolt	10	1.0	7.5	🔧
Clutch fluid pipe flare nut	16	1.6	11.5	🔧
Flywheel bolt	68.5	6.9	49.5	🔧
Clutch cover bolt	23	2.3	17.0	🔧

NOTE

The specified tightening torque is also described in the following.
“Clutch Cover, Clutch Disc and Flywheel Components”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Special Tools and Equipment






Recommended Service Material

S6JB0B5308001

Material	SUZUKI recommended product or Specification		Note
Grease	SUZUKI Silicone Grease	P/No.: 99000-25100	🔧
	SUZUKI Super Grease I	P/No.: 99000-25210	🔧

Special Tool

S6JB0B5308002

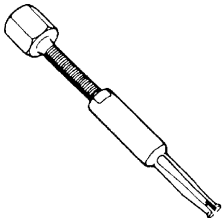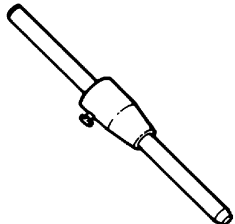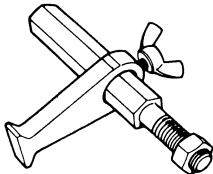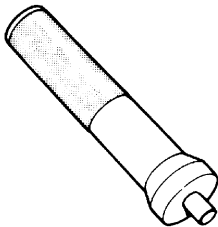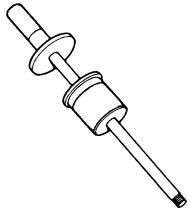09921-26020 Bearing remover 	09923-36320 Clutch center guide (15 mm) 
09924-17811 Flywheel holder 	09925-98210 Input shaft bearing installer 
09930-30104 Sliding shaft 	

Steering

Precautions	6B-1	Ignition Switch Cylinder Assembly Removal and Installation (Without Keyless Start System)	6B-11
Precautions	6B-1	Steering Lock Assembly (Ignition Switch) Removal and Installation	6B-12
Precautions for Steering	6B-1	Adjustable Steering Column Release Lever Inspection	6B-12
Steering General Diagnosis	6A-1	Steering Upper Shaft Assembly Removal and Installation	6B-13
Diagnostic Information and Procedures	6A-1	Steering Upper Shaft Assembly Inspection	6B-14
Steering Symptom Diagnosis	6A-1	Steering Lower Shaft Assembly Removal and Installation	6B-14
Steering Wheel and Column	6B-1	Specifications	6B-15
Precautions	6B-1	Tightening Torque Specifications	6B-15
Service Precautions of Air Bag Steering Wheel and Column	6B-1	Special Tools and Equipment	6B-15
Precautions on Handling and Storage of Air Bag Steering Wheel and Column	6B-1	Special Tool	6B-15
Precautions on Disposal of Air Bag Steering Wheel and Column	6B-1	Power Assisted Steering System	6C-1
Service Precautions of Steering Angle Sensor (ESP® Model)	6B-1	Precautions	6C-1
General Description	6B-1	P/S System Note	6C-1
Steering Wheel and Column Construction	6B-1	General Description	6C-1
Diagnostic Information and Procedures	6B-3	P/S System Construction	6C-1
Air Bag Steering Wheel and Column Symptom Diagnosis	6B-3	Steering Gear Case Construction	6C-2
Air Bag Steering Wheel and Column Inspection and Repair Required after Accident	6B-3	P/S Pump Construction	6C-2
Diagnosis and Servicing of Air Bag Steering Wheel and Column	6B-3	Schematic and Routing Diagram	6C-3
Repair Instructions	6B-3	P/S Fluid Flow Diagram	6C-3
Checking Steering Column for Accident Damage	6B-3	Diagnostic Information and Procedures	6C-4
Steering Wheel Removal and Installation	6B-4	P/S System Symptom Diagnosis	6C-4
Contact Coil Cable Assembly Removal and Installation	6B-5	Steering Wheel Check	6C-5
Contact Coil Cable Assembly Inspection	6B-7	Steering Force Check	6C-5
Centering Contact Coil Cable Assembly	6B-7	Steering Wheel Recovery Check	6C-6
Steering Angle Sensor Removal and Installation (ESP® Model)	6B-7	Idle Up System Check	6C-6
Steering Angle Sensor Inspection (ESP® Model)	6B-8	Hydraulic Pressure in P/S Circuit Check	6C-6
Steering Column Assembly Removal and Installation	6B-8	Repair Instructions	6C-8
Steering Column Assembly Inspection	6B-11	P/S Fluid Change	6C-8
		P/S Fluid Level Check	6C-8
		P/S Fluid Leakage Check	6C-9
		P/S System Air Bleeding Procedure	6C-9
		P/S Pump and A/C Compressor (If Equipped) Drive Belt Inspection and Adjustment	6C-10
		P/S Pump and A/C Compressor (If Equipped) Drive Belt Removal and Installation	6C-10
		Steering Rack Boot Check	6C-11
		Tie-Rod End Boot Check	6C-11

6-ii Table of Contents

Tie-Rod End Removal and Installation.....	6C-11	P/S Pump Removal and Installation.....	6C-19
Tie-Rod End Ball Joint Inspection.....	6C-12	P/S Pump Components.....	6C-20
P/S Gear Case Assembly Components.....	6C-13	P/S Pump Disassembly and Assembly	6C-20
P/S Gear Case Assembly Removal and Installation	6C-14	P/S Pump Inspection.....	6C-23
Steering Gear Case Mount Bushing Removal and Installation	6C-16	Specifications	6C-24
Steering Gear Case Mount Bushing Inspection.....	6C-16	Tightening Torque Specifications.....	6C-24
Rack Boot / Tie-Rod Removal and Installation ..	6C-16	Special Tools and Equipment	6C-25
P/S Hose / Pipe Components	6C-18	Recommended Service Material	6C-25
		Special Tool	6C-25

Precautions

Precautions

Precautions for Steering

S6JB0B6000001

Air Bag Warning

Refer to "Air Bag Warning in Section 00".

Fastener Caution

Refer to "Fastener Caution in Section 00".

Service Precautions of Air Bag Steering Wheel and Column

Refer to "Service Precautions of Air Bag Steering Wheel and Column in Section 6B".

Handling and Storage of Air Bag Steering Wheel and Column

Refer to "Precautions on Handling and Storage of Air Bag Steering Wheel and Column in Section 6B".

Disposal of Air Bag Steering Wheel and Column

Refer to "Precautions on Disposal of Air Bag Steering Wheel and Column in Section 6B".

Steering General Diagnosis

Diagnostic Information and Procedures

Steering Symptom Diagnosis

S6JB0B6104001

Since the problems in steering involve several systems, they must all be considered when diagnosing a complaint. To avoid using the wrong symptom, always road test the vehicle first.

Proceed with the following preliminary inspections and correct any defects which are found.

- 1) Inspect tires for proper pressure and uneven wear.
- 2) Raise vehicle on a hoist and inspect steering system for loose or damaged parts.
- 3) Spin front wheels. Inspect for out-of-round tires, out-of-balance tires, bent rims, loosen and/or rough wheel bearings.

Condition	Possible cause	Correction / Reference Item
Hard steering	Bind in tie rod end ball studs or lower ball joints	Replace tie rod end or front suspension control arm.
	Disturbed front end alignment	Check front end alignment.
	Tire not adequately inflated	Inflate tires to proper pressure.
	Bind in steering column	Repair or replace.
	Low fluid level, loose drive belt or malfunction of power steering system	Check and correct. Refer to "P/S System Symptom Diagnosis in Section 6C".
Too much play in steering	Wheel bearings worn	Replace wheel bearing.
	Loose steering gear case bolts	Tighten.
	Faulty steering gear case	Replace steering gear case assembly.
	Worn steering shaft joints	Replace joint.
	Worn tie rod ends or tie rod inside ball joints	Replace tie rod end or steering gear case.
Poor return ability	Worn lower ball joints	Replace front suspension control arm.
	Bind in tie rod end ball studs	Replace tie rod end.
	Bind in ball joints	Replace ball joint.
	Bind in steering column	Repair or replace.
	Disturbed front end alignment	Check and adjust front end alignment.
	Malfunction of power steering system	Check and correct. Refer to "P/S System Symptom Diagnosis in Section 6C".
Steering noise (rattle or chuckle)	Tires not adequately inflated	Adjust pressure.
	Loose bolts and nuts	Retighten.
	Broken or otherwise damaged wheel bearings	Replace.
	Worn or sticky tie rod ends	Replace.
	Malfunction of power steering system	Check and correct. Refer to "P/S System Symptom Diagnosis in Section 6C".
Wander or poor steering stability	Mismatched or uneven tires	Replace tire or inflate tires to proper pressure.
	Loose ball joints and tie rod ends	Replace suspension control arm or tie rod end.
	Faulty shock absorbers / struts or mounting	Replace absorber / strut or repair mounting.
	Loose stabilizer bar	Tighten or replace stabilizer bar or bushes.
	Broken or sagging springs	Replace spring.
	Faulty steering gear case	Replace steering gear case assembly.
	Front end alignment	Check front end alignment.
Erratic steering when braking	Worn wheel bearings	Replace wheel bearing.
	Broken or sagging springs	Replace spring.
	Leaking wheel cylinder or caliper	Repair or replace wheel cylinder or caliper.
	Warped discs	Replace brake disc.
	Badly worn brake linings	Replace brake shoe lining.
	Drum is out of round in some brakes	Replace brake drum.
	Wheel tires are inflated unequally	Inflate tires to proper pressure.
	Defective wheel cylinders	Replace or repair wheel cylinder.
	Disturbed front end alignment	Check front end alignment.

Steering Wheel and Column

Precautions

Service Precautions of Air Bag Steering Wheel and Column

S6JB0B6200001

For service precautions, refer to “Precautions on Service and Diagnosis of Air Bag System in Section 8B”.

Precautions on Handling and Storage of Air Bag Steering Wheel and Column

S6JB0B6200002

For handling and storage, refer to “Precautions on Handling and Storage of Air Bag System Components in Section 8B”.

Precautions on Disposal of Air Bag Steering Wheel and Column

S6JB0B6200003

For disposal, refer to “Precautions on Disposal of Air Bag and Seat Belt Pretensioner in Section 8B”.

Service Precautions of Steering Angle Sensor (ESP® Model)

S6JB0B6200004

For service precautions, refer to “Precautions in Sensor Calibration in Section 4F”.

General Description

Steering Wheel and Column Construction

S6JB0B6201001


This double tube type steering column has the following three important features in addition to the steering function:

- The column is energy absorbing, designed to compress in a front-end collision.
- The ignition switch and lock are mounted conveniently on this column.
- With the column mounted lock, the ignition and steering operations can be locked to inhibit theft of the vehicle.

To insure the energy absorbing action, it is important that only the specified screws, bolts and nuts be used as designated, and that they are tightened to the specified torque. When the column assembly (6) is removed from the vehicle, special care must be taken in handling it. Use of a steering wheel puller or a sharp blow on the end of the steering shaft, leaning on the assembly, or dropping the assembly could shear the plastic shear pins which maintain column length and position.

The driver air bag (inflator) module is one of the supplemental restraint (air bag) system components and is mounted to the center of the steering wheel (1). During certain frontal crashes, the air bag system supplements the restraint of the driver's and passenger's seat belts by deploying the air bags. The air bag (inflator) module should be handled with care to prevent accidental deployment. When servicing, be sure to observe “Precautions on Service and Diagnosis of Air Bag System in Section 8B”.

6B-2 Steering Wheel and Column:

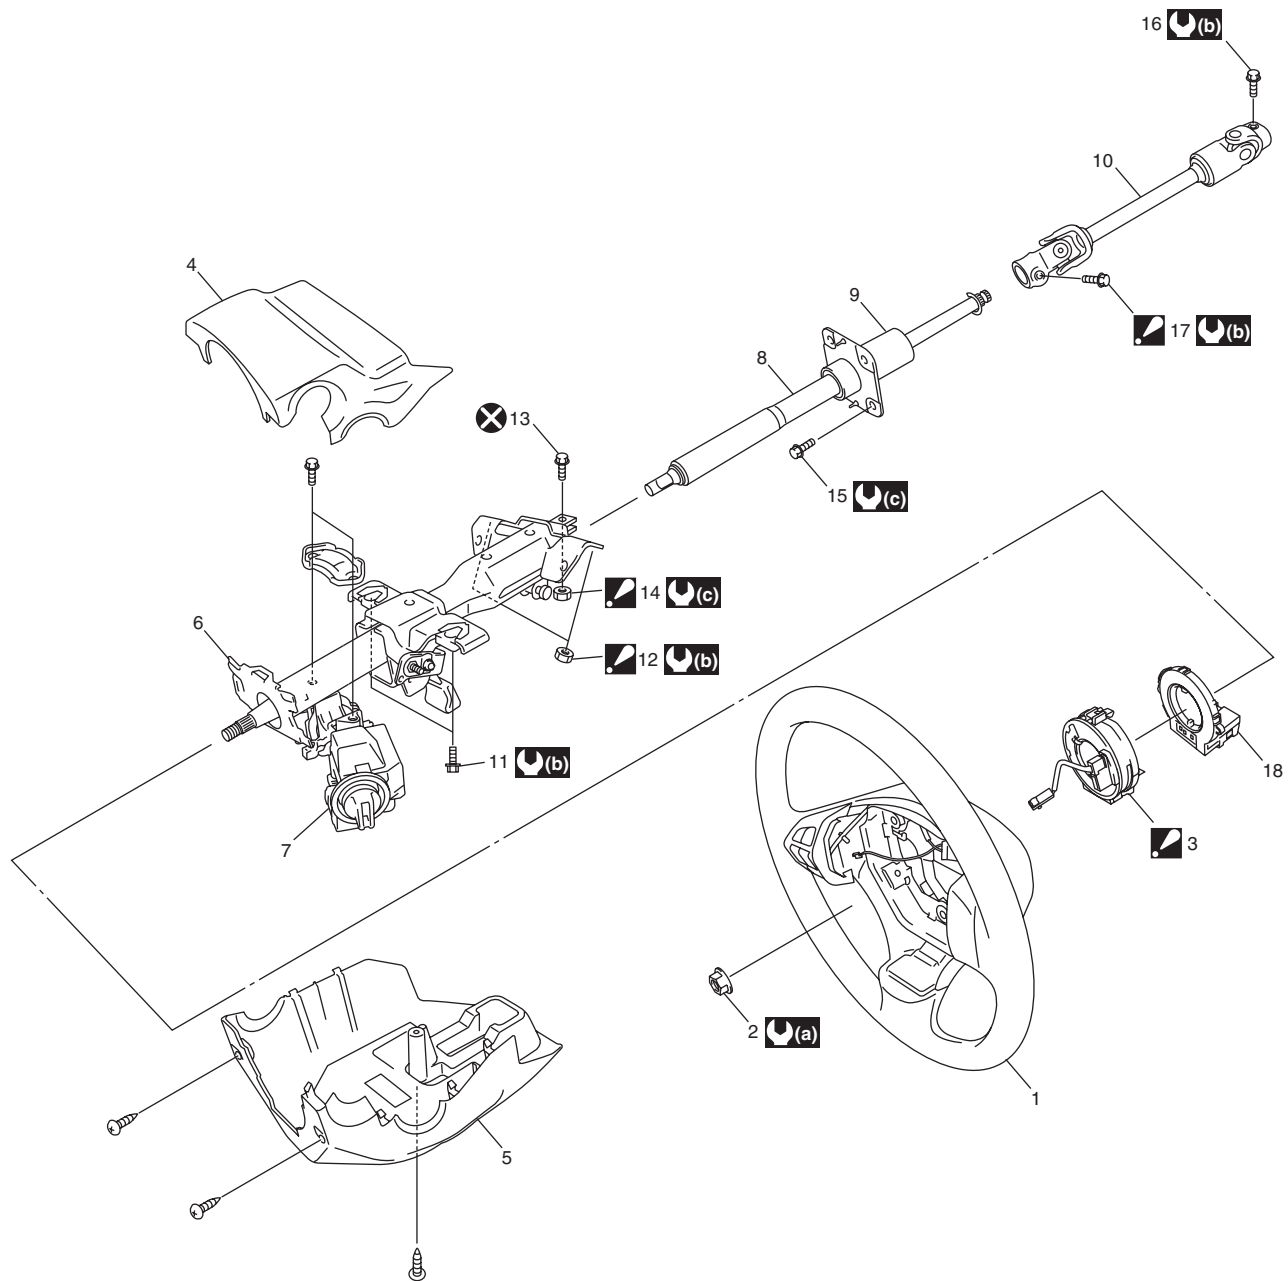

I6JB0B620001-01

1. Steering wheel	9. Steering column lower seal	17. Steering lower shaft assembly upper joint bolt : After tightening all mounting bolts and nuts and all joint bolts and nuts, tighten lower shaft lower joint bolt.
2. Steering shaft nut	10. Steering lower shaft assembly	18. Steering angle sensor (ESP® model)
3. Contact coil cable assembly : Fit lower fitting part first and then fit upper fitting part.	11. Steering column assembly mounting bolt	(a) : 33 N·m (3.3 kgf·m, 24.0 lb·ft)
4. Steering column upper cover	12. Steering column assembly mounting nut : After tightening column mounting nut, tighten column mounting bolt.	(b) : 25 N·m (2.5 kgf·m, 18.0 lb·ft)
5. Steering column lower cover	13. Steering upper shaft assembly upper joint bolt	(c) : 23 N·m (2.3 kgf·m, 17.0 lb·ft)
6. Steering column assembly	14. Steering upper shaft assembly upper joint nut : After tightening upper shaft mounting bolts, tighten upper shaft joint nut.	⊗ : Do not reuse.
7. Steering lock assembly	15. Steering upper shaft mounting bolt	
8. Steering upper shaft assembly	16. Steering lower shaft assembly lower joint bolt	

Diagnostic Information and Procedures

Air Bag Steering Wheel and Column Symptom Diagnosis

S6JB0B6204001

For diagnosis of the steering wheel and steering column, refer to "Steering Symptom Diagnosis in Section 6A".
For diagnosis of the air bag system, refer to "Air Bag Diagnostic System Check in Section 8B".

Air Bag Steering Wheel and Column Inspection and Repair Required after Accident

S6JB0B6204002

After accident, whether the air bag has been deployed or not, be sure to checks, inspections and repairs described under "Checking Steering Column for Accident Damage" as well as "Repair and Inspection Required after Accident in Section 8B".

Diagnosis and Servicing of Air Bag Steering Wheel and Column

S6JB0B6204003

For diagnosis and servicing, refer to "Precautions on Service and Diagnosis of Air Bag System in Section 8B".

Repair Instructions


Checking Steering Column for Accident Damage

S6JB0B6206001

NOTE

Vehicles involved in accidents resulting in body damage, where steering column has been impacted or air bag deployed, may have a damaged or misaligned steering column.

- Check that 2 capsules (1) are attached to steering column bracket (2) securely. Check clearance between capsules and steering column bracket. Clearance should be 0 mm (0 in.) on both sides. If found loose or clearance, replace steering column assembly.

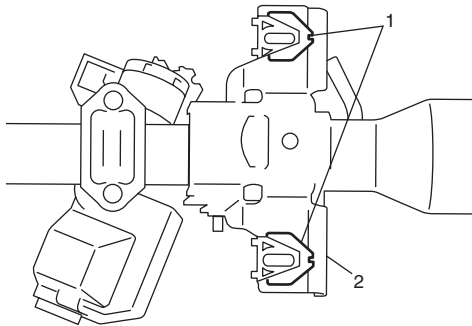



I5JB0A620002-01

- Check two rivets (1) of steering column assembly for loose, crack and breakage. If found loose, crack and breakage, replace steering column assembly with new one.
- Take measurement "a" and "b" as shown in the figure. If it is shorter than specified length, replace column assembly with a new one.

Steering column assembly length

"a": 471.0 ± 1.0 mm (18.54 ± 0.04 in.)


"b": 423.9 ± 1.0 mm (16.69 ± 0.04 in.)

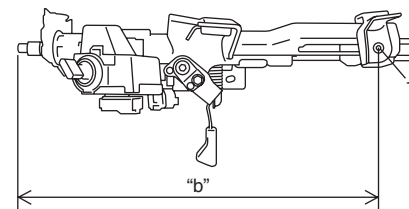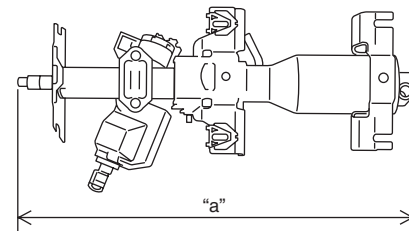


I5JB0A620003-02

6B-4 Steering Wheel and Column:

- Check steering shaft for smooth rotation.
If found defective, replace as column assembly.
- Check steering shaft and column for bend, cracks or deformation.
If found defective, replace as column assembly.
- Check steering upper shaft lower seal for breakage or deformation.
If found defective, replace.
- Check steering shaft joints and shaft for any damages such as crack, breakage, malfunction or excessive play.
If anything is found faulty, replace steering upper shaft assembly, steering lower shaft assembly or steering column assembly.
- Check steering upper shaft assembly for following conditions.
 - Steering upper shaft assembly (1) is not bent or damaged.
 - Lower seal (2) is not damaged.
 - Upper joint (3) turns with light hand force and lower joint (4) turns at the same time.

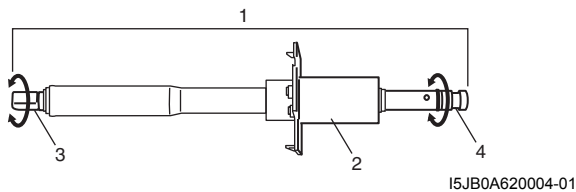

- Shaft (1) expands and contracts easily with light force.

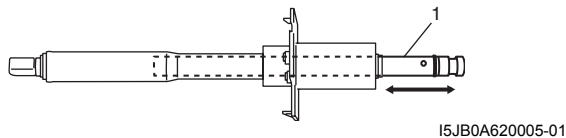


- When shaft is made to contract with light force until it stops, its length “a” is longer than specified value.

⚠ CAUTION


Do not apply excessive force to shaft when making it contract. Its internal plug may be damaged.

Steering upper shaft assembly length “a”: 363.0 mm (14.29 in.)

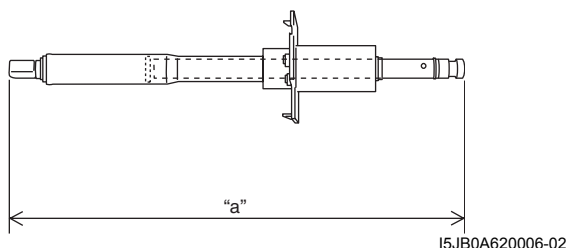

NOTE

If shaft has come off in sleeve due to an accident or some other reason as shown in figure, its internal plug has come off or been damaged. The same applies when length of steering upper shaft assembly is short. When anything faulty is noted in above check, replace steering upper shaft assembly with a new one.

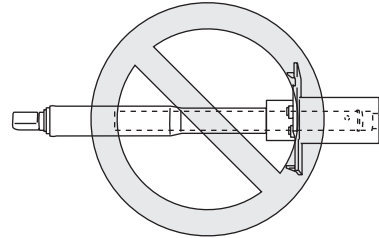

Steering Wheel Removal and Installation


S6JB0B6206002

⚠ CAUTION

Removal of the steering wheel allows the contact coil cable assembly to turn freely but do not turn the contact coil cable assembly more than allowable number of turns (about two and a half turns from the center position clockwise or counterclockwise respectively), or coil will break.

Removal

- 1) Remove driver air bag (inflator) module from steering wheel referring to “Driver Air Bag (Inflator) Module Removal and Installation in Section 8B”.
- 2) Disconnect horn connector and audio control switch connector, if equipped.
- 3) Remove steering shaft nut.
- 4) Make alignment marks (1) on steering wheel and shaft for a guide during reinstallation.

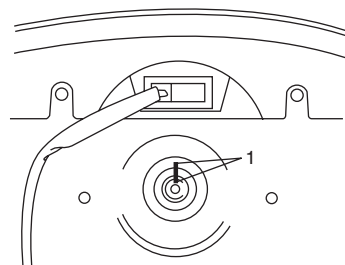


- 5) Remove steering wheel (1) with special tool.

⚠ CAUTION

Do not hammer the end of the shaft. Hammering it will loosen the plastic shear pins which maintain the column length and impair the collapsible design of the column.

Special tool

(A): 09944-36011

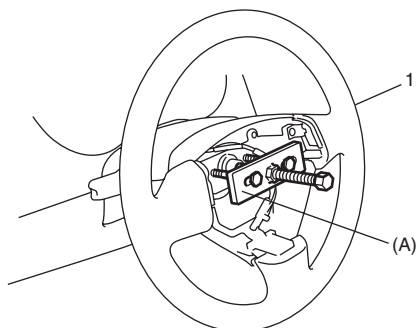

I5JB0A620009-01

Installation

- 1) Check that vehicle's front tires are at straight-ahead position and contact coil cable assembly is centered. Refer to "Centering Contact Coil Cable Assembly".

⚠ CAUTION


These two conditions are prerequisite for installation of steering wheel. If steering wheel has been installed without these conditions, contact coil cable assembly will break when steering wheel is turned.

- 2) Install steering wheel (1) to steering shaft with 2 lugs (2) on contact coil cable assembly fitted in two grooves (3) in the back of steering wheel and also aligning marks (4) on steering wheel and steering shaft.

- 3) Tighten steering shaft nut to specified torque.

Tightening torque

Steering shaft nut: 33 N·m (3.3 kgf-m, 24.0 lb-ft)

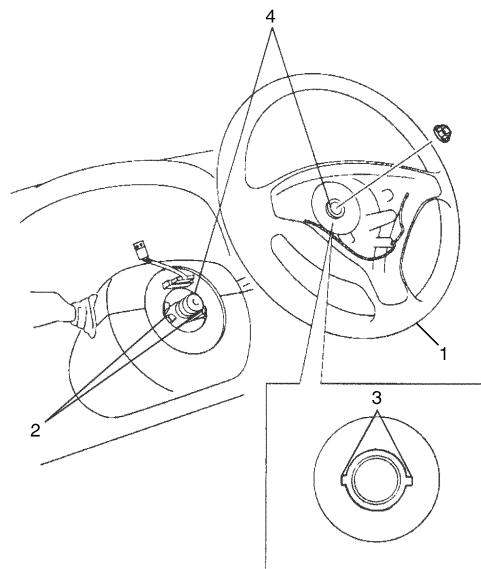

I5JB0A620010-01

- 4) Connect horn connector and audio control switch connector, if necessary.
5) Install driver air bag (inflator) module to steering wheel. Refer to "Driver Air Bag (Inflator) Module Removal and Installation in Section 8B".

Contact Coil Cable Assembly Removal and Installation


S6JB0B6206003

⚠ CAUTION

Do not turn contact coil cable assembly more than allowable number of turns (about two and a half turns from the center position clockwise or counterclockwise respectively), or coil will break.

Removal


- 1) Remove steering wheel from steering column. Refer to "Steering Wheel Removal and Installation".
2) Remove steering column hole cover (1).

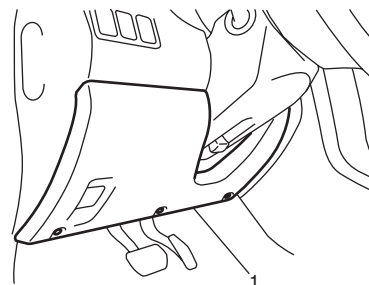

I5JB0A620011-01


6B-6 Steering Wheel and Column:

- 3) Remove steering column cover screws (1) (3 pieces).
- 4) Separate upper cover (2) and lower cover (3), then remove them.

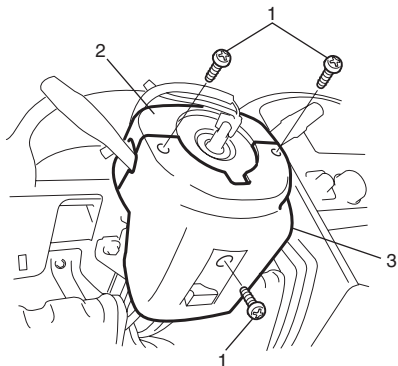

I5JB0A620012-01

- 5) Disconnect all connectors for contact coil cable assembly.
- 6) Remove contact coil cable assembly (1) with steering angle sensor (ESP® model) from steering column.

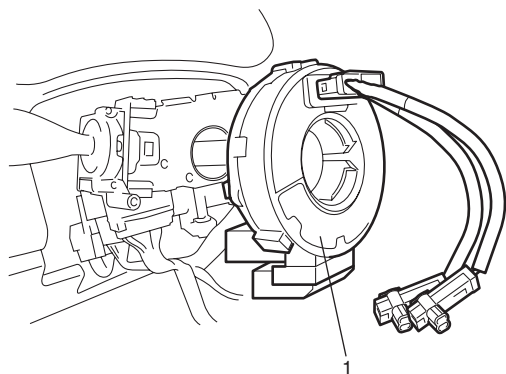

I6JB01620002-01


- 7) (ESP® model)
Separate steering angle sensor from contact coil cable assembly referring to "Steering Angle Sensor Removal and Installation (ESP® Model)".

Installation

- 1) Check to make sure that vehicle's front tires are set at straight-ahead position and then ignition switch is at "LOCK" position.
- 2) (ESP® model)
Install steering angle sensor to contact coil cable assembly refer to "Steering Angle Sensor Removal and Installation (ESP® Model)".
- 3) Install contact coil cable assembly to steering column noting the following.
 - Fit lower fitting part first and then fit upper fitting part.

NOTE

New contact coil cable assembly is supplied with contact coil cable assembly set and held at its center position with a lock pin (1). Remove this lock pin after installing contact coil cable assembly to steering column.

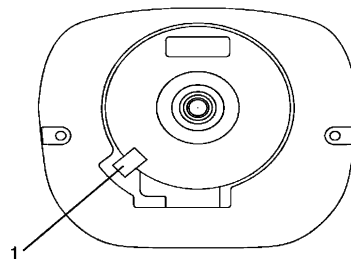


I5JB0A620014-01

- 4) Connect all connectors that have been removed in "Removal".
- 5) Install steering column upper cover (2) and lower cover (3), and then tighten steering column cover screws (1).

⚠ CAUTION

When installing lower cover (3) and upper cover (2), be careful so that each lead wire is not caught between covers.

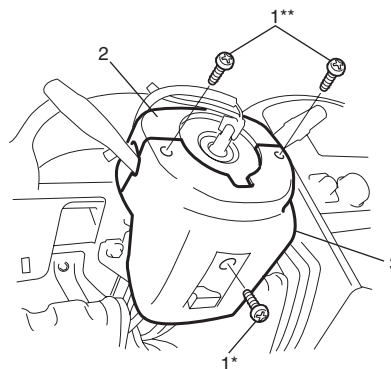


I5JB0A620015-01

*: Standard screw

**: Tapping screw

- 6) Install steering column hole cover (1).

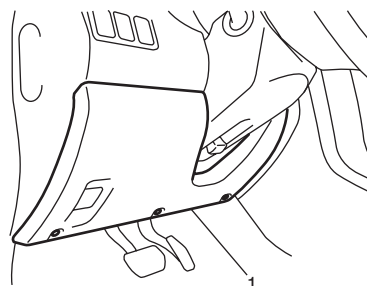

I5JB0A620011-01

- 7) Install steering wheel to steering column. Refer to "Steering Wheel Removal and Installation".


Contact Coil Cable Assembly Inspection

S6JB0B6206004

⚠ CAUTION

Do not turn contact coil cable assembly more than allowable number of turns (about two and a half turns from the center position clockwise or counterclockwise respectively), or coil will break.

Check contact coil cable assembly (1) wire harness for any signs of scorching, melting or other damage. If it is damaged, replace.

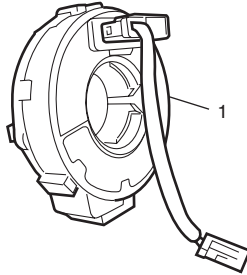

I5JB0A620016-01

Centering Contact Coil Cable Assembly

S6JB0B6206005

⚠ CAUTION



Removal of the steering wheel allows the contact coil cable assembly to turn freely but do not turn the contact coil cable assembly more than allowable number of turns (about two and a half turns from the center position clockwise or counterclockwise respectively), or coil will break.

- 1) Check that vehicle's wheels (front tires) are set at straight-ahead position.
- 2) Check that ignition switch is at LOCK position.
- 3) Turn contact coil cable assembly (2) counterclockwise slowly with a light force till contact coil cable assembly will not turn any further.

NOTE

Contact coil cable assembly can turn about 5 turns at maximum, that is, if it is at the center position, can turn about two and a half turns both clockwise and counterclockwise.

- 4) From the position where contact coil cable assembly (2) became unable to turn any further (it stopped), turn it back clockwise about two and a half rotations and align center mark with alignment mark (1).

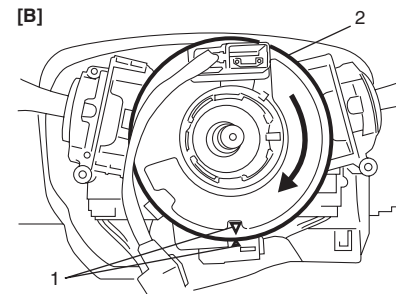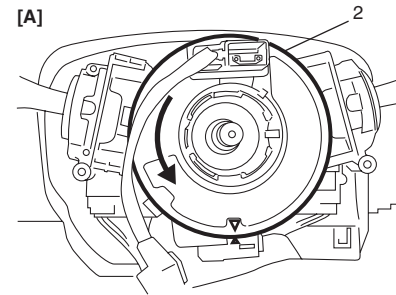

I5JB0A620017-03

[A]: Turn slowly till coil stops


[B]: Turn contact coil cable assembly back about 2 and a half turns

Steering Angle Sensor Removal and Installation (ESP® Model)

S6JB0B6206014

Removal


- 1) Remove steering wheel and contact cable assembly. Refer to "Steering Wheel Removal and Installation" and "Contact Coil Cable Assembly Removal and Installation".
- 2) Remove steering angle sensor (2) from contact coil cable assembly (3) while opening fitting parts (1) of contact coil cable assembly.

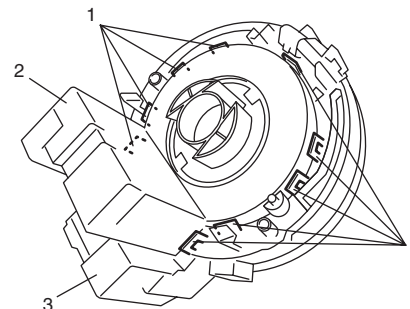

I6JB01620003-01

Installation

- 1) Install steering angle sensor (2) by fitting engagement parts (1) of contact coil cable assembly to claws of steering angle sensor as shown in figure.

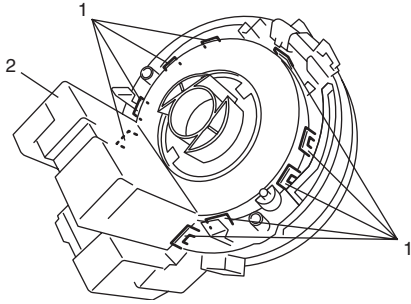

I6JB01620004-01

- 2) Install contact coil cable assembly and steering wheel. Refer to "Contact Coil Cable Assembly Removal and Installation" and "Steering Wheel Removal and Installation".

Steering Angle Sensor Inspection (ESP® Model)

S6JB0B6206015

Refer to "Steering Angle Sensor Inspection in Section 4F".

Steering Column Assembly Removal and Installation

S6JB0B6206006

⚠ CAUTION

Once the steering column assembly is removed from the vehicle, the column is extremely susceptible to damage. Dropping the column assembly on its end could collapse the steering shaft or loosen the plastic shear pins which maintain column length leaning on the column assembly could cause it to bend or deform.

Any of the above damage could impair the column's collapsible design.

When loosening steering column mounting bolts and nuts, make sure that steering column assembly and steering upper shaft assembly have been separated. Loosening them with steering column assembly and steering upper shaft assembly assembled could cause damage to upper joint and mounting bracket in steering upper shaft assembly.

Removal


⚠ WARNING

Never rest a steering column assembly on the steering wheel with air bag (inflator) module face down and column vertical. Otherwise personal injury may result.

⚠ CAUTION

Never turn steering wheel while steering column with steering wheel is removed. Turning steering wheel more than about two and a half turns will break contact coil cable assembly.


- 1) Disconnect negative (–) cable at battery.
- 2) Disable air bag system referring to "Disabling Air Bag System in Section 8B".
- 3) Remove steering wheel and contact coil cable assembly. Refer to "Steering Wheel Removal and Installation" and "Contact Coil Cable Assembly Removal and Installation".
- 4) Remove instrument panel under cover (1) from instrument panel.

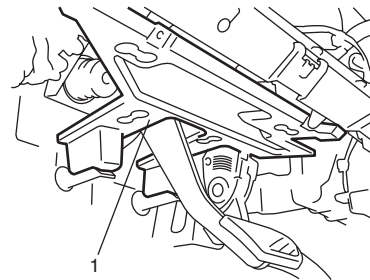

I5JB0A620018-01


- 5) (Immobilizer model)
Remove immobilizer control module (ICM) referring to "Immobilizer Control Module (ICM) Removal and Installation in Section 10C". (if equipped)
- 6) Remove lighting switch referring to "Headlight Switch (in Lighting Switch) Removal and Installation in Section 9B".
- 7) Remove washer switch referring to "Windshield Wiper and Washer Switch Removal and Installation in Section 9D".

- 8) Disconnect connector from steering lock assembly.
- 9) For A/T vehicle, disconnect shift (key) interlock cable (1) from ignition switch with ignition switch turned at ACC position.
After disconnecting, turn ignition switch to LOCK position.

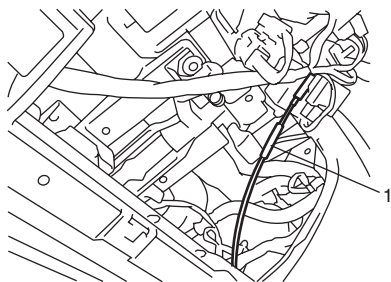

I5JB0A620019-01

- 10) Remove steering upper shaft upper joint bolt (1) and nut (2).

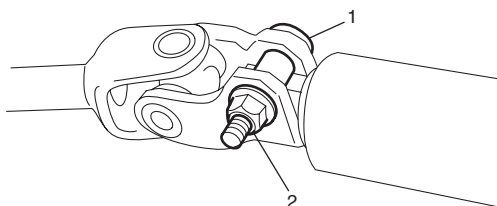


I5JB0A620020-01

- 11) Remove column support bracket. (if equipped)
- 12) Remove steering column assembly (1) mounting bolts (2) and nuts (3).

NOTE

Tilt lever should not be moved before mounting bolts and nuts are tighten completely.

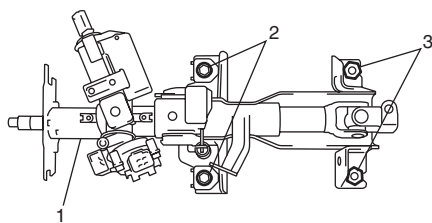

I5JB0A620021-01


- 13) Remove steering column assembly from vehicle.

Installation

⚠ CAUTION

After tightening steering column assembly mounting bolts and nuts, steering shaft joint bolts should be tightened.

- 1) Be sure that front wheels and steering wheel are in straight-ahead position.
- 2) Align flat part "A" of steering upper shaft upper joint (1) with bolt hole "B" of steering column assembly (2) as shown in the figure. Then connect steering upper shaft upper joint.

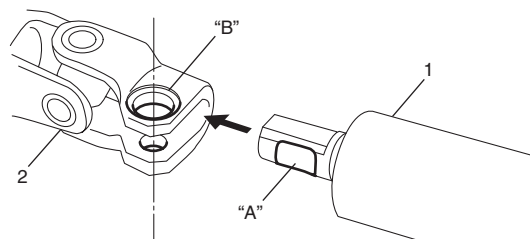


I5JB0A620022-01

- 3) Install steering column assembly (1) with contacting upper side of lower bracket slits to mounting bolts. Tighten steering column upper mounting nuts (3) first and then lower mounting bolts (2) to specified torque.

Tightening torque

Steering column assembly mounting bolt and nut (a): 25 N·m (2.5 kgf-m, 18.0 lb-ft)

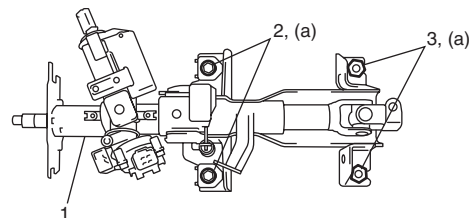

I5JB0A620023-01

6B-10 Steering Wheel and Column:

- 4) Install column support bracket. (if equipped)
- 5) Install new steering upper shaft upper joint bolt (2) and nut (1). Tighten new steering upper shaft upper joint nut (1) to specified torque.


NOTE

Do not reuse steering upper shaft upper joint bolt and nut.

Be sure to use new bolt and nut when installing.


Tightening torque

Steering upper shaft assembly upper joint nut (a): 23 N·m (2.3 kgf-m, 17.0 lb-ft)

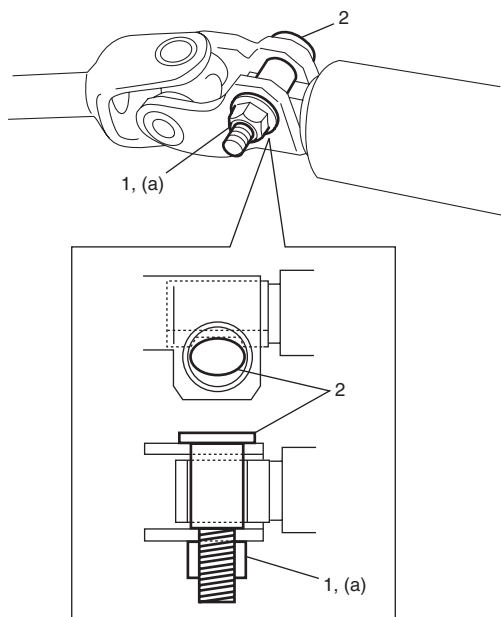


I5JB0A620024-01

- 6) For A/T vehicle, connect shift (key) interlock cable (1) to ignition switch with ignition switch turned at ACC position. And then turn ignition switch LOCK position.

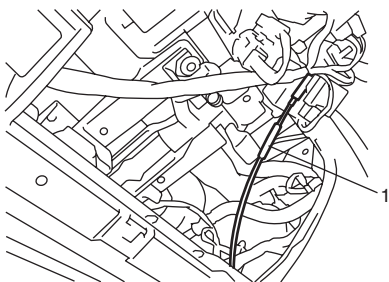


I5JB0A620019-01

- 7) Connect steering lock assembly connector.
- 8) Install washer switch referring to "Windshield Wiper and Washer Switch Removal and Installation in Section 9D".
- 9) Install lighting switch referring to "Headlight Switch (in Lighting Switch) Removal and Installation in Section 9B".
- 10) (Immobilizer model)
Install immobilizer control module (ICM) referring to "Immobilizer Control Module (ICM) Removal and Installation in Section 10C". (if equipped)
- 11) Install instrument panel under cover (1) to instrument panel.

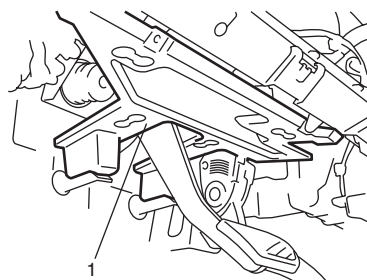

I5JB0A620018-01

- 12) Install steering column hole cover (1).

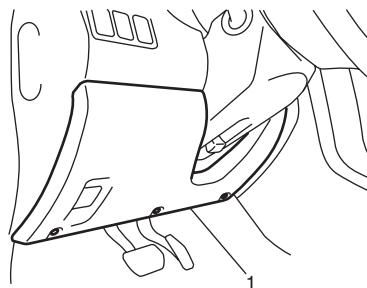

I5JB0A620011-01

- 13) Install steering wheel and contact coil cable assembly by referring to "Steering Wheel Removal and Installation" and "Contact Coil Cable Assembly Removal and Installation".
- 14) Connect negative (-) cable to battery.
- 15) After installing steering column assembly, be sure to enable air bag system by referring to "Enabling Air Bag System in Section 8B".

Steering Column Assembly Inspection

S6JB0B6206007


Check steering column for damage and operation referring to "Checking Steering Column for Accident Damage".

Ignition Switch Cylinder Assembly Removal and Installation (Without Keyless Start System)

S6JB0B6206008

Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Disable air bag system referring to "Disabling Air Bag System in Section 8B".
- 3) Remove steering column upper and lower covers.
- 4) (Immobilizer model)
Remove immobilizer control module referring to "Immobilizer Control Module (ICM) Removal and Installation in Section 10C". (if equipped)
- 5) Remove ignition switch cylinder assembly as follows.
 - a) Turn ignition key to "ACC" position.
 - b) Insert 2 mm (0.078 in.) rod (2) through hole (3) and push ignition switch cylinder lock.
 - c) Detach ignition switch cylinder assembly (1) from steering lock assembly (4).

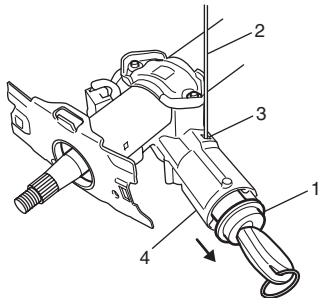


I5JB0A620025-01

Installation

- 1) Install ignition switch cylinder assembly as follows.
 - a) Turn ignition key to "ACC" position.
 - b) In this state, push ignition switch cylinder assembly into steering lock assembly till it clicks.
- 2) (Immobilizer model)
Install immobilizer control module (ICM) referring to "Immobilizer Control Module (ICM) Removal and Installation in Section 10C".
- 3) Install upper and lower cover and screws (1).

⚠ CAUTION

When installing covers, be careful so that each lead wire is not caught between covers.

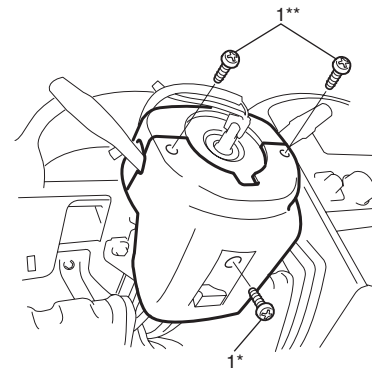

I5JB0A620026-01

*: Standard screw

**: Tapping screw

- 4) Enabling air bag system referring to "Disabling Air Bag System in Section 8B".
- 5) (Immobilizer model)
If ignition switch cylinder assembly (that is ignition key) has replaced, register ignition key transponder code to ECM referring to "Registration of the Ignition Key in Section 10C".

Steering Lock Assembly (Ignition Switch) Removal and Installation

S6JB0B6206009


Removal

- 1) Remove steering column assembly. Refer to "Steering Column Assembly Removal and Installation".
- 2) Using center punch (with sharp point) (1) as shown in the figure, loosen and remove steering lock mounting bolts (2).

NOTE

Use care not to damage aluminum part of steering lock body (3) with center punch (1).


- 3) Turn ignition key to ACC or ON position and remove steering lock assembly (3) from steering column assembly (4).

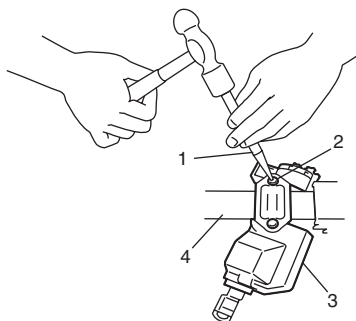

I5JB0A620027-01

Installation


- 1) Position oblong hole of steering shaft (2) in the center of hole in steering column assembly (1).

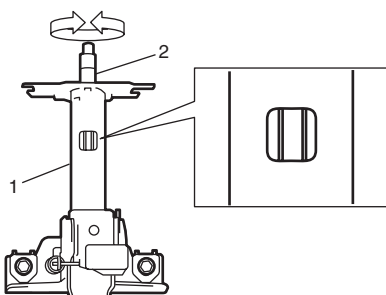

I5JB0A620028-01

- 2) Turn ignition key to ACC or ON position and install steering lock assembly onto column.
- 3) Now turn ignition key to LOCK position and pull it out.
- 4) Align hub on lock with oblong hole of steering shaft and rotate shaft to assure that steering shaft is locked.

- 5) Tighten new bolts until head of each bolt is broken off.

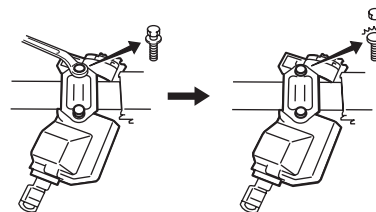

I5JB0A620029-01

- 6) Turn ignition key to ACC or ON position and check to be sure that steering shaft rotates smoothly. Also check for lock operation.

- 7) Install steering column. Refer to "Steering Column Assembly Removal and Installation".

- 8) (Keyless start model)

If steering lock assembly has replaced, after completing installation, register steering lock unit ID code to keyless start control module as following.


- Immobilizer model:
Register ignition key transponder code in ECM referring to "Registration of the Ignition Key in Section 10C".
- Non immobilizer model:
Register steering lock unit ID code in keyless start control module referring to "Keyless Start Registration in Section 10E".

Adjustable Steering Column Release Lever Inspection

S6JB0B6206010

Check to make sure that the followings:

- Steering column (1) moves smoothly when adjustable steering column release lever is at upper position (2) (i.e., steering column is not locked).
- Steering column (1) is fixed securely when adjustable steering column release lever is at lower position (3) (i.e., steering column is locked).

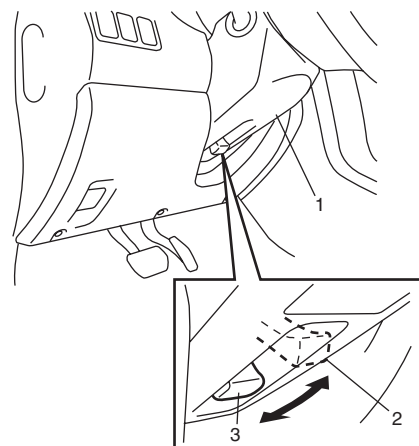

I5JB0A620030-01

Steering Upper Shaft Assembly Removal and Installation


S6JB0B6206011

⚠ CAUTION

Never turn steering wheel while steering upper shaft assembly is removed. Should it have been turned and contact coil cable assembly have got out of its centered position, it needs to be centered again. Also, turning steering wheel more than about two and a half turns will break contact coil cable assembly.


Removal

- 1) Turn steering wheel so that vehicle's front tires are at straight-ahead position.
- 2) Turn ignition switch to LOCK position and remove key.
- 3) Remove steering column assembly from vehicle referring to "Steering Column Assembly Removal and Installation".
- 4) Make alignment marks (3) on steering upper shaft (2) and steering lower shaft (1) for a guide during reinstallation.

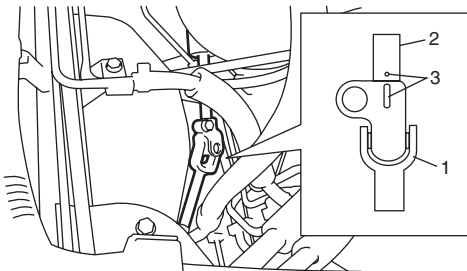


I5JB0A620031-01

- 5) Remove joint bolt (1) and disconnect upper shaft (3) from lower shaft (2).

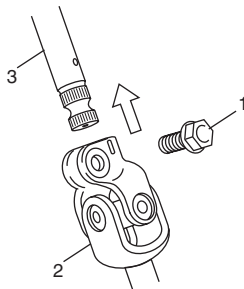

I5JB0A620032-01

- 6) Remove steering upper shaft mounting bolts (1) (4 pieces).

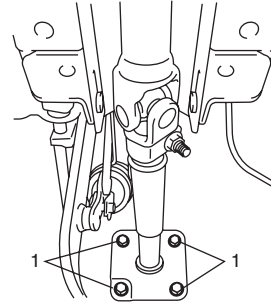

I5JB0A620033-01


- 7) Remove steering upper shaft assembly from vehicle.

Installation

- 1) Be sure that front tires and steering wheel are in straight-ahead position.
- 2) Install steering upper shaft assembly to dash panel. Tighten steering upper shaft mounting bolts (1) to specified torque.

Tightening torque

Steering upper shaft assembly mounting bolt (a): 23 N·m (2.3 kgf-m, 17.0 lb-ft)

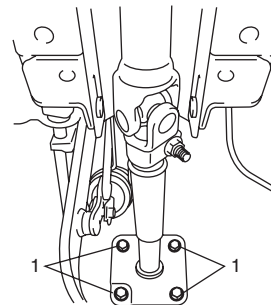


I5JB0A620033-01

- 3) Install steering column assembly to vehicle referring to "Steering Column Assembly Removal and Installation".
- 4) Install steering upper shaft (1) to steering lower shaft (2) by matching it to marks (3) made before removal.
- 5) Install joint bolt (4). Then tighten it to specified torque.

Tightening torque

Steering upper shaft assembly lower joint bolt (a): 25 N·m (2.5 kgf-m, 18.0 lb-ft)

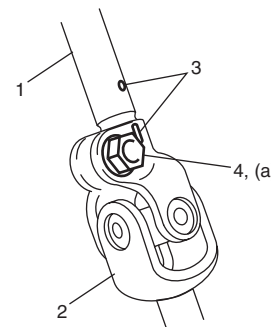

I5JB0A620034-01

Steering Upper Shaft Assembly Inspection

S6JB0B6206012

Check steering shaft damage and operation referring to "Checking Steering Column for Accident Damage".

Steering Lower Shaft Assembly Removal and Installation


S6JB0B6206013

⚠ CAUTION

Never turn steering wheel while steering lower shaft assembly is removed. Should it have been turned and contact coil cable assembly have got out of its centered position, it needs to be centered again. Also, turning steering wheel more than about two and a half turns will break contact coil cable assembly.

Removal

- 1) Turn steering wheel so that vehicle's front tires are at straight-ahead position.
- 2) Turn ignition switch to LOCK position and remove key.
- 3) Make alignment marks (1) on steering upper shaft (2) and steering lower shaft for a guide during reinstallation.
- 4) Remove joint bolt (4) and disconnect upper shaft (2) from joint (3).

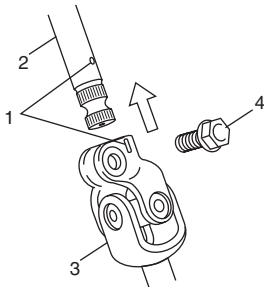


I5JB0A620035-02

- 5) Remove joint bolt (2) and then remove lower shaft assembly (1).

NOTE

When yellow paint (3) cannot be confirmed make alignment marks on steering lower shaft assembly lower joint (1) and pinion shaft of P/S gear case assembly (4) for a guide during reinstallation.

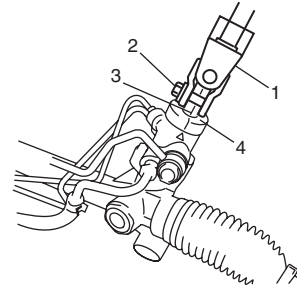


I5JB0A620036-01

Installation

- 1) Check for following conditions before installing lower shaft.
 - Front tires of vehicle are at straight-ahead position.
 - Match mark on gear case (6) and that on pinion shaft (4) are aligned.
- 2) Install lower shaft (2) to pinion shaft (5), aligning slit (1) in lower shaft with match mark (4) on pinion shaft (5).
- 3) Install joint bolt (3) and tighten it to specified torque.

Tightening torque

Steering lower shaft assembly lower joint bolt
(a): 25 N·m (2.5 kgf-m, 18.0 lb-ft)

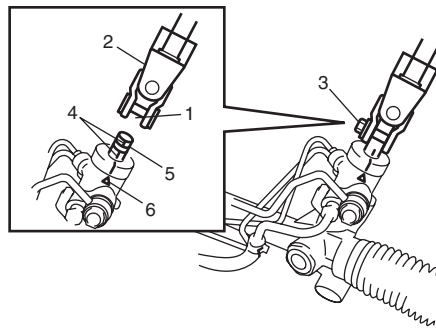


I5JB0A620037-01

- 4) Install upper shaft (1) to lower shaft (3) it matching to marks (4) made before removal.
Install joint bolt (2). Then tighten it specified torque.

NOTE

Be sue that front wheels and steering wheel are in straight-ahead position.

Tightening torque
Steering lower shaft assembly upper joint bolt (a): 25 N·m (2.5 kgf-m, 18.0 lb-ft)

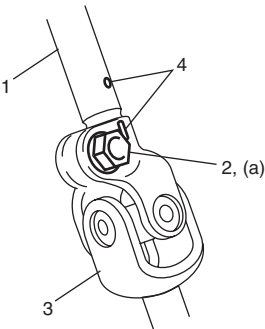

I5JB0A620038-01

Specifications

Tightening Torque Specifications

S6JB0B6207001

Fastening part	Tightening torque			Note
	N·m	kgf-m	lb-ft	
Steering shaft nut	33	3.3	24.0	☞
Steering column assembly mounting bolt and nut	25	2.5	18.0	☞
Steering upper shaft assembly upper joint nut	23	2.3	17.0	☞
Steering upper shaft assembly mounting bolt	23	2.3	17.0	☞
Steering upper shaft assembly lower joint bolt	25	2.5	18.0	☞
Steering lower shaft assembly lower joint bolt	25	2.5	18.0	☞
Steering lower shaft assembly upper joint bolt	25	2.5	18.0	☞

NOTE

The specified tightening torque is also described in the following.
“Steering Wheel and Column Construction”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Special Tools and Equipment

Special Tool

S6JB0B6208001

09944-36011 Steering wheel remover ☞	A line drawing of a steering wheel remover tool. It consists of a rectangular plate with three threaded rods passing through it. The middle rod has a hex nut on top. The two side rods have hex nuts on top. The tool is designed to be used to remove a steering wheel by applying pressure to the steering column.
--	---

Power Assisted Steering System

Precautions

P/S System Note

S6JB0B6300001

NOTE


- Some parts in the power steering gear case cannot be disassembled or adjusted. For detailed information, refer to the description of “Steering Gear Case Construction”.
- All steering gear fasteners are important attaching parts in that they could affect the performance of vital parts and systems, and/or could result in major repair expense. They must be replaced with one of the same part number or with an equivalent part if replacement becomes necessary. Do not use a replacement part of lesser quality or substitute design. Torque values must be used as specified during reassembly to assure proper retention of these parts.
- Although the figures in this section show only the left-hand steering vehicle, the same work procedure and data apply to the right-hand steering vehicle.

General Description

P/S System Construction

S6JB0B6301001

The power steering (P/S) system in this vehicle reduces the driver’s effort needed in turning the steering wheel by utilizing the hydraulic pressure generated by the power steering (P/S) pump (2) which is driven by the engine. It is an integral type with the rack and pinion gears and the control valve unit, hydraulic pressure cylinder unit all built in the steering gear case (1).

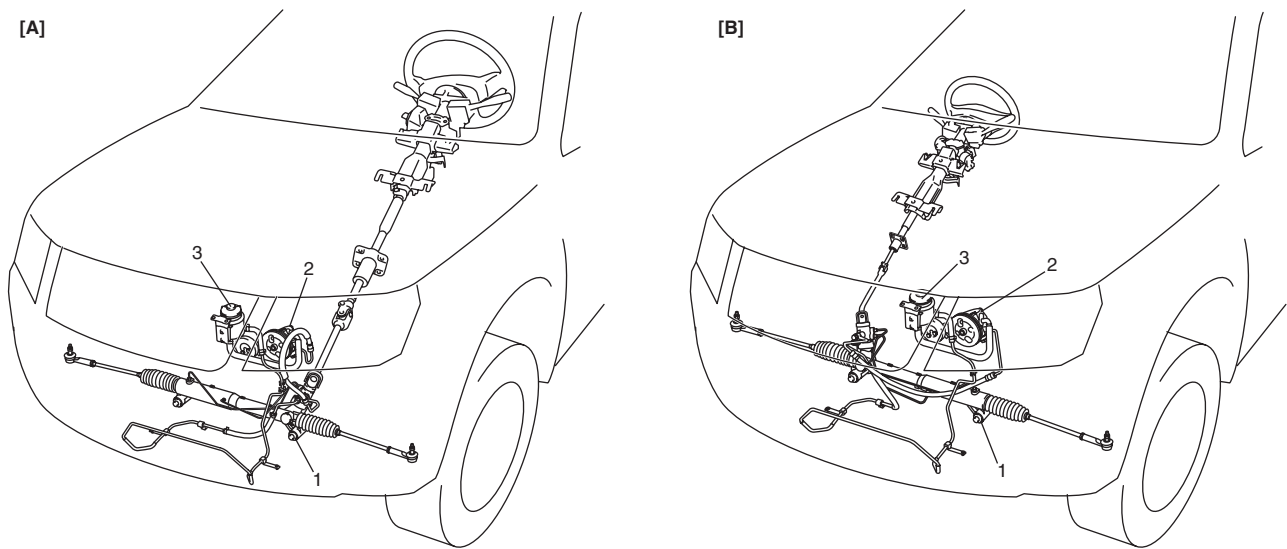


I6JB0B630001-03

[A]: LHD model
[B]: RHD model
3. P/S fluid reservoir

Steering Gear Case Construction

S6JB0B6301002

The steering gear case consists of two sections: one including a cylinder and the other a valve. Main components of the cylinder section are a gear case (7), a rack (8) and a tube and those of the valve section are a valve case (10), a sleeve (4) and a stub shaft (2). The sleeve is linked with the pinion (6) through a pin (1) and the valve and stub shaft are integrated into one unit. Then the pinion and the stub shaft are linked to each other by means of the torsion bar (3). Thus, when the stub shaft moves, the valve changes its position, thereby switching the hydraulic passage from the pump to the cylinder to help steering operation. When turning the steering wheel feels heavy due to P/S fluid leakage or for some other reason (i.e., when in the manual steering mode), the stub shaft and pinion are in direct linkage and the force is output directly through the pinion and rack.

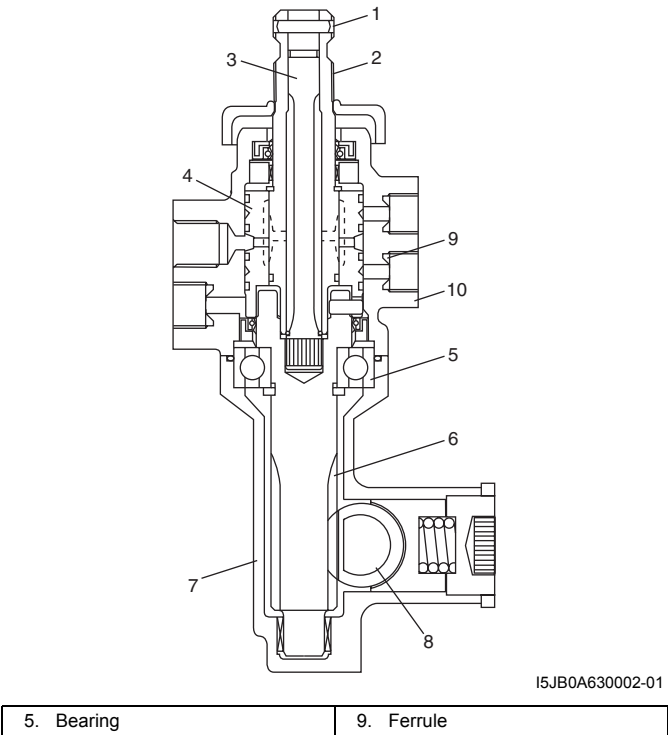

P/S Pump Construction

S6JB0B6301003

The power steering pump is a vane type and is driven by the V-ribbed belt from the crankshaft.

Power steering (P/S) pump specifications

Model		Vane type
Hydraulic pressure control	Relieved pressure	7850 kPa (78.5 kg/cm ² , 1116 psi)
	Control device	Flow control valve and relief valve
Power steering pressure switch		Switch turns on (closes) when the pressure is higher than 2500 – 3000 kPa (25 – 30 kg/cm ² , 356 – 427 psi). ECM uses this signal for idle speed control.


Flow Control Valve (Relief Valve)

As the discharge rate of the P/S pump increases in proportion to the pump revolution speed, a flow control valve is added to control it so that the optimum amount of fluid for steering operation is supplied according to the engine speed (driving condition).

Schematic and Routing Diagram

P/S Fluid Flow Diagram

S6JB0B6302001

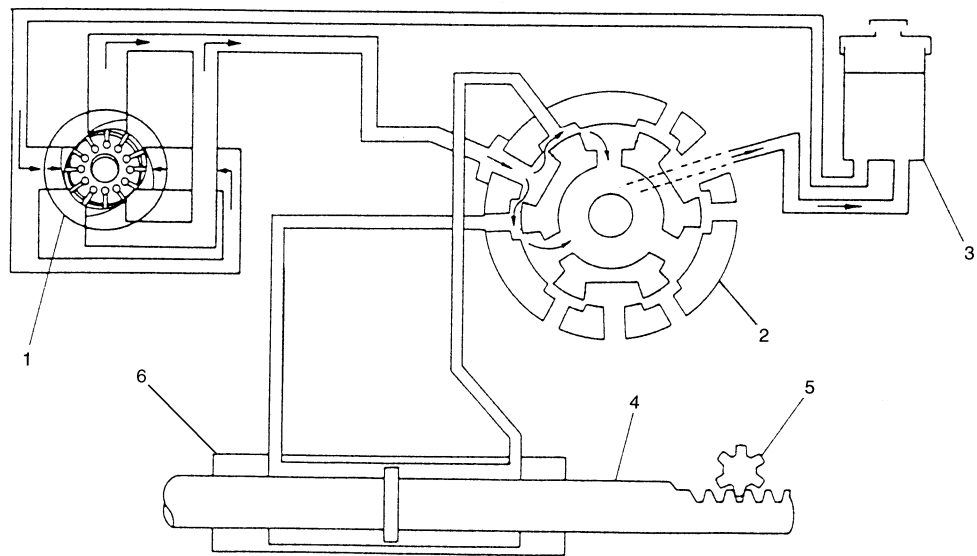

IYSQ01630002-01

1. Power steering pump	3. P/S fluid reservoir	5. Pinion
2. Valve section	4. Rack	6. Cylinder

Diagnostic Information and Procedures

P/S System Symptom Diagnosis

S6JB0B6304001

Condition	Possible cause	Correction / Reference Item
Steering wheel feels heavy (at low speed)	Fluid deteriorated, low viscosity, different type of fluid mixed	<i>Replace fluid.</i>
	Pipes or hoses deformed, air entering through joint	<i>Replace defective part.</i>
	Insufficient air purging from P/S circuit	<i>Purge air.</i>
	P/S belt worn, lacking in tension	<i>Adjust belt tension or replace belt as necessary.</i>
	Tire inflation pressure excessively low	<i>Inflate tire.</i>
	Front end alignment out of order	<i>Check and adjust front end alignment.</i>
	Steering wheel installed improperly (twisted)	<i>Install steering wheel correctly.</i>
	Bind in tie-rod or tie-rod end ball joint	<i>Replace defective part.</i>
	P/S pump hydraulic pressure fails to increase	<i>Check pressure and repair or replace defective part.</i>
	P/S pump hydraulic pressure increases but slowly	<i>Check pressure and repair or replace defective part.</i>
	Steering gear case malfunction	<i>Replace gear case.</i>
Steering wheel feels heavy momentarily when turning it to the left or right	Air drawn in due to insufficient amount of fluid	<i>Add fluid and purge air.</i>
	Slipping P/S belt	<i>Adjust belt tension or replace belt as necessary.</i>
	P/S pump hydraulic pressure fails to increase	<i>Check pressure and repair or replace defective part.</i>
	P/S pump hydraulic pressure increases but slowly	<i>Check pressure and repair or replace defective part.</i>
	Steering gear case malfunction	<i>Replace gear case.</i>
Poor recovery from turns	Deformed pipes or hoses	<i>Replace defective part.</i>
	Steering column installed improperly	<i>Install steering column correctly.</i>
	Front end alignment out of order	<i>Check and adjust front end alignment.</i>
	Ball joints binding	<i>Replace defective part.</i>
	P/S pump hydraulic pressure fails to increase	<i>Check pressure and repair or replace defective part.</i>
	P/S pump hydraulic pressure increases but slowly	<i>Check pressure and repair or replace defective part.</i>
	Steering gear case malfunction	<i>Replace gear case.</i>
Vehicle pulls to one side during straight driving	Mismatched or uneven tire	<i>Replace tire.</i>
	Low or uneven tire inflation pressure	<i>Inflate tires to proper pressure or adjust right and left tires inflation pressure.</i>
	Brake dragging in one wheel	<i>Repair.</i>
	Front end alignment out of order	<i>Check and adjust front end alignment.</i>
	Rear end alignment out of order	<i>Check and adjust rear end alignment.</i>
	Malfunction of control valve in gear case	<i>Replace gear case.</i>
Steering wheel play is large and vehicle wanders	Refer to "Steering Symptom Diagnosis in Section 6A".	
Fluid leakage	Loose joints of (hydraulic pressure) pipes and hoses	<i>Retighten.</i>
	Deformed or damaged pipes or hoses	<i>Replace defective part.</i>

6C-5 Power Assisted Steering System:

Condition	Possible cause	Correction / Reference Item
Abnormal noise	Air drawn in due to insufficient amount of fluid	<i>Add fluid and purge air.</i>
	Air mixed into fluid from pipes or hoses	<i>Replace pipes or hoses.</i>
	Slipping (loose) P/S belt	<i>Adjust belt tension.</i>
	Worn P/S belt	<i>Replace belt.</i>
	Loose gear case fastening bolt	<i>Retighten bolts.</i>
	Loose linkage or joints	<i>Retighten.</i>
	Pipes or hoses in contact with part of vehicle body	<i>Install pipes and hoses correctly.</i>
	Vaness of P/S pump defective	<i>Replace defective part.</i>
	Malfunction of control valve in gear case	<i>Replace gear case.</i>
	Bearing of P/S pump shaft defective	<i>Replace bearing.</i>
No idle up	Power steering pressure switch defective	<i>Replace power steering pressure switch.</i>


Steering Wheel Check

S6JB0B6304002

- Check steering wheel for looseness or rattle by trying to move it in its shaft direction and lateral direction. If found defective, repair or replace.
- Check steering wheel for play, holding car in straight forward condition on the ground and with engine stopped.

Steering wheel play "a"

: 0 – 30 mm (0 – 1.2 in.)

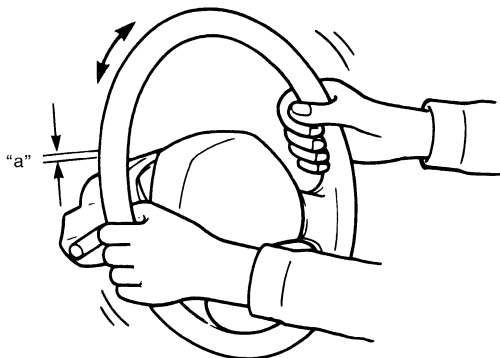

I5JB0A630004-02


If steering wheel play is not within specification, inspect as follows and replace if found defective.

- Tie-rod end ball stud for wear
- Lower ball joint for wear
- Steering shaft joint for wear
- Steering pinion or rack gear for wear or breakage
- Each part for looseness

Steering Force Check

S6JB0B6304003

- 1) Place vehicle on level road and set steering wheel at straight-ahead position.
- 2) Check that tire inflation pressure is as specified. (Refer to tire placard.)
- 3) Start engine and keep it running till power steering fluid is warmed to 50 to 60 °C (122 to 140 °F).

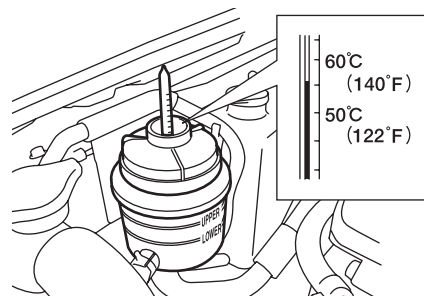


I5JB0A630005-01

- 4) With engine idling, measure steering force by pulling spring balancer hooked on steering wheel in tangential direction.

Steering force

: Less than 30 N (3.0 kg, 6.6 lb)

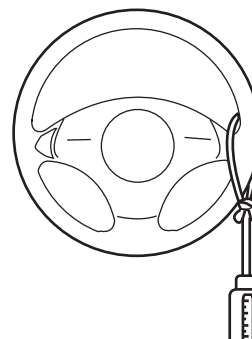

I5JB0A630057-01

Steering Wheel Recovery Check

S6JB0B6304004

⚠ WARNING

When performing a check, select a place where there is no traffic or possibility of a traffic accident and be very careful during testing to avoid occurrence of an accident.

Check steering wheel for recovery as follows.

- 1) Rotate it to either right or left end.
- 2) Keep it at the end, and start the vehicle slowly.
- 3) Accelerate vehicle slowly.

If steering wheel begins to return at the vehicle speed less than 10 km/h (6.3 mph), it is normal condition. If the check result is abnormal, diagnose the fault part referring to "Poor recovery from turns" in "P/S System Symptom Diagnosis".

Idle Up System Check

S6JB0B6304005

- 1) Warm up engine to normal operating temperature.
- 2) Turn A/C switch OFF, if equipped.
- 3) Turn steering wheel fully and check idle speed. Engine idle speed drops a little momentarily when steering wheel is turned fully but returns to its specified level immediately. If power steering pressure switch connector is connected, check the same with that connector disconnected. Momentary drop of engine idle speed should be less when it is connected than when disconnected.

Hydraulic Pressure in P/S Circuit Check

S6JB0B6304006

- 1) After cleaning joint of high pressure hose and P/S pump thoroughly, disconnect hose from pump and install special tool (oil pressure gauge, attachment and hose).



⚠ CAUTION

Take care not to cause damage to A/C condenser during service operation, if equipped.

Special tool

(A): 09915-77412

(B): 09915-77420

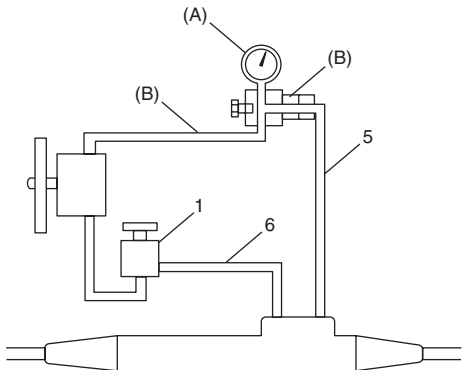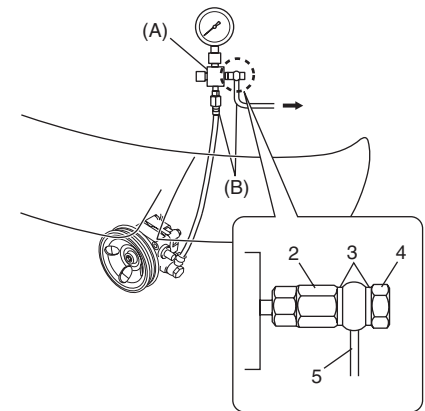


I6JB0B630003-01

1. P/S fluid reservoir	4. Union bolt
2. Attachment	5. High pressure side
3. Gasket	6. Low pressure side

6C-7 Power Assisted Steering System:

- 2) Check each connection for fluid leakage and bleed air. Refer to "P/S System Air Bleeding Procedure".
- 3) With engine idling, turn steering wheel and warm up engine till temperature of fluid in tank rises to 50 – 60 °C (122 – 140 °F).

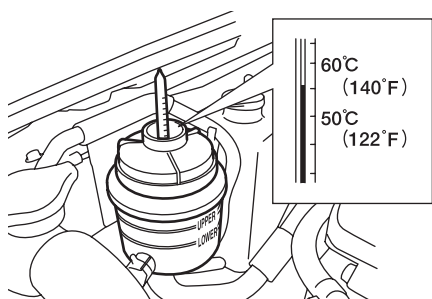


I5JB0A630005-01

- 4) Check back pressure by measuring hydraulic pressure with engine idling and hands off steering wheel.

When back pressure is higher than specified values, check control valve and piping for clogging.

Back pressure

Lower than 1000 kPa (10 kg/cm², 142 psi)

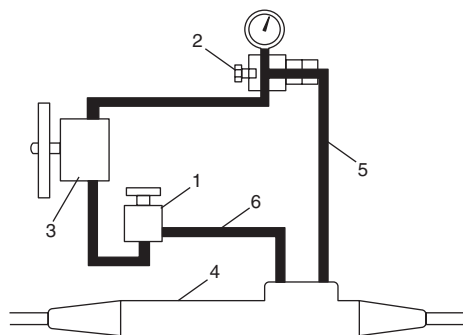

I5JB0A630008-01

1. P/S fluid reservoir	4. P/S gear case
2. Gauge valve (open)	5. High pressure side
3. P/S pump	6. Low pressure side

- 5) Check relief pressure.


- a) Increase engine speed to about 600 r/min. (rpm). Close gauge valve gradually while watching pressure increase indicated by gauge and take reading of relief pressure (maximum hydraulic pressure).
If it is higher than specified values, possible cause is malfunction of relief valve.
If it is lower than specified values, possible cause is either failure of P/S pump or settling of relief valve spring.

Relief pressure when gauge value is closed

: 7650 – 8350 kPa (76.5 – 83.5 kg/cm², 1088 – 1187 psi)

⚠ CAUTION

Be sure not to close gauge valve for longer than 10 seconds.

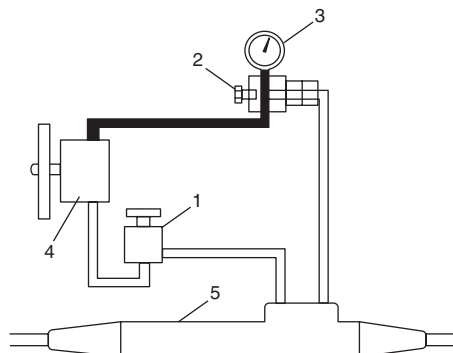

I5JB0A630009-04

1. P/S fluid reservoir	4. P/S pump
2. Gauge valve (shut)	5. P/S gear case
3. Oil pressure gauge	

- b) Open gauge valve fully and increase engine speed to about 1500 r/min. (rpm). Then turn steering wheel to the left or right fully and take reading of relief pressure.

If it is higher than specified values, possible cause is malfunction of relief valve.


If it is lower than specified values, possible cause is failure in steering gear case. Replace gear case.

Relief pressure when gauge value is opened

: 7650 – 8350 kPa (76.5 – 83.5 kg/cm², 1088 – 1187 psi)

⚠ CAUTION

Be sure not to hold steering wheel at fully turned position for longer than 10 seconds.

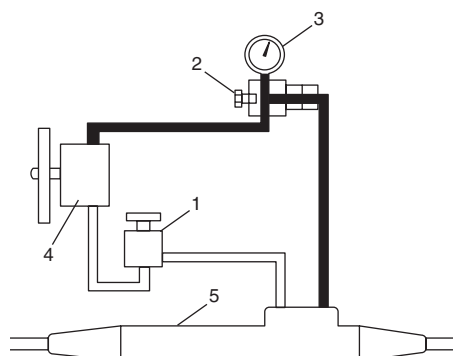

I5JB0A630010-01

1. P/S fluid reservoir	4. P/S pump
2. Gauge valve (open)	5. P/S gear case
3. Oil pressure gauge	

Repair Instructions


P/S Fluid Change

S6JB0B6306001

⚠ CAUTION

Do not use any fluid other than the specified P/S fluid. Use of any fluid other than the specified P/S fluid may cause juddering or some other faulty condition to occur.

- 1) Lift up vehicle.
- 2) Remove front under cover.
- 3) When engine is cool, remove P/S gear low pressure hose (1) from pipe and drain P/S fluid from low pressure hose.

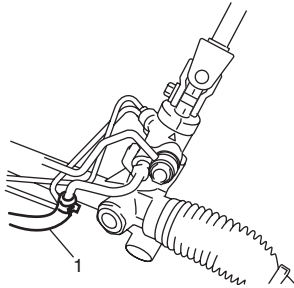

I5JB0A630011-01

- 4) Install low pressure hose to pipe.
- 5) Fill specified P/S fluid and bleed air referring to "P/S System Air Bleeding Procedure".

P/S fluid specification

: Equivalent of DEXRON®-II

P/S fluid capacity reference value

: 0.7 – 0.8 liters (1.48/1.23 – 1.69/1.41 US/Imp.pt)


P/S Fluid Level Check

S6JB0B6306002

With engine stopped, check fluid level indicated on P/S fluid reservoir, which should be between "UPPER" and "LOWER" marks. If it is lower than "LOWER" mark, fill fluid up to "UPPER" mark.

NOTE

- **Be sure to use an specified power steering fluid.**
- **Fluid level should be checked when fluid is cool.**

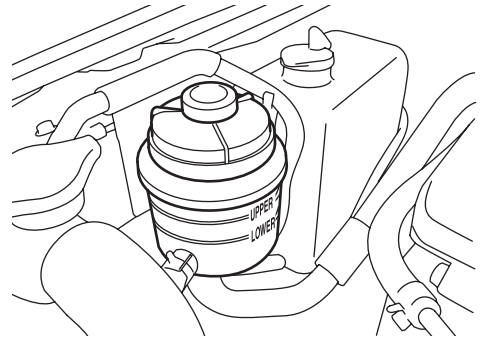

I5JB0A630012-01

6C-9 Power Assisted Steering System:

P/S Fluid Leakage Check


S6JB0B6306003

Start engine and turn steering wheel fully to the right and left so that maximum hydraulic pressure is provided. Then visually check P/S gear case assembly (1), P/S pump (2) and P/S fluid reservoir (3) themselves and each joint of their connecting pipes for leakage.


⚠ CAUTION

Never keep steering wheel turned fully for longer than 10 seconds.

[A]

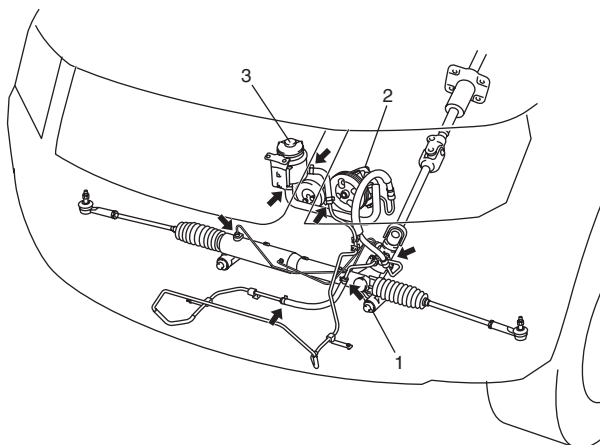

[B]

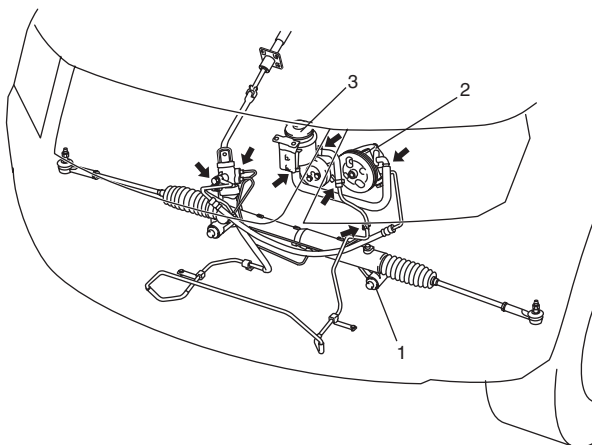

I6JB0B630004-01

[A]: LHD model

[B]: RHD model

P/S System Air Bleeding Procedure

S6JB0B6306004

- 1) Hoist the front end of vehicle and apply safety stands.
- 2) Fill P/S fluid reservoir with fluid up to specified level.

NOTE

Before starting engine, place transmission gear shift lever in “Neutral” (shift selector lever to “P” range for A/T model), and set parking brake.

- 3) After running engine at idling speed for 3 to 5 seconds, stop it and add fluid to satisfy specification.
- 4) With engine stopped, turn steering wheel to the right and left as far as it stops, repeat it a few times and fill fluid to specified level.
- 5) With engine running at idling speed, repeat stop-to-stop turn of steering wheel till all foams in P/S fluid reservoir are gone.

NOTE

Make sure to bleed air completely. If air remains in fluid, P/S pump may make humming noise or steering wheel may feel heavy.

- 6) Finally check to make sure that fluid is filled to specified level.

P/S Pump and A/C Compressor (If Equipped) Drive Belt Inspection and Adjustment

S6JB0B6306005

Inspection

- Check that belt is free from any damage and properly fitted in pulley groove.
- Check belt tension by measuring how much it deflects when pushed at intermediate point between pulleys with about 10 kg (22 lb) force.

Deflection of P/S belt with A/C (a)

: 5.5 – 6.5 mm (0.21 – 0.25 in.)

Deflection of P/S belt without A/C (b)

: 4 – 9 mm (0.16 – 0.35 in.)

NOTE

When replacing drive belt, adjust drive belt tension to the following specifications.


Deflection of new P/S belt with A/C (a)

: 5 – 6 mm (0.19 – 0.23 in.)


Deflection of new P/S belt without A/C (b)

: 4 – 9 mm (0.16 – 0.35 in.)

[A]

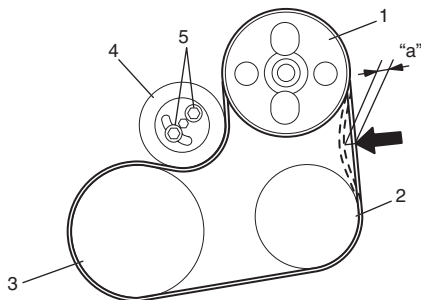

[B]

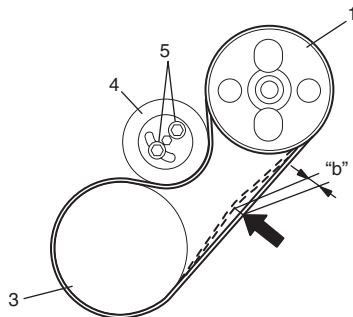

I5JB0C630001-01


1. P/S pump pulley
2. A/C compressor pulley (if equipped)
3. Crankshaft pulley
4. Tension pulley
5. Tension pulley bolt
[A]: with A/C
[B]: without A/C

Adjustment

- 1) To adjust P/S belt tension, loosen tension pulley bolts (1) and turn tension pulley (2) using hexagon wrench (3).
- 2) Adjust belt tension to specification, and then tighten tension pulley bolts (1) to specified torque.

Tightening torque

P/S belt tension pulley bolt (a): 25 N·m (2.5 kgf-m, 18.5 lb-ft)

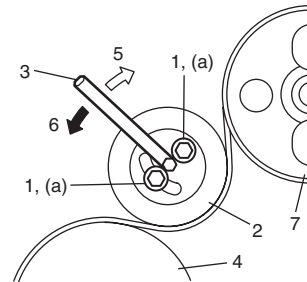

I6JB0B630005-01


4. Crank shaft pulley	6. Tight
5. Loose	7. P/S pump pulley

P/S Pump and A/C Compressor (If Equipped) Drive Belt Removal and Installation

S6JB0B6306006

Removal

- 1) Remove tension pulley bolts (1).
- 2) Remove tension pulley (3) and P/S pump drive belt (2).

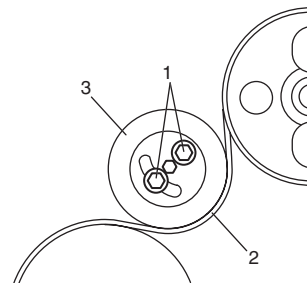

I6JB01630005-01

Installation


Reverse removal procedure noting the following instruction.

Adjust belt tension referring to "P/S Pump and A/C Compressor (If Equipped) Drive Belt Inspection and Adjustment".

Steering Rack Boot Check

S6JB0B6306007

- Check boot for crack and damage which, if any, means possibility of rusty gear, entry of dust or lack of grease. Also, check if any of such faulty conditions exists.
- Check steering rack boot for dent or breakage. If there is a dent, keep boot in most compressed state for some seconds to correct dent.

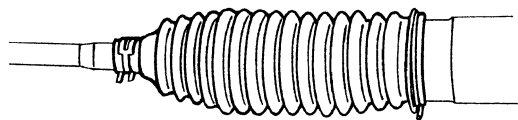


IYSQ01630013-01

Tie-Rod End Boot Check

S6JB0B6306008

Check boot for crack and damage and if any, replace it with a new one.

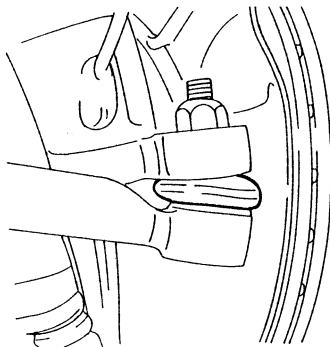


IYSQ01630014-01

Tie-Rod End Removal and Installation

S6JB0B6306009

Removal

- 1) Hoist vehicle and remove wheel.
- 2) Remove tie-rod end nut (3).

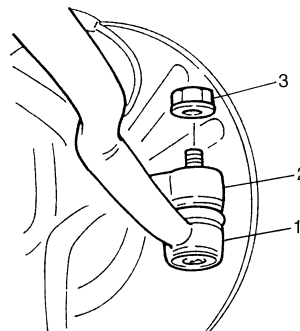


IYSQ01630015-01

1. Tie-rod end


2. Knuckle

- 3) Disconnect tie-rod end (1) by using puller (2).

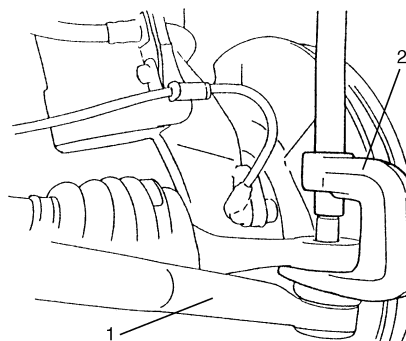

IYSQ01630016-01

- 4) To facilitate adjustment after installation, put a mark (2) on tie-rod thread indicating position of tie-rod end lock nut (3). Then loosen lock nut (3) and remove tie-rod end (4) from tie-rod (1).

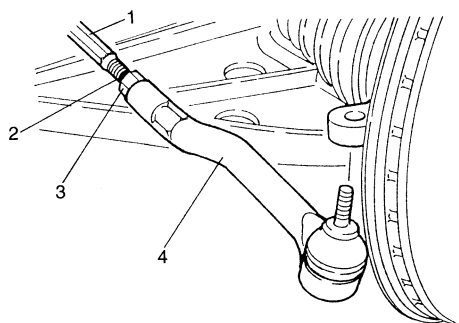


IYSQ01630017-01

Installation

- 1) Install tie-rod end lock nut (3) and tie-rod end (4) to tie-rod (1). Tighten lock nut (3) to mark (2) on tie-rod thread.
- 2) Install tie-rod end (4) to knuckle (5). Tighten new tie-rod end nut (6) to specified torque.

Tightening torque

Tie-rod end nut (a): 43 N·m (4.3 kgf-m, 31.0 lb-ft)

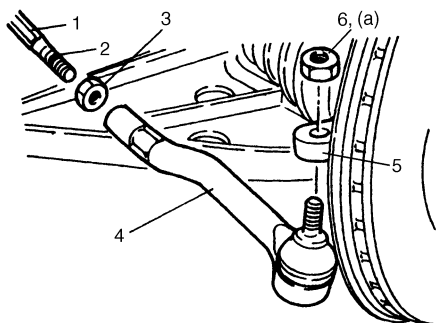


IYSQ01630018-01

- 3) After installing wheels, lower vehicle and tighten wheel nuts to specified torque.

Tightening torque

Wheel nut (a): 100 N·m (10.0 kgf-m, 72.5 lb-ft)

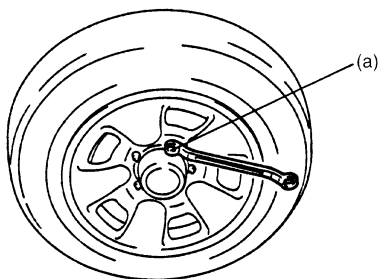


IYSQ01630019-01

- 4) Check that proper amount of toe-in is obtained referring to "Front Wheel Alignment Inspection and Adjustment in Section 2B".
- 5) After confirming proper amount of toe-in, tighten tie-rod end lock nut to specified torque.

Tightening torque

Tie-rod end lock nut (a): 65 N·m (6.5 kgf-m, 47.0 lb-ft)

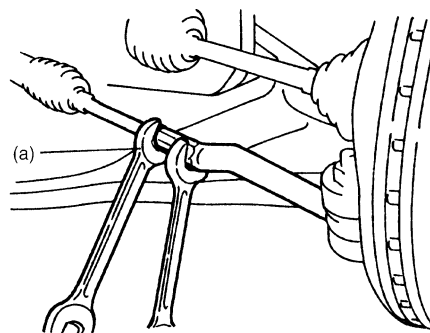


IYSQ01630020-01





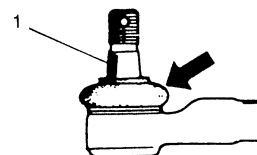


Tie-Rod End Ball Joint Inspection

S6JB0B6306010

Inspect for play in tie-rod end ball joint (1). If found defective, replace.



IYSQ01630021-01

[A]: LHD model	6. Tie-rod end lock nut	 (b) : 43 N·m (4.3 kgf-m, 31.0 lb-ft)
[B]: RHD model	7. Tie-rod end	 (c) : 90 N·m (9.0 kgf-m, 65.0 lb-ft)
1. Steering gear case	8. Tie-rod end nut	 (d) : 65 N·m (6.5 kgf-m, 47.0 lb-ft)
 1305 2. Tie-rod : Apply thread rock cement 99000-32100 to thread of tie-rod boll nut.	9. Steering gear case mounting bolt	 (e) : 105 N·m (10.5 kgf-m, 76.0 lb-ft)
3. Band	10. Gear case cylinder pipe	 : Do not reuse.
4. Boot	11. Steering gear case mount bushing	
5. Rack boot clip	 (a) : 25 N·m (2.5 kgf-m, 18.5 lb-ft)	

P/S Gear Case Assembly Removal and Installation


S6JB0B6306012

⚠ CAUTION

Never disassemble P/S gear case assembly. Disassembling will adversely affect original performance of P/S gear case assembly.

Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Take out P/S fluid in reservoir with syringe or such.
- 3) Hoist vehicle and remove both right and left wheels.
- 4) Disconnect both right and left tie-rod ends from knuckle referring to Step 2) to 3) of “Removal” in “Tie-Rod End Removal and Installation”.
- 5) Disconnect steering lower shaft assembly (1) from pinion shaft of P/S gear case assembly (2) referring to Step 5) of “Removal” in “Steering Lower Shaft Assembly Removal and Installation in Section 6B”.
- 6) Disconnect high pressure pipe (3) from P/S gear case assembly.
- 7) Disconnect low pressure pipe (4) from P/S gear case assembly.
- 8) Remove P/S gear case cylinder pipes (5) from P/S gear case assembly.

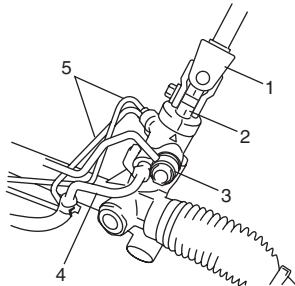


I5JB0A630017-01

- 9) Remove stabilizer bar mount bolt and stabilizer joint.

NOTE

Do not remove stabilizer bar (1) from vehicle.

- 10) Remove stabilizer bar mount bracket (2) from left side of front suspension frame.

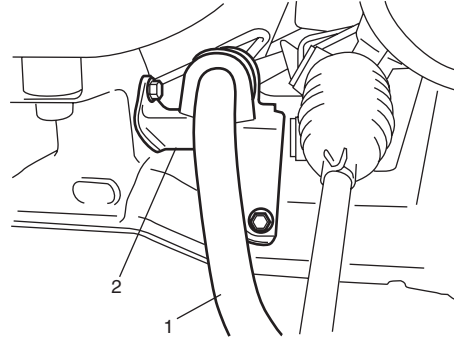


I5JB0A630018-01

- 11) Remove bolts (1) and then take off P/S gear case assembly from left side of vehicle.

NOTE

P/S gear case assembly cannot be removed from the right side of vehicle.

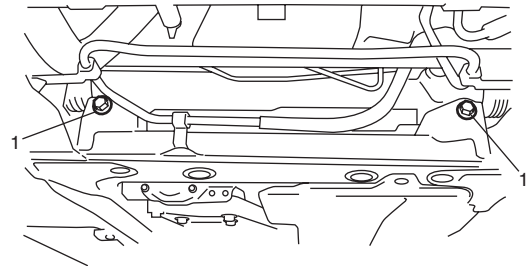


I5JB0A630019-01

Installation

Reverse removal procedure for installation of P/S gear case, noting the following points.

- After confirming that front tire is in straight position, install P/S gear case to body temporarily. Next, with tie-rod end installed to knuckle, set rack in position close to neutral. Then obtain the neutral state by aligning match marks (1) on pinion shaft and steering gear case (2) and insert steering lower joint into pinion shaft.

Refer to Step 3) of "Installation" in "Steering Lower Shaft Assembly Removal and Installation in Section 6B".

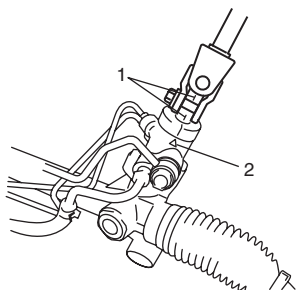

I5JB0A630020-01

⚠ CAUTION

Be sure to confirm that steering wheel and front tires (wheels) are in straight position when inserting steering lower joint into steering pinion shaft.

- If a plug was put to disconnected pipe when removing steering gear case, remove that plug before reconnecting pipe.
- Use specified torque as given below.

Tightening torque

Steering lower shaft bolt: 25 N·m (2.5 kgf-m, 18.5 lb-ft)


Gear case high pressure pipe union bolt: 35 N·m (3.5 kgf-m, 25.5 lb-ft)

Gear case cylinder pipe flare nut: 25 N·m (2.5 kgf-m, 18.0 lb-ft)

Gear case mounting bolt: 105 N·m (10.5 kgf-m, 76 lb-ft)

Gear case low pressure pipe union bolt: 35 N·m (3.5 kgf-m, 25.5 lb-ft)

Stabilizer bar mount bracket mount bolt (a): 60 N·m (6.0 kgf-m, 43.0 lb-ft)

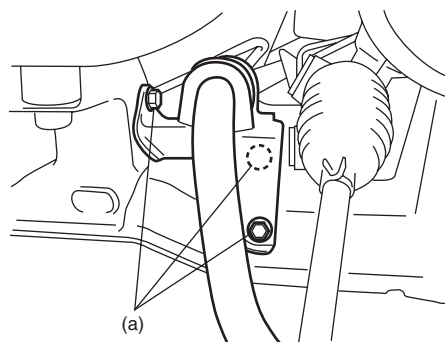

I5JB0A630021-02

- After installation, be sure to fill specified P/S fluid and bleed air. Refer to "P/S System Air Bleeding Procedure".
- Check toe setting. Adjust as required. Refer to "Front Wheel Alignment Inspection and Adjustment in Section 2B".

Steering Gear Case Mount Bushing Removal and Installation

S6JB0B6306013


Removal

- 1) Remove P/S gear case assembly referring to "P/S Gear Case Assembly Removal and Installation".
- 2) Push out bushing using hydraulic press (1) and special tools.

Special tool

(A): 09943-88211

(B): 09945-55410

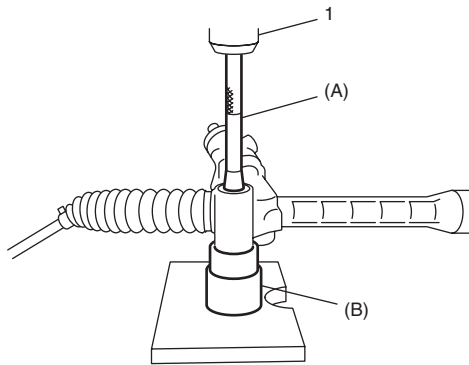

I5JB0A630053-02

Installation

⚠ CAUTION

Be sure to use new bushing.

- 1) Press-fit bushing (1) using special tools and press (2).


Special tool

(A): 09913-75821

(B): 09945-55410


NOTE

Before installing bushing, apply soap water on its circumference to facilitate installation.

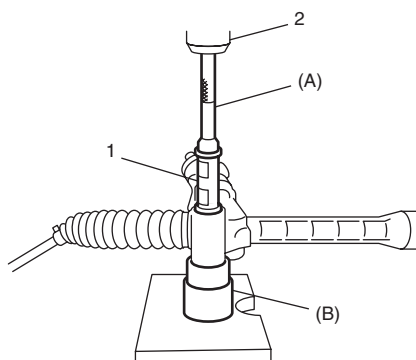

I5JB0A630055-01

- 2) Press-fit bushing (1) so that dimensions and in figure become equal.

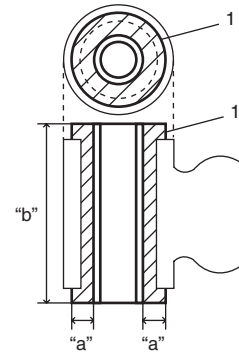

I6JB01630007-01

"a": 6 mm (0.24 in.)

"b": 80 mm (3.15 in.)

- 3) Install P/S gear case assembly referring to "P/S Gear Case Assembly Removal and Installation".

Steering Gear Case Mount Bushing Inspection

S6JB0B6306014


Inspect for looseness, cracks, deformation or damage. Replace any defective part.

Rack Boot / Tie-Rod Removal and Installation

S6JB0B6306015

Removal


- 1) Remove P/S gear case assembly, referring to "P/S Gear Case Assembly Removal and Installation".
- 2) For ease of adjustment after installation, make marking (4) of tie-rod end lock nut position of tie-rod thread.
- 3) Loosen tie-rod end lock nut (2) and remove tie-rod end.
- 4) Remove boot wire and clip.
- 5) Remove boot (3) from tie-rod (1).

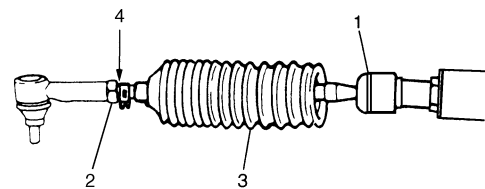

I5JB0A630054-01

6C-17 Power Assisted Steering System:

- 6) Remove tie-rod (1) from steering gear case (2).

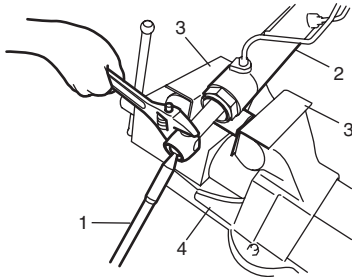

I5JB0A630022-01

3. Aluminium plate

4. Vise


Installation

- 1) Clean threads of both tie-rod and steering gear case (2).
- 2) Apply thread lock cement to thread of tie-rod ball nut (1) and then tighten it to specified torque.

“B”: Thread lock cement 99000–32100 (Thread Lock Cement 1305)


Tightening torque

Tie-rod ball nut (a): 90 N·m (9.0 kgf-m, 65.0 lb-ft)

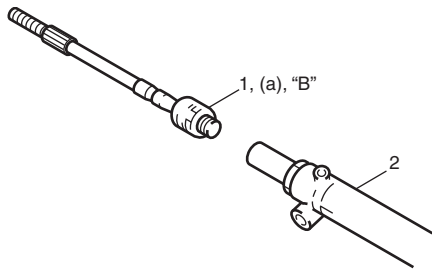


I5JB0A630023-03

- 3) Apply grease to boot inside “A” indicated in the figure.

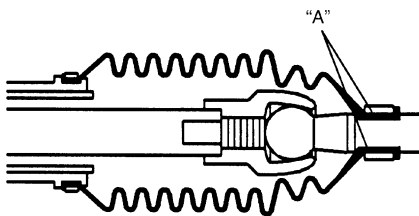

IYSQ01630030-01

- 4) Position boot properly in grooves of gear case and tie-rod. Check to ensure that boot is free from twist and dent.
- 5) Clamp boot with clip and wire. Wire should be new and should go around the boot twice. Pull its both ends together by screwdriver or such and make sure that the wire won't be crossed. Then twist the ends several times, the twisted ends should be bent in the circumferential direction.

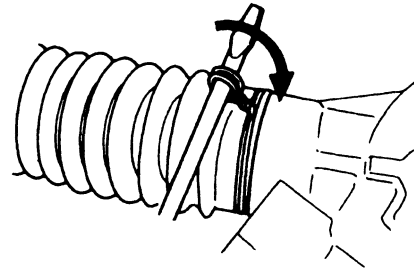


IYSQ01630035-01

- 6) Install tie-rod end lock nut and tie-rod end to tie-rod. Position lock nut to marking (1) made in removal.

NOTE

When tie-rod was replaced, measure length “a” on removed tie-rod and use it on new replacement tie-rod so as to position lock nut properly.

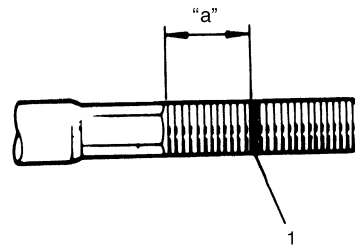


I5JB0A630058-01

- 7) Install steering gear case. Refer to “P/S Gear Case Assembly Removal and Installation”.

P/S Hose / Pipe Components



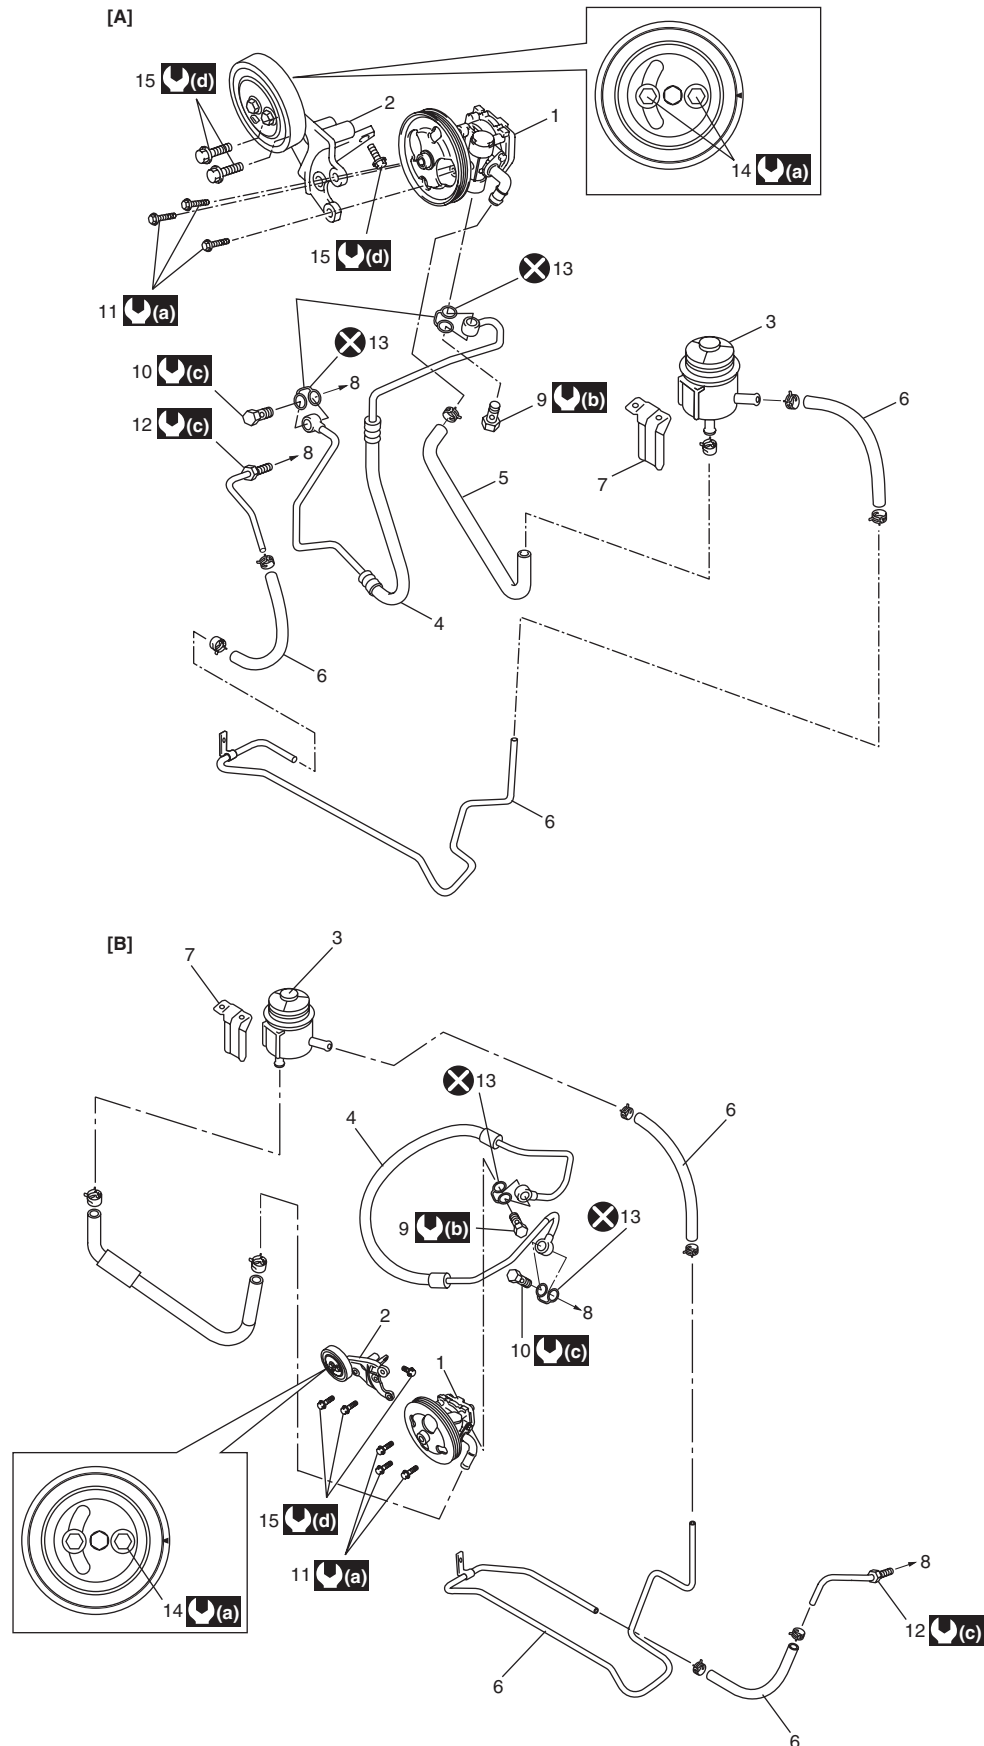

S6JB0B6306016



I6JB0B630006-01

[A]: RHD model	7. P/S fluid reservoir bracket	15. Bracket mount bolt
[B]: LHD model	8. To P/S gear case	(a) : 25 N·m (2.5 kgf-m, 18.0 lb-ft)

6C-19 Power Assisted Steering System:

1. P/S pump assembly	9. P/S pump high pressure pipe union bolt	 (b) : 60 N·m (6.0 kgf-m, 43.5 lb-ft)
2. Bracket	10. P/S gear case high pressure pipe union bolt	 (c) : 35 N·m (3.5 kgf-m, 25.5 lb-ft)
3. P/S fluid reservoir	11. P/S pump mounting bolt	 (d) : 45 N·m (4.5 kgf-m, 29.0 lb-ft)
4. High pressure hose and pipe	12. P/S gear case low pressure pipe flare nut	 : Do not reuse.
5. Suction hose	13. Washer	
6. Low pressure return hose	14. P/S belt tension pulley nut	

P/S Pump Removal and Installation

S6JB0B6306017

Removal

NOTE


Be sure to clean each joint of suction and discharge sides thoroughly before removal.

- 1) Disconnect negative (–) cable at battery.
- 2) Take out P/S fluid in reservoir with syringe or such.
- 3) Disconnect high pressure pipe and suction hose from power steering pump.

NOTE

As fluid flows out of disconnected joints, put a receptacle under joints or a plug to pipe.

- 4) Disconnect pressure switch lead wire at switch terminal.
- 5) Remove P/S drive belt referring to “P/S Pump and A/C Compressor (If Equipped) Drive Belt Removal and Installation”.
- 6) Remove P/S pump mounting bolts (1) and then remove P/S pump.
- 7) Remove P/S pump (2).

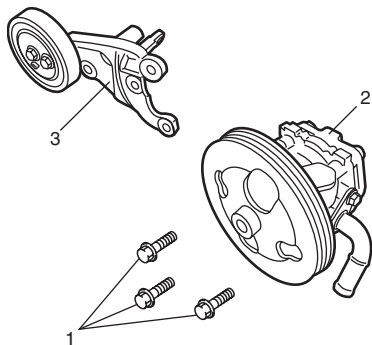

I5JB0C630005-01

3. P/S pump bracket

NOTE

Plug each port of removed pump to prevent dust or any other foreign matter from entering.

Installation

Reverse removal procedure, and then nothing the following instructions.

NOTE

- Adjust P/S pump drive belt referring to “P/S Pump and A/C Compressor (If Equipped) Drive Belt Inspection and Adjustment”.
- Fill specified power steering fluid after installation and bleed air without failure referring to “P/S System Air Bleeding Procedure”.


Tightening torque

P/S pump mounting bolt: 25 N·m (2.5 kgf-m, 18.0 lb-ft)

High pressure pipe union bolt: 60 N·m (6.0 kgf-m, 43.5 lb-ft)

P/S Pump Components

S6JB0B6306018

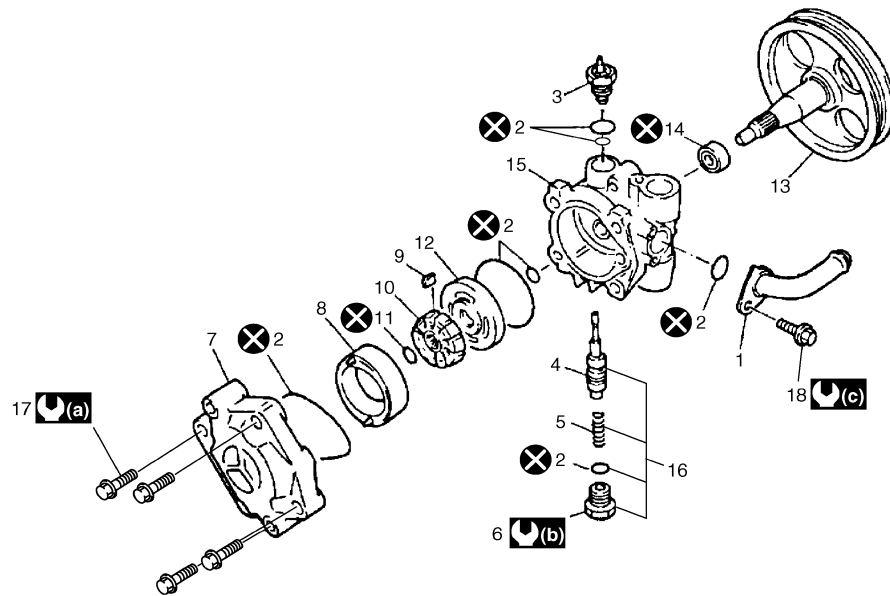

I5JB0C630006-01

1. Suction connector	9. Vane	17. Cover bolt
2. O-ring	10. Rotor	18. Suction connector bolt
3. Pressure switch	11. Snap ring	(a) : 28 N·m (2.8 kgf-m, 20.5 lb-ft)
4. Flow control valve (Relief valve)	12. Side plate	(b) : 60 N·m (6.0 kgf-m, 43.5 lb-ft)
5. Spring	13. Pulley (pump shaft)	(c) : 12 N·m (1.2 kgf-m, 9.0 lb-ft)
6. Plug	14. Oil seal	: Do not reuse.
7. Pump cover	15. Pump body	
8. Cam ring	16. Flow control valve assembly	

P/S Pump Disassembly and Assembly

S6JB0B6306019


Disassembly

- 1) Clean its exterior thoroughly.
- 2) With aluminum plates placed on vise first, grip pump body (15) with it.
- 3) Remove suction connector bolt, suction connector (1) and O-ring (2) from pump body (15).
- 4) Remove power steering pressure switch (terminal set) (3) from pump body (15).
- 5) Remove plug (6), flow control spring (5) and relief valve (flow control valve) (4) from pump body (15).
- 6) Remove cover bolts, pump cover (7) and O-ring (2) from pump body (15).
- 7) Remove snap ring (11) from pump shaft (13).
- 8) Remove vanes (9) from rotor (10).

- 9) Remove cam ring (8), rotor (10), side plate (12) and O-rings (2) from pump body (15).

- 10) Pull out pulley (13) from pump body (15).

- 11) Remove oil seal (14) from pump body (15).

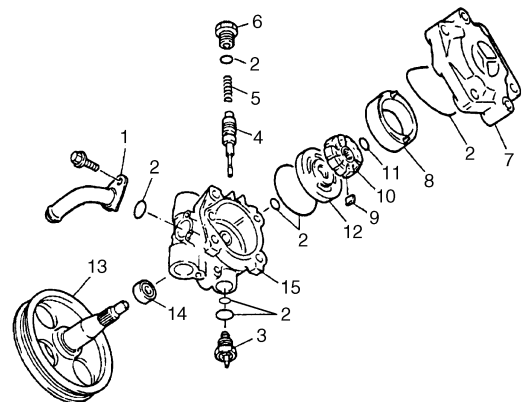


I5JB0C630007-01

Assembly


- 1) Apply grease to oil seal (1) lip and apply P/S fluid to sliding surface of the shaft (2) then insert pulley's shaft (2) from oil seal side of the pump body.

"A": Grease 99000-25010 (SUZUKI Super Grease A)

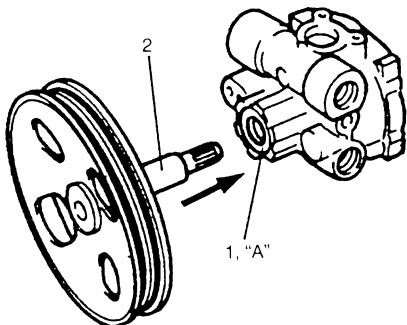

IYSQ01630041-01

- 2) Apply power steering fluid to O-rings (1) and fit them to pump body.

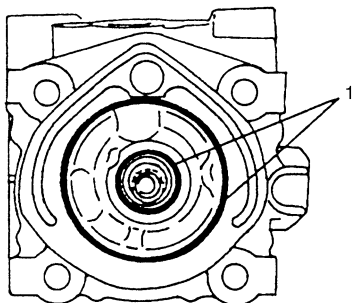


I5JB0C630008-01

- 3) Install side plate (1) to pump body.

NOTE

Carefully align the dowel pins on the cam ring and side plate (1) at bolt hole (2) as shown in the figure.

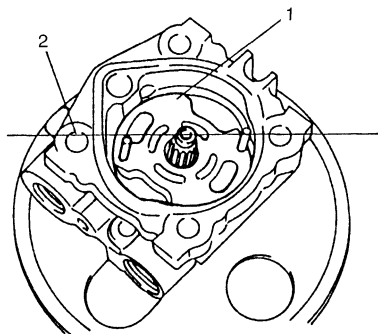


I5JB0C630009-01

- 4) Apply power steering fluid to sliding surface of rotor (1).
- 5) Install rotor (1) to shaft, directing dot (3) marked side of rotor facing up.
- 6) Install new snap ring (2) to shaft, then make sure to fit snap into shaft groove securely.

NOTE

Never reuse the removed snap ring (2).

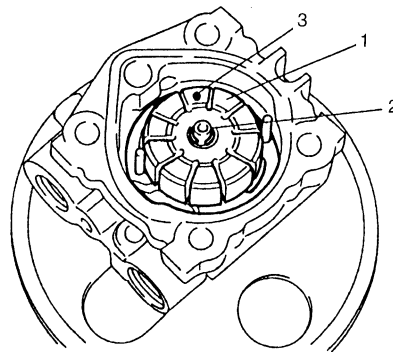


I5JB0C630010-01

- 7) Apply power steering fluid to sliding surface of cam ring (1).
- 8) Install cam ring (1) to pump body.


NOTE

Install cam ring by facing side with a mark (2) toward pump cover.

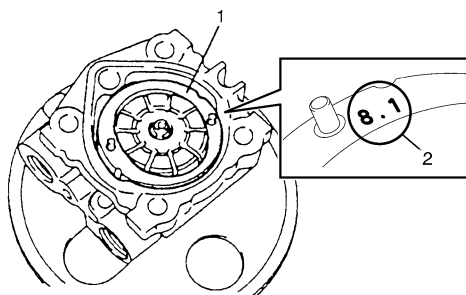


I5JB0C630011-01

- 9) Apply power steering fluid to each vane (2).
- 10) Install vanes (2) (10 pieces) to rotor (1).

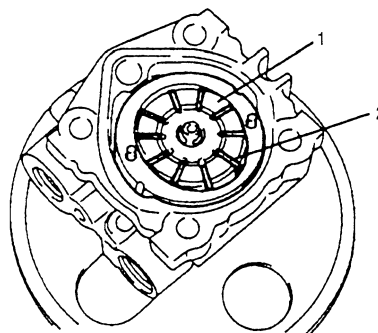


I5JB0C630012-01

- 11) Apply power steering fluid to O-ring (1).
- 12) Install O-ring (1) to pump body.

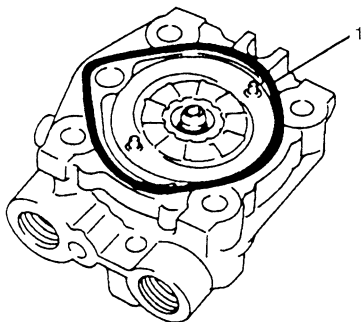

I5JB0C630013-01

- 13) Apply power steering fluid to sliding surface of pump cover and rotor.
- 14) Match the dowel pins (1) to the holes of the cover plate (2) as shown and install pump cover to pump body.

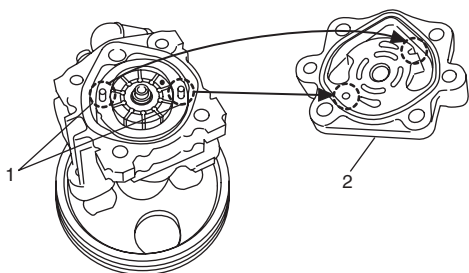

I5JB0A630036-01


- 15) Gradually tighten pump cover (1) bolts to diagonally specified torque.

NOTE

After installing pump cover (1), check to make sure that shaft can be turned by hand.

Tightening torque

P/S pump cover bolt (a): 28 N·m (2.8 kgf-m, 20.5 lb-ft)

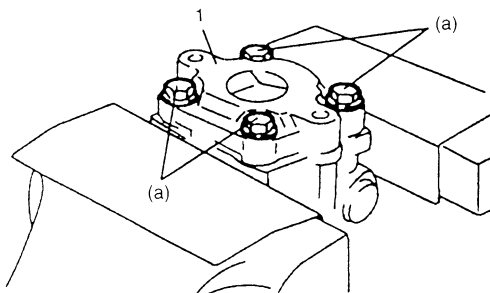


IYSQ01630049-01

- 16) Apply power steering fluid to O-ring (2) of pressure switch.
- 17) Install O-ring (2) to pressure switch.
- 18) Install pressure switch (1) to pump body.

Tightening torque

Pressure switch (a): 28 N·m (2.8 kgf-m, 20.5 lb-ft)

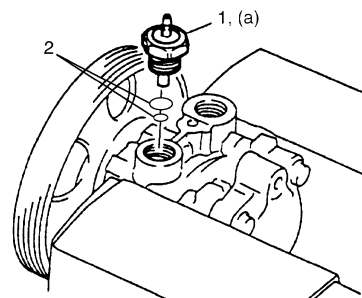


I5JB0C630014-01

- 19) Apply power steering fluid to relief valve (flow control valve).
- 20) Install relief valve (flow control valve) to pump body.
- 21) Install flow control spring.
- 22) Apply power steering fluid to O-rings of plug.
- 23) Install O-rings to plug.
- 24) Tighten plug to specified torque.


Tightening torque

Plug (a): 60 N·m (6.0 kgf-m, 43.5 lb-ft)

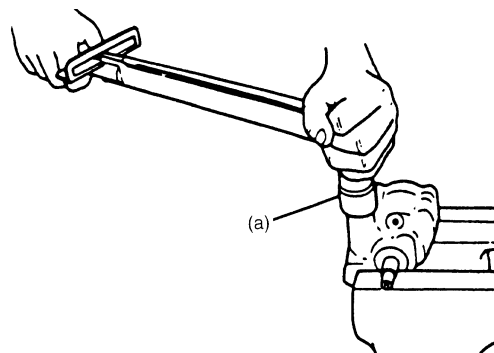

IYSQ01630051-01

- 25) Apply power steering fluid to O-ring (2) of suction connector (1).
- 26) Install O-ring (2) to suction connector (1).

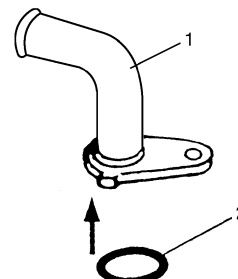


I5JB0C630015-01

6C-23 Power Assisted Steering System:

27) Install suction connector (1) to pump body as shown in the figure. Tighten suction connector (1) bolts to specified torque.

Tightening torque

Suction connector bolt (a): 12 N·m (1.2 kgf-m, 9.0 lb-ft)

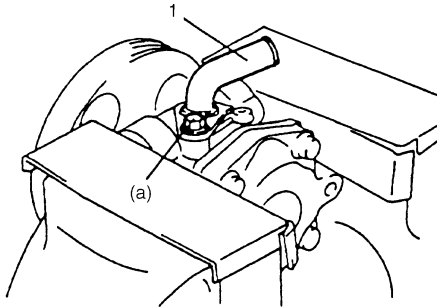


I5JB0C630016-01

P/S Pump Inspection

S6JB0B6306020

Pump Body, Cover, Side Plate and Shaft


Check sliding surfaces of each part for wear and damage. If any defect is found, replace pump assembly.

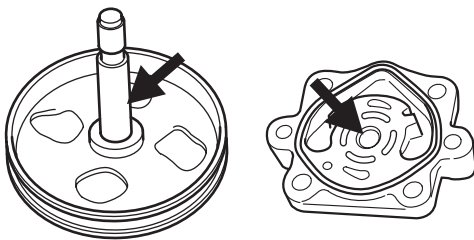

I5JB0A630051-01

Cam Ring


Check vane sliding surface of cam ring for wear and damage. If any defect is found, replace pump assembly.

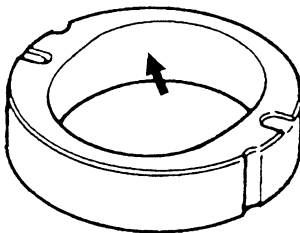

IYSQ01630055-01

Rotor and Vane

- Check sliding surfaces of rotor and vane for wear and damage.

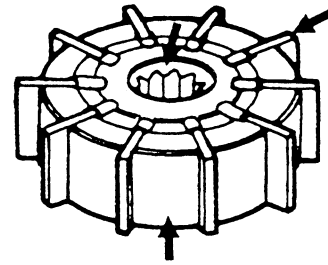


IYSQ01630056-01

- Check clearance between rotor and vane. Replace pump assembly if any defect is found.

Clearance between rotor and vane

Standard: 0.015 mm (0.0004 in.)

Limit: 0.027 mm (0.0008 in.)

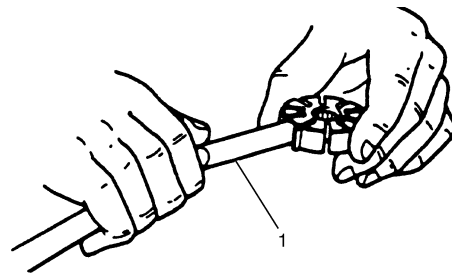


IYSQ01630057-01

1. Thickness gauge

Relief Valve (Flow Control Valve) and Its Spring

- Check fluid passage of relief valve and orifice of connector for obstruction (clogged).
- Check sliding surface of relief valve for wear and damage.

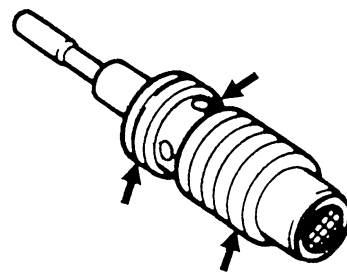


IYSQ01630058-01

- Check free length of relief valve spring (1). Replace if any defective is found.

Free length of relief valve spring

Standard: 22.0 mm (0.866 in.)

Limit: 19.0 mm (0.748 in.)

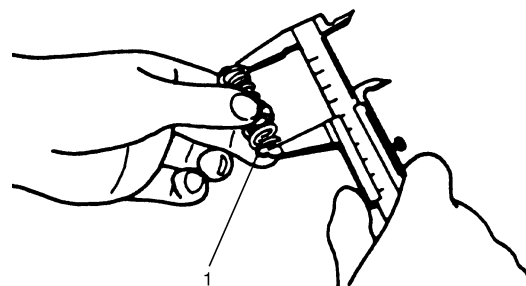

IYSQ01630059-01

Specifications

Tightening Torque Specifications

S6JB0B6307001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lb·ft	
P/S belt tension pulley bolt	25	2.5	18.5	🔩
Tie-rod end nut	43	4.3	31.0	🔩
Wheel nut	100	10.0	72.5	🔩
Tie-rod end lock nut	65	6.5	47.0	🔩
Steering lower shaft bolt	25	2.5	18.5	🔩
Gear case high pressure pipe union bolt	35	3.5	25.5	🔩
Gear case cylinder pipe flare nut	25	2.5	18.0	🔩
Gear case mounting bolt	105	10.5	76	🔩
Gear case low pressure pipe union bolt	35	3.5	25.5	🔩
Stabilizer bar mount bracket mount bolt	60	6.0	43.0	🔩
Tie-rod ball nut	90	9.0	65.0	🔩
P/S pump mounting bolt	25	2.5	18.0	🔩
High pressure pipe union bolt	60	6.0	43.5	🔩
P/S pump cover bolt	28	2.8	20.5	🔩
Pressure switch	28	2.8	20.5	🔩
Plug	60	6.0	43.5	🔩
Suction connector bolt	12	1.2	9.0	🔩

NOTE

The specified tightening torque is also described in the following.

“P/S Gear Case Assembly Components”

“P/S Hose / Pipe Components”

“P/S Pump Components”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Special Tools and Equipment

Recommended Service Material

S6JB0B6308001






Material	SUZUKI recommended product or Specification		Note
Grease	SUZUKI Super Grease A	P/No.: 99000–25010	🔧
Thread lock cement	Thread Lock Cement 1305	P/No.: 99000–32100	🔧

NOTE

Required service material is also described in the following.
“P/S Gear Case Assembly Components”

Special Tool

S6JB0B6308002

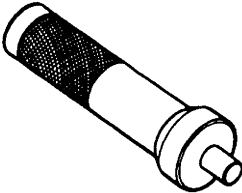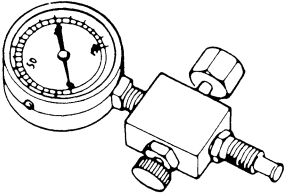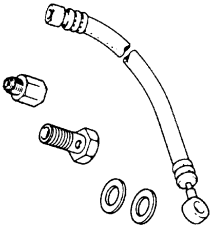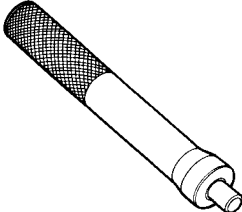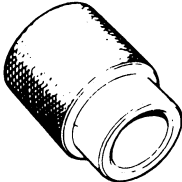09913–75821 Bearing installer attachment 🔧		09915–77412 Oil pressure gauge 🔧	
09915–77420 Oil pressure gauge attachment and hose set 🔧		09943–88211 Pinion bearing installer 🔧	
09945–55410 Bushing installer 🔧 / 🔧			

CONTENTS

Precautions	7-1	HVAC Control Module Removal and Installation	7A-12
Precautions.....	7-1	HVAC Control Module and Its Circuits Inspection (for Vehicle without A/C)	7A-12
Precautions for HVAC	7-1	Air Flow Control Actuator Removal and Installation	7A-12
Heater and Ventilation.....	7A-1	Air Flow Control Actuator Inspection	7A-12
General Description	7A-1	Temperature Control Actuator Removal and Installation	7A-13
Heater and Ventilation Construction	7A-1	Temperature Control Actuator Inspection	7A-13
Body Ventilation Construction	7A-2	Air Intake Control Actuator Removal and Installation	7A-13
On-Board Diagnostic System Description (for Vehicle without A/C).....	7A-2	Air Intake Control Actuator Inspection.....	7A-14
HVAC Control System Description (for Vehicle without A/C).....	7A-2	Actuator Linkage Inspection	7A-14
Schematic and Routing Diagram	7A-3	Center Ventilation Louver Removal and Installation	7A-14
Heater and Ventilation Wiring Circuit Diagram	7A-3	Side Ventilation Louver Removal and Installation	7A-15
Electronic Control Input / Output Diagram (for Vehicle without A/C).....	7A-3	Rear Duct Components.....	7A-16
Component Location	7A-4	Rear Duct Removal and Installation.....	7A-16
Electronic Components Location for Heater (for Vehicle without A/C)	7A-4		
Diagnostic Information and Procedures.....	7A-5	Air Conditioning System.....	7B-1
Heater and Ventilation System Check	7A-5	Precautions.....	7B-1
Visual Inspection	7A-7	A/C System Caution.....	7B-1
DTC Check	7A-7	Precautions on Servicing A/C System	7B-1
DTC Clearance	7A-7	Precautions in Diagnosing Trouble	7B-1
DTC Table.....	7A-7	Precautions on Handling Refrigerant HFC-134a (R-134a).....	7B-1
Fail-Safe Table.....	7A-7	Precautions on Servicing Refrigerant Line.....	7B-2
Scan Tool Data	7A-7	Precautions on Refrigerant Recovery	7B-2
Heater and Ventilation Symptom Diagnosis.....	7A-8	Precautions on Refrigerant Charge.....	7B-2
Repair Instructions	7A-9	Precautions on Replenishing Compressor Oil	7B-2
Blower Unit and Heater Unit Components	7A-9	Precautions on Servicing Compressor Assembly.....	7B-3
HVAC Unit Removal and Installation (for Vehicle without A/C).....	7A-9	General Description	7B-4
HVAC Air Filter Removal and Installation (for Vehicle without A/C).....	7A-9	AUTO A/C System Description	7B-4
HVAC Air Filter Inspection (for Vehicle without A/C).....	7A-9	HVAC Control System Description.....	7B-4
Blower Motor Removal and Installation.....	7A-9	HVAC Control Module Operation Description	7B-4
Blower Motor Inspection	7A-9	A/C Refrigerant Type Description	7B-4
Blower Motor Controller Removal and Installation	7A-10	Sub-Cool A/C System Description	7B-5
Blower Motor Controller Inspection	7A-10	A/C Evaporator Temperature Sensor Description	7B-6
Blower Motor Relay Inspection	7A-11	On-Board Diagnostic System Description	7B-6
Heater Core Removal and Installation	7A-11	Schematic and Routing Diagram	7B-7
		Air Flow Diagram of A/C System.....	7B-7

Auto A/C Electronic Control Input / Output Diagram	7B-7	DTC B1563: A/C Refrigerant Pressure Sensor and/or Its Circuit Malfunction	7B-55
A/C System Wiring Circuit Diagram	7B-8	HVAC Control Module and Its Circuits Inspection	7B-56
Component Location	7B-9	A/C System Inspection at ECM	7B-58
A/C Control System Components Location	7B-9	Repair Instructions	7B-59
Diagnostic Information and Procedures	7B-11	Operation Procedure for Charging A/C with Refrigerant	7B-59
Air Conditioning System Check	7B-11	A/C Condenser Assembly On-Vehicle Inspection	7B-63
DTC Check	7B-13	A/C Condenser Assembly Removal and Installation	7B-63
DTC Clearance	7B-14	Desiccant Removal and Installation	7B-64
DTC Table	7B-15	HVAC Air Filter Removal and Installation	7B-65
Fail-Safe Table	7B-17	HVAC Air Filter Inspection	7B-65
Scan Tool Data	7B-18	HVAC Unit Components	7B-66
Visual Inspection	7B-20	HVAC Unit Removal and Installation	7B-68
A/C System Performance Inspection	7B-20	A/C Evaporator Removal and Installation	7B-69
A/C System Symptom Diagnosis	7B-26	A/C Evaporator Inspection	7B-69
Abnormal Noise Diagnosis	7B-28	A/C Evaporator Temperature Sensor Removal and Installation	7B-70
Abnormal Noise Symptom Diagnosis of A/C System	7B-28	A/C Evaporator Temperature Sensor Inspection	7B-71
DTC B1502: Inside Air Temperature Sensor and/or Its Circuit Malfunction	7B-30	Expansion Valve On-Vehicle Inspection	7B-71
DTC B1503: A/C Evaporator Air Temperature Sensor and/or Its Circuit Malfunction	7B-31	Expansion Valve Removal and Installation	7B-71
DTC B1504: Sunload Sensor and/or Its Circuit Malfunction	7B-33	A/C Refrigerant Pressure Sensor and Its Circuit Inspection	7B-72
DTC B1511: Temperature Control Actuator (Position Sensor) and/or Its Circuit Malfunction	7B-34	A/C Refrigerant Pressure Sensor Removal and Installation	7B-72
DTC B1512: Air Flow Control Actuator (Position Sensor) and/or Its Circuit Malfunction	7B-37	Sunload Sensor Removal and Installation	7B-73
DTC B1513: Temperature Control Actuator and/or Its Circuit Malfunction	7B-39	Sunload Sensor Inspection	7B-73
DTC B1514: Air Flow Control Actuator and/or Its Circuit Malfunction	7B-42	Inside Air Temperature Sensor Removal and Installation	7B-73
DTC B1520: Temperature Selector and/or Its Circuit Malfunction	7B-44	Inside Air Temperature Sensor Inspection	7B-73
DTC B1521: Blower Speed Selector and/or Its Circuit Malfunction	7B-45	Outside Air Temperature Sensor Removal and Installation	7B-74
DTC B1530: Air Intake Control Actuator (Position Sensor) and/or Its Circuit Malfunction	7B-46	Outside Air Temperature Sensor Inspection	7B-74
DTC B1531: Air Intake Control Actuator and/ or Its Circuit Malfunction	7B-48	Air Flow Control Actuator Removal and Installation	7B-74
DTC B1546: A/C Refrigerant Pressure Malfunction	7B-51	Air Flow Control Actuator Inspection	7B-74
DTC B1551: Serial Communication Circuit Malfunction	7B-52	Air Intake Control Actuator Removal and Installation	7B-74
DTC B1552: Serial Communication Circuit Malfunction	7B-53	Air Intake Control Actuator Inspection	7B-74
DTC B1553: CAN Communication Circuit Malfunction	7B-54	Temperature Control Actuator Removal and Installation	7B-74
DTC B1556: Camshaft Position (CMP) Sensor and/or Its Circuit Malfunction	7B-54	Temperature Control Actuator Inspection	7B-74
DTC B1557: Wheel Speed Sensor and/or Its Circuit Malfunction	7B-54	HVAC Control Module Removal and Installation	7B-74
DTC B1561: Engine Coolant Temperature Sensor and/or Its Circuit Malfunction	7B-55	A/C Compressor Drive Belt Inspection and Adjustment	7B-74
DTC B1562: Outside Air Temperature Sensor and/or Its Circuit Malfunction	7B-55	A/C Compressor Drive Belt Removal and Installation	7B-74
		A/C Compressor Relay Inspection	7B-74
		Compressor Assembly On-Vehicle Inspection	7B-75
		Compressor Assembly Removal and Installation	7B-75
		Magnet Clutch Components	7B-76
		Magnet Clutch Operating Check	7B-76
		Magnet Clutch Removal and Installation	7B-77
		Relief Valve On-Vehicle Inspection	7B-78

Specifications	7B-79	Special Tools and Equipment	7B-79
Tightening Torque Specifications.....	7B-79	Recommended Service Material	7B-79

Precautions

Precautions

Precautions for HVAC

S6JB0B7000001

Air Bag Warning

Refer to “Air Bag Warning in Section 00”.

A/C System Caution

Refer to “A/C System Caution in Section 00”.

Precautions on Servicing A/C System

Refer to “Precautions on Servicing A/C System in Section 7B”.

Precautions on Servicing Compressor

Refer to “Precautions on Replenishing Compressor Oil in Section 7B”.

Heater and Ventilation


General Description

Heater and Ventilation Construction

S6JB0B7101001

The heater, an in and out air selectable-type hot water heater, is so constructed that it is possible to assure an agreeable ventilation at all times by providing the ventilator air outlets at the center and both sides (right and left) of the instrument panel, the hot air outlet at a place close to the feet of front passengers, and the defroster air outlets at places, right and left, along the windshield glass.

The heater and ventilation consist of the following parts.

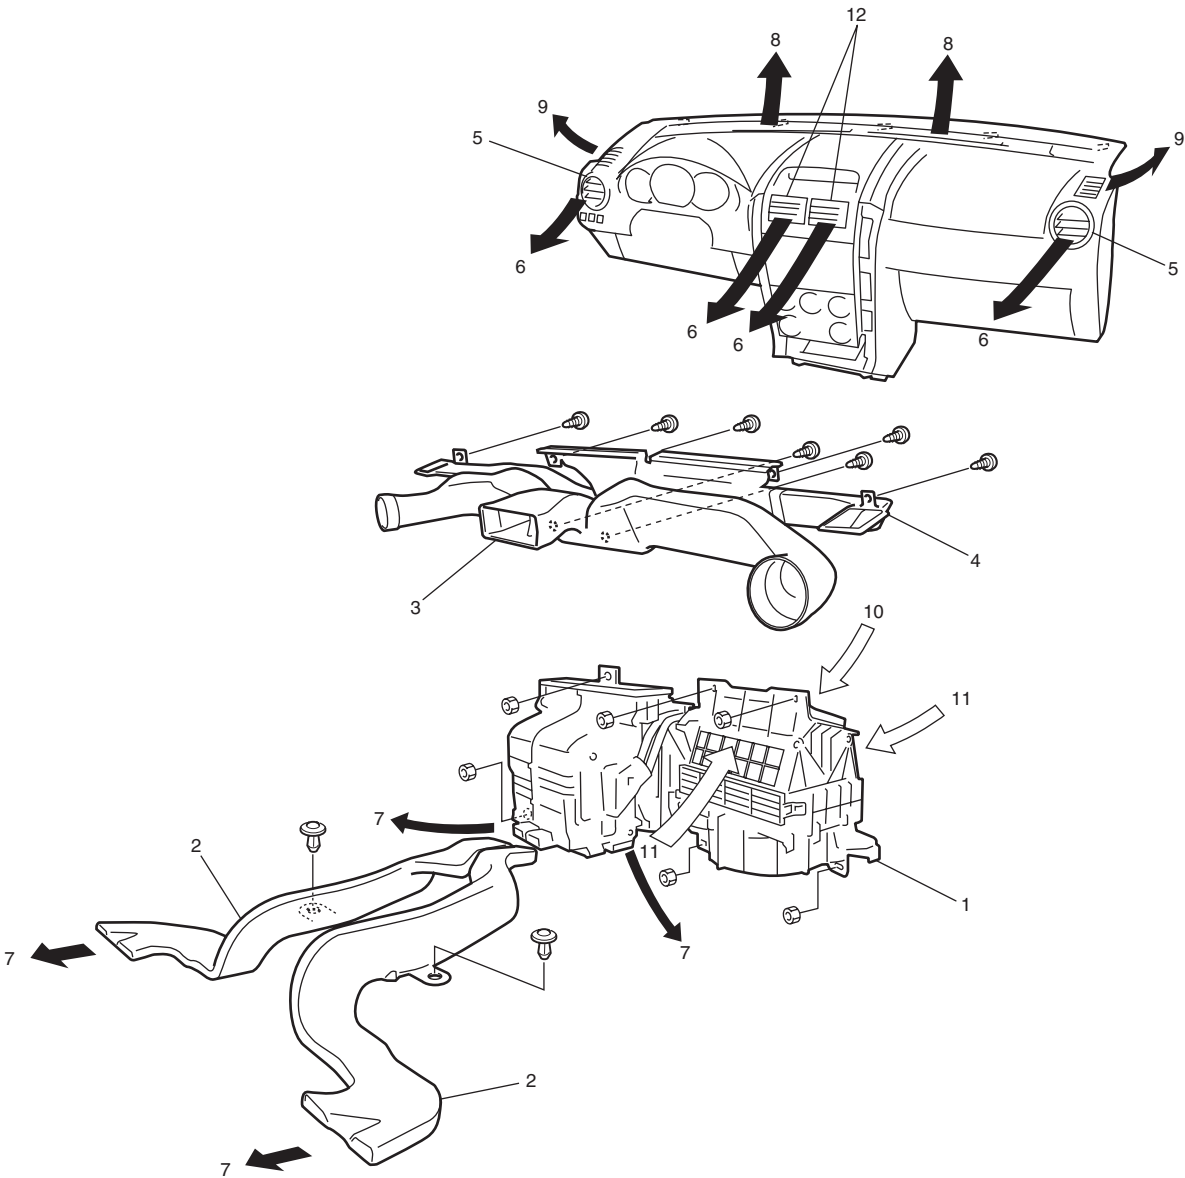


I5JB0A710001-04

1. HVAC unit	4. Defroster duct	7. Foot air	10. Fresh air
2. Rear duct	5. Side ventilation louver	8. Defroster air	11. Recirculation air
3. Ventilator duct	6. Ventilation air	9. Demister air	12. Center ventilation louver

Body Ventilation Construction

S6JB0B7101002

The body ventilation system of this vehicle has a fresh air intake (1) located at the cowl top panel. When fresh air intake air selector is at FRE position (fresh), ventilating air is drawn into the interior from the cowl center garnish and drawn out from the ventilator outlet (2) provided at each side body outer panel (both right and left side).

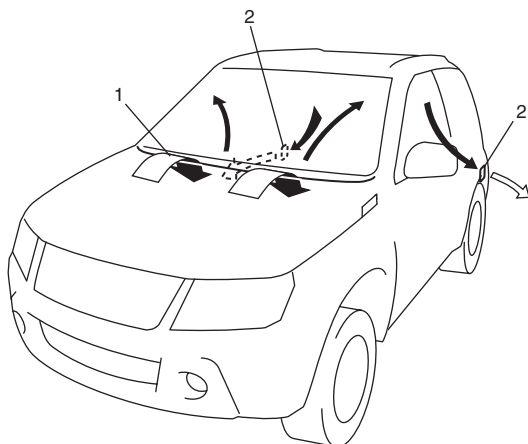

I5JB0A710002-03

On-Board Diagnostic System Description (for Vehicle without A/C)

S6JB0B7101003


HVAC control module (for vehicle without A/C) detects malfunction, which may occur in the following area. When HVAC control module detects any malfunction, the REC (recirculation) indicator light (4) flashes on and off continuously after turning ignition switch to ON position.

- ECT sensor
- CMP sensor
- Wheel speed sensor
- Temperature control actuator
- Air flow control actuator
- Air intake control actuator
- Temperature selector of HVAC control module
- Blower speed selector of HVAC control module
- Serial communication line
- CAN communication line

DTC can be checked by either one of the following ways.

- DTC can be checked by using SUZUKI scan tool (2) connected to DLC (1).
- Without using SUZUKI scan tool, DTC can be checked by reading the flashing pattern of both the FRE (fresh) indicator light (3) and the REC (recirculation) indicator light (4).

- Pressing DEF (defogger) switch (5) alternates display of current DTC and history DTC.
- DEF indicator light (6) remains off when display is in current DTC and it lights up when display is in history DTC.

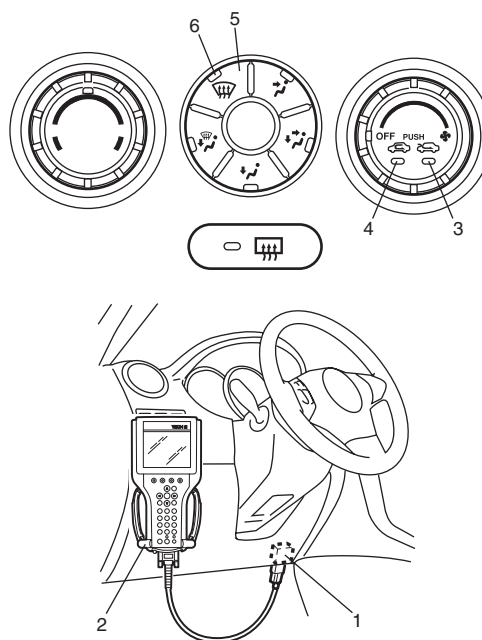

I5JB0A710004-04

HVAC Control System Description (for Vehicle without A/C)

S6JB0B7101004

For CAN communication system, refer to description on "CAN Communication System Description in Section 1A".

When following data are sent from control modules to BCM through CAN communication, they are sent from BCM to HVAC control module through serial communication line.

- Engine coolant temperature
- Engine Speed
- Wheel speed (Vehicle speed)

HVAC control module has a function to make initial settings of temperature control actuator, air intake actuator and air flow actuator.

For vehicle without A/C, HVAC control module uses engine speed signal so that temperature control actuator, air intake actuator and air flow actuator can make initial setting for door position.

Initial settings of actuators are automatically made when engine is started for the first time after battery is connected.

When initial settings are made, each actuator is forced to operate for about 15 seconds continuously.

Schematic and Routing Diagram


Heater and Ventilation Wiring Circuit Diagram

S6JB0B7102001

Refer to "A/C System Wiring Circuit Diagram in Section 7B".

Electronic Control Input / Output Diagram (for Vehicle without A/C)

S6JB0B7102002

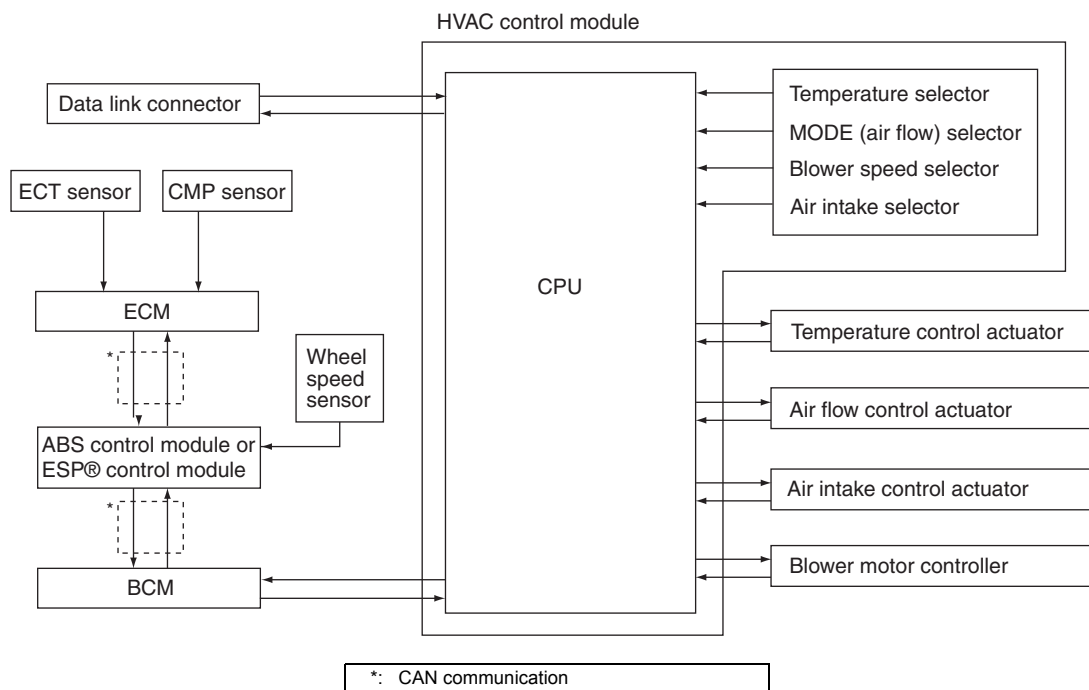

I6JB01710001-04


Component Location

Electronic Components Location for Heater (for Vehicle without A/C)

S6JB0B7103001

NOTE

The figure shows left-hand steering vehicle. For right hand steering vehicle, parts with (*) are installed at the opposite side.

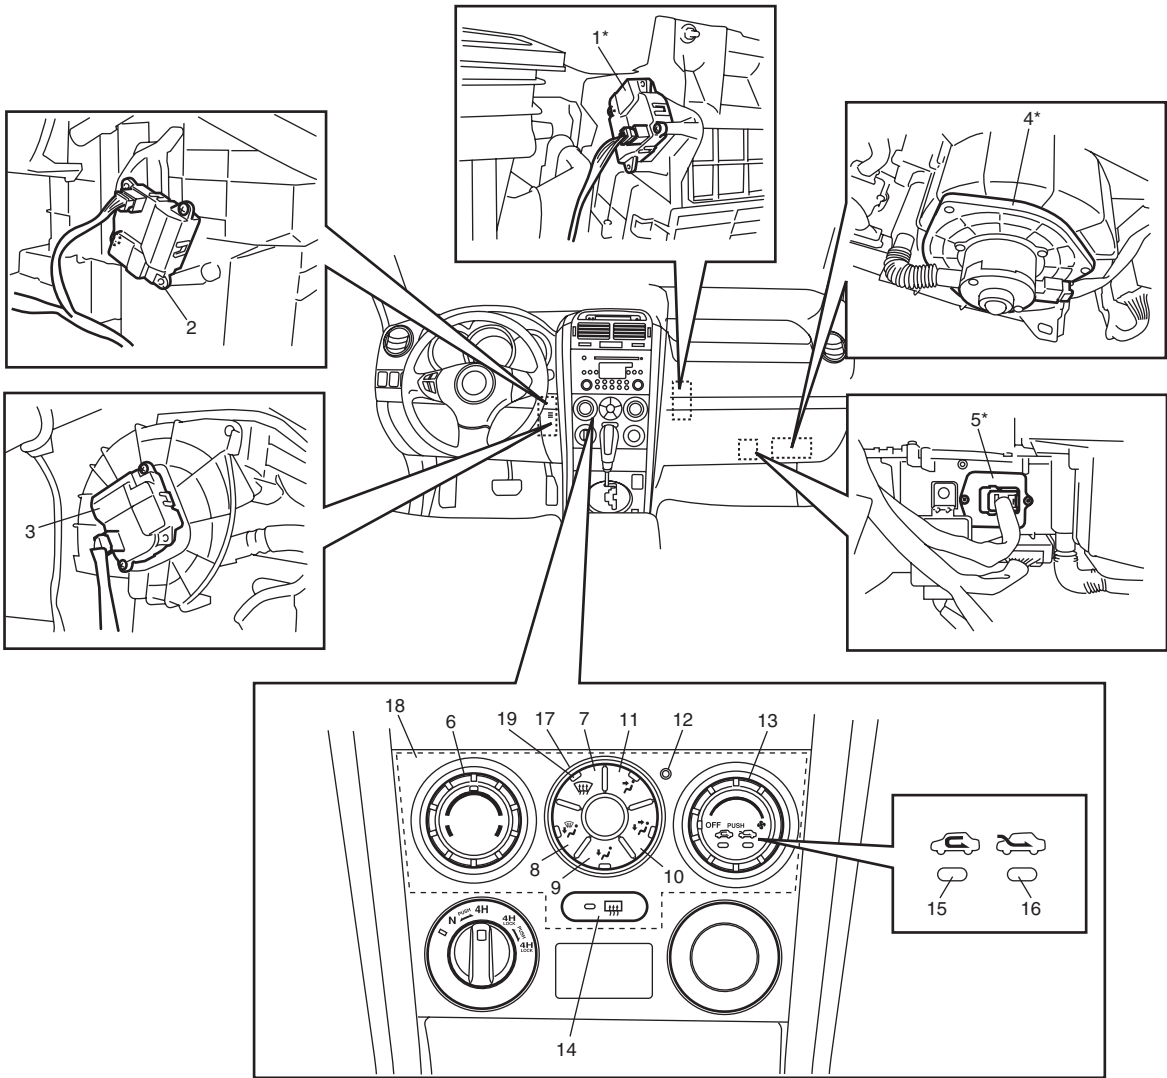

i6JB0B710001-01

1. Air intake control actuator	8. "DEF / FOOT" switch	15. "REC" indicator light
2. Temperature control actuator	9. "FOOT" switch	16. "FRE" indicator light
3. Air flow control actuator	10. "BI-LEVEL" switch	17. MODE selector
4. Blower motor	11. "VENT" switch	18. HVAC control module (for vehicle without A/C)
5. Blower motor controller	12. Theft deterrent light	19. "DEF" indicator light
6. Temperature selector	13. Blower speed selector / Air intake selector	
7. "DEF" switch	14. Rear defogger switch	

Diagnostic Information and Procedures

Heater and Ventilation System Check

S6JB0B7104001

Step	Action	Yes	No
1	☛ Customer complaint analysis 1) Perform "Customer complaint analysis". <i>Was customer complaint analysis performed?</i>	Go to Step 2.	Perform customer complaint analysis.
2	☛ DTC check 1) Perform "DTC check". <i>Is there any DTC code?</i>	Go to Step 3.	Go to Step 4.
3	☛ Troubleshooting malfunction 1) Perform "Troubleshooting malfunction". <i>Is there any faulty condition?</i>	Repair or replace malfunction part, and go to Step 7.	Go to Step 5.
4	☛ Visual inspection 1) Perform "Visual inspection". <i>Is there any faulty condition?</i>	Repair or replace malfunction part.	Go to Step 5.
5	☛ Perform heater and ventilation system symptom diagnosis 1) Inspect and repair referring to "Heater and Ventilation Symptom Diagnosis". <i>Is there any faulty condition?</i>	Repair or replace malfunction part, and go to Step 7.	Go to Step 6.
6	☛ Check for intermittent problem 1) Check for intermittent troubles referring to "Intermittent and Poor Connection Inspection in Section 00". <i>Is there any faulty condition?</i>	Repair or replace malfunction part, and go to Step 7.	Go to Step 7.
7	☛ Final confirmation test 1) Perform "Final confirmation test". <i>Is there any malfunction code?</i>	Go to Step 4.	Heater and ventilation system is in good condition.

7A-6 Heater and Ventilation:

Description for Each Step

Step 1. Customer complaint analysis

Talk to customer, and then record details of the problem.

Customer questionnaire (example)

Customer's Name:	Model:	VIN:	
Date of Issue:	Date of Reg.	Date of Problem:	Mileage:
Problem Symptoms	<ul style="list-style-type: none">• REC indicator light and/or FRE indicator light abnormal: fails to turn on / fails to turn off / flashes• Abnormal noise while is working: from blower motor / from HVAC unit / from engine room, other_____• Air intake selector dose not work:• Blower speed selector dose not work:• Temperature selector dose not work:• Other:		
Frequency of Occurrence	• Continuous / Intermittent (_____ times a day, a month) / other_____		
Conditions for Occurrence of Problem	<ul style="list-style-type: none">• Vehicle at stop & blower motor is working:• For some time after blower speed selector is ON:• When outside air temperature is high:• When outside air temperature is low:• All the time:		
Environmental Condition	<ul style="list-style-type: none">• Weather: fair / cloudy / rain / snow / other_____• Temperature: _____ °F (_____ °C)		
Diagnostic Trouble Code	<ul style="list-style-type: none">• First check: Normal code / malfunction code (_____)• Second check: Normal code / malfunction code (_____)		

NOTE

The form is a standard sample. It should be modified according to conditions characteristic of each market.

Step 2. Visual inspection

As a preliminary step, be sure to perform visual check of the items that support proper function of the heater and ventilation referring to "Visual Inspection".

Step 3. DTC check

Check DTC referring to "DTC Check".

Step 4. Troubleshooting malfunction

Based on the DTC, perform an applicable DTC diagnostic flow and locate the cause of the trouble, namely in a sensor, wire harness, connector, actuator, HVAC control module or other part and repair faulty parts.

Step 5. Heater and ventilation system symptom diagnosis

Check any part or system suspected to be a possible cause referring to "Heater and Ventilation Symptom Diagnosis".

Step 6. Check for intermittent problem

Check any part where an intermittent trouble is easy to occur (e.g., wire harness, connector, etc.), referring to "Intermittent and Poor Connection Inspection in Section 00" and related circuit of trouble cord recorded.

Step 7. Final confirmation test

Confirm if the problem symptom is troubleshooting and the heater and ventilation system is free from any abnormal conditions. If there existed DTC, clear the DTC. Then, check if the DTC is still detected and if there is any other DTC.

Visual Inspection

S6JB0B7104002

Check visually the following parts and systems.

Inspection item	Correction
<ul style="list-style-type: none"> • Engine coolant • Heater pipe and/or hose • Battery • Connectors of electric wire harness • Fuses • Parts • Other parts that can be checked visually 	<ul style="list-style-type: none"> • Leakage • Disconnection, looseness and deterioration • Fluid level and corrosion of terminal • Disconnection and friction • Burning • Installation and damage

DTC Check

S6JB0B7104003

DTC check is the same as vehicle equipped with A/C system.
Refer to "DTC Check in Section 7B".

DTC Clearance

S6JB0B7104004

DTC clearance is the same as vehicle equipped with A/C system.
Refer to "DTC Clearance in Section 7B".

DTC Table

S6JB0B7104005

DTC table is the same as vehicle equipped with A/C system.
Refer to "DTC Table in Section 7B".

Fail-Safe Table

S6JB0B7104006

Fail-safe table is the same as vehicle equipped with A/C system.
Refer to "Fail-Safe Table in Section 7B".

Scan Tool Data

S6JB0B7104007

Scan tool data is the same as vehicle equipped with A/C system.
Refer to "Scan Tool Data in Section 7B".

Heater and Ventilation Symptom Diagnosis

Condition	Possible cause	Correction / Reference Item
Blower won't work even when blower speed selector is ON	Blower fuse blown	Replace fuse to check for short.
	Blower motor faulty	Check blower motor referring to "Blower Motor Inspection".
	Blower motor relay faulty	Check relay referring to "Blower Motor Relay Inspection".
	Blower motor controller faulty	Check blower motor controller referring to "Blower Motor Controller Inspection".
	Blower speed selector faulty	Check HVAC control module referring to "HVAC Control Module and Its Circuits Inspection (for Vehicle without A/C)" or "HVAC Control Module and Its Circuits Inspection in Section 7B".
	Wiring or grounding faulty	Repair as necessary.
Air temperature is not changed even when temperature selector is changed	Temperature control door broken	Repair Temperature control door.
	Linkage broken	Check actuator linkage referring to "Actuator Linkage Inspection".
	Heater hoses leaking or clogged	Replace hoses.
	Heater core leaking or clogged	Replace heater core referring to "Heater Core Removal and Installation".
	Temperature control actuator faulty	Check temperature control actuator referring to "Temperature Control Actuator Inspection".
	Temperature selector faulty	Check HVAC control module referring to "HVAC Control Module and Its Circuits Inspection (for Vehicle without A/C)" or "HVAC Control Module and Its Circuits Inspection in Section 7B".
Air outlet port is not changed when air flow selector is changed	Air flow control door broken	Repair air flow control door.
	Linkage broken	Check actuator linkage referring to "Actuator Linkage Inspection".
	Air flow control actuator faulty	Check air flow control actuator referring to "Air Flow Control Actuator Inspection".
	Mode selector faulty	Check HVAC control module referring to "HVAC Control Module and Its Circuits Inspection (for Vehicle without A/C)" or "HVAC Control Module and Its Circuits Inspection in Section 7B".
No fresh air inlet is changed.	Fuse blown	Check related fuses and check for short circuit to ground.
	Air intake control actuator faulty	Check air intake control actuator.
	Air intake control door broken	Repair air intake control door.
	Linkage broken	Check actuator linkage referring to "Actuator Linkage Inspection".
	Air intake selector faulty	Check HVAC Control module referring to "HVAC Control Module and Its Circuits Inspection (for Vehicle without A/C)" or "HVAC Control Module and Its Circuits Inspection in Section 7B".
	Wiring or grounding faulty	Repair or replace as necessary.

Repair Instructions

Blower Unit and Heater Unit Components

S6JB0B7106001

As heater unit and blower unit are incorporated as an assembly named HVAC unit, they cannot be removed individually from vehicle body.

Same HVAC unit is used whether vehicle is equipped with A/C system or not.

For components of HVAC unit, refer to "HVAC Unit Components in Section 7B".

HVAC Unit Removal and Installation (for Vehicle without A/C)

S6JB0B7106002

Refer to "HVAC Unit Removal and Installation in Section 7B".

HVAC Air Filter Removal and Installation (for Vehicle without A/C)

S6JB0B7106003

Refer to "HVAC Air Filter Removal and Installation in Section 7B".

HVAC Air Filter Inspection (for Vehicle without A/C)

S6JB0B7106004


Refer to "HVAC Air Filter Inspection in Section 7B".

Blower Motor Removal and Installation

S6JB0B7106005

Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Disable air bag system referring to "Disabling Air Bag System in Section 8B".
- 3) Disconnect blower motor lead wire (2) at coupler.
- 4) Remove blower motor (1) from HVAC unit.

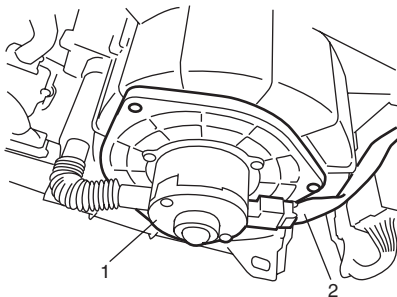

I5JB0A710006-03


Installation

- 1) Reverse removal procedure for installation.
- 2) Enable air bag system referring to "Enabling Air Bag System in Section 8B".

Blower Motor Inspection

S6JB0B7106006


- Check continuity between terminals as shown in the figure.
If check result is continuity, proceed to next operation check. If not, replace.

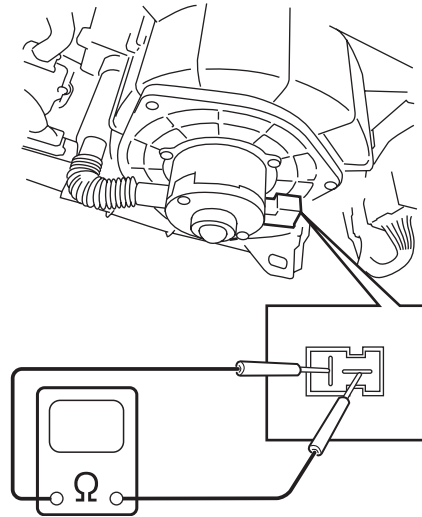

I5JB0A710007-01

- Check for operation and electric current.
 - a. Put blower motor (1) in a soft-jawed vise.
 - b. Connect battery to blower motor as shown.
 - c. Check if blower motor operates smoothly without noise.
 - d. Check if ammeter indicates the specified current.
If measured current is out of specification, replace blower motor.

Specified current for blower motor
Approx. 12 A at 12 V

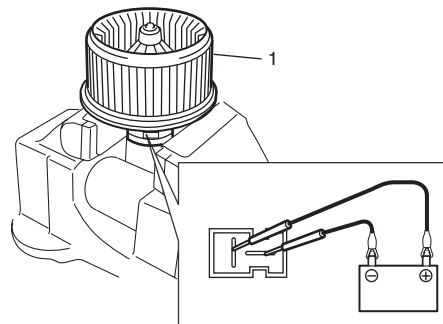


I5JB0A710008-01

Blower Motor Controller Removal and Installation

S6JB0B7106007

Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Disable air bag system referring to “Disabling Air Bag System in Section 8B”.
- 3) Remove glove box.
- 4) Remove passenger lower member.
- 5) Disconnect blower motor controller coupler (3).
- 6) Remove blower motor controller (1) by loosening its fastening screws (2).

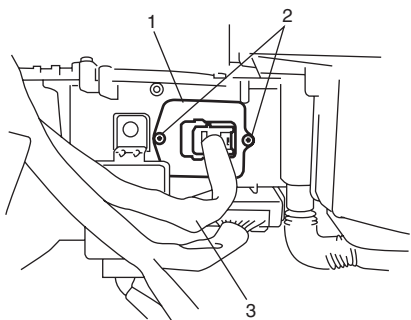

I5JB0A710009-01

Installation



- 1) Reverse removal procedure.
- 2) Enable air bag system referring to “Enabling Air Bag System in Section 8B”.

Blower Motor Controller Inspection

S6JB0B7106008

Check controller for operation as follows.

- Using service wire, connect battery positive terminal to “1” terminal (1) of blower motor controller (6) and battery negative terminal to “2” terminal (2) of blower motor controller.
- Using bulb (3.4 W) (4) and service wire, connect battery positive terminal to “3” terminal (3) of blower motor controller as shown figure.
- Arrange 3 new 1.5 V batteries (5) in series (check that total voltage is 4.5 – 5.0 V) and connect its positive terminal to “3” terminal of blower motor controller and negative terminal to “2” terminal of blower motor controller. Then, check that bulb lights. If bulb does not light under the above conditions, replace blower motor controller.

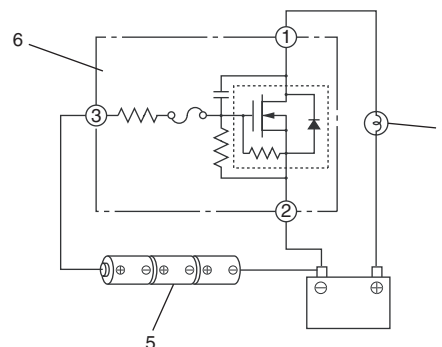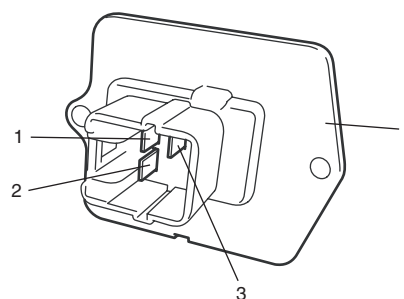


I5JB0A710010-01

Blower Motor Relay Inspection

S6JB0B7106009

- 1) Disconnect negative (–) cable at battery.
- 2) Remove blower motor relay (1) from vehicle.
- 3) Check that there is no continuity between terminal “c” and “d”. If there is continuity, replace relay.
- 4) Connect battery positive (+) terminal to terminal “b” of relay.
Connect battery negative (–) terminal to terminal “a” of relay.
Check continuity between terminal “c” and “d”.
If there is no continuity when relay is connected to the battery, replace relay.

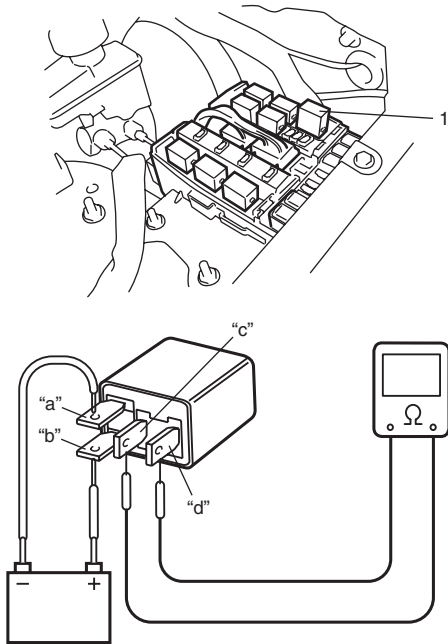


I5JB0A710011-01

Heater Core Removal and Installation

S6JB0B7106010

Removal

- 1) Remove instrument panel referring to “Instrument Panel Removal and Installation in Section 9C”.
- 2) Remove HVAC unit. Refer to “HVAC Unit Removal and Installation in Section 7B”.
- 3) Remove heater core pipe clamp and then, pull out heater core (1) from HVAC unit.

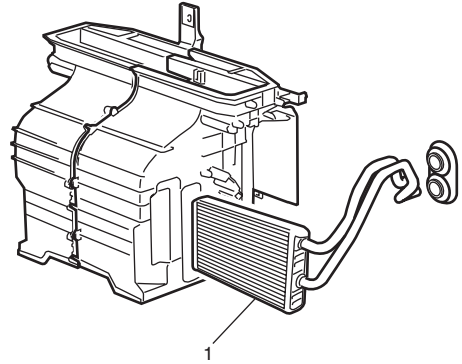

I5JB0A710012-02

Installation


- 1) Install heater core by reversing removal procedure, noting the following items.
 - When installing heater core, be careful not to damage fins of heater core.
 - When installing each part, be careful not to catch any wiring harness.
- 2) Fill engine coolant to radiator.
- 3) Enable air bag system referring to “Enabling Air Bag System in Section 8B”.

HVAC Control Module Removal and Installation

S6JB0B7106011

Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Remove center garnish with audio unit (if equipped) and HVAC control module referring to “Audio Unit Removal and Installation in Section 9C”.
- 3) Remove HVAC control module mounting screws and then, remove HVAC control module (2) from center garnish (1).

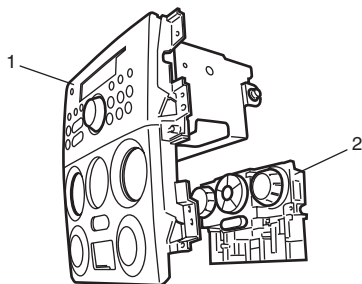

I5JB0A710013-01

Installation

Reverse removal procedure.

HVAC Control Module and Its Circuits Inspection (for Vehicle without A/C)

S6JB0B7106012


HVAC control module and its circuits inspection is the same as vehicle equipped with A/C system. Refer to “HVAC Control Module and Its Circuits Inspection in Section 7B”.

Air Flow Control Actuator Removal and Installation

S6JB0B7106013

Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Remove steering column hole cover from instrument panel.
- 3) Disconnect air flow control actuator connector (2).
- 4) Remove screws and then, remove air flow control actuator (1) from HVAC unit.

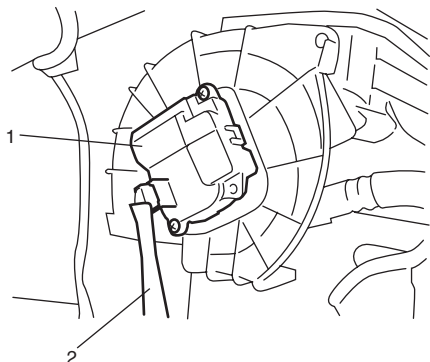

I5JB0A710014-02

Installation

Reverse removal procedure.



Air Flow Control Actuator Inspection

S6JB0B7106014

- 1) Remove air flow control actuator (1) referring to “Air Flow Control Actuator Removal and Installation”.
- 2) Check resistance between “d” and “e” terminals.

Air flow control actuator resistance**DEF position: Approx. 700 Ω** **FOOT / BENT position: Approx. 1.7 k Ω** **FOOT position: Approx. 2.4 k Ω** **BI-LEVEL position: Approx. 3.9 k Ω** **VENT position: Approx. 5.1 k Ω**

- 3) Connect battery positive (+) terminal to terminal “a” and battery negative (–) terminal to terminal “b”. Check if position of air flow control actuator changes VENT position to DEF position.
- 4) Connect battery positive (+) terminal to terminal “b” and battery negative (–) terminal to terminal “a”. Check if position of air flow control actuator changes DEF position to VENT position. If malfunction is found, replace air flow control actuator with new one.

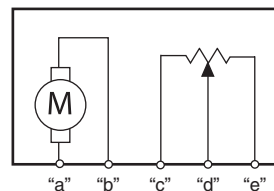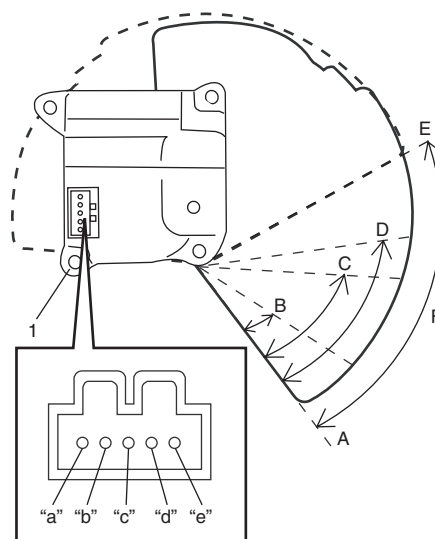

I5JB0A710015-03


A: VENT position	D: DEF / FOOT position (Approx. 50°)
B: BI-LEVEL position (Approx. 22°)	E: DEF position
C: FOOT position (Approx. 40°)	F: Approx. 82°

Temperature Control Actuator Removal and Installation

S6JB0B7106015

Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Remove steering column hole cover from instrument panel.
- 3) Disconnect temperature control actuator connector (2).
- 4) Remove screws (3) and then, remove temperature control actuator (1) from HVAC unit.

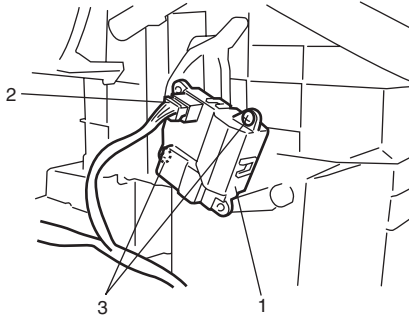

I5JB0A710016-01

Installation

Reverse removal procedure.

Temperature Control Actuator Inspection

S6JB0B7106016

- 1) Remove temperature control actuator (1). Refer to "Temperature Control Actuator Removal and Installation".
- 2) Check resistance between "d" and "e" terminals.


Temperature control actuator resistance

Max cold position: Approx. 480 Ω

Max hot position: Approx. 3.9 k Ω

- 3) Connect battery positive (+) terminal to terminal "b" and battery negative (–) terminal to terminal "a". Check if position of actuator lever changes COLD position to HOT position.

- 4) Connect battery positive (+) terminal to terminal "a" and battery positive (–) terminal to terminal "b". Check if position of actuator lever changes HOT position to COLD position. If malfunction is found, replace temperature control actuator with new one.

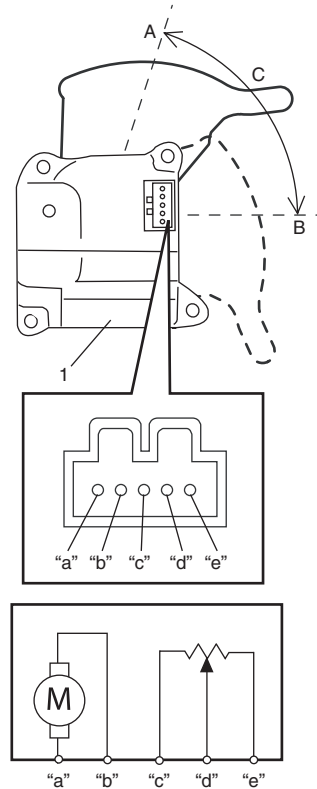

I5JB0A710017-03


A: Max cold position	B: Max hot position	C: Approx. 72°
----------------------	---------------------	----------------

Air Intake Control Actuator Removal and Installation

S6JB0B7106017

Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Remove glove box.
- 3) Disconnect air intake control actuator connector (2).
- 4) Remove screws and then, remove air intake control actuator (1) from HVAC unit.

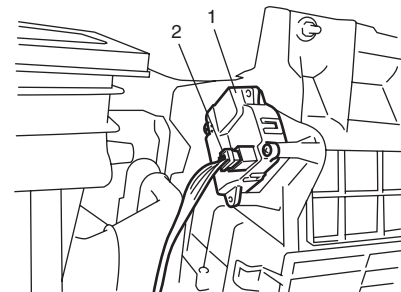

I5JB0A710018-01

Installation

Reverse removal procedure.

Air Intake Control Actuator Inspection

S6JB0B7106018

- 1) Remove air intake control actuator (1). Refer to “Air Intake Control Actuator Removal and Installation”.
- 2) Check resistance between “d” and “e” terminals of actuator.


Air intake control actuator resistance
 LH steering vehicle

REC position: Approx. 4.5 kΩ
 FRE position: Approx. 1.2 kΩ

RH steering vehicle

REC position: Approx. 1.2 kΩ
 FRE position: Approx. 4.5 kΩ

- 3) Connect battery positive (+) terminal to terminal “a” and battery negative (–) terminal to terminal “b”. Check if position of actuator lever is REC position.
- 4) Connect battery positive (+) terminal to terminal “b” and battery negative (–) terminal to terminal “a”. Check if position of actuator lever is FRESH position.

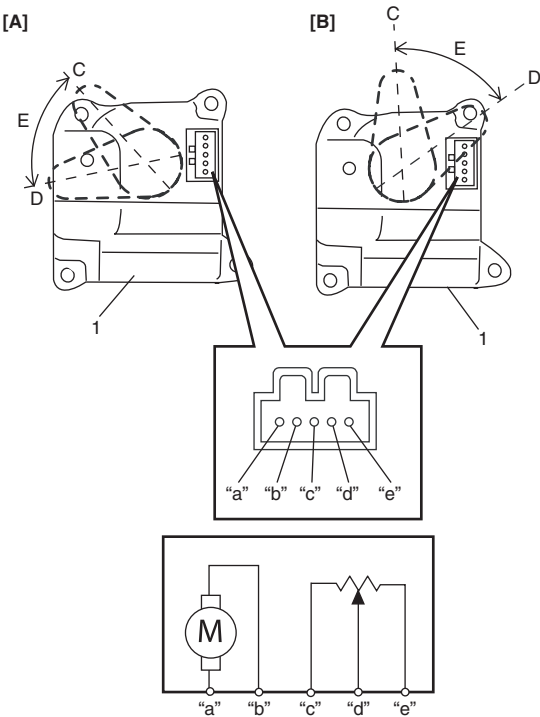

[A]: LH steering vehicle	D: FRESH position
[B]: RH steering vehicle	E: Approx. 60°
C: REC position	

Actuator Linkage Inspection

S6JB0B7106019

- Check if each actuator linkage operates smoothly.
- Check actuator rod for bend.
- Check each actuator linkage for breakage.
- Make sure if there is not any obstruction in operating range of actuator linkage.


If any malfunction is found, repair or replace faulty part(s).

Center Ventilation Louver Removal and Installation

S6JB0B7106020

Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Disable air bag system referring to “Disabling Air Bag System in Section 8B”.
- 3) Remove center garnish with audio unit and HVAC control module referring to “Audio Unit Removal and Installation in Section 9C”.
- 4) Remove mounting screw (1) and then pull off center ventilation louver (2).

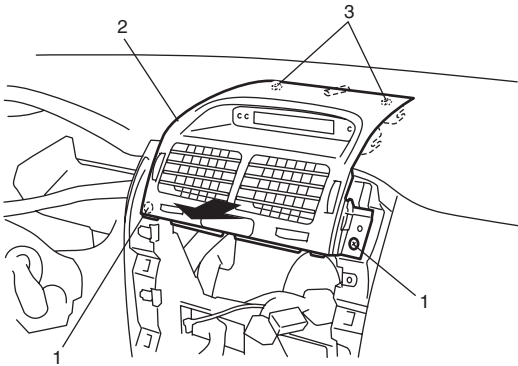


3. Clip

- 5) Disconnect connectors and remove center ventilation louver.
- 6) Remove center ventilation louver from center garnish.

Installation

Reverse removal procedure, noting the following item. Insert backside of center ventilation louver to ventilator duct surely.

- When installing center ventilation louver, align boss (1) and claws (2) with installation hole of instrument panel.

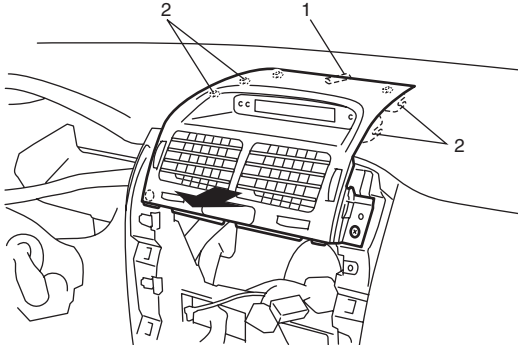

I5JB0A710021-01


- Enable air bag system referring to “Enabling Air Bag System in Section 8B”.

Side Ventilation Louver Removal and Installation

S6JB0B7106021

Removal


- 1) Remove steering column hole cover.
- 2) Remove instrument panel referring to “Instrument Panel Removal and Installation in Section 9C”.
- 3) Remove screws and claws (3), and then remove defroster duct (2) from instrument panel.
- 4) Remove ventilator duct (1) from instrument panel.

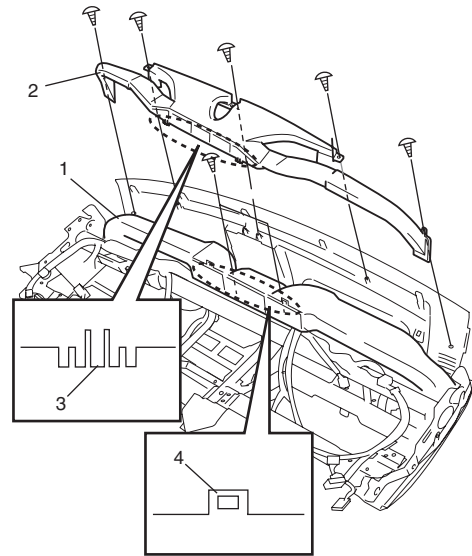

I5JB0A710022-02

4. hole

- 5) Remove side ventilation louver (1) from instrument panel while pressing claws (2).

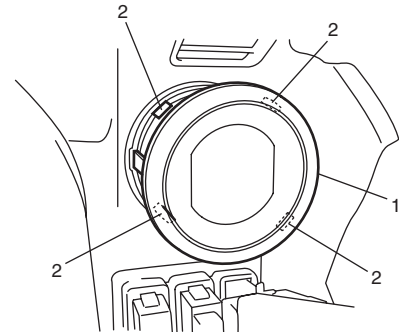


I5JB0A710023-01

Installation

1) Reverse removal procedure, noting the following.

- Install side ventilation louver (1) to instrument panel (2) as shown in figure.

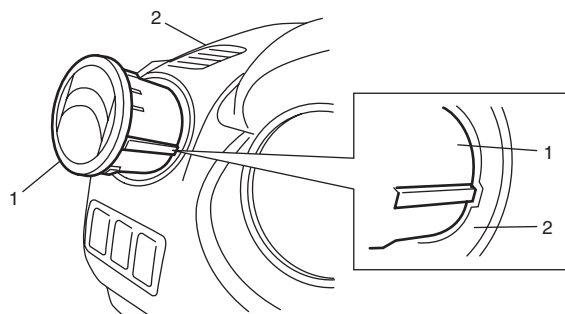


I5JB0A710024-02

- When installing defroster duct to instrument panel, put claws of defroster duct into hole of ventilator duct surely.

Rear Duct Components

S6JB0B7106022

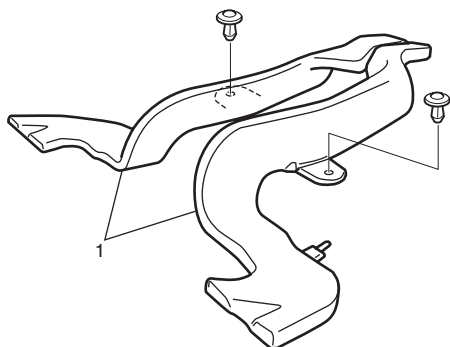

I5JB0A710025-02


1. Rear duct

Rear Duct Removal and Installation

S6JB0B7106023

Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Remove front seats.
- 3) Remove console box.
- 4) Take off carpet till rear ducts is totally exposed.
- 5) Remove rear ducts (1).

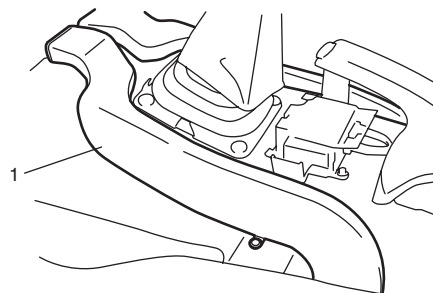


I5JB0A710026-01

Installation

Reverse removal procedure noting the following.

- Insert boss (1) of duct into hole of floor member (2).

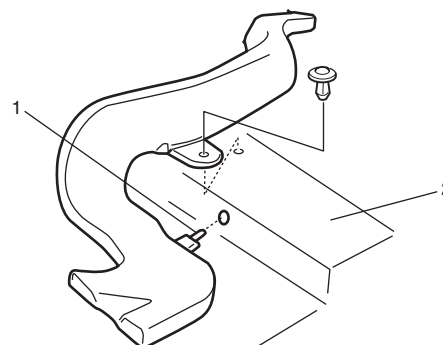

I5JB0A710027-01

Air Conditioning System

Precautions

A/C System Caution

S6JB0B7200001

⚠ CAUTION

The air conditioning system of this vehicle uses refrigerant HFC-134a (R-134a). None of refrigerant, compressor oil and component parts is interchangeable between two types of A/C: one using refrigerant HFC-134a (R-134a) and the other using refrigerant CFC-12 (R-12). Be sure to check which refrigerant is used before any service work including inspection and maintenance. For identification between these two types, refer to "A/C Refrigerant Type Description". When replenishing or changing refrigerant and compressor oil and when replacing parts, make sure that the material or the part to be used is appropriate to the A/C installed in the vehicle being serviced. Use of incorrect one will result in leakage of refrigerant, damage in parts or other faulty condition.

Precautions on Servicing A/C System

S6JB0B7200002

⚠ WARNING

Should refrigerant HFC-134a (R-134a) is exposed to your eye(s), consult a doctor immediately.

- Do not use your hand to rub affected eye(s). Instead, use fresh cold water to splash it over affected area to thus gradually raise its temperature above the freezing point.
- Obtain proper treatment as soon as possible from a doctor or eye specialist. Should liquid refrigerant HFC-134a (R-134a) is exposed to your skin, such affected part should be treated in the same manner as when skin is frostbitten or frozen.

Precautions in Diagnosing Trouble

S6JB0B7200003

- Do not disconnect connector from HVAC control module, battery cable from battery, or main fuse before reading diagnostic information stored in HVAC control module memory.
- When diagnosing vehicle indoors, sunload sensor has to be lighted over vertically with an incandescent light. Otherwise, DTC is detected even if sunload sensor is normal.
- Diagnostic information (diagnostic trouble code) stored in HVAC control module can be checked by display of HVAC control module. Also, it can be checked by using SUZUKI scan tool. Before checking diagnostic information (diagnostic trouble code), read this manual and operator's manual for SUZUKI scan tool to know how to read diagnostic information (diagnostic trouble code).
- When trouble is diagnosed using diagnostic information (diagnostic trouble code) on display of HVAC control module, keep in your mind that each diagnostic information (diagnostic trouble code) has priority, and only diagnostic information (diagnostic trouble code) which has the highest priority is indicated. Therefore, after troubleshooting the malfunction, make sure if there exists any other diagnostic information (diagnostic trouble code).
- After troubleshooting some trouble, DTC can be stored in HVAC control module memory as history DTC.
- Be sure to read "Precautions for Electrical Circuit Service" before inspection.

Precautions on Handling Refrigerant HFC-134a (R-134a)


S6JB0B7200004

- When handling refrigerant, always wear goggles to protect your eyes.
- Avoid you direct contact to liquid refrigerant.
- Do not heat refrigerant container higher than 40 °C (104 °F).
- Do not discharge refrigerant into atmosphere.
- Do not allow liquid refrigerant to touch bright metals. Refrigerant combined with moisture is corrosive and will tarnish surfaces of bright metals including chrome.
- After recovering refrigerant from system, the amount of compressor oil removed must be measured and the same amount added to the system.


Precautions on Servicing Refrigerant Line

S6JB0B7200005

- When connecting hoses and pipes, apply a few drops of compressor oil (refrigerant oil) to seats of coupling nuts and O-ring.

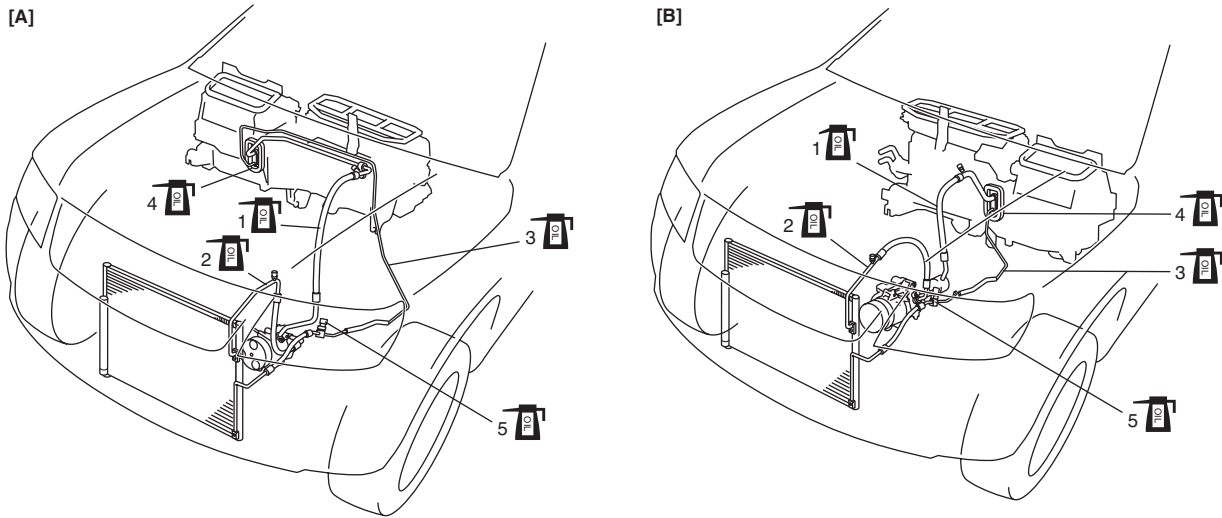

I6JB0B720003-02

[A]: LHD model	3. Liquid pipe
[B]: RHD model	4. Expansion valve
1. Suction hose	5. Pressure sensor
2. Discharge hose	 : Apply compressor oil (refrigerant oil) to O-ring.

- Never use heat for bending pipes. When bending a pipe, try to make its bending radius as slight as possible.
- Keep internal parts of air conditioning free from moisture and dirt. When disconnecting any line from system, install a blind plug or cap to the fitting immediately.
- When tightening or loosening a fitting, use two wrenches, one for turning and the other for support.
- Tighten bolts to specified torque.

Tightening torque

Refrigerant line bolt: 12 N·m (1.2 kgf-m, 9.0 lb-ft)

- Route drain hose so that drained water does not make any contact to vehicle components.

Precautions on Refrigerant Recovery

S6JB0B7200006

When discharging refrigerant out of A/C system, always recover it by using refrigerant recovery and recycling equipment. Discharging refrigerant HFC-134a (R-134a) into atmosphere would cause adverse effect to environments.

NOTE

When handling recovery and recycling equipment, be sure to follow the instruction manual for the equipment.

Precautions on Refrigerant Charge

S6JB0B7200007

Charge a proper amount of refrigerant to A/C system according to charging procedure described in recovery, evacuation and charging. Refer to “Charge” in “Operation Procedure for Charging A/C with Refrigerant”.

Precautions on Replenishing Compressor Oil

S6JB0B7200008

When replacing air conditioning parts with new ones, it is necessary to replenish oil by the amount supposedly remaining in each part.

When Charging Refrigerant Only

When charging refrigerant without replacing any component, replenish the same amount of measured oil when recovering refrigerant (if not measure, replenish 20 cm³ (20 cc) oil).

When Replacing Compressor**⚠ CAUTION**

Be sure to use specified compressor oil or an equivalent compressor oil.

Compressor oil is sealed in each new compressor (1) by the amount required for air conditioner cycle. Therefore, when using a new compressor for replacement, drain oil from it by the amount calculated as follows.

"C" = "A" - "B"

"C": Amount of oil to be drained

"A": Amount of oil sealed in a new compressor

"B": Amount of oil remaining in removed compressor

NOTE

Compressor assembly supplied from factory is filled up with the following amount of oil.

: Compressor oil 99000-99022-00E (Compressor oil (DH-PS, 250cc))

Amount of oil in new compressor

: 150 (+20, -0) cm³ (150 (+20, -0) cc)

Amount of compressor oil to be replenished after part replacement


Evaporator: 50 cm³ (50 cc)

Condenser: 30 cm³ (30 cc)

Receiver/dryer: 10 cm³ (10 cc)

Hoses: 10 cm³ (10 cc)

Pipes: 10 cm³ (10 cc)

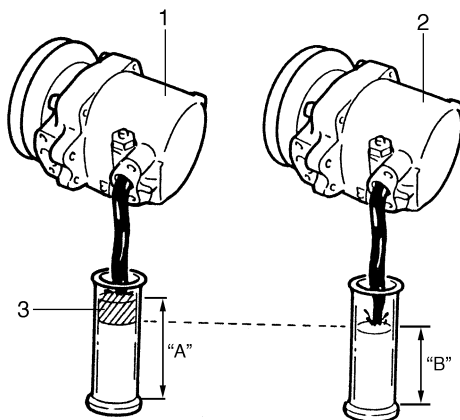

I5JB0A720003-01

2. Removed compressor

3. Excess oil (A - B)

Precautions on Servicing Compressor Assembly

S6JB0B7200009

⚠ CAUTION

- None of refrigerant, compressor oil and component parts is interchangeable between two types of A/C: one using CFC-12 (R-12) and the other using HFC-134a (R-134a).

For identification between these two types, refer to "A/C Refrigerant Type Description".

When replenishing or changing refrigerant and compressor oil and when replacing parts, make sure that the material or the part to be used is appropriate to the A/C installed in the vehicle being serviced. Use of incorrect refrigerant or compressor oil will result in leakage of refrigerant, damage in parts or other faulty condition.

- When servicing the compressor, keep dirt or foreign material away from getting on or into the compressor parts and system. Clean tools and a clean work area are important for proper service.

The compressor connection and the outside of the compressor should be cleaned before any "On-vehicle" repair or before removal of the compressor. The parts must be kept clean at all times and any parts to be reassembled should be cleaned with trichloromethane, naphtha, kerosene or equivalent solvent and dried with dry air. Use only lint free cloths to wipe parts.

- When compressor is removed from the vehicle for servicing, the oil remaining in the compressor should be discarded and new refrigerant oil added to the compressor.

Minor repair procedures may be done on the vehicle without discharging the system. Major repair procedures require that the system be discharged of refrigerant.

General Description

AUTO A/C System Description

S6JB0B7201001

The automatic air conditioning system (auto A/C), HVAC control module automatically controls inside air temperature, blower speed, airflow outlet and so forth. Once users set up desired inside air temperature with the temperature control selector, select “AUTO” position of blower speed selector, push “AUTO” switch of mode selector and push A/C switch, HVAC control module detects inside air temperature, outside air temperature, amount of sunlight, and engine coolant temperature by means of inside air temperature sensor, outside air temperature sensor, sunload sensor, and engine coolant temperature (ECT) sensor respectively. Then, HVAC control module keeps desired in-car temperature at any time. Then, HVAC control module keeps in-car temperature at desired level.

HVAC Control System Description

S6JB0B7201002

For CAN communication system, refer to description on “CAN Communication System Description in Section 1A”. When following data are sent from control modules to BCM through CAN communication, they are sent from BCM to HVAC control module through serial communication line.

- Engine coolant temperature
- Engine speed
- A/C refrigerant pressure
- Vehicle Speed (wheel speed)
- Outside air temperature

Based on above data, HVAC control module sends A/C compressor ON / OFF request signal to BCM through serial communication line. BCM sends this signal through CAN communication to ECM which then causes compressor relay to turn ON / OFF. For more information on signal transmission and reception of Auto A/C system, refer to “Auto A/C Electronic Control Input / Output Diagram”. HVAC control module has a function to make initial settings of temperature control actuator, air intake actuator and air flow actuator. Initial settings of actuators are automatically made when engine is started for the first time after battery is connected. When initial settings are made, each actuator is forced to operate for about 15 seconds continuously.

HVAC Control Module Operation Description

S6JB0B7201004

Temperature Control

HVAC control module calculates the target temperature control door position based on signals from the temperature selector, inside air temperature sensor, outside air temperature sensor and sunload sensor and

controls the temperature control actuator so that the current position of the temperature control door matches its target position.

Fan Speed Control

HVAC control module calculates the target blower fan speed based on signals from the temperature selector, inside air temperature sensor, outside air temperature sensor and sunload sensor, compares it with the current blower fan speed inputted from the blower motor controller to control the current blower fan speed to the target level.

Air Flow Outlet Control

HVAC control module calculates the target temperature control door position based on signals from the temperature selector, inside air temperature sensor, outside air temperature sensor and sunload sensor. Using thus obtained target temperature control door position, it further calculates the target air flow control door position and controls the air flow control actuator so that the current air flow control door position becomes the target position.


Air Intake Position Control

HVAC control module determines the air intake position based on signals from the temperature selector, inside air temperature sensor, outside air temperature sensor and sunload sensor and controls the air intake actuator.

A/C Refrigerant Type Description

S6JB0B7201005

Whether the A/C in the vehicle being serviced uses HFC-134a (R-134a) or CFC-12 (R-12) is indicated on LABEL (1) on the compressor. Also, it can be checked by the shape of the service (charge) valve (2).

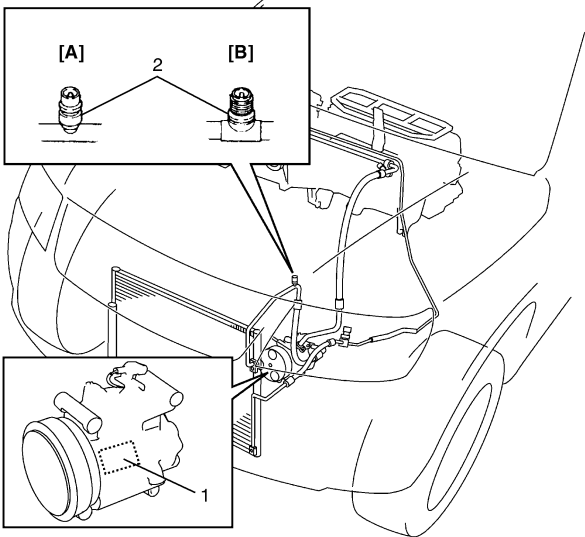


15JB0A720005-01

[A]: HFC-134a (R-134a)

[B]: CFC-12 (R-12)

Sub-Cool A/C System Description

In the sub-cool A/C system (condenser (3) integrated with receiver / dryer (4)), the inside of the condenser is divided into the condensation part and the sub-cooler part, and the receiver / dryer is located between those. In the receiver / dryer (4), the refrigerant is separated into the vapor refrigerant and the liquid refrigerant. Only the liquid refrigerant is delivered to the sub-cooler part of the condenser. The refrigerant is supercooled by the sub-cooler part of the condenser.

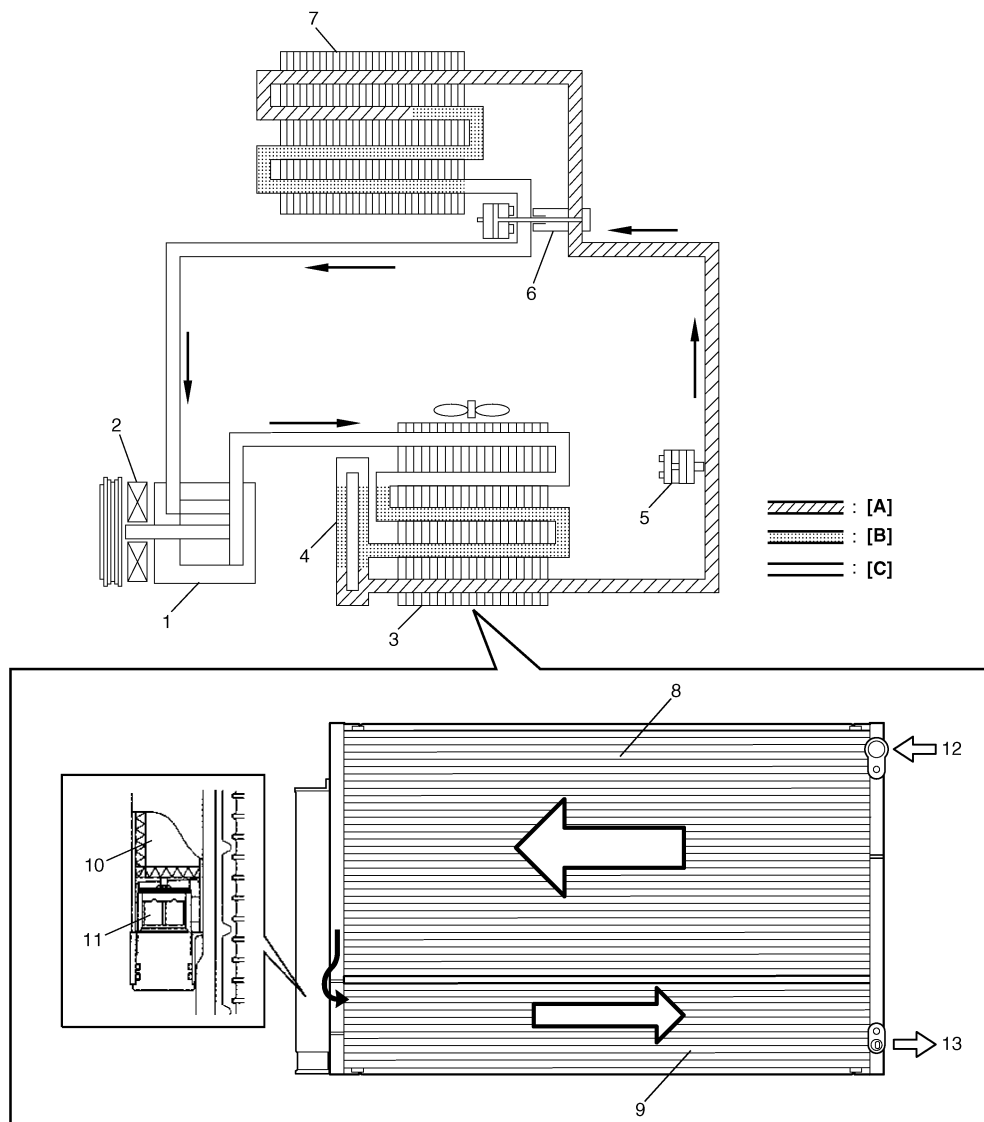


[A]: Liquid	4. Receiver / dryer	10. Desiccant
[B]: Vapor	5. Refrigerant pressure sensor	11. Filter
[C]: Superheated vapor	6. Expansion valve	12. Vapor refrigerant
1. Compressor	7. Evaporator	13. Liquid refrigerant
2. Magnet clutch	8. Condensation part	
3. Condenser	9. Sub-cooler part	

A/C Evaporator Temperature Sensor

Description


S6JB0B7201007

The A/C evaporator temperature sensor (1) is a temperature sensor to sense the temperature of air discharged from evaporator.

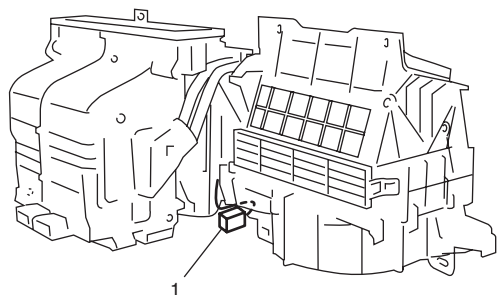

I5JB0A720089-02

The electrical characteristic is shown.

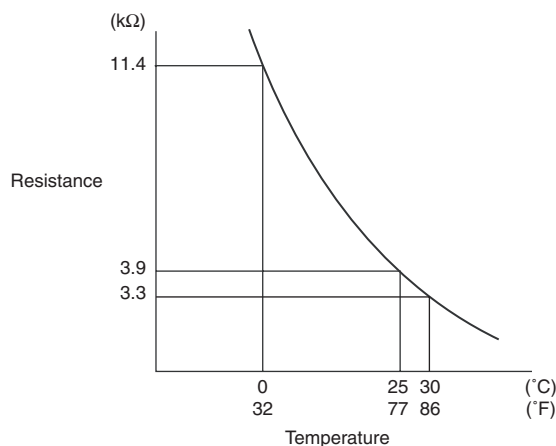

I5JB0A720090-03

When temperature is lower than specified, A/C controller makes magnet clutch turn off to prevent evaporator from frosting.

On-Board Diagnostic System Description



S6JB0B7201008

HVAC control module detects malfunction, which may occur in the following area. When HVAC control module detects any malfunction, the REC (recirculation) indicator light (3) flashes on and off continuously after turning ignition switch to ON position.

Abnormality exists (when air intake selector is operated while "REC" indicator light is flashing), "FRE" indicator light lights for 15 seconds and then "REC" indicator light flashes.

- Outside temperature sensor
- Inside temperature sensor
- Sunload sensor (Short circuit)

- Wheel speed sensor
 - CMP sensor
 - CAN communication line
 - Serial communication line
 - A/C evaporator temperature sensor
 - ECT sensor
 - Temperature control actuator
 - Air flow control actuator
 - Air intake control actuator
 - Temperature selector of HVAC control module
 - Blower speed selector of HVAC control module
- DTC can be checked by either one of the following ways.
- DTC can be checked by using SUZUKI scan tool (2) connected to DLC (1).
 - Without using SUZUKI scan tool, DTC can be checked by reading the flashing pattern of both the FRE (fresh air) indicator light (3) and the REC (recirculation) indicator light (4).
 - Current DTC and history DTC by pushing DEF (defogger) switch (5) when DTC displayed by HVAC control module.
 - History DTC is such DTC which HVAC control module saves in its memory when it detects current DTC for 60 seconds or more continuously.
 - During indication of current DTC, DEF (defogger) indicator light (6) is OFF. However DEF indicator light (6) is ON during indication of history DTC.

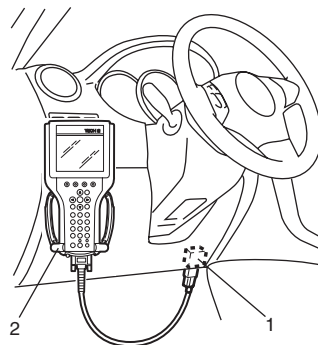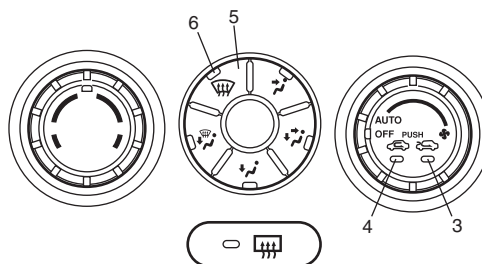


I5JB0A720093-03

Schematic and Routing Diagram

Air Flow Diagram of A/C System

S6JB0B7202002

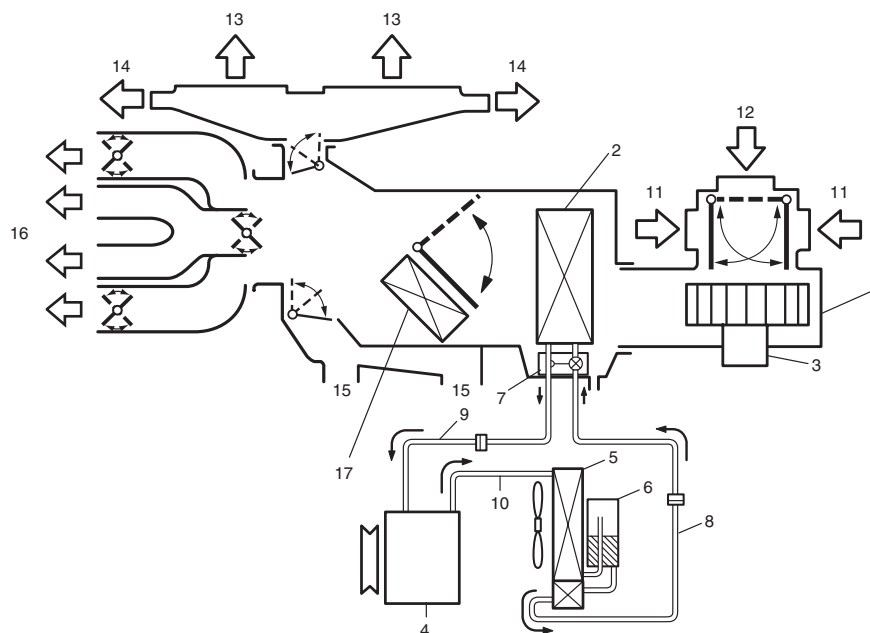


I5JB0A720008-02

1. HVAC unit	7. Expansion valve	13. Defroster air
2. Evaporator	8. Liquid pipe	14. Demister air
3. Blower fan motor	9. Suction pipe	15. Foot air
4. Compressor	10. Discharge pipe	16. Ventilation air
5. Condenser assembly	11. Recirculation air	17. Heater core
6. Receiver / dryer	12. Fresh air	

Auto A/C Electronic Control Input / Output Diagram


S6JB0B7202003

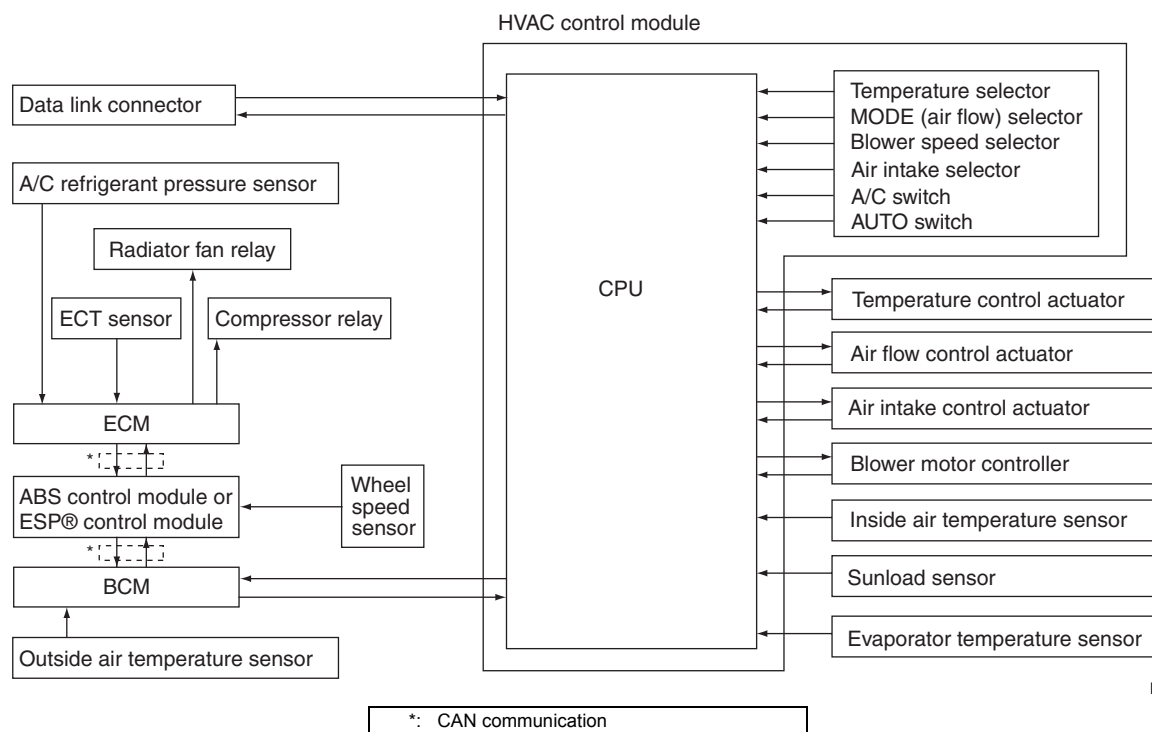

I6JB01720002-03

A/C System Wiring Circuit Diagram

S6JB0B7202001

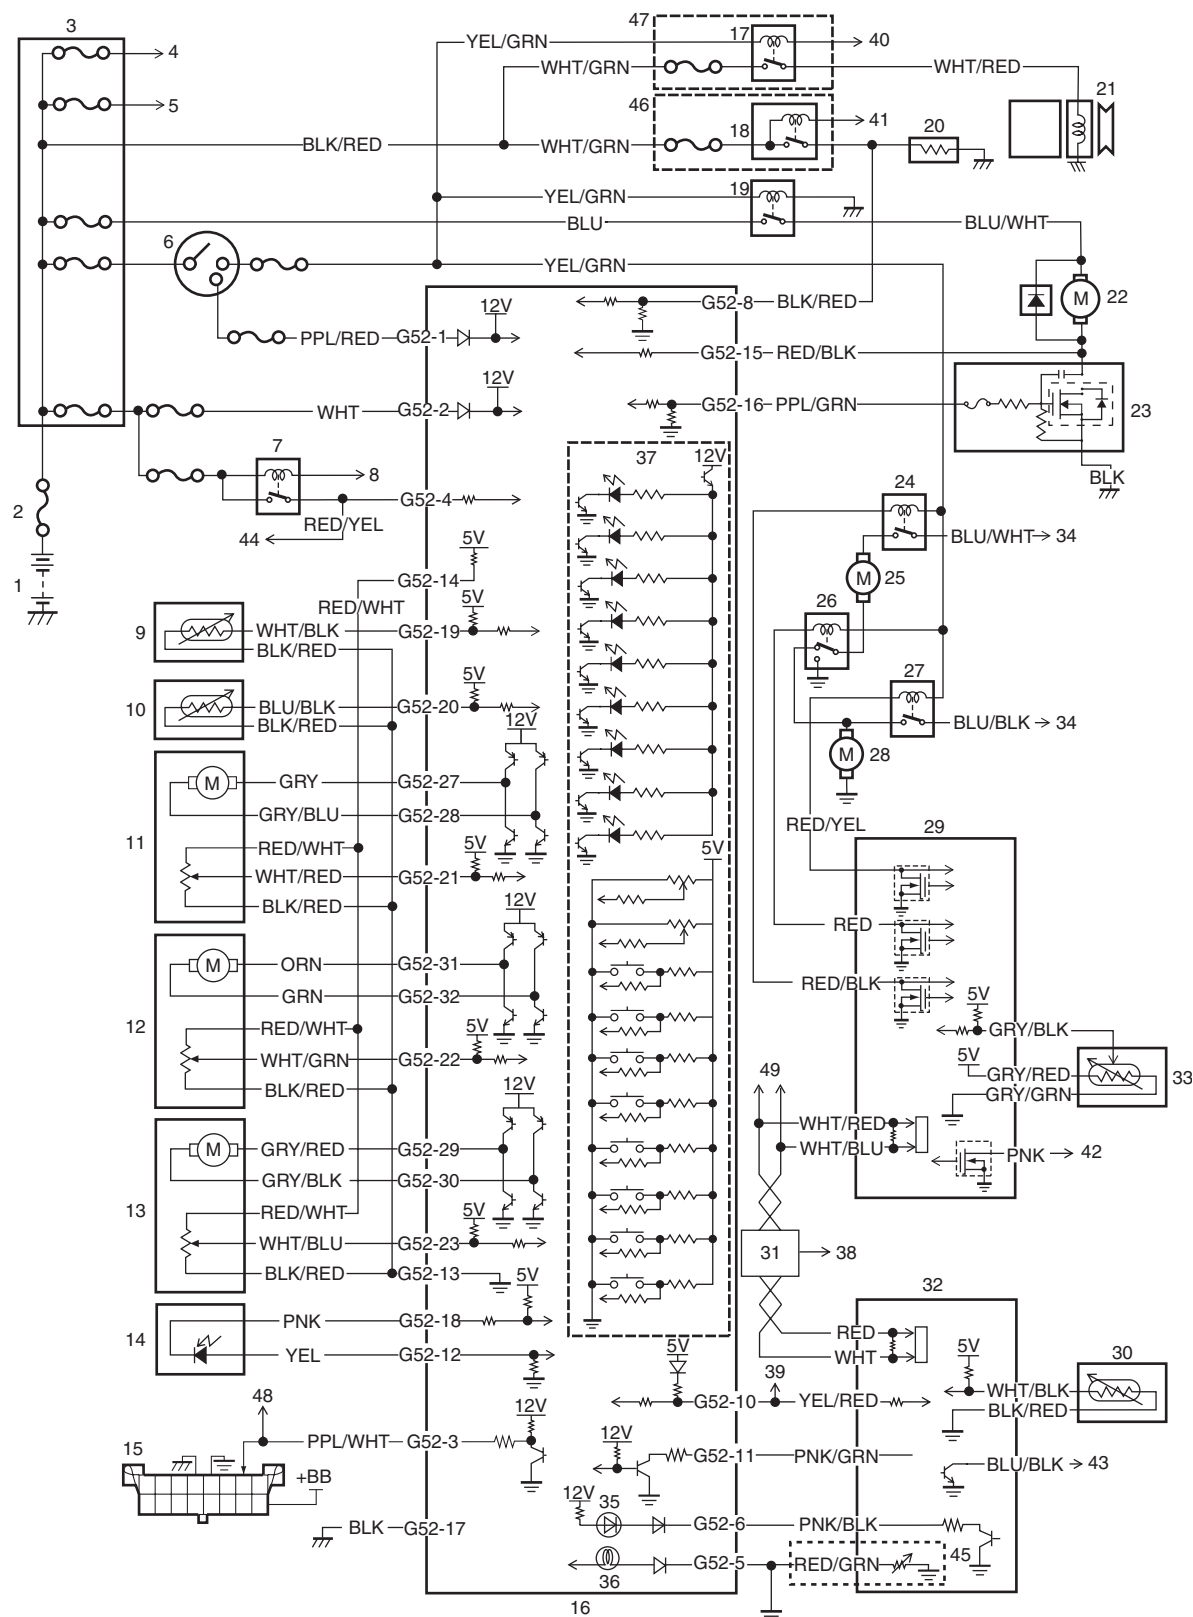

I6JB01720003-01

1. Battery	18. Rear defogger relay	35. Theft deterrent light
2. Main fuse	19. Blower motor relay	36. Illumination light
3. Fuse box	20. Rear defogger	37. Indicator light, switch, selector
4. To radiator fan relay No.1	21. A/C compressor	38. To wheel speed sensor
5. To radiator fan relay No.3	22. Blower motor	39. To information display
6. Ignition switch	23. Blower motor selector	40. To ECM

7. Small light relay	24. Radiator fan relay No.1	41. To BCM
8. To BCM	25. Radiator fan No.1	42. To compressor relay
9. Evaporator temperature sensor	26. Radiator fan relay No.2	43. To rear defogger relay
10. Inside air temperature sensor	27. Radiator fan relay No.3	44. To combination switch
11. Temperature control actuator	28. Radiator fan No.2	45. AUTO-ON head light system vehicle
12. Air intake control actuator	29. ECM	46. Integration relay No.1
13. Air flow control actuator	30. Outside temperature sensor	47. Integration relay No.2
14. Sunload sensor	31. ABS or ESP® control module	48. To other control module
15. Data link connector	32. BCM	49. To TCM, 4WD control module, combination meter, keyless start control module and steering angle sensor.
16. HVAC control module	33. Refrigerant pressure sensor	
17. Compressor relay	34. To fuse box	

Component Location


A/C Control System Components Location

S6JB0B7203002

NOTE

The figure shows left-hand steering vehicle. For right-hand vehicle, parts with (*) are installed at the opposite side.

7B-10 Air Conditioning System:

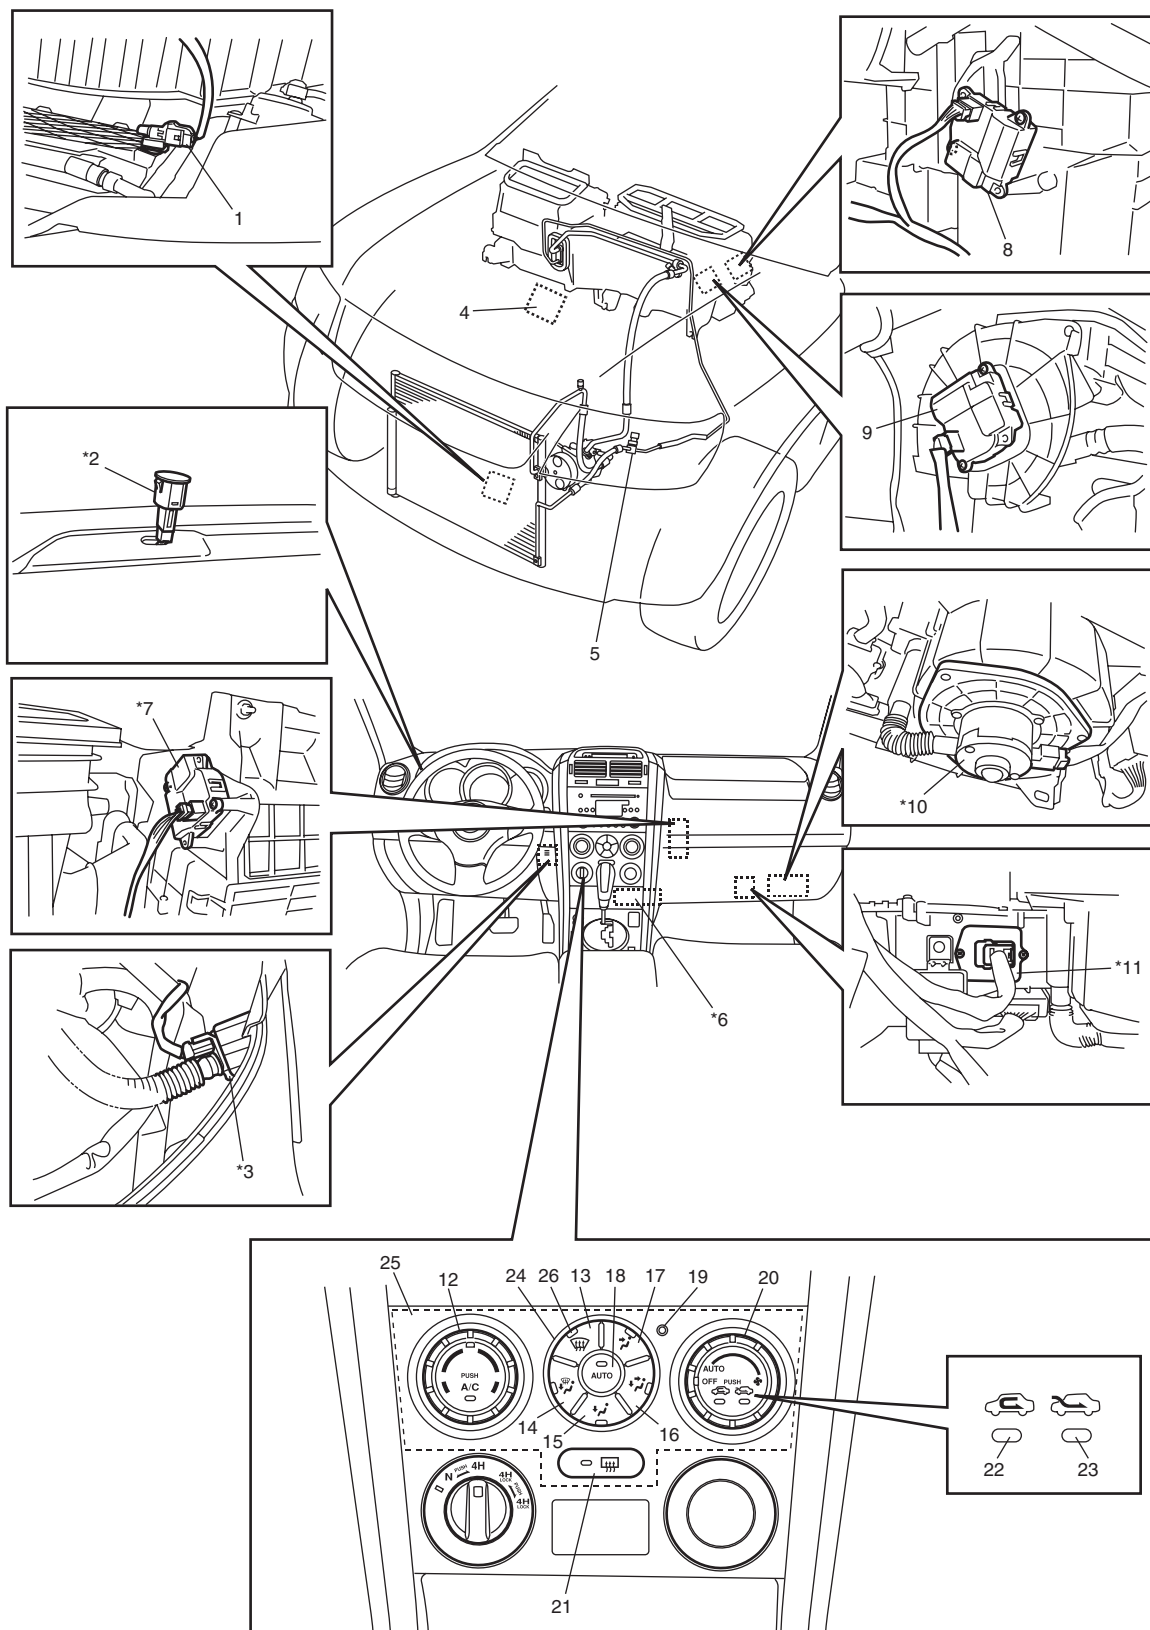

16JB0B720004-01

1. Outside temperature sensor	10. Blower motor	19. Theft deterrent light
2. Sunload sensor	11. Blower motor controller	20. Blower speed selector / Air intake selector
3. Inside temperature sensor	12. Temperature selector / A/C switch	21. Rear defogger switch
4. ECT sensor	13. "DEF" switch	22. "REC" indicator light
5. Refrigerant pressure sensor	14. "DEF / FOOT" switch	23. "FRE" indicator light
6. Evaporator temperature sensor	15. "FOOT" switch	24. MODE selector
7. Air intake control actuator	16. "BI-LEVEL" switch	25. HVAC control module (vehicle with A/C)

8. Temperature control actuator	17. "VENT" switch	26. "DEF" indicator light
9. Air flow control actuator	18. "AUTO" switch	

Diagnostic Information and Procedures

Air Conditioning System Check

S6JB0B7204001

To ensure that system diagnosis is done accurately and smoothly, read "Precautions in Diagnosing Trouble" and follow "Air Conditioning System Check".

Step	Action	Yes	No
1	☞ Customer complaint analysis 1) Perform "Customer Complaint Analysis". <i>Was customer complaint analysis performed according to instruction?</i>	Go to Step 2.	Perform customer complaint analysis.
2	☞ Visual inspection 1) Perform "Visual Inspection". <i>Is there any faulty condition?</i>	Repair or replace malfunction part.	Go to Step 3.
3	☞ DTC check 1) Perform "DTC Check". <i>Is it malfunction code?</i>	Go to Step 4.	Go to Step 5.
4	☞ Troubleshooting for DTC 1) Check and repair according to DTC diag. flow. <i>Are check and repair completed?</i>	Go to Step 7.	Check and repair malfunction part(s).
5	☞ Check for intermittent problem 1) Check for intermittent problem. <i>Is there faulty condition?</i>	Repair or replace malfunction part(s).	Go to Step 6.
6	☞ Air conditioning system symptom diagnosis 1) Inspect and repair referring to "A/C System Symptom Diagnosis". <i>Are inspect and repair complete?</i>	Go to Step 7.	Inspect and repair malfunction part(s).
7	☞ Final confirmation test 1) Perform DTC check. <i>Is there any DTC?</i>	Go to Step 4.	Air Conditioning system is good condition.

7B-12 Air Conditioning System:

Customer Complaint Analysis

Record details of the problem (failure, complaint) and how it occurred as described by the customer.

For this purpose, use of such a questionnaire form as shown in the figure will facilitate collecting information to the point required for proper analysis and diagnosis.

Customer questionnaire (example)

Customer's Name:	Model:	VIN:	
Date of Issue:	Date Reg.	Date of Problem:	Mileage:
Problem Symptoms	<ul style="list-style-type: none">• "FRE" indicator light abnormal: fails to turn ON / fails to go OFF / flashes• Abnormal noise while "A/C" switch is turned ON: from compressor, from radiator fan motor, other _____• Cool air does not come out:• Radiator fan motor does not work:• A/C compressor does not work:• Blower fan motor does not work:		
Frequency of Occurrence	• Continuous / Intermittent (_____ times a day, a month) / other _____		
Conditions for Occurrence of Problem	<ul style="list-style-type: none">• Vehicle at stop & A/C compressor is working:• For some time after A/C switch is ON:• When outside air temperature is high:• When outside air temperature is low:• All the time:		
Environmental Condition	<ul style="list-style-type: none">• Weather: fair / cloudy / rain / snow / other _____• Temperature: _____ °F (_____ °C)		
DTC	<ul style="list-style-type: none">• First check: Normal code / malfunction code (_____)• Second check: Normal code / malfunction code (_____)		

NOTE

The form is a standard sample. It should be modified according to conditions characteristic of each market.

Visual Inspection

As a preliminary step, be sure to perform visual check of the items that support proper function of the air conditioning system referring to "Visual Inspection".

DTC Check

Refer to "DTC Check" for checking procedure.

Troubleshooting for DTC

Based on the DTC indicated in Step 4 and referring to applicable DTC flow, locate the cause of the trouble, namely in a sensor, actuator, wire harness, connector, HVAC control module or other part and repair or replace faulty parts.

Check for Intermittent Problem

Check parts where an intermittent trouble is easy to occur (e.g., wire harness, connector, etc.), referring to "Intermittent and Poor Connection Inspection in Section 00".

Air Conditioning System Symptom Diagnosis

Check the parts or system suspected as a possible cause referring to "A/C System Symptom Diagnosis".

Final Confirmation Test

Confirm that the problem symptom has gone and the air conditioning system is free from any abnormal conditions. If what has been repaired is related to the malfunction DTC, check DTC once and confirm that no DTC is indicated.

DTC Check

S6JB0B7204002

NOTE


To know how to use SUZUKI scan tool in detail, refer to its operator's manual.

Using SUZUKI Scan Tool

- 1) Turn ignition switch to OFF position.
- 2) Connect SUZUKI scan tool to data link connector (DLC) (1) located on underside of instrument panel.

Special tool

(A): SUZUKI scan tool

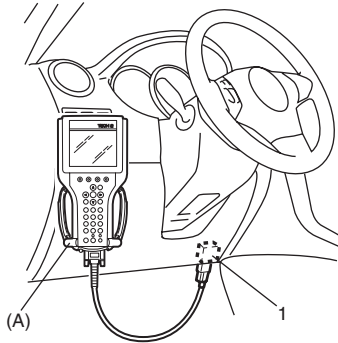

I5JB0A720014-01

- 3) Apply light to sunload sensor vertically, holding incandescent light of approximately 100 W about 100 mm (3.94 in.) away from sunload sensor.

NOTE

If B1504 is detected when vehicle is not exposed to light (indoor, etc.), check again for DTC with light from incandescent light applied to sunload sensor, referring to "Sunload Sensor Inspection". If B1504 is not detected in this check, sunload sensor is in good condition.

- 4) Turn ignition switch to ON position.
- 5) Read DTC according to instructions displayed on SUZUKI scan tool and print it or write it down. Refer to SUZUKI scan tool operator's manual for further details.
If communication between scan tool and ECM (PCM) is not possible, check if scan tool is communicable by connecting it to ECM (PCM) in another vehicle. If communication is possible in this case, scan tool is good condition. Then check data link connector and serial data line (circuit) in the vehicle with which communication was not possible.
- 6) After completing the check, turn ignition switch OFF position and disconnect SUZUKI scan tool from data link connector (DLC).

Not Using SUZUKI Scan Tool**NOTE**

If B1504 is detected when vehicle is not exposed to light (indoor, etc.), check again for DTC with light from incandescent light applied to sunload sensor, referring to "Sunload Sensor Inspection". If B1504 is not detected in this check, sunload sensor is in good condition.

- 1) Apply light to sunload sensor vertically, holding incandescent light of approximately 100 W about 100 mm (3.94 in.) away from sunload sensor.
- 2) Set the following selectors to specified positions respectively with turn ignition switch OFF.
 - Temperature selector (1): max cool position
 - Blower speed selector (2): "OFF" position
- 3) While pressing "B/L" (BI-LEVEL) switch (3) and "D/F" (DEF/FOOT) switch (4) simultaneously turn ignition switch to ON position.


NOTE

For 15 seconds after ignition switch is turned on, both "REC" indicator light and "FRE" indicator light light for in-system trouble check.

- 4) Read DTC from flashing pattern of "FRE" indicator (5) and "REC" indicator (6) referring to "DTC Table".

NOTE

- Pressing "DEF" switch (7) alternates display of current DTC and history DTC.
- "DEF" indicator light (8) remains off when display is in current DTC mode and it lights up when display is in history DTC mode.

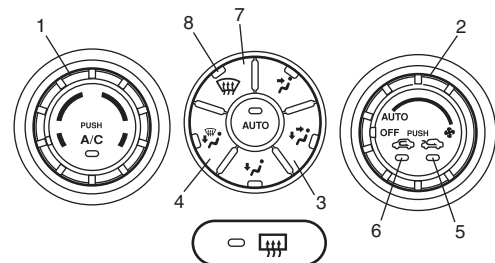

I5JB0A720015-04

7B-14 Air Conditioning System:

- 5) After completing above check, turn ignition switch to "OFF" position.

NOTE

HVAC control module returns to a original state at the following conditions.

- Ignition switch turned to "OFF" position
- Temperature selector is operated
- Blower speed selector is operated
- 5 minutes have passed since HVAC control unit started DTC display

DTC Clearance


S6JB0B7204003

Using SUZUKI Scan Tool

- 1) Turn ignition switch to OFF position.
- 2) Connect SUZUKI scan tool to data link connector (DLC) (1).

Special tool

(A): SUZUKI scan tool

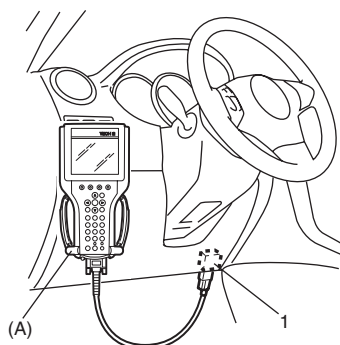


I5JB0A720014-01

- 3) Turn ignition switch to ON position.
- 4) Erase DTC according to instructions displayed on SUZUKI scan tool. Refer to SUZUKI scan tool operator's manual for further details.
- 5) After completing the clearance, turn ignition switch to OFF position and disconnect SUZUKI scan tool from DLC.
- 6) Perform "DTC Check" and confirm if normal DTC (NO CODES) is displayed.

Not Using SUZUKI Scan Tool

- 1) Display history DTC by HVAC control module referring to "Not Using SUZUKI Scan Tool" under "DTC Check".
- 2) Confirm display DTC and light "DEF" indicator light (1).
- 3) Push "DEF" switch (2) at 5 seconds or more.

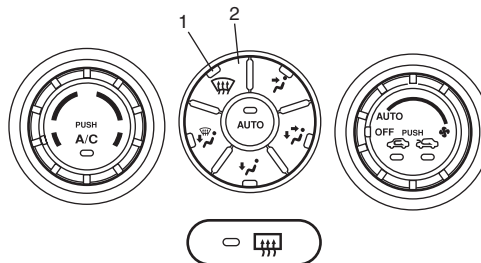

I5JB0A720016-03

- 4) After completing the clearance, turn ignition switch OFF position.
- 5) Perform "DTC Check", and confirm if normal DTC is displayed and if any other DTC is detected.

DTC Table

S6JB0B7204004

⚠ CAUTION


Be sure to perform “Air Conditioning System Check” before starting diagnosis.

DTC No. (displayed on SUZUKI scan tool)	DTC (indicated on HVAC control module)		Priority of display	Diagnosis	
	Indicated by “REC” indicator light	Indicated by “FRE” indicator light			
🔧 B1562	1	4	1	Outside air temperature sensor and/or its circuit malfunction	Data error
🔧 B1502	2	1	2	Inside air temperature sensor and/or its circuit malfunction	Open
		2	3		Short
🔧 B1503	3	1	4	Evaporator temperature sensor and/or its circuit malfunction	Open
		2	5		Short
🔧 B1504	4	1	29	Sunload sensor and/or its circuit malfunction	Open
		2	6		Short
🔧 B1561	5	4	7	Engine coolant temperature sensor and/or its circuit malfunction	Data error
🔧 B1511	6	1	8	Temperature control actuator (position sensor) and/or its circuit malfunction	Open
		2	9		Short
🔧 B1513	6	3	10	Temperature control actuator and/or its circuit malfunction	Lock detect
🔧 B1512	7	1	11	Air flow control actuator (position sensor) and/or its circuit malfunction	Open
		2	12		Short
🔧 B1514	7	3	13	Air flow control actuator and/or its circuit malfunction	Lock detect
🔧 B1530	8	1	14	Air intake control actuator (position sensor) and/or its circuit malfunction	Open
		2	15		Short
🔧 B1531	8	3	16	Air intake control actuator and/or its circuit malfunction	Lock detect
🔧 B1551	9	1	17	Serial communication circuit malfunction	Open
		2	18		Short
🔧 B1552	9	4	19		Data error
🔧 B1553	10	4	20	CAN communication circuit malfunction	Data error
🔧 B1557	11	4	21	Wheel speed sensor and/or its circuit malfunction	Data error
🔧 B1556	12	4	22	Camshaft position (CMP) sensor and/or its circuit malfunction	Data error
🔧 B1563	13	4	23	A/C refrigerant pressure sensor and/or its circuit malfunction	Data error
🔧 B1546		5	24	A/C refrigerant pressure malfunction	Refrigerant pressure malfunction
🔧 B1520	15	1	25	Temperature selector malfunction	Open
		2	26		Short
🔧 B1521	16	1	27	Blower speed selector malfunction	Open
		2	28		Short
—	See NOTE below		—	Normal	—


NOTE

When no abnormality is detected, “FRE” indicator light and “REC” indicator light repeat cycle of ON for 2 seconds and OFF for 1 second.

Example of “REC” Indicator Light Flashing Pattern

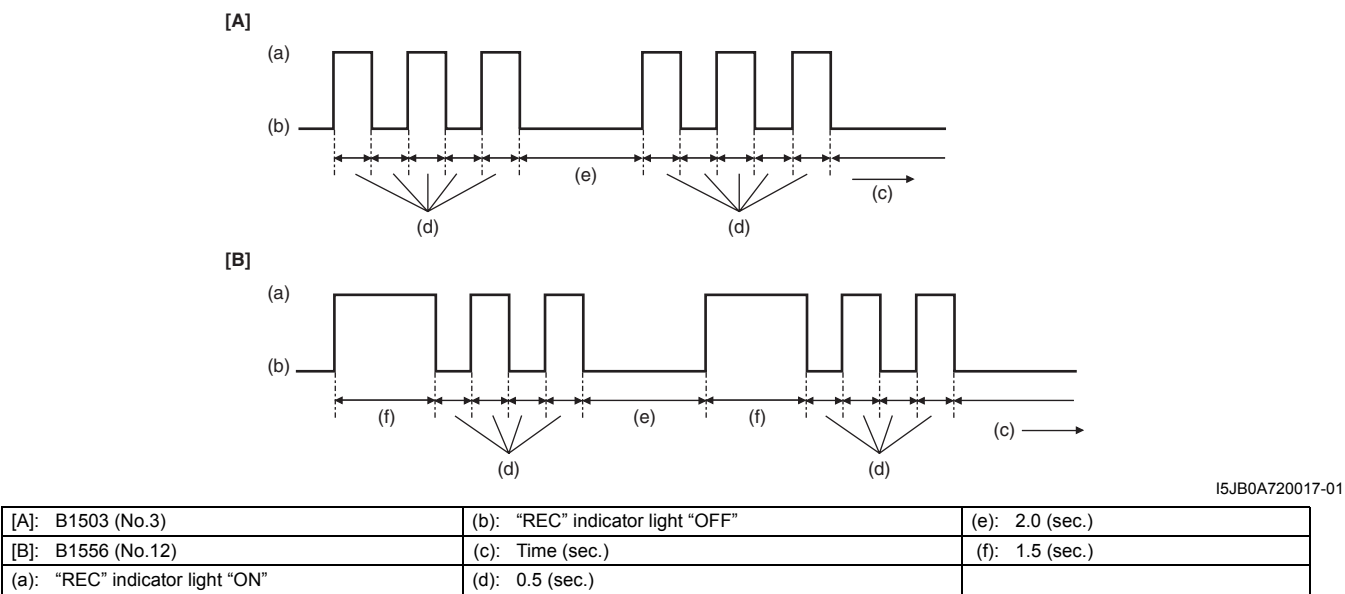

Example of “FRE” Indicator Light Flashing Pattern

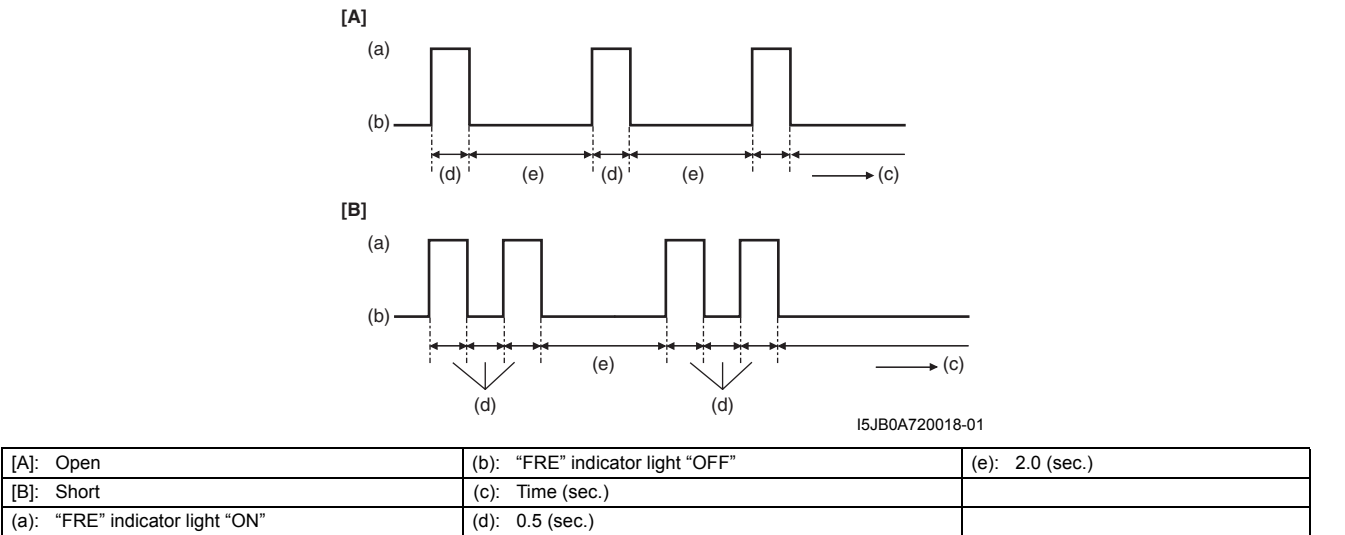


NOTE

Locked actuator, data error and refrigerant pressure malfunction are indicated by flashing pattern of “FRE” indicator light specified for each of them.

Display Timing of “FRE” Indicator Light and “REC” Indicator Light

Code with short display time waits until display of code with long display time is over.

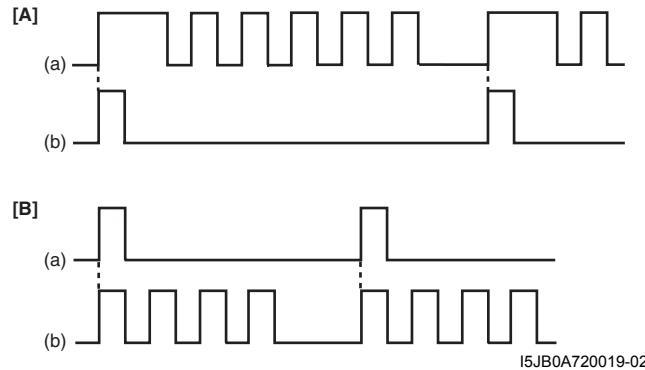

[A]: B1520 (15 – 1)	(a): “REC” indicator flashing pattern
[B]: B1562 (1 – 4)	(b): “FRE” indicator flashing pattern

Fail-Safe Table

S6JB0B7204005

When any of the following malfunctions (DTCs) is detected, HVAC control module enters fail-safe mode. However, when HVAC control module detects normal operation of A/C system, fail-safe mode is canceled.

DTC No.	Trouble Area	Fail-Safe Operation	
		When ignition switch is turned ON after malfunction is already detected	When malfunction is detected during ignition switch is ON
☞ B1502	Inside air temperature sensor and/or its circuit malfunction	HVAC control module controls actuators assuming that inside air temperature is 25 °C (77 °F).	
☞ B1503	Evaporator temperature sensor and/or its circuit malfunction	HVAC control module controls actuators assuming that amount of evaporator temperature is –6 °C (21.2 °F).	
☞ B1504	Sunload sensor and/or its circuit malfunction	HVAC control module controls actuators assuming that amount of sunlight is 0 W/m ² .	
☞ B1511	Temperature control actuator (position sensor) and/or its circuit malfunction	Circuit open: Temperature control actuator fixed to “MAX HOT” position. Circuit short: Temperature control actuator fixed to “MAX HOT” position.	
☞ B1512	Air flow control actuator (position sensor) and/or its circuit malfunction	Circuit open: Air flow control actuator fixed to “DEF” position. Circuit short: Air flow control actuator fixed to “DEF” position.	
☞ B1513	Temperature control actuator and/or its circuit malfunction	Stop the operation of temperature control actuator.	
☞ B1514	Air flow control actuator and/or its circuit malfunction	Stop the operation of Air flow control actuator.	
☞ B1520	Temperature selector malfunction	HVAC control module keeps condition just before malfunction is detected.	HVAC control module controls actuators assuming that setting of temperature selector is 25 °C (77 °F).
☞ B1521	Blower speed selector malfunction	HVAC control module keeps condition just before malfunction is detected.	HVAC control module controls actuators assuming that as follows. <ul style="list-style-type: none"> • Blower speed is minimum. • Air flow control actuator fixed to “DEF” position.
☞ B1530	Air intake control actuator (position sensor) and/or its circuit malfunction	Circuit open: Air intake control actuator fixed to “FRE” position. Circuit short: Air intake control actuator fixed to “FRE” position.	
☞ B1531	Air intake control actuator and/or its circuit malfunction	Stop the operation of temperature control actuator.	

7B-18 Air Conditioning System:

DTC No.	Trouble Area	Fail-Safe Operation	
		When ignition switch is turned ON after malfunction is already detected	When malfunction is detected during ignition switch is ON
⚙ B1551 ⚙ B1552	Serial communication circuit malfunction	HVAC control module keeps condition just before malfunction is detected.	HVAC control module controls actuators assuming that as follows. <ul style="list-style-type: none"> • Outside air temperature is 20 °C (68 °F). • Engine coolant temperature is 90 °C (194 °F). • Vehicle speed is 0 km/h (0 mph). • Engine speed is 0 rpm.
⚙ B1553	CAN communication circuit malfunction		
⚙ B1556	Camshaft position (CMP) sensor and/or its circuit malfunction	HVAC control module keeps condition just before malfunction is detected.	HVAC control module controls actuators assuming that amount of engine speed is 0 rpm.
⚙ B1557	Vehicle speed sensor and/or its circuit malfunction	HVAC control module keeps condition just before malfunction is detected.	HVAC control module controls actuators assuming that amount of vehicle speed is 0 km/h (0 mph).
⚙ B1561	Engine coolant temperature sensor and/or its circuit malfunction	HVAC control module keeps condition just before malfunction is detected.	HVAC control module controls actuators assuming that amount of engine coolant temperature is 90 °C (194 °F).
⚙ B1562	Outside air temperature sensor and/or its circuit malfunction	HVAC control module keeps condition just before malfunction is detected.	HVAC control module controls actuators assuming that amount of outside air temperature is 20 °C (68 °F).

Scan Tool Data

S6JB0B7204006

As the data values given below are standard values estimated on the basis of values obtained from the normally operating vehicles by using a scan tool, use them as reference values. Even when the vehicles are in good condition, there may be cases where the checked values do not fall within each specifies data range. Therefore, judgement as abnormal should not be made by checking with these data alone.

Scan Tool Data	Condition	Normal Condition / Reference Value
⚙ TEMP CONT SWITCH	Each reference value is relative to the position of temperature selector of HVAC control module.	Max Cool, 20 °C (65 °F) – 30 °C (85 °F), Max Hot
⚙ CABIN TEMPERATURE	Reference value is relative to in car temperature.	–40 °C – 87.5 °C (–40 °F – 189.5 °F)
⚙ OUT SIDE AIR TEMP	Reference value is relative to outside air temperature.	–40 °C – 87.5 °C (–40 °F – 189.5 °F)
⚙ EVAPORATOR TEMP	Reference value is relative to temperature of evaporator.	–40 °C – 87.5 °C (–40 °F – 189.5 °F)
⚙ COOLANT TEMP	At specified idle speed after warming up	–40 °C – 215 °C (–40 °F – 419 °F)
⚙ SUN LOAD	Reference value depends on the situation.	0 W/m ² – 4447.8 W/m ²
⚙ MODE CONT SWITCH	Each reference value is relative to the position of airflow selector of HVAC control module.	AUTO, VENT, BI-LEVEL, FOOT, DEF-FOOT DEF
⚙ FAN CONT SWITCH	Each reference value is relative to the position of blower speed selector of HVAC control module.	AUTO, OFF 1st, 2nd – 7th, 8th
⚙ FAN DESIRE VOLT	Reference value is relative to the position of blower speed selector of HVAC control module.	0 – 16.0 V
⚙ AIR MIX POS SENSOR	Reference value is relative to the position of temperature selector of HVAC control module.	Approx. 1.5 V (Max Hot) Approx. 4.5 V (Max Cool)
⚙ R/F POS SENSOR	Reference value is relative to the position of air intake selector of HVAC control module. (LH steering vehicle)	Approx. 4.0 V (REC) Approx. 0.9 V (FRE)
⚙ R/F POS SENSER	Reference value is relative to the position of air intake selector of HVAC control module. (RH steering vehicle)	Approx. 0.9 V (REC) Approx. 4.0 V (FRE)
⚙ MODE POS SENSOR	Reference value is relative to the position of airflow selector of HVAC control module.	Approx. 0.5 V (DEF) Approx. 4.5 V (VENT)

Scan Tool Data	Condition		Normal Condition / Reference Value
A/C CONT SIG	A/C system is ON.		ON
	A/C system is OFF.		OFF
AIR INTAKE MODE	Fresh air (FRE) mode is activated.		FRE
	Recirculation air (REC) mode is activated.		REC
	AUTO mode is activated.		AUTO
A/C COMP CLUCH	Magnet clutch is engaged.		ON
	Magnet clutch is not engaged.		OFF
REFRIGERANT PRESSURE	Engine running.	A/C ON (A/C is operating) at ambient temperature: 30 °C (86 °F)	1350 – 1650 kPa for more details, refer to pressure of high pressure gauge under “A/C System Performance Inspection”.
		A/C ON (A/C is not operating) at ambient temperature: 30 °C (86 °F) and engine coolant temperature: 90 °C – 100 °C (194 °F – 212 °F)	600 – 1000 kPa after longer than 10 min from A/C switch turned off.
A/C INDICATOR LIGHT	A/C indicator light is lighted.		ON
	A/C indicator light is not lighted.		OFF
FRE INDICATOR LIGHT	Fresh air (FRE) indicator light is lighted.		ON
	Fresh air (FRE) indicator light is not lighted.		OFF
REC INDICATOR LIGHT	Recirculation air (REC) indicator light is lighted.		ON
	Recirculation air (REC) indicator light is not lighted.		OFF
REAR DEF INDICATOR	Rear defogger indicator light is lighted.		ON
	Rear defogger indicator light is not lighted.		OFF
VEHICLE SPEED	At stop.		0 km/h (0 mph)
ENGINE SPEED	At engine idle speed		Engine idle speed is display

Scan Tool Data Definitions

TEMP CONT SWITCH: Position of temperature control selector of HVAC control module

CABIN TEMPERATURE: In-car temperature detected by inside air temperature sensor installed in HVAC control module

OUTSIDE AIR TEMP (OUTSIDE AIR TEMPERATURE): Outside air temperature detected by outside air temperature sensor installed in front bumper member

EVAPORATOR TEMP: Temperature of air passed through evaporator

COOLANT TEMP: Engine coolant temperature detected by engine coolant temperature sensor

SUN LOAD: Amount of sunlight detected by sunload sensor installed on the driver side on the dashboard

MODE CONT SWITCH: Position of airflow selector of HVAC control module

FAN CONT SWITCH: Position of air speed selector of HVAC control module

FAN DESIRE VOLT: Voltage for blower motor

AIR MIX POS SENSOR: Input signal from position sensor in temperature control actuator

MODE POS SENSOR: Input signal from position sensor in air flow control actuator

R/F POS SENSOR (AIR FLOW CONTROL ACTUATOR POSITION SENSOR): Input signal from position sensor in air intake control actuator

A/C CONT SIG (ON or OFF): State of A/C indicator light

AIR INTAKE MODE (FRE, REC or MIX): State of air intake mode

A/C COMP CLUCH: State of magnet clutch

REFRIGERANT PRESSURE (A/C REFRIGERANT ABSOLUTE PRESSURE): This parameter indicates A/C refrigerant absolute pressure calculated by ECM

A/C INDICATOR LIGHT (ON or OFF): State of A/C indicator light

FRE INDICATOR LIGHT (ON or OFF): State of fresh air (FRE) indicator light

REC INDICATOR LIGHT (ON or OFF): State of recirculation air (REC) indicator light

REAR DEF INDICATOR (ON or OFF): State of rear defogger indicator light

VEHICLE SPEED: It is computed based on pulse signals from vehicle speed sensor

ENGINE SPEED: It is computed by signal from CMP sensor

Visual Inspection

S6JB0B7204007

Visually check the following parts and systems.

Inspection Item	Correction
<ul style="list-style-type: none"> Refrigerant ---- leakage and amount A/C pipe or hose ---- disconnection, looseness and deterioration A/C compressor drive belt ---- looseness and damage Battery ---- fluid level and corrosion of terminal Connectors of electric wire harness ---- disconnection and friction Fuses ---- burning Parts ---- installation and damage Other parts that can be checked visually 	Refer to “A/C Compressor Drive Belt Inspection and Adjustment”.

A/C System Performance Inspection


S6JB0B7204008

- Confirm that vehicle and environmental conditions are as follows.
 - Vehicle is put indoors.
 - Ambient air temperature is within 15 – 35 °C (59 – 95 °F).
 - Relative humidity is within 30 – 70%.
 - There is no wind indoors.
 - HVAC unit is normal condition.
 - There is no air leakage from air ducts.
 - Condenser fins are clean.
 - Are filter is not clogged with dirt and dust.
 - Battery voltage is 12 V or more.
 - Radiator cooling fan operates normally.
- Make sure that high pressure valve (1) and low pressure valve (2) of manifold gauge (3) are firmly closed.
- Connect high pressure charging hose (4) to high pressure service valve (5) on vehicle, and connect low pressure charging hose (6) to low pressure service valve (7) on vehicle.

- Bleed the air in charging hoses by loosening their respective nuts on manifold gauge, utilizing the refrigerant pressure. When a hiss is heard, immediately tighten nut.

CAUTION


Do not interchange high and low pressure charging hoses by mistake.

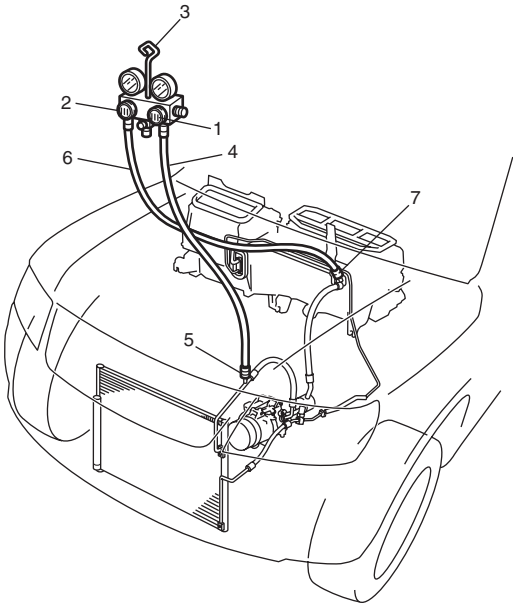

I5JB0A720010-01

- 5) Warm up engine to normal operating temperature (engine coolant temperature at 80 – 90 °C (176 – 194 °F)) and keep it at specified idle speed.
- 6) Operate A/C at the following conditions.
 - A/C switch at ON position
 - Blower speed selector at max position
 - Air flow selector at “VENT” position
 - Temperature selector at max cool position
 - Vehicle door at all open
 - Air inlet door at recirculation position

- 7) Wait for ten minutes to stabilize A/C operation.
- 8) Keep all windows, doors and engine food open.
- 9) With about 20 mm (0.8 in.) of dry bulb thermometer (1) put right in front of center ventilation louver and a wet and dry bulb thermometer (2) near air inlet (3) of HVAC unit.

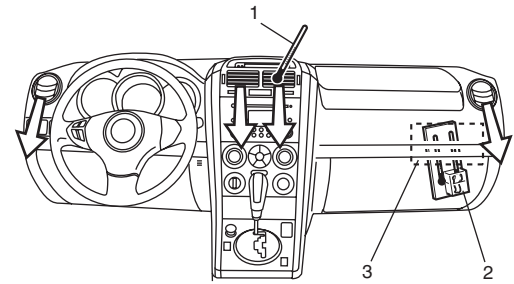

I5JB0A720011-01

- 10) Check for each pressure of low side and high side if it is within shaded range of graph. If each gauge reading is out of specified pressure, correct defective part referring to the table.


Low side and high side pressure example, gauges should read as follows when ambient temperature is 30 °C (86 °F)

Pressure on high pressure gauge (HI): 1340 – 1670 kPa (13.4 – 16.7 kg/cm², 191 – 237 psi)

Pressure on high pressure gauge (LO): 280 – 390 kPa (2.8 – 3.9 kg/cm², 40 – 55 psi)

NOTE

Pressure registered on gauge varies with ambient temperature. Therefore, use the graphs when determining if pressures are normal or not.

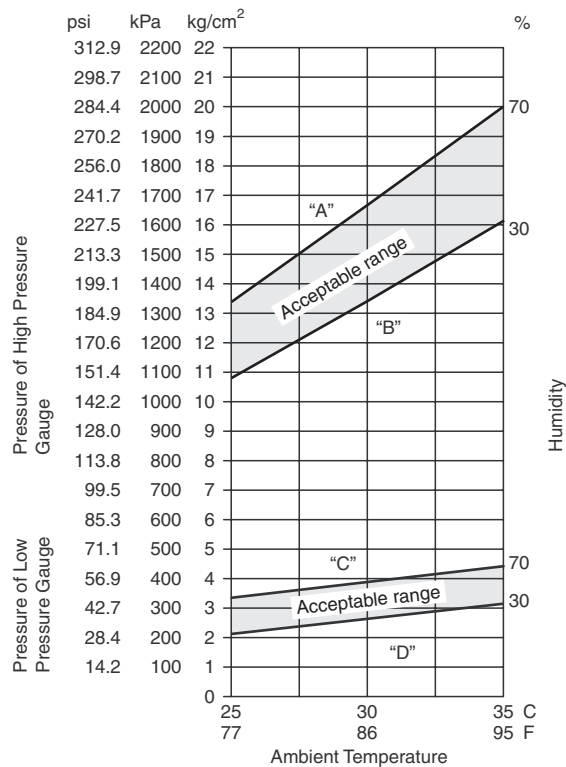

I6JB01720005-02

7B-22 Air Conditioning System:**High pressure gauge**

Condition	Possible Cause	Correction
Pressure is higher than acceptable range ("A" area)	Refrigerant overcharged	Recharge.
	Expansion valve frozen or clogged	Check expansion valve.
	Clogged refrigerant passage of high side	Clean or replace.
	Radiator cooling fan malfunction (Insufficient cooling of condenser)	Check radiator cooling fan.
	Dirty or bent condenser fins (Insufficient cooling of condenser)	Clean or repair.
	Compressor malfunction (Insufficient oil etc.)	Check compressor.
	Engine overheat	Check engine cooling system referring to "Engine Cooling Symptom Diagnosis in Section 1F".
Pressure is lower than acceptable range ("B" area)	Insufficient refrigerant (Insufficient charge or leakage)	Check for leakage, repair if necessary and recharge.
	Expansion valve malfunction (valve opens too wide)	Check expansion valve.
	Compressor malfunction (Insufficient compression)	Check compressor.


Low pressure gauge

Condition	Possible Cause	Correction
Pressure is higher than acceptable range ("C" area)	Expansion valve malfunction (valve opens too wide)	Check expansion valve.
	Compressor malfunction (Insufficient compression)	Check compressor.
Pressure is lower than acceptable range ("D" area)	Insufficient refrigerant (Insufficient charge or leakage)	Check for leakage, repair if necessary and recharge.
	Expansion valve malfunction (valve opens too narrow)	Check expansion valve.
	Clogged refrigerant passage (crashed pipe)	Repair or replace.

11) Check inlet port temperature-to-outlet port temperature relationship using graph.

For example, if A/C evaporator inlet port temperature is 30 °C (86 °F) and center ventilation louver temperature is 13 °C (55.4 °F), their crossing point is within acceptable range as shown in the graph in this case, cooling performance is satisfactory and proper.

12) If crossing point is out of acceptable range, diagnose trouble referring to the following table.

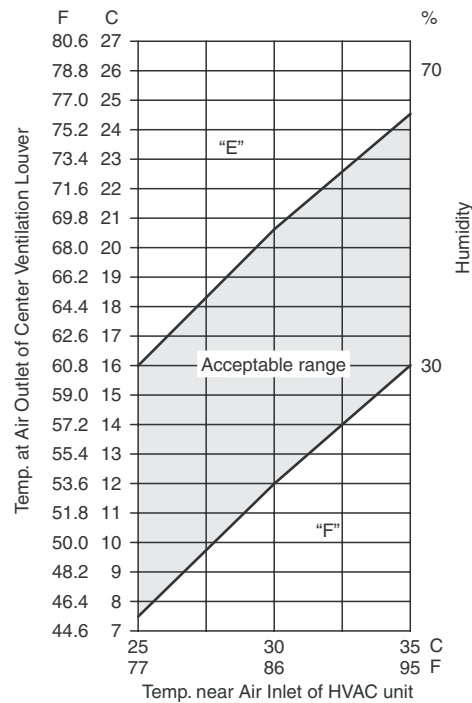

16JB01720006-01

Thermometer at center duct

Condition	Possible Cause	Correction
Crossing point is higher than acceptable range ("E" area)	Insufficient or excessive charge of refrigerant	Check refrigerant pressure.
	Dirty or bent A/C evaporator fins	Clean or repair.
	Air leakage from cooling (heater) unit or air duct	Repair or replace.
	Malfunctioning, switch over function of damper in cooling (heater) unit	Repair or replace.
	Compressor malfunction	Check compressor.
Crossing point is lower than acceptable range ("F" area)	Insufficient air volume from center duct (Heater blower malfunction)	Check blower motor and fan.
	Compressor malfunction	Check compressor.

NOTE

If ambient temperature is within 30 °C (86 °F), it is possible to diagnose A/C system in detail referring to the following table.

7B-24 Air Conditioning System:

Condition			Possible Cause	Correction
Manifold Gauge	MPa (kg/cm ²) (psi)	Detail		
Lo	Hi			
0.28 – 0.39 (2.8 – 3.9) (40 – 55)	1.34 – 1.67 (13.4 – 16.7) (191 – 237)	Normal condition	—	—
Negative pressure	0.5 – 0.6 (5 – 6) (71.2 – 85.3)	The low pressure side reads a negative pressure, and the high pressure side reads an extremely low pressure. Presence of frost around tubing to and from receiver/dryer and expansion valve.	Dust particles or water droplets are either stuck or frozen inside expansion valve, preventing the refrigerant from flowing.	Clean expansion valve. Replace it if it cannot be cleaned. Replace desiccant and cap with filter. Evacuate the A/C system and recharge with fresh refrigerant.
Normal: 0.28 – 0.39 (2.8 – 3.9) (40 – 55) ↑↓ Abnormal: Negative pressure	Normal: 1.34 – 1.67 (13.4 – 16.7) (191 – 237) ↑↓ Abnormal: 0.7 – 1.0 (7 – 10) (100 – 142)	During A/C operation, the low pressure side sometimes indicates negative pressure, and sometimes normal pressure. Also high pressure side reading fluctuates between the abnormal and normal pressure.	Expansion valve is frozen due to moisture in the system, and temporarily shuts off the refrigeration cycle.	Replace expansion valve. Replace desiccant and cap with filter. Evacuate A/C system and recharge with fresh refrigerant.
0.05 – 0.15 (0.5 – 1.5) (4.2 – 21.3)	0.7 – 1.0 (7 – 10) (100 – 142)	Both low and high pressure sides indicate low readings. Output air is slightly cold.	Insufficient refrigerant in system. (Refrigerant leaking)	Using a gas leak detector, check for leaks and repair as necessary. Recharge refrigerant to a specified amount. If the pressure reading is almost 0 when the manifold gauges are attached, check for any leaks, repair them, and evacuate the system.
0.4 – 0.6 (4 – 6) (56.9 – 85.3)		Pressure on low pressure side is high. Pressure on high pressure side is low. Both pressure becoming equal right after A/C is turned OFF.	Internal leak in compressor	Inspect compressor and repair or replace as necessary.

Condition			Possible Cause	Correction
Manifold Gauge	MPa (kg/cm ²) (psi)	Detail		
Lo	Hi			
0.35 – 0.45 (3.5 – 4.5) (50 – 64)	2.0 – 2.5 (20 – 25) (285 – 355)	High pressure reading on both low and high pressure sides.	Overcharged A/C system. Faulty condenser cooling operation. Faulty radiator fan operation.	Adjust refrigerant to specified amount. Clean condenser. Inspect and repair radiator fan.
		High pressure reading on both low and high pressure sides. Low pressure side tubing is not cold when touched.	Presence of air in A/C system. (Improperly evacuated)	Replace desiccant and cap with filter. Inspect quantity of compressor oil and presence of contaminants in oil. Evacuate system and recharge with fresh refrigerant.
0.45 – 0.55 (4.5 – 5.5) (64 – 78)		High pressure reading on both low and high pressure sides. Large amount of frost or dew on the low pressure side tubing.	Faulty expansion valve. Refrigerant flow is not regulated properly.	Replace expansion valve.

A/C System Symptom Diagnosis

Condition	Possible cause	Correction / Reference Item
No cool air comes out (A/C system does not operate)	No refrigerant	Perform recovery, evacuation and charge referring to "Operation Procedure for Charging A/C with Refrigerant".
	Fuse blown	Check related fuses, and then check for short circuit to ground.
	Evaporator temperature sensor faulty	Check evaporator temperature sensor referring to "A/C Evaporator Temperature Sensor Inspection".
	A/C refrigerant pressure sensor faulty	Check A/C refrigerant pressure sensor referring to "A/C Refrigerant Pressure Sensor and Its Circuit Inspection".
	Wiring or grounding faulty	Repair as necessary.
	ECT sensor faulty	Check ECT sensor referring to "Engine Coolant Temperature (ECT) Sensor Inspection in Section 1C".
	ECM faulty	Check ECM referring to "A/C System Inspection at ECM".
	HVAC control module faulty	Check HVAC control module referring to "HVAC Control Module and Its Circuits Inspection".
	Magnet clutch faulty	Check magnet clutch referring to "Magnet Clutch Operating Check" or "Magnet Clutch Operating Check".
	Compressor drive belt loosened or broken	Adjust or replace drive belt.
	Compressor faulty	Check compressor.
	Compressor relay faulty	Check compressor relay referring to "A/C Compressor Relay Inspection".
	Temperature selector, blower speed selector, and/or air flow selector faulty	Check HVAC control module referring to "HVAC Control Module and Its Circuits Inspection".
	BCM faulty	Check BCM referring to "Inspection of BCM and Its Circuits in Section 10B".
No cool air comes out (radiator cooling fan motor does not operate)	Fuse blown	Check related fuses, and then check for short circuit to ground.
	Wiring or grounding faulty	Repair as necessary.
	Radiator cooling fan motor relay faulty	Check radiator cooling fan motor relay referring to "Radiator Cooling Fan Relay Inspection in Section 1F".
	Radiator cooling fan motor faulty	Check radiator cooling fan motor referring to "Radiator Cooling Fan Motor On-Vehicle Inspection in Section 1F".
	ECM faulty	Check ECM referring to "A/C System Inspection at ECM".
	HVAC control module faulty	Check HVAC control module referring to "HVAC Control Module and Its Circuits Inspection".

Condition	Possible cause	Correction / Reference Item
No cool air comes out (blower motor does not operate)	Fuse blown	Check related fuses, and then check for short circuit to ground.
	Blower motor controller faulty	Check blower motor controller referring to "Blower Motor Controller Inspection in Section 7A".
	Blower speed selector faulty	Check blower speed selector referring to "HVAC Control Module and Its Circuits Inspection".
	HVAC control module faulty	Check HVAC control module referring to "HVAC Control Module and Its Circuits Inspection".
	Wiring or grounding faulty	Repair as necessary.
	Blower motor faulty	Check blower motor referring to "Blower Motor Inspection in Section 7A".
	Blower motor relay faulty	Check blower motor relay referring to "Blower Motor Relay Inspection in Section 7A".
Cool air does not come out or insufficient cooling (A/C system normal operation)	Insufficient or excessive charge of refrigerant	Check the amount of refrigerant and system for leaks.
	Condenser clogged	Check condenser referring to "A/C Condenser Assembly On-Vehicle Inspection".
	A/C evaporator clogged or frosted	Check A/C evaporator and evaporator temperature sensor referring to "A/C Evaporator Inspection" and "A/C Evaporator Temperature Sensor Inspection".
	Evaporator temperature sensor faulty	Check evaporator temperature sensor referring to "A/C Evaporator Temperature Sensor Inspection".
	Expansion valve faulty	Check expansion valve referring to "Expansion Valve On-Vehicle Inspection".
	Desiccant clogged	Check desiccant.
	Compressor drive belt loosened or broken	Adjust or replace drive belt.
	Magnet clutch faulty	Check magnet clutch referring to "Magnet Clutch Operating Check" or "Magnet Clutch Operating Check".
	Compressor faulty	Check compressor.
	Air in A/C system	Replace desiccant, and then perform evacuation and charge referring to "Operation Procedure for Charging A/C with Refrigerant".
	Air leaking from HVAC unit or air duct	Repair as necessary.
	Heater and ventilation system faulty	Check HVAC unit.
	Temperature selector faulty	Check temperature selector referring to "HVAC Control Module and Its Circuits Inspection".
	HVAC control module faulty	Check HVAC control module referring to "HVAC Control Module and Its Circuits Inspection".
	Temperature control actuator faulty	Check temperature control actuator referring to "Temperature Control Actuator Inspection".
	Blower motor faulty	Check blower motor referring to "Blower Motor Inspection in Section 7A".
	Excessive compressor oil in A/C system	Drain excessive compressor oil from A/C system circuit and compressor.

Condition	Possible cause	Correction / Reference Item
Cool air does not come out only intermittently	Wiring connection faulty	<i>Repair as necessary.</i>
	Expansion valve faulty	<i>Check expansion valve referring to "Expansion Valve On-Vehicle Inspection".</i>
	Excessive moisture in A/C system	<i>Replace desiccant, and then perform evacuation and charge referring to "Operation Procedure for Charging A/C with Refrigerant".</i>
	Magnet clutch faulty	<i>Check magnet clutch referring to "Magnet Clutch Operating Check" or "Magnet Clutch Operating Check".</i>
	Excessive amount of refrigerant	<i>Check the amount of refrigerant.</i>
Cool air comes out only at high speed	Condenser clogged	<i>Check condenser referring to "A/C Condenser Assembly On-Vehicle Inspection".</i>
	Insufficient charge of refrigerant	<i>Check the amount of refrigerant and system for leaks.</i>
	Air in A/C system	<i>Replace desiccant, and then perform evacuation and charge referring to "Operation Procedure for Charging A/C with Refrigerant".</i>
	Compressor drive belt loosened or broken	<i>Adjust or replace drive belt.</i>
	Compressor faulty	<i>Check compressor.</i>
Cool air does not come out only at high speed	Excessive amount of refrigerant	<i>Check the amount of refrigerant.</i>
	A/C evaporator frosted	<i>Check A/C evaporator and evaporator temperature sensor referring to "A/C Evaporator Inspection" and "A/C Evaporator Temperature Sensor Inspection".</i>
Insufficient air flow of cooled air	A/C evaporator clogged or frosted	<i>Check A/C evaporator and evaporator temperature sensor referring to "A/C Evaporator Inspection" and "A/C Evaporator Temperature Sensor Inspection".</i>
	Air leaking from HVAC unit or air duct	<i>Repair as necessary.</i>
	Blower motor faulty	<i>Check blower motor referring to "Blower Motor Inspection in Section 7A".</i>
	Wiring or grounding faulty	<i>Repair as necessary.</i>

Abnormal Noise Diagnosis

S6JB0B7204010

There are various types of noise, ranging from those produced in the engine compartment to those from the passenger compartment, also from rumbling noises to whistling noises.

Abnormal Noise Symptom Diagnosis of A/C System

S6JB0B7204011

Abnormal Noise from Compressor

Condition	Possible cause	Correction / Reference Item
During compressor operation, a rumbling noise is heard proportional to engine revolutions	Inadequate clearance in scroll area	<i>Replace compressor.</i>
A loud noise is heard at a certain rpm, disproportionately to engine revolution	Loose or faulty compressor drive belt	<i>Adjust drive belt tension or replace drive belt.</i>
	Loose compressor mounting bolts	<i>Retighten mounting bolts.</i>
A loud rattle is heard at low engine rpm	Loose compressor armature plate bolt	<i>Retighten armature plate bolt. Replace compressor if it was operated in this condition for a long time.</i>

Abnormal Noise from Magnetic Clutch

Condition	Possible cause	Correction / Reference Item
A rumbling noise is heard when compressor is not in operation	Worn or damaged bearings	<i>Replace magnet clutch assembly.</i>
A chattering noise is heard when compressor is in operation	Faulty magnet clutch clearance (excessive clearance)	<i>Adjust magnet clutch clearance.</i>
	Worn magnet clutch friction surface	<i>Replace magnet clutch assembly.</i>
	Compressor oil leaked from shaft seal, contaminating the friction surface	<i>Replace compressor body assembly.</i>

Abnormal Noise from Tubing

Condition	Possible cause	Correction / Reference Item
A droning noise is heard from inside of the vehicle, but not particularly noticeable in engine compartment	Faulty tubing clamps	<i>Reposition clamps or increase the number of clamps.</i>
	Resonance caused by pulsation from variations in refrigerant pressure	<i>Attach a silencer to tubing, or modify its position and length.</i>

Abnormal Noise from Condenser Assembly

Condition	Possible cause	Correction / Reference Item
Considerable vibration in condenser assembly	Resonance from condenser assembly bracket and body	<i>Firmly insert a silencer between condenser assembly bracket and body.</i>

Abnormal Noise from Crankshaft Pulley

Condition	Possible cause	Correction / Reference Item
A large rattling noise is heard at idle or sudden acceleration	Loosen crankshaft pulley bolt	<i>Retighten bolt.</i>

Abnormal Noise from Tension Pulley

Condition	Possible cause	Correction / Reference Item
Clattering noise is heard from pulley	Worn or damaged bearing	<i>Replace tension pulley.</i>
Pulley cranks upon contact	Cracked or loose bracket	<i>Replace or retighten bracket.</i>

Abnormal Noise from A/C Evaporator


Condition	Possible cause	Correction / Reference Item
Whistling sound is heard from A/C evaporator	Depending on the combination of the interior / exterior temperatures, engine rpm and refrigerant pressure, the refrigerant flowing out of the expansion valve may, under certain conditions, make a whistling sound	<i>At times, slightly decreasing refrigerant volume may stop this noise. Inspect expansion valve and replace if faulty.</i>

Abnormal Noise from Blower Motor

Condition	Possible cause	Correction / Reference Item
Blower motor emits a chirping sound in proportion to its speed of rotation	Worn or damaged motor brushes or commutator	<i>Replace blower motor.</i>
Fluttering noise or large droning noise is heard from blower motor	Leaves or other debris introduced from fresh air inlet to blower motor	<i>Remove debris and make sure that the screen at fresh air inlet is intact.</i>

DTC B1502: Inside Air Temperature Sensor and/or Its Circuit Malfunction

S6JB0B7204012

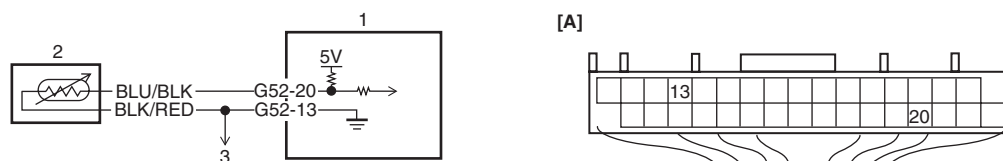Wiring Diagram

I5JB0A720020-01

[A]: HVAC control module connector "G52" (harness side view)	2. Inside air temperature sensor
1. HVAC control module	3. To other sensors

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Inside air temperature sensor signal voltage is more than or less than specified value for specified time continuously.	<ul style="list-style-type: none"> Inside air temperature sensor circuit Inside air temperature sensor HVAC control module

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch turned OFF.
- 2) Turn ON ignition switch and clear DTC using scan tool.
- 3) Check DTC.

DTC Troubleshooting**NOTE**

When DTC B1503, B1511, B1512 and B1530 are indicated together, it is possible that "BLK/RED" wire circuit open.

Step	Action	Yes	No
1	Inside air temperature sensor signal circuit check <ol style="list-style-type: none"> 1) Disconnect inside air temperature sensor connector with ignition switch turned OFF. 2) Check for proper connection to inside air temperature sensor at "BLU/BLK" and "BLK/RED" wire terminals. 3) If OK, measure voltage between "BLU/BLK" wire terminal of inside air temperature sensor connector and vehicle body ground with ignition switch turned ON. <p><i>Is voltage 4 – 6 V?</i></p>	Go to Step 5.	Go to Step 2.
2	Inside air temperature sensor signal circuit check <ol style="list-style-type: none"> 1) Disconnect connector from HVAC control module with ignition switch turned OFF. 2) Check for proper connection to HVAC control module connector at "G52-20" and "G52-13" terminals. 3) If OK, measure resistance between "BLU/BLK" wire terminal of inside air temperature sensor connector and "G52-20" terminal of HVAC control module connector. <p><i>Is resistance below 5 Ω?</i></p>	Go to Step 3.	"BLU/BLK" wire open or high resistance circuit.
3	Inside air temperature sensor signal circuit check <ol style="list-style-type: none"> 1) Measure resistance between "BLU/BLK" wire terminal of inside air temperature sensor connector and vehicle body ground. <p><i>Is resistance infinity?</i></p>	Go to Step 4.	"BLU/BLK" wire shorted to ground circuit.

Step	Action	Yes	No
4	Inside air temperature sensor signal circuit check 1) Measure voltage between “BLU/BLK” wire terminal of inside air temperature sensor connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 0 V?</i>	Go to Step 5.	“BLU/BLK” wire shorted to other circuit.
5	Inside air temperature sensor ground circuit check 1) Connect HVAC control module connector with ignition switch turned OFF. 2) Measure resistance between “BLK/RED” wire terminal of inside air temperature sensor connector and vehicle body ground. <i>Is resistance below 5 Ω?</i>	Go to Step 7.	Go to Step 6.
6	Inside air temperature sensor ground circuit check 1) Measure resistance between “G52-13” terminal of HVAC control module connector and vehicle body ground. <i>Is resistance below 5 Ω?</i>	“BLK/RED” wire open or high resistance circuit.	HVAC control module faulty.
7	Inside air temperature sensor check 1) Check inside air temperature sensor referring to “Inside Air Temperature Sensor Inspection”. <i>Is it in good condition?</i>	HVAC control module faulty.	Inside air temperature sensor faulty.

DTC B1503: A/C Evaporator Air Temperature Sensor and/or Its Circuit Malfunction

S6JB0B7204013

Wiring Diagram



I5JB0A720021-01

[A]: HVAC control module connector “G52” (harness side view)	2. Evaporator temperature sensor
1. HVAC control module	3. To other sensors

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Evaporator temperature sensor signal voltage is more than or less than specified value for specified time continuously.	<ul style="list-style-type: none"> Evaporator temperature sensor circuit Evaporator temperature sensor HVAC control module

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch turned OFF.
- 2) Turn ON ignition switch and clear DTC using scan tool.
- 3) Check DTC.

DTC Troubleshooting


NOTE

When DTC B1502, B1511, B1512 and B1530 are indicated together, it is possible that “BLK/RED” wire circuit open.

Step	Action	Yes	No
1	Evaporator temperature sensor signal circuit check 1) Disconnect evaporator temperature sensor connector with ignition switch turned OFF. 2) Check for proper connection to evaporator temperature sensor at “WHT/BLK” and “BLK/RED” wire terminals. 3) If OK, measure voltage between “WHT/BLK” wire terminal of evaporator temperature sensor connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 4 – 6 V?</i>	Go to Step 5.	Go to Step 2.
2	Evaporator temperature sensor signal circuit check 1) Disconnect connector from HVAC control module with ignition switch turned OFF. 2) Check for proper connection to HVAC control module connector at “G52-19” and “G52-13” terminals. 3) If OK, measure resistance between “WHT/BLK” wire terminal of evaporator temperature sensor connector and “G52-19” terminal of HVAC control module connector. <i>Is resistance below 5 Ω?</i>	Go to Step 3.	“WHT/BLK” wire open or high resistance circuit.
3	Evaporator temperature sensor signal circuit check 1) Measure resistance between “WHT/BLK” wire terminal of evaporator temperature sensor connector and vehicle body ground. <i>Is resistance infinity?</i>	Go to Step 4.	“WHT/BLK” wire shorted to ground circuit.
4	Evaporator temperature sensor signal circuit check 1) Measure voltage between “WHT/BLK” wire terminal of evaporator temperature sensor connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 0 V?</i>	Go to Step 5.	“WHT/BLK” wire shorted to other circuit.
5	Evaporator temperature sensor ground circuit check 1) Connect HVAC control module connector with ignition switch turned OFF. 2) Measure resistance between “BLK/RED” wire terminal of evaporator temperature sensor connector and vehicle body ground. <i>Is resistance below 5 Ω?</i>	Go to Step 7.	Go to Step 6.
6	Evaporator temperature sensor ground circuit check 1) Measure resistance between “G52-13” terminal of HVAC control module connector and vehicle body ground. <i>Is resistance below 5 Ω?</i>	“BLK/RED” wire open or high resistance circuit.	HVAC control module faulty.
7	Evaporator temperature sensor check 1) Check evaporator temperature sensor referring to “A/C Evaporator Temperature Sensor Inspection”. <i>Is it in good condition?</i>	HVAC control module faulty.	Evaporator temperature sensor faulty.

DTC B1504: Sunload Sensor and/or Its Circuit Malfunction

S6JB0B7204014

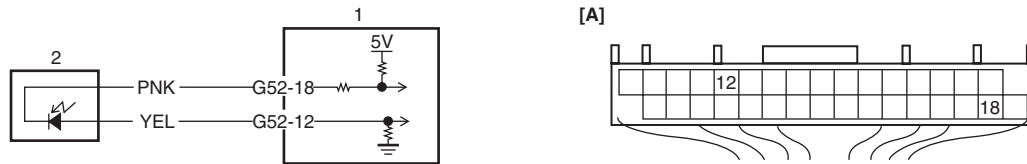Wiring Diagram

I5JB0A720022-01

[A]: HVAC control module connector "G52" (harness side view)	1. HVAC control module	2. Sunload sensor
--	------------------------	-------------------

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Sunload sensor signal voltage is more than or less than specified value for specified time continuously.	<ul style="list-style-type: none"> • Sunload sensor circuit • Sunload sensor • HVAC control module

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch turned OFF.
- 2) Turn ON ignition switch and clear DTC using scan tool.
- 3) Check DTC.

DTC Troubleshooting

Step	Action	Yes	No
1	Sunload sensor power supply circuit check 1) Disconnect sunload sensor connector with ignition switch turned OFF. 2) Check for proper connection to sunload sensor at "PNK" and "YEL" wire terminals. 3) If OK, measure voltage between "PNK" wire terminal of sunload sensor connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 4 – 6 V?</i>	Go to Step 5.	Go to Step 2.
2	Sunload sensor power supply circuit check 1) Disconnect connector from HVAC control module with ignition switch turned OFF. 2) Check for proper connection to HVAC control module connector at "G52-12" and "G52-18" terminals. 3) If OK, measure resistance between "PNK" wire terminal of sunload sensor connector and "G52-12" terminal of HVAC control module connector. <i>Is resistance below 5 Ω?</i>	Go to Step 3.	"PNK" wire open or high resistance circuit.
3	Sunload sensor power supply circuit check 1) Measure resistance between "PNK" wire terminal of sunload sensor connector and vehicle body ground. <i>Is resistance infinity?</i>	Go to Step 4.	"PNK" wire shorted to ground circuit.
4	Sunload sensor power supply circuit check 1) Measure voltage between "PNK" wire terminal of sunload sensor connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 0 V?</i>	Go to Step 5.	"PNK" wire shorted to other circuit.


7B-34 Air Conditioning System:

Step	Action	Yes	No
5	Sunload sensor signal circuit check 1) Disconnect HVAC control module connector with ignition switch turned OFF. 2) Measure resistance between "YEL" wire terminal of sunload sensor connector and vehicle body ground. <i>Is resistance infinity?</i>	Go to Step 6.	"YEL" wire shorted to ground circuit.
6	Sunload sensor signal circuit check 1) Measure resistance between "G52-12" terminal of HVAC control module connector and "YEL" wire terminal of sunload sensor connector. <i>Is resistance below 5 Ω?</i>	Go to Step 7.	"YEL" wire open or high resistance circuit.
7	Sunload sensor signal circuit check 1) Measure voltage between "YEL" wire terminal of sunload sensor connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 0 V?</i>	Go to Step 8.	"YEL" wire shorted to other circuit.
8	Sunload sensor check 1) Check sunload sensor referring to "Sunload Sensor Inspection". <i>Is it in good condition?</i>	HVAC control module faulty.	Sunload sensor faulty.

DTC B1511: Temperature Control Actuator (Position Sensor) and/or Its Circuit Malfunction

S6JB0B7204015

Wiring Diagram

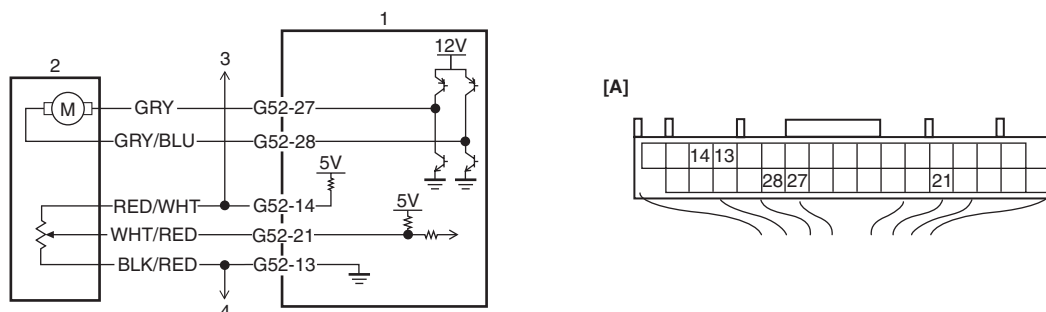

I5JB0A720023-02

[A]: HVAC control module connector "G52" (harness side view)	3. To other actuators
1. HVAC control module	4. To other sensors
2. Temperature control actuator	

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Temperature control actuator position sensor signal voltage is more than or less than specified value for specified time continuously.	<ul style="list-style-type: none"> Temperature control actuator circuit Temperature control actuator HVAC control module

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch turned OFF.
- 2) Turn ON ignition switch and clear DTC using scan tool.
- 3) Check DTC.

DTC Troubleshooting

NOTE

When DTC B1502, B1503, B1512 and B1530 are indicated together, it is possible that "BLK/RED" wire circuit open.


Step	Action	Yes	No
1	Position sensor power supply circuit check 1) Disconnect temperature control actuator connector with ignition switch turned OFF. 2) Check for proper connection to temperature control actuator at "RED/WHT", "WHT/RED" and "BLK/RED" wire terminals. 3) If OK, measure voltage between "RED/WHT" wire terminal of temperature control actuator connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 4 – 6 V?</i>	Go to Step 6.	Go to Step 2.
2	Position sensor power supply circuit check 1) Disconnect air flow control actuator connector with ignition switch turned OFF. 2) Measure voltage between "RED/WHT" wire terminal of temperature control actuator connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 4 – 6 V?</i>	Air flow control actuator faulty.	Go to Step 3.
3	Position sensor power supply circuit check 1) Disconnect air intake control actuator connector with ignition switch turned OFF. 2) Measure voltage between "RED/WHT" wire terminal of temperature control actuator connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 4 – 6 V?</i>	Air intake control actuator faulty.	Go to Step 4.
4	Position sensor power supply circuit check 1) Disconnect connector from HVAC control module with ignition switch turned OFF. 2) Check for proper connection to HVAC control module connector at "G52-14", "G52-27" and "G52-21" terminals. 3) If OK, measure resistance between "RED/WHT" wire terminal of temperature control actuator connector and "G52-14" terminal of HVAC control module connector. <i>Is resistance below 5 Ω?</i>	Go to Step 5.	"RED/WHT" wire open or high resistance circuit.
5	Position sensor power supply circuit check 1) Measure resistance between "RED/WHT" wire terminal of temperature control actuator connector and vehicle body ground. <i>Is resistance infinity?</i>	Go to Step 6.	"RED/WHT" wire shorted to ground circuit.
6	Position sensor power supply circuit check 1) Measure voltage between "RED/WHT" wire terminal of temperature control actuator connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 0 V?</i>	Go to Step 7.	"RED/WHT" wire shorted to other circuit.

7B-36 Air Conditioning System:

Step	Action	Yes	No
7	Position sensor signal circuit check 1) Connect HVAC control module connector with ignition switch turned OFF. 2) Measure voltage between "WHT/RED" wire terminal of temperature control actuator connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 4 – 6 V?</i>	Go to Step 11.	Go to Step 8.
8	Position sensor signal circuit check 1) Disconnect connector from HVAC control module with ignition switch turned OFF. 2) Measure resistance between "WHT/RED" wire terminal of temperature control actuator connector and "G52-21" terminal of HVAC control module connector. <i>Is resistance below 5 Ω?</i>	Go to Step 9.	"WHT/RED" wire open or high resistance circuit.
9	Position sensor signal circuit check 1) Measure resistance between "WHT/RED" wire terminal of temperature control actuator connector and vehicle body ground. <i>Is resistance infinity?</i>	Go to Step 10.	"WHT/RED" wire shorted to ground circuit.
10	Position sensor signal circuit check 1) Measure voltage between "WHT/RED" wire terminal of temperature control actuator connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 0 V?</i>	Go to Step 11.	"WHT/RED" wire shorted to other circuit.
11	Position sensor ground circuit check 1) Connect HVAC control module connector with ignition switch turned OFF. 2) Measure resistance between "BLK/RED" wire terminal of temperature control actuator connector and vehicle body ground. <i>Is resistance below 5 Ω?</i>	Go to Step 13.	Go to Step 12.
12	Position sensor ground circuit check 1) Measure resistance between "G52-13" terminal of HVAC control module connector and vehicle body ground. <i>Is resistance below 5 Ω?</i>	"BLK/RED" wire open or high resistance circuit.	HVAC control module faulty.
13	Temperature control actuator check 1) Check temperature control actuator referring to "Temperature Control Actuator Inspection". <i>Is it in good condition?</i>	HVAC control module faulty.	Temperature control actuator faulty.

DTC B1512: Air Flow Control Actuator (Position Sensor) and/or Its Circuit Malfunction

S6JB0B7204016

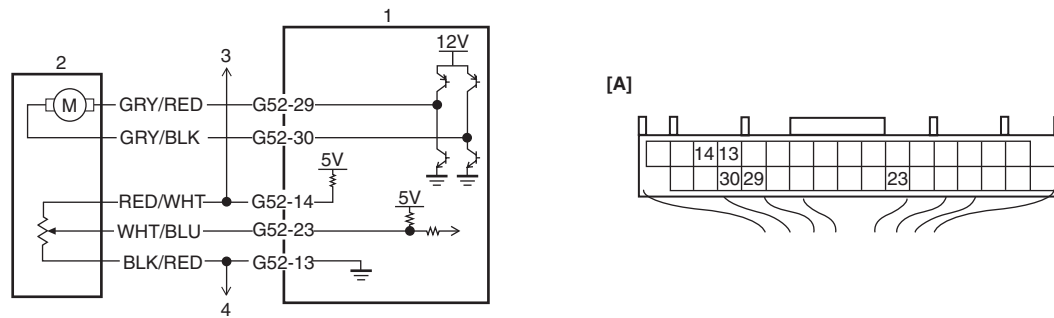Wiring Diagram

I5JB0A720024-02

[A]: HVAC control unit connector "G52" (harness side view)	
1. HVAC control module	3. To other actuators
2. Air flow control actuator	4. To other sensors

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Air flow control actuator position sensor signal voltage is more than or less than specified value for specified time continuously.	<ul style="list-style-type: none"> Air flow control actuator circuit Air flow control actuator HVAC control module

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch turned OFF.
- 2) Turn ON ignition switch and clear DTC using scan tool.
- 3) Check DTC.

DTC Troubleshooting**NOTE**

When DTC B1502, B1503, B1511 and B1530 are indicated together, it is possible that "BLK/RED" wire circuit open.

Step	Action	Yes	No
1	Position sensor power supply circuit check <ol style="list-style-type: none"> 1) Disconnect air flow control actuator connector with ignition switch turned OFF. 2) Check for proper connection to air flow control actuator at "RED/WHT", "WHT/BLU" and "BLK/RED" wire terminals. 3) If OK, measure voltage between "RED/WHT" wire terminal of air flow control actuator connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 4 – 6 V?</i>	Go to Step 6.	Go to Step 2.
2	Position sensor power supply circuit check <ol style="list-style-type: none"> 1) Disconnect temperature control actuator connector with ignition switch turned OFF. 2) Measure voltage between "RED/WHT" wire terminal of air flow control actuator connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 4 – 6 V?</i>	Temperature control actuator faulty.	Go to Step 3.


7B-38 Air Conditioning System:

Step	Action	Yes	No
3	Position sensor power supply circuit check 1) Disconnect air intake control actuator connector with ignition switch turned OFF. 2) Measure voltage between "RED/WHT" wire terminal of temperature control actuator connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 4 – 6 V?</i>	Air intake control actuator faulty.	Go to Step 4.
4	Position sensor power supply circuit check 1) Disconnect connector from HVAC control module with ignition switch turned OFF. 2) Check for proper connection to HVAC control module connector at "G52-14", "G52-13" and "G52-23" terminals. 3) If OK, measure resistance between "RED/WHT" wire terminal of air flow control actuator connector and "G52-14" terminal of HVAC control module connector. <i>Is resistance below 5 Ω?</i>	Go to Step 5.	"RED/WHT" wire open or high resistance circuit.
5	Position sensor power supply circuit check 1) Measure resistance between "RED/WHT" wire terminal of air flow control actuator connector and vehicle body ground. <i>Is resistance infinity?</i>	Go to Step 6.	"RED/WHT" wire shorted to ground circuit.
6	Position sensor power supply circuit check 1) Measure voltage between "RED/WHT" wire terminal of air flow control actuator connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 0 V?</i>	Go to Step 7.	"RED/WHT" wire shorted to other circuit.
7	Position sensor signal circuit check 1) Connect HVAC control module connector with ignition switch turned OFF. 2) Measure voltage between "WHT/BLU" wire terminal of air flow control actuator connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 4 – 6 V?</i>	Go to Step 11.	Go to Step 8.
8	Position sensor signal circuit check 1) Disconnect connector from HVAC control module with ignition switch turned OFF. 2) Measure resistance between "WHT/BLU" wire terminal of air flow control actuator connector and "G52-23" terminal of HVAC control module connector. <i>Is resistance below 5 Ω?</i>	Go to Step 9.	"WHT/BLU" wire open or high resistance circuit.
9	Position sensor signal circuit check 1) Measure resistance between "WHT/BLU" wire terminal of air flow control actuator connector and vehicle body ground. <i>Is resistance infinity?</i>	Go to Step 10.	"WHT/BLU" wire shorted to ground circuit.

Step	Action	Yes	No
10	Position sensor signal circuit check 1) Measure voltage between “WHT/BLU” wire terminal of air flow control actuator connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 0 V?</i>	Go to Step 11.	“WHT/BLU” wire shorted to other circuit.
11	Position sensor ground circuit check 1) Connect HVAC control module connector with ignition switch turned OFF. 2) Measure resistance between “BLK/RED” wire terminal of air flow control actuator connector and vehicle body ground. <i>Is resistance below 5 Ω?</i>	Go to Step 13.	Go to Step 12.
12	Position sensor ground circuit check 1) Measure resistance between “G52-13” terminal of HVAC control module connector and vehicle body ground. <i>Is resistance below 5 Ω?</i>	“BLK/RED” wire open or high resistance circuit.	HVAC control module faulty.
13	Air flow control actuator check 1) Check air flow control actuator referring to “Air Flow Control Actuator Inspection”. <i>Is it in good condition?</i>	HVAC control module faulty.	Air flow control actuator faulty.

DTC B1513: Temperature Control Actuator and/or Its Circuit Malfunction

S6JB0B7204017

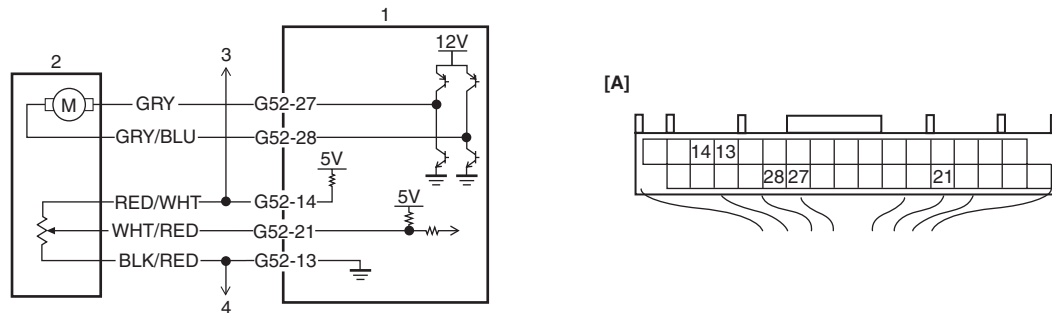Wiring Diagram

I5JB0A720025-02

[A]: HVAC control module connector “G52” (harness side view)	3. To other actuators
1. HVAC control module	4. To other sensors
2. Temperature control actuator	

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Difference between target opening and actual opening is more than specified value even though temperature control actuator has operated for 15 seconds.	<ul style="list-style-type: none"> Temperature control actuator circuit Temperature control linkage Temperature control actuator HVAC unit HVAC control module

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch turned OFF.
- 2) Turn ON ignition switch and clear DTC using scan tool.
- 3) Start A/C system and select temperature selector at "MAX COOL" position or "MAX HOT" position.
- 4) Wait for 1 minute.
- 5) Check DTC.

DTC Troubleshooting


Step	Action	Yes	No
1	DTC check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ON ignition switch and check DTC. <i>Is there DTC B1511?</i>	Go to applicable DTC diag. flow.	Go to Step 2.
2	Visual check 1) Check if there is any obstruction in operating range of actuator linkage and if actuator linkage operates smoothly. <i>Is it in good condition?</i>	Go to Step 3.	Obstruction in operating range of actuator linkage, actuator linkage faulty and/or internal fault of HVAC unit.
3	Wire harness check 1) Disconnect connector from temperature control actuator with ignition switch turned OFF. 2) Check for proper connection to temperature control actuator connector at "GRY" and "GRY/BLU" wire terminals. 3) If OK, measure voltage between "GRY" wire terminal of temperature control actuator connector and vehicle body ground with ignition switch turned ON when temperature selector is operation to COOL direction. <i>Is voltage 10 – 14 V?</i>	Go to Step 7.	Go to Step 4.
4	Wire harness check 1) Disconnect connector from HVAC control module with ignition switch turned OFF. 2) Check for proper connection to HVAC control module connector at "G52-27" and "G52-28" terminals. 3) If OK, measure resistance between "GRY" wire terminal of temperature control actuator connector and "G52-27" terminal of HVAC control module connector. <i>Is resistance below 5 Ω?</i>	Go to Step 5.	"GRY" wire open or high resistance circuit.
5	Wire harness check 1) Measure resistance between "GRY" wire terminal of temperature control actuator connector and vehicle body ground. <i>Is resistance infinity?</i>	Go to Step 6.	"GRY" wire shorted to ground circuit.
6	Wire harness check 1) Measure voltage between "GRY" wire terminal of temperature control actuator connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 0 V?</i>	Go to Step 7.	"GRY" wire shorted to other circuit.

Step	Action	Yes	No
7	Wire harness check 1) Connect connector to HVAC control module with ignition switch turned OFF. 2) Measure voltage between "GRY/BLU" wire terminal of temperature control actuator connector and vehicle body ground with ignition switch turned ON when temperature selector is operation to HOT direction. <i>Is voltage 10 – 14 V?</i>	Go to Step 11.	Go to Step 8.
8	Wire harness check 1) Disconnect connector from HVAC control module with ignition switch turned OFF. 2) Check for proper connection to HVAC control module connector at "G52-27" and "G52-28" terminals. 3) If OK, measure resistance between "GRY/BLU" wire terminal of temperature control actuator connector and "G52-28" terminal of HVAC control module connector. <i>Is resistance below 5 Ω?</i>	Go to Step 9.	"GRY/BLU" wire open or high resistance circuit.
9	Wire harness check 1) Measure resistance between "GRY/BLU" wire terminal of temperature control actuator connector and vehicle body ground. <i>Is resistance infinity?</i>	Go to Step 10.	"GRY/BLU" wire shorted to ground circuit.
10	Wire harness check 1) Measure voltage between "GRY/BLU" wire terminal of temperature control actuator connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 0 V?</i>	Go to Step 11.	"GRY/BLU" wire shorted to other circuit.
11	Position sensor circuit check 1) Check temperature control actuator position sensor circuit referring to Step 1 to Step 6 and Step 11 to Step 12 of "DTC B1511: Temperature Control Actuator (Position Sensor) and/or Its Circuit Malfunction". <i>Is it in good condition?</i>	Go to Step 12.	Repair circuit.
12	Temperature control actuator check 1) Check temperature control actuator referring to "Temperature Control Actuator Inspection". <i>Is it in good condition?</i>	HVAC control module faulty.	Temperature control actuator faulty.

DTC B1514: Air Flow Control Actuator and/or Its Circuit Malfunction

S6JB0B7204018

Wiring Diagram

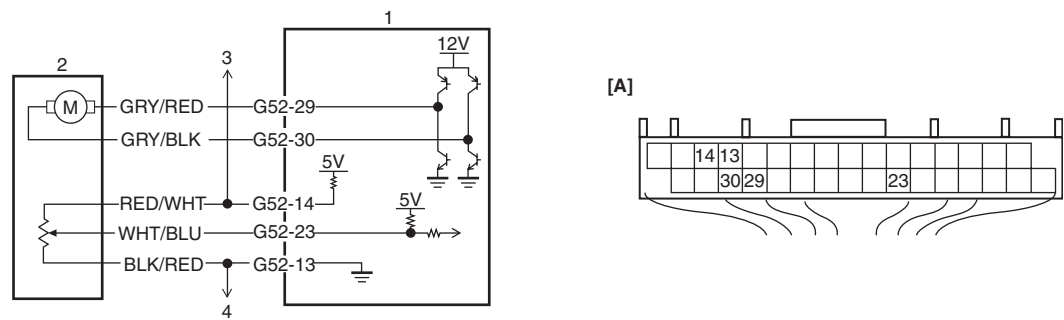

I5JB0A720026-01

[A]: HVAC control module connector "G52" (harness side view)	
1. HVAC control module	3. To other actuators
2. Air flow control actuator	4. To other sensors

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Difference between target opening and actual opening is more than specified value even though air flow control actuator has operated for 15 seconds.	<ul style="list-style-type: none"> Air flow control actuator circuit Air flow control linkage Air flow control actuator HVAC unit HVAC control module

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch turned OFF.
- 2) Turn ON ignition switch and clear DTC using scan tool.
- 3) Start A/C system and select mode selector at "DEF" position.
- 4) Select mode selector at "FOOT" position and wait for 1 minute.
- 5) Check DTC.

DTC Troubleshooting

Step	Action	Yes	No
1	DTC check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ON ignition switch and check DTC. <i>Is there DTC B1512?</i>	Go to applicable DTC diag. flow.	Go to Step 2.
2	Visual check 1) Check if there is any obstruction in operating range of actuator linkage and if actuator linkage operates smoothly. <i>Is it in good condition?</i>	Go to Step 3.	Obstruction in operating range of actuator linkage, actuator linkage faulty and/or internal fault of HVAC unit.

Step	Action	Yes	No
3	Wire harness check 1) Disconnect connector from air flow control actuator with ignition switch turned OFF. 2) Check for proper connection to air flow control actuator connector at "GRY/RED" and "GRY/BLK" wire terminals. 3) If OK, measure voltage between "GRY/RED" wire terminal of air flow control actuator connector and vehicle body ground with ignition switch turned ON when air flow selector is operation to VENT direction. <i>Is voltage 10 – 14 V?</i>	Go to Step 7.	Go to Step 4.
4	Wire harness check 1) Disconnect connector from HVAC control module with ignition switch turned OFF. 2) Check for proper connection to HVAC control module connector at "G51-29" and "G51-30" terminals. 3) If OK, measure resistance between "GRY/RED" wire terminal of air flow control actuator connector and "G51-29" terminal of HVAC control module connector. <i>Is resistance below 5 Ω?</i>	Go to Step 5.	"GRY/RED" wire open or high resistance circuit.
5	Wire harness check 1) Measure resistance between "GRY/RED" wire terminal of air flow control actuator connector and vehicle body ground. <i>Is resistance infinity?</i>	Go to Step 6.	"GRY/RED" wire shorted to ground circuit.
6	Wire harness check 1) Measure voltage between "GRY/RED" wire terminal of air flow control actuator connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 0 V?</i>	Go to Step 7.	"GRY/RED" wire shorted to other circuit.
7	Wire harness check 1) Connect connector to HVAC control module with ignition switch turned OFF. 2) Measure voltage between "GRY/BLK" wire terminal of air flow control actuator connector and vehicle body ground with ignition switch turned ON when air flow selector is operation to DEF direction. <i>Is voltage 10 – 14 V?</i>	Go to Step 11.	Go to Step 8.
8	Wire harness check 1) Disconnect connector from HVAC control module with ignition switch turned OFF. 2) Check for proper connection to HVAC control module connector at "G51-29" and "G51-30" terminals. 3) If OK, measure resistance between "GRY/BLK" wire terminal of air flow control actuator connector and "G51-30" terminal of HVAC control module connector. <i>Is resistance below 5 Ω?</i>	Go to Step 9.	"GRY/BLK" wire open or high resistance circuit.
9	Wire harness check 1) Measure resistance between "GRY/BLK" wire terminal of air flow control actuator connector and vehicle body ground. <i>Is resistance infinity?</i>	Go to Step 10.	"GRY/BLK" wire shorted to ground circuit.

7B-44 Air Conditioning System:

Step	Action	Yes	No
10	Wire harness check 1) Measure voltage between “GRY/BLK” wire terminal of air flow control actuator connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 0 V?</i>	Go to Step 11.	“GRY/BLK” wire shorted to other circuit.
11	Position sensor circuit check 1) Check air flow control actuator position sensor circuit referring to Step 1 to Step 6 and Step 11 to Step 12 of “DTC B1512: Air Flow Control Actuator (Position Sensor) and/or Its Circuit Malfunction”. <i>Is it in good condition?</i>	Go to Step 12.	Repair circuit.
12	Air flow control actuator check 1) Check air flow control actuator referring to “Air Flow Control Actuator Inspection”. <i>Is it in good condition?</i>	HVAC control module faulty.	Air flow control actuator faulty.

DTC B1520: Temperature Selector and/or Its Circuit Malfunction

S6JB0B7204019

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
This DTC will be set when an internal malfunction is detected in the HVAC control module. Temperature selector signal voltage is more than or less than specified value for specified time continuously.	HVAC control module (temperature selector)

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch turned OFF.
- 2) Turn ON ignition switch and clear DTC using scan tool.
- 3) Turn temperature selector to the light and left as far as it stops, repeat it 10 seconds.
- 4) Check DTC.

DTC Troubleshooting

Step	Action	Yes	No
1	DTC check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ignition switch ON and clear DTC referring to “DTC Clearance”. 3) Turn ignition switch OFF position. 4) Turn ignition switch ON and check DTC referring to “DTC Check”. <i>Is there DTC B1520?</i>	Go to Step 2.	Intermittent trouble. Check for intermittent referring to “Intermittent and Poor Connection Inspection in Section 00”.
2	HVAC control module terminal check 1) Remove HVAC control module referring to “HVAC Control Module Removal and Installation in Section 7A”. 2) Check for proper connection of HVAC control module connector at all terminals. <i>Is it in good condition?</i>	Substitute a known-good HVAC control module and recheck.	Repair faulty condition.

DTC B1521: Blower Speed Selector and/or Its Circuit Malfunction

S6JB0B7204020

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
This DTC will be set when an internal malfunction is detected in the HVAC control module. Blower speed selector signal voltage is more than and less than specified value for specified time continuously.	HVAC control module (blower speed selector)

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch turned OFF.
- 2) Turn ON ignition switch and clear DTC using scan tool.
- 3) Turn blower speed selector to the light and left as far as it stops, repeat it 10 seconds.
- 4) Check DTC.


DTC Troubleshooting

Step	Action	Yes	No
1	DTC check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ignition switch ON and clear DTC referring to "DTC Clearance". 3) Turn ignition switch OFF position. 4) Turn ignition switch ON and check DTC referring to "DTC Check". <i>Is there DTC B1521?</i>	Go to Step 2.	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".
2	HVAC control module terminal check 1) Remove HVAC control module referring to "HVAC Control Module Removal and Installation in Section 7A". 2) Check for proper connection of HVAC control module connector at all terminals. <i>Is it in good condition?</i>	Substitute a known-good HVAC control module and recheck.	Repair faulty condition.

DTC B1530: Air Intake Control Actuator (Position Sensor) and/or Its Circuit Malfunction

S6JB0B7204021

Wiring Diagram

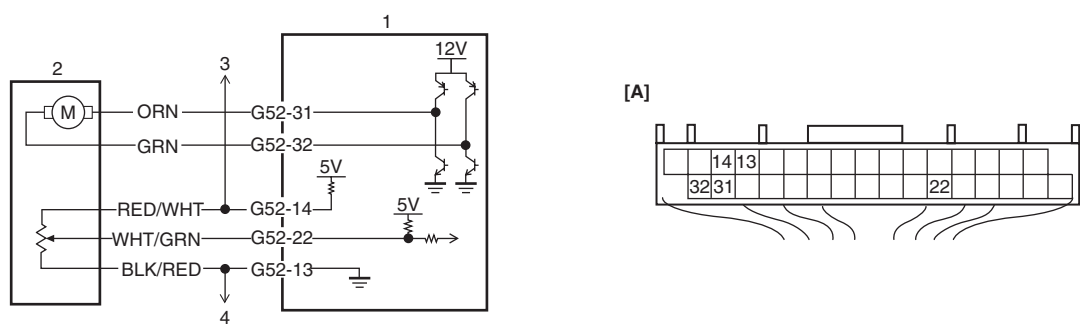

I5JB0A720027-01

[A]: HVAC control module connector "G52" (harness side view)	3. To other actuators
1. HVAC control module	4. To other sensors
2. Air intake control actuator	

DTC Detecting Condition and Trouble Area

NOTE

When DTC B1502, B1503, B1511 and B1512 are indicated together, it is that “BLK/RED” wire circuit open.

DTC Detecting Condition	Trouble Area
Air intake control actuator position sensor signal voltage is more than or less than specified value for specified time continuously.	<ul style="list-style-type: none"> Air intake control actuator circuit Air intake control actuator HVAC control module

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch turned OFF.
- 2) Turn ON ignition switch and clear DTC using scan tool.
- 3) Check DTC.

DTC Troubleshooting

Step	Action	Yes	No
1	Position sensor power supply circuit check <ol style="list-style-type: none"> 1) Disconnect air intake control actuator connector with ignition switch turned OFF. 2) Check for proper connection to air intake control actuator at “RED/WHT”, “WHT/GRN” and “BLK/RED” wire terminals. 3) If OK, measure voltage between “RED/WHT” wire terminal of air flow control actuator connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 4 – 6 V?</i>	Go to Step 6.	Go to Step 2.
2	Position sensor power supply circuit check <ol style="list-style-type: none"> 1) Disconnect temperature control actuator connector with ignition switch turned OFF. 2) Measure voltage between “RED/WHT” wire terminal of air intake control actuator connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 4 – 6 V?</i>	Temperature control actuator faulty.	Go to Step 3.

Step	Action	Yes	No
3	Position sensor power supply circuit check 1) Disconnect air flow control actuator connector with ignition switch turned OFF. 2) Measure voltage between "RED/WHT" wire terminal of air intake control actuator connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 4 – 6 V?</i>	Air flow control actuator faulty.	Go to Step 4.
4	Position sensor power supply circuit check 1) Disconnect connector from HVAC control module with ignition switch turned OFF. 2) Check for proper connection to HVAC control module connector at "G52-14", "G52-22" and "G52-13" terminals. 3) If OK, measure resistance between "RED/WHT" wire terminal of air intake control actuator connector and "G52-14" terminal of HVAC control module connector. <i>Is resistance below 5 Ω?</i>	Go to Step 5.	"RED/WHT" wire open or high resistance circuit.
5	Position sensor power supply circuit check 1) Measure resistance between "RED/WHT" wire terminal of air intake control actuator connector and vehicle body ground. <i>Is resistance infinity?</i>	Go to Step 6.	"RED/WHT" wire shorted to ground circuit.
6	Position sensor power supply circuit check 1) Measure voltage between "RED/WHT" wire terminal of air flow control actuator connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 0 V?</i>	Go to Step 7.	"RED/WHT" wire shorted to other circuit.
7	Position sensor signal circuit check 1) Connect HVAC control module connector with ignition switch turned OFF. 2) Measure voltage between "WHT/GRN" wire terminal of air intake control actuator connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 4 – 6 V?</i>	Go to Step 11.	Go to Step 8.
8	Position sensor signal circuit check 1) Disconnect connector from HVAC control module with ignition switch turned OFF. 2) Measure resistance between "WHT/GRN" wire terminal of air intake control actuator connector and "G52-22" terminal of HVAC control module connector. <i>Is resistance below 5 Ω?</i>	Go to Step 9.	"WHT/GRN" wire open or high resistance circuit.
9	Position sensor signal circuit check 1) Measure resistance between "WHT/GRN" wire terminal of air intake control actuator connector and vehicle body ground. <i>Is resistance infinity?</i>	Go to Step 10.	"WHT/GRN" wire shorted to ground circuit.


7B-48 Air Conditioning System:

Step	Action	Yes	No
10	Position sensor signal circuit check 1) Measure voltage between “WHT/GRN” wire terminal of air intake control actuator connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 0 V?</i>	Go to Step 11.	“WHT/GRN” wire shorted to other circuit.
11	Position sensor ground circuit check 1) Connect HVAC control module connector with ignition switch turned OFF. 2) Measure resistance between “BLK/RED” wire terminal of air intake control actuator connector and vehicle body ground. <i>Is resistance below 5 Ω?</i>	Go to Step 12.	Go to Step 13.
12	Position sensor ground circuit check 1) Measure resistance between “G52-13” terminal of HVAC control module connector and vehicle body ground. <i>Is resistance below 5 Ω?</i>	“BLK/RED” wire open or high resistance circuit.	HVAC control module faulty.
13	Air intake control actuator check 1) Check air intake control actuator referring to “Air Intake Control Actuator Inspection”. <i>Is it in good condition?</i>	HVAC control module faulty.	Air intake control actuator faulty.


DTC B1531: Air Intake Control Actuator and/or Its Circuit Malfunction

S6JB0B7204022

Wiring Diagram

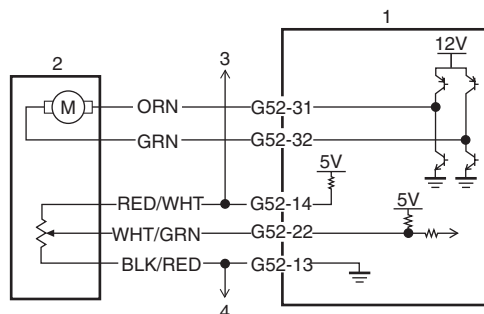

[A]

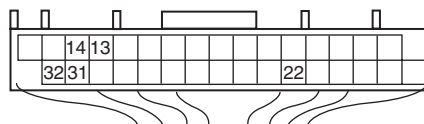

I5JB0A720027-01

[A]: HVAC control module connector “G52” (harness side view)	3. To other actuators
1. HVAC control module	4. To other sensors
2. Air intake control actuator	

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Difference between target opening and actual opening is more than specified value even though air intake control actuator has operated for 15 seconds.	<ul style="list-style-type: none"> Air intake control actuator circuit Air intake control linkage Air intake control actuator HVAC unit HVAC control module

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch turned OFF.
- 2) Turn ON ignition switch and clear DTC using scan tool.
- 3) Start A/C system and select air intake selector at "FRE" position.
- 4) Select air intake selector at "REC" position and wait for 1 min. or more.
- 5) Check DTC.

DTC Troubleshooting

Step	Action	Yes	No
1	Visual check 1) Check if there is any obstruction in operating range of actuator linkage and if actuator linkage operates smoothly. <i>Is it in good condition?</i>	Go to Step 2.	Obstruction in operating range of actuator linkage, actuator linkage faulty and/or internal fault of HVAC unit.
2	Wire harness check 1) Disconnect connector from air intake control actuator with ignition switch turned OFF. 2) Check for proper connection to temperature control actuator connector at "ORN" and "GRN" wire terminals. 3) If OK, measure voltage between "ORN" wire terminal of temperature control actuator connector and vehicle body ground with ignition switch turned ON when air intake selector is operation to FRE position. <i>Is voltage 10 – 14 V?</i>	Go to Step 6.	Go to Step 3.
3	Wire harness check 1) Disconnect connector from HVAC control module with ignition switch turned OFF. 2) Check for proper connection to HVAC control module connector at "G52-31" and "G52-32" terminals. 3) If OK, measure resistance between "ORN" wire terminal of air intake control actuator connector and "G52-31" terminal of HVAC control module connector. <i>Is resistance below 5 Ω?</i>	Go to Step 4.	"ORN" wire open or high resistance circuit.
4	Wire harness check 1) Measure resistance between "ORN" wire terminal of air intake control actuator connector and vehicle body ground. <i>Is resistance infinity?</i>	Go to Step 5.	"ORN" wire shorted to ground circuit.
5	Wire harness check 1) Measure voltage between "ORN" wire terminal of air intake control actuator connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 0 V?</i>	Go to Step 6.	"ORN" wire shorted to other circuit.
6	Wire harness check 1) Connect connector to HVAC control module with ignition switch turned OFF. 2) Measure voltage between "GRN" wire terminal of air intake control actuator connector and vehicle body ground with ignition switch turned ON when temperature selector is operation to REC position. <i>Is voltage 10 – 14 V?</i>	Go to Step 10.	Go to Step 7.

7B-50 Air Conditioning System:

Step	Action	Yes	No
7	Wire harness check 1) Disconnect connector from HVAC control module with ignition switch turned OFF. 2) Check for proper connection to HVAC control module connector at "G52-31" and "G52-32" terminals. 3) If OK, measure resistance between "GRN" wire terminal of air intake control actuator connector and "G52-32" terminal of HVAC control module connector. <i>Is resistance below 5 Ω?</i>	Go to Step 8.	"GRN" wire open or high resistance circuit.
8	Wire harness check 1) Measure resistance between "GRN" wire terminal of air intake control actuator connector and vehicle body ground. <i>Is resistance infinity?</i>	Go to Step 9.	"GRN" wire shorted to ground circuit.
9	Wire harness check 1) Measure voltage between "GRN" wire terminal of air intake control actuator connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 0 V?</i>	Go to Step 10.	"GRN" wire shorted to other circuit.
10	Position sensor circuit check 1) Check air intake control actuator position sensor circuit referring to Step 1 to Step 6 and Step 11 to Step 12 of "DTC B1530: Air Intake Control Actuator (Position Sensor) and/or Its Circuit Malfunction". <i>Is it in good condition?</i>	Go to Step 11.	Repair circuit.
11	Air intake control actuator check 1) Check intake air control actuator referring to "Air Intake Control Actuator Inspection". <i>Is it in good condition?</i>	HVAC control module faulty.	Air intake control actuator faulty.

DTC B1546: A/C Refrigerant Pressure Malfunction

S6JB0B7204023

DTC Detecting Condition and Trouble Area

DTC Detecting Condition	Trouble Area
Outside temperature is more than specified value. However, refrigerant pressure is less than specified value.	<ul style="list-style-type: none"> • Refrigerant shortage • Refrigerant pressure sensor circuit • Refrigerant pressure sensor • Outside air temperature sensor circuit • Outside air temperature sensor • HVAC control module • ECM • BCM

DTC Confirmation Procedure


- 1) Connect scan tool to DLC with ignition switch turned OFF.
- 2) Turn ON ignition switch and clear DTC using scan tool.
- 3) Start engine and warm up to normal operating temperature.
- 4) Start A/C system for 1 min. or more.
- 5) Check DTC.

DTC Troubleshooting

Step	Action	Yes	No
1	DTC check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ON ignition switch and clear DTC. 3) Ignition switch turned OFF position. 4) Turn ON ignition switch and check DTC. <i>Is there DTC B1546?</i>	Go to Step 2.	Confirm that vehicle A/C system condition referring "A/C System Performance Inspection", and recheck DTC.
2	Refrigerant pressure check 1) Connect scan tool to DLC with ignition switch OFF. 2) Ignition switch ON turned ON position. 3) Check refrigerant pressure displayed on scan tool. <i>Is it 340 kPa or more?</i>	Go to Step 3.	Charge refrigerant and Confirm that vehicle A/C system condition referring to "A/C System Performance Inspection". And then recheck DTC.
3	A/C system check 1) Confirm that vehicle A/C system condition referring to "A/C System Performance Inspection". <i>Is A/C system in good condition?</i>	Go to Step 4.	Repair and/or replace.
4	Refrigerant pressure sensor check 1) Check refrigerant pressure sensor referring to "A/C Refrigerant Pressure Sensor and Its Circuit Inspection". <i>Are refrigerant pressure sensor and/or its circuit in good condition?</i>	Go to Step 5.	Repair circuit and/or replace refrigerant pressure sensor.
5	Outside temperature sensor check 1) Check outside temperature sensor referring to "Outside Air Temperature Sensor Inspection (If Equipped) in Section 9C". <i>Is outside temperature sensor in good condition?</i>	Replace HVAC control module.	Replace outside temperature sensor.

DTC B1551: Serial Communication Circuit Malfunction

S6JB0B7204024

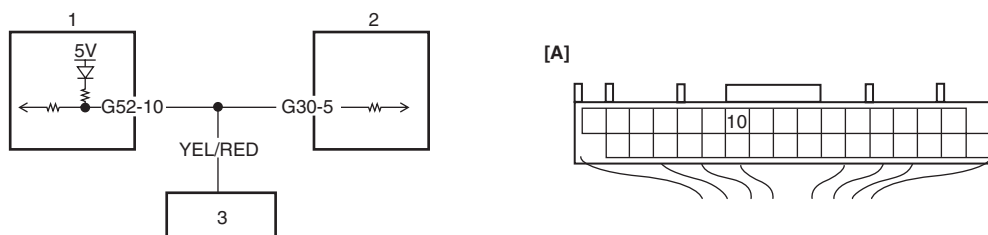Wiring Diagram

I5JB0A720029-01

[A]: HVAC control module connector "G52" (harness side view)	2. BCM
1. HVAC control module	3. Information display

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Serial communication signal is more than or less than specified value for specified time continuously.	<ul style="list-style-type: none"> Serial communication line of BCM BCM Information display HVAC control module

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch turned OFF.
- 2) Turn ON ignition switch and clear DTC using scan tool.
- 3) Check DTC.

DTC Troubleshooting

Step	Action	Yes	No
1	DTC check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Turn ignition switch ON and clear DTC referring to "DTC Clearance". 3) Disconnect connector from information display with ignition switch turned OFF. 4) Turn ignition switch ON and check DTC referring to "DTC Check". <i>Is there DTC B1551?</i>	Go to Step 2.	Information display faulty.
2	Wire harness check 1) Disconnect connectors from BCM and HVAC control module. 2) Measure resistance between "G30-5" terminal of BCM connector and "G52-10" terminal of HVAC control module connector. <i>Is resistance below 5 Ω?</i>	Go to Step 3.	"YEL/RED" wire open or high resistance circuit.
3	Wire harness check 1) Measure resistance between "G52-10" terminal of HVAC control module connector and vehicle body ground. <i>Is resistance infinity?</i>	Go to Step 4.	"YEL/RED" wire shorted to ground circuit.

Step	Action	Yes	No
4	Wire harness check 1) Measure voltage between "G52-10" terminal of HVAC control module connector and vehicle body ground with ignition switch turned ON. <i>Is voltage 0 V?</i>	Go to Step 5.	"YEL/RED" wire shorted to other circuit.
5	Serial communication signal check 1) Connect connectors to BCM and HVAC control module. 2) Using oscilloscope, check that serial communication signal at "G30-5" is outputted referring to "Voltage Check" in "Inspection of BCM and Its Circuits in Section 10B". <i>Is serial communication signal outputted at "G30-5" terminal of BCM connector?</i>	HVAC control module faulty.	BCM (included in junction block assembly) faulty.

DTC B1552: Serial Communication Circuit Malfunction

S6JB0B7204025

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Data received by HVAC control module from BCM is erroneous continuously.	<ul style="list-style-type: none"> • BCM • HVAC control module

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch turned OFF.
- 2) Turn ON ignition switch and clear DTC using scan tool.
- 3) Check DTC.

DTC Troubleshooting

Step	Action	Yes	No
1	Serial communication signal data check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Start engine and select "DATA LIST" mode on scan tool. 3) Check "Refrigerant Pressure", "Vehicle Speed", "Coolant Temp" and "Outside Air Temp" varies displayed on scan tool. <i>Is displayed each varies described varies in "Scan Tool Data"?</i>	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".	Go to Step 2.
2	Serial communication signal check 1) Connect connectors to BCM and HVAC control module. 2) Using oscilloscope, check that serial communication signal at "G30-5" is outputted referring to "Voltage Check" of "Inspection of BCM and Its Circuits in Section 10B". <i>Is serial communication signal outputted at "G30-5" terminal of BCM connector?</i>	HVAC control module faulty.	BCM (included in junction block assembly) faulty.

DTC B1553: CAN Communication Circuit Malfunction

S6JB0B7204026

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
HVAC control module receives error code from BCM continuously.	<ul style="list-style-type: none"> • CAN communication circuit • BCM • ECM • HVAC control module

DTC Troubleshooting

Step	Action	Yes	No
1	DTC check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Check ECM and BCM for DTC. <i>Is there DTC(s)?</i>	Go to applicable DTC diag. flow.	Substitute a known-good HVAC control module and recheck.

DTC B1556: Camshaft Position (CMP) Sensor and/or Its Circuit Malfunction

S6JB0B7204027

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
HVAC control module receives error code from BCM continuously.	<ul style="list-style-type: none"> • CMP sensor circuit • CMP sensor • HVAC control module

DTC Troubleshooting

Step	Action	Yes	No
1	DTC check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Check ECM for DTC. <i>Is there DTC P0340?</i>	Go to applicable DTC diag. flow.	Substitute a known-good HVAC control module and recheck.

DTC B1557: Wheel Speed Sensor and/or Its Circuit Malfunction

S6JB0B7204028

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
HVAC control module receives error code from BCM continuously.	<ul style="list-style-type: none"> • Wheel speed sensor circuit • ABS or ESP® control module • Wheel speed sensor • HVAC control module

DTC Troubleshooting

Step	Action	Yes	No
1	DTC check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Check ABS or ESP® for DTC. <i>Is there DTC C1021, C1022 / C1025, C1026 / C1031, C1032 / C1035, C1036?</i>	Go to applicable DTC diag. flow.	Substitute a known-good HVAC control module and recheck.

DTC B1561: Engine Coolant Temperature Sensor and/or Its Circuit Malfunction

S6JB0B7204029

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
HVAC control module receives error code from BCM continuously.	<ul style="list-style-type: none"> • ECT sensor circuit • ECT sensor • HVAC control module

DTC Troubleshooting

Step	Action	Yes	No
1	DTC check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Check ECM for DTC. <i>Are there DTC P0116, P0117 or P0118?</i>	Go to applicable DTC diag. flow.	Substitute a known-good HVAC control module and recheck.

DTC B1562: Outside Air Temperature Sensor and/or Its Circuit Malfunction

S6JB0B7204030

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
HVAC control module receives error code from BCM continuously.	<ul style="list-style-type: none"> • Outside air temperature sensor circuit • Outside air temperature sensor • HVAC control module

DTC Troubleshooting

Step	Action	Yes	No
1	DTC check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Check BCM for DTC. <i>Are there DTC B1141, B1142 or B1143?</i>	Go to applicable DTC diag. flow.	Substitute a known-good HVAC control module and recheck.

DTC B1563: A/C Refrigerant Pressure Sensor and/or Its Circuit Malfunction

S6JB0B7204031

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
HVAC control module receives error code from BCM continuously.	<ul style="list-style-type: none"> • A/C refrigerant pressure sensor circuit • A/C refrigerant pressure sensor • HVAC control module

DTC Troubleshooting

Step	Action	Yes	No
1	DTC check 1) Connect scan tool to DLC with ignition switch turned OFF. 2) Check ECM for DTC. <i>Are there DTC P0532 or P0533?</i>	Go to applicable DTC diag. flow.	Substitute a known-good HVAC control module and recheck.

HVAC Control Module and Its Circuits Inspection

⚠ CAUTION

HVAC control module can not be checked by itself.


It is strictly prohibited to connect voltmeter to HVAC control module with couplers disconnected from it.

HVAC control module and its circuits can be checked at HVAC control module wiring couplers by measuring voltage.

Voltage Check

- 1) Remove HVAC control module. Refer to "HVAC Control Module Removal and Installation in Section 7A".
- 2) Connect HVAC control module and body control module couplers to HVAC control module and body control module.
- 3) Check each terminal voltage with couplers connected by referring to "HVAC Control Module Voltage Table: ".

Terminal arrangement of HVAC control module (viewed from harness side)

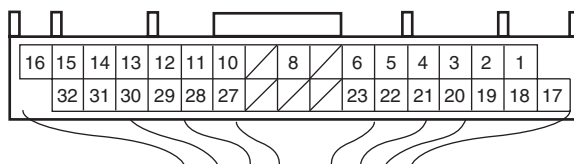

I5JB0A720030-02

HVAC Control Module Voltage Table

Terminal	Wire color	Circuit	Normal value	Condition
G52-1	PPL/RED	Power supply	10 – 14 V	Ignition switch turned ON.
G52-2	WHT	Electric power source for back-up	10 – 14 V	Constantly.
G52-3	PPL/WHT	Serial communication line of data link connector	10 – 14 V	Ignition switch turned ON.
G52-4	RED/YEL	Illumination switch	0 – 1 V	Ignition switch turned ON, lighting switch OFF position.
			10 – 14 V	Ignition switch turned ON, lighting switch ON position.
G52-5	RED/GRN	Illumination ground	0 – 1 V	Constantly.
G52-6	PNK/BLK	Theft deterrent light	—	—
G52-8	BLK/RED	Rear defogger driving signal	10 – 14 V	Ignition switch turned ON, rear defogger switch ON.
			0 – 1 V	Ignition switch turned ON, rear defogger switch OFF.
G52-10	YEL/RED	Serial communication line from BCM	Refer to "Inspection of BCM and Its Circuits in Section 10B".	
G52-11	PNK/GRN	Serial communication line to BCM	Refer to "Reference waveform No. 1: ".	
G52-12	YEL	Ground for sunload sensor	0 – 1 V	Constantly.
G52-13	BLK/RED	Ground for sensors	0 – 1 V	Constantly.
G52-14	RED/WHT	Output of 5 V power source for position sensor of actuators	4 – 6 V	Ignition switch turned ON.

Terminal	Wire color	Circuit	Normal value	Condition
G52-15	RED/BLK	Blower motor control voltage feedback	Approx. 14 V	Ignition switch turned ON, blower speed selector OFF.
			Approx. 10 V	Ignition switch turned ON, blower speed selector 1st position.
			Approx. 9 V	Ignition switch turned ON, blower speed selector 2nd position.
			Approx. 8 V	Ignition switch turned ON, blower speed selector 3rd position.
			Approx. 6 V	Ignition switch turned ON, blower speed selector 4th position.
			Approx. 5 V	Ignition switch turned ON, blower speed selector 5th position.
			Approx. 4 V	Ignition switch turned ON, blower speed selector 6th position.
			Approx. 2 V	Ignition switch turned ON, blower speed selector 7th position.
			Less than 0.3 V	Ignition switch turned ON, blower speed selector 8th position.
G52-16	PPL/GRN	Blower motor controller	0 – 1 V	Ignition switch turned ON, blower speed selector OFF.
			Approx. 4.2 V	Ignition switch turned ON, blower speed selector 1st – 7th position.
			Approx. 8 V	Ignition switch turned ON, blower speed selector 8th position.
G52-17	BLK	Ground for HVAC control module	0 – 1 V	Constantly.
G52-18	PNK	Sunload sensor signal	Approx. 3 V	Ignition switch turned ON, amount of insolation is 500 W/m ²
			Approx. 5 V	Ignition switch turned ON, amount of insolation is 0 W/m ²
G52-19	WHT/BLK	Evaporator temperature sensor signal	Approx. 3.6 V	Ignition switch turned ON, evaporator temperature 0 °C (32 °F).
			Approx. 3.4 V	Ignition switch turned ON, evaporator temperature 10 °C (50 °F).
			Approx. 2.4 V	Ignition switch turned ON, evaporator temperature 25 °C (77 °F).
G52-20	BLU/BLK	Inside air temperature sensor signal	Approx. 2.4 V	Ignition switch turned ON, room temperature 25 °C (77 °F).
			Approx. 3.8 V	Ignition switch turned ON, room temperature 0 °C (32 °F).
G52-21	WHT/RED	Temperature control actuator position sensor signal	Approx. 4.5 V	Ignition switch turned ON, temperature selector MAX COOL position.
			Approx. 1.5 V	Ignition switch turned ON, temperature selector MAX HOT position.
G52-22	WHT/GRN	Air intake control actuator position sensor signal	Approx. 3.8 V	Ignition switch turned ON, air intake selector “REC” position.
			Approx. 1.5 V	Ignition switch turned ON, air intake selector “FRE” position.
G52-23	WHT/BLU	Air flow control actuator position sensor signal	Approx. 4.2V	Ignition switch turned ON, air flow selector “VENT” position.
			Approx. 3.2 V	Ignition switch turned ON, air flow selector “BI-LEVEL” position
			Approx. 2 V	Ignition switch turned ON, air flow selector “FOOT” position.
			Approx. 1.5 V	Ignition switch turned ON, air flow selector “DEF / FOOT” position.
			Approx. 0.6 V	Ignition switch turned ON, air flow selector “DEF” position.


7B-58 Air Conditioning System:

Terminal	Wire color	Circuit	Normal value	Condition
G52-27	GRY	Temperature control actuator (COOL)	10 – 14 V	Ignition switch turned ON, temperature control actuator is working in operation from HOT to COOL position.
			0 – 1 V	Ignition switch turned ON, except the above condition.
G52-28	GRY/BLU	Temperature control actuator (HOT)	10 – 14 V	Ignition switch turned ON, temperature control actuator is working in operation from COOL to HOT position.
			0 – 1 V	Ignition switch turned ON, except the above condition.
G52-29	GRY/RED	Air flow control actuator (VENT)	10 – 14 V	Ignition switch turned ON, air flow control actuator is working in operation from DEF to VENT position.
			0 – 1 V	Ignition switch turned ON, except the above condition.
G52-30	GRY/BLK	Air flow control actuator (DEF)	10 – 14 V	Ignition switch turned ON, air flow control actuator is working in operation from VENT to DEF position.
			0 – 1 V	Ignition switch turned ON, except the above condition.
G52-31	ORN	Air intake control actuator (FRE)	10 – 14 V	Ignition switch turned ON, air intake control actuator is working in operation from REC to FRE position.
			0 – 1 V	Ignition switch turned ON, except the above condition.
G52-32	GRN	Air intake control actuator (REC)	10 – 14 V	Ignition switch turned ON, air intake control actuator is working in operation from FRE to REC position.
			0 – 1 V	Ignition switch turned ON, except the above condition.

Reference waveform No. 1

Serial communication line to BCM (1)

Measurement terminal	CH1: "G52-11" to "G52-17"
Oscilloscope setting	CH1: 5 V / DIV TIME: 20 ms / DIV
Measurement condition	Ignition switch is at ON position

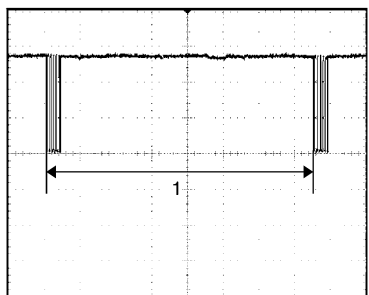

I5JB0A720091-01

A/C System Inspection at ECM

S6JB0B7204033

⚠ CAUTION

- **ECM connectors are waterproofed. Each terminal of the ECM connectors is sealed up with the grommet. Therefore, do not measure circuit voltage and resistance by inserting the tester's probe into the sealed terminal at the harness side. Or, ECM and its circuits may be damaged by water.**
- **ECM (PCM) cannot be checked by itself. It is strictly prohibited to connect voltmeter or ohmmeter to ECM (PCM) with couplers disconnected from it.**

Voltage Check

When checking voltage at ECM terminals related to A/C system, refer to "Inspection of ECM and Its Circuits in Section 1A".


Repair Instructions

Operation Procedure for Charging A/C with Refrigerant

S6JB0B7206001

⚠ WARNING

- Your eyes should not be exposed to refrigerant (liquid). Any liquid Refrigerant-134a escaping by accident shows a temperature as low as approx. -6°C (21.2°F) below freezing point. Should liquid HFC-134a (R-134a) get into your eyes, it may cause a serious injury. To protect your eyes against such accident, it is necessary to always wear goggles. Should it occur that HFC-134a (R-134a) strikes your eye(s), consult a doctor immediately.
 - Do not use your hand to rub the affected eye(s). Instead, use quantities of fresh cold water to splash it over the affected area to gradually raise temperature of such area above freezing point.
 - Obtain proper treatment as soon as possible from a doctor or eye specialist.
- Should the liquid refrigerant HFC-134a (R-134a) is exposed to your skin, the affected area should be treated in the same manner as when skin is frostbitten or frozen.
- Do not handle refrigerant near any place where welding or steam cleaning is performed.
- Refrigerant should be kept in a cold and dark place. It should never be stored in any place where temperature is high, e.g. where exposed to direct sun light, close to fire or inside vehicle (including trunk room).
- Avoid breathing fume produced when HFC-134a (R-134a) is burned. Such fume may be hazardous to your health.

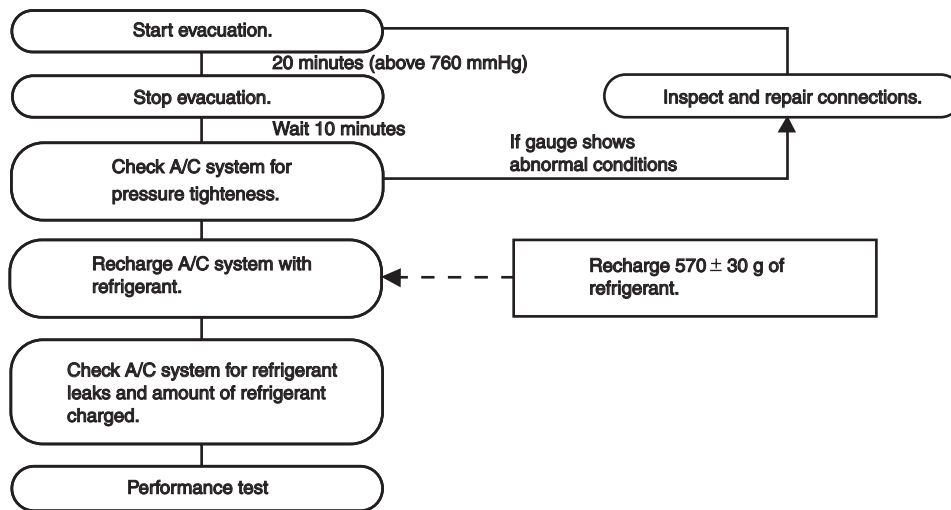


I5JB0A720031-02

Recovery

When discharging refrigerant out of A/C system, always recover it by using refrigerant recovery and recycling equipment (1). Discharging refrigerant HFC-134a (R134a) into atmosphere would cause adverse effect to environments.

NOTE

- After recovering refrigerant from system the amount of removed compressor oil must be measured for replenishing compressor oil. Refer to "Precautions on Replenishing Compressor Oil".
- When handling recovery and recycling equipment, be sure to follow the instruction manual for the equipment.

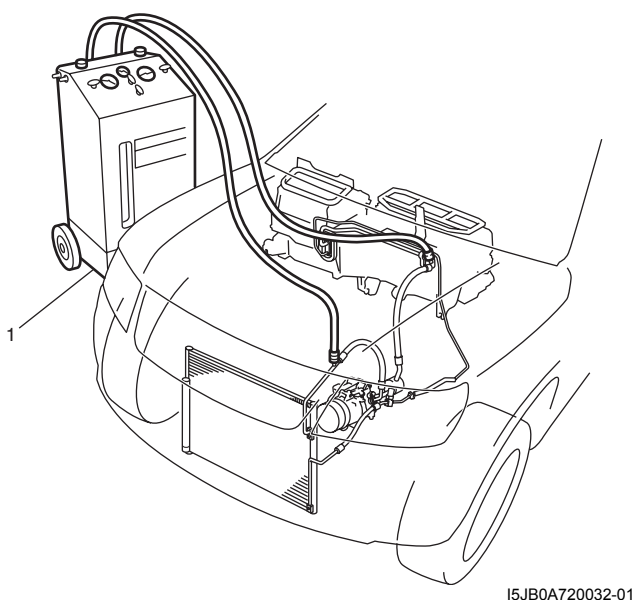

Evacuation

⚠ CAUTION

Do not evacuate before recovering refrigerant in system.

NOTE

Once A/C system circuit is opened (exposed to atmospheric air) air conditioning system must be evacuated by using a vacuum pump. The A/C system should be attached with a manifold gauge set, and should be evacuated for approx. 20 minutes.


- 1) Connect high charging hose (1) and low charging hose (2) of manifold gauge set (3) respectively as follows:
 High charging hose (1) → High pressure charging valve (4) on discharge hose
 Low charging hose (2) → Low pressure charging valve (5) on suction pipe

- 2) Attach center charging hose (6) of manifold gauge set (3) to vacuum pump (7).
- 3) Operate vacuum pump (7), and then open discharge-side valve (9) (Hi) of manifold gauge set (3).
 If there is no blockage in the system, there will be an indication on high pressure gauge (10).
 In this case, open the other-side valve (8) (Lo) of the set and repair the system.
- 4) Approx. 10 minutes later, low pressure gauge (11) should show a vacuum lower than -100 kPa (-1.0 kg/cm^2 , -760 mmHg , -14.2 psi) providing no leakage exists.

NOTE

- If the system does not show a vacuum below -100 kPa (-1.0 kg/cm^2 , -760 mmHg , -14.2 psi), close both valves, stop vacuum pump and watch movement of low pressure gauge.
- Increase in the gauge reading suggests existence of leakage. In this case, repair the system before continuing its evacuation.
- If the gauge shows a stable reading (suggesting no leakage), continue evacuation.

- 5) Evacuation should be carried out for a total of at least 20 minutes.
- 6) Continue evacuation until low pressure gauge indicates a vacuum less than -100 kPa (-1.0 kg/cm^2 , -760 mmHg , -14.2 psi), and then close both valves (8), (9).
- 7) Stop vacuum pump (7). Disconnect center charging hose (6) from pump inlet. Now, the system is ready for charging refrigerant.

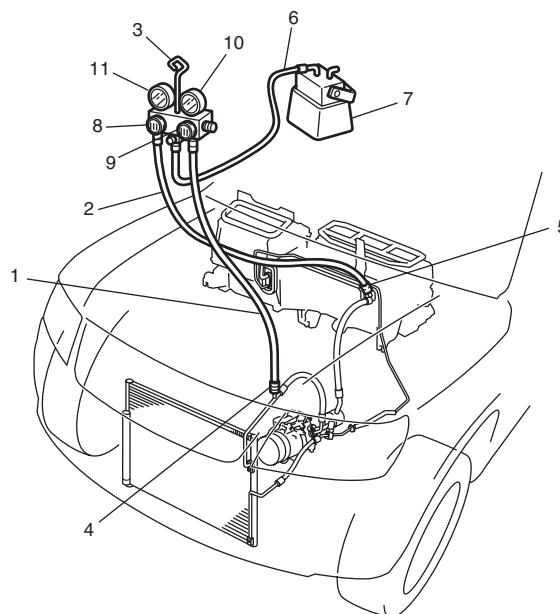

Checking of A/C System for Pressure Leaks

After completing the evacuation, close manifold gauge high pressure valve (Hi) and low-pressure valve (Lo) and wait 10 minutes. Verify that low-pressure gauge reading has not changed.

⚠ CAUTION

If the gauge reading moves closer to "0", there is a leak somewhere. Inspect the tubing connections, make necessary corrections. And then evacuate system once again and make sure that there are no leaks.

Charge**⚠ CAUTION**

- Because the sight glass is not used for this A/C system, do not perform an additional charge to the A/C system. To charge the proper amount of refrigerant, recover and evacuate the A/C system first. And then, charge the proper amount of refrigerant into the A/C system.
- Always charge through low pressure-side of A/C system at after the initial charging is performed from the high-pressure side with the engine stopped.
- Never charge to high pressure-side of A/C system with engine running.
- Do not charge while compressor is hot.
- When installing tap valve to refrigerant container to make a hole there through, carefully follow directions given by manufacturer.
- A pressure gauge should always be used before and during charging.
- The refrigerant container should be emptied of refrigerant when discarding it.
- The refrigerant container should not be heated up to 40 °C (104 °F) or over.
- Refrigerant container should not be reversed in direction during charging. Reversing in direction causes liquid refrigerant to enter compressor, causing troubles, such as compression of liquid refrigerant and the like.

NOTE

The A/C system contains HFC-134a (R-134a). Described here is a method to charge the A/C system with refrigerant from the refrigerant service container.

When charging refrigerant recovered by using the refrigerant and recycling equipment (when recycling refrigerant), follow the procedure described in the equipment manufacturer's instruction manual.

Charge proper amount of refrigerant accurately in accordance with the following procedure.

Specified amount of refrigerant


570 ± 30 g (20.1 ± 1.0 oz)

The initial charging of the A/C system is performed from the high-pressure side with the engine stopped. And next, this method must be followed by charging from the low-pressure side with the engine running.

- 1) Check to make sure that hoses are routed properly after evacuating the system.
- 2) Connect low charging hose (1) and high charging hose (2) of the manifold gauge set (3) in position. Thus open refrigerant container valve (4) to purge the charging line.
- 3) Open the high-pressure side valve (6) and charge refrigerant to system.
- 4) After a while, open the low-pressure side valve (5) and close the high-pressure side valve (6).


⚠ WARNING

Make sure that high pressure-side valve is closed securely.

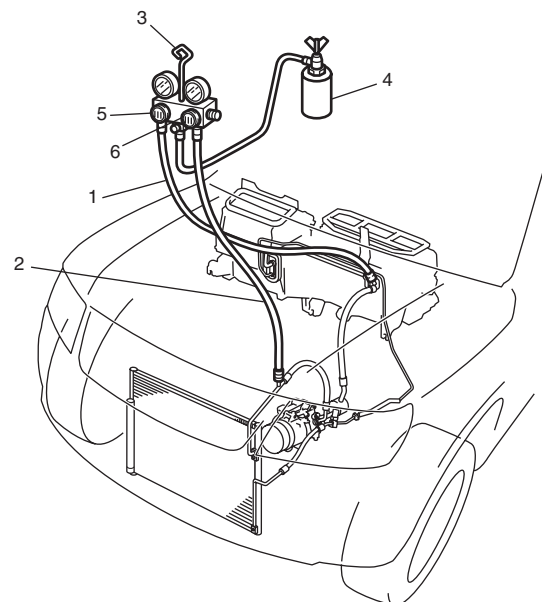


7B-62 Air Conditioning System:

- 5) Start engine and keep engine speed at 1,500 rpm. Then, operate A/C system.
- 6) Charge A/C system with refrigerant in vapor state. At this time, refrigerant container should be held upright.
- 7) When refrigerant container (3) is emptied, the use following procedure to replace it with a new refrigerant container (3).
 - a) Close low pressure valve.
 - b) Replace empty container (3) with a refrigerant container which has been charged with refrigerant. When using refrigerant container tap valve (4), use the following procedure for replacement.
 - i) Retract needle (1) and remove refrigerant container tap valve (4) by loosening its plate nut (2).
 - ii) Install previously-removed refrigerant container tap valve (4) to a new refrigerant container (3).

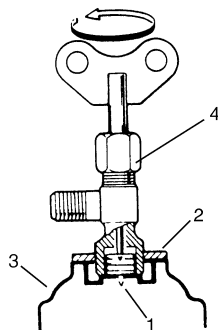

IYSQ01720015-01

- c) Purge any air existing in center charging hose. When using refrigerant container tap valve, use the following procedure to purge air.
 - i) Once fully tighten refrigerant container tap valve and then loosen (open) plate nut slightly.
 - ii) Open low pressure valve of manifold gauge set a little.
 - iii) As soon as refrigerant comes out with a "hiss" (1) through a clearance between refrigerant container and tap valve, tighten plate nut as well as manifold gauge set low pressure valve.
 - iv) Turn handle of tap valve clockwise so that its needle is screwed into the new container to make a hole for refrigerant flow.

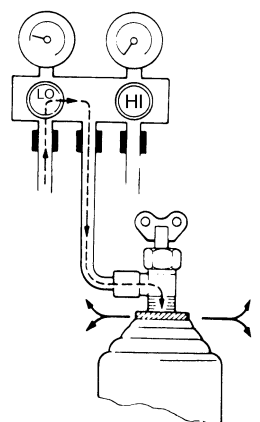

IYSQ01720016-01

- 8) After the system has been charged with specified amount (570 ± 30 g) of refrigerant or when low pressure gauge and high pressure gauge have indicated the following specified value, close low pressure side valve on manifold gauge set.

Low side and high side pressure example	
Gauges should read as follows when ambient temperature is 30 °C (86 °F)	
Pressure on high pressure gauge	1340 – 1670 kPa 13.4 – 16.7 kg/cm ² 191 – 237 psi
Pressure on low pressure gauge	280 – 390 kPa 2.8 – 3.9 kg/cm ² 40 – 55 psi

Removal of Manifold Gauge Set

⚠ WARNING

High pressure side is under high pressure. Therefore, be careful not to get injured especially on your eyes and skin.

For the A/C system charged with the specified amount of refrigerant, remove manifold gauge set as follows:

- 1) Close low pressure side valve of manifold gauge set. (The high pressure side valve is closed continuously during the process of charging.)
- 2) Close refrigerant container valve.
- 3) Stop engine.
- 4) Using shop rag, remove charging hoses from service valves. This operation must be performed quickly.
- 5) Put caps on service valves.

Check A/C System for Refrigerant Leaks

Whenever a refrigerant leak is suspected in the system or any service operation has been performed which may result in malfunction lines and/or connections, it is advisable to check for leaks.

Common sense should be used in performing any refrigerant leak test, since the need and extent of any such test will, in general, depend upon the nature of a complaint and the type of a service performed on the system.

Liquid leak detector

⚠ WARNING


- To prevent explosions or fires, make sure that there are no flammables in the vicinity.
- When exposed to fire, the refrigerant turns into a poisonous gas (phosgene). Do not inhale this gas.

There are a number of fittings and places throughout the air conditioning system where a liquid leak detector solution may be used to pinpoint refrigerant leaks. By merely applying the solution to the area in question with a swab, such as attached to the bubbles will form within seconds if there is a leak.

For confined areas, such as sections of the evaporator and condenser, an electronic (gas) leak detector (1) is more practical for determining leaks.

Special tool

(A): 09990-86012

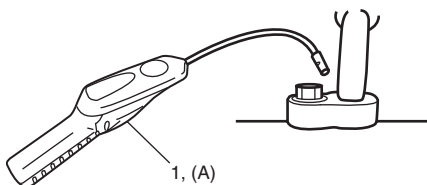

I5JB0C720002-01

A/C Condenser Assembly On-Vehicle Inspection

S6JB0B7206002

⚠ CAUTION

Be careful not to damage condenser fins. If condenser fin is bent, straighten it by using a screwdriver or pair of pliers. If any leakage is found from fitting or tube, repair or replace condenser.

NOTE

Clogged condenser fins should be washed with water, and should be dried with compressed air.

Check the followings.

- Clog of condenser fins.
If any clog is found, condenser fins should be washed with water and should be dried with compressed air.
- Condenser fins for leakage and breakage If any defects are found, repair or replace condenser.
- Condenser fittings for leakage. If any defects are found, repair or replace condenser.

A/C Condenser Assembly Removal and Installation

S6JB0B7206003

⚠ CAUTION

Do not damage condenser fins. If condenser fin is bent, straighten it by using flat head screwdriver or pair of pliers.

Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Recover refrigerant from A/C system referring to “Operation Procedure for Charging A/C with Refrigerant”.

NOTE

The amount of removed compressor oil must be measured for replenishing compressor oil.

- 3) Remove front bumper assembly referring to "Front Bumper Components in Section 9K".
- 4) Remove front bumper upper member referring to "Front Bumper Components in Section 9K".
- 5) Disconnect compressor discharge hose (1) and liquid pipe (2) from condenser assembly (4).


⚠ CAUTION

As soon as above hose and pipe are disconnected, cap opened fittings so that moisture and dust do not enter condenser.

- 6) Remove condenser assembly mounting bolts (3), and then remove condenser assembly.

NOTE

Be careful not to damage fins of condenser and radiator.

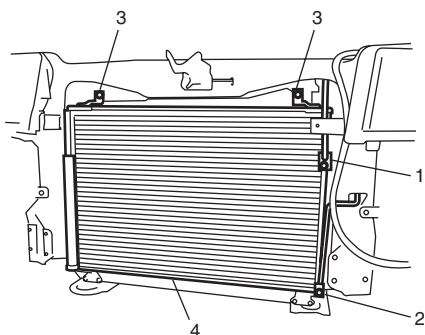

I5JB0A720036-02

Installation

Reverse removal sequence to install condenser, noting the following point.

- Replenish specified amount of compressor oil to compressor suction side referring to "Precautions on Replenishing Compressor Oil".
- Evacuate and charge the A/C system referring to "Evacuation" and "Charge" in "Operation Procedure for Charging A/C with Refrigerant".

Desiccant Removal and Installation


S6JB0B7206004

Removal

- 1) Remove condenser assembly from vehicle referring to "A/C Condenser Assembly Removal and Installation".
- 2) Remove circlip (4) using special tool.

Special tool**: 09900-06107**

- 3) Remove the filter (1) from the receiver / dryer tank (2).
- 4) Remove desiccant (3).

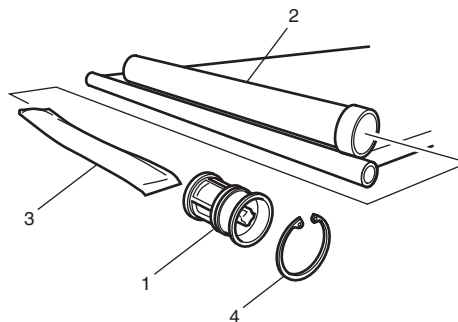


I5JB0A720037-02

Installation

Reverse removal sequence to install desiccant, according to instruction manual with supply parts.

NOTE

- **Replenish specified amount of compressor oil to compressor suction side referring to "Precautions on Replenishing Compressor Oil".**
- **Install circlip (1) as shown in figure.**

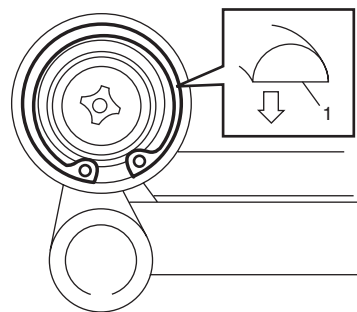


I5JB0A720038-01

HVAC Air Filter Removal and Installation

S6JB0B7206005


Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Remove glove box.
- 3) Remove filter cover (1).

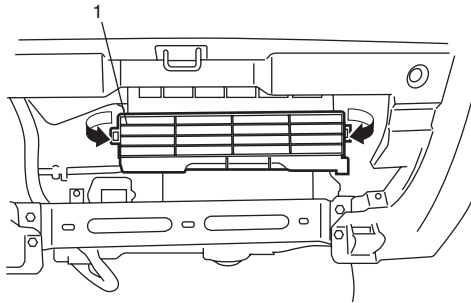

I5JB0A720039-01

- 4) Pull out filter element (1).

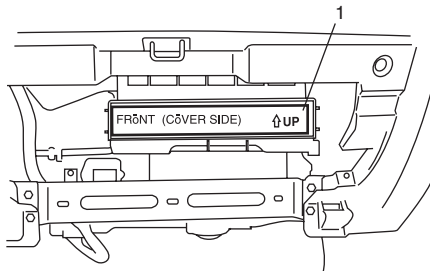


I5JB0A720040-03

Installation

Reverse removal procedure for installation noting the followings:

- Install filter (1) into blower unit by paying attention to direction of arrow on filter.
- Enable air bag system after installation of filter. Refer to “Enabling Air Bag System in Section 8B”.

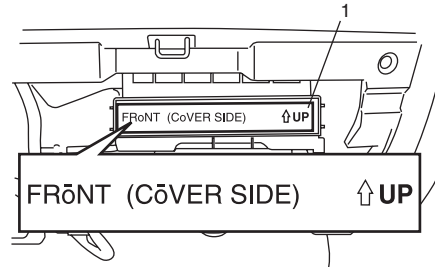


I5JB0A720041-03

HVAC Air Filter Inspection

S6JB0B7206006

Check that filter is not excessively dirty, damage or oily, clean filter with compressed air from air outlet side of filter. If abnormality is found, replace filter with new one.

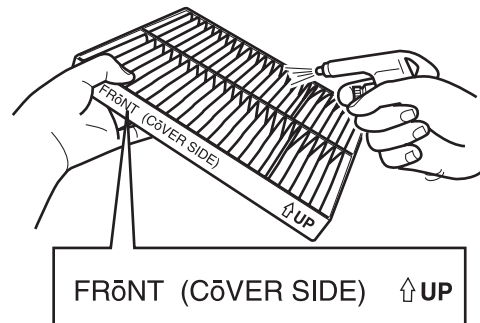


I5JB0A720092-02

HVAC Unit Components


S6JB0B7206007

[A]

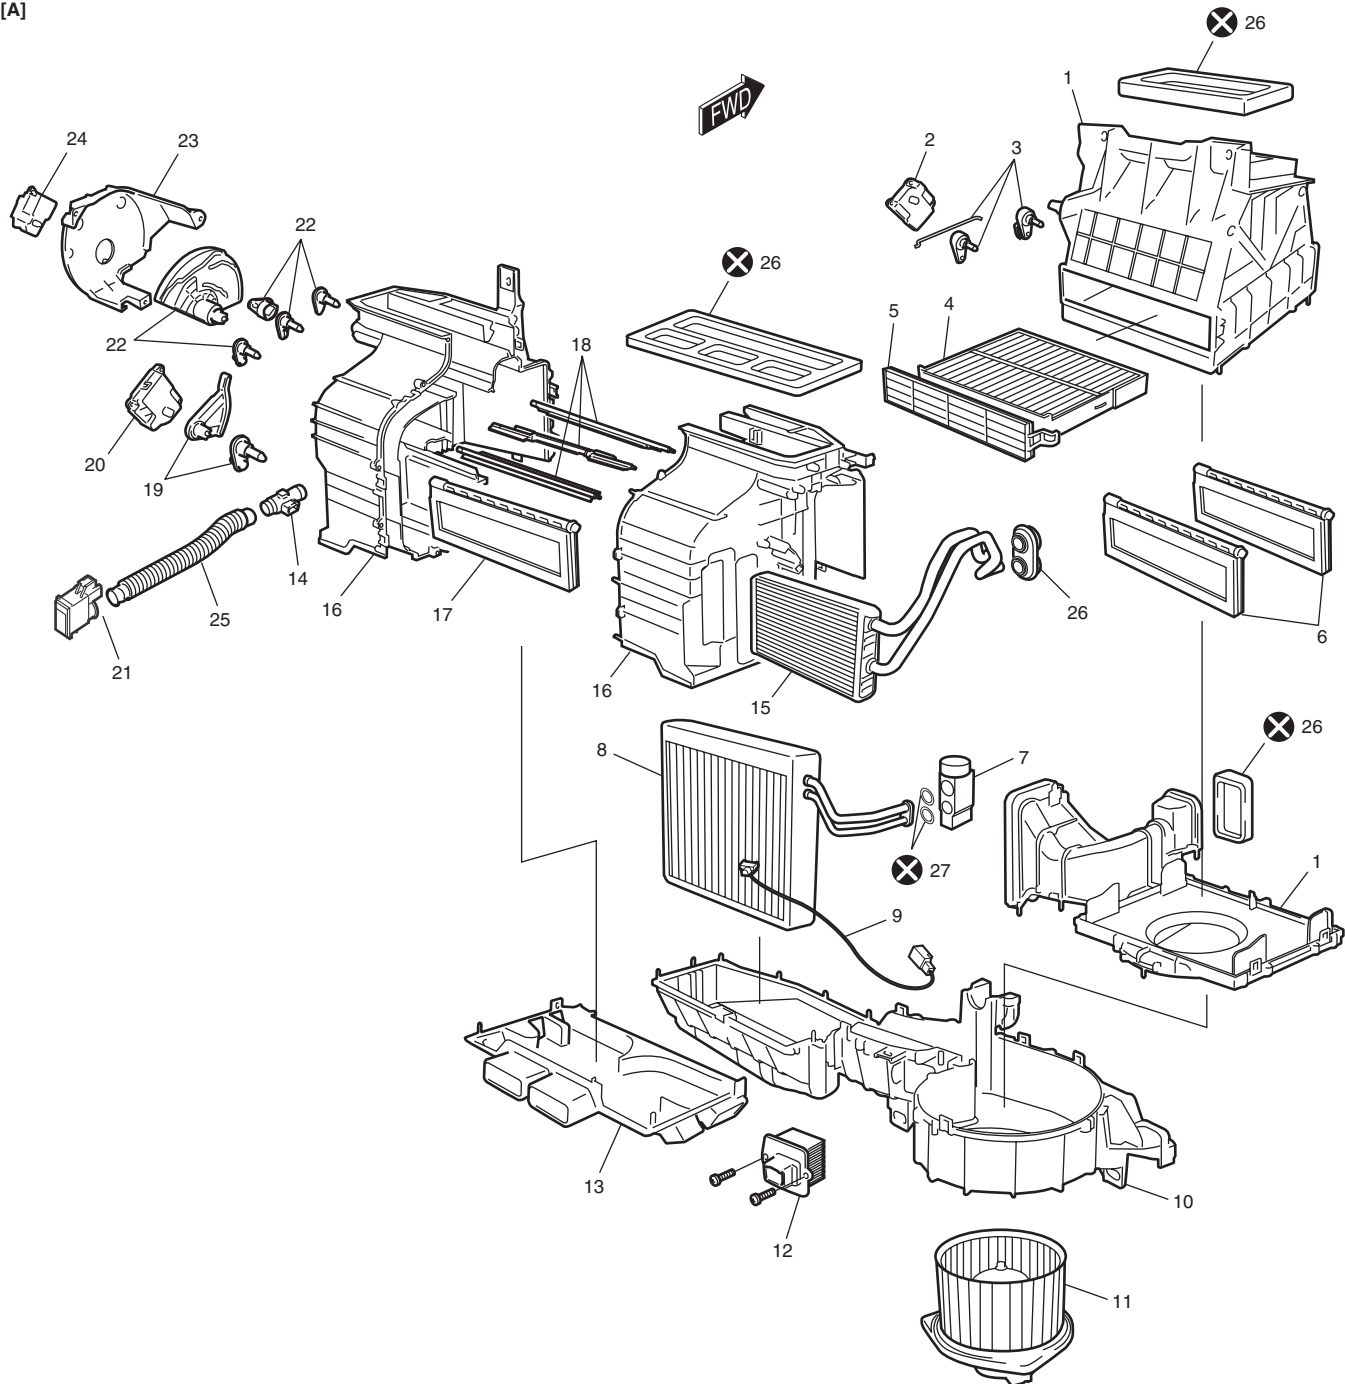

16JB0B720001-01

[B]

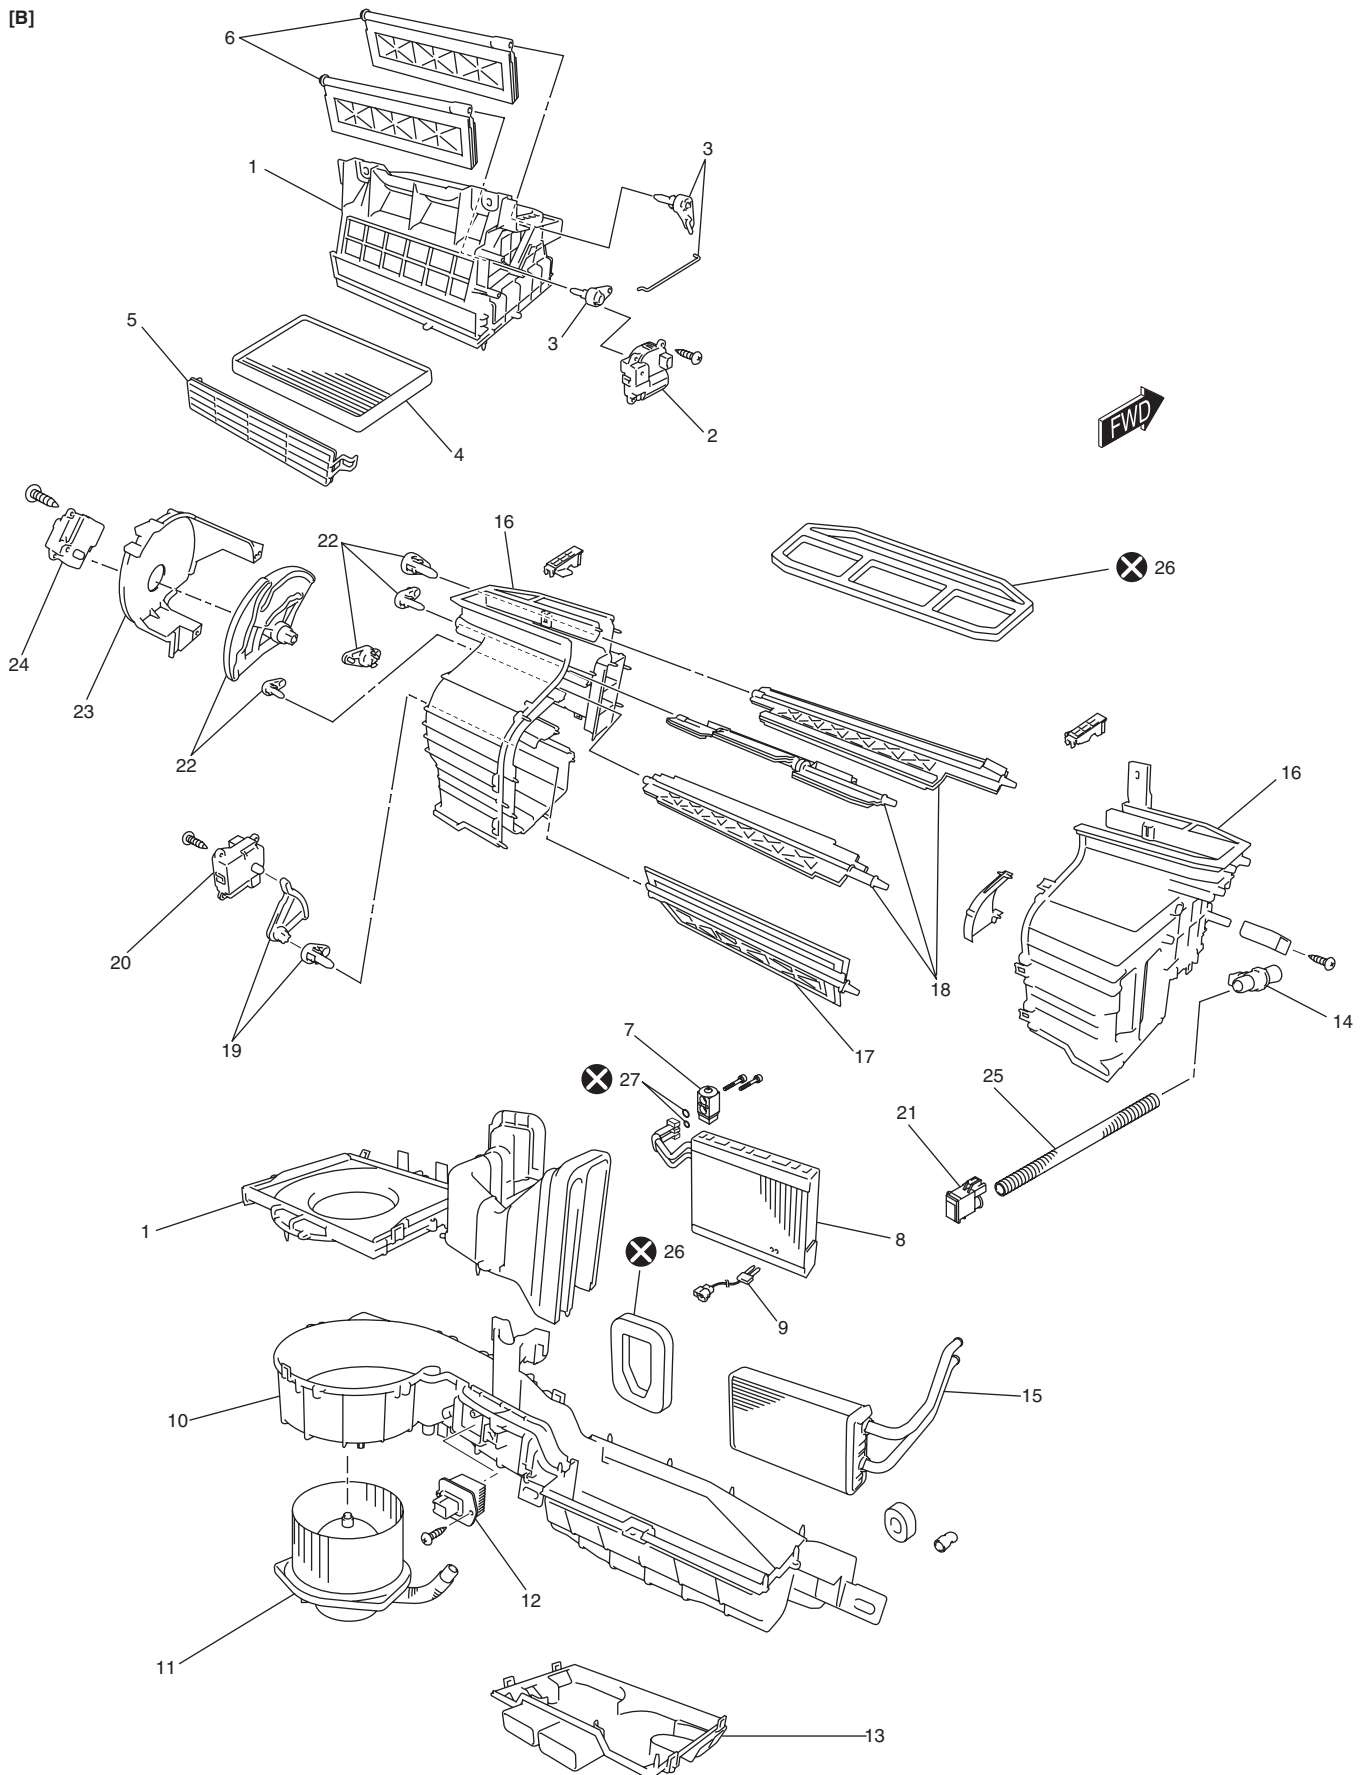

I6JB0B720002-01

[A]: LHD model	9. Evaporator temperature sensor	19. Temperature control links
[B]: RHD model	10. Blower lower case	20. Temperature control actuator

7B-68 Air Conditioning System:

1. Blower upper case	11. Blower motor	21. Inside air temperature sensor
2. Air intake control actuator	12. Blower motor controller	22. Air flow control links
3. Air intake control links	13. Foot duct	23. Air flow control links cover
4. Air filter (if equipped)	14. Aspirator	24. Air flow control actuator
5. Air filter cover	15. Heater core	25. Aspirator hose
6. Air intake control door assembly	16. Heater unit upper case	26. Packing
7. Expansion valve	17. Temperature control door assembly	27. O-ring
8. Evaporator	18. Air flow control door assembly	⊗ : Do not reuse.

⚠ CAUTION

Be careful not to damage A/C evaporator fins. If A/C evaporator fin is bent, straighten it by using flat head screwdriver or pair of pliers.

HVAC Unit Removal and Installation

S6JB0B7206008

Removal


⚠ WARNING

Failure to follow the following procedure and **WARNING** may cause air bag deployment, personal injury, damage to parts, or air bag being unable to deploy.

- Never rest a steering column assembly on steering wheel with air bag (inflator) module face down and column vertical.
- When handling the air bag (inflator) modules (driver and passenger), be careful not to drop it or apply an impact to it. If an excessive impact was applied (e.g., dropped from a height of 91.4 cm (3 feet) or more, never attempt disassembly or repair but replace it with a new one.
- When grease, cleaning agent. Oil, water, etc. has got onto air bag (inflator) modules (driver and passenger), wipe off immediately with a dry cloth.


- 1) Disconnect negative (–) cable at battery.
- 2) Disable air bag system referring to “Disabling Air Bag System in Section 8B”.
- 3) Recover refrigerant from A/C system using recovery and recycling equipment referring to “Recovery” in “Operation Procedure for Charging A/C with Refrigerant”.
- 4) Drain engine coolant and disconnect heater hoses (1) from HVAC unit.

- 5) Disconnect suction hose (2) and condenser outlet hose (3) by removing attaching bolt (4).

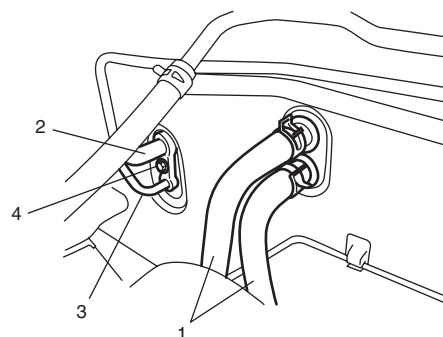

I5JB0A720043-01

- 6) Remove instrument panel referring to “Instrument Panel Removal and Installation in Section 9C”.
- 7) Disconnect rear duct from HVAC unit.
- 8) Detach wiring, connectors and clamps from HVAC unit.
- 9) Remove HVAC unit (1).

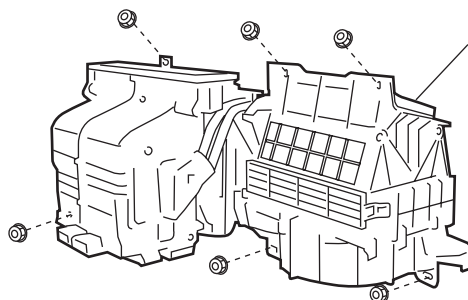

I5JB0A720044-01

Installation


- 1) Install HVAC unit by reversing removal procedure, noting the following items.
 - When installing each part, be careful not to catch any wiring harness.
 - Replenish specified amount of compressor oil to compressor suction side referring to "Precautions on Replenishing Compressor Oil".
 - Install the padding (1) to the installation hole uniformly.
 - Fill engine coolant to radiator.
 - Enable air bag system referring to "Enabling Air Bag System in Section 8B".
 - Evacuate and charge system. Refer to "Operation Procedure for Charging A/C with Refrigerant".

A/C Evaporator Removal and Installation

S6JB0B7206009

Removal

- 1) Remove HVAC unit referring to "HVAC Unit Removal and Installation".
- 2) Remove evaporator (1) from HVAC unit by disassembling HVAC unit.

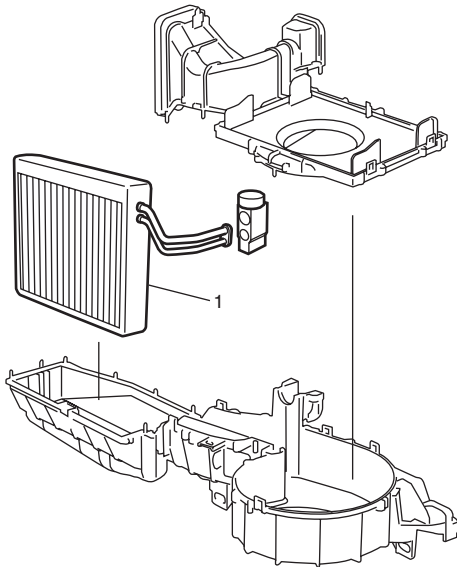

I5JB0A720045-02

- 3) Remove evaporator temperature sensor from evaporator.

Installation

Reverse removal procedure to install A/C evaporator noting the following instructions.

- Install evaporator temperature sensor onto evaporator referring to "A/C Evaporator Temperature Sensor Removal and Installation".

A/C Evaporator Inspection

S6JB0B7206010

- 1) Check evaporator fins for blockage. If found clogged, use compressed air to clean the fins.

⚠ CAUTION


- **Do not use water for cleaning of evaporator.**
 - **Be careful not to damage evaporator fins. If evaporator fin is bent, straighten it by using a screwdriver or pair of pliers. If any leakage is found from fitting or tube, repair or replace evaporator.**
- 2) Check inlet and outlet fittings for crack or scratch. Repair them as required.

A/C Evaporator Temperature Sensor Removal and Installation

S6JB0B7206011

Removal

- 1) Remove A/C evaporator (1) referring to “A/C Evaporator Removal and Installation”.
- 2) Remove A/C evaporator temperature sensor (2) from evaporator.

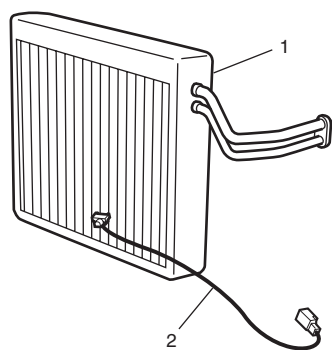

I5JB0A720046-01


Installation

- 1) Identify evaporator by the following tables.

NOTE

As for Evaporator, there are 4 varieties depending on the internal structure.

Evaporator type	Selection condition	
A	LH steering vehicle	Evaporator with protection rubber (1)
B		Evaporator without protection rubber (2)
C	RH steering vehicle	Evaporator with protection rubber
D		Evaporator without protection rubber




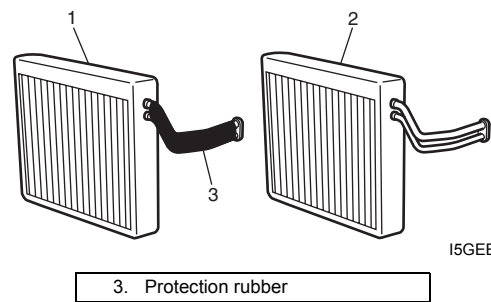


I5GEB4720001-01

- 2) Install evaporator temperature sensor onto evaporator in a correct position as shown in figure.

CAUTION

Mis-position causes insufficiency cooling and damaged of A/C system.

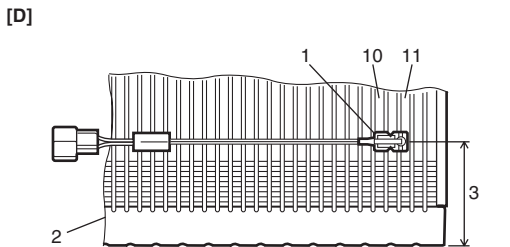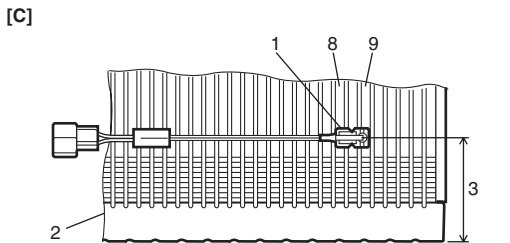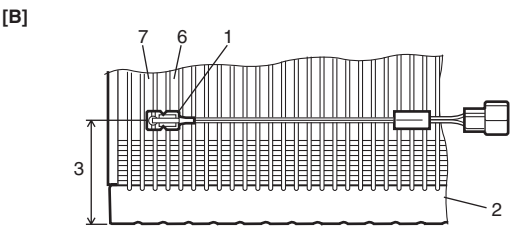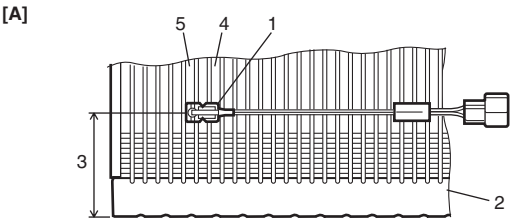


I5GEB4720002-03

[A]: Evaporator type A	5. Holding part fixed to fin of 6th line from the left-side edge
[B]: Evaporator type B	6. Sensor part fixed to fin of 5th line from the left-side edge
[C]: Evaporator type C	7. Holding part fixed to fin of 3rd line from the left-side edge
[D]: Evaporator type D	8. Sensor part fixed to fin of 8th line from the right-side edge
1. Evaporator temperature sensor	9. Holding part fixed to fin of 6th line from the right-side edge
2. Evaporator	10. Sensor part fixed to fin of 5th line from the right-side edge
3. 34.5 mm (1.36 in.)	11. Holding part fixed to fin of 3rd line from the right-side edge
4. Sensor part fixed to fin of 8th line from the left-side edge	

A/C Evaporator Temperature Sensor Inspection

S6JB0B7206012

Check resistance between A/C evaporator temperature sensor terminals. If check result is not in specification, replace A/C evaporator temperature sensor with the new one.

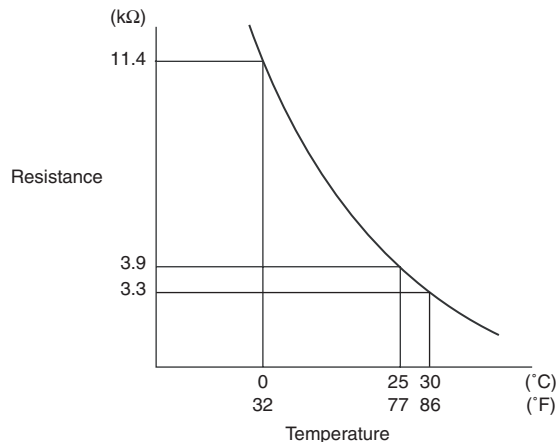
A/C evaporator temperature sensor resistance**11.2 – 11.5 k Ω at 0 °C (32 °F)****3.8 – 3.9 k Ω at 25 °C (77 °F)**

I5JB0A720090-03

Expansion Valve On-Vehicle Inspection

S6JB0B7206013

Refer to "A/C System Performance Inspection".

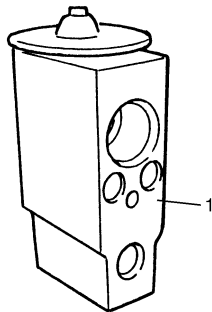

IYSQ01720049-01


1. Expansion valve

Expansion Valve Removal and Installation

S6JB0B7206014

Removal

- 1) Recover refrigerant from the A/C system with recovery and recycling equipment referring to "Recovery" in "Operation Procedure for Charging A/C with Refrigerant".
- 2) Loosen a bolt (1) and remove pipes from expansion valve (2).
- 3) Loosen bolts (3) and remove expansion valve.

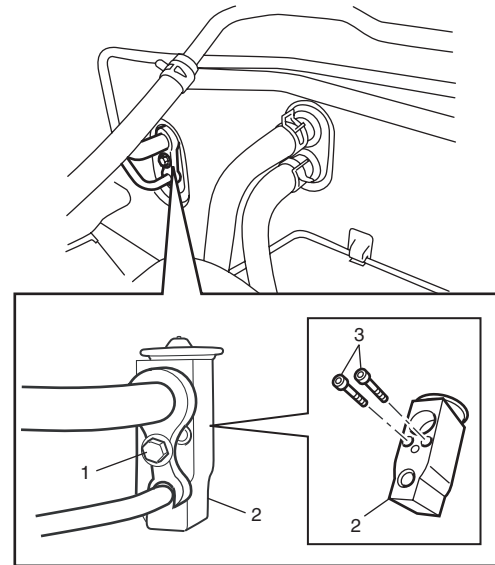

I5JB0A720048-02

Installation

- 1) Reverse removal nothing the following instructions.
 - Apply compressor oil to O-ring of expansion valve and pipes.
- 2) Evacuate and charge system according to "Operation Procedure for Charging A/C with Refrigerant".

A/C Refrigerant Pressure Sensor and Its Circuit Inspection

S6JB0B7206015

- 1) Disconnect A/C refrigerant pressure sensor connector.
- 2) Turn ignition switch to ON position.
- 3) Check if voltage between “GRY/RED” wire terminal and “GRY/GRN” wire terminal of A/C refrigerant pressure sensor connector is 4.75 V to 5.25 V.
If not, check A/C refrigerant pressure sensor circuit.
- 4) Connect A/C refrigerant pressure sensor connector with ignition switch turned OFF.
- 5) Connect manifold gauge set to the charging valves.
- 6) Check A/C refrigerant pressure sensor voltage of ECM connector referring to “A/C System Inspection at ECM”.
If voltage is not as specified below, replace A/C refrigerant pressure sensor.

A/C refrigerant pressure sensor voltage specifications (A/C refrigerant pressure measured by manifold gauge)

0.8 MPa (8.0 kg/cm², 116 psi): Approx. 1.46 – 1.71 V
1.4 MPa (14 kg/cm², 203 psi): Approx. 2.28 – 2.53 V
1.6 MPa (16 kg/cm², 232 psi): Approx. 2.55 – 2.80 V
1.8 MPa (18 kg/cm², 261 psi): Approx. 2.82 – 3.03 V


A/C Refrigerant Pressure Sensor Removal and Installation

S6JB0B7206016

Removal

- 1) Recover refrigerant from the A/C system with the recovery and recycling equipment referring to “Recovery” in “Operation Procedure for Charging A/C with Refrigerant”.
- 2) Disconnect negative (–) cable from battery.
- 3) Disconnect A/C refrigerant pressure sensor connector.

- 4) Remove A/C refrigerant pressure sensor (1) from liquid pipe (2).

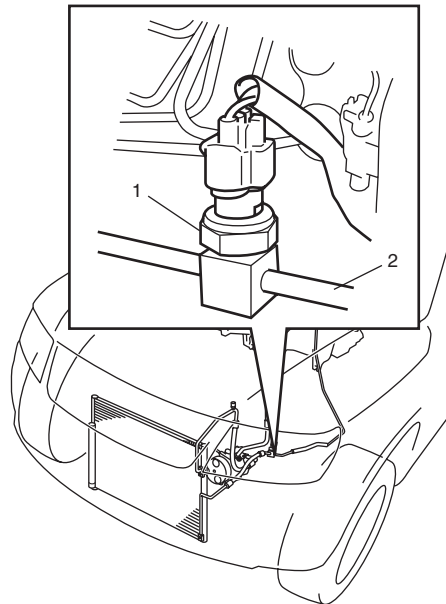

15JB0A720049-03


Installation

Reverse removal procedure noting the following instructions.

- Apply compressor oil to O-ring of A/C refrigerant pressure sensor.
- Tighten A/C refrigerant pressure sensor (1) to specified torque.

Tightening torque

A/C refrigerant pressure sensor (a): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

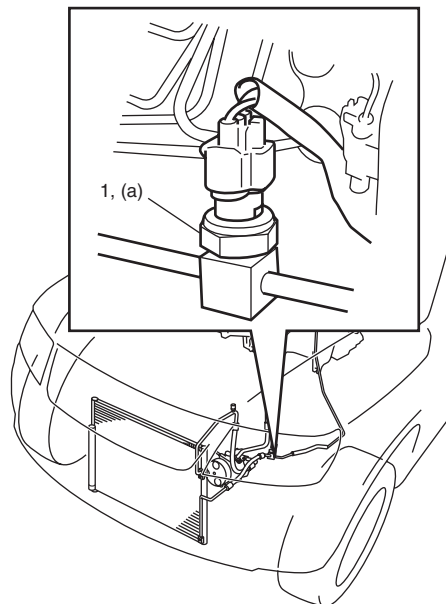

15JB0A720050-03


- Evacuate and charge the A/C system referring to “Evacuation” and “Charge” in “Operation Procedure for Charging A/C with Refrigerant”.

Sunload Sensor Removal and Installation

S6JB0B7206017


Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Detach sunload sensor (1) located on the driver side of the dashboard (3). Be careful not to damage the sensor and dashboard by using rag (2).

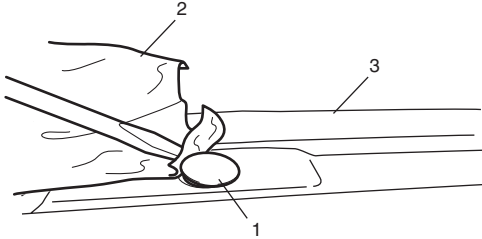

I5JB0A720051-01

- 3) Disconnect connector (1) from sunload sensor (2).

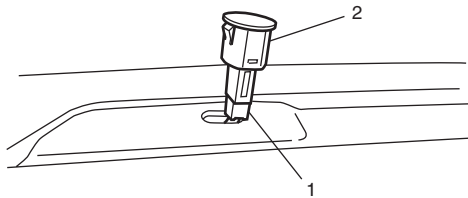

I5JB0A720052-01

Installation

Reverse removal procedure.


Sunload Sensor Inspection

S6JB0B7206018

- 1) Remove sunload sensor. Refer to “Sunload Sensor Removal and Installation”.
- 2) Light over the sensor vertically with an incandescent light of approximately 100 watt.
- 3) The distance between the sensor and the light should be approximately 100 mm (3.94 in.).
- 4) Measure the voltage between the terminals with the (+) probe on the terminal “a” and the (–) probe on the terminal “b”.
- 5) Make sure if the voltage is approximately 0.38 – 0.42 V. If not, replace the sensor with the new one.

Sunload sensor specifications

“a” – “b”: Approx. 0.38 – 0.42 V

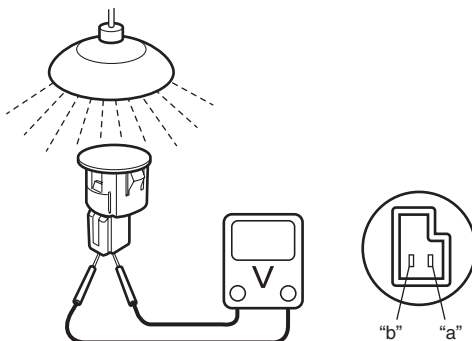


I5JB0A720053-01

Inside Air Temperature Sensor Removal and Installation

S6JB0B7206019

Removal

- 1) Disconnect negative cable (–) at battery.
- 2) Remove steering column hole cover.
- 3) Disconnect inside air temperature sensor connector (1) and aspirator hose (2).
- 4) Remove inside air temperature sensor (3) from vehicle.

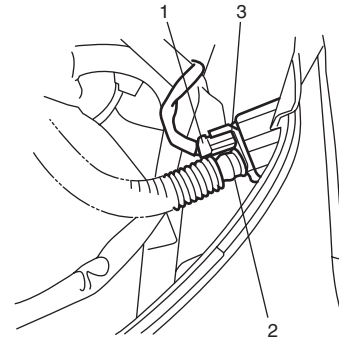

I5JB0A720054-01

Installation

Reverse removal procedure.



Inside Air Temperature Sensor Inspection

S6JB0B7206020

- 1) Remove Inside air temperature sensor referring to “Inside Air Temperature Sensor Removal and Installation”.
- 2) Check resistance between terminals.

Inside air temperature sensor resistance

Approx. $1.7 \text{ k}\Omega \pm 85 \text{ }\Omega$ at $25 \text{ }^{\circ}\text{C}$ ($77 \text{ }^{\circ}\text{F}$)

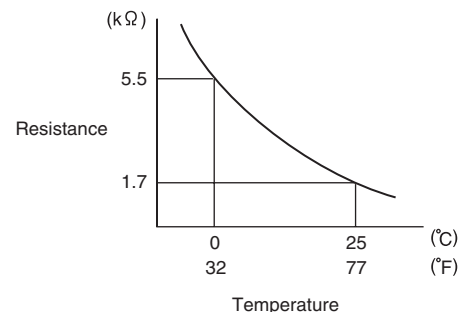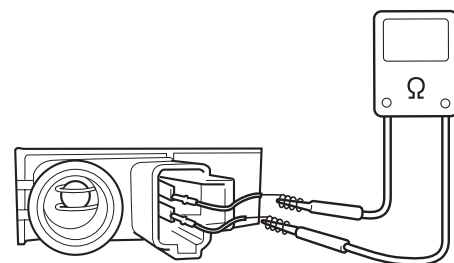

I5JB0A720055-01

Outside Air Temperature Sensor Removal and Installation

S6JB0B7206021

Refer to “Outside Air Temperature Sensor Removal and Installation (If Equipped) in Section 9C”.

Outside Air Temperature Sensor Inspection

S6JB0B7206022

Refer to “Outside Air Temperature Sensor Inspection (If Equipped) in Section 9C”.

Air Flow Control Actuator Removal and Installation

S6JB0B7206023

Refer to “Air Flow Control Actuator Removal and Installation in Section 7A”.

Air Flow Control Actuator Inspection

S6JB0B7206024

Refer to “Air Flow Control Actuator Inspection in Section 7A”.

Air Intake Control Actuator Removal and Installation

S6JB0B7206025

Refer to “Air Intake Control Actuator Removal and Installation in Section 7A”.

Air Intake Control Actuator Inspection

S6JB0B7206026

Refer to “Air Intake Control Actuator Inspection in Section 7A”.

Temperature Control Actuator Removal and Installation

S6JB0B7206027

Refer to “Temperature Control Actuator Removal and Installation in Section 7A”.

Temperature Control Actuator Inspection

S6JB0B7206028

Refer to “Temperature Control Actuator Inspection in Section 7A”.

HVAC Control Module Removal and Installation

S6JB0B7206029

Refer to “HVAC Control Module Removal and Installation in Section 7A”.

A/C Compressor Drive Belt Inspection and Adjustment

S6JB0B7206030

Refer to “P/S Pump and A/C Compressor (If Equipped) Drive Belt Inspection and Adjustment in Section 6C”.

A/C Compressor Drive Belt Removal and Installation


S6JB0B7206031

Refer to “P/S Pump and A/C Compressor (If Equipped) Drive Belt Removal and Installation in Section 6C”.

A/C Compressor Relay Inspection



S6JB0B7206032

- 1) Disconnect negative (–) cable at battery.
2) Remove included in integration relay No.2 (1) from vehicle.

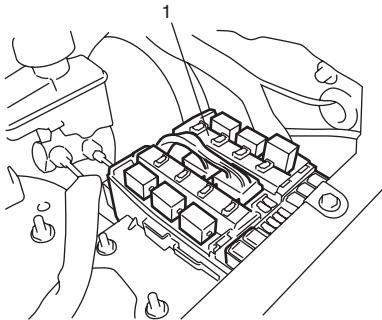

I5JB0A720057-01

- 3) Check that there is no continuity between terminals “C” and “D”.
If there is continuity, replace integration relay No.2 (1).
4) Connect battery positive (+) terminal to terminal “B” of relay. Connect battery negative (–) terminal to terminal “A” of relay. Check for continuity between terminal “C” and “D”. If there is no continuity when relay is connected to the battery, replace integration relay No.2 (1).

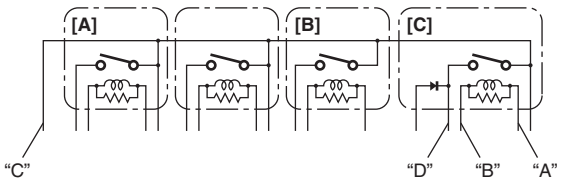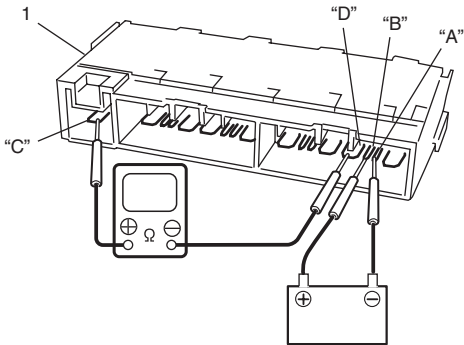


I6JB01720008-01

[A]:	A/T relay
[B]:	HO2S heater relay
[C]:	Compressor relay

Compressor Assembly On-Vehicle Inspection

S6JB0B7206033

- 1) Install manifold gauge set (1) as shown in the figure.
- 2) Close Hi (4) and Lo (5) side valves.

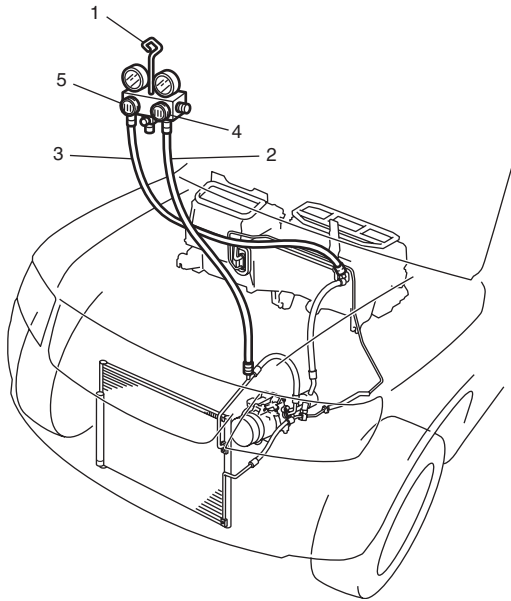

I5JB0A720059-01

- | |
|--|
| 2. High pressure side (Delivery side hose) |
| 3. Low pressure side (Suction side pipe) |

- 3) Run engine at fast idle.
- 4) Check compressor for the following items.
If any of the checks indicated a defect, repair compressor.
 - High pressure gauge reading is not low and low pressure gauge reading is not higher than normal.
 - Metallic sound
 - Leakage from compressor

Compressor Assembly Removal and Installation

S6JB0B7206034

Removal

- 1) Run engine at idle with A/C ON for 10 minutes.
- 2) Disconnect negative (–) cable at battery.
- 3) Recover refrigerant from the A/C system using recovery and recycling equipment referring to “Recovery” in “Operation Procedure for Charging A/C with Refrigerant”.

NOTE

The amount of compressor oil at removed must be measured and the same amount must be poured when installing the compressor.

- 4) Drain engine coolant.
- 5) Remove radiator inside hose and outside hose from vehicle.
- 6) Remove radiator cooling fan assembly referring to “Radiator Cooling Fan Assembly Removal and Installation in Section 1F”.
- 7) Remove drive belt referring to “P/S Pump and A/C Compressor (If Equipped) Drive Belt Removal and Installation in Section 6C”.
- 8) Disconnect magnet clutch connector.
- 9) Disconnect suction hose and discharge hose from compressor.

NOTE

Cap open fitting immediately to keep moisture out of system.

- 10) Remove compressor from its mount.

Installation**⚠ CAUTION**

Be sure to use HFC-134a (R-134a) compressor oil.

Reverse removal procedure noting the following instructions.


- If compressor is replaced, pour new compressor oil referring to “Precautions on Replenishing Compressor Oil”.
- Install drive belt referring to “P/S Pump and A/C Compressor (If Equipped) Drive Belt Removal and Installation in Section 6C”.
- Install radiator cooling fan assembly referring to “Radiator Cooling Fan Assembly Removal and Installation in Section 1F”.
- Fill engine coolant to radiator.
- Evacuate and charge system referring to “Evacuation” and “Charge” in “Operation Procedure for Charging A/C with Refrigerant”.

Tightening torque



Compressor mounting bolt: 25 N·m (2.5 kgf-m, 18.0 lb-ft)

Magnet Clutch Components

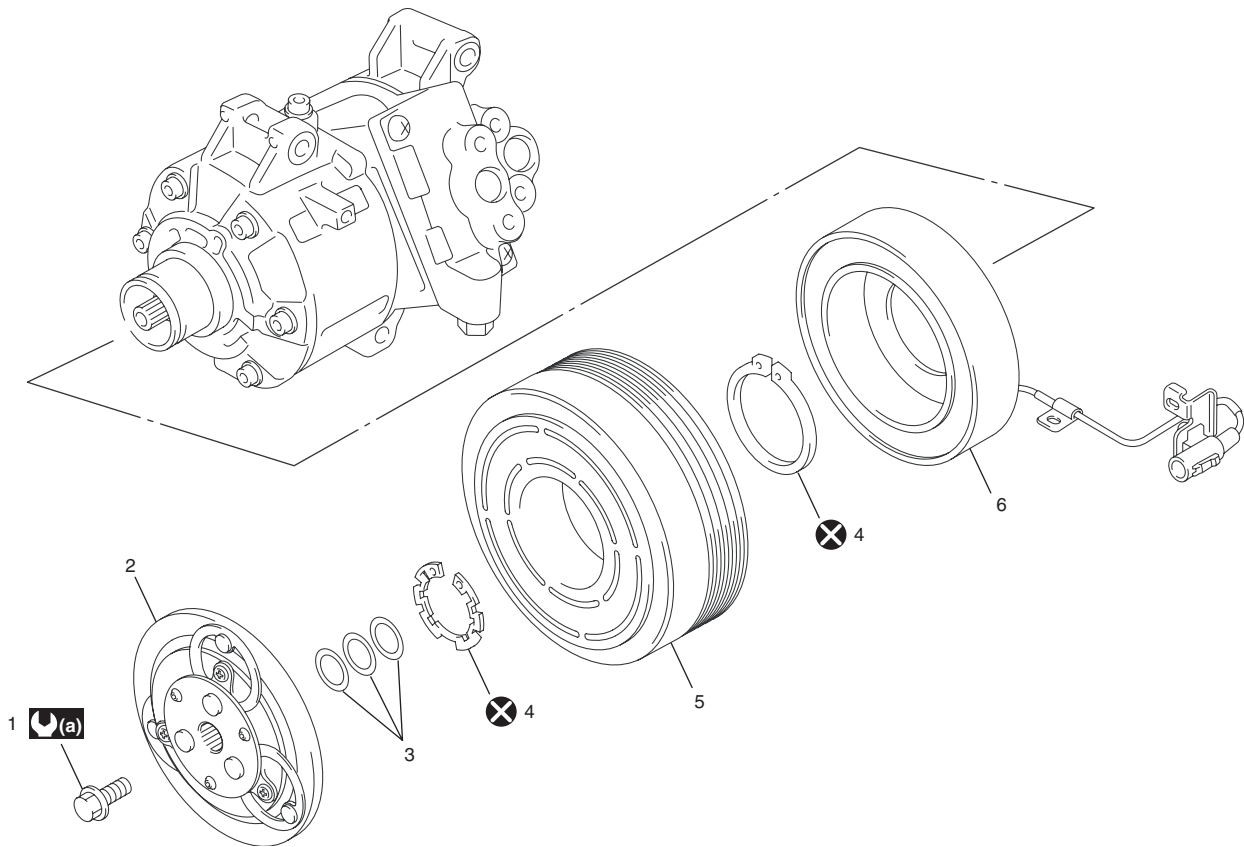S6JB0B7206035



I5JB0A720061-01

1. Armature plate bolt	4. Circlip	 : 20 N·m (2.0 kgf-m, 14.5 lb-ft)
2. Armature plate	5. Magnet clutch pulley	 : Do not reuse.
3. Shim(s)	6. Magnet clutch coil	


Magnet Clutch Operating Check

S6JB0B7206036

Check the following items.
If any detects are found, repair or replace magnet clutch assembly.

- Inspect armature plate and rotor for signs of oil.
- Check clutch bearings for noise and grease leakage.
- Using an ohmmeter (3), measure resistance of stator coil between clutch lead wire (1) and body ground (2).
 If measured resistance is not within tolerance, replace coil.

Specified current of magnet clutch
Approx. 3.8 – 6.0 Ω at 25 °C (77 °F)

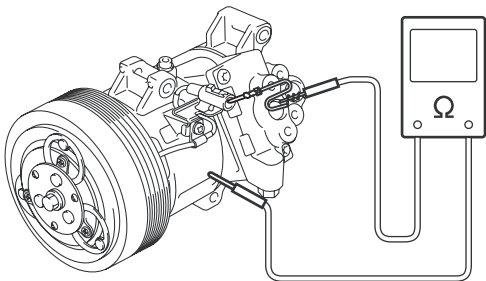


I5JB0A720063-02

Magnet Clutch Removal and Installation

S6JB0B7206037


Removal

- 1) Remove compressor from vehicle referring to "Compressor Assembly Removal and Installation".
- 2) Fix armature plate (1) with special tool (A) and remove armature plate bolt.

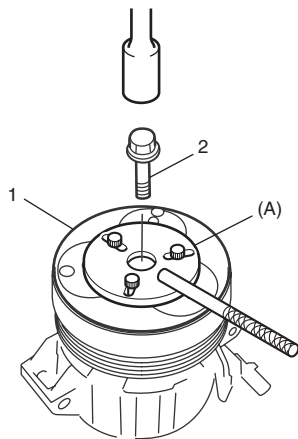Special tool**(A): 09991-06310****NOTE****Do not reuse armature plate bolt.**


I5JB0A720071-01

- 3) Remove armature plate.
- 4) Remove shim(s) from shaft.
- 5) Using special tool (A), remove snap ring (1).

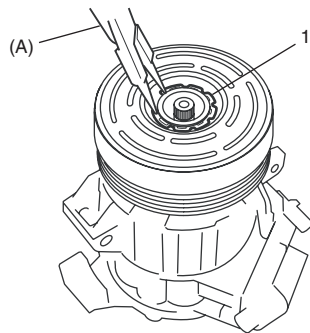Special tool**(A): 09900-06107**


I5JB0A720072-01

- 6) Remove magnet clutch pulley (1) with puller (2).

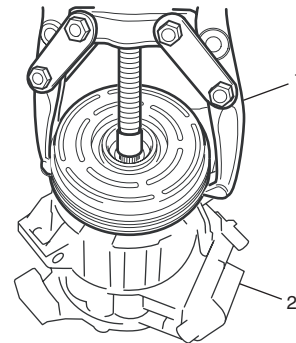NOTE**Be careful not to damage pulley.**

I5JB0A720073-01

- 7) Remove snap ring (1) using special tool (B), and then remove magnet clutch coil (1).

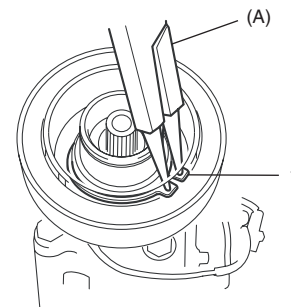Special tool**(A): 09900-06107**


I5JB0A720074-02

Installation

- 1) Install magnet clutch coil (3).


NOTE

Protrusion (1) on underside of magnet clutch coil and hole (2) on compressor body assembly must match to stop movement of magnet clutch coil and to locate lead wire correctly.

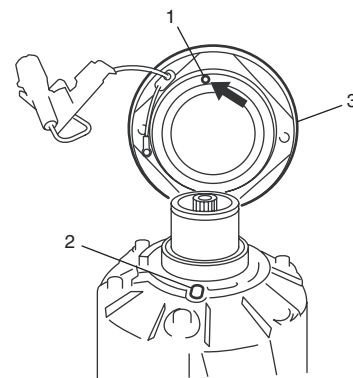

I5JB0A720075-01


- 2) Install new snap ring (1) using special tool (A).

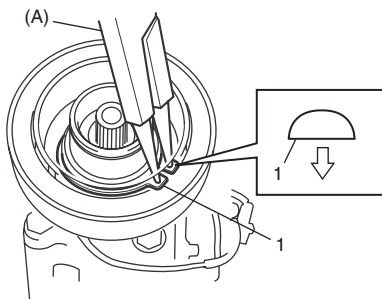Special tool**(B): 09900-06107**

I5JB0A720088-04


- 3) Install magnet clutch pulley.

- Set magnet clutch horizontally over clutch installation boss.
- Place special tool (B) onto magnet clutch bearing. Ensure that edge rests only inner race of bearing.

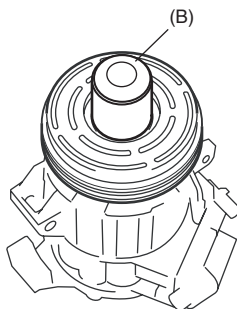Special tool**(B): 09951-15510**

I5JB0A720076-02

- c) Install new snap ring (1) using special tool (A).

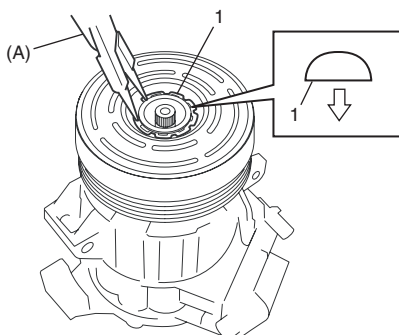Special tool**(A): 09900-06107**

I5JB0A720077-01


- 4) Install armature plate (1).

- 5) Using special tool (A), tighten new armature plate bolt (2) to specified torque.

Tightening torque**Armature plate bolt: 21 N·m (2.1 kgf-m, 15.5 lb-ft)****Special tool****(A): 09991-06310**

- 6) Adjust clearance between armature plate (1) and magnet clutch pulley by putting shim(s) on compressor shaft. To measure the clearance, perform the following steps.

- Put compressor in a vise.
- Set dial gauge on magnet clutch plate, and then adjust its pointer at 0.
- Connect battery positive terminal (+) to magnet clutch coil lead wire.
- Connect battery negative terminal (-) to compressor body assembly. (At this point, armature plate and magnet clutch pulley (2) are kept in contact.)
- Disconnect battery negative terminal (-) to compressor body assembly (At this point, armature plate and magnet clutch pulley (2) are not in contact.)
- Read stroke of armature plate from dial gauge by performing Step d) and e) repeatedly. (Stroke of armature plate is clearance between armature plate and magnet clutch pulley (2).)

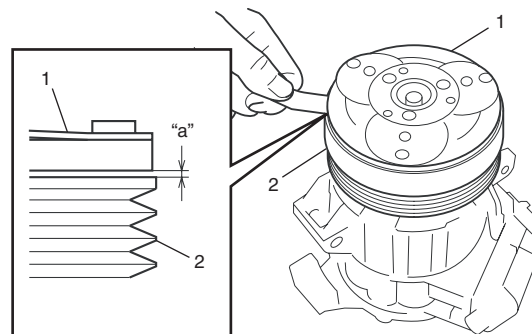Standard clearance between armature plate and magnet clutch**"a": 0.3 – 0.6 mm (0.012 – 0.024 in.)**

I5JB0A720078-02


- 7) Install compressor to vehicle referring to "Compressor Assembly Removal and Installation".

Relief Valve On-Vehicle Inspection

S6JB0B7206038

Using special tool (A), check if there is refrigerant leakage.

If there is refrigerant leakage, replace compressor body.

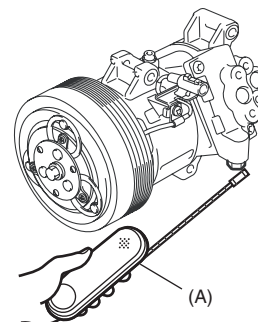Special tool**(A): 09990-86011**

I5JB0A720083-01

Specifications

Tightening Torque Specifications

S6JB0B7207001

Fastening part	Tightening torque			Note
	N·m	kgf-m	lb-ft	
Refrigerant line bolt	12	1.2	9.0	🔧
A/C refrigerant pressure sensor	11	1.1	8.0	🔧
Compressor mounting bolt	25	2.5	18.0	🔧
Armature plate bolt	21	2.1	15.5	🔧

NOTE

The specified tightening torque is also described in the following.
“Magnet Clutch Components”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Special Tools and Equipment

Recommended Service Material

S6JB0B7208001





Material	SUZUKI recommended product or Specification		Note
Compressor oil	Compressor oil (DH-PS, 250cc)	P/No.: 99000–99022–00E	🔧

NOTE

Required service material is also described in the following.
“Precautions on Servicing Refrigerant Line”

Special Tool

S6JB0B7208002

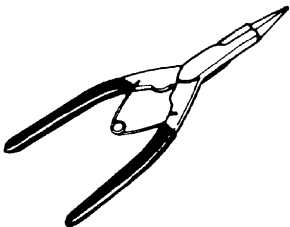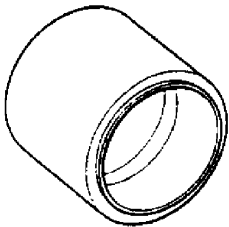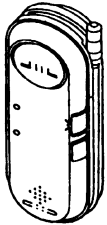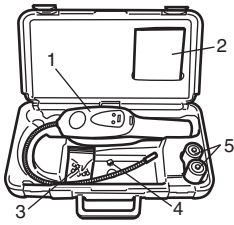
09900–06107 Snap ring pliers (opening type) 	09951–15510 Magnet clutch installer 
09990–86011 Gas leak detector 	09990–86012 Gas leak detector This kit includes following items. 1. Gas leak detector, 2. Instruction manual, 3. Filter, 4. Sensor, 5. Dri-sell battery (size D) 

7B-80 Air Conditioning System:

09991-06310

Armature plate holder


🔧 / 🔧

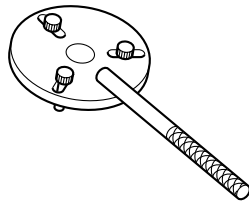

SUZUKI scan tool

—

This kit includes following items. 1. Tech 2, 2. PCMCIA card, 3. DLC cable, 4. SAE 16/19 adapter, 5. Cigarette cable, 6. DLC loop back adapter, 7. Battery power cable, 8. RS232 cable, 9. RS232 adapter, 10. RS232 loop back connector, 11. Storage case, 12. 🔧 / 🔧

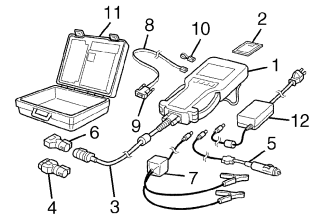

Section 8

Restraint

CONTENTS

Precautions	8-1	DTC Clearance	8B-17
Precautions.....	8-1	Scan Tool Data	8B-18
Precautions on Restraint.....	8-1	“AIR BAG” Warning Light Comes ON Steady ...	8B-18
Seat Belts	8A-1	“AIR BAG” Warning Light Does Not Come ON ..	8B-21
Precautions.....	8A-1	“AIR BAG” Warning Light Flashes	8B-22
Precautions on Service and Diagnosis of Seat		“AIR BAG” Warning Light Cannot Indicate	
Belt	8A-1	Flashing Pattern of DTC (If Equipped with	
General Description	8A-1	“AIR BAG” Monitor Coupler)	8B-23
Seat Belt Construction	8A-1	DTC B1013: SDM fault.....	8B-24
Diagnostic Information and Procedures.....	8A-3	DTC B1016: Power Source Voltage High	8B-24
Repair and Inspection Required after		DTC B1017: Power Source Voltage Low	8B-26
Accident	8A-3	DTC B1021: Air Bag Module Deployed.....	8B-28
Repair Instructions	8A-3	DTC B1031: Driver Air Bag Initiator Circuit	
Front Seat Belt Components.....	8A-3	Resistance High	8B-29
Front Seat Belt Removal and Installation.....	8A-4	DTC B1032: Driver Air Bag Initiator Circuit	
Front Seat Belt Inspection.....	8A-5	Resistance Low.....	8B-33
Rear Seat Belt Components	8A-6	DTC B1033: Driver Air Bag Initiator Circuit	
Rear Seat Belt Removal and Installation	8A-6	Short to Ground.....	8B-36
Rear Seat Belt Inspection	8A-6	DTC B1034: Driver Air Bag Initiator Circuit	
Specifications	8A-7	Short to Power Circuit	8B-39
Tightening Torque Specifications.....	8A-7	DTC B1041: Passenger Air Bag Initiator	
Air Bag System	8B-1	Circuit Resistance High.....	8B-42
Precautions.....	8B-1	DTC B1042: Passenger Air Bag Initiator	
Precautions on Service and Diagnosis of Air		Circuit Resistance Low.....	8B-45
Bag System.....	8B-1	DTC B1043: Passenger Air Bag Initiator	
Precautions on Handling and Storage of Air		Circuit Short to Ground	8B-48
Bag System Components	8B-2	DTC B1044: Passenger Air Bag Initiator	
Precautions on Disposal of Air Bag and Seat		Circuit Short to Power Circuit.....	8B-51
Belt Pretensioner	8B-5	DTC B1051 / B1055: Driver / Passenger	
General Description	8B-6	Pretensioner Initiator Circuit Resistance	
Air Bag System Construction	8B-6	High.....	8B-54
Air Bag System Input / Output Table	8B-7	DTC B1052 / B1056: Driver / Passenger	
Schematic and Routing Diagram.....	8B-8	Pretensioner Initiator Circuit Resistance Low ..	8B-57
Air Bag System Wiring Circuit Diagram	8B-8	DTC B1053 / B1057: Driver / Passenger	
Component Location	8B-11	Pretensioner Initiator Circuit Short to Ground ..	8B-60
Air Bag System Components, Wiring and		DTC B1054 / B1058: Driver / Passenger	
Connectors Location	8B-11	Pretensioner Initiator Circuit Short to Power	
Diagnostic Information and Procedures.....	8B-12	Circuit	8B-63
Air Bag Diagnostic System Check	8B-12	DTC B1073 / B1077: Driver / Passenger	
Air Bag Diagnostic System Check Flow.....	8B-12	Forward-Sensor Circuit Short to Ground.....	8B-66
DTC Table.....	8B-14	DTC B1074 / B1078: Driver / Passenger	
DTC Check	8B-16	Forward-Sensor Circuit Short to Power	
		Circuit or Open	8B-68
		DTC B1085: Wrong Side-Sensor ID	8B-70

DTC B1086 / B1096: Left / Right Side-Sensor Performance Problem	8B-70	SDM Inspection	8B-101
DTC B1087 / B1097: Left / Right Side-Sensor Communication Error	8B-70	Driver Air Bag (Inflator) Module Removal and Installation	8B-101
DTC B1321 / B1325: Left / Right Side-Air Bag Initiator Circuit Resistance High	8B-72	Driver Air Bag (Inflator) Module Inspection	8B-102
DTC B1322 / B1326: Left / Right Side-Air Bag Initiator Circuit Resistance Low	8B-76	Passenger Air Bag (Inflator) Module Removal and Installation	8B-103
DTC B1323 / B1327: Left / Right Side-Air Bag Initiator Circuit Short to Ground	8B-79	Passenger Air Bag (Inflator) Module Inspection	8B-104
DTC B1324 / B1328: Left / Right Side-Air Bag Initiator Circuit Short to Power Circuit	8B-82	Side-Air Bag (Inflator) Module Removal and Installation	8B-105
DTC B1331 / B1335: Left / Right Side Curtain- Air Bag Initiator Circuit Resistance High	8B-85	Side-Air Bag (Inflator) Inspection	8B-106
DTC B1332 / B1336: Left / Right Side Curtain- Air Bag Initiator Circuit Resistance Low	8B-88	Side Curtain-Air Bag (Inflator) Module Removal and Installation	8B-107
DTC B1333 / B1337: Left / Right Side Curtain- Air Bag Initiator Circuit Short to Ground	8B-90	Side Curtain-Air Bag (Inflator) Module Inspection	8B-108
DTC B1334 / B1338: Left / Right Side Curtain- Air Bag Initiator Circuit Short to Power Circuit	8B-92	Forward-Sensor Removal and Installation	8B-109
Inspection of Intermittent and Poor Connections	8B-94	Forward-Sensor Inspection	8B-110
Repair and Inspection Required after Accident	8B-95	Side-Sensor Removal and Installation	8B-110
Repair Instructions	8B-98	Side-Sensor Inspection	8B-111
Disabling Air Bag System	8B-98	Air Bag (Inflator) Module and Seat Belt Pretensioner Disposal	8B-112
Enabling Air Bag System	8B-99	Deployed Air Bag (Inflator) Module and Activated Seat Belt Pretensioner Disposal....	8B-122
SDM Removal and Installation	8B-100	Specifications	8B-123
		Tightening Torque Specifications	8B-123
		Special Tools and Equipment	8B-124
		Use of Special Tools	8B-124
		Recommended Service Material	8B-125
		Special Tool	8B-125

Precautions

Precautions

Precautions on Restraint

S6JB0B8000001

Air Bag System Service Warning

Refer to "Air Bag Warning in Section 00".

Fastener Caution

Refer to "Fastener Caution in Section 00".

Precautions on Service and Diagnosis of Seat Belt

Refer to "Precautions on Service and Diagnosis of Seat Belt in Section 8A".

Precautions on Service and Diagnosis of Air Bag System

Refer to "Precautions on Service and Diagnosis of Air Bag System in Section 8B".

Precautions on Handling and Storage of Air Bag Components

Refer to "Precautions on Handling and Storage of Air Bag System Components in Section 8B".

Precautions on Disposal of Air Bag and Seat Belt Pretensioner

Refer to "Precautions on Disposal of Air Bag and Seat Belt Pretensioner in Section 8B".

Seat Belts

Precautions

Precautions on Service and Diagnosis of Seat Belt

S6JB0B8100001

⚠ WARNING

If replacing seat belt is necessary, replace buckle and seat belt assembly together as a set. This is for the reason of ensuring locking of tongue plate with buckle. If these parts are replaced individually, such a locking condition may become unreliable. For this reason, SUZUKI will supply only the spare buckle and seat belt assembly in a set part.


Before servicing or replacing seat belts, refer to the following precautionary items.

- Seat belts should be normal relative to strap retractor and buckle portions.
- Keep sharp edges and damaging objects away from belts.
- Avoid bending or damaging any portion of belt buckle or latch plate.
- Do not bleach or dye belt webbing. (Use only mild soap and lukewarm water to clean it.)
- When installing a seat belt anchor bolt, it should be tightened by hand at first to prevent cross-threading and then to specified torque.
- Do not attempt any repairs on retractor mechanisms or retractor covers. Replace defective assemblies with new replacement parts.
- Keep belts dry and clean at all times.
- If there exist any parts in question, replace such parts.
- Replace belts whose webbing is cut or otherwise damaged.
- Do not put anything into trim panel opening which seat belt webbing passes through.

General Description

Seat Belt Construction

S6JB0B8101001

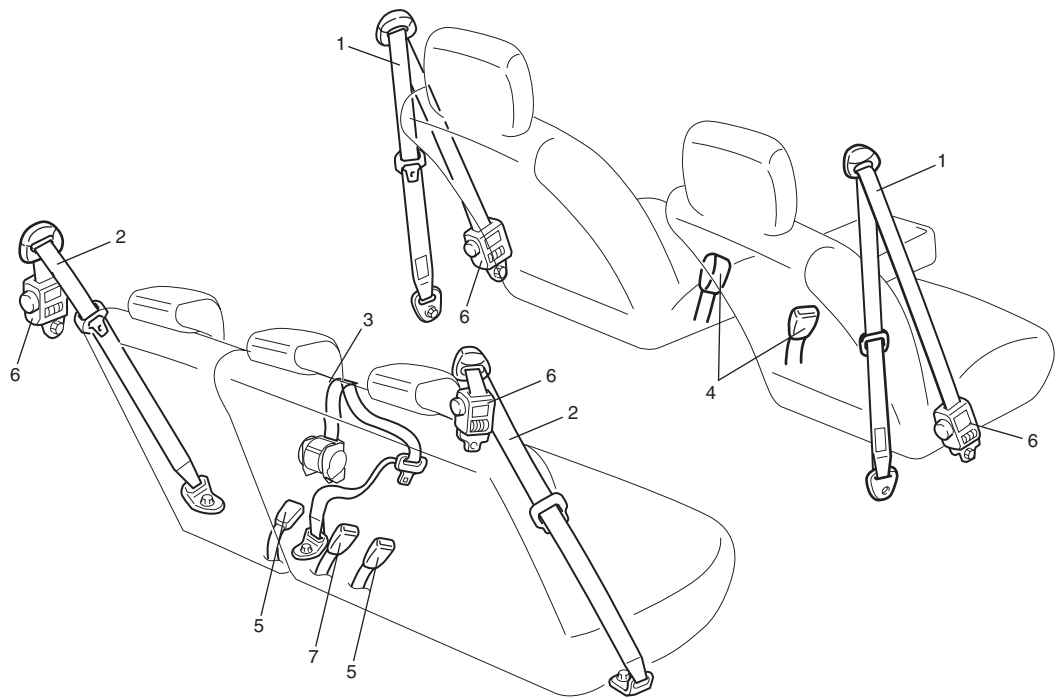

I5JB0A810001-01

1. Front seat belt assembly (with ELR and pretensioner)	4. Buckle for front seat belt assembly	7. Buckle for rear center seat belt
2. Rear seat belt assembly (with A-ELR)	5. Buckle for rear seat belt assembly	
3. Rear center seat belt (with A-ELR)	6. Retractor assembly	

Seat Belt with ELR

The seat belt with emergency locking retractor (ELR) is designed so that it locks immediately (to prevent the webbing from being pulled out of the retractor any further) when any of the following items is detected as exceeding each set value;

- Speed at which the webbing is pulled out of the retractor.
- Acceleration or deceleration of the vehicle speed.
- Inclination.

Seat Belt with A-ELR

The automatic and emergency locking retractor (A-ELR) works as an Emergency Locking Retractor (ELR) till its webbing is pulled all the way out and then on as an Automatic Locking Retractor (ALR) till it is retracted fully. ALR: Automatically locks when the webbing is pulled out from the retractor and allowed to retract even a little. Then the webbing can not be pulled out any further, unless it is wound all the way back into the retractor, which releases the lock and allows the webbing to be pulled out.

Seat Belt with ELR and Pretensioner

The seat belt with ELR and a pretensioner has a pretensioner mechanism which operates in linkage with the air bag in addition to the ELR.

The pretensioner is incorporated in retractor assembly and controlled by SDM as one of air bag system components. It will be activated at the same time as the driver and passenger air bag module when an impact at the front of vehicle exceeds the specified value.

When servicing seat belt (retractor assembly) with pretensioner, be sure to observe all WARNINGS and CAUTIONS and "Precautions on Service and Diagnosis of Air Bag System in Section 8B".

⚠ CAUTION

Do not reuse the seat belt pretensioner (retractor assembly) that has activated. Replace it with a new seat belt assembly and buckle together as a set. For checking procedure of its activation, refer to "Repair and Inspection Required after Accident in Section 8B".

Seat Belt Remainder (if equipped)

When driver's seat belt is unfastened (under the following conditions), seat belt reminder light and warning buzzer inform that driver's seat belt is unfastened. Seat belt reminder light located in combination meter and warning buzzer located inside BCM operate as follows:

- Seat belt reminder light comes on when driver's seat belt is unfastened while ignition key switch is at ON position.
- If vehicle speed exceeds 15 km/h with seat belt unfastened, warning buzzer operates for approximately 95 seconds and seat belt reminder light flashes synchronously with buzzer. When warning buzzer stops operating, seat belt reminder light is turned on.
- If driver's seat belt state is changed from "fastened" to "unfastened" while vehicle speed is above 15 km/h, warning buzzer operates for approximately 95 seconds and seat belt reminder light flashes synchronously with buzzer. When warning buzzer stops operating, seat belt reminder light is turned on.

Diagnostic Information and Procedures

Repair and Inspection Required after Accident

S6JB0B8104001

After an accident, whether the seat belt pretensioner has been activated or not, be sure to perform checks and repairs described on “Repair and Inspection Required after Accident in Section 8B”.


Repair Instructions

Front Seat Belt Components

S6JB0B8106001

⚠ WARNING

- Never attempt to disassemble or repair the seat belt pretensioner (retractor assembly). If any abnormality is found, be sure to replace it with new one as an assembly.
- Be sure to read “Precautions on Service and Diagnosis of Seat Belt” before starting to work and observe every precaution during work. Neglecting them may result in personal injury or unactivation of the seat belt pretensioner when necessary.

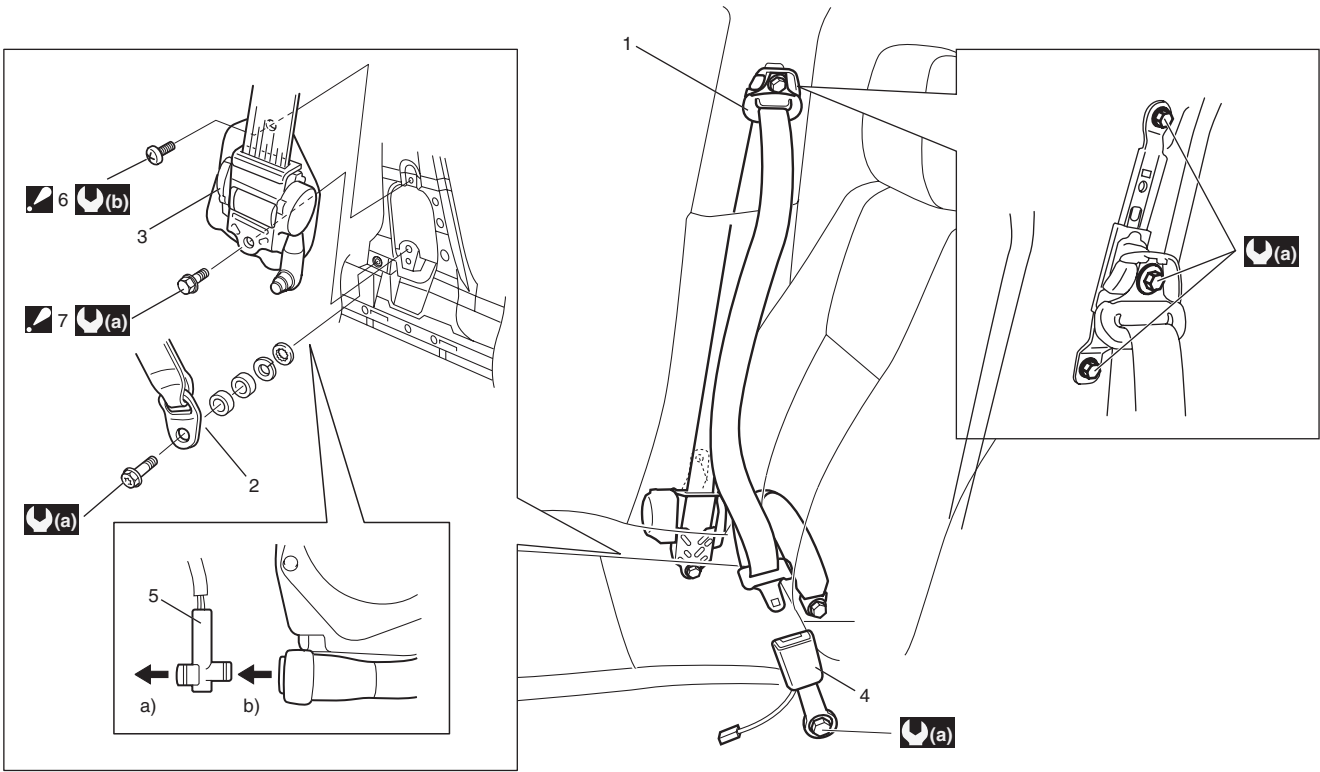

I5JB0A810002-01

1. Upper anchor	4. Buckle	7. Retractor assembly lower mounting bolt : After tightening lower bolt, tighten upper bolt.
2. Lower anchor	5. Yellow connector (for seat belt pretensioner)	(a) : 35 N·m (3.5 kgf-m, 25.5 lb-ft)
3. Retractor assembly	6. Retractor assembly upper mounting bolt : After tightening lower bolt, tighten upper bolt.	(b) : 5.5 N·m (0.55 kgf-m, 4.0 lb-ft)

Front Seat Belt Removal and Installation


S6JB0B8106002

⚠ WARNING

- **Never attempt to disassemble or repair the seat belt pretensioner (retractor assembly). If any abnormality is found, be sure to replace it with new one as an assembly.**
- **Be sure to read “Precautions on Service and Diagnosis of Seat Belt” before starting to work and observe every precaution during work. Neglecting them may result in personal injury or unactivation of the seat belt pretensioner when necessary.**

Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Disable air bag system. Refer to “Disabling Air Bag System in Section 8B”.
- 3) Remove center pillar lower trim.
- 4) Disconnect Yellow connector (1) from seat belt pretensioner (2).
 - a) Release locking of lock button (3).
 - b) After unlocked, disconnect connector.

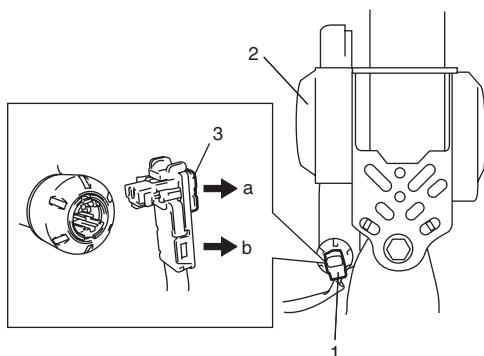


I5JB0A810003-01

- 5) Remove front seat belts from the vehicle.

Installation

Install in reverse order of removal, noting the following.

- Seat belt anchor bolts should have a unified fine thread (7/16-20 UNF). Under no circumstances should any different sized or metric screw threads be used.
- Connect Yellow connector (1) to seat belt pretensioner securely.
 - a. Connect connector.
 - b. Lock connector with lock button (2).

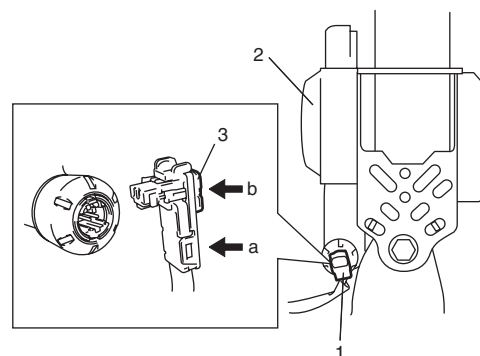

I5JB0A810004-01


- Enable air bag system. Refer to “Enabling Air Bag System in Section 8B”.

Front Seat Belt Inspection

S6JB0B8106003

⚠ WARNING

- **Never attempt to disassemble or repair the seat belt pretensioner (retractor assembly).** If any abnormality is found, be sure to replace it with new one as an assembly.
- **Be sure to read “Precautions on Service and Diagnosis of Seat Belt”, before starting to work and observe every precaution during work. Neglecting them may result in personal injury or unactivation of the seat belt pretensioner when necessary.**
- **Never measure resistance of pretensioner or disassemble it. Otherwise, personal injury may result.**

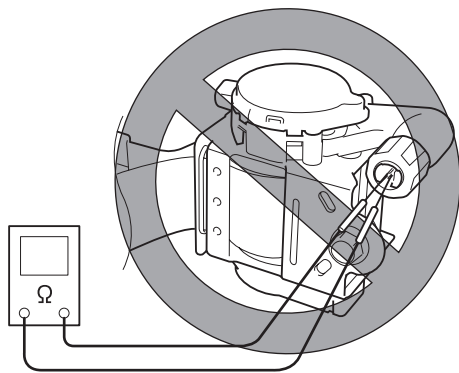

I5JB0A810005-02

⚠ CAUTION

If seat belt pretensioner (retractor assembly) was dropped from a height of 30 cm (1 ft) or more, it should be replaced.


Seat belts and attaching parts can affect the vital components and systems of a vehicle. Therefore, they should be inspected carefully and replaced with genuine parts only.

Seat Belt

- The seat belt webbing or strap should be free from damage.

Retractor Assembly (with Seat Belt Pretensioner)

- 1) Let the seat belt retract fully to confirm its easy retraction.
 - The retractor assembly should lock webbing when pulled quickly.
 - The front seat belt retractor assembly (1) should pass the inspection and should lock webbing even when tilted (approx. 15°) toward the fore and aft or right and left directions.
- 2) Check retractor assembly (1) with seat belt pretensioner appearance visually for following symptoms and if any one of them is applicable, replace it with a new one as an assembly.
 - Pretensioner has activated.
 - There is a crack in seat belt pretensioner (retractor assembly).
 - Seat belt pretensioner (retractor assembly) is damaged or a strong impact (e.g., dropping) was applied to it.

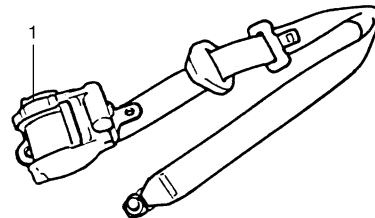

I2RH01810005-01

Anchor Bolt

- Anchor bolts should be torqued to specification.

Belt Latch

- It should be secure when latched.

Seat Belt Switch

Check driver side seat belt switch for continuity by using ohmmeter.


Seat belt switch specification

Without inserted buckle tongue to buckle catch:

Terminal “A” and “B”: Continuity

With inserted buckle tongue to buckle catch:

Terminal “A” and “B”: No continuity

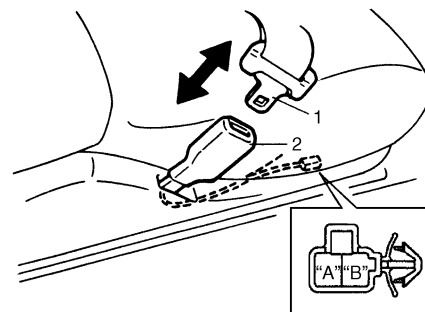

I4RS0B810001-01

1. Buckle tongue


2. Buckle catch

Rear Seat Belt Components

S6JB0B8106004

⚠ WARNING

Be sure to read “Precautions on Service and Diagnosis of Seat Belt” before starting to work and observe every precaution during work.

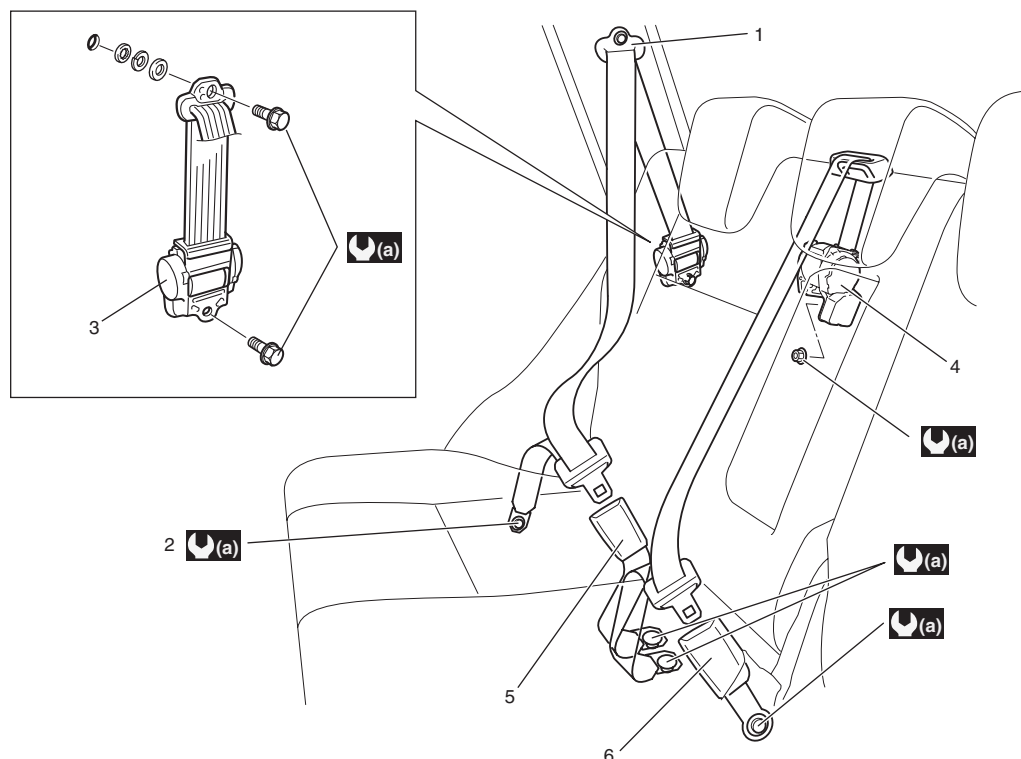

I5JB0A810006-01

1. Upper anchor	4. Rear center retractor assembly	7. Rear seat belt
2. Lower anchor	5. Buckle for rear seat belt	(a) : 35 N·m (3.5 kgf-m, 25.5 lb-ft)
3. Retractor assembly	6. Buckle for rear center seat belt	

Rear Seat Belt Removal and Installation

S6JB0B8106005

⚠ WARNING

Be sure to read “Precautions on Service and Diagnosis of Seat Belt” before starting to work and observe every precaution during work.

Removal

- 1) Remove rear side sill scuff, rear side lower trim and rear pillar trim referring to “Head Lining Removal and Installation in Section 9H”.
- 2) Remove rear seat belt referring to “Rear Seat Belt Components”.

Installation

Reverse removal procedure for installation noting the following.

- Seat belt anchor bolts should have a unified fine thread (7/16-20 UNF). Under no circumstances should any different sized or metric screw threads be used.

Rear Seat Belt Inspection

S6JB0B8106006

⚠ WARNING

Be sure to read “Precautions on Service and Diagnosis of Seat Belt” before starting to work and observe every precaution during work.

- Check the rear seat belt in the same way as “Front Seat Belt Inspection”.
- As to seat belts with A-ELR, check them as follows.
 - With vehicle at stop, pull seat belt all the way out, let it retract a little and try to pull it. It should not be pulled out, that is, it should be locked where retracted.
 - Let seat belt retract to its original state. Next, pull it half way out, let it retract a little and try to pull it again. It should be pulled out smoothly, that is it should not be locked at this time.

Specifications

Tightening Torque Specifications

S6JB0B8107001

NOTE

The specified tightening torque is also described in the following.

“Front Seat Belt Components”

“Rear Seat Belt Components”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Air Bag System

Precautions

Precautions on Service and Diagnosis of Air Bag System

S6JB0B8200001

▲ WARNING

- **If the air bag system and another vehicle system both need repair, SUZUKI recommends that the air bag system be repaired first, to help avoid unintended air bag system activation.**
 - **Do not modify the steering wheel, dashboard, both front seat or any other on or around air bag system components. Modifications can adversely affect air bag system performance and lead to injury.**
 - **Be sure to follow the procedures described in this section. Failure to follow procedures could result in possible air bag system activation, personal injury or unneeded air bag system repairs.**
-
- WARNING / CAUTION labels are attached on each part of air bag system components (SDM, air bag (inflator) modules and seat belt pretensioners). Be sure to follow the instructions.
 - Many of service procedures require disconnection of "A/B" fuse and air bag (inflator) module(s) (driver, passenger, side of both sides and curtain of both sides) from initiator circuit to avoid an accidental deployment.
 - Do not apply power to the air bag system unless all components are connected or a diagnostic flow requests it, as this will set a DTC.
 - The "Air Bag Diagnostic System Check" must be the starting point of any air bag diagnostics. The "Air Bag Diagnostic System Check" will verify proper "AIR BAG" warning light operation and will lead you to the correct flow to diagnose any air bag malfunctions. Bypassing these procedures may result in extended diagnostic time, incorrect diagnosis, and incorrect parts replacements.
-
- Never use air bag component parts from another vehicle.
 - If the vehicle will be exposed to temperatures over 93 °C (200 °F) (for example, during a paint baking process), remove the air bag system components beforehand to avoid component damage or unintended system activation.
 - When handling the air bag (inflator) modules (driver, passenger, side of both sides and curtain of both sides), seat belt pretensioners (driver and passenger), SDM, forward-sensor or side-sensor, be careful not to drop it or apply an impact to it. If an excessive impact was applied (e.g., SDM, forward-sensor and side-sensor are dropped, air bag (inflator) module is dropped from a height of 90 cm (3 ft) or more, seat belt pretensioner (retractor assembly) is dropped from a height of 30 cm (1 ft) or more), never attempt disassembly or repair but replace it with a new one.
 - When using electric welding, be sure to disconnect air bag (inflator) module connectors (driver, passenger, side of both sides and curtain of both sides) and seat belt pretensioner connectors (driver and passenger) respectively.
 - When applying paint around the air bag system related parts, use care so that the harness or connector will not be exposed to the paint mist.
 - Never expose air bag system component parts directly to hot air (drying or baking the vehicle after painting) or flames.
-
- #### **▲ WARNING**
- When performing service on or around air bag system components or air bag wiring, follow the procedures listed in "Disabling Air Bag System" to temporarily disable the air bag system.**
- Failure to follow procedures could result in possible air bag system activation, personal injury or unneeded air bag system repairs.**
-

Precautions on Handling and Storage of Air Bag System Components

S6JB0B8200002

SDM


⚠ WARNING

Never power up air bag system when SDM is not rigidly attached to the vehicle. Otherwise, personal injury may result.

⚠ CAUTION

After detecting one time of such collision as to meet deployment conditions, SDM must not be used. Refer to "Air Bag Diagnostic System Check" when checking SDM.

- Never attempt disassembly of SDM.
- When storing SDM, select a place where neither high temperature nor high humidity is anticipated and oil, water and dust are kept off.

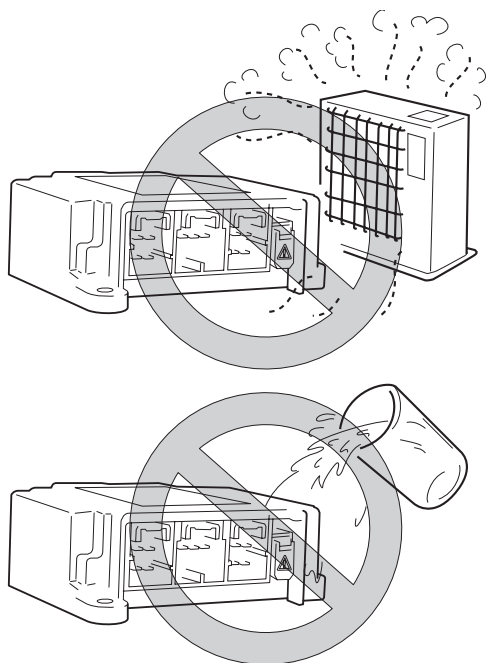

I5JB0A820001-02

- If SDM has been dropped, replace it with a new one.
- If SDM installation part of floor was damaged, repair that part completely before reinstallation.
- All SDM and mounting bracket fasteners must be carefully torqued and the arrow must be pointed toward the front of the vehicle to ensure proper operation of the air bag system.


Live (Undeployed) Air Bag (Inflator) Modules

Special care is necessary when handling and storing a live (undeployed) air bag (inflator) modules.

The rapid gas generation produced during deployment of the air bag could cause the air bag (inflator) module, or an object in front of the air bag (inflator) module, to be thrown through the air in the unlikely event of an accidental deployment.

⚠ WARNING

Never attempt to measure the resistance of the air bag (inflator) modules (driver, passenger and side of both sides and curtain of both sides). It is very dangerous as the electric current from the tester may deploy the air bag.

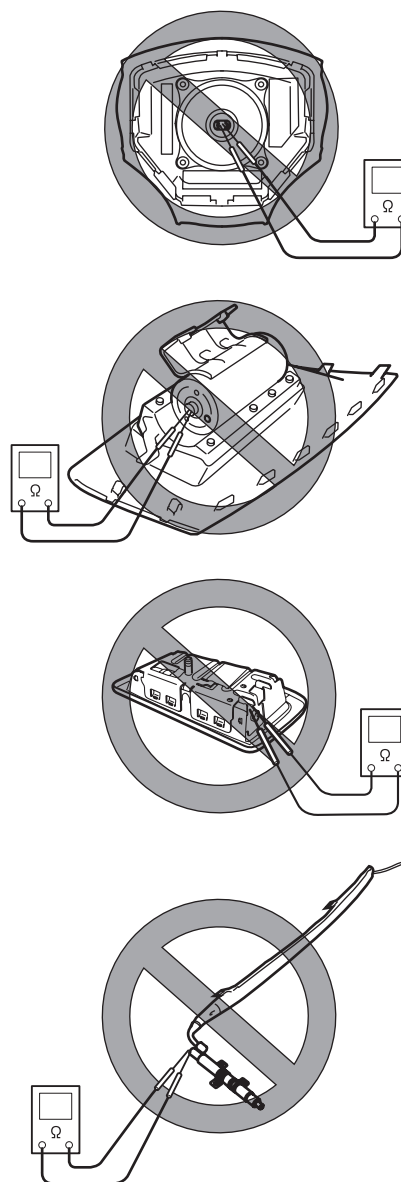

I5JB0A820002-02

- Never attempt disassembly of the air bag (inflator) modules.
- If any abnormality is found, be sure to replace it with new one as an assembly.
- When an abnormality is noted as existing in the live (undeployed) air bag (inflator) module, be sure to deploy it before discarding it.
- When grease, cleaning agent, oil, water, etc., got on the air bag (inflator) modules (driver, passenger, side of both sides and curtain of both sides), wipe it off immediately with a dry cloth.
- If air bag (inflator) module was dropped from a height of 90 cm (3 ft) or more, it should be replaced with a new one as an assembly.

⚠ WARNING

- For handling and storage of a live air bag (inflator) module, select a place where the ambient temperature below 65 °C (150 °F), without high humidity and away from electric noise.
- When carrying a live air bag (inflator) module, make sure the bag opening is pointed away from you. In case of an accidental deployment, the bag will then deploy with minimal chance of injury. Never carry the air bag (inflator) module by the wires or connector on the underside of the module.


Otherwise, personal injury may result.

⚠ WARNING


When leaving or storing live air bag (inflator) module unattended on bench or other surface, always its bag (trim cover) facing up and away from surface.

It is also prohibited to place anything on top of the trim cover and stack air bag (inflator) modules.

This is necessary so that a free space is provided to allow the air bag to expand in the unlikely event of accidental deployment. Otherwise, personal injury may result.

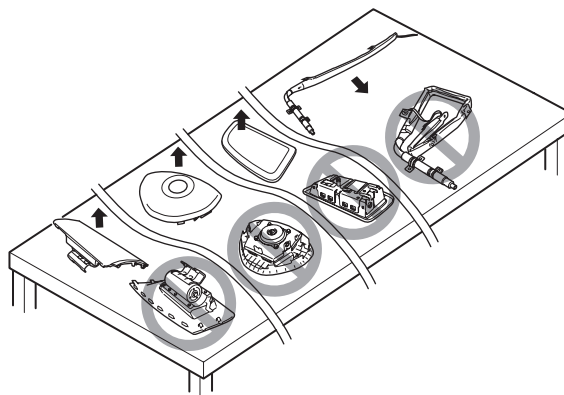

I5JB0A820004-02

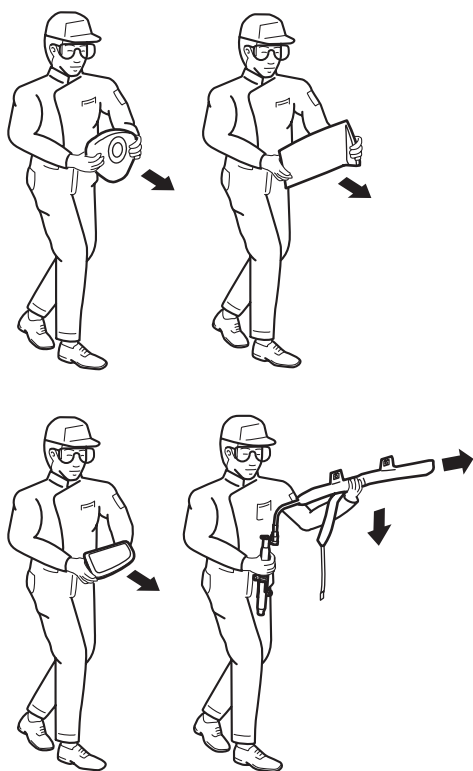

I5JB0A820003-01


8B-4 Air Bag System:

Live (Inactivated) Seat Belt Pretensioner

Special care is necessary when handling and storing a live (inactivated) seat belt pretensioners.

Also, when the seat belt pretensioners activate, gas is generated and the seat belt (1) is retracted into the retractor assembly (2) quickly.


Note, therefore, that if they activate accidentally, the seat belt pretensioners and other object(s) around them may be thrown through the air.

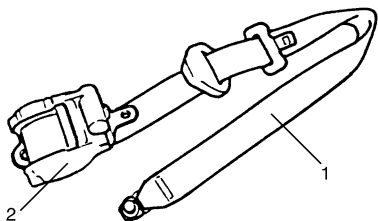

I3JA01820043-01

⚠ WARNING

Never attempt to measure the resistance of the seat belt pretensioners. It is very dangerous as the electric current from the tester may activate pretensioner.

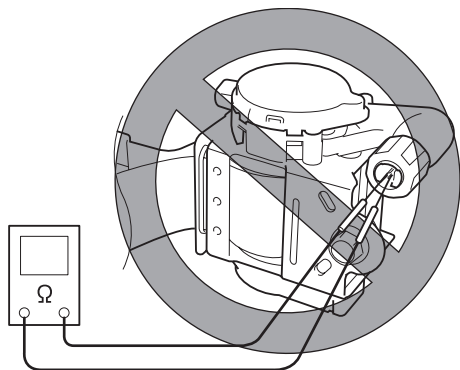


I5JB0A820005-02

- Never attempt to disassemble the seat belt pretensioners (retractor assembly).
- If any abnormality is found, be sure to replace it with new one as an assembly.
- When an abnormality is noted as existing in the live (inactivated) seat belt pretensioner, be sure to activate it before discarding it.
- When grease, cleaning agent oil, water, etc., got on the seat belt pretensioners (retractor assembly), wipe it off immediately with a dry cloth.
- If seat belt pretensioner was dropped from a height of 30 cm (1 ft) or more, it should be replaced with a new one as an assembly.

⚠ WARNING

- For handling and storage of a live seat belt pretensioner, select a place where the ambient temperature below 65 °C (150 °F), without high humidity and away from electric noise.
- Never carry the seat belt pretensioner by webbing.
- When placing a live seat belt pretensioner on the workbench or other surface, be sure not to lay it with its exhaust hole (1) provided side facing down. It is also prohibited to put something on its face with an exhaust hole (1) or to put a seat belt pretensioner on top of another. Otherwise, personal injury may result.

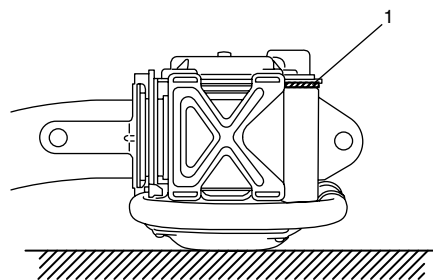

I2RH01820048-01

Deployed Air Bag (Inflator) Module and Activated Seat Belt Pretensioner

⚠ WARNING

- The air bag (inflator) module and seat belt pretensioner immediately after deployment/activation is very hot. Wait for at least 30 minutes to cool it off before proceeding the work.
- Do not apply water, oil, etc. to deployed air bag (inflator) module and to activate seat belt pretensioner.
- After an air bag (inflator) module has been deployed, the surface of the air bag may contain a powdery residue. This powder consists primarily of cornstarch (used to lubricate the bag as it inflates) and by-products of the chemical reaction. As with many service procedures, gloves and safety glasses should be worn.
- Wash your hands with mild soap and water after completing the work.


Refer to the procedure described under "Deployed Air Bag (Inflator) Module and Activated Seat Belt Pretensioner Disposal" for disposal.

Air Bag Wire Harness and Connector

Air bag wire harness is included in main harness (1), instrument panel harness (2), floor harness (3) and seat harness (4). Air bag wire harness can be identified easily as the part of connector side wire harness is covered with a yellow protection tube. Be very careful when handling it.

- When an open in air bag wire harness, damaged wire harness, connector or terminal is found, replace wire harness, connectors and terminals as an assembly.
- When installing it, be careful so that the air bag wire harness is not caught or does not interfere with other parts.

- Make sure air bag system grounding point (5) is clean and ground is securely fastened for optimum metal-to-metal contact. Poor grounding can cause intermittent problems that are difficult to diagnose.

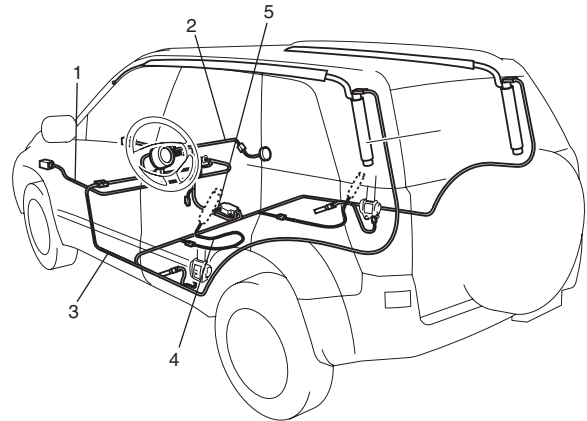

I5JB0A820006-01

Precautions on Disposal of Air Bag and Seat Belt Pretensioner

S6JB0B8200003

Do not dispose of the live (undeployed) air bag (inflator) modules and the live (inactivated) seat belt pretensioners.

When disposal is necessary, be sure to deploy / activate the air bag and seat belt pretensioner according to deployment / activation procedure described in "Air Bag (Inflator) Module and Seat Belt Pretensioner Disposal".

⚠ WARNING

Failure to follow proper air bag (inflator) module and seat belt pretensioner disposal procedures can result in air bag deployment and pretensioner activation which could cause personal injury. Undeployed air bag (inflator) module and inactivated seat belt pretensioner must not be disposed of through normal refuse channels.

The undeployed air bag (inflator) module and inactivated seat belt pretensioner contain substances that can cause severe illness or personal injury if the sealed container is damaged during disposal.

General Description

Air Bag System Construction


S6JB0B8201001

With the air bag system which includes front air bags, side curtain-air bag and side-air bags for both the driver's and passenger's sides as well as the seat belt pretensioners, the sag of the seat belt is taken up (for seat belt with pretensioner), the driver air bag (inflator) module is deployed from the center of the steering column and the passenger air bag (inflator) module from the top of the instrument panel in front of the front passenger seat in occurrence of a front collision with an impact larger than a certain set value to supplement protection offered by the driver and front passenger seat belts.


Side-air bag (inflator) module is deployed from the side of the seat back in occurrence of a sideward collision with an impact larger than a certain set value.

Side curtain-air bag (inflator) module is deployed from the roof side in occurrence of a sideward collision with an impact larger than a certain set value.

The air bag system is designed to activate only in severe frontal and sideward collisions. It is not designed to activate in rear impacts, rollovers, or minor frontal and sideward collisions, since it would offer no protection in those types of accidents.

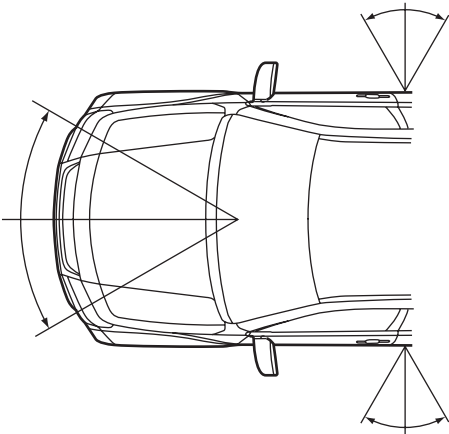

I5JB0A820007-01

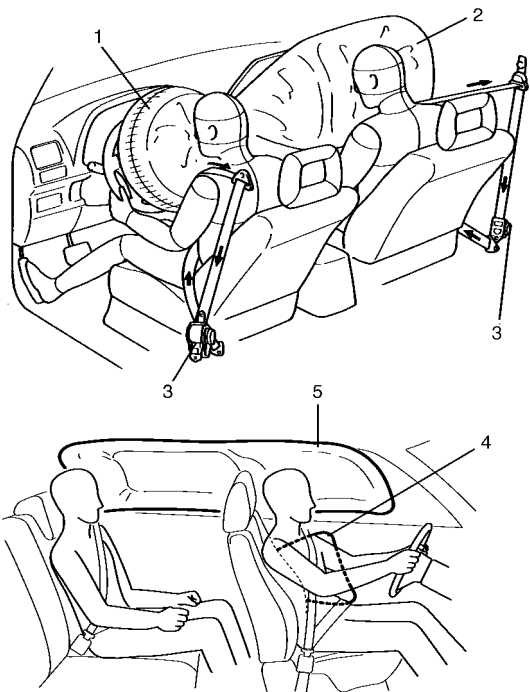

I4RS0B820002-02

1. Driver air bag	4. Side-air bag
2. Passenger air bag	5. Side curtain-air bag
3. Seat belt pretensioner	

Air Bag System Input / Output Table

S6JB0B8201002

There are two types of air bag system of this model

- Consisting of 4 items, i.e., air bags for driver and front passenger and seat belts with pretensioner for driver and front passenger sides
- Consisting of 8 items, i.e., air bags for driver and front passenger, seat belts with pretensioner for driver and front passenger sides, side-air bags for driver and front passenger and curtain-air bags for driver and front passenger sides

The side-air bag and curtain-air bag on the same side deploy at the same time only when an impact is applied to that side. For the details, refer to the table below.

INPUT \ OUTPUT		Driver air bag, Passenger air bag, Seat belt with pretensioner (LH) and Seat belt with pretensioner (RH)	Driver side-air bag and Driver side curtain-air bag	Passenger side-air bag and Passenger side curtain-air bag
Signal from sensor	Sensor in SDM and forward-sensor	○	—	—
	Driver side-sensor	—	○	—
	Passenger side-sensor	—	—	○


I4RS0A820005-01

Schematic and Routing Diagram

Air Bag System Wiring Circuit Diagram

S6JB0B8202001


Air bag system without side-air bag and curtain-air bag

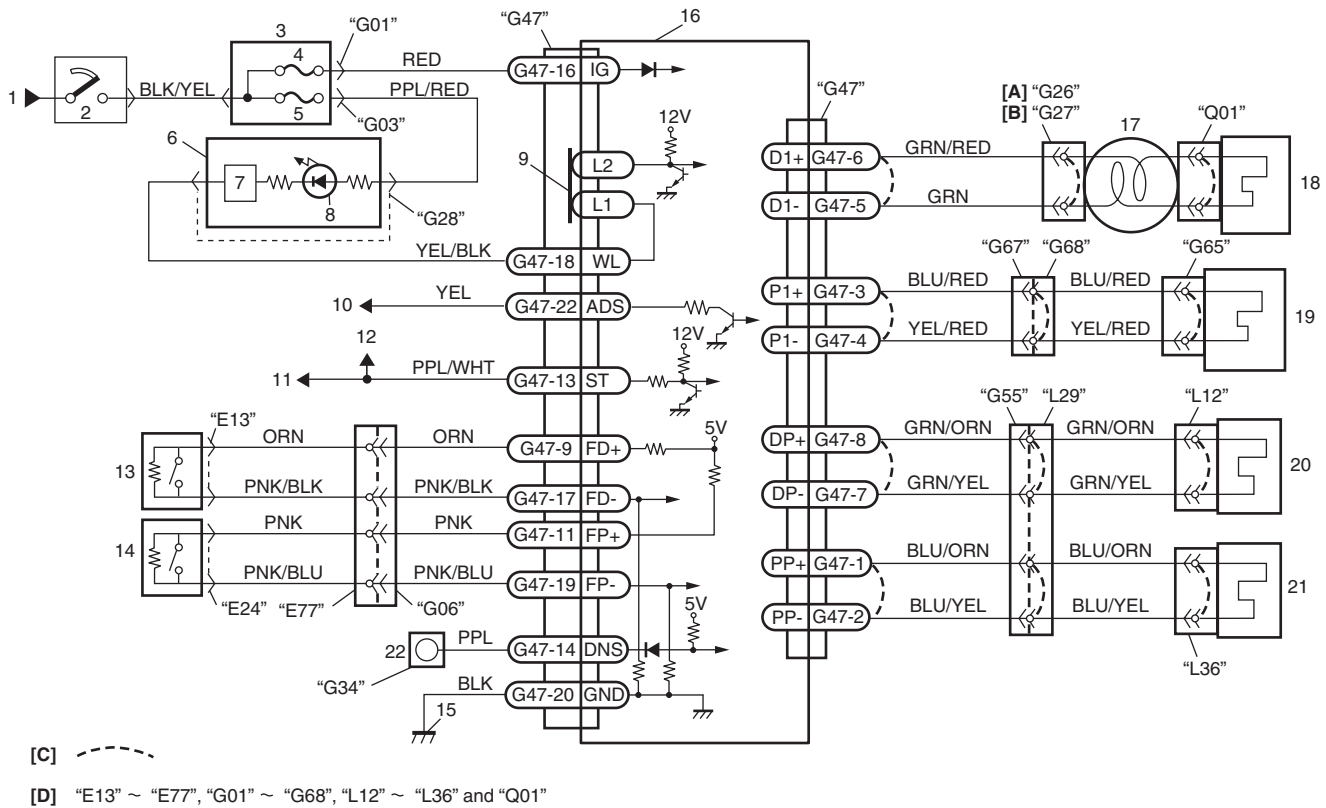

I5JB0A820008-01

[A]: For vehicle without cruise control system	6. Combination meter	15. Ground for air bag system
[B]: For vehicle with cruise control system	7. Light driver	16. SDM
[C]: Shorting bar	8. "AIR BAG" warning light	17. Contact coil
[D]: Connector	9. Connection detection pin	18. Driver air bag (inflator) module
1. To battery	10. To BCM	19. Passenger air bag (inflator) module
2. Ignition switch	11. To data link connector (DLC)	20. Driver seat belt pretensioner
3. Junction block assembly	12. To ECM, TCM, BCM, ABS hydraulic unit / control module assembly and 4WD control module	21. Passenger seat belt pretensioner
4. "A/B" fuse	13. Driver forward-sensor	22. "AIR BAG" monitor coupler (if equipped)
5. "METER" fuse	14. Passenger forward-sensor	

Terminal arrangement of SDM (viewed from harness side)

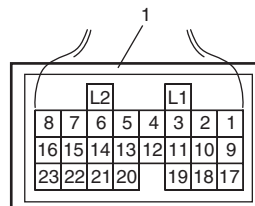

I5JB0A820009-01


1. SDM connector "G47"

Connector "G47" (SDM connector)

Terminal	Terminal symbol	Circuit	Terminal	Terminal symbol	Circuit
G47-1	PP+	Passenger seat belt pretensioner (+)	G47-13	ST	DLC
G47-2	PP-	Passenger seat belt pretensioner (-)	G47-14	DNS	Diagnosis switch
G47-3	P1+	Passenger air bag (+)	G47-15	—	—
G47-4	P1-	Passenger air bag (-)	G47-16	IG	Ignition switch (power source)

Terminal	Terminal symbol	Circuit	Terminal	Terminal symbol	Circuit
G47-5	D1-	Driver air bag (-)	G47-17	FD-	Driver forward-sensor (-)
G47-6	D1+	Driver air bag (+)	G47-18	WL	"AIR BAG" warning light
G47-7	DP-	Driver seat belt pretensioner (-)	G47-19	FP-	Passenger forward-sensor (-)
G47-8	DP+	Driver seat belt pretensioner (+)	G47-20	GND	Ground
G47-9	FD+	Driver forward-sensor (+)	G47-21	—	—
G47-10	—	—	G47-22	ADS	Air bag deployed signal for BCM
G47-11	FP+	Passenger forward-sensor (+)	G47-23	—	—
G47-12	—	—			

Air bag system with side-air bag and curtain-air bag

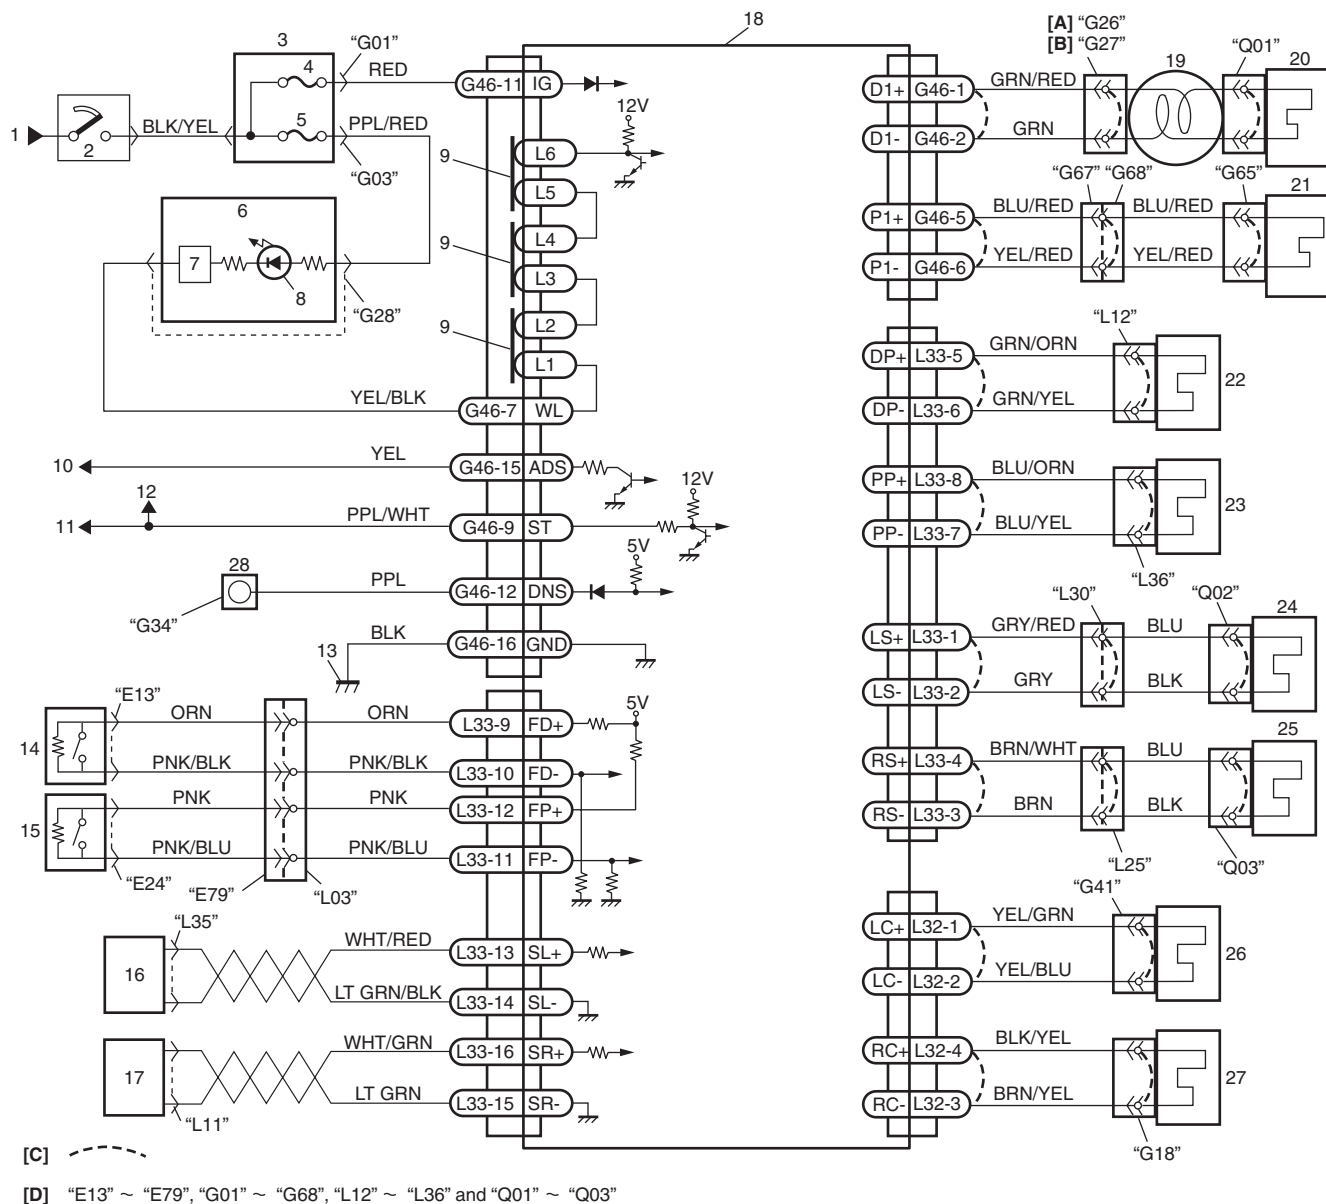


I5JB0A820010-01

[A]: For vehicle without cruise control system	8. "AIR BAG" warning light	19. Contact coil
[B]: For vehicle with cruise control system	9. Connection detection pin	20. Driver air bag (inflator) module
[C]: Shorting bar	10. To BCM	21. Passenger air bag (inflator) module
[D]: Connector	11. To data link connector (DLC)	22. Driver seat belt pretensioner
1. To battery	12. To ECM, TCM, BCM, ABS hydraulic unit / control module assembly and 4WD control module	23. Passenger seat belt pretensioner
2. Ignition switch	13. Ground for air bag system	24. Left side-air bag (inflator) module
3. Junction block assembly	14. Driver forward-sensor	25. Right side-air bag (inflator) module
4. "A/B" fuse	15. Passenger forward-sensor	26. Left side curtain-air bag (inflator) module

8B-10 Air Bag System:

5. "METER" fuse	16. Left side-sensor (LH steering vehicle)	27. Right side curtain-air bag (inflator) module
6. Combination meter	17. Right side-sensor (LH steering vehicle)	28. "AIR BAG" monitor coupler (if equipped)
7. Light driver	18. SDM	

Terminal arrangement of SDM (viewed from harness side)

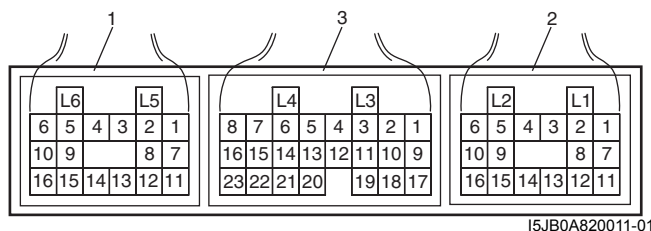

I5JB0A820011-01

1. SDM connector "G46"	3. SDM connector "L33"
2. SDM connector "L32"	

Connector "G46" (SDM connector)


Terminal	Terminal symbol	Circuit	Terminal	Terminal symbol	Circuit
G46-1	D1+	Driver air bag (–)	G46-9	ST	DLC
G46-2	D1–	Driver air bag (+)	G46-10	—	—
G46-3	—	—	G46-11	IG	Ignition switch (power source)
G46-4	—	—	G46-12	DNS	Diagnosis switch
G46-5	P1+	Passenger air bag (+)	G46-13	—	—
G46-6	P1–	Passenger air bag (–)	G46-14	—	—
G46-7	WL	"AIR BAG" warning light	G46-15	ADS	Air bag deployed signal for BCM
G46-8	—	—	G46-16	GND	Ground

Connector "L32" (SDM connector)


Terminal	Terminal symbol	Circuit	Terminal	Terminal symbol	Circuit
L32-1	LC+	Left side curtain-air bag (+)	L32-9	—	—
L32-2	LC–	Left side curtain-air bag (–)	L32-10	—	—
L32-3	RC–	Right side curtain-air bag (–)	L32-11	—	—
L32-4	RC+	Right side curtain-air bag (+)	L32-12	—	—
L32-5	—	—	L32-13	—	—
L32-6	—	—	L32-14	—	—
L32-7	—	—	L32-15	—	—
L32-8	—	—	L32-16	—	—




Connector "L33" (SDM connector)

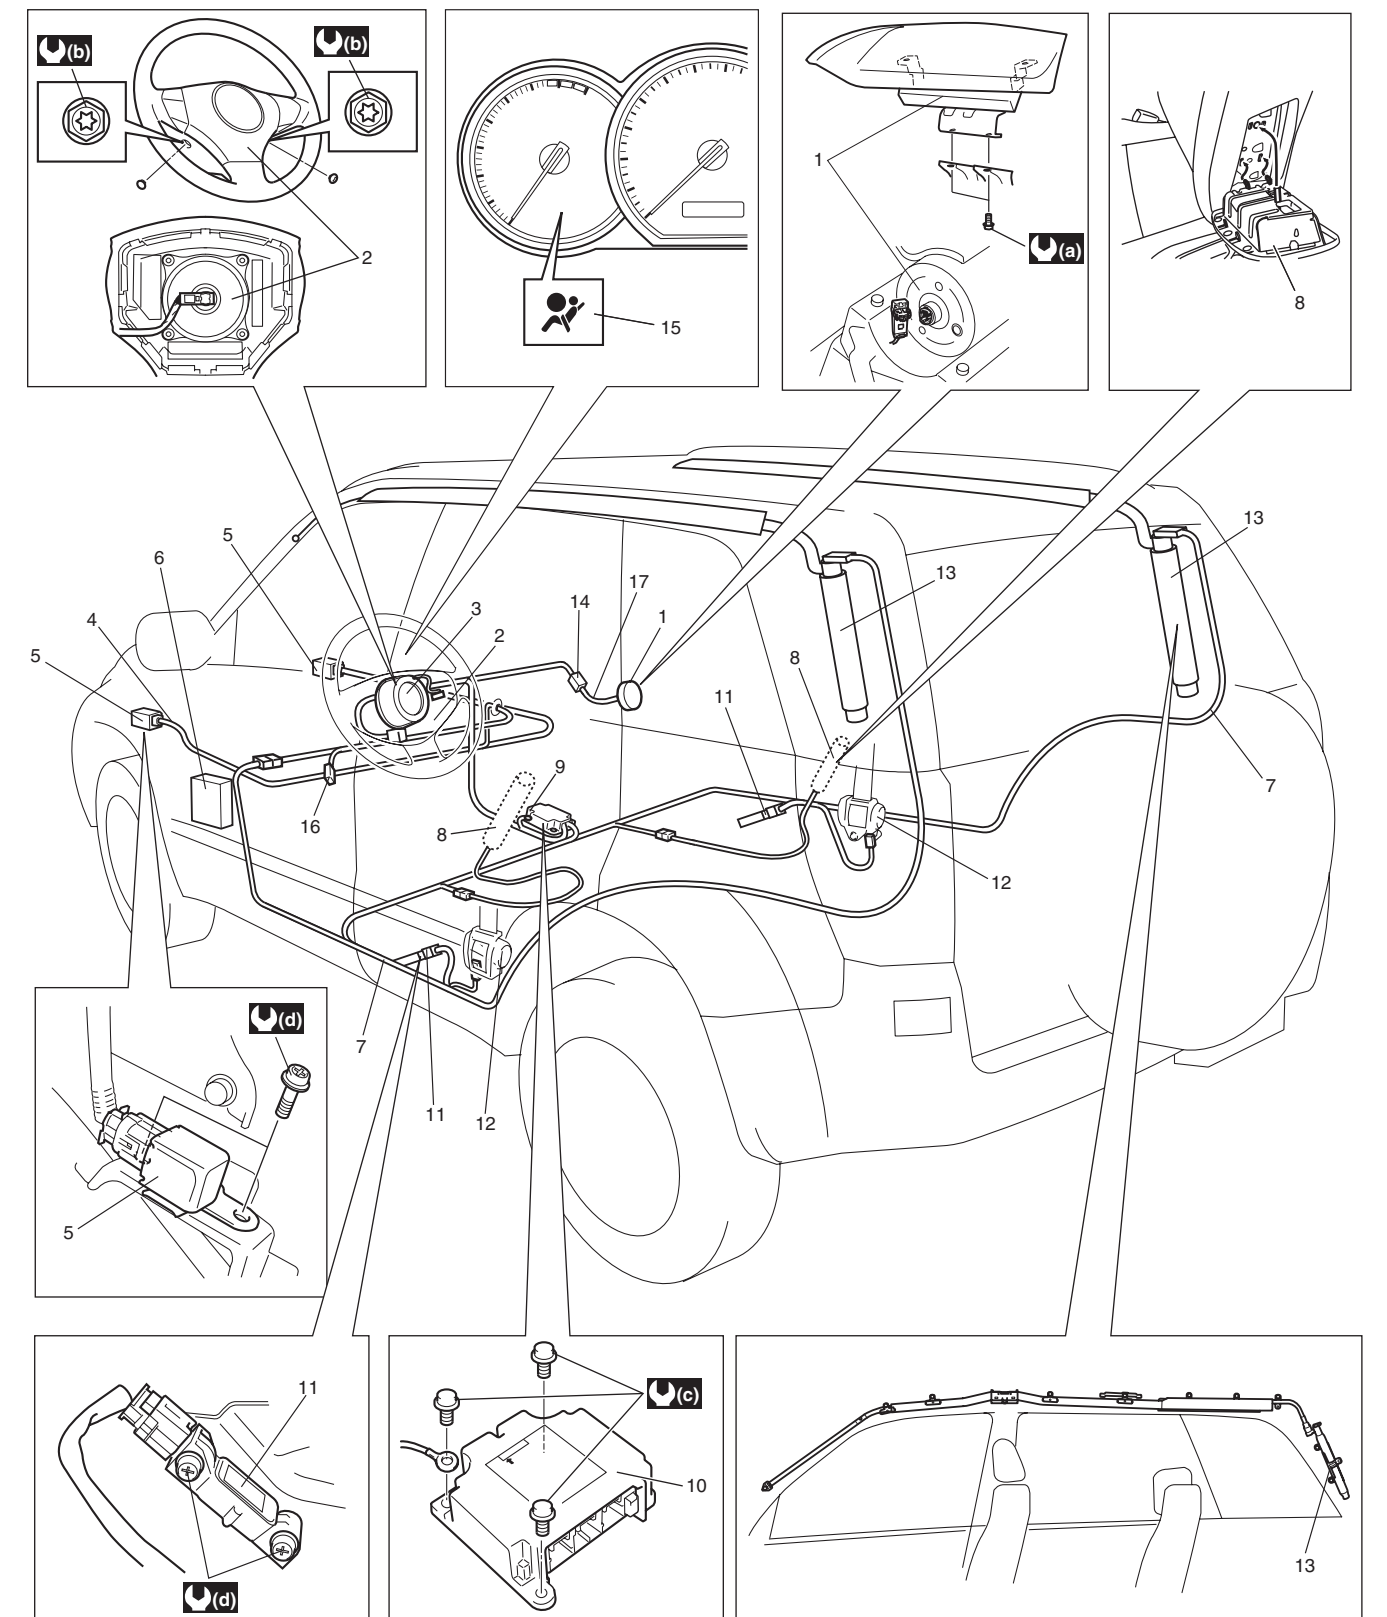Terminal	Terminal symbol	Circuit	Terminal	Terminal symbol	Circuit
L33-1	LS+	Left side-air bag (+)	L33-13	SL+	Left side-sensor (+)
L33-2	LS–	Left side-air bag (–)	L33-14	SL–	Left side-sensor (–)
L33-3	RS–	Right side-air bag (–)	L33-15	SR–	Right side -sensor (–)
L33-4	RS+	Right side-air bag (+)	L33-16	SR+	Right side -sensor (+)
L33-5	DP+	Driver seat belt pretensioner (+)	L33-17	—	—
L33-6	DP–	Driver seat belt pretensioner (–)	L33-18	—	—
L33-7	PP–	Passenger seat belt pretensioner (–)	L33-19	—	—
L33-8	PP+	Passenger seat belt pretensioner (+)	L33-20	—	—
L33-9	FD+	Driver forward-sensor (+)	L33-21	—	—
L33-10	FD–	Driver forward-sensor (–)	L33-22	—	—
L33-11	FP–	Passenger forward-sensor (–)	L33-23	—	—
L33-12	FP+	Passenger forward-sensor (+)			



I5JB0A820012-02

1. Passenger air bag (inflator) module	8. Side-air bag (inflator) module (if equipped)	15. "AIR BAG" warning light
2. Driver air bag (inflator) module	9. Ground for air bag system	16. "AIR BAG" monitor coupler (if equipped)
3. Contact coil assembly	10. SDM	17. Passenger air bag harness
4. Air bag harness in main harness	11. side-sensor (if equipped)	 (a) : 23 N·m (2.3 kgf·m, 16.5 lb·ft)

5. Forward-sensor	12. Seat belt pretensioner	 (b) : 9 N·m (0.9 kgf-m, 6.5 lb-ft)
6. "A/B" fuse in junction block assembly	13. Side curtain-air bag (inflator) module (if equipped)	 (c) : 6 N·m (0.6 kgf-m, 4.5 lb-ft)
7. Air bag harness in floor harness	14. Air bag harness in instrument panel harness	 (d) : 11 N·m (1.1 kgf-m, 8.0 lb-ft)

Diagnostic Information and Procedures

Air Bag Diagnostic System Check

S6JB0B8204001

WARNING

To avoid deployment when troubleshooting the air bag system, do not use electrical test equipment such as a battery powered or AC powered voltmeter, ohmmeter, etc., or any type of electrical equipment other than that specified in this manual. Do not use a non-powered probe type tester. Instructions in this manual must be followed carefully, otherwise personal injury may result.

CAUTION

The order in which DTCs are diagnosed is very important. Failure to diagnose the DTCs in the order specified may result in extended diagnostic time, incorrect diagnosis and incorrect parts replacement.

The diagnostic procedures used are designed to find and repair air bag system malfunctions.

To get the best results, it is important to use the diagnostic flow and follow the sequence in the following.

- 1) Perform the "Air Bag Diagnostic System Check Flow".
(The "Air Bag Diagnostic System Check Flow" must be the starting point of any air bag system diagnosis. The "Air Bag Diagnostic System Check Flow" checks for proper "AIR BAG" warning light operation through "AIR BAG" warning light and whether air bag DTCs exist.)
- 2) Refer to the proper diagnostic flow as directed by the "Air Bag Diagnostic System Check Flow".
(The "Air Bag Diagnostic System Check Flow" will lead you to the correct flow to diagnose any air bag system malfunctions. Bypassing these procedures may result in extended diagnostic time, incorrect diagnosis and incorrect parts replacement.)
- 3) Repeat the "Air Bag Diagnostic System Check Flow" after any repair or diagnostic procedures have been performed.
(Performing the "Air Bag Diagnostic System Check Flow" after all repair or diagnostic procedures will ensure that the repair has been made correctly and that no other malfunctions exist.)

Air Bag Diagnostic System Check Flow

S6JB0B8204002

CAUTION

- Be sure to perform "Air Bag Diagnostic System Check" before starting diagnosis according to each flow.
- When measurement of resistance or voltage is required in the flow, use a tester along with a correct terminal adapter from special tool (Connector test adapter kit).
- When a check for proper connection is required, refer to "Inspection of Intermittent and Poor Connections".
- If an open circuit in the air bag wire harness damaged, connector or terminal is found, replace the wire harness, connectors and terminals as an assembly.

Flow test description

Step 1: Check "AIR BAG" warning light and circuits.

Step 2: Check that "AIR BAG" warning light lights.

Step 3: Check diagnosis switch circuit.

Step 4: Check that "AIR BAG" warning light flashes 6 times after ignition switch is turned ON.

Step 6: Check that history code(s) is in SDM memory. (using SUZUKI scan tool)

Step 7: Check that history code(s) is in SDM memory. (using monitor coupler)

























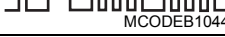

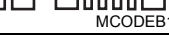

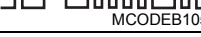

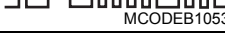

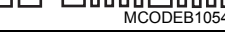

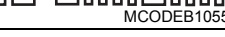

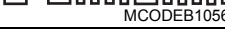

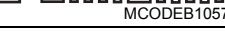

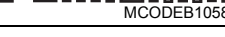

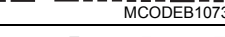

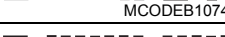

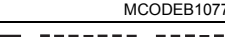

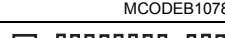

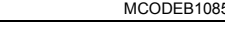
Step 9: Check that current code is in SDM memory. (using SUZUKI scan tool)





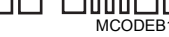










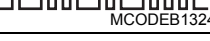

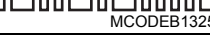

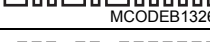

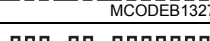
 
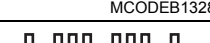

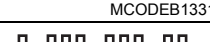

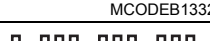

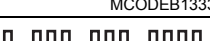
 
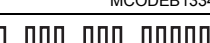
 
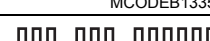
 
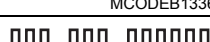
 
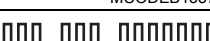
 
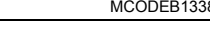
Step 10: Check that current code is in SDM memory. (using monitor coupler)

Step	Action	Yes	No
1	1) Make sure that battery voltage is about 11 V or higher. 2) Note "AIR BAG" warning light as ignition switch is turned ON. <i>Does "AIR BAG" warning light come ON when ignition switch is turned ON?</i>	Go to Step 2.	Proceed to "AIR BAG" Warning Light Does Not Come ON".
2	<i>Does "AIR BAG" warning light come ON steady?</i>	Proceed to "AIR BAG" Warning Light Comes ON Steady".	Go to Step 3.
3	<i>Does "AIR BAG" warning light keep flashing (indicating DTC) when ignition switch is ON?</i>	Proceed to "AIR BAG" Warning Light Flashes".	Go to Step 4.
4	<i>Does "AIR BAG" warning light turn OFF, after flashing 6 times?</i>	"AIR BAG" warning light circuit is in good condition. Go to Step 5.	"AIR BAG" warning light circuit is in good condition. Go to Step 8.
5	<i>Do you have SUZUKI scan tool?</i>	Go to step 6.	Go to step 7.
6	Check DTC referring to "DTC Check" using SUZUKI scan tool. <i>Is "NO CODES" displayed on SUZUKI scan tool?</i>	Air bag system is in good condition.	An intermittent trouble has occurred at some place. Check the connector harness, etc. related to the sensed DTC. Refer to "Inspection of Intermittent and Poor Connections". Then clear DTC (referring to "DTC Clearance".) and repeat this flow.
7	1) Check DTC referring to "DTC Check" using monitor connector (if equipped). <i>Is flashing pattern DTC No. 0000 indicated on "AIR BAG" warning light?</i>	Air bag system is in good condition.	An intermittent trouble has occurred at some place. Check the connector harness, etc. related to the sensed DTC. Refer to "Inspection of Intermittent and Poor Connections". Then clear DTC (referring to "DTC Clearance".) and repeat this flow.
8	<i>Do you have SUZUKI scan tool?</i>	Go to step 9.	Go to step 10.
9	Check DTC referring to "DTC Check" using SUZUKI scan tool. <i>Is "NO CODES" displayed on SUZUKI scan tool?</i>	Substitute a known-good SDM and recheck.	Check and repair according to flow corresponding to that DTC.
10	Check DTC referring to "DTC Check" using monitor connector (if equipped). <i>Is flashing pattern DTC No. 0000 indicated on "AIR BAG" warning light?</i>	Substitute a known-good SDM and recheck.	Check and repair according to flow corresponding to that DTC.

DTC Table

SDM DTC

DTC	“AIR BAG” warning light flashing pattern		Diagnosis		
	No.	Mode			
—	0000	 MCODEB0000-0-01	Normal		—
 B1013	1013	 MCODEB1013-0-01	SDM	SDM fault	Diagnose trouble according to diagnostic flow corresponding to each code No.
 B1016	1016	 MCODEB1016-0-01	Power source voltage	Too high	
 B1017	1017	 MCODEB1017-0-01		Too Low	
 B1021	1021	 MCODEB1021-0-01	SDM	Air bag module exploded	
 B1031	1031	 MCODEB1031-0-01	Driver air bag circuit	Resistance high	
 B1032	1032	 MCODEB1032-0-01		Resistance low	
 B1033	1033	 MCODEB1033-0-01		Short to ground	
 B1034	1034	 MCODEB1034-0-01		Short to power circuit	
 B1041	1041	 MCODEB1041-0-01	Passenger air bag circuit	Resistance high	
 B1042	1042	 MCODEB1042-0-01		Resistance low	
 B1043	1043	 MCODEB1043-0-01		Short to ground	
 B1044	1044	 MCODEB1044-0-01		Short to power circuit	
 B1051	1051	 MCODEB1051-0-01	Driver pretensioner circuit	Resistance high	
 B1052	1052	 MCODEB1052-0-01		Resistance low	
 B1053	1053	 MCODEB1053-0-01		Short to ground	
 B1054	1054	 MCODEB1054-0-01		Short to power circuit	
 B1055	1055	 MCODEB1055-0-01	Passenger pretensioner circuit	Resistance high	
 B1056	1056	 MCODEB1056-0-01		Resistance low	
 B1057	1057	 MCODEB1057-0-01		Short to ground	
 B1058	1058	 MCODEB1058-0-01		Short to power circuit	
 B1073	1073	 MCODEB1073-0-01	Driver forward-sensor circuit	Short to ground	
 B1074	1074	 MCODEB1074-0-01		Short to power circuit or open	
 B1077	1077	 MCODEB1077-0-01	Passenger forward-sensor circuit	Short to ground	
 B1078	1078	 MCODEB1078-0-01		Short to power circuit or open	
 B1085	1085	 MCODEB1085-0-01	Side-sensor	Wrong assembly	


DTC	“AIR BAG” warning light flashing pattern		Diagnosis		
	No.	Mode			
 B1086	1086	 MCODEB1086-0-01	Left side-sensor	Performance problem	Diagnose trouble according to diagnostic flow corresponding to each code No.
 B1087	1087	 MCODEB1087-0-01		Communication error	
 B1096	1096	 MCODEB1096-0-01	Right side-sensor	Performance problem	
 B1097	1097	 MCODEB1097-0-01		Communication error	
 B1321	1321	 MCODEB1321-0-01	Left side-air bag	Resistance high	
 B1322	1322	 MCODEB1322-0-01		Resistance low	
 B1323	1323	 MCODEB1323-0-01		Short to ground	
 B1324	1324	 MCODEB1324-0-01		Short to power circuit	
 B1325	1325	 MCODEB1325-0-01	Right side-air bag	Resistance high	
 B1326	1326	 MCODEB1326-0-01		Resistance low	
 B1327	1327	 MCODEB1327-0-01		Short to ground	
 B1328	1328	 MCODEB1328-0-01		Short to power circuit	
 B1331	1331	 MCODEB1331-0-01	Left side curtain-air bag circuit	Resistance high	
 B1332	1332	 MCODEB1332-0-01		Resistance low	
 B1333	1333	 MCODEB1333-0-01		Short to ground	
 B1334	1334	 MCODEB1334-0-01		Short to power circuit	
 B1335	1335	 MCODEB1335-0-01	Right side curtain-air bag circuit	Resistance high	
 B1336	1336	 MCODEB1336-0-01		Resistance low	
 B1337	1337	 MCODEB1337-0-01		Short to ground	
 B1338	1338	 MCODEB1338-0-01		Short to power circuit	

DTC Check

S6JB0B8204004

Using SUZUKI Scan Tool


- 1) Turn ignition switch to OFF position.
 - 2) Connect SUZUKI scan tool to data link connector (DLC) located on underside of instrument panel at driver's seat side.
- Special tool**
(A): SUZUKI scan tool
- 3) Turn ignition switch to ON position.
 - 4) Read DTC according to instructions displayed on SUZUKI scan tool and print it or write it down. Refer to SUZUKI scan tool operator's manual for further details.
- If communication between scan tool and SDM is not possible, check if scan tool is communicable by connecting it to SDM in another vehicle. If communication is possible in this case, scan tool is in good condition. Then check data link connector and serial data line (circuit) in the vehicle with which communication was not possible.
- 5) After completing the check, turn ignition switch to OFF position and disconnect SUZUKI scan tool from data link connector (DLC) (1).

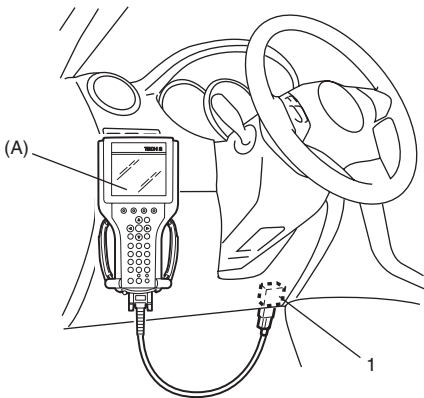

I5JB0A820013-01


Using Monitor Connector (If Equipped)

- 1) Using service wire (3), ground diagnosis switch terminal (2) in "AIR BAG" monitor coupler (1).
 - 2) Read DTC from flashing pattern of malfunction indicator lamp ("AIR BAG" warning light) Referring to "DTC Table".
- If light does not indicate DTC, proceed to "AIR BAG" Warning Light Cannot Indicate Flashing Pattern of DTC (If Equipped with "AIR BAG" Monitor Coupler)".
- 3) After completing the check, turn ignition switch to OFF position and disconnect service wire from "AIR BAG" monitor coupler.

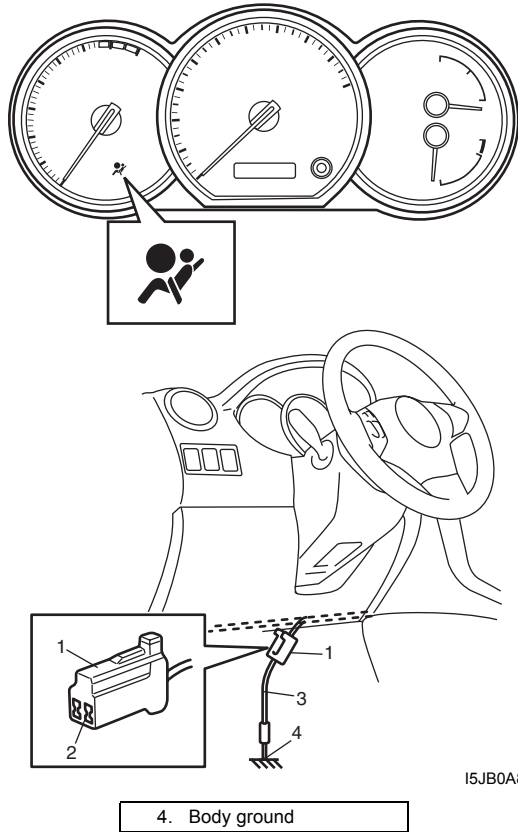

I5JB0A820014-02

Example: When driver air bag initiator circuit resistance high (DTC B1031) is set

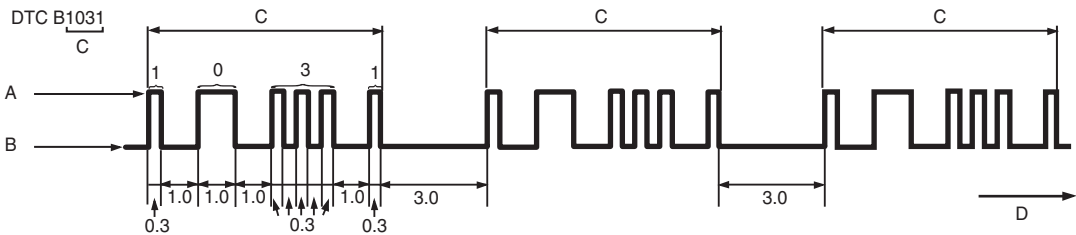

I5JB0A820015-01

A: "AIR BAG" warning light is turned ON	C: Code No.1031
B: "AIR BAG" warning light is turned OFF	D: Time (sec.)

DTC Clearance


S6JB0B8204005

Using SUZUKI Scan Tool

- 1) Turn ignition switch to OFF position.
- 2) Connect SUZUKI scan tool to data link connector (DLC) (1) in the same manner as when making this connection for DTC check.

Special tool

(A): SUZUKI scan tool

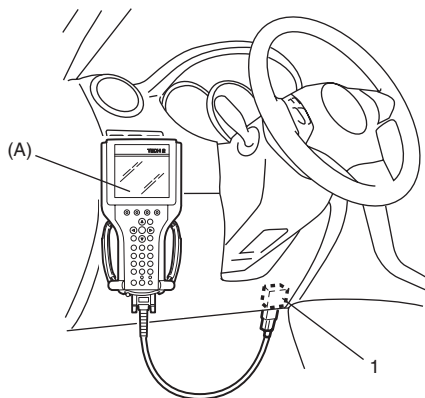

I5JB0A820013-01




- 3) Turn ignition switch to ON position.
- 4) Erase DTC according to instructions displayed on SUZUKI scan tool. Refer to SUZUKI scan tool operator's manual for further details.
- 5) After completing the clearance, perform "DTC Check" and confirm that normal DTC (NO CODES) is displayed and not malfunction DTC.
- 6) Turn ignition switch to OFF position and disconnect SUZUKI scan tool from DLC.

NOTE

If DTC B1013 or B1021 is stored in SDM, it is not possible to clear DTC.

Using Monitor Connector (If Equipped)

- 1) Turn ignition switch to ON position and wait about 6 seconds or more.
- 2) Using service wire (4), repeat shorting and opening between diagnosis switch terminal (3) on "AIR BAG" monitor coupler (1) and body ground (2) 5 times at about 1 second intervals within 10 seconds.

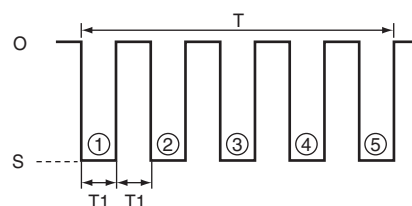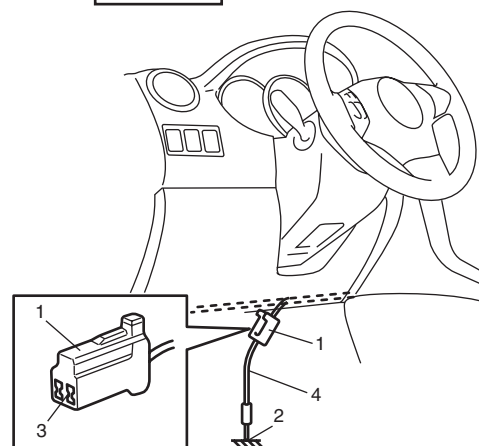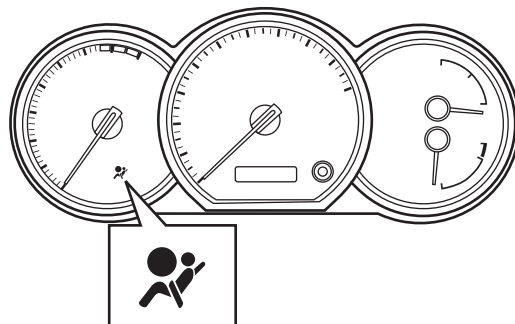

I5JB0A820016-01

O: Open	T: Max, 10 seconds
S: Short	T1: About 1 sec.

- 3) Perform "DTC Check" and confirm that normal DTC (NO. 0000) is displayed and not malfunction DTC.

NOTE

If DTC B1013 or B1021 is stored in SDM, it is not possible to clear all DTC.

Scan Tool Data

S6JB0B8204006

Data list of SDM

Scan Tool Data	Normal Condition / Reference Value
Battery volt	10 – 14 V
Back up volt	27.0 – 33.0 V
System ID	4ch or 8ch
Driv A/B Ini Res	2.1 – 3.8 ohm
Pass A/B Ini Res	1.8 – 2.8 ohm
Driv Pret Ini Res	1.8 – 2.9 ohm
Pass Pret Ini Res	1.8 – 2.9 ohm
LH Side Ini Res	1.8 – 2.6 ohm
RH Side Ini Res	1.8 – 2.6 ohm
LH Curtain Ini Res	1.8 – 2.8 ohm
RH Curtain Ini Res	1.8 – 2.8 ohm

Scan Tool Data Definition

Back Up Volt (V): This parameter indicates the capacity of the backup condenser installed to maintain the ignition current (as much as possible) even when the power supply to SDM that ignites the inflator is shut off.

Battery Volt (V): Battery voltage is an analog input signal read by SDM.

System ID (4ch/8ch): This parameter indicates the number of initiator circuits.

Driv A/B Ini Res (Driver air bag initiator resistance) (ohm): This parameter indicates the resistance of the driver air bag initiator circuit.

Pass A/B Ini Res (Passenger air bag initiator resistance) (ohm): This parameter indicates the resistance of the passenger air bag initiator circuit.

Driv Pret Ini Res (Driver pretensioner initiator resistance) (ohm): This parameter indicates the resistance of the driver seat belt pretensioner initiator circuit.

Pass Pret Ini Res (Passenger pretensioner initiator resistance) (ohm): This parameter indicates the resistance of the passenger seat belt pretensioner initiator circuit.

LH Side Ini Res (Left side-air bag initiator resistance) (ohm): This parameter indicates the resistance of the left side-air bag initiator circuit.

RH Side Ini Res (Right side-air bag initiator resistance) (ohm): This parameter indicates the resistance of the right side-air bag initiator circuit.


LH Curtain Ini Res (Left side curtain-air bag initiator resistance) (ohm): This parameter indicates the resistance of the left side curtain-air bag initiator circuit.

RH Curtain Ini Res (Right side curtain-air bag initiator resistance) (ohm): This parameter indicates the resistance of the right side curtain-air bag initiator circuit.

“AIR BAG” Warning Light Comes ON Steady

S6JB0B8204007

Wiring Diagram

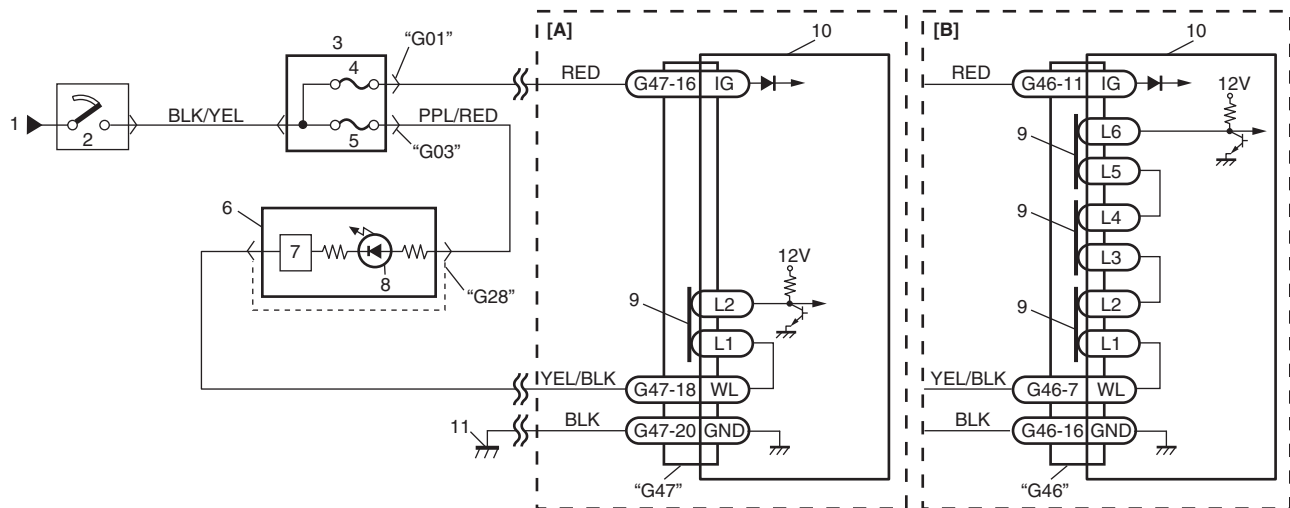

15JB0A820017-01

[A]: Without side-air bag and curtain-air bag	3. Junction block assembly	7. Light driver	11. Ground for air bag system
[B]: With side-air bag and curtain-air bag	4. "A/B" fuse	8. "AIR BAG" warning light	
1. From main fuse	5. "METER" fuse	9. Connection detection pin	
2. Ignition switch	6. Combination meter	10. SDM	


⚠ CAUTION

Be sure to observe instructions under CAUTION in "Air Bag Diagnostic System Check Flow".

Flow Test Description**Step 1:** Check for “AIR BAG” fuse blown.**Step 2:** Check for loose connection between junction block assembly connector and junction block assembly.**Step 3:** Check for loose connection between SDM connector and SDM.**Step 4:** Check for SDM power supply circuit.**Step 5:** Check for open or short circuit between “AIR BAG” warning light circuit and ground.**Troubleshooting**

Step	Action	Yes	No
1	1) Turn ignition switch OFF. 2) Remove and inspect “A/B” fuse. <i>Is fuse good?</i>	Go to Step 2.	“RED” wire short to ground. After repair, replace “A/B” fuse.
2	1) Check for loose connection of junction block assembly connector “G01”. <i>Is it connected securely?</i>	Go to Step 3.	Correct connector “G01” securely.
3	Check for loose connection of SDM connector “G47” or “G46”. <i>Is it connected securely?</i>	Go to Step 4.	Correct connector “G47” or “G46” securely.
4	1) Disconnect SDM connector “G47” or “G46”. 2) Check proper connection to SDM at terminal “G47-16” or “G46-11”. 3) If OK, then check voltage between “G47-16” terminal [A] or “G46-11” terminal [B] of SDM connector and body ground with ignition switch ON. Special tool (A): 09932-76010 <div data-bbox="373 1113 779 1501"> <p>[A]</p> <p>[B]</p> <p>“G47-16”</p> <p>“G46-11”</p> <p>(A)</p> </div> <p>I5JB0A820018-01</p> <p><i>Is it 8 V or more?</i></p>	Go to Step 5.	“RED” wire (between “A/B” fuse and SDM connector) open or “BLK/YEL” wire (between ignition switch and “A/B” fuse) open or short to ground.

8B-20 Air Bag System:

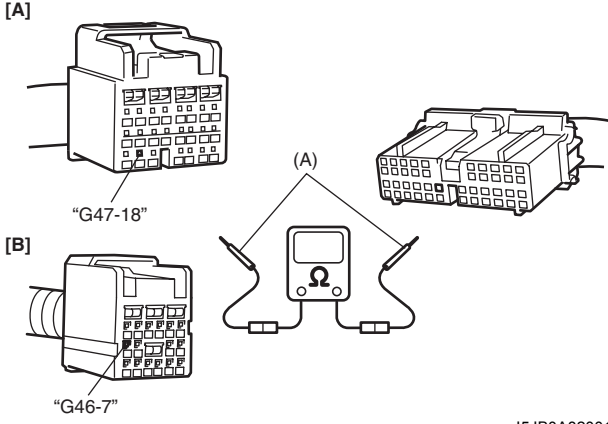Step	Action	Yes	No
5	<p>1) Disconnect combination meter connector "G28" referring to "Combination Meter Removal and Installation in Section 9C".</p> <p>2) Check proper connection to combination meter at "YEL/BLK" terminal for "AIR BAG" warning light and to SDM at terminal "G47-18" or "G46-7".</p> <p>3) If OK, then check resistance between "YEL/BLK" wire terminal of combination meter connector "G28" and "G47-18" terminal [A] or "G46-7" terminal [B] of SDM connector.</p> <p>Special tool (A): 09932-76010</p>  <p>Is resistance 1 Ω or less?</p>	Substitute a known-good SDM and recheck. If "AIR BAG" warning light remain lighting, replace combination meter.	"YEL/BLK" wire (between combination meter and SDM connector) open or short to ground.

15JB0A820019-01

NOTE

Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components and ensure all components are properly mounted.
- Repeat "Air Bag Diagnostic System Check" to confirm that the trouble has been corrected.

“AIR BAG” Warning Light Does Not Come ON**Wiring Diagram**

Refer to ““AIR BAG” Warning Light Comes ON Steady”.

⚠ CAUTION

Be sure to observe instructions under CAUTION in “Air Bag Diagnostic System Check Flow”.

Flow Test Description

Step 1: Check combination meter power feed circuit.

Step 2: Check “AIR BAG” warning light circuit.

Troubleshooting

Step	Action	Yes	No
1	1) Set parking brake. 2) Note combination meter when ignition switch is turned ON. <i>Does the “BRAKE” indicator (warning light) come ON?</i>	Go to Step 2.	Check and correct the following possible cause. • Open circuit in “BLK/YEL” or “PPL/RED” wire. • Short circuit between “BLK/YEL” or “PPL/RED” and ground. • “METER” fuse blown.
2	1) Disconnect SDM connector “G46” or “G47”. 2) Note combination meter when ignition switch is turned ON. <i>Does the “AIR BAG” warning light come ON?</i>	Substitute a known-good SDM and recheck.	“YEL/BLK” circuit shorted to power circuit. If OK, replace combination meter.

NOTE

Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components and ensure all components are properly mounted.
- Repeat “Air Bag Diagnostic System Check” to confirm that the trouble has been corrected.

- **Reconnect all air bag system components and ensure all components are properly mounted.**
- **Repeat “Air Bag Diagnostic System Check” to confirm that the trouble has been corrected.**

“AIR BAG” Warning Light Cannot Indicate Flashing Pattern of DTC (If Equipped with “AIR BAG” Monitor Coupler)

S6JB0B8204010

Wiring Diagram

Refer to ““AIR BAG” Warning Light Flashes”.

⚠ CAUTION

Be sure to observe instructions under CAUTION in “Air Bag Diagnostic System Check Flow”.

Flow Test Description

Step 1: Check “AIR BAG” monitor coupler.

Step 2: Check for open circuit in air bag diagnosis switch circuit.

Troubleshooting

Step	Action	Yes	No
1	Inspect connection between diagnostic switch terminal on “AIR BAG” monitor coupler and body ground with service wire. <i>Are they connected securely with service wire?</i>	Go to Step 2.	Properly connect diagnostic switch terminal on “AIR BAG” monitor coupler and body ground with service wire.
2	1) Disconnect SDM connector from SDM. 2) Check for proper connection at “PPL” wire (“G47-14” terminal or “G46-12” terminal of SDM connector and “G34-2” terminal of “AIR BAG” monitor coupler (1)) terminals. 3) If OK, then measure resistance between “G47-14” terminal [A] or “G46-12” terminal [B] and “G34-2” terminal. Special tool (A): 09932-76010 <p style="text-align: center;">I5JB0A820021-02</p> <i>Is resistance 1 Ω or more?</i>	Check “PPL” wire terminals. If OK, repair high resistance or open in “PPL” wire circuit.	Substitute a known good SDM and recheck.

NOTE

Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components and ensure all components are properly mounted.
- Repeat “Air Bag Diagnostic System Check” to confirm that the trouble has been corrected.

DTC B1013: SDM fault

S6JB0B8204011

DTC Will Set when

An internal SDM fault is detected by SDM.

NOTE

DTC B1013 can never be cleared once it has been set.


DTC Troubleshooting

- 1) Turn ignition switch OFF.
- 2) Replace SDM.
- 3) Repeat “Air Bag Diagnostic System Check”.

DTC B1016: Power Source Voltage High

S6JB0B8204012

Wiring Diagram

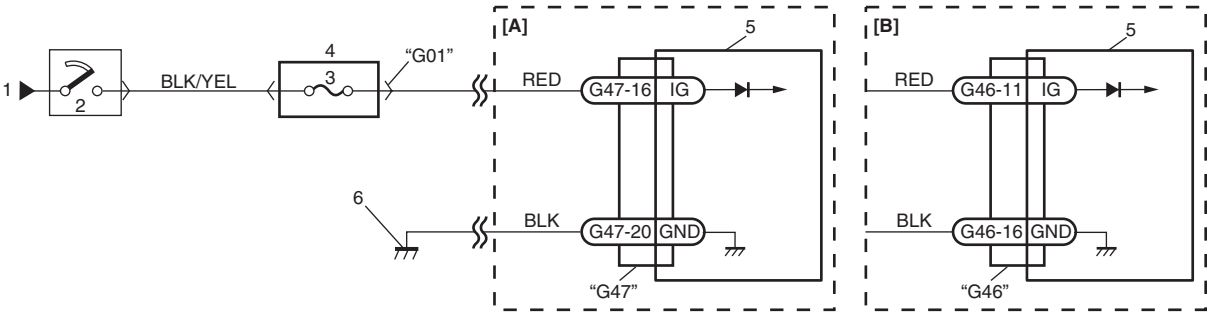

I5JB0A820022-01

[A]: Without side-air bag and curtain air bag	1. From main fuse	3. "A/B" fuse	5. SDM
[B]: With side-air bag and curtain air bag	2. Ignition switch	4. Junction block assembly	6. Ground for air bag system

⚠ CAUTION

Be sure to observe instructions under CAUTION in “Air Bag Diagnostic System Check Flow”.

DTC Will Set when


The power source voltage to SDM is above specified value for specified time.

Flow Test Description

Step 1: Check if voltage applied to SDM is within normal range.

Step 2: Check if DTC B1016 still exists.

DTC Troubleshooting

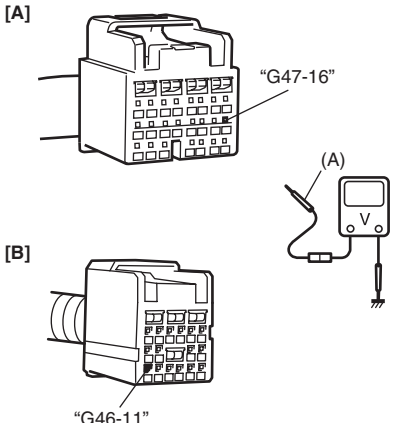Step	Action	Yes	No
1	<p>1) With ignition switch OFF, disconnect SDM connector.</p> <p>2) Check proper connection to SDM at "G47-16" or "G46-11" terminal.</p> <p>3) If OK, turn ignition switch ON and then check voltage between "G47-16" [A] or "G46-11" [B] terminal on SDM connector and body ground.</p> <p>Special tool (A): 09932-76010</p>  <p>I5JB0A820023-01</p> <p><i>Is voltage 14 V or less?</i></p>	Go to Step 2.	Check charging system and repair as necessary referring to "Generator Test (Overcharged Battery Check) in Section 1J".
2	<p>1) With ignition switch OFF, reconnect SDM connector.</p> <p><i>With ignition switch ON, is DTC B1016 indicated?</i></p>	Substitute a known-good SDM and recheck.	Intermittent trouble. Check for intermittent trouble referring to "Inspection of Intermittent and Poor Connections" If OK, substitute a known-good SDM and recheck.

NOTE

Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components and ensure all components are properly mounted.
- Clear DTCs referring to "DTC Clearance", if any.
- Repeat "Air Bag Diagnostic System Check" to confirm that the trouble has been corrected.

DTC B1017: Power Source Voltage Low

S6JB0B8204013

Wiring Diagram

Refer to “DTC B1016: Power Source Voltage High”.

⚠ CAUTION

Be sure to observe instructions under CAUTION in “Air Bag Diagnostic System Check Flow”.


DTC Will Set when


The power source voltage is below specified value for specified time.

Flow Test Description

- Step 1: Check if voltage on battery is within normal range.
- Step 2: Check if voltage applied to SDM is within normal range.
- Step 3: Check if voltage applied to “L04” connector is within normal range.
- Step 4: Check if DTC B1017 still exists.

DTC Troubleshooting

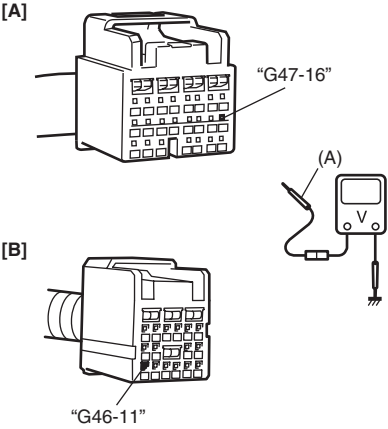Step	Action	Yes	No
1	1) Measure voltage on battery. <i>Is voltage 11 V or more?</i>	Go to Step 2.	Check charging system and repair as necessary referring to “Generator Test (Undercharged Battery Check) in Section 1J”.
2	1) With ignition switch OFF, disconnect SDM connector. 2) Check proper connection to SDM at “G47-16” or “G46-11” terminal. 3) If OK, turn ignition switch ON and then check voltage between “G47-16” [A] or “G46-11” [B] terminal on SDM connector and body ground. Special tool (A): 09932-76010 <div>  </div> <i>Is voltage 8 V or more?</i>	Go to Step 4.	Go to Step 3.

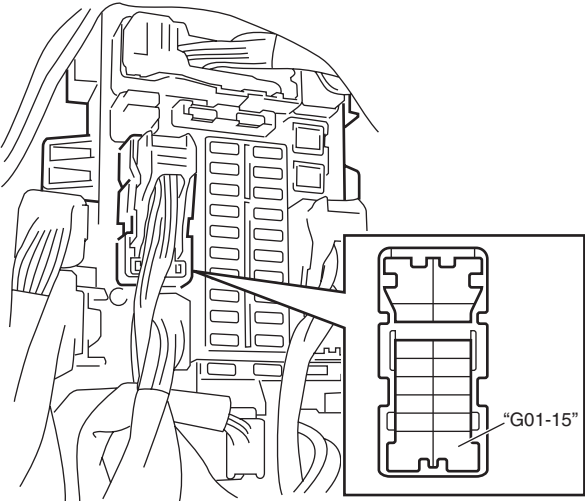Step	Action	Yes	No
3	<p>1) With ignition switch OFF, disconnect on connector "G01" junction block assembly.</p> <p>2) Check proper connection at "G01-15" terminal.</p> <p>3) If OK, turn ignition switch ON and then check voltage between "G01-15" terminal and body ground.</p>  <p>I5JB0A820024-01</p> <p><i>Is voltage 8 V or more?</i></p>	Go to Step 4.	Check circuit from battery to "G01" connector and charging system.
4	<p>1) With ignition switch OFF, reconnect SDM connector.</p> <p><i>With ignition switch ON, does DTC B1017 exist?</i></p>	Substitute a known-good SDM and recheck.	Check charging system and repair as necessary referring to "Generator Test (Undercharged Battery Check) in Section 1J".

NOTE

Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components and ensure all components are properly mounted.
- Clear DTCs referring to "DTC Clearance", if any.
- Repeat "Air Bag Diagnostic System Check" to confirm that the trouble has been corrected.

DTC B1021: Air Bag Module Deployed**DTC Will Set when**

The SDM detects a crash of sufficient force to warrant activation of the air bag system. (SDM outputs a deployment command.)

Flow Test Description

Step 1: Check that DTC B1021 has been set although air bag has not been deployed.

Step 2: Check that DTC has been set due to failure of SDM.

NOTE

Before executing items in this flow, be sure to perform “Air Bag Diagnostic System Check”.

DTC Troubleshooting

Step	Action	Yes	No
1	1) Turn ignition switch OFF. <i>Has air bag deployed?</i>	Replace components and perform inspections as directed in “Repair and Inspection Required after Accident”.	Go to Step 2.
2	1) Inspect front of vehicle and undercarriage for signs of impact. <i>Are there signs of impact?</i>	Replace components and perform inspections as directed in “Repair and Inspection Required after Accident”.	Substitute a known-good SDM and recheck.


NOTE

Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components and ensure all components are properly mounted.
- Repeat “Air Bag Diagnostic System Check” to confirm that the trouble has been corrected.
- Clear DTCs of BCM referring to “DTC Clearance in Section 10B”

DTC B1031: Driver Air Bag Initiator Circuit Resistance High

S6JB0B8204015

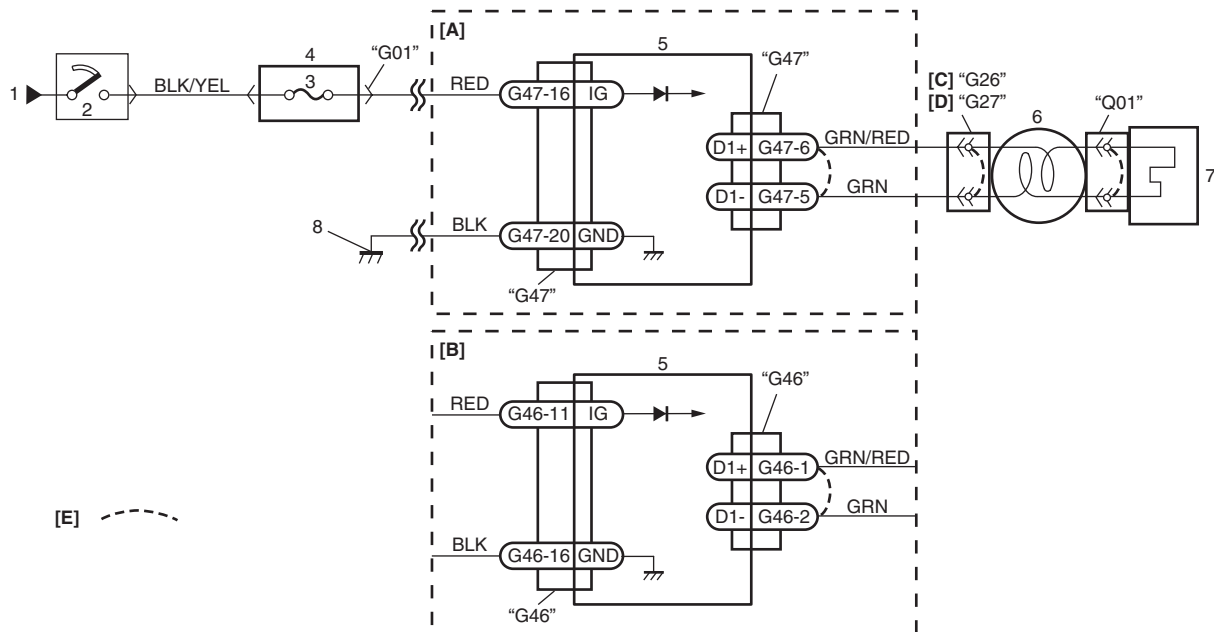Wiring Diagram

I5JB0A820025-01

[A]: Without side-air bag and curtain-air bag	[E]: Shorting bar	4. Junction block assembly	8. Ground for air bag system
[B]: With side-air bag and curtain-air bag	1. From main fuse	5. SDM	
[C]: For vehicle without cruise control system	2. Ignition switch	6. Contact coil assembly	
[D]: For vehicle with cruise control system	3. "A/B" fuse	7. Driver air bag (inflator) module	

⚠ CAUTION

Be sure to observe instructions under CAUTION in "Air Bag Diagnostic System Check Flow".

DTC Will Set when

The combined resistance of the driver air bag (inflator) module, contact coil assembly, harness wiring and connector terminal contact is above a specified value for specified time.



Flow Test Description


Step 1: Check whether malfunction is in contact coil and driver air bag (inflator) module or the others.

Step 2: Check driver air bag (inflator) module initiator circuit.


Step 3: Check whether malfunction is in contact coil or driver air bag (inflator) module.

DTC Troubleshooting

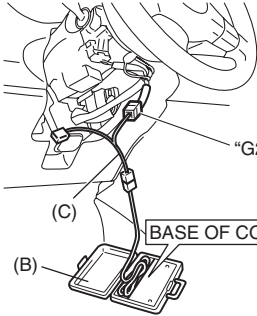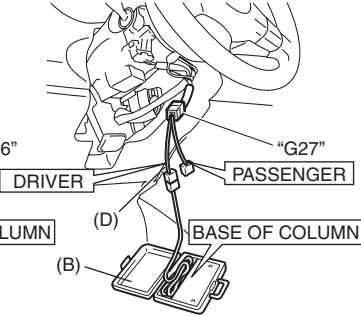Step	Action	Yes	No
1	<div> 1) With ignition switch OFF, disconnect contact coil connector located under of the steering column. 2) Check proper connection to contact coil at terminal in “G26” or “G27” connector. 3) If OK, then connect special tools (B) and (C) to “G26” connector (For vehicle without cruise control system [A]) or special tools (B) and (D) to “G27” connector (for vehicle with cruise control system [B]) disconnected in Step 1). <div> <div>Special tool</div> <div>(B): 09932-75010</div> <div>(C): 09932-78340</div> <div>(D): 09932-77320</div> </div> <div> <div> <div> <div>[A]</div>  </div> <div> <div> <div>[B]</div>  </div> </div> <div>I5JB0A820026-02</div> </div> <div> 4) Check SDM DTC. <div>With ignition switch ON, is DTC B1031 indicated?</div> </div> </div> </div>	Go to Step 2.	Go to Step 3.

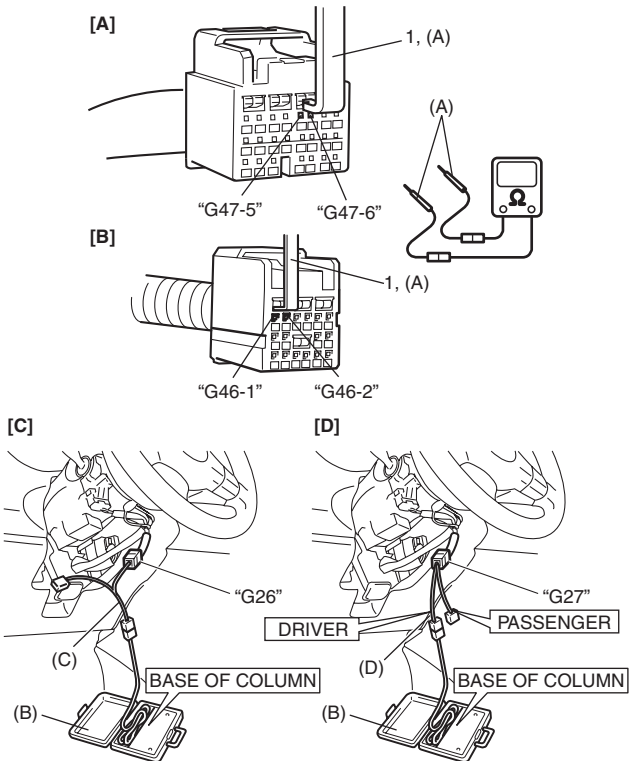Step	Action	Yes	No
2	<p>1) With ignition switch OFF, disconnect SDM connector "G47" or "G46".</p> <p>2) Check proper connection to SDM at terminals "G47-5" and "G47-6" or "G46-1" and "G46-2".</p> <p>3) If OK, release shorting bar in SDM connector inserting release tool (1) included in special tool (A).</p> <p>4) Measure resistance between "G47-5" and "G47-6" terminals [A] or between "G46-1" and "G46-2" terminals [B] with connected special tools (B) and (C) (for vehicle without cruise control system [C]) or special tools (B) and (D) (for vehicle with cruise control system [D]).</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-78340 (D): 09932-77320</p>  <p>I5JB0A820027-02</p> <p><i>Is resistance 5.5 Ω or less?</i></p>	Substitute a known-good SDM and recheck.	High resistance or open wire in "GRN/RED" or "GRN" circuit.

8B-32 Air Bag System:

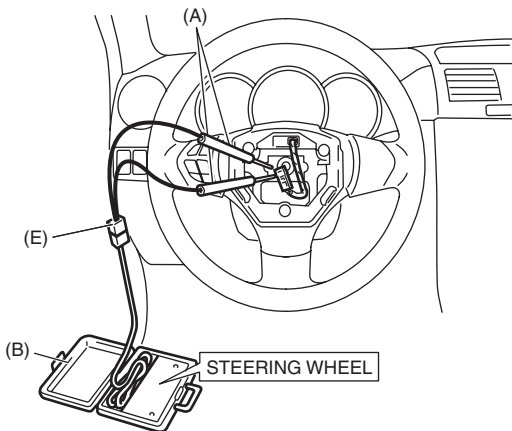Step	Action	Yes	No
3	<p>1) With ignition switch OFF, disconnect special tools (B) and (C) or (D) from "G26" or "G27" connector and then reconnect contact coil connector located under of the steering column.</p> <p>2) Remove driver air bag (inflator) module from steering wheel referring to "Driver Air Bag (Inflator) Module Removal and Installation".</p> <p>3) Check proper connection to driver air bag (inflator) module connector.</p> <p>4) If OK, then connect special tools (A), (B) and (E) to driver air bag (inflator) module connector.</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-78340 (D): 09932-77320 (E): 09932-78310</p>  <p>5) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1031 indicated?</i></p>	<p>Turn ignition switch OFF. Replace contact coil assembly referring to "Contact Coil Cable Assembly Removal and Installation in Section 6B".</p>	<p>Turn ignition switch OFF. Replace driver air bag (inflator) module referring to "Driver Air Bag (Inflator) Module Removal and Installation".</p>

NOTE

Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components and ensure all components are properly mounted.
- Clear DTCs referring to "DTC Clearance", if any.
- Repeat "Air Bag Diagnostic System Check" to confirm that the trouble has been corrected.

DTC B1032: Driver Air Bag Initiator Circuit Resistance Low**Wiring Diagram**

Refer to “DTC B1031: Driver Air Bag Initiator Circuit Resistance High”.

⚠ CAUTION

Be sure to observe instructions under CAUTION in “Air Bag Diagnostic System Check Flow”.

DTC Will Set when

The combined resistance of the driver air bag (inflator) module, contact coil assembly, harness wiring and connector terminal contact is below a specified value for specified time.


Flow Test Description

Step 1: Check whether malfunction is in contact coil and driver air bag (inflator) module or the others.


Step 2: Check driver air bag (inflator) module initiator circuit.


Step 3: Check whether malfunction is in contact coil or driver air bag (inflator) module.

DTC Troubleshooting

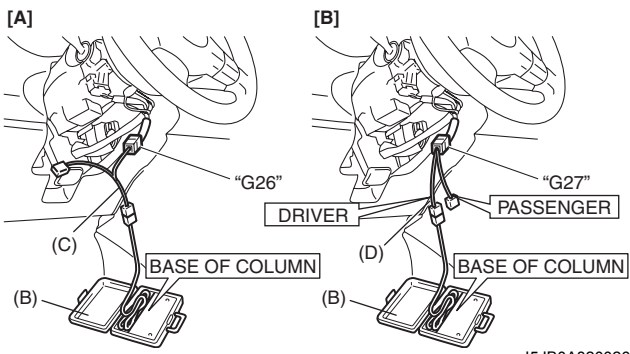Step	Action	Yes	No
1	<p>1) With ignition switch OFF, disconnect contact coil connector located under of the steering column.</p> <p>2) Check proper connection to contact coil at terminal in “G26” or “G27” connector.</p> <p>3) If OK, then connect special tools (B) and (C) to “G26” connector (For vehicle without cruise control system [A]) or special tools (B) and (D) to “G27” connector (for vehicle with cruise control system [B]) disconnected in Step 1).</p> <p>Special tool (B): 09932-75010 (C): 09932-78340 (D): 09932-77320</p>  <p>I5JB0A820026-02</p> <p>4) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1032 indicated?</i></p>	Go to Step 2.	Go to Step 3.

8B-34 Air Bag System:

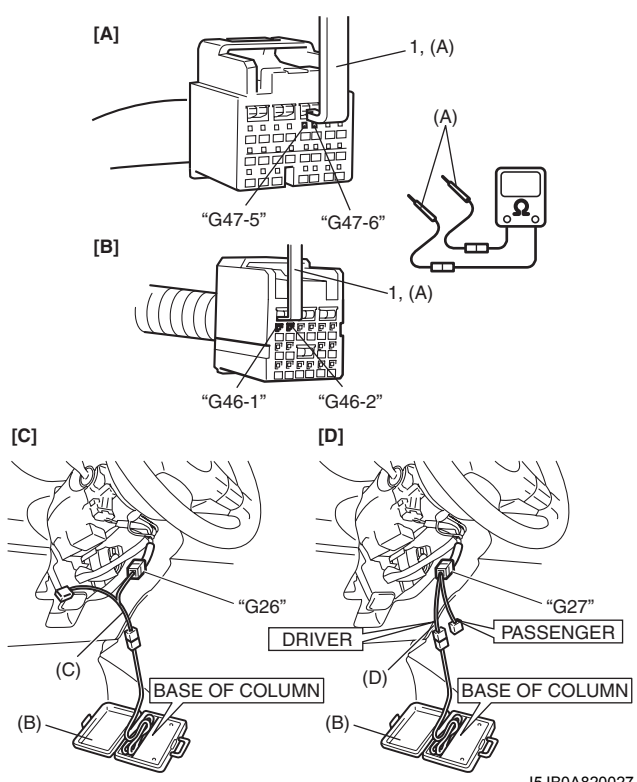Step	Action	Yes	No
2	<p>1) With ignition switch OFF, disconnect SDM connector "G47" or "G46".</p> <p>2) Check proper connection to SDM at terminals "G47-5" and "G47-6" or "G46-1" and "G46-2".</p> <p>3) If OK, release shorting bar in SDM connector inserting release tool (1) included in special tool (A).</p> <p>4) Measure resistance between "G47-5" and "G47-6" terminals [A] or between "G46-1" and "G46-2" terminals [B] with connected special tools (B) and (C) (for vehicle without cruise control system [C]) or special tools (B) and (D) (for vehicle with cruise control system [D]).</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-78340 (D): 09932-77320</p>  <p>I5JB0A820027-02</p> <p><i>Is resistance 0.95 Ω or more?</i></p>	Substitute a known-good SDM and recheck.	"GRN/RED" circuit shorted to "GRN" circuit, "GRN/RED" circuit or "GRN" circuit shorted to other circuit.

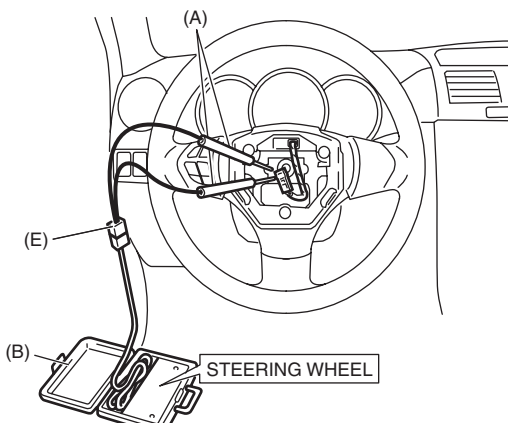Step	Action	Yes	No
3	<p>1) With ignition switch OFF, disconnect special tools (B) and (C) or (D) from "G26" or "G27" connector and reconnect contact coil connector located under of the steering column.</p> <p>2) Remove driver air bag (inflator) module from steering column referring to "Driver Air Bag (Inflator) Module Removal and Installation".</p> <p>3) Check proper connection to driver air bag (inflator) module connector.</p> <p>4) If OK, then connect special tools (A), (B) and (E) to driver air bag (inflator) module connector.</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-78340 (D): 09932-77320 (E): 09932-78310</p>  <p>I5JB0A820028-01</p> <p>5) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1032 indicated?</i></p>	Turn ignition switch OFF. Replace contact coil assembly referring to "Contact Coil Cable Assembly Removal and Installation in Section 6B".	Turn ignition switch OFF. Replace driver air bag (inflator) module referring to "Driver Air Bag (Inflator) Module Removal and Installation".

NOTE

Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components and ensure all components are properly mounted.
- Clear DTCs referring to "DTC Clearance", if any.
- Repeat "Air Bag Diagnostic System Check" to confirm that the trouble has been corrected.

DTC B1033: Driver Air Bag Initiator Circuit Short to Ground**Wiring Diagram**

Refer to "DTC B1031: Driver Air Bag Initiator Circuit Resistance High".

⚠ CAUTION

Be sure to observe instructions under CAUTION in "Air Bag Diagnostic System Check Flow".

DTC Will Set when

The voltage measured at driver air bag initiator circuit is below a specified value for specified time.


Flow Test Description

Step 1: Check whether malfunction is in contact coil and driver air bag (inflator) module or the others.


Step 2: Check driver air bag (inflator) module initiator circuit.

Step 3: Check whether malfunction is in contact coil or driver air bag (inflator) module.


DTC Troubleshooting

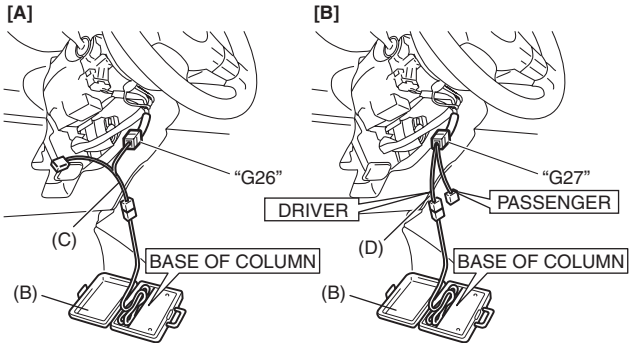Step	Action	Yes	No
1	<p>1) With ignition switch OFF, disconnect contact coil connector located under of the steering column.</p> <p>2) Check proper connection to contact coil at terminal in "G26" or "G27" connector.</p> <p>3) If OK, then connect special tools (B) and (C) to "G26" connector (For vehicle without cruise control system [A]) or special tools (B) and (D) to "G27" connector (for vehicle with cruise control system [B]) disconnected in Step 1).</p> <p>Special tool (B): 09932-75010 (C): 09932-78340 (D): 09932-77320</p>  <p>4) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1033 indicated?</i></p>	Go to Step 2.	Go to Step 3.

I5JB0A820026-02

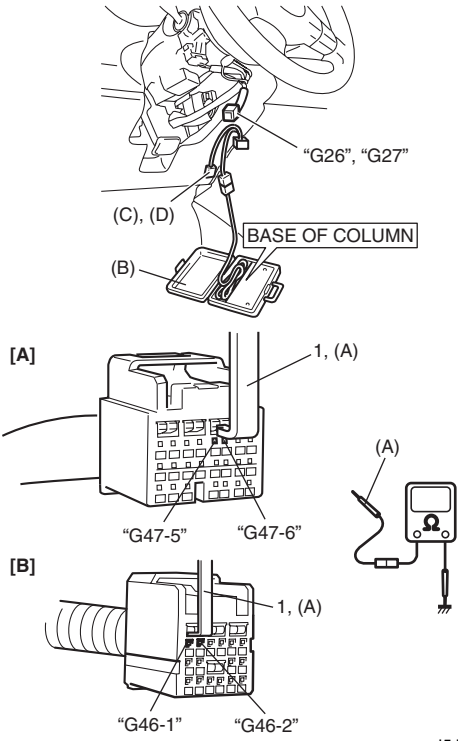Step	Action	Yes	No
2	<p>1) With ignition switch OFF, disconnect special tools (B) and (C) or (D) from "G26" or "G27" connector and SDM connector "G47" or "G46" from SDM respectively.</p> <p>2) Release Shorting bar in SDM connector inserting release tool (1) included in special tool (A).</p> <p>3) Measure resistance between "G47-5" terminal and body ground, and between "G47-6" terminal and body ground [A] or between "G46-1" terminal and body ground, and between "G46-2" terminal and body ground [B].</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-78340 (D): 09932-77320</p>  <p>I5JB0A820030-01</p> <p><i>Are resistances infinity?</i></p>	Substitute a known-good SDM and recheck.	"GRN/RED" circuit or "GRN" circuit shorted to ground.

8B-38 Air Bag System:

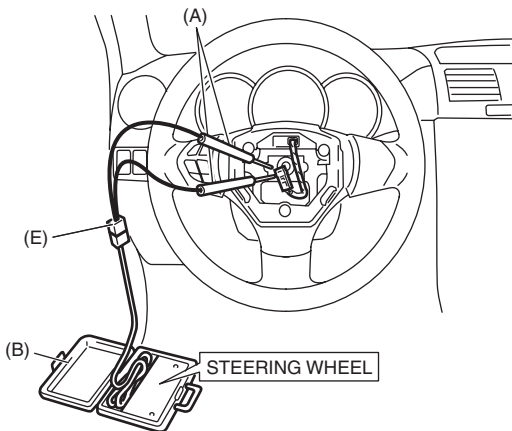Step	Action	Yes	No
3	<p>1) With ignition switch OFF, disconnect special tools (B) and (C) or (D) from "G26" or "G27" connector and reconnect contact coil connector located under of the steering column.</p> <p>2) Remove driver air bag (inflator) module from steering column referring to "Driver Air Bag (Inflator) Module Removal and Installation".</p> <p>3) Check proper connection to driver air bag (inflator) module connector.</p> <p>4) If OK, then connect special tools (A), (B) and (E) to driver air bag (inflator) module connector.</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-78340 (D): 09932-77320 (E): 09932-78310</p>  <p>5) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1033 indicated?</i></p>	<p>Turn ignition switch OFF. Replace contact coil assembly referring to "Contact Coil Cable Assembly Removal and Installation in Section 6B".</p>	<p>Turn ignition switch OFF. Replace driver air bag (inflator) module referring to "Driver Air Bag (Inflator) Module Removal and Installation".</p>

NOTE

Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components and ensure all components are properly mounted.
- Clear DTCs referring to "DTC Clearance", if any.
- Repeat "Air Bag Diagnostic System Check" to confirm that the trouble has been corrected.

DTC B1034: Driver Air Bag Initiator Circuit Short to Power Circuit

S6JB0B8204018


Wiring Diagram


Refer to "DTC B1031: Driver Air Bag Initiator Circuit Resistance High".


⚠ CAUTION**Be sure to observe instructions under CAUTION in "Air Bag Diagnostic System Check Flow".****DTC Will Set when**

The voltage measured at driver air bag initiator circuit is above a specified value for specified time.

Flow Test Description**Step 1: Check whether malfunction is in contact coil and driver air bag (inflator) module or the others.****Step 2: Check driver air bag (inflator) module initiator circuit.****Step 3: Check whether malfunction is in contact coil or driver air bag (inflator) module.****DTC Troubleshooting**

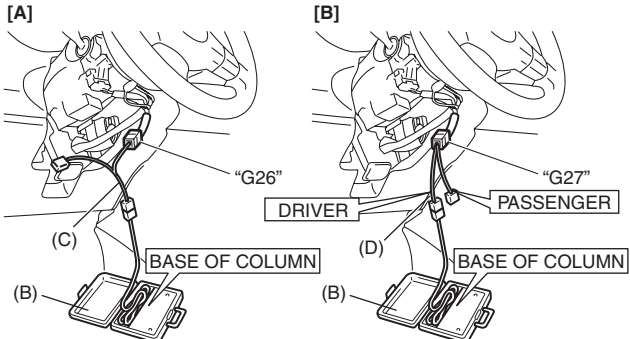Step	Action	Yes	No
1	<p>1) With ignition switch OFF, disconnect contact coil connector located under of the steering column.</p> <p>2) Check proper connection to contact coil at terminal in "G26" or "G27" connector.</p> <p>3) If OK, then connect special tools (B) and (C) to "G26" connector (For vehicle without cruise control system [A]) or special tools (B) and (D) to "G27" connector (for vehicle with cruise control system [B]) disconnected in Step 1).</p> <p>Special tool (B): 09932-75010 (C): 09932-78340 (D): 09932-77320</p>  <p>I5JB0A820026-02</p> <p>4) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1034 indicated?</i></p>	Go to Step 2.	Go to Step 3.

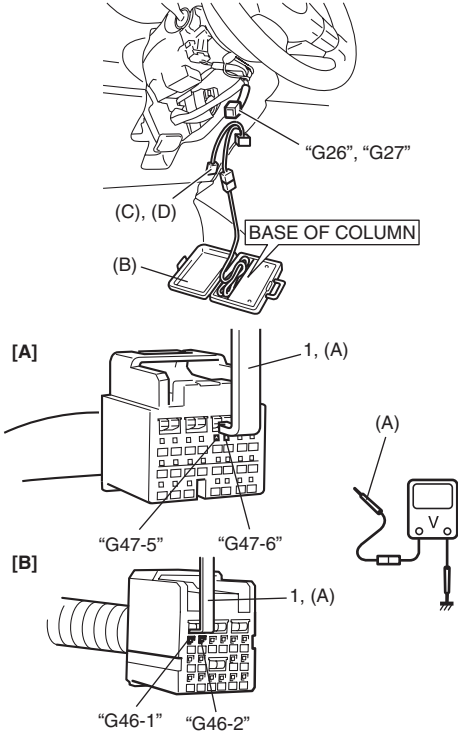Step	Action	Yes	No
2	<div> 1) With ignition switch OFF, disconnect special tools (B) and (C) or (D) from “G26” or “G27” connector and SDM connector “G47” or “G46” from SDM respectively. 2) Release Shorting bar in SDM connector inserting release tool (1) included in special tool (A). 3) Measure voltage between “G47-5” terminal and body ground, and between “G47-6” terminal and body ground [A] or between “G46-1” terminal and body ground, and between “G46-2” terminal and body ground [B]. </div> <div> Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-78340 (D): 09932-77320 </div> <div>  <p>The diagram illustrates the diagnostic procedure for the air bag system. It shows the location of connectors G26 and G27 at the base of the column, and the location of connectors G47-5, G47-6, G46-1, and G46-2 on the SDM unit. It also shows the use of special tool (A) to release the shorting bar and a voltmeter (V) to measure the voltage between the terminals and body ground.</p> </div> <div> I5JB0A820031-02 </div> <div> With ignition switch ON, is each measured value 4 V or less? </div>	Substitute a known-good SDM and recheck.	“GRN/RED” circuit or “GRN” circuit shorted to power supply circuit.


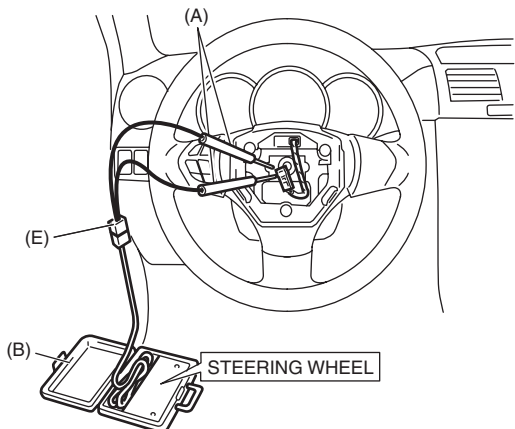
Step	Action	Yes	No
3	<p>1) With ignition switch OFF, disconnect special tools (B) and (C) or (D) from "G26" or "G27" connector and reconnect contact coil connector located under of the steering column.</p> <p>2) Remove driver air bag (inflator) module from steering column referring to "Driver Air Bag (Inflator) Module Removal and Installation".</p> <p>3) Check proper connection to driver air bag (inflator) module connector.</p> <p>4) If OK, then connect special tools (A), (B) and (E) to driver air bag (inflator) module connector.</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-78340 (D): 09932-77320 (E): 09932-78310</p>  <p>5) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1034 indicated?</i></p>	<p>Turn ignition switch OFF. Replace contact coil assembly referring to "Contact Coil Cable Assembly Removal and Installation in Section 6B".</p>	<p>Turn ignition switch OFF. Replace driver air bag (inflator) module referring to "Driver Air Bag (Inflator) Module Removal and Installation".</p>

NOTE


Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components and ensure all components are properly mounted.
- Clear DTCs referring to "DTC Clearance", if any.
- Repeat "Air Bag Diagnostic System Check" to confirm that the trouble has been corrected.

DTC Troubleshooting

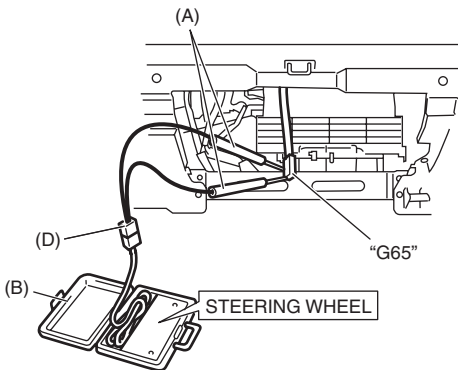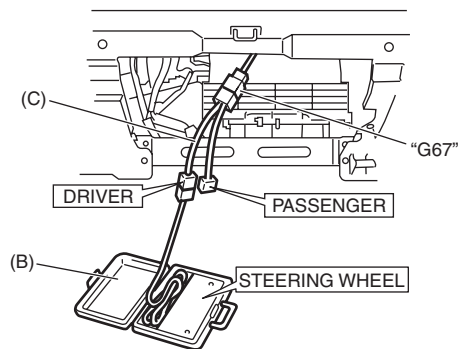Step	Action	Yes	No
1	<p>1) With ignition switch OFF, disconnect passenger air bag (inflator) module connector.</p> <p>2) Check proper connection to passenger air bag (inflator) module at terminals in "G65" connector.</p> <p>3) If OK, then connect special tools (A), (B) and (D) to "G65" connector.</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (D): 09932-78310</p>  <p>I5JB0A820033-01</p> <p>4) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1041 indicated?</i></p>	Go to Step 2.	Turn ignition switch OFF. Replace passenger air bag (inflator) module referring to "Passenger Air Bag (Inflator) Module Removal and Installation".
2	<p>1) With ignition switch OFF, disconnect "G67" connector located near the glove box.</p> <p>2) Check proper connection to instrument panel harness connector at terminal "G67-1" and "G67-2".</p> <p>3) If OK, then connect special tools (B) and (C) to "G67" connector disconnected in Step 1).</p> <p>Special tool (B): 09932-75010 (C): 09932-77320</p>  <p>I5JB0A820034-01</p> <p>4) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1041 indicated?</i></p>	Go to Step 3.	High resistance or open wire "BLU/RED" or "YEL/RED" circuit. (Between "G68" and "G65" connectors)

8B-44 Air Bag System:

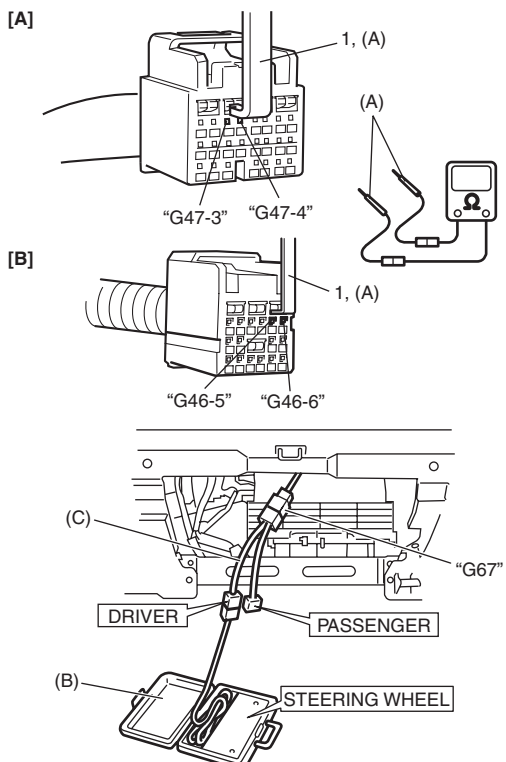Step	Action	Yes	No
3	<p>1) With ignition switch OFF, disconnect SDM connector "G47" or "G46".</p> <p>2) Check proper connection to SDM at terminals "G47-3" and "G47-4" or "G46-5" and "G46-6".</p> <p>3) If OK, release shorting bar in SDM connector inserting release too (1) included in special tool (A).</p> <p>4) Measure resistance between "G47-3" and "G47-4" terminals [A] or between "G46-5" and "G46-6" terminals [B] with connected special tools (B) and (C).</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-77320</p>  <p>15JB0A820035-01</p> <p><i>Is resistance 5.5 Ω or less?</i></p>	Substitute a known-good SDM and recheck.	High resistance or open wire in "BLU/RED" or "YEL/RED" circuit. (Between "G67" and "G47" connectors or between "G67" and "G46" connectors).

NOTE

Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components and ensure all components are properly mounted.
- Clear DTCs referring to "DTC Clearance", if any.
- Repeat "Air Bag Diagnostic System Check" to confirm that the trouble has been corrected.

DTC B1042: Passenger Air Bag Initiator Circuit Resistance Low**Wiring Diagram**

Refer to "DTC B1041: Passenger Air Bag Initiator Circuit Resistance High".

⚠ CAUTION

Be sure to observe instructions under CAUTION in "Air Bag Diagnostic System Check Flow".

DTC Will Set when

The combined resistance of the passenger air bag (inflator) module, harness wiring and connector terminal contact is below a specified value for specified time.


Flow Test Description

Step 1: Check if malfunction is in passenger air bag (inflator) module.


Step 2: Check passenger air bag (inflator) module initiator circuit. (Between "G68" and "G65")

Step 3: Check passenger air bag (inflator) module initiator circuit. (Between "G67" and "G47" or "G67" and "G46")


DTC Troubleshooting

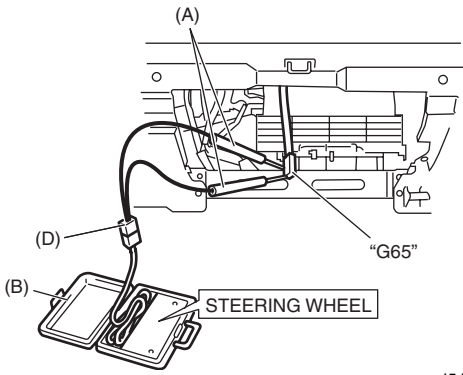Step	Action	Yes	No
1	<p>1) With ignition switch OFF, disconnect passenger air bag (inflator) module connector.</p> <p>2) Check proper connection to passenger air bag (inflator) module at terminals in "G65" connector.</p> <p>3) If OK, then connect special tools (A), (B) and (D) to "G65" connector.</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (D): 09932-78310</p>  <p>I5JB0A820033-01</p> <p>4) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1042 indicated?</i></p>	Go to Step 2.	Turn ignition switch OFF. Replace passenger air bag (inflator) module referring to "Passenger Air Bag (Inflator) Module Removal and Installation".

8B-46 Air Bag System:

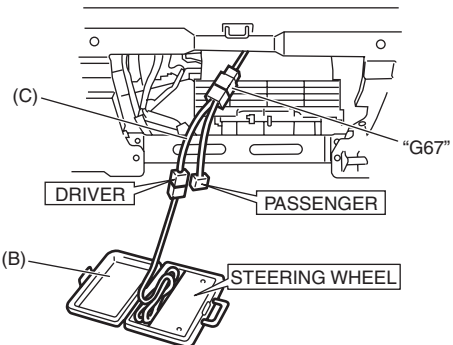Step	Action	Yes	No
2	<p>1) With ignition switch OFF, disconnect "G67" connector located near the glove box.</p> <p>2) Check proper connection to instrument panel harness connector at terminal "G67-1" and "G67-2".</p> <p>3) If OK, then connect special tools (B) and (C) to "G67" connector disconnected in Step 1).</p> <p>Special tool (B): 09932-75010 (C): 09932-77320</p>  <p>4) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1042 indicated?</i></p>	Go to Step 3.	"BLU/RED" circuit shorted to "YEL/RED" circuit, "BLU/RED" circuit or "YEL/RED" circuit shorted to other circuit. (Between "G68" and "G65" connectors)

15JB0A820034-01

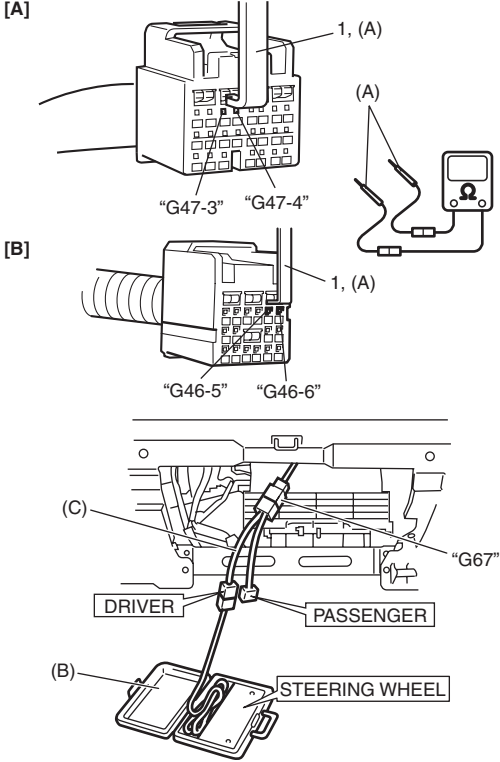Step	Action	Yes	No
3	<p>1) With ignition switch OFF, disconnect SDM connector "G47" or "G46".</p> <p>2) Check proper connection to SDM at terminals "G47-3" and "G47-4" or "G46-5" and "G46-6".</p> <p>3) If OK, release shorting bar in SDM connector inserting release tool (1) included in special tool (A).</p> <p>4) Measure resistance between "G47-3" and "G47-4" terminals [A] or between "G46-5" and "G46-6" terminals [B] with connected special tools (B) and (C).</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-77320</p>  <p style="text-align: right;">I5JB0A820035-01</p> <p><i>Is resistance 0.65 Ω or more?</i></p>	Substitute a known-good SDM and recheck.	"BLU/RED" circuit shorted to "YEL/RED" circuit, "BLU/RED" circuit or "YEL/RED" circuit shorted to other circuit. (Between "G67" and "G47" connectors or between "G67" and "G46" connectors).

NOTE

Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components and ensure all components are properly mounted.
- Clear DTCs referring to "DTC Clearance", if any.
- Repeat "Air Bag Diagnostic System Check" to confirm that the trouble has been corrected.

DTC B1043: Passenger Air Bag Initiator Circuit Short to Ground

S6JB0B8204021

Wiring Diagram

Refer to “DTC B1041: Passenger Air Bag Initiator Circuit Resistance High”.

⚠ CAUTION

Be sure to observe instructions under CAUTION in “Air Bag Diagnostic System Check Flow”.


DTC Will Set when


The voltage measured at passenger air bag (initiator) circuit is below a specified value for specified time.


Flow Test Description

- Step 1: Check if malfunction is in passenger air bag (inflator) module.
- Step 2: Check passenger air bag (inflator) module initiator circuit. (Between “G68” and “G65”)
- Step 3: Check passenger air bag (inflator) module initiator circuit. (Between “G67” and “G47” or “G67” and “G46”)

DTC Troubleshooting

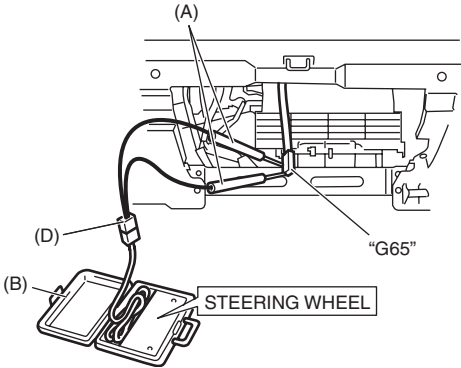Step	Action	Yes	No
1	<div> 1) With ignition switch OFF, disconnect passenger air bag (inflator) module connector. 2) Check proper connection to passenger air bag (inflator) module at terminals in “G65” connector. 3) If OK, then connect special tools (A), (B) and (D) to “G65” connector. <div> Special tool (A): 09932-76010 (B): 09932-75010 (D): 09932-78310 </div> <div>  </div> </div>	Go to Step 2.	Turn ignition switch OFF. Replace passenger air bag (inflator) module referring to “Passenger Air Bag (Inflator) Module Removal and Installation”.
	<div> 4) Check SDM DTC. <p>With ignition switch ON, is DTC B1043 indicated?</p> </div>		

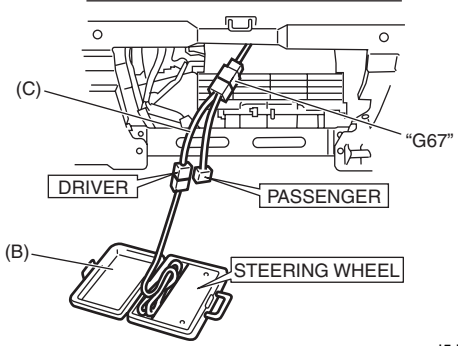Step	Action	Yes	No
2	<p>1) With ignition switch OFF, disconnect "G67" connector located near the glove box.</p> <p>2) Check proper connection to instrument panel harness connector at terminal "G67-1" and "G67-2".</p> <p>3) If OK, then connect special tools (B) and (C) to "G67" connector disconnected in Step 1).</p> <p>Special tool (B): 09932-75010 (C): 09932-77320</p>  <p>I5JB0A820034-01</p> <p>4) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1043 indicated?</i></p>	Go to Step 3.	"BLU/RED" or "YEL/RED" circuit shorted to ground. (Between "G68" and "G65" connectors)

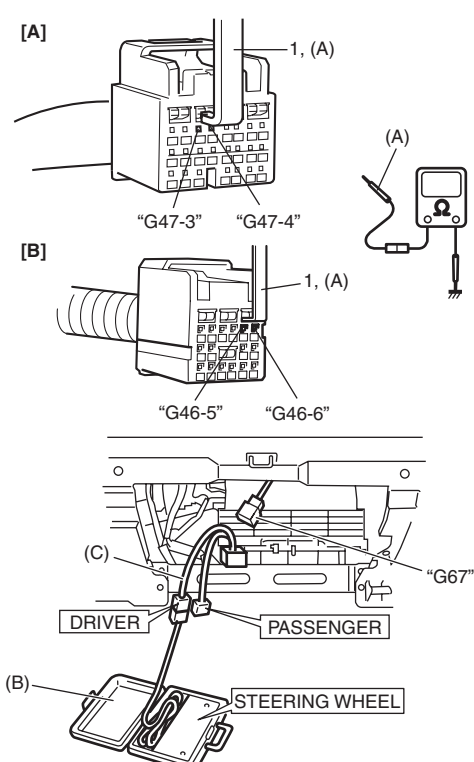Step	Action	Yes	No
3	<p>1) With ignition switch OFF, disconnect special tools (B) and (C) from "G67" connector and SDM connector "G47" or "G46" from SDM respectively.</p> <p>2) Release shorting bar in SDM connector inserting release tool (1) included in special tool (A).</p> <p>3) Measure resistance between "G47-3" and body ground, and between "G47-4" and body ground [A] or between "G46-5" and body ground, and between "G46-6" and body ground [B].</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-77320</p>  <p style="text-align: right;">I5JB0A820036-01</p> <p><i>Is resistance infinity?</i></p>	Substitute a known-good SDM and recheck.	"BLU/RED" or "YEL/RED" circuit shorted to ground. (Between "G67" and "G47" connectors or between "G67" and "G46" connectors).

NOTE

Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components and ensure all components are properly mounted.
- Clear DTCs referring to "DTC Clearance", if any.
- Repeat "Air Bag Diagnostic System Check" to confirm that the trouble has been corrected.

DTC B1044: Passenger Air Bag Initiator Circuit Short to Power Circuit

S6JB0B8204022


Wiring Diagram

Refer to "DTC B1041: Passenger Air Bag Initiator Circuit Resistance High".


⚠ CAUTION**Be sure to observe instructions under CAUTION in "Air Bag Diagnostic System Check Flow".****DTC Will Set when**

The voltage measured at passenger air bag (initiator) circuit is above a specified value for specified time.


Flow Test Description**Step 1: Check if malfunction is in passenger air bag (inflator) module.****Step 2: Check passenger air bag (inflator) module initiator circuit. (Between "G68" and "G65")****Step 3: Check passenger air bag (inflator) module initiator circuit. (Between "G67" and "G47" or "G67" and "G46")****DTC Troubleshooting**

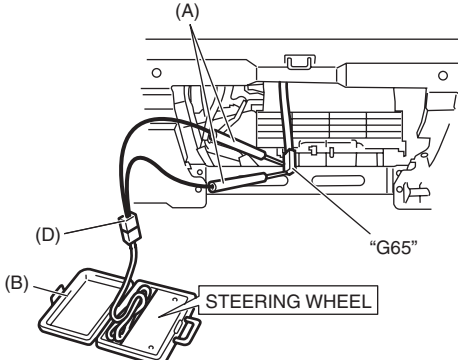Step	Action	Yes	No
1	<p>1) With ignition switch OFF, disconnect passenger air bag (inflator) module connector.</p> <p>2) Check proper connection to passenger air bag (inflator) module at terminals in "G65" connector.</p> <p>3) If OK, then connect special tools (A), (B) and (D) to "G65" connector.</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (D): 09932-78310</p>  <p>I5JB0A820033-01</p> <p>4) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1044 indicated?</i></p>	Go to Step 3.	Turn ignition switch OFF. Replace passenger air bag (inflator) module referring to "Passenger Air Bag (Inflator) Module Removal and Installation".

8B-52 Air Bag System:

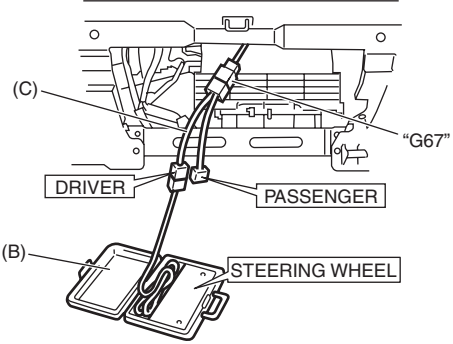Step	Action	Yes	No
2	<p>1) With ignition switch OFF, disconnect "G67" connector located near the glove box.</p> <p>2) Check proper connection to instrument panel harness connector at terminal "G67-1" and "G67-2".</p> <p>3) If OK, then connect special tools (B) and (C) to "G67" connector disconnected in Step 1).</p> <p>Special tool (B): 09932-75010 (C): 09932-77320</p>  <p>4) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1044 indicated?</i></p>	Go to Step 3.	"BLU/RED" or "YEL/RED" circuit shorted to power supply circuit. (Between "G68" and "G65" connectors)

15JB0A820034-01

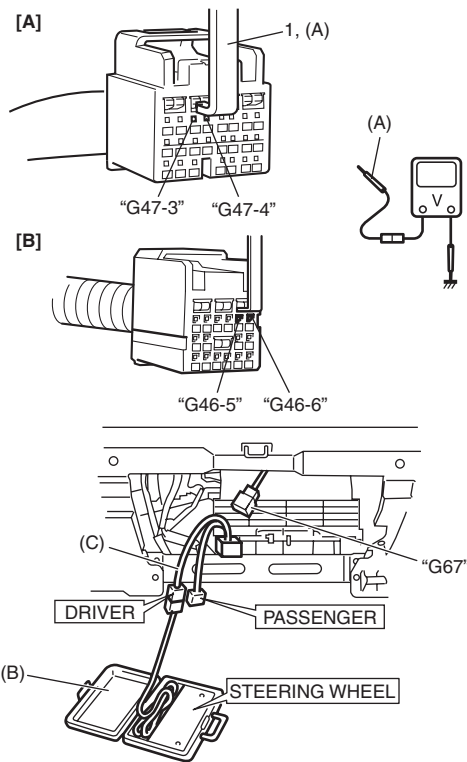Step	Action	Yes	No
3	<p>1) With ignition switch OFF, disconnect special tools (B) and (C) from "G67" connector and SDM connector "G47" and "G46" from SDM respectively.</p> <p>2) Release shorting bar in SDM connector inserting release tool (1) included in special tool (A).</p> <p>3) Measure voltage between "G47-3" and body ground, and between "G47-4" and body ground [A] or between "G46-5" and body ground, and between "G46-6" and body ground [B].</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-77320</p>  <p style="text-align: right;">I5JB0A820037-01</p> <p><i>With ignition switch ON, is voltage 4 V or less?</i></p>	Substitute a known-good SDM and recheck.	"BLU/RED" or "YEL/RED" circuit shorted to power supply circuit. (Between "G67" and "G47" connectors or between "G67" and "G46" connectors).

NOTE


Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components and ensure all components are properly mounted.
- Clear DTCs referring to "DTC Clearance", if any.
- Repeat "Air Bag Diagnostic System Check" to confirm that the trouble has been corrected.

DTC B1051 / B1055: Driver / Passenger Pretensioner Initiator Circuit Resistance High

S6JB0B8204023

Wiring Diagram

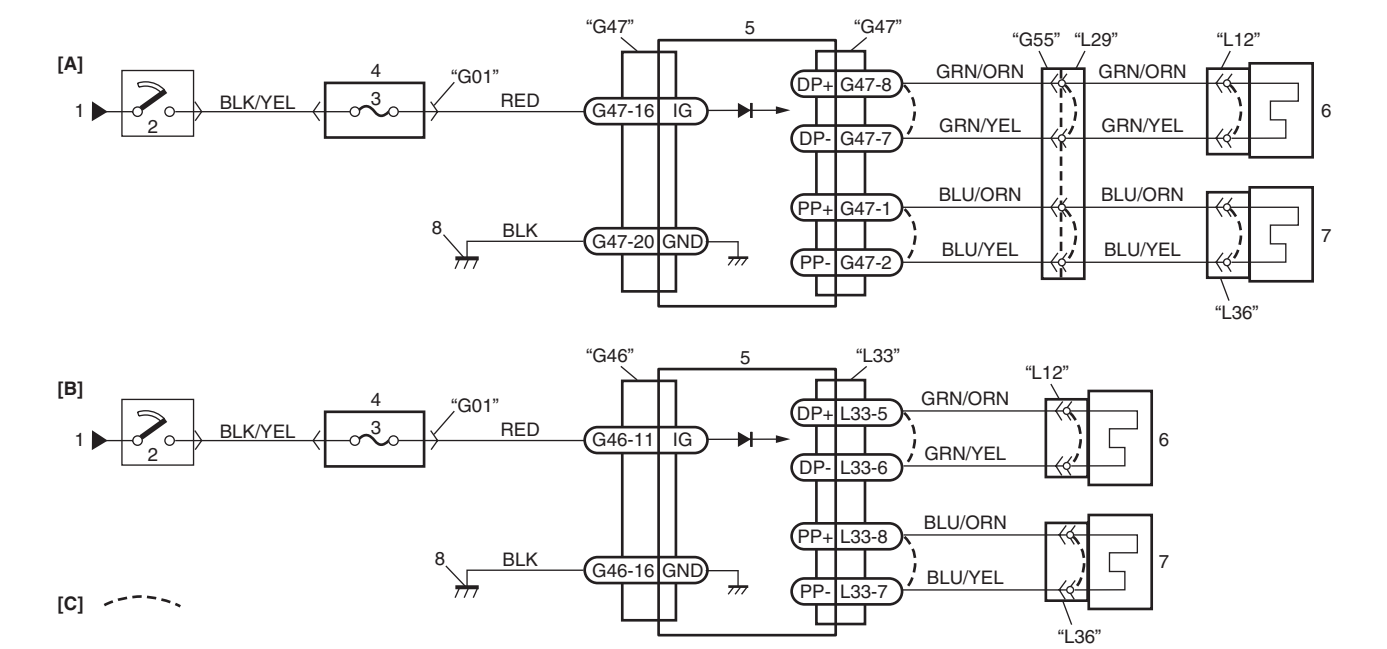

I5JB0A820038-01

⚠ CAUTION

Be sure to observe instructions under CAUTION in "Air Bag Diagnostic System Check Flow".

DTC Will Set when

The resistance of driver or passenger seat belt pretensioner initiator circuit is above a specified value for specified time.



Flow Test Description



Step 1: Check if malfunction is in seat belt pretensioner.

Step 2: Check seat belt pretensioner initiator circuit. (Between "L29" and "L12" or "L29" and "L36")

Step 3: Check seat belt pretensioner initiator circuit. (Between "G55" and "G47", "L12" and "L33" or "L36" and "L33")

DTC Troubleshooting

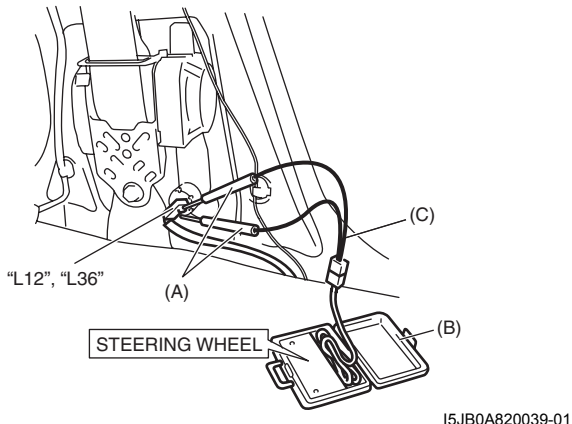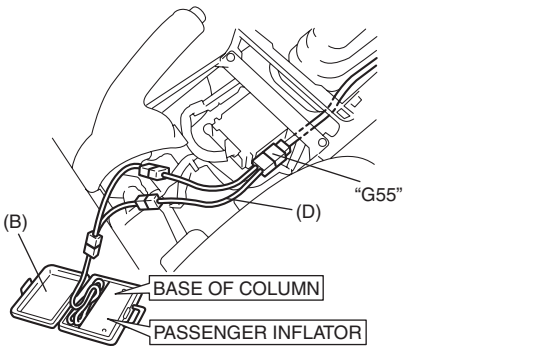Step	Action	Yes	No
1	<p>1) With ignition switch OFF, remove center pillar lower trim of driver or passenger side and disconnect seat belt pretensioner connector "L12" or "L36" (1).</p> <p>2) Check proper connection to seat belt pretensioner at terminals in "L12" or "L36" connector.</p> <p>3) If OK, then connect special tools (A), (B) and (C) to "L12" or "L36" connector disconnected in Step 1).</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-78310</p>  <p>4) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1051 or B1055 still indicated?</i></p>	<p>Without side-air bag and curtain-air bag: go to Step 2.</p> <p>With side-air bag and curtain-air bag: go to Step 3.</p>	<p>Turn ignition switch OFF. Replace seat belt pretensioner referring to "Front Seat Belt Removal and Installation in Section 8A".</p>
2	<p>1) With ignition switch OFF, disconnect "G55" connector located near the console box.</p> <p>2) Check proper connection to applicable seat belt pretensioner at terminal in "G55" connector.</p> <p>3) If OK, then connect special tools (B) and (D) to "G55" connector.</p> <p>Special tool (B): 09932-75010 (C): 09932-77320</p>  <p>4) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1051 or B1055 still indicated?</i></p>	<p>Go to Step 3.</p>	<p>DTC B1051: High resistance or open wire in "GRN/ORN" or "GRN/YEL" circuit. (Between "L29" and "L12" connectors)</p> <p>DTC B1055: High resistance or open wire in "BLU/ORN" or "BLU/YEL" circuit. (Between "L29" and "L36" connectors)</p>

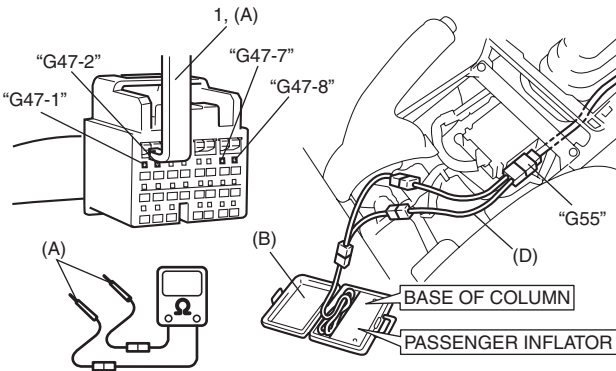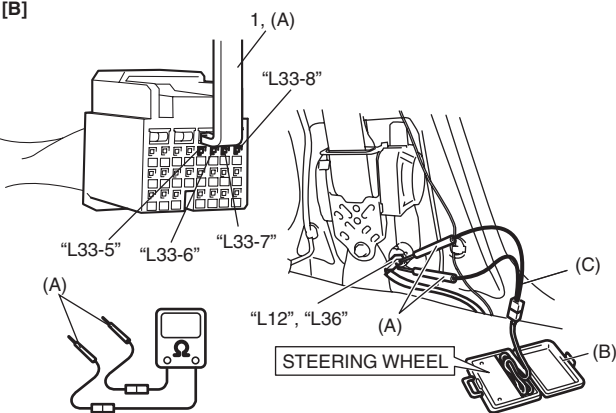Step	Action	Yes	No
3	<p>1) With ignition switch OFF, disconnect SDM connector "G47" or "L33".</p> <p>2) Check proper connection to SDM at terminals "G47-7" and "G47-8" or "L33-5" and "L33-6" (for DTC B1051) or terminals "G47-1" and "G47-2" or "L33-7" and "L33-8" (for DTC B1055).</p> <p>3) If OK, release shorting bar in SDM connector inserting release tool (1) included in special tool (A).</p> <p>4) Measure resistance between "G47-7" and "G47-8" (for DTC B1051) or "G47-1" and "G47-2" (for DTC B1055) with connected special tools (B) and (D) [A], or between "L33-5" and "L33-6" (for DTC B1051) or "L33-7" and "L33-8" (for DTC B1055) with connected special tools (A), (B) and (C) [B].</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-78310 (D): 09932-77320</p> <p>[A]</p>  <p>[B]</p>  <p>Is resistance 5.5 Ω or less?</p>	Substitute a known-good SDM and recheck.	<p>DTC B1051: High resistance or open wire in "GRN/ORN" or "GRN/YEL" circuit. (Between "G55" and "G47" connectors or between "L12" and "L33" connectors)</p> <p>DTC B1055: High resistance or open wire in "BLU/ORN" or "BLU/YEL" circuit. (Between "G55" and "G47" connectors or between "L36" and "L33" connectors)</p>

NOTE

Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components and ensure all components are properly mounted.
- Clear DTCs referring to "DTC Clearance", if any.
- Repeat "Air Bag Diagnostic System Check" to confirm that the trouble has been corrected.

DTC B1052 / B1056: Driver / Passenger Pretensioner Initiator Circuit Resistance Low

S6JB0B8204024


Wiring Diagram

Refer to "DTC B1051 / B1055: Driver / Passenger Pretensioner Initiator Circuit Resistance High".


⚠ CAUTION**Be sure to observe instructions under CAUTION in "Air Bag Diagnostic System Check Flow".****DTC Will Set when**



The resistance of driver or passenger seat belt pretensioner initiator circuit is below a specified value for specified time.

Flow Test Description**Step 1: Check if malfunction is in seat belt pretensioner.****Step 2: Check seat belt pretensioner initiator circuit. (Between "L29" and "L12" or "L29" and "L36")****Step 3: Check seat belt pretensioner initiator circuit. (Between "G55" and "G47", "L12" and "L33" or "L36" and "L33")****DTC Troubleshooting**

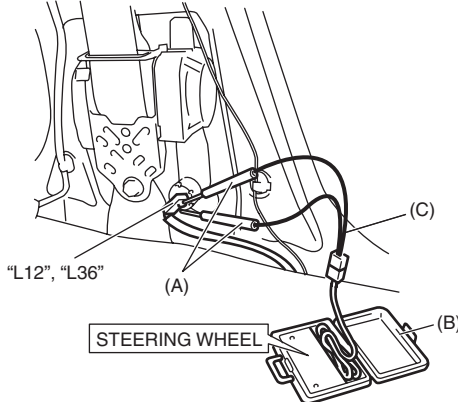Step	Action	Yes	No
1	<p>1) With ignition switch OFF, remove center pillar lower trim of driver or passenger side and disconnect seat belt pretensioner connector "L12" or "L36" (1).</p> <p>2) Check proper connection to seat belt pretensioner at terminals in "L12" or "L36" connector.</p> <p>3) If OK, then connect special tools (A), (B) and (C) to "L12" or "L36" connector disconnected in Step 1).</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-78310</p>  <p>I5JB0A820039-01</p> <p>4) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1052 or B1056 still indicated?</i></p>	<p>Without side-air bag and curtain-air bag: go to Step 2.</p> <p>With side-air bag and curtain-air bag: go to Step 3.</p>	<p>Turn ignition switch OFF. Replace seat belt pretensioner referring to "Front Seat Belt Removal and Installation in Section 8A".</p>

8B-58 Air Bag System:

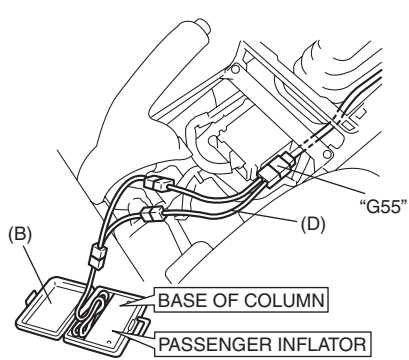Step	Action	Yes	No
2	<p>1) With ignition switch OFF, disconnect "G55" connector located near the console box.</p> <p>2) Check proper connection to applicable seat belt pretensioner at terminal in "G55" connector.</p> <p>3) If OK, then connect special tools (B) and (D) to "G55" connector.</p> <p>Special tool (B): 09932-75010 (D): 09932-77320</p>  <p>4) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1052 or B1056 still indicated?</i></p>	Go to Step 3.	<p>DTC B1052: "GRN/ORN" circuit shorted to "GRN/YEL" circuit, "GRN/ORN" circuit or "GRN/YEL" circuit shorted to other circuit. (Between "L29" and "L12" connectors)</p> <p>DTC B1056: "BLU/ORN" circuit shorted to "BLU/YEL" circuit, "BLU/ORN" circuit or "BLU/YEL" circuit shorted to other circuit. (Between "L29" and "L36" connectors)</p>

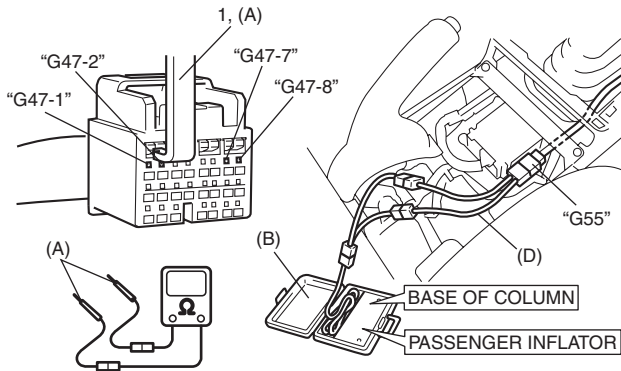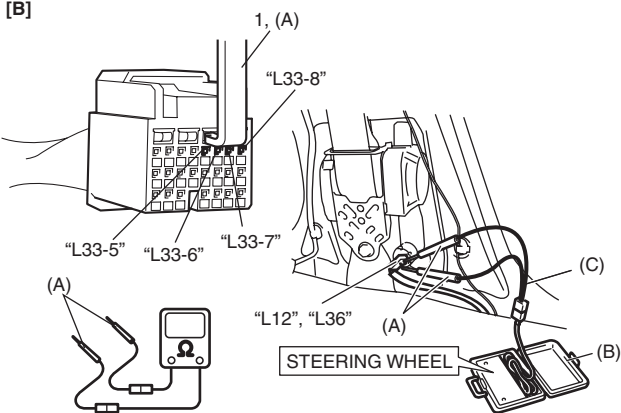Step	Action	Yes	No
3	<p>1) With ignition switch OFF, disconnect SDM connector "G47" or "L33".</p> <p>2) Check proper connection to SDM at terminals "G47-7" and "G47-8" or "L33-5" and "L33-6" (for DTC B1052) or terminals "G47-1" and "G47-2" or "L33-7" and "L33-8" (for DTC B1056).</p> <p>3) If OK, release shorting bar in SDM connector inserting release tool (1) included in special tool (A).</p> <p>4) Measure resistance between "G47-7" and "G47-8" (for DTC B1052) or "G47-1" and "G47-2" (for DTC B1056) with connected special tools (B) and (D) [A], or between "L33-5" and "L33-6" (for DTC B1052) or "L33-7" and "L33-8" (for DTC B1056) with connected special tools (A), (B) and (C) [B].</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-78310 (D): 09932-77320</p> <p>[A]</p>  <p>[B]</p>  <p>I5JB0A820041-01</p> <p><i>Is resistance 0.65 Ω or more?</i></p>	Substitute a known-good SDM and recheck.	<p>DTC B1052: "GRN/ORN" circuit shorted to "GRN/YEL" circuit, "GRN/ORN" circuit or "GRN/YEL" circuit shorted to other circuit. (Between "G55" and "G47" connectors or between "L12" and "L33" connectors)</p> <p>DTC B1056: "BLU/ORN" circuit shorted to "BLU/YEL" circuit, "BLU/ORN" circuit or "BLU/YEL" circuit shorted to other circuit. (Between "G55" and "G47" connectors or between "L36" and "L33" connectors)</p>

NOTE

Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components and ensure all components are properly mounted.
- Clear DTCs referring to "DTC Clearance", if any.
- Repeat "Air Bag Diagnostic System Check" to confirm that the trouble has been corrected.

DTC B1053 / B1057: Driver / Passenger Pretensioner Initiator Circuit Short to Ground**Wiring Diagram**

Refer to "DTC B1051 / B1055: Driver / Passenger Pretensioner Initiator Circuit Resistance High".

⚠ CAUTION

Be sure to observe instructions under CAUTION in "Air Bag Diagnostic System Check Flow".

DTC Will Set when

The voltage measured at driver or passenger seat belt pretensioner initiator circuit is below a specified value for specified time.


Flow Test Description


Step 1: Check if malfunction is in seat belt pretensioner.



Step 2: Check seat belt pretensioner initiator circuit. (Between "L29" and "L12" or "L29" and "L36")

Step 3: Check seat belt pretensioner initiator circuit. (Between "G55" and "G47", "L12" and "L33" or "L36" and "L33")

DTC Troubleshooting

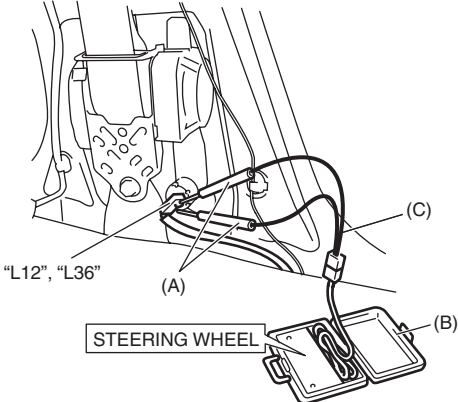Step	Action	Yes	No
1	<p>1) With ignition switch OFF, remove center pillar lower trim of driver or passenger side and disconnect seat belt pretensioner connector "L12" or "L36" (1).</p> <p>2) Check proper connection to seat belt pretensioner at terminals in "L12" or "L36" connector.</p> <p>3) If OK, then connect special tools (A), (B) and (C) to "L12" or "L36" connector disconnected in Step 1).</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-78310</p>  <p>15JB0A820039-01</p> <p>4) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1053 or B1057 still indicated?</i></p>	<p>Without side-air bag and curtain-air bag: go to Step 2.</p> <p>With side-air bag and curtain-air bag: go to Step 3.</p>	<p>Ignition switch OFF.</p> <p>Replace seat belt pretensioner referring to "Front Seat Belt Removal and Installation in Section 8A".</p>

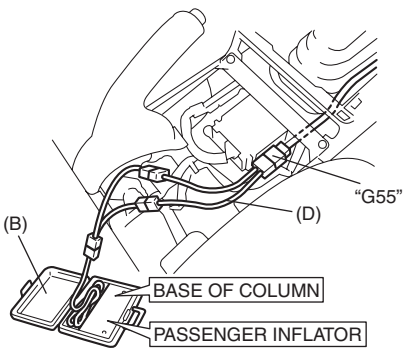Step	Action	Yes	No
2	<p>1) With ignition switch OFF, disconnect "G55" connector located near the console box.</p> <p>2) Check proper connection to applicable seat belt pretensioner at terminal in "G55" connector.</p> <p>3) If OK, then connect special tools (B) and (D) to "G55" connector.</p> <p>Special tool (B): 09932-75010 (C): 09932-77320</p>  <p>I5JB0A820040-01</p> <p>4) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1053 or B1057 still indicated?</i></p>	Go to Step 3.	<p>DTC B1053: "GRN/ORN" or "GRN/YEL" circuit shorted to ground. (Between "L29" and "L12" connectors)</p> <p>DTC B1057: "BLU/ORN" circuit or "BLU/YEL" circuit shorted to ground. (Between "L29" and "L36" connectors)</p>

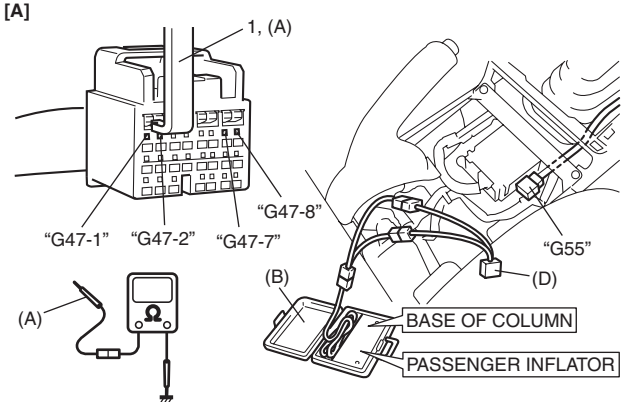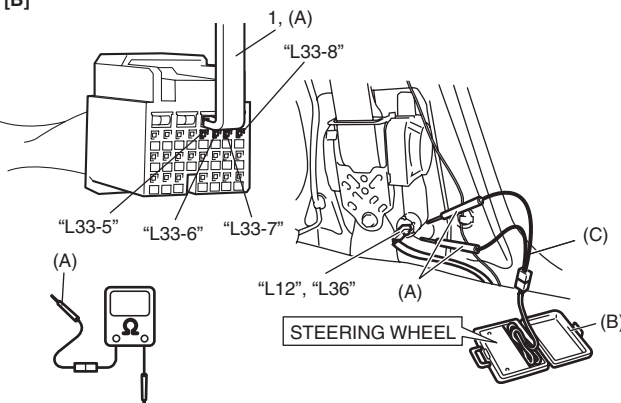Step	Action	Yes	No
3	<p>1) With ignition switch OFF, disconnect special tools (A), (B) and (C) or (D) and SDM connector "G47" or "L33".</p> <p>2) Release shorting bar in SDM connector inserting release tool (1) included in special tool (A).</p> <p>3) Measure resistance between "G47-7" and body ground, "G47-8" and body ground (for DTC B1053) or "G47-1" and body ground, "G47-2" and body ground (for DTC B1057) [A], or between "L33-5" and body ground, "L33-6" and body ground (for DTC B1053) or "L33-7" and body ground, "L33-8" and body ground (for DTC B1057) [B].</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-78310 (D): 09932-77320</p> <p>[A]</p>  <p>[B]</p>  <p>Is resistance infinity?</p>	Substitute a known-good SDM and recheck.	<p>DTC B1053: "GRN/ORN" circuit or "GRN/YEL" circuit shorted to ground. (Between "G55" and "G47" connectors or between "L12" and "L33" connectors)</p> <p>DTC B1057: "BLU/ORN" circuit or "BLU/YEL" circuit shorted to ground. (Between "G55" and "G47" connectors or between "L36" and "L33" connectors)</p>

I5JB0A820042-01

NOTE

Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components and ensure all components are properly mounted.
- Clear DTCs referring to "DTC Clearance", if any.
- Repeat "Air Bag Diagnostic System Check" to confirm that the trouble has been corrected.

DTC B1054 / B1058: Driver / Passenger Pretensioner Initiator Circuit Short to Power Circuit

S6JB0B8204026


Wiring Diagram

Refer to "DTC B1051 / B1055: Driver / Passenger Pretensioner Initiator Circuit Resistance High".


⚠ CAUTION**Be sure to observe instructions under CAUTION in "Air Bag Diagnostic System Check Flow".****DTC Will Set when**



The voltage measured at driver or passenger seat belt pretensioner initiator circuit is above a specified value for specified time.

Flow Test Description**Step 1: Check if malfunction is in seat belt pretensioner.****Step 2: Check seat belt pretensioner initiator circuit. (Between "L29" and "L12" or "L29" and "L36")****Step 3: Check seat belt pretensioner initiator circuit. (Between "G55" and "G47", "L12" and "L33" or "L36" and "L33")****DTC Troubleshooting**

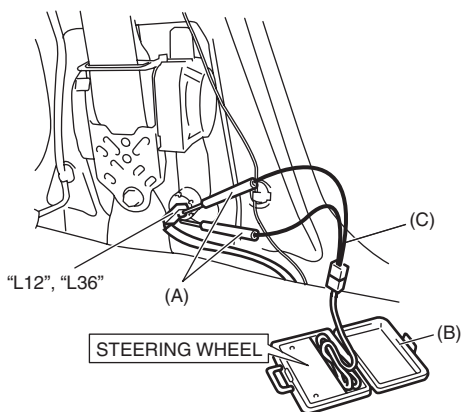Step	Action	Yes	No
1	<p>1) With ignition switch OFF, remove center pillar lower trim of driver or passenger side and disconnect seat belt pretensioner connector "L12" and "L36" (1).</p> <p>2) Check proper connection to seat belt pretensioner at terminals in "L12" or "L36" connector.</p> <p>3) If OK, then connect special tools (A), (B) and (C) to "L12" or "L36" connector disconnected in Step 1).</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-78310</p>  <p>STEERING WHEEL</p> <p>I5JB0A820039-01</p> <p>4) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1054 or B1058 still indicated?</i></p>	<p>Without side-air bag and curtain-air bag: go to Step 2.</p> <p>With side-air bag and curtain-air bag: go to Step 3.</p>	<p>Turn ignition switch OFF. Replace seat belt pretensioner referring to "Front Seat Belt Removal and Installation in Section 8A".</p>

8B-64 Air Bag System:

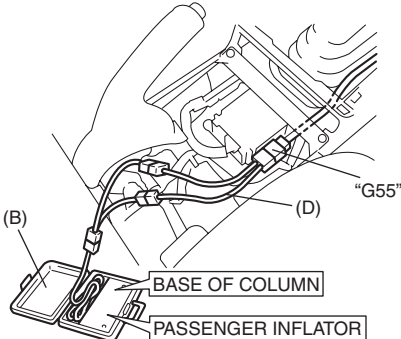Step	Action	Yes	No
2	<p>1) With ignition switch OFF, disconnect "G55" connector located near the console box.</p> <p>2) Check proper connection to applicable seat belt pretensioner at terminal in "G55" connector.</p> <p>3) If OK, then connect special tools (B) and (D) to "G55" connector.</p> <p>Special tool (B): 09932-75010 (D): 09932-77320</p>  <p>4) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1054 or B1058 still indicated?</i></p>	Go to Step 3.	<p>DTC B1054: "GRN/ORN" or "GRN/YEL" circuit shorted to power supply circuit. (Between "L29" and "L12" connectors)</p> <p>DTC B1058: "BLU/ORN" circuit or "BLU/YEL" circuit shorted to power supply circuit. (Between "L29" and "L36" connectors)</p>

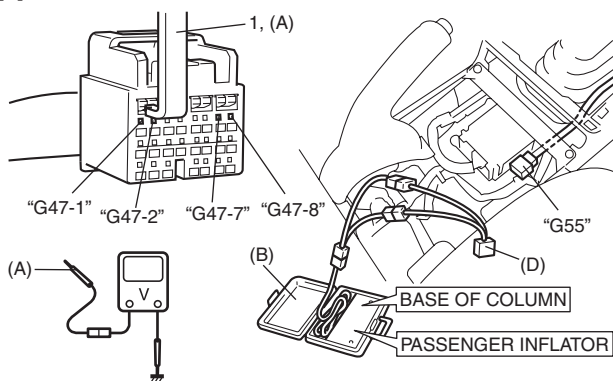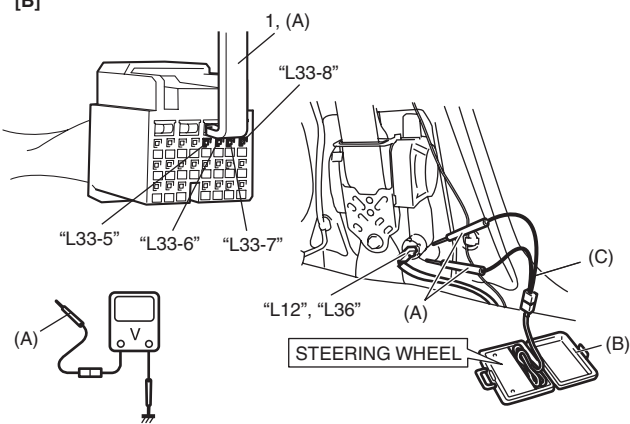
Step	Action	Yes	No
3	<p>1) With ignition switch OFF, disconnect special tools (A), (B) and (C) or (D) and SDM connector "G47" or "L33".</p> <p>2) Release shorting bar in SDM connector inserting release tool (1) included in special tool (A).</p> <p>3) Measure voltage between "G47-7" and body ground, "G47-8" and body ground (for DTC B1053) or "G47-1" and body ground, "G47-2" and body ground (for DTC B1057) [A], or between "L33-5" and body ground, "L33-6" and body ground (for DTC B1053) or "L33-7" and body ground (for DTC B1057) [B].</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-78310 (D): 09932-77320</p> <p>[A]</p>  <p>[B]</p>  <p>I5JB0A820043-01</p> <p><i>With ignition switch ON, is voltage 4 V or less?</i></p>	Substitute a known-good SDM and recheck.	<p>DTC B1054: "GRN/ORN" circuit or "GRN/YEL" circuit shorted to power supply circuit. (Between "G55" and "G47" connectors or between "L12" and "L33" connectors)</p> <p>DTC B1058: "BLU/ORN" circuit or "BLU/YEL" circuit shorted to power supply circuit. (Between "G55" and "G47" connectors or between "L36" and "L33" connectors)</p>

NOTE

Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components and ensure all components are properly mounted.
- Clear DTCs referring to "DTC Clearance", if any.
- Repeat "Air Bag Diagnostic System Check" to confirm that the trouble has been corrected.

Wiring Diagram

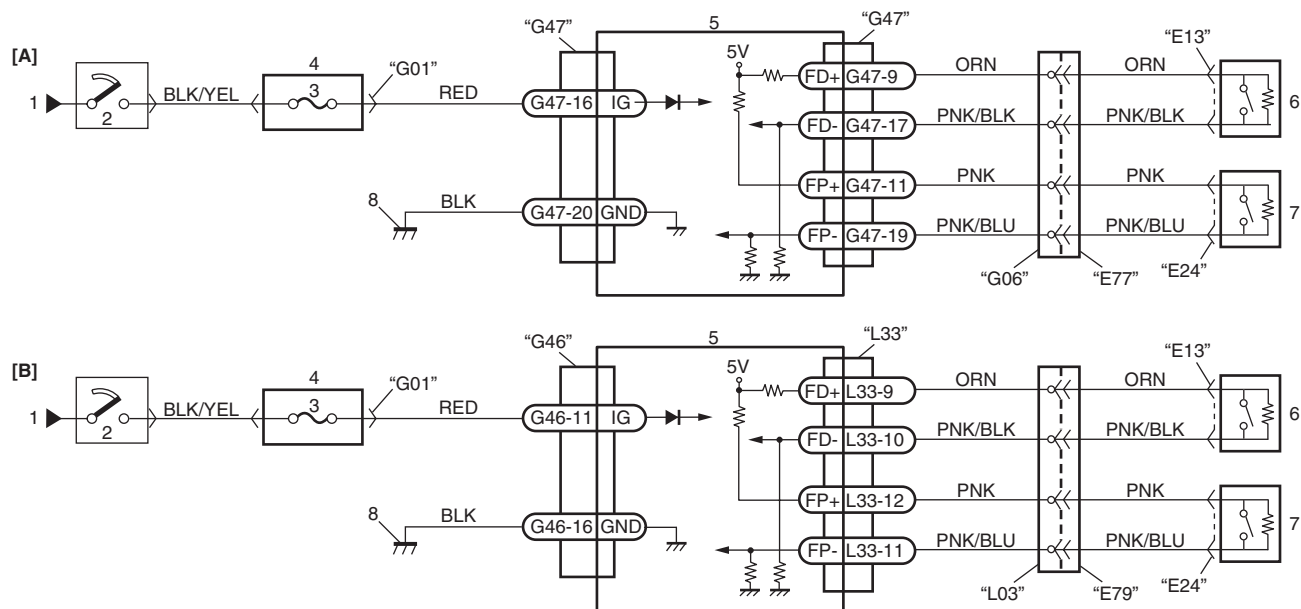

I5JB0A820049-01

[A]: Without side-air bag and curtain-air bag	3. "A/B" fuse	7. Passenger forward-sensor
[B]: With side-air bag and curtain-air bag	4. Junction block assembly	8. Ground for air bag system
1. From main fuse	5. SDM	
2. Ignition switch	6. Forward-sensor	

⚠ CAUTION

Be sure to observe instructions under CAUTION in “Air Bag Diagnostic System Check Flow”.

DTC Will Set when


Forward-sensor abnormal signal is detected by SDM.

Flow Test Description

Step 1: Check for short circuit between forward-sensor circuit and ground.

Step 2: Check if malfunction is in forward-sensor.

DTC Troubleshooting

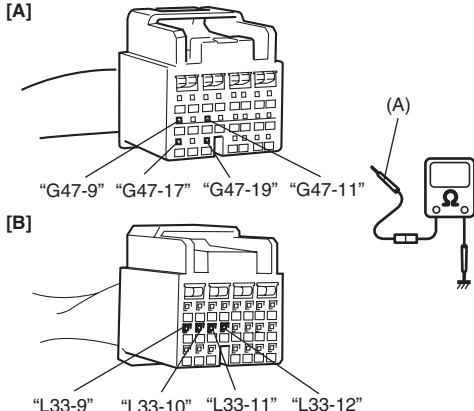Step	Action	Yes	No
1	<p>1) Turn ignition switch to OFF position.</p> <p>2) Disconnect forward-sensor connector "E13" or "E24".</p> <p>3) Disconnect SDM connector "G47" or "L33".</p> <p>4) Check proper connection to SDM connector at terminals "G47-9" and "G47-17" or "L33-9" and "L33-10" (for DTC B1073) or terminals "G47-11" and "G47-19" or "L33-11" and "L33-12" (for DTC B1077).</p> <p>5) Measure resistance between "G47-9" and body ground, "G47-17" and body ground (for DTC B1073) or "G47-11" and body ground, "G47-19" and body ground (for DTC B1077) [A], or between "L33-9" and body ground, "L33-10" and body ground (for DTC B1073) or "L33-11" and body ground, "L33-12" and body ground (for DTC B1077) [B].</p> <p>Special tool (A): 09932-76010</p>  <p>I5JB0A820050-02</p> <p><i>Is each measured resistance infinity?</i></p>	Go to Step 2.	<p>For DTC B1073: "ORN" circuit or "PNK/BLK" circuit shorted to ground.</p> <p>For DTC B1077: "PNK" circuit or "PNK/BLU" circuit shorted to ground.</p>
2	<p>1) Check forward-sensor referring to "Forward-Sensor Inspection".</p> <p><i>Is it in good condition?</i></p>	Substitute a known-good SDM and recheck.	Replace forward-sensor referring to "Forward-Sensor Removal and Installation". If DTC still exists, substitute a known-good SDM and recheck.

NOTE

Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components and ensure all components are properly mounted.
- Clear DTCs referring to "DTC Clearance", if any.
- Repeat "Air Bag Diagnostic System Check" to confirm that the trouble has been corrected.

DTC B1074 / B1078: Driver / Passenger Forward-Sensor Circuit Short to Power Circuit or Open

S6JB0B8204028



Wiring Diagram


Refer to "DTC B1073 / B1077: Driver / Passenger Forward-Sensor Circuit Short to Ground".

⚠ CAUTION**Be sure to observe instructions under CAUTION in "Air Bag Diagnostic System Check Flow".****DTC Will Set when**

Forward-sensor abnormal signal is detected by SDM.

Flow Test Description**Step 1: Check for open circuit in forward-sensor circuit.****Step 2: Check for short circuit between forward-sensor circuit and power supply circuit.****Step 3: Check if malfunction is in forward-sensor.****DTC Troubleshooting**

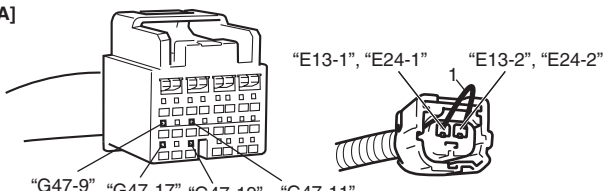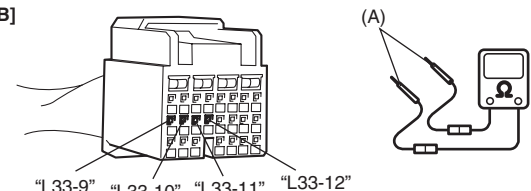Step	Action	Yes	No
1	<p>1) Turn ignition switch to OFF position.</p> <p>2) Disconnect forward-sensor connector "E13" or "E24".</p> <p>3) Disconnect SDM connector "G47" or "L33".</p> <p>4) Check proper connection to SDM connector at terminals "G47-9" and "G47-17" or "L33-9" and "L33-10" (for DTC B1074), or terminals "G47-11" and "G47-19" or "L33-11" and "L33-12" (for DTC B1078).</p> <p>5) Check proper connection to forward-sensor connector at terminals "E13-1" and "E13-2" or "E24-1" and "E24-2".</p> <p>6) Using service wire (1), connect "E13-1" and "E13-2" terminal (for DTC B1074) or "E24-1" and "E24-2" terminal (for DTC B1078) of forward-sensor connector.</p> <p>7) Measure resistance between "G47-9" and "G47-17" (for DTC B1074) or "G47-11" and "G47-19" (for DTC B1078) [A], or between "L33-9" and "L33-10" (for DTC B1074) or "L33-11" and "L33-12" (for DTC B1078) [B].</p> <p>Special tool (A): 09932-76010</p> <p>[A]</p>  <p>[B]</p>  <p>I5JB0A820051-01</p> <p><i>Is each measured resistance 1 Ω or less?</i></p>	Go to Step 2.	<p>For DTC B1074: High resistance or open wire in "ORN" circuit or "PNK/BLK" circuit.</p> <p>For DTC B1078: High resistance or open wire in "PNK" circuit or "PNK/BLU" circuit.</p>

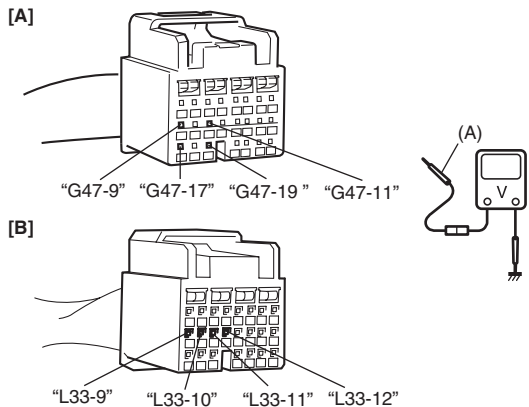Step	Action	Yes	No
2	<p>1) Disconnect service wire from "E13" or "E24" connector.</p> <p>2) Measure voltage between "G47-9" and body ground, "G47-17" and body ground (for DTC B1074) or "G47-11" and body ground, "G47-19" and body ground (for DTC B1078) [A], or between "L33-9" and body ground, "L33-10" and body ground (for DTC B1074) or "L33-11" and body ground, "L33-12" and body ground (for DTC B1078) [B].</p> <p>Special tool (A): 09932-76010</p>  <p>I5JB0A820052-01</p> <p><i>With ignition switch ON, is each measured value 1 V or less?</i></p>	Go to Step 3.	<p>For DTC B1074: "ORN" circuit or "PNK/BLK" circuit shorted to power circuit.</p> <p>For DTC B1078: "PNK" circuit or "PNK/BLU" circuit shorted to power circuit.</p>
3	<p>1) Check forward-sensor referring to "Forward-Sensor Inspection".</p> <p><i>Is it in good condition?</i></p>	Substitute a known-good SDM and recheck.	Replace forward-sensor referring to "Forward-Sensor Removal and Installation". If DTC still exists, substitute a known-good SDM and recheck.

NOTE

Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components and ensure all components are properly mounted.
- Clear DTCs referring to "DTC Clearance", if any.
- Repeat "Air Bag Diagnostic System Check" to confirm that the trouble has been corrected.

Be sure to observe instructions under CAUTION in “Air Bag Diagnostic System Check Flow”.

DTC Will Set when

Side-sensor abnormal signal is detected by SDM.

Flow Test Description



Step 1: Check for open circuit in forward sensor circuit.

Step 2: Check for short circuit between forward sensor circuit and ground.

Step 3: Check for short circuit between forward sensor circuit and power supply circuit.

Step 4: Check if malfunction is in forward sensor.

DTC Troubleshooting

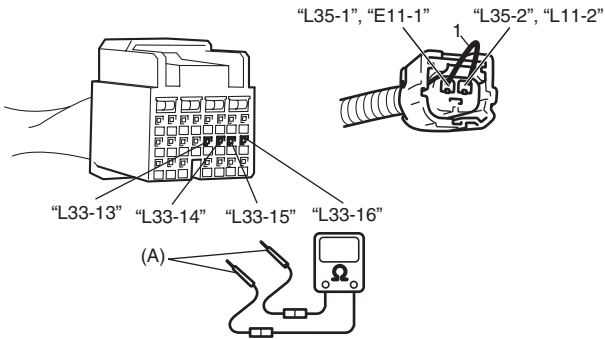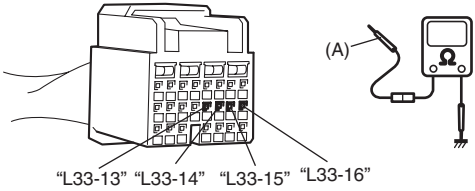Step	Action	Yes	No
1	<p>1) Disconnect side-sensor connector "L35" or "L11".</p> <p>2) Disconnect SDM connector "L33".</p> <p>3) Check proper connection to SDM connector at terminals "L33-13" and "L33-14" or "L33-15" and "L33-16".</p> <p>4) Check proper connection to side-sensor connector at terminals "L35-1" and "L35-2" or "L11-1" and "L11-2".</p> <p>5) Using service wire (1), connect "L35-1" and "L35-2" terminal (for DTC B1087) or "L11-1" and "L11-2" terminal (for DTC B1097) of side-sensor connector.</p> <p>6) Measure resistance between terminals "L33-13" and "L33-14" (for DTC B1087) or terminals "L33-15" and "L33-16" (for DTC B1097) of SDM connector.</p> <p>Special tool (A): 09932-76010</p>  <p>I5JB0A820054-01</p> <p><i>Is each measured resistance 1 Ω or less?</i></p>	Go to Step 2	<p>For DTC B1087: High resistance or open wire in "WHT/RED" circuit or "LT GRN/BLK" circuit.</p> <p>For DTC B1097: High resistance or open wire in "WHT/GRN" circuit or "LT GRN" circuit.</p>
2	<p>Measure resistance between "L33-13" terminal and body ground, and "L33-14" terminal and body ground (for DTC B1087) or between "L33-15" terminal and body ground, and "L33-16" terminal and body ground (for DTC B1097).</p> <p>Special tool (A): 09932-76010</p>  <p>I5JB0A820055-01</p> <p><i>Is each measured resistance infinity?</i></p>	Go to Step 3.	<p>For DTC B1087: "WHT/RED" circuit or "LT GRN/BLK" circuit shorted to ground.</p> <p>For DTC B1097: "WHT/GRN" circuit or "LT GRN" circuit shorted to ground.</p>

8B-72 Air Bag System:

Step	Action	Yes	No
3	Check side-sensor referring to "Side-Sensor Inspection". <i>Is it in good condition?</i>	Substitute a known-good SDM and recheck.	Replace side-sensor referring to "Side-Sensor Removal and Installation". If DTC still exists, substitute a known-good SDM and recheck.

NOTE


Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components and ensure all components are properly mounted.
- Clear DTCs referring to "DTC Clearance", if any.
- Repeat "Air Bag Diagnostic System Check" to confirm that the trouble has been corrected.

DTC B1321 / B1325: Left / Right Side-Air Bag Initiator Circuit Resistance High

S6JB0B8204032

Wiring Diagram

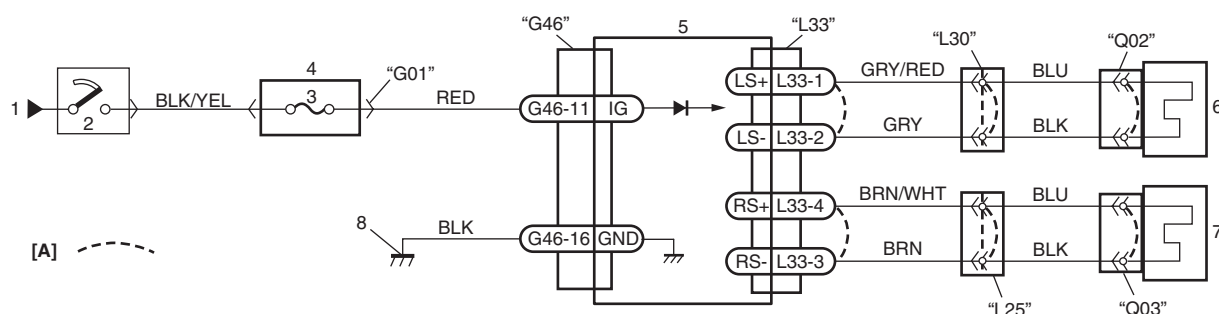

I5JB0A820044-01

[A]: Shorting bar	3. "A/B" fuse	6. Left side-air bag (inflator) module
1. From main fuse	4. Junction block assembly	7. Right side-air bag (inflator) module
2. Ignition switch	5. SDM	8. Ground for air bag system

⚠ CAUTION

Be sure to observe instructions under CAUTION in "Air Bag Diagnostic System Check Flow".

DTC Will Set when

The combined resistance of the side-air bag (inflator) module (left or right), harness wiring and connector terminal contact is above a specified value for specified time.


Flow Test Description

Step 1: Check whether malfunction is in side-air bag (inflator) module.


Step 2: Check side-air bag initiator circuit in floor harness.


Step 3: Check side-air bag initiator circuit in seat harness.

DTC Troubleshooting

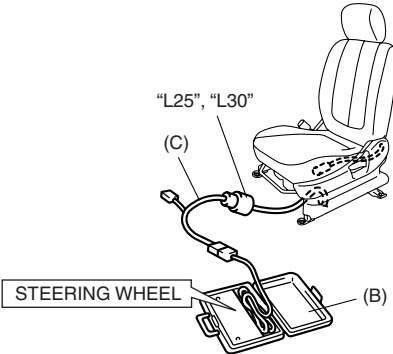Step	Action	Yes	No
1	<p>1) With ignition switch OFF, disconnect side-air bag (inflator) module connector under front seat cushion.</p> <p>2) Check proper connection to left or right side-air bag (inflator) module at terminals in "L25" or "L30" connector.</p> <p>3) If OK, then connect special tools (B) and (C) to side-air bag (inflator) module connector disconnected at the Step 1).</p> <p>Special tool (B): 09932-75010 (C): 09932-78340</p>  <p>I4RS0A820032-01</p> <p>4) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1321 or B1325 still indicated?</i></p>	Go to Step 2.	Go to Step 3.

8B-74 Air Bag System:

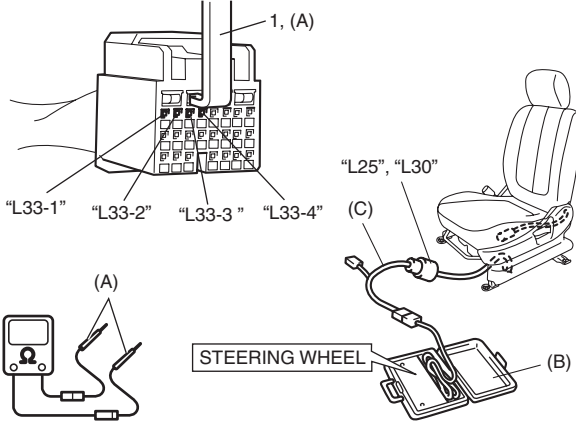Step	Action	Yes	No
2	<div>1) With ignition switch OFF, disconnect SDM connector "L33".</div> <div>2) Check proper connection to SDM at terminals "L33-1" and "L33-2" or "L33-3" and "L33-4".</div> <div>3) If OK, release shorting bar in SDM connector inserting release tool (1) included in special tool (A).</div> <div>4) Measure resistance between "L33-1" and "L33-2" terminals (for DTC B1321) or "L33-3" and "L33-4" terminals (for DTC B1325) with connected special tool (B) and (C).</div> <div>Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-78340</div> <div></div> <div>I5JB0A820045-01</div> <div>Is resistance 5.5 Ω or less?</div>	Substitute a known-good SDM and recheck.	<div>DTC B1321: Repair high resistance or open in "GRY/RED" or "GRY" wire circuit in floor harness.</div> <div>DTC B1325: Repair high resistance or open in "BRN/WHT" or "BRN" wire circuit in floor harness.</div>

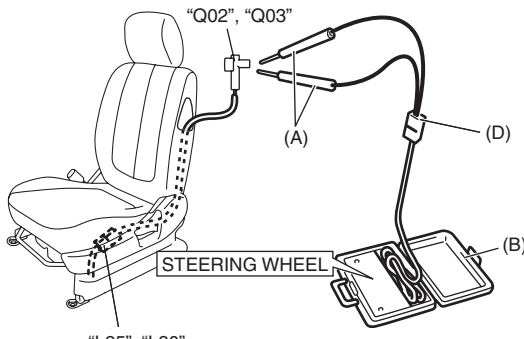Step	Action	Yes	No
3	<p>1) With ignition switch OFF, disconnect special tools (B) and (C) then reconnect connector "L25" or "L30".</p> <p>2) Disconnect side-air bag (inflator) module connector "Q02" or "Q03" from side-air bag (inflator) module.</p> <p>3) Check proper connection to side-air bag (inflator) module at terminal in connector.</p> <p>4) If OK, then connect special tools (A), (B) and (C) to side-air bag (inflator) connector.</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (D): 09932-78310</p>  <p>5) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1321 or B1325 still indicated?</i></p>	<p>DTC B1321: Repair high resistance or open in "GRY/RED" or "GRY" wire circuit in seat harness.</p> <p>DTC B1325: Repair high resistance or open in "BRN/WHT" or "BRN" wire circuit in seat harness.</p>	<p>Replace side-air bag (inflator) module referring to "Side-Air Bag (Inflator) Module Removal and Installation".</p>

NOTE

Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components, ensure all components are properly mounted.
- Clear DTCs referring to "DTC Clearance", if any.
- Repeat "Air Bag Diagnostic System Check" to confirm that the trouble has been corrected.

DTC B1322 / B1326: Left / Right Side-Air Bag Initiator Circuit Resistance Low

S6JB0B8204033

Wiring Diagram

Refer to “DTC B1321 / B1325: Left / Right Side-Air Bag Initiator Circuit Resistance High”.

CAUTION

Be sure to observe instructions under CAUTION in “Air Bag Diagnostic System Check Flow”.

DTC Will Set when

The combined resistance of the side-air bag (inflator) module (left or right), harness wiring and connector terminal contact is below a specified value for specified time.


Flow Test Description


Step 1: Check whether malfunction is in side-air bag (inflator) module.

Step 2: Check side-air bag initiator circuit in floor harness.


Step 3: Check side-air bag initiator circuit in seat harness.

DTC Troubleshooting

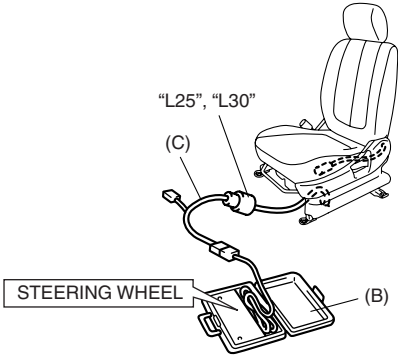Step	Action	Yes	No
1	<div> 1) With ignition switch OFF, disconnect side-air bag (inflator) module connector under front seat cushion. 2) Check proper connection to left or right side-air bag (inflator) module at terminals in “L25” or “L30” connector. 3) If OK, then connect special tools (B) and (C) to side-air bag (inflator) module connector disconnected at the Step 1. <div> Special tool (B): 09932-75010 (C): 09932-78340 </div> <div>  <p>I4RS0A820032-01</p> </div> </div>	Go to Step 2.	Go to Step 3.
	<div> 4) Check SDM DTC. With ignition switch ON, is DTC B1322 or B1326 still indicated? </div>		

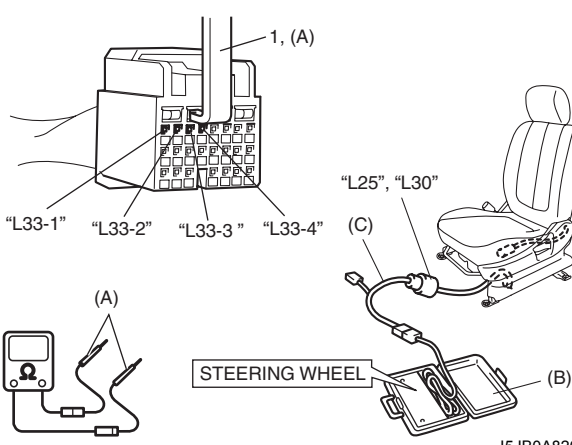Step	Action	Yes	No
2	<p>1) With ignition switch OFF, disconnect SDM connector "L33".</p> <p>2) Check proper connection to SDM at terminals "L33-1" and "L33-2" or "L33-3" and "L33-4".</p> <p>3) If OK, release shorting bar in SDM connector inserting release tool (1) included in special tool (A).</p> <p>4) Measure resistance between "L33-1" and "L33-2" terminals (for DTC B1322) or "L33-3" and "L33-4" terminals (for DTC B1326) with connected special tools (B) and (C).</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-78340</p>  <p><i>Is resistance 0.65 Ω or more?</i></p>	Substitute a known-good SDM and recheck.	<p>DTC B1322: Repair short from "GRY/RED" wire circuit to "GRY" wire circuit or from "GRY/RED" or "GRY" wire circuit to other wire circuit in floor harness.</p> <p>DTC B1326: Repair short from "BRN/WHT" wire circuit to "BRN" wire circuit or from "BRN/WHT" or "BRN" wire circuit to other wire circuit in floor harness.</p>

8B-78 Air Bag System:

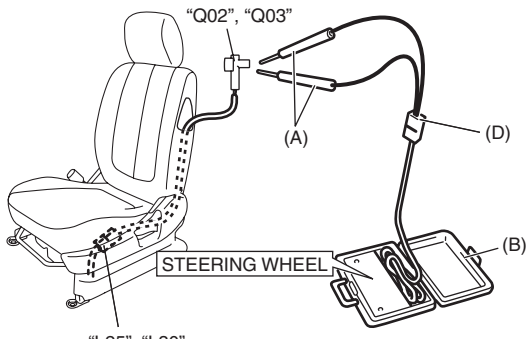Step	Action	Yes	No
3	<p>1) With ignition switch OFF, disconnect special tools (B) and (C) then reconnect connector "L25" or "L30".</p> <p>2) Disconnect side-air bag (inflator) module connector "Q02" or "Q03" from side-air bag (inflator) module.</p> <p>3) Check proper connection to side-air bag (inflator) module at terminal in connector.</p> <p>4) If OK, then connect special tools (A), (B) and (C) to side-air bag (inflator) connector.</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (D): 09932-78310</p>  <p>5) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1322 or B1326 still indicated?</i></p>	<p>DTC B1322: Repair short from "GRY/RED" wire circuit to "GRY" wire circuit in seat harness or from "GRY/RED" or "GRY" wire circuit to other wire circuit.</p> <p>DTC B1326: Repair short from "BRN/WHT" wire circuit to "BRN" wire circuit in seat harness or from "BRN/WHT" or "BRN" wire circuit to other wire circuit.</p>	<p>Replace side-air bag (inflator) module referring to "Side-Air Bag (Inflator) Module Removal and Installation".</p>

NOTE

Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components, ensure all components are properly mounted.
- Clear DTCs referring to "DTC Clearance", if any.
- Repeat "Air Bag Diagnostic System Check" to confirm that the trouble has been corrected.

DTC B1323 / B1327: Left / Right Side-Air Bag Initiator Circuit Short to Ground

S6JB0B8204034


Wiring Diagram

Refer to "DTC B1321 / B1325: Left / Right Side-Air Bag Initiator Circuit Resistance High".

⚠ CAUTION**Be sure to observe instructions under CAUTION in "Air Bag Diagnostic System Check Flow".****DTC Will Set when**

The voltage measured at side-air bag (left or right) initiator circuit is below a specified value for specified time.

Flow Test Description**Step 1: Check whether malfunction is in side-air bag (inflator) module.****Step 2: Check side-air bag initiator circuit in floor harness.****Step 3: Check side-air bag initiator circuit in seat harness.****DTC Troubleshooting**

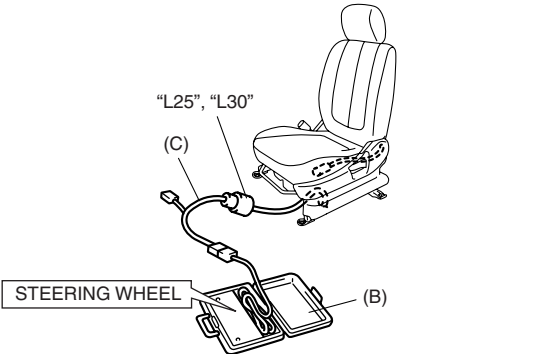Step	Action	Yes	No
1	<p>1) With ignition switch OFF, disconnect side-air bag (inflator) module connector under front seat cushion.</p> <p>2) Check proper connection to left or right side-air bag (inflator) module at terminals in "L25" or "L30" connector.</p> <p>3) If OK, then connect special tools (B) and (C) to side-air bag (inflator) module connector disconnected at the Step 1.</p> <p>Special tool (B): 09932-75010 (C): 09932-78340</p>  <p>4) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1323 or B1327 still indicated?</i></p>	Go to Step 2.	Go to Step 3.

Step	Action	Yes	No
2	<div> 1) With ignition switch OFF, disconnect special tools and SDM connector “L33”. 2) Release shorting bar in SDM connector inserting release tool (1) included in special tool (A). 3) Measure resistance between “L33-1” and body ground, and between “L33-2” and body ground (for DTC B1323) or “L33-3” and body ground, and between “L33-4” and body ground (for DTC B1327) with connected special tools (B) and (C). </div> <div> <p>Special tool</p> <p>(A): 09932-76010</p> <p>(B): 09932-75010</p> <p>(C): 09932-78340</p> </div> <div> <p>The diagram illustrates the testing procedure for the Air Bag System. It shows a side view of a car seat with the SDM connector (L33) located on the seat. A cable (C) connects the seat to a control unit (B) located under the steering wheel. A release tool (A) is shown inserted into the SDM connector. The connector has four terminals labeled L33-1, L33-2, L33-3, and L33-4. A label '1, (A)' points to the release tool. A label 'L25, L30' points to the seat. A label 'STEERING WHEEL' points to the control unit (B). A label '15JB0A820047-01' is at the bottom right of the diagram.</p> </div> <div> <p><i>Is resistance infinity?</i></p> </div>	Substitute a known-good SDM and recheck.	DTC B1323: Repair short from “GRY/RED” or “GRY” wire circuit to ground in floor harness. DTC B1327: Repair short from “BRN/WHT” or “BRN” wire circuit to ground in floor harness.

Step	Action	Yes	No
3	<p>1) With ignition switch OFF, disconnect special tools (B) and (C) then reconnect connector "L25" or "L30".</p> <p>2) Disconnect side-air bag (inflator) module connector "Q02" or "Q03" from side-air bag (inflator) module.</p> <p>3) Check proper connection to side-air bag (inflator) module at terminal in connector.</p> <p>4) If OK, then connect special tools (A), (B) and (C) to side-air bag (inflator) connector.</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (D): 09932-78310</p> <p>5) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1323 or B1327 still indicated?</i></p>	<p>DTC B1323: Repair short from "GRY/RED" or "GRY" wire circuit to ground in seat harness.</p> <p>DTC B1327: Repair short from "BRN/WHT" or "BRN" wire circuit to ground in seat harness.</p>	<p>Replace side-air bag (inflator) module referring to "Side-Air Bag (Inflator) Module Removal and Installation".</p>

NOTE

Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components, ensure all components are properly mounted.
- Clear DTCs referring to "DTC Clearance", if any.
- Repeat "Air Bag Diagnostic System Check" to confirm that the trouble has been corrected.

DTC B1324 / B1328: Left / Right Side-Air Bag Initiator Circuit Short to Power Circuit

S6JB0B8204035

Wiring Diagram

Refer to “DTC B1321 / B1325: Left / Right Side-Air Bag Initiator Circuit Resistance High”.

⚠ CAUTION

Be sure to observe instructions under CAUTION in “Air Bag Diagnostic System Check Flow”.

DTC Will Set when

The voltage measured at side-air bag (left or right) initiator circuit is above a specified value for specified time.


Flow Test Description


Step 1: Check whether malfunction is in side-air bag (inflator) module.

Step 2: Check side-air bag initiator circuit in floor harness.


Step 3: Check side-air bag initiator circuit in seat harness.

DTC Troubleshooting

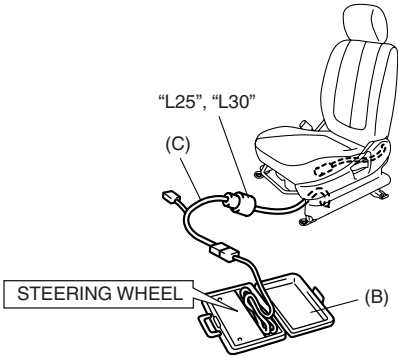Step	Action	Yes	No
1	<div> 1) With ignition switch OFF, disconnect side-air bag (inflator) module connector under front seat cushion. 2) Check proper connection to left or right side-air bag (inflator) module at terminals in “L25” or “L30” connector. 3) If OK, then connect special tools (B) and (C) to side-air bag (inflator) module connector disconnected at the Step 1. Special tool (B): 09932-75010 (C): 09932-78340 </div> <div>  <p>I4RS0A820032-01</p> </div> <div> 4) Check SDM DTC. <i>With ignition switch ON, is DTC B1324 or B1328 still indicated?</i> </div>	Go to Step 2.	Go to Step 3.

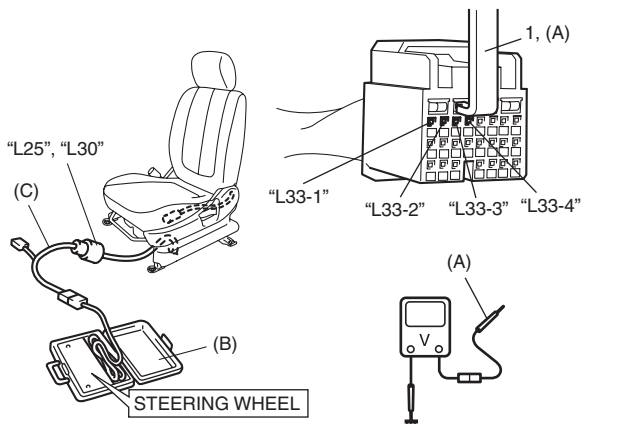Step	Action	Yes	No
2	<p>1) With ignition switch OFF, disconnect special tools (B), (C) and SDM connector "L33".</p> <p>2) Release shorting bar in SDM connector inserting release tool (1) included in special tool (A).</p> <p>3) Measure voltage between "L33-1" and body ground, and between "L33-2" and ground (for DTC B1324) or "L33-3" and body ground, and between "L33-4" and body ground (for DTC B1328) with connected special tools (B) and (C).</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-78340</p>  <p>I5JB0A820048-01</p> <p><i>With ignition switch ON, is voltage 1 V or less?</i></p>	Substitute a known-good SDM and recheck.	<p>DTC B1324: Repair short from "GRY/RED" or "GRY" wire circuit to power circuit in floor harness.</p> <p>DTC B1328: Repair short from "BRN/WHT" or "BRN" wire circuit to power circuit in floor harness.</p>

8B-84 Air Bag System:

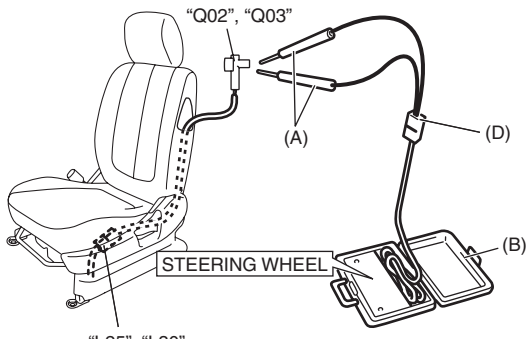Step	Action	Yes	No
3	<p>1) With ignition switch OFF, disconnect special tools (B) and (C) then reconnect connector "L25" or "L30".</p> <p>2) Disconnect side-air bag (inflator) module connector "Q02" or "Q03" from side-air bag (inflator) module.</p> <p>3) Check proper connection to side-air bag (inflator) module at terminal in connector.</p> <p>4) If OK, then connect special tools (A), (B) and (C) to side-air bag (inflator) connector.</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (D): 09932-78310</p>  <p>5) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1064 or B1068 still indicated?</i></p>	<p>DTC B1324: Repair short from "GRY/RED" or "GRY" wire circuit to power circuit in seat harness.</p> <p>DTC B1328: Repair short from "BRN/WHT" or "BRN" wire circuit to power circuit in seat harness.</p>	<p>Replace side-air bag (inflator) module referring to "Side-Air Bag (Inflator) Module Removal and Installation".</p>


NOTE

Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components, ensure all components are properly mounted.
- Clear DTCs referring to "DTC Clearance", if any.
- Repeat "Air Bag Diagnostic System Check" to confirm that the trouble has been corrected.

DTC B1331 / B1335: Left / Right Side Curtain-Air Bag Initiator Circuit Resistance High

S6JB0B8204036

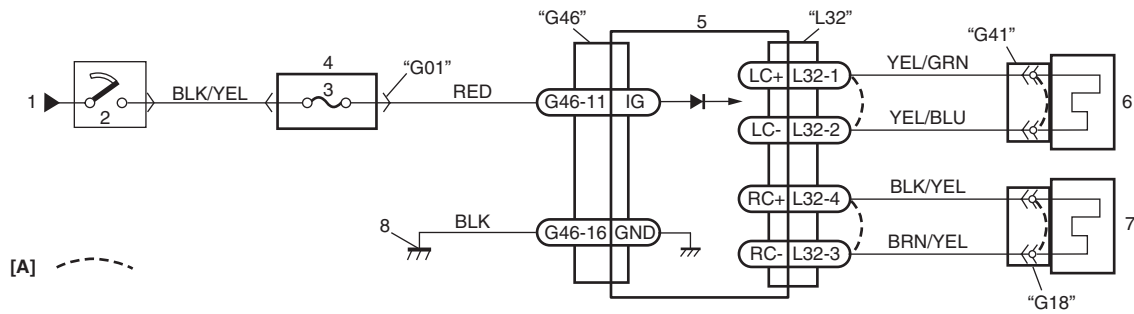Wiring Diagram

I5JB0A820056-01

[A]: Shorting bar	3. "A/B" fuse	6. Left side curtain-air bag (inflator) module
1. From main fuse	4. Junction block assembly	7. Right side curtain-air bag (inflator) module
2. Ignition switch	5. SDM	8. Ground for air bag system

⚠ CAUTION

Be sure to observe instructions under CAUTION in "Air Bag Diagnostic System Check Flow".

DTC Will Set when


The combined resistance of the side curtain-air bag (inflator) module (left or right), harness wiring and connector terminal contact is above a specified value for specified time.


Flow Test Description

Step 1: Check whether malfunction is in side curtain-air bag (inflator) module.

Step 2: Check side curtain-air bag initiator circuit.

DTC Troubleshooting

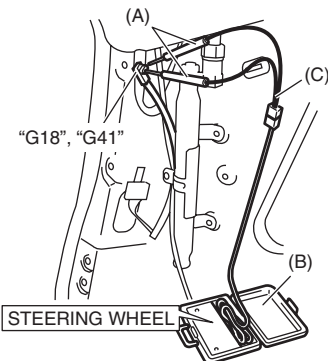Step	Action	Yes	No
1	<p>1) With ignition switch OFF, remove rear side upper trim of left or right side and disconnect side curtain-air bag (inflator) module connector.</p> <p>2) Check proper connection to side curtain-air bag (inflator) module at terminals in "G18" or "G41" connector.</p> <p>3) If OK, then connect special tools (A), (B) and (C) to side curtain-air bag (inflator) module connector.</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-78310</p>  <p style="text-align: right;">I5JB0A820057-01</p> <p>4) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1331 or B1335 still indicated?</i></p>	Go to Step 2.	Replace side curtain-air bag (inflator) module referring to "Side Curtain-Air Bag (Inflator) Module Removal and Installation".

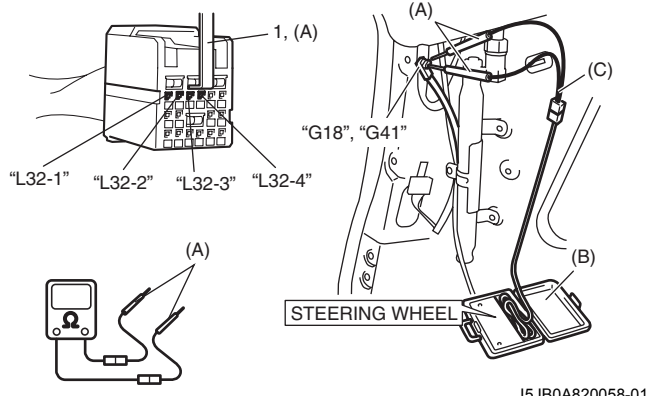Step	Action	Yes	No
2	<p>1) With ignition switch OFF, disconnect SDM connector "L32".</p> <p>2) Check proper connection to SDM at terminals "L32-1" and "L32-2" or "L32-3" and "L32-4".</p> <p>3) If OK, release shorting bar in SDM connector inserting release tool (1) included in special tool (A).</p> <p>4) Measure resistance between "L32-1" and "L32-2" terminals (for DTC B1331) or "L32-3" and "L32-4" terminals (for DTC B1335) with connected special tools (A), (B) and (C).</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-78310</p>  <p>I5JB0A820058-01</p> <p><i>Is resistance 5.5 Ω or less?</i></p>	Substitute a known-good SDM and recheck.	<p>DTC B1331: Repair high resistance or open in "YEL/GRN" or "YEL/BLU" wire circuit.</p> <p>DTC B1335: Repair high resistance or open in "BLK/YEL" or "BRN/YEL" wire circuit.</p>

NOTE

Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components, ensure all components are properly mounted.
- Clear DTCs referring to "DTC Clearance", if any.
- Repeat "Air Bag Diagnostic System Check" to confirm that the trouble has been corrected.

DTC B1332 / B1336: Left / Right Side Curtain-Air Bag Initiator Circuit Resistance Low

S6JB0B8204037

Wiring Diagram

Refer to “DTC B1331 / B1335: Left / Right Side Curtain-Air Bag Initiator Circuit Resistance High”.

CAUTION

Be sure to observe instructions under CAUTION in “Air Bag Diagnostic System Check Flow”.

DTC Will Set when


The combined resistance of the side curtain-air bag (inflator) module (left or right), harness wiring and connector terminal contact is below a specified value for specified time.

Flow Test Description


Step 1: Check whether malfunction is in side curtain-air bag (inflator) module.

Step 2: Check side curtain-air bag initiator circuit.

DTC Troubleshooting

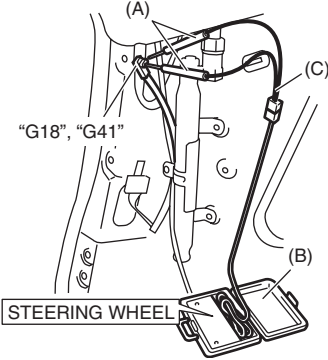Step	Action	Yes	No
1	<div> 1) With ignition switch OFF, remove rear side upper trim of left or right side and disconnect side curtain-air bag (inflator) module connector. 2) Check proper connection to side curtain-air bag (inflator) module at terminals in “G18” or “G41” connector. 3) If OK, then connect special tools (A), (B) and (C) to side curtain-air bag (inflator) module connector. <div> Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-78310 </div> <div>  </div> </div>	Go to Step 2.	Replace side curtain-air bag (inflator) module referring to “Side Curtain-Air Bag (Inflator) Module Removal and Installation”.
	<div> 4) Check SDM DTC. <div> With ignition switch ON, is DTC B1332 or B1336 still indicated? </div> </div>		

15JB0A820057-01

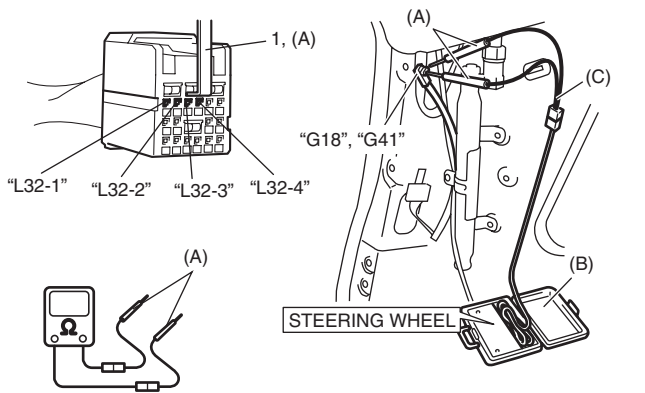Step	Action	Yes	No
2	<p>1) With ignition switch OFF, disconnect SDM connector "L32".</p> <p>2) Check proper connection to SDM at terminals "L32-1" and "L32-2" or "L32-3" and "L32-4".</p> <p>3) If OK, release shorting bar in SDM connector inserting release tool (1) included in special tool (A).</p> <p>4) Measure resistance between "L32-1" and "L32-2" terminals (for DTC B1332) or "L32-3" and "L32-4" terminals (for DTC B1336) with connected special tools (A), (B) and (C).</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-78310</p>  <p>I5JB0A820058-01</p> <p><i>Is resistance 0.65 Ω or more?</i></p>	Substitute a known-good SDM and recheck.	<p>DTC B1332: Repair short from "YEL/GRN" wire circuit to "YEL/BLU" wire circuit or from "YEL/GRN" or "YEL/BLU" wire circuit to other wire circuit.</p> <p>DTC B1336: Repair short from "BLK/YEL" wire circuit to "BRN/YEL" wire circuit or from "BLK/YEL" or "BRN/YEL" wire circuit to other wire circuit.</p>

NOTE

Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components, ensure all components are properly mounted.
- Clear DTCs referring to "DTC Clearance", if any.
- Repeat "Air Bag Diagnostic System Check" to confirm that the trouble has been corrected.

DTC B1333 / B1337: Left / Right Side Curtain-Air Bag Initiator Circuit Short to Ground

S6JB0B8204038

Wiring Diagram

Refer to “DTC B1331 / B1335: Left / Right Side Curtain-Air Bag Initiator Circuit Resistance High”.

⚠ CAUTION

Be sure to observe instructions under CAUTION in “Air Bag Diagnostic System Check Flow”.

DTC Will Set when


The voltage measured at side curtain-air bag (left or right) initiator circuit is below a specified value for specified time.

Flow Test Description


Step 1: Check whether malfunction is in side curtain-air bag (inflator) module.

Step 2: Check side curtain-air bag initiator circuit.

DTC Troubleshooting

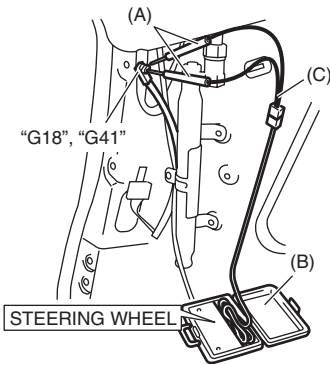Step	Action	Yes	No
1	<p>1) With ignition switch OFF, remove rear side upper trim of left or right side and disconnect side curtain-air bag (inflator) module connector.</p> <p>2) Check proper connection to side-air bag (inflator) module at terminals in “G18” or “G41” connector.</p> <p>3) If OK, then connect special tools (A), (B) and (C) to side curtain-air bag (inflator) module connector.</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-78310</p>  <p>4) Check SDM DTC.</p> <p><i>With ignition switch ON, is DTC B1333 or B1337 still indicated?</i></p>	Go to Step 2.	Replace side curtain-air bag (inflator) module referring to “Side Curtain-Air Bag (Inflator) Module Removal and Installation”.

15JB0A820057-01

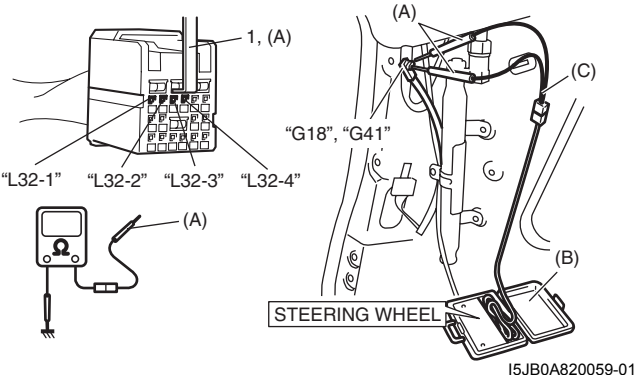Step	Action	Yes	No
2	<p>1) With ignition switch OFF, disconnect SDM connector "L32".</p> <p>2) Release shorting bar in SDM connector inserting release tool (1) included in special tool (A).</p> <p>3) Measure resistance between "L32-1" and body ground, and between "L32-2" and body ground (for DTC B1333) or "L32-3" and body ground, and between "L32-4" and body ground (for DTC B1337) with connected special tools (A), (B) and (C).</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-78310</p>  <p><i>Is resistance infinity?</i></p>	Substitute a known-good SDM and recheck.	<p>DTC B1333: Repair short from "YEL/GRN" or "YEL/BLU" wire circuit to ground.</p> <p>DTC B1337: Repair short from "BLK/YEL" or "BRN/YEL" wire circuit to ground.</p>

NOTE

Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components, ensure all components are properly mounted.
- Clear DTCs referring to "DTC Clearance", if any.
- Repeat "Air Bag Diagnostic System Check" to confirm that the trouble has been corrected.

DTC B1334 / B1338: Left / Right Side Curtain-Air Bag Initiator Circuit Short to Power Circuit

S6JB0B8204039

Wiring Diagram

Refer to “DTC B1331 / B1335: Left / Right Side Curtain-Air Bag Initiator Circuit Resistance High”.

CAUTION

Be sure to observe instructions under CAUTION in “Air Bag Diagnostic System Check Flow”.

DTC Will Set when


The voltage measured at side curtain-air bag (left or right) initiator circuit is above a specified value for specified time.

Flow Test Description


Step 1: Check whether malfunction is in side curtain-air bag (inflator) module.

Step 2: Check side curtain-air bag initiator circuit.

DTC Troubleshooting

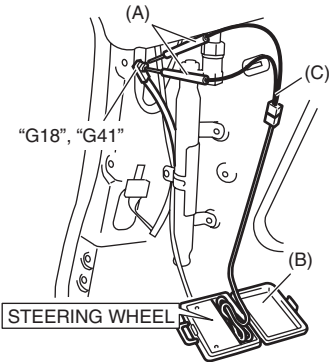Step	Action	Yes	No
1	<div> 1) With ignition switch OFF, remove rear side upper trim of left or right side and disconnect side curtain-air bag (inflator) module connector. 2) Check proper connection to side curtain-air bag (inflator) module at terminals in “G18” or “G41” connector. 3) If OK, then connect special tools (A), (B) and (C) to side curtain-air bag (inflator) module connector. <div> Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-78310 </div> <div>  </div> </div>	Go to Step 2.	Replace side curtain-air bag (inflator) module referring to “Side Curtain-Air Bag (Inflator) Module Removal and Installation”.
	<div> 4) Check SDM DTC. <div> With ignition switch ON, is DTC B1334 or B1338 still indicated? </div> </div>		

15JB0A820057-01

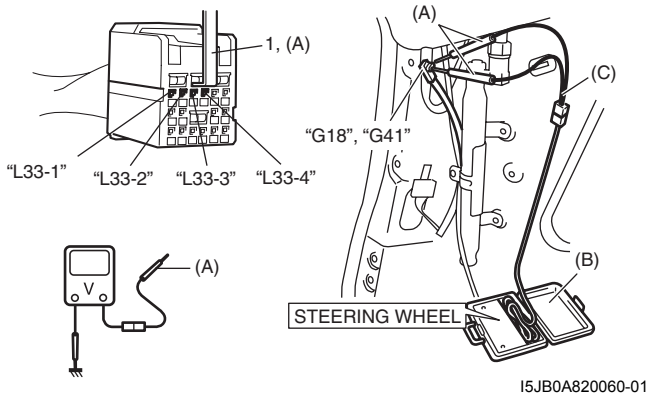Step	Action	Yes	No
2	<p>1) With ignition switch OFF, disconnect SDM connector "L32".</p> <p>2) Release shorting bar in SDM connector inserting release tool (1) included in special tool (A).</p> <p>3) Measure voltage between "L32-1" and body ground, and between "L32-2" and ground (for DTC B1334) or "L32-3" and body ground, and between "L32-4" and body ground (for DTC B1338) with connected special tools (A), (B) and (C).</p> <p>Special tool (A): 09932-76010 (B): 09932-75010 (C): 09932-78310</p>  <p><i>With ignition switch ON, is voltage 4 V or less?</i></p>	Substitute a known-good SDM and recheck.	<p>DTC B1034: Repair short from "YEL/GRN" or "YEL/BLU" wire circuit to power circuit.</p> <p>DTC B1038: Repair short from "BLK/YEL" or "BRN/YEL" wire circuit to power circuit.</p>

NOTE

Upon completion of inspection and repair work, perform the following items.

- Reconnect all air bag system components, ensure all components are properly mounted.
- Clear DTCs referring to "DTC Clearance", if any.
- Repeat "Air Bag Diagnostic System Check" to confirm that the trouble has been corrected.

Inspection of Intermittent and Poor Connections

S6JB0B8204040


Most intermittents are caused by faulty electrical connections or wiring. When a check for proper connection is requested in a diagnostic flow, perform careful check of suspect circuits.

If any abnormality is found, repair or replace as a wire harness assembly.

- Poor mating of connector halves, or terminals not fully seated in the connector body (backed out).
- Dirt or corrosion on the terminals. The terminals must be clean and free of any foreign material which could impede proper terminal contact. However, cleaning the terminal with a sand paper or the like is prohibited.
- Damaged connector body, exposing the terminals to moisture and dirt, as well as not maintaining proper terminal orientation with the component or mating connector.
- Improperly formed or damaged terminals. Check each connector terminal in problem circuits carefully to ensure good contact tension by using the corresponding mating terminal included in the connector test adapter kit (special tool). If contact tension is not enough, reform the terminal to increase contact tension or replace it.


Special tool

(A): 09932-76010 Connector test adapter kit

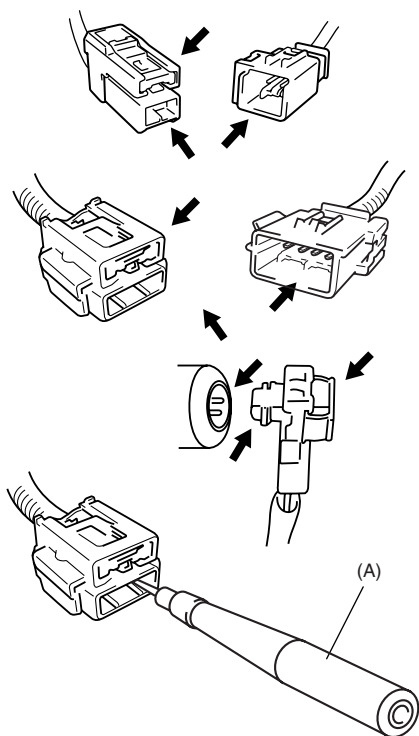


I4RS0A820045-01

- Poor terminal-to-wire connection. Check each wire harness in problem circuits for poor connection by shaking it by hand lightly. If any abnormal condition is found, change the wire harness assembly or component parts with new ones.

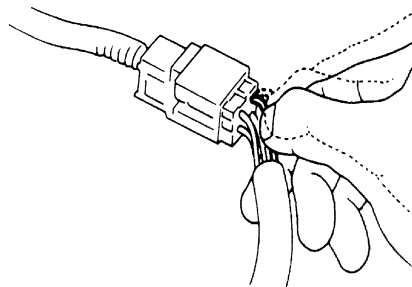

IYSQ01010028-01

- Wire insulation which is rubbed through, causing an intermittent short as the bare area touches other wiring or parts of the vehicle.
- Wire broken inside the insulation. This condition could cause a continuity check to show a good circuit, but if only 1 or 2 strands of a multi-strand-type wire are intact, resistance could be far too high.

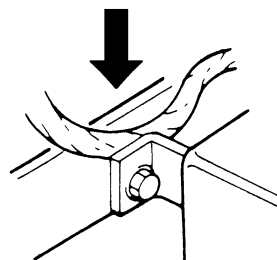

IYSQ01820025-01

Repair and Inspection Required after Accident

S6JB0B8204041

⚠ CAUTION

- All air bag system components, including the electrical harness (component mounting points), must be inspected after an accident. If any components are damaged or bent, they must be replaced even if air bag system activation did not occur.
- Never use air bag system parts from another vehicle.
- Do not attempt to service the parts below. Service of these parts is by replacement only.
 - Driver / Passenger air bag (inflator) modules
 - Driver / Passenger side-air bag (inflator) modules
 - Driver / Passenger side curtain-air bag (inflator) modules
 - Driver / Passenger seat belt pretensioners
 - Driver / Passenger forward-sensors
 - Left / Right side-sensors
 - SDM
 - Contact coil
 - Air bag wire harness in main harness, instrument panel harness, floor harness, passenger air bag harness and seat harness.
- Proper operation of the sensors and air bag system requires that any repairs to the vehicle structure return it to its original production configuration.

⚠ CAUTION

After detecting one time of such collision as to meet deployment conditions, the SDM must not be used.

Refer to “Air Bag Diagnostic System Check” when checking the SDM.

Accident with Deployment / Activation – Component Replacement

When driver and passenger air bags are deployed, the following components must be replaced.

- Driver and passenger air bag (inflator) modules
- Driver and passenger seat belt pretensioners
- SDM
- Driver / Passenger forward-sensors

Instrument panel

When side-air bag and side curtain-air bag are deployed, the following components must be replaced.


- Deployed side-air bag (inflator) module
- Deployed side curtain-air bag (inflator) module
- Side-sensor
- SDM

Accident with or without Deployment / Activation – Component Inspections

Certain air bag and restraint system components must be inspected after any crash, whether the air bag system activated or not. If any faulty condition is found in the following checks, replace faulty part.

Those components are:


- Steering column (1) and shaft joints
 - Check for length, damage and bend according to “Checking Steering Column for Accident Damage in Section 6B”.
- Steering column bracket (2) and capsules
 - Check for damage and bent.

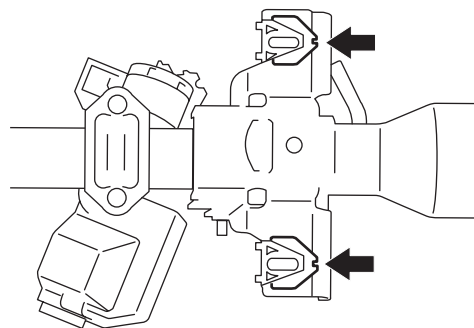

I5JB0A820061-01


8B-96 Air Bag System:

- Steering wheel and driver air bag (inflator) module
 - Check for damage or air bag (inflator) module fitness.
 - Check trim cover (pad surface) for cracks.
 - Check wire harness and connector for damage or tightness.

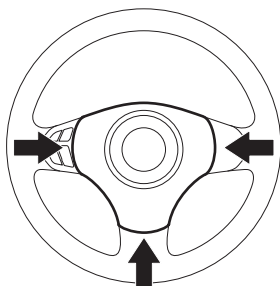


I5JB0A820062-01

- Contact coil
 - Check wire harness and connectors for damage or tightness.
 - Check contact coil case for damage.

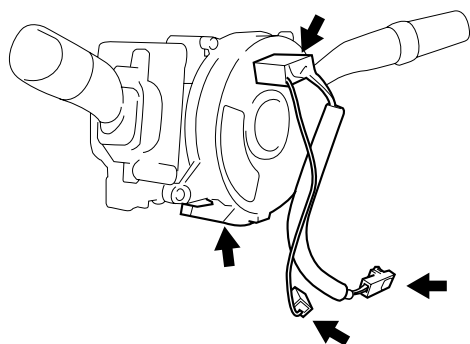


I4RS0A820048-01

- Instrument panel member and reinforcement
 - Check for any distortion, bending, cracking or other damage.
 - Check instrument panel for cracks or deformities.
- Passenger air bag (inflator) module
 - Check for dents, cracks, damage or fitness.
 - Check harness and connector for damage or tightness.

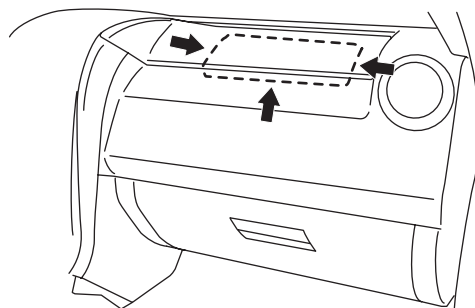


I5JB0A820063-01

- SDM
 - Check for external damage such as deformation, scratch, crack, peeled paint, etc.
 - Check SDM for a cause in itself preventing its proper installation. (There is a gap between SDM and SDM plate, or it cannot be fixed securely.)
 - Check connector or lead wire of SDM for scorching, melting or damage.
 - Check SDM connector and terminals for tightness.
 - Check if SDM sets a DTC and is judged as malfunctioning according to the diagnostic flow.

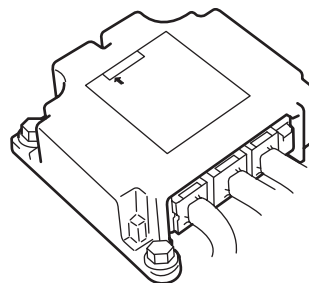

I5JB0A820064-01


- Air bag wire harness and connections
 - Check for damages, deformities or poor connections.
Refer to "Inspection of Intermittent and Poor Connections".
 - Check wire harness clamps for tightness.

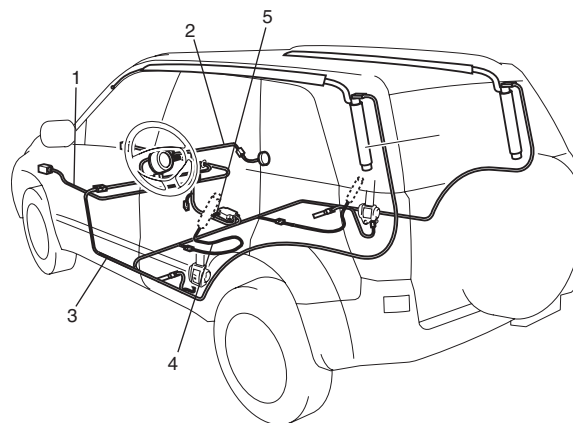

I5JB0A820006-01


1. Main harness	4. Seat harness
2. Instrument panel harness	5. Grounding point
3. Floor harness	

- Forward-sensor
 - Check sensor (1) and bracket (2) for damage, bend or rust.
 - Check connector (3) or lead wire (4) of forward-sensor for scorching, melting or damage.

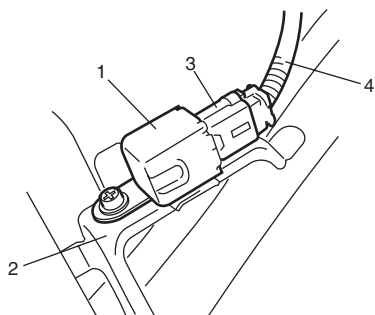


I5JB0A820065-01

- Side-sensor
 - Check sensor (1) and under body (2) for dents, cracks, deformation or rust.
 - Check sensor connector (sensor side and harness side) (3) or sensor lead wire (4) for damage, crack, scorching or melting.

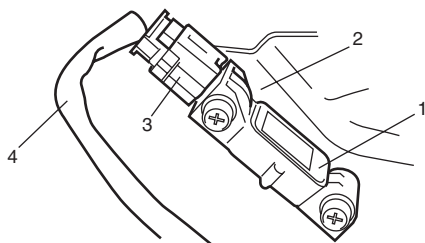

I5JB0A820066-01

- Seat belt pretensioner
 - Check for dents, cracks, damage or fitness
 - Check harness and connector for damage or tightness.

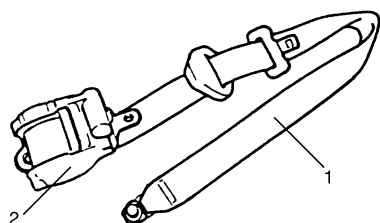

I3JA01820043-01

1. Seat belt
2. Retractor assembly


- Seat belts and mounting points
 - Refer to “Front Seat Belt Components in Section 8A”.
- “AIR BAG” warning light
 - After vehicle is completely repaired, perform “Air Bag Diagnostic System Check”.
- Side-air bag (inflator) module
 - Check for dents, cracks, damage or fitness.
 - Check trim cover for cracks or deformities.
 - Check wire harness and connector for damage or tightness.
- Side curtain-air bag (inflator) module
 - Check for dents, cracks, damage or fitness.
 - Check harness wire harness and connector for damage or tightness.
 - Check headlining for cracks or deformation.

Repair Instructions

Disabling Air Bag System

S6JB0B8206001

- 1) Turn steering wheel so that vehicle's wheels (front tires) are pointing straight ahead.
- 2) Disconnect negative (–) cable at battery.
- 3) Turn ignition switch to "LOCK" position and remove key.
- 4) Remove "A/B" fuse from fuse box.
- 5) Remove steering column cover and disconnect yellow connector (1) of contact coil and combination switch assembly as follows.
 - a) Release locking of lock slider (2).
 - b) After unlocked, disconnect connector.
- 6) Remove glove box from instrument panel and disconnect yellow connector (3) for passenger air bag as follows.
 - a) Release locking of lock slider (2).
 - b) After unlocked, disconnect connector.
- 7) If equipped with side-air bag (inflator) module, disconnect yellow connector of side-air bag (inflator) module under front seat cushion (4).
 - a) Release locking of lock slider (2).
 - b) After unlocked, disconnect connector.
- 8) If equipped with side curtain-air bag (inflator) module, remove quarter inner trim and disconnect black connector (5) of side curtain-air bag (inflator) module.
 - a) Unlock button (6).
 - b) With lock button unlocked, disconnect connector.

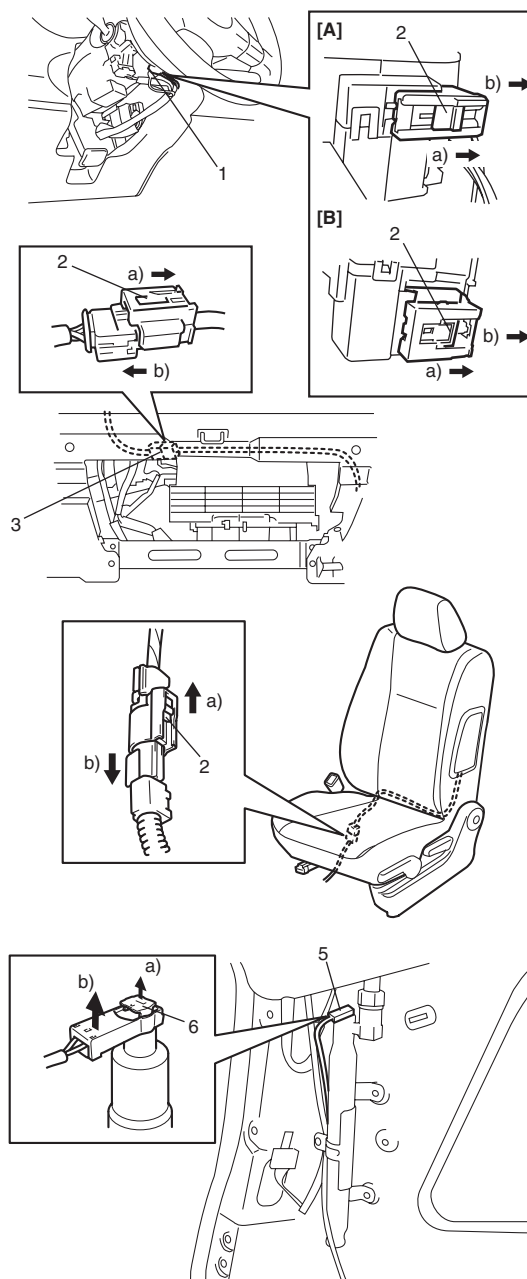

I5JB0A820067-01

[A]: For vehicle without cruise control system

[B]: For vehicle with cruise control system


NOTE

With “A/B” fuse removed and ignition switch ON, “AIR BAG” warning light will be ON. This is normal operation and does not indicate air bag system malfunction.

Enabling Air Bag System

S6JB0B8206002


- 1) Confirm that battery negative (–) cable is disconnected.
- 2) Turn ignition switch to “LOCK” position and remove key.
- 3) Connect yellow connector (1) of contact coil and combination switch assembly by pushing connector till click is heard from it.

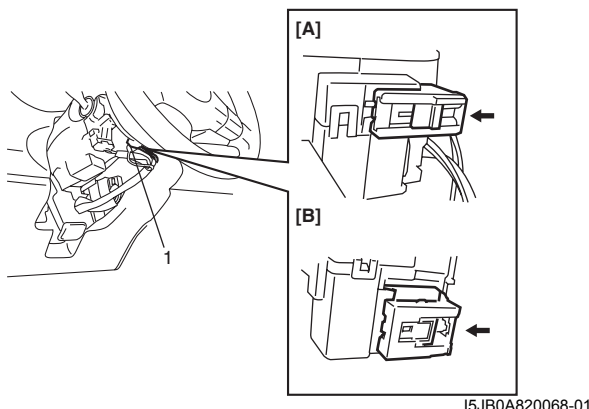

[A]: For vehicle without cruise control system


[B]: For vehicle with cruise control system

- 4) Connect yellow connector (1) of passenger air bag (inflator) module by pushing connector till click is heard from it.

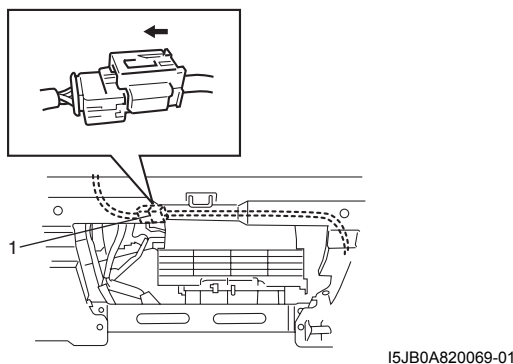


- 5) Install glove box.

- 6) If equipped with side-air bag (inflator) module, connect yellow connector (1) of side-air bag (inflator) module by pushing connector till click is heard from it.

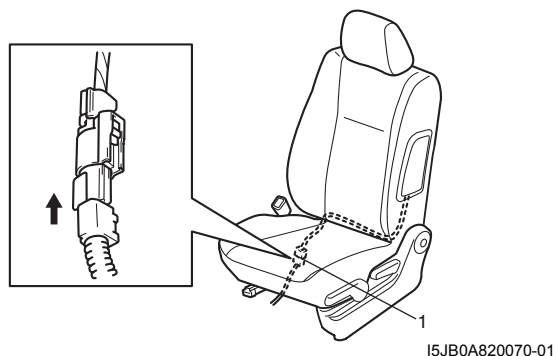

- 7) If equipped with side curtain-air bag (inflator) module, connect black connector (1) securely as shown in figure.

- a) Connect connector.
- b) Lock connector with lock button (2).

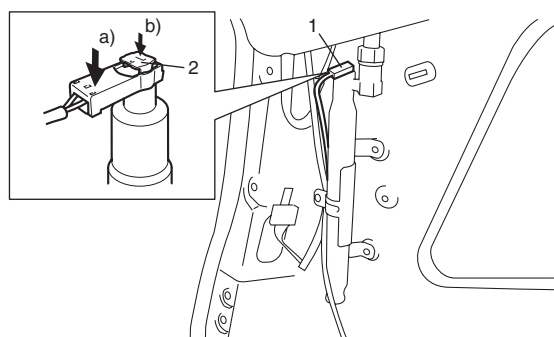

- 8) Install “A/B” fuse to fuse box.

- 9) Connect negative (–) cable at battery.

- 10) Turn ignition switch to ON position and verify that “AIR BAG” warning light flashes 6 times and then turns OFF. If it does not operate as described, perform “Air Bag Diagnostic System Check”.

SDM Removal and Installation

S6JB0B8206003

⚠ WARNING


During service procedures, be very careful when handling a Sensing and Diagnostic Module (SDM).

Be sure to read "Precautions on Service and Diagnosis of Air Bag System" before starting to work and observe every precaution during work. Neglecting them may result in personal injury or inactivation of the air bag system when necessary.


Removal

- 1) Disconnect negative cable at battery.
- 2) Disable air bag system referring to "Disabling Air Bag System".
- 3) Remove console rear panel referring to "Console Box Components in Section 9H".
- 4) Disconnect SDM connector (1) from SDM (2).

[A]

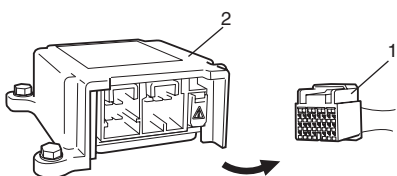

[B]

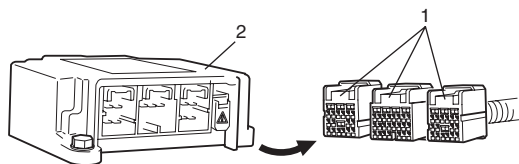


I5JB0A820109-01

[A]: Without side-air bag and curtain-air bag

[B]: With side-air bag and curtain-air bag

- 5) Remove SDM (1) from vehicle.

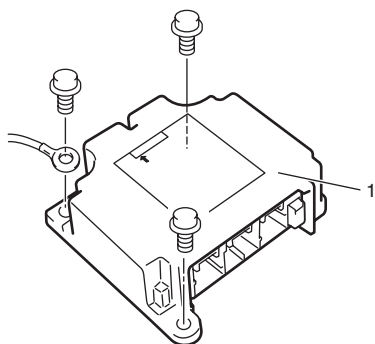

I5JB0A820073-01

Installation

- 1) Check that none of the following faulty conditions exists.
 - Bend, scratch, deformity in vehicle body where SDM is mounted.
 - Foreign matter or rust on mating surface of vehicle body where SDM is mounted.
- 2) Install SDM (2) to vehicle.


⚠ CAUTION

Ensure that arrow on the SDM is pointing toward the front of the vehicle.

- 3) Tighten SDM bolts (1) to specified torque.

Tightening torque

SDM bolt (a): 6 N·m (0.6 kgf-m, 4.5 lb-ft)

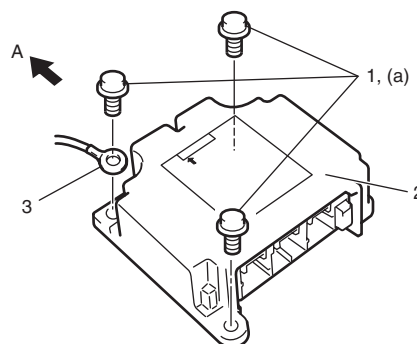


I5JB0A820074-02

A: Vehicle forward


3. Ground for air bag system

- 4) Connect SDM connector (1) to SDM (2) securely.

[A]

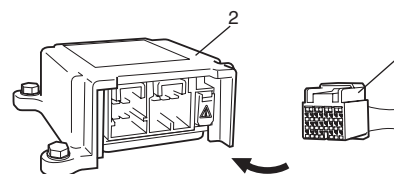

[B]

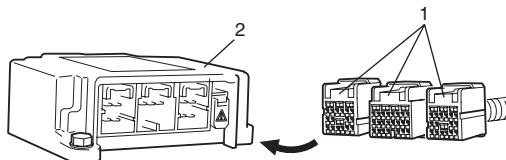

I5JB0A820072-01

[A]: Without side-air bag and curtain-air bag

[B]: With side-air bag and curtain-air bag

- 5) Install console rear panel.
- 6) Enable air bag system referring to "Enabling Air Bag System".
- 7) Connect negative cable at battery.

SDM Inspection

S6JB0B8206004

⚠ WARNING

During service procedures, be very careful when handling a Sensing and Diagnostic Module (SDM).

Be sure to read "Precautions on Service and Diagnosis of Air Bag System" before starting to work and observe every precaution during work. Neglecting them may result in personal injury or inactivation of the air bag system when necessary.

⚠ CAUTION

- Do not connect a tester whatever type it may be.
- Never repair or disassemble SDM.
- If SDM has been dropped, it should be replaced.

If any faulty condition is found in the following checks, replace.

- Check SDM for dents, cracks or deformation.
- Check SDM connector for damage, cracks or lock mechanism.
- Check SDM terminal for bend, corrosion or rust.

Driver Air Bag (Inflator) Module Removal and Installation


S6JB0B8206005

⚠ WARNING

When handling an air bag (inflator) module, be sure to read "Precautions on Handling and Storage of Air Bag System Components" and observe each instruction. Failure to follow them could cause a damage to the air bag (inflator) module or result in personal injury.


Removal

- 1) Disconnect negative cable at battery.
- 2) Disable air bag system. Refer to "Disabling Air Bag System".
- 3) Remove steering wheel side caps (2).
- 4) Loosen driver air bag (inflator) module mounting bolts (1) till it turns freely, pull them out and fix them to bolt clamps.

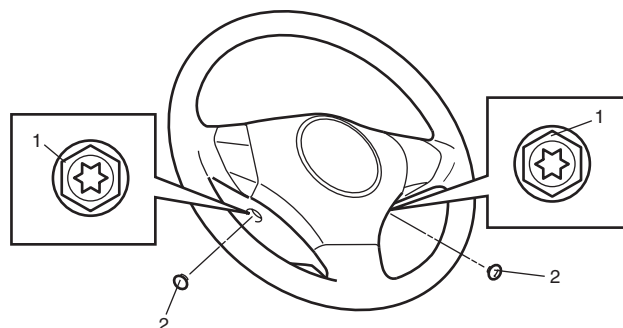

I5JB0A820075-01


- 5) Remove air bag (inflator) module from steering wheel.
- 6) Disconnect driver air bag (inflator) module connector (1) of driver air bag (inflator) module as shown in figure.
 - a) Unlock lock button (2).
 - b) With lock button unlocked, disconnect connector.

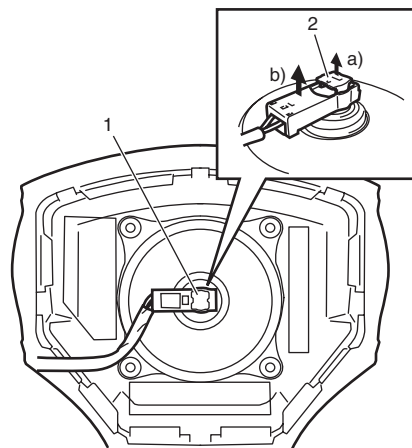

I5JB0A820076-01

Installation

- 1) Connect driver air bag (inflator) module connector (1) to driver air bag (inflator) module (2) securely as shown in figure.
 - a) Connect connector.
 - b) Lock connector with lock button (3).

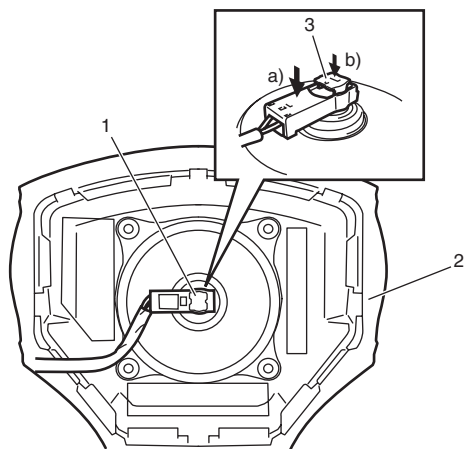


I5JB0A820077-01

- 2) Install driver air bag (inflator) module (1) to steering wheel (2), taking care so that no part of wire harness is caught between them.
- 3) Make sure that clearance between module (1) and steering wheel (2) is uniform all the way.
- 4) Tighten left side bolt (3) of driver air bag (inflator) module first and then right side bolt (4).

Tightening torque

Driver air bag (inflator) module mounting bolt (a): 9 N·m (0.9 kgf-m, 6.5 lb-ft)

- 5) Install steering wheel side caps (5).

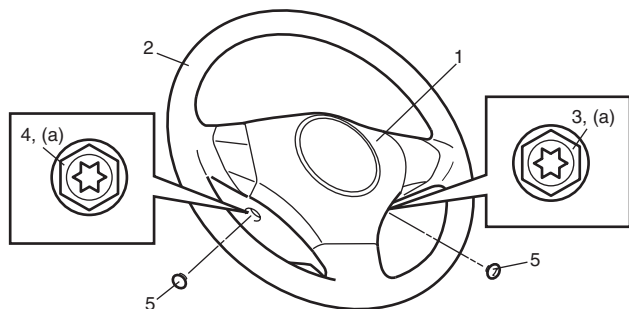

I5JB0A820078-01

- 6) Enable air bag system. Refer to "Enabling Air Bag System".
- 7) Connect negative cable at battery.

Driver Air Bag (Inflator) Module Inspection

S6JB0B8206006

⚠ WARNING


Never disassemble air bag (inflator) module or measure its resistance. Otherwise, personal injury may result.

⚠ CAUTION

If air bag (inflator) module was dropped from a height of 90 cm (3 ft) or more, it should be replaced.

Check air bag (inflator) module visually and if any of the following is found, replace it with a new one.

- Air bag being deployed
- Trim cover (pad surface) (1) being cracked
- Inflator case (2) being damaged or having been exposed to strong impact (dropped)
- Bend or deformity of air bag (inflator) module bracket.

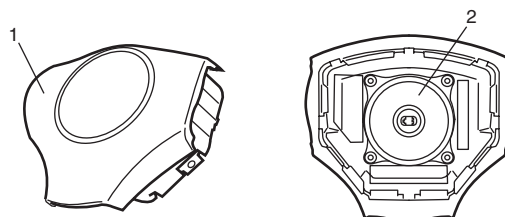

I5JB0A820079-01

Passenger Air Bag (Inflator) Module Removal and Installation


S6JB0B8206007

⚠ WARNING

- Never attempt to disassemble or repair the passenger air bag (inflator) module. If any abnormality is found, be sure to replace it with new one as an assembly.
- Be sure to read “Precautions on Service and Diagnosis of Air Bag System”, “Precautions on Handling and Storage of Air Bag System Components” and “Precautions on Disposal of Air Bag and Seat Belt Pretensioner” before starting to work and observe every precaution during work. Neglecting them may result in personal injury or undeployment of the air bag when necessary.


Removal

- 1) Disable air bag system. Refer to “Disabling Air Bag System”.
- 2) Disconnect passenger air bag (inflator) module connector (1) as shown in figure.
 - a) Unlock lock button (2).
 - b) With lock button unlocked, disconnect connector.

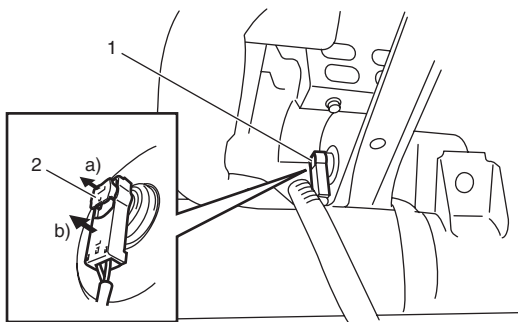

I5JB0A820080-01

- 3) Remove passenger air bag (inflator) module (1) from instrument panel as shown.

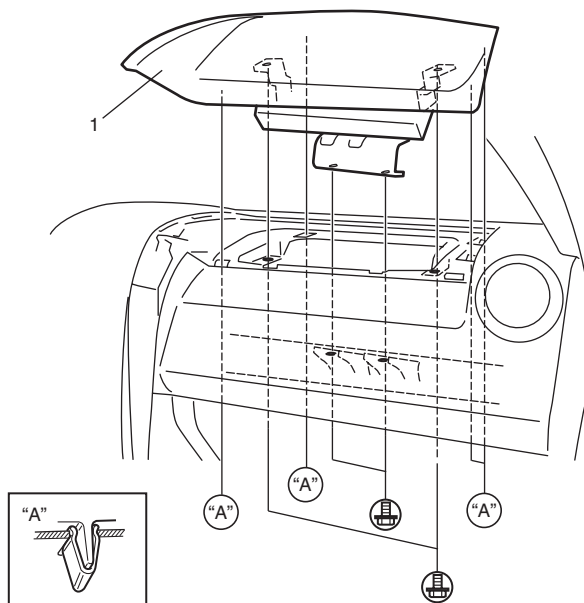

I5JB0A820081-01

⚠ WARNING


- When carrying a live air bag (inflator) module, make sure the bag opening is pointed away from you. Never carry air bag (inflator) module by wires or connector on the side of the module. In case of an accidental deployment, the bag will then deploy with minimal chance of injury.
- As the live passenger air bag (inflator) module must be kept with its bag (trim cover) facing up while being stored or left standing. This is necessary so that a free space is provided to allow the air bag to expand in the unlikely event of accidental deployment.
- Observe “Precautions on Handling and Storage of Air Bag System Components” for handling and storing it. Otherwise, personal injury may result.

Installation


- 1) Install passenger air bag (inflator) module (1) to instrument panel as shown.
- 2) Tighten passenger air bag (inflator) module attaching bolts (2) to specified torque.

Tightening torque

Passenger air bag (inflator) module attaching bolt (a): 23 N·m (2.3 kgf-m, 16.5 lb-ft)

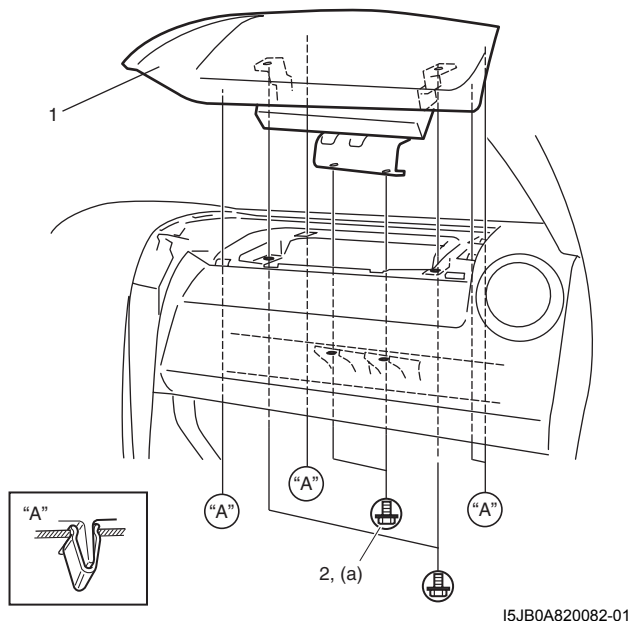

- 3) Connect passenger air bag (inflator) module connector (1) securely as shown in figure.
 - a) Connect connector.
 - b) Lock connector with lock button (2).

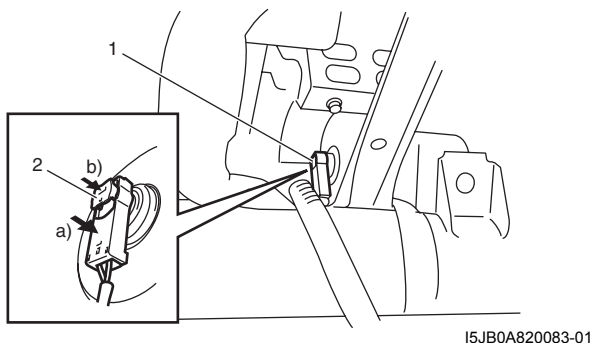


- 4) Enable air bag system. Refer to "Enabling Air Bag System".

Passenger Air Bag (Inflator) Module Inspection

S6JB0B8206008

⚠ WARNING

- Never measure resistance of passenger air bag (inflator) module or disassemble it. Otherwise personal injury may result.
- Never attempt to disassemble or repair the passenger air bag (inflator) module. If any abnormality is found, be sure to replace it with new one as an assembly.
- Be sure to read "Precautions on Service and Diagnosis of Air Bag System", "Precautions on Handling and Storage of Air Bag System Components" and "Precautions on Disposal of Air Bag and Seat Belt Pretensioner" before starting to work and observe every precaution during work. Neglecting them may result in personal injury or undeployment of the air bag when necessary.

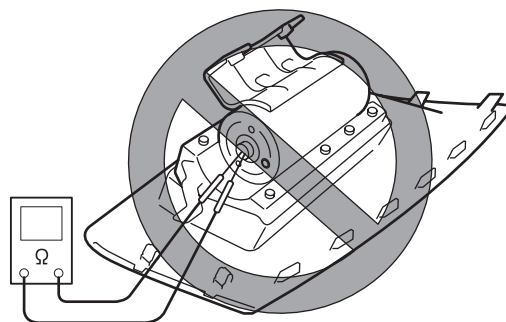

⚠ CAUTION

If air bag (Inflator) module was dropped from a height of 90 cm (3 ft) or more, it should be replaced.

Check air bag (inflator) module appearance visually for the following symptoms and if any one of them is found, replace with a new one.

- Air bag has deployed.
- Wire harness or connector is damaged.
- Air bag (inflator) module is damaged or a strong impact was applied to it.
- Bend or deformity of air bag (inflator) module bracket.

Side-Air Bag (Inflator) Module Removal and Installation


S6JB0B8206009

⚠ WARNING

- **Never attempt to disassemble or repair the side-air bag (inflator) module.** If any abnormality is found, be sure to replace it with new one as an assembly.
- **Be sure to read “Precautions on Service and Diagnosis of Air Bag System”, “Precautions on Handling and Storage of Air Bag System Components” and “Precautions on Disposal of Air Bag and Seat Belt Pretensioner” before starting to work and observe every precaution during work. Neglecting them may result in personal injury or undeployment of the air bag when necessary.**


Removal

- 1) Disable air bag system. Refer to “Disabling Air Bag System”.
- 2) Roll up the seat surface of the seat back.
- 3) Remove sleeve lock nut (1) from seat back (2).

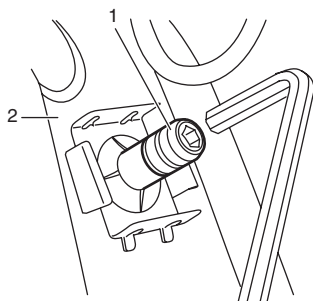

I4RS0A820067-01

- 4) Remove side-air bag (inflator) module from seat back.
- 5) Disconnect side-air bag (inflator) module connector (1) as shown in figure.
 - a) Unlock lock button (2).
 - b) With lock button unlocked, disconnect connector.

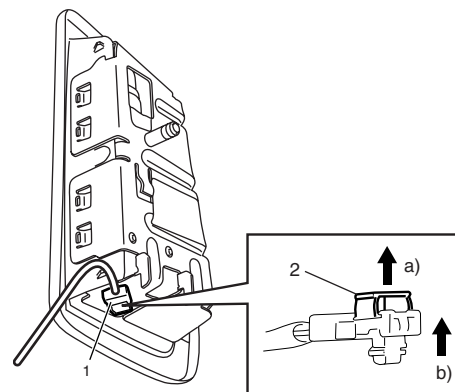

I4RS0A820068-01

⚠ WARNING

- **When carrying a live air bag (inflator) module, make sure the bag opening is pointed away from you. Never carry air bag (inflator) module by wires or connector on the side of the module. In case of an accidental deployment, the bag will then deploy with minimal chance of injury.**
- **As the live side-air bag (inflator) module must be kept with its bag (trim cover) facing up while being stored or left standing. This is necessary so that a free space is provided to allow the air bag to expand in the unlikely event of accidental deployment.**
- **Observe “Precautions on Handling and Storage of Air Bag System Components” for handling and storing it. Otherwise, personal injury may result.**

⚠ CAUTION

Do not damage the sleeve. Otherwise, the side-air bag cannot be correctly installed to seat back.


Installation

- 1) Confirm sleeve (1) is surely installed in side-air bag (inflator) module.
- 2) Tighten sleeve lock nut (2) to specified torque.

Tightening torque


Sleeve lock nut (a): 2.5 N·m (0.25 kgf-m, 2.0 lb-ft)

- 3) Install new clip to seat back.

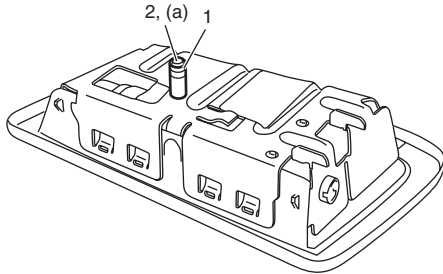

I4RS0A820073-02

- 4) Connect side-air bag (inflator) module connector (1) securely as shown in figure.
 - a) Connect connector.
 - b) Lock connector with lock button (2).

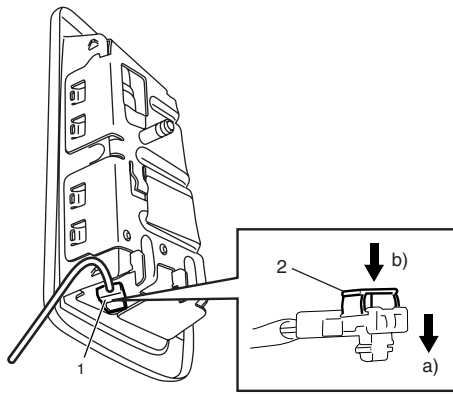


I4RS0A820070-01

- 5) Insert claw (1) of side-air bag (inflator) module on installation hole (2).
- 6) Push side-air bag (inflator) module into clip (3) with specified force.

Side-air bag (inflator) module installation force

Pushing force: 180 N

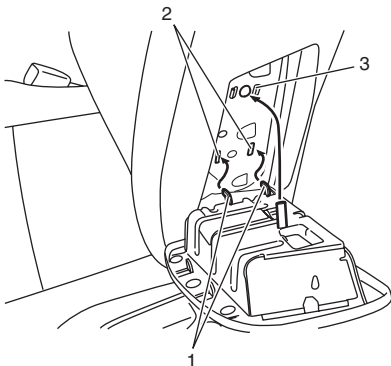


I4RS0A820074-02

Side-Air Bag (Inflator) Inspection

S6JB0B8206010

⚠ WARNING

- Never attempt to disassemble or repair the side-air bag (inflator) module. If any abnormality is found, be sure to replace it with new one as an assembly.
- Be sure to read “Precautions on Service and Diagnosis of Air Bag System” before starting to work and observe every precaution during work. Neglecting them may result in personal injury or undeployment of the air bag when necessary.

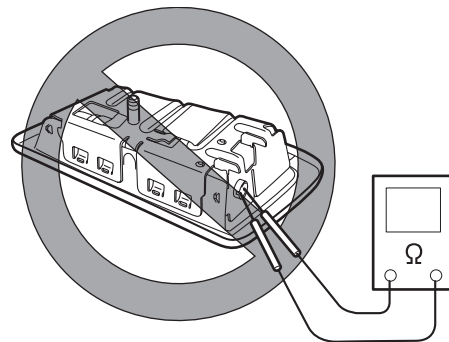

I4RS0A820075-02

⚠ CAUTION

If air bag (inflator) module was dropped from a height of 90 cm (3 ft) or more, it should be replaced.

Check air bag (inflator) module appearance visually for the following symptoms and if any one of them is found, replace with a new one.

- Air bag has deployed.
- There is a crack in trim cover (pad surface).
- Wire harness or connector is damaged.
- Air bag (inflator) module is damaged or a strong impact was applied to it.
- Bend or deformity of air bag (inflator) module bracket.

Side Curtain-Air Bag (Inflator) Module Removal and Installation


S6JB0B8206011

⚠ WARNING

- Never attempt to disassemble or repair the side curtain-air bag (inflator) module. If any abnormality is found, be sure to replace it with new one as an assembly.
- Be sure to read “Precautions on Service and Diagnosis of Air Bag System”, “Precautions on Handling and Storage of Air Bag System Components” and “Precautions on Disposal of Air Bag and Seat Belt Pretensioner” before starting to work and observe every precaution during work. Neglecting them may result in personal injury or undeployment of the air bag when necessary.


Removal

- 1) Disable air bag system. Refer to “Disabling Air Bag System”.
- 2) Remove head lining referring to “Head Lining Removal and Installation in Section 9H”.
- 3) Disconnect side curtain-air bag (inflator) module connector (1) as shown in figure.
 - a) Unlock lock button (2).
 - b) With lock button unlocked, disconnect connector.

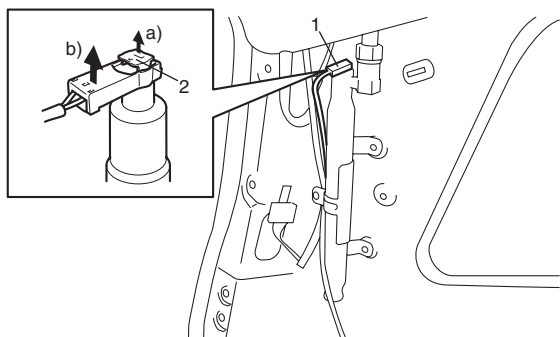

I5JB0A820085-01

- 4) Remove side curtain-air bag (inflator) module bolts (1) and clip (2).

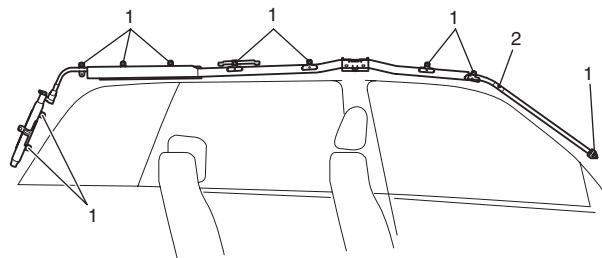

I5JB0A820086-01

- 5) Remove side curtain-air bag (inflator) module.

⚠ WARNING

- When carrying a live air bag (inflator) module, make sure the bag opening is pointed away from you. Never carry air bag (inflator) module by wires or connector on the side of the module. In case of an accidental deployment, the bag will then deploy with minimal chance of injury.
- As the live curtain air bag (inflator) module must be kept with its bag facing up while being stored or left standing. This is necessary so that a free space is provided to allow the air bag to expand in the unlikely event of accidental deployment.
- Observe “Precautions on Handling and Storage of Air Bag System Components” for handling and storing it. Otherwise, personal injury may result.

Installation


⚠ WARNING

Do not install side curtain-air bag (inflator) module while twisted or bent. Otherwise, side curtain-air bag (inflator) module may not deploy and injury may result.

- 1) Install side curtain-air bag (inflator) module (1) with clip (2) and bolts.
- 2) Tighten side curtain-air bag (inflator) module bolts (3) to specified torque.


Tightening torque

**Side curtain-air bag (inflator) module bolts (a):
10 N·m (1.0 kgf-m, 7.5 lb-ft)**

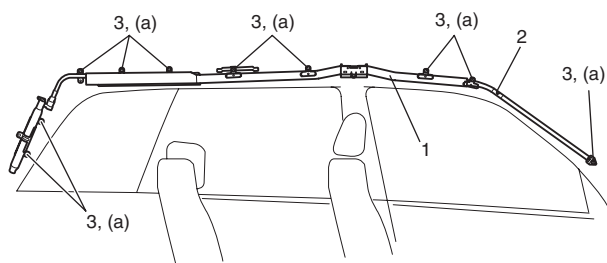

I5JB0A820087-01

- 3) Connect side curtain-air bag (inflator) module connector (1) securely as shown in figure.
 - a) Connect connector.
 - b) Lock connector with lock button (2).

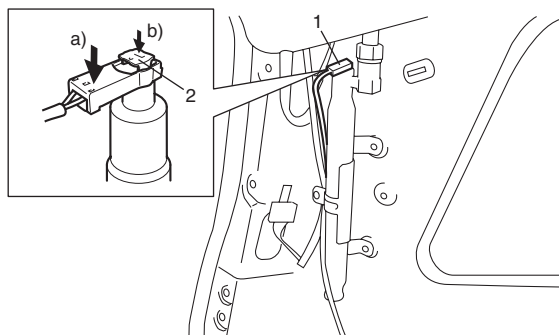

I5JB0A820088-01


- 4) Install head lining referring to "Head Lining Removal and Installation in Section 9H".
- 5) Enable air bag system. Refer to "Enabling Air Bag System".

Side Curtain-Air Bag (Inflator) Module Inspection

S6JB0B8206012

⚠ WARNING

- Never measure resistance of side curtain-air bag (inflator) module or disassemble it. Otherwise personal injury may result.
- Never attempt to disassemble or repair the side curtain-air bag (inflator) module. If any abnormality is found, be sure to replace it with new one as an assembly.
- Be sure to read "Precautions on Service and Diagnosis of Air Bag System", "Precautions on Handling and Storage of Air Bag System Components" and "Precautions on Disposal of Air Bag and Seat Belt Pretensioner" before starting to work and observe every precaution during work. Neglecting them may result in personal injury or undeployment of the air bag when necessary.

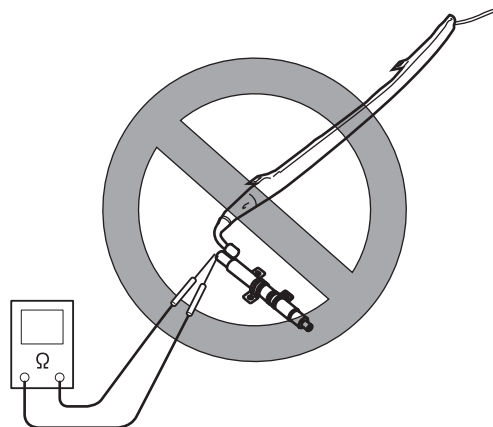

I5JB0A820089-02

⚠ CAUTION

If air bag (inflator) module was dropped from a height of 90 cm (3 ft) or more, it should be replaced.

Check air bag (inflator) module appearance visually for the following symptoms and if any one of them is found, replace with a new one.

- Air bag has deployed.
- Inflator case being damaged or having been exposed to strong impact (dropped).

Forward-Sensor Removal and Installation

S6JB0B8206013


⚠ WARNING

During service procedures, be very careful when handling a sensor.

- Never strike or jar a sensor.
- A sensor and mounting bracket bolts must be carefully torqued to assure proper operation. Under loose connection, it could cause improper operation of the air bag system.


Removal

- 1) Disconnect negative cable at battery.
- 2) Disable air bag system referring to "Disabling Air Bag System".
- 3) Disconnect forward-sensor connector sliding connector outer (2) as shown.

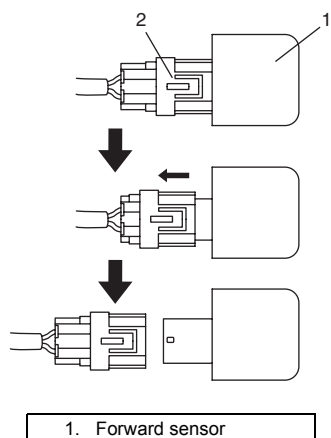

I5JB0A820090-01

- 4) Remove forward-sensor bolts (1) and forward-sensor (2).

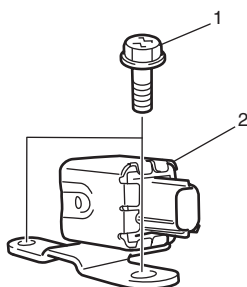

I5JB0A820091-03

Installation

⚠ CAUTION

Proper operation of forward-sensor requires sensor be rigidly attached to vehicle structure and that the arrow on sensor be pointing toward the front of the vehicle.


- 1) Check that none of the following faulty conditions exists.
 - Bend, deformity or rust of front panel.
 - Foreign matter on mating surface of sensor.
- 2) Apply thread lock cement to mounting bolts thread. Install forward-sensor (1) on bracket and tighten mounting bolt (2) to specified torque.

"A": Thread lock cement 99000-32100 (Thread Lock Cement 1305)

Tightening torque

Forward-sensor mounting bolt (a): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

- 3) Connect forward-sensor connector (3) by pushing connector till click is heard from it.

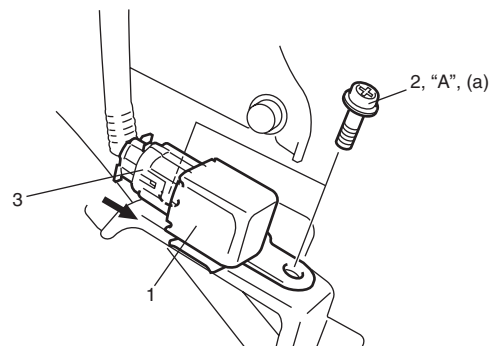

I5JB0A820092-01

- 4) Connect negative cable at battery.
- 5) Enable air bag system referring to "Enabling Air Bag System".

Forward-Sensor Inspection

S6JB0B8206014

⚠ WARNING

During service procedures, be very careful when handling a sensor.

- Never strike or jar a sensor.
- A sensor and mounting bracket bolts must be carefully torqued to assure proper operation. Under loose connection, it could cause improper operation of the air bag system.

⚠ CAUTION

- Never disassemble forward-sensor.
- Sensor should be replaced when it was dropped from a height of 90 cm (3 ft) or more.

- Check sensor for dents, cracks or deformation.
- Check sensor connector (sensor side and harness side) and sensor connector lock mechanism for damage or crack.
- Check connector terminals for bend, corrosion or rust.

Side-Sensor Removal and Installation

S6JB0B8206015


⚠ WARNING

During service procedures, be very careful when handling a sensor.

- Never strike or jar a sensor.
- A sensor bolt must be carefully torqued to assure proper operation. Under loose connection, it could cause improper operation of the air bag system.


Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Disable air bag system. Refer to “Disabling Air Bag System”.
- 3) Remove center pillar lower trim and side sill scuff.
- 4) Disconnect side-sensor connector sliding connector outer (1) as shown.

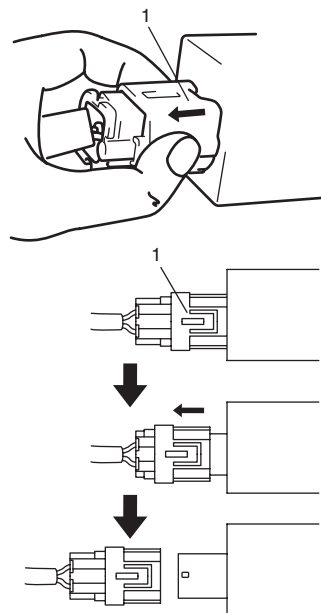

I5JB0A820094-01

- 5) Remove side-sensor bolts (1), and side-sensor (2) from under body (3).

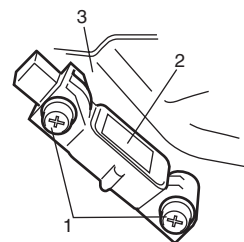

I5JB0A820093-02

Installation


⚠ CAUTION

Proper operation of side-sensor requires that sensor is rigidly attached to specified position.

- 1) Check that none of following faulty conditions exists.
 - Bend, deformity or rust of under body.
 - Foreign matter on mating surface of sensor.
- 2) Install side-sensor (1) on under body (2) and tighten side-sensor bolt (3) to specified torque.


Tightening torque

Side-sensor bolt (a): 11 N·m (1.1 kgf-m, 8.0 lb-ft)

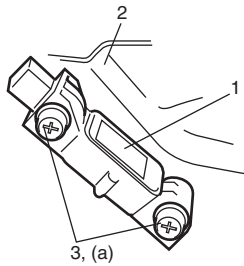

I5JB0A820095-02

- 3) Connect side-sensor connector pushing connector inner (1) as shown.

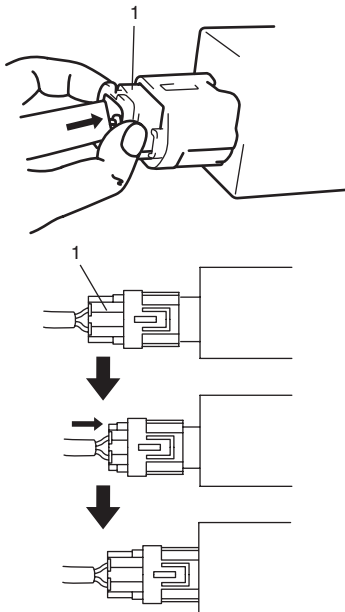

I5JB0A820096-01

- 4) Connect negative cable at battery.
- 5) Enable air bag system. Refer to "Enabling Air Bag System".

Side-Sensor Inspection

S6JB0B8206016


⚠ WARNING

During service procedures, be very careful when handling a sensor.

- Never strike or jar a sensor.
- A sensor and mounting bracket bolts must be carefully torqued to assure proper operation. Under loose connection, it could cause improper operation of the air bag system.

⚠ CAUTION

- Never disassemble side-sensor.
 - Sensor should be replaced when it was dropped from a height of 90 cm (3 ft) or more.
- Check sensor (1) for dents, crack, deformation.
 - Check sensor connector (sensor side and harness side), lock mechanism or sensor lead wire for damage, crack, scorching or melting.
 - Check connector terminals for bent, corrosion or rust. If any faulty condition is found in above checks, replace.

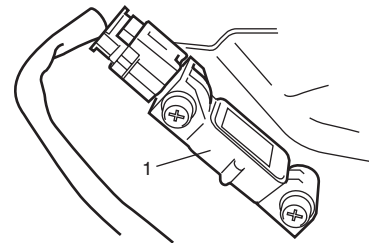

I5JB0A820097-01

Air Bag (Inflator) Module and Seat Belt Pretensioner Disposal

S6JB0B8206017

▲ WARNING

Failure to follow proper air bag (inflator) module and seat belt pretensioner disposal procedures can result in air bag deployment and pretensioner activation which may cause personal injury. Do not dispose of live (undeployed) air bag (inflator) modules and seat belt pretensioners. Because undeployed air bag (inflator) module / inactivated seat belt pretensioner must not be disposed of through normal refuse channels. Undeployed air bag (inflator) module and inactivated seat belt pretensioner contain substances that can cause severe illness or personal injury if sealed container is damaged during disposal.

Air bag (inflator) module / seat belt pretensioner can be deployed / activated inside or outside of vehicle. Deployment / Activation method used depends upon final disposition of vehicle. Review the following instructions in order to determine which will work best in a given situation.

Deployment / Activation Outside of Vehicle: When you intend to return the vehicle to service, deploy the air bag (inflator) module(s) and/or activate seat belt pretensioner(s) outside of the vehicle.

Deployment / Activation Inside of Vehicle: When the vehicle will be destroyed, or salvaged for component parts, deploy the air bag module(s) and/or activate seat belt pretensioner(s) installed on vehicle.

▲ WARNING

The following precautions must be observed for this work. Failure to observe any of them may result in personal injury.

- Procedure should be followed strictly as described here.
- Be sure to read "Precautions on Service and Diagnosis of Air Bag System" beforehand.
- To avoid accidental deployment / activation, this work should be performed by no more than one person.
- Since smoke is produced when air bag (inflator) module is deployed and pretensioner is activated, select well-ventilated area.
- Air bag (inflator) module and seat belt pretensioner will immediately deploy / activate when 12 volts vehicle battery is connected to it. Wear safety glasses throughout this entire deployment / activation and disposal procedure.
- Wear suitable ear protection when deploying air bag (inflator) module / activating seat belt pretensioner. Also, advise those who are in area close to deployment / activation site to wear suitable ear protection.
- Do not deploy / activate two or more air bag system components (air bag (inflator) modules and seat belt pretensioners) at the same time.
- Never connect deployment harness to any 12 volts vehicle battery before connecting deployment harness to air bag (inflator) module and seat belt pretensioner. Deployment harness shall remain shorted and not be connected to 12 volts vehicle battery till you are ready to deploy air bag (inflator) module or activate seat belt pretensioner.

Deployment / Activation Outside of Vehicle

When you intend to return the vehicle to service, deploy the air bag (inflator) module(s) or activate seat belt pretensioner(s) outside of the vehicle.

- 1) Turn ignition switch to LOCK position and remove key.
- 2) Wear safety glasses during this deployment / activation procedure.
- 3) Check that there is no open, short or damage in special tools (deployment harness (A) and adapter cable (B)). If any faulty is found, do not use it and be sure to use new special tool.

Special tool


(A): 09932-75031

(B): 09932-76510

- 4) Short two deployment harness leads (1) together by fully seating one banana plug into the other.

▲ WARNING

Deployment harness (A) shall remain shorted and not be connected to 12 volts vehicle battery till you are ready to deploy air bag module or activate seat belt pretensioner.

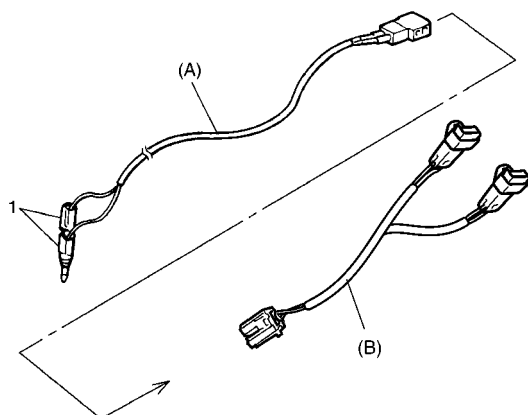

I4RS0A820084-01


- 5) Remove air bag (inflator) module(s) or seat belt pretensioner(s) from vehicle referring to "Driver Air Bag (Inflator) Module Removal and Installation", "Passenger Air Bag (Inflator) Module Removal and Installation", "Side-Air Bag (Inflator) Module Removal and Installation", "Side Curtain-Air Bag (Inflator) Module Removal and Installation" or "Front Seat Belt Removal and Installation in Section 8A".

▲ WARNING


- For handling and storage of live air bag (inflator) module, select place where ambient temperature below 65 °C (150 °F), without high humidity and away from electric noise.
- Always carry live air bag (inflator) module with trim cover away from you.
- When storing live air bag (inflator) module or when leaving live air bag (inflator) module unattended on bench or other surface, always face trim cover up and away from surface. It is also prohibited to place anything on top of the trim cover and stack air bag (inflator) modules. This is necessary so that free space is provided to allow air bag (inflator) module to expand in the unlikely event of accidental deployment.

Failure to follow procedures may result in personal injury.

[A]

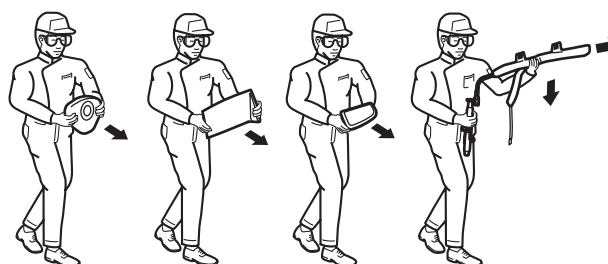

[B]

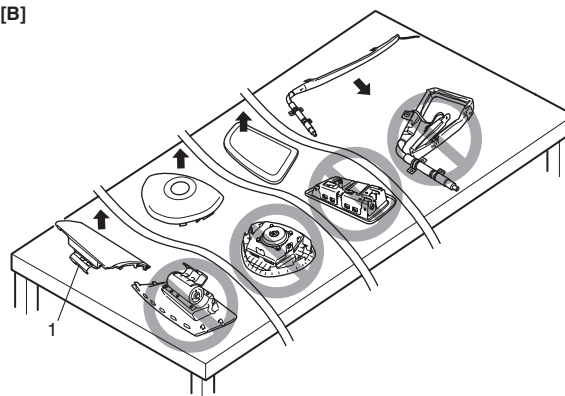

I5JB0A820098-02


[A]: Always carry air bag (inflator) module with trim cover (air bag opening) away from body.

[B]: Always place air bag (inflator) module on workbench with trim cover (air bag opening) up, away from loose objects.

⚠ WARNING

- For handling and storage of seat belt pretensioner, select place where ambient temperature is below 65 °C (150 °F), without high humidity and away from electric noise.
- Never carry seat belt pretensioner by webbing.
- When placing seat belt pretensioner on workbench or other surface, be sure to lay it with its exhaust hole (1) side facing up. It is also prohibited to put something on seat belt pretensioner.


Otherwise, personal injury may result.

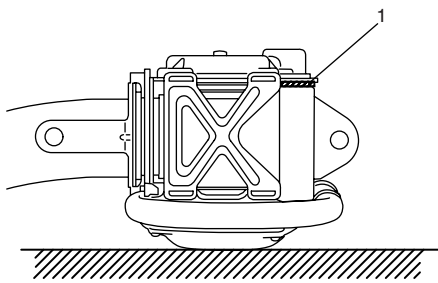

I4JA01822118-01

6) Set air bag (inflator) module or seat belt pretensioner as follows.

- For driver air bag (inflator) module
 - a. Clear space (3) on ground about 185 cm (6 ft) in diameter where driver air bag (inflator) module (1) is set for deployment. Paved, outdoor location where there is no activity is preferred. If outdoor location is not available, use space on shop floor where there is no activity and sufficient ventilation is provided. Ensure no loose or flammable object exists within deployment area.
 - b. Place driver air bag (inflator) module (1) with its vinyl trim cover facing up (2) on ground in step a.

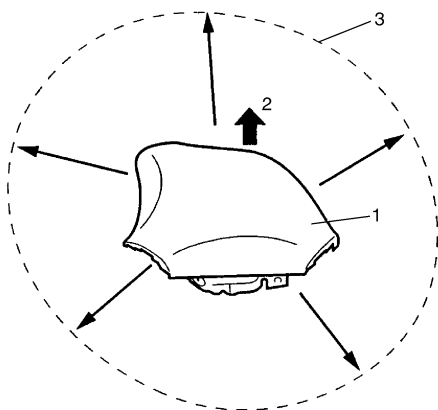

I3JA01820036-01

- For passenger air bag (inflator) module
 - a. Clear space (3) on ground about 185 cm (6 ft) in diameter where passenger air bag (inflator) module (1) is set for deployment. Paved, outdoor location where there is no activity is preferred. If outdoor location is not available, use space on shop floor where there is no activity and sufficient ventilation is provided. Ensure no loose or flammable object exists within deployment area.
 - b. Place deployment fixture (A) on ground in step a.


Special tool

(A): 09932-75041

- c. Fill plastic reservoir in deployment fixture (A) with water or sand. This is necessary to provide sufficient stabilization of fixture during deployment.
- d. Attach passenger air bag (inflator) module (1) in deployment fixture (A) securely using M8 bolt (2).


⚠ CAUTION

Be sure to use M8 size and 7T strength bolt for fixing passenger air bag (inflator) module (1) to deployment fixture (A).

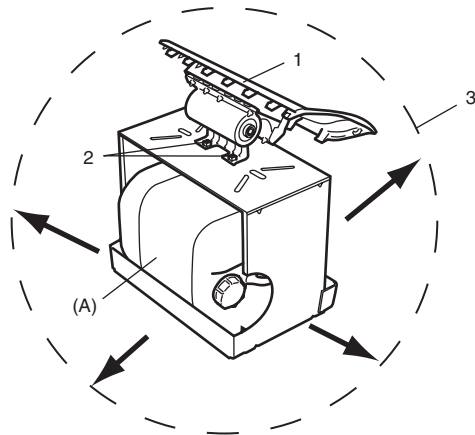

I5JB0A820099-01

- For side-air bag (inflator) module
 - a. Remove sleeve (1) and sleeve lock nut (2), if equipped.

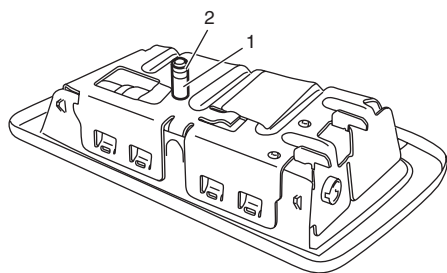

I4RS0A820088-01


- b. Clear space (3) on ground about 185 cm (6 ft) in diameter where side-air bag (inflator) module for deployment. Paved, outdoor location where there is no activity is preferred. If outdoor location is not available, space on shop floor where there is no activity and provide sufficient ventilation. Ensure no loose or flammable objects are within deployment area.
- c. Place deployment fixture (A) on ground.

Special tool**(A): 09932-75041**

- d. Fill plastic reservoir in deployment fixture (A) with water or sand. This is necessary to provide sufficient stabilization of fixture during deployment.
- e. Attach side-air bag (inflator) module (1) in deployment fixture using mounting attachment, sleeve lock nut and washer (2).


NOTE

Make sure that deploying direction faces as shown in figure against mounting attachment.

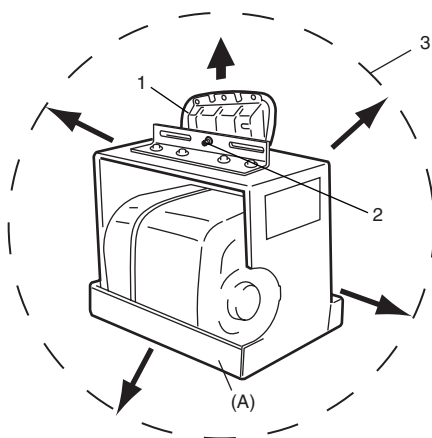

I4RS0A820089-01

- For side curtain-air bag (inflator) module
 - a. Loosen nut (1) and remove bag (2) of side curtain-air bag (inflator) module.

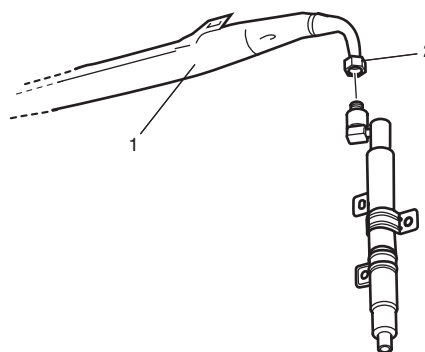

I5JB0A820100-01

- b. Tie side curtain-air bag inflator (1) to tire (3) with wire harness (2) as shown.

Wire harness specifications

Stripped wire harness section 1.25 mm² (0.0019 in.²) or more (Stripped wire harness diameter 1.25 mm (0.05 in.) or more)


⚠ CAUTION

Make sure that wire harness is tight. It is very dangerous if looseness in wire harness results in side curtain-air bag inflator flying off due to shock from inflator deploying.

NOTE

Wind wire harness (2) around at least 3 times.

- c. Clear space (5) on ground about 185 cm (6 ft) in diameter where side curtain-air bag (inflator) module (1) is set for deployment. Paved, outdoor location where there is no activity is preferred. If outdoor location is not available, use space on shop floor where there is no activity and sufficient ventilation is provided. Ensure no loose or flammable object exists within activation area.
- d. Pile tire with side curtain-air bag (inflator) module on tire (4).

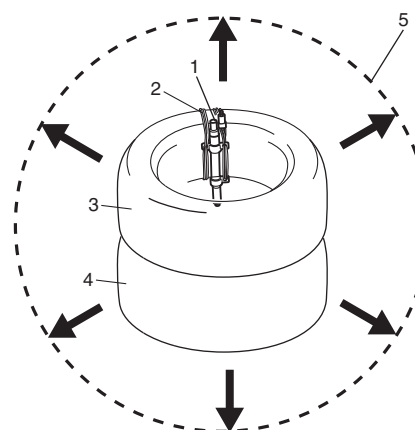


I5JB0A820101-01

- For seat belt pretensioner
 - a. Cut webbing (1) at tongue plate stopper (3) of seat belt pretensioner (2) side as shown.


NOTE

Hold seat belt pretensioner (2) vertically in the same condition as it is installed. Otherwise, webbing can't be pulled out.

- b. Remove tongue plate (4) and shoulder anchor (5) from webbing.
- c. Tie webbing (1) tightly at 10 cm (3.9 in.) from cutting edge as shown.

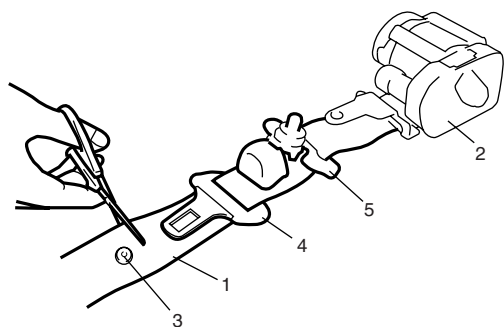

I3JA01820037-01

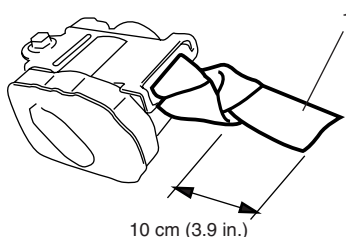

I4RS0A820104-01

- d. Tie seat belt pretensioner (2) with wire harness (3) to wheel-installed tire (4) as shown.


Wire harness specifications

Stripped wire harness section 1.25 mm² (0.0019 in.²) or more (Stripped wire harness diameter 1.25 mm (0.05 in.) or more)

NOTE

Wind wire harness (3) around at least 3 times.

- e. Clear space (5) on ground about 185 cm (6 ft) in diameter where seat belt pretensioner (2) is to be activated. Paved, outdoor location where there is no activity is preferred. If outdoor location is not available, use space on shop floor where there is no activity and sufficient ventilation is provided. Ensure no loose or flammable object exists within activation area.
- f. Place wheel-installed tire (4) with seat belt pretensioner (2) on ground in step e.

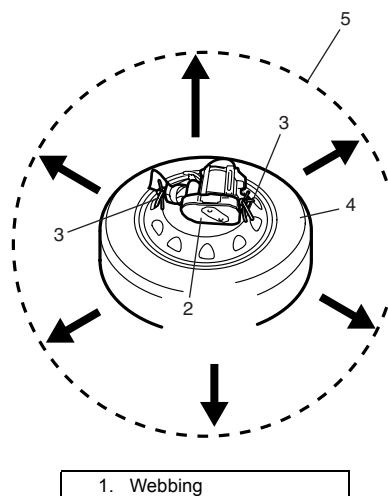

I4RS0A820105-01

- 7) Stretch deployment harness (A) from air bag (inflator) module or seat belt pretensioner to its full length 10 m (33 ft).

Special tool

(A): 09932-75031

- 8) Place 12 volts vehicle battery (1) near the shorted end of deployment harness (A).
- 9) Check that area around air bag (inflator) module or seat belt pretensioner is clear of all people and loose or flammable objects.

10) Connect adapter cable (B) as follows.

Special tool

(B): 09932-76510

- For driver air bag (inflator) module [A]
Check that driver air bag (inflator) module is placed with its vinyl trim cover facing up, and connect adapter cable (B) to driver air bag (inflator) module.
- For passenger air bag (inflator) module [B]
Check that passenger air bag (inflator) module is firmly and properly secured on deployment fixture (special tool), and connect adapter cable (B) to passenger air bag (inflator) module.
- For side-air bag (inflator) module [C]
Verify that side-air bag (inflator) module is firmly and properly on deployment fixture (special tool), and connect adapter cable (B) to side-air bag (inflator) module.
- For side curtain-air bag (inflator) module [D]
 - a. Connect adapter cable (B) to side curtain-air bag (inflator) module.
 - b. Pile 2 tires (2) and wheel-installed tire (3) on top of tire with side curtain-air bag (inflator) (4), and tie them with wire harness (5) as shown.

Wire harness specifications

Stripped wire harness section 1.25 mm² (0.0019 in.²) or more (Stripped wire harness diameter 1.25 mm (0.05 in.) or more)

NOTE

Wind wire harness (5) around at least 2 times.

- For seat belt pretensioner [E]
 - a. Connect adapter cable (B) to seat belt pretensioner.
 - b. Pile 2 wheel-installed tires (3) on top of tire with seat belt pretensioner (6), and tie them with wire harness (5) as shown.

Wire harness specifications


Stripped wire harness section 1.25 mm² (0.0019 in.²) or more (Stripped wire harness diameter 1.25 mm (0.05 in.) or more)

NOTE

Wind wire harness (5) around at least 2 times.

- c. Drape blanket (7) over those tires.

11) Connect adapter cable (B) to deployment harness (A) connector and lock connectors with lock lever.

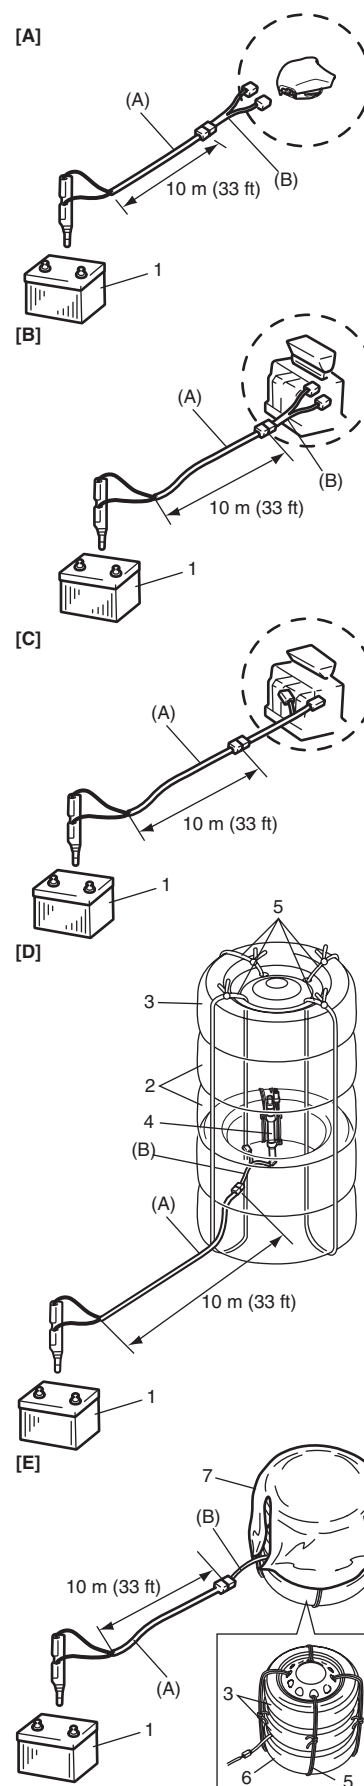

- 12) Notify all people in immediate area that you intend to deploy / activate air bag (inflator) module or seat belt pretensioner.

NOTE

- **When air bag (inflator) module deploys and seat belt pretensioner activates, rapid gas expansion will create substantial report. Wear suitable ear protection. Notify all people in immediate area that you intend to deploy air bag (inflator) module or activate seat belt pretensioner and suitable ear protection should be worn.**
- **When driver air bag (inflator) module deploys, driver air bag (inflator) module may jump about 30 cm (1 ft) vertically. This is normal reaction to force of rapid gas expansion inside of drive air bag (inflator) module.**
- **After air bag (inflator) module has been deployed, surface of air bag (inflator) may contain powdery residue. This powder consists primarily of cornstarch (used to lubricate bag (inflator) as it inflates) and by products of chemical reaction.**

▲ WARNING


- **Do not place deployed air bag (inflator) module and activated seat belt pretensioner near any flammable objects.**
- **Do not apply water, oil, etc. to deployed air bag (inflator) module and activated seat belt pretensioner.**
- **Wait for about 30 minutes before touching any metal surface of air bag (inflator) module or seat belt pretensioner module. Disregarding these precautions may cause fire or personal injury.**

Failure to follow procedures may result in fire or personal injury.

- 13) Separate two banana plugs (1) on deployment harness.

- 14) Connect deployment harness to 12 volts vehicle battery (2). This will immediately deploy or activate air bag (inflator) module or seat belt pretensioner.

- 15) Disconnect deployment harness from 12 volts vehicle battery (2) and short two deployment harness leads together by fully seating one banana plug into the other.

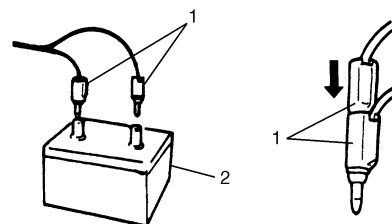

I2RH01820069-01

- 16) In the unlikely event that air bag (inflator) module or seat belt pretensioner did not deploy / activate after following these procedures, proceed immediately with Step 22) through 25). If air bag (inflator) module or seat belt pretensioner did deploy or activate, proceed with Steps 18) through 21).


- 17) Put on pair of shop gloves to protect your hands from possible irritation and heat when handling deployed air bag (inflator) module or activated seat belt pretensioner.

- 18) Disconnect adapter cable (special tool) from air bag (inflator) module or seat belt pretensioner as soon as possible. This will prevent adapter cable (special tool) from damage due to possible contact with hot air bag (inflator) module or hot seat belt pretensioner.

- 19) Check adapter cable as follows.

- **For air bag (inflator) module**
Be sure to check air bag (inflator) module adapter cable (special tool) for damage after deployment and replace it with new adapter cable (special tool), if it is damaged.
- **For seat belt pretensioner**
Be sure to check seat belt pretensioner adapter cable (special tool) for damage after seat belt pretensioner is activated. Replace it with spare connector (special tool) or new adapter, if necessary.

- 20) Dispose of deployed air bag (inflator) module (1) or activated seat belt pretensioner (2) through normal refuse channels after it has cooled for at least 30 minutes and tightly seal air bag (inflator) module (1) or seat belt pretensioner (2) in strong vinyl bag. Refer to "Deployed Air Bag (Inflator) Module and Activated Seat Belt Pretensioner Disposal" for details.

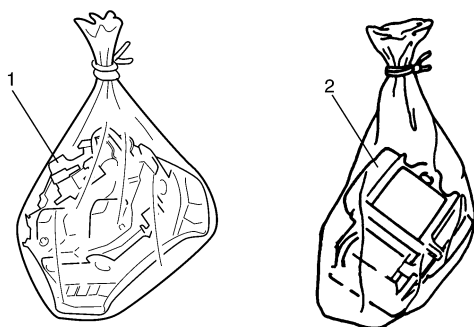

I3JA01820116-01

- 21) Wash your hands with mild soap and water afterward.

NOTE

Remaining steps are to be followed in the unlikely event that air bag (inflator) module did not deploy or seat belt pretensioner did not activate.

- 22) Ensure that deployment harness has been disconnected from 12 volts vehicle battery and that its two banana plugs have been shorted together by fully seating one banana plug into the other.
- 23) Disconnect deployment harness and adapter cable from air bag (inflator) module or seat belt pretensioner.
- 24) Temporarily store undeployed air bag (inflator) module referring to "Precautions on Service and Diagnosis of Air Bag System" for details.
- 25) Contact your local distributor for further assistance.

Deployment / Activation Inside of Vehicle


When the vehicle will be destroyed, or salvaged for component parts, deploy the air bag modules and/or activate seat belt pretensioners installed on vehicle.

NOTE

If equipped with the seat belt pretensioners, activate both side of seat belt pretensioners at the same time when using special tool (C).

- 1) Turn ignition switch to LOCK position, remove key and put on safety glasses.
- 2) Remove all loose objects from front seats and instrument panel.
- 3) Disconnect air bag (inflator) module or seat belt pretensioner connector as follows.
 - For driver air bag (inflator) module [A]: Disconnect contact coil connector (1) located near base of steering column.
 - For passenger air bag (inflator) module [D]: Remove glove box from instrument panel and disconnect passenger air bag (inflator) module connector (2).
 - For side-air bag (inflator) module [E] Disconnect side-air bag (inflator) module connectors (3) under front seat cushion.
 - For side curtain-air bag (inflator) module [F] Remove rear pillar trim and disconnect side curtain-air bag (inflator) module connectors (4).
 - For seat belt pretensioners (right and left) [G] Remove both side (driver and passenger side) center pillar lower trim and disconnect seat belt pretensioner connectors (5).

- 4) Confirm that each air bag (inflator) module and/or seat belt pretensioners is securely mounted.

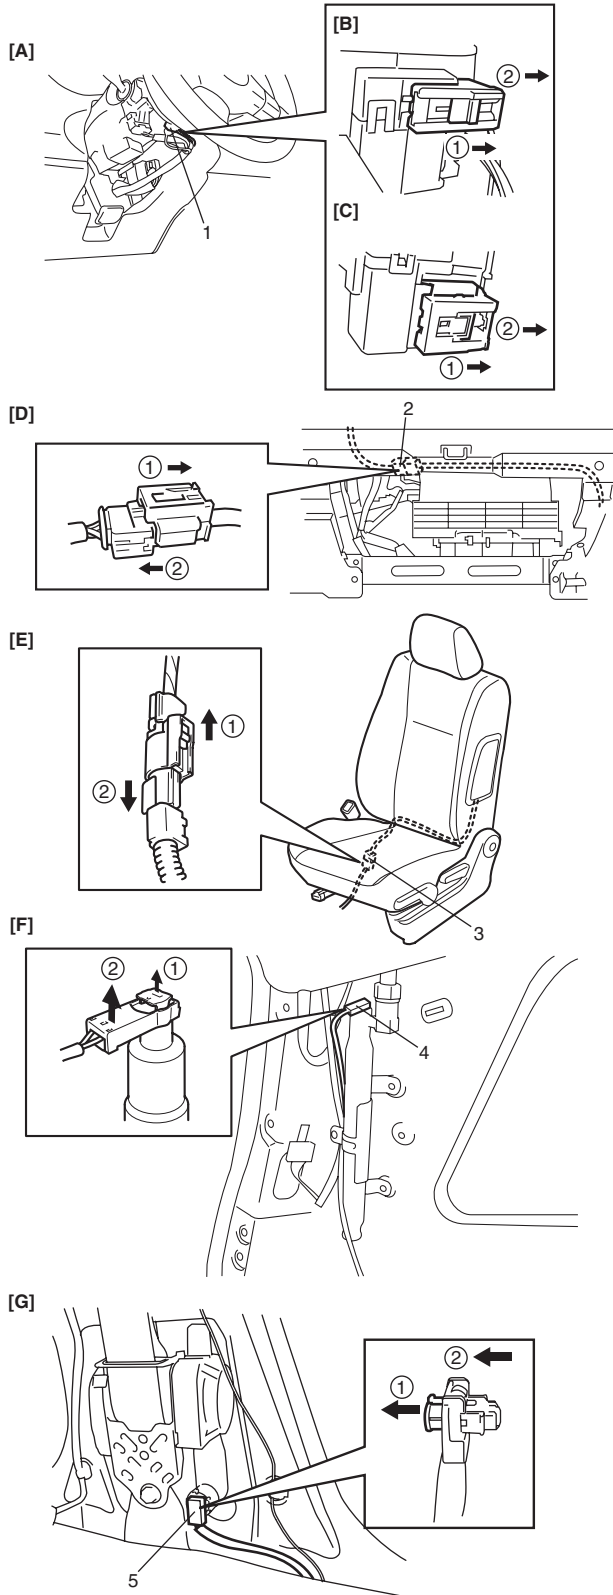

- 5) Check that there is no open, short or damage in special tools (deployment harness (A), adapter cable (B), (C) and (D)). If any faulty condition is found, do not use it and be sure to use new special tool. And connect adapter cable (B), (C) or (D) to deployment harness (A) and lock connectors with lock slider.

Special tool

(A): 09932-75031

(B): 09932-78332

(C): 09932-77310


(D): 09932-76510

- 6) Short two deployment harness leads together by fully seating one banana plug (1) into the other.

⚠ WARNING


Deployment harness (A) shall remain shorted and not be connected to 12 volts vehicle battery until you are ready to deploy air bag (inflator) module or activate seat belt pretensioner.

- 7) Connect adapter cable (B), (C) or (D) in series with deployment harness (A) to air bag (inflator) module or seat belt pretensioner as follows.
- For driver air bag (inflator) module [A]
Connect adapter cable (B) (For vehicle without cruise control system [B]) or (C) (For vehicle with cruise control system [C]) in series with deployment harness (A) and push adapter cable (B) or (C) connector to driver air bag (inflator) module connector till click can be heard.
 - For passenger air bag (inflator) module [D]
Connect adapter cable (C) in series with deployment harness (A) and push adapter cable (C) connector to passenger air bag (inflator) module connector till click can be heard.
 - For side-air bag (inflator) module [E]
Connect adapter cable (B) in series with deployment harness (A) and push adapter cable (C) connector to side bag (inflator) module connector till click can be heard.
 - For side curtain-air bag (inflator) module [F]
Connect adapter cable (D) in series with deployment harness (A) to curtain bag (inflator) module and lock connector with lock part.
 - For seat belt pretensioners [G]
Connect adapter cable (D) in series with deployment harness (A) to seat belt pretensioner and lock connector with lock part.

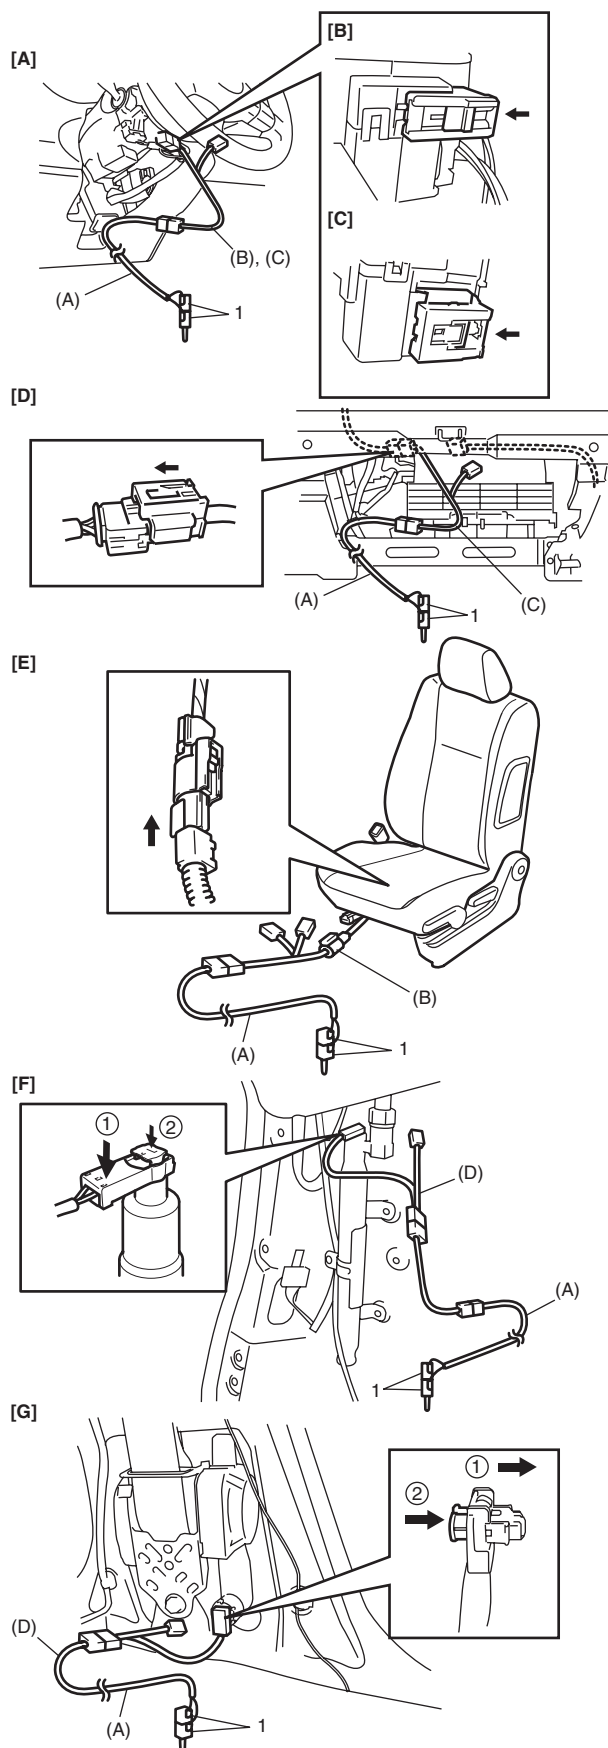

I5JB0A820104-01

- 8) Route deployment harness (1) out of vehicle.
- 9) Check that inside of vehicle and area surrounding vehicle are clear of all people and loose or flammable objects.
- 10) Stretch deployment harness (1) to its full length 10 m (33 ft).
- 11) Place 12 volts vehicle battery (2) near shorted end of deployment harness (1).
- 12) Completely cover windshield area and front door window openings with drop cloth, a blanket or any similar item. This reduces possibility of injury due to possible fragmentation of vehicle's glass or interior.

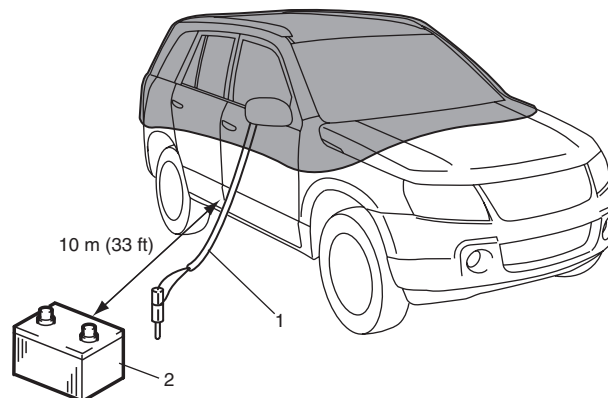

I5JB0A820105-01

- 13) Notify all people in immediate area that you intend to deploy air bag (inflator) module or activate seat belt pretensioners.

NOTE


- When air bag (inflator) module deploys or seat belt pretensioners activate, rapid gas expansion will create substantial report. Wear suitable ear protection. Notify all people in immediate area that you intend to deploy air bag (inflator) module or to activate seat belt pretensioner and suitable ear protection should be worn.
- After air bag (inflator) module has been deployed, surface of air bag may contain powdery residue. This powder consists primarily of cornstarch (used to lubricate air bag (inflator) module as it inflates) and by-products of chemical reaction.

⚠ WARNING

- Do not place deployed air bag (inflator) module and activated seat belt pretensioners near any flammable objects.
- Do not apply water, oil, etc. to deployed air bag (inflator) module and activated seat belt pretensioners.
- Wait for about 30 minutes before touching any metal surface of air bag (inflator) module or seat belt pretensioner modules. Disregarding these precautions may cause fire or personal injury.

Failure to follow procedures may result in fire or personal injury.

- 14) Separate two banana plugs (1) on deployment harness (2).
- 15) Connect deployment harness (2) to 12 volts vehicle battery (3). This will immediately deploy or activate air bag (inflator) module or seat belt pretensioners.
- 16) Disconnect deployment harness (2) from 12 volts vehicle battery (3) and short two deployment harness leads together by fully seating one banana plug into the other.

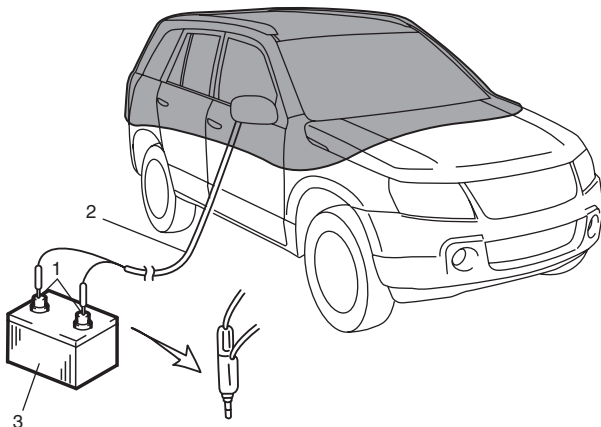

I5JB0A820106-01

- 17) Repeat Steps 3) through 16) to deploy / activate air bag (inflator) modules and seat belt pretensioners which has not been deployed / activated, if any.
- 18) In the unlikely event that air bag (inflator) module and seat belt pretensioners after following these procedures, proceed immediately with Step 24) through 26). If air bag (inflator) module and seat belt pretensioners did deploy / activate, proceed with Steps 19) through 23).
- 19) Carefully remove drop cloth from vehicle and clean off any fragments or discard it entirely.
- 20) Put on pair of shop gloves to protect your hands from possible irritation and heat when handling deployed air bag (inflator) module and activated seat belt pretensioners.

- 21) Disconnect adapter cable (special tool) from air bag (inflator) module or seat belt pretensioner as soon as possible. This will prevent adapter cable (special tool) from damage due to possible contact with hot air bag (inflator) module or hot seat belt pretensioner.
- 22) Check adapter cable connector as follows. Adapter cable connector (special tool) is designed to be reused. However it should be inspected for damage after deployment and replaced if necessary.
- 23) With air bag (inflator) modules deployed and seat belt pretensioners activated, vehicle may be scrapped in the same manner as non-air bag system / seat belt pretensioner equipped vehicle.

NOTE

Remaining steps are to be followed in the unlikely event that air bag (inflator) module did not deploy or seat belt pretensioner did not activate.

- 24) Remove undeployed air bag (inflator) module(s) and/or inactivated seat belt pretensioner(s) from vehicle. For driver air bag (inflator) module, refer to "Driver Air Bag (Inflator) Module Removal and Installation". For passenger air bag (inflator) module, refer to "Passenger Air Bag (Inflator) Module Removal and Installation". For side air bag (inflator) module, refer to "Side-Air Bag (Inflator) Module Removal and Installation". For side curtain-air bag (inflator) module, "Side Curtain-Air Bag (Inflator) Module Removal and Installation". For seat belt pretensioner, refer to "Front Seat Belt Removal and Installation in Section 8A".
- 25) Temporarily store undeployed air bag (inflator) module referring to "Precautions on Service and Diagnosis of Air Bag System" for details.
- 26) Contact your local distributor for further assistance.

Deployed Air Bag (Inflator) Module and Activated Seat Belt Pretensioner Disposal


S6JB0B8206018

⚠ WARNING

Failure to follow proper air bag (inflator) module and seat belt pretensioner disposal procedures can result in air bag deployment and pretensioner activation which may cause personal injury. The undeployed air bag (inflator) module and the inactivated seat belt pretensioner must not be disposed of through normal refuse channels. The undeployed air bag (inflator) module and the inactivated seat belt pretensioner contains substances that can cause severe illness or personal injury if the sealed container is damaged during disposal.


Deployed air bag (inflator) module and the activated seat belt pretensioner can be disposed of through normal refuse channels just like any other parts. For their disposal, however, the following points should be noted.

- The air bag (inflator) module and the seat belt pretensioner immediately after deployment / activation is very hot. Wait for 30 minutes to cool it off before handling it.
- Never apply water, oil, etc. to deployed air bag (inflator) module and the activated seat belt pretensioner to cool it off and be careful so that water, oil etc. does not get on the deployed air bag (inflator) module and the activated seat belt pretensioner.

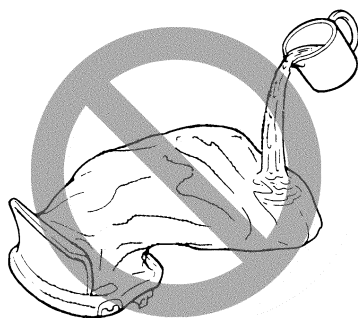

IYSQ01820095-01

- After the air bag (inflator) module has been deployed, the surface of the air bag may contain a powdery residue. This powder consists primarily of cornstarch (used to lubricate the bag as it inflates) and by-products of the chemical reaction. As with many service procedures, you should wear gloves and safety glasses.
- When disposing of the deployed air bag (inflator) module and the activated seat belt pretensioner, be sure to seal it in a vinyl bag.

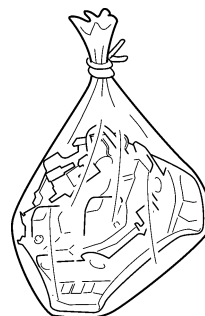

I3JA01820119-01

- When air bag (inflator) module and seat belt pretensioner have been deployed / activated inside the vehicle which is going to be scrapped, leave them as installed to the vehicle.
- Be sure to wash your hands with mild soap and water after handling them.

Specifications

Tightening Torque Specifications

S6JB0B8207001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lb·ft	
SDM bolt	6	0.6	4.5	☞
Driver air bag (inflator) module mounting bolt	9	0.9	6.5	☞
Passenger air bag (inflator) module attaching bolt	23	2.3	16.5	☞
Sleeve lock nut	2.5	0.25	2.0	☞
Side curtain-air bag (inflator) module bolts	10	1.0	7.5	☞
Forward-sensor mounting bolt	11	1.1	8.0	☞
Side-sensor bolt	11	1.1	8.0	☞

NOTE

The specified tightening torque is also described in the following.
“Air Bag System Components, Wiring and Connectors Location”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Special Tools and Equipment

Use of Special Tools

S6JB0B8208001

⚠ WARNING

To avoid deployment when troubleshooting the air bag system, do not use electrical test equipment such as a battery powered or AC powered voltmeter, ohmmeter, etc., or any type of electrical equipment other than that specified. Do not use a non-powered probe type tester.


Instructions must be followed carefully, otherwise personal injury may result.

You should be familiar with the tools listed under the heading "Special Tool". You should be able to measure voltage and resistance. You should be familiar with proper use of a scan tool such as Air Bag Driver / Passenger Load Tool, Connector Test Adapter Kit and the Digital Multimeter.

Special tool


(A): 09932-76010 (Connector Test Adapter Kit)

This must be used whenever a diagnostic procedure requests checking or probing a terminal. Using the appropriate adapter in the special tool will ensure that no damage to the terminal will occur from the multimeter probe, such as spreading or bending.

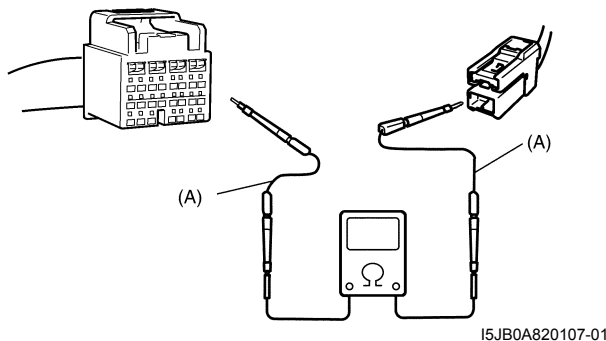

I5JB0A820107-01

The adapter (1) will also give an idea of whether or not contact tension is sufficient, helping to find an open or intermittent open due to poor terminal contact. An SDM short bar release tool (2) is included in the connector test adapter kit. Inserting it into the SDM connector (3) will release the shorting bar.

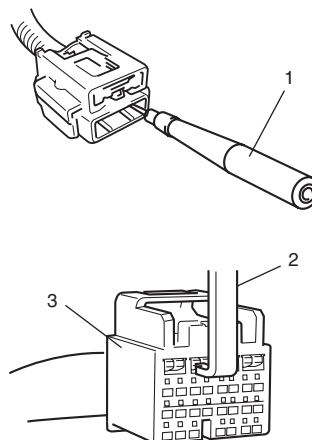

I5JB0A820108-01

Special tool

(B): 09932-75010 (Air bag driver / passenger load tool)


This tool is used as a diagnostic aid and safety device to prevent inadvertent air bag (inflator) module deployment. The load tool has three connectors attached to its case which are electrically functional and serve as resistive load substitutions.

No more than two connectors are used at any time. One of connectors ("STEERING WHEEL") is used to substitute the load of the followings.

- Driver air bag (inflator) module when it is connected at the top of the column to the contact coil assembly.
- Passenger air bag (inflator) module when it is connected to the air bag harness connector in instrument panel harness for passenger air bag (inflator) module.
- Each of driver and passenger seat belt pretensioners when it is connected to air bag harness connector in instrument panel harness for driver and passenger seat belt pretensioners.
- Side-air bag (inflator) module when it is connected to the floor harness connector for side-air bag (inflator) module.
- Side curtain-air bag (inflator) module when it is connected to the floor harness connector for side curtain-air bag (inflator) module.

Another connector (“BASE OF COLUMN”) is used to substitute the load of the driver air bag (inflator) module and the contact coil assembly when it is connected at the base of the column to the air bag wire harness. The third connector (“PASSENGER INFLATOR”) is not used.

By substituting the resistance of the load tool when called for, a determination can be made as to whether an inflator circuit component is causing system malfunction and which component is causing the malfunction. The load tool should be used only when specifically called for in the diagnostic procedures.

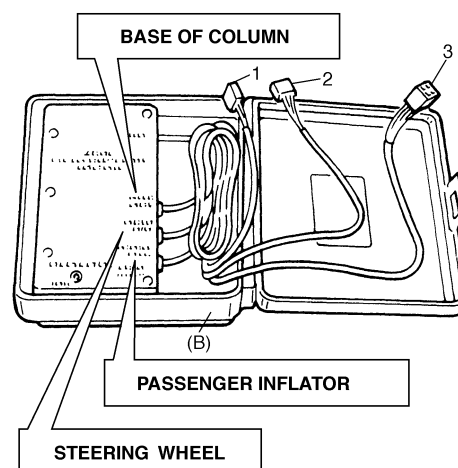

I1JA01820004-01

- | |
|---|
| 1. Connector for contact coil and driver air bag (inflator) module
(Located near the base of the steering column) |
| 2. Connector for driver, passenger air bag (inflator) module, side-air bag (inflator) module and driver and passenger seat belt pretensioners |
| 3. Not used |

Recommended Service Material

S6JB0B8208002








Material	SUZUKI recommended product or Specification	Note
Thread lock cement	Thread Lock Cement 1305 P/No.: 99000-32100	

Special Tool

S6JB0B8208003

<p>09932-75010 Air bag load tool</p>	<p>09932-75031 Air bag deployment harness</p>
<p>09932-75041 Passenger air bag (inflator) module deployment fixture</p>	<p>09932-76010 Connector test adapter set</p> <p>This set includes the following items. 1. Connector test adapter kit (09932-75020), 2. Connector test adapter & shorting bar release tool (09932-76020)</p>

8B-126 Air Bag System:
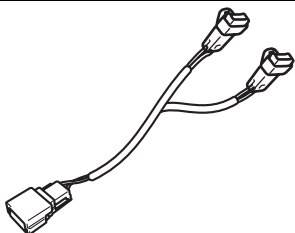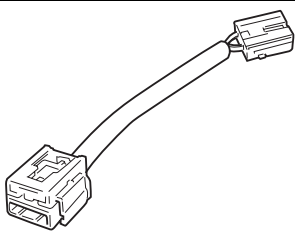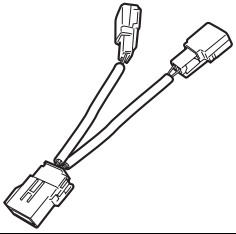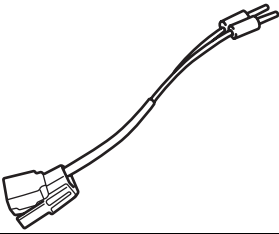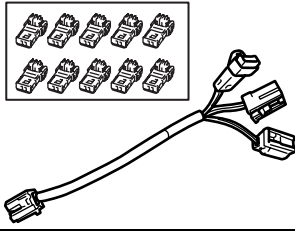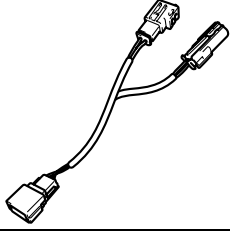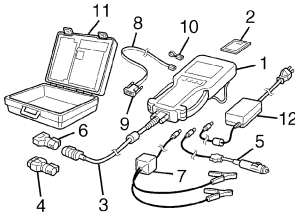
<p>09932-76510 Deployment adapter cable</p> <p>🌀 / 🌀 / 🌀</p> 	<p>09932-77310 Deployment adapter cable 4P</p> <p>🌀</p> 
<p>09932-77320 Diagnosis adapter cable 4P</p> <p>🌀 / 🌀 /</p> 	<p>09932-78310 Adapter cable</p> <p>🌀 / 🌀 /</p> 
<p>09932-78332 Deployment adapter cable</p> <p>🌀</p> 	<p>09932-78340 Deployment adapter cable</p> <p>🌀 / 🌀 /</p> 
<p>SUZUKI scan tool</p> <p>—</p> <p>This kit includes following items. 1. Tech 2, 2. PCMCIA card, 3. DLC cable, 4. SAE 16/19 adapter, 5. Cigarette cable, 6. DLC loop back adapter, 7. Battery power cable, 8. RS232 cable, 9. RS232 adapter, 10. RS232 loop back connector, 11. Storage case, 12. 🌀 / 🌀</p> 	

Section 9

Body, Cab and Accessories

CONTENTS

Precautions	9-1	System Circuit Diagram.....	9A-74
Precautions.....	9-1	System Circuit Diagram	9A-74
Precautions on Body, Cab and Accessories	9-1	A-1 Cranking System Circuit Diagram	9A-75
Precautions for Body Service.....	9-1	A-2 Charging System Circuit Diagram	9A-76
Fastener Caution for Body Service	9-1	A-3 Ignition System Circuit Diagram (M16A)	9A-77
Wiring Systems.....	9A-1	A-3 Ignition System Circuit Diagram (J20A).....	9A-78
Precautions.....	9A-1	A-3 Ignition System Circuit Diagram (H27A).....	9A-79
Cautions in Body Electrical System Servicing.....	9A-1	A-4 Cooling System Circuit Diagram (Petrol)....	9A-81
General Description	9A-1	A-4 Cooling System Circuit Diagram (DSL)	9A-82
Abbreviations	9A-1	A-5 Engine and A/C Control System Circuit	
Wire / Connector Color Symbols.....	9A-1	Diagram (M16A).....	9A-83
Symbols and Marks	9A-2	A-5 Engine and A/C Control System Circuit	
How to Read Connector Layout Diagram	9A-4	Diagram (J20A).....	9A-88
How to Read Connector Codes and Terminal		A-5 Engine and A/C Control System Circuit	
Nos.....	9A-5	Diagram (H27A)	9A-93
How to Read Ground Point	9A-8	A-5 Engine and A/C Control System Circuit	
How to Read Power Supply Diagram.....	9A-9	Diagram (DSL)	9A-98
How to Read System Circuit Diagram.....	9A-10	A-6 A/T Control System Circuit Diagram.....	9A-103
Connector Layout Diagram	9A-11	A-7 Immobilizer System Circuit Diagram	9A-106
Connector Layout Diagram	9A-11	A-8 Body Control System Circuit Diagram	9A-107
Engine Compartment	9A-12	A-10 4WD Control System Circuit Diagram	9A-112
Instrument Panel	9A-34	B-1 Windshield Wiper and Washer Circuit	
Door, Roof.....	9A-42	Diagram.....	9A-114
Floor	9A-46	B-2 Rear Wiper and Washer Circuit Diagram	9A-115
Rear	9A-54	B-3 Rear Defogger Circuit Diagram	9A-116
Ground Point	9A-55	B-4 Power Window Circuit Diagram	9A-117
Ground (earth) Point	9A-55	B-5 Power Door Lock Circuit Diagram	9A-119
Power Supply Diagram	9A-57	B-6 Power Mirror Circuit Diagram	9A-121
Power Supply Diagram	9A-57	B-7 Horn Circuit Diagram	9A-122
Fuses and the Protected Parts	9A-60	B-8 Seat Heater Circuit Diagram.....	9A-123
Fuses in Battery Fuse Box, Fuse Box No.1		B-9 Keyless Start System Circuit Diagram.....	9A-124
(Petrol)	9A-60	B-10 Sliding Roof Circuit Diagram	9A-125
Fuses in Battery Fuse Box, Fuse Box No.1		B-11 Headlight Cleaner Circuit Diagram	9A-126
(DSL).....	9A-61	C-1 Combination Meter Circuit Diagram	9A-127
Fuse Box No.2 (In Power Integration No.1,		D-1 Headlight System Circuit Diagram (One	
Power Integration No.2), Relay Box (Petrol)...	9A-62	bulb type)	9A-129
Fuse Box No.2 (In Power Integration No.1,		D-1 Headlight System Circuit Diagram (With	
Power Integration No.2), Relay Box No.1,		Projector light)	9A-130
Relay Box No.2 (DSL).....	9A-64	D-1 Headlight System Circuit Diagram (With	
Fuse Box No.3 (In J/B).....	9A-66	Discharge bulb).....	9A-131
Junction Block (J/B) Connector / Fuse Layout ..	9A-68	D-2 Position, Tail and Licence Plate Light	
Junction Block Inner Circuit (Overview)	9A-68	System Circuit Diagram	9A-132
Junction Block Inner Circuit (Detail).....	9A-70	D-3 Front Fog Light System Circuit Diagram ..	9A-133
		D-4 Illumination Light System Circuit Diagram ..	9A-134
		D-5 Interior Light System Circuit Diagram.....	9A-135

D-6 Turn Signal and Hazard Warning Light System Circuit Diagram	9A-136	Headlight Symptom Diagnosis (Vehicle Equipped with Discharge Headlight)	9B-9
D-7 Brake Light System Circuit Diagram	9A-138	Headlight Symptom Diagnosis (Vehicle Not Equipped with Discharge Headlight)	9B-9
D-8 Back-Up Light System Circuit Diagram	9A-139	Auto-On Headlight System Symptom Diagnosis (If Equipped)	9B-10
D-9 Headlight Beam Leveling System Circuit Diagram (Manual Leveling)	9A-140	DRL System Symptom Diagnosis (If Equipped)	9B-10
D-9 Headlight Beam Leveling System Circuit Diagram (Auto Leveling)	9A-141	Headlight Auto Leveling System Symptom Diagnosis (If Equipped)	9B-11
D-10 Rear Fog Light Circuit Diagram	9A-142	Headlight Manual Leveling System Symptom Diagnosis (If Equipped)	9B-11
E-2 Auto A/C System Circuit Diagram	9A-143	Turn Signal and Hazard Warning Light Symptom Diagnosis	9B-12
F-1 Air-Bag System Circuit Diagram (4ch)	9A-145	Clearance, Tail and License Plate Light Symptom Diagnosis	9B-12
F-1 Air-Bag System Circuit Diagram (8ch)	9A-146	Back-Up Light Symptom Diagnosis	9B-13
F-2 Anti-Lock Brake System Circuit Diagram	9A-148	Brake Light Symptom Diagnosis	9B-13
F-3 Electronic Stability Program System Circuit Diagram	9A-150	Front Fog Light Symptom Diagnosis (If Equipped)	9B-13
G-1 Audio System Circuit Diagram	9A-152	Rear Fog Light Symptom Diagnosis (If Equipped)	9B-13
G-2 Multi Information Display / Accessory Socket System Circuit Diagram	9A-154	Illumination Control System Symptom Diagnosis (If Equipped)	9B-14
G-4 Navigation System Circuit Diagram	9A-155	Interior Light Symptom Diagnosis	9B-14
List of Connector	9A-155	Auto-On Headlight Operation Inspection (If Equipped)	9B-14
List of Connectors	9A-155	DRL Operation Inspection (If Equipped)	9B-15
B Connector	9A-155	Inspection of Headlight Leveling Control Module and Its Circuit (Vehicle Equipped with Auto Leveling Headlight System)	9B-15
C Connector	9A-156	Repair Instructions	9B-17
D Connector	9A-158	Headlight Housing Removal and Installation	9B-17
E Connector	9A-159	Headlight Bulb Replacement	9B-17
F Connector	9A-161	Ballast Removal and Installation	9B-19
G Connector	9A-162	Igniter Removal and Installation	9B-19
J Connector	9A-164	Headlight Aiming Adjustment with Screen	9B-20
K Connector	9A-166	Headlight Switch (in Lighting Switch) Removal and Installation	9B-22
L Connector	9A-166	Headlight Switch (in Lighting Switch) Inspection	9B-22
O Connector	9A-168	Tail Light Relay, Headlight Relay Inspection	9B-23
Q Connector	9A-169	Hazard Warning Switch Removal and Installation	9B-23
R Connector	9A-169	Hazard Warning Switch Inspection	9B-23
Lighting Systems	9B-1	Brake Light Switch Inspection	9B-23
Precautions	9B-1	Turn Signal Light Switch (in Lighting Switch) Removal and Installation	9B-24
Precautions for Discharge Headlight Service (If Equipped)	9B-1	Turn Signal Light Switch (in Lighting Switch) Inspection	9B-24
Precautions in Diagnosing Troubles (Vehicle Equipped with Auto Leveling Headlight System)	9B-1	Turn Signal and Hazard Warning Relay Removal and Installation	9B-24
General Description	9B-2	Turn Signal and Hazard Warning Relay Inspection	9B-24
Discharge Headlight Description (If Equipped)	9B-2	License Light Assembly Removal and Installation	9B-25
Auto Leveling Headlight System Description (If Equipped)	9B-3	Front Fog Light Assembly Removal and Installation (If Equipped)	9B-25
Auto-On Headlight System Description (If Equipped)	9B-5	Front Fog Light Bulb Replacement (If Equipped)	9B-25
D.R.L. System Description (If Equipped)	9B-6		
Schematic and Routing Diagram	9B-6		
Headlight Auto Leveling System Wiring Circuit Diagram	9B-6		
Component Location	9B-7		
Lighting System Components Location	9B-7		
Interior Light System Location	9B-8		
Diagnostic Information and Procedures	9B-8		
Self-Diagnosis Function for Auto Leveling Headlight System	9B-8		
Headlight Leveling Warning Light Check	9B-8		

Front Fog Light Switch Inspection (If Equipped).....	9B-25	Main Beam (High Beam) Indicator Symptom Diagnosis	9C-11
Front Fog Light Relay Inspection (If Equipped).....	9B-26	Warning Buzzer Circuit Symptom Diagnosis	9C-11
Front Fog Light Aiming Adjustment with Screen (If Equipped).....	9B-27	Cigarette Lighter Symptom Diagnosis (If Equipped).....	9C-12
Headlight Manual Leveling Switch (If Equipped) Inspection	9B-28	Horn Symptom Diagnosis	9C-12
Headlight Leveling Actuator Inspection (If Equipped).....	9B-28	Information Display Symptom Diagnosis (If Equipped).....	9C-12
Rear Fog Light Switch Inspection (If Equipped).....	9B-29	Clock Symptom Diagnosis (If Equipped).....	9C-13
Height Sensor Removal and Installation (If Equipped).....	9B-29	Audio System Symptom Diagnosis (If Equipped).....	9C-14
Height Sensor and Its Circuit Inspection (If Equipped).....	9B-30	Remote Audio Control Switch Symptom Diagnosis (If Equipped).....	9C-15
Leveling Control Module Removal and Installation (If Equipped)	9B-31	Navigation Symptom Diagnosis (If Equipped).....	9C-15
Initialization of Auto Leveling Headlight System	9B-31	Repair Instructions	9C-16
Auto-On Headlight Sensor Inspection (If Equipped).....	9B-32	Ignition Switch Removal and Installation.....	9C-16
Specifications.....	9B-32	Ignition Switch Inspection.....	9C-16
Tightening Torque Specifications.....	9B-32	Combination Meter Removal and Installation	9C-17
Instrumentation / Driver Info. / Horn	9C-1	Fuel Level Sensor Removal and Installation	9C-17
Precautions.....	9C-1	Fuel Level Sensor Inspection	9C-17
Precautions in Diagnosing Troubles for Combination Meter.....	9C-1	Oil Pressure Switch Removal and Installation	9C-18
General Description	9C-1	Oil Pressure Switch Inspection	9C-18
CAN Communication System Description.....	9C-1	Engine Coolant Temperature (ECT) Sensor Inspection	9C-18
Auto Volume Control System Description (If Equipped).....	9C-3	Brake Fluid Level Switch Inspection	9C-18
Schematic and Routing Diagram.....	9C-4	Parking Brake Switch Inspection.....	9C-18
Combination Meter Circuit Diagram	9C-4	Door Switch (Front / Rear / Rear End Door) Inspection	9C-19
Component Location	9C-5	Outside Air Temperature Sensor Removal and Installation (If Equipped)	9C-19
Audio System Component Location.....	9C-5	Outside Air Temperature Sensor Inspection (If Equipped).....	9C-19
Diagnostic Information and Procedures.....	9C-6	Instrument Panel Removal and Installation.....	9C-20
Speedometer Symptom Diagnosis.....	9C-6	Information Display (Clock) Removal and Installation	9C-21
Tachometer Symptom Diagnosis	9C-6	Audio Unit Removal and Installation	9C-21
Engine Coolant Temperature (ECT) Meter Symptom Diagnosis	9C-6	Front Speaker Removal and Installation	9C-22
Fuel Meter Symptom Diagnosis	9C-6	Rear Speaker Removal and Installation (5 Door Model)	9C-22
Low Fuel Warning Light Symptom Diagnosis	9C-7	Rear Speaker Removal and Installation (3 Door Model)	9C-22
Oil Pressure Warning Light Symptom Diagnosis	9C-7	GPS Antenna Removal and Installation (If Equipped).....	9C-23
Brake and Parking Brake Warning Light Symptom Diagnosis	9C-8	Horn Removal and Installation	9C-23
Seat Belt Reminder Light Symptom Diagnosis (If Equipped)	9C-8	Horn Inspection	9C-23
Illumination Indicator Symptom Diagnosis	9C-9	Horn Relay Inspection.....	9C-24
Headlight Auto Leveling Indicator Symptom Diagnosis (If Equipped).....	9C-9	Antenna Base Removal and Installation	9C-24
A/T Power Mode Indicator Symptom Diagnosis (A/T Model)	9C-10	Remote Audio Control Switch Removal and Installation (If Equipped)	9C-25
A/T Shift Position Indicator Symptom Diagnosis (A/T Model)	9C-10	Remote Audio Control Switch Inspection (If Equipped).....	9C-25
Charge Warning Light Symptom Diagnosis	9C-10	Vehicle Speed Signal Inspection (For Audio Unit) (If Equipped).....	9C-25
		Specifications	9C-26
		Tightening Torque Specifications	9C-26
		Wipers / Washers.....	9D-1
		Diagnostic Information and Procedures	9D-1
		Front Wiper and Washer Symptom Diagnosis	9D-1
		Rear Wiper and Washer Symptom Diagnosis.....	9D-1

Headlight Washer Symptom Diagnosis (If Equipped).....	9D-2	Rear Door Window Regulator Removal and Installation.....	9E-18
Headlight Washer Operation Inspection (If Equipped).....	9D-2	Rear Door Window Regulator Inspection.....	9E-18
Inspection of Headlight Washer Control Module and Its Circuit (If Equipped).....	9D-3	Rear End Door Window Components.....	9E-19
Repair Instructions	9D-4	Rear End Door Glass Removal and Installation.....	9E-20
Wipers and Washers Components.....	9D-4	Rear End Door Window Defogger Relay Inspection.....	9E-20
Washer Tank and Washer Pump Removal and Installation.....	9D-5	Rear End Door Window Defogger Wire Inspection.....	9E-21
Washer Pump Inspection.....	9D-5	Rear End Door Window Defogger Wire Repair.....	9E-21
Windshield Wiper Removal and Installation.....	9D-6	Power Window Main Switch Inspection.....	9E-21
Windshield Wiper Motor Inspection.....	9D-7	Power Window Sub Switch Inspection.....	9E-23
Rear Wiper Removal and Installation.....	9D-8	Door Mirror Components.....	9E-23
Rear Wiper Motor Inspection.....	9D-9	Door Mirror Removal and Installation.....	9E-24
Windshield Wiper and Washer Switch Removal and Installation.....	9D-10	Power Door Mirror Switch Inspection.....	9E-24
Windshield Wiper and Washer Switch Inspection.....	9D-11	Power Door Mirror Actuator Inspection.....	9E-24
Rear Wiper and Washer Switch Removal and Installation.....	9D-12	Door Mirror Heater Inspection (If Equipped).....	9E-25
Rear Wiper and Washer Switch Inspection.....	9D-12	Door Mirror Heater Relay Inspection (If Equipped).....	9E-25
Rear Wiper Relay Removal and Installation.....	9D-12	Special Tools and Equipment	9E-25
Rear Wiper Relay Inspection.....	9D-13	Recommended Service Material.....	9E-25
Headlight Washer Switch Inspection (If Equipped).....	9D-13	Security and Locks.....	9F-1
Headlight Washer Pump Removal and Installation (If Equipped).....	9D-13	General Description	9F-1
Headlight Washer Nozzle Removal and Installation (If Equipped).....	9D-13	Key Coding Construction.....	9F-1
Specifications	9D-14	Component Location	9F-1
Tightening Torque Specifications.....	9D-14	Power Door Lock and Keyless Entry System Component Location.....	9F-1
Glass / Windows / Mirrors	9E-1	Diagnostic Information and Procedures	9F-2
General Description	9E-1	Power Door Lock System Symptom Diagnosis.....	9F-2
Rear End Door Window Defogger System Description.....	9E-1	Power Door Lock System Operation Inspection.....	9F-2
Windshield Construction.....	9E-1	Keyless Entry System Symptom Diagnosis (If Equipped).....	9F-3
Rear Quarter Window Construction.....	9E-2	Keyless Entry System Operation Inspection.....	9F-4
Diagnostic Information and Procedures	9E-3	Door Lock Function of Keyless Start System Symptom Diagnosis (If Equipped).....	9F-4
Rear End door Window Defogger Symptom Diagnosis.....	9E-3	Repair Instructions	9F-5
Power Window Control System Symptom Diagnosis.....	9E-4	Front Door Lock Assembly Components.....	9F-5
Power Door Mirror Control System Symptom Diagnosis.....	9E-4	Front Door Lock Assembly Removal and Installation.....	9F-5
Door Mirror Heater Symptom Diagnosis (If Equipped).....	9E-4	Front Door Lock Assembly Inspection.....	9F-7
Repair Instructions	9E-5	Power Door Lock Switch Inspection.....	9F-7
Windshield Removal and Installation.....	9E-5	Door Key Cylinder Switch Inspection.....	9F-8
Rear Quarter Window Removal and Installation.....	9E-8	Power Door Lock Actuator Inspection.....	9F-8
Front Door Window Components.....	9E-13	Rear Door Lock Assembly Components.....	9F-10
Front Door Glass Removal and Installation.....	9E-14	Rear Door Lock Assembly Removal and Installation.....	9F-10
Front Door Window Regulator Removal and Installation.....	9E-15	Rear Door Lock Assembly Inspection.....	9F-10
Front Door Window Regulator Inspection.....	9E-15	Rear End Door Lock Assembly Components.....	9F-11
Rear Door Window Components.....	9E-16	Rear End Door Lock Assembly Removal and Installation.....	9F-11
Rear Door Glass Removal and Installation.....	9E-17	Rear End Door Lock Assembly Inspection.....	9F-12
		Replacement of Transmitter Battery (Other than Keyless Start Model).....	9F-12

Programming Transmitter Code for Keyless Entry System (Other than Keyless Start Model)	9F-13	Sun Roof Assembly Disassembly and Reassembly	9I-6
Keyless Entry Receiver Removal and Installation	9F-13	Hood / Fenders / Doors	9J-1
Keyless Entry Receiver and Its Circuit Inspection	9F-14	Repair Instructions	9J-1
Specifications	9F-15	Hood Removal and Installation	9J-1
Tightening Torque Specifications	9F-15	Hood Inspection and Adjustment	9J-1
Special Tools and Equipment	9F-15	Front Fender Components	9J-2
Recommended Service Material	9F-15	Front Fender Removal and Installation	9J-2
Seats	9G-1	Front Door Assembly Components	9J-3
Diagnostic Information and Procedures	9G-1	Front Door Assembly Removal and Installation	9J-4
Front Seat Heater Symptom Diagnosis (If Equipped)	9G-1	Rear Door Assembly Components	9J-5
Repair Instructions	9G-1	Rear Door Assembly Removal and Installation	9J-5
Front Seat Components	9G-1	Rear End Door Assembly Components	9J-6
Front Seat Removal and Installation	9G-2	Rear End Door Assembly Removal and Installation	9J-7
Front Seat Heater Switch (Driver and Passenger Side) Inspection (If Equipped)	9G-2	Specifications	9J-8
Front Seat Heater Wire Inspection (If Equipped)	9G-2	Tightening Torque Specifications	9J-8
Rear Seat Components	9G-3	Special Tools and Equipment	9J-8
Rear Seat Removal and Installation	9G-3	Recommended Service Material	9J-8
Specifications	9G-3	Body Structure	9K-1
Tightening Torque Specifications	9G-3	Repair Instructions	9K-1
Interior Trim	9H-1	Front Bumper Components	9K-1
Repair Instructions	9H-1	Rear Bumper Components	9K-2
Floor Carpet Removal and Installation	9H-1	Cowl Top Components	9K-2
Head Lining Removal and Installation	9H-1	Specifications	9K-3
Console Box Components	9H-3	Body Dimensions	9K-3
Sun Roof / T-Top / Convertible Top	9I-1	Panel Clearance	9K-10
General Description	9I-1	Paint / Coatings	9L-1
Power Sun Roof System Description	9I-1	General Description	9L-1
Diagnostic Information and Procedures	9I-1	Anti-Corrosion Treatment Construction	9L-1
Power Sun Roof System Symptom Diagnosis	9I-1	Plastic Parts Finishing	9L-2
Repair Instructions	9I-1	Component Location	9L-2
Sun Roof Glass Components	9I-1	Sealant Application Areas	9L-2
Sun Roof Glass Removal and Installation	9I-2	Under Coating Application Areas	9L-8
Sun Roof Glass Adjustment	9I-2	Anti-Corrosion Compound Application Area	9L-10
Sun Roof Switch Inspection	9I-2	Exterior Trim	9M-1
Sun Roof Motor Removal and Installation	9I-3	Repair Instructions	9M-1
Sun Roof System Circuit and Motor Inspection	9I-3	Roof Drip Molding Removal and Installation (If Equipped)	9M-1
Sun Roof Assembly Components	9I-4	Roof Rail Removal and Installation (If Equipped)	9M-2
Sun Roof Assembly Removal and Installation	9I-5	Splash Guard Removal and Installation (If Equipped)	9M-3

Precautions

Precautions

Precautions on Body, Cab and Accessories

S6JB0B9000001

Air Bag Warning

Refer to “Air Bag Warning in Section 00”.

Fastener Caution

Refer to “Fastener Caution in Section 00”.

Precautions for Body Service

Refer to “Precautions for Body Service”.

Fastener Caution for Body Service:

Refer to “Fastener Caution for Body Service”.

Cautions in Body Electrical System Servicing

Refer to “Cautions in Body Electrical System Servicing in Section 9A”.

Precautions for Discharge Headlight Service

Refer to “Precautions for Discharge Headlight Service (If Equipped) in Section 9B”.

Precautions for Body Service

S6JB0B9000002

⚠ WARNING

For vehicles equipped with a Supplemental Restraint (Air Bag) System:

When servicing vehicle body, if shock may be applied to air bag system component parts, remove those parts beforehand.

Fastener Caution for Body Service

S6JB0B9000003

⚠ CAUTION

-
- Fasteners are important attaching parts in that they could affect the performance of vital components and systems, and/or could result in major repair expense. They must be replaced with one of the same part number or with an equivalent part if replacement become necessary.
 - Do not use a replacement part of lesser quality or substitute a design. Torque values must be used as specified during reassembly to assure proper retention of these parts.
-

Wiring Systems

Precautions

Cautions in Body Electrical System Servicing

S6JB0B9100001

When servicing the electric systems, observe the cautions described in “Precautions for Electrical Circuit Service in Section 00” to protect electrical parts and to prevent a fire.

General Description

Abbreviations

S6JB0B9101001

Refer to the “Abbreviations in Section 0A” for the general abbreviations.

Abbreviation	Full term	Abbreviation	Full term
2WD	2 wheel drive vehicles	ILL	Illumination
4WD	4 wheel drive vehicles	IND	Indicator
A/B	Air bag	INT	Intermittent
A/LEV	Auto leveling	J/B	Junction block
ACC	Accessory	J/C	Joint connector
CAN	Controller area network	KLS	Keyless start system
COMB	Combination	L	Left
DSL	Diesel engine	LED	Light emitting diode
ELCM	EVAP leak check module	LHD	Left hand drive vehicle
ESP®	Electronic stability program	LO	Low
FWD	Forward	P/N	Power normal
HI	High	R	Right
HID	High intensity discharge	RHD	Right hand drive vehicle
HLC	Head light cleaner	ST	Starter
IF EQPD	If equipped	VSV	Vacuum switching valve
IG COIL	Ignition coil	5 dr	5 door







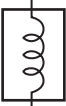






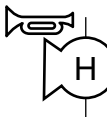
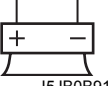


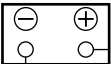





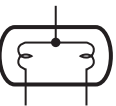











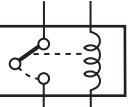
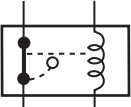


ESP® is a registered trademark of Daimler Chrysler AG.




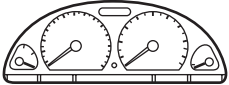




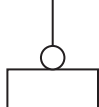

























Wire / Connector Color Symbols

S6JB0B9101002

Refer to “Wire Color Symbols in Section 0A”.

Symbols and Marks

Battery	Ground		Normal fuse	Slow blow fuse
 I2RH01910910-01	 IYSQ01910915-01	 IYSQ01910916-01	 IYSQ01910917-01	 IYSQ01910918-01
Circuit breaker	Coil, Solenoid	Heater	Bulb	
 IYSQ01910919-01	 IYSQ01910920-01	 IYSQ01910921-01	 IYSQ01910922-01	 IYSQ01910923-01
Cigarette lighter	Motor	Pump	Horn	Speaker
 IYSQ01910924-01	 IYSQ01910925-01	 IYSQ01910926-01	 I2RH01910911-01	 I5JB0B910995-02
Buzzer	Chime	Condenser	Thermistor	Reed switch
 IYSQ01910929-01	 IYSQ01910930-01	 IYSQ01910931-01	 IYSQ01910932-01	 IYSQ01910933-01
Resistance	Variable resistance		Transistor	
 IYSQ01910934-01	 IYSQ01910935-01	 IYSQ01910936-01	 IYSQ01910937-01 NPN	 IYSQ01910938-01 PNP
Photo transistor	Diode	Zener diode	Light emitting diode	Photo diode
 IYSQ01910939-01	 IYSQ01910940-01	 IYSQ01910941-01	 IYSQ01910942-01	 IYSQ01910943-01
Piezoelectric element	Harness		Ring terminal	Connector
 IYSQ01910944-01	 IYSQ01910945-01 Connected	 IYSQ01910946-01 Not connected	 IYSQ01910947-01	 IYSQ01910948-01
Relay		Switch		
 IYSQ01910949-01 Normal open	 IYSQ01910950-01 Normal closed	 IYSQ01910951-01 Open switch	 IYSQ01910952-01 Closed switch	

Ignition switch  I2RH01910912-01	Keyless entry  I3JA01910902-01	Immobilizer system  I5RH01910901-01	Combination meter  I2RH01910915-01	Lighting switch  I2RH01910916-01
Headlight leveling  I3JA01910904-01	Hazard warning light  I3JA01910905-01	Front fog light  I3JA01910906-01	Rear fog light  I3JA01910907-01	Spark plug  I2RH01910921-01
Radiator fan  I2RH01910922-01	Fuel pump  I3JA01910908-01	Injector  I2RH01910924-01	XX control module  I2RH01910925-01	Windshield wiper  I3JA01910909-01
Windshield washer  I3JA01910910-01	Rear wiper  I3JA01910911-01	Rear washer  I3JA01910912-01	Rear defogger  I2RH01910930-01	Power window  I3JA01910913-01
Power door lock  I3JA01910914-01	Power mirror  I3JA01910915-01	A/B  I3JA01910916-01	Pretensioner  I3JA01910917-01	Passenger side  I3JA01910918-01
Driver side  I3JA01910919-01	Seat heater  I2RH01910938-01	A/C  I3JA01910920-01	Power steering  I3JA01910921-01	Side air-bag (R)  I4JA01910901-01
Side air-bag (L)  I4JA01910902-01	Side curtain air-bag (R)  I5RS0A910958-01	Side curtain air bag (L)  I5RS0A910959-00	Glow plug  I4JA01910903-01	

How to Read Connector Layout Diagram


S6JB0B9101004

[A-1]: Harness symbol and corresponding harness name

- A: Battery harness
- B: A/C harness
- C: Engine harness
- D: Injector harness
- E: Main harness, Oil pressure switch wire, Console wire
- G: Instrument panel harness
- J: Side door wire (Power window)
- K: Interior light harness, Rear speaker wire, Roof wire
- L: Floor harness, G sensor wire (Fuel pump harness)
- M: Rear bumper harness
- O: Rear end door harness
- Q: Air bag/Pretensioner harness
- R: (Fuel pump wire)

[A-2]: Connector Number

[B]: Ground point No.

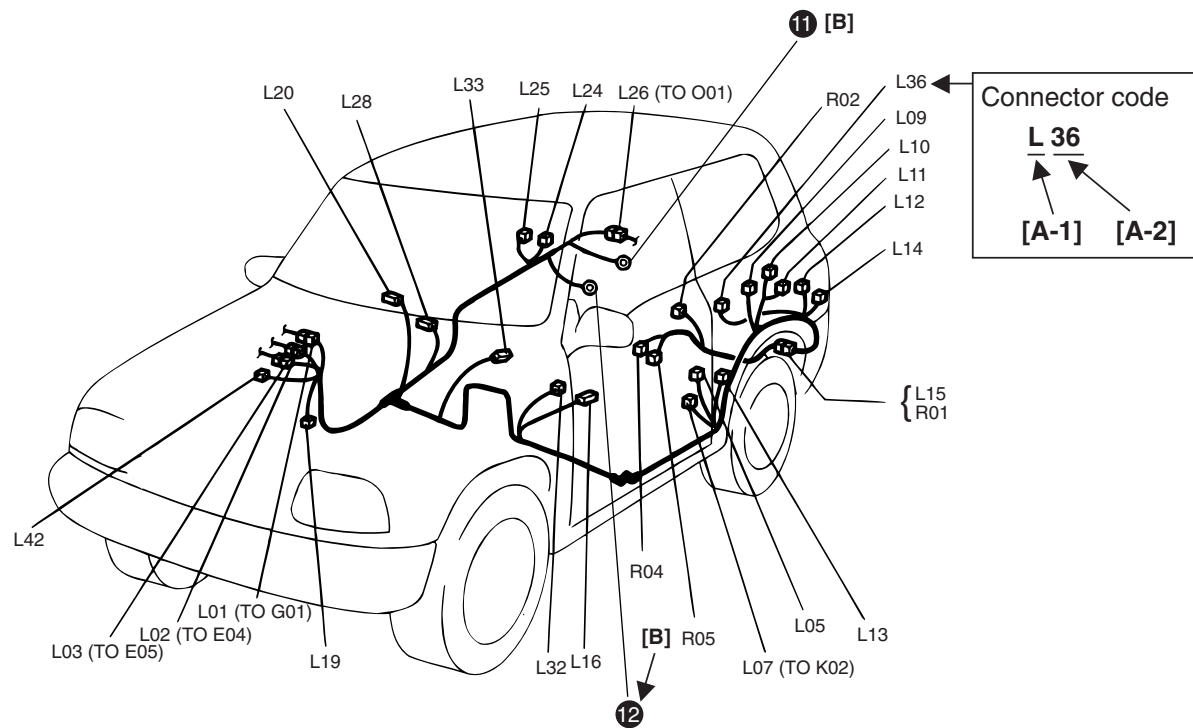


I2RH01910901-01

How to Read Connector Codes and Terminal Nos.

S6JB0B9101005

1) Connector code/Terminal No./Terminal layout

- The connector shape and terminal layout shown in this manual are those when viewed from “Z” in the illustration.
Refer to “List of Connectors”.

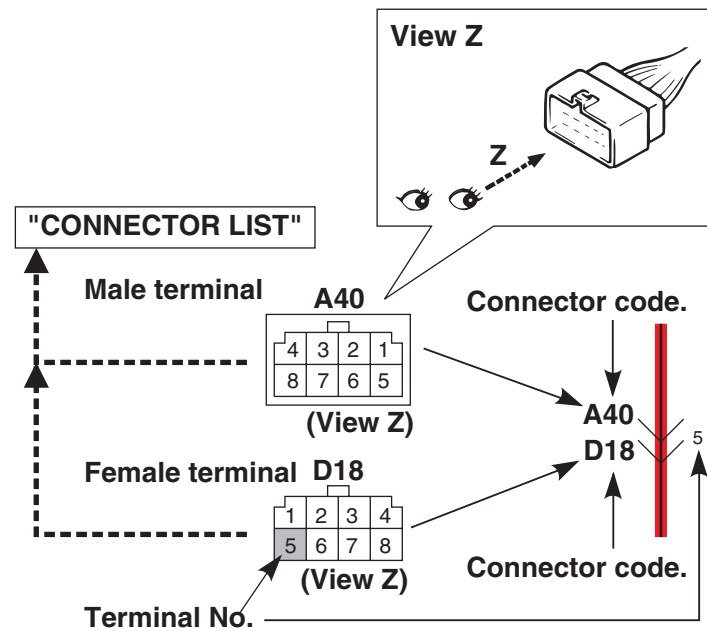


I5RS0A910901-01

NOTE

Molded terminal numbers that are different from the above can be found on some connectors in rare cases.

These molded numbers are not applied in this manual.


2) Connector type

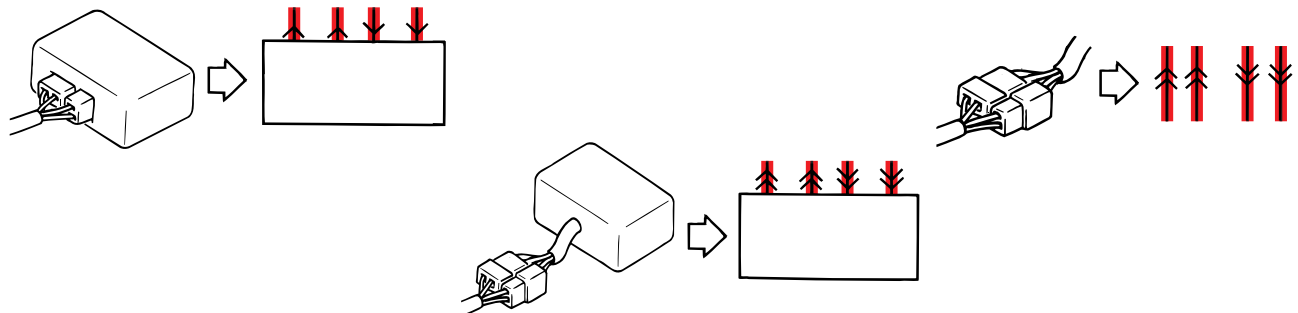

I2RH01910903-01

9A-6 Wiring Systems:

3) Terminals in one connector (Broken line) (B15)/Terminals in different connectors (B14, B16)

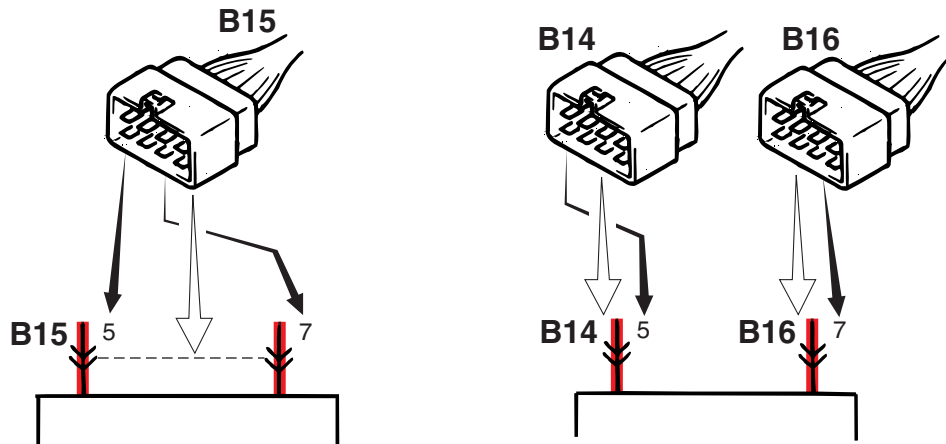


I2RH01910904-01

4) Joint connector (J/C)

- The joint connector (J/C) connects several different wires with the same wire color at one place instead of connecting them by welding or caulking one by one. It is not an ordinary connector but a part of the continuous wire in the harness.


Example

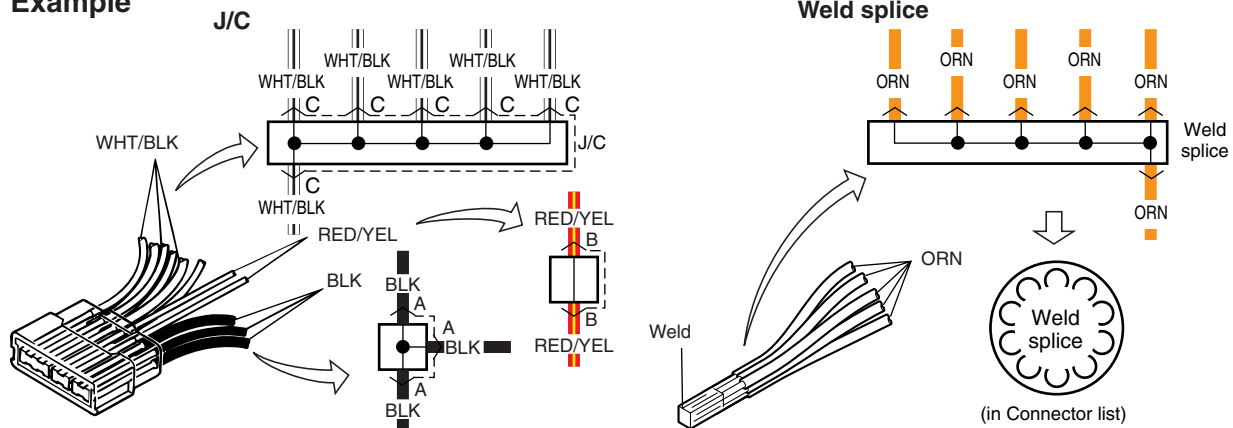

I4RS0A910902-01

5) Junction block (J/B)

Example

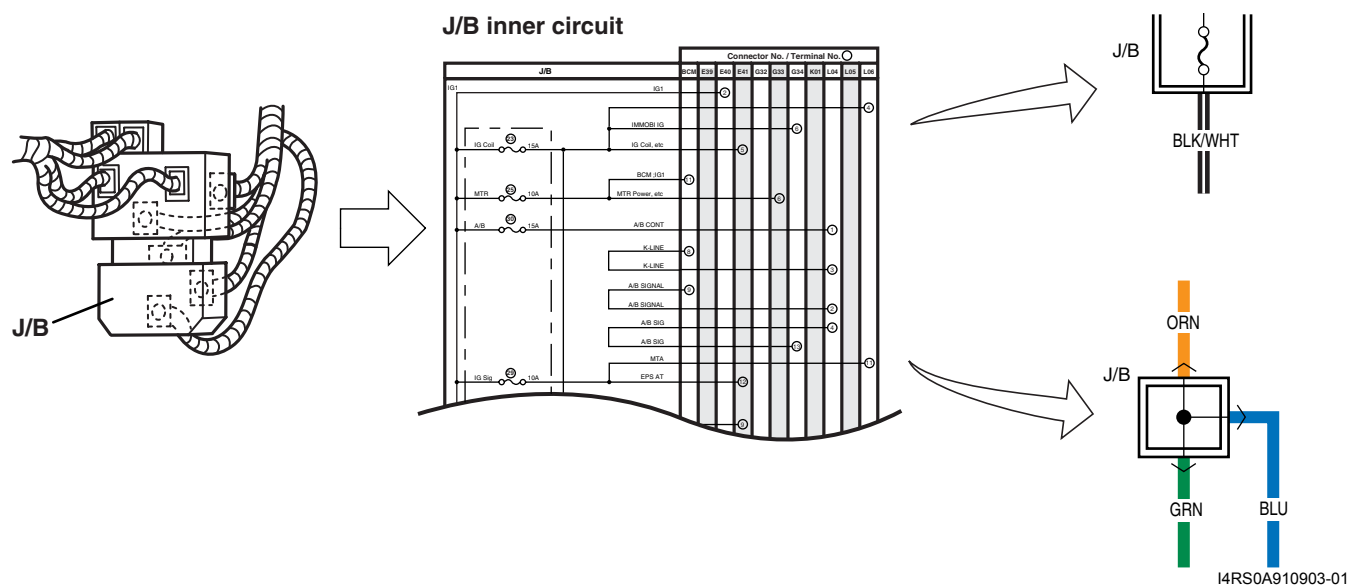


6) Connector location, shape and terminal No.

Refer to "Connector Layout Diagram".

Refer to "System Circuit Diagram".

Refer to "List of Connectors".

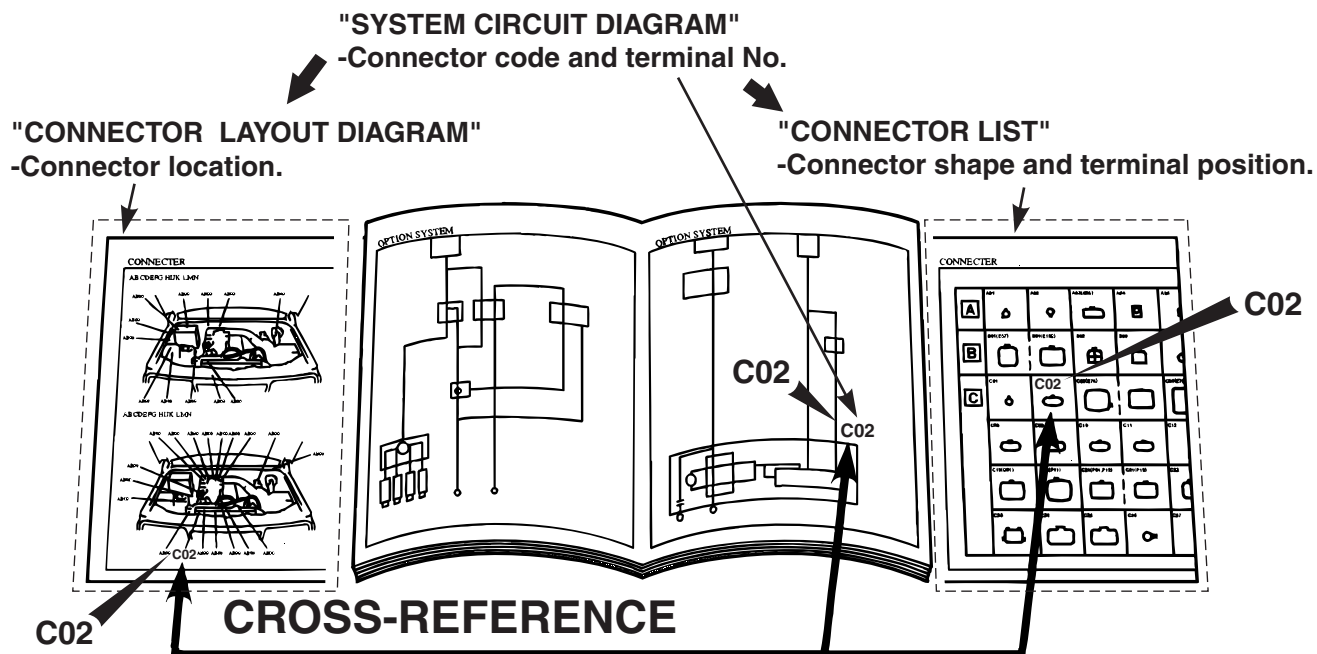


How to Read Ground Point

S6JB0B9101006

Refer to "System Circuit Diagram".

Refer to "Ground (earth) Point".

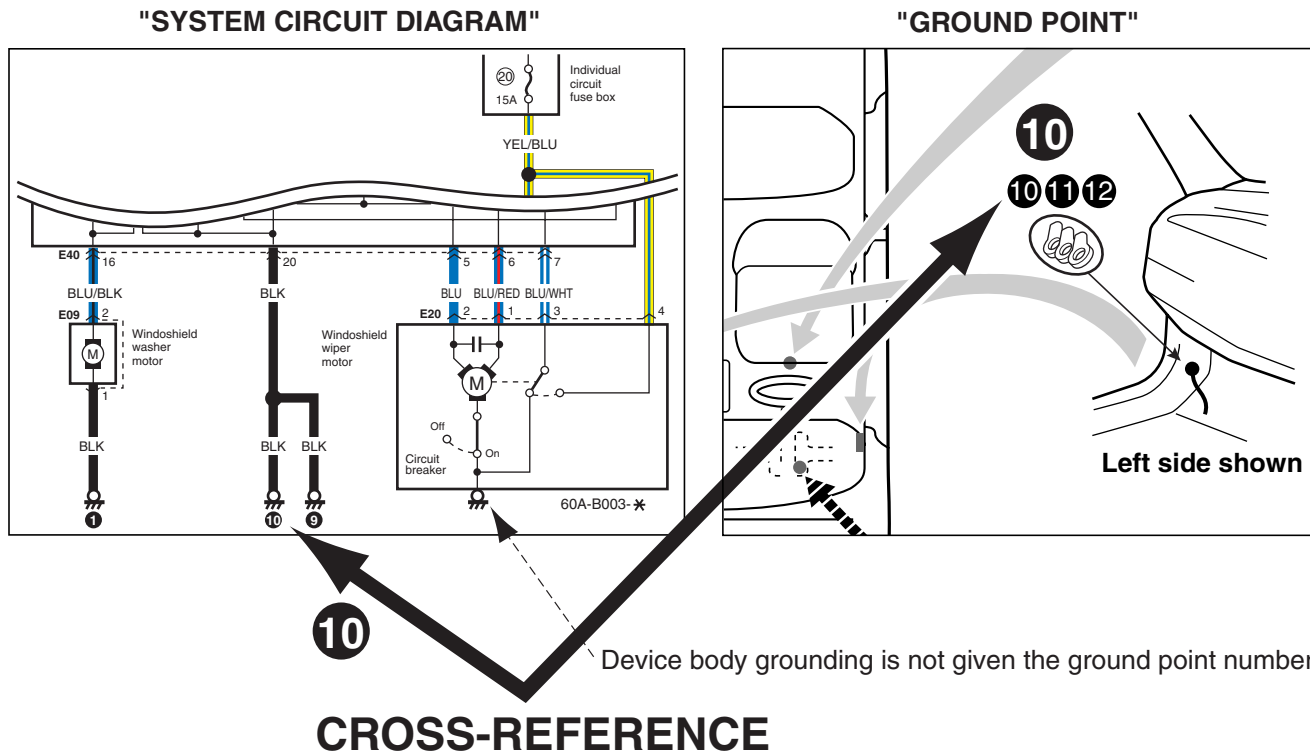


I4JA01910985-01

How to Read Power Supply Diagram

S6JB0B9101007

Refer to "Power Supply Diagram".

Refer to "System Circuit Diagram".

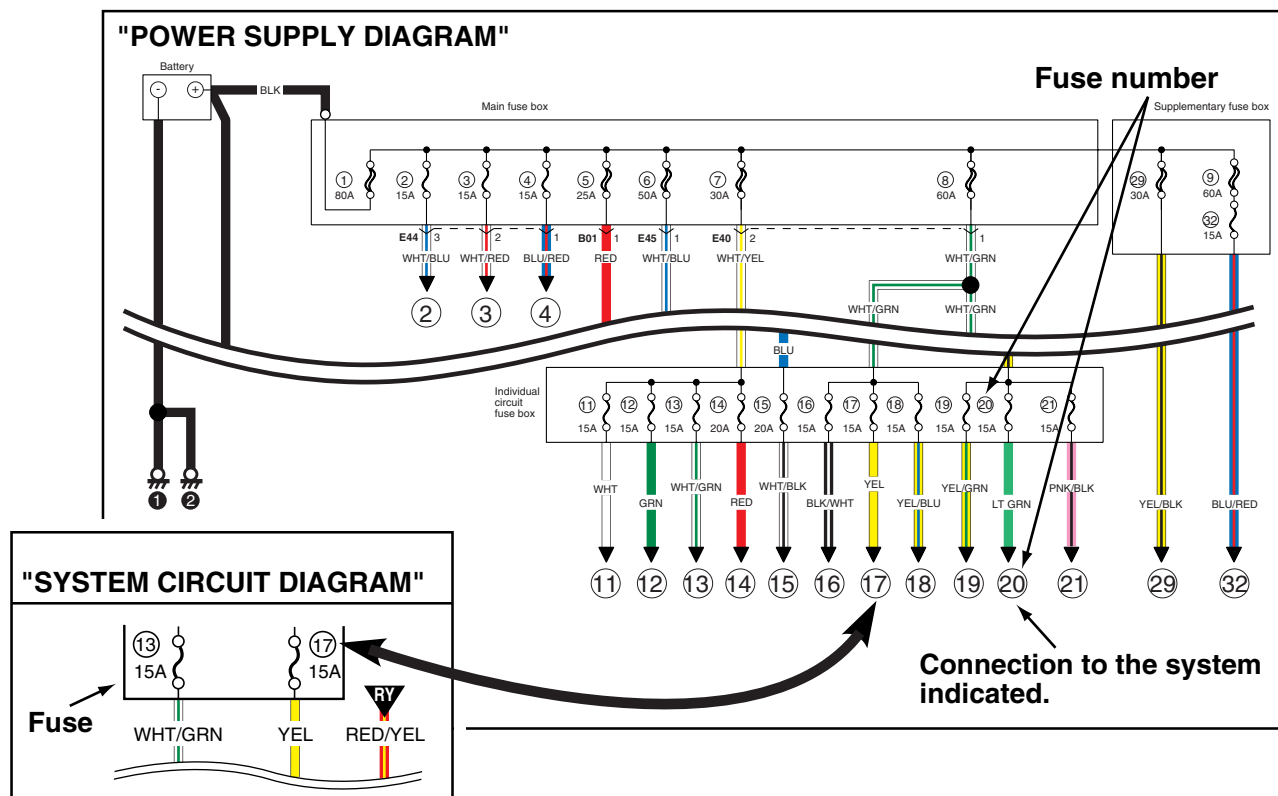

I4JA01910986-01

How to Read System Circuit Diagram

S6JB0B9101008

The circuit diagram is designed so the current flows from the top of the diagram (power source) to the bottom of the diagram (ground) as if giving an image of water flow.

[A]: Fuse No.

[B]: Circuit jumping page / direction

NOTE

This means “Jump to the page directed with the arrow(s) by their number.

(For example:” Two arrows directing left” means” Jump to two pages before”).

You will find the same symbol with the arrows directing opposite in the referenced page. The circuit continues between the symbols.

[C]: Circuit jumping point / direction

NOTE

The circuit continues to the same symbol with opposite direction within the page.

You will find the other symbol in the direction of the arrow.

[D]: Terminals-in-one-connector mark

[E]: Wire color

[F]: Shield wire

[G]: Ground point

[H]: “From” or “To” (With ID letter (s))

[I]: Specification variation

The white arrow between A and B means “or”.

[J]: “From” (With ID letter (s))


[K] “To” (With ID letter (s))

[L]: Connector code

[M]: Terminal No.

[N]: Symbol mark

[O]: “SEE” mark

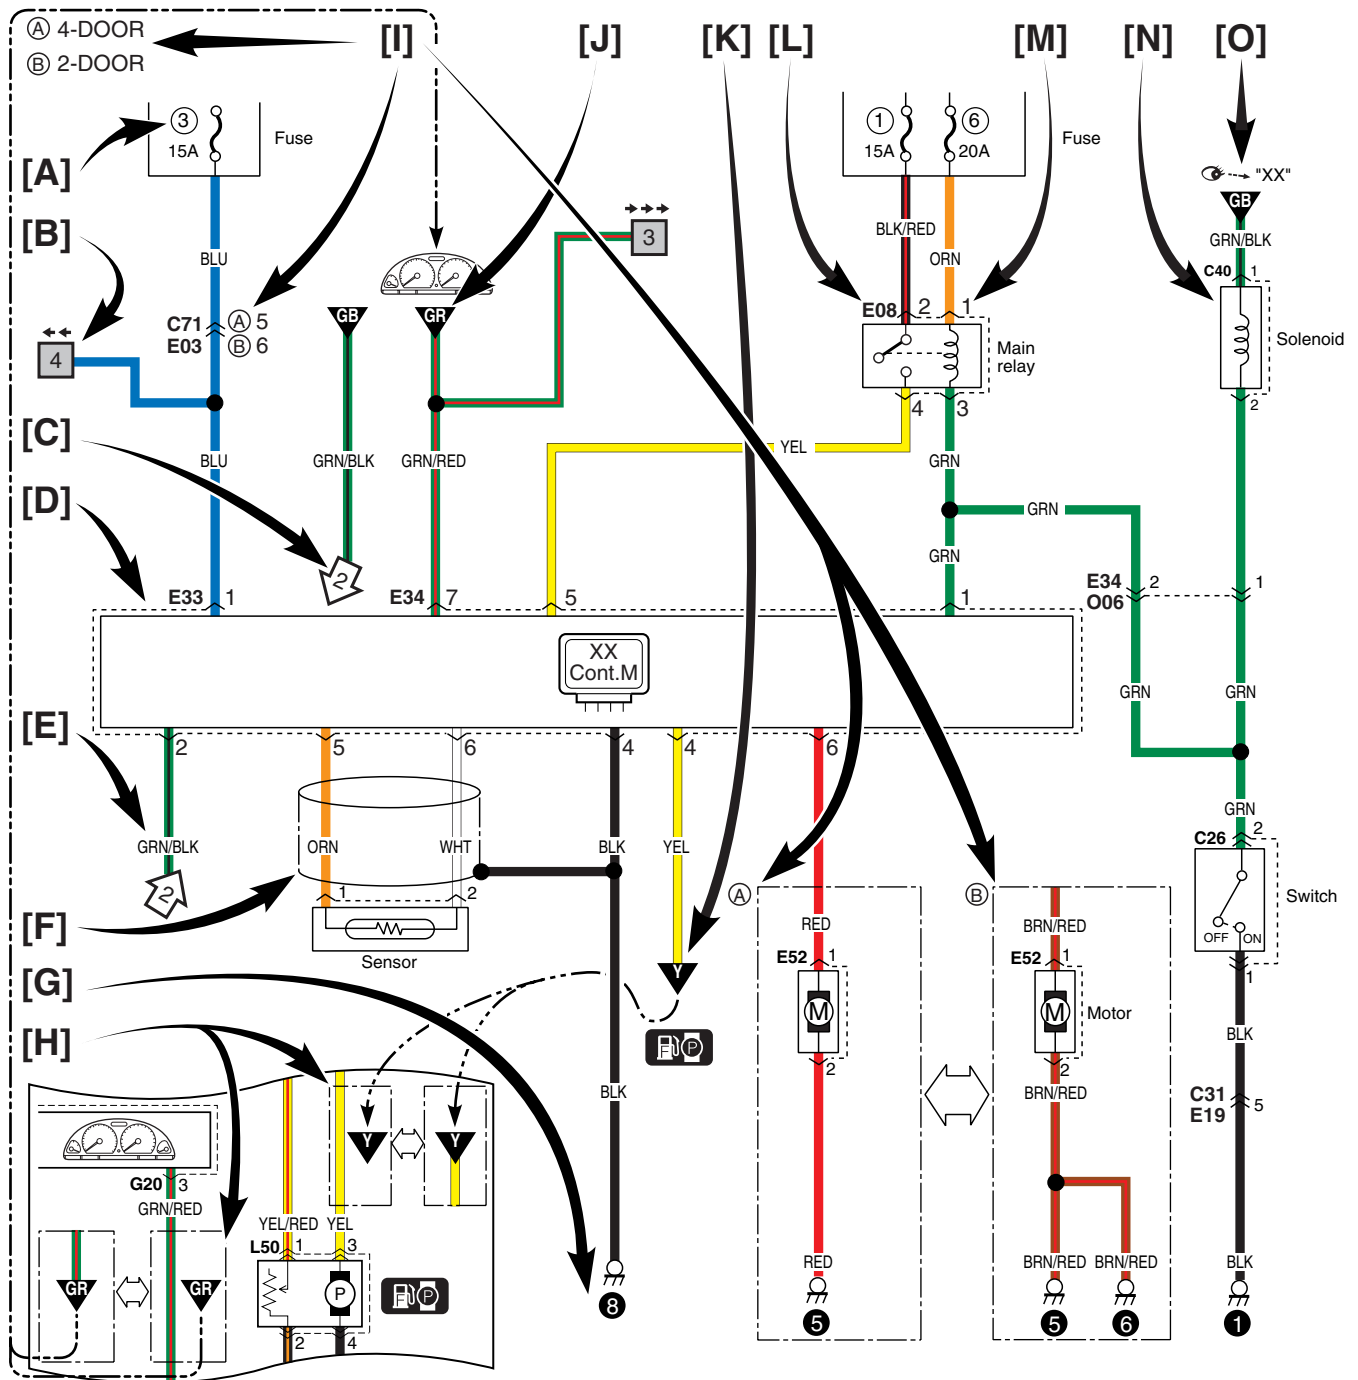

I4JA01910987-01

Connector Layout Diagram

Connector Layout Diagram

Refer to "Engine Compartment".

Refer to "Instrument Panel".

Refer to "Door, Roof".

Refer to "Floor".

Refer to "Rear".


ESP® is a registered trademark of Daimler Chrysler AG.

S6JB0B910A001

Engine Compartment

S6JB0B910A002


C: Engine harness (M16A RHD)

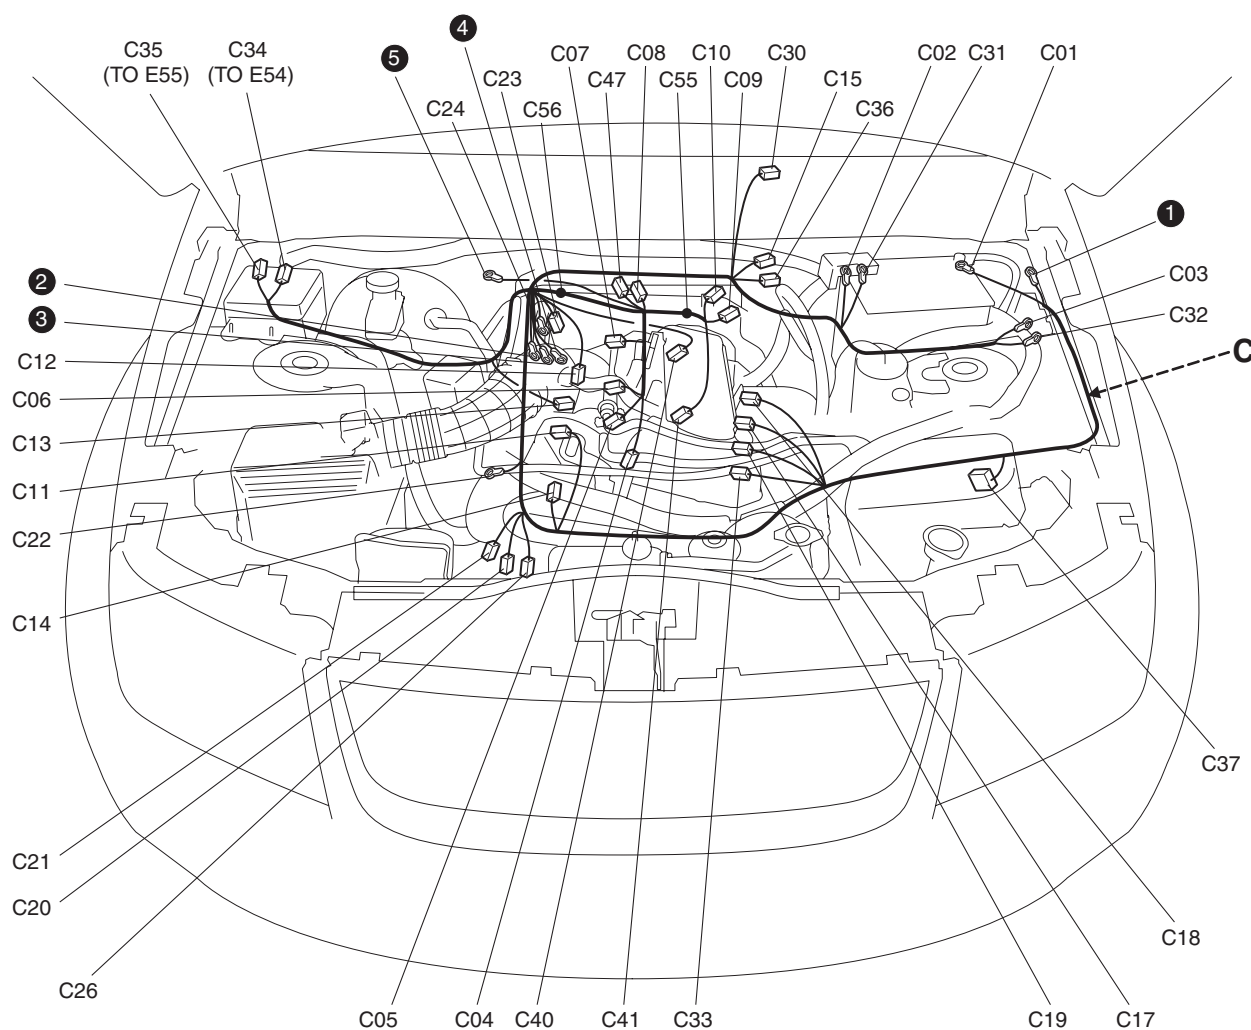

I5JB0A910901-05

C: Engine harness

No./Color	Connective position	No./Color	Connective position
C01/-	Battery (-)	C21/GRN	Generator #1
C02/-	Battery fuse box	C22/-	Generator #2
C03/-	Fuse box No.1	C23/BLK	Starting motor #1
C04/GRY	Injector #1	C24/-	Starting motor #2
C05/GRY	Injector #2	C26/GRY	Knock sensor
C06/GRY	Injector #3	C30/BLK (M/T)	Back-up light switch
C07/GRY	Injector #4	C31/-	Battery fuse box
C08/BLK	CMP sensor	C32/-	Fuse box No.1
C09/BLK	ECT sensor	C33/N	P/S pump pressure switch
C10/GRY	EGR stepper motor	C34/N	Main harness (To E54)
C11/BLK	Throttle position sensor	C35/BLU	Main harness (To E55)
C12/BLK	MAP sensor	C36/GRY	A/F sensor
C13/BLK	MAF sensor	C37/GRY	ECM
C14/BLK	EVAP canister purge valve	C40/GRY	IG coil #1 & #4
C15/N	Heated oxygen sensor	C41/GRY	IG coil #2 & #3
C17/BLK	A/C compressor	C47/BLK	Noise filter
C18/N	Oil pressure switch	C55/-	Weld splice
C19/BLU	VVT solenoid	C56/-	Weld splice
C20/N	CKP sensor		

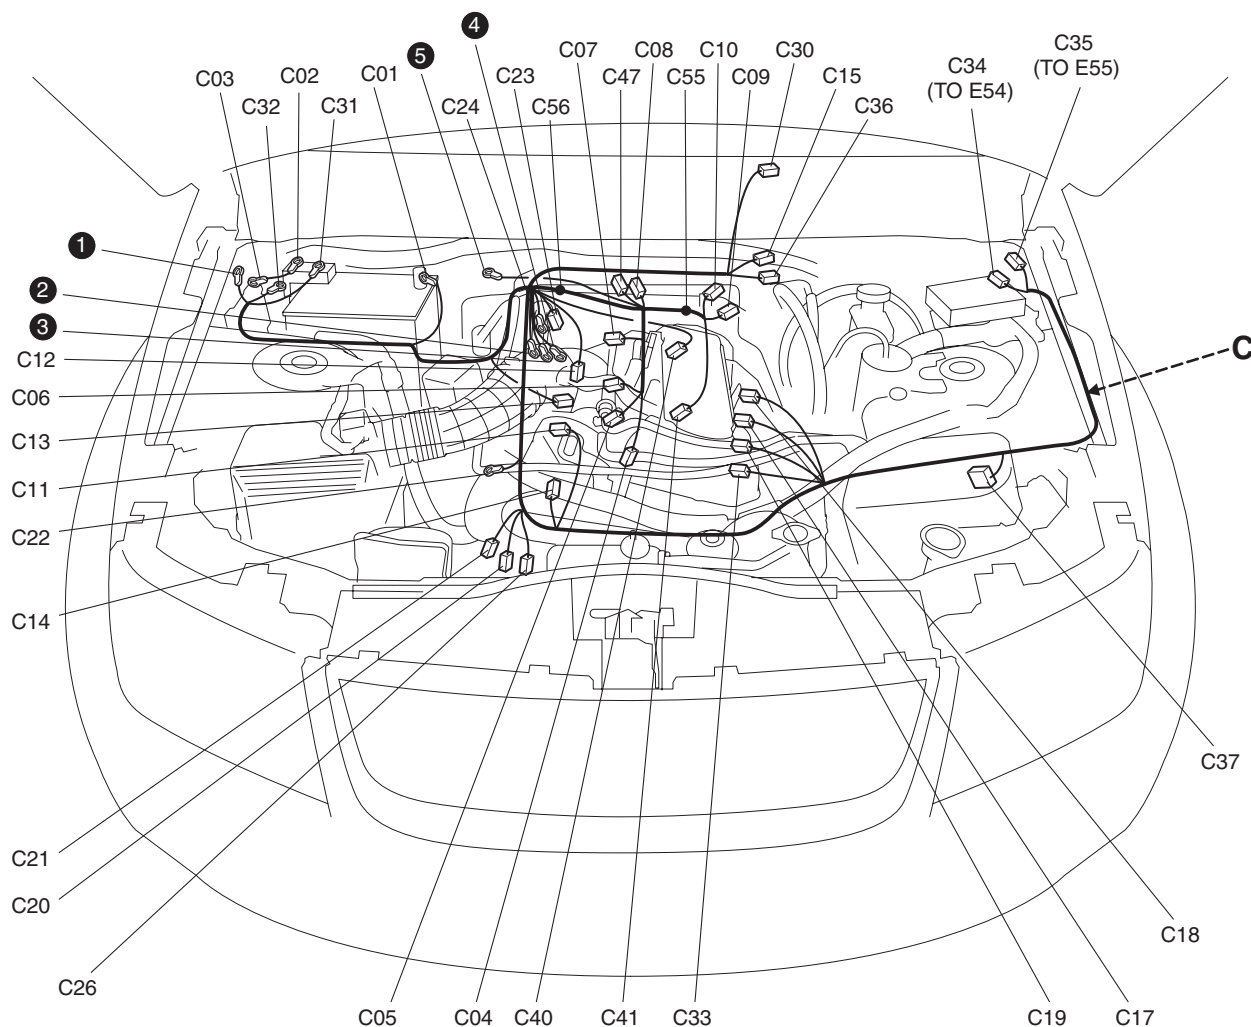
C: Engine harness (M16A LHD)

I5JB0A910902-05

C: Engine harness

No./Color	Connective position	No./Color	Connective position
C01/-	Battery (-)	C21/GRN	Generator #1
C02/-	Battery fuse box	C22/-	Generator #2
C03/-	Fuse box No.1	C23/BLK	Starting motor #1
C04/GRY	Injector #1	C24/-	Starting motor #2
C05/GRY	Injector #2	C26/GRY	Knock sensor
C06/GRY	Injector #3	C30/BLK (M/T)	Back-up light switch
C07/GRY	Injector #4	C31/-	Battery fuse box
C08/BLK	CMP sensor	C32/-	Fuse box No.1
C09/BLK	ECT sensor	C33/N	P/S pump pressure switch
C10/GRY	EGR stepper motor	C34/N	Main harness (To E54)
C11/BLK	Throttle position sensor	C35/BLU	Main harness (To E55)
C12/BLK	MAP sensor	C36/GRY	A/F sensor
C13/BLK	MAF sensor	C37/GRY	ECM
C14/BLK	EVAP canister purge valve	C40/GRY	IG coil #1 & #4
C15/N	Heated oxygen sensor	C41/GRY	IG coil #2 & #3
C17/BLK	A/C compressor	C47/BLK	Noise filter
C18/N	Oil pressure switch	C55/-	Weld splice
C19/BLU	VVT solenoid	C56/-	Weld splice
C20/N	CKP sensor		

 
C: Engine harness (J20A RHD)



C: Engine harness

No./Color	Connective position	No./Color	Connective position
C01/-	Battery (-)	C30/BLK (M/T)	Back-up light switch
C02/-	Battery fuse box	C31/-	Battery fuse box
C03/-	Fuse box No.1	C32/-	Fuse box No.1
C04/GRY	Injector #1	C33/N	P/S pump pressure switch
C05/GRY	Injector #2	C34/N	Main harness (To E54)
C06/GRY	Injector #3	C35/BLU	Main harness (To E55)
C07/GRY	Injector #4	C36/GRY	A/F sensor
C08/GRY	CMP sensor	C37/GRY	ECM
C09/BLK	ECT sensor	C38/BLK	Current sensor
C10/GRY	EGR stepper motor	C39/GRY	Fuse box No.1
C11/BLK	Throttle position sensor	C40/GRY	IG coil #1
C12/BLK	MAP sensor	C41/GRY	IG coil #2
C13/BLK	MAF sensor	C42/GRY	IG coil #3
C14/BLK	EVAP canister purge valve	C43/GRY	IG coil #4
C15/N	Heated oxygen sensor	C46/BRN	Intake control valve
C18/N	Oil pressure switch	C47/N	Noise filter
C20/GRY	CKP sensor	C48/N	Main harness (To E87)
C21/GRN	Generator #1	C49/N	Main harness (To E88)
C22/-	Generator #2	C50/N	Main harness (To E89)
C23/BLK	Starting motor #1	C51/BLU	J/C
C24/-	Starting motor #2	C52/BLK	T/F 4L switch
C25/BLU (A/T)	Output shaft speed sensor	C53/N	T/F position switch
C26/GRY	Knock sensor	C54/GRY	T/F actuator
C27/BLU (A/T)	Input shaft speed sensor	C55/-	Weld splice
C28/GRY (A/T)	Transmission range sensor	C56/-	Weld splice
C29/GRY (A/T)	Shift solenoid		


C: Engine harness (J20A LHD)

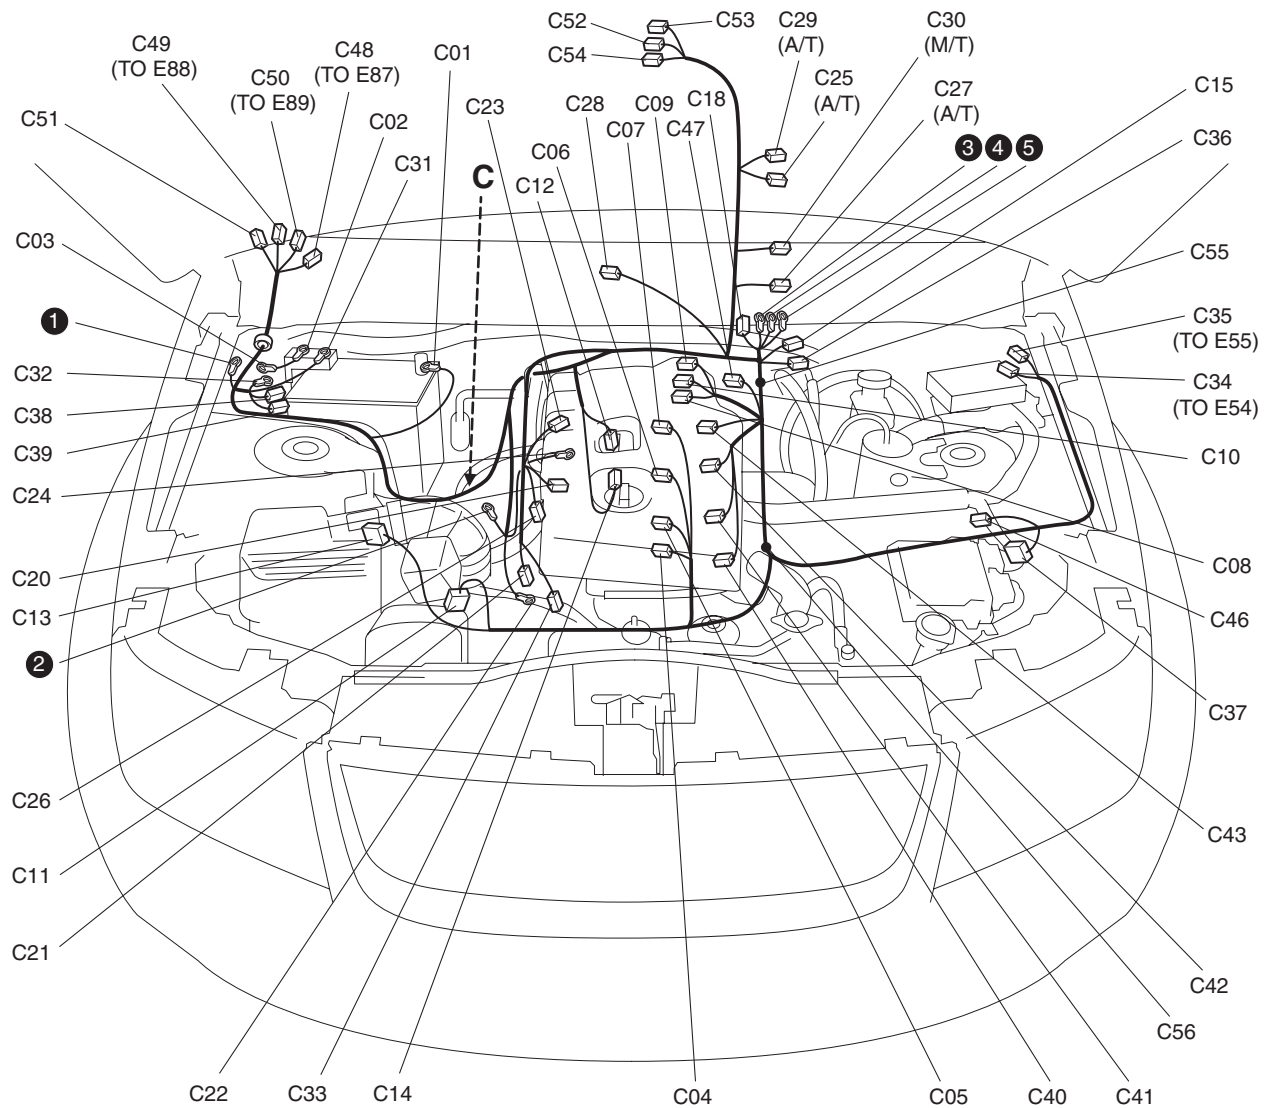

C: Engine harness

No./Color	Connective position	No./Color	Connective position
C01/-	Battery (-)	C30/BLK (M/T)	Back-up light switch
C02/-	Battery fuse box	C31/-	Battery fuse box
C03/-	Fuse box No.1	C32/-	Fuse box No.1
C04/GRY	Injector #1	C33/N	P/S pump pressure switch
C05/GRY	Injector #2	C34/N	Main harness (To E54)
C06/GRY	Injector #3	C35/BLU	Main harness (To E55)
C07/GRY	Injector #4	C36/GRY	A/F sensor
C08/GRY	CMP sensor	C37/GRY	ECM
C09/BLK	ECT sensor	C38/BLK	Current sensor
C10/GRY	EGR stepper motor	C39/GRY	Fuse box No.1
C11/BLK	Throttle position sensor	C40/GRY	IG coil #1
C12/BLK	MAP sensor	C41/GRY	IG coil #2
C13/BLK	MAF sensor	C42/GRY	IG coil #3
C14/BLK	EVAP canister purge valve	C43/GRY	IG coil #4
C15/N	Heated oxygen sensor	C46/BRN	Intake control valve
C18/N	Oil pressure switch	C47/BLK	Noise filter
C20/GRY	CKP sensor	C48/N	Main harness (To E87)
C21/GRN	Generator #1	C49/N	Main harness (To E88)
C22/-	Generator #2	C50/N	Main harness (To E89)
C23/BLK	Starting motor #1	C51/BLU	J/C
C24/-	Starting motor #2	C52/BLK	T/F 4L switch
C25/BLU (A/T)	Output shaft speed sensor	C53/N	T/F position switch
C26/GRY	Knock sensor	C54/GRY	T/F actuator
C27/BLU (A/T)	Input shaft speed sensor	C55/-	Weld splice
C28/GRY (A/T)	Transmission range sensor	C56/-	Weld splice
C29/GRY (A/T)	Shift solenoid		

C: Engine harness / D: Injector harness (H27A RHD)

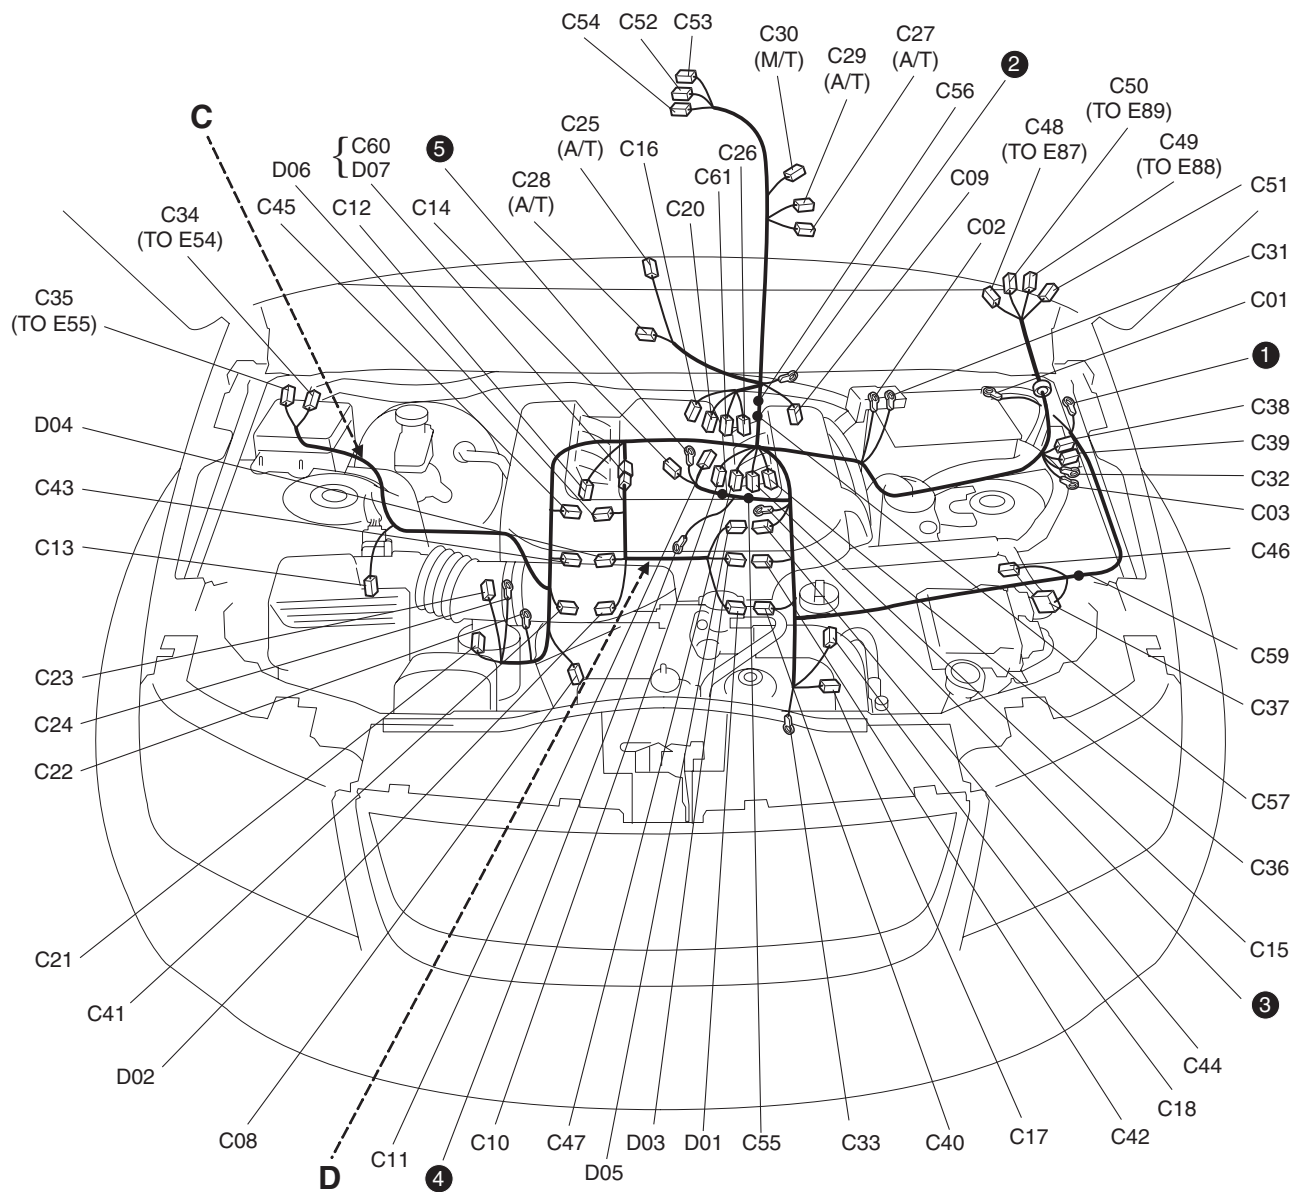


C: Engine harness

No./Color	Connective position	No./Color	Connective position
C01/-	Battery (-)	C34/N	Main harness (To E54)
C02/-	Battery fuse box	C35/BLU	Main harness (To E55)
C03/-	Fuse box No.1	C36/GRY	A/F sensor #1
C08/GRY	CMP sensor	C37/N	ECM
C09/BLK	ECT sensor	C38/BLK (IF EQPD)	Current sensor
C10/GRY	EGR stepper motor	C39/GRY	Fuse box No.1
C11/BLK	Throttle position sensor	C40/GRY	IG coil #1
C12/BLK	MAP sensor	C41/GRY	IG coil #2
C13/BLK	MAF sensor	C42/GRY	IG coil #3
C14/BLU	EVAP canister purge valve	C43/GRY	IG coil #4
C15/GRN	Heated oxygen sensor #1	C44/GRY	IG coil #5
C16/GRN	Heated oxygen sensor #2	C45/GRY	IG coil #6
C17/BLK	A/C compressor	C46/BRN	Intake control valve
C18/N	Oil pressure switch	C47/BLK	Noise filter
C20/GRY	CKP sensor	C48/N	Main harness (To E87)
C21/GRN	Generator #1	C49/N	Main harness (To E88)
C22/-	Generator #2	C50/N	Main harness (To E89)
C23/BLK	Starting motor #1	C51/N	J/C
C24/-	Starting motor #2	C52/BLK	T/F 4L switch
C25/BLU (A/T)	Output shaft speed sensor	C53/N	T/F position switch
C26/GRY	Knock sensor	C54/GRY	T/F actuator
C27/BLU (A/T)	Input shaft speed sensor	C55/-	Weld splice
C28/GRY (A/T)	Transmission range sensor	C56/-	Weld splice
C29/GRY (A/T)	Shift solenoid	C57/-	Weld splice
C30/BLK (M/T)	Back-up light switch	C58/-	Weld splice
C31/-	Battery fuse box	C59/-	Weld splice
C32/-	Fuse box No.1	C60/GRY	Injector harness (To D07)
C33/N	P/S pump pressure switch	C61/GRY	A/F sensor #2

D: Injector harness

No./Color	Connective position	No./Color	Connective position
D01/GRY	Injector #1	D05/GRY	Injector #5
D02/GRY	Injector #2	D06/GRY	Injector #6
D03/GRY	Injector #3	D07/GRY	Engine harness (To C60)
D04/GRY	Injector #4		

C: Engine harness / D: Injector harness (H27A LHD)

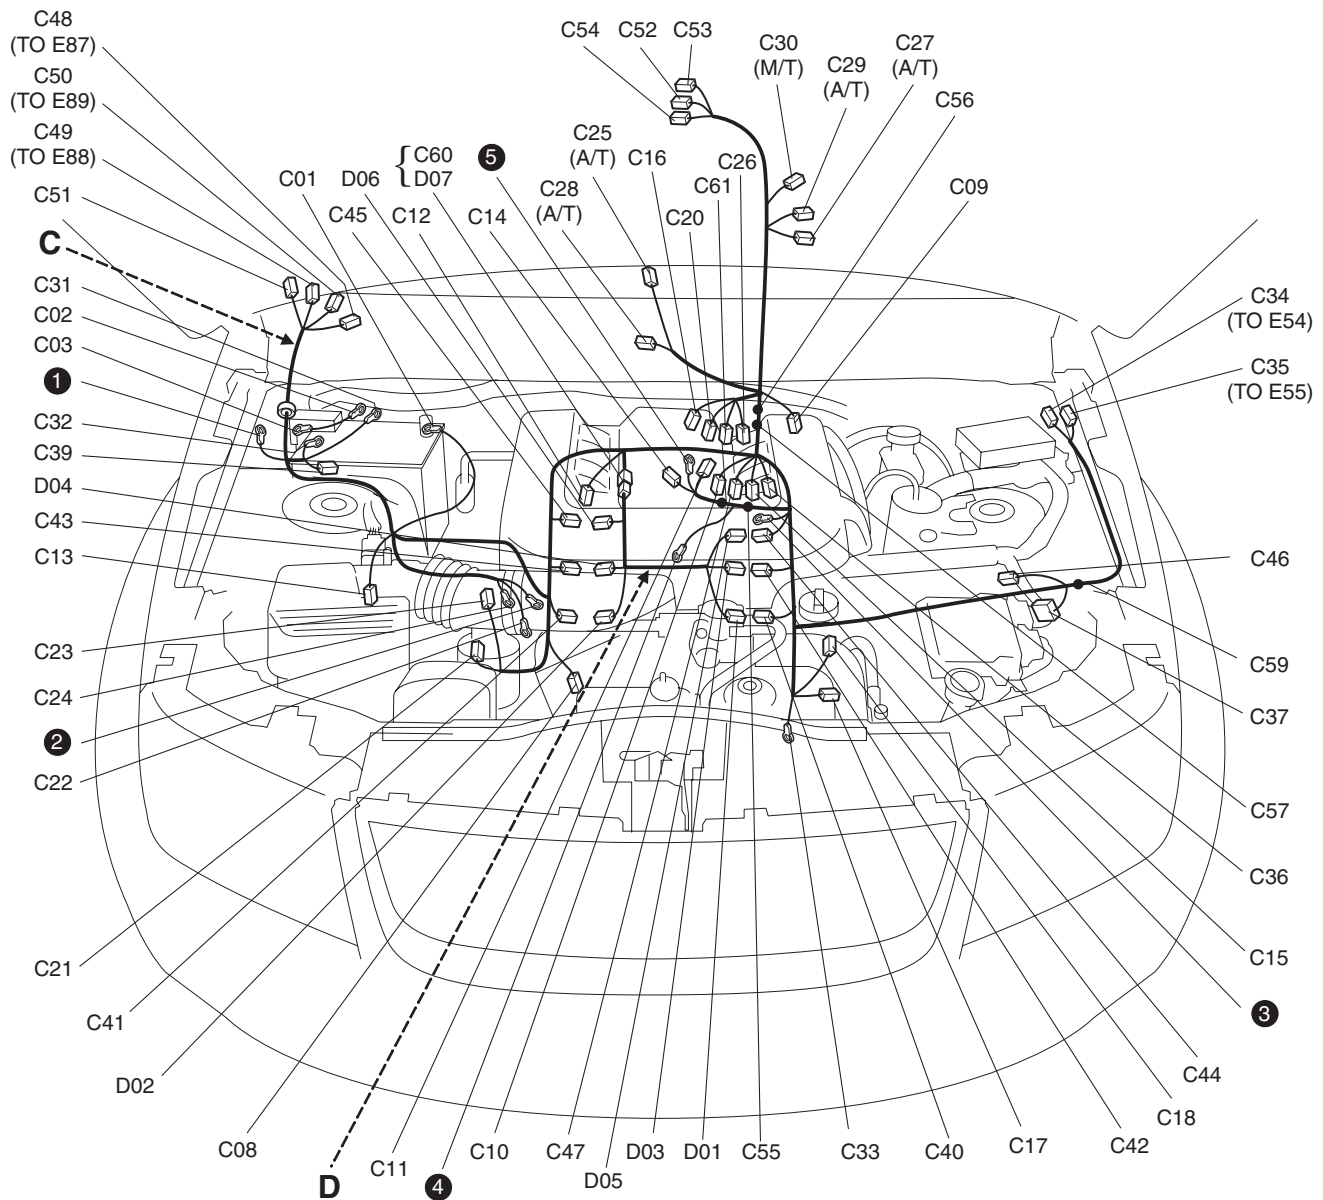


C: Engine harness

No./Color	Connective position	No./Color	Connective position
C01/-	Battery (-)	C34/N	Main harness (To E54)
C02/-	Battery fuse box	C35/BLU	Main harness (To E55)
C03/-	Fuse box No.1	C36/GRY	A/F sensor #1
C08/GRY	CMP sensor	C37/N	ECM
C09/BLK	ECT sensor	C39/GRY	Fuse box No.1
C10/GRY	EGR stepper motor	C40/GRY	IG coil #1
C11/BLK	Throttle position sensor	C41/GRY	IG coil #2
C12/BLK	MAP sensor	C42/GRY	IG coil #3
C13/BLK	MAF sensor	C43/GRY	IG coil #4
C14/BLU	EVAP canister purge valve	C44/GRY	IG coil #5
C15/GRN	Heated oxygen sensor #1	C45/GRY	IG coil #6
C16/GRN	Heated oxygen sensor #2	C46/BRN	Intake control valve
C17/BLK	A/C compressor	C47/BLK	Noise filter
C18/N	Oil pressure switch	C48/N	Main harness (To E87)
C20/GRY	CKP sensor	C49/N	Main harness (To E88)
C21/GRN	Generator #1	C50/N	Main harness (To E89)
C22/-	Generator #2	C51/N	J/C
C23/BLK	Starting motor #1	C52/BLK	T/F 4L switch
C24/-	Starting motor #2	C53/N	T/F position switch
C25/BLU (A/T)	Output shaft speed sensor	C54/GRY	T/F actuator
C26/GRY	Knock sensor	C55/-	Weld splice
C27/BLU (A/T)	Input shaft speed sensor	C56/-	Weld splice
C28/GRY (A/T)	Transmission range sensor	C57/-	Weld splice
C29/GRY (A/T)	Shift solenoid	C58/-	Weld splice
C30/BLK (M/T)	Back-up light switch	C59/-	Weld splice
C31/-	Battery fuse box	C60/GRY	Injector harness (To D07)
C32/-	Fuse box No.1	C61/GRY	A/F sensor #2
C33/N	P/S pump pressure switch		

D: Injector harness

No./Color	Connective position	No./Color	Connective position
D01/GRY	Injector #1	D05/GRY	Injector #5
D02/GRY	Injector #2	D06/GRY	Injector #6
D03/GRY	Injector #3	D07/GRY	Engine harness (To C60)
D04/GRY	Injector #4		

C: Engine harness / D: Injector harness (DSL RHD)

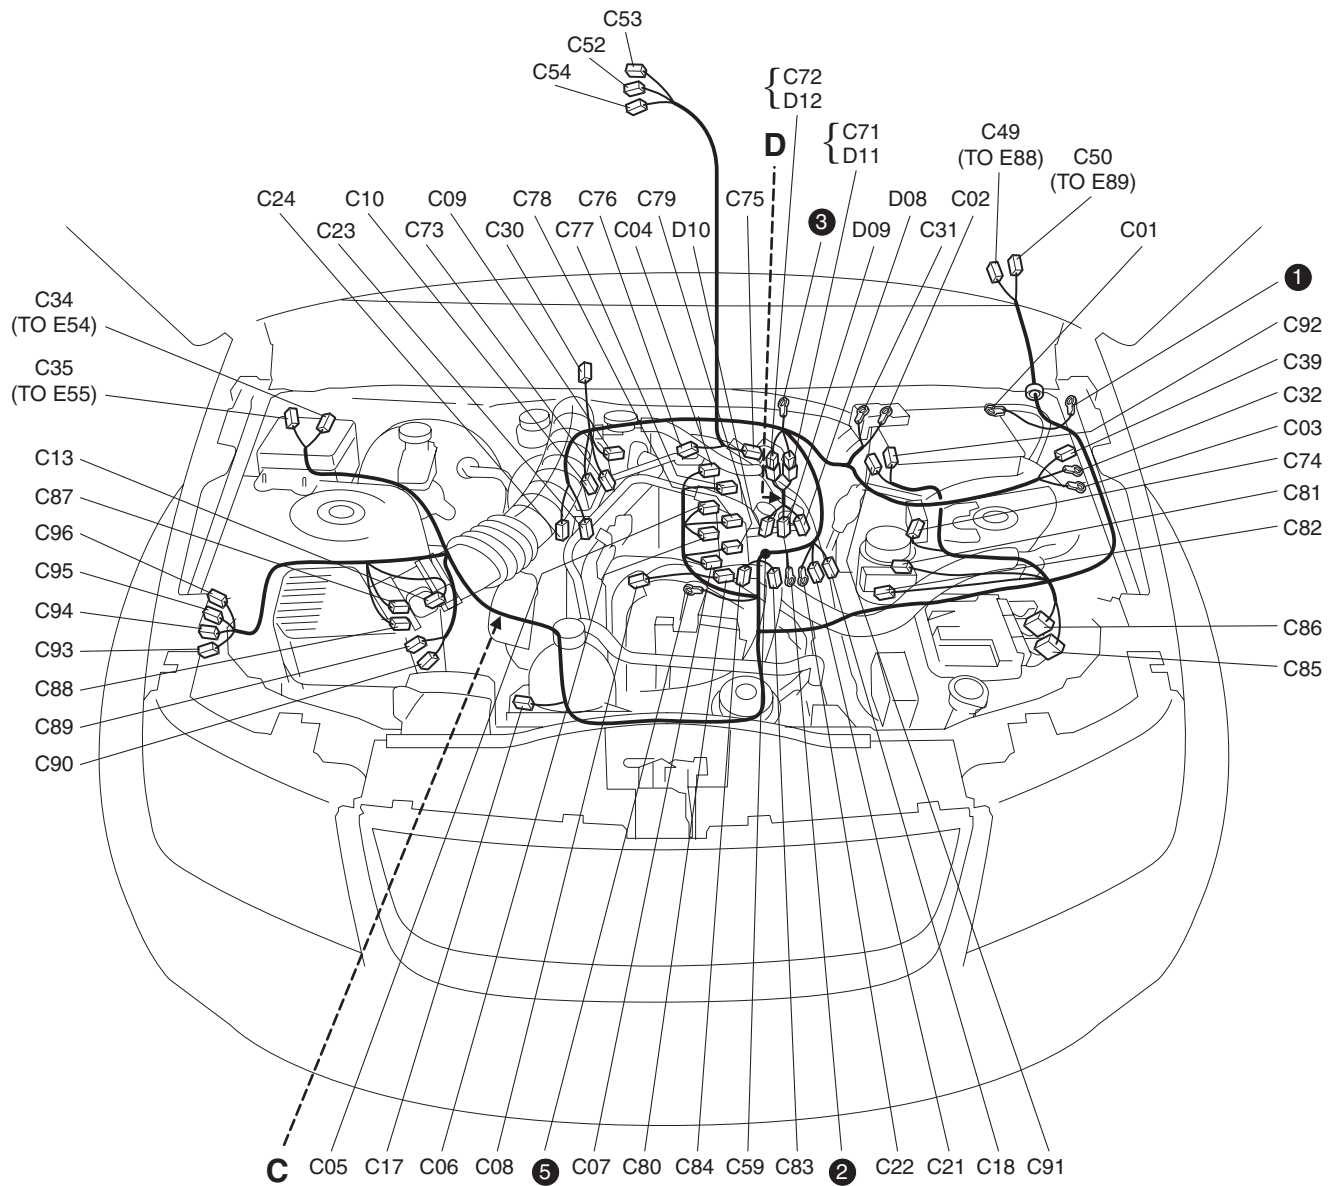


C: Engine harness

No./Color	Connective position	No./Color	Connective position
C01/-	Battery (-)	C54/GRY	T/F actuator
C02/-	Battery fuse box	C59/-	Weld splice
C03/-	Fuse box No.1	C70/BLK	Turbo cooling pump
C04/BLK	Injector #1	C71/BLK	Injector harness (To D11)
C05/BLK	Injector #2	C72/BLK	Injector harness (To D12)
C06/BLK	Injector #3	C73/YEL or BRN	Up stream turbine temperature sensor
C07/BLK	Injector #4	C74/BLK	Glow plug relay
C08/BLK	CMP sensor	C75/BLK	Inlet throttle valve
C09/BLK	ECT sensor	C76/BLK	Boost pressure sensor
C10/GRY	EGR stepper motor	C77/BLK	Glow plug #1
C13/BLK	MAF sensor	C78/BLK	Glow plug #2
C17/BLK	A/C compressor	C79/BLK	Glow plug #3
C18/N or BLK	Oil pressure switch	C80/BLK	Glow plug #4
C20/BLK	CKP sensor	C81/BLK	Fuel heater
C21/GRY	Generator #1	C82/BLK	Water in fuel sensor
C22/-	Generator #2	C83/BLK	Flow governor
C23/-	Starting motor #1	C84/BLK	Rail pressure sensor
C24/-	Starting motor #2	C85/GRY	ECM
C30/N	Back-up light switch	C86/BRN	ECM
C31/-	Battery fuse box	C87/GRY	Up stream temperature sensor
C32/-	Fuse box No.1	C88/GRY	Down stream temperature sensor
C34/N	Main harness (To E54)	C89/BLK	Differential temperature sensor
C35/N	Main harness (To E55)	C90/BLK	Turbo cooling control valve
C39/GRY	Fuse box No.1	C91/GRY	Battery fuse box
C49/N	Main harness (To E88)	C92/BRN	Battery fuse box
C50/N	Main harness (To E89)	C93/N	Thermo plug relay #1
C52/BLK	T/F 4L switch	C94/N	Thermo plug relay #2
C53/N	T/F position switch	C95/N	Thermo plug relay #3

D: Injector harness

No./Color	Connective position	No./Color	Connective position
D08/-	Thermo plug #1	D11/BLK	Engine harness (To C71)
D09/-	Thermo plug #2	D12/BLK	Engine harness (To C72)
D10/-	Thermo plug #3		

C: Engine harness / D: Injector harness (DSL LHD)

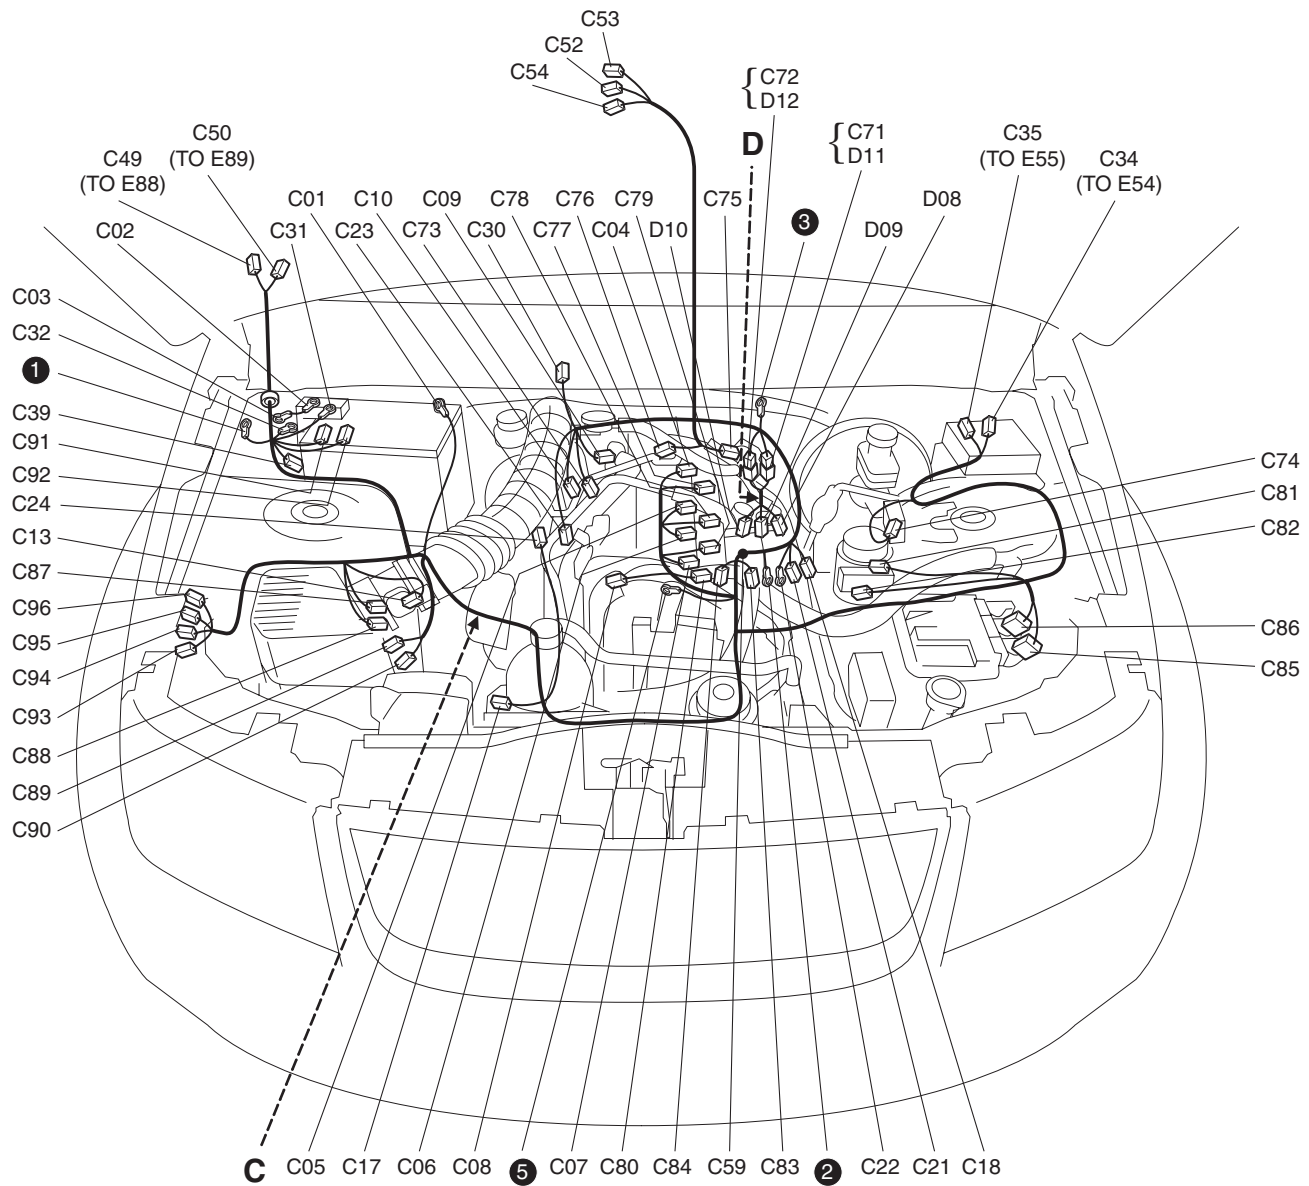


C: Engine harness

No./Color	Connective position	No./Color	Connective position
C01/-	Battery (-)	C54/GRY	T/F actuator
C02/-	Battery fuse box	C59/-	Weld splice
C03/-	Fuse box No.1	C70/BLK	Turbo cooling pump
C04/BLK	Injector #1	C71/BLK	Injector harness (To D11)
C05/BLK	Injector #2	C72/BLK	Injector harness (To D12)
C06/BLK	Injector #3	C73/YEL or BRN	Up stream turbine temperature sensor
C07/BLK	Injector #4	C74/BLK	Glow plug relay
C08/BLK	CMP sensor	C75/BLK	Inlet throttle valve
C09/BLK	ECT sensor	C76/BLK	Boost pressure sensor
C10/GRY	EGR stepper motor	C77/BLK	Glow plug #1
C13/BLK	MAF sensor	C78/BLK	Glow plug #2
C17/BLK	A/C compressor	C79/BLK	Glow plug #3
C18/N or BLK	Oil pressure switch	C80/BLK	Glow plug #4
C20/BLK	CKP sensor	C81/BLK	Fuel heater
C21/GRY	Generator #1	C82/BLK	Water in fuel sensor
C22/-	Generator #2	C83/BLK	Flow governor
C23/-	Starting motor #1	C84/BLK	Rail pressure sensor
C24/-	Starting motor #2	C85/GRY	ECM
C30/N	Back-up light switch	C86/BRN	ECM
C31/-	Battery fuse box	C87/GRY	Up stream temperature sensor
C32/-	Fuse box No.1	C88/GRY	Down stream temperature sensor
C34/N	Main harness (To E54)	C89/BLK	Differential temperature sensor
C35/N	Main harness (To E55)	C90/BLK	Turbo cooling control valve
C39/GRY	Fuse box No.1	C91/GRY	Battery fuse box
C49/N	Main harness (To E88)	C92/BRN	Battery fuse box
C50/N	Main harness (To E89)	C93/N	Thermo plug relay #1
C52/BLK	T/F 4L switch	C94/N	Thermo plug relay #2
C53/N	T/F position switch	C95/N	Thermo plug relay #3

D: Injector harness

No./Color	Connective position	No./Color	Connective position
D08/-	Thermo plug #1	D11/BLK	Engine harness (To C71)
D09/-	Thermo plug #2	D12/BLK	Engine harness (To C72)
D10/-	Thermo plug #3		

B: A/C compressor wire / E: Main harness, Front height sensor wire (Petrol RHD)

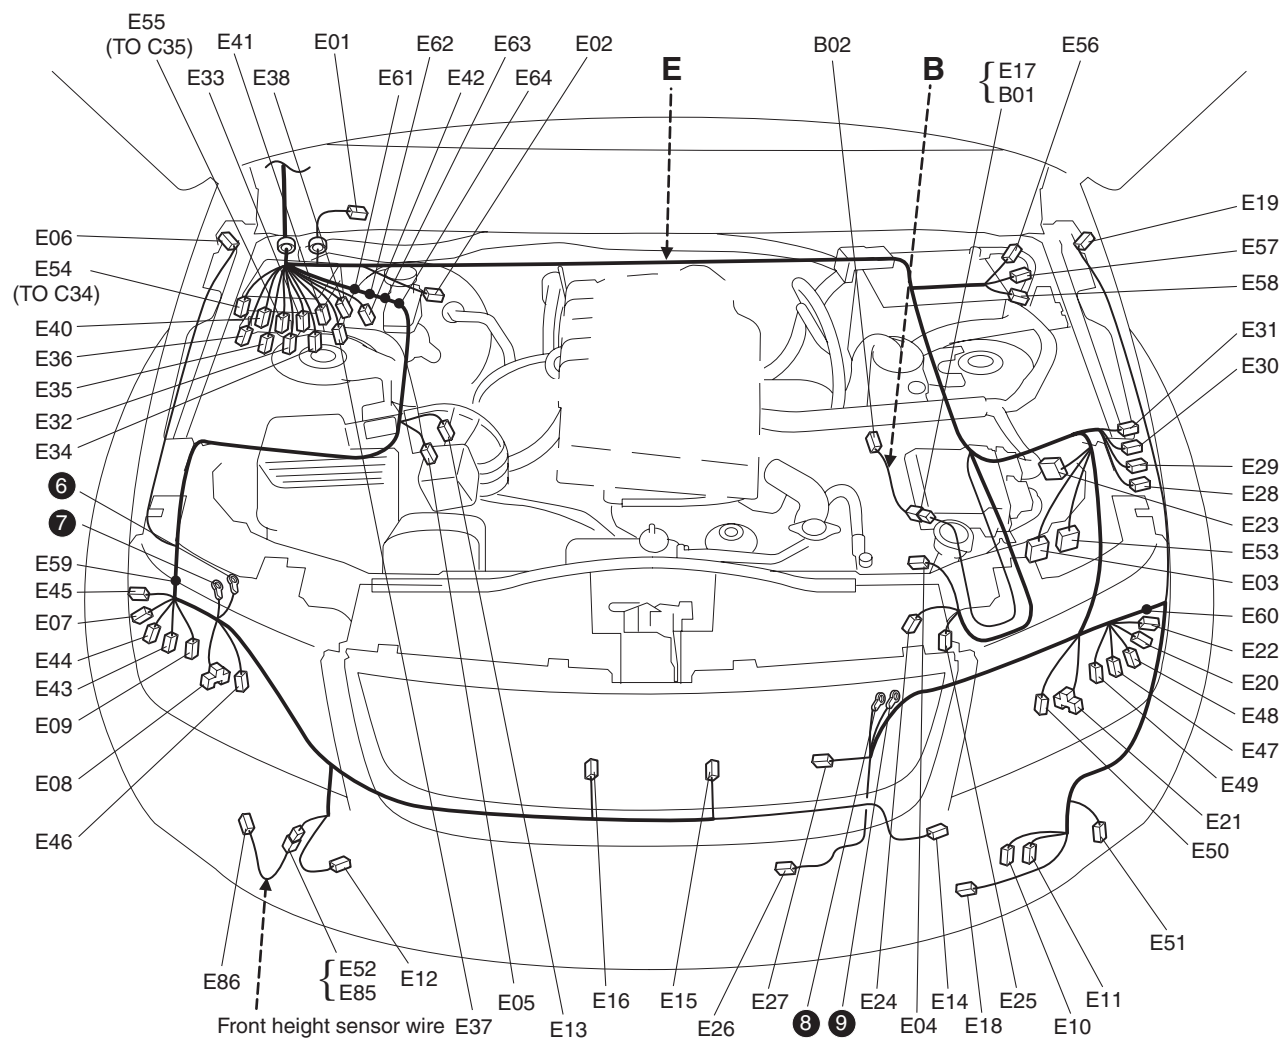

I5JB0B910906-04

B: A/C compressor wire

No./Color	Connective position	No./Color	Connective position
B01/BLK (Early J20A only)	Main Harness (To E17)	B02/BLK (Early J20A only)	A/C compressor


E: Main harness

No./Color	Connective position	No./Color	Connective position
E01/GRY	Windshield wiper motor	E33/BLK	Fuse box No.2 (Heater motor relay & Main relay & Fuel pump relay)
E02/GRY	Brake fluid level switch	E34/BLK (M16A)	Fuse box No.2 (A/C compressor relay & Heated oxygen relay)
E03/BLK	ABS control module	E35/N	Power integration No.1 (Mirror heater relay & Fog light relay)
E04/BLK	A/C pressure sensor	E36/N	Power integration No.1 (Horn relay & Rear defogger relay)
E05/N	Wheel speed sensor (FR)	E37/N (J20A, H27A)	Power integration No.2 (A/C compressor relay & Heated oxygen relay)
E06/N	Side turn signal light (R)	E38/N (J20A, H27A)	Power integration No.2 (A/T relay)
E07/N	Front position light (R)	E40/GRY	Power integration No.1
E08/BLK (3 dr)	Headlight (R)	E41/N (J20A, H27A)	Power integration No.2
E09/GRY	Front turn signal light (R)	E42/N	Fuse box No.2
E10/N	Windshield washer motor	E43/GRY (5 dr)	HID headlight (R)
E11/N	Rear washer motor	E44/BLK (5 dr)	Headlight LO (R)
E12/BLK	Front fog light (R)	E45/GRY	Headlight beam leveling actuator (R)
E13/YEL	Forward sensor (Driver side)	E46/BLK (5 dr)	Headlight HI (R)
E14/BLK	Ambient temperature sensor	E47/GRY (5 dr)	HID headlight (L)
E15/BLK	Horn (HI)	E48/BLK (5 dr)	Headlight LO (L)
E16/BLK	Horn (LO)	E49/GRY	Headlight beam leveling actuator (L)
E17/BLK	A/C compressor wire (To B01)	E50/BLK (5 dr)	Headlight HI (L)
E18/BLK	Front fog light (L)	E51/N	HLC motor
E19/N	Side turn signal light (L)	E52/BLK	Front height sensor wire (To E85)
E20/GRY	Front turn signal light (L)	E53/BLK (IF EQPD)	ESP® control module
E21/BLK (3 dr)	Headlight (L)	E54/N	Engine harness (To C34)
E22/N	Front position light (L)	E55/BLU	Engine harness (To C35)
E23/GRY	ECM	E56/BLK	Fuse box No.1
E24/YEL	Forward sensor (Passenger side)	E57/BLK	Fuse box No.1
E25/GRY	Wheel speed sensor (FL)	E58/GRY	Fuse box No.1
E26/BLK	Radiator fan motor #1	E59/-	Weld splice
E27/GRY	Radiator fan motor #2	E60/-	Weld splice
E28/BLK	Relay box (Throttle motor relay)	E61/-	Weld splice
E29/BLK	Relay box (Radiator fan relay #1)	E62/-	Weld splice
E30/BLK	Relay box (Radiator fan relay #2)	E63/-	Weld splice
E31/BLK	Relay box (Radiator fan relay #3)	E64/-	Weld splice
E32/BLK	Fuse box No.2 (Starting motor relay & Headlight HI relay & Headlight LO relay)		

E: Front height sensor wire

No./Color	Connective position	No./Color	Connective position
E85/BLK	Main Harness (To E52)	E86/BLK	Front height sensor

E: Main harness, Front height sensor wire (DSL RHD)

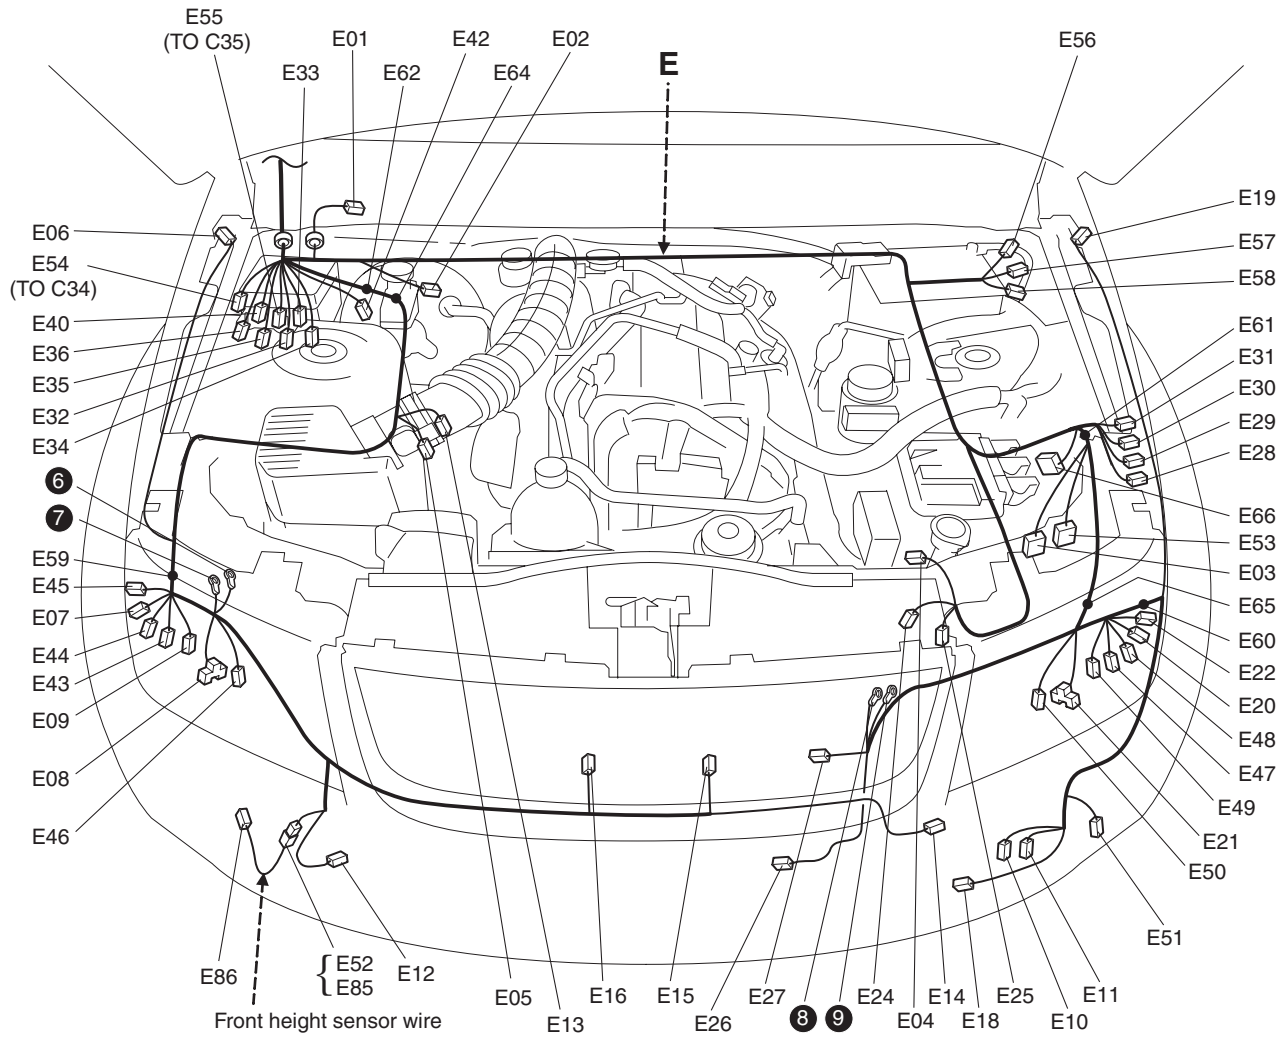


E: Main harness

No./Color	Connective position	No./Color	Connective position
E01/GRY	Windshield wiper motor	E33/BLK	Fuse box No.2 (Heater motor relay & Main relay & A/C compressor relay)
E02/GRY	Brake fluid level switch	E34/N	Fuse box No.2 (Fuel heater relay & Turbo cooling pump relay)
E03/BLK	ABS control module	E35/N	Power integration No.1 (Mirror heater relay & Fog light relay)
E04/BLK	A/C pressure sensor	E36/N	Power integration No.1 (Horn relay & Rear defogger relay)
E05/N	Wheel speed sensor (FR)	E40/GRY	Power integration No.1
E06/N	Side turn signal light (R)	E42/N	Fuse box No.2
E07/N	Front position light (R)	E43/GRY (5 dr)	HID headlight (R)
E08/BLK (3 dr)	Headlight (R)	E44/BLK (5 dr)	Headlight LO (R)
E09/GRY	Front turn signal light (R)	E45/GRY	Headlight beam leveling actuator (R)
E10/N	Windshield washer motor	E46/BLK (5 dr)	Headlight HI (R)
E11/N	Rear washer motor	E47/GRY (5 dr)	HID headlight (L)
E12/BLK	Front fog light (R)	E48/BLK (5 dr)	Headlight LO (L)
E13/YEL	Forward sensor (Driver side)	E49/GRY	Headlight beam leveling actuator (L)
E14/BLK	Ambient temperature sensor	E50/BLK (5 dr)	Headlight HI (L)
E15/BLK	Horn (HI)	E51/N	HLC motor
E16/BLK	Horn (LO)	E52/BLK	Front height sensor wire (To E85)
E18/BLK	Front fog light (L)	E53/BLK (IF EQPD)	ESP® control module
E19/N	Side turn signal light (L)	E54/N	Engine harness (To C34)
E20/GRY	Front turn signal light (L)	E55/N	Engine harness (To C35)
E21/BLK (3 dr)	Headlight (L)	E56/BLK	Fuse box No.1
E22/N	Front position light (L)	E57/BLK	Fuse box No.1
E24/YEL	Forward sensor (Passenger side)	E58/GRY	Fuse box No.1
E25/GRY	Wheel speed sensor (FL)	E59/-	Weld splice
E26/BLK	Radiator fan motor #1	E60/-	Weld splice
E27/GRY	Radiator fan motor #2	E61/-	Weld splice
E28/BLK	Relay box (Fuel pump relay)	E62/-	Weld splice
E29/BLK	Relay box (Radiator fan relay #1)	E64/-	Weld splice
E30/BLK	Relay box (Radiator fan relay #2)	E65/-	Weld splice
E31/BLK	Relay box (Radiator fan relay #3)	E66/BLK	ECM
E32/BLK	Fuse box No.2 (Starting motor relay & Headlight HI relay & Headlight LO relay)		

E: Front height sensor wire

No./Color	Connective position	No./Color	Connective position
E85/BLK	Main Harness (To E52)	E86/BLK	Front height sensor

B: A/C compressor wire / E: Main harness, Front height sensor wire (Petrol LHD)

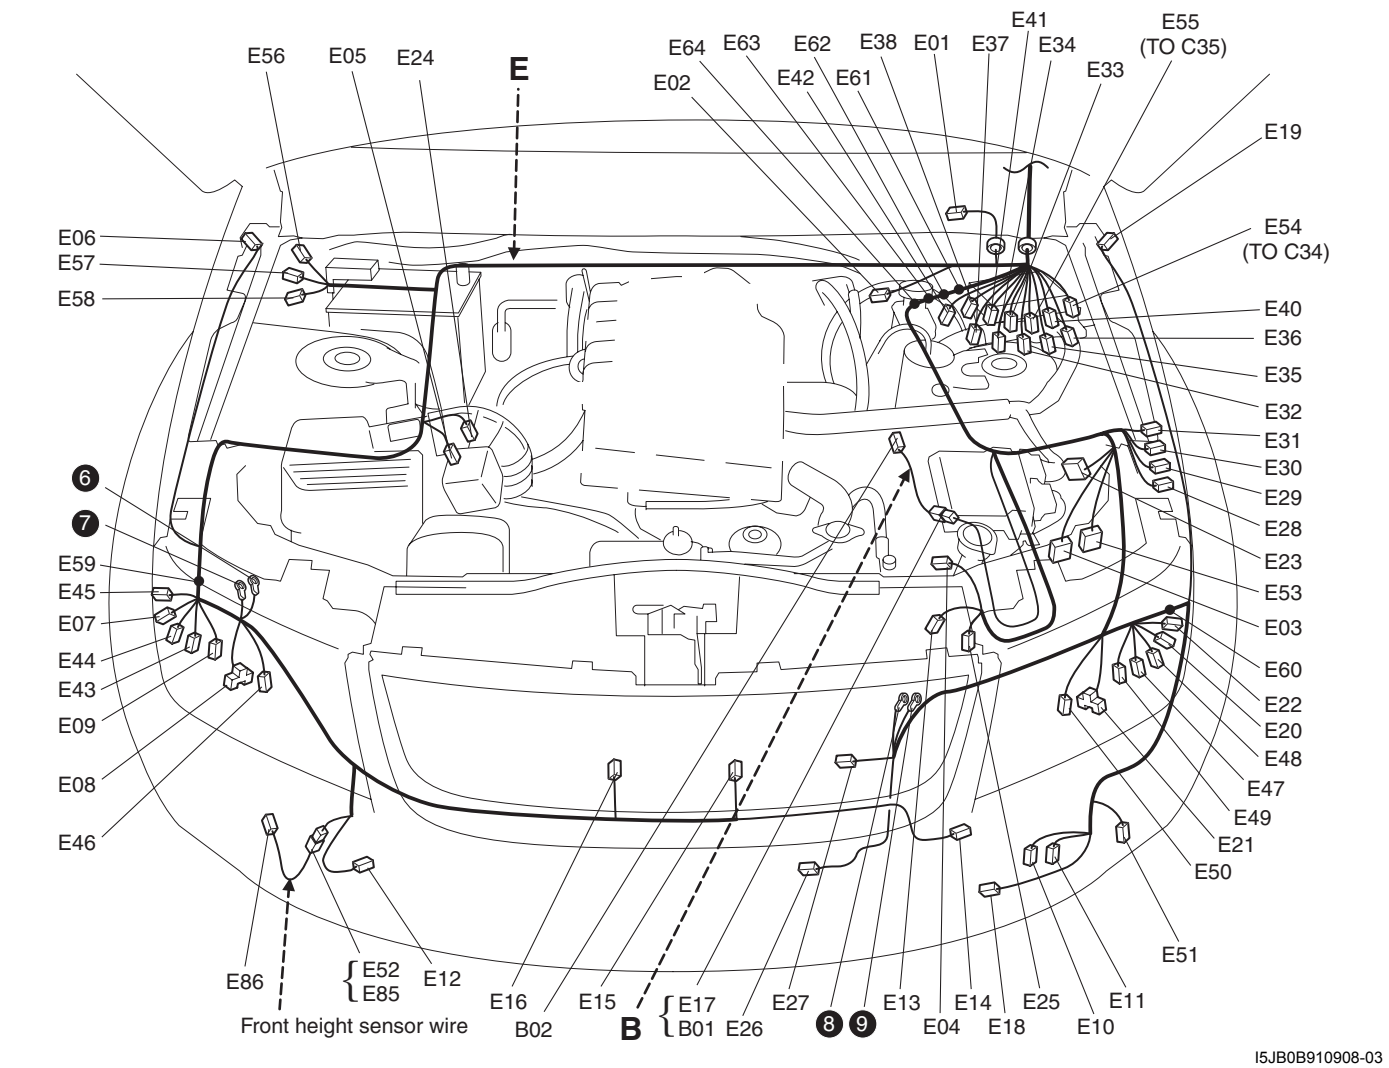

15JB0B910908-03

B: A/C compressor wire

No./Color	Connective position	No./Color	Connective position
B01/BLK (Early J20A only)	Main Harness (To E17)	B02/BLK (Early J20A only)	A/C compressor


E: Main harness

No./Color	Connective position	No./Color	Connective position
E01/GRY	Windshield wiper motor	E33/BLK	Fuse box No.2 (Heater motor relay & Main relay & Fuel pump relay)
E02/GRY	Brake fluid level switch	E34/BLK (M16A)	Fuse box No.2 (A/C compressor relay & Heated oxygen relay)
E03/BLK	ABS control module	E35/N	Power integration No.1 (Mirror heater relay & Fog light relay)
E04/BLK	A/C pressure sensor	E36/N	Power integration No.1 (Horn relay & Rear defogger relay)
E05/N	Wheel speed sensor (FR)	E37/N (J20A)	Power integration No.2 (A/C compressor relay & Heated oxygen relay)
E06/N	Side turn signal light (R)	E38/N (J20A)	Power integration No.2 (A/T relay)
E07/N	Front position light (R)	E40/GRY	Power integration No.1
E08/BLK (3 dr)	Headlight (R)	E41/N (J20A)	Power integration No.2
E09/GRY	Front turn signal light (R)	E42/N	Fuse box No.2
E10/N	Windshield washer motor	E43/GRY (5 dr)	HID headlight (R)
E11/N	Rear washer motor	E44/BLK (5 dr)	Headlight LO (R)
E12/BLK	Front fog light (R)	E45/GRY	Headlight beam leveling actuator (R)
E13/YEL	Forward sensor (Driver side)	E46/BLK (5 dr)	Headlight HI (R)
E14/BLK	Ambient temperature sensor	E47/GRY (5 dr)	HID headlight (L)
E15/BLK	Horn (HI)	E48/BLK (5 dr)	Headlight LO (L)
E16/BLK	Horn (LO)	E49/GRY	Headlight beam leveling actuator (L)
E17/BLK	A/C compressor wire (To B01)	E50/BLK (5 dr)	Headlight HI (L)
E18/BLK	Front fog light (L)	E51/N	HLC motor
E19/N	Side turn signal light (L)	E52/BLK	Front height sensor wire (To E85)
E20/GRY	Front turn signal light (L)	E53/BLK (IF EQPD)	ESP® control module
E21/BLK (3 dr)	Headlight (L)	E54/BLU	Engine harness (To C34)
E22/N	Front position light (L)	E55/N	Engine harness (To C35)
E23/GRY	ECM	E56/BLK	Fuse box No.1
E24/YEL	Forward sensor (Passenger side)	E57/BLK	Fuse box No.1
E25/GRY	Wheel speed sensor (FL)	E58/GRY	Fuse box No.1
E26/BLK	Radiator fan motor #1	E59/-	Weld splice
E27/GRY	Radiator fan motor #2	E60/-	Weld splice
E28/BLK	Relay box (Throttle motor relay)	E61/-	Weld splice
E29/BLK	Relay box (Radiator fan relay #1)	E62/-	Weld splice
E30/BLK	Relay box (Radiator fan relay #2)	E63/-	Weld splice
E31/BLK	Relay box (Radiator fan relay #3)	E64/-	Weld splice
E32/BLK	Fuse box No.2 (Starting motor relay & Headlight HI relay & Headlight LO relay)		

E: Front height sensor wire

No./Color	Connective position	No./Color	Connective position
E85/BLK	Main Harness (To E52)	E86/BLK	Front height sensor

E: Main harness, Front height sensor wire (DSL LHD)

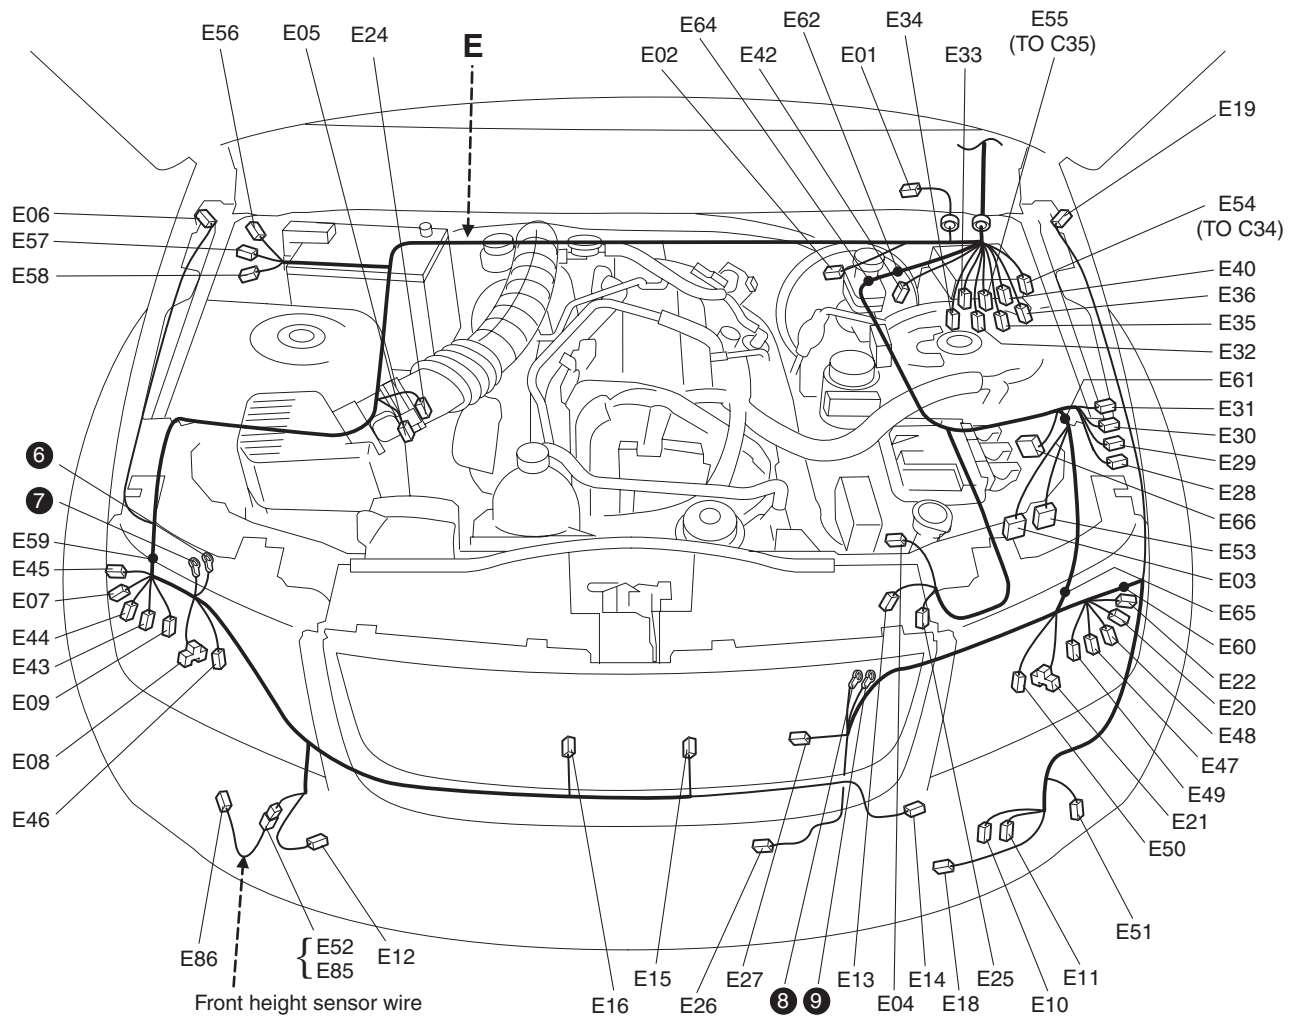

E: Main harness

No./Color	Connective position	No./Color	Connective position
E01/GRY	Windshield wiper motor	E33/BLK	Fuse box No.2 (Heater motor relay & Main relay & A/C compressor relay)
E02/GRY	Brake fluid level switch	E34/N	Fuse box No.2 (Fuel heater relay & Turbo cooling pump relay)
E03/BLK	ABS control module	E35/N	Power integration No.1 (Mirror heater relay & Fog light relay)
E04/BLK	A/C pressure sensor	E36/N	Power integration No.1 (Horn relay & Rear defogger relay)
E05/N	Wheel speed sensor (FR)	E40/GRY	Power integration No.1
E06/N	Side turn signal light (R)	E42/N	Fuse box No.2
E07/N	Front position light (R)	E43/GRY (5 dr)	HID headlight (R)
E08/BLK (3 dr)	Headlight (R)	E44/BLK (5 dr)	Headlight LO (R)
E09/GRY	Front turn signal light (R)	E45/GRY	Headlight beam leveling actuator (R)
E10/N	Windshield washer motor	E46/BLK (5 dr)	Headlight HI (R)
E11/N	Rear washer motor	E47/GRY (5 dr)	HID headlight (L)
E12/BLK	Front fog light (R)	E48/BLK (5 dr)	Headlight LO (L)
E13/YEL	Forward sensor (Driver side)	E49/GRY	Headlight beam leveling actuator (L)
E14/BLK	Ambient temperature sensor	E50/BLK (5 dr)	Headlight HI (L)
E15/BLK	Horn (HI)	E51/N	HLC motor
E16/BLK	Horn (LO)	E52/BLK	Front height sensor wire (To E85)
E18/BLK	Front fog light (L)	E53/BLK (IF EQPD)	ESP® control module
E19/N	Side turn signal light (L)	E54/BLU	Engine harness (To C34)
E20/GRY	Front turn signal light (L)	E55/N	Engine harness (To C35)
E21/BLK (3 dr)	Headlight (L)	E56/BLK	Fuse box No.1
E22/N	Front position light (L)	E57/BLK	Fuse box No.1
E24/YEL	Forward sensor (Passenger side)	E58/GRY	Fuse box No.1
E25/GRY	Wheel speed sensor (FL)	E59/-	Weld splice
E26/BLK	Radiator fan motor #1	E60/-	Weld splice
E27/GRY	Radiator fan motor #2	E61/-	Weld splice
E28/BLK	Relay box (Fuel pump relay)	E62/-	Weld splice
E29/BLK	Relay box (Radiator fan relay #1)	E64/-	Weld splice
E30/BLK	Relay box (Radiator fan relay #2)	E65/-	Weld splice
E31/BLK	Relay box (Radiator fan relay #3)	E66/BLK	ECM
E32/BLK	Fuse box No.2 (Starting motor relay & Headlight HI relay & Headlight LO relay)		


E: Front height sensor wire

No./Color	Connective position	No./Color	Connective position
E85/BLK	Main Harness (To E52)	E86/BLK	Front height sensor

Instrument Panel

S6JB0B910A003

E: Main harness, Controller wire (Petrol RHD)

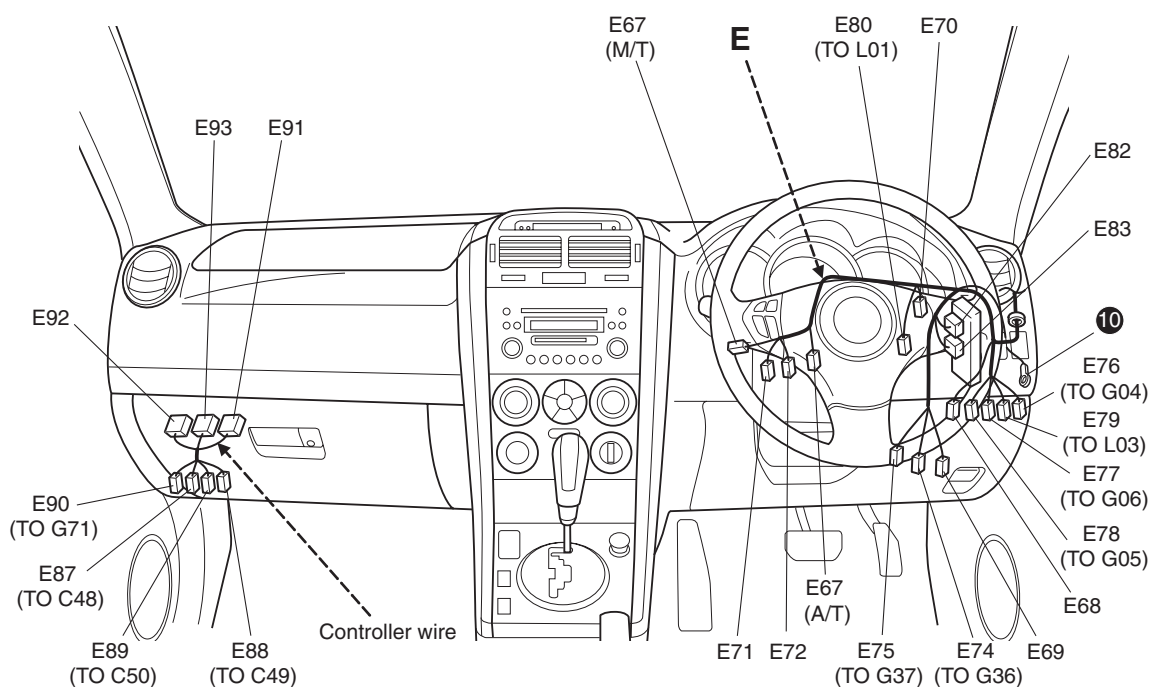


I5JB0A910907-04

E: Main harness

No./Color	Connective position	No./Color	Connective position
E67/N	Brake light switch	E76/N	Instrument panel harness (To G04)
E68/BLK	Acceleration pedal sensor	E77/YEL	Instrument panel harness (To G06)
E69/N (IF EQPD)	Diagnosis connector #1	E78/GRY	Instrument panel harness (To G05)
E70/BLK	Diode #1	E79/YEL	Floor harness (To L03)
E71/N	Clutch switch	E80/N	Floor harness (To L01)
E72/N	Clutch 4WD switch	E82/N	J/B
E74/N	Instrument panel harness (To G36)	E83/N	J/B
E75/N	Instrument panel harness (To G37)		

E: Controller wire

No./Color	Connective position	No./Color	Connective position
E87/N	Engine harness (To C48)	E91/N	4WD control module
E88/N	Engine harness (To C49)	E92/N	TCM
E89/N	Engine harness (To C50)	E93/N	TCM
E90/BLU	Instrument panel harness (To G71)		

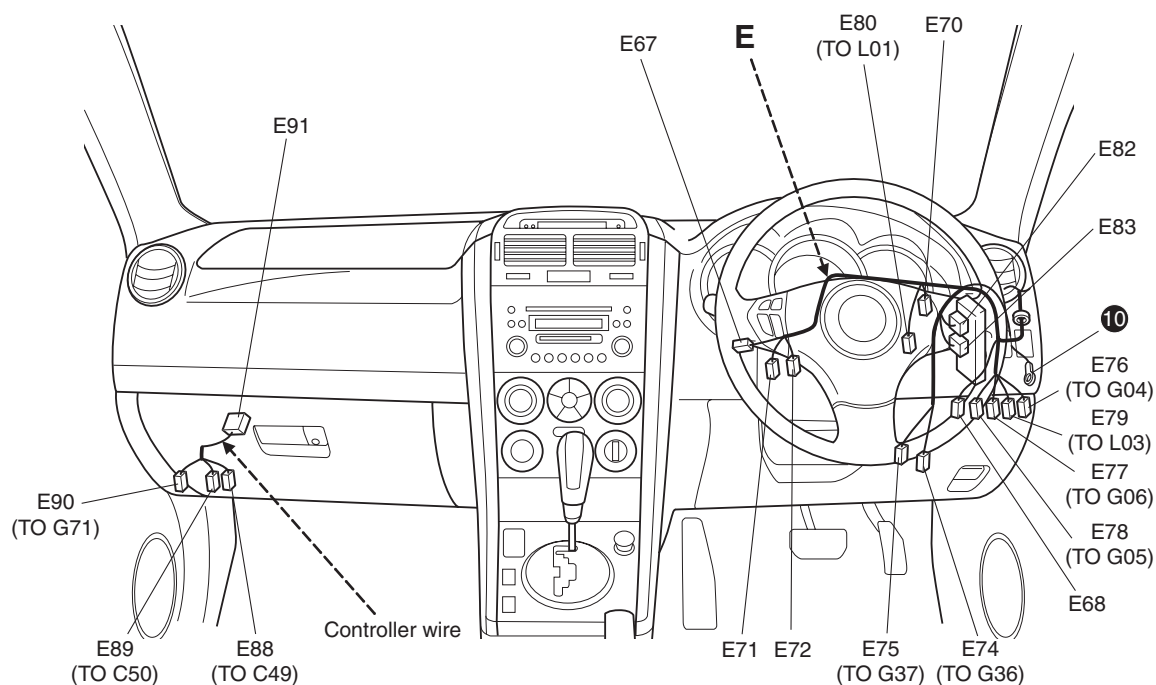E: Main harness, Controller wire (DSL RHD)


I5JB0B910910-04

E: Main harness

No./Color	Connective position	No./Color	Connective position
E67/N	Brake light switch	E76/N	Instrument panel harness (To G04)
E68/BLK	Acceleration pedal sensor	E77/N	Instrument panel harness (To G06)
E70/BLK	Diode #1	E78/GRY	Instrument panel harness (To G05)
E71/N	Clutch switch	E79/YEL	Floor harness (To L03)
E72/N	Clutch 4WD switch	E80/N	Floor harness (To L01)
E74/N	Instrument panel harness (To G36)	E82/N	J/B
E75/N	Instrument panel harness (To G37)	E83/N	J/B

E: Controller wire

No./Color	Connective position	No./Color	Connective position
E88/N	Engine harness (To C49)	E90/BLU	Instrument panel harness (To G71)
E89/N	Engine harness (To C50)	E91/N	4WD control module

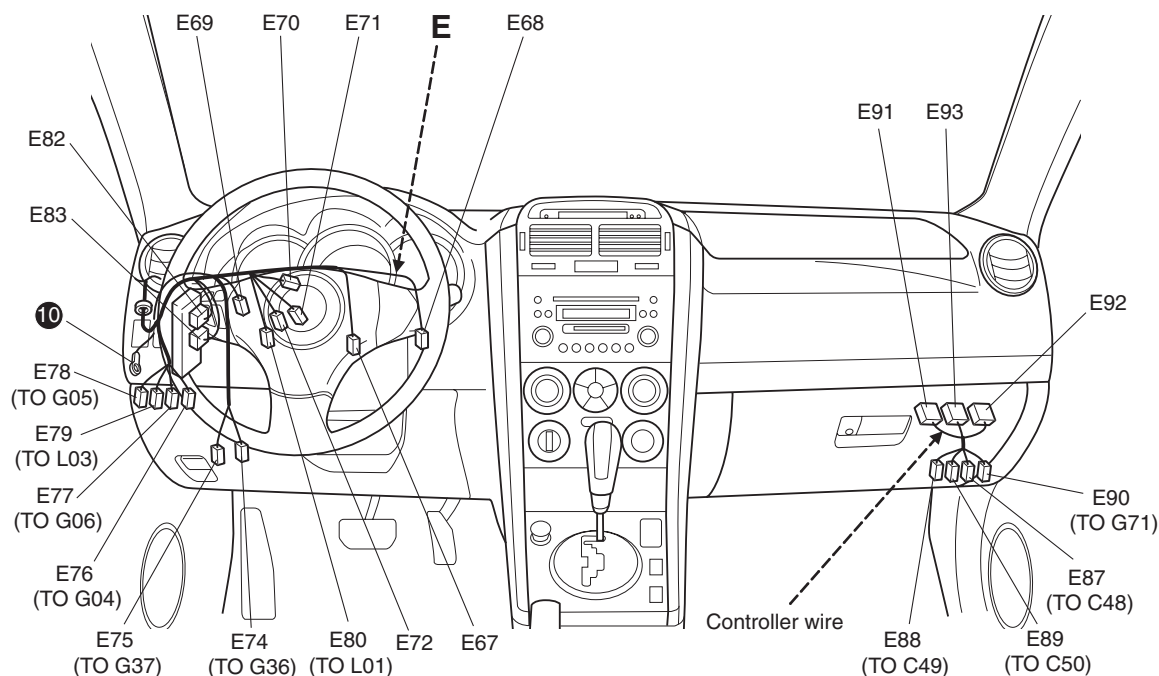E: Main harness, Controller wire (Petrol LHD)


15JB0A910908-04

E: Main harness

No./Color	Connective position	No./Color	Connective position
E67/N	Brake light switch	E76/N	Instrument panel harness (To G04)
E68/BLK	Acceleration pedal sensor	E77/N	Instrument panel harness (To G06)
E69/N	Diagnosis connector #1	E78/GRY	Instrument panel harness (To G05)
E70/BLK	Diode #1	E79/YEL	Floor harness (To L03)
E71/N	Clutch switch	E80/N	Floor harness (To L01)
E72/N	Clutch 4WD switch	E82/N	J/B
E74/N	Instrument panel harness (To G36)	E83/N	J/B
E75/N	Instrument panel harness (To G37)		

E: Controller wire

No./Color	Connective position	No./Color	Connective position
E87/N	Engine harness (To C48)	E91/N	4WD control module
E88/N	Engine harness (To C49)	E92/N	TCM
E89/N	Engine harness (To C50)	E93/N	TCM
E90/BLU	Instrument panel harness (To G71)		

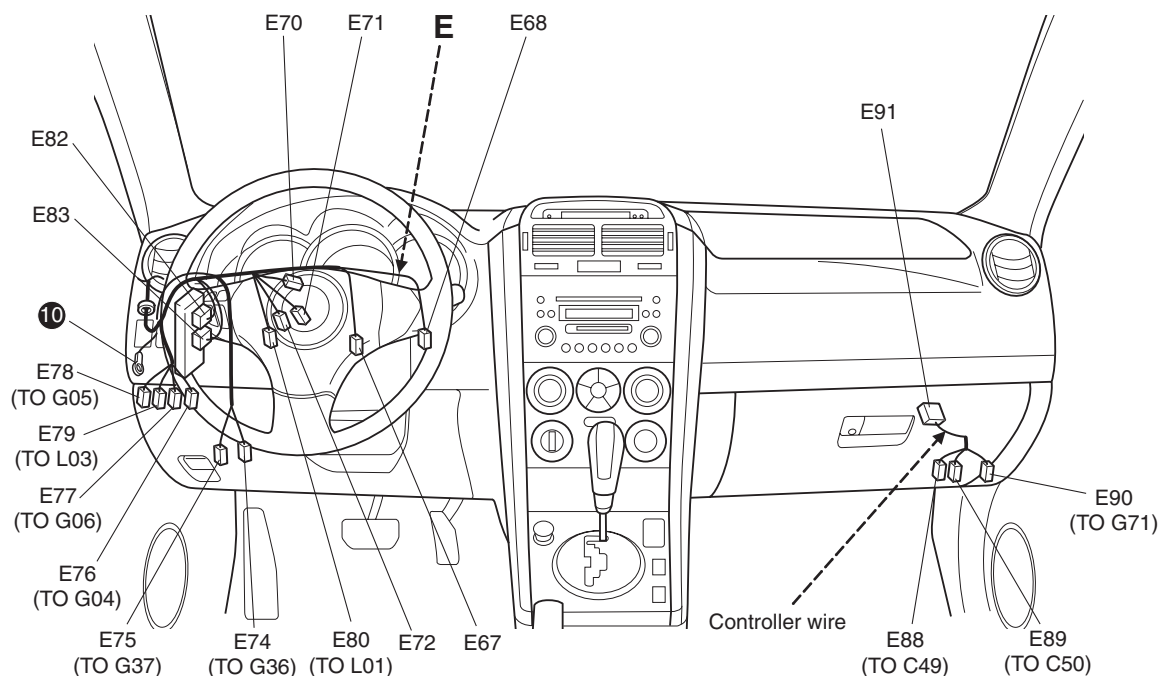E: Main harness, Controller wire (DSL LHD)

I5JB0B910911-04


E: Main harness

No./Color	Connective position	No./Color	Connective position
E67/N	Brake light switch	E76/N	Instrument panel harness (To G04)
E68/BLK	Acceleration pedal sensor	E77/YEL	Instrument panel harness (To G06)
E70/BLK	Diode #1	E78/GRY	Instrument panel harness (To G05)
E71/N	Clutch switch	E79/YEL	Floor harness (To L03)
E72/N	Clutch 4WD switch	E80/N	Floor harness (To L01)
E74/N	Instrument panel harness (To G36)	E82/N	J/B
E75/N	Instrument panel harness (To G37)	E83/N	J/B

E: Controller wire

No./Color	Connective position	No./Color	Connective position
E88/N	Engine harness (To C49)	E90/BLU	Instrument panel harness (To G71)
E89/N	Engine harness (To C50)	E91/N	4WD control module

B: A/C wire / F: Console wire / G: Instrument panel harness / Q: A/B wire (RHD)

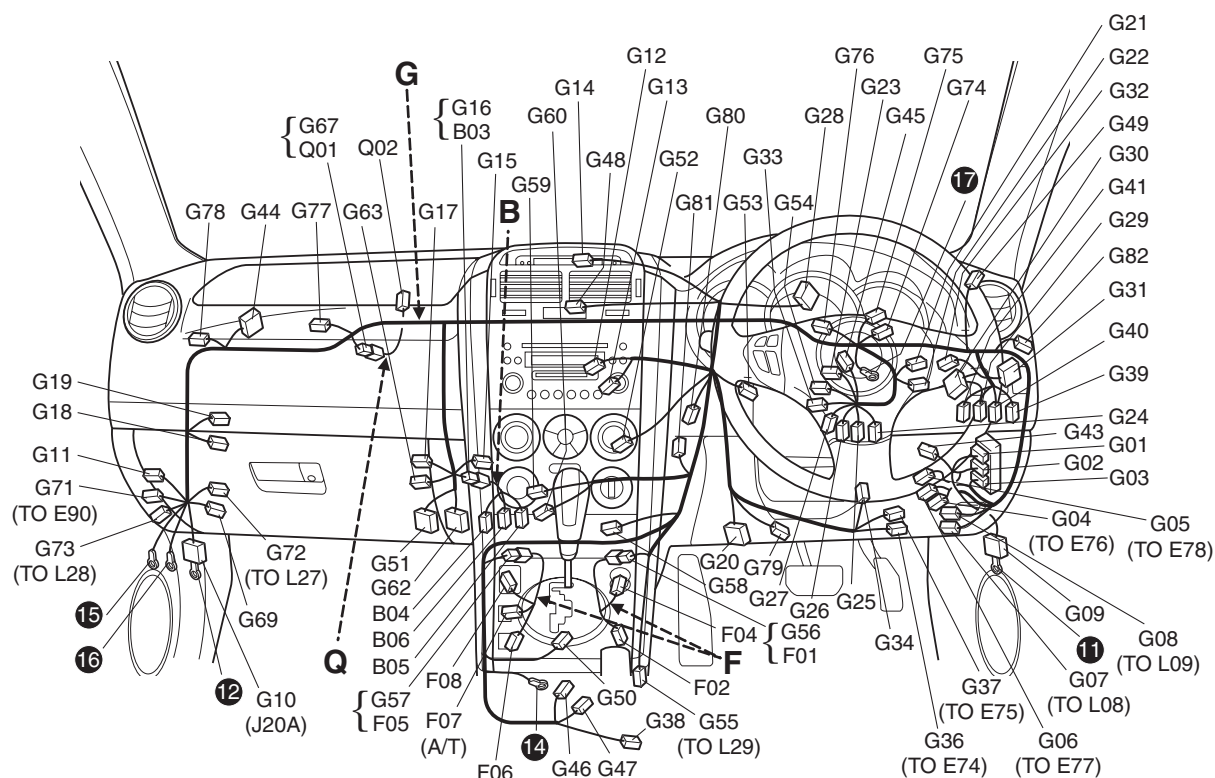

I5JB0B910912-06

B: A/C wire

No./Color	Connective position	No./Color	Connective position
B03/N	Instrument panel harness (To G16)	B05/YEL	Fresh/Recircle actuator
B04/YEL	Temperature control actuator	B06/YEL	Mode selecting actuator

F: Console wire

No./Color	Connective position	No./Color	Connective position
F01/N	Instrument panel harness (To G56)	F06/GRN	Seat heater switch (Passenger side)
F02/GRN	Seat heater switch (Driver side)	F07/N (A/T)	A/T mode select switch
F04/N	Cigar lighter (ACC socket #3)	F08/N	ACC socket #2
F05/N	Instrument panel harness (To G57)		

G: Instrument panel harness


No./Color	Connective position	No./Color	Connective position
G01/N	J/B	G39/ORN	HLC switch
G02/N	J/B	G40/N	Headlight beam leveling switch
G03/N	J/B	G41/GRY (IF EQPD)	ILL cancel switch
G04/N	Main harness (To E76)	G43/BLK	Diagnosis connector #4
G05/GRY	Main harness (To E78)	G44/N	KLS ECM
G06/YEL	Main harness (To E77)	G45/N (IF EQPD)	Steering angle sensor
G07/N	Floor harness (To L08)	G46/YEL (8ch)	A/B SDM
G08/BLU	Floor harness (To L09)	G47/YEL (4ch)	A/B SDM
G09/N	J/C	G48/ORN	Hazard switch
G10/N (J20A, H27A, DSL)	J/C	G49/N	Sunlight sensor
G11/N	Audio antenna	G50/N	A/T shift lever
G12/BLU	Audio	G51/N	Auto leveling control module
G13/N	Navigation	G52/GRY	Auto A/C
G14/YEL	Multi information display	G53/N	Room temperature sensor
G15/N	EVAP thermistor	G54/BLK	Steering switch
G16/N	A/C wire (To B03)	G55/YEL	Floor harness (To L29)
G17/N	Fan driver	G56/N	Console wire (To F01)
G18/N	Blower fan motor	G57/N	Console wire (To F05)
G19/BLK	Diode #2	G58/N (IF EQPD)	Ashtray ILL
G20/BLK	DLC	G59/GRN	4WD switch
G21/N	IG switch	G60/GRN (IF EQPD)	ESP® off switch
G22/N	Main switch (Key switch)	G62/N	HLC control module
G23/BLK	COMB switch	G63/N	Security option
G24/BLK or N	ICM	G67/YEL	Instrument panel harness (To Q01)
G25/N	COMB switch	G69/N	CO adjusting resistor
G26/YEL	Driver inflator	G71/BLU	Controller wire (To E90)
G27/YEL	Driver inflator	G72/N	Floor harness (To L27)
G28/GRN	COMB meter	G73/N	Floor harness (To L28)
G29/GRN	Front fog switch	G74/BLU	J/C
G30/N	BCM	G75/BLU	J/C
G31/N	BCM	G76/N	J/C
G32/N	BCM	G77/N	J/C
G33/N	Steering switch	G78/N	J/C
G34/N (IF EQPD)	Diagnosis connector #2	G79/BLU	J/C
G36/N	Main harness (To E74)	G80/BLK	J/C
G37/N	Main harness (To E75)	G81/BLK	J/C
G38/N	Parking brake switch	G82/BLU	J/C

Q: A/B wire

No./Color	Connective position	No./Color	Connective position
Q01/YEL	Instrument panel harness (To G67)	Q02/BLK	Passenger inflator

9A-40 Wiring Systems:

B: A/C wire / F: Console wire / G: Instrument panel harness / Q: A/B wire (LHD)

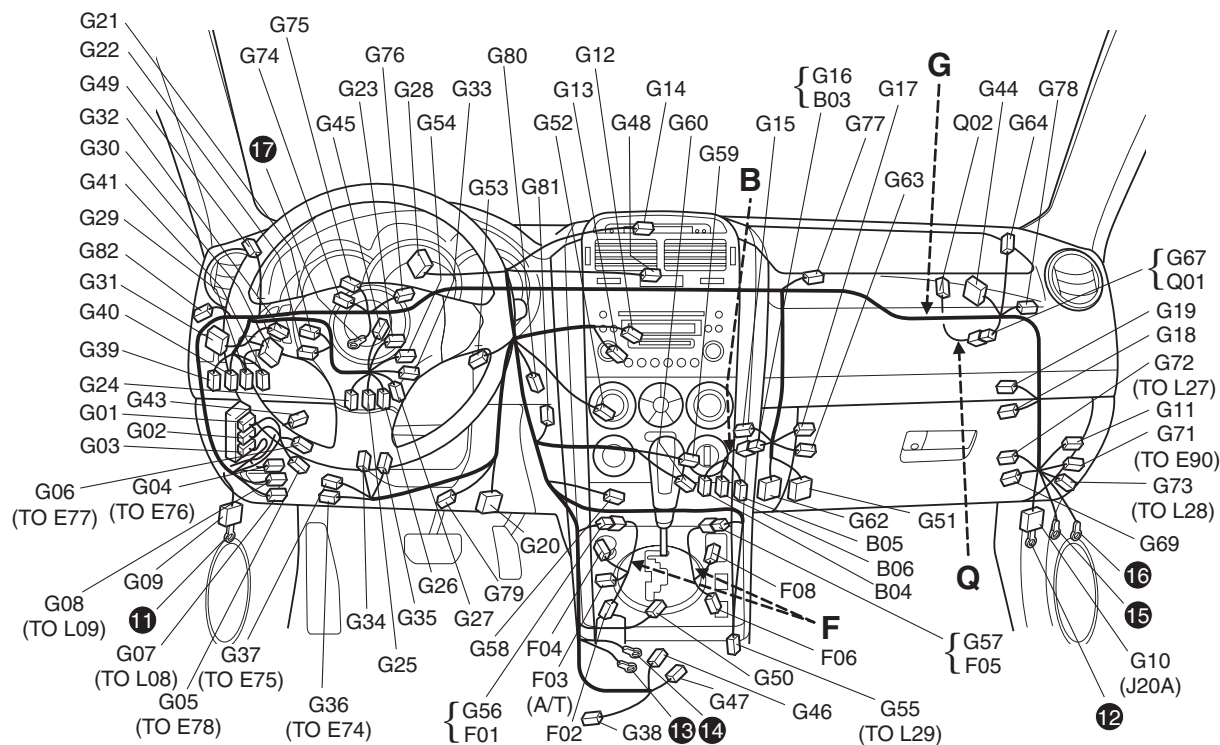

15JB0B910913-04

B: A/C wire

No./Color	Connective position	No./Color	Connective position
B03/N	Instrument panel harness (To G16)	B05/YEL	Fresh/Recircle actuator
B04/YEL	Temperature control actuator	B06/YEL	Mode selecting actuator

F: Console wire

No./Color	Connective position	No./Color	Connective position
F01/N	Instrument panel harness (To G56)	F05/N	Instrument panel harness (To G57)
F02/GRN	Seat heater switch (Driver side)	F06/GRN	Seat heater switch (Passenger side)
F03/N (A/T)	A/T mode select switch	F08/N	ACC socket #2
F04/N	Cigar lighter (ACC socket #3)		

G: Instrument panel harness

No./Color	Connective position	No./Color	Connective position
G01/N	J/B	G39/ORN	HLC switch
G02/N	J/B	G40/N	Headlight beam leveling switch
G03/N	J/B	G41/GRY (IF EQPD)	ILL cancel switch
G04/N	Main harness (To E76)	G43/BLK	Diagnosis connector #4
G05/GRY	Main harness (To E78)	G44/N	KLS ECM
G06/YEL	Main harness (To E77)	G45/N (IF EQPD)	Steering angle sensor
G07/N	Floor harness (To L08)	G46/YEL (8ch)	A/B SDM
G08/BLU	Floor harness (To L09)	G47/YEL (4ch)	A/B SDM
G09/N	J/C	G48/ORN	Hazard switch
G10/N (J20A)	J/C	G49/N	Sunlight sensor
G11/N	Audio antenna	G50/N	A/T shift lever
G12/BLU	Audio	G51/N	Auto leveling control module
G13/N	Navigation	G52/GRY	Auto A/C
G14/YEL	Multi information display	G53/N	Room temperature sensor
G15/N	EVAP thermistor	G54/BLK	Steering switch
G16/N	A/C wire (To B03)	G55/YEL	Floor harness (To L29)
G17/N	Fan driver	G56/N	Console wire (To F01)
G18/N	Blower fan motor	G57/N	Console wire (To F05)
G19/BLK	Diode #2	G58/N (IF EQPD)	Ashtray ILL
G20/BLK	DLC	G59/GRN	4WD switch
G21/N	IG switch	G60/GRN (IF EQPD)	ESP® off switch
G22/N	Main switch (Key switch)	G62/N	HLC control module
G23/BLK	COMB switch	G63/N	Security option
G24/BLK	ICM	G64/N	Auto light sensor
G25/N	COMB switch	G67/YEL	Instrument panel harness (To Q01)
G26/YEL	Driver inflator	G69/N	CO adjusting resistor
G27/YEL	Driver inflator	G71/BLU	Controller wire (To E90)
G28/GRN	COMB meter	G72/N	Floor harness (To L27)
G29/GRN	Front fog switch	G73/N	Floor harness (To L28)
G30/N	BCM	G74/BLU	J/C
G31/N	BCM	G75/BLU	J/C
G32/N	BCM	G76/N	J/C
G33/N	Steering switch	G77/N	J/C
G34/N (IF EQPD)	Diagnosis connector #2	G78/N	J/C
G35/BLU (IF EQPD)	Diagnosis connector #3	G79/BLU	J/C
G36/N	Main harness (To E74)	G80/BLK	J/C
G37/N	Main harness (To E75)	G81/BLK	J/C
G38/N	Parking brake switch	G82/BLU	J/C


Q: A/B wire

No./Color	Connective position	No./Color	Connective position
Q01/YEL	Instrument panel harness (To G67)	Q02/BLK	Passenger inflator

Door, Roof

S6JB0B910A004

J: Front and rear door wire, rear door joint wire / K: Roof wire (RHD, 5dr)

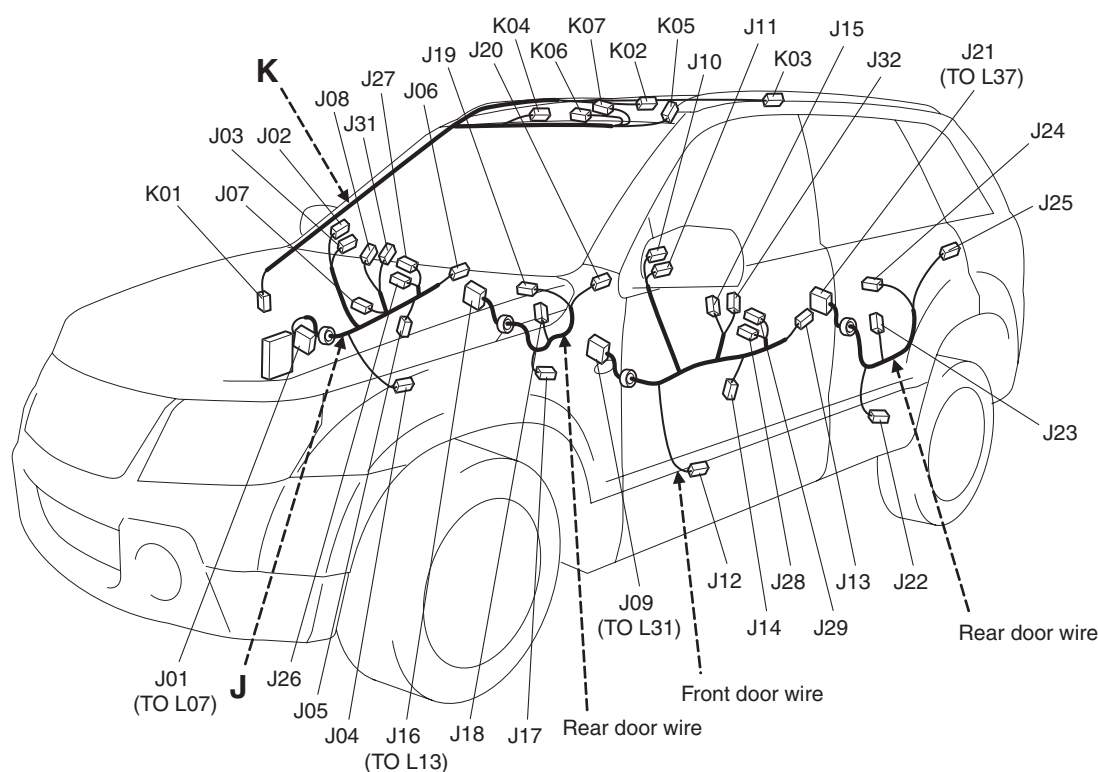

15JB0A910911-03

J: Front door wire (Drive side)

No./Color	Connective position	No./Color	Connective position
J01/GRY	Floor harness (To L07)	J07/N	Power mirror switch (Driver side)
J02/BLK	Tweeter (R)	J08/GRY	Power window main switch
J03/N	Power mirror motor (R)	J26/N	Door antenna (Driver side)
J04/N	Front speaker (R)	J27/N	Request switch (Driver side)
J05/BLK	Front power window motor (Driver side)	J31/N	Curtsy light (Driver side)
J06/N	Front door lock motor (Driver side)		

J: Front door wire (Passenger side)


No./Color	Connective position	No./Color	Connective position
J09/GRY	Floor harness (To L31)	J14/BLK	Front power window motor (Passenger side)
J10/BLK	Tweeter (L)	J15/N	Power window sub switch
J11/N	Power mirror motor (L)	J28/N	Door antenna (Passenger side)
J12/N	Front speaker (L)	J29/N	Request switch (Passenger side)
J13/N	Front door lock motor (Passenger side)	J32/N	Curtsy light (Passenger side)

J: Rear door wire

No./Color	Connective position	No./Color	Connective position
J16/N	Floor harness (To L13)	J21/N	Floor harness (To L37)
J17/N	Rear speaker (R)	J22/N	Rear speaker (L)
J18/BLK	Rear power window motor (R)	J23/BLK	Rear power window motor (L)
J19/N	Rear power window sub switch (R)	J24/N	Rear power window sub switch (L)
J20/N	Rear door lock motor (R)	J25/N	Rear door lock motor (L)

K: Roof wire

No./Color	Connective position	No./Color	Connective position
K01/N	J/B	K05/N	Vanity light (Passenger side)
K02/N	Interior light	K06/N	Sliding roof unit
K03/N	Rear interior light	K07/N	Console (Sliding roof switch & console light)
K04/N	Vanity light (Driver side)		

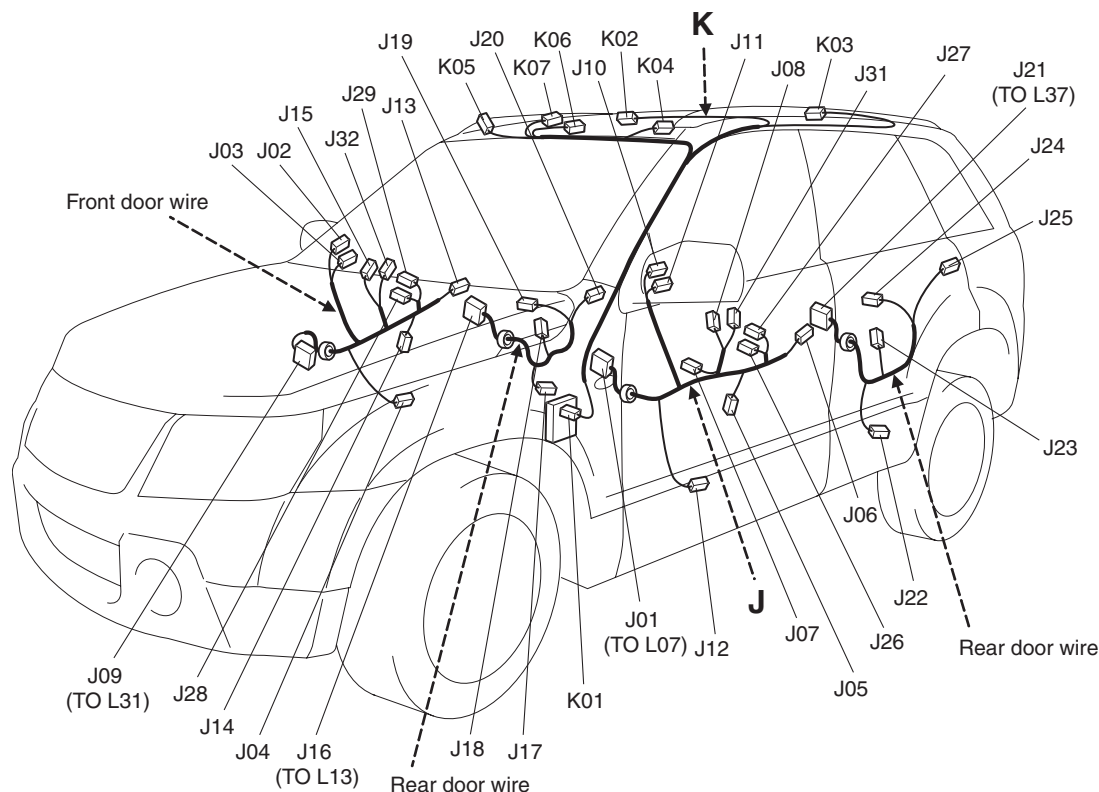J: Front and rear door wire, rear door joint wire / K: Roof wire (LHD, 5dr)

15JB0A910912-04

J: Front door wire (Drive side)

No./Color	Connective position	No./Color	Connective position
J01/GRY	Floor harness (To L07)	J11/N	Power mirror motor (L)
J05/BLK	Front power window motor (Driver side)	J12/N	Front speaker (L)
J06/N	Front door lock motor (Driver side)	J26/N	Door antenna (Driver side)
J07/N	Power mirror switch (Driver side)	J27/N	Request switch (Driver side)
J08/GRY	Power window main switch	J31/N	Curtsey light (Driver side)
J10/BLK	Tweeter (L)		

J: Front door wire (Passenger side)

No./Color	Connective position	No./Color	Connective position
J02/BLK	Tweeter (R)	J14/BLK	Front power window motor (Passenger side)
J03/N	Power mirror motor (R)	J15/N	Power window sub switch
J04/N	Front speaker (R)	J28/N	Door antenna (Passenger side)
J09/GRY	Floor harness (To L31)	J29/N	Request switch (Passenger side)
J13/N	Front door lock motor (Passenger side)	J32/N	Curtsey light (Passenger side)

J: Rear door wire


No./Color	Connective position	No./Color	Connective position
J16/N	Floor harness (To L13)	J21/N	Floor harness (To L37)
J17/N	Rear speaker (R)	J22/N	Rear speaker (L)
J18/BLK	Rear power window motor (R)	J23/BLK	Rear power window motor (L)
J19/N	Rear power window sub switch (R)	J24/N	Rear power window sub switch (L)
J20/N	Rear door lock motor (R)	J25/N	Rear door lock motor (L)

K: Roof wire

No./Color	Connective position	No./Color	Connective position
K01/N	J/B	K05/N	Vanity light (Passenger side)
K02/N	Interior light	K06/N	Sliding roof unit
K03/N	Rear interior light	K07/N	Console (Sliding roof switch & console light)
K04/N	Vanity light (Driver side)		

9A-44 Wiring Systems:

J: Front and rear door wire / K: Roof wire (RHD, 3dr)

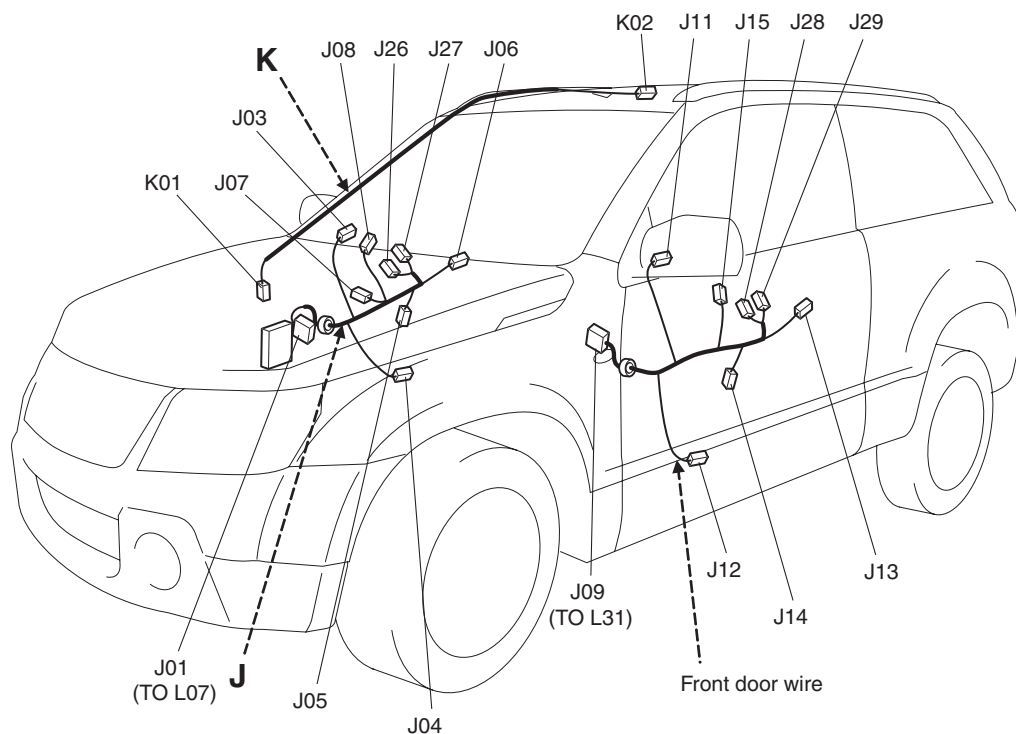

I6JB0B910901-02

J: Front door wire (Driver side)


No./Color	Connective position	No./Color	Connective position
J01/GRY	Floor harness (To L07)	J07/N	Power mirror switch (Driver side)
J03/N	Power mirror motor (R)	J08/GRY	Power window main switch
J04/N	Front speaker (R)	J26/N	Door antenna (Driver side)
J05/BLK	Front power window motor (Driver side)	J27/N	Request switch (Driver side)
J06/N	Front door lock motor (Driver side)		

J: Front door wire (Passenger side)

No./Color	Connective position	No./Color	Connective position
J09/GRY	Floor harness (To L31)	J14/BLK	Front power window motor (Passenger side)
J11/N	Power mirror motor (L)	J15/N	Power window sub switch
J12/N	Front speaker (L)	J28/N	Door antenna (Passenger side)
J13/N	Front door lock motor (Passenger side)	J29/N	Request switch (Passenger side)

K: Roof wire

No./Color	Connective position	No./Color	Connective position
K01/N	J/B	K02/N	Interior light

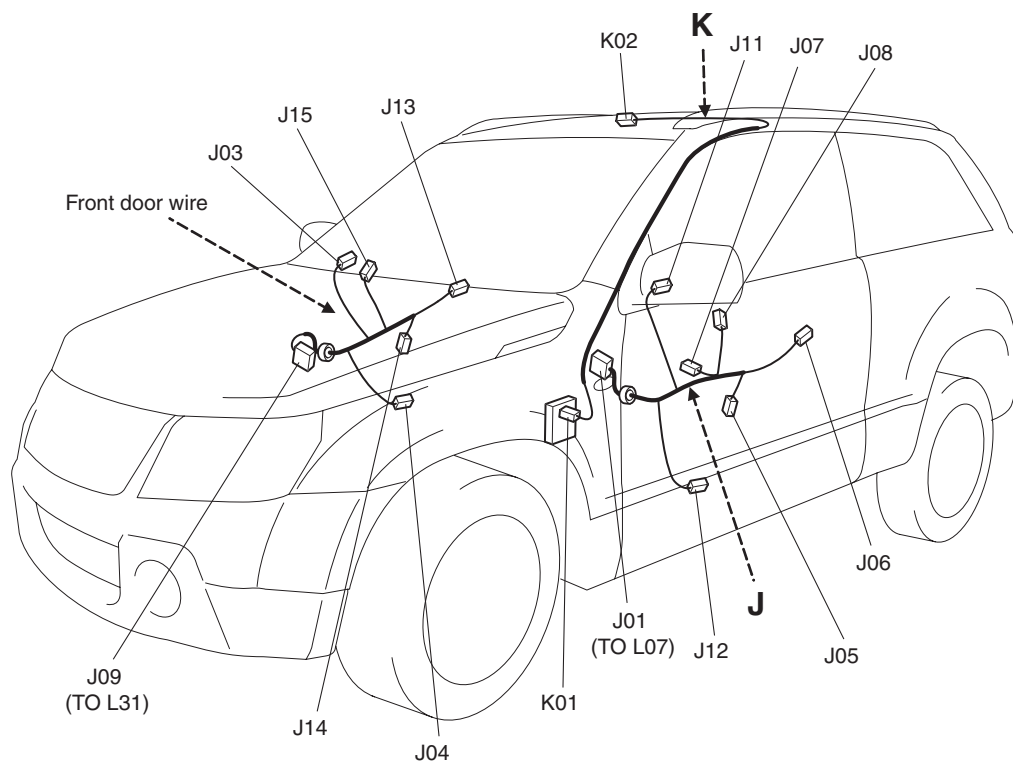J: Front and rear door wire / K: Roof wire (LHD, 3dr)

I6JB0B910915-01

J: Front door wire (Drive side)

No./Color	Connective position	No./Color	Connective position
J01/GRY	Floor harness (To L07)	J08/GRY	Power window main switch
J05/BLK	Front power window motor (Driver side)	J11/N	Power mirror motor (L)
J06/N	Front door lock motor (Driver side)	J12/N	Front speaker (L)
J07/N	Power mirror switch (Driver side)		

J: Front door wire (Passenger side)

No./Color	Connective position	No./Color	Connective position
J03/N	Power mirror motor (R)	J13/N	Front door lock motor (Passenger side)
J04/N	Front speaker (R)	J14/BLK	Front power window motor (Passenger side)
J09/GRY	Floor harness (To L31)	J15/N	Power window sub switch


K: Roof wire

No./Color	Connective position	No./Color	Connective position
K01/N	J/B	K02/N	Interior light

Floor

S6JB0B910A005

L: Floor harness, Rear height sensor wire / R: Fuel pump wire (RHD, 5dr)

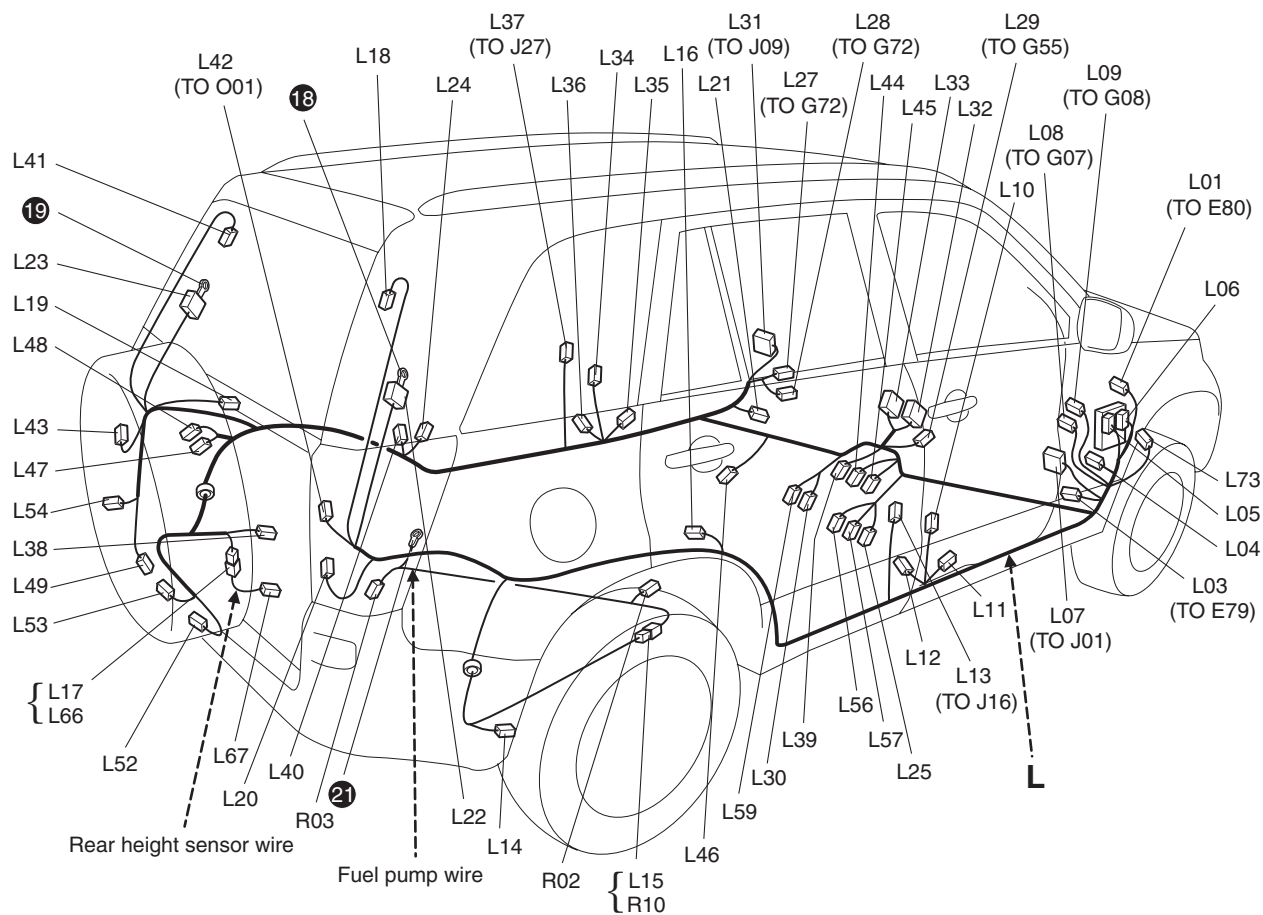

15JB0B910914-04

L: Floor harness

No./Color	Connective position	No./Color	Connective position
L01/N	Main harness (To E80)	L30/YEL	Side air-bag inflator (L)
L03/YEL	Main harness (To E79)	L31/GRY	Front door wire (Passenger side) (To J09)
L04/BLK	Turn signal relay	L32/YEL (8ch)	A/B SDM
L05/N	J/B	L33/YEL (8ch)	A/B SDM
L06/N	J/B	L34/N	Front door switch (Passenger side)
L07/GRY	Front door wire (Driver side) (To J01)	L35/YEL	Side air- bag sensor (L)
L08/N	Instrument panel harness (To G07)	L36/BLK	Pretensioner (Passenger side)
L09/BLU	Instrument panel harness (To G08)	L37/N	Rear door wire (L) (To J21)
L10/N	Front door switch (Driver side)	L38/GRY	Wheel speed sensor (RL)
L11/YEL	Side air-bag sensor (R)	L39/GRY (IF EQPD)	YAW / G sensor
L12/BLK	Pretensioner (Driver side)	L40/N	Rear door switch (L)
L13/N	Rear door wire (R) (To J16)	L41/BLK	Side curtain air-bag (L)
L14/N	Wheel speed sensor (RR)	L42/N	Rear end door wire (To O01)
L15/GRY	Fuel pump wire (To R01)	L43/N	Rear combination light (L)
L16/N	Rear door switch (R)	L44/N	Keyless entry receiver
L17/GRY	Rear height sensor harness (To L66)	L45/BRN	Inside antenna
L18/BLK	Side curtain air-bag (R)	L46/BLK (IF EQPD)	Sub woofer
L19/GRY	Luggage compartment light	L47/N	ACC socket #1
L20/N	Rear combination light (R)	L48/N	ACC socket #1
L21/BLK	Diode #3	L49/BRN	Luggage antenna
L22/N	J/C	L52/N	Licence plate light #1
L23/N	J/C	L53/N	Licence plate light #2
L24/BLK (IF EQPD)	J/C	L54/N	Rear end door switch
L25/YEL	Side air-bag inflator (R)	L56/N	Seat belt switch (Without seat heater)
L27/N	Instrument panel harness (To G72)	L57/N	Seat heater & Seat belt switch (Driver side)
L28/N	Instrument panel harness (To G73)	L59/N	Seat heater (Passenger side)
L29/YEL	Instrument panel harness (To G55)	L73/N (IF EQPD)	Sub woofer relay


L: Rear height sensor wire

No./Color	Connective position	No./Color	Connective position
L66/N	Floor harness (To L17)	L67/BLK	Rear height sensor

R: Fuel pump wire

No./Color	Connective position	No./Color	Connective position
R01/GRY	Floor harness (To L15)	R03/N	Fuel pump sub gauge
R02/GRY or BLK	Fuel pump and gauge		

 L: Floor harness, Rear height sensor wire / R: Fuel pump wire (LHD, 5dr)



L: Floor harness

No./Color	Connective position	No./Color	Connective position
L01/N	Main harness (To E80)	L30/YEL	Side air-bag inflator (L)
L03/YEL	Main harness (To E79)	L31/GRY	Front door wire (Passenger side) (To J09)
L04/BLK	Turn signal relay	L32/YEL (8ch)	A/B SDM
L05/N	J/B	L33/YEL (8ch)	A/B SDM
L06/N	J/B	L34/N	Front door switch (Passenger side)
L07/GRY	Front door wire (Driver side) (To J01)	L35/YEL	Side air- bag sensor (L)
L08/N	Instrument panel harness (To G07)	L36/BLK	Pretensioner (Passenger side)
L09/BLU	Instrument panel harness (To G08)	L37/N	Rear door wire (L) (To J21)
L10/N	Front door switch (Driver side)	L38/GRY	Wheel speed sensor (RL)
L11/YEL	Side air-bag sensor (R)	L39/GRY (IF EQPD)	YAW / G sensor
L12/BLK	Pretensioner (Driver side)	L40/N	Rear door switch (L)
L13/N	Rear door wire (R) (To J16)	L41/BLK	Side curtain air-bag (L)
L14/N	Wheel speed sensor (RR)	L42/N	Rear end door wire (To O01)
L15/GRY	Fuel pump wire (To R01)	L43/N	Rear combination light (L)
L16/N	Rear door switch (R)	L44/N	Keyless entry receiver
L17/GRY	Rear height sensor harness (To L66)	L45/BRN	Inside antenna
L18/BLK	Side curtain air-bag (R)	L47/N	ACC socket #1
L19/GRY	Luggage compartment light	L48/N	ACC socket #1
L20/N	Rear combination light (R)	L49/BRN	Luggage antenna
L21/BLK	Diode #3	L52/N	Licence plate light #1
L22/N	J/C	L53/N	Licence plate light #2
L23/N	J/C	L54/N	Rear end door switch
L25/YEL	Side air-bag inflator (R)	L56/N	Seat belt switch (Without seat heater)
L27/N	Instrument panel harness (To G72)	L57/N	Seat heater & Seat belt switch (Driver side)
L28/N	Instrument panel harness (To G73)	L59/N	Seat heater (Passenger side)
L29/YEL	Instrument panel harness (To G55)		

L: Rear height sensor wire


No./Color	Connective position	No./Color	Connective position
L66/N	Floor harness (To L17)	L67/BLK	Rear height sensor

R: Fuel pump wire

No./Color	Connective position	No./Color	Connective position
R01/GRY	Floor harness (To L15)	R03/N	Fuel pump sub gauge
R02/GRY or BLK	Fuel pump and gauge		

9A-50 Wiring Systems:

L: Floor harness, Luggage compartment light wire, Rear height sensor wire / R: Fuel pump wire (RHD, 3dr)

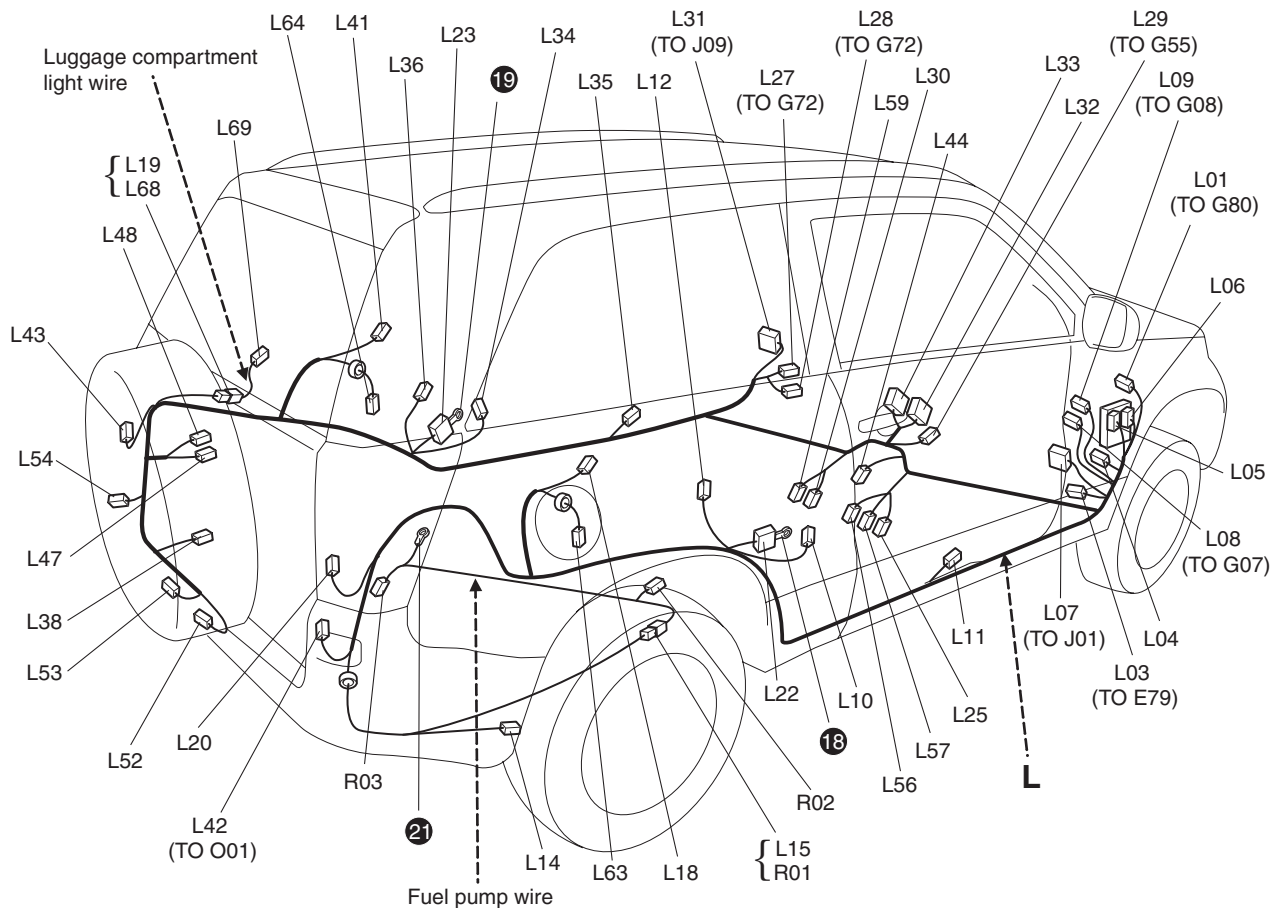

16JB0B910902-01

L: Floor harness

No./Color	Connective position	No./Color	Connective position
L01/N	Main harness (To E80)	L30/YEL	Side air-bag inflator (L)
L03/YEL	Main harness (To E79)	L31/GRY	Front door wire (Passenger side) (To J09)
L04/BLK	Turn signal relay	L32/YEL (8ch)	A/B SDM
L05/N	J/B	L33/YEL (8ch)	A/B SDM
L06/N	J/B	L34/N	Front door switch (Passenger side)
L07/GRY	Front door wire (Driver side) (To J01)	L35/YEL	Side air- bag sensor (L)
L08/N	Instrument panel harness (To G07)	L36/BLK	Pretensioner (Passenger side)
L09/BLU	Instrument panel harness (To G08)	L38/GRY	Wheel speed sensor (RL)
L10/N	Front door switch (Driver side)	L41/BLK	Side curtain air-bag (Passenger side)
L11/YEL	Side air-bag sensor (R)	L42/N	Rear end door wire (To O01)
L12/BLK	Pretensioner (Driver side)	L43/N	Rear combination light (L)
L14/N	Wheel speed sensor (RR)	L44/N	Keyless entry receiver
L15/GRY	Fuel pump wire (To R01)	L47/N	ACC socket #1
L18/BLK	Side curtain air-bag (Driver side)	L48/N	ACC socket #1
L19/N	Luggage compartment light wire (To L68)	L52/N	Licence plate light #1
L20/N	Rear combination light (R)	L53/N	Licence plate light #2
L22/N	J/C	L54/N	Rear end door switch
L23/N	J/C	L56/N	Seat belt switch (Without seat heater)
L25/YEL	Side air-bag inflator (R)	L57/N	Seat heater & Seat belt switch (Driver side)
L27/N	Instrument panel harness (To G72)	L59/N	Seat heater (Passenger side)
L28/N	Instrument panel harness (To G73)	L63/N	Rear speaker (R)
L29/YEL	Instrument panel harness (To G55)	L64/N	Rear speaker (L)

L: Luggage compartment light wire

No./Color	Connective position	No./Color	Connective position
L68/N	Floor harness (To L19)	L69/N	Luggage compartment light

R: Fuel pump wire

No./Color	Connective position	No./Color	Connective position
R01/GRY	Floor harness (To L15)	R03/N	Fuel pump sub gauge
R02/GRY or BLK	Fuel pump and gauge		



L: Floor harness

No./Color	Connective position	No./Color	Connective position
L01/N	Main harness (To E80)	L32/YEL (8ch)	A/B SDM
L03/YEL	Main harness (To E79)	L33/YEL (8ch)	A/B SDM
L04/BLK	Turn signal relay	L34/N	Front door switch (Passenger side)
L05/N	J/B	L35/YEL	Side air- bag sensor (L)
L06/N	J/B	L36/BLK	Pretensioner (Passenger side)
L07/GRY	Front door wire (Driver side) (To J01)	L38/GRY	Wheel speed sensor (RL)
L08/N	Instrument panel harness (To G07)	L39/GRY (IF EQPD)	YAW/G sensor
L09/BLU	Instrument panel harness (To G08)	L41/BLK	Side curtain air-bag (Passenger side)
L10/N	Front door switch (Driver side)	L42/N	Rear end door wire (To O01)
L11/YEL	Side air-bag sensor (R)	L43/N	Rear combination light (L)
L12/BLK	Pretensioner (Driver side)	L44/N	Keyless entry receiver
L14/N	Wheel speed sensor (RR)	L47/N	ACC socket #1
L15/GRY	Fuel pump wire (To R01)	L48/N	ACC socket #1
L18/BLK	Side curtain air-bag (Driver side)	L52/N	Licence plate light #1
L19/N	Luggage compartment light wire (To L68)	L53/N	Licence plate light #2
L20/N	Rear combination light (R)	L54/N	Rear end door switch
L22/N	J/C	L56/N	Seat belt switch
L23/N	J/C	L57/N	Seat heater (Driver side)
L25/YEL	Side air-bag inflator (R)	L59/N	Seat heater (Passenger side)
L27/N	Instrument panel harness (To G72)	L63/N	Rear speaker (R)
L28/N	Instrument panel harness (To G73)	L64/N	Rear speaker (L)
L29/YEL	Instrument panel harness (To G55)	L79/BLU	J/C
L30/YEL	Side air-bag inflator (L)	L80/BRN	Luggage antenna (R)
L31/GRY	Front door wire (Passenger side) (To J09)	L81/BRN	Luggage antenna (L)

L: Luggage compartment light wire

No./Color	Connective position	No./Color	Connective position
L68/N	Floor harness (To L19)	L69/N	Luggage compartment light


R: Fuel pump wire

No./Color	Connective position	No./Color	Connective position
R01/GRY	Floor harness (To L15)	R03/N	Fuel pump sub gauge
R02/GRY or BLK	Fuel pump and gauge		

Rear

S6JB0B910A006

O: Rear end door harness

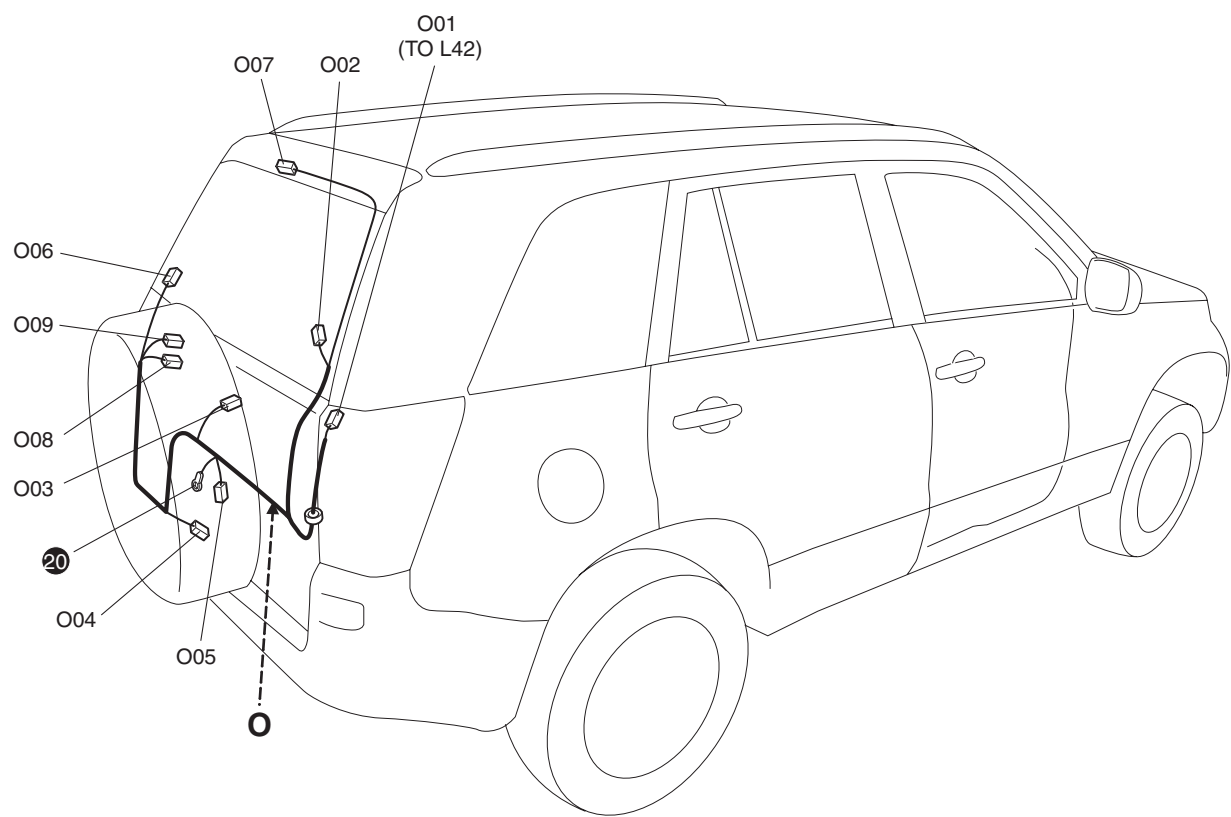

I5JB0A910919-02

O: Rear end door harness

No./Color	Connective position	No./Color	Connective position
O01/N	Floor harness (To L42)	O06/BLK	Rear defogger (–)
O02/BLK	Rear defogger (+)	O07/N	High mounted brake light
O03/N	Rear wiper motor	O08/N	Rear end antenna
O04/GRY	Rear end door lock motor	O09/N	Rear end door request switch
O05/N	Rear wiper relay		


Ground Point


Ground (earth) Point

Refer to "Connector Layout Diagram".

S6JB0B910C001

M16A, J20A, DSL

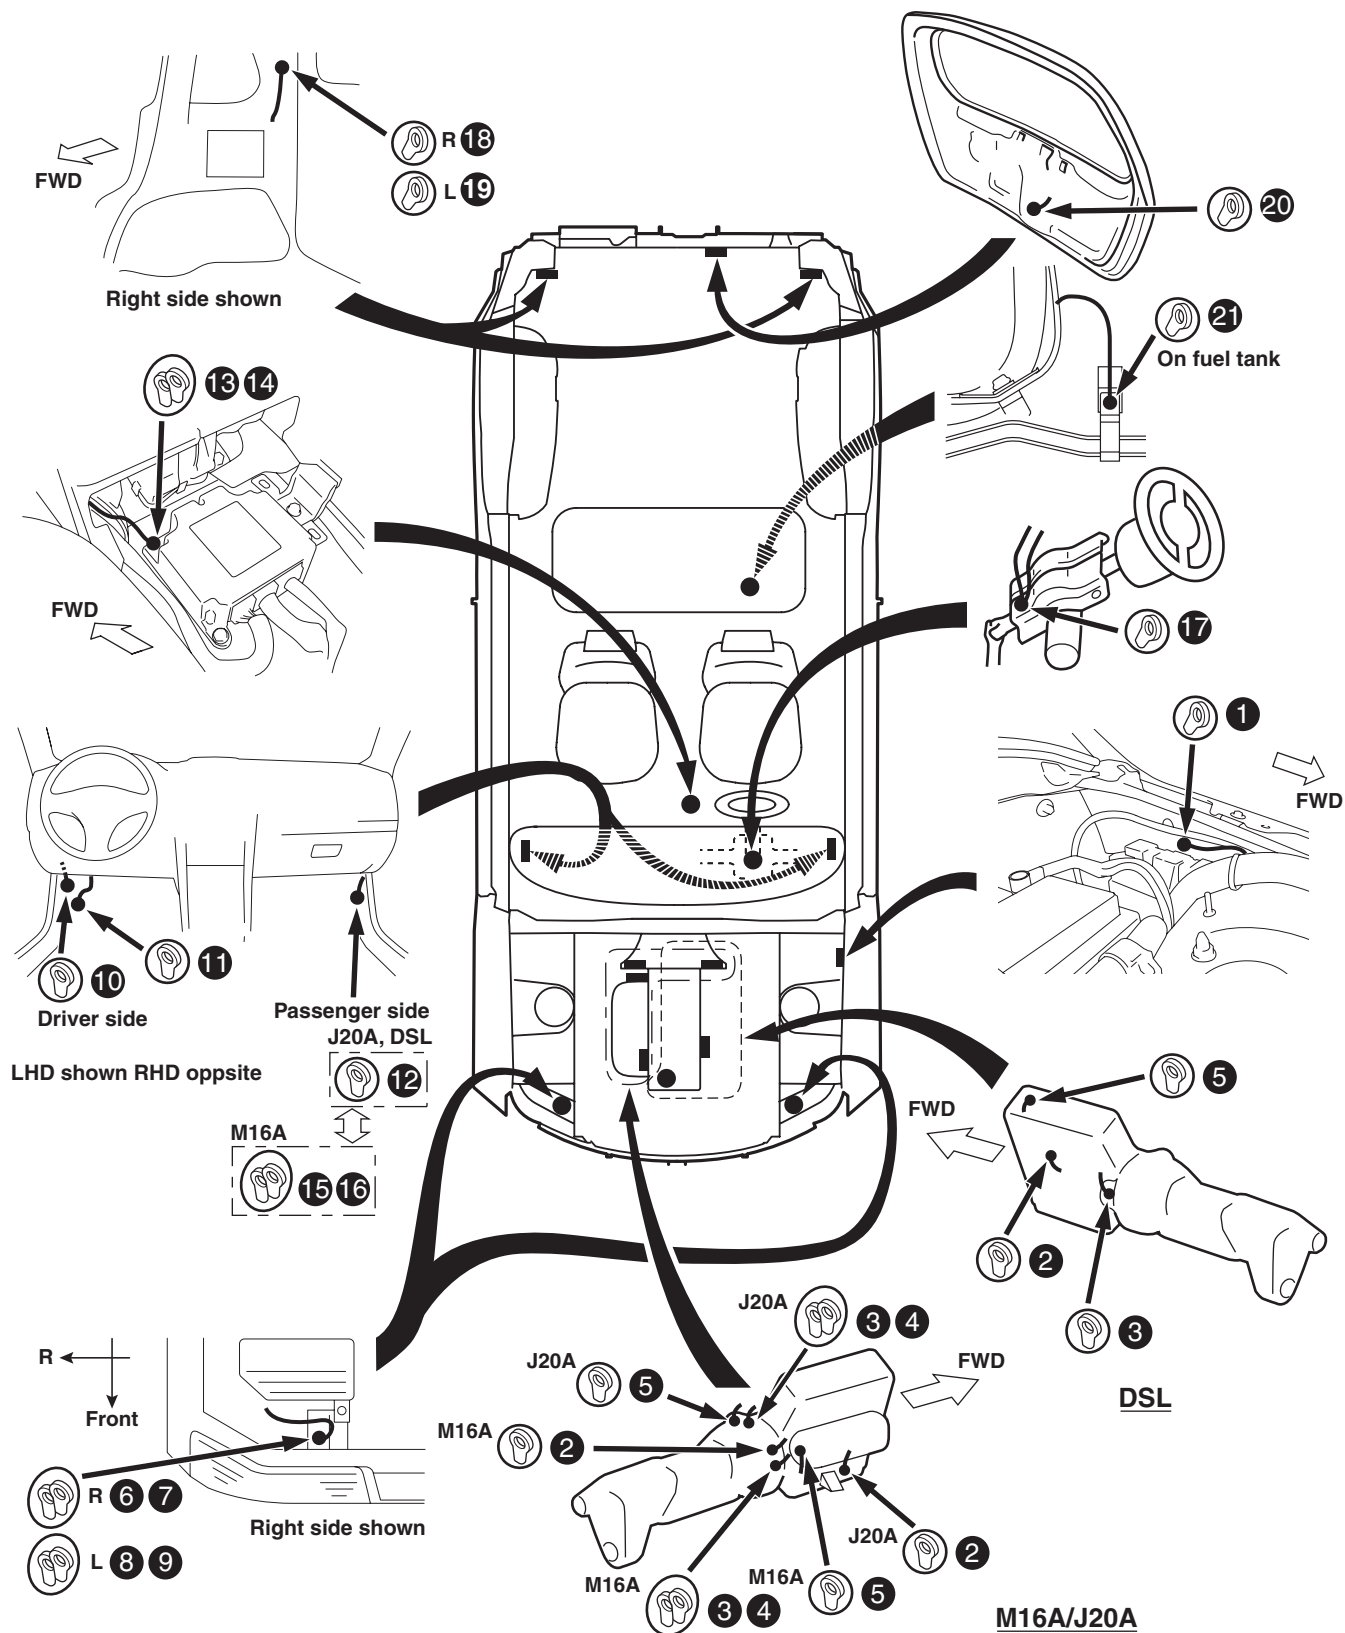


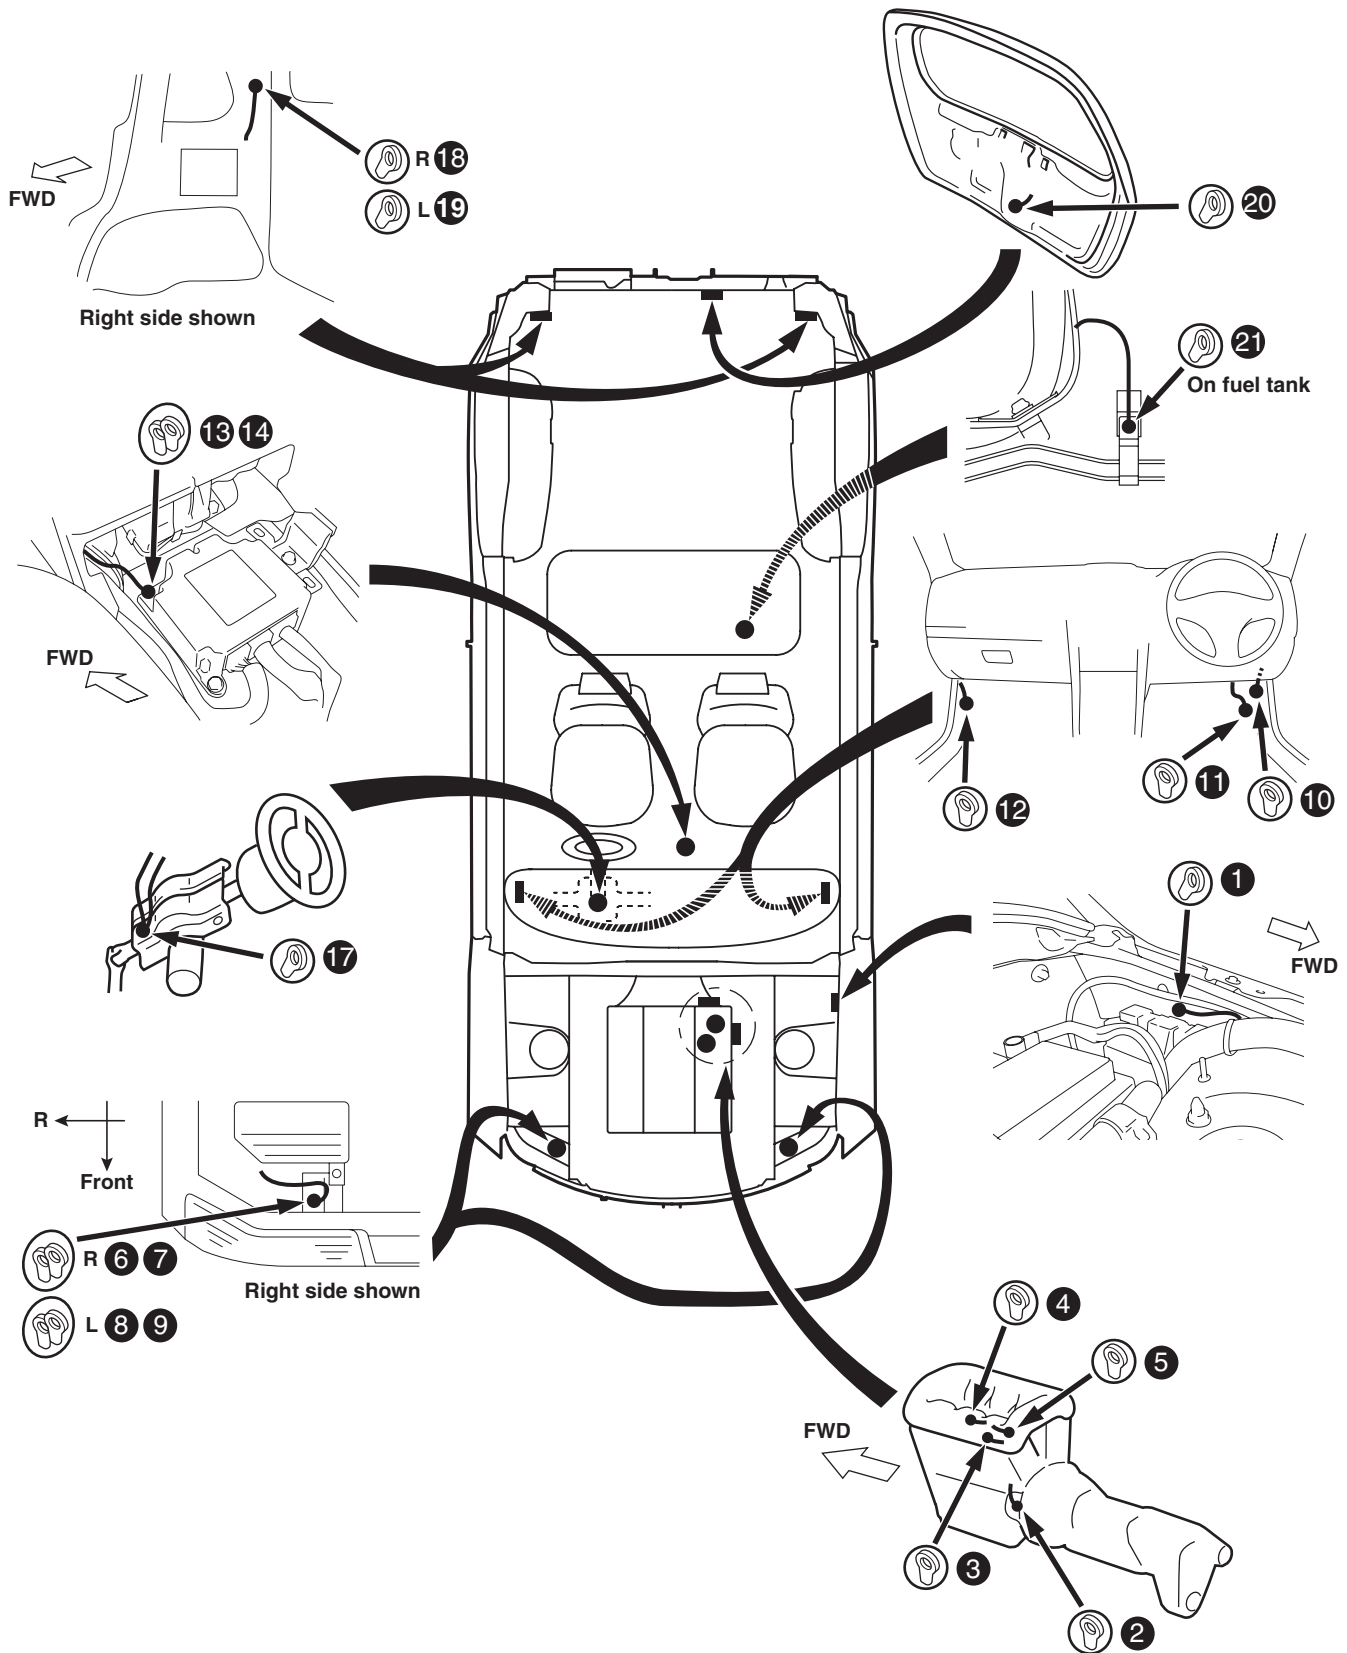

Power Supply Diagram


Power Supply Diagram

S6JB0B910D001

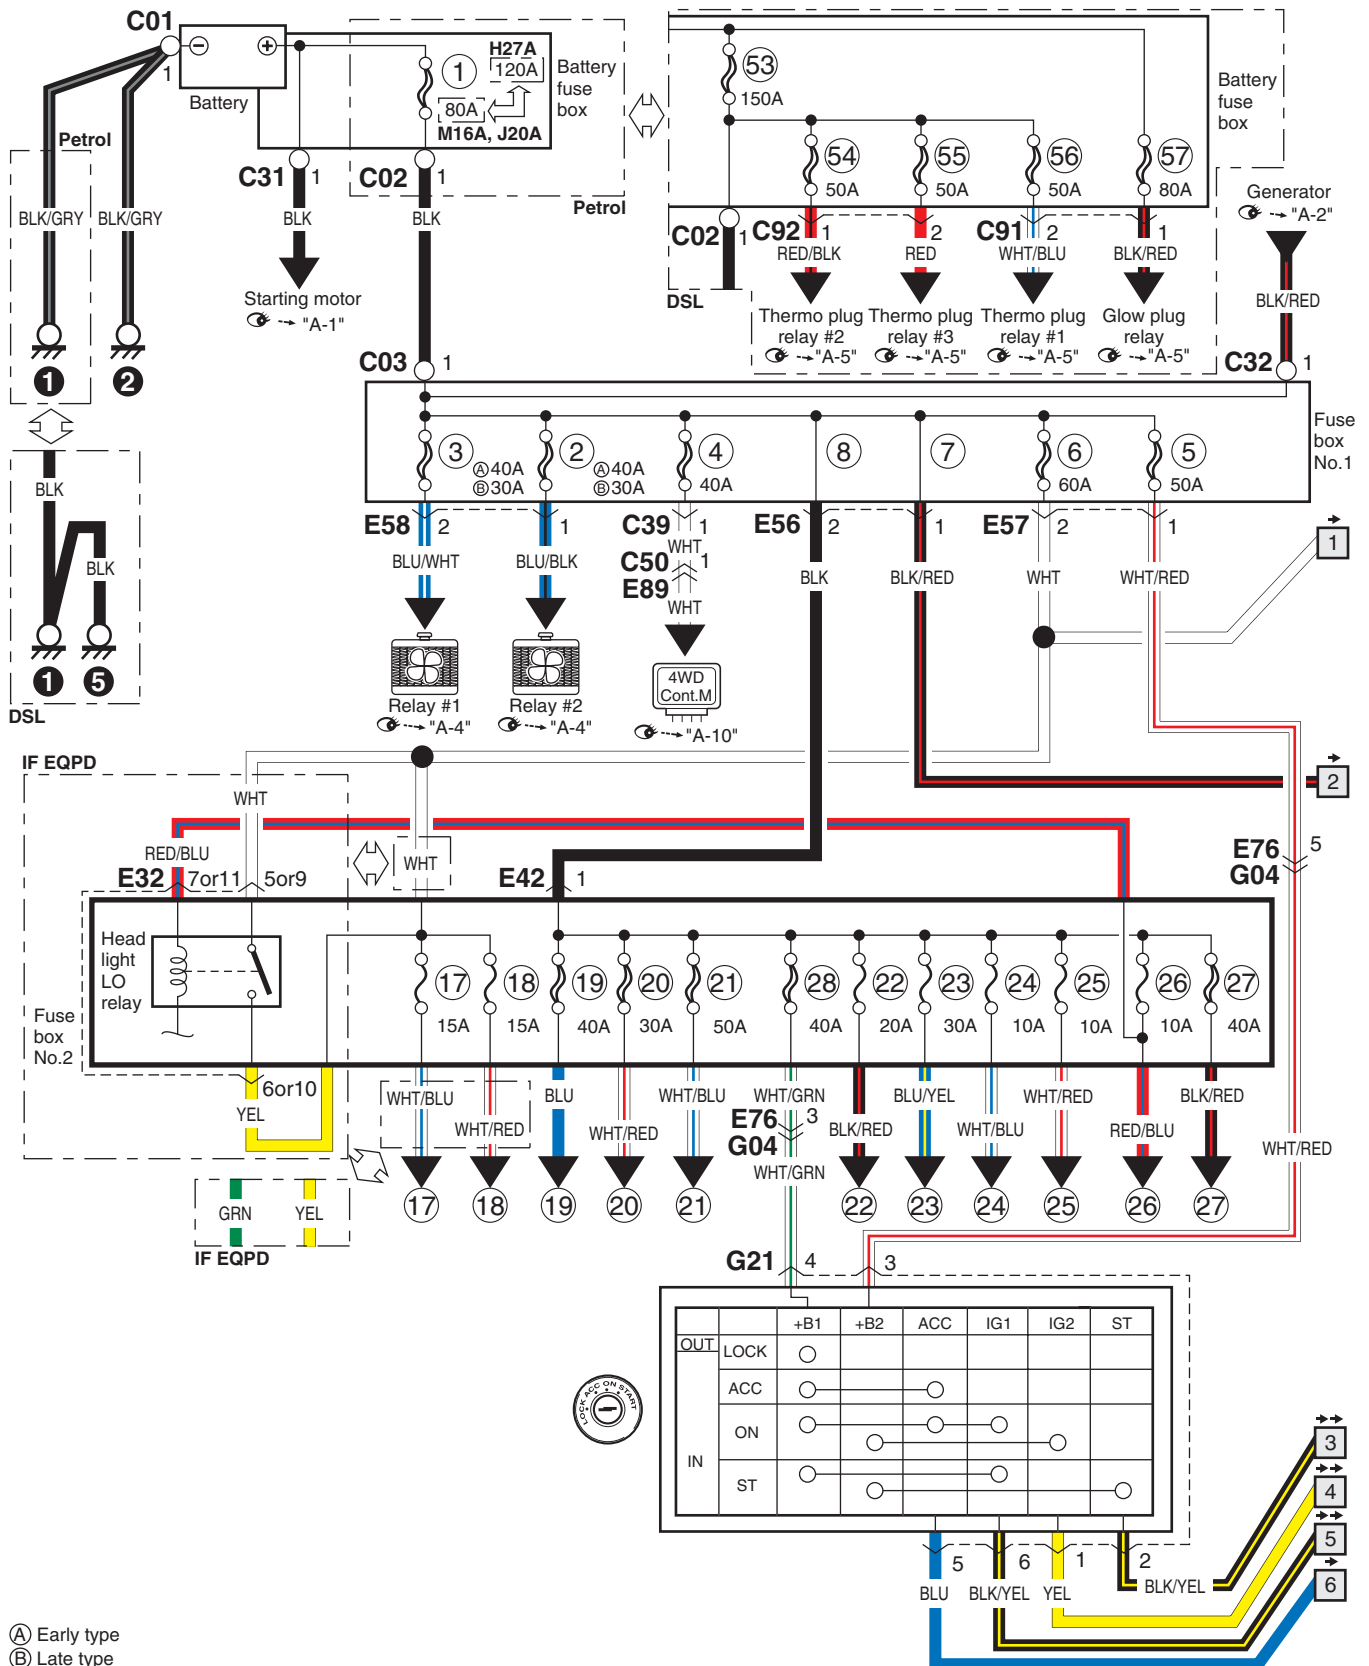

I5JB0B910919-05

9A-58 Wiring Systems:

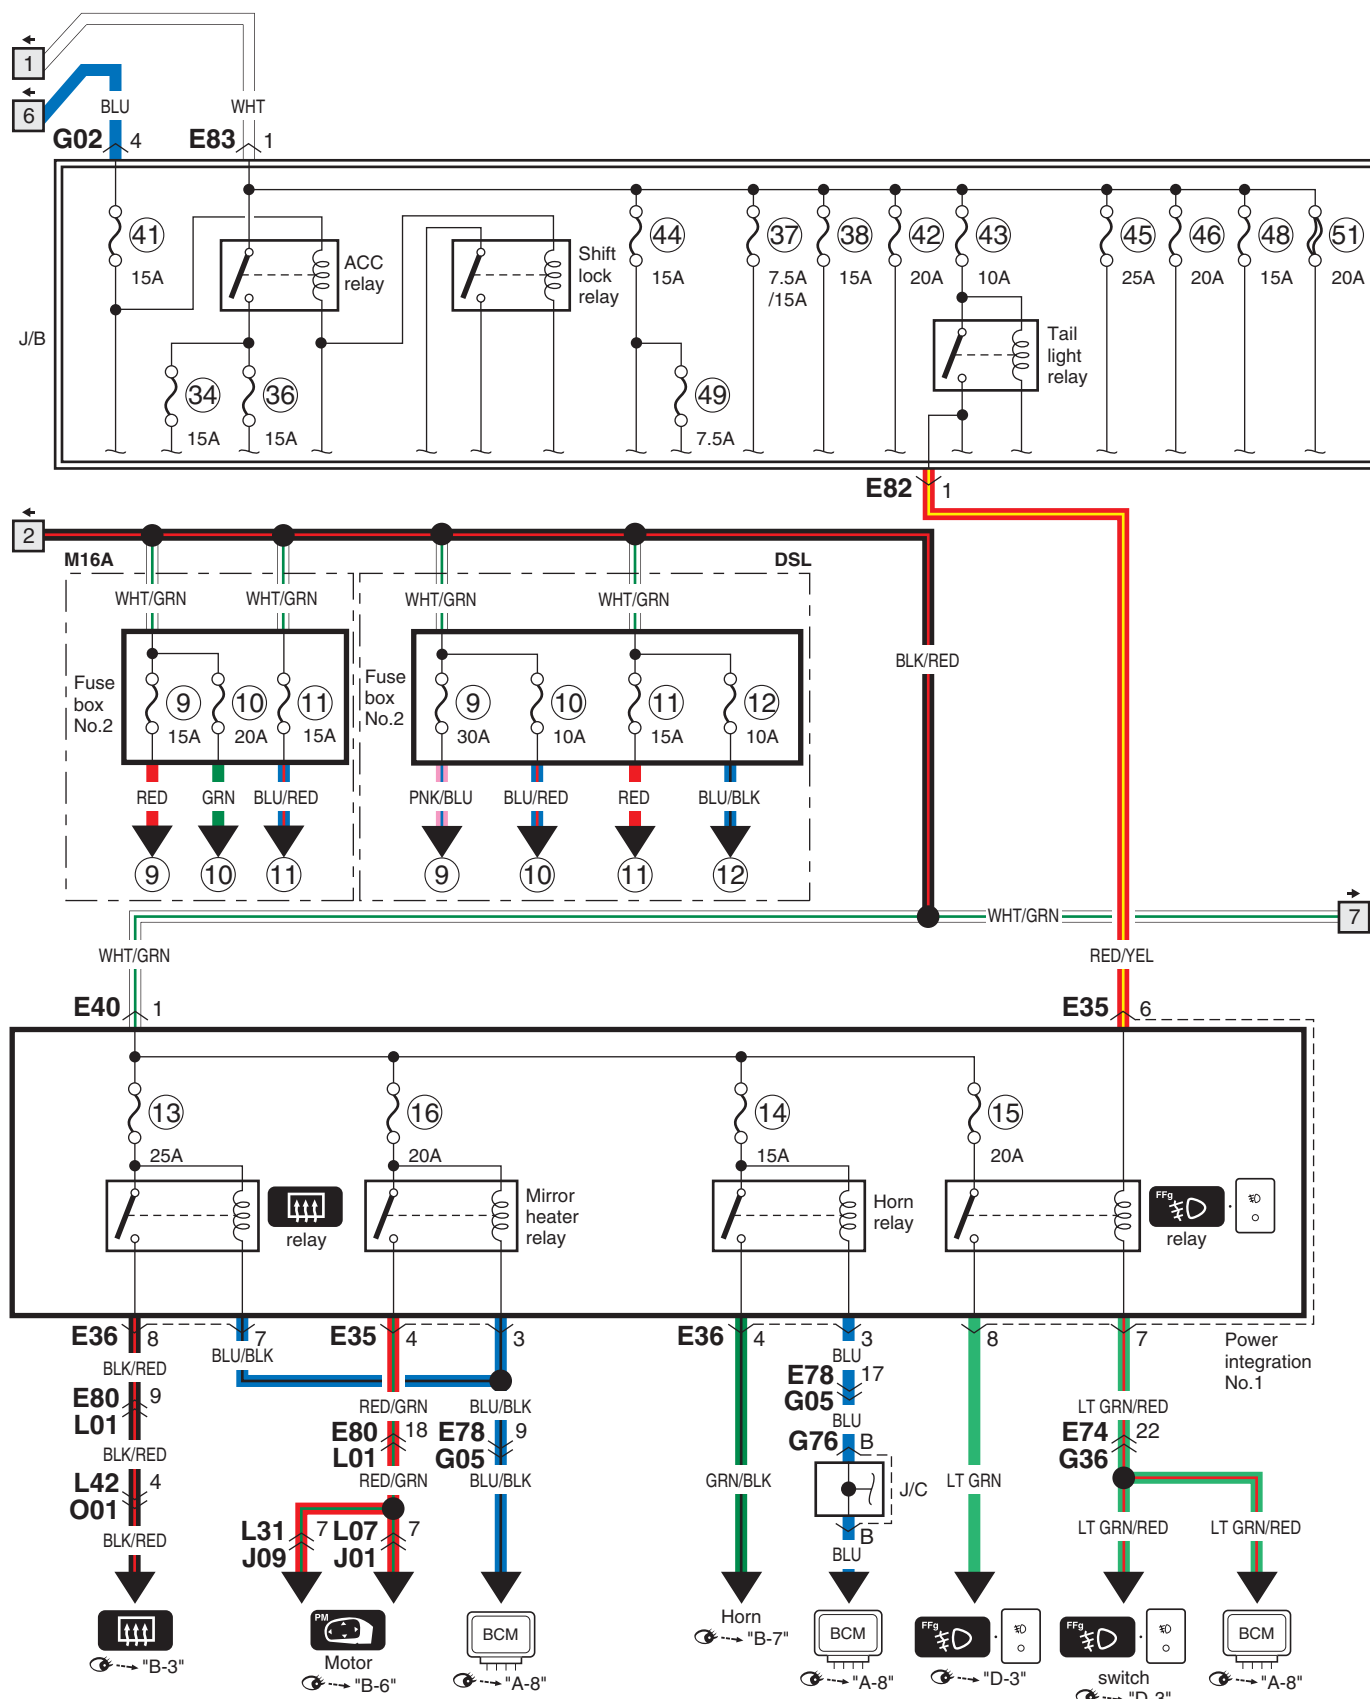




Fuses and the Protected Parts

S6JB0B910D002

The chart below describes what parts each fuse protects.

Fuses in Battery Fuse Box, Fuse Box No.1 (Petrol)

S6JB0B910D003

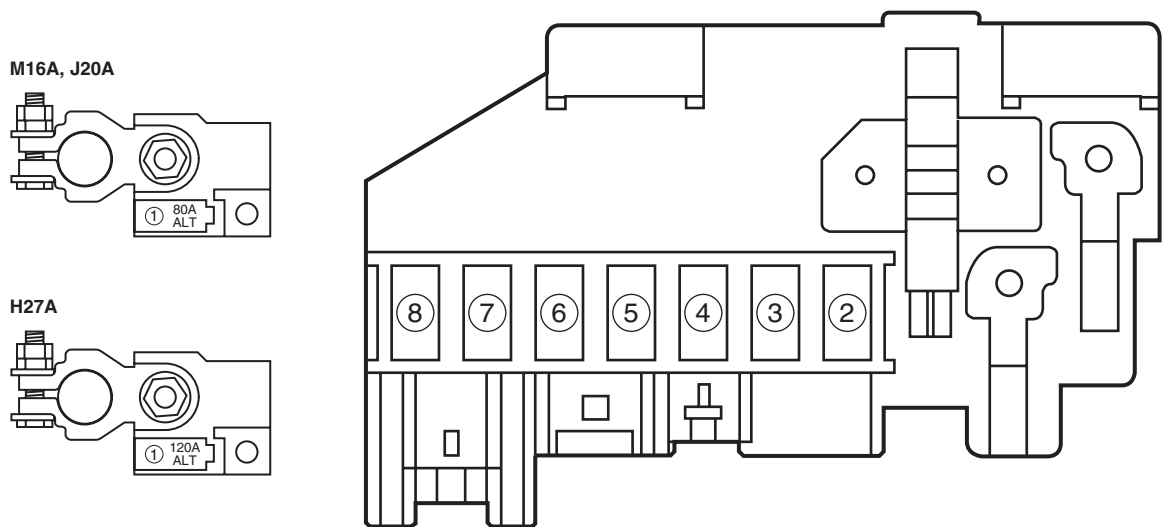


I5JB0B910922-01

No.	Fuse	Protected circuit
①	80 A (M16A, J20A) 120 A (H27A)	All electric circuit
		Battery
		Fuse box No.1
②	40 A (Early) or 30 A (Late)	Radiator fan relay #2
③	40 A (Early) or 30 A (Late)	Radiator fan relay #1
④	40 A	4WD control module
⑤	50 A	IG switch
⑥	60 A	Fuse box No.2
		Headlight LO relay
		J/B
⑦	NO FUSE	Power integration No.1
		Power integration No.2
		Fuse box No.2
⑧	NO FUSE	Fuse box No.2

Fuses in Battery Fuse Box, Fuse Box No.1 (DSL)

S6JB0B910D009

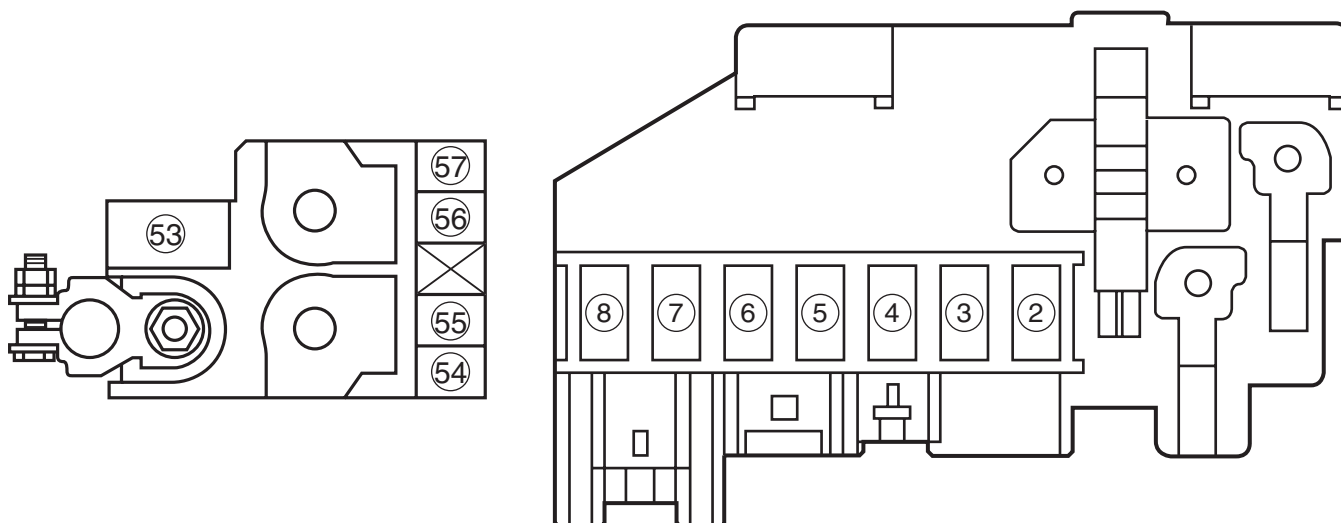


I5JB0B910923-01

No.	Fuse	Protected circuit
②	40 A (Early) or 30 A (Late)	Radiator fan relay #2
③	40 A (Early) or 30 A (Late)	Radiator fan relay #1
④	40 A	4WD control module
⑤	50 A	IG switch
⑥	60 A	Fuse box No.2
		Headlight LO relay
		J/B
⑦	NO FUSE	Power integration No.1
		Power integration No.2
		Fuse box No.2
⑧	NO FUSE	Fuse box No.2
		All electric circuit
		Battery
⑤③	150 A	Fuse box No.1
⑤④	50 A	Thermo plug relay #2
⑤⑤	50 A	Thermo plug relay #3
⑤⑥	50 A	Thermo plug relay #1
⑤⑦	80 A	Glow plug relay

Fuse Box No.2 (In Power Integration No.1, Power Integration No.2), Relay Box (Petrol)

S6JB0B910D004

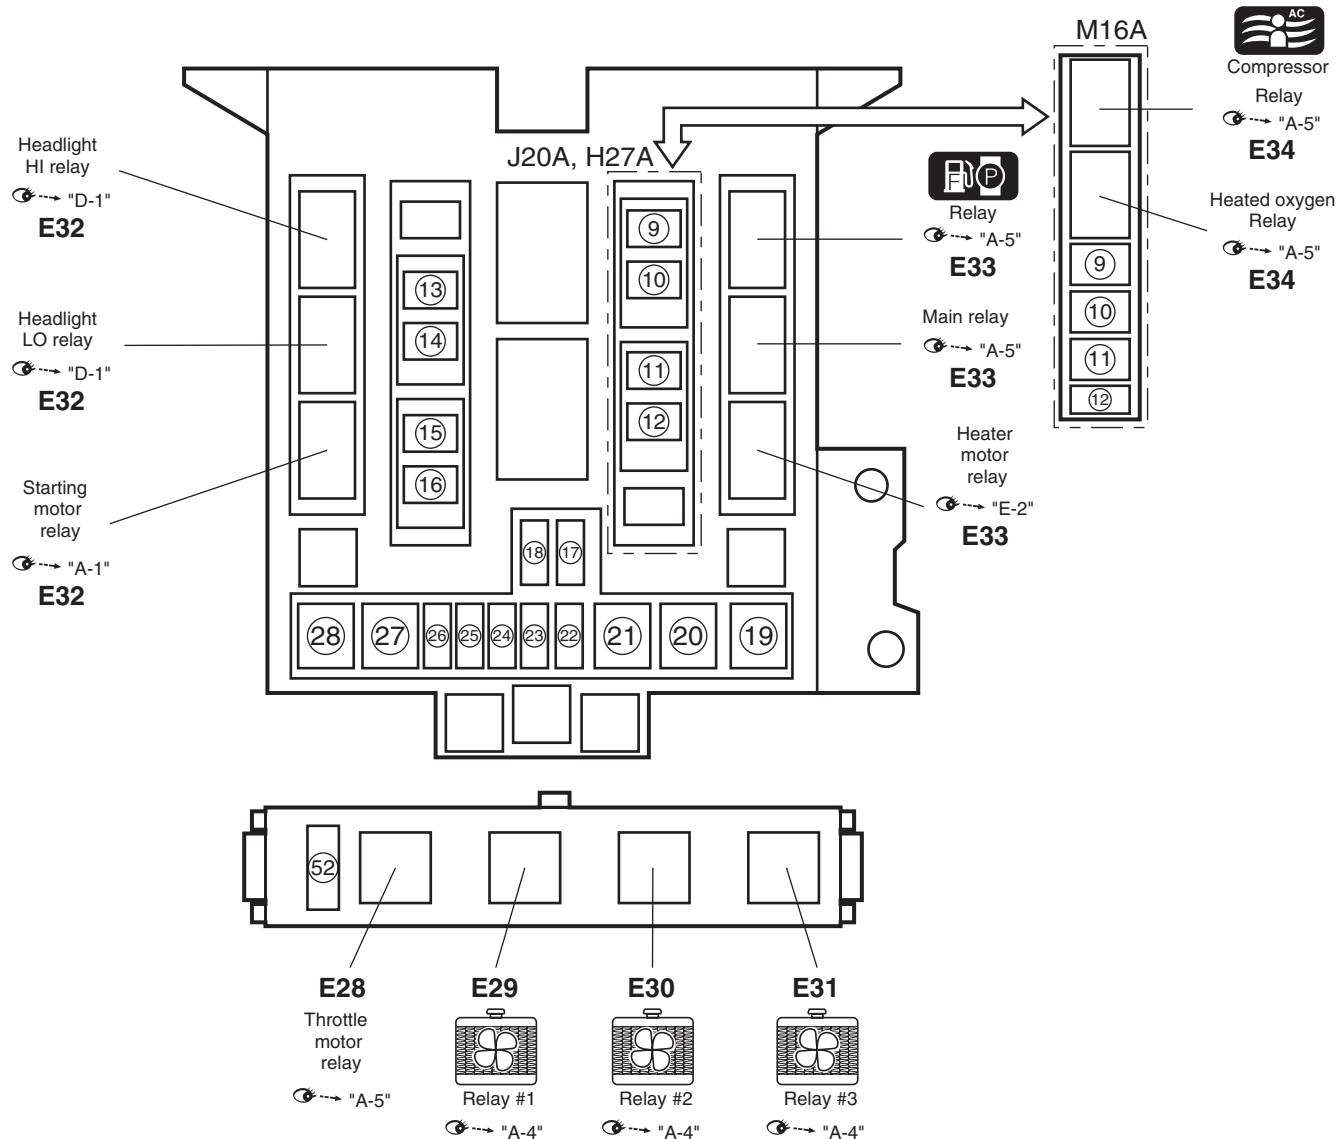


I5JB0B910924-03

No.	Fuse	Description on the cover	Protected circuit
⑨	15 A	CPRSR	A/C compressor relay
⑩	20 A	O2 HTR	Heated oxygen relay
⑪	15 A	THR MOT	Throttle motor relay
⑫	20 A	AT	A/T relay
⑬	25 A	RR DEF	Rear defogger relay
⑭	15 A	HORN	Horn relay
⑮	20 A	FR FOG	Front fog light relay
⑯	20 A	MRR HTR	Mirror heater relay
⑰	15 A	H/L LO L	Headlight LO (L)
			Headlight LO relay
			Headlight HID (L)
⑱	15 A	H/L LO R	Headlight LO (R)
			Headlight LO relay
			Headlight HID (R)
⑲	40 A	FR BLW	Heater motor relay
⑳	30 A	ABS2	ABS control module
			ESP® control module
㉑	50 A	ABS1	ABS control module
			ESP® control module
㉒	20 A	FI	Main relay
㉓	30 A	H/L CLNR	HLC motor
㉔	10 A	H/L L	Headlight (L)
			Headlight HI (L)
㉕	10 A	H/L R	Headlight (R)
			Headlight HI (R)
㉖	10 A	H/L	Headlight HI relay
			Headlight LO relay
㉗	40 A	ST	Starting motor relay
㉘	40 A	IGN	IG switch
㉙	15 A	DI	BLANK

Fuse Box No.2 (In Power Integration No.1, Power Integration No.2), Relay Box No.1, Relay Box No.2 (DSL)

S6JB0B910D010

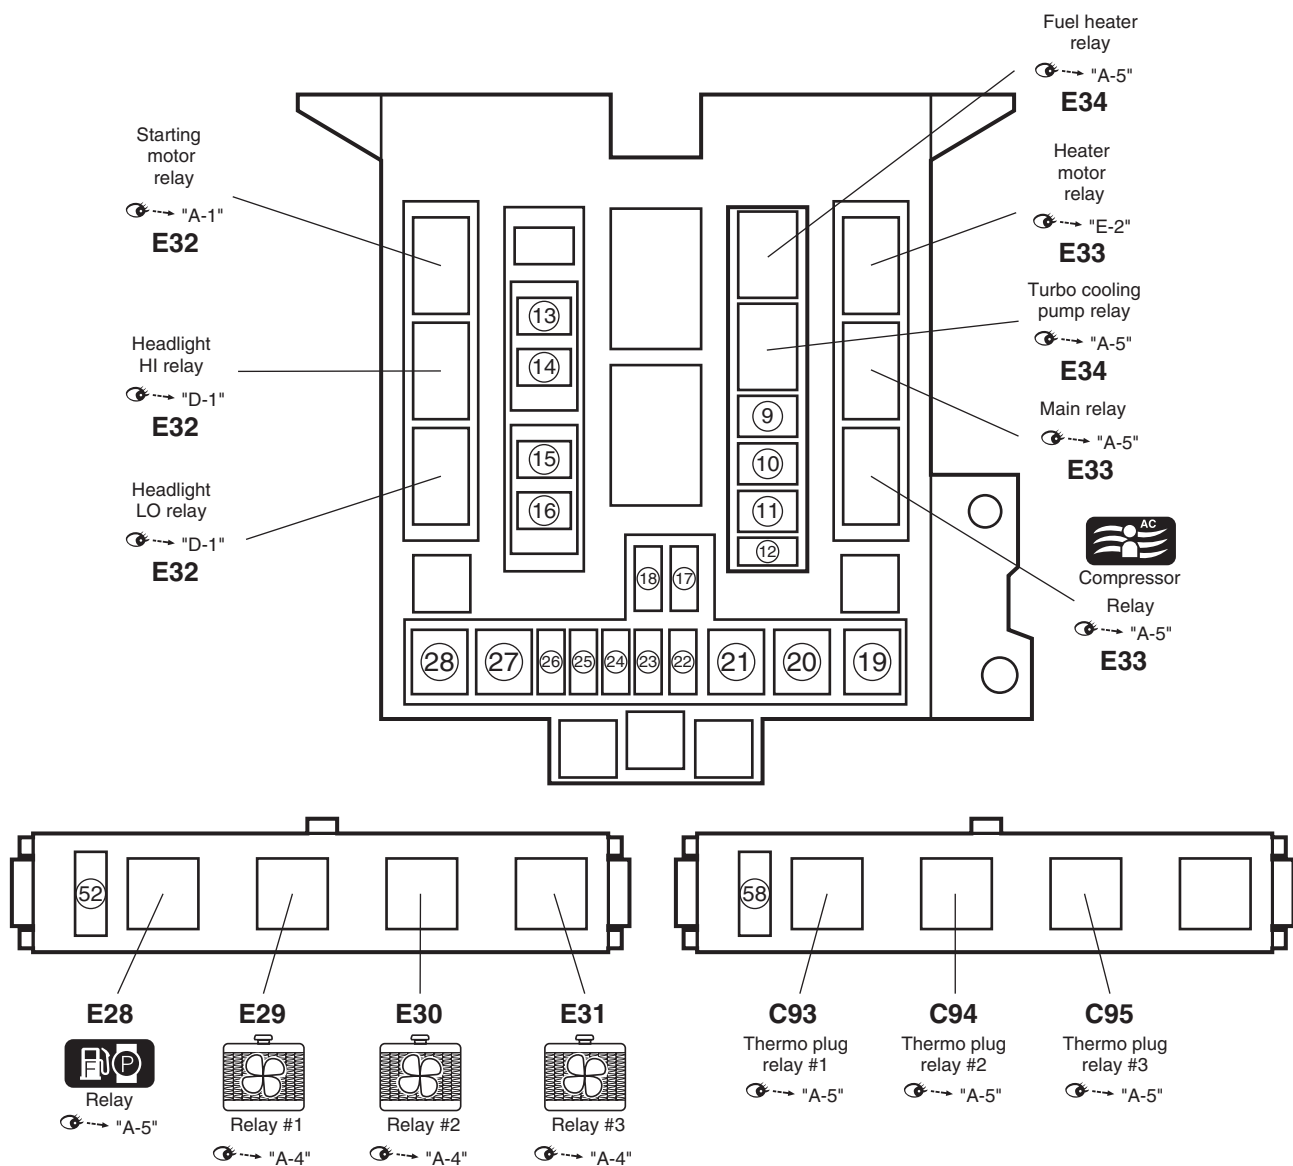


I5JB0B910925-01

No.	Fuse	Description on the cover	Protected circuit
⑨	30 A	F/HTR	Fuel heater relay
⑩	10 A	T/C P	Turbo cooling pump relay
⑪	15 A	A/C	A/C compressor relay
⑫	10 A	F/P	Fuel pump relay
⑬	25 A	RR DEF	Rear defogger relay
⑭	15 A	HORN	Horn relay
⑮	20 A	FR FOG	Front fog light relay
⑯	20 A	MRR HTR	Mirror heater relay
⑰	15 A	H/L LO L	Headlight LO (L)
			Headlight LO relay
			Headlight HID (L)
⑱	15 A	H/L LO R	Headlight LO (R)
			Headlight LO relay
			Headlight HID (R)
⑲	40 A	FR BLW	Heater motor relay
⑳	30 A	ABS2	ABS control module
			ESP® control module
㉑	50 A	ABS1	ABS control module
			ESP® control module
㉒	30 A	FI	Main relay
㉓	30 A	H/L CLNR	HLC motor
㉔	10 A	H/L L	Headlight (L)
			Headlight HI (L)
㉕	10 A	H/L R	Headlight (R)
			Headlight HI (R)
㉖	10 A	H/L	Headlight HI relay
			Headlight LO relay
㉗	40 A	ST	Starting motor relay
㉘	40 A	IGN	IG switch
㉙	15 A	DI	BLANK
㉚	BLANK	BLANK	BLANK

Fuse Box No.3 (In J/B)

S6JB0B910D005

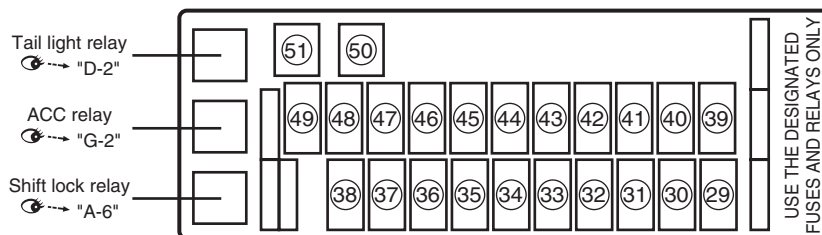

ISJB0A910926-02


No.	Fuse	Description on the cover	Protected circuit
29	15 A	A/B	A/B SDM
30	10 A	ABS/ESP®	ABS control module ESP® control module Steering angle sensor
31	10 A	BACK	KLS ECM Back-up light switch Transmission range sensor Headlight beam leveling switch Headlight beam leveling actuator (L) Headlight beam leveling actuator (R) Auto leveling control module
32	15 A	IG2 SIG	Radiator fan relay #1 Radiator fan relay #2 Radiator fan relay #3 A/C compressor relay Seat heater switch (Driver side) Seat heater switch (Passenger side) Sliding roof unit Heater motor relay
33	20 A	WIP	COMB switch Windshield washer motor Windshield wiper motor Rear washer motor Rear wiper motor Rear wiper relay HLC control module
34	15 A	ACC2	Cigar lighter (ACC Socket #3)
35	10 A	CRUISE	Brake light switch Steering switch
36	15 A	ACC3	ACC socket #1 ACC socket #2
37	7.5 A/15 A	RR FOG/RADIO	COMB switch (Rear fog light)
38	15 A	STOP	Brake light switch
39	20 A	IG COIL	Generator IG coil #1 IG coil #2 IG coil #3 IG coil #4 IG coil #5 IG coil #6 Noise filter ECM Fuel pump relay Heated oxygen relay A/T relay ICM 4WD control module

No.	Fuse	Description on the cover	Protected circuit
④①	10 A	METER	BCM
			COMB meter
			Turn signal relay
			Auto A/C unit
④②	15 A	ACC	ACC relay
			BCM
			Power mirror switch
			KLS ECM
			Audio
			Multi information display
④③	10 A	TAIL	Sub woofer relay
			BCM
④④	15 A	DOME	Tail light relay
			Audio
			Auto A/C unit
			ECM
			DLC
			TCM
			BCM
			Main switch
			KLS ECM
			Multi information display
			COMB meter
			Interior light
			Rear interior light
			Console light
			Luggage compartment light
			Curtain light (Driver side)
			Curtain light (Passenger side)
			Steering angle sensor
④⑤	25 A	S/R	Sliding roof unit
④⑥	20 A	RR BLW	BLANK
④⑦	7.5 A	ST SIG	Starting motor relay
④⑧	15 A	HAZ	Turn signal relay
④⑨	7.5 A	VANITY	Vanity light (Driver side)
			Vanity light (passenger side)
⑤①	30 A	P/W	Front power window main switch
			Front power window sub switch
			Rear power window sub switch (R)
			Rear power window sub switch (L)
⑤②	20 A	P/W T	BLANK

Junction Block (J/B) Connector / Fuse Layout

S6JB0B910D006

Fuse side

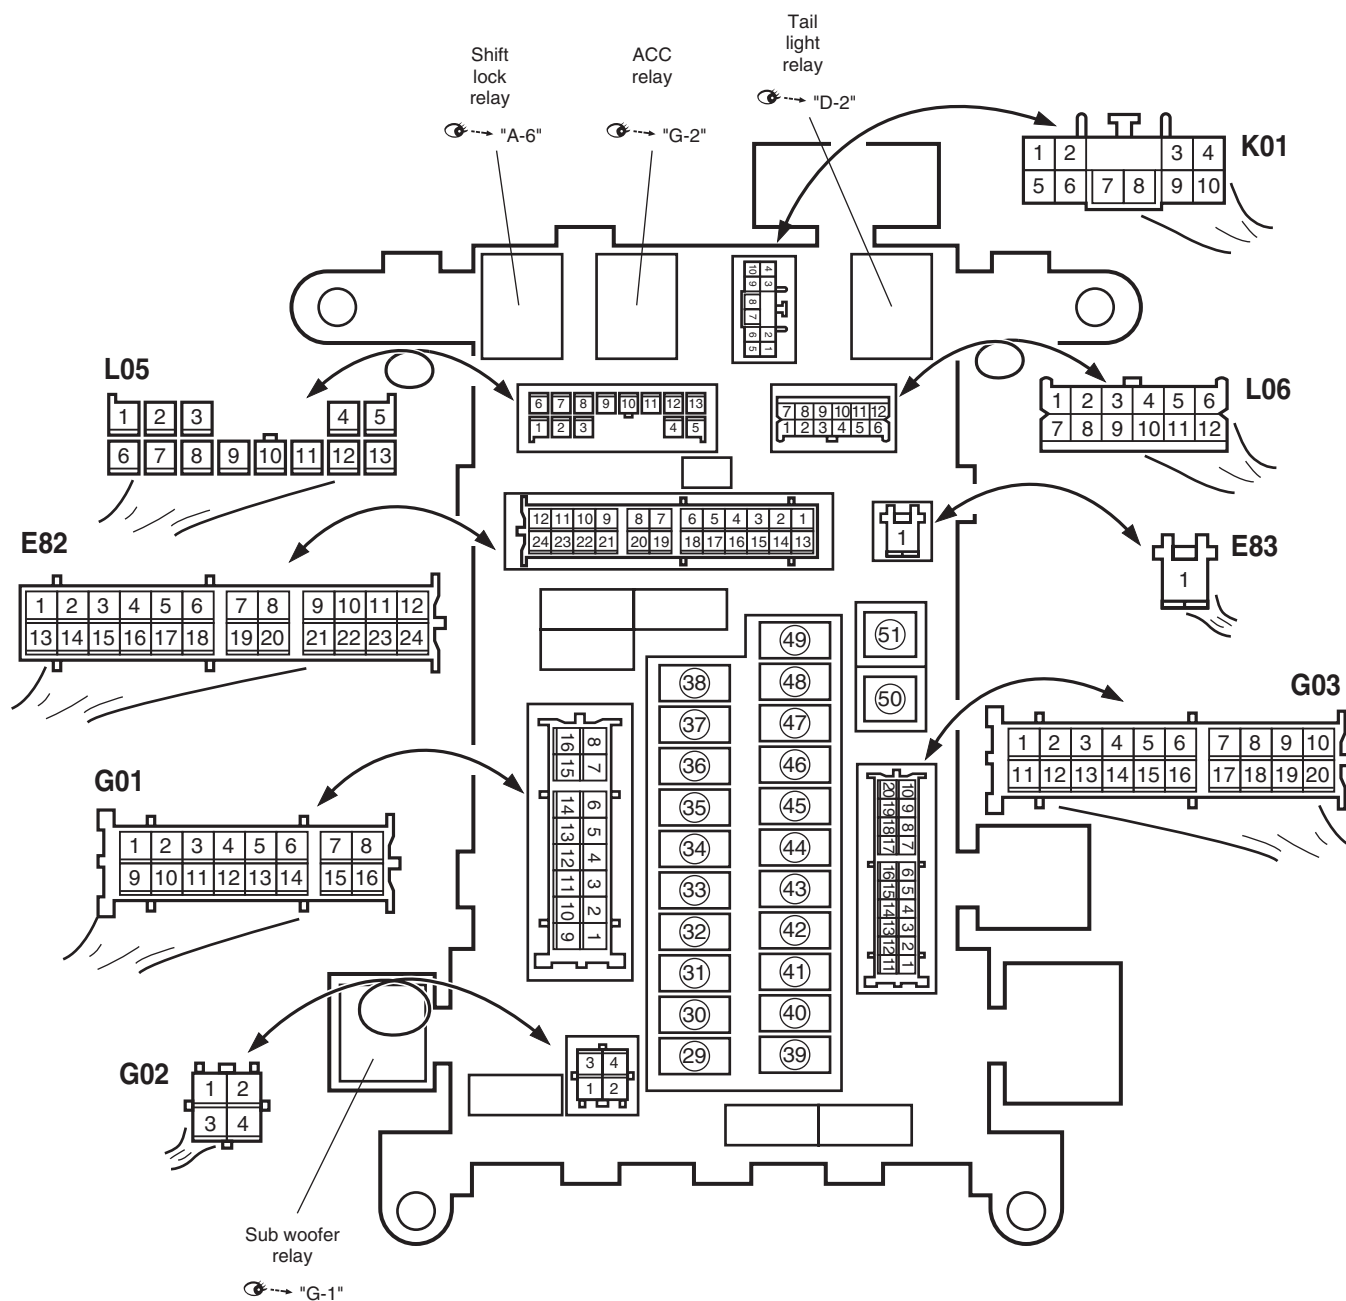

15JB0B910926-01


Junction Block Inner Circuit (Overview)

S6JB0B910D007

Abbreviations


Abbreviation	Full term	Abbreviation	Full term
AS	Assistant (Front passenger)	LP	Lamp
CTR	Center	O/H	Over head
DR	Driver	R/B	Relay box
F-L	Front L	R-L	Rear L
F-R	Front R	R-R	Rear R
FR	Front	RR	Rear
INP	Instrument panel	S/H	Seat heater
LEV	(Head light) leveling		

*: Not used

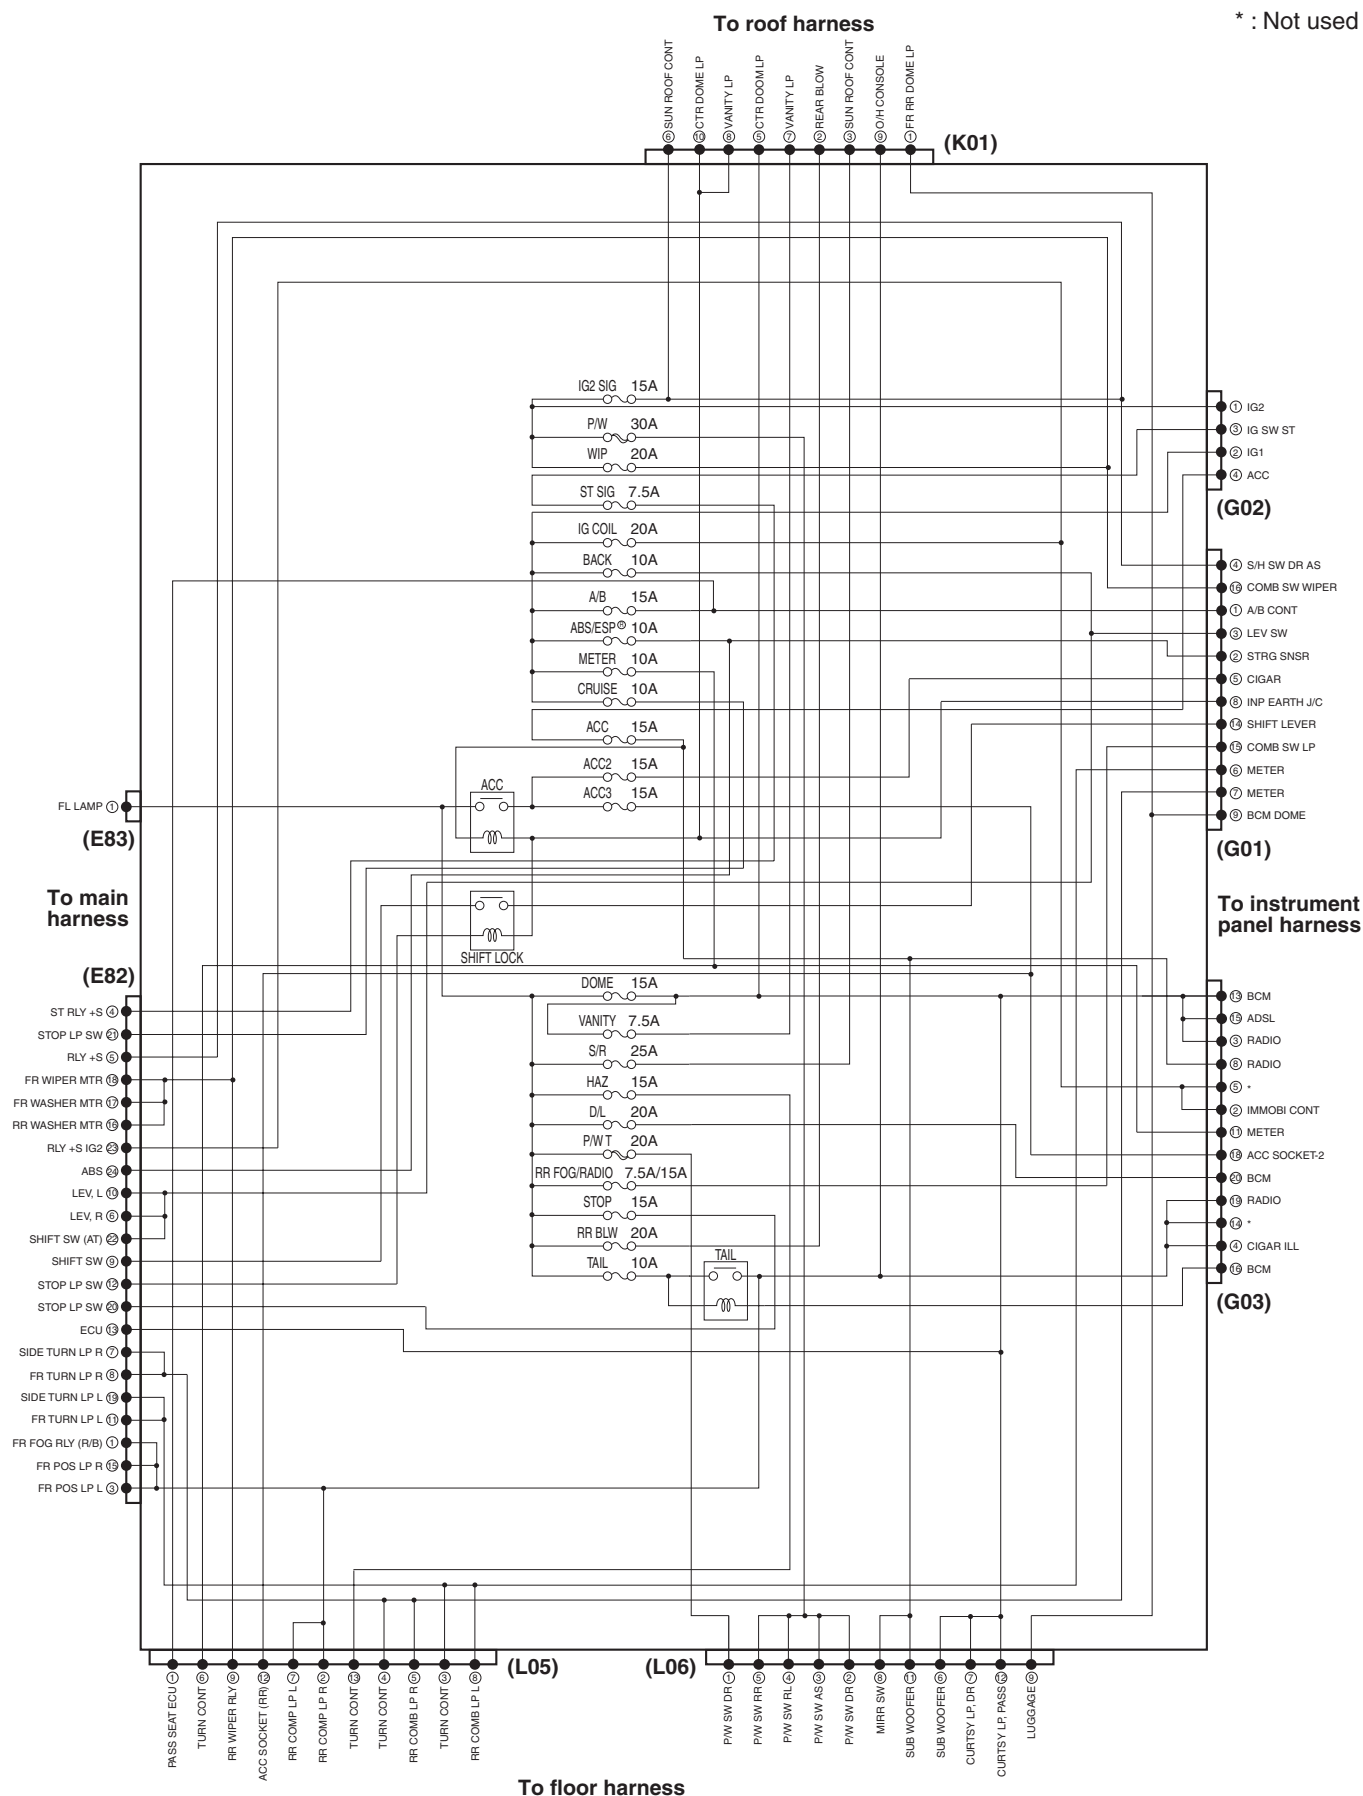



Junction Block Inner Circuit (Detail)

S6JB0B910D008

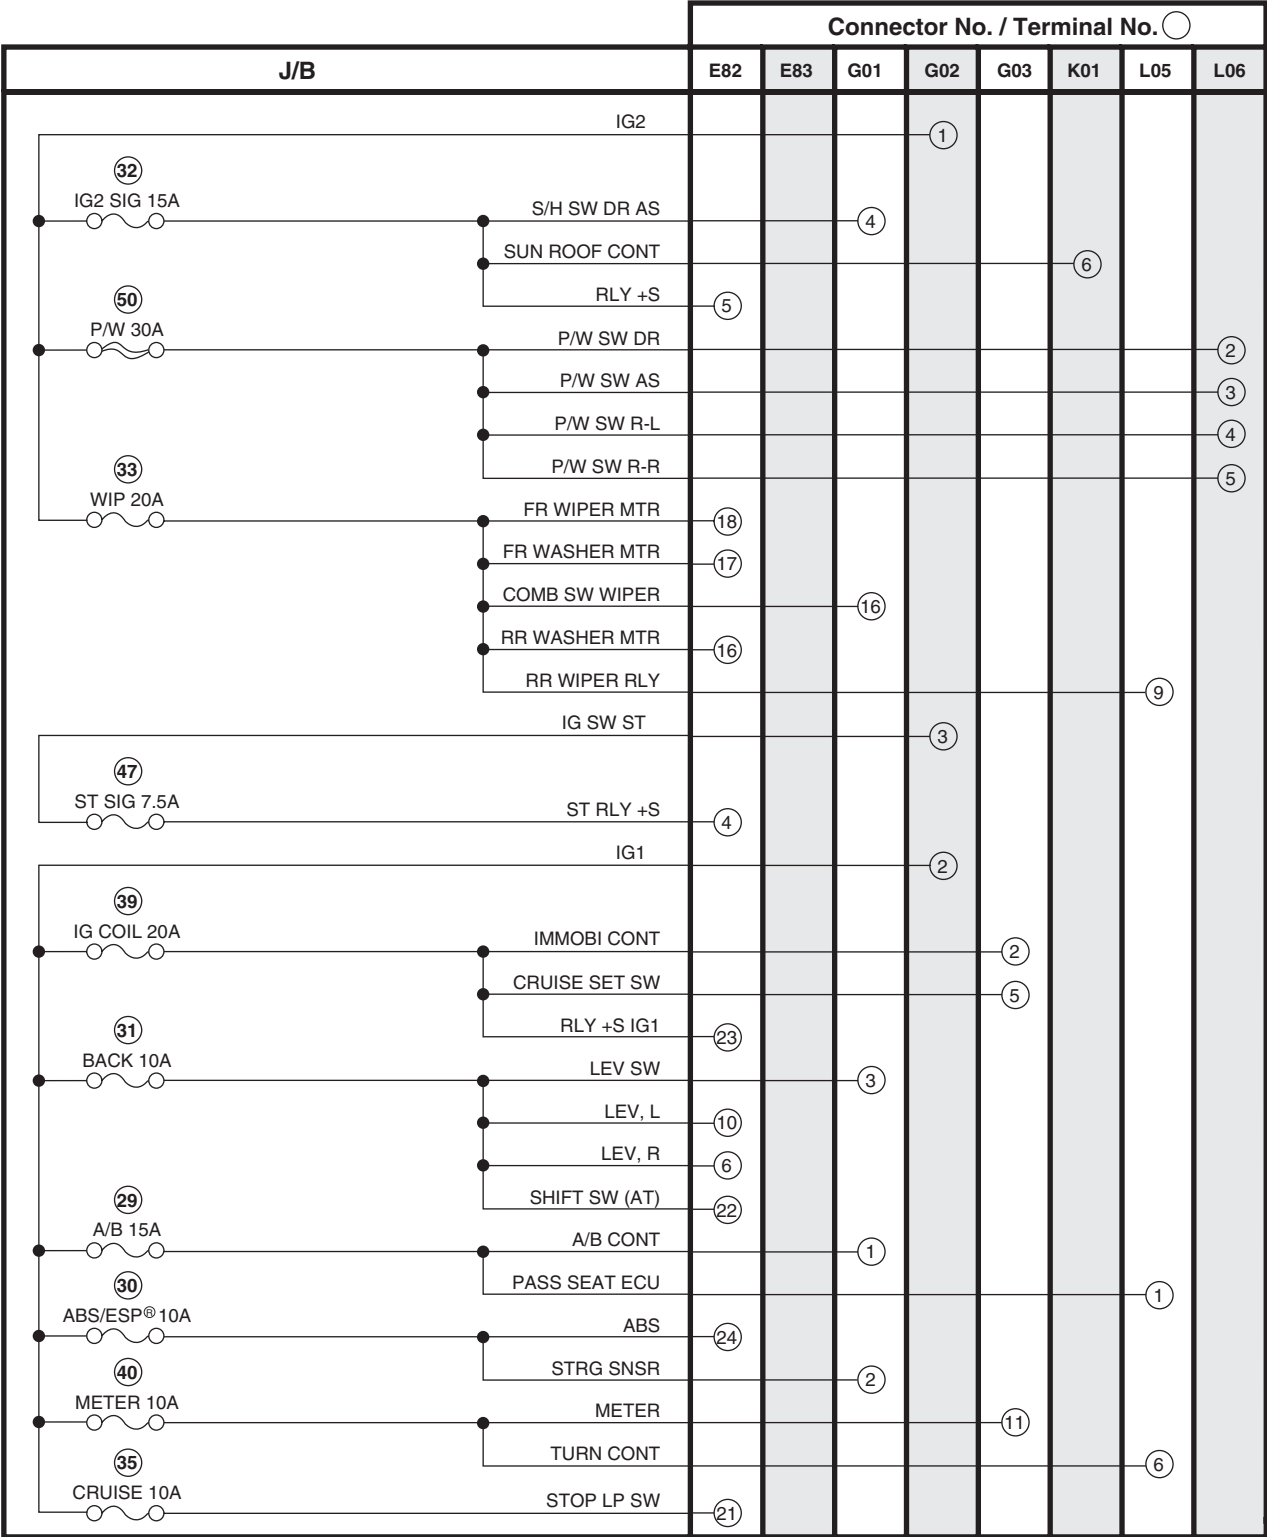



(Continued)

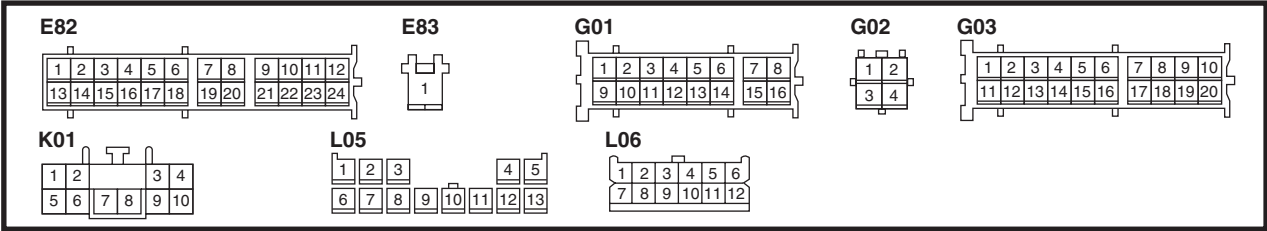

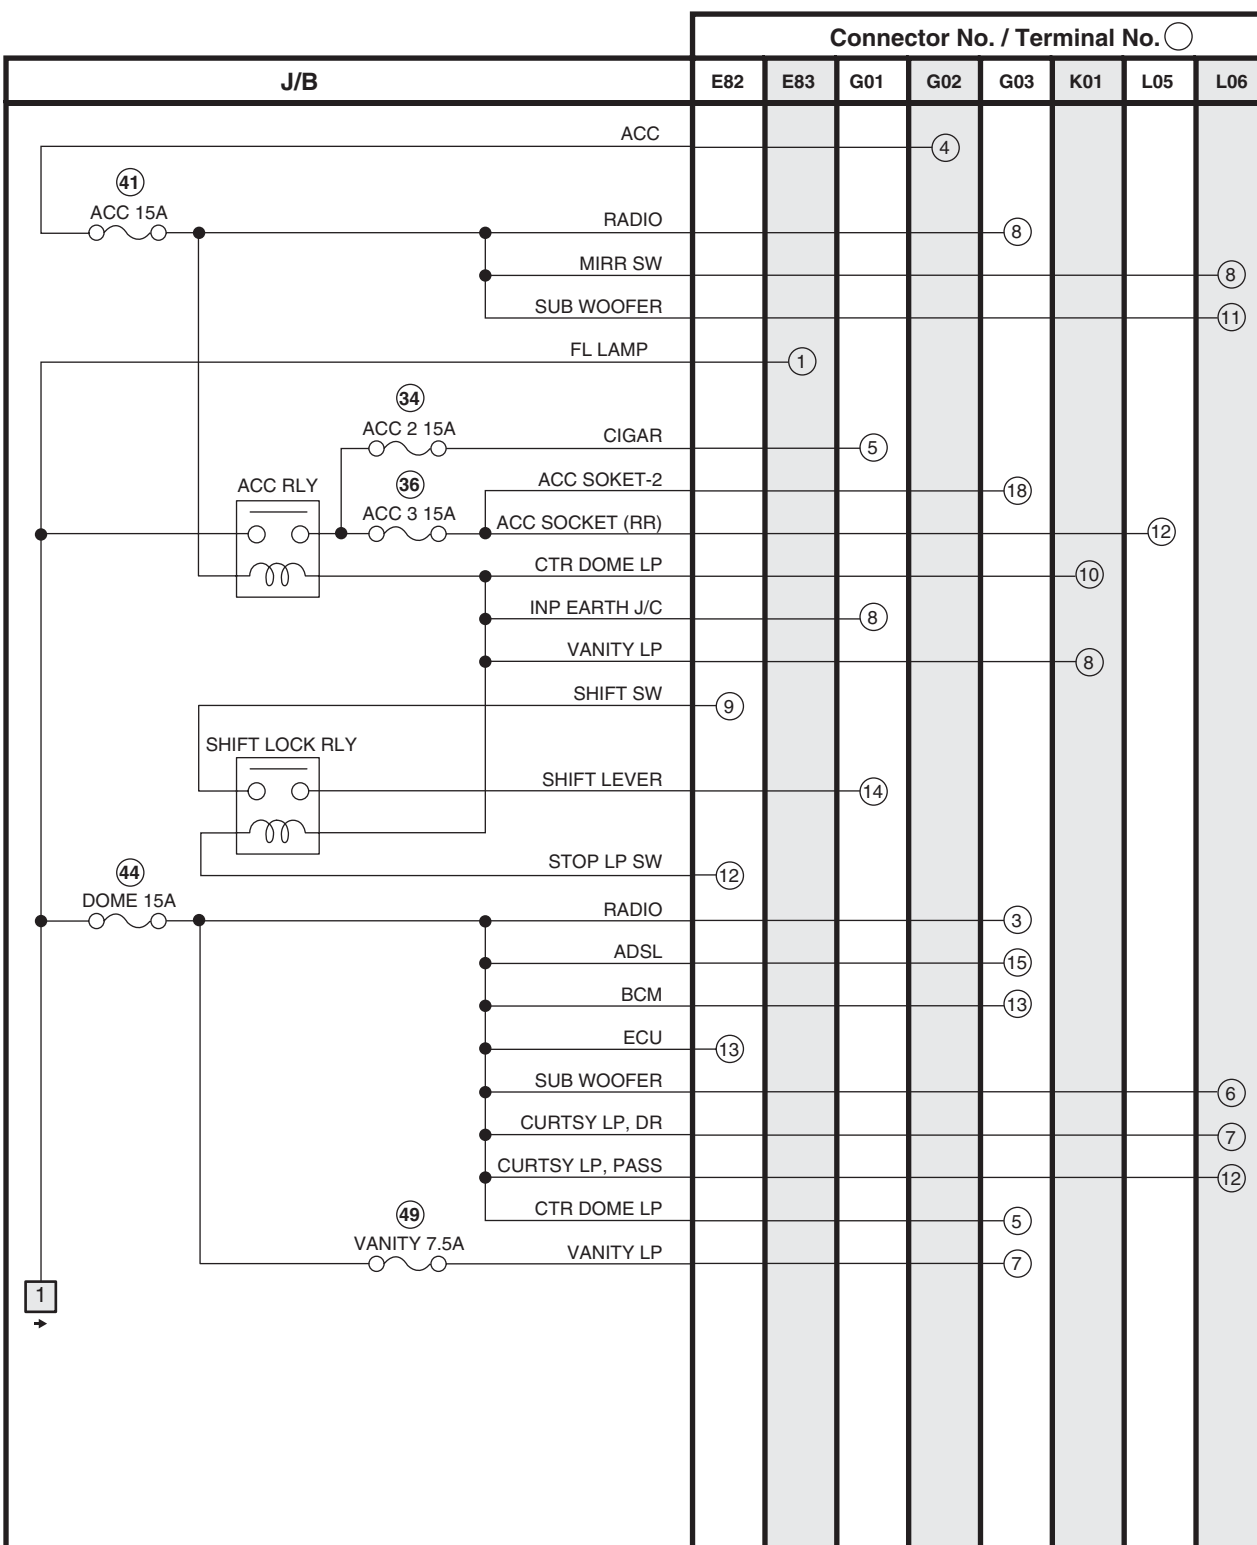



(Continued)

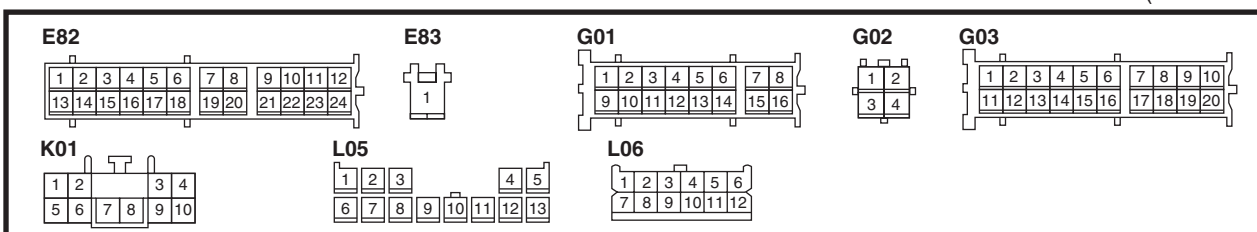


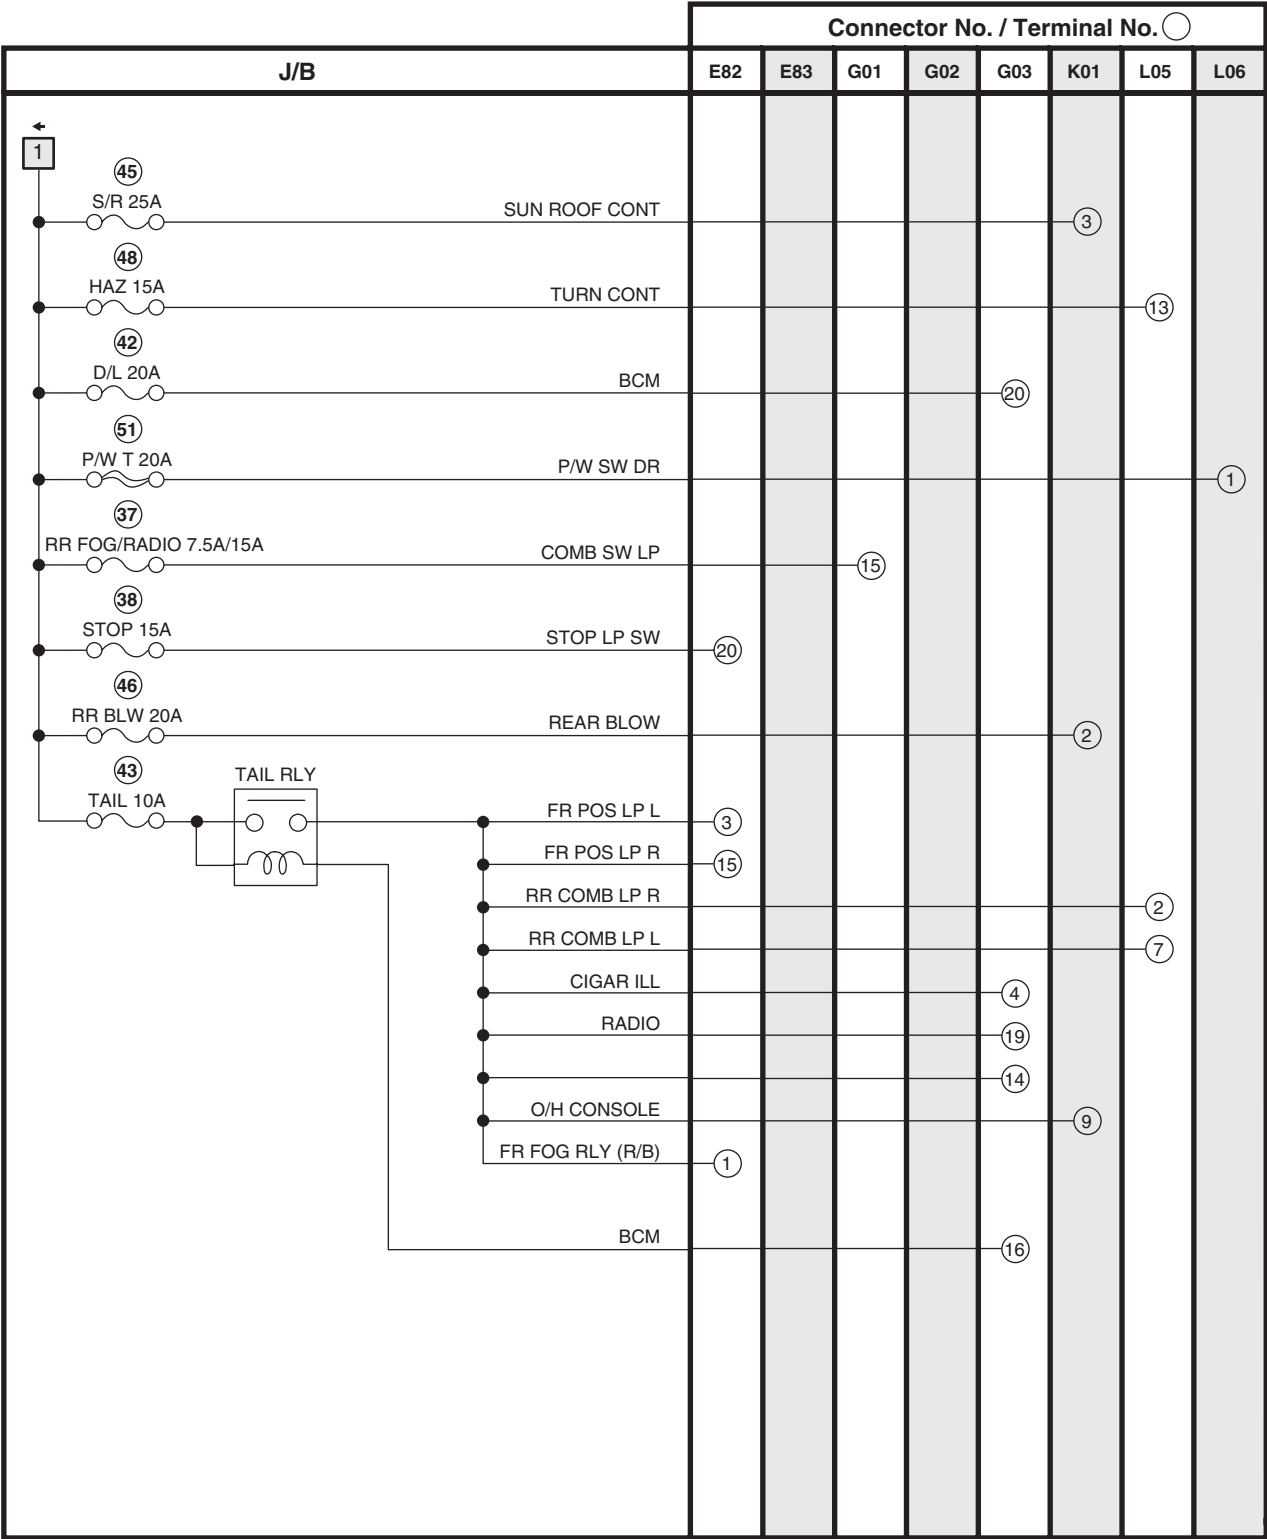

(Continued)

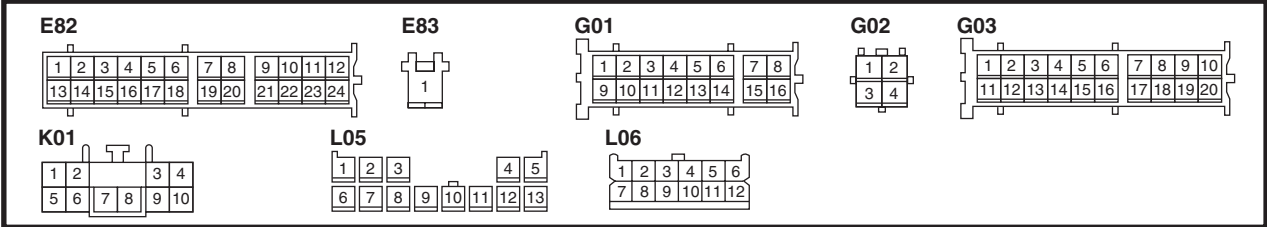

J/B		Connector No. / Terminal No. 							
		E82	E83	G01	G02	G03	K01	L05	L06
	BCM DOME			⑨					
	FR RR DOME LP						①		
	LUGGAGE								⑨
	TURN CONT							③	
	RR COMB LP L							⑧	
	FR TURN LP L	⑪							
	SIDE TURN LP L	⑲							
	METER			⑥					
	TURN CONT							④	
	FR TURN LP R	⑧							
	SIDE TURN LP R	⑦							
	METER			⑦					
	RR COMB LP R							⑤	

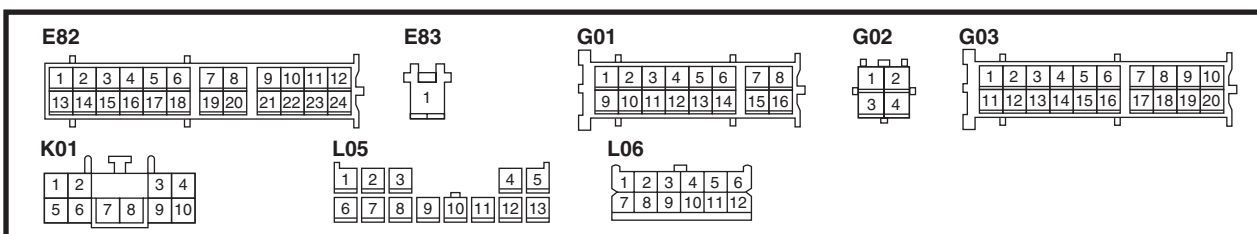

System Circuit Diagram

System Circuit Diagram

S6JB0B910E001


Refer to "A-1 Cranking System Circuit Diagram".
Refer to "A-2 Charging System Circuit Diagram".
Refer to "A-3 Ignition System Circuit Diagram (M16A)".
Refer to "A-3 Ignition System Circuit Diagram (J20A)".
Refer to "A-3 Ignition System Circuit Diagram (H27A)".
Refer to "A-4 Cooling System Circuit Diagram (Petrol)".
Refer to "A-4 Cooling System Circuit Diagram (DSL)".
Refer to "A-5 Engine and A/C Control System Circuit Diagram (M16A)".
Refer to "A-5 Engine and A/C Control System Circuit Diagram (J20A)".
Refer to "A-5 Engine and A/C Control System Circuit Diagram (H27A)".
Refer to "A-5 Engine and A/C Control System Circuit Diagram (DSL)".
Refer to "A-6 A/T Control System Circuit Diagram".
Refer to "A-7 Immobilizer System Circuit Diagram".
Refer to "A-8 Body Control System Circuit Diagram".
Refer to "A-10 4WD Control System Circuit Diagram".
Refer to "B-1 Windshield Wiper and Washer Circuit Diagram".
Refer to "B-2 Rear Wiper and Washer Circuit Diagram".
Refer to "B-3 Rear Defogger Circuit Diagram".
Refer to "B-4 Power Window Circuit Diagram".
Refer to "B-5 Power Door Lock Circuit Diagram".
Refer to "B-6 Power Mirror Circuit Diagram".
Refer to "B-7 Horn Circuit Diagram".
Refer to "B-8 Seat Heater Circuit Diagram".
Refer to "B-9 Keyless Start System Circuit Diagram".
Refer to "B-10 Sliding Roof Circuit Diagram".
Refer to "B-11 Headlight Cleaner Circuit Diagram".
Refer to "C-1 Combination Meter Circuit Diagram".
Refer to "D-1 Headlight System Circuit Diagram (One bulb type)".
Refer to "D-1 Headlight System Circuit Diagram (With Projector light)".
Refer to "D-1 Headlight System Circuit Diagram (With Discharge bulb)".
Refer to "D-2 Position, Tail and Licence Plate Light System Circuit Diagram".
Refer to "D-3 Front Fog Light System Circuit Diagram".
Refer to "D-4 Illumination Light System Circuit Diagram".
Refer to "D-5 Interior Light System Circuit Diagram".
Refer to "D-6 Turn Signal and Hazard Warning Light System Circuit Diagram".
Refer to "D-7 Brake Light System Circuit Diagram".
Refer to "D-8 Back-Up Light System Circuit Diagram".
Refer to "D-9 Headlight Beam Leveling System Circuit Diagram (Manual Leveling)".
Refer to "D-9 Headlight Beam Leveling System Circuit Diagram (Auto Leveling)".
Refer to "D-10 Rear Fog Light Circuit Diagram".
Refer to "E-2 Auto A/C System Circuit Diagram".
Refer to "F-1 Air-Bag System Circuit Diagram (4ch)".
Refer to "F-1 Air-Bag System Circuit Diagram (8ch)".
Refer to "F-2 Anti-Lock Brake System Circuit Diagram".
Refer to "F-3 Electronic Stability Program System Circuit Diagram".
Refer to "G-1 Audio System Circuit Diagram".
Refer to "G-2 Multi Information Display / Accessory Socket System Circuit Diagram".
Refer to "G-4 Navigation System Circuit Diagram".

I5JB0B910929-07

The diagram illustrates the electrical system for the starting motor and related components. Key elements include:


- Battery and Fuse Box:** The battery is connected to a fuse box (No. 2) containing a 40A fuse (27) and a 7.5A fuse (47). The battery fuse box also includes a 1A fuse (1).
- Starting Motor Relay:** The relay is controlled by the 7.5A fuse (47) and the 1A fuse (1). It is connected to the starting motor (M) and the battery.
- Transmission Range Sensor:** This sensor is connected to the starting motor relay and the battery.
- ECM (Engine Control Module):** The ECM is connected to the starting motor relay and the battery.
- Weld Splice:** A weld splice is shown on the main power line.
- Other Components:** The diagram also shows a Petrol sensor, a Starting motor, and a Transmission range sensor.

The diagram uses color-coded wires (BLK, YEL, RED, ORN) and terminal numbers (1, 2, 3, 4, 5, 7, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100) to identify the wiring and components.

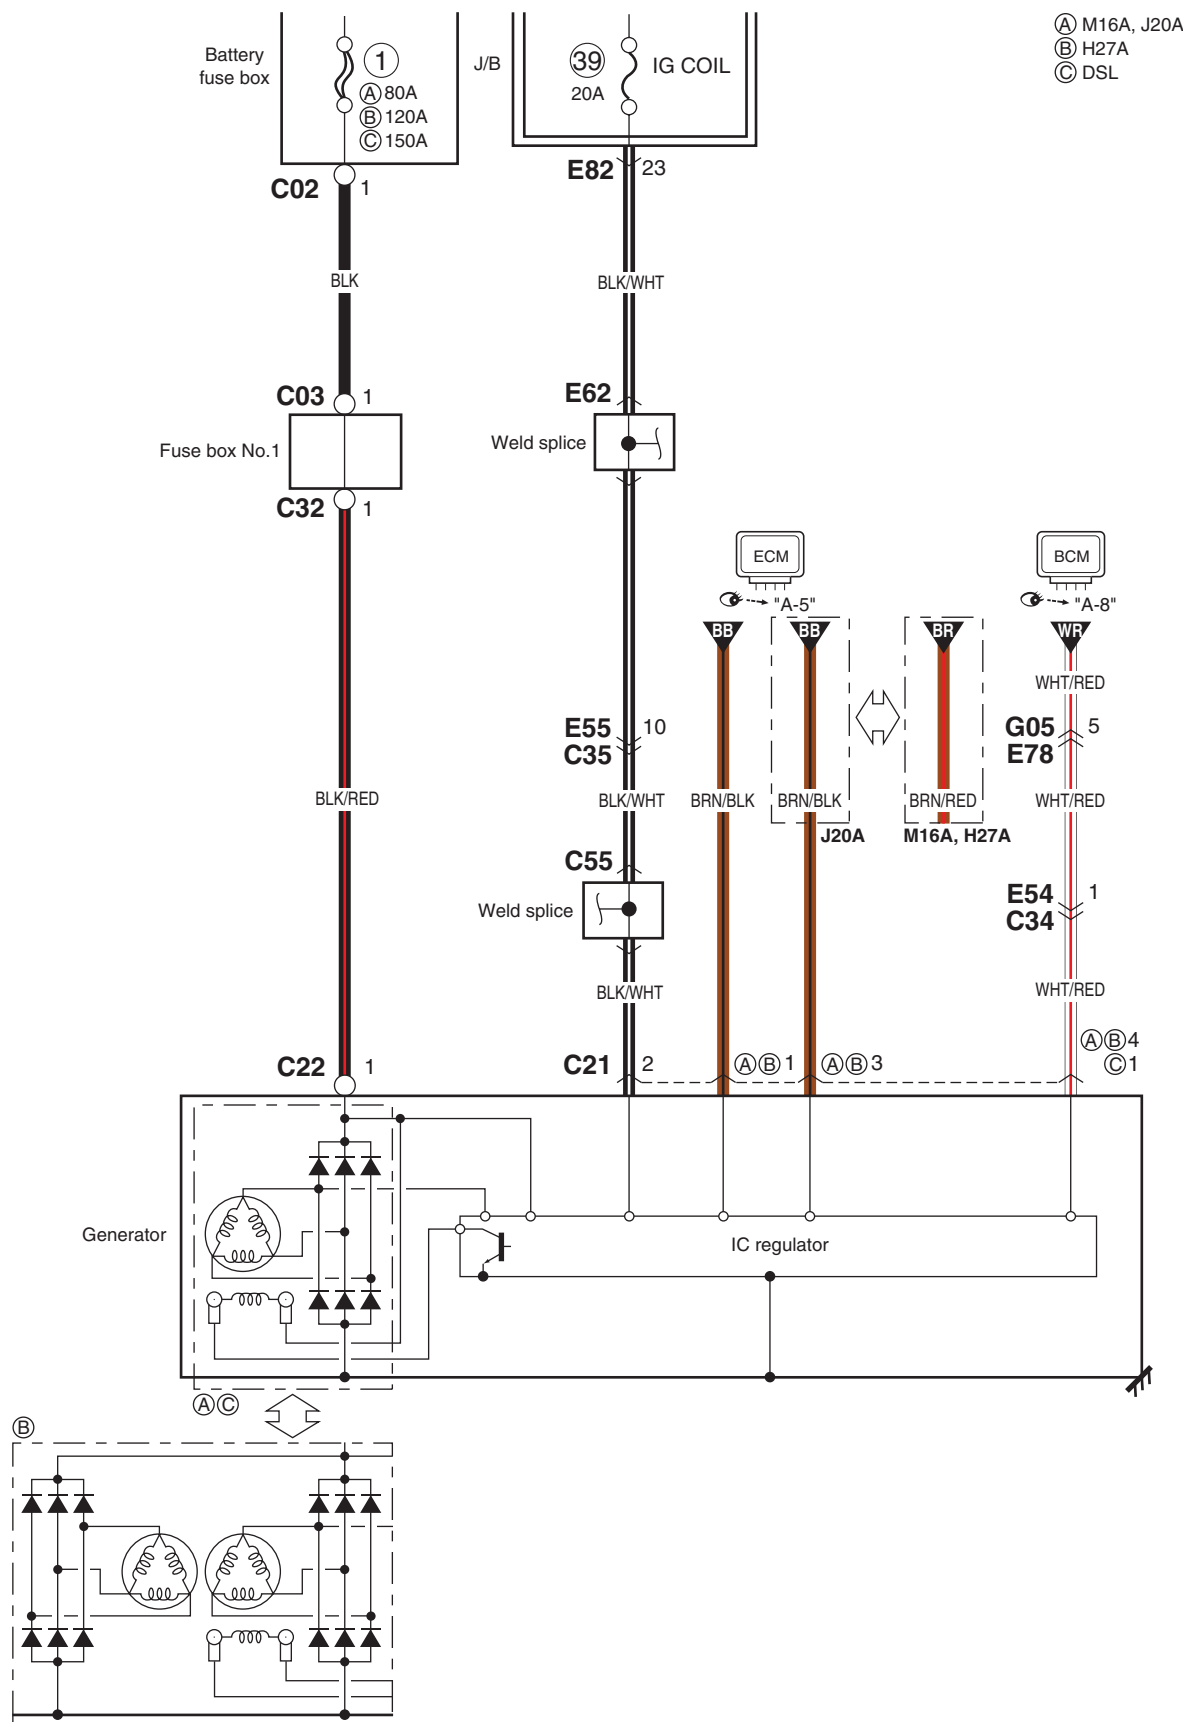


A-3 Ignition System Circuit Diagram (M16A)

S6JB0B910E004

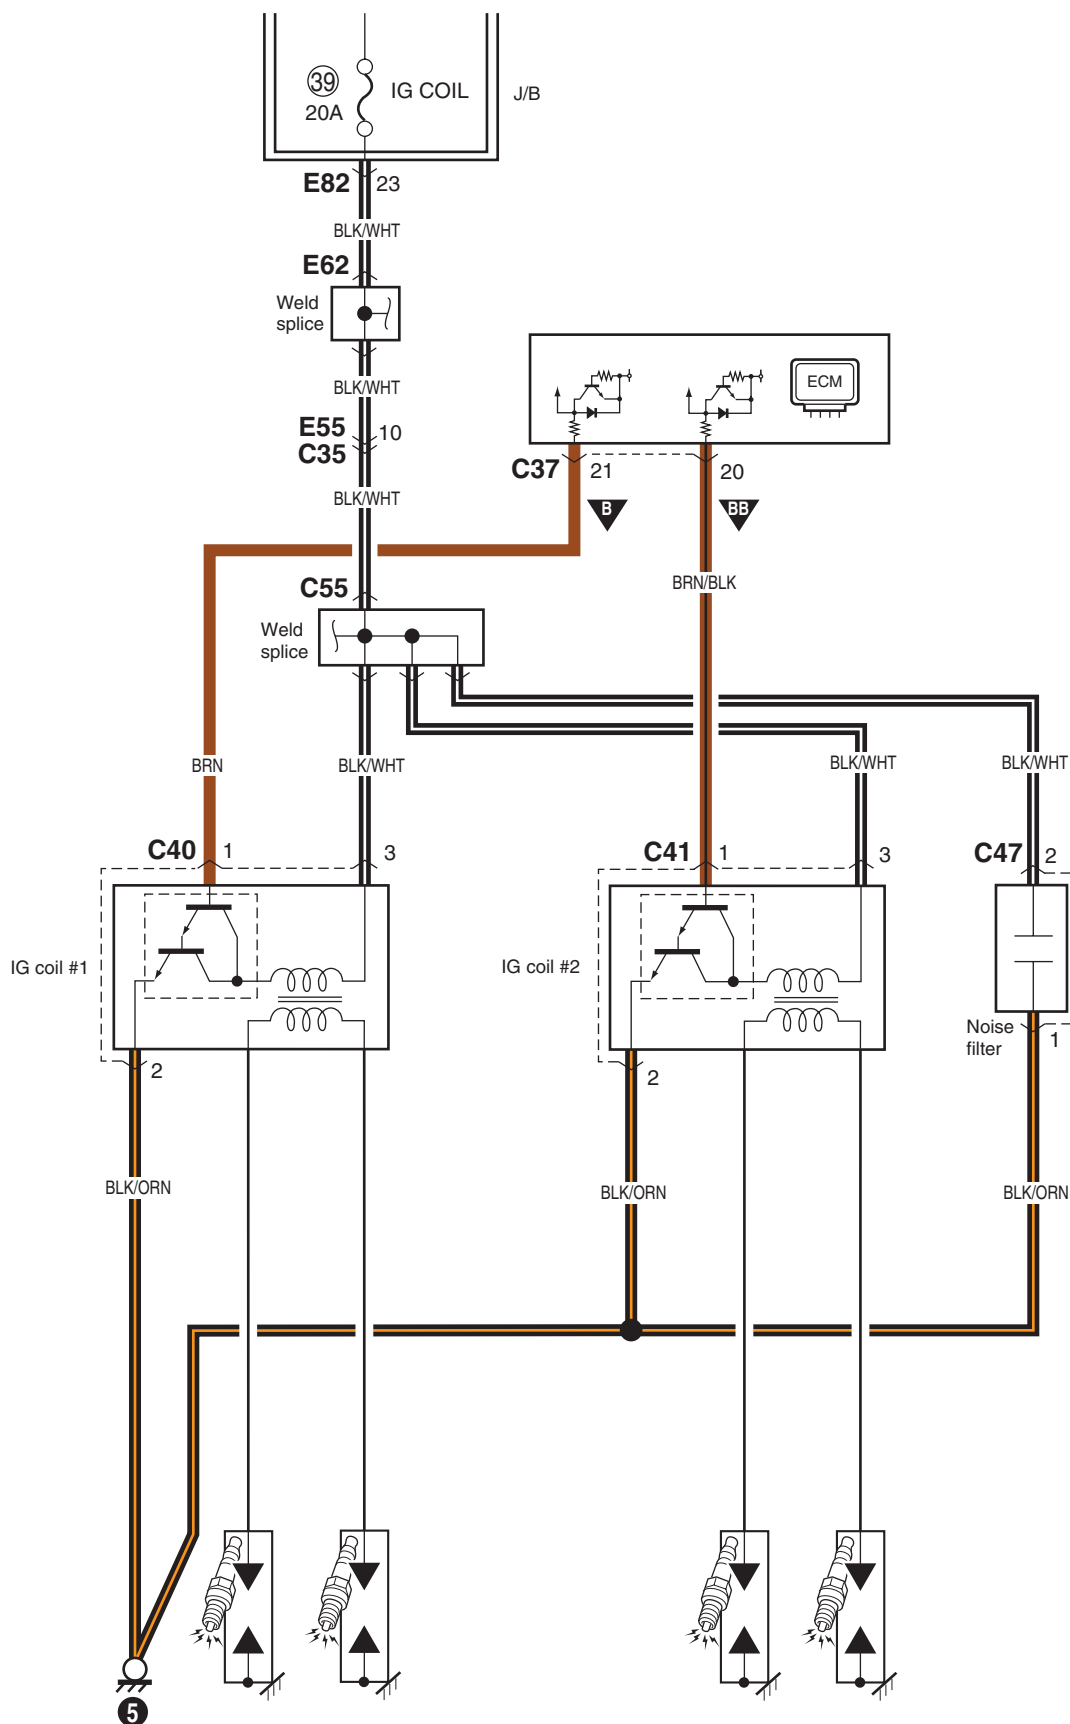

A-3 Ignition System Circuit Diagram (J20A)


S6JB0B910E005

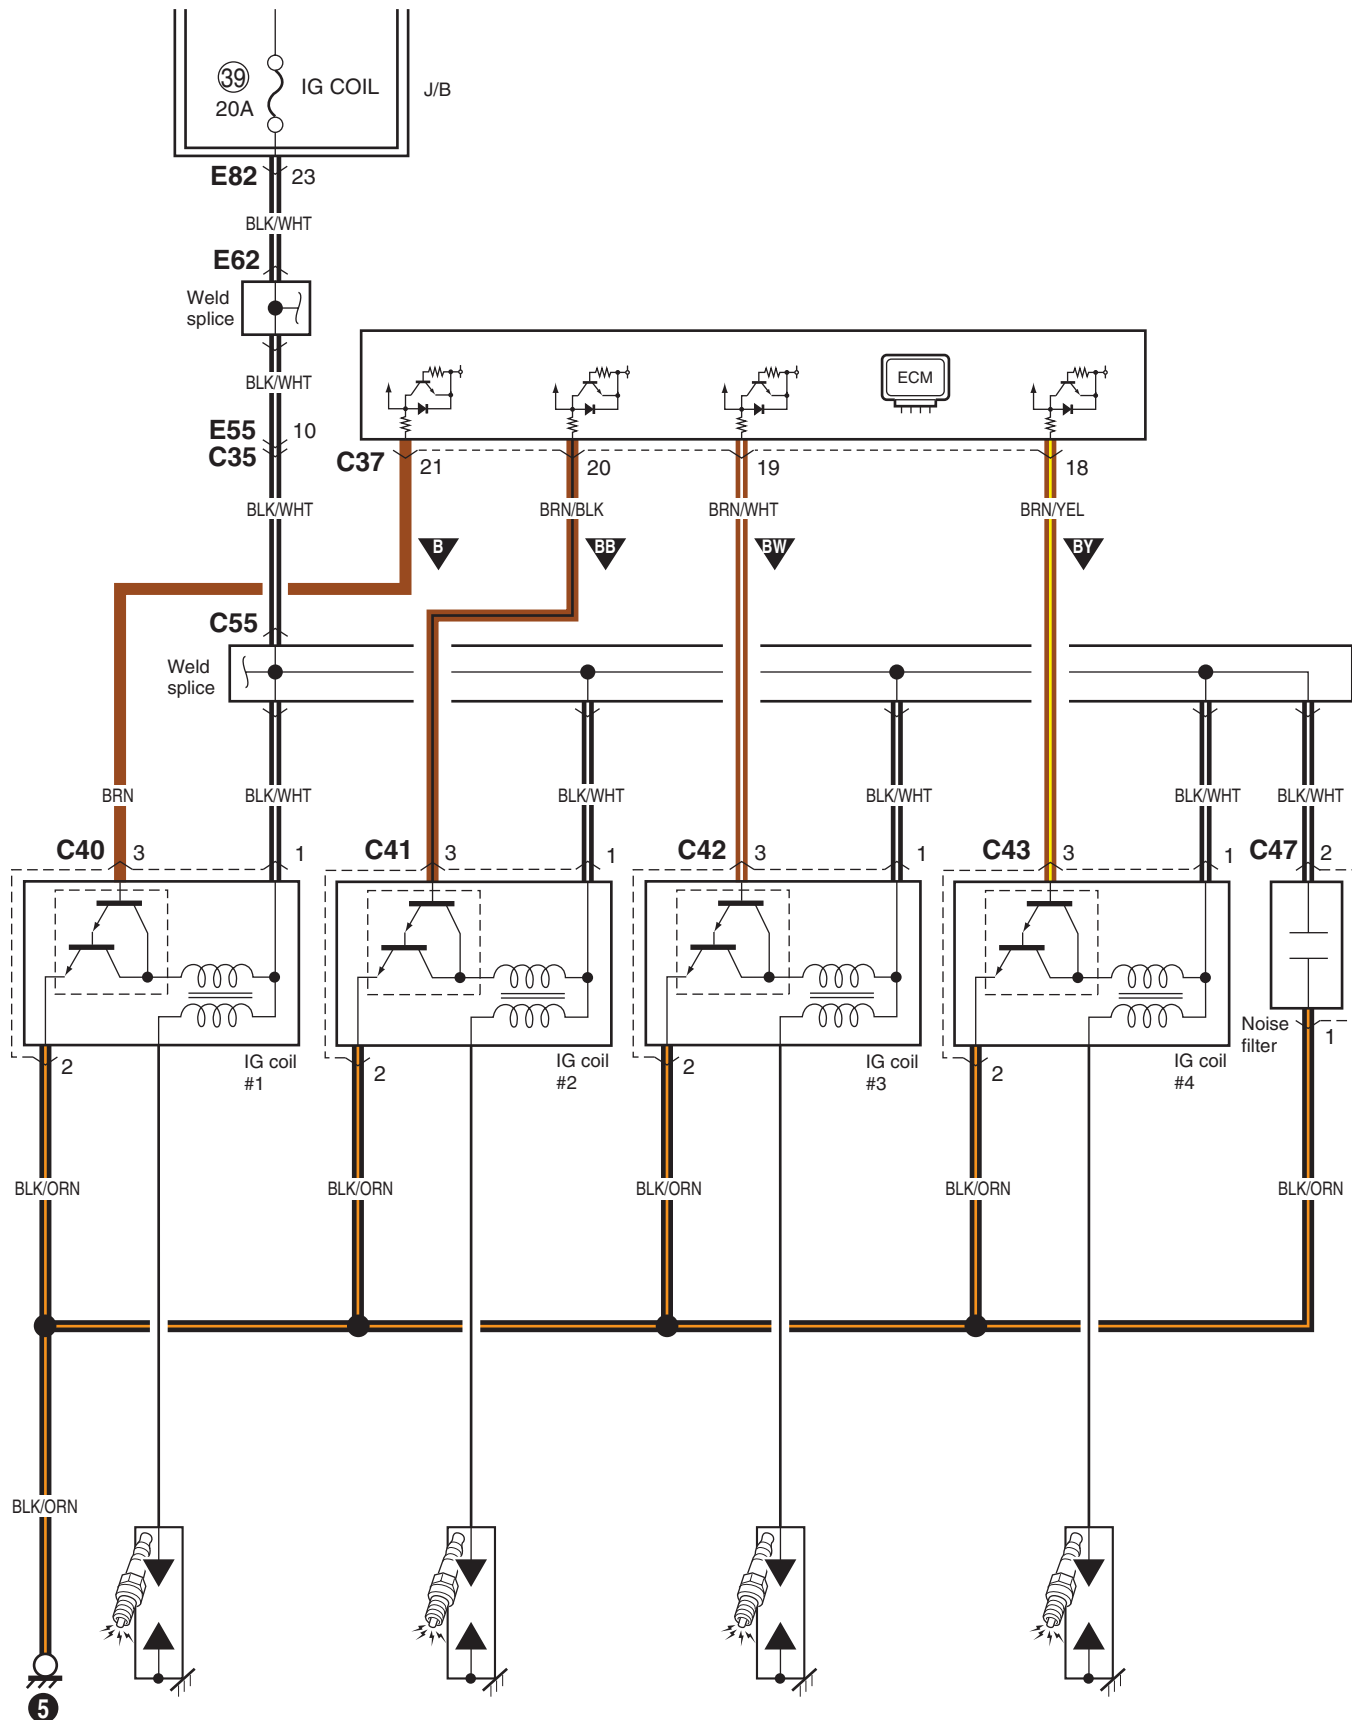


I6JB0B910918-02

A-3 Ignition System Circuit Diagram (H27A)


S6JB0B910E045

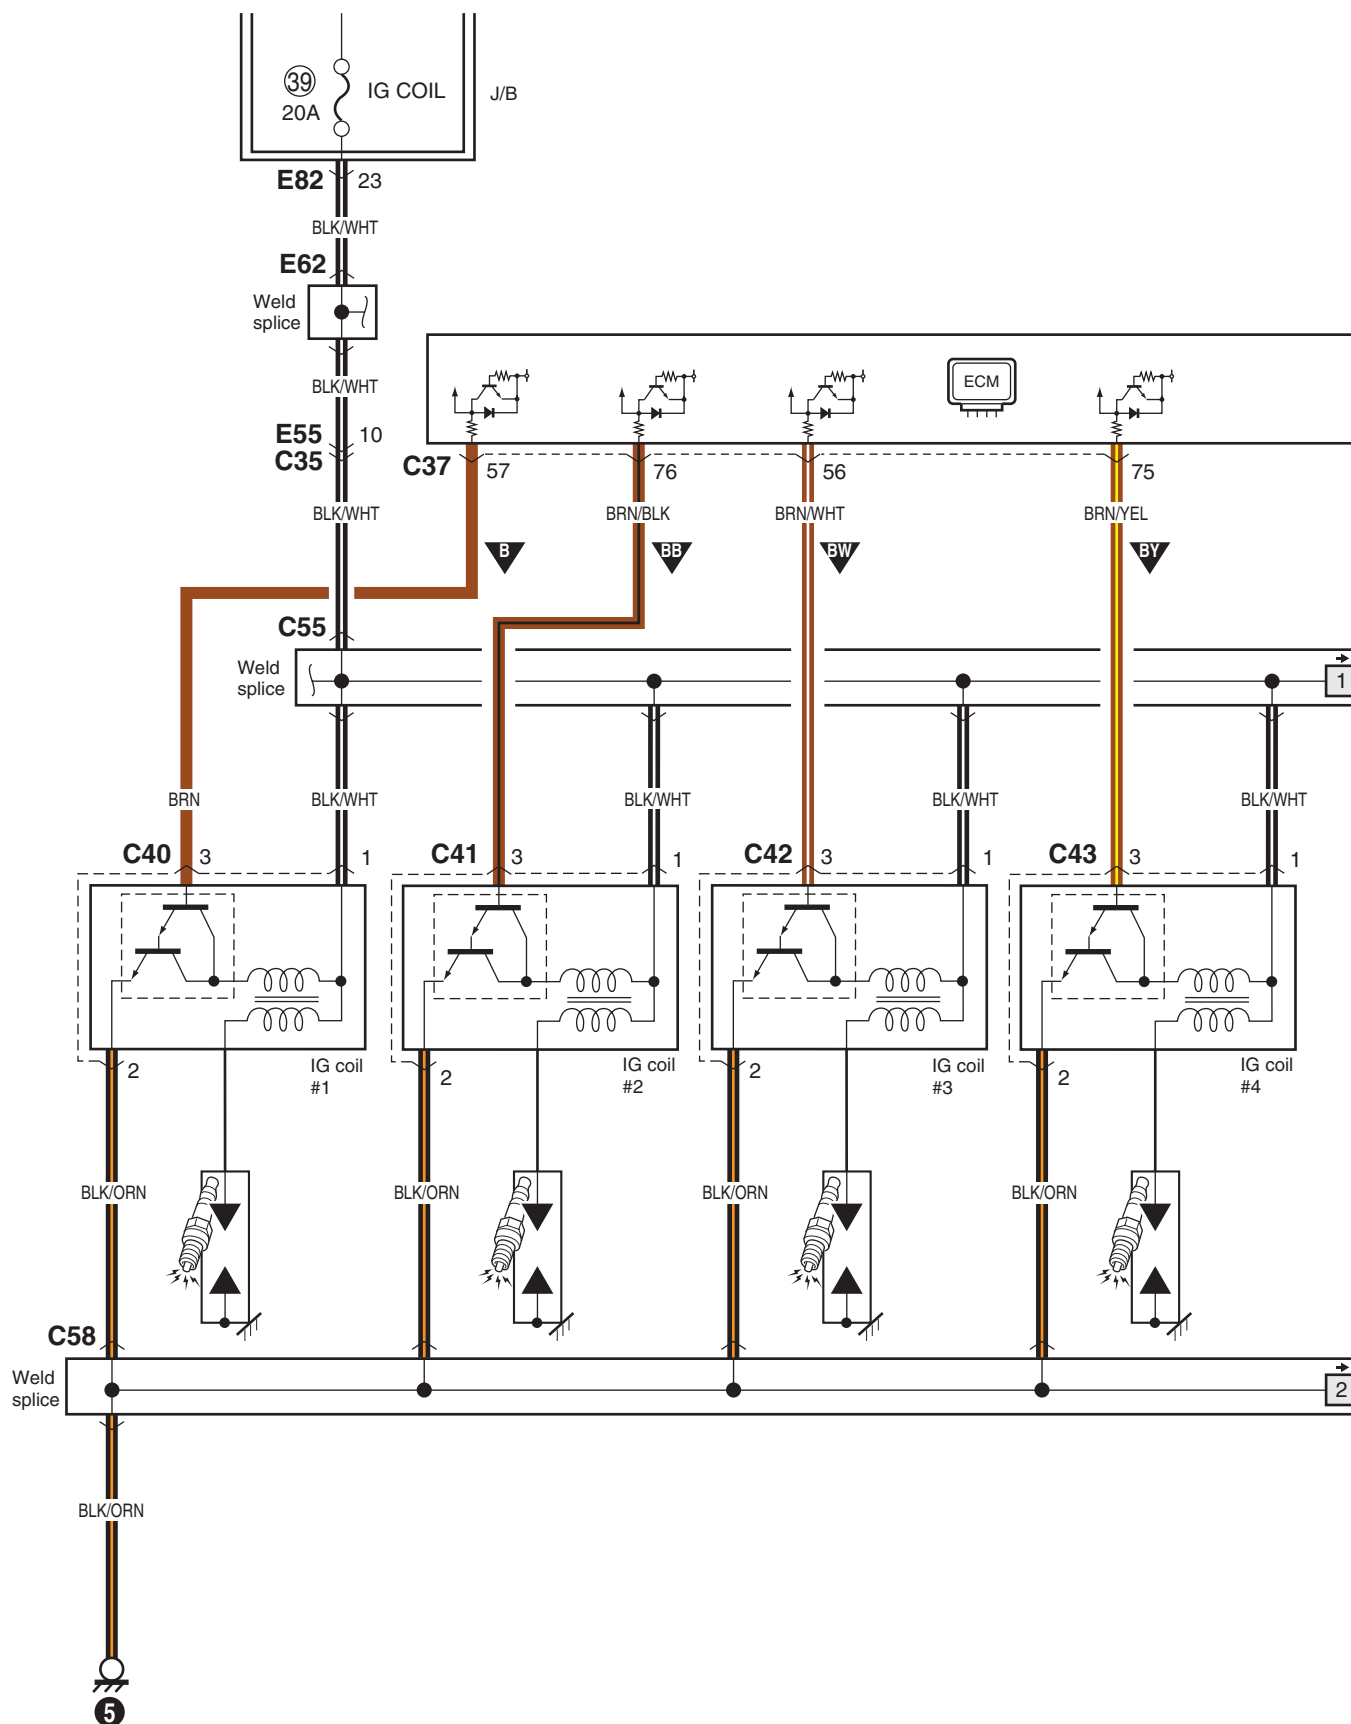

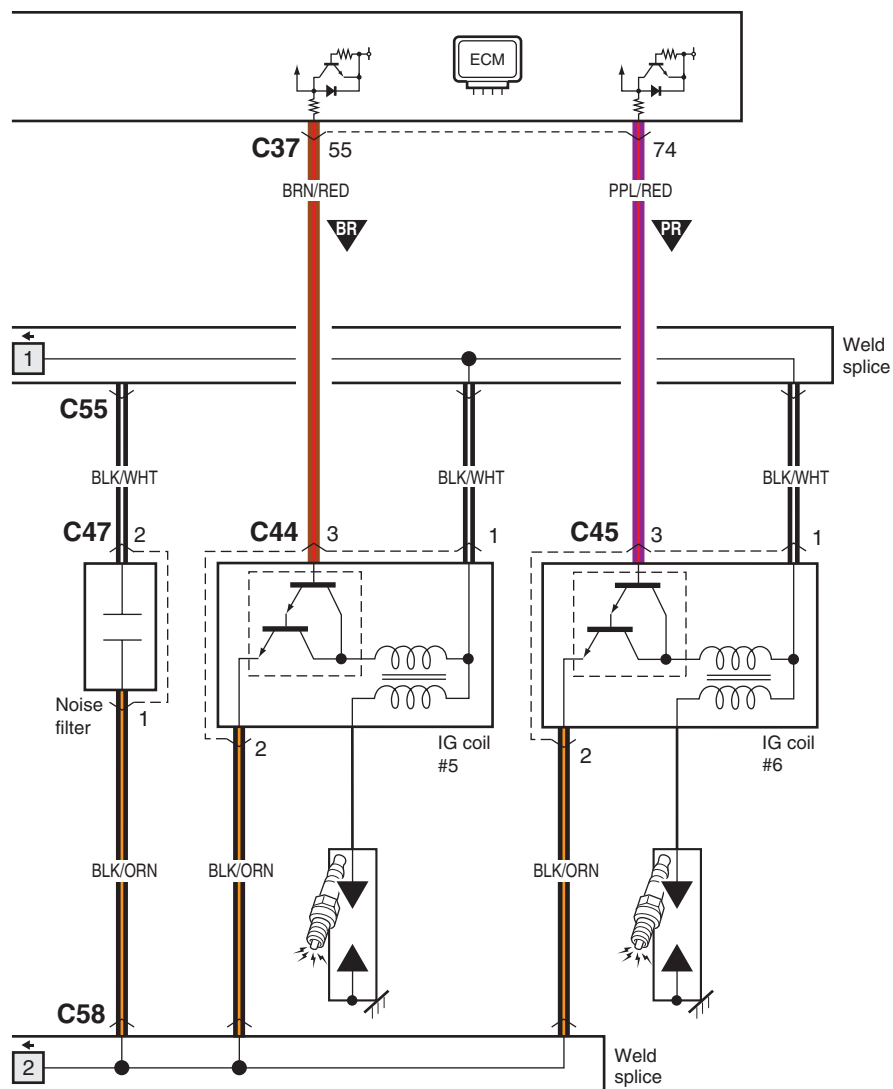

A-4 Cooling System Circuit Diagram (Petrol)


S6JB0B910E006

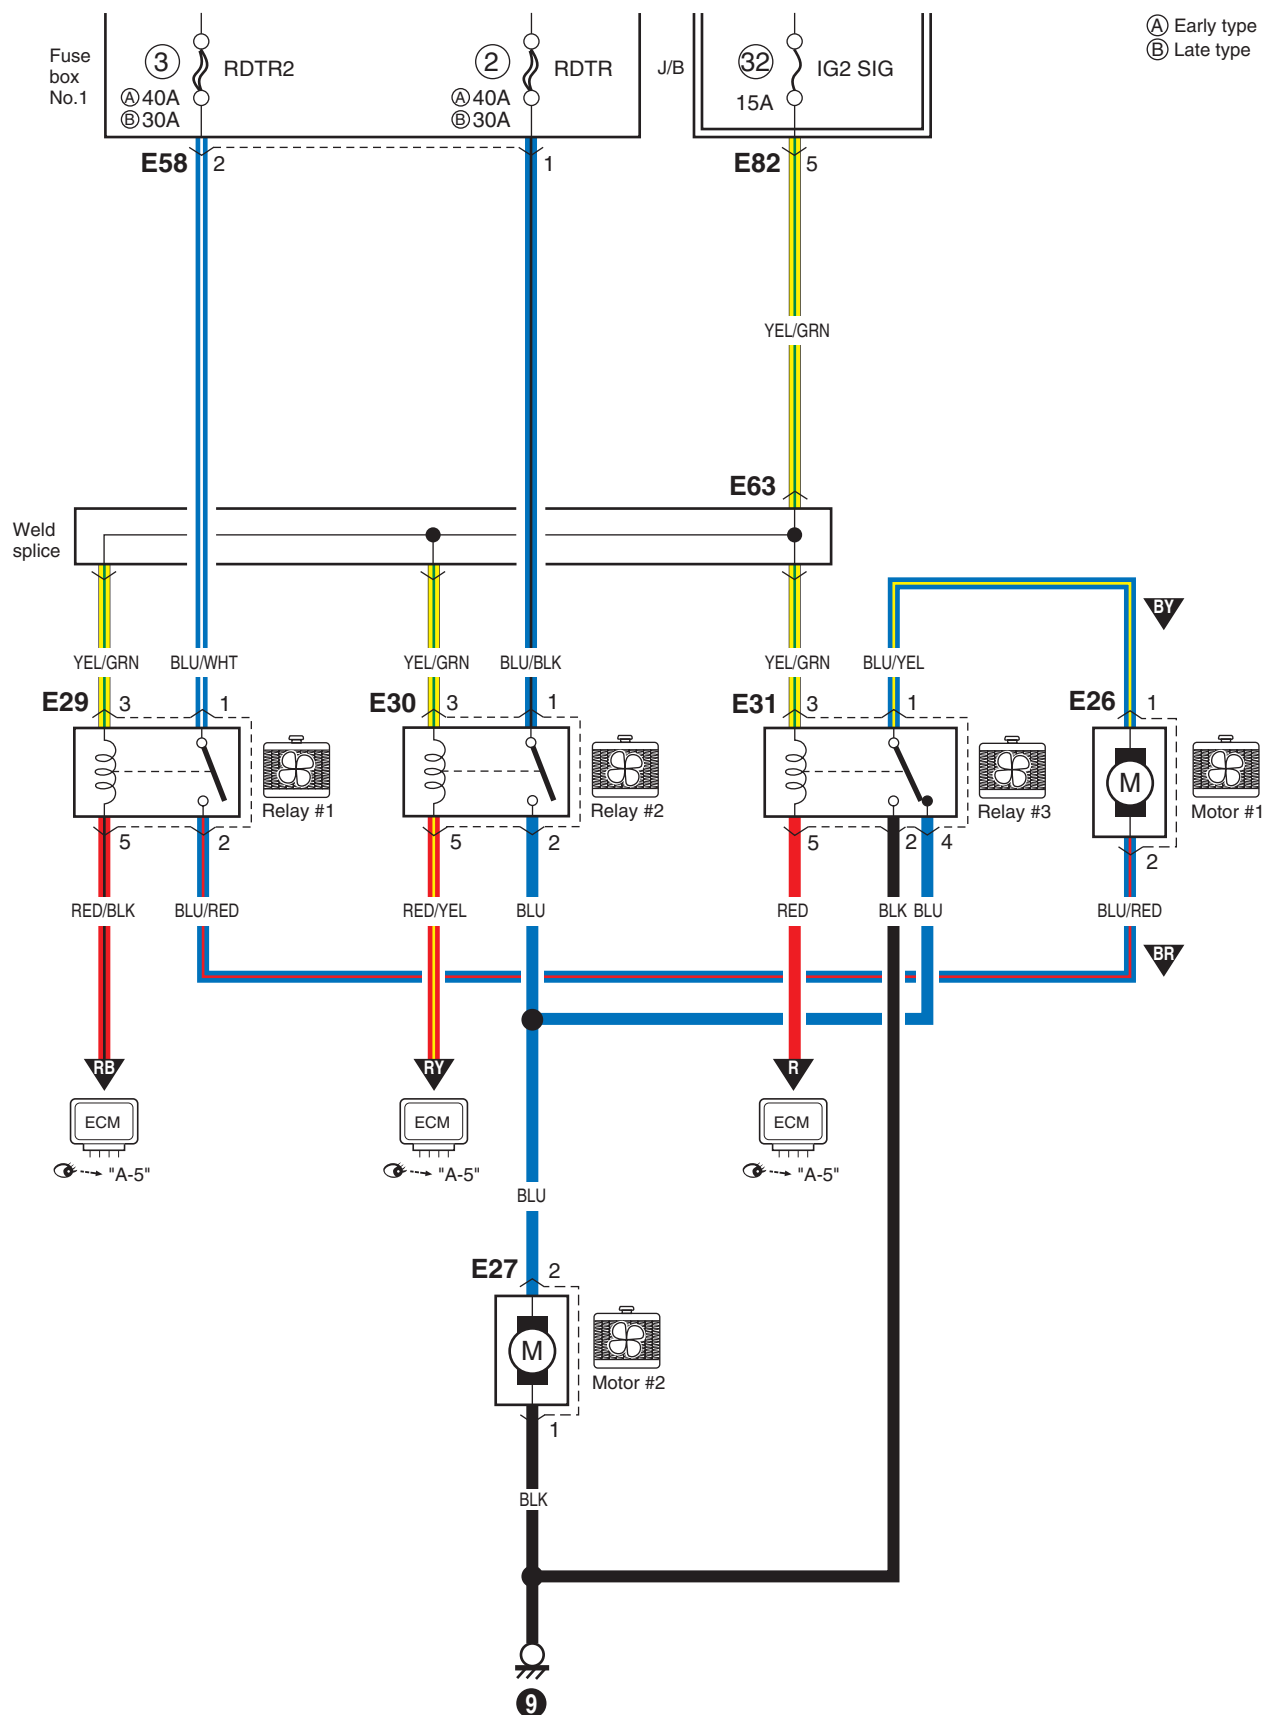

I6JB0B910921-01

A-4 Cooling System Circuit Diagram (DSL)


S6JB0B910E046

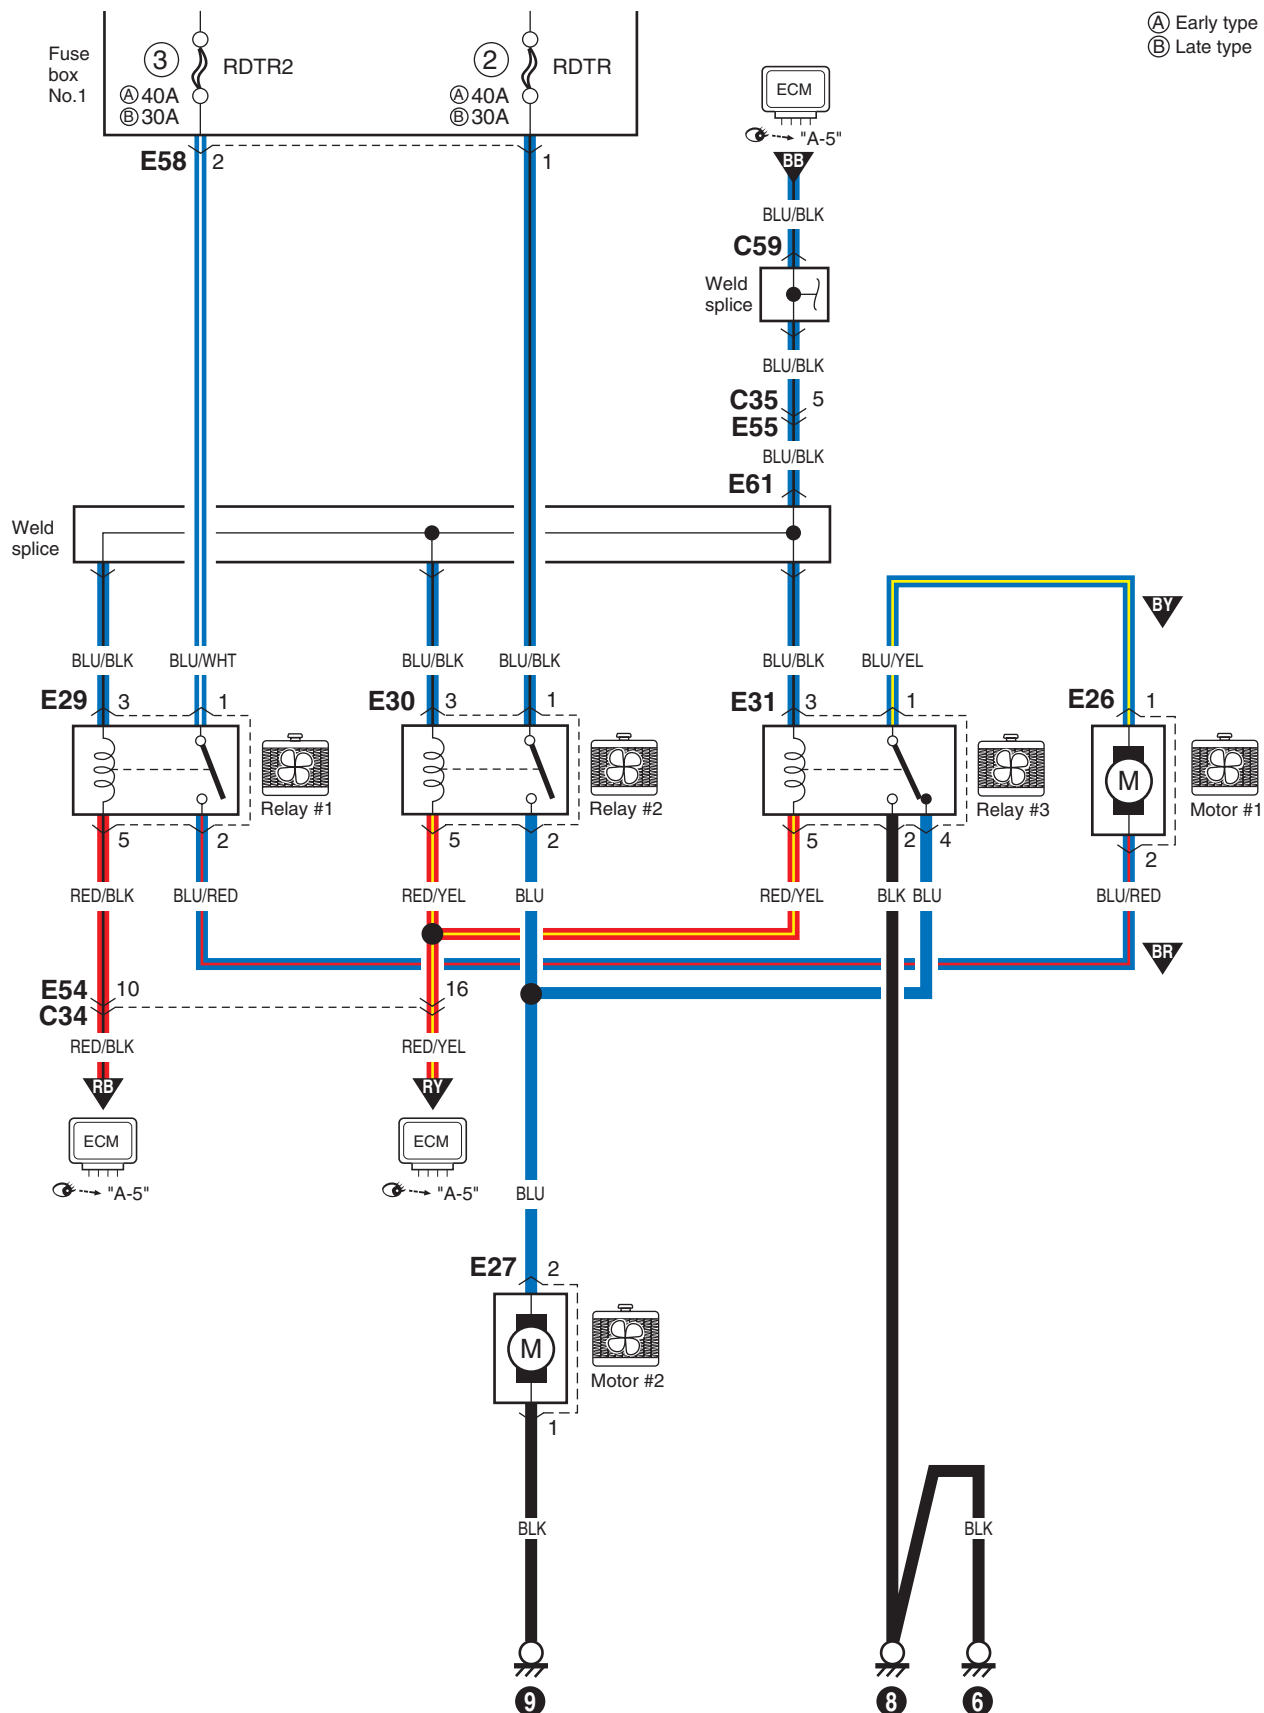


16JB0B910922-01


A-5 Engine and A/C Control System Circuit Diagram (M16A)


S6JB0B910E007

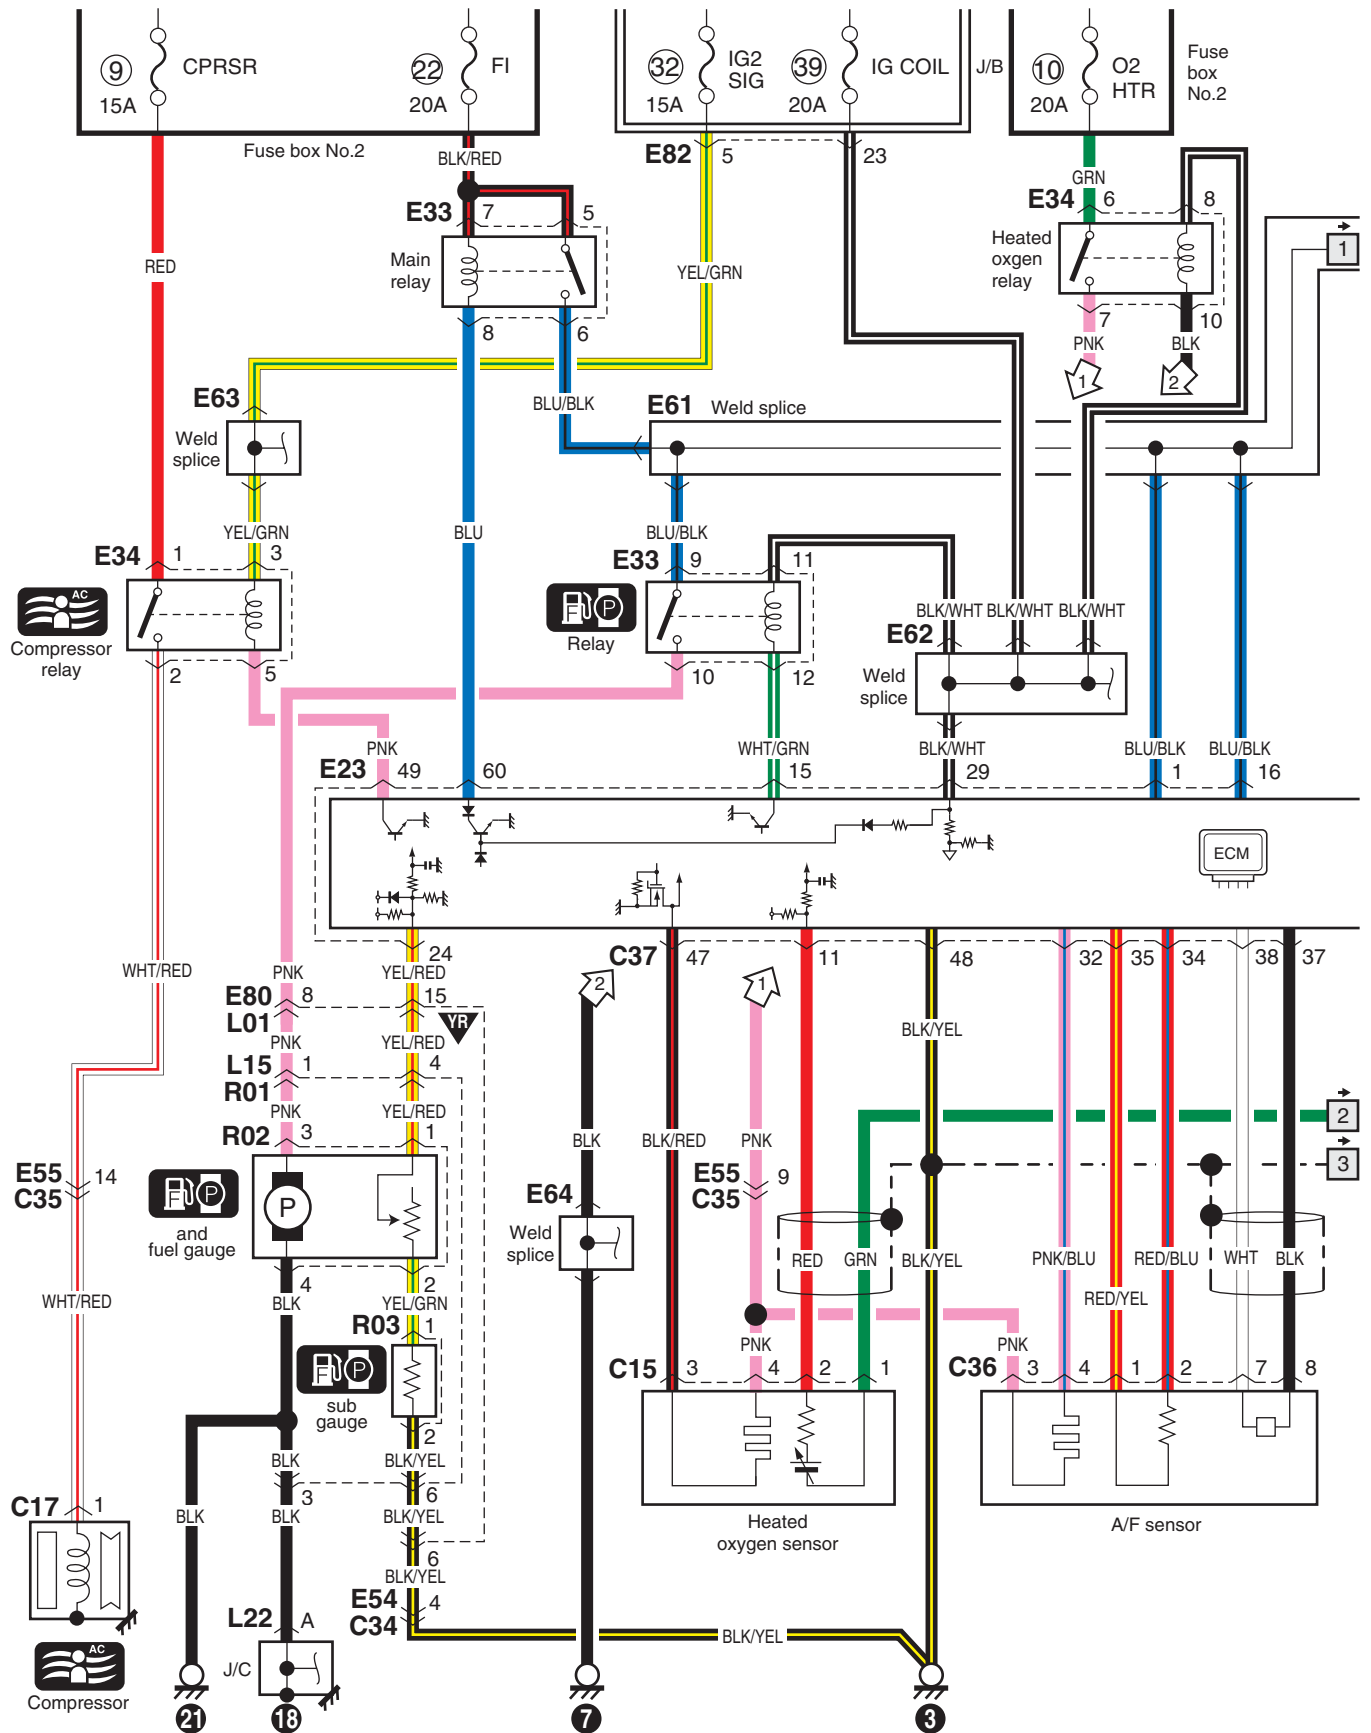



I6JB0B910923-01

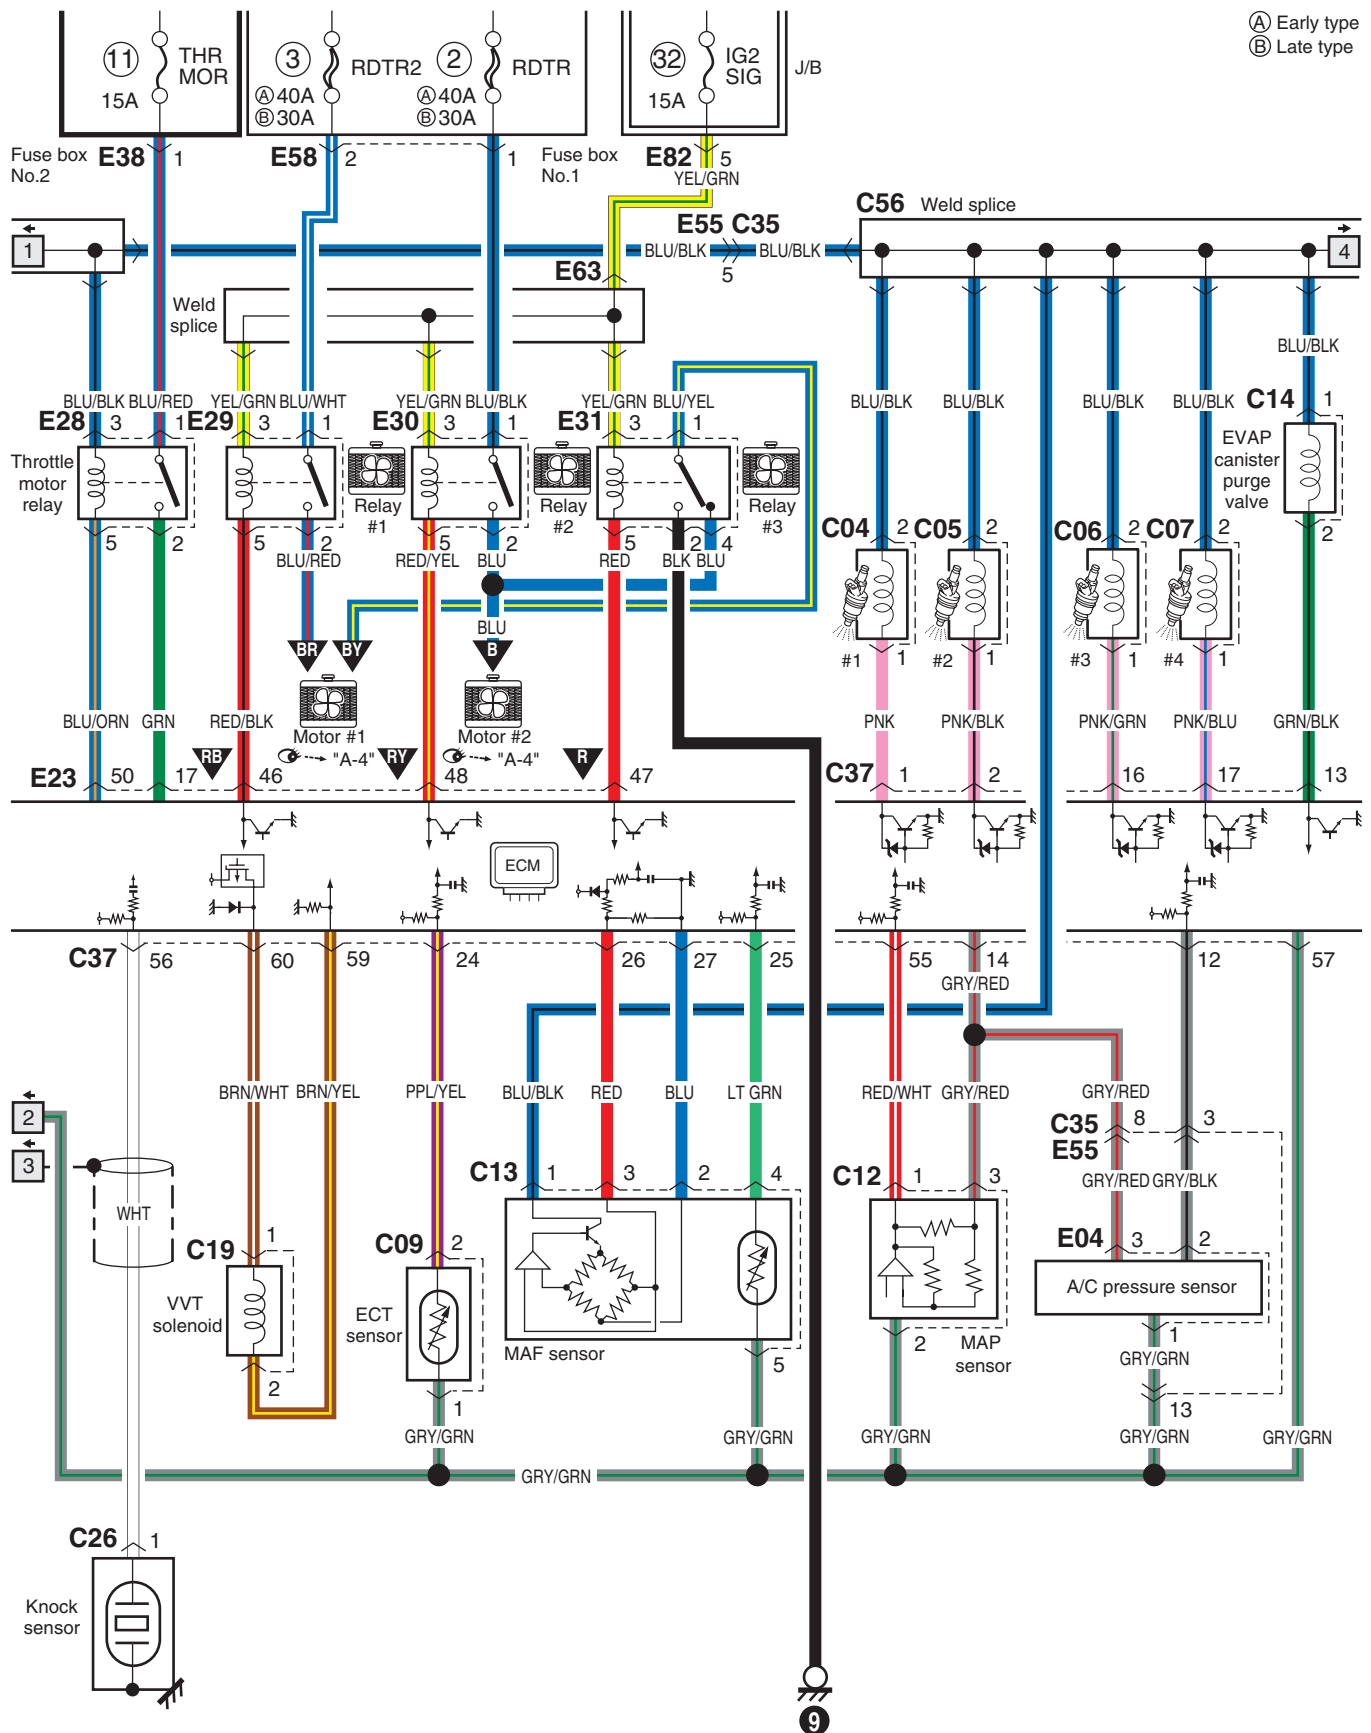


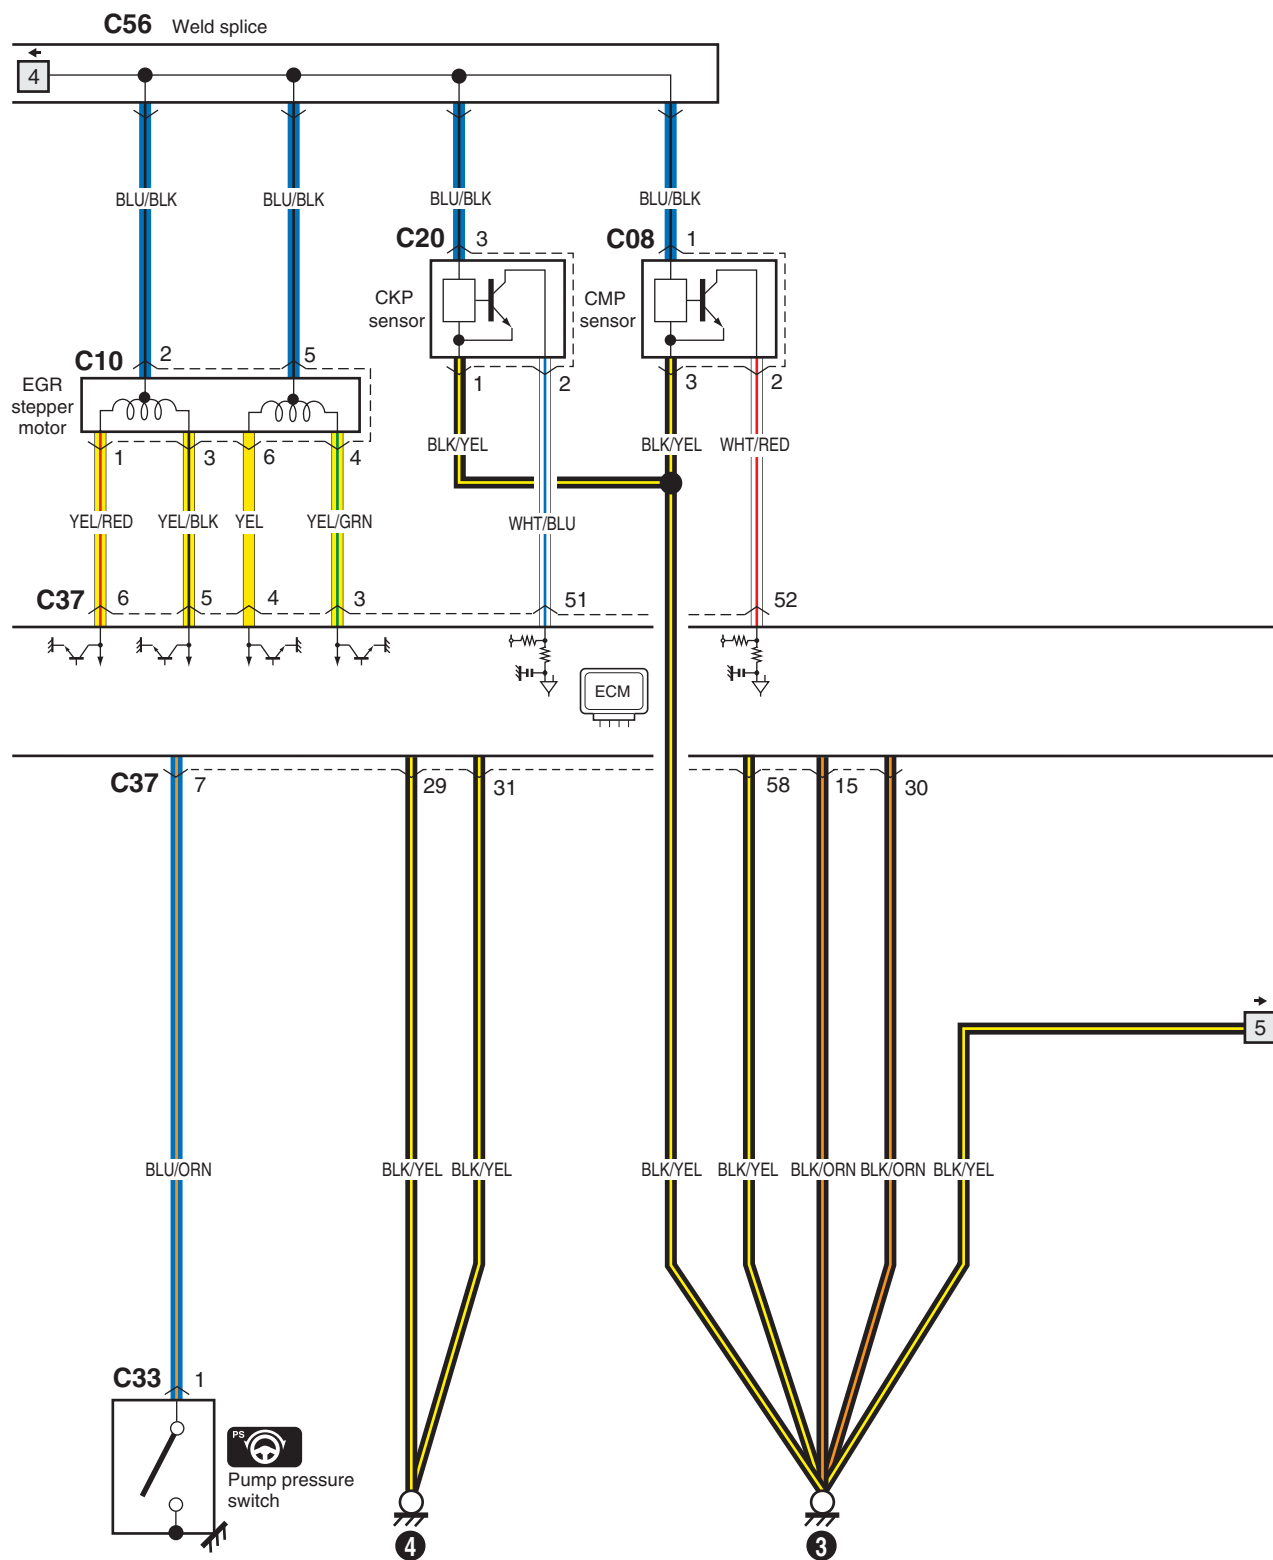


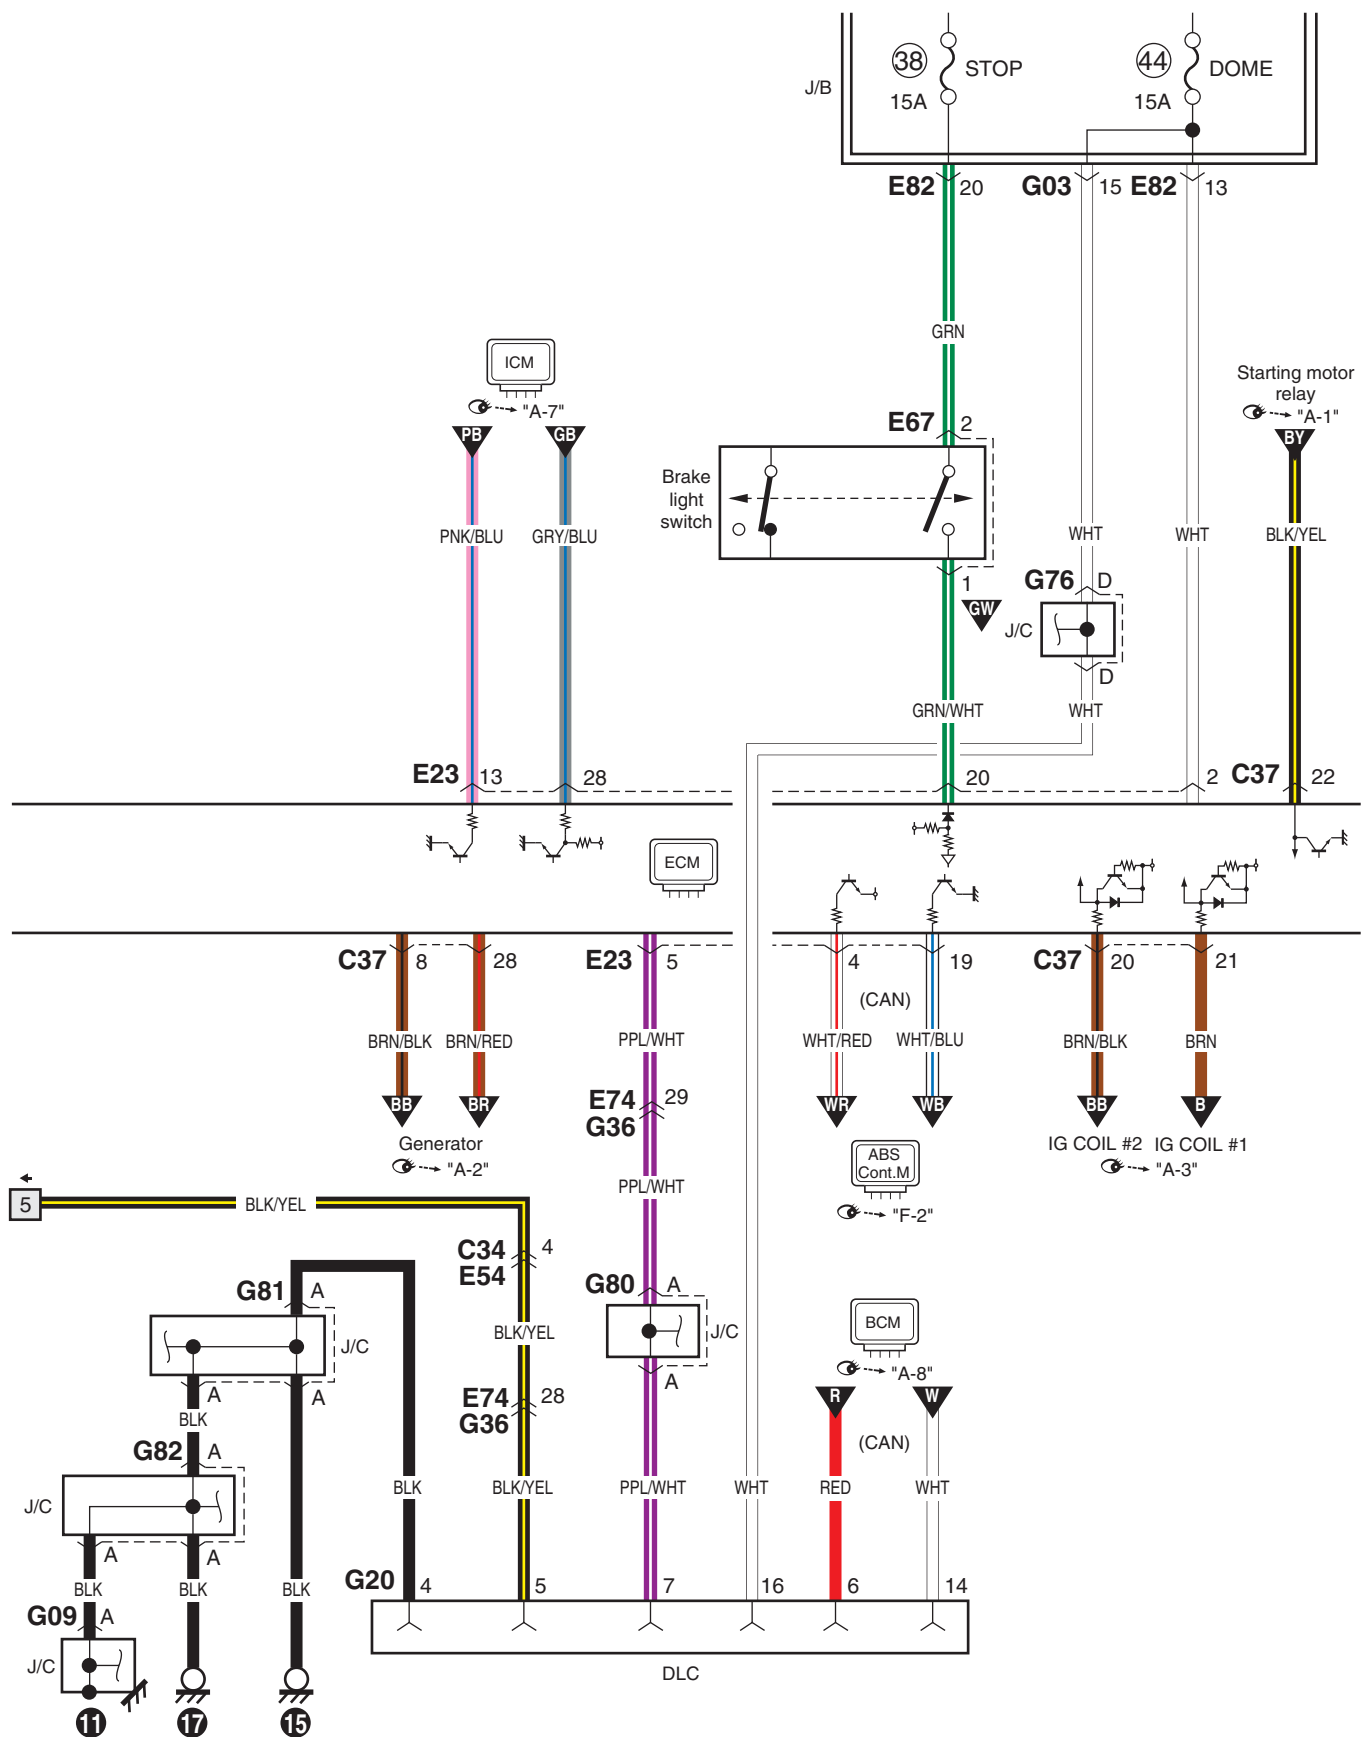


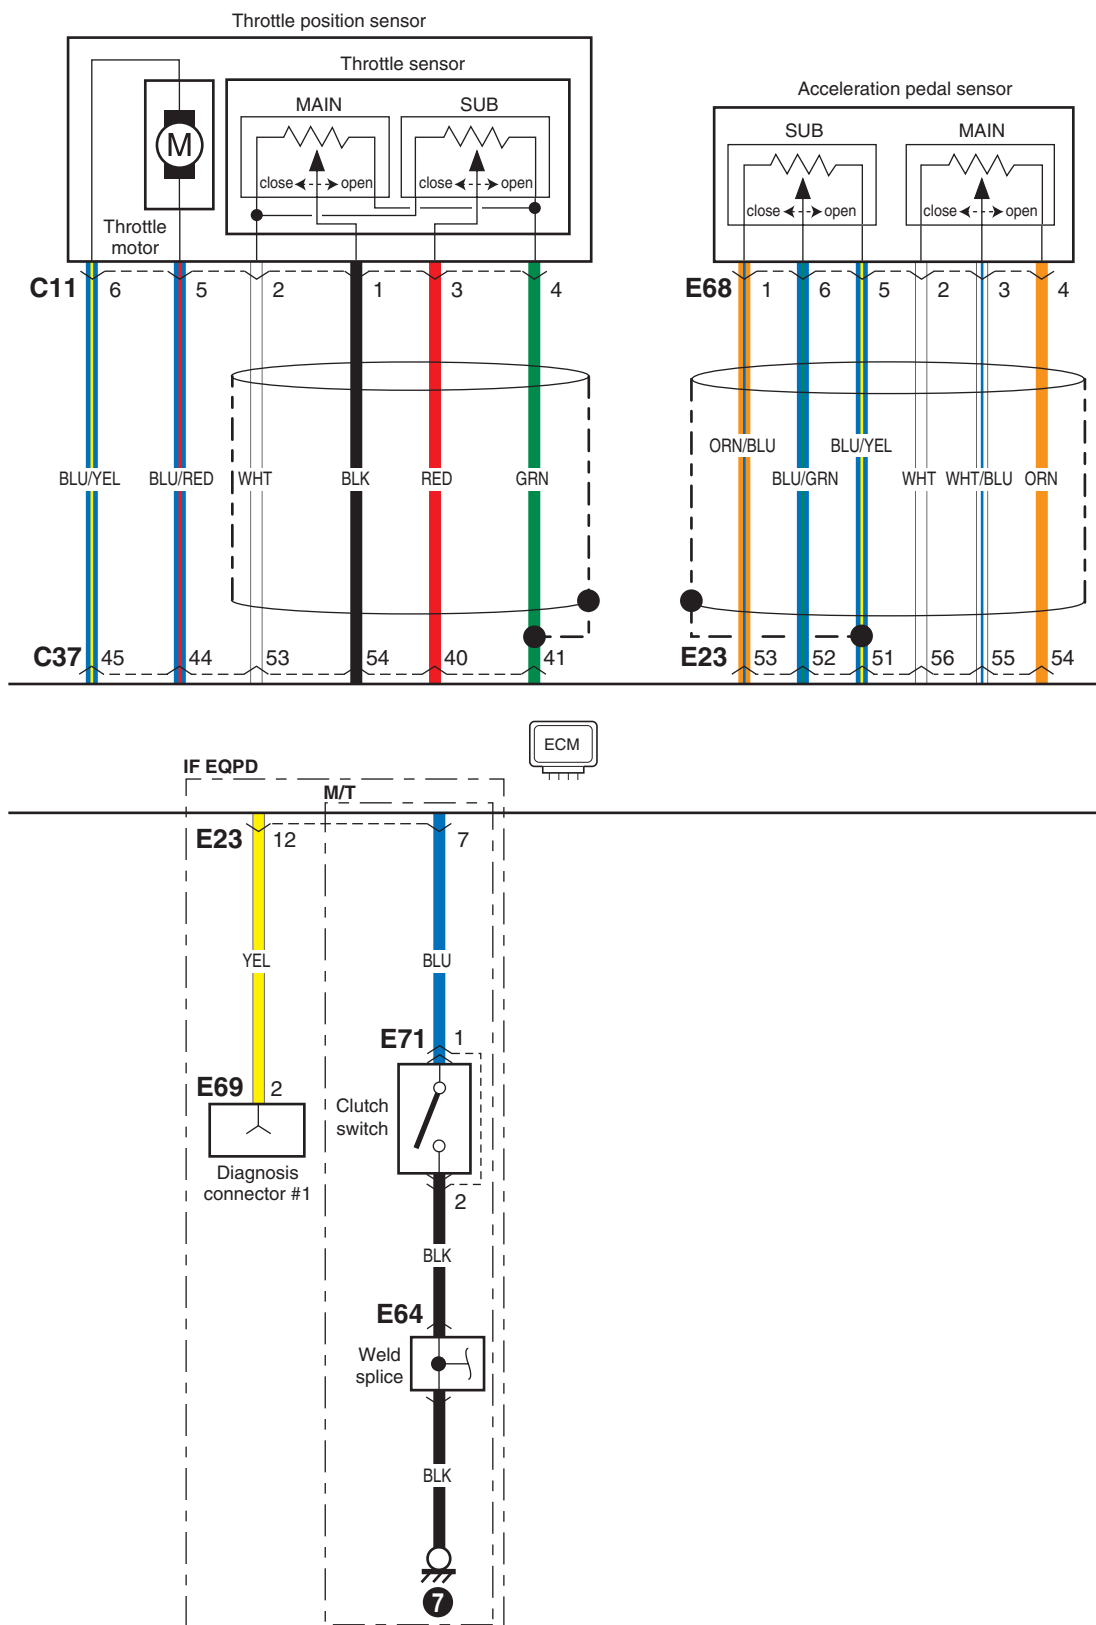


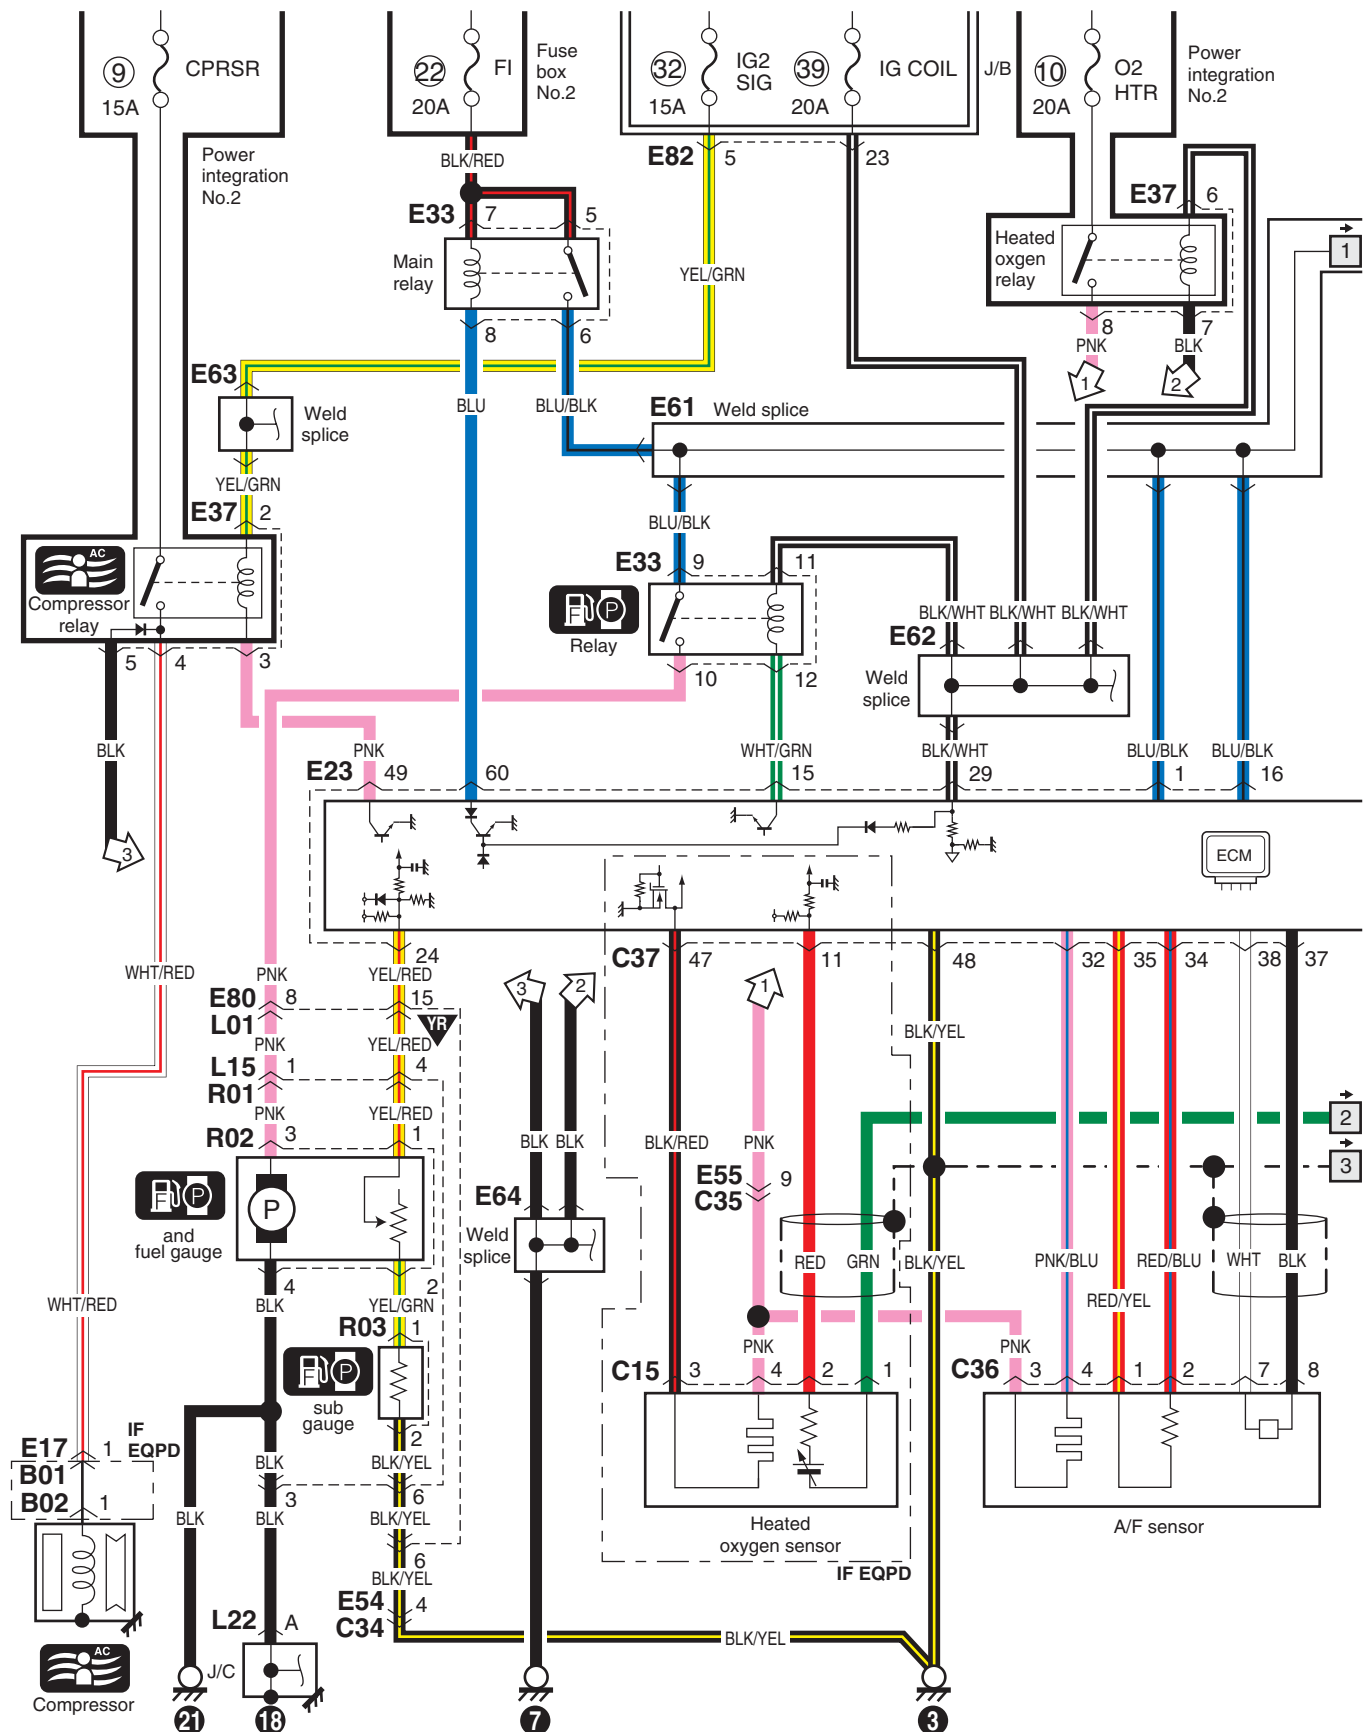

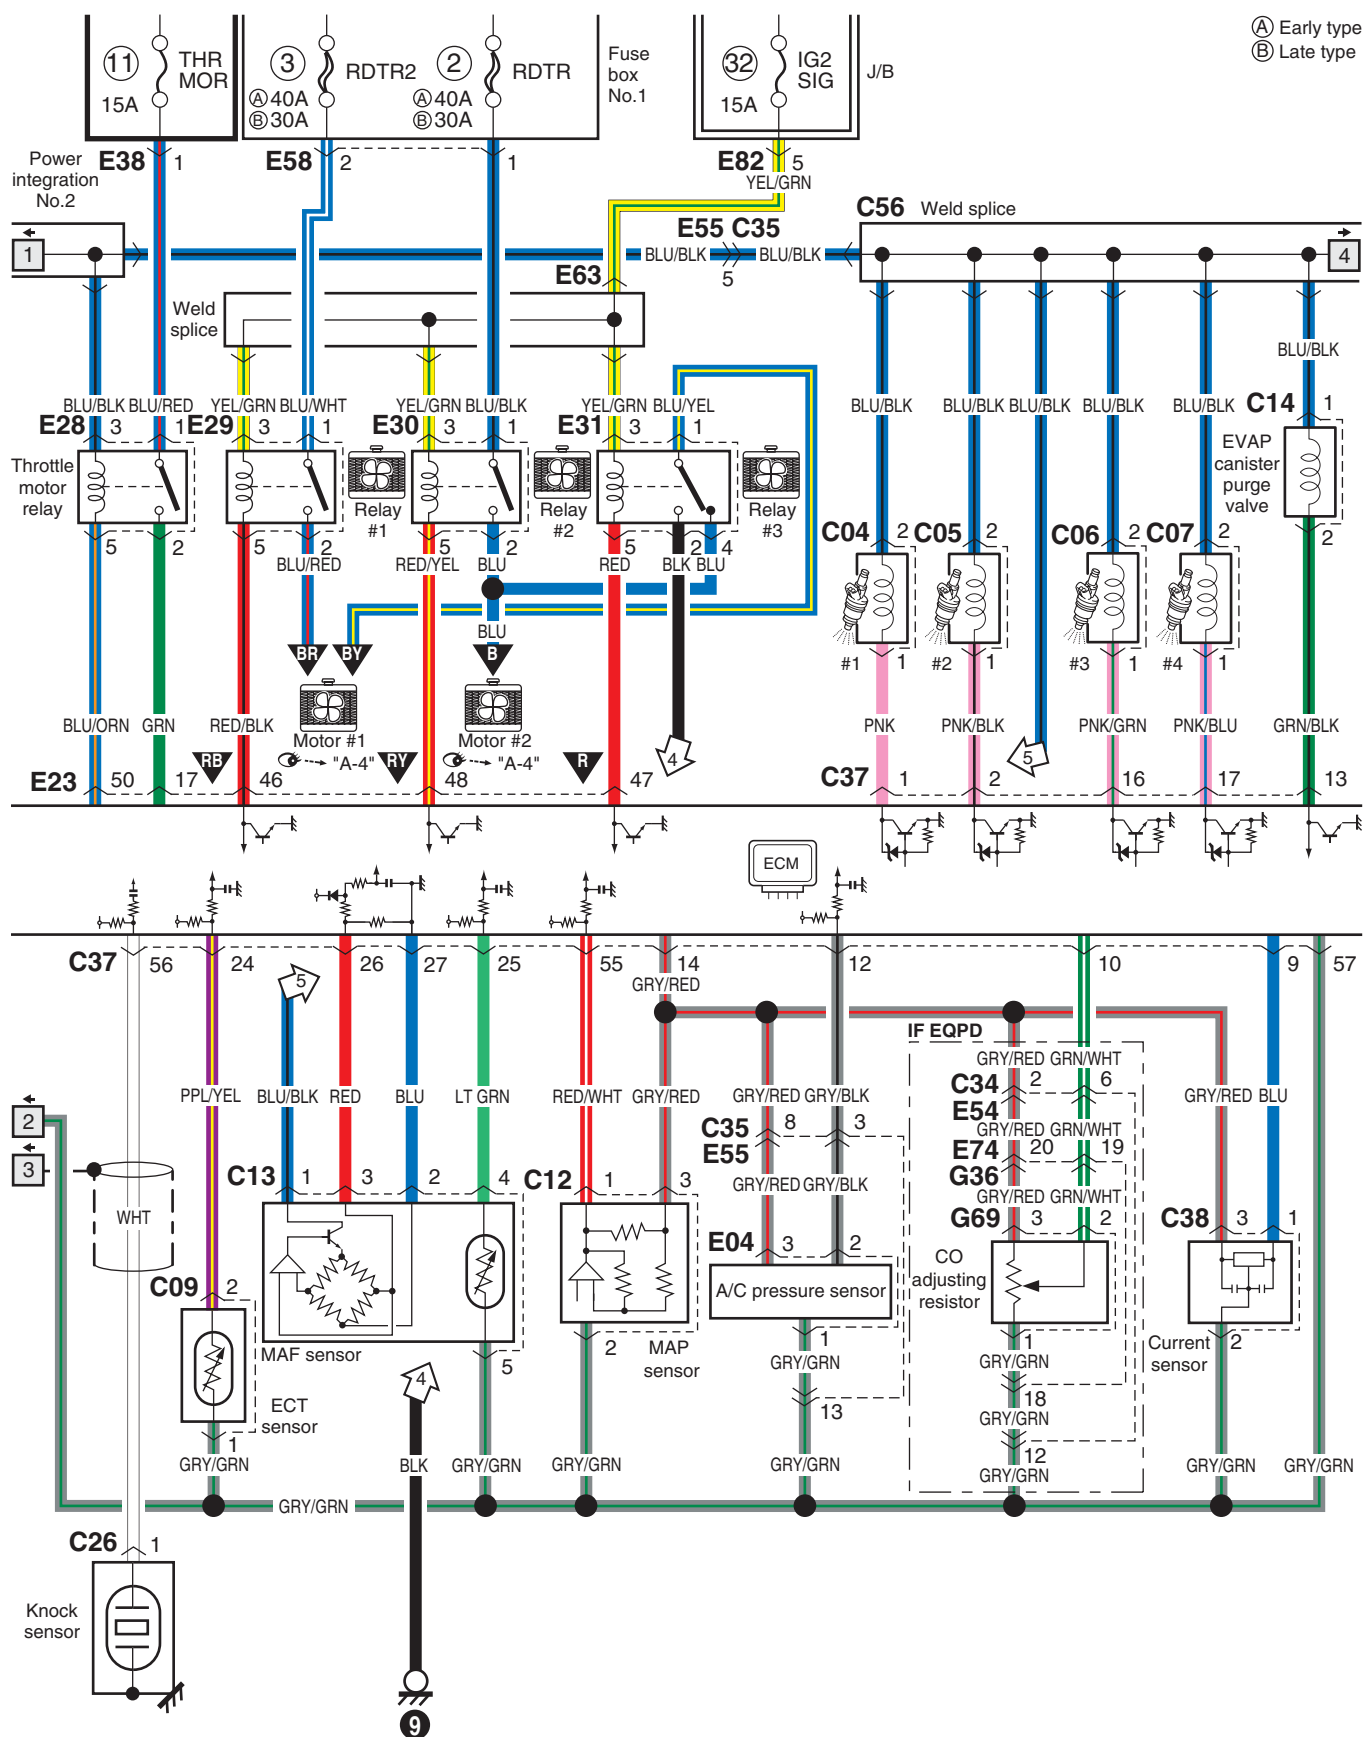


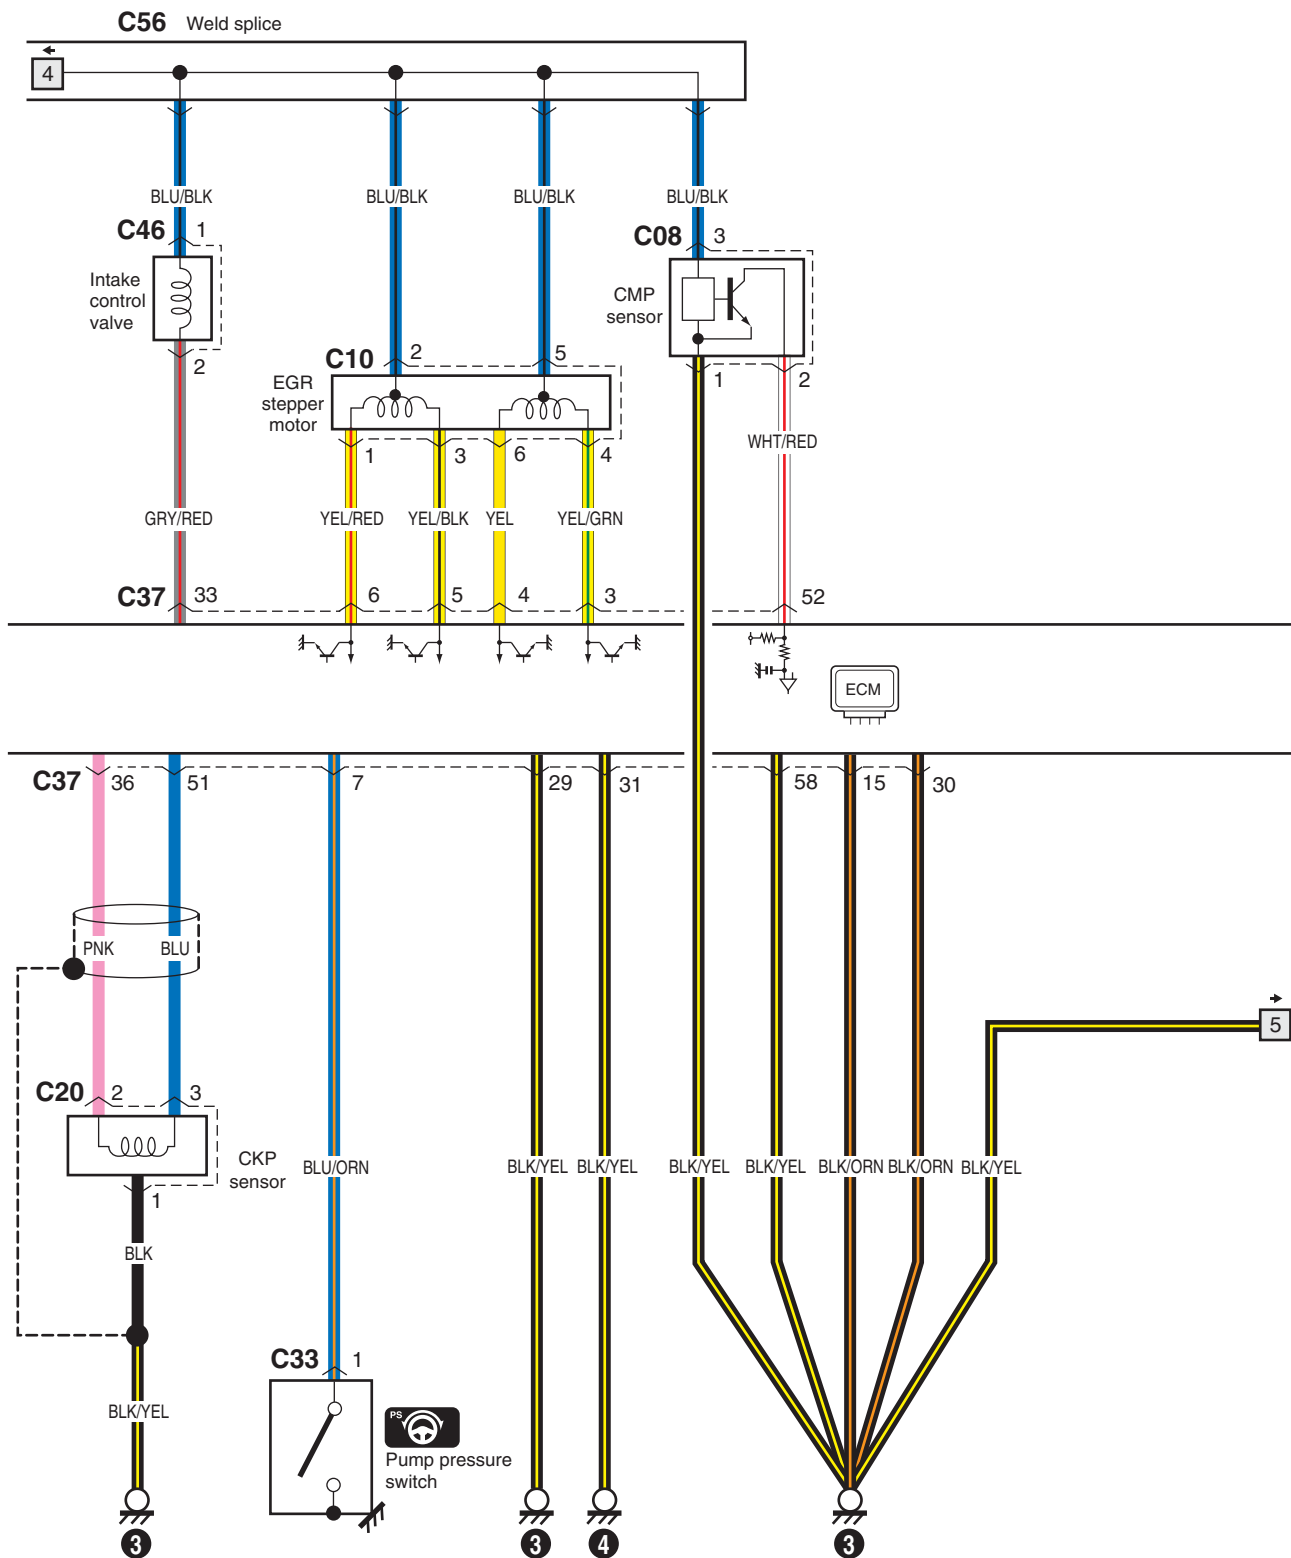


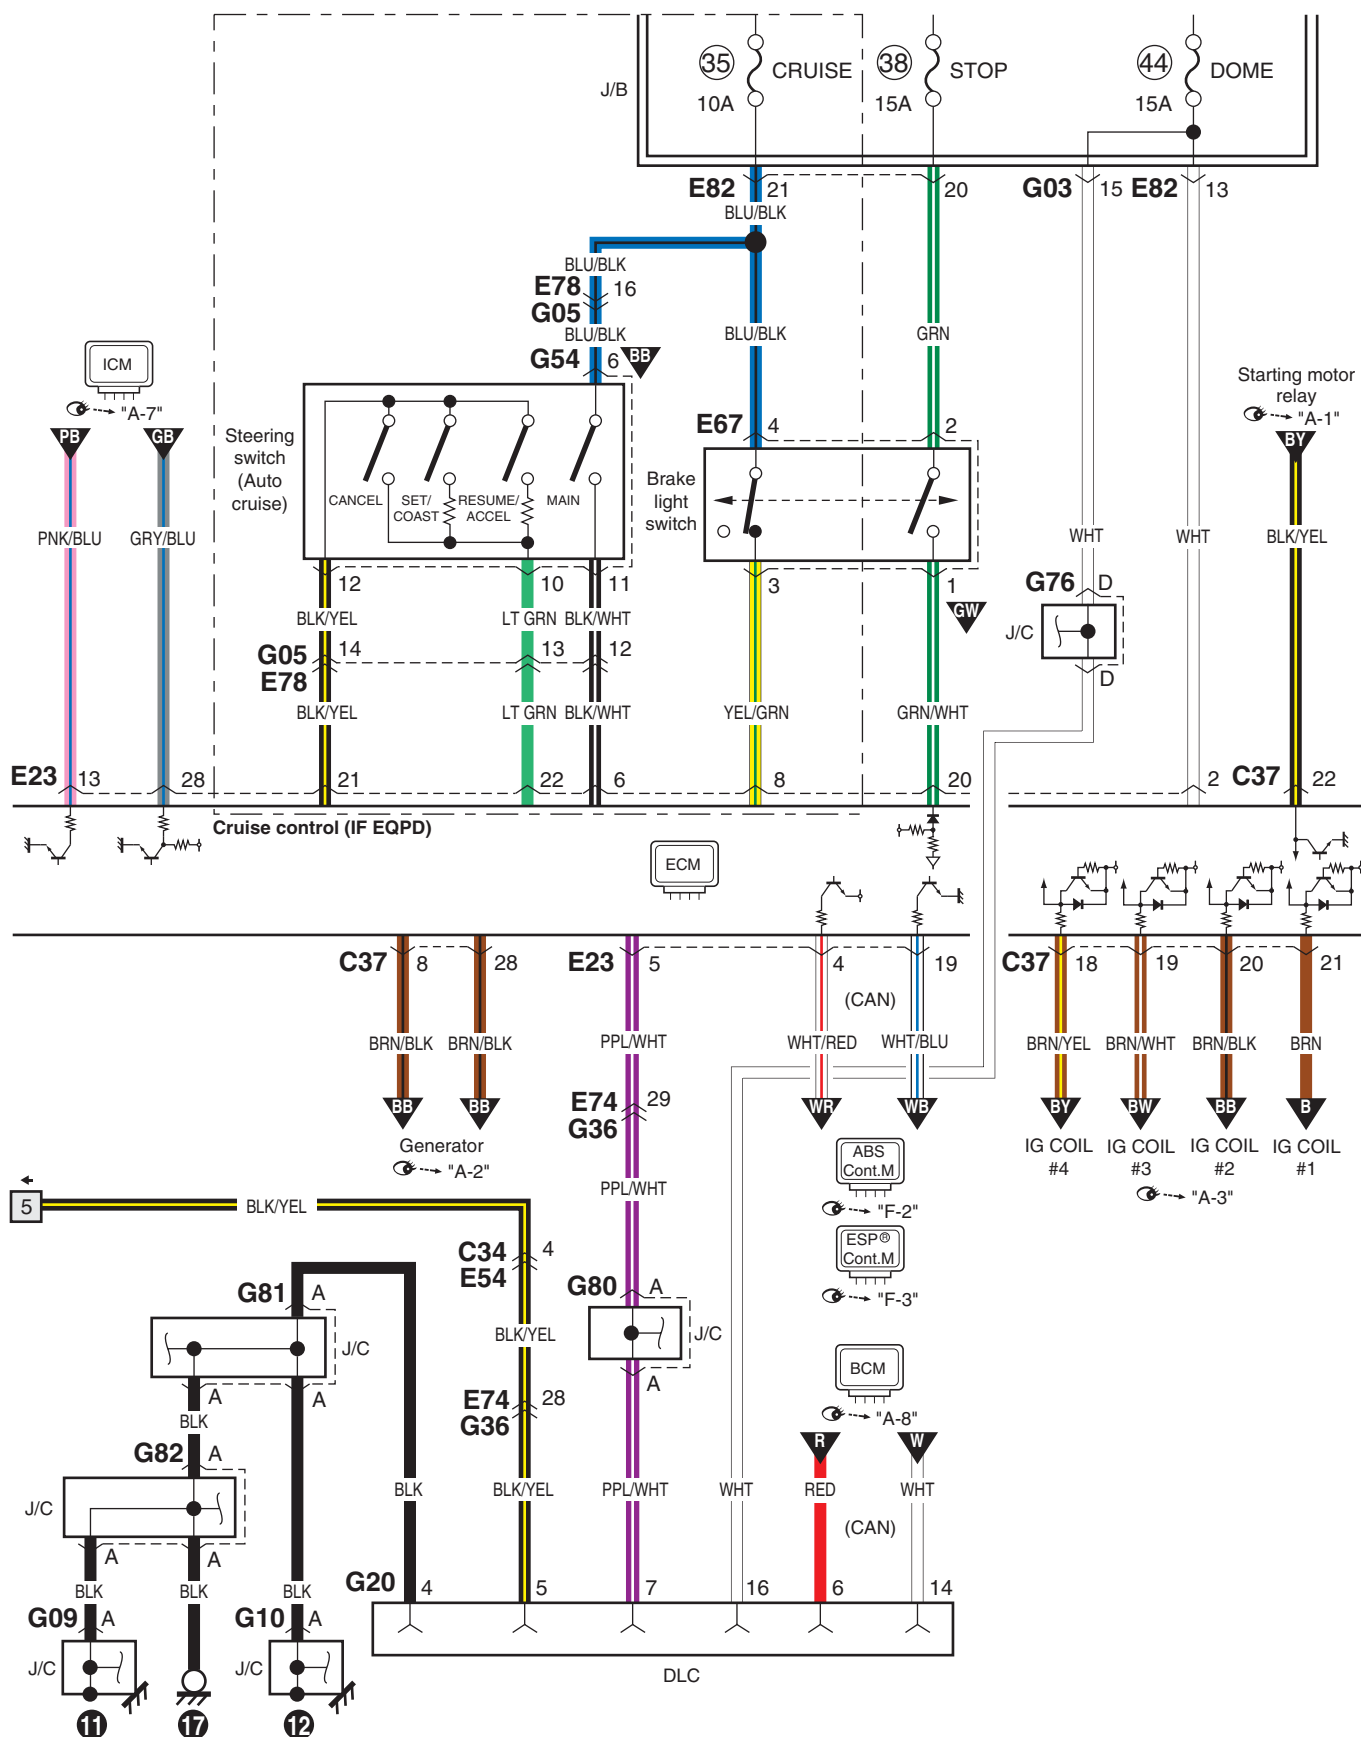


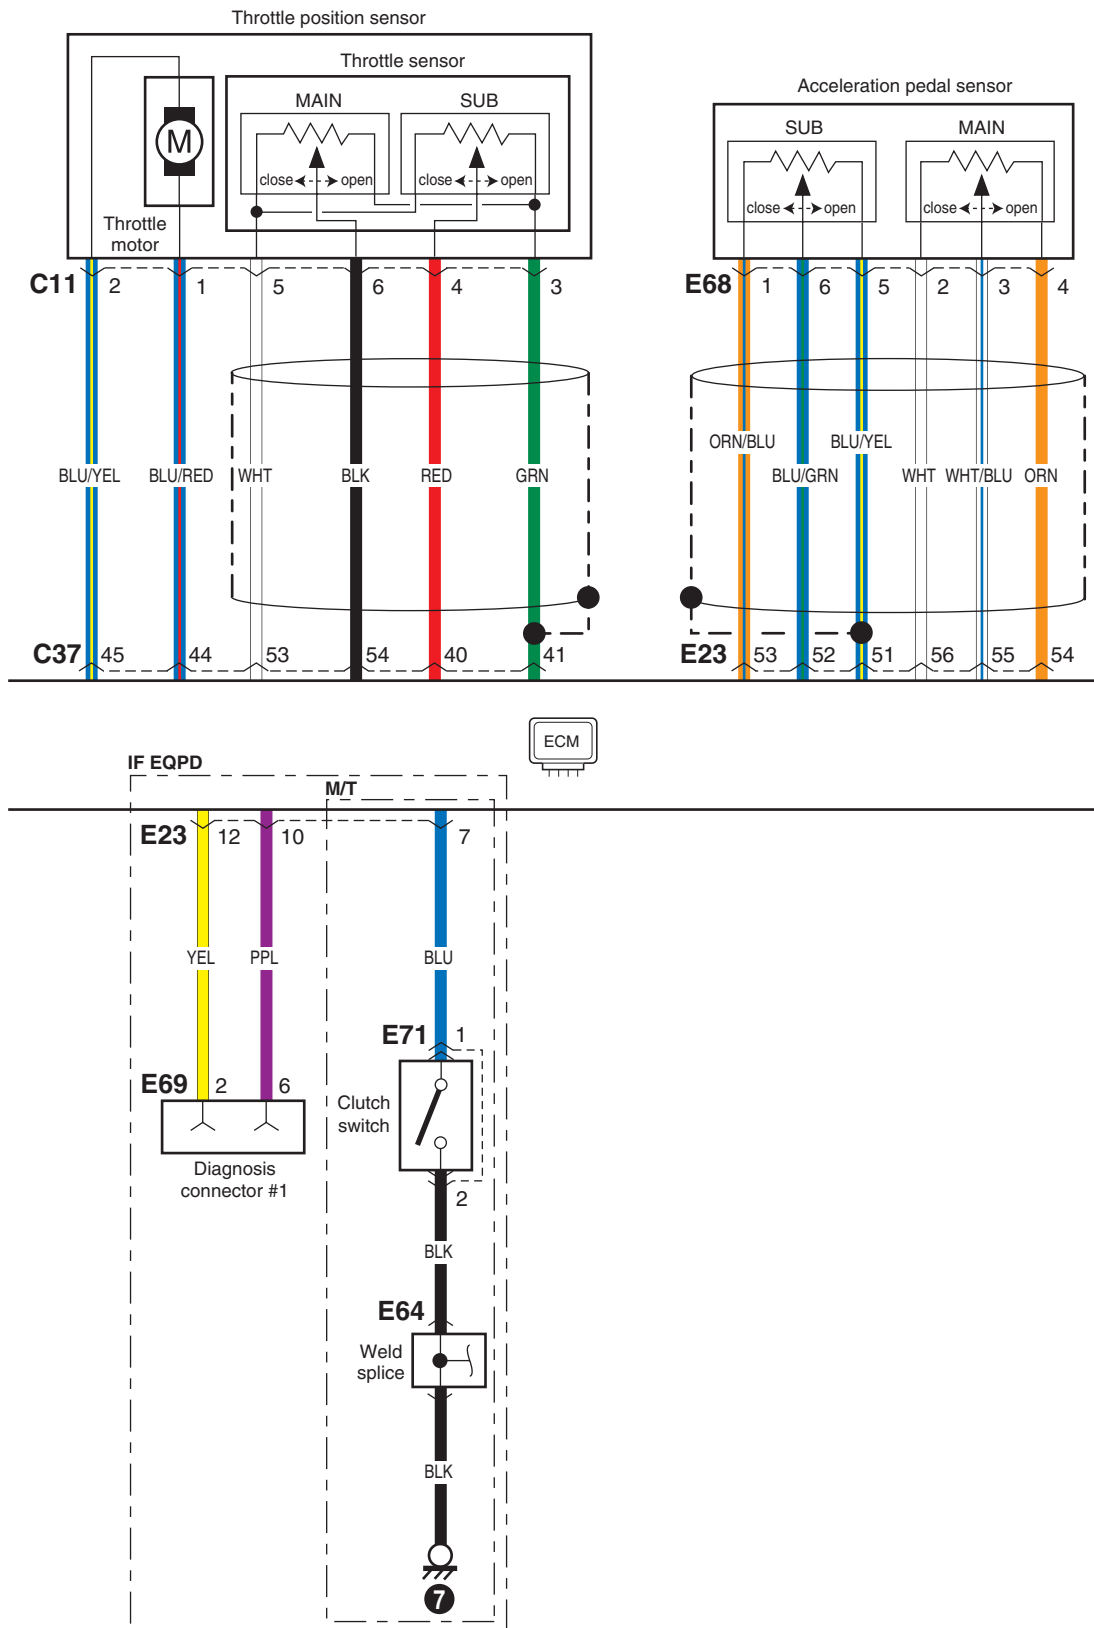



I6JB0B910931-01

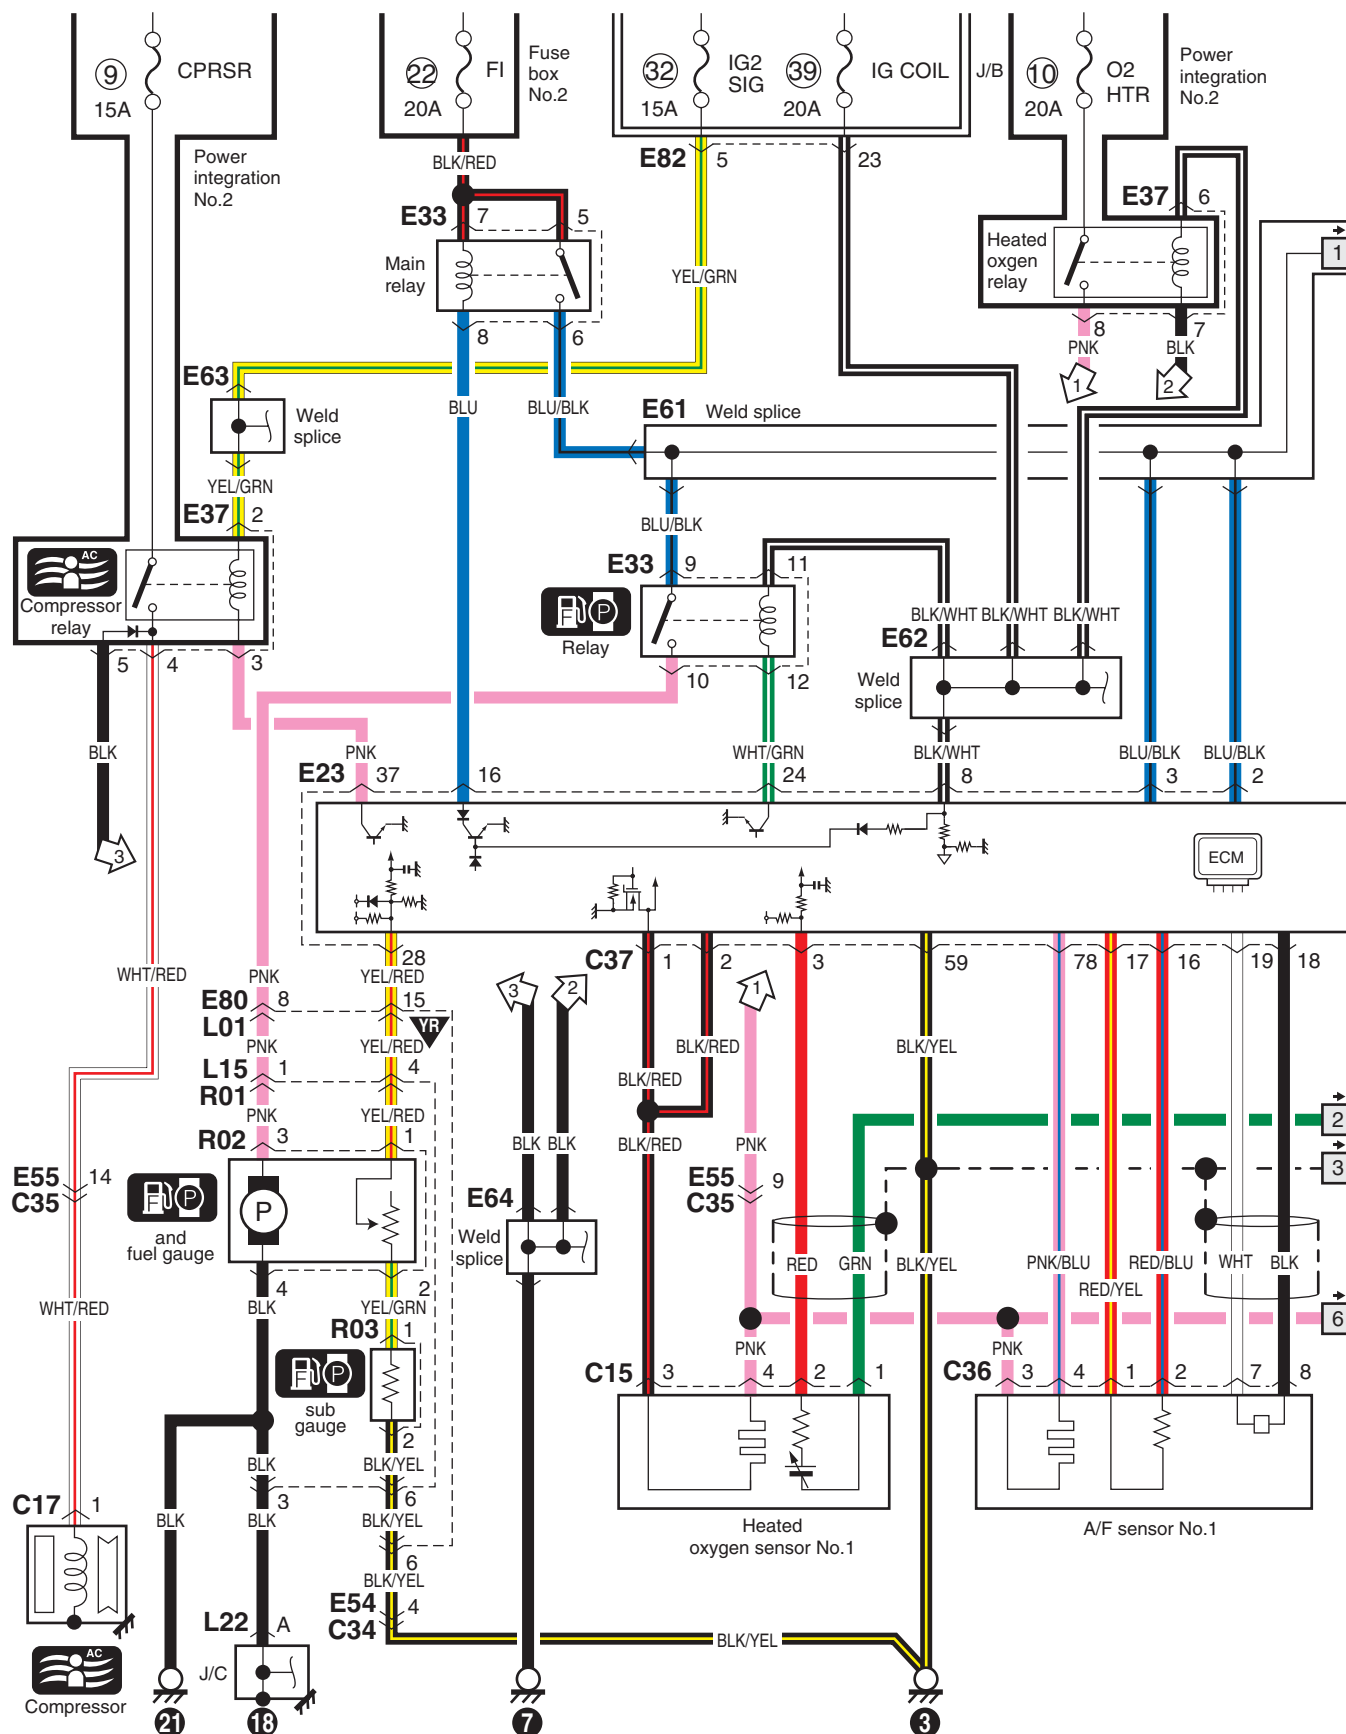

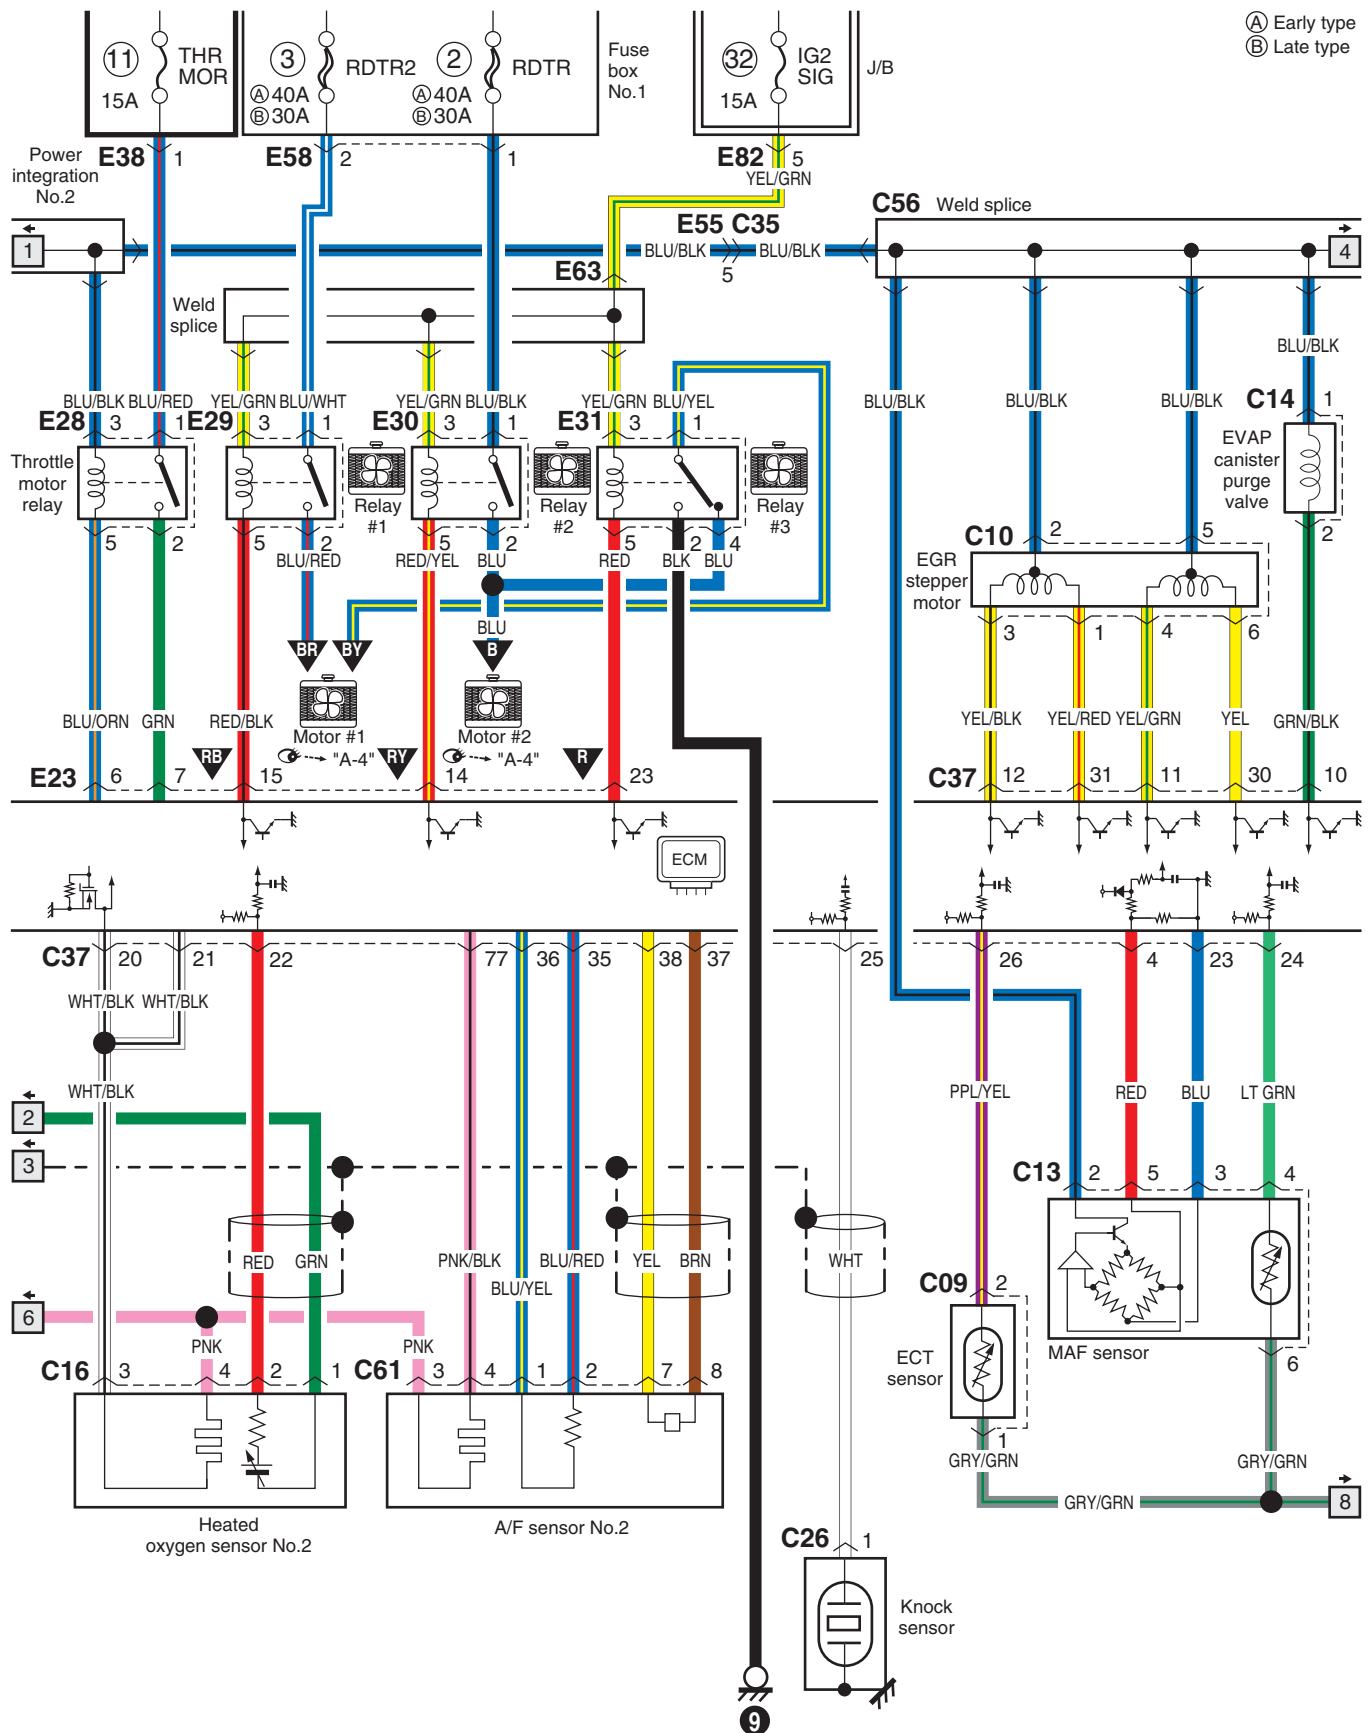

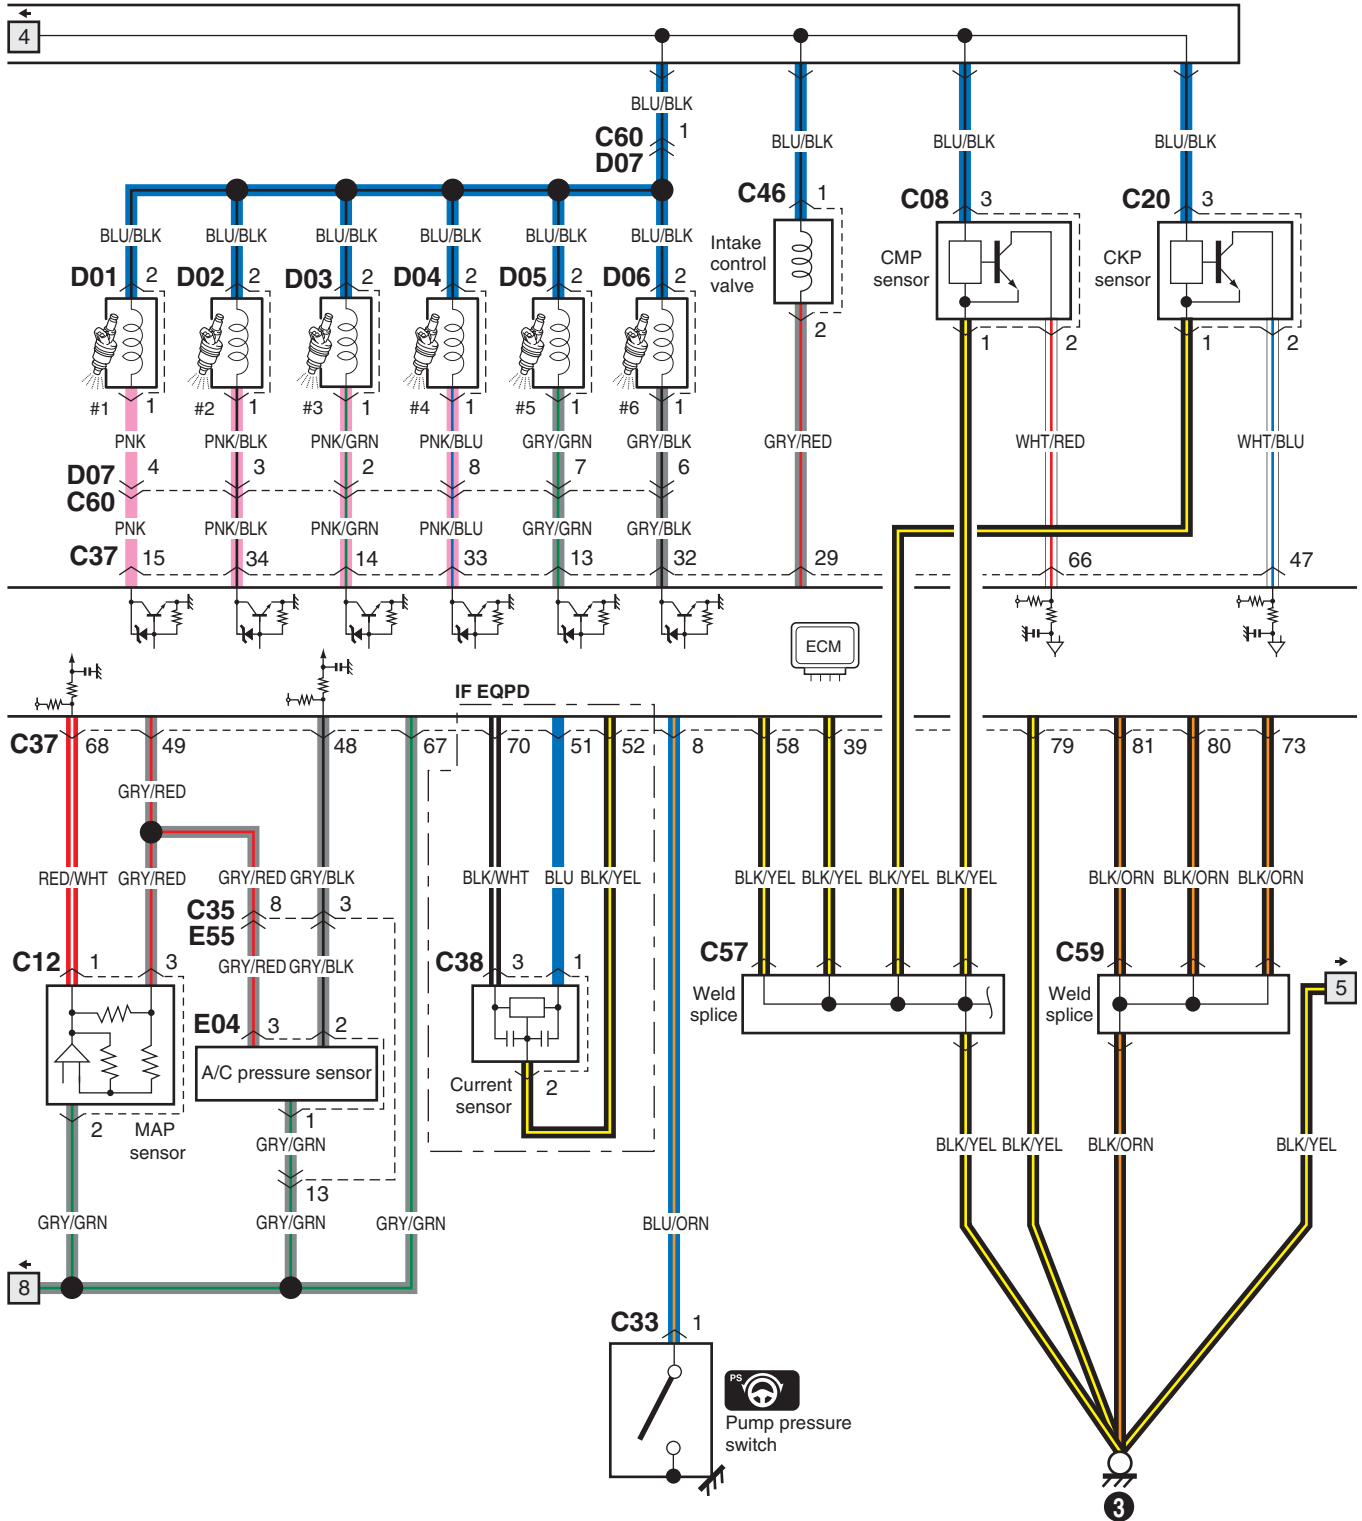
C56 Weld splice

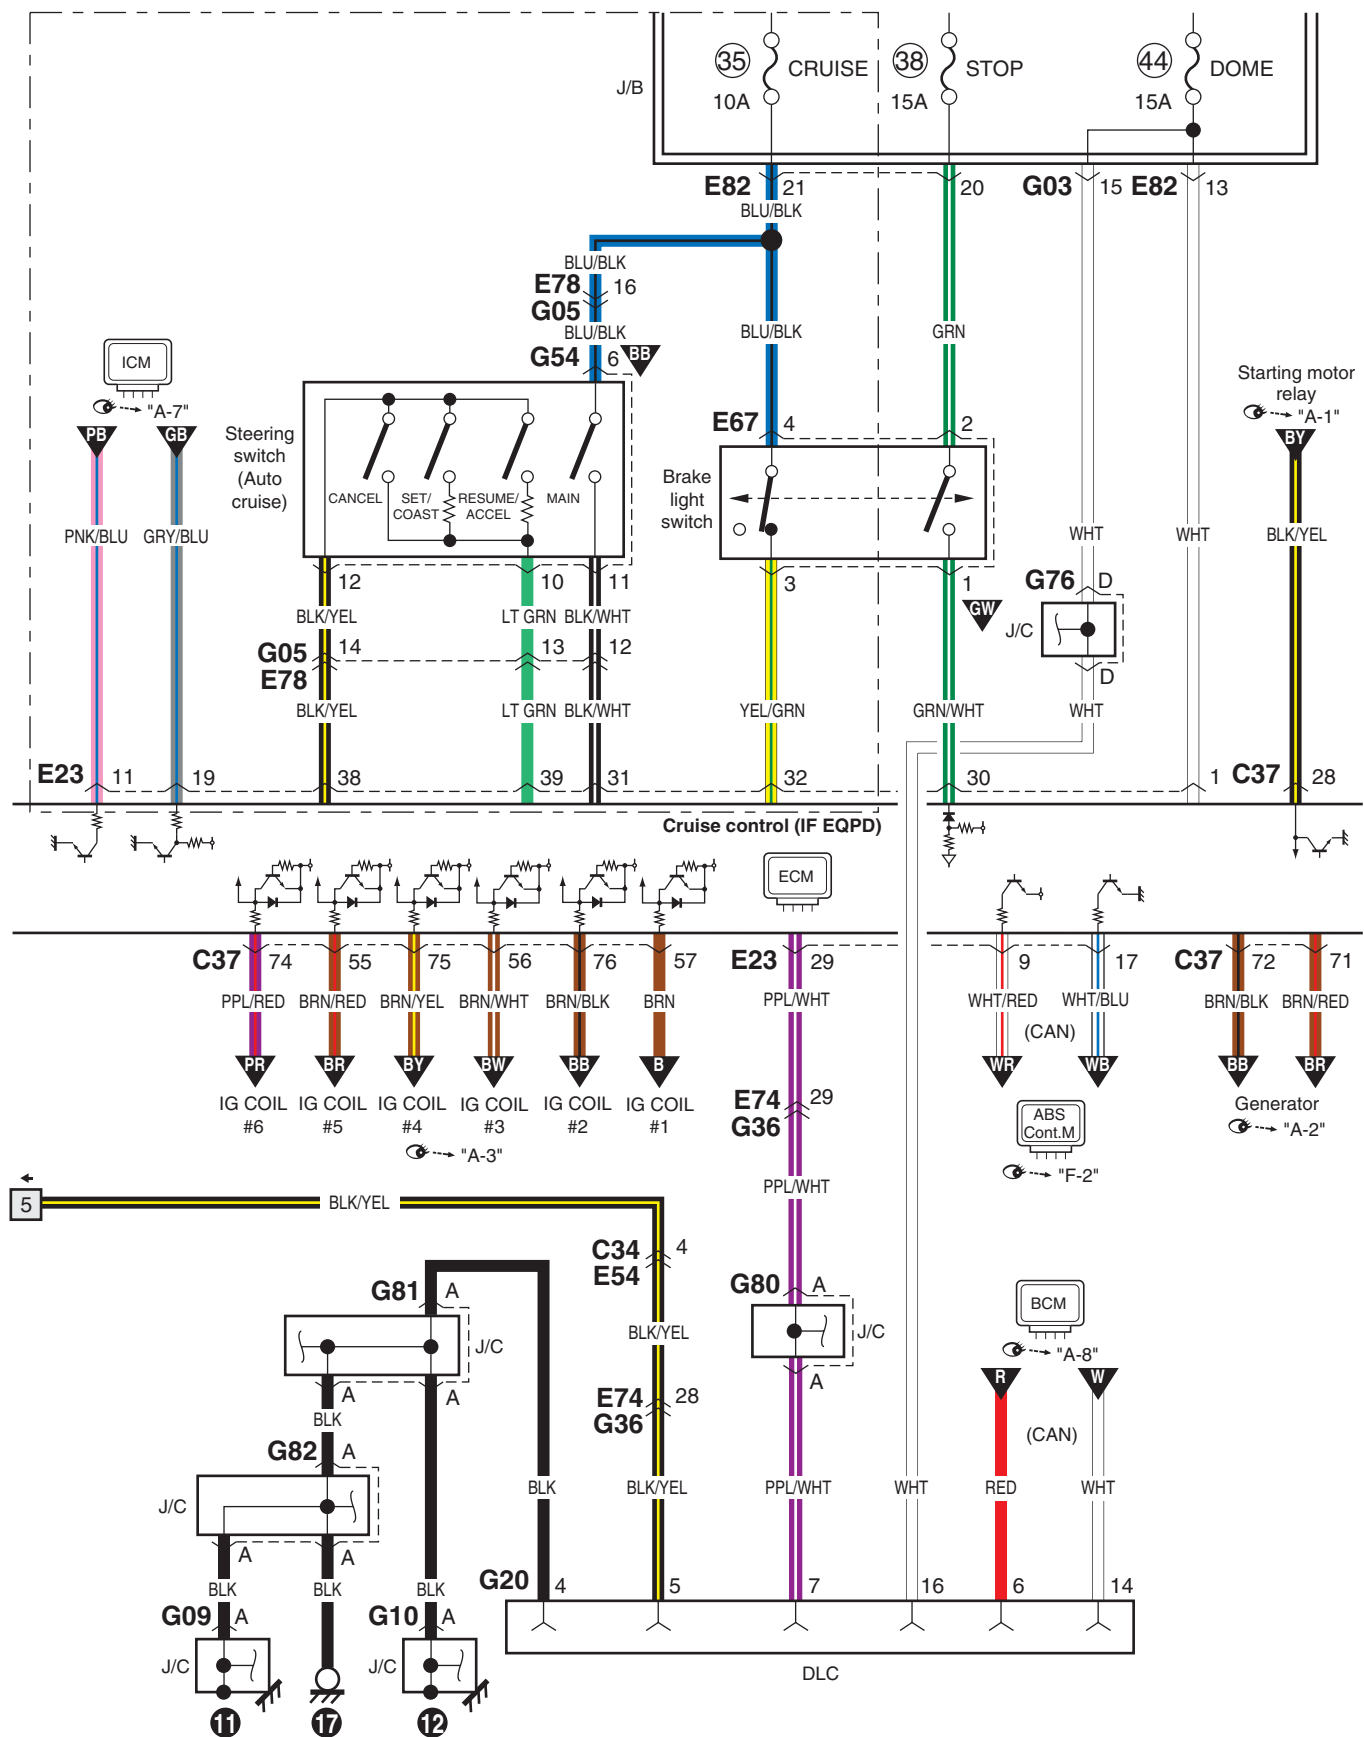

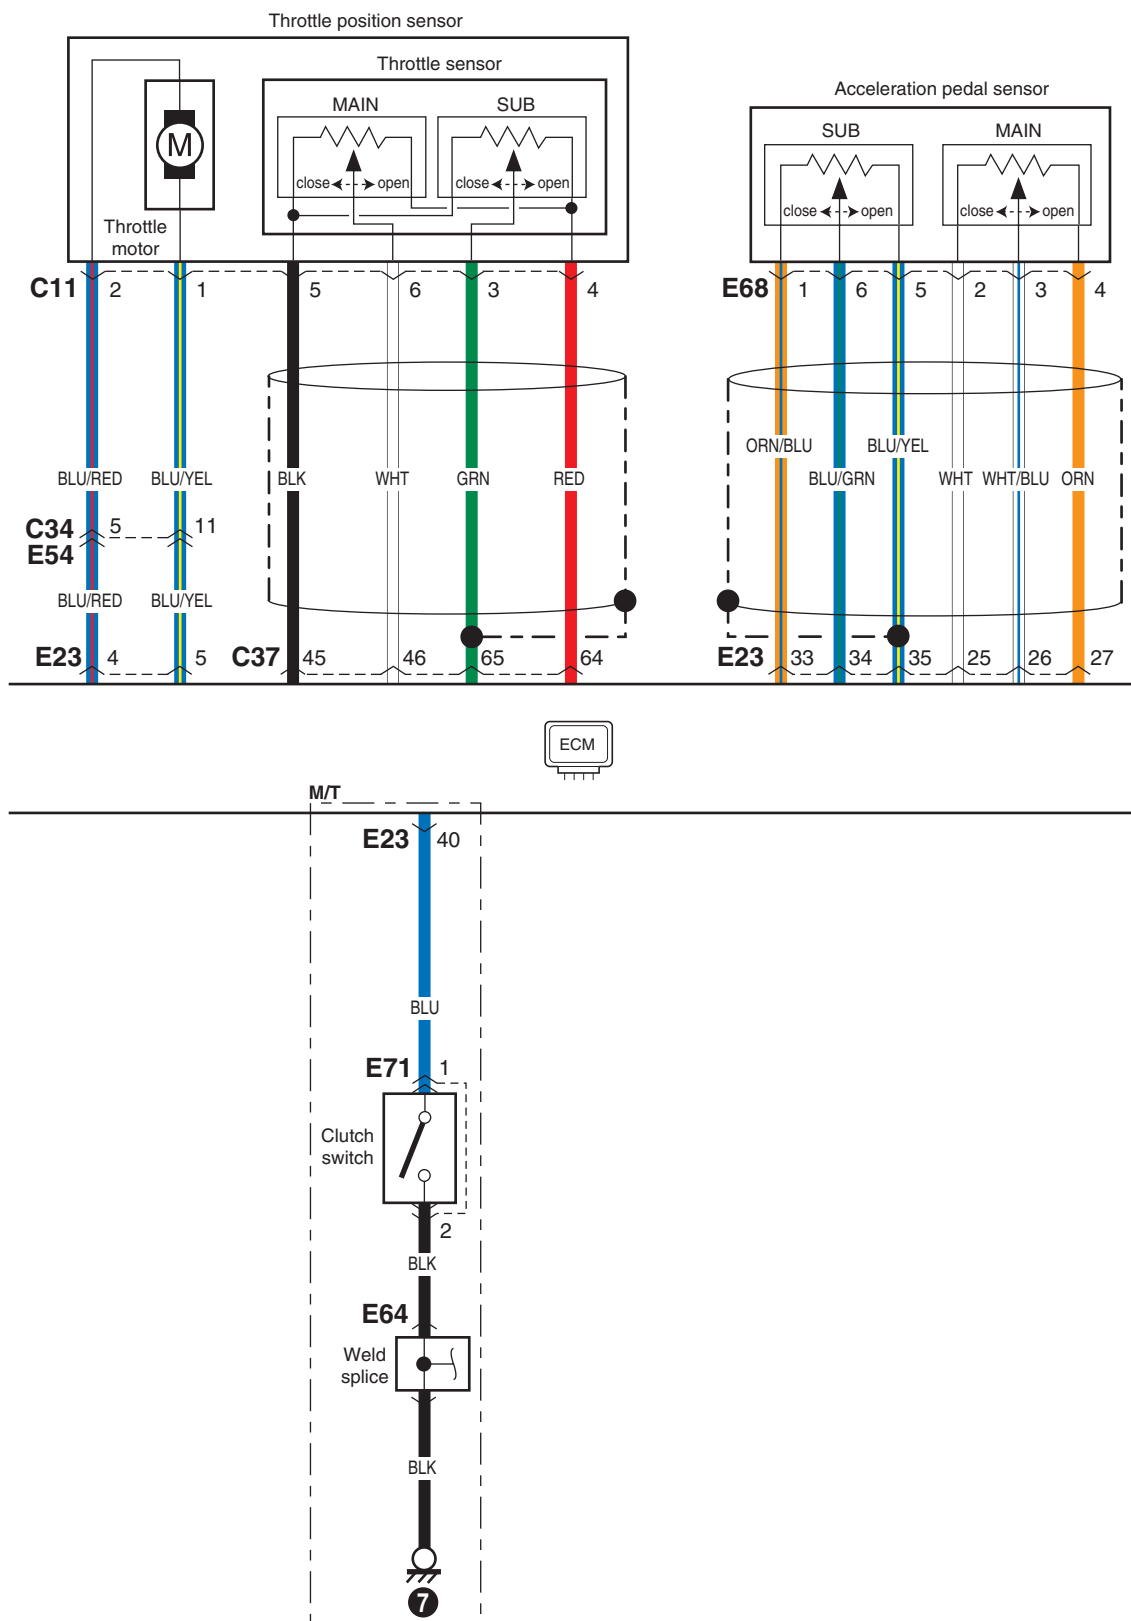
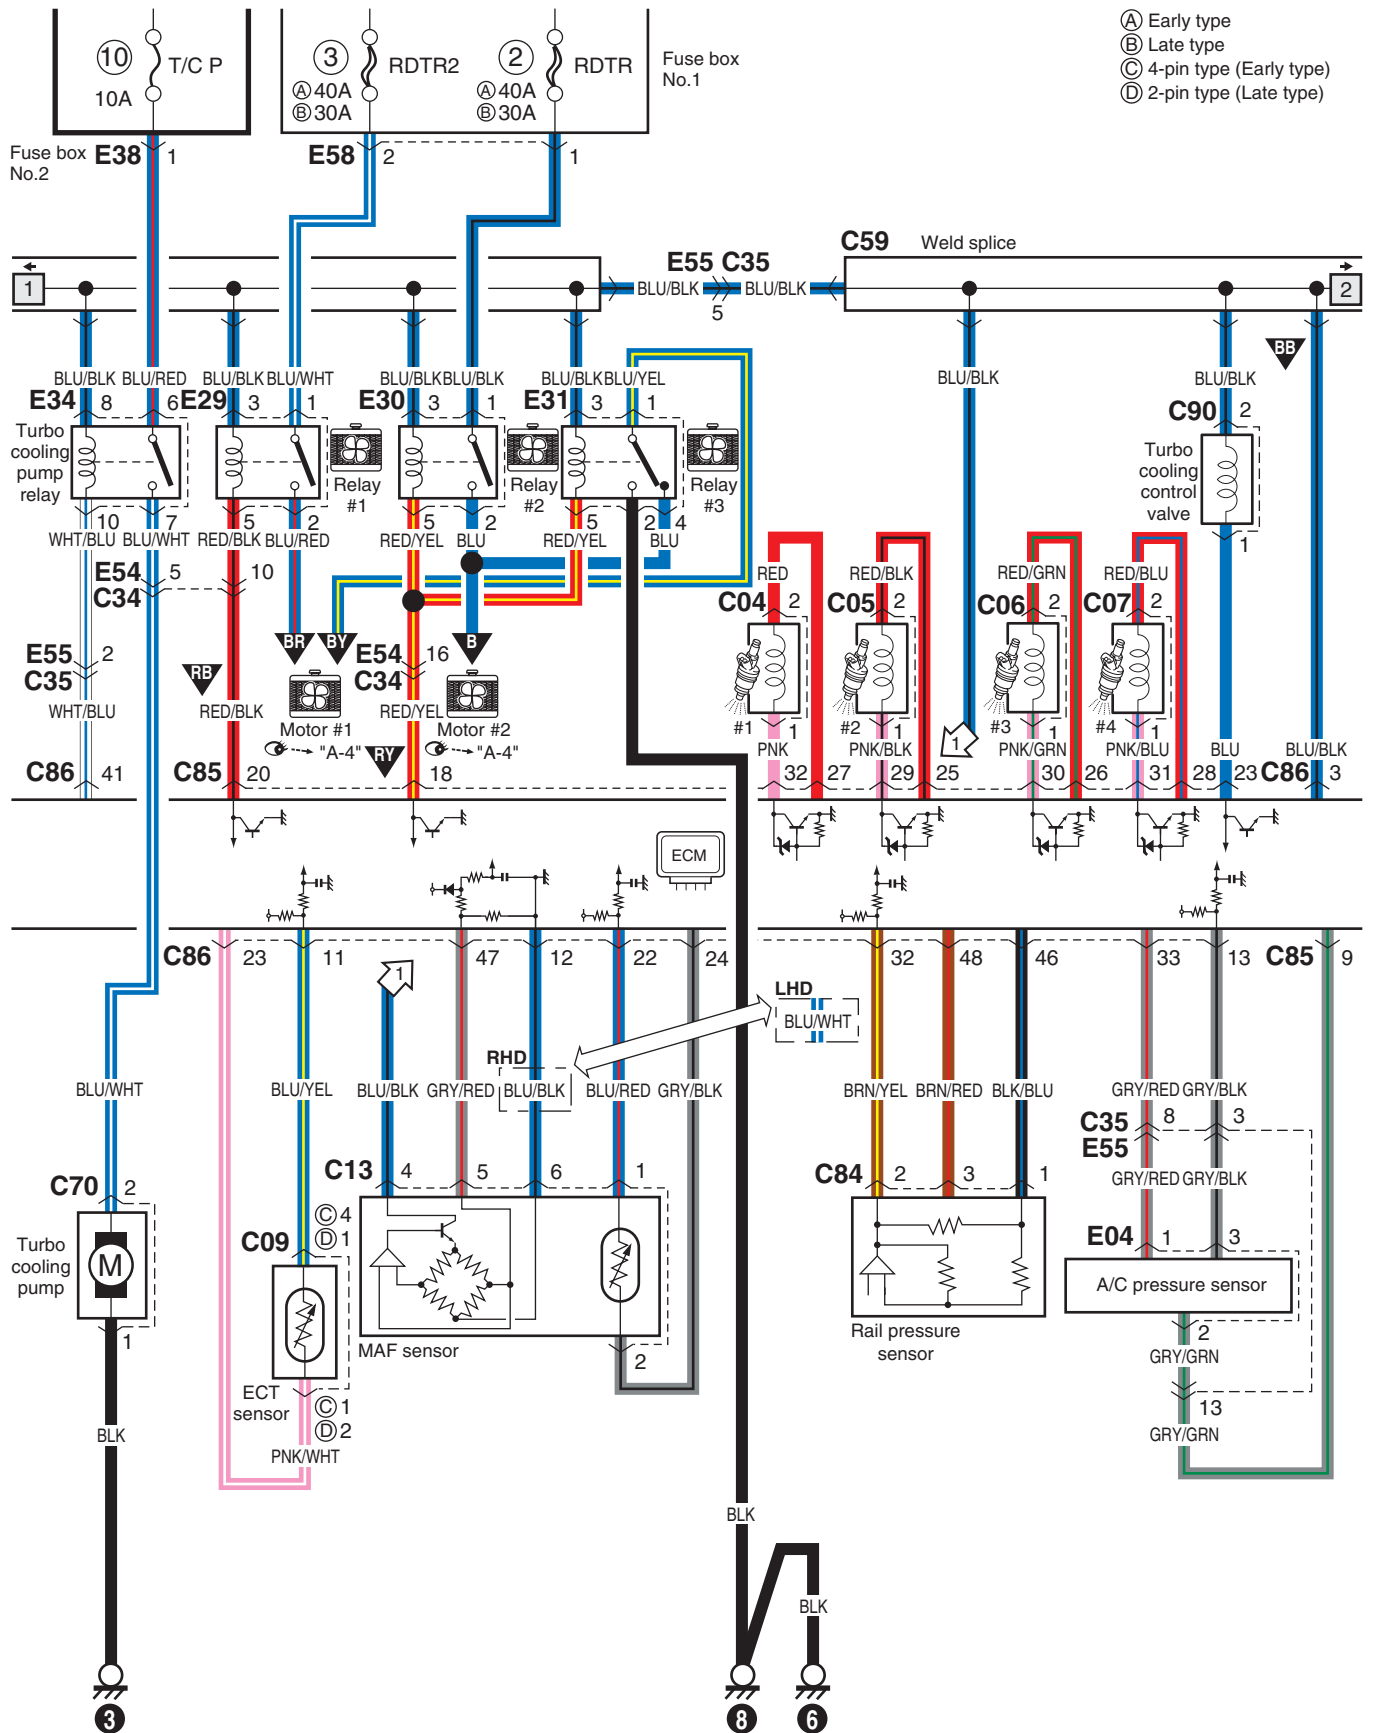



A-5 Engine and A/C Control System Circuit Diagram (DSL)


S6JB0B910E048

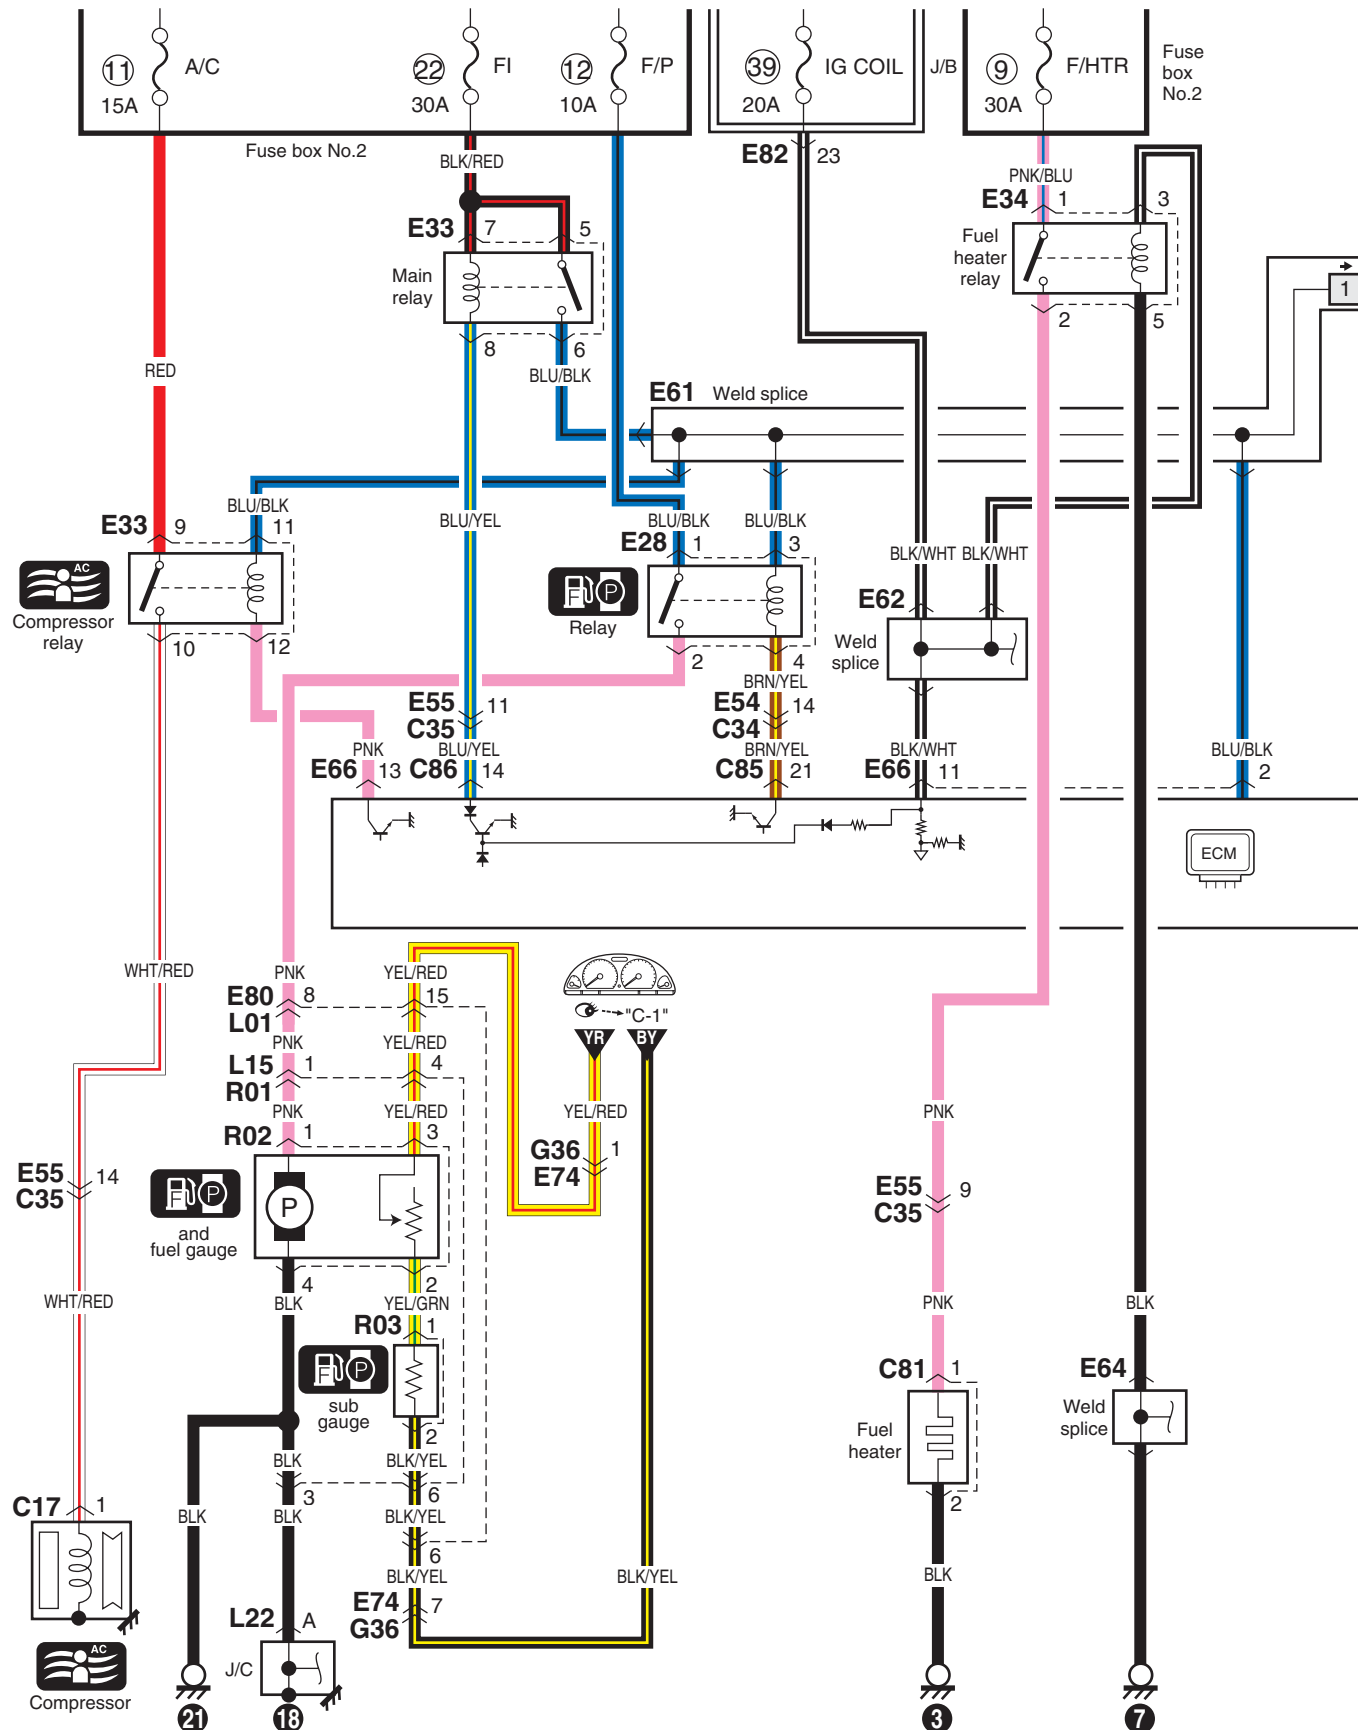


 16JB0B910935-02




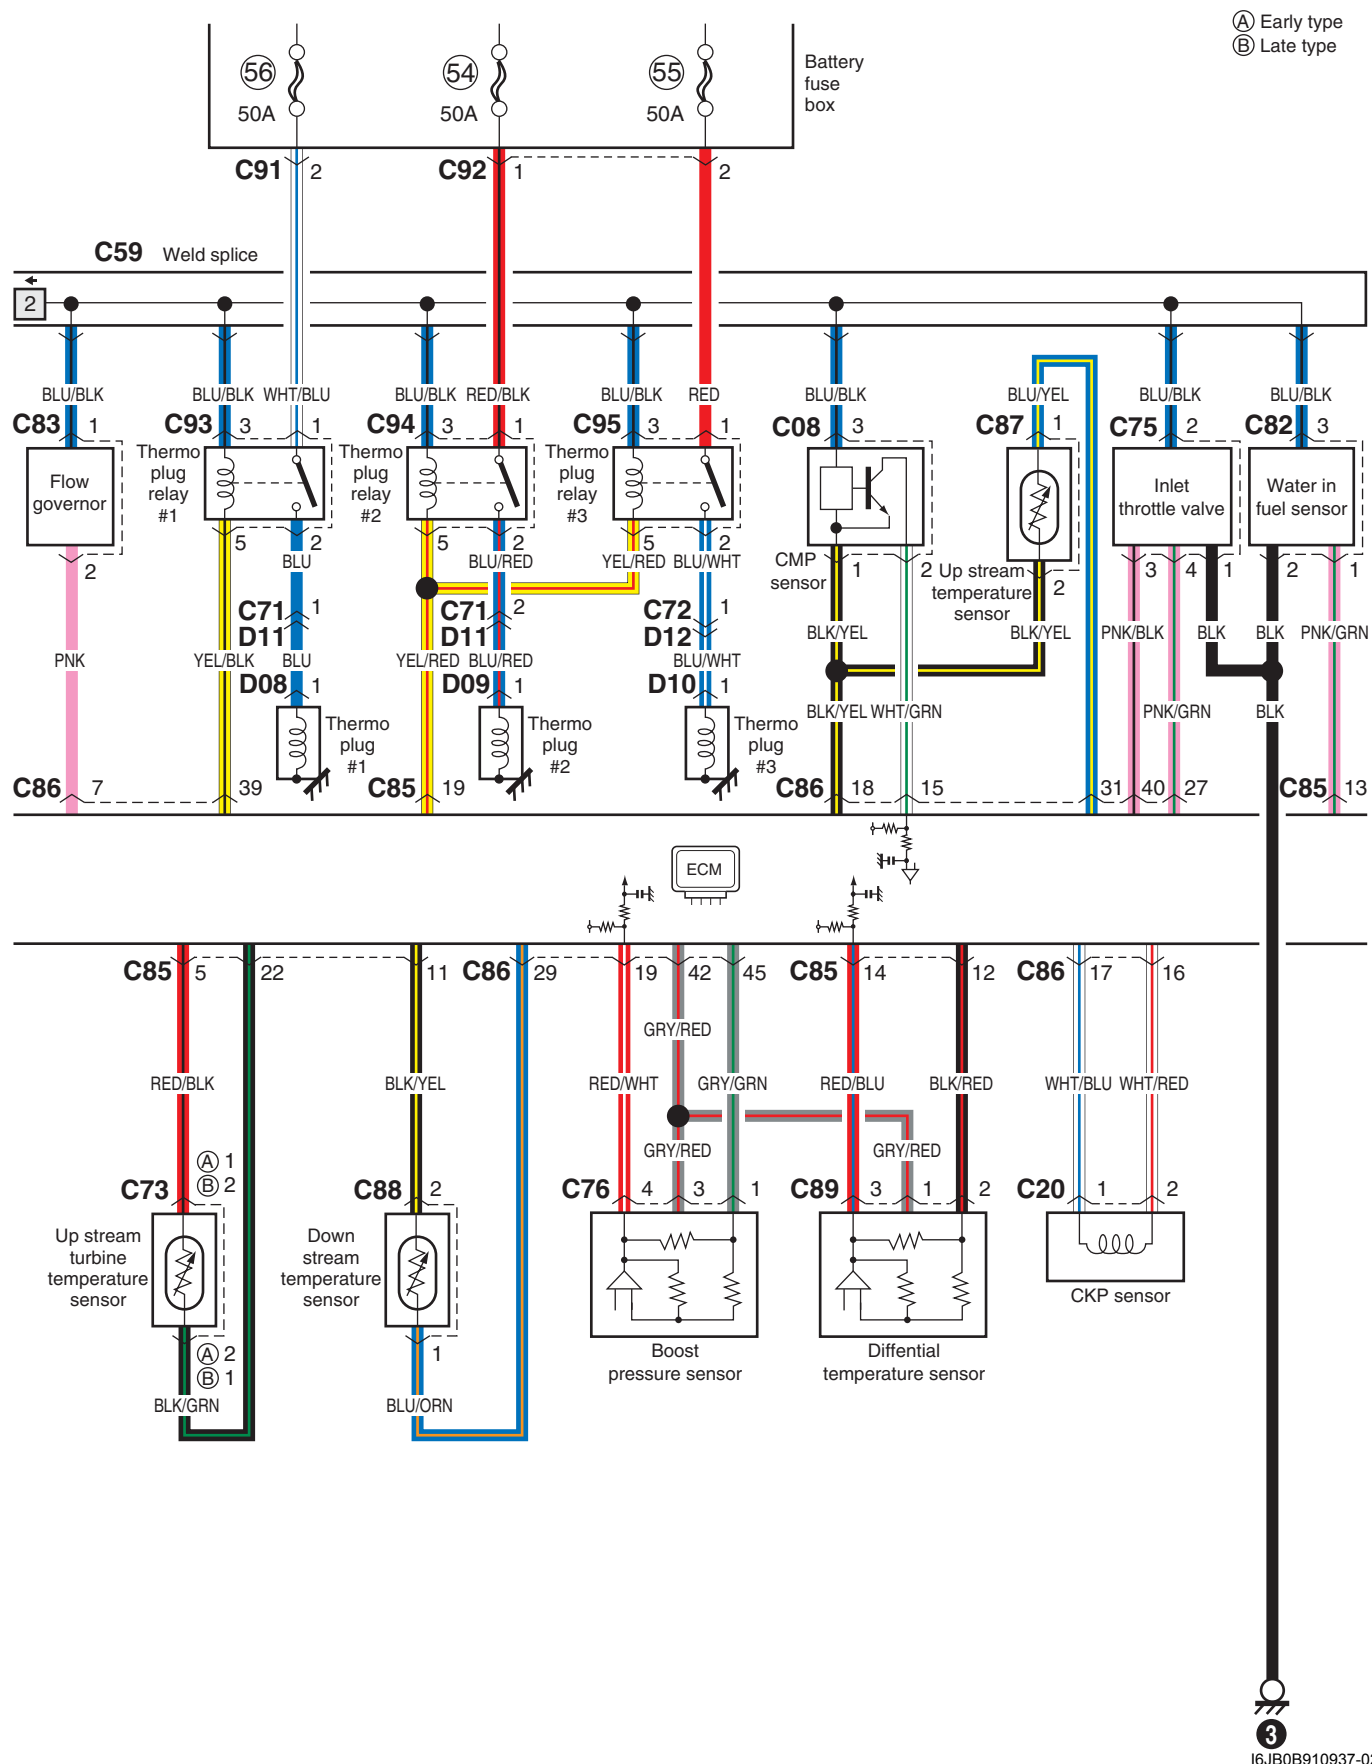



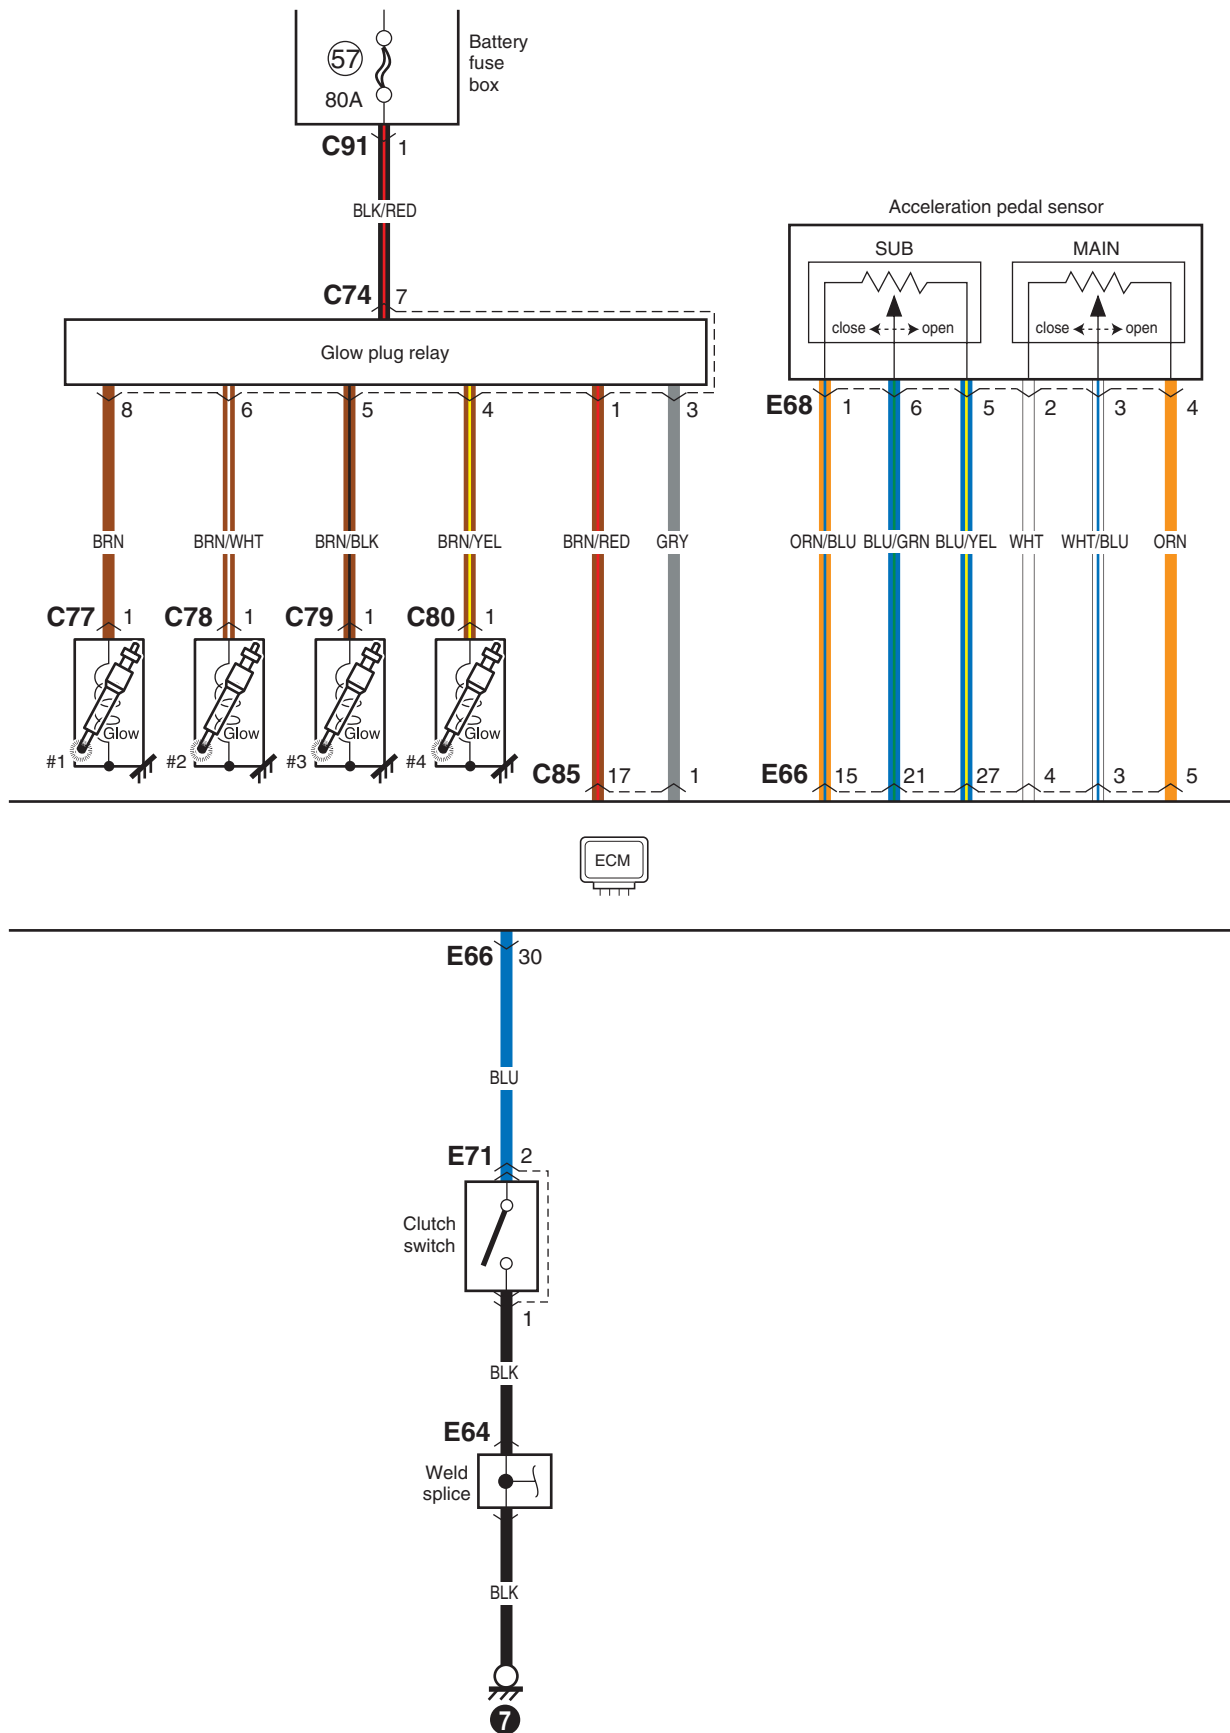


I6JB0B910939-01

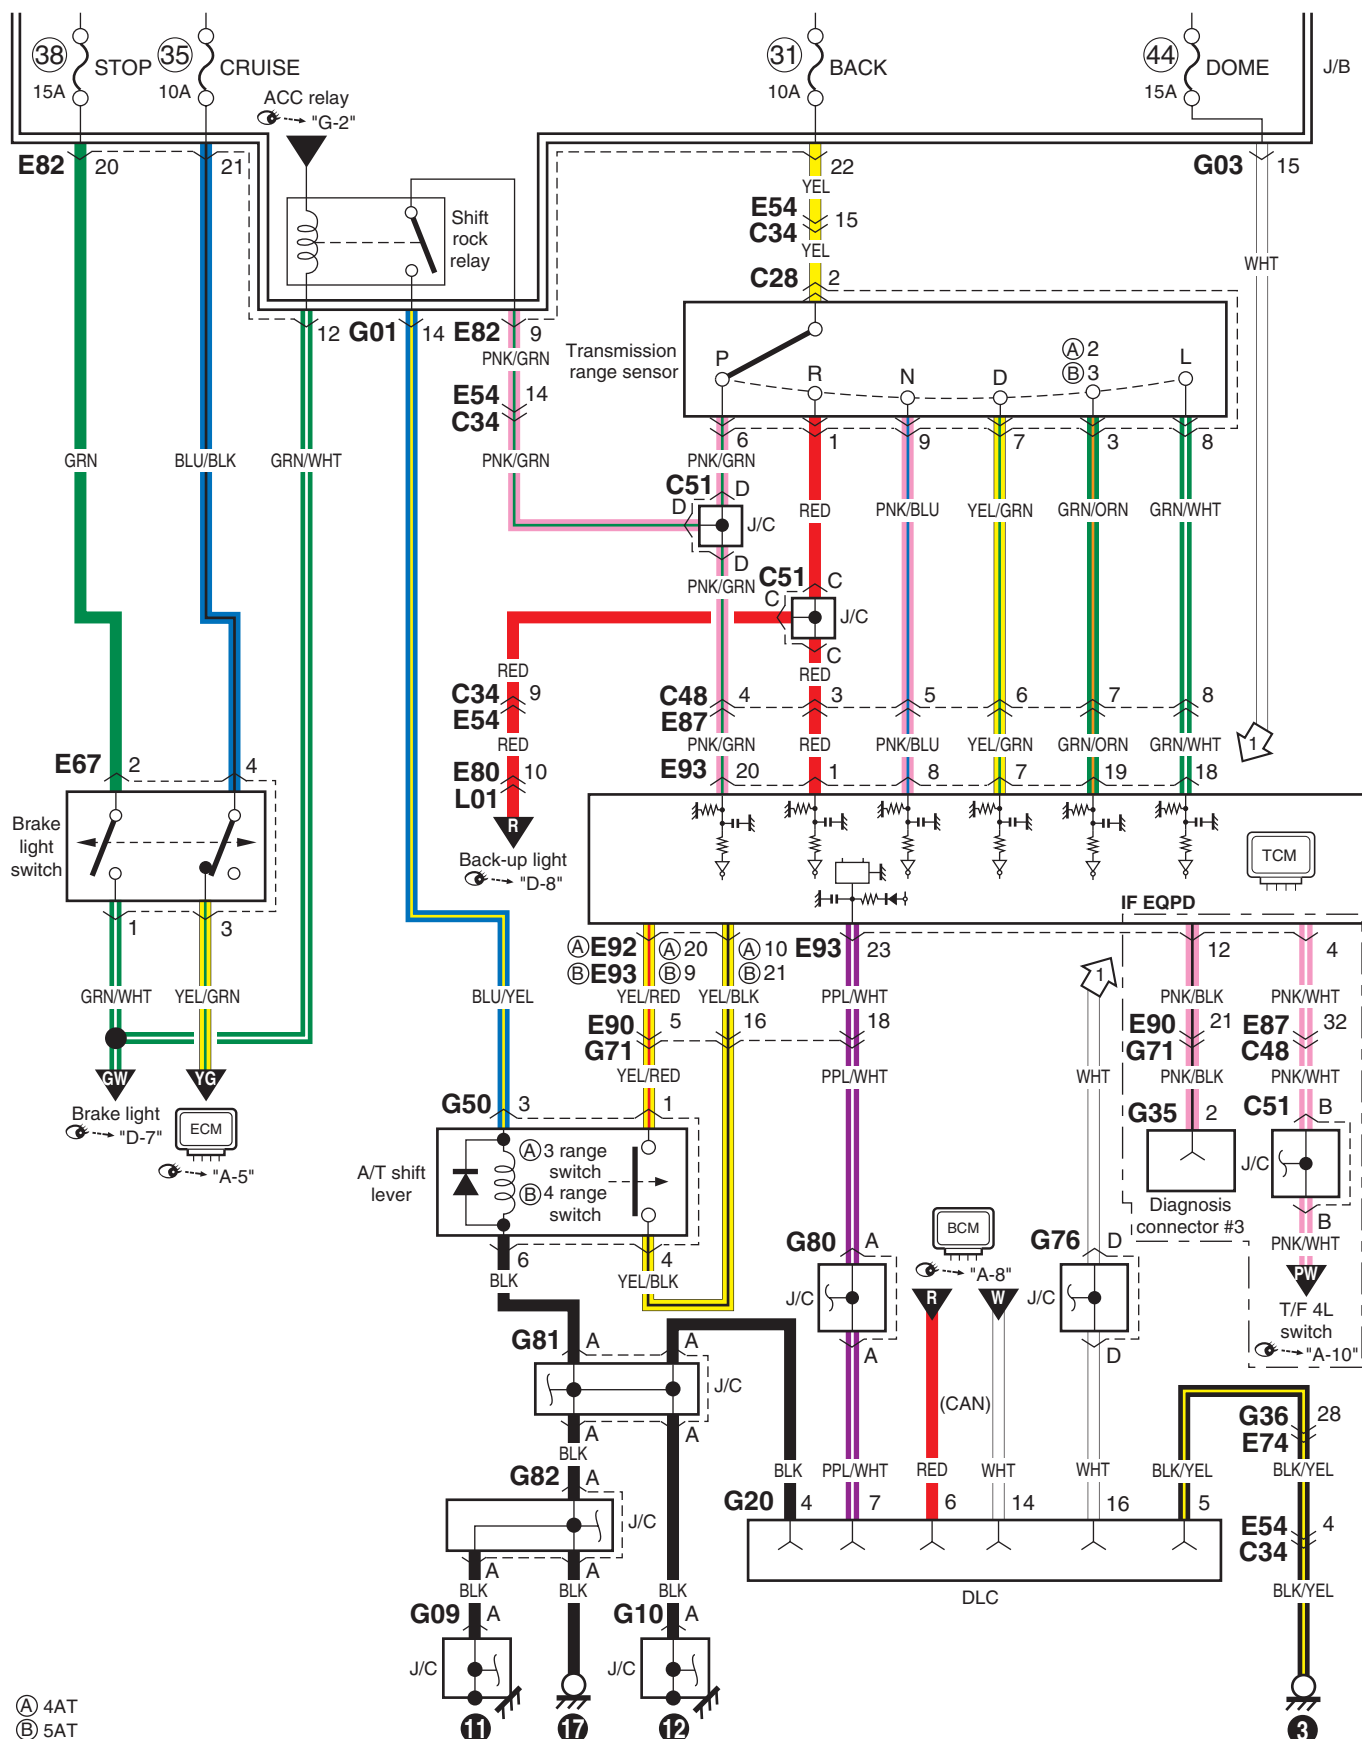


9A-104 Wiring Systems:

Ⓐ 4AT

 
Ⓟ 5AT



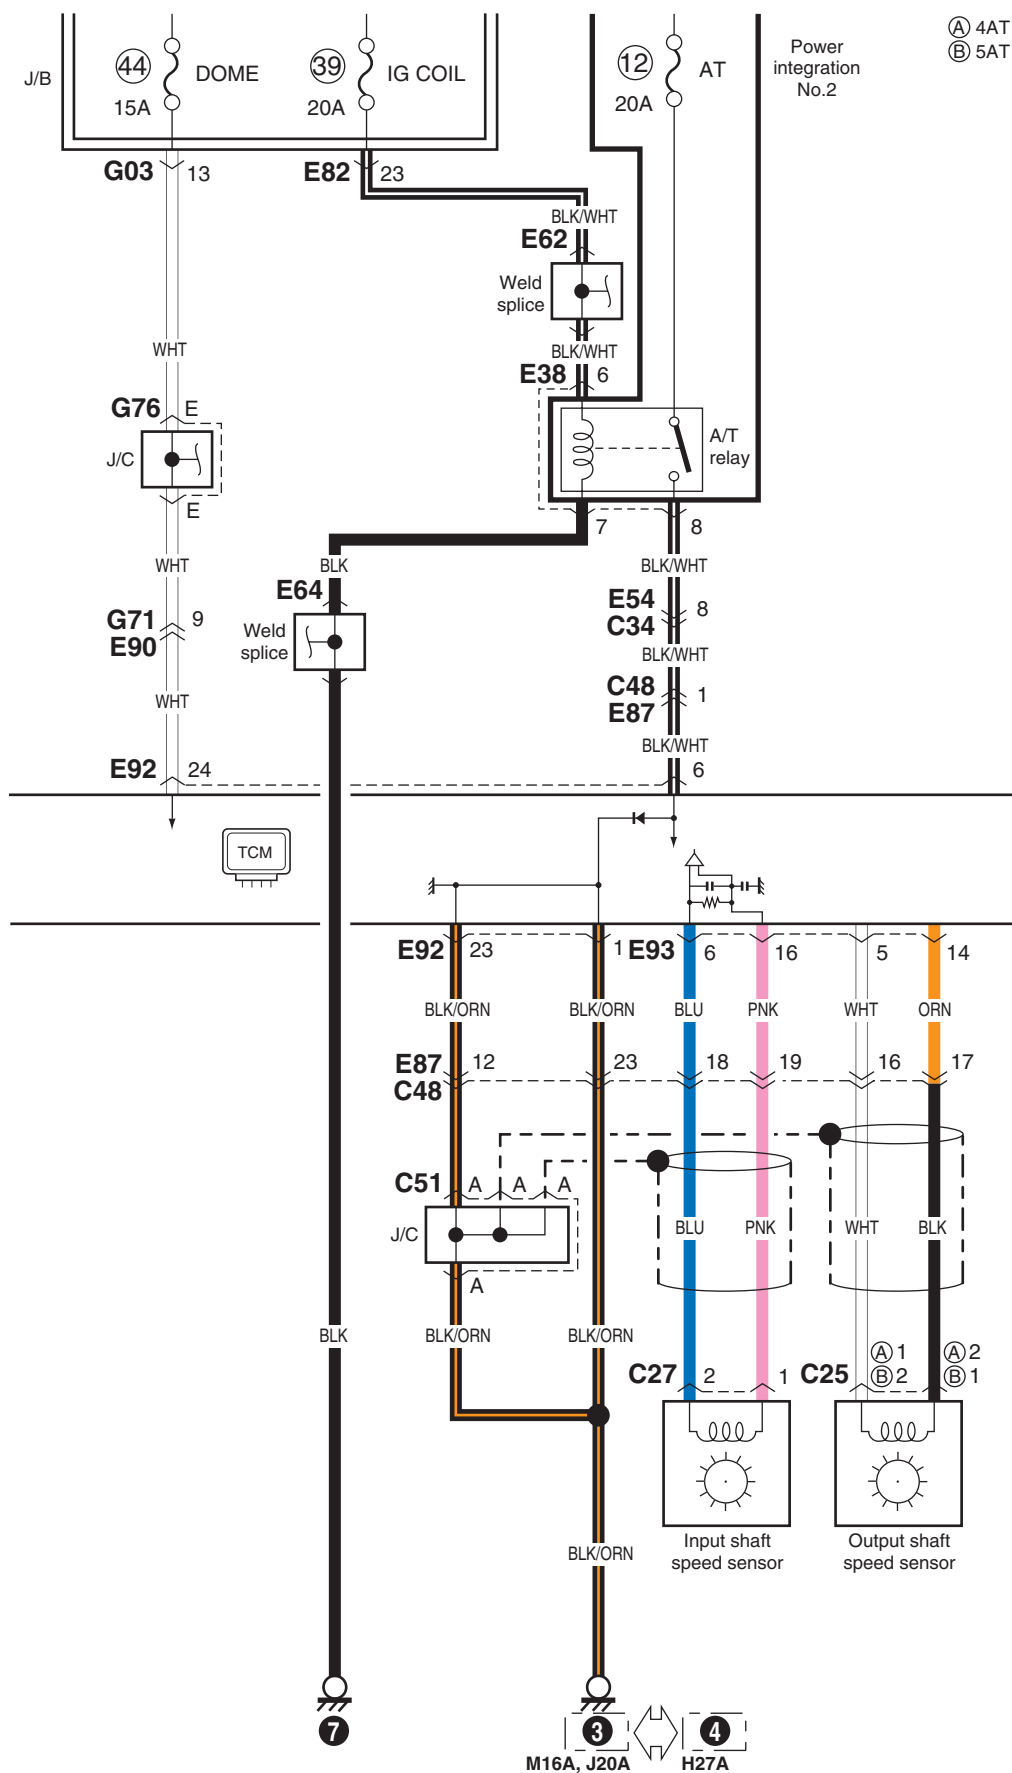

A-7 Immobilizer System Circuit Diagram


S6JB0B910E010

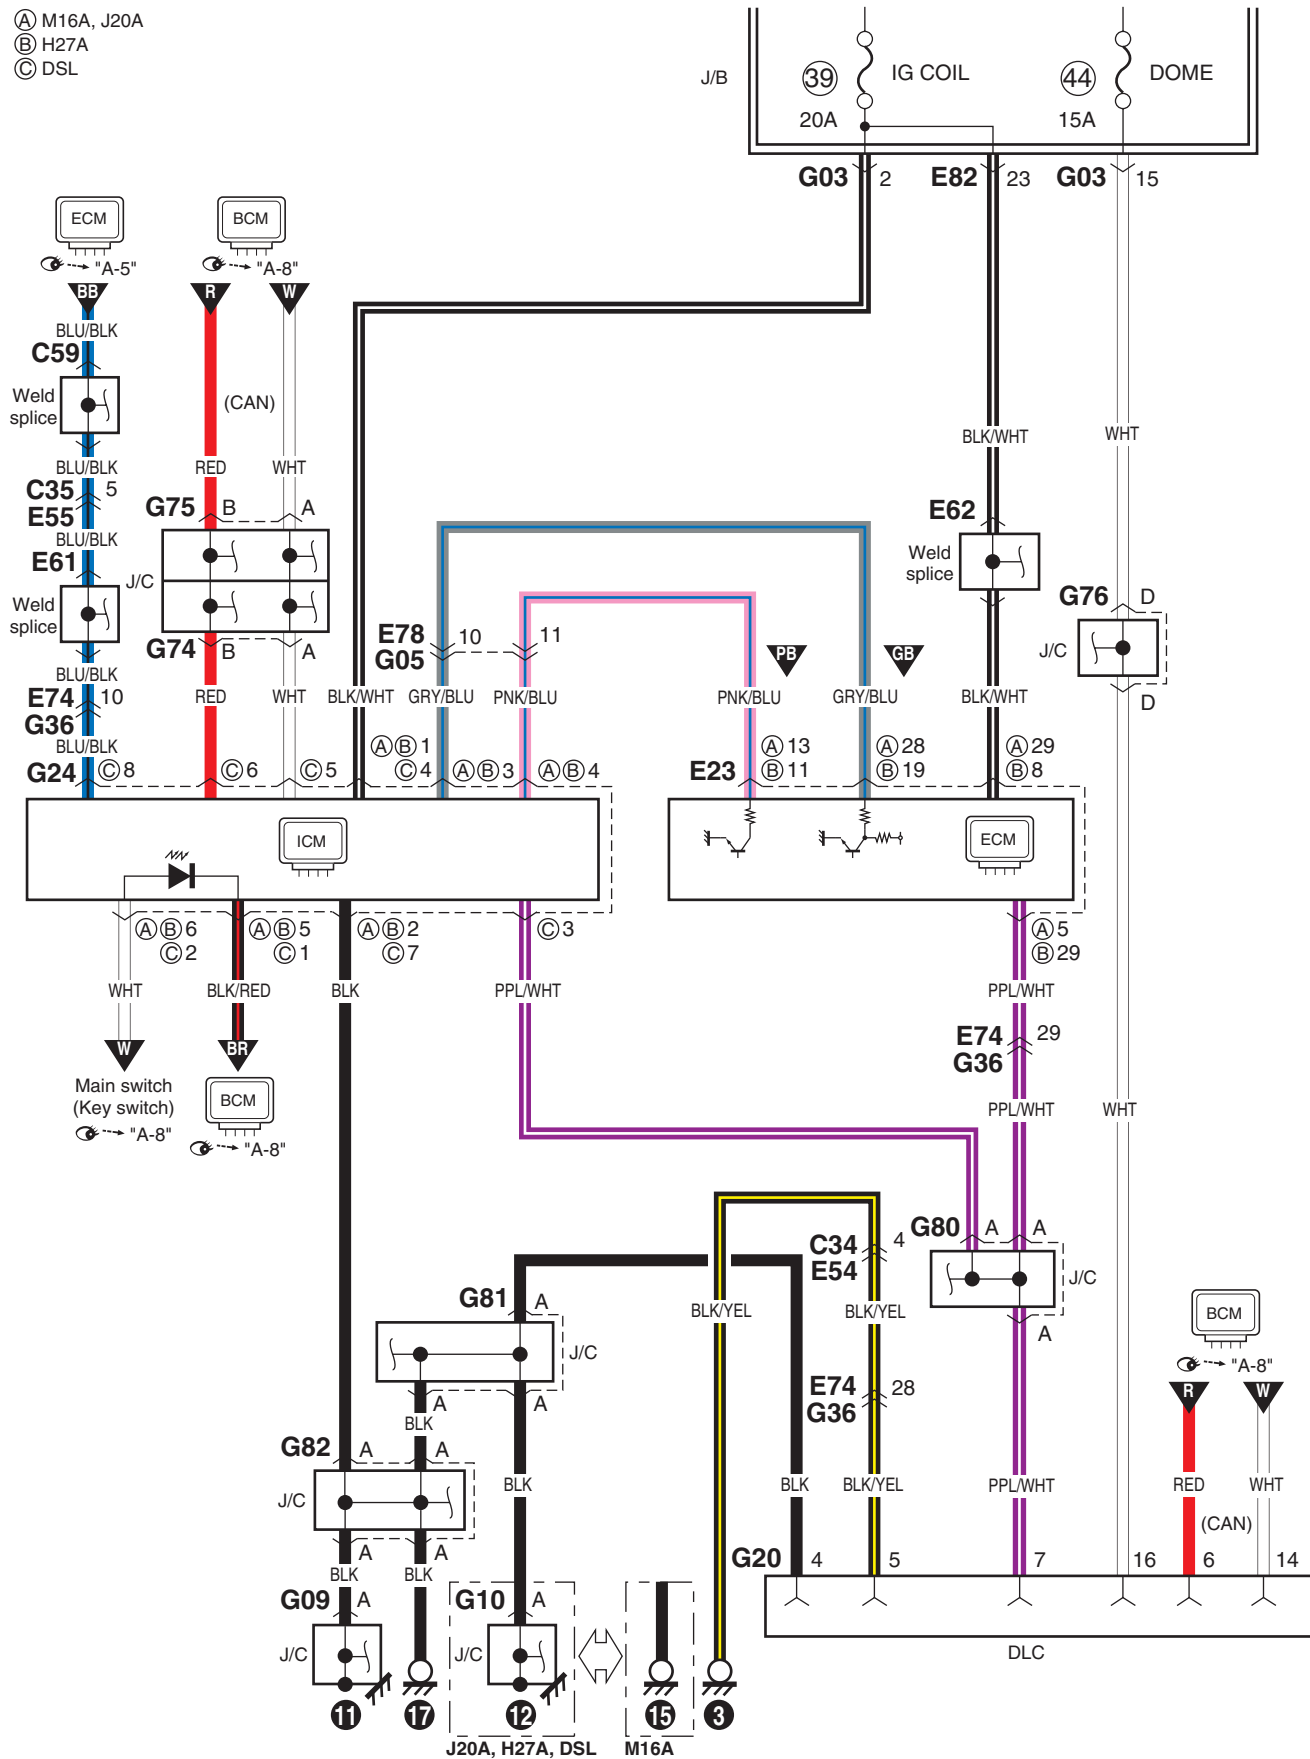



I6JB0B910942-02


A-8 Body Control System Circuit Diagram

S6JB0B910E011


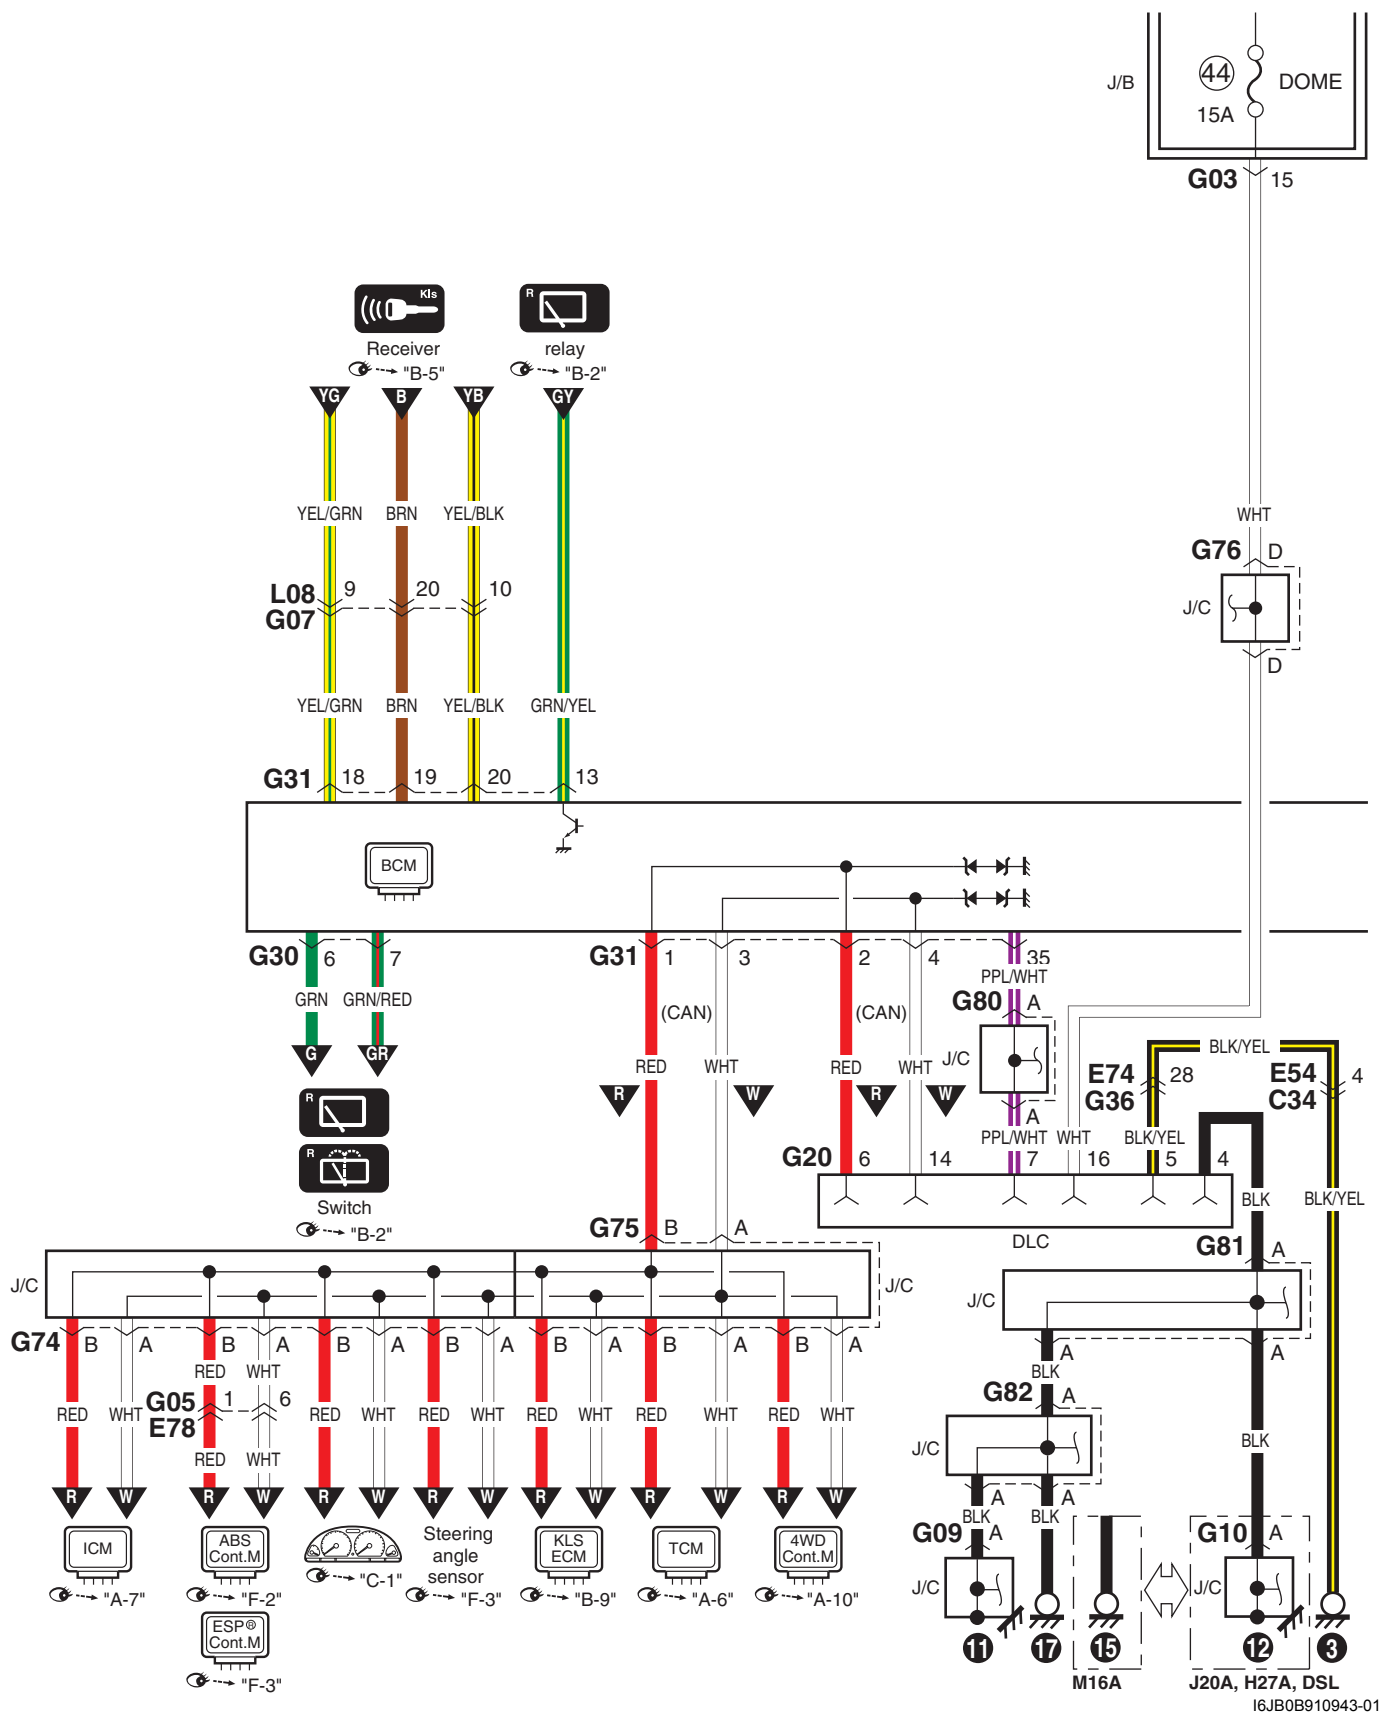



I6JB0B910943-01

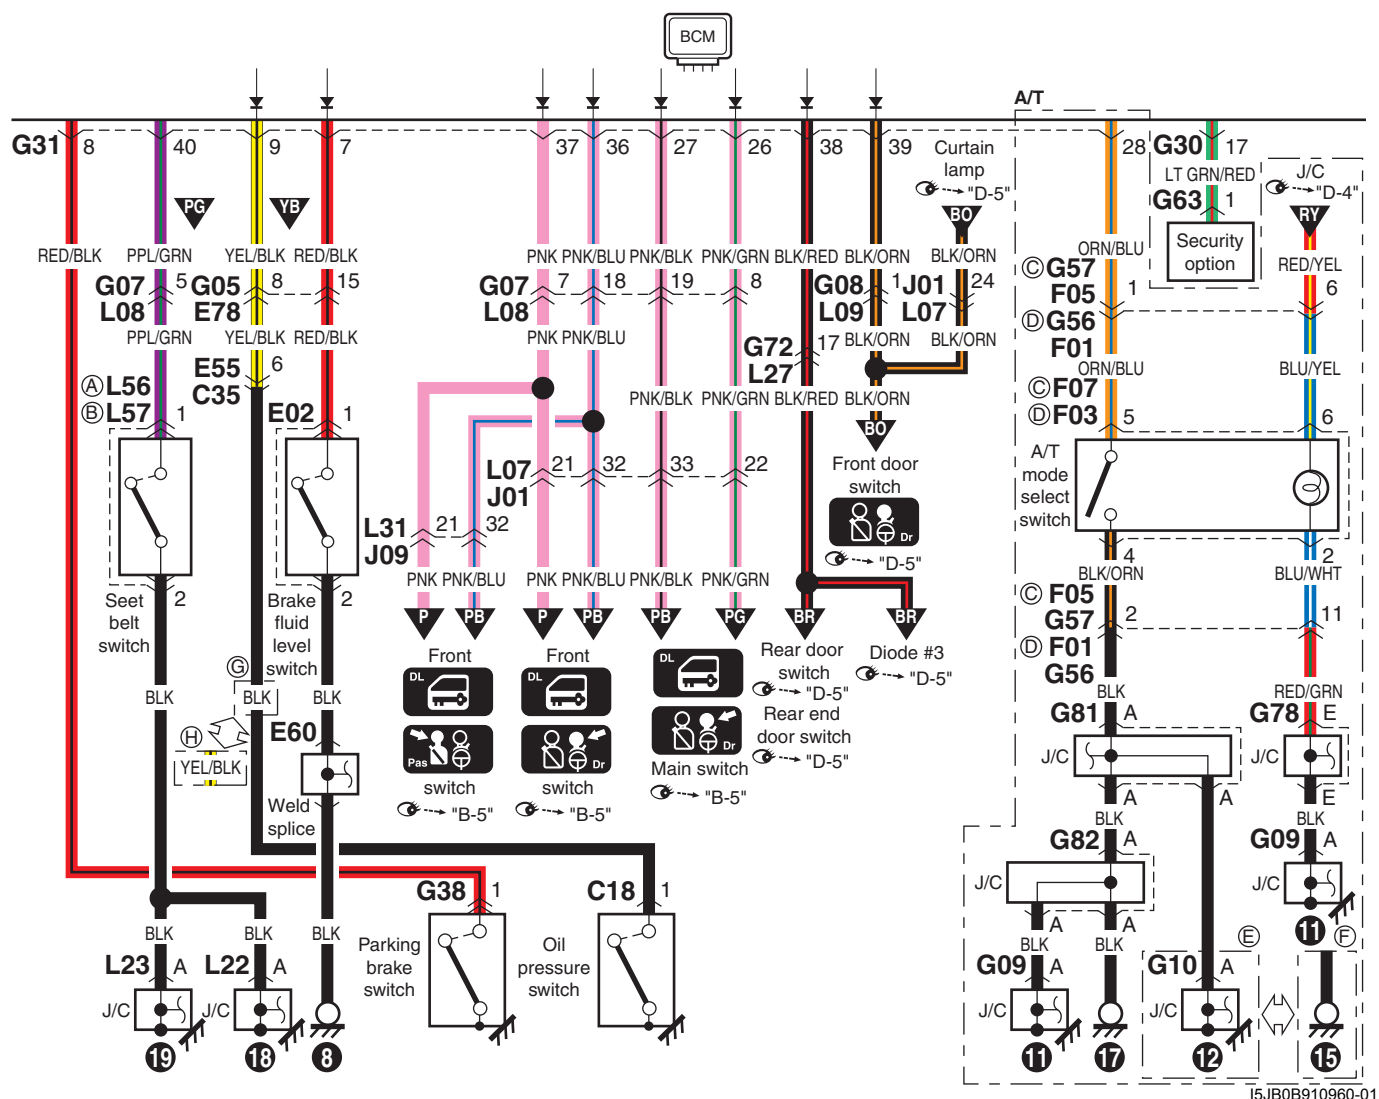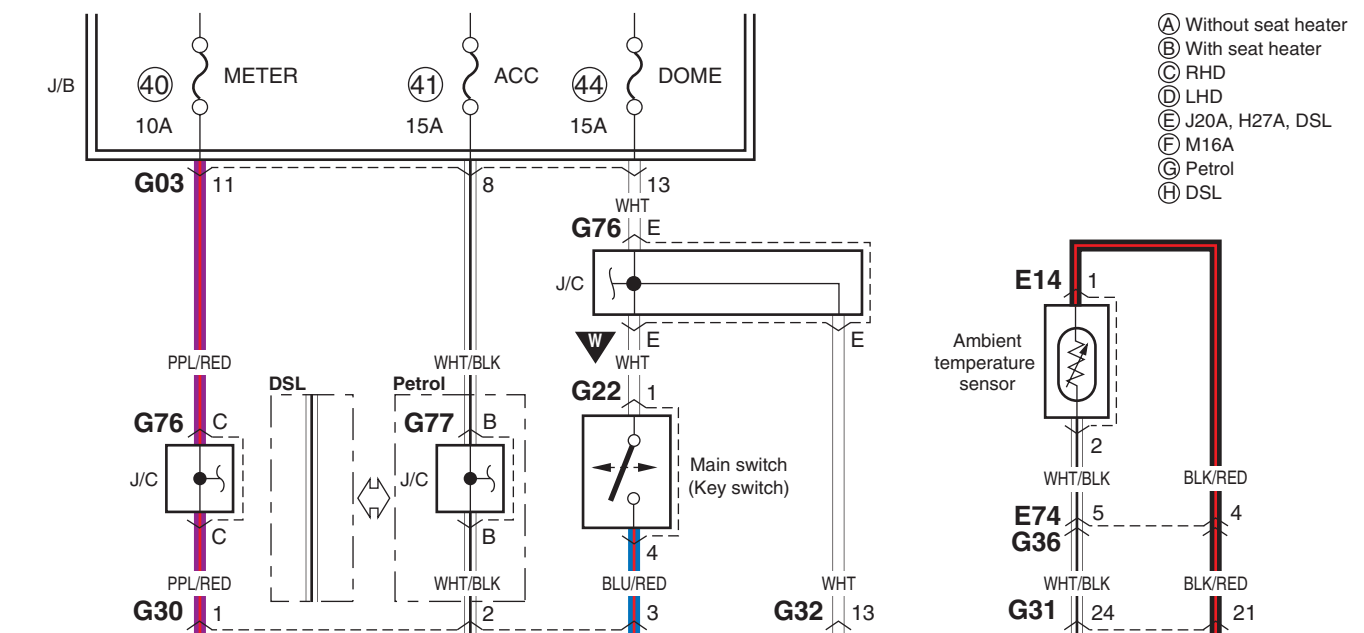

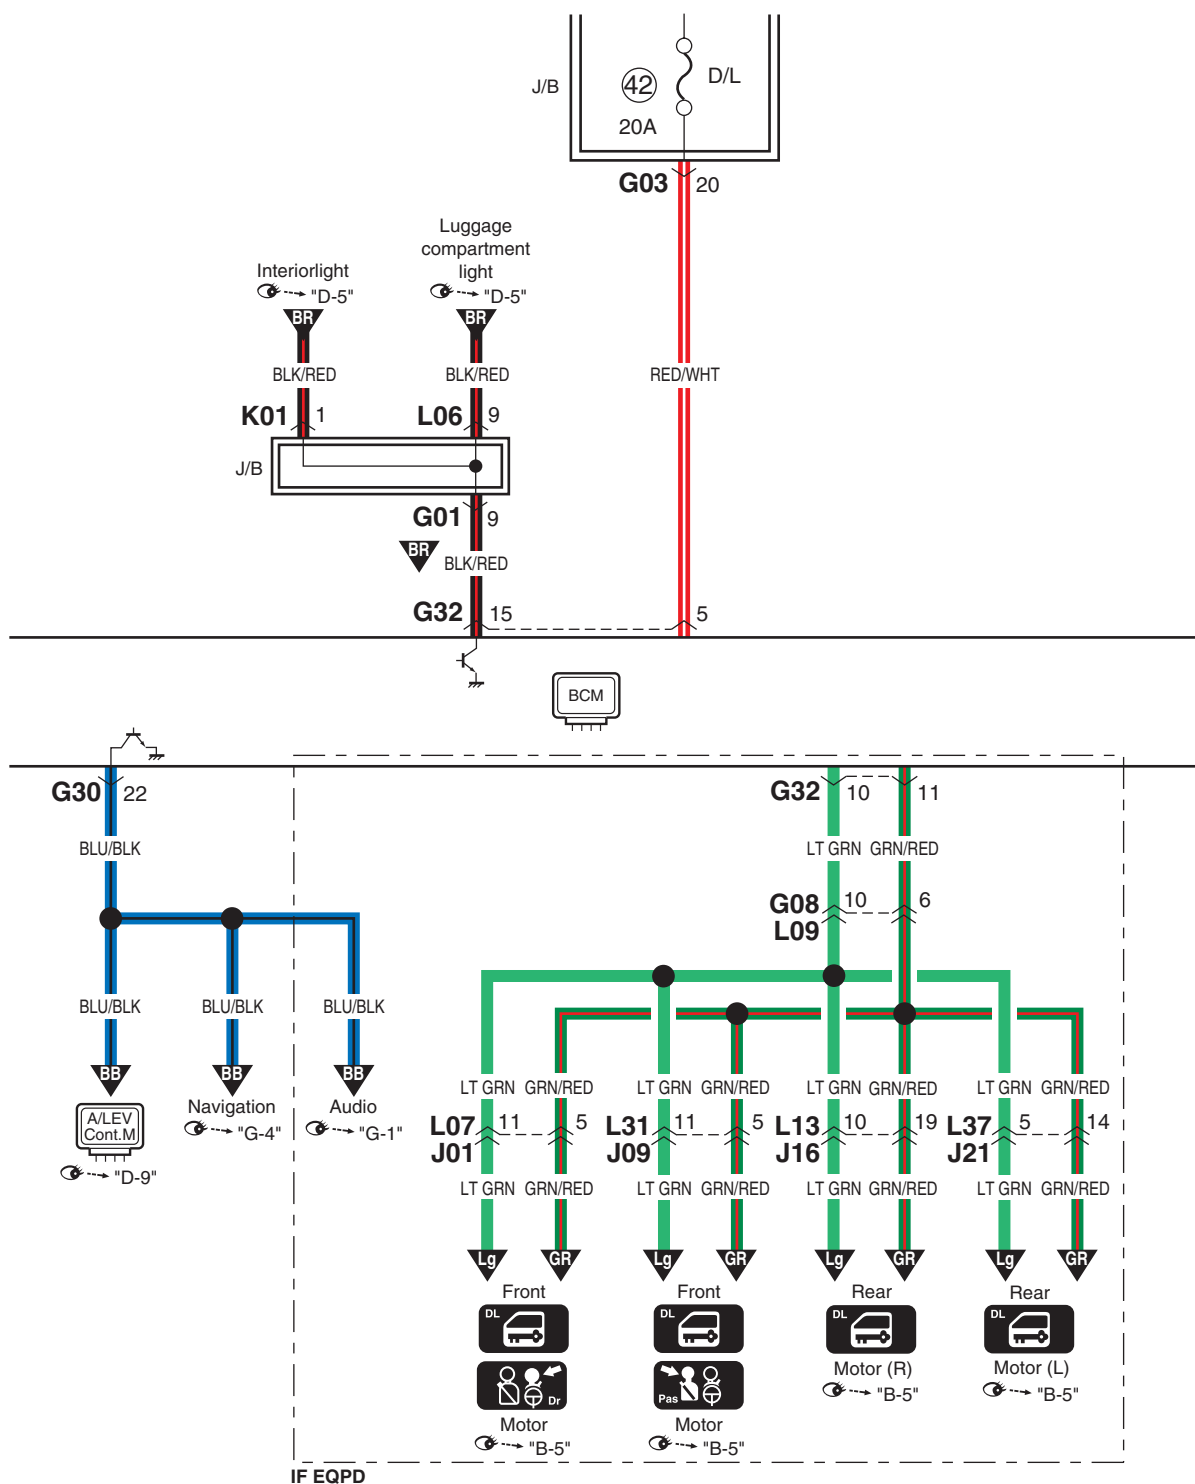

 
- (A) RHD
- (B) LHD
- (C) 2-Action
- (D) 1-Action

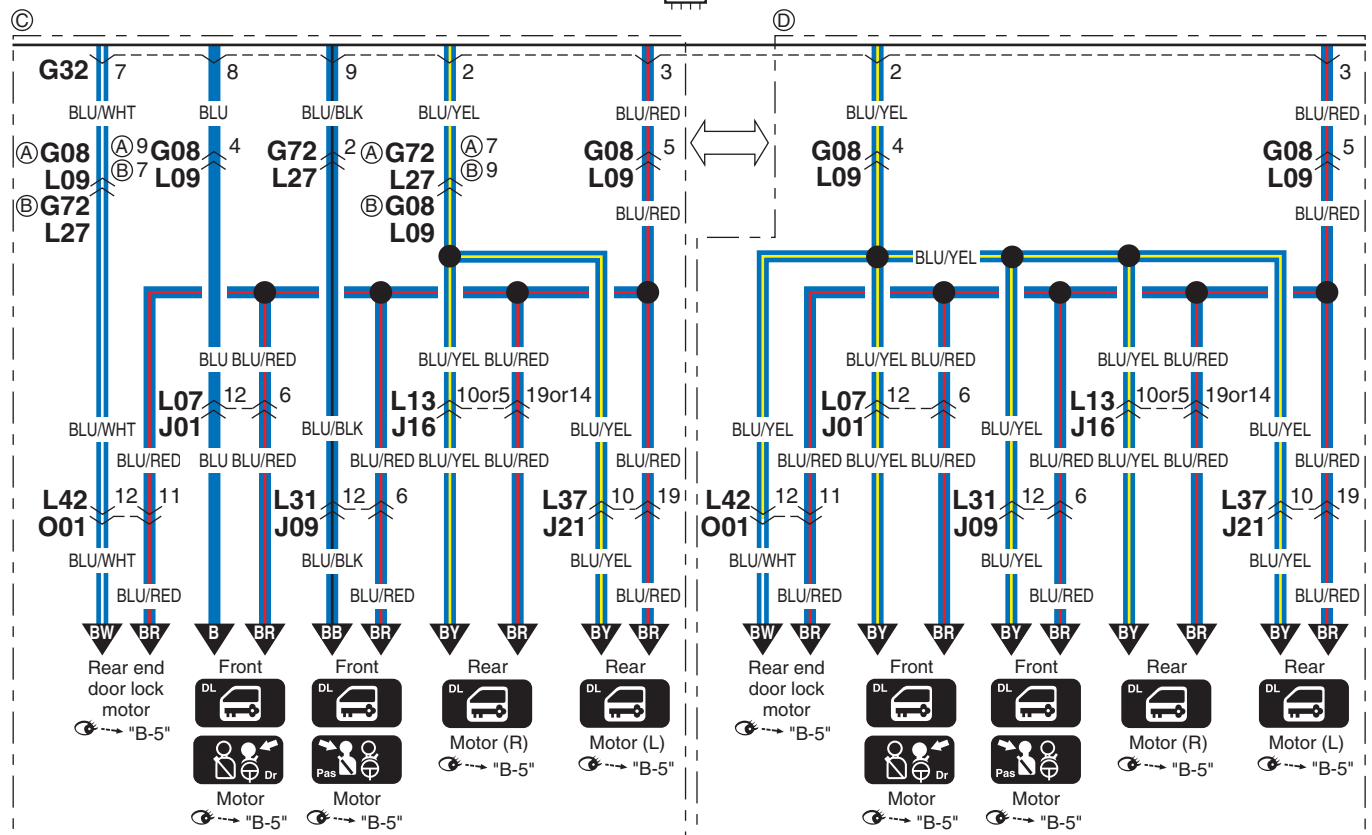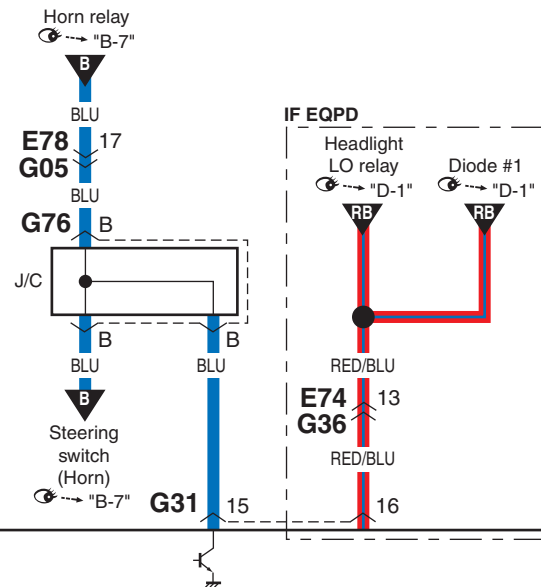




A-10 4WD Control System Circuit Diagram

S6JB0B910E012

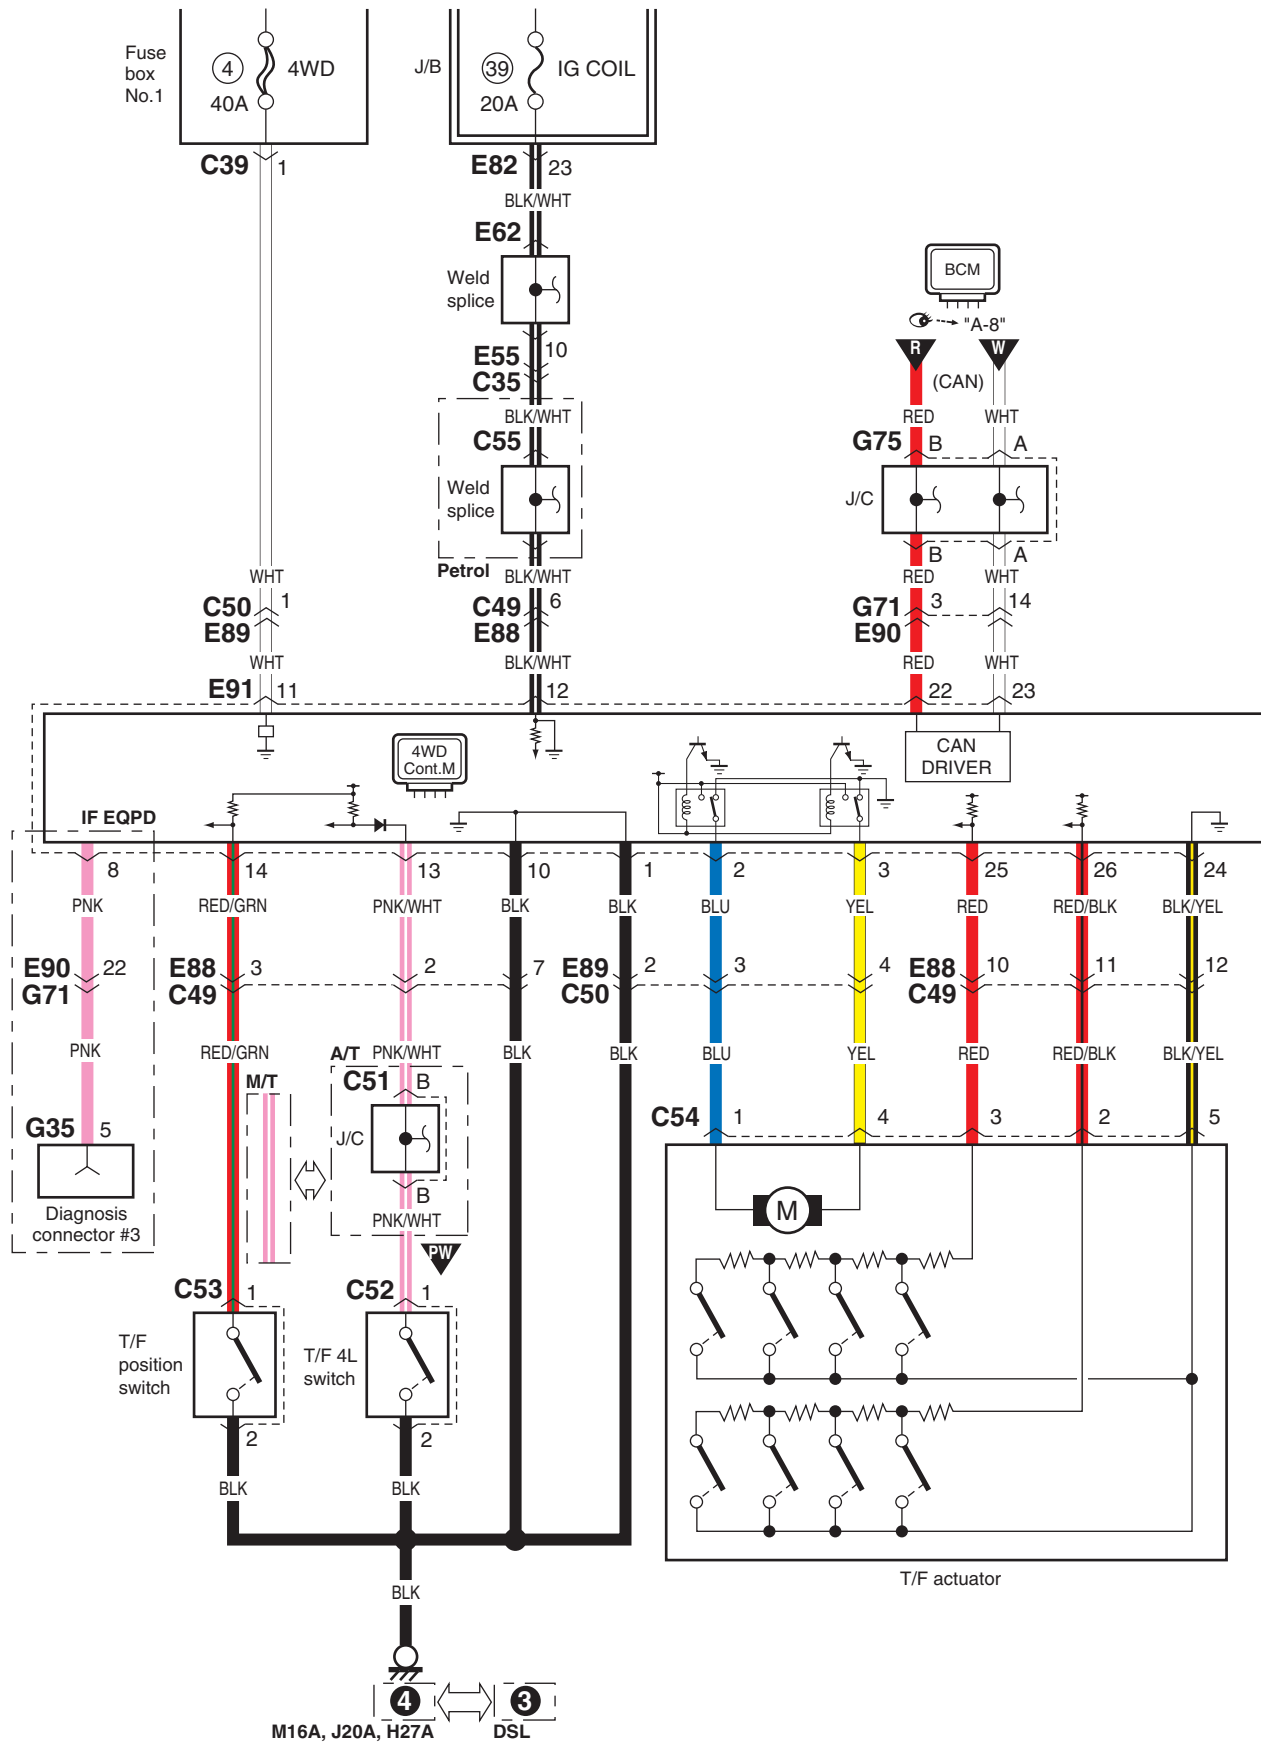


I6JB0B910944-01

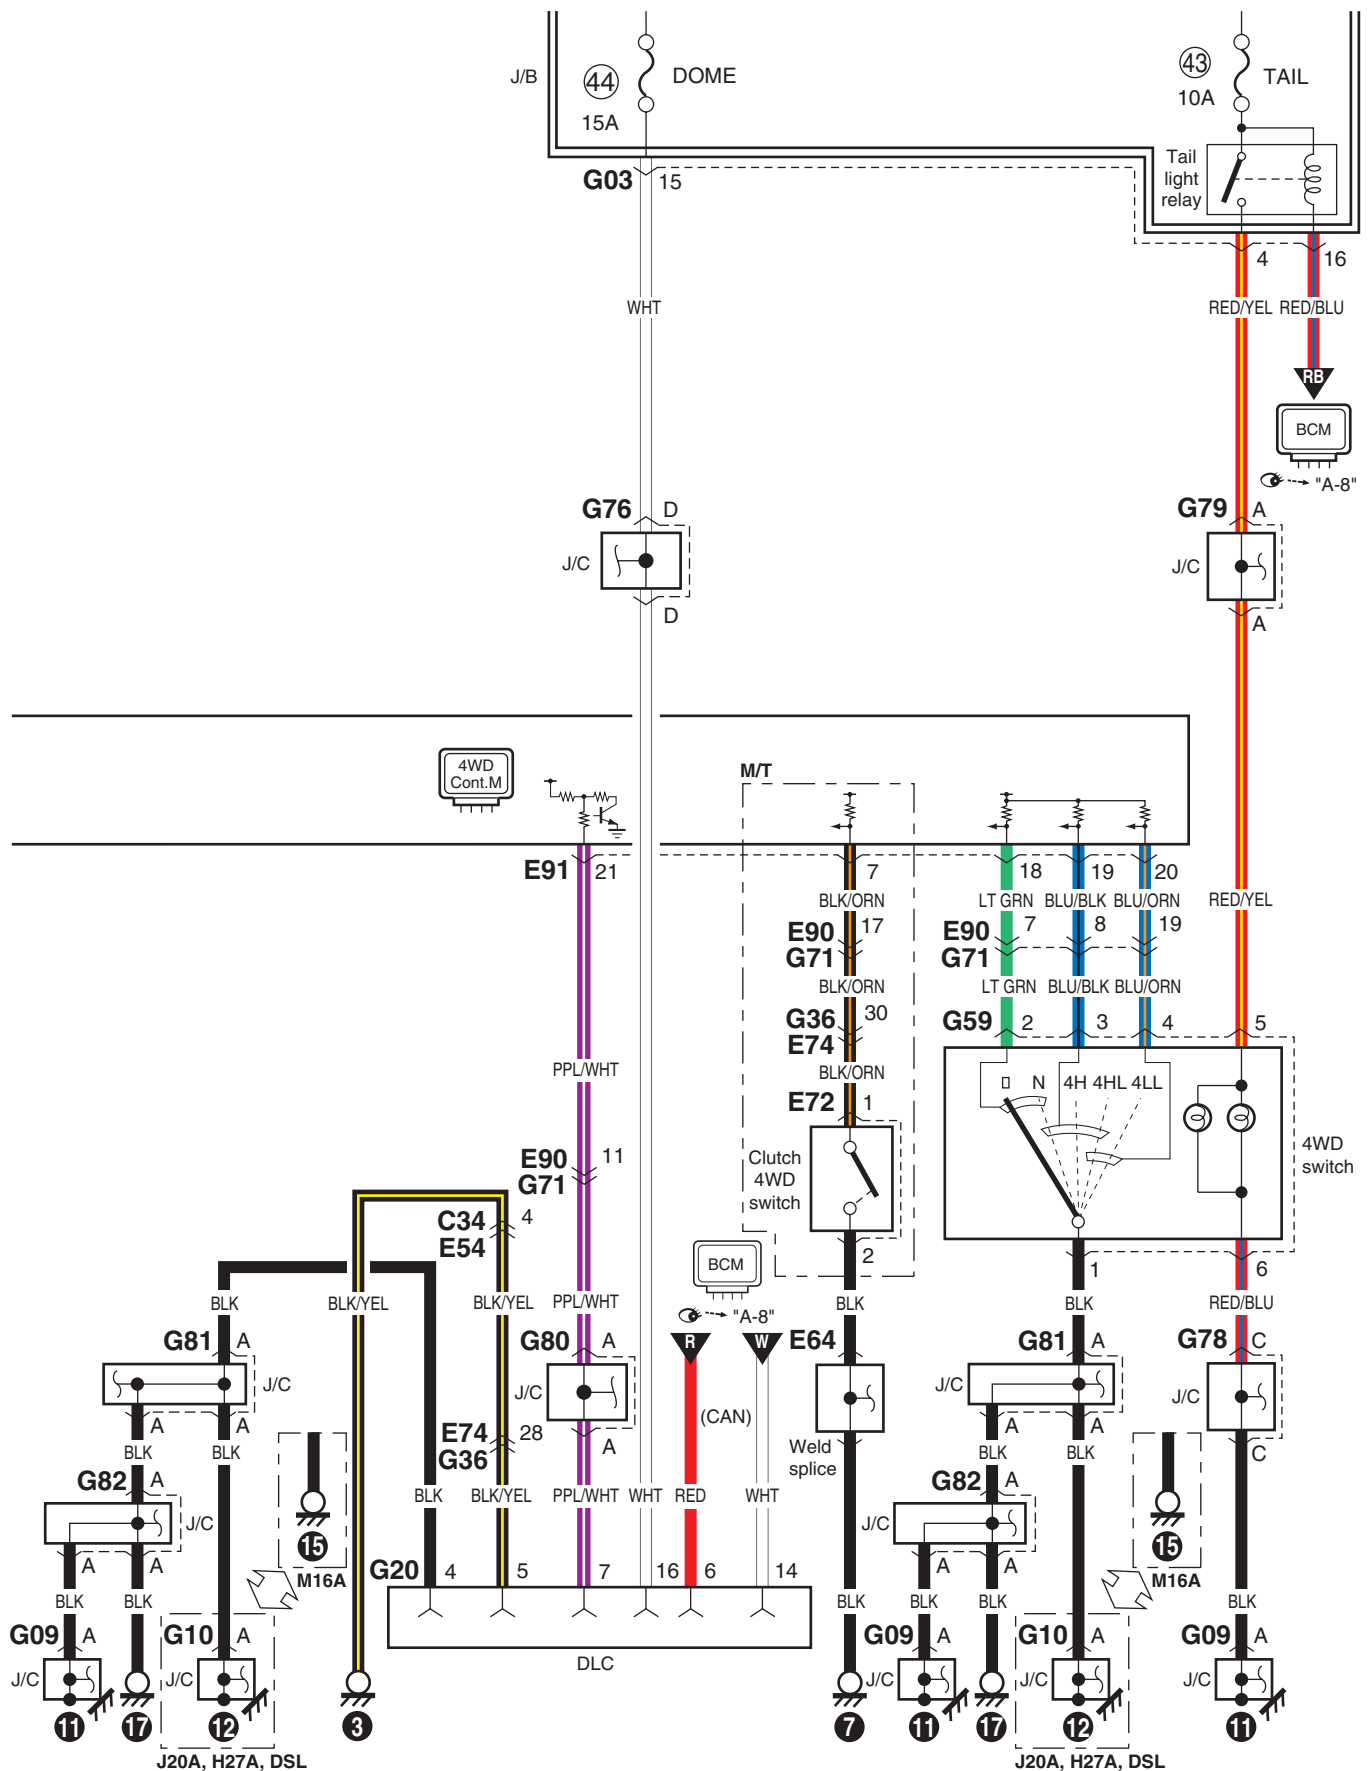

B-1 Windshield Wiper and Washer Circuit Diagram


S6JB0B910E013

- (A) RHD
 (B) LHD
 (C) RHD without Rear fog light
 (D) LHD & RHD with Rear fog light

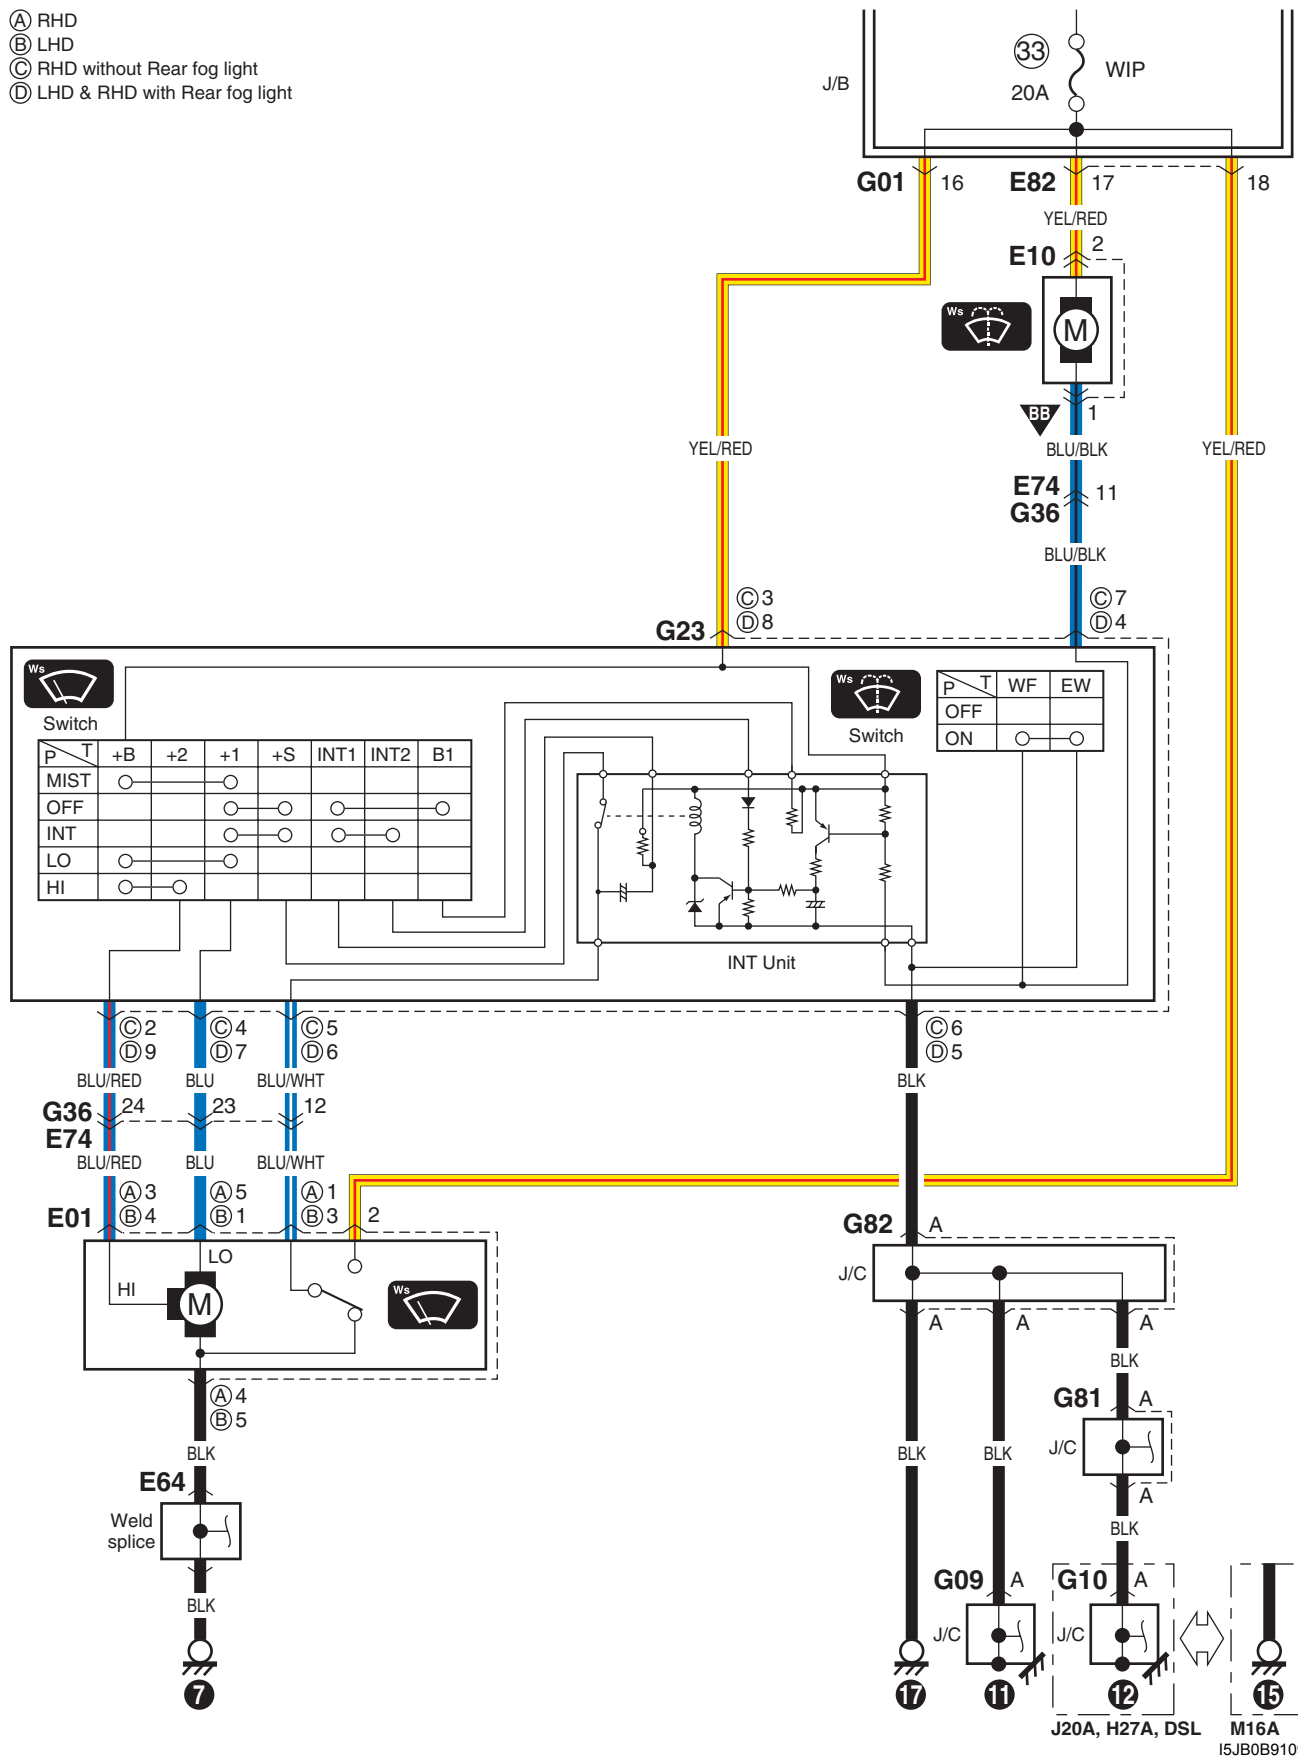


B-2 Rear Wiper and Washer Circuit Diagram

S6JB0B910E014

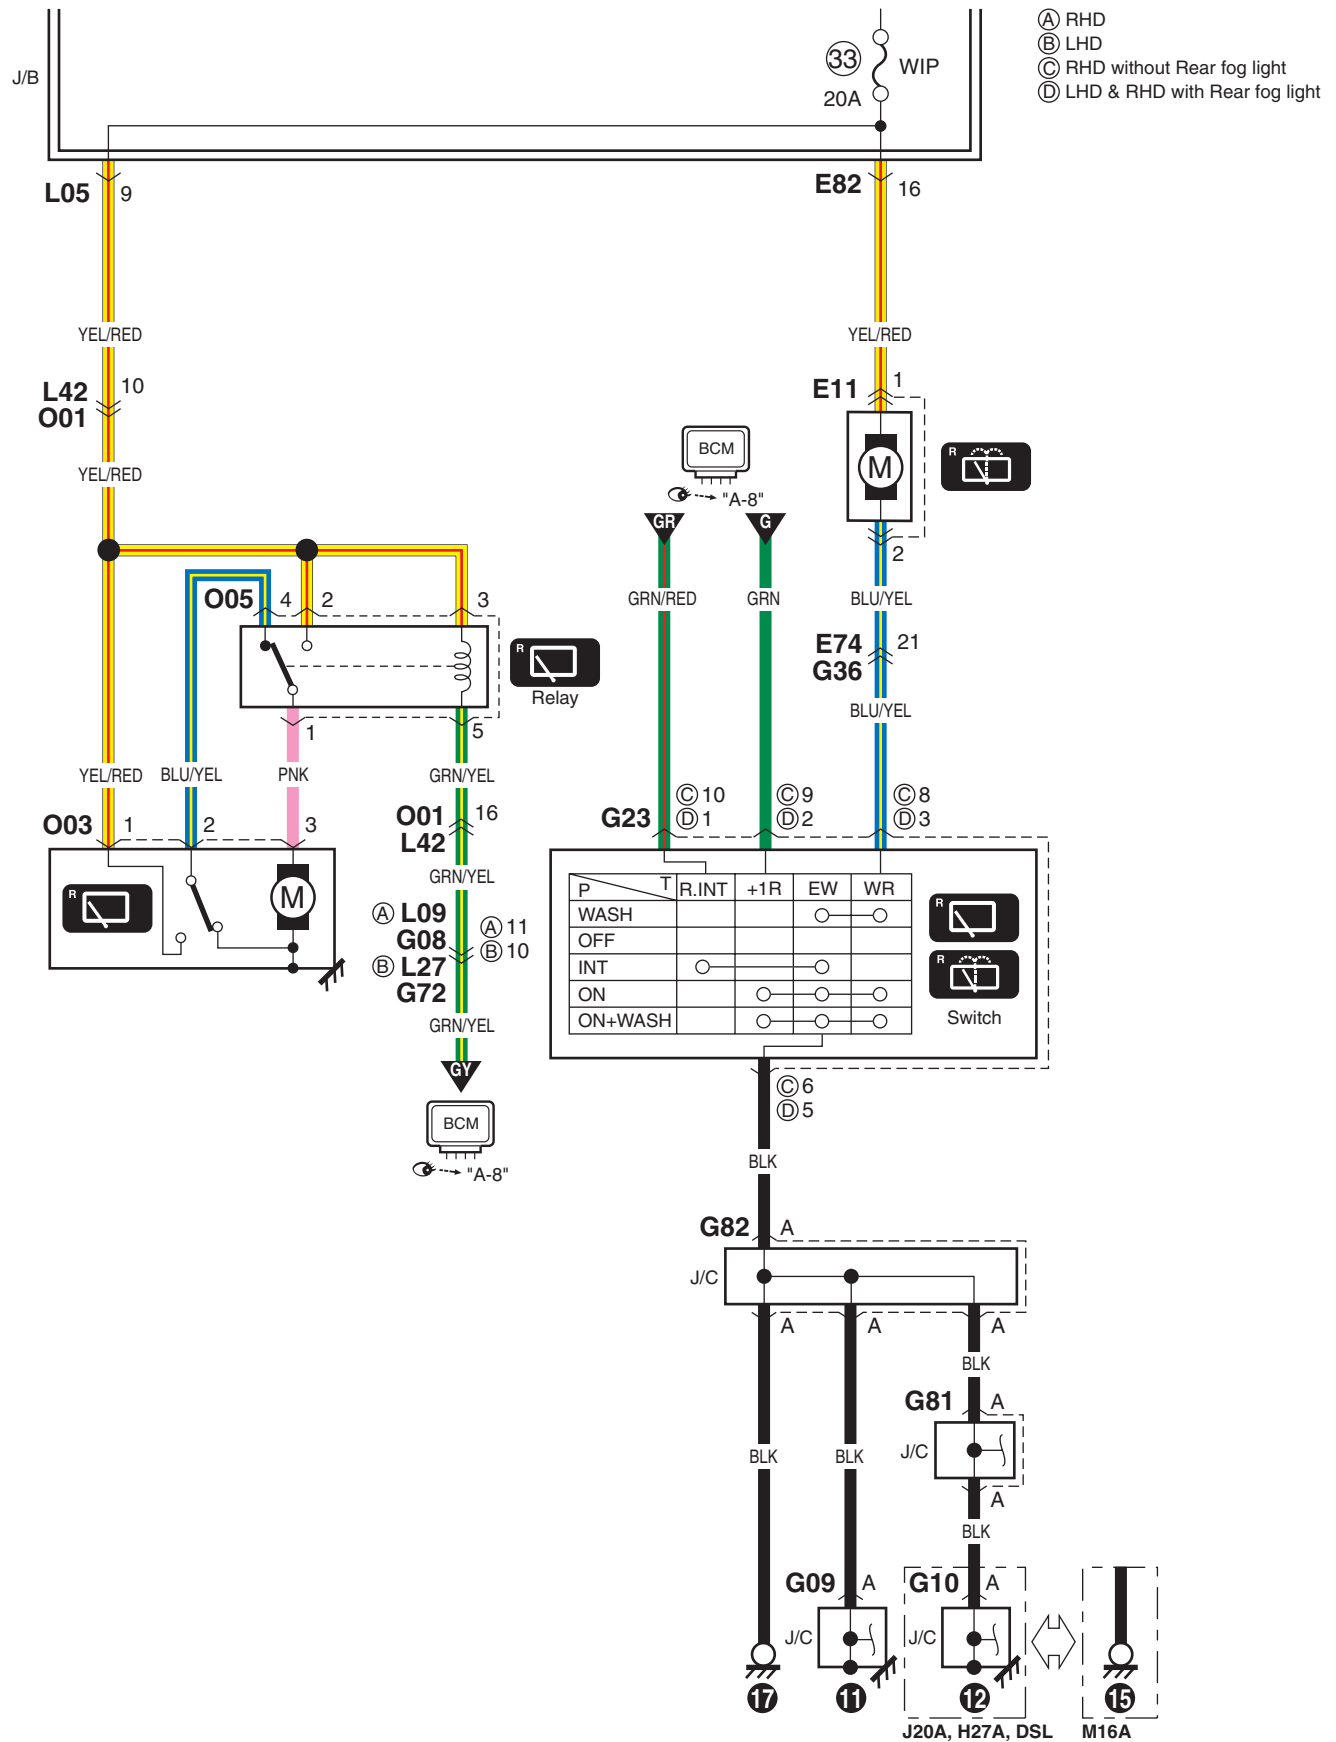


I5JB0B910965-01

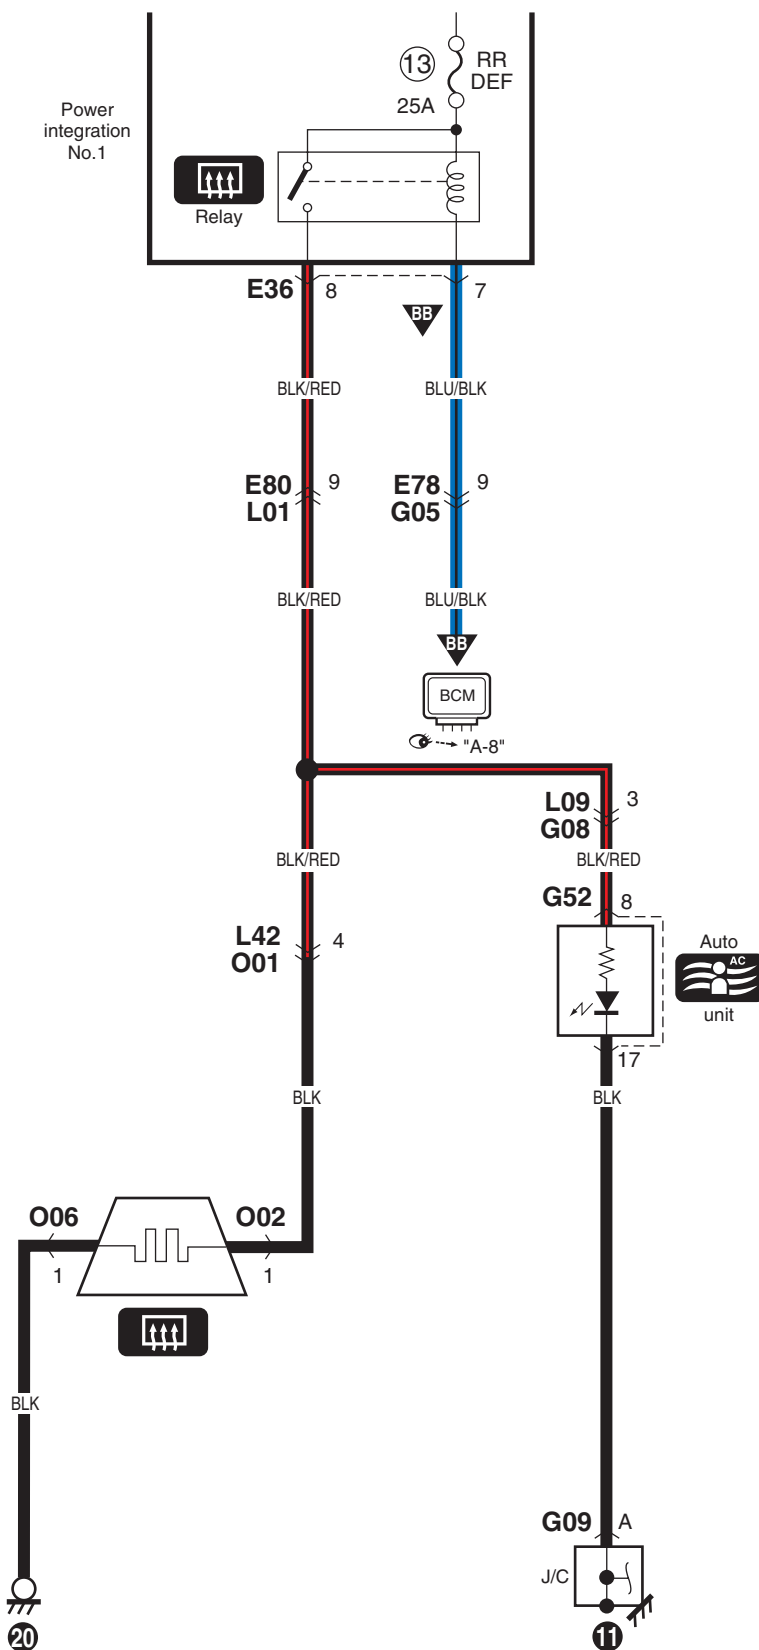


B-4 Power Window Circuit Diagram

S6JB0B910E016

(A) RHD
(B) LHD

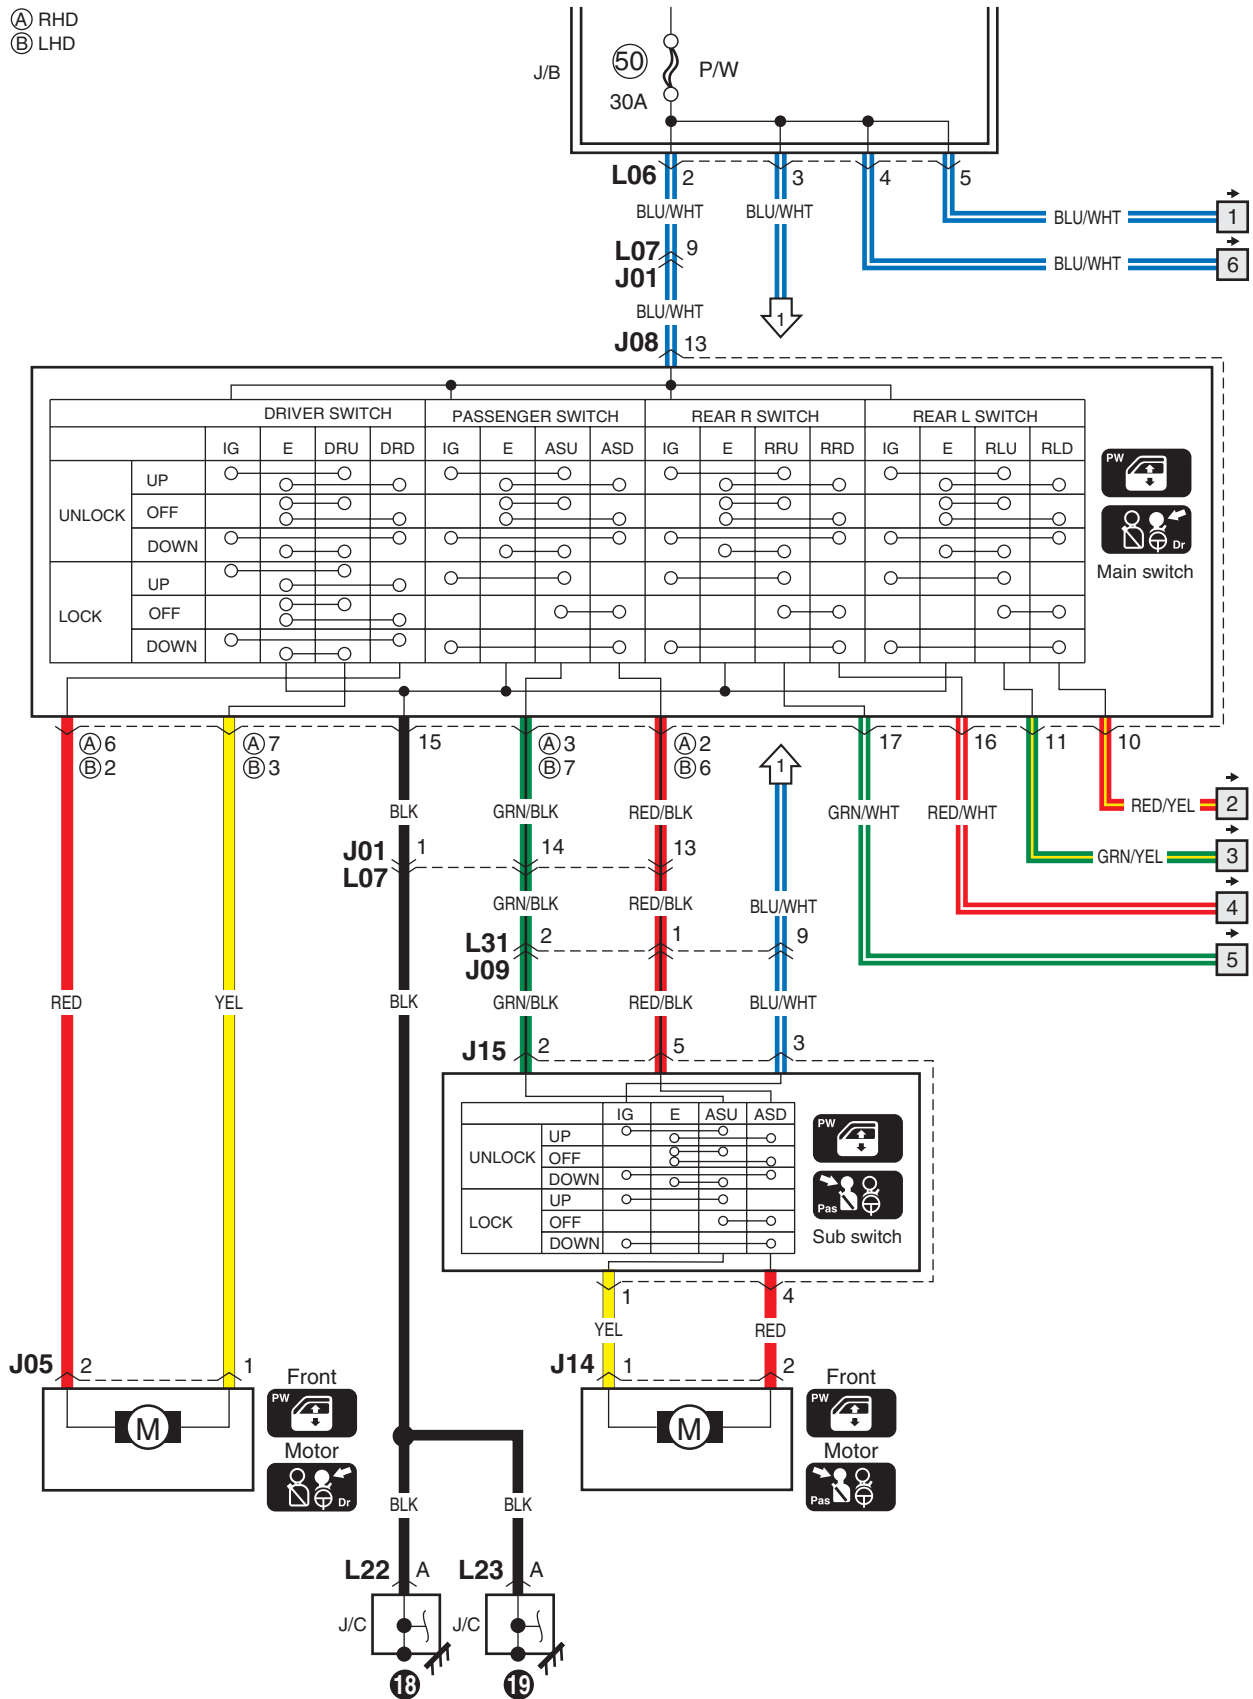


I5JB0B910966-01

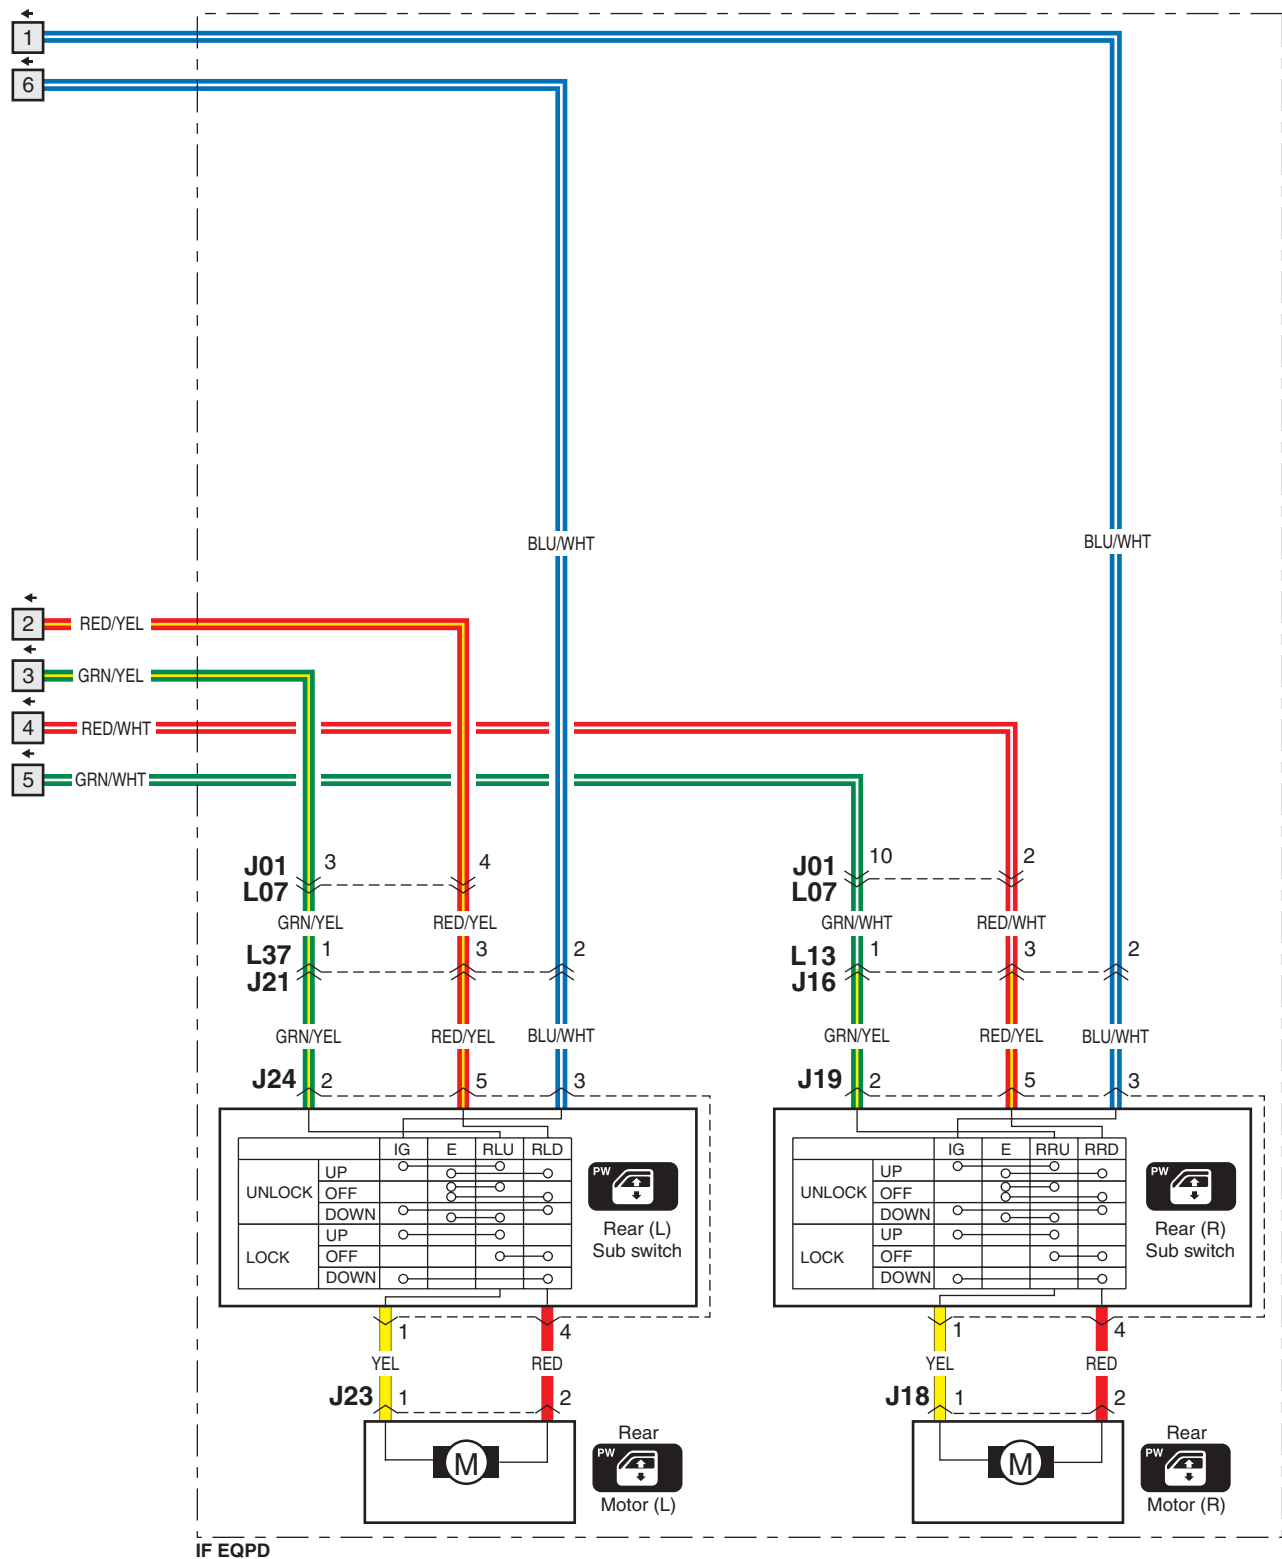


B-5 Power Door Lock Circuit Diagram

S6JB0B910E017

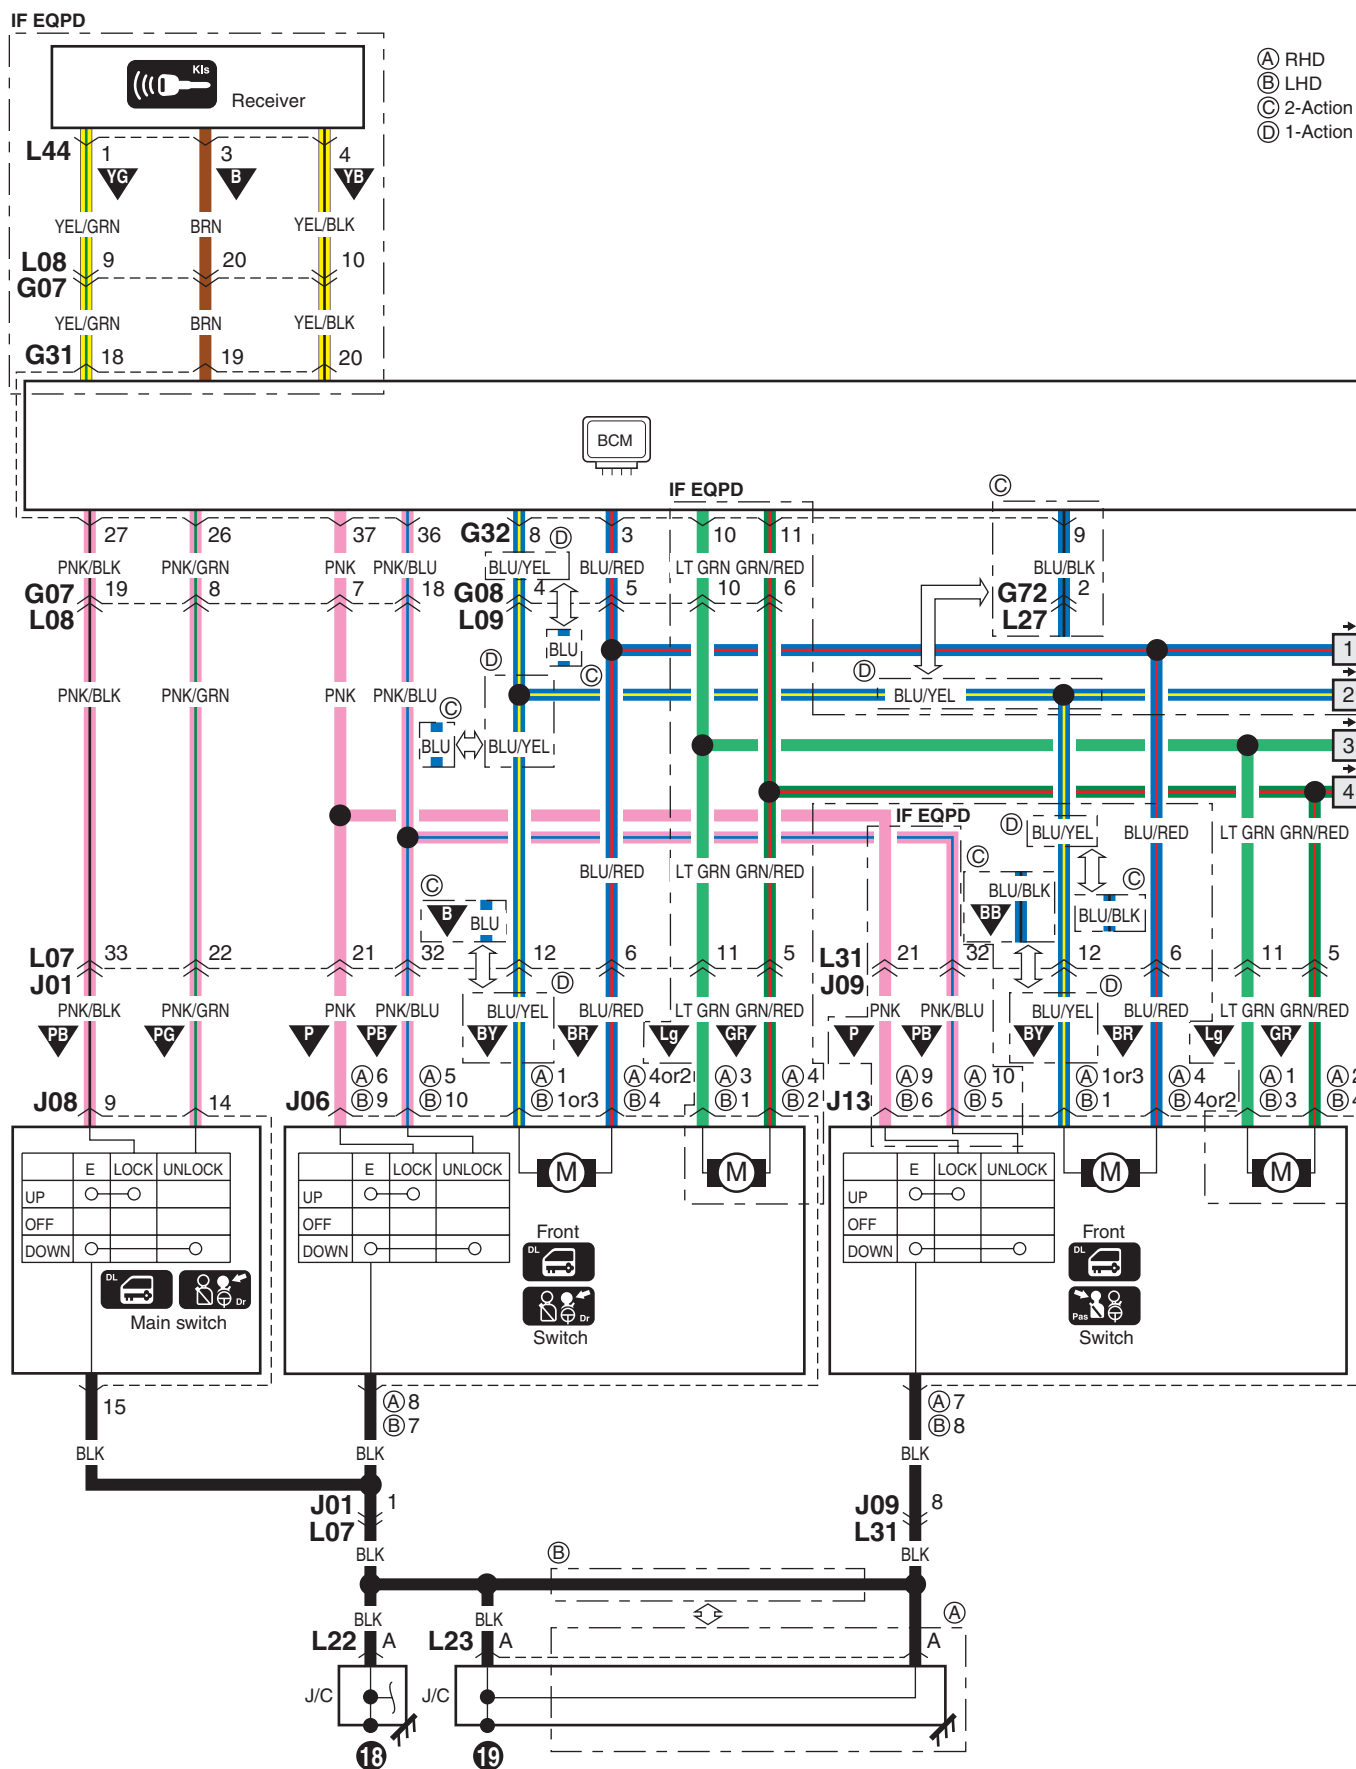

I5JB0B910967-03


9A-120 Wiring Systems:

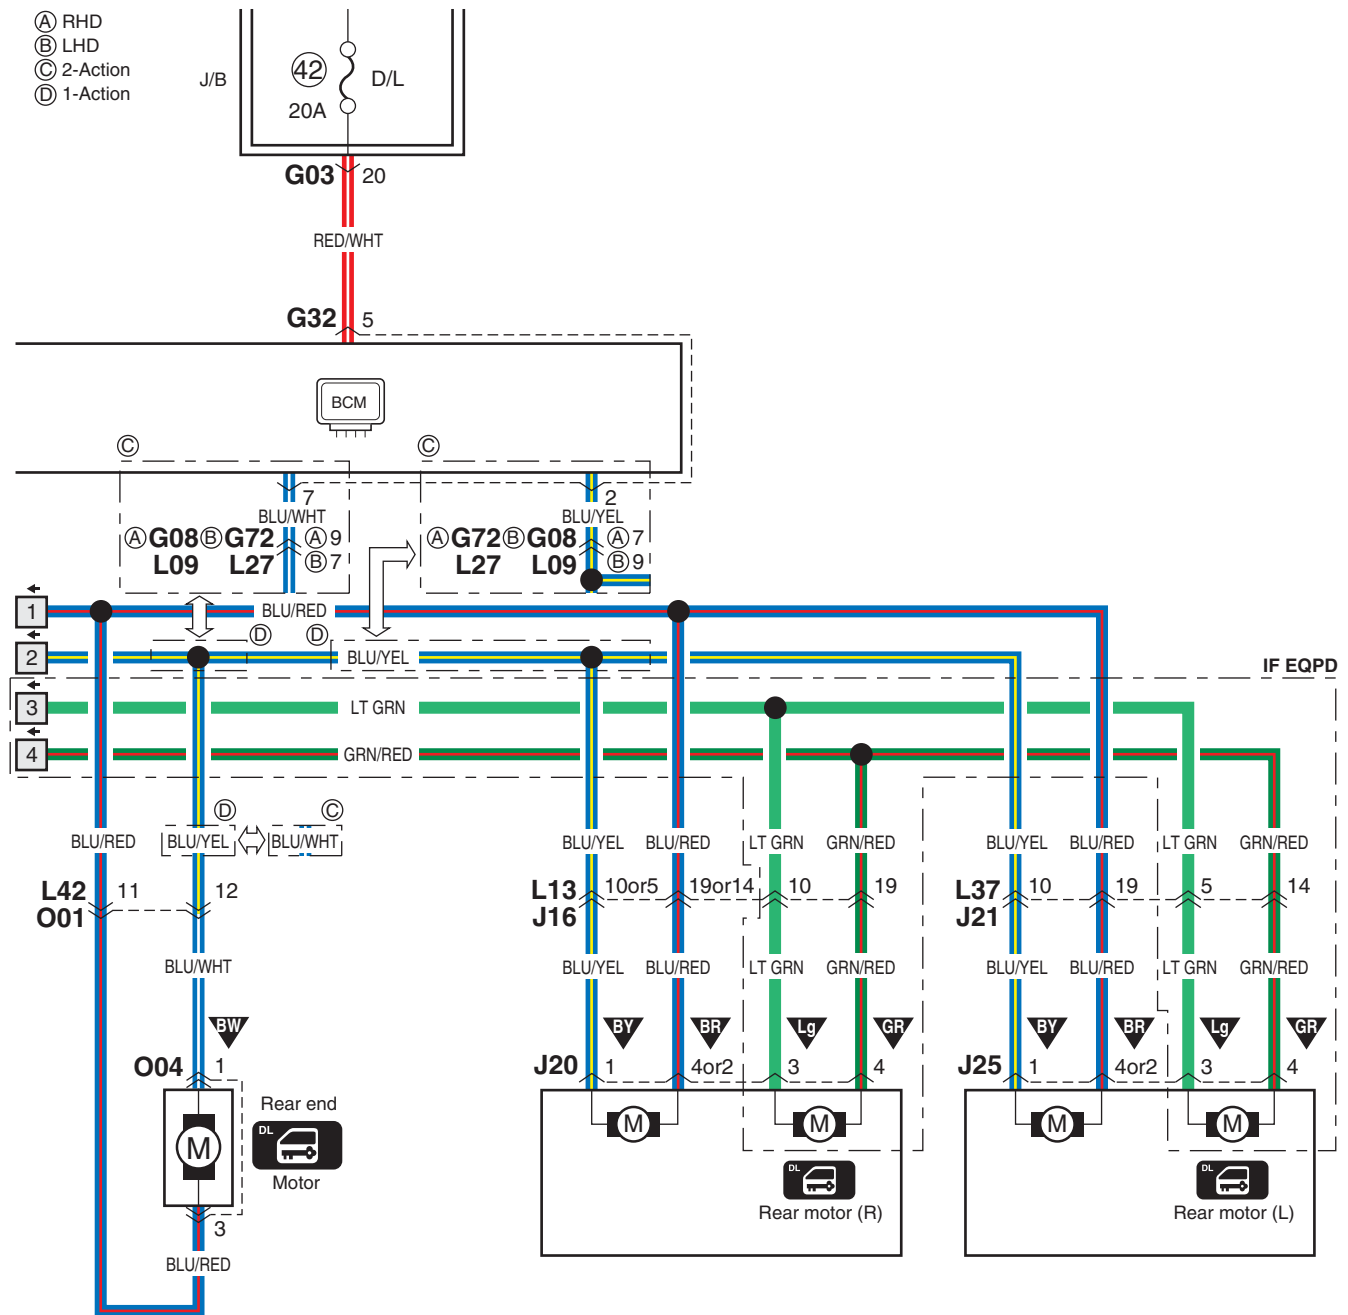

15JB0A910959-04

B-6 Power Mirror Circuit Diagram


S6JB0B910E018

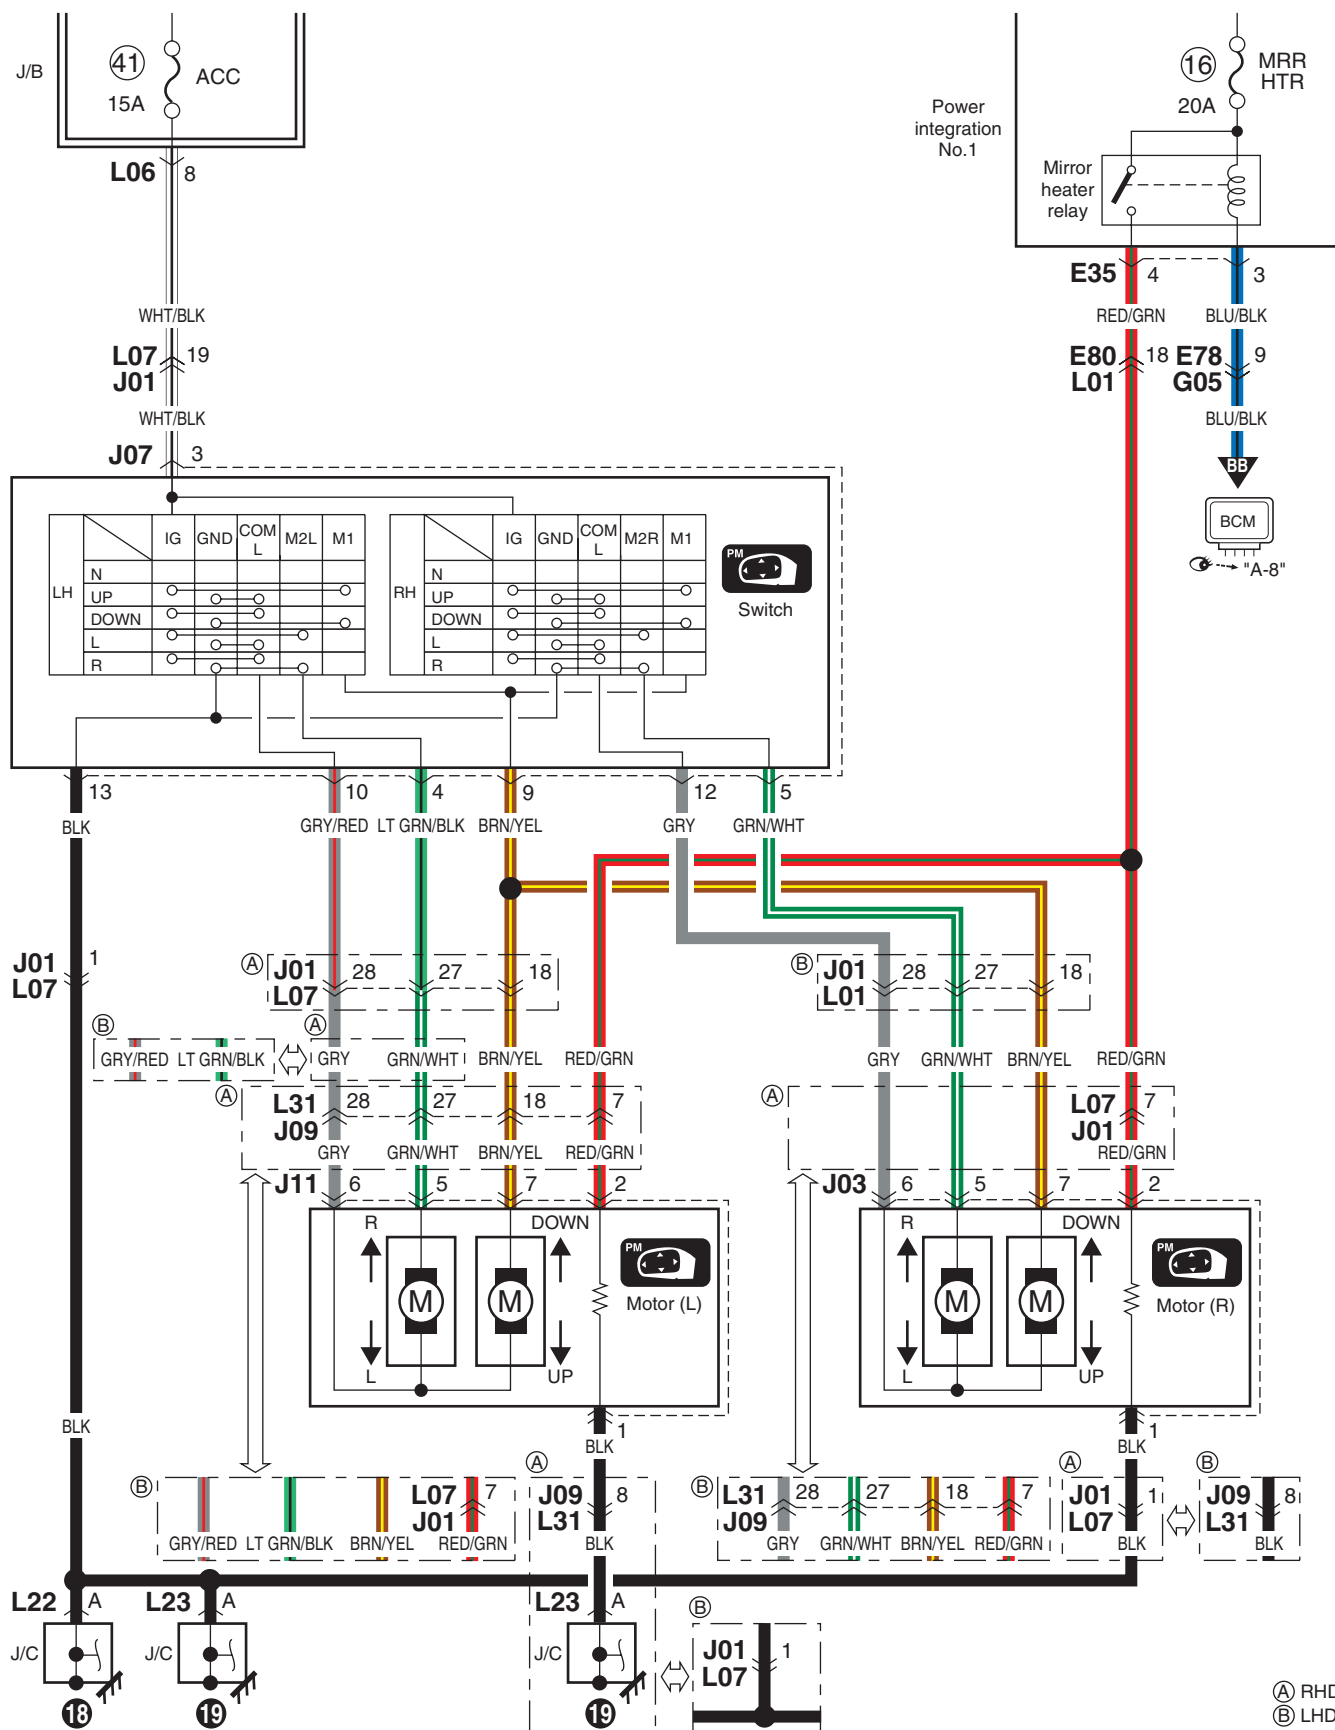

15JB0B910968-01

B-7 Horn Circuit Diagram


S6JB0B910E019

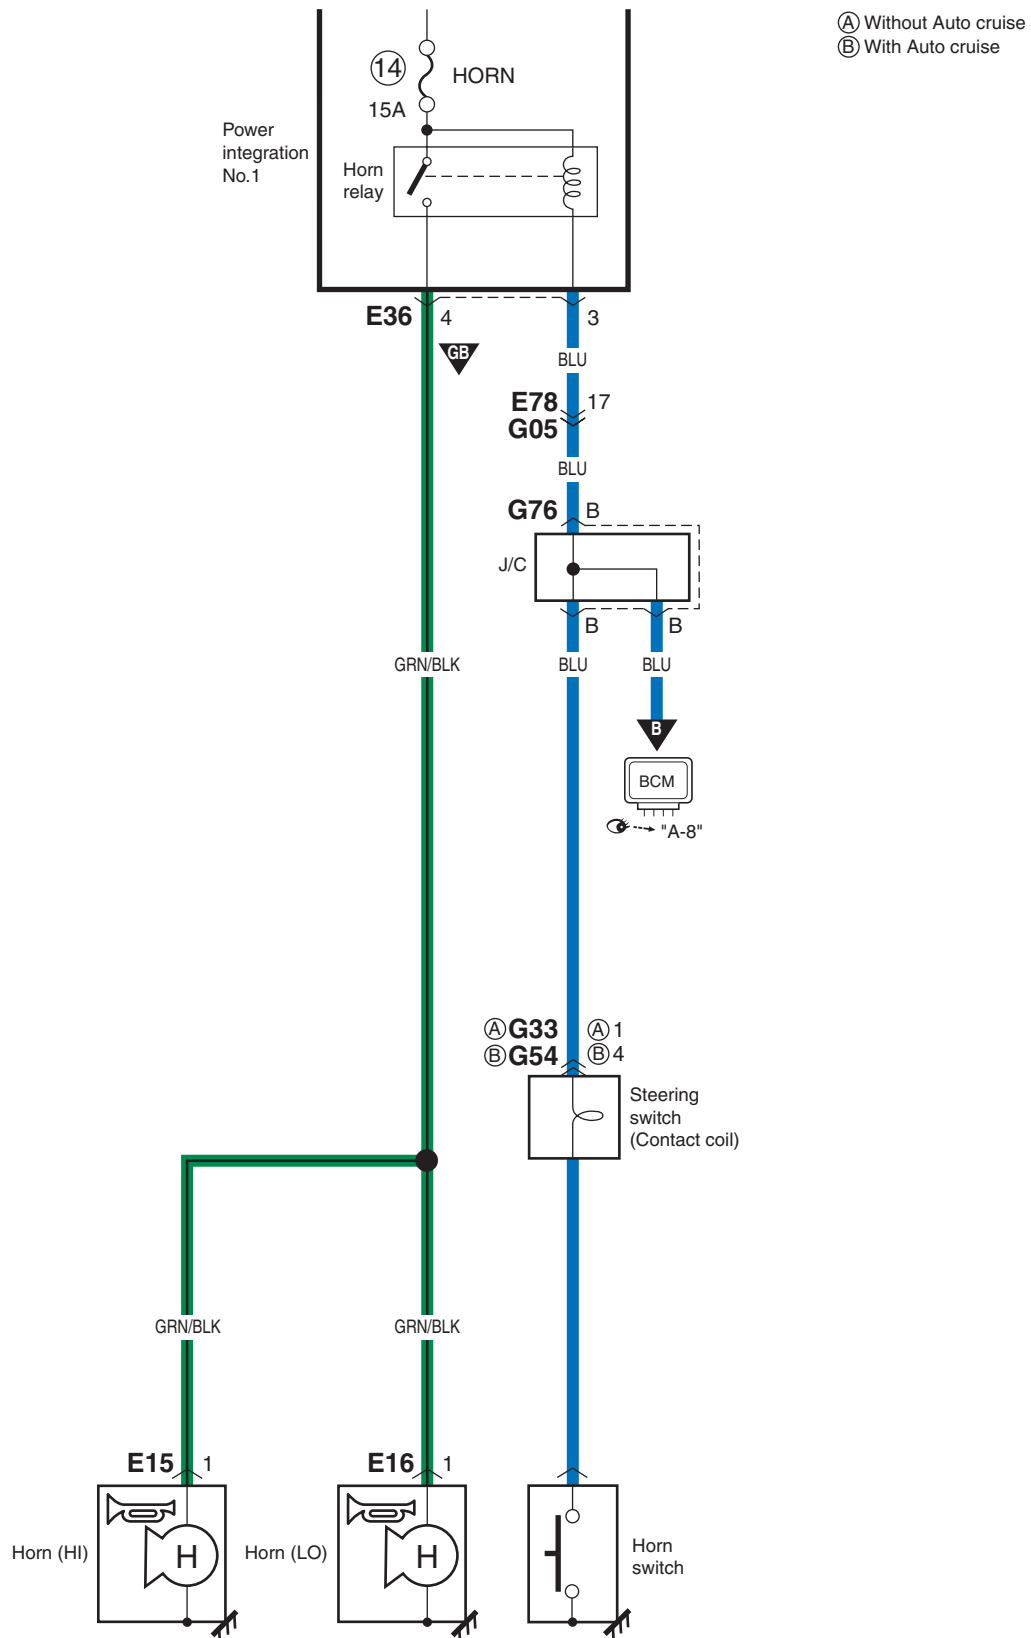

I5JB0B910996-01

B-8 Seat Heater Circuit Diagram


S6JB0B910E020

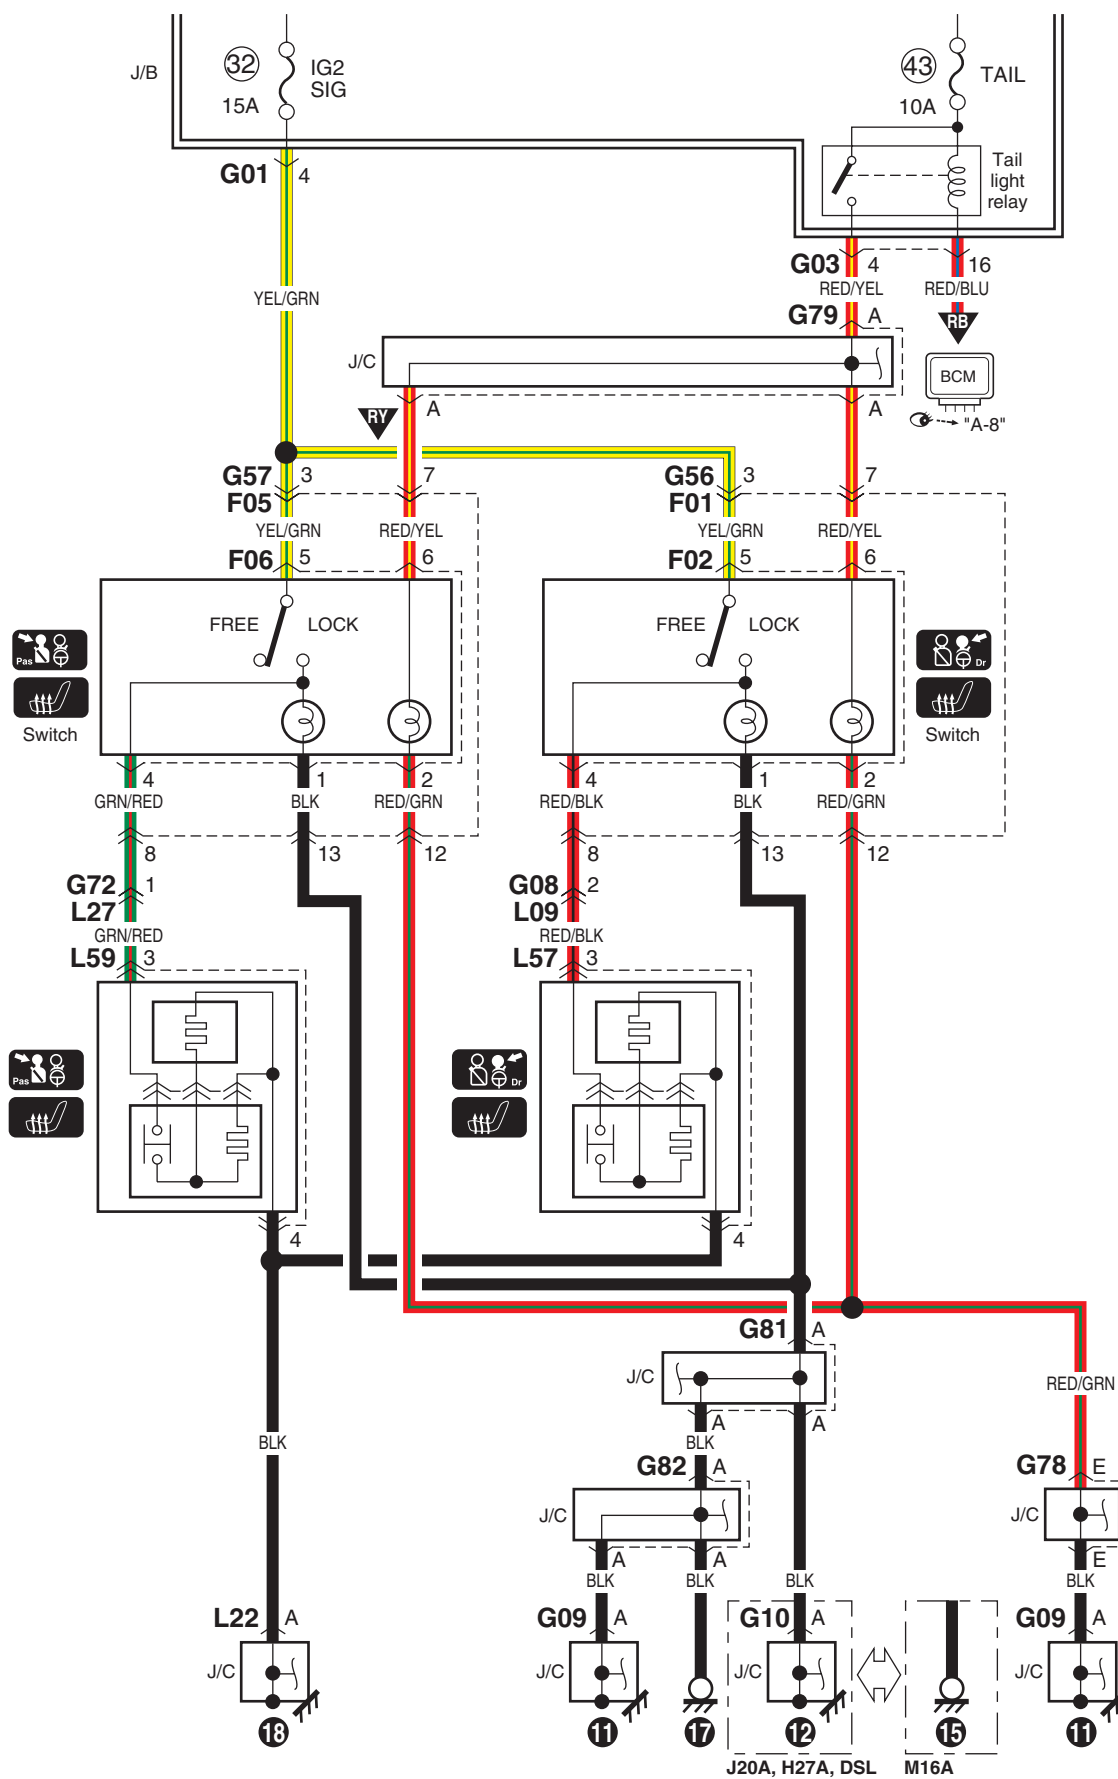

I5JB0B910969-01

B-9 Keyless Start System Circuit Diagram


S6JB0B910E021

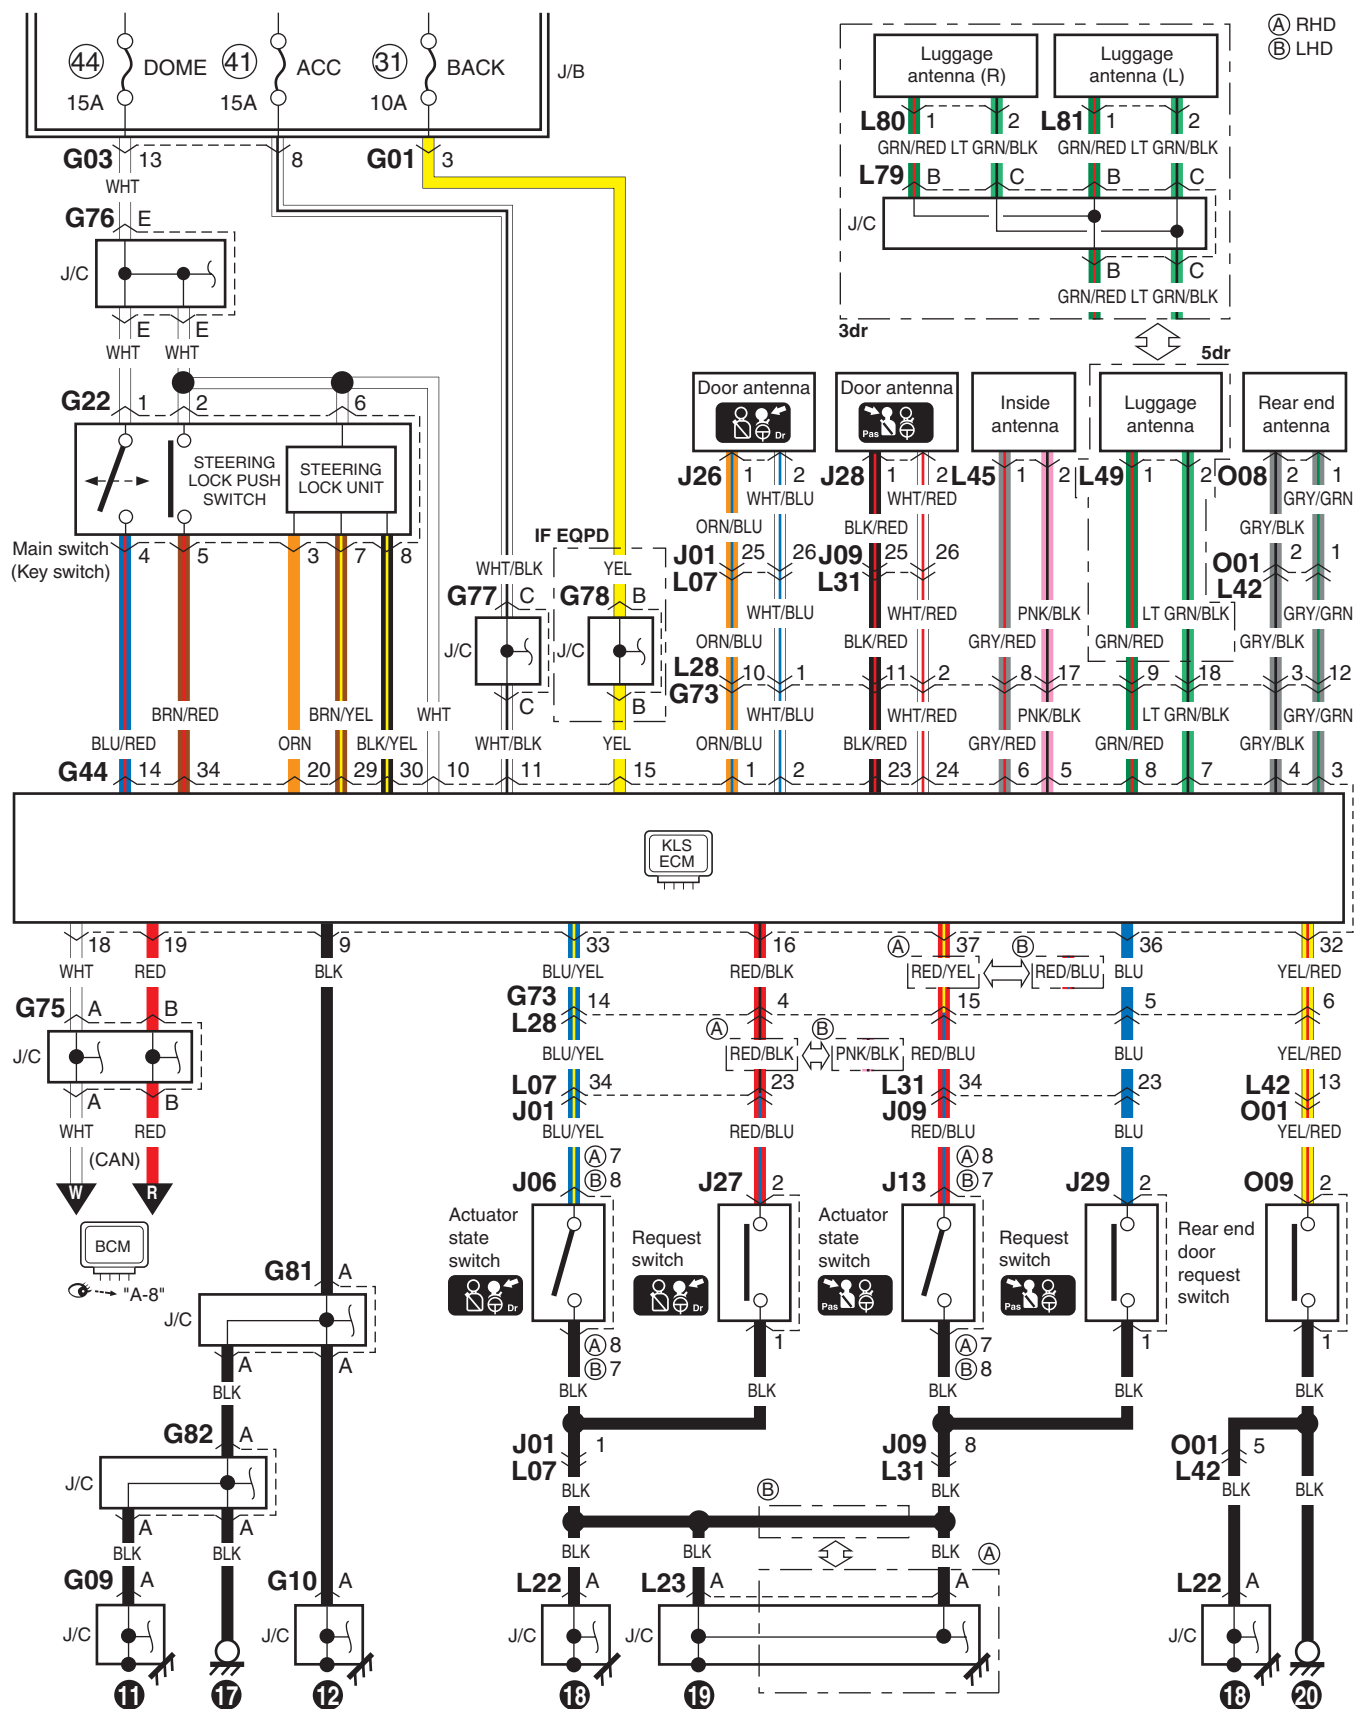

16JB0B910908-03


B-10 Sliding Roof Circuit Diagram

S6JB0B910E022

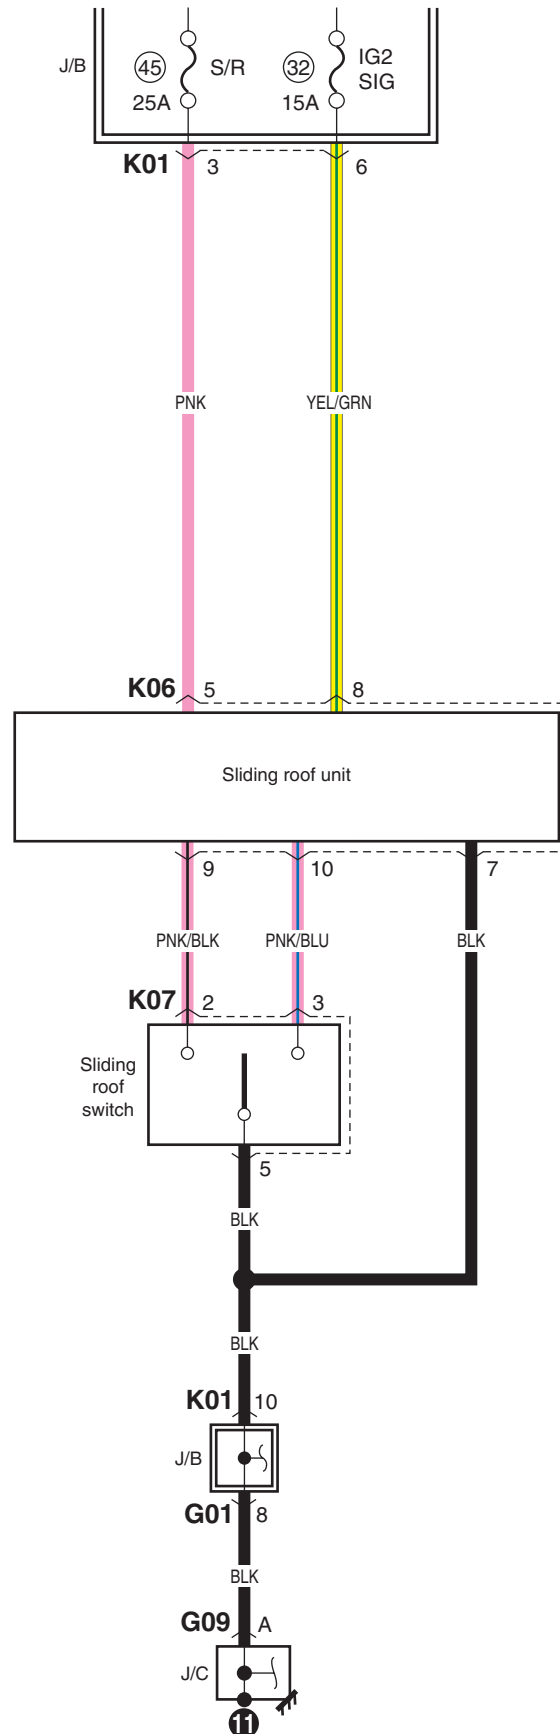

B-11 Headlight Cleaner Circuit Diagram


S6JB0B910E023

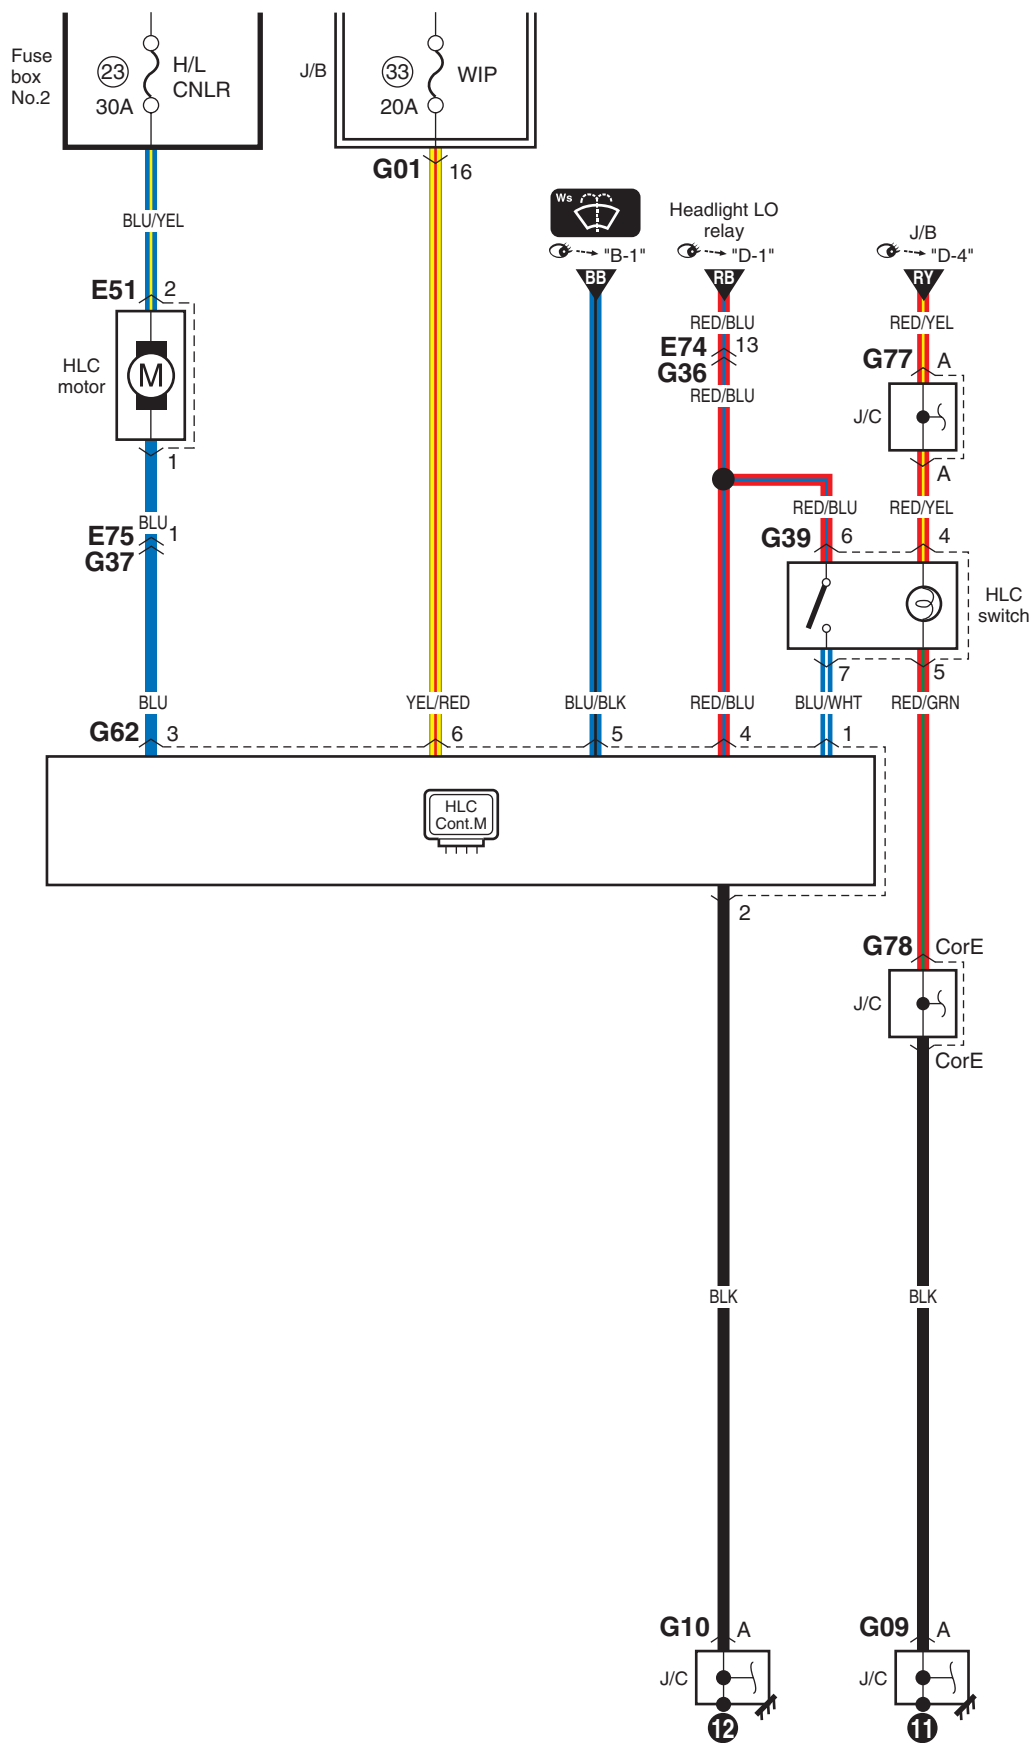


I6JB0B910909-02

C-1 Combination Meter Circuit Diagram


S6JB0B910E024

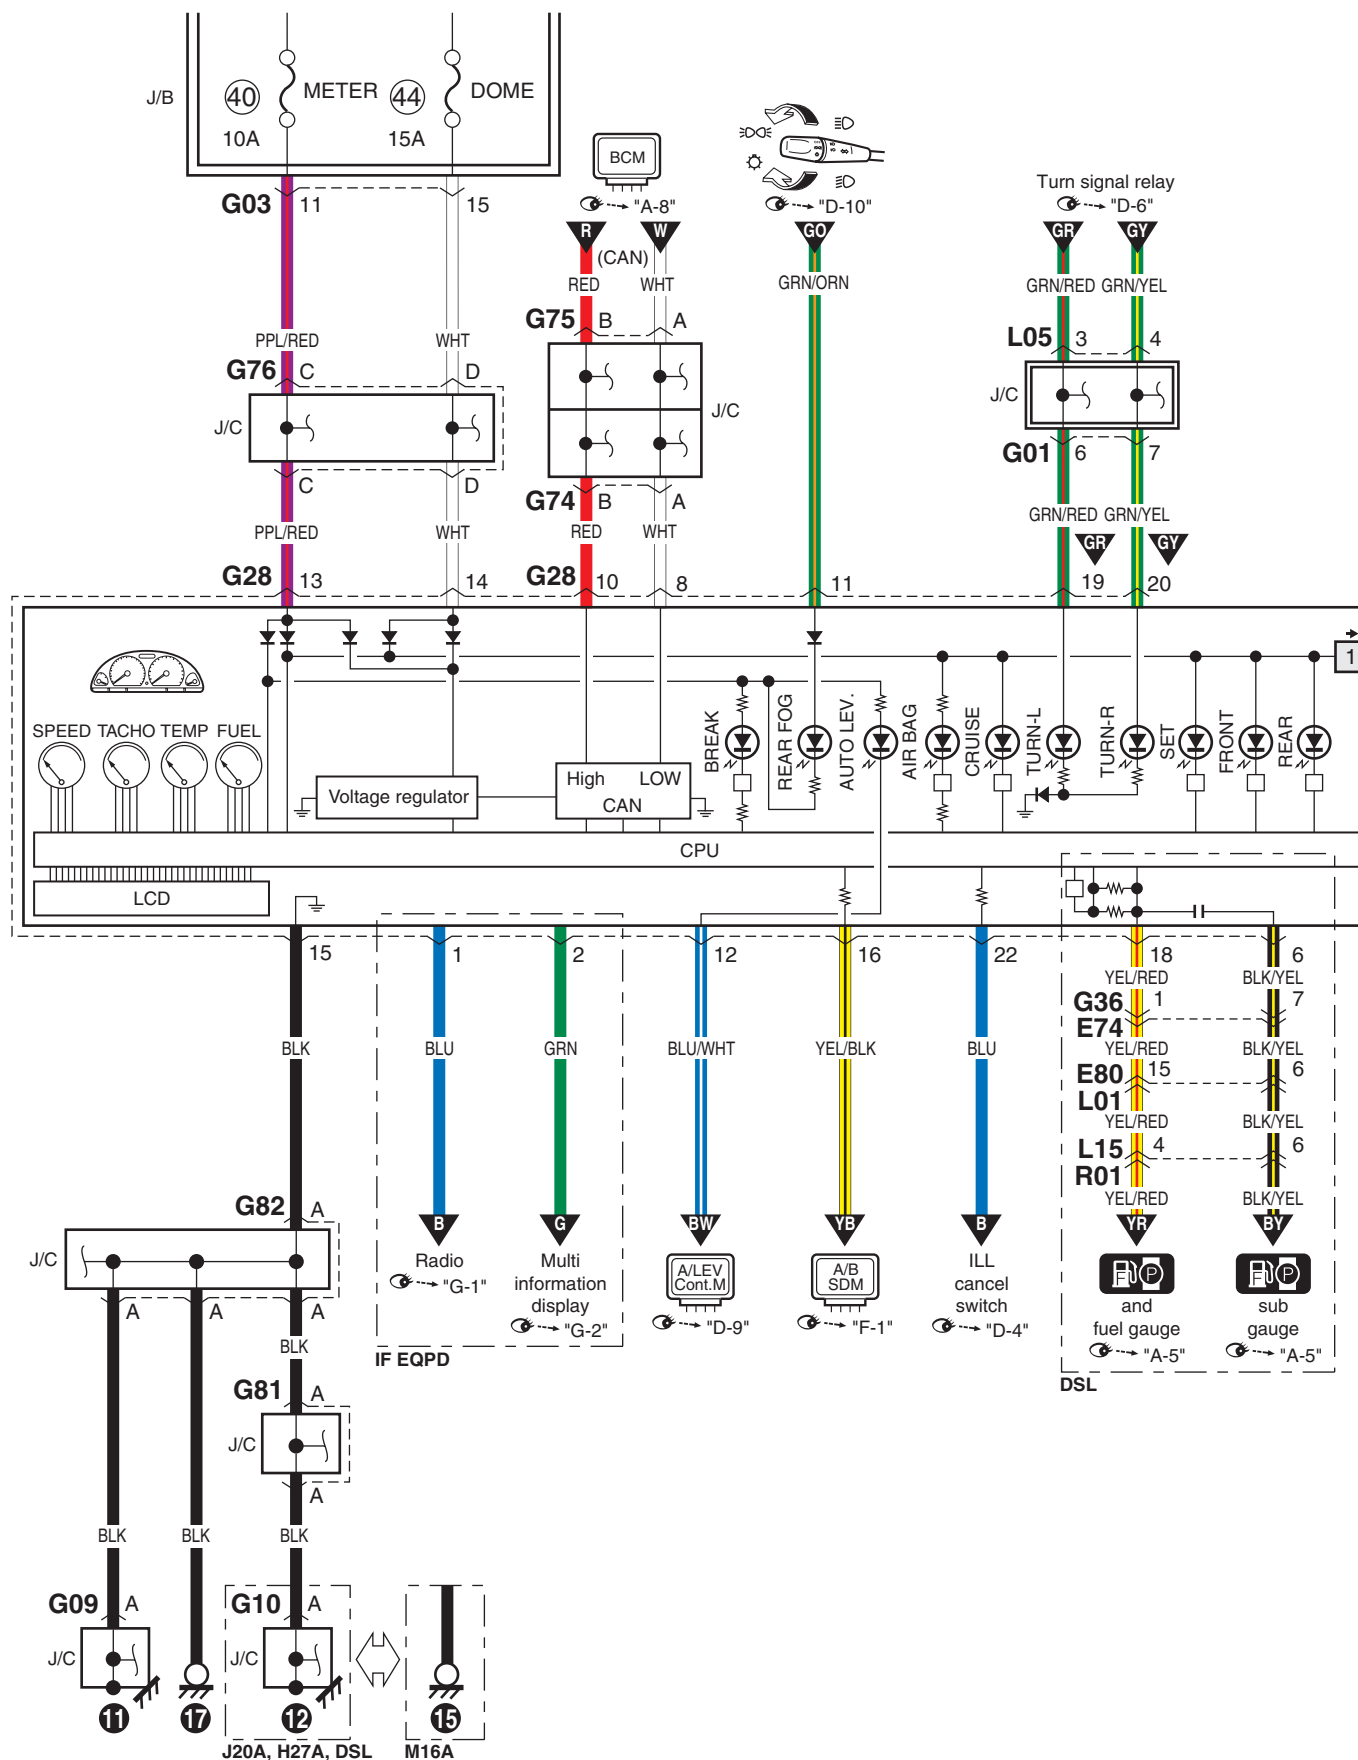

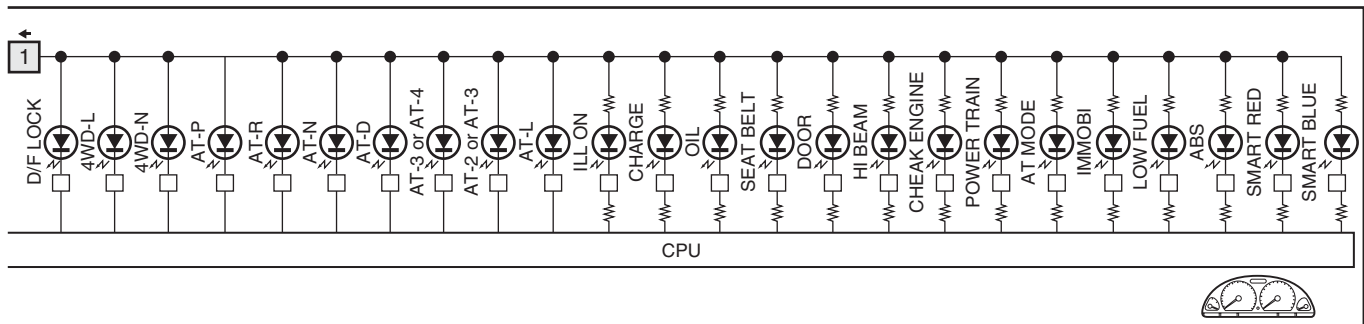

D-1 Headlight System Circuit Diagram (One bulb type)


S6JB0B910E025

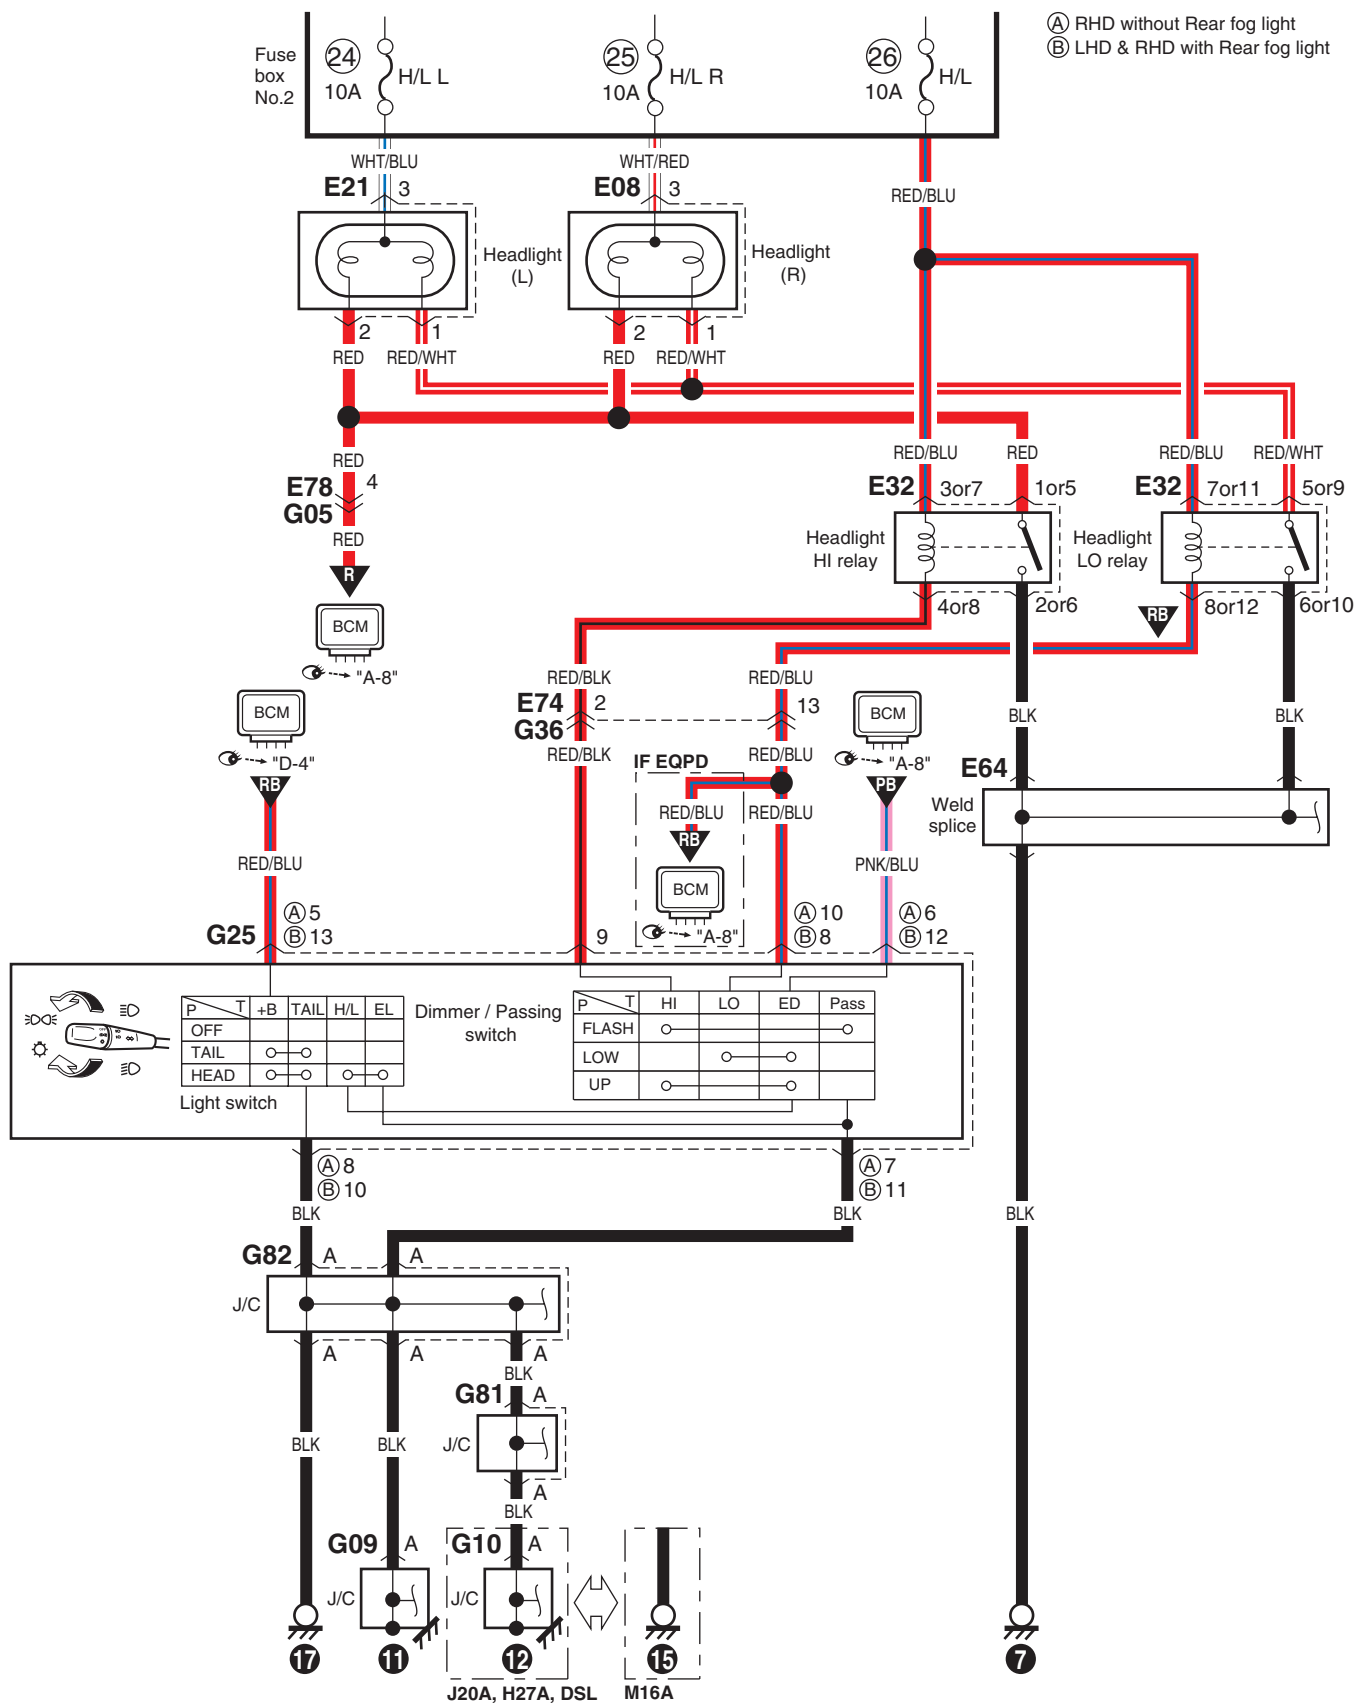

I5JB0B910973-01

D-1 Headlight System Circuit Diagram (With Projector light)

S6JB0B910E026

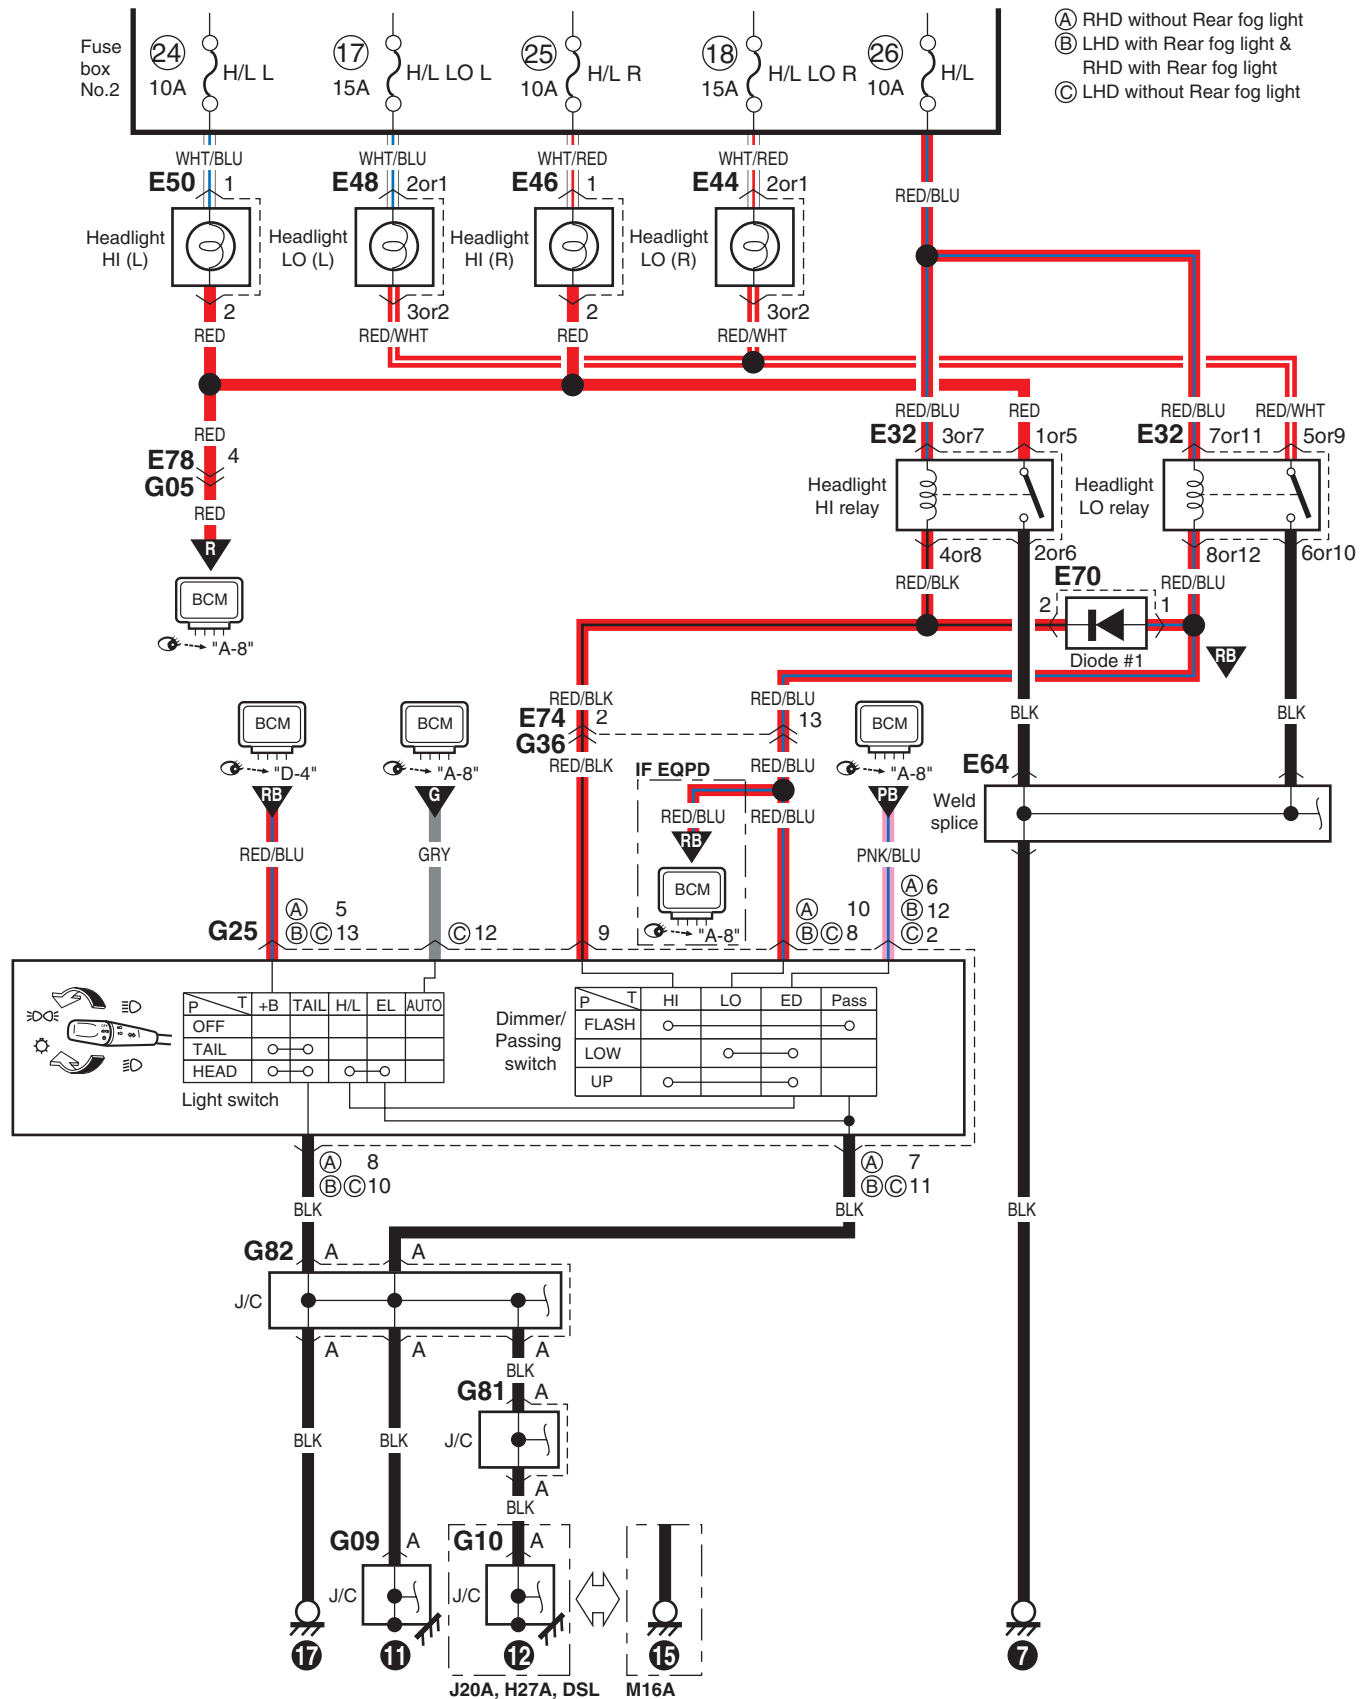

15JB0B910974-01


15JB0B910975-02

-
- Legend:**
- (A) RHD without Rear fog light
 - (B) LHD with Rear fog light & RHD with Rear fog light
 - (C) LHD without Rear fog light
 - (D) IF EQPD (Late type)
- Fuse Box No. 2:**
- 24 10A H/L L
 - 25 10A H/L R
 - 26 10A H/L
- Fuse Box No. 1:**
- 6 60A LAMP
- Light Switch:**
- | | P | T | +B | TAIL | H/L | EL | AUTO |
|------|---|---|----|------|-----|----|------|
| OFF | | | | | | | |
| TAIL | | | | | | | |
| HEAD | | | | | | | |
- Dimmer/Passing Switch:**
- | | P | T | HI | LO | ED | Pass |
|-------|---|---|----|----|----|------|
| FLASH | | | | | | |
| LOW | | | | | | |
| UP | | | | | | |
- Headlight HI (L) E50:**
- 1 WHT/BLU
 - 2 RED
- Headlight HI (R) E46:**
- 1 WHT/RED
 - 2 RED
- Headlight HI relay E32:**
- 3or7 RED/BLU
 - 4or8 RED/BLK
- Headlight LO relay E32:**
- 7or11 RED/BLU
 - 8or12 RED/BLU
- Diode #1 E70:**
- 1 RED/BLU
 - 2 RB
- BCM (Body Control Module):**
- "D-4"
 - "A-8"
 - "A-8"
 - "A-8"
 - "A-8"
- Headlight HID E47:**
- 1 BLK
 - 2 (L)
- Headlight HID E43:**
- 1 BLK
 - 2 (R)
- Weld splice E60:**
- BLK
- Weld splice E59:**
- BLK
- Weld splice E64:**
- BLK
- Weld splice E74:**
- RED/BLK
- Weld splice E78:**
- RED
- Weld splice E79:**
- RED
- Weld splice E80:**
- RED
- Weld splice E81:**
- RED
- Weld splice E82:**
- RED
- Weld splice E83:**
- RED
- Weld splice E84:**
- RED
- Weld splice E85:**
- RED
- Weld splice E86:**
- RED
- Weld splice E87:**
- RED
- Weld splice E88:**
- RED
- Weld splice E89:**
- RED
- Weld splice E90:**
- RED
- Weld splice E91:**
- RED
- Weld splice E92:**
- RED
- Weld splice E93:**
- RED
- Weld splice E94:**
- RED
- Weld splice E95:**
- RED
- Weld splice E96:**
- RED
- Weld splice E97:**
- RED
- Weld splice E98:**
- RED
- Weld splice E99:**
- RED
- Weld splice E100:**
- RED
- Weld splice E101:**
- RED
- Weld splice E102:**
- RED
- Weld splice E103:**
- RED
- Weld splice E104:**
- RED
- Weld splice E105:**
- RED
- Weld splice E106:**
- RED
- Weld splice E107:**
- RED
- Weld splice E108:**
- RED
- Weld splice E109:**
- RED
- Weld splice E110:**
- RED
- Weld splice E111:**
- RED
- Weld splice E112:**
- RED
- Weld splice E113:**
- RED
- Weld splice E114:**
- RED
- Weld splice E115:**
- RED
- Weld splice E116:**
- RED
- Weld splice E117:**
- RED
- Weld splice E118:**
- RED
- Weld splice E119:**
- RED
- Weld splice E120:**
- RED
- Weld splice E121:**
- RED
- Weld splice E122:**
- RED
- Weld splice E123:**
- RED
- Weld splice E124:**
- RED
- Weld splice E125:**
- RED
- Weld splice E126:**
- RED
- Weld splice E127:**
- RED
- Weld splice E128:**
- RED
- Weld splice E129:**
- RED
- Weld splice E130:**
- RED
- Weld splice E131:**
- RED
- Weld splice E132:**
- RED
- Weld splice E133:**
- RED
- Weld splice E134:**
- RED
- Weld splice E135:**
- RED
- Weld splice E136:**
- RED
- Weld splice E137:**
- RED
- Weld splice E138:**
- RED
- Weld splice E139:**
- RED
- Weld splice E140:**
- RED
- Weld splice E141:**
- RED
- Weld splice E142:**
- RED
- Weld splice E143:**
- RED
- Weld splice E144:**
- RED
- Weld splice E145:**
- RED
- Weld splice E146:**
- RED
- Weld splice E147:**
- RED
- Weld splice E148:**
- RED
- Weld splice E149:**
- RED
- Weld splice E150:**
- RED
- Weld splice E151:**
- RED
- Weld splice E152:**
- RED
- Weld splice E153:**
- RED
- Weld splice E154:**
- RED
- Weld splice E155:**
- RED
- Weld splice E156:**
- RED
- Weld splice E157:**
- RED
- Weld splice E158:**
- RED
- Weld splice E159:**
- RED
- Weld splice E160:**
- RED
- Weld splice E161:**
- RED
- Weld splice E162:**
- RED
- Weld splice E163:**
- RED
- Weld splice E164:**
- RED
- Weld splice E165:**
- RED
- Weld splice E166:**
- RED
- Weld splice E167:**
- RED

D-2 Position, Tail and Licence Plate Light System Circuit Diagram

S6JB0B910E028


- Ⓐ RHD without Rear fog light
 Ⓑ LHD & RHD with Rear fog light

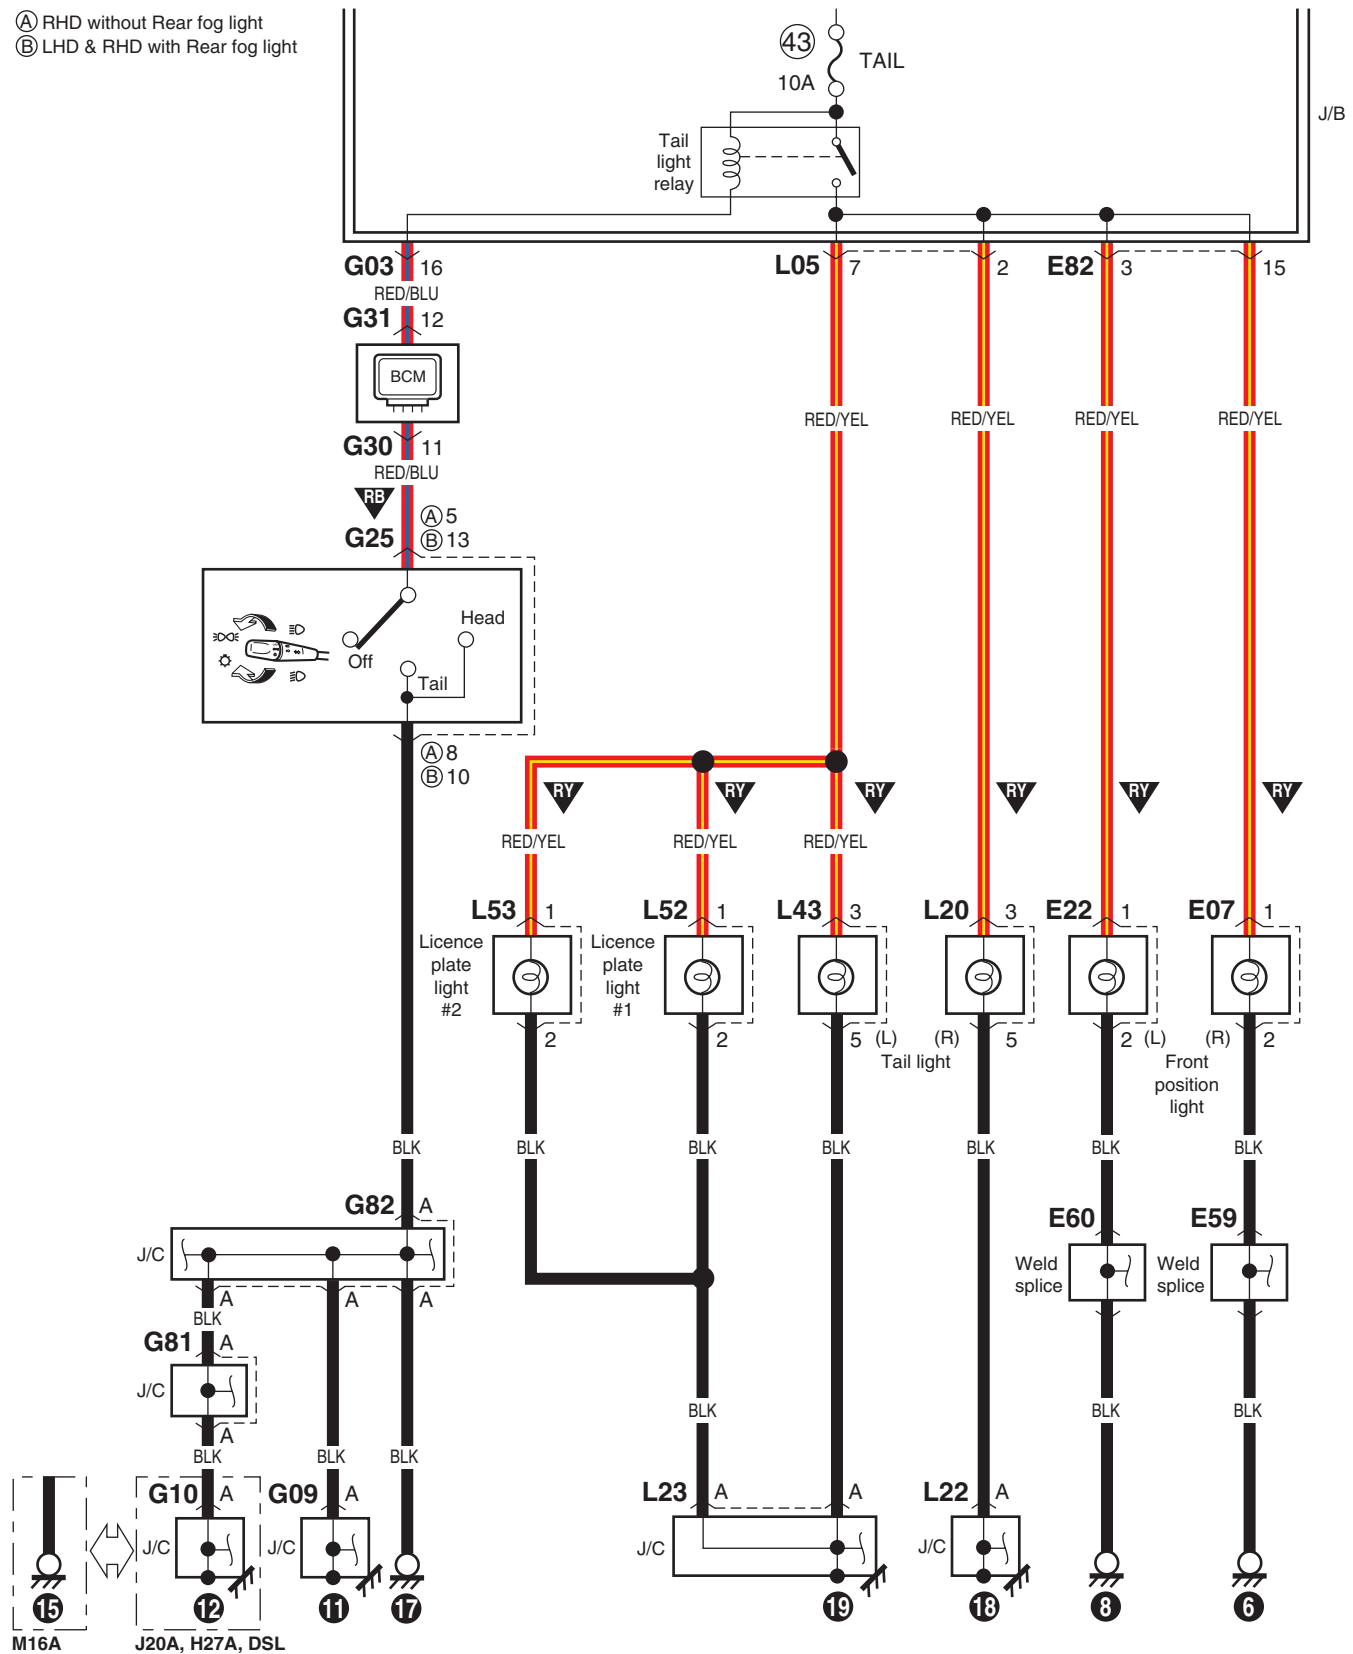

15JB0B910976-01

D-3 Front Fog Light System Circuit Diagram


S6JB0B910E029

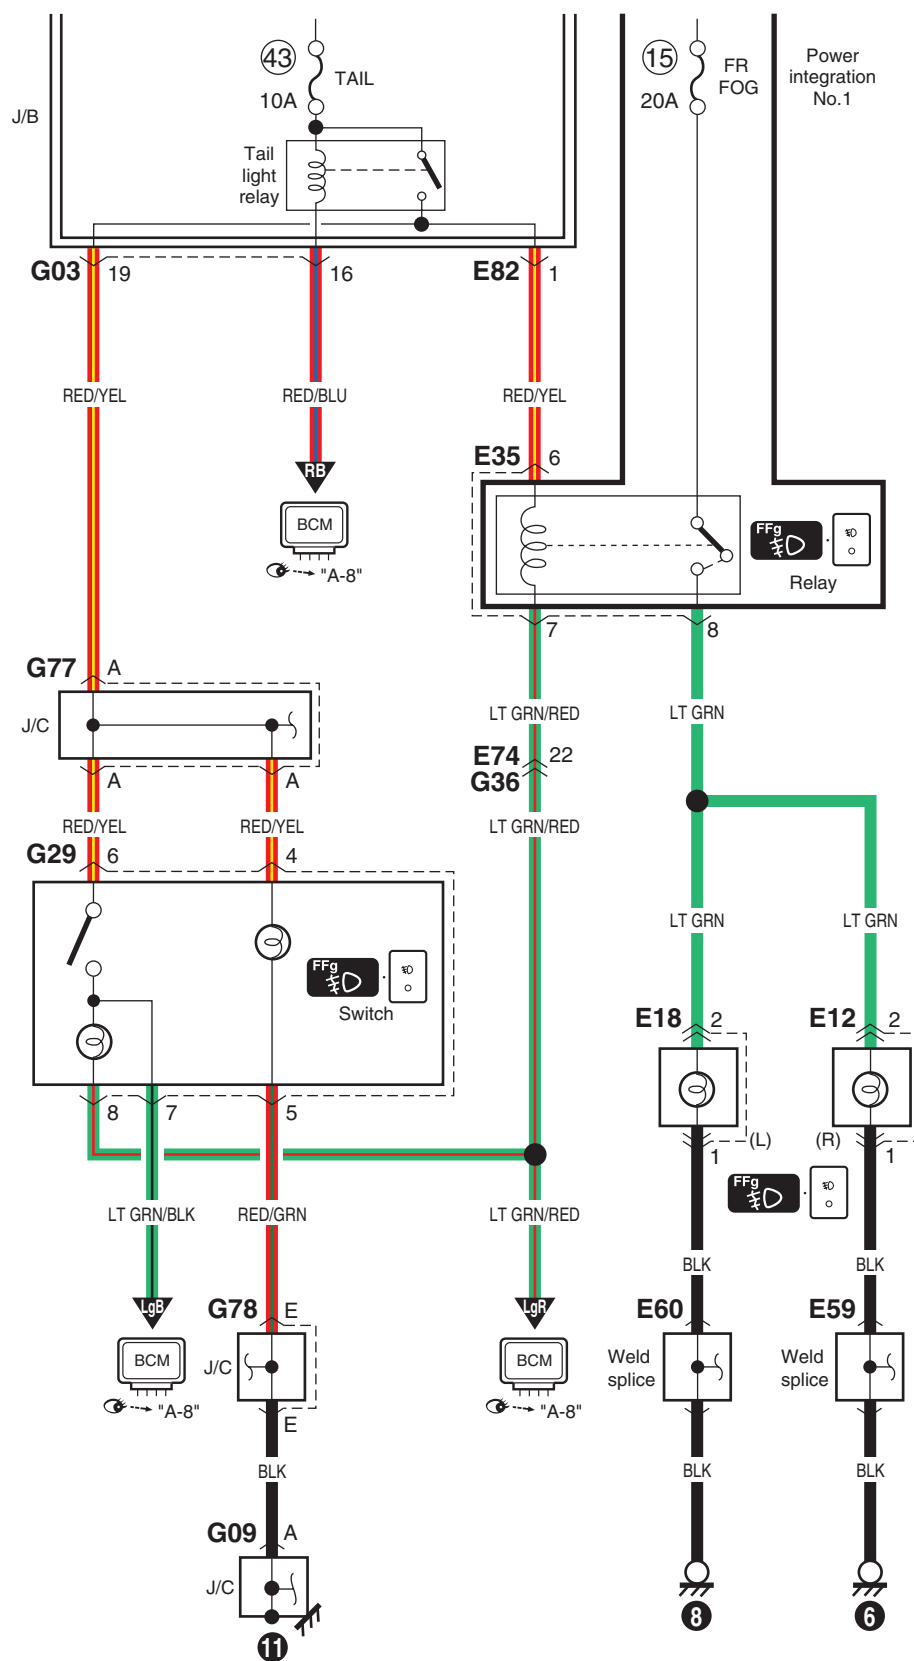

I5JB0A910972-08

D-4 Illumination Light System Circuit Diagram


S6JB0B910E030

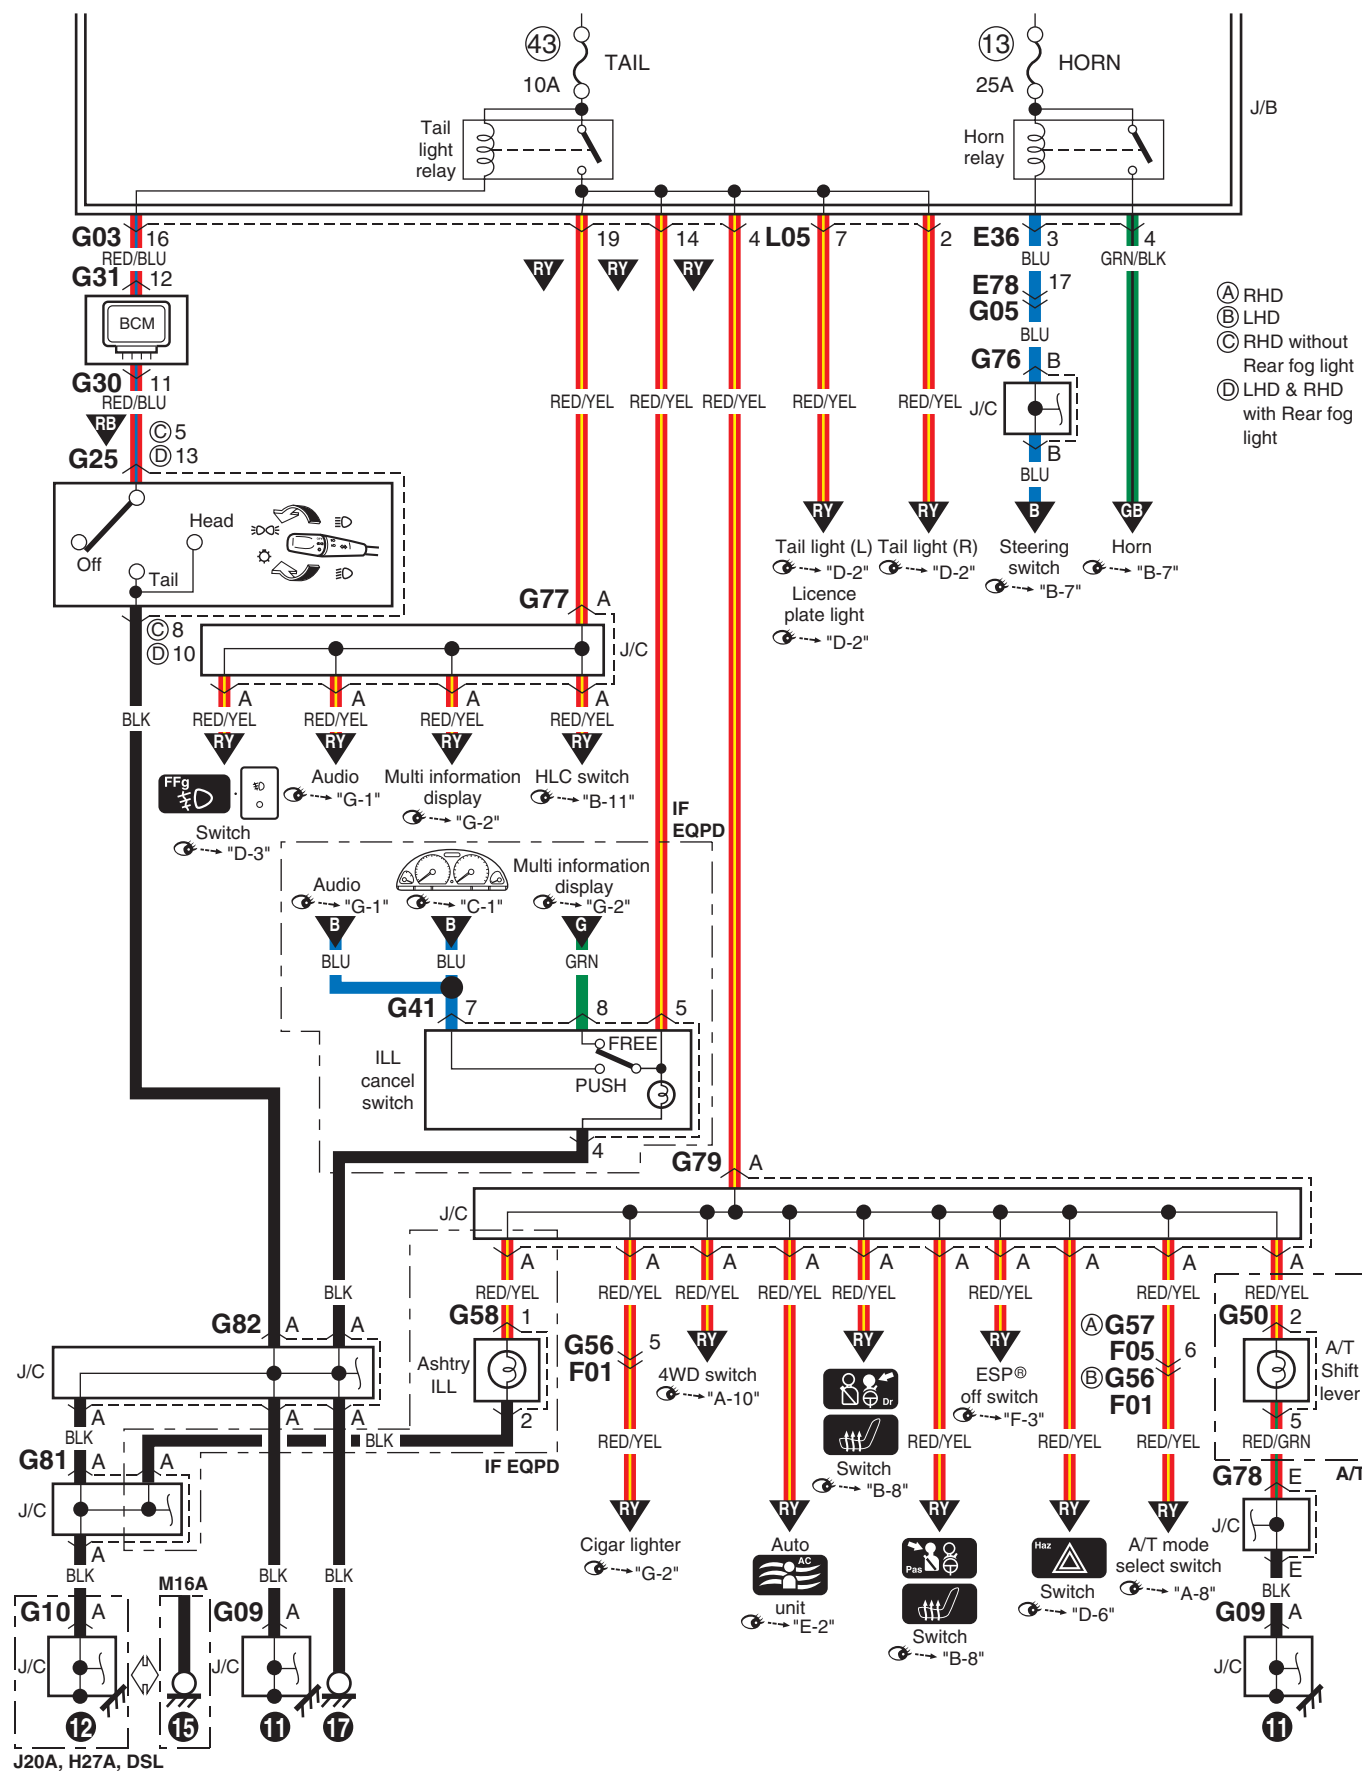

I6JB0B910911-02

D-5 Interior Light System Circuit Diagram


S6JB0B910E031

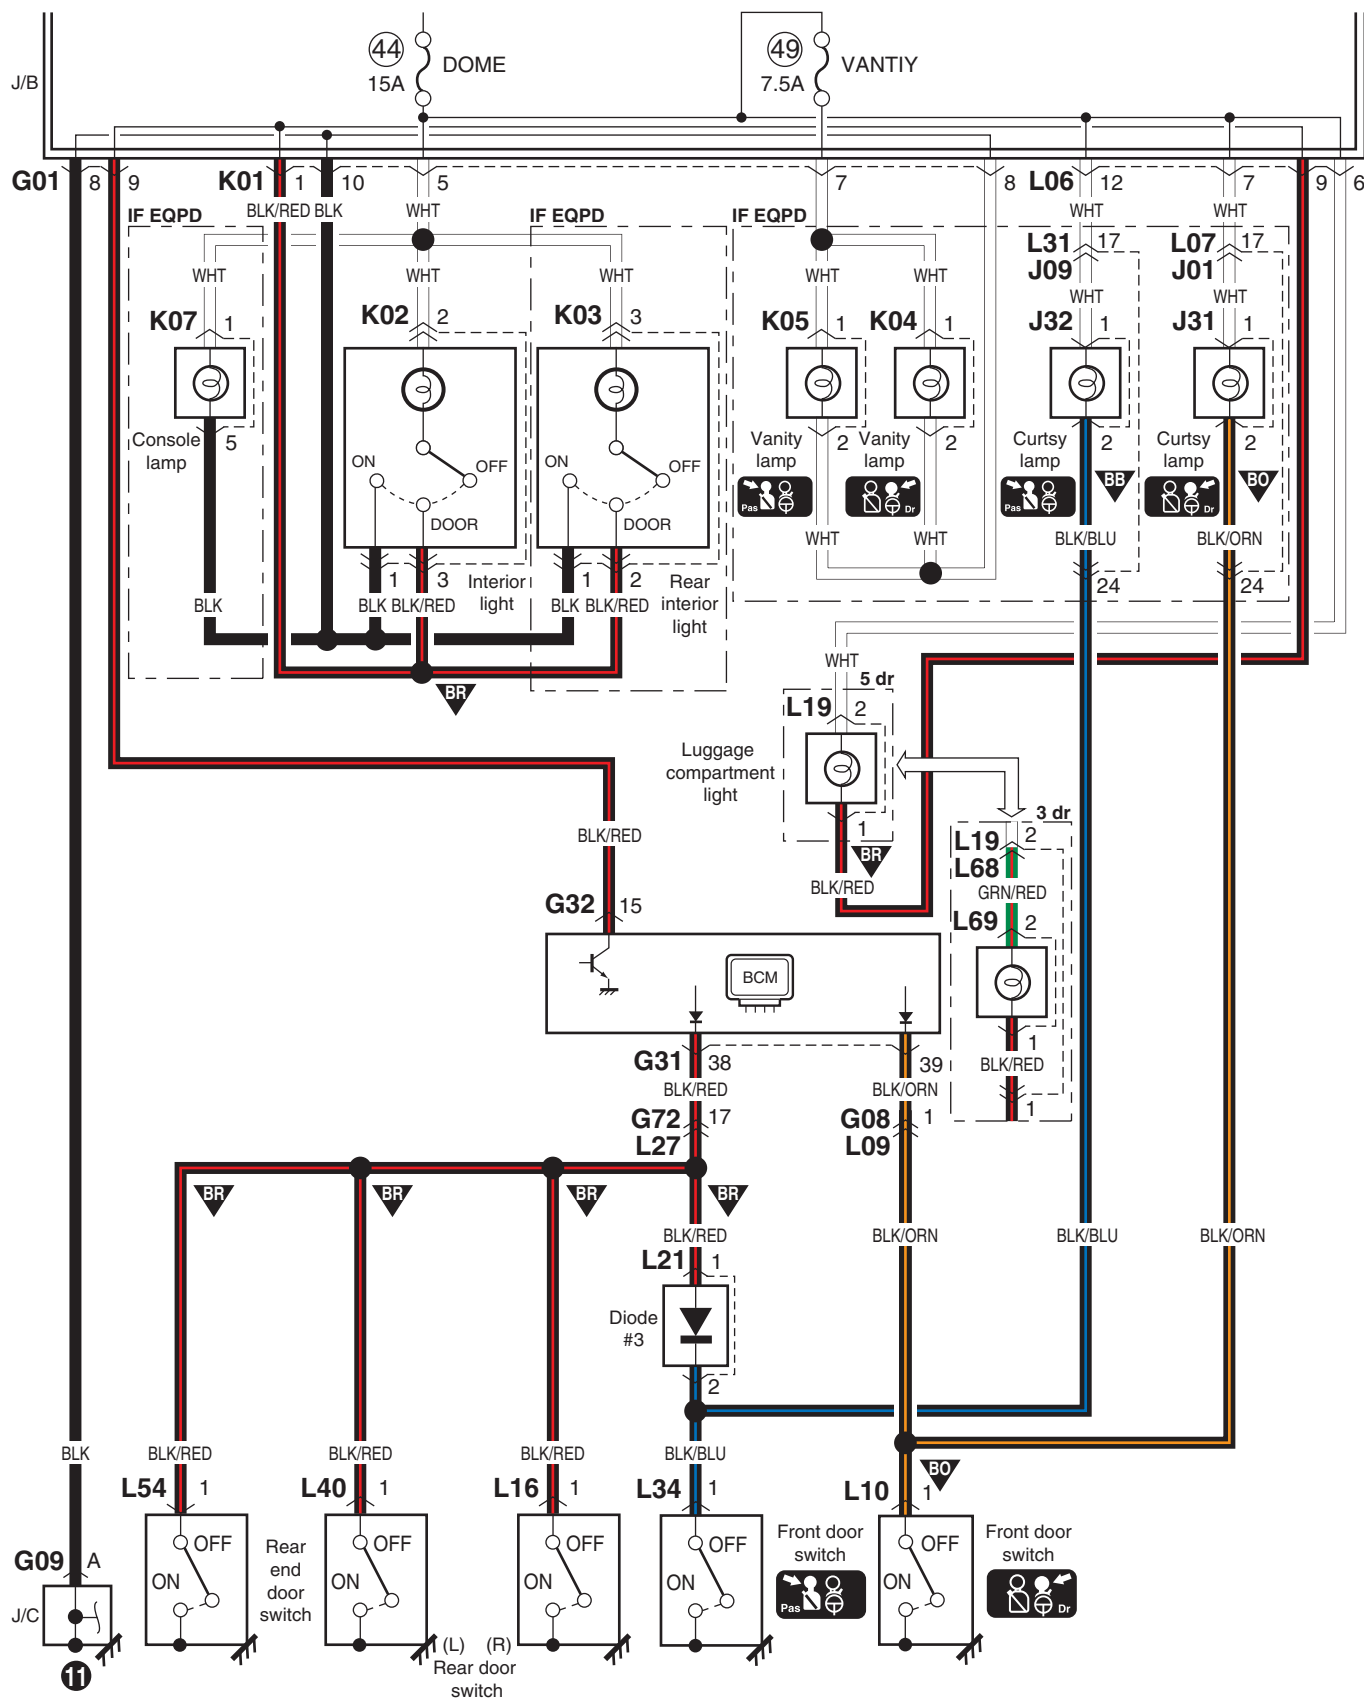


I5JB0B910978-01

D-6 Turn Signal and Hazard Warning Light System Circuit Diagram

S6JB0B910E032

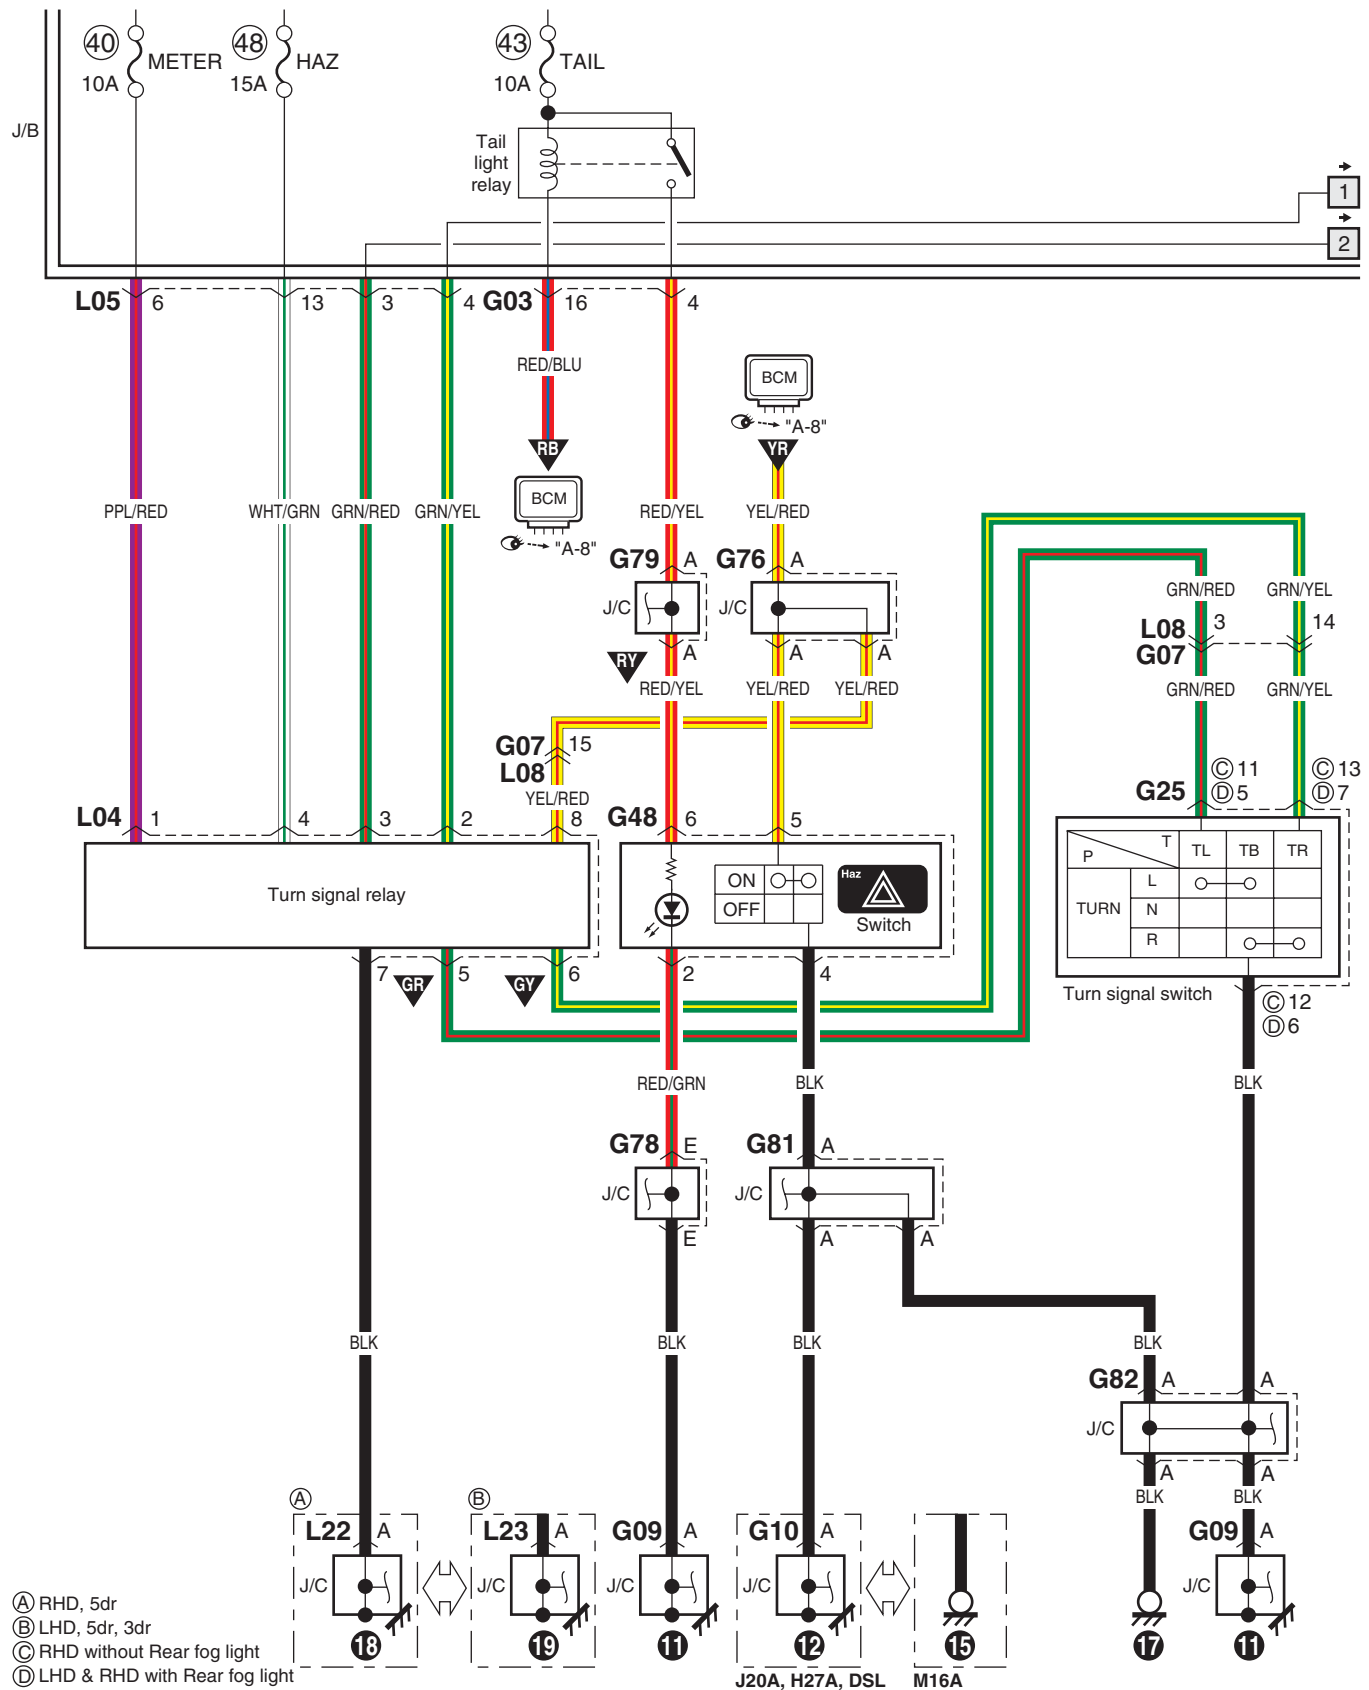


I5JB0B910979-01

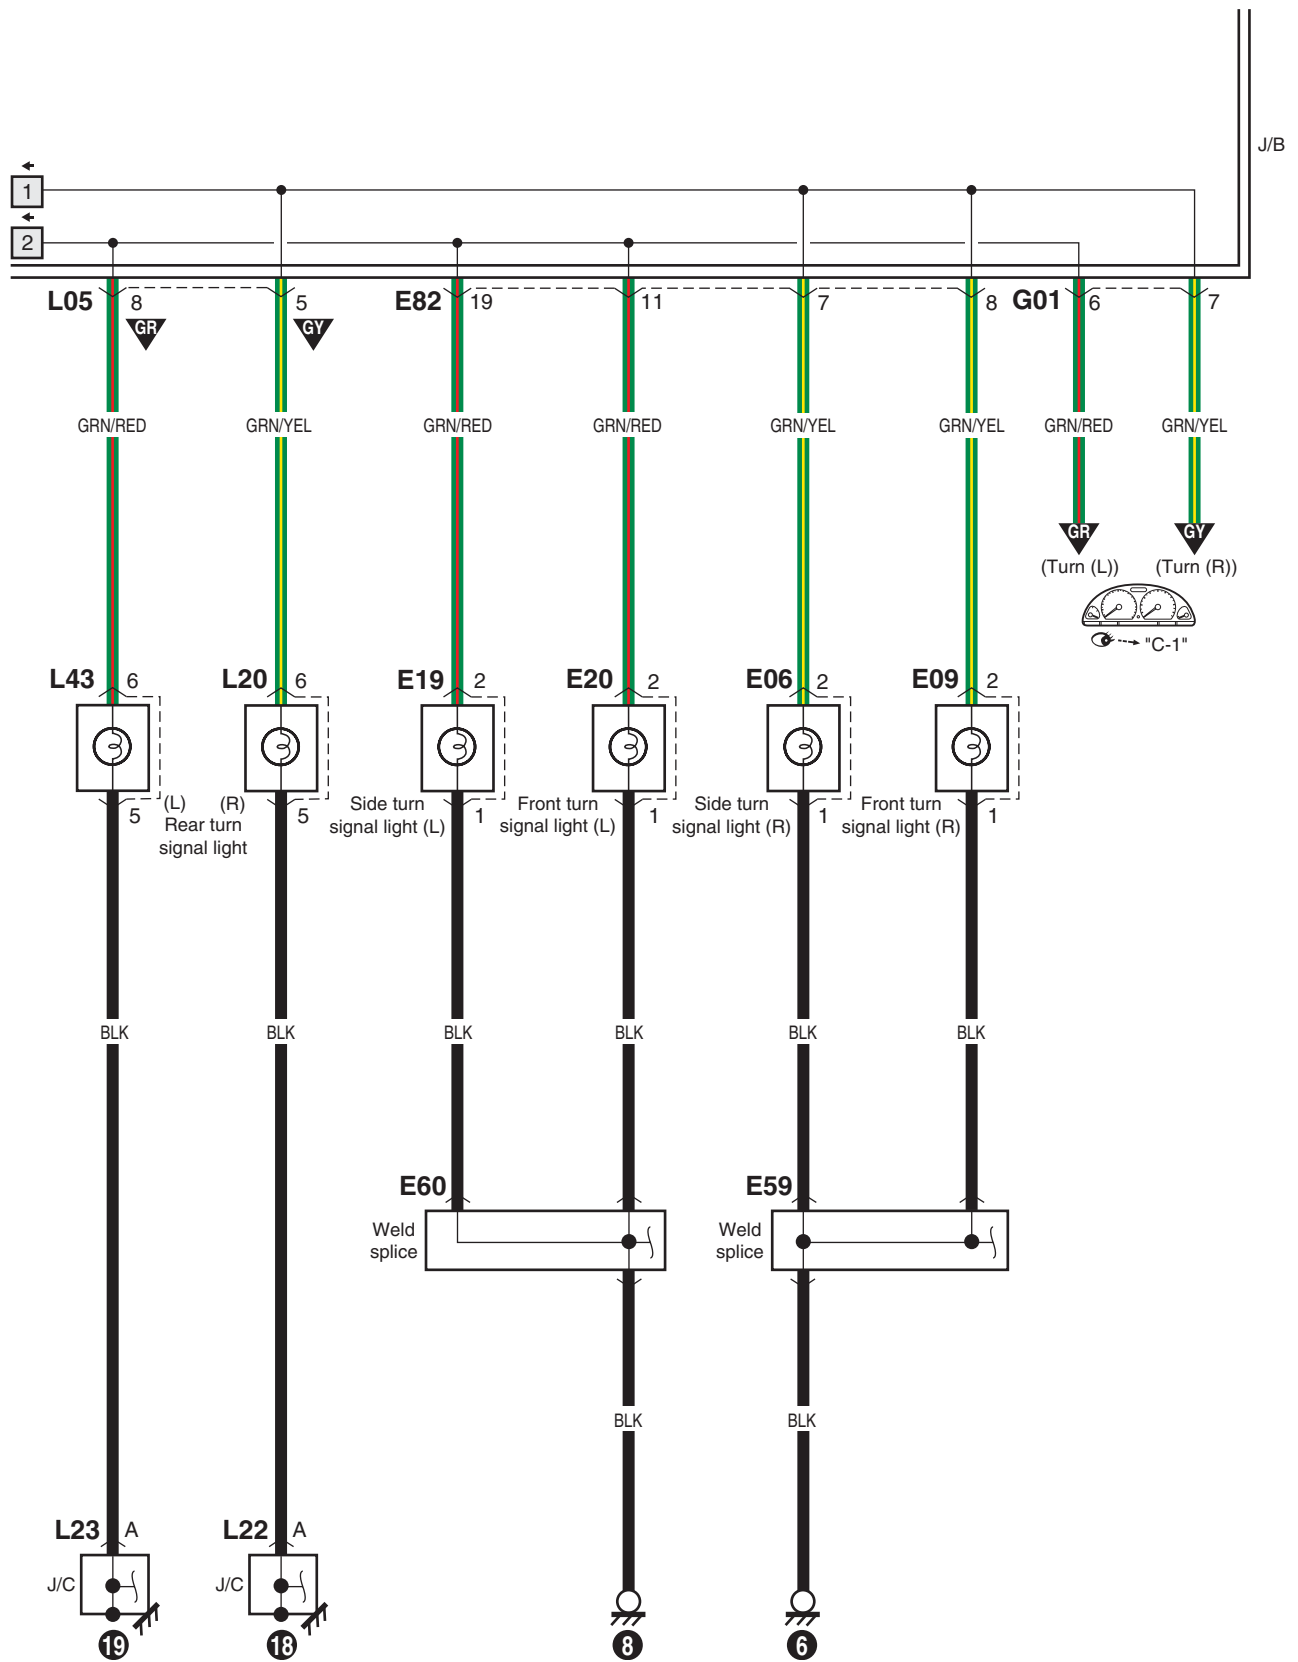

D-7 Brake Light System Circuit Diagram

S6JB0B910E033

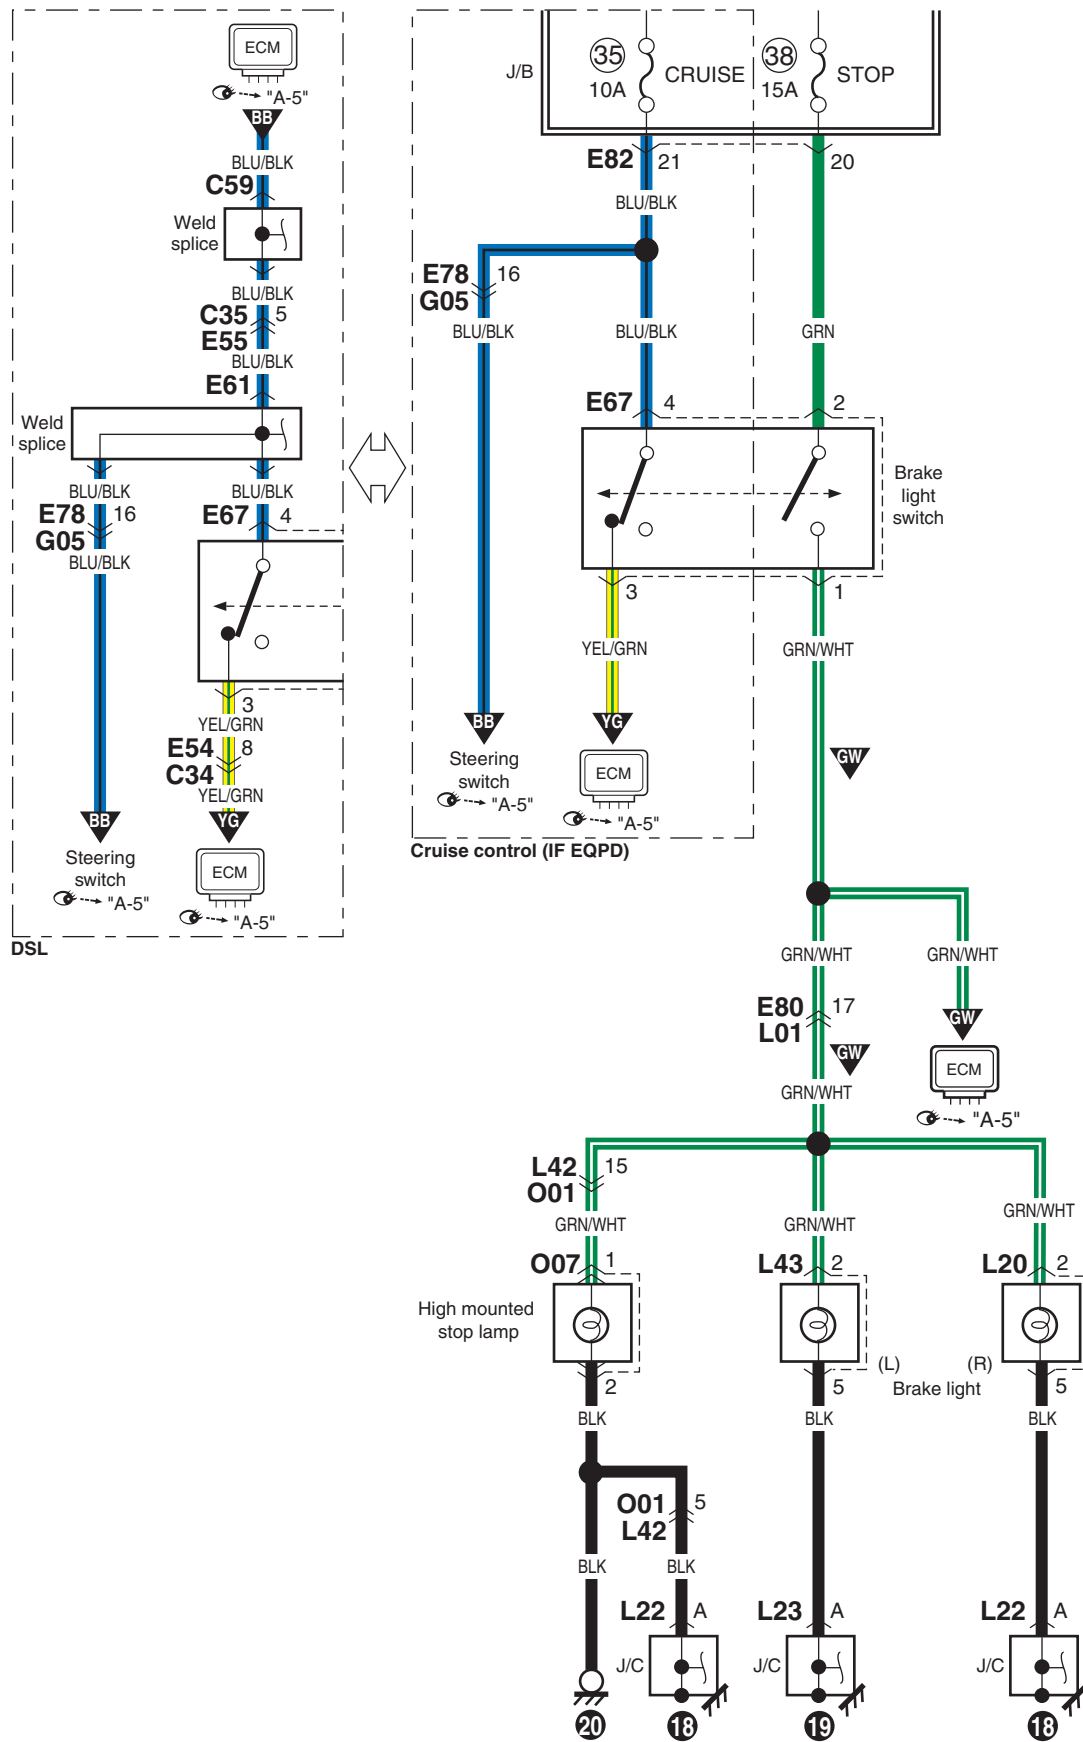


I6JB0B910954-01

D-8 Back-Up Light System Circuit Diagram

S6JB0B910E034


Ⓐ 4AT
Ⓑ 5AT

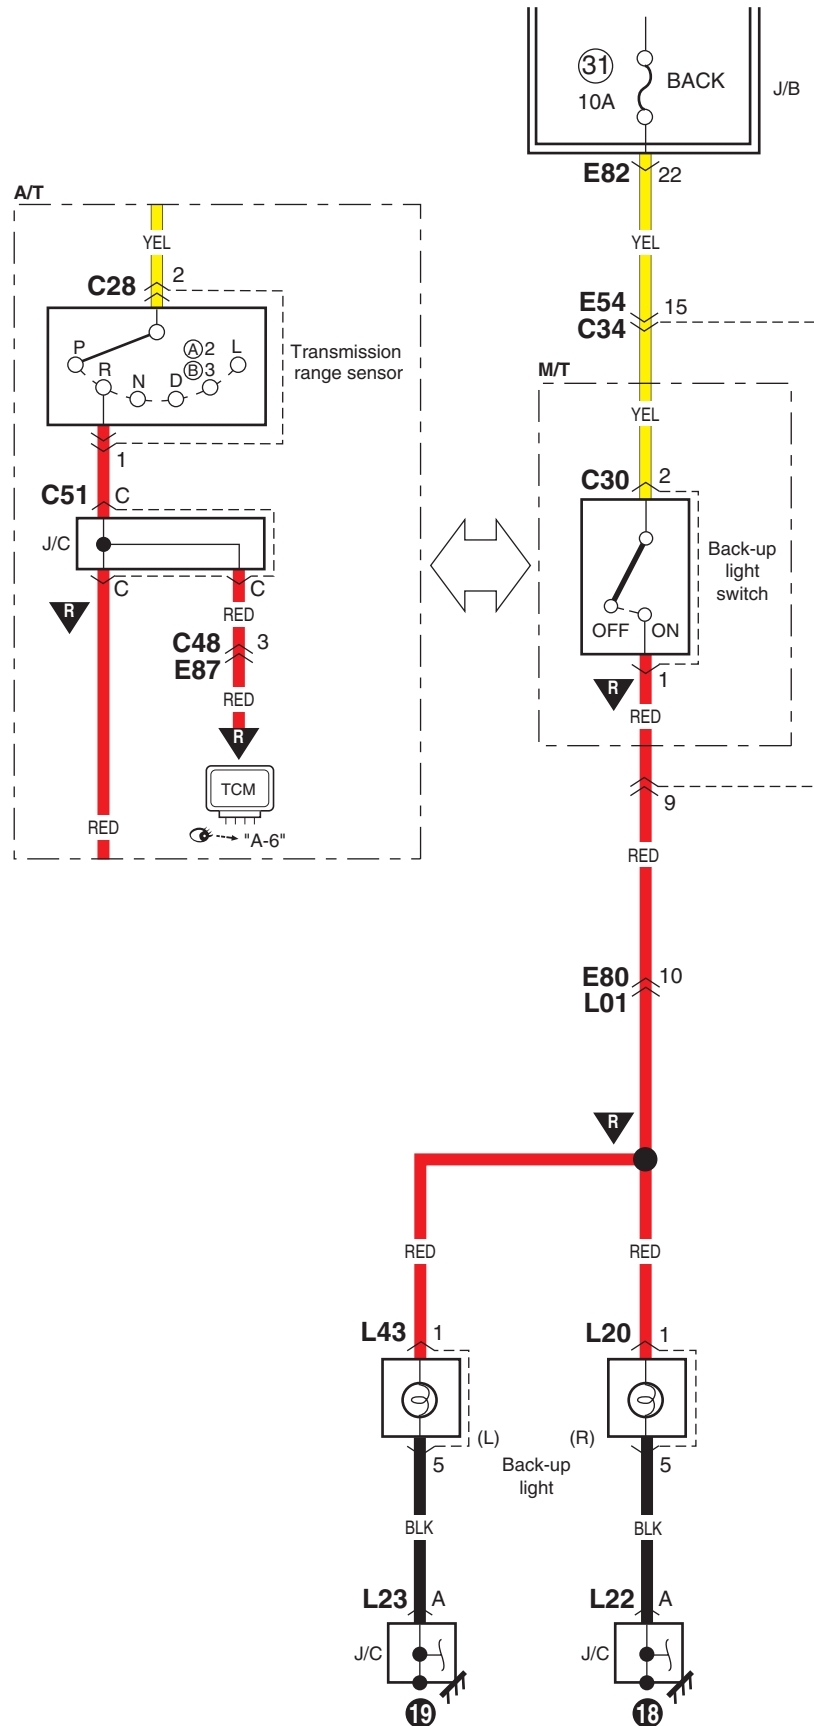

I5JB0B910981-01

D-9 Headlight Beam Leveling System Circuit Diagram (Manual Leveling)


S6JB0B910E035

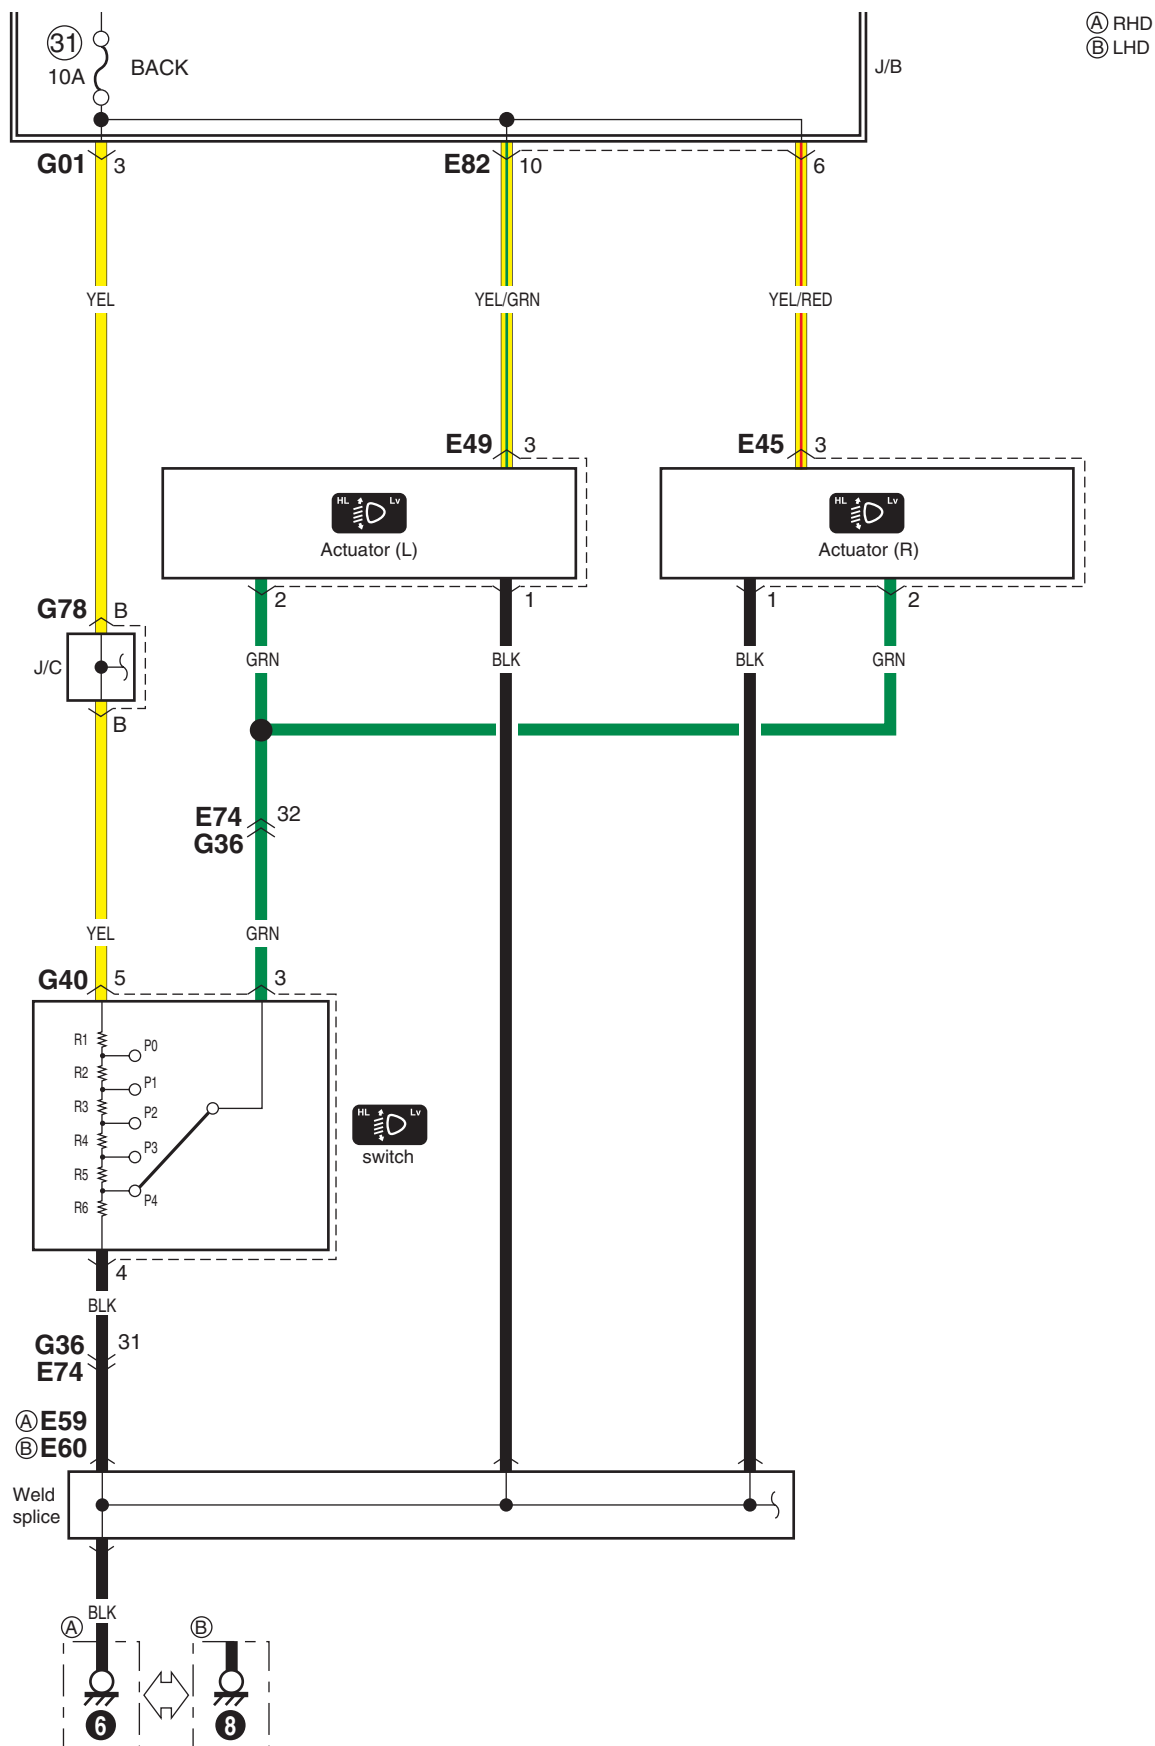


15JB0B910982-01

D-9 Headlight Beam Leveling System Circuit Diagram (Auto Leveling)


S6JB0B910E036

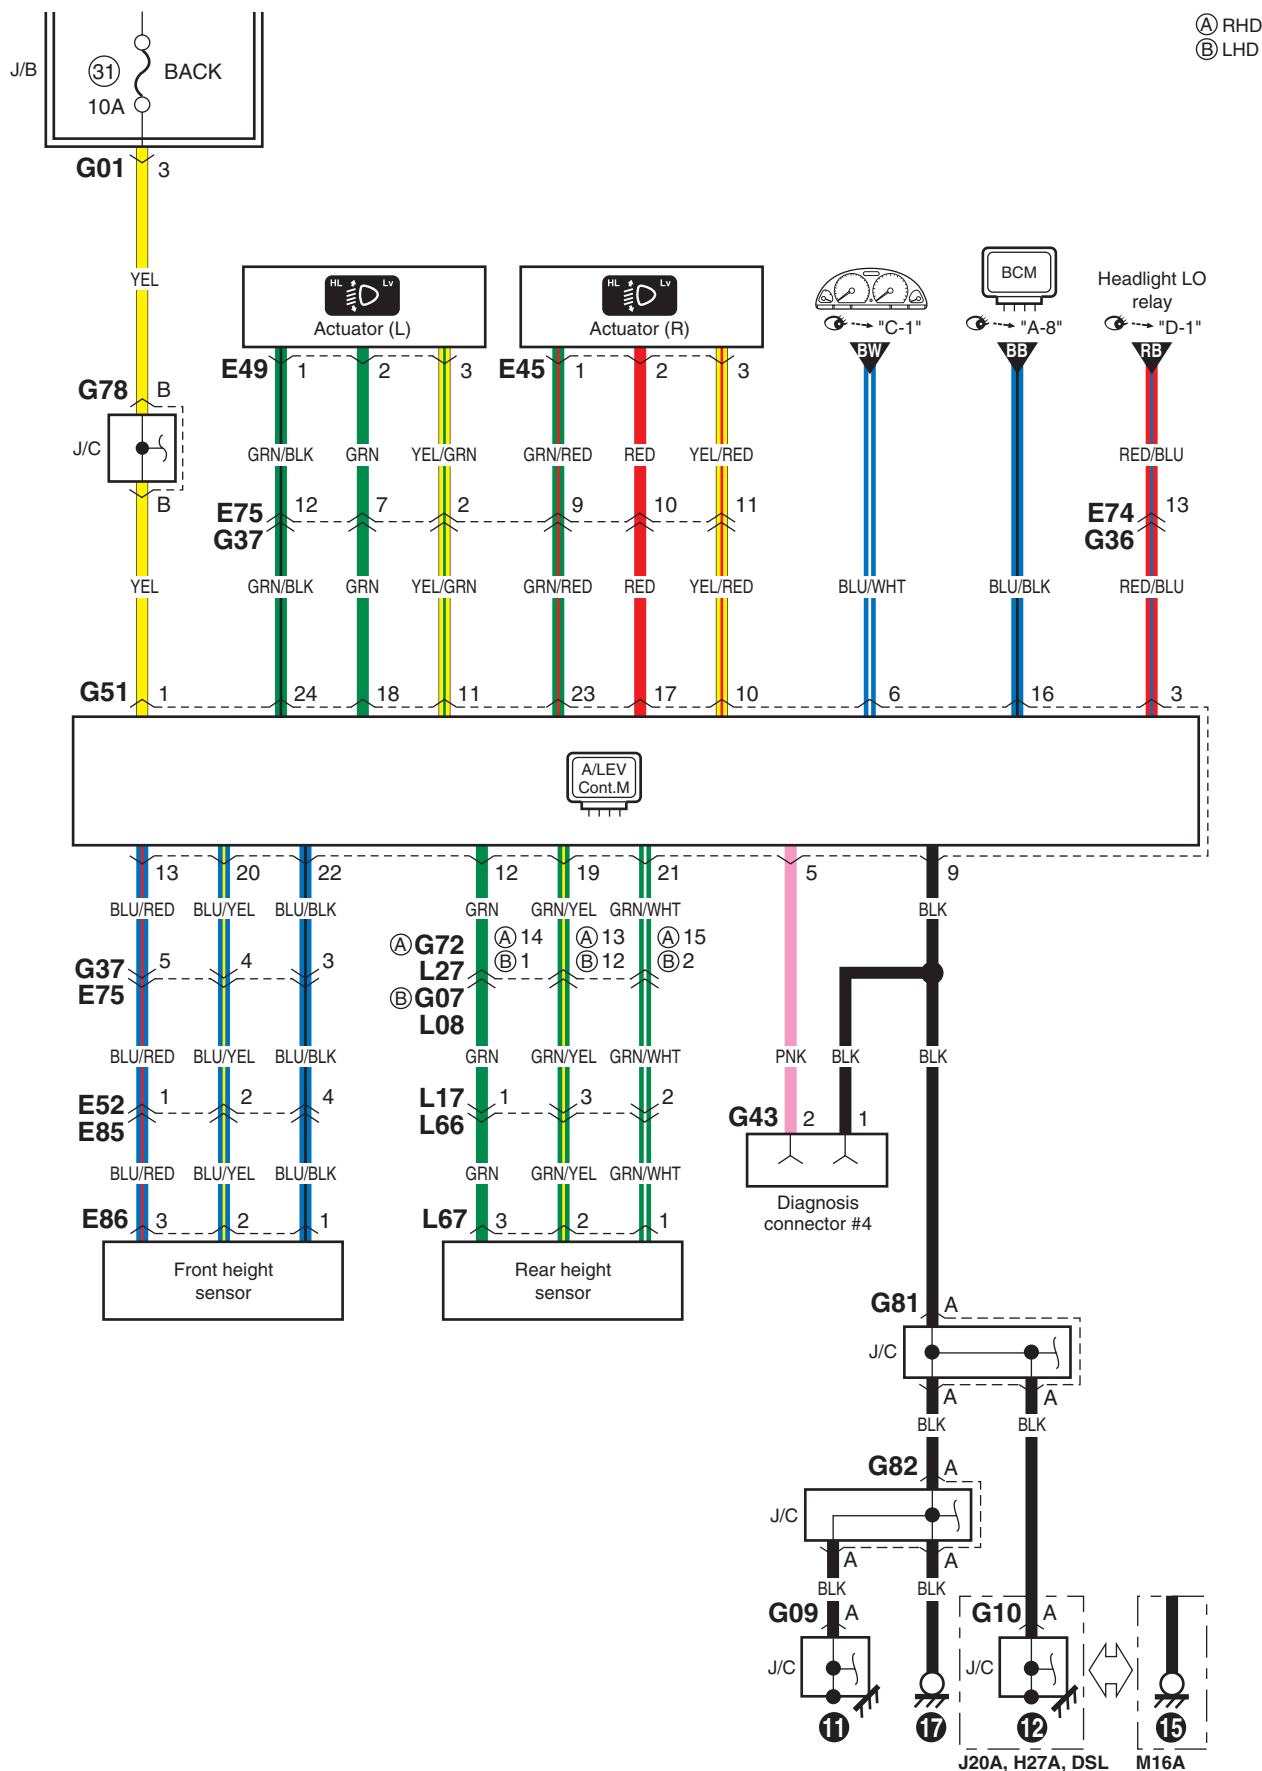

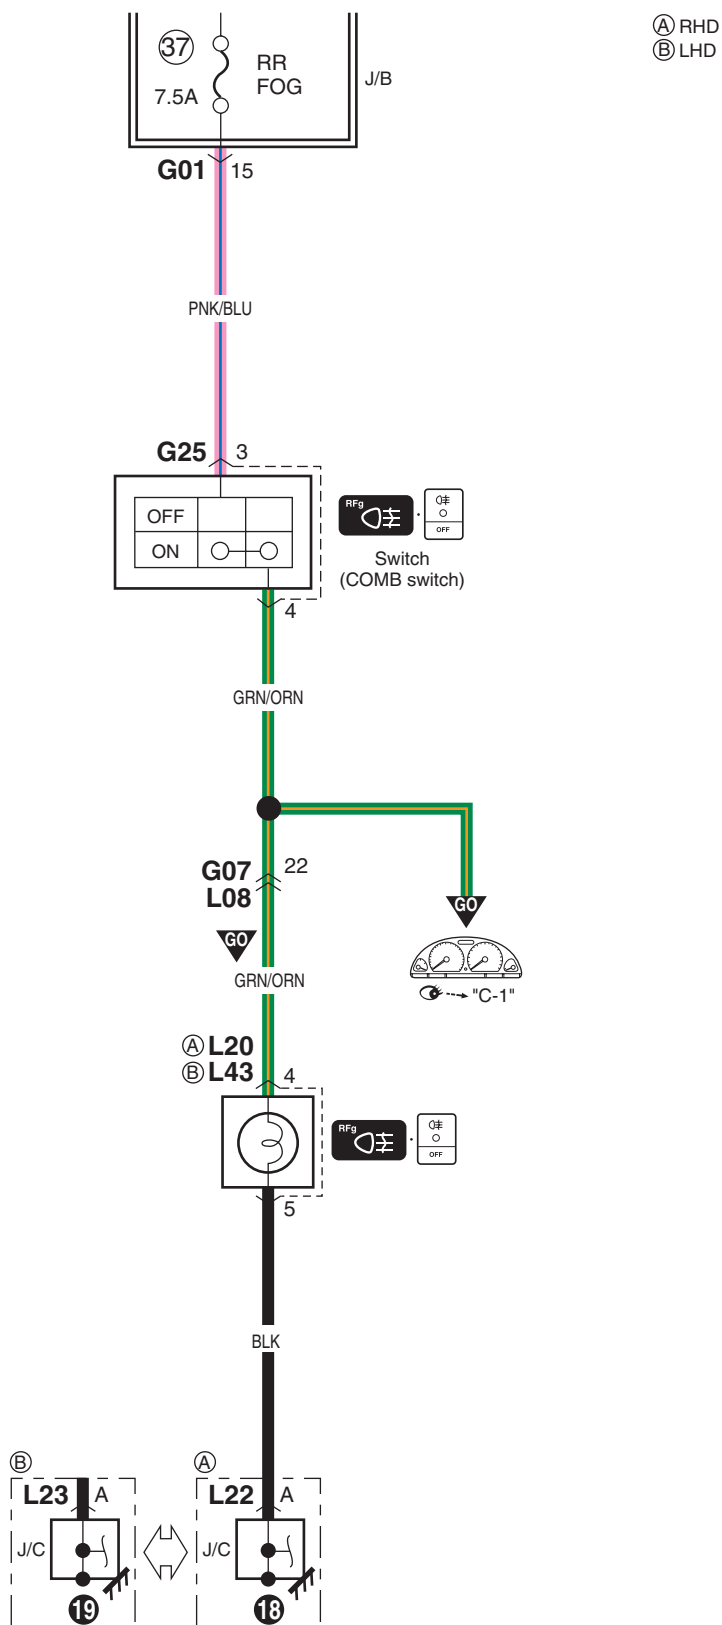


E-2 Auto A/C System Circuit Diagram


S6JB0B910E038

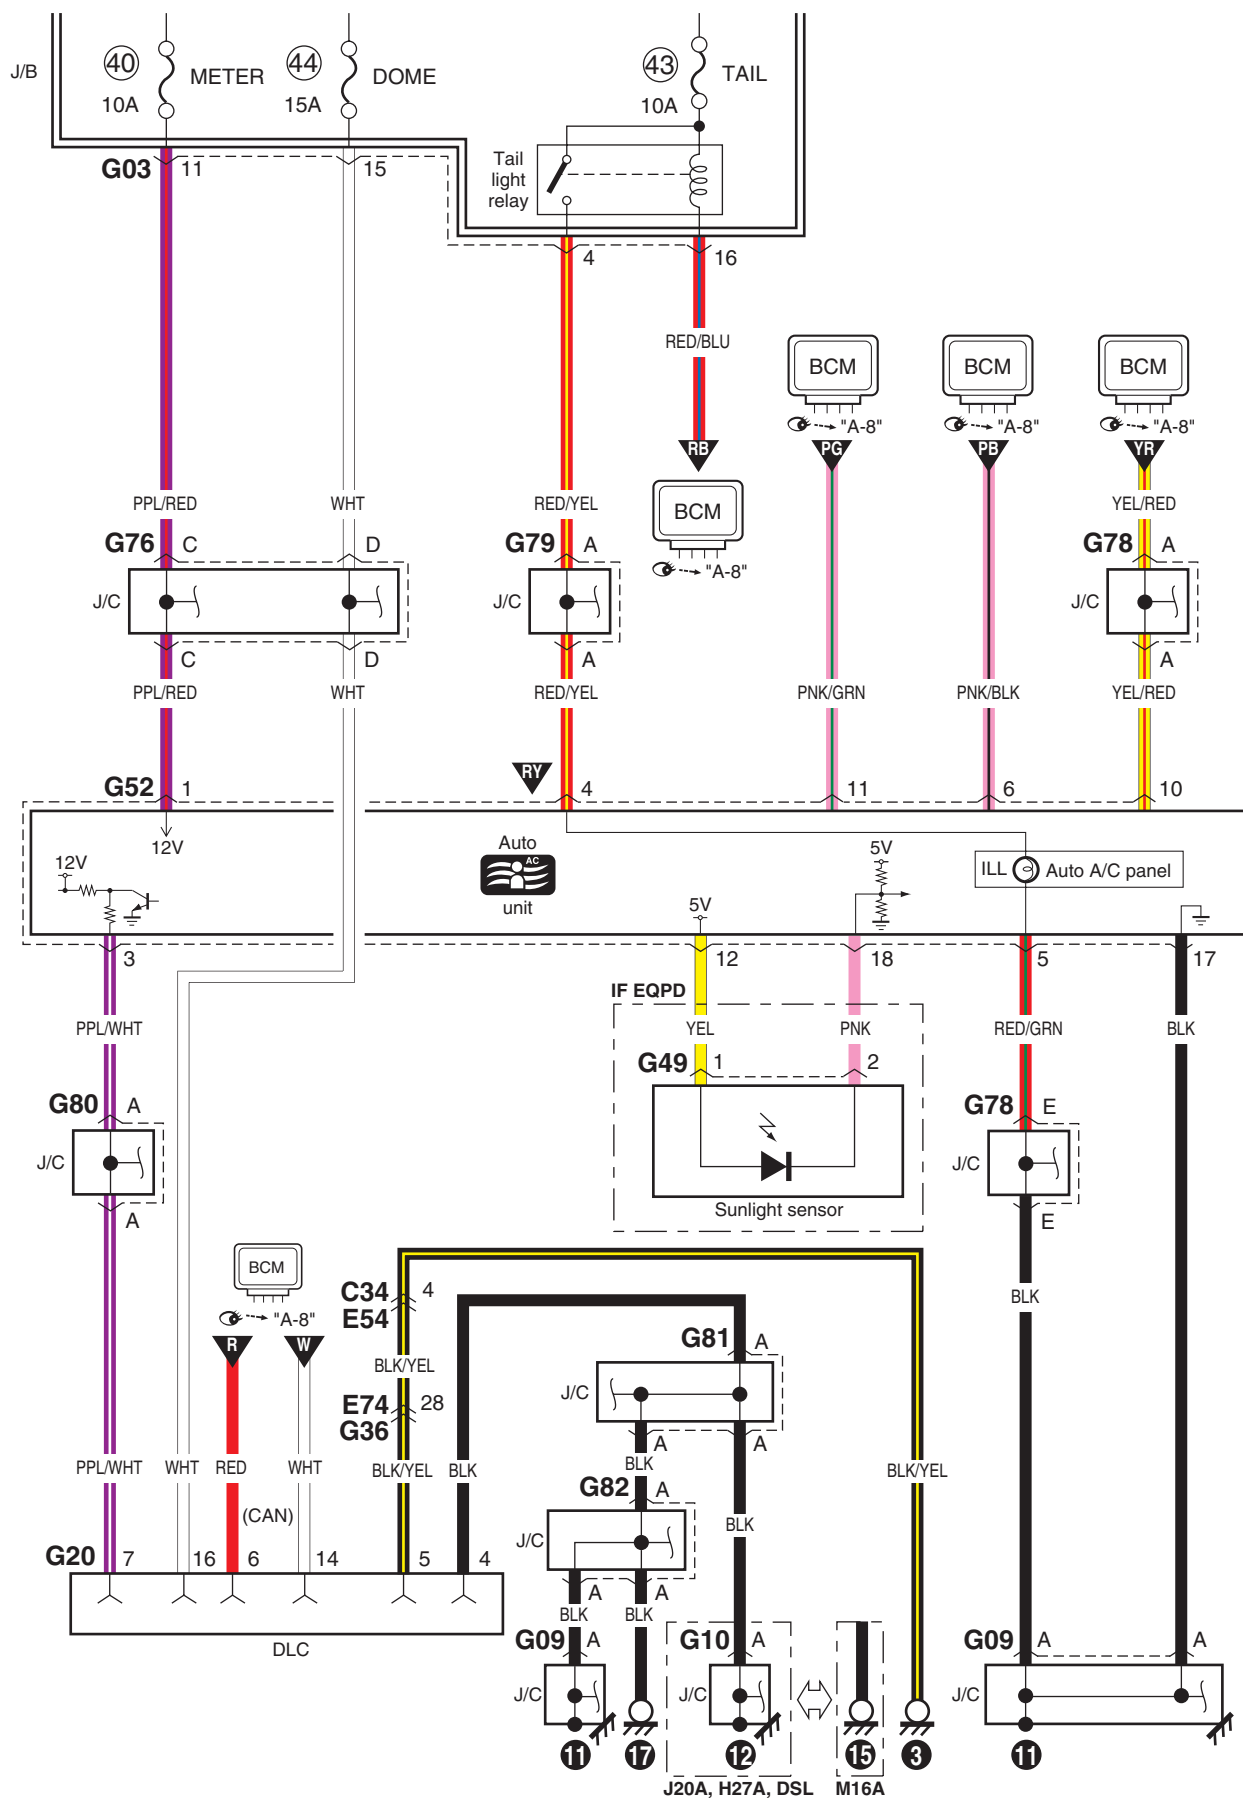



I6JB0B910946-01

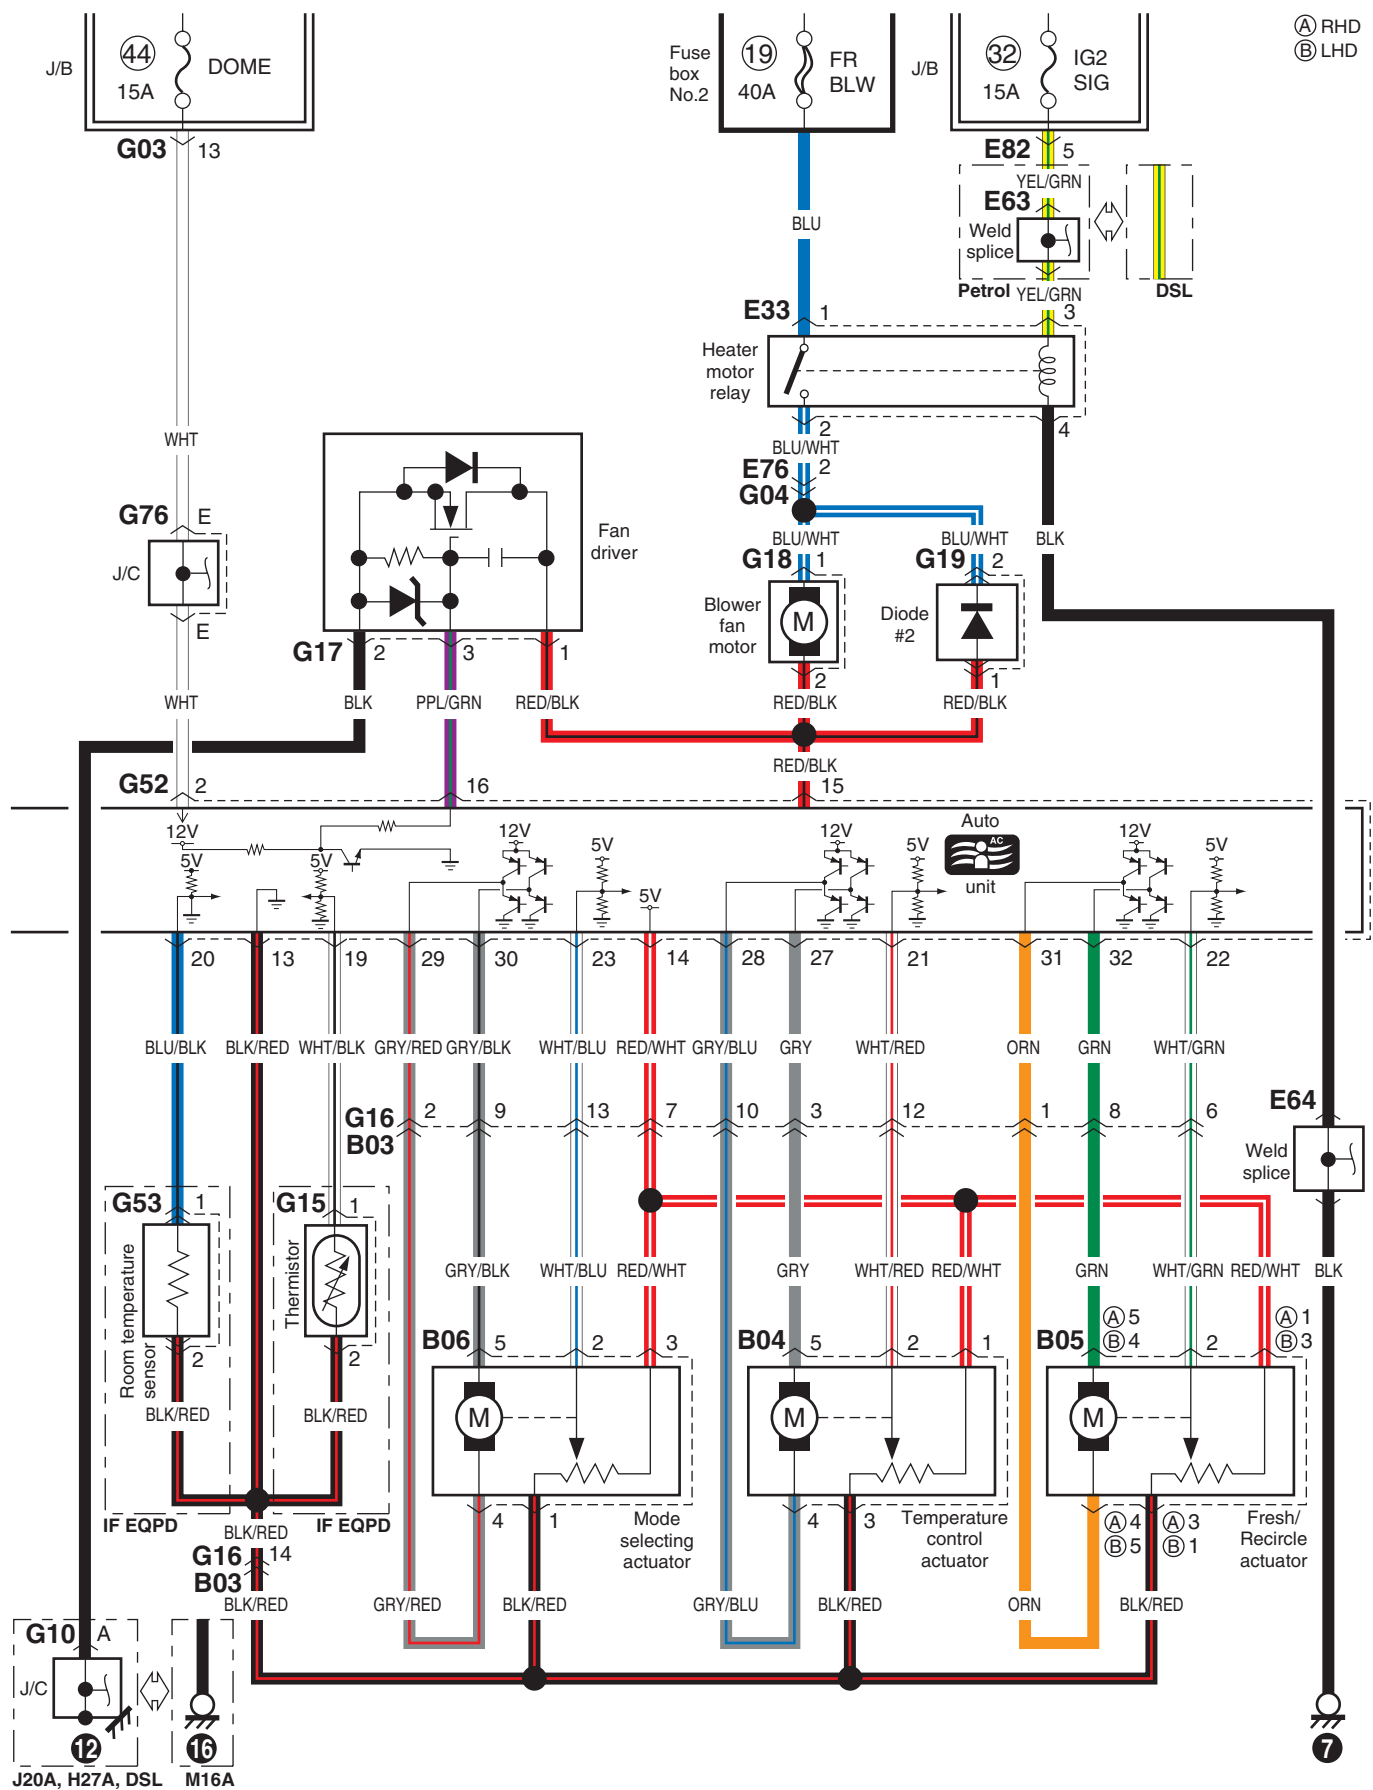

16JB0B910948-01

 


 


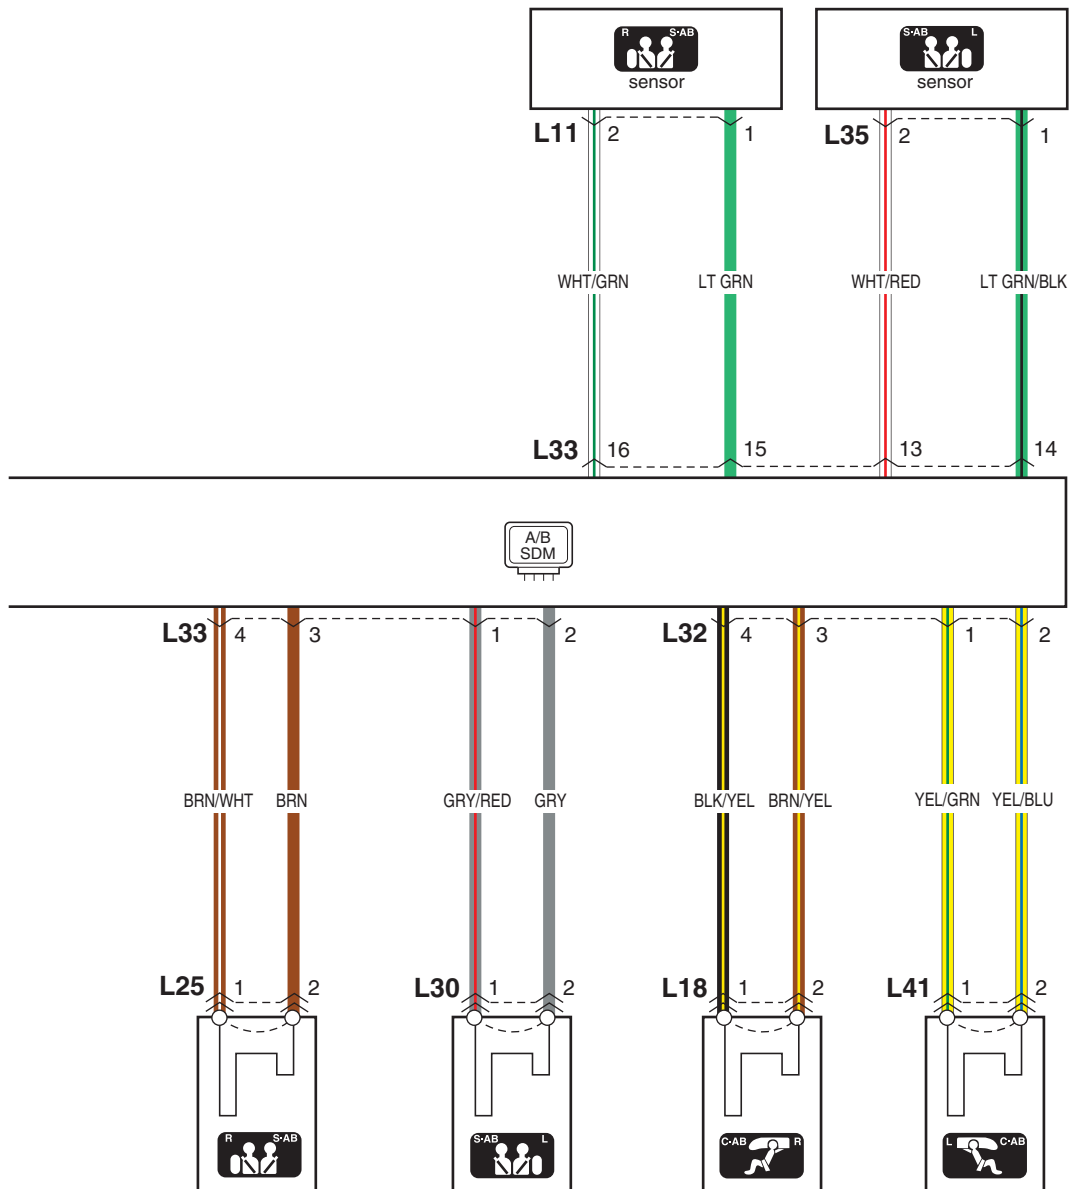

F-2 Anti-Lock Brake System Circuit Diagram

 
S6JB0B910E041

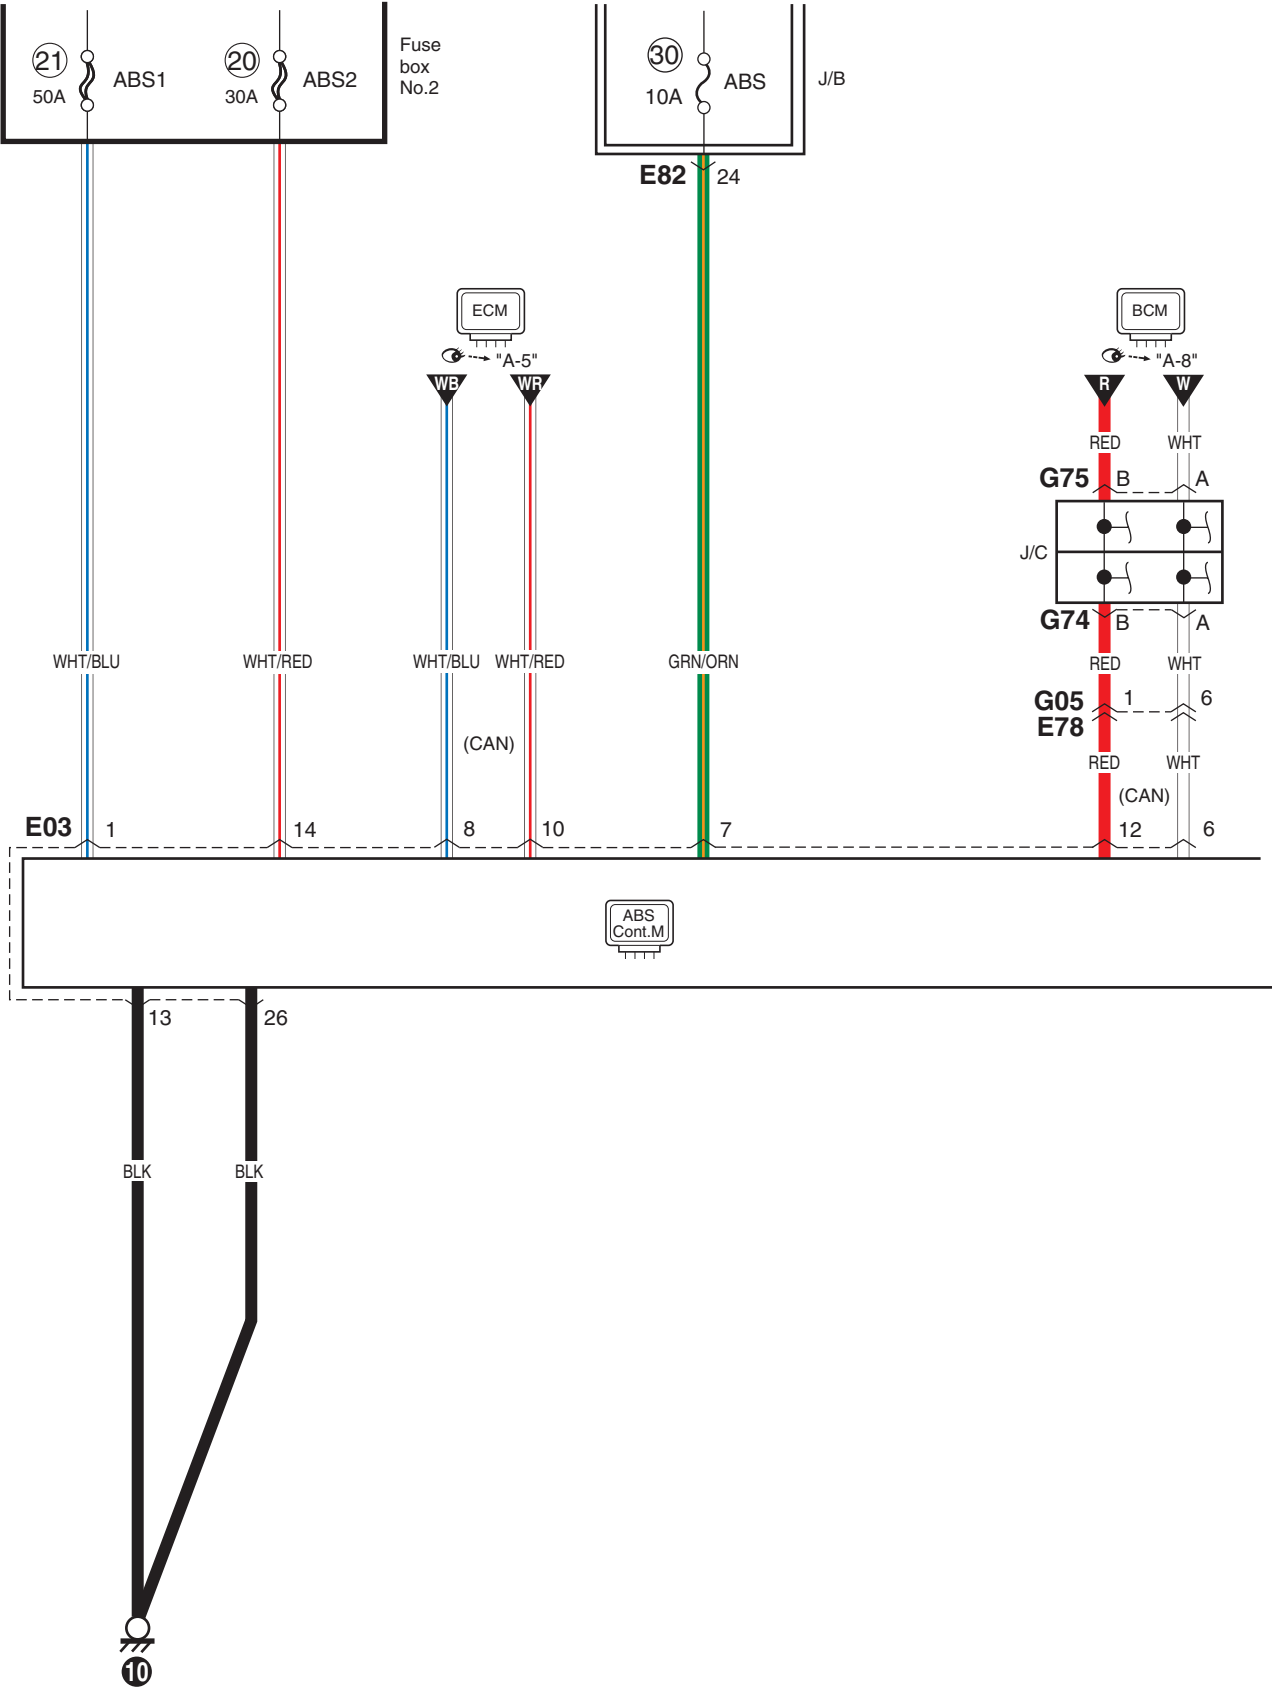




F-3 Electronic Stability Program System Circuit Diagram

S6JB0B910E049

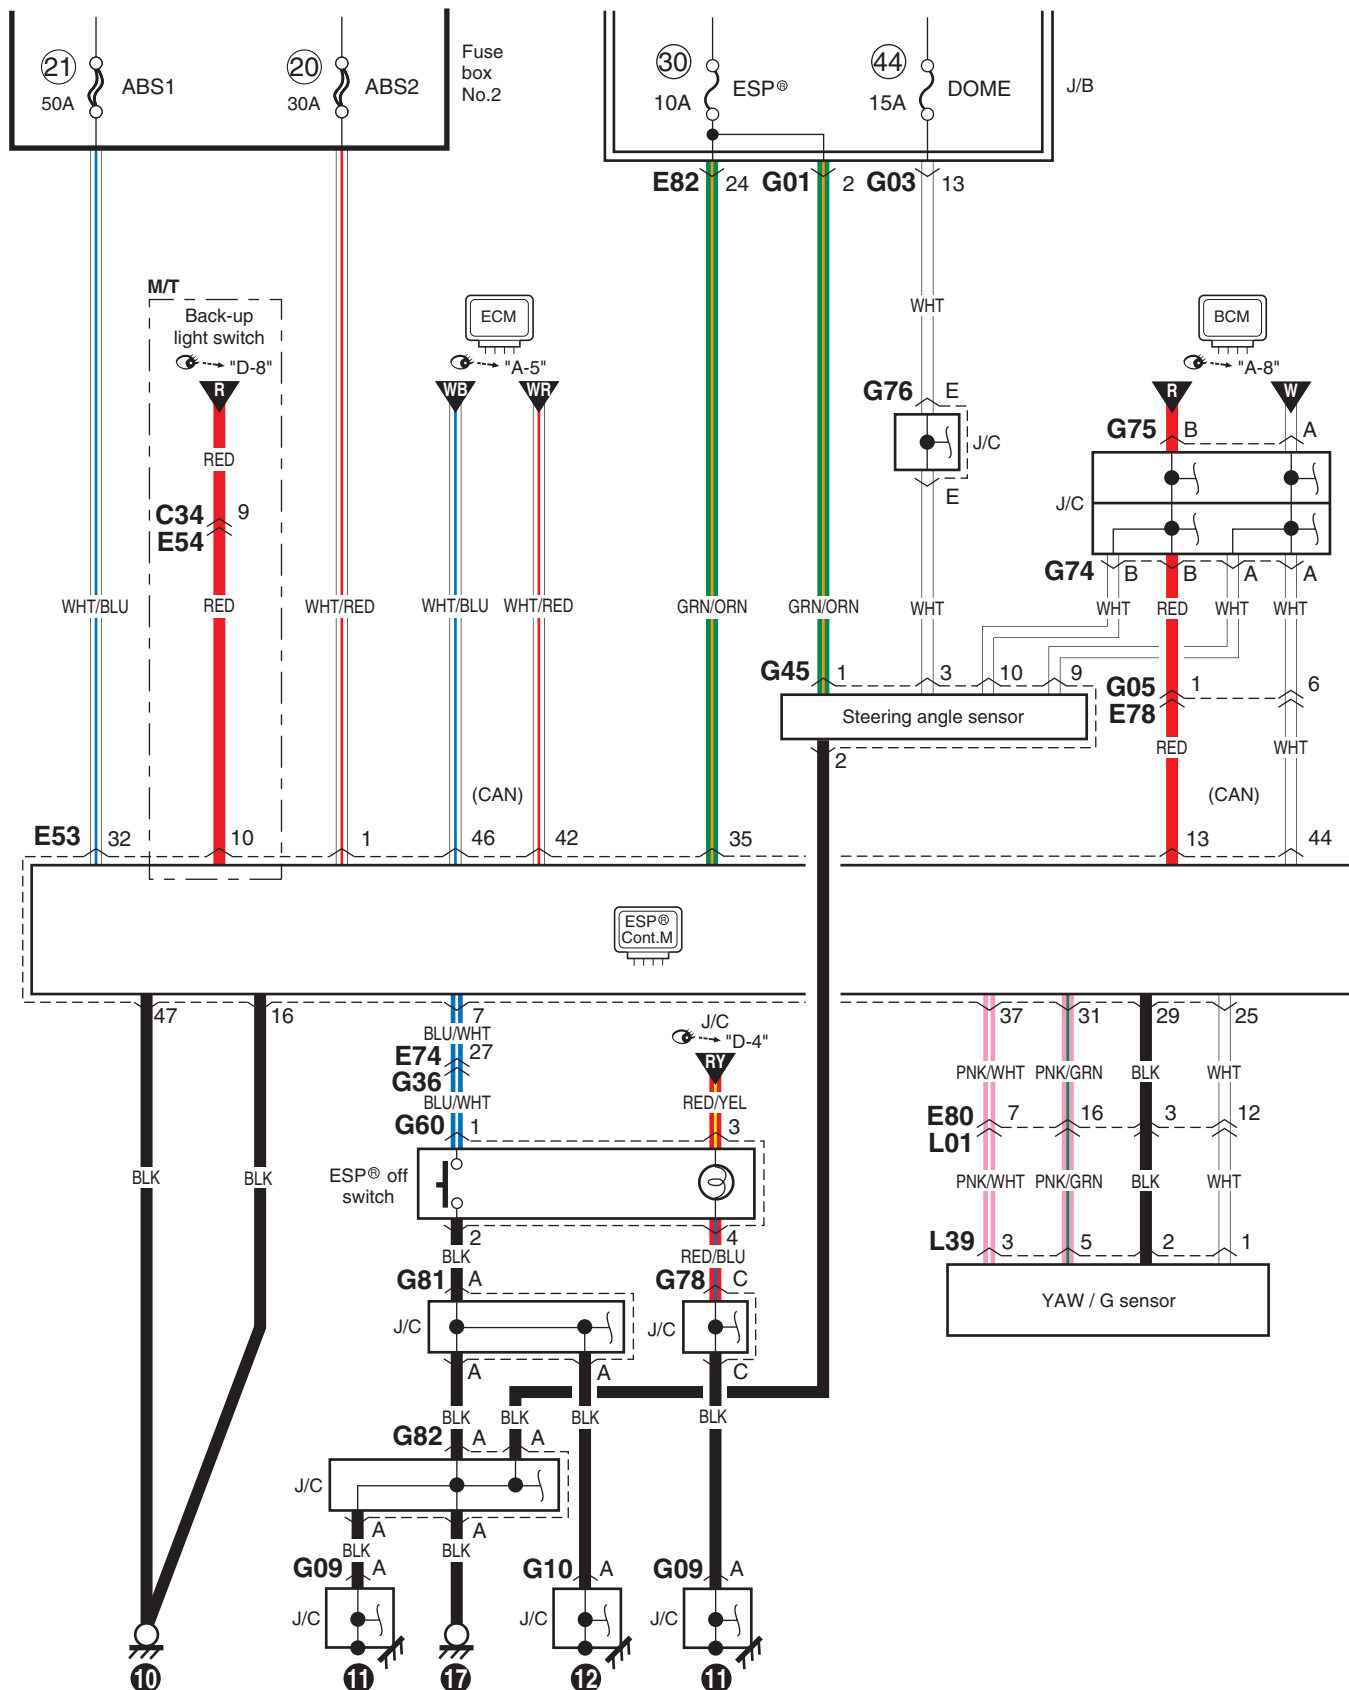


I6JB0B910952-01

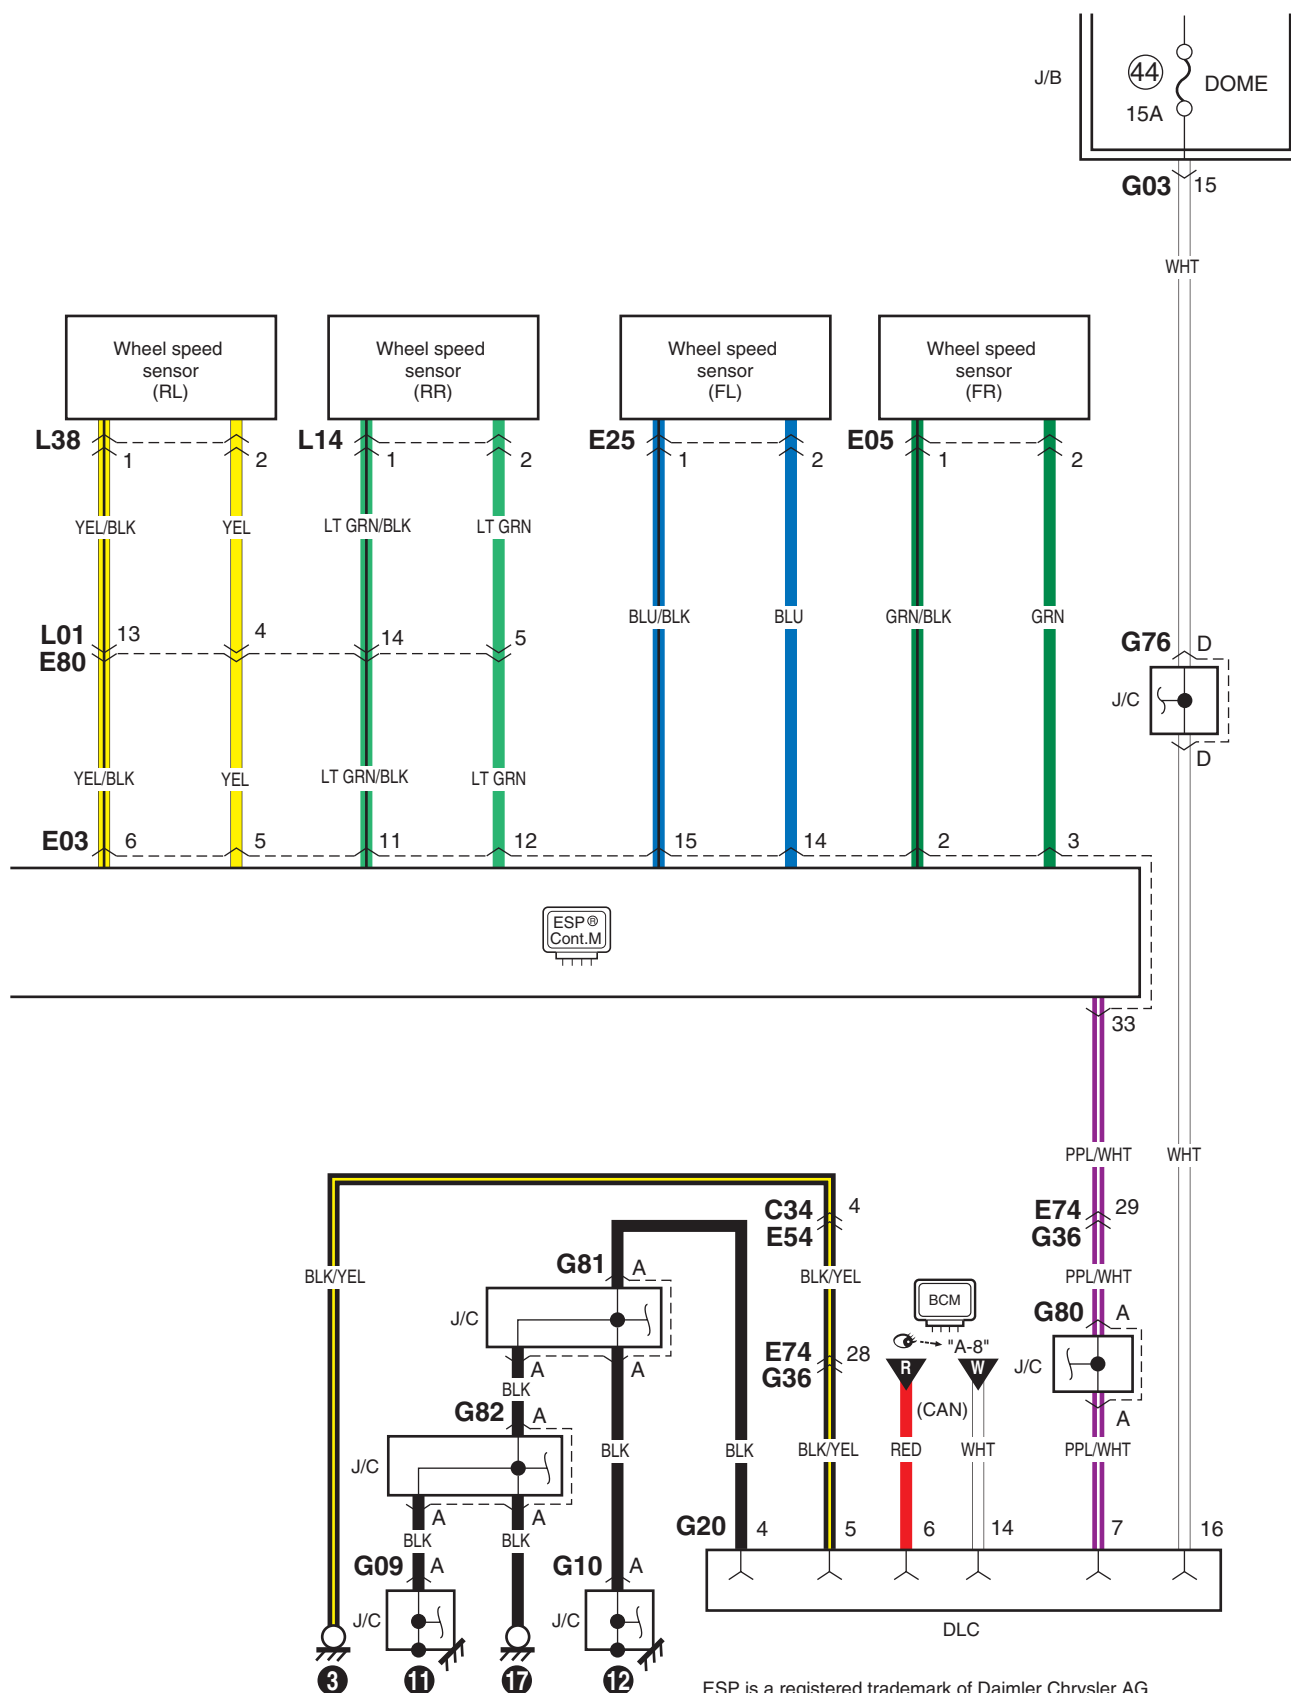


ESP is a registered trademark of Daimler Chrysler AG.

G-1 Audio System Circuit Diagram

S6JB0B910E042

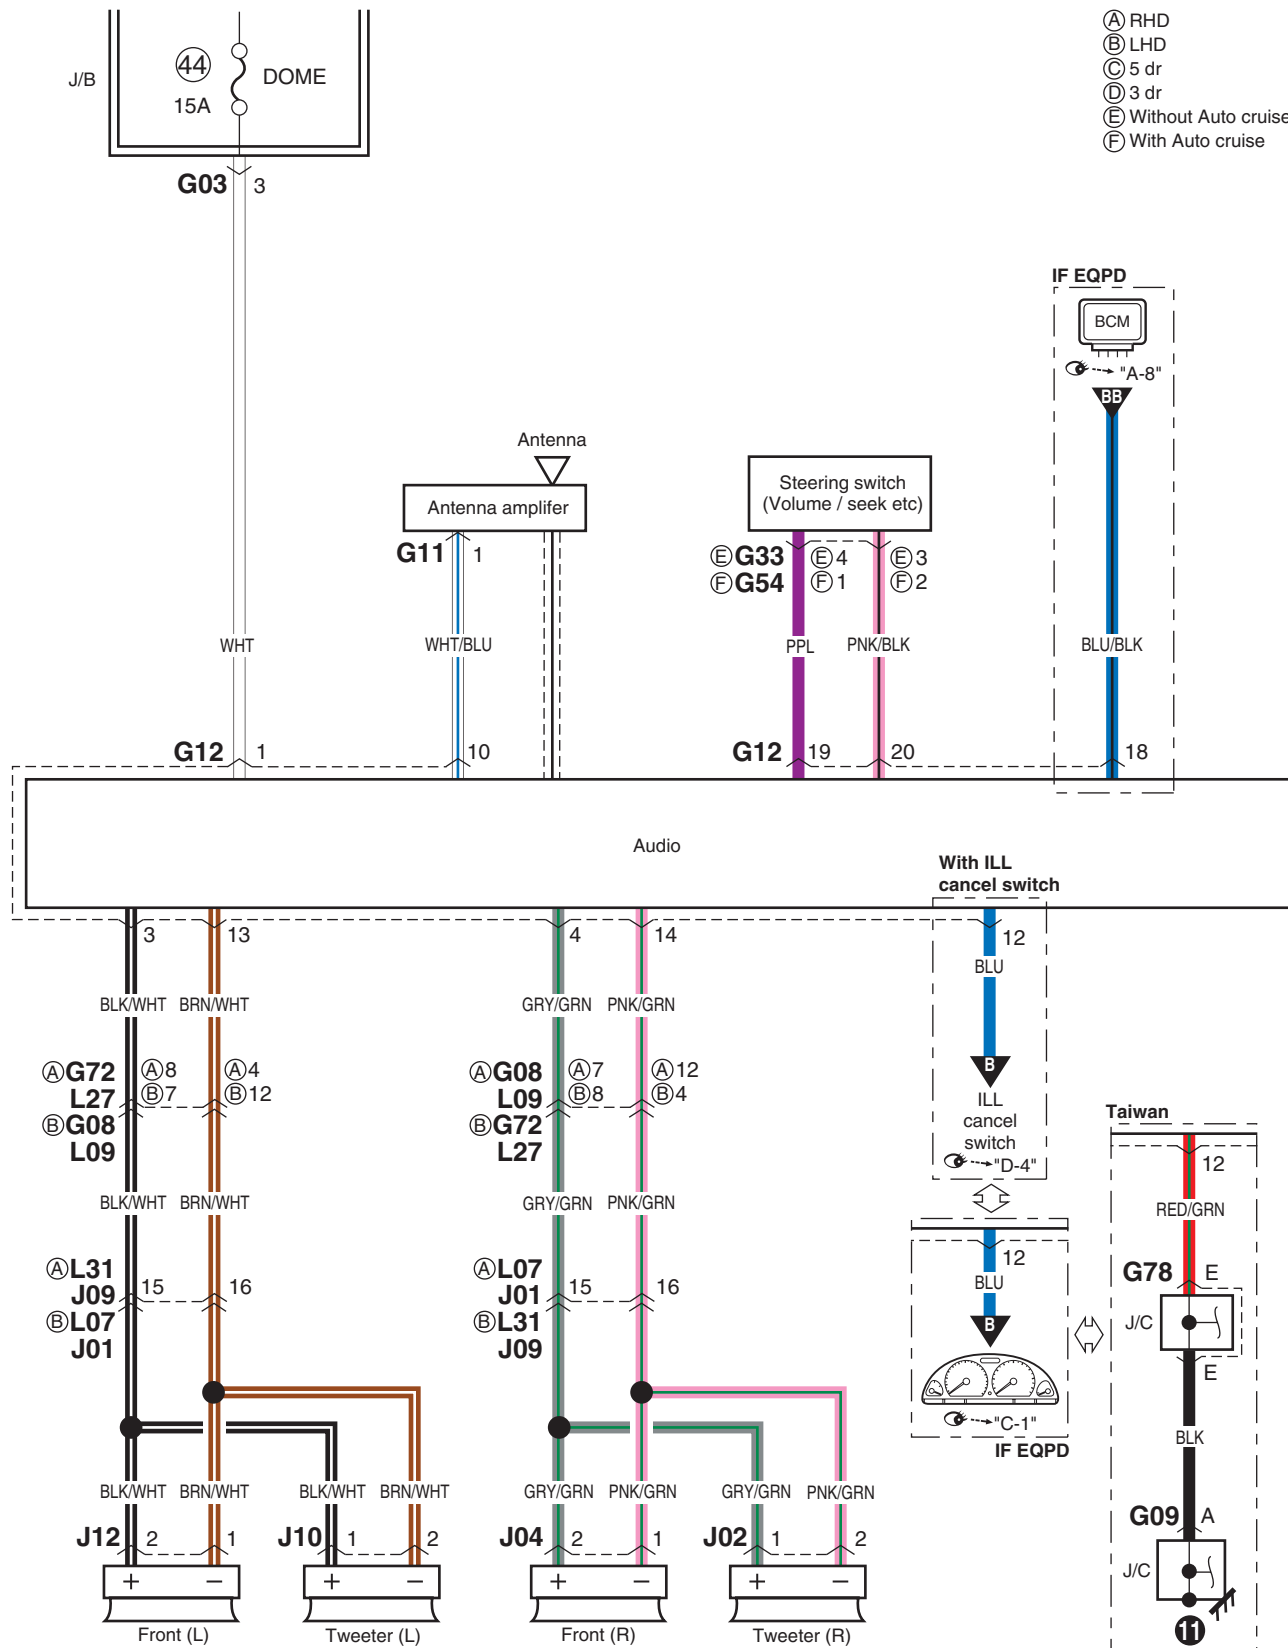


16JB0B910912-02

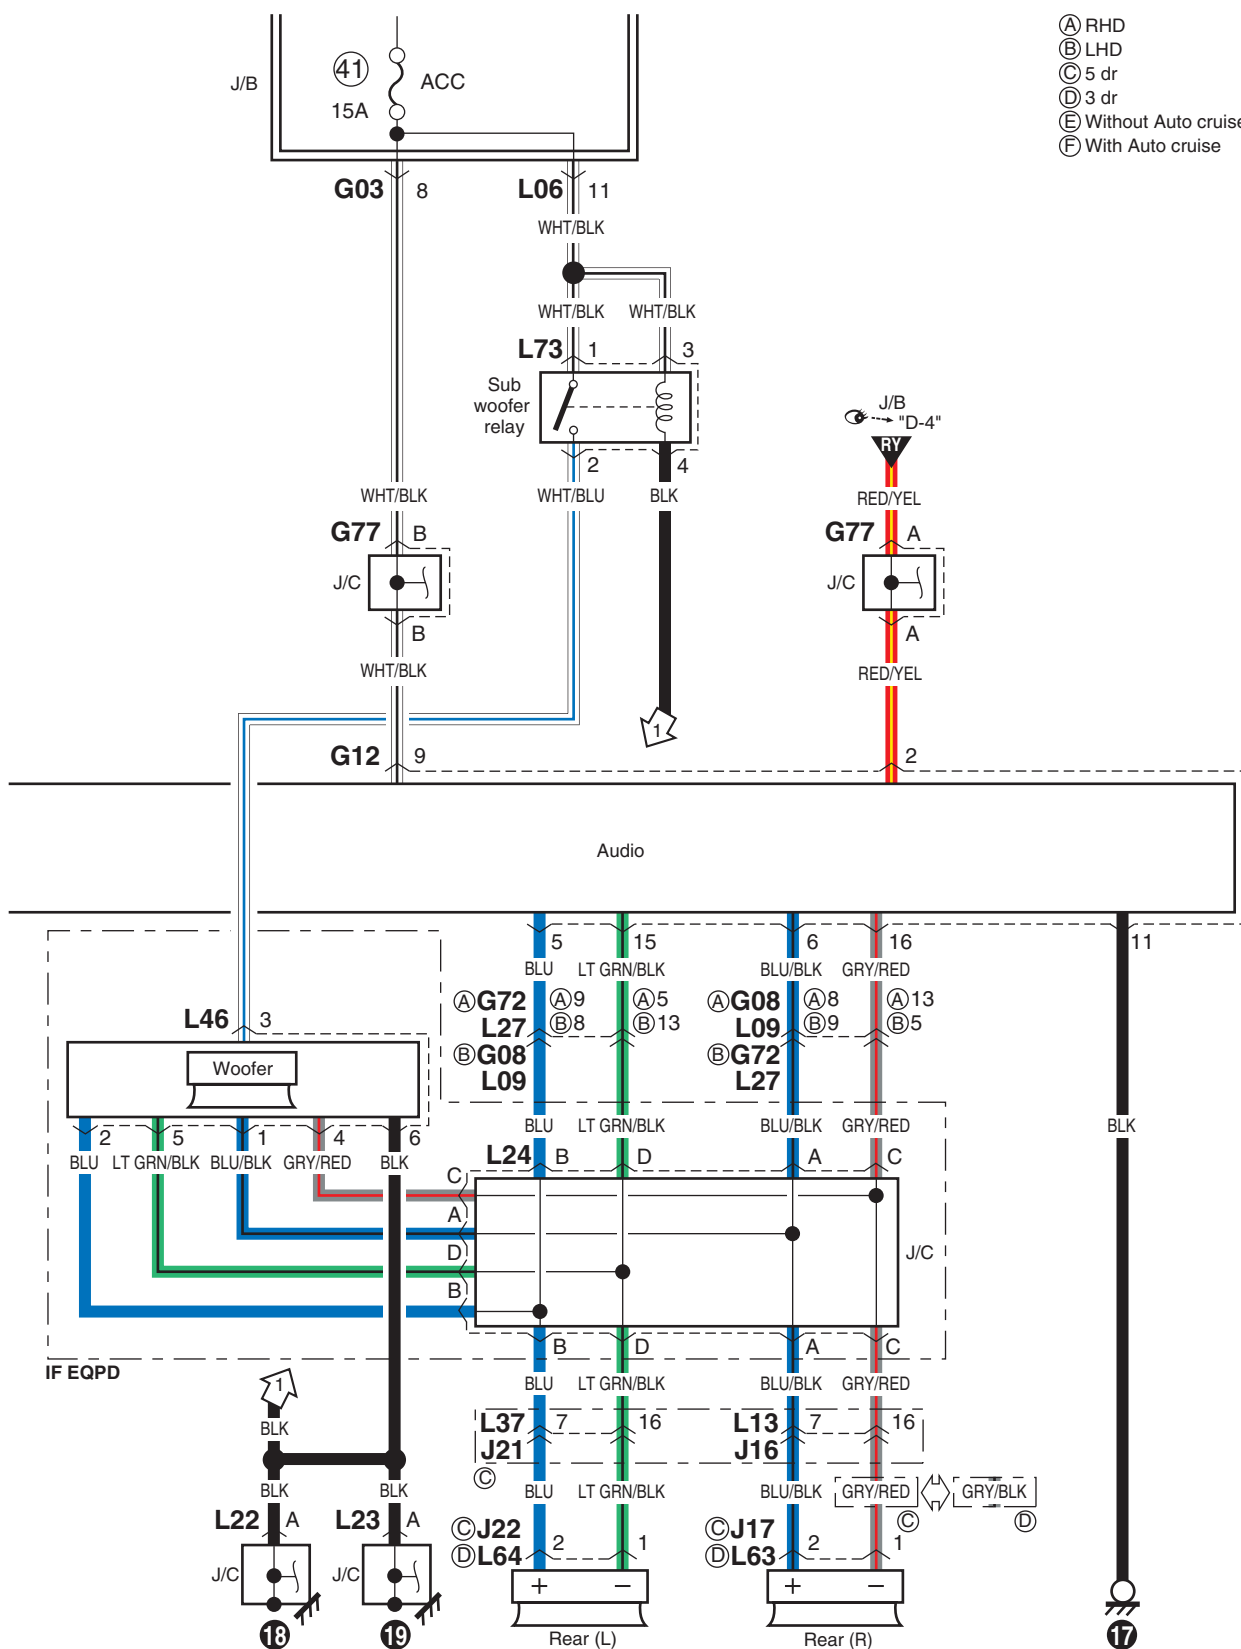





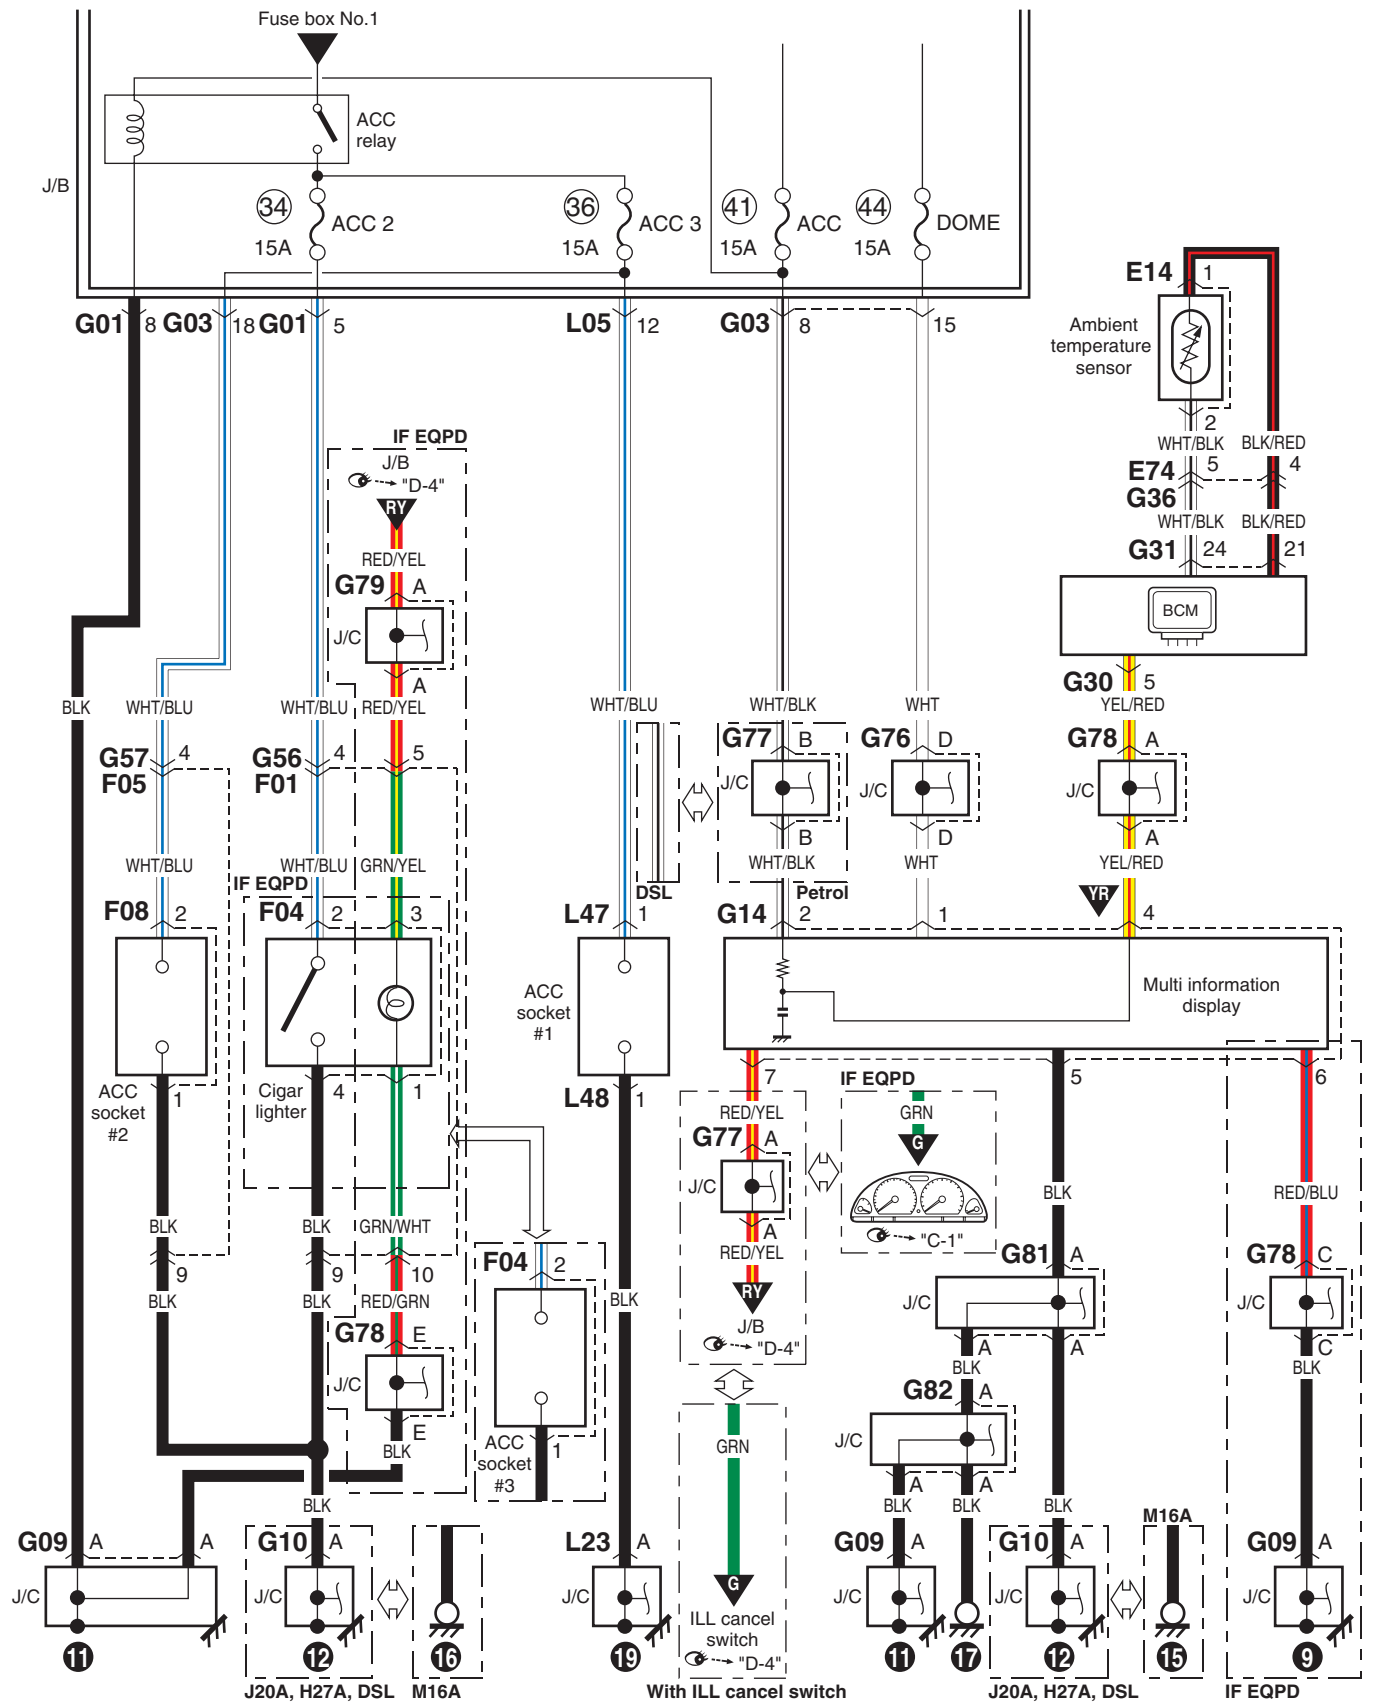

G-2 Multi Information Display / Accessory Socket System Circuit Diagram





 

 

 

 


 

 
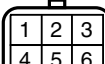

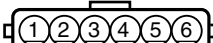
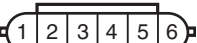






 
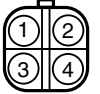







 




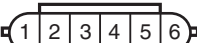



 




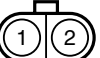

S6JB0B910E043

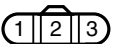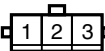


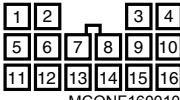

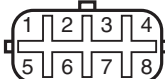
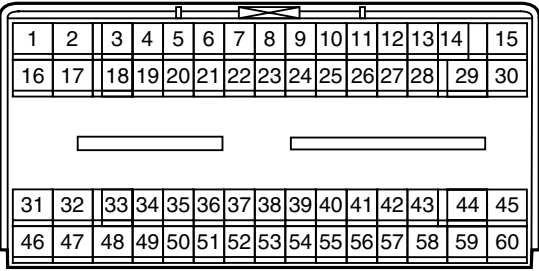
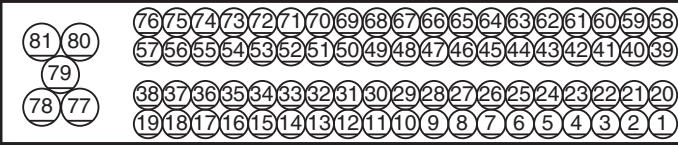




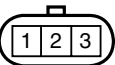
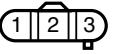
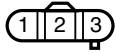
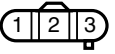
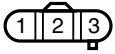



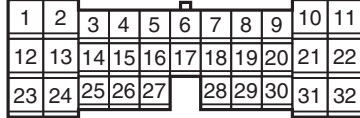
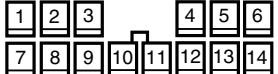

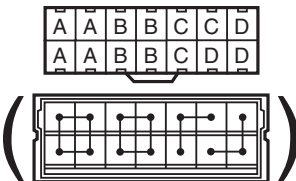


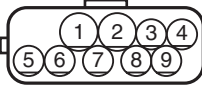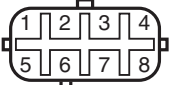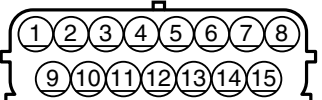






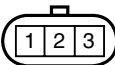





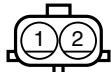








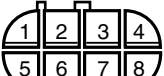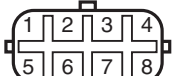







 

 

 
 
16JB0B910914-01
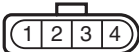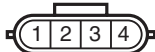
<p>B01 (TO E17)</p>  <p>MCONM010033-01</p> <p>Early J20A only</p>	<p>B02</p>  <p>MCONF010076-01</p> <p>Early J20A only</p>	<p>B03 (TO G16)</p>  <p>MCONM140005-02</p>	<p>B04</p>  <p>MCONF050021-01</p>	<p>B05</p>  <p>MCONF050021-01</p>
<p>B06</p>  <p>MCONF050021-01</p>				

C Connector



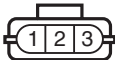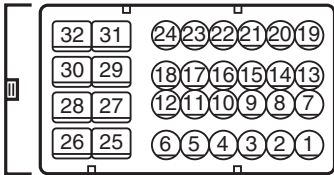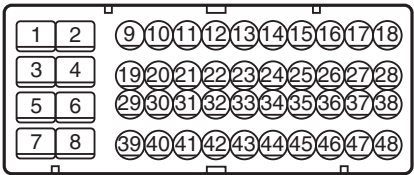

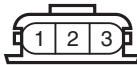
 






C01  MCONF010070-02	C02  MCONF010083-01 Petrol	C02  MCONF010071-01 DSL	C03  MCONF010084-01	C04  MCONF020065-01 Petrol	C04  MCONF020238-01 DSL
C05  MCONF020065-01 Petrol	C05  MCONF020238-01 DSL	C06  MCONF020065-01 Petrol	C06  MCONF020238-01 DSL	C07  MCONF020065-01 Petrol	C07  MCONF020238-01 DSL
C08  MCONF030053-01 Petrol	C08  MCONF030115-01 DSL	C09  MCONF020042-01 Petrol	C09  MCONF040111-01 DSL (Early)		C10  MCONF060018-01 Petrol
C10  MCONF060074-01 DSL	C11  MCONF060068-01 M16A, J20A	C11  MCONF060073-01 H27A	C12  MCONF030030-01 Petrol	C13  MCONF050025-01 M16A, J20A	C13  MCONF060073-01 H27A, DSL
C14  MCONF020042-01 M16A, J20A	C14  MCONF020064-01 H27A	C15  MCONF040008-01 M16A, J20A	C15  MCONF040024-01 H27A	C16  MCONF040024-01 H27A	C17  MCONF010076-01 M16A, H27A, DSL
C18  MCONF010030-01 Petrol	C18  MCONF010088-01 DSL (Early)		C19  MCONF020315-01 M16A	C20  MCONF030053-01 M16A, H27A	C20  MCONF030038-01 J20A
C20  MCONF020243-01 DSL	C21  MCONF040048-01 Petrol	C21  MCONF020194-01 DSL	C22  MCONF010077-03 Petrol	C22  MCONF010078-01 DSL	C23  MCONF010060-01 Petrol
C23  MCONF010089-01 DSL	C24  MCONF010078-01	C25  MCONF020150-01 A/T	C26  MCONF010054-01 Petrol	C27  MCONF020150-01 A/T	C28  MCONF090017-01 A/T
C29  MCONF080039-01 J20A A/T	C29  MCONF150003-01 H27A A/T		C30  MCONF020042-01 Petrol	C30  MCONF020079-01 DSL	C31  MCONF010078-01

C32  MCONF010085-01 M16A, J20A	C32  MCONF010090-01 H27A, DSL	C33  MCONF010001-01 Petrol	C34 (TO E54)  MCONF160010-01	C35 (TO E55)  MCONF140001-01	C36  MCONF080039-01 Petrol
C37  MCONF600003-01 M16A, J20A					
C37  MCONF810002-01 H27A				C38  MCONF030056-01 J20A, H27A	C39  MCONF010081-01 Other than M16A
C40  MCONF030055-01 M16A	C40  MCONF030053-01 J20A, H27A	C41  MCONF030055-01 M16A	C41  MCONF030053-01 J20A, H27A	C42  MCONF030053-01 J20A, H27A	C43  MCONF030053-01 J20A, H27A
C44  MCONF030053-01 H27A	C45  MCONF030053-01 H27A	C46  MCONF020063-01 J20A	C47  MCONF020066-01 Petrol	C48 (TO E87)  MCONF320006-01 J20A, H27A	
C49 (TO E88)  MCONF140008-01 Other than M16A		C50 (TO E89)  MCONF040112-01 Other than M16A	C51  MCONF140021-01 J20A, H27A		C52  MCONF020231-01 Other than M16A
C53  MCONF020231-01 Other than M16A	C54  MCONF060061-01 Other than M16A	C55  MCONN000002-01 Petrol	C56  MCONN000002-01 Petrol	C57  MCONN000002-01 H27A	C58  MCONN000002-01 H27A
C59  MCONN000002-01 H27A, DSL	C60 (TO D07)  MCONF080028-02 H27A	C61  MCONF080039-01 H27A	C70  MCONF020239-01 DSL	C71 (TO D11)  MCONF020240-01 DSL	C72 (TO D12)  MCONN010035-01 DSL








 
 
 

 


 


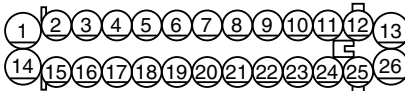


 
 
 
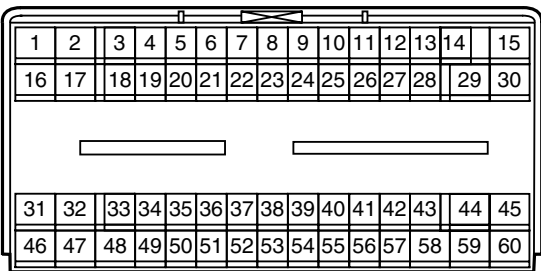
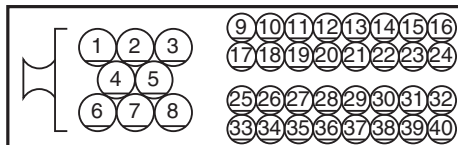


 





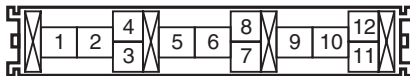
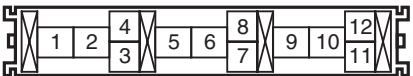
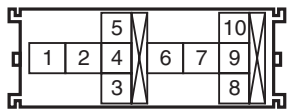
<div>C73</div> <div><div>MCONF020167-01</div></div> <div>DSL (Early)</div>	<div>C74</div> <div><div>MCONF020315-01</div></div> <div>DSL (Late)</div>	<div>C75</div> <div><div>MCONF080042-01</div></div> <div>DSL</div>	<div>C76</div> <div><div>MCONF040072-01</div></div> <div>DSL</div>	<div>C77</div> <div><div>MCONF040110-01</div></div> <div>DSL</div>	<div>C78</div> <div><div>MCONF010093-01</div></div> <div>DSL</div>
<div>C79</div> <div><div>MCONF010093-01</div></div> <div>DSL</div>	<div>C80</div> <div><div>MCONF010093-01</div></div> <div>DSL</div>	<div>C81</div> <div><div>MCONF020241-01</div></div> <div>DSL</div>	<div>C82</div> <div><div>MCONF030112-01</div></div> <div>DSL</div>	<div>C83</div> <div><div>MCONF020238-01</div></div> <div>DSL</div>	
<div>C84</div> <div><div>MCONF030113-01</div></div> <div>DSL</div>	<div>C85</div> <div><div>MCONF320010-01</div></div> <div>DSL</div>		<div>C86</div> <div><div>MCONF480003-01</div></div> <div>DSL</div>		
<div>C87</div> <div><div>MCONF020242-01</div></div> <div>DSL</div>	<div>C88</div> <div><div>MCONF020227-01</div></div> <div>DSL</div>	<div>C89</div> <div><div>MCONF030114-01</div></div> <div>DSL</div>	<div>C90</div> <div><div>MCONF020217-02</div></div> <div>DSL</div>	<div>C91</div> <div><div>MCONF020170-01</div></div> <div>DSL</div>	<div>C92</div> <div><div>MCONF020169-01</div></div> <div>DSL</div>
<div>C93</div> <div><div>MCONF050031-01</div></div> <div>DSL</div>	<div>C94</div> <div><div>MCONF050031-01</div></div> <div>DSL</div>	<div>C95</div> <div><div>MCONF050031-01</div></div> <div>DSL</div>			


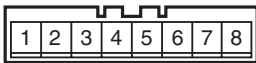






 

 


 

 







 
 







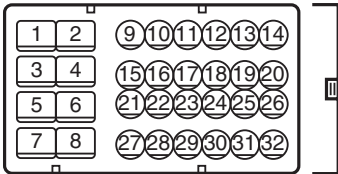
 
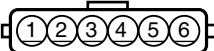
 

 

 
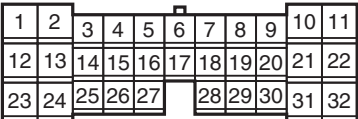
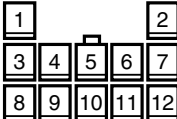
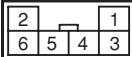
 
D Connector

S6JB0B910F013
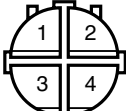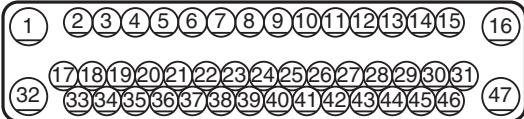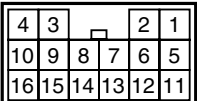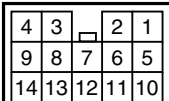
<p>D01</p>  <p>MCONF020065-01</p> <p>H27A</p>	<p>D02</p>  <p>MCONF020065-01</p> <p>H27A</p>	<p>D03</p>  <p>MCONF020065-01</p> <p>H27A</p>	<p>D04</p>  <p>MCONF020065-01</p> <p>H27A</p>	<p>D05</p>  <p>MCONF020065-01</p> <p>H27A</p>	<p>D06</p>  <p>MCONF020065-01</p> <p>H27A</p>
<p>D07 (TO C60)</p>  <p>MCONM080015-01</p> <p>H27A</p>	<p>D08</p>  <p>MCONF010092-01</p> <p>DSL</p>	<p>D09</p>  <p>MCONF010092-01</p> <p>DSL</p>	<p>D10</p>  <p>MCONF010092-01</p> <p>DSL</p>	<p>D11 (TO C71)</p>  <p>MCONM020050-01</p> <p>DSL</p>	<p>D12 (TO C72)</p>  <p>MCONF010091-01</p> <p>DSL</p>

E Connector





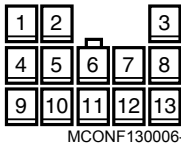
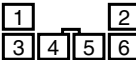
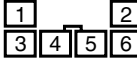
 
<div>E01</div> <div></div> <div>MCONF050027-01</div>	<div>E02</div> <div></div> <div>MCONF020115-01</div>	<div>E03</div> <div></div> <div>MCONF260011-01</div>			
<div>E04</div> <div></div> <div>MCONF030062-01</div> <div>Petrol</div>	<div>E04</div> <div></div> <div>MCONF030097-01</div> <div>DSL</div>	<div>E05</div> <div></div> <div>MCONM020027-01</div>	<div>E06</div> <div></div> <div>MCONF020196-01</div>	<div>E07</div> <div></div> <div>MCONF020013-01</div>	<div>E08</div> <div></div> <div>MCONF030101-01</div>
<div>E09</div> <div></div> <div>MCONF020110-01</div>	<div>E10</div> <div></div> <div>MCONF020008-01</div>	<div>E11</div> <div></div> <div>MCONF020013-01</div>	<div>E12</div> <div></div> <div>MCONF020198-01</div>	<div>E13</div> <div></div> <div>MCONF020022-01</div>	<div>E14</div> <div></div> <div>MCONF020200-01</div>
<div>E15</div> <div></div> <div>MCONF010079-01</div>	<div>E16</div> <div></div> <div>MCONF010079-01</div>	<div>E17 (TO B01)</div> <div></div> <div>MCONF010076-01</div> <div>J20A</div>	<div>E18</div> <div></div> <div>MCONF020198-01</div>	<div>E19</div> <div></div> <div>MCONF020196-01</div>	<div>E20</div> <div></div> <div>MCONF020110-01</div>
<div>E21</div> <div></div> <div>MCONF030101-01</div>	<div>E22</div> <div></div> <div>MCONF020013-01</div>	<div>E23</div> <div></div> <div>MCONF600003-01</div> <div>M16A, J20A</div>			
<div>E23</div> <div></div> <div>MCONF400003-01</div> <div>H27A</div>			<div>E24</div> <div></div> <div>MCONF020022-01</div>	<div>E25</div> <div></div> <div>MCONM020027-01</div>	<div>E26</div> <div></div> <div>MCONF020183-01</div>
<div>E27</div> <div></div> <div>MCONF020183-01</div>	<div>E28</div> <div></div> <div>MCONF050015-01</div>	<div>E29</div> <div></div> <div>MCONF050015-01</div>	<div>E30</div> <div></div> <div>MCONF050015-01</div>	<div>E31</div> <div></div> <div>MCONF050015-01</div>	
<div>E32</div> <div></div> <div>MCONF120030-01</div>		<div>E33</div> <div></div> <div>MCONF120030-01</div>		<div>E34</div> <div></div> <div>MCONF100032-01</div> <div>M16A</div>	

E35  MCONF080019-01		E36  MCONF080036-01		E37  MCONF080037-01 J20A, H27A	
E38  MCONF080038-01 J20A, H27A		E40  MCONF010081-01	E41  MCONF010081-01 J20A, H27A	E42  MCONF010086-01	E43  MCONF020044-01 Petrol
E44  MCONF030101-01 Petrol	E44  MCONF020229-01 DSL	E45  MCONF030111-01	E46  MCONF020230-01	E47  MCONF020044-01 Petrol	
E48  MCONF030101-01 Petrol	E48  MCONF020229-01 DSL	E49  MCONF030111-01	E50  MCONF020230-01	E51  MCONF020231-01 Petrol	E52 (TO E85)  MCONF040008-01
E53  MCONF470001-01 IF EQPD			E54 (TO C34)  MCONM160004-01	E55 (TO C35)  MCONM140003-01	E56  MCONF020201-01
E57  MCONF020202-01	E58  MCONF020148-01	E59  MCONN000002-01	E60  MCONN000002-01	E61  MCONN000002-01	E62  MCONN000002-01
E63  MCONN000002-01 Petrol	E64  MCONN000002-01	E65  MCONN000002-01 DSL	E66  MCONF320011-01 DSL		E67  MCONF040045-01
E68  MCONF060068-01		E69  MCONF060044-01 IF EQPD	E70  MCONF020232-01	E71  MCONF020151-01 Petrol	E71  MCONF020008-01 DSL
E72  MCONF020157-01	E74 (TO G36)  MCONF320006-01		E75 (TO G37)  MCONF120015-01 Petrol	E76 (TO G04)  MCONM060008-01	E77 (TO G06)  MCONM040022-01 Petrol


<div>E78 (TO G05)</div> <div><table><tr><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td></tr><tr><td>9</td><td>8</td><td></td><td>7</td><td>6</td></tr><tr><td>17</td><td>16</td><td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td></tr></table></div> <div>MCONM170001-01</div>	5	4	3	2	1	9	8		7	6	17	16	15	14	13	12	11	10	<div>E79 (TO L03)</div> <div><table><tr><td>2</td><td>1</td></tr><tr><td>4</td><td>3</td></tr></table></div> <div>MCONM040022-01</div> <div>IF EQPD</div>	2	1	4	3	<div>E80 (TO L01)</div> <div><table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td></tr><tr><td>10</td><td>11</td><td>12</td><td>13</td><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td></tr></table></div> <div>MCONF180010-01</div>	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18															
5	4	3	2	1																																																					
9	8		7	6																																																					
17	16	15	14	13	12	11	10																																																		
2	1																																																								
4	3																																																								
1	2	3	4	5	6	7	8	9																																																	
10	11	12	13	14	15	16	17	18																																																	
<div>E82</div> <div><table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td></tr><tr><td>13</td><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td></tr></table></div> <div>MCONF240013-01</div>	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	<div>E83</div> <div><table><tr><td>1</td></tr></table></div> <div>MCONF010081-01</div>	1	<div>E85 (TO E52)</div> <div><table><tr><td>2</td><td>1</td></tr><tr><td>4</td><td>3</td></tr></table></div> <div>MCONM040021-01</div>	2	1	4	3	<div>E86</div> <div><table><tr><td>1</td><td>2</td><td>3</td></tr></table></div> <div>MCONF030110-01</div>	1	2	3																						
1	2	3	4	5	6	7	8	9	10	11	12																																														
13	14	15	16	17	18	19	20	21	22	23	24																																														
1																																																									
2	1																																																								
4	3																																																								
1	2	3																																																							
<div>E87 (TO C48)</div> <div><table><tr><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td></tr><tr><td>22</td><td>21</td><td>20</td><td>19</td><td>18</td><td>17</td><td>16</td><td>15</td><td>14</td><td>13</td><td>12</td></tr><tr><td>32</td><td>31</td><td>30</td><td>29</td><td>28</td><td></td><td>27</td><td>26</td><td>25</td><td>24</td><td>23</td></tr></table></div> <div>MCONM320001-01</div> <div>J20A, H27A</div>	11	10	9	8	7	6	5	4	3	2	1	22	21	20	19	18	17	16	15	14	13	12	32	31	30	29	28		27	26	25	24	23	<div>E88 (TO C49)</div> <div><table><tr><td>6</td><td>5</td><td>4</td><td></td><td>3</td><td>2</td><td>1</td></tr><tr><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td></tr></table></div> <div>MCONM140002-01</div> <div>Other than M16A</div>	6	5	4		3	2	1	14	13	12	11	10	9	8	7	<div>E89 (TO C50)</div> <div><table><tr><td>2</td><td>1</td></tr><tr><td>4</td><td>3</td></tr></table></div> <div>MCONM040011-01</div> <div>Other than M16A</div>	2	1	4	3			
11	10	9	8	7	6	5	4	3	2	1																																															
22	21	20	19	18	17	16	15	14	13	12																																															
32	31	30	29	28		27	26	25	24	23																																															
6	5	4		3	2	1																																																			
14	13	12	11	10	9	8	7																																																		
2	1																																																								
4	3																																																								
<div>E90 (TO G71)</div> <div><table><tr><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td></tr><tr><td>22</td><td>21</td><td>20</td><td>19</td><td>18</td><td>17</td><td>16</td><td>15</td><td>14</td><td>13</td><td>12</td></tr></table></div> <div>MCONM220003-01</div>	11	10	9	8	7	6	5	4	3	2	1	22	21	20	19	18	17	16	15	14	13	12	<div>E91</div> <div><table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td></tr><tr><td>13</td><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td><div></div></td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td></tr></table></div> <div>MCONF260010-01</div>			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	<div></div>	20	21	22	23	24	25	26					
11	10	9	8	7	6	5	4	3	2	1																																															
22	21	20	19	18	17	16	15	14	13	12																																															
1	2	3	4	5	6	7	8	9	10	11	12																																														
13	14	15	16	17	18	19	<div></div>	20	21	22	23	24	25	26																																											
<div>E92</div> <div><table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td></tr><tr><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td><td>14</td><td>15</td><td>16</td></tr><tr><td>17</td><td>18</td><td>19</td><td>20</td><td></td><td></td><td>21</td><td>22</td><td>23</td><td>24</td></tr></table></div> <div>MCONF240011-01</div> <div>A/T</div>	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20			21	22	23	24	<div>E93</div> <div><table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td></tr><tr><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td><td>14</td><td>15</td><td>16</td><td>17</td></tr><tr><td>18</td><td>19</td><td>20</td><td>21</td><td></td><td></td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td></tr></table></div> <div>MCONF260014-01</div> <div>A/T</div>	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21			22	23	24	25	26		
1	2	3	4	5	6																																																				
7	8	9	10	11	12	13	14	15	16																																																
17	18	19	20			21	22	23	24																																																
1	2	3	4	5	6																																																				
7	8	9	10	11	12	13	14	15	16	17																																															
18	19	20	21			22	23	24	25	26																																															

F Connector

S6JB0B910F005

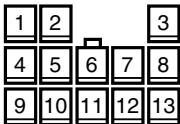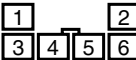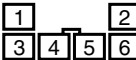F01 (TO G56)  MCONF130006-01	F02  MCONF060046-01	F03  MCONF060046-01 LHD A/T	F04  MCONF040095-01	F05 (TO G57)  MCONF130006-01	F06  MCONF060046-01
F07  MCONF060046-01 RHD A/T	F08  MCONF020116-01				

G Connector

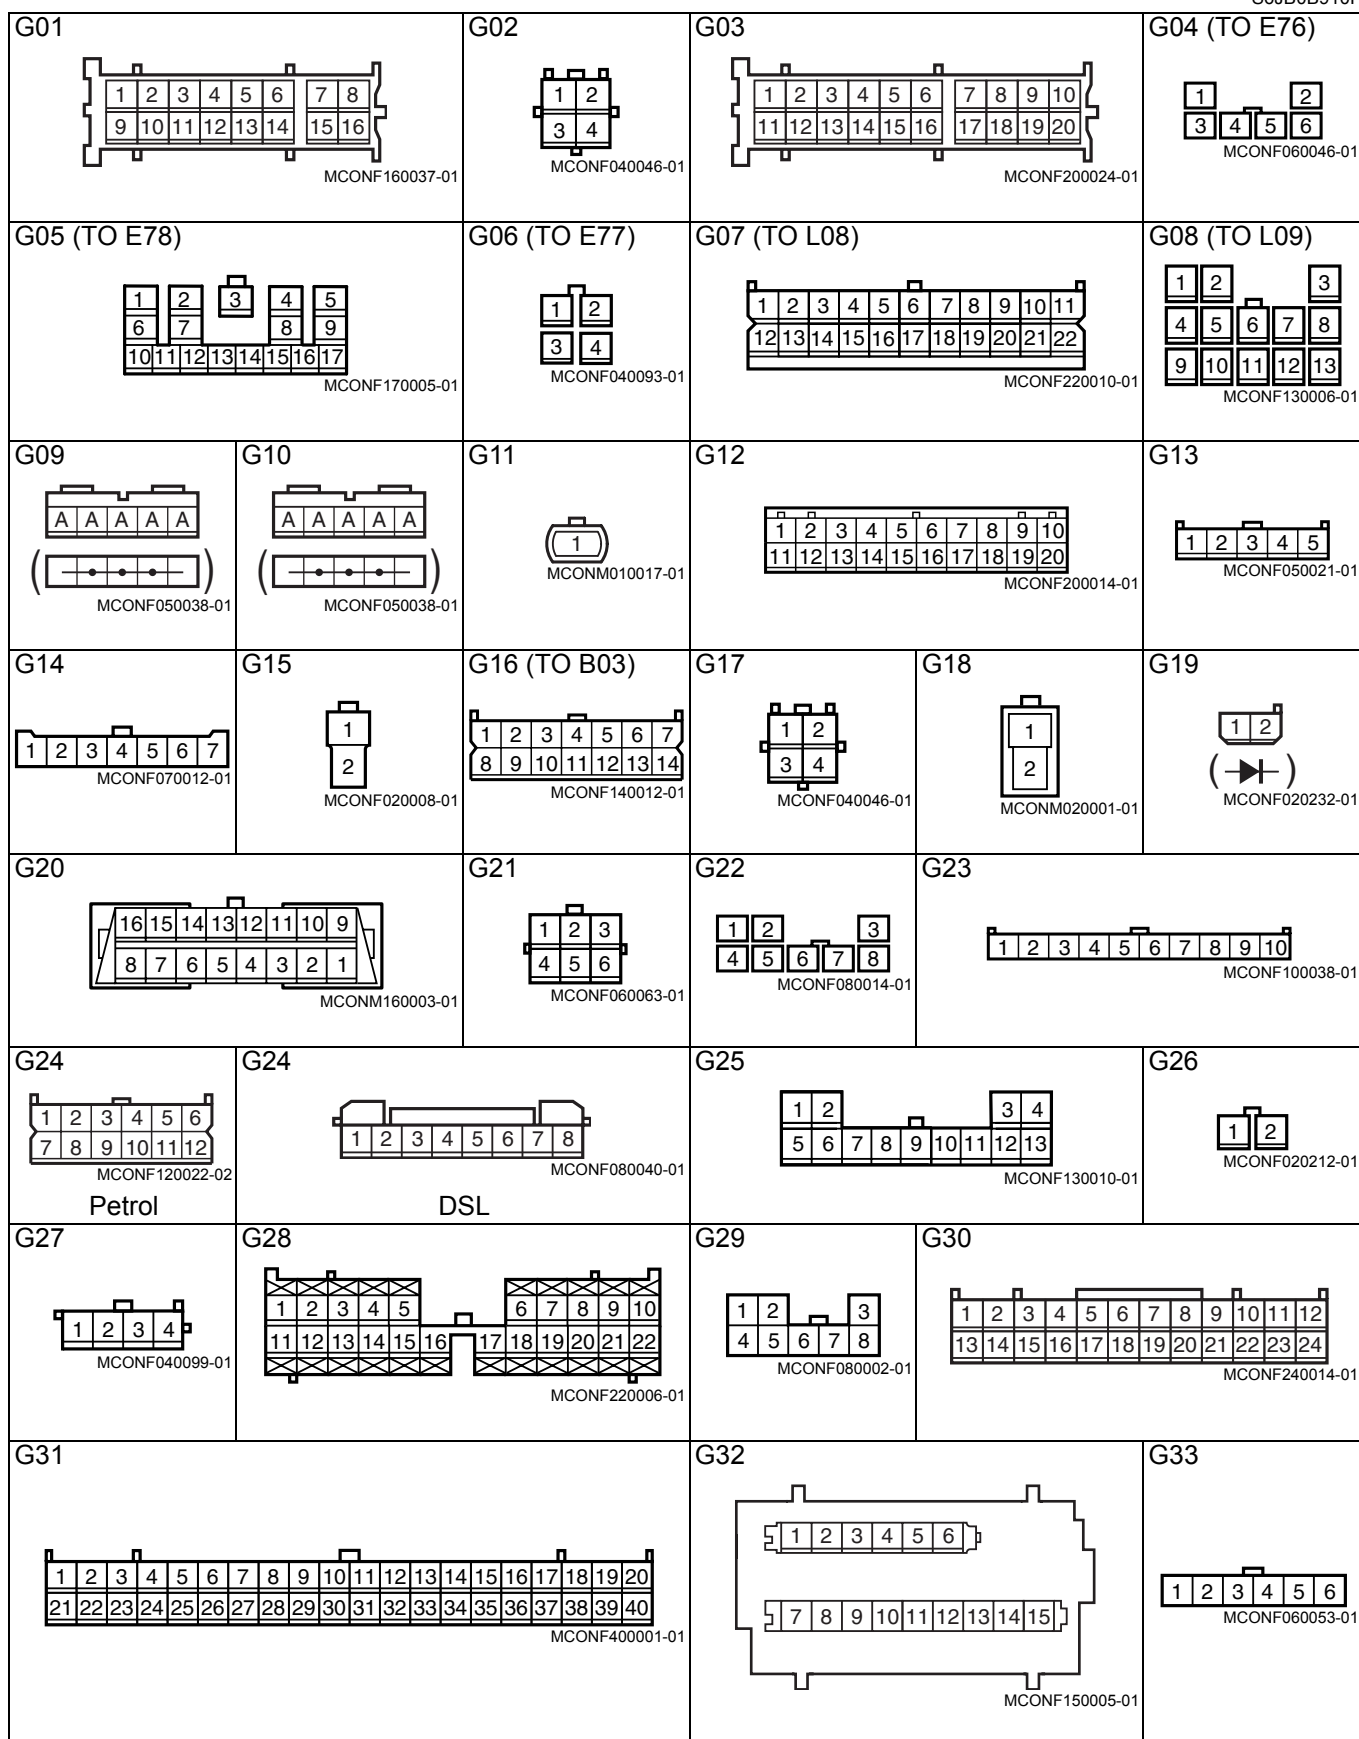

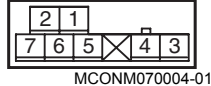
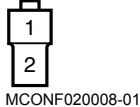

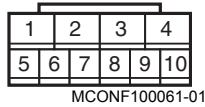





 

 




 

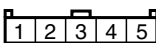
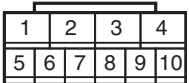
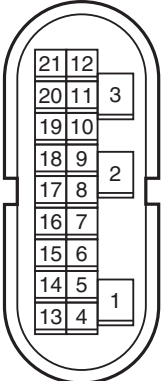
 

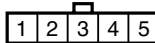
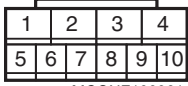



<div>G34</div> <div><div><div>1</div><div>2</div></div></div> <div>MCONF020084-01</div> <div>IF EQPD</div>	<div>G35</div> <div><div><div>1</div><div>2</div><div>3</div></div><div><div>4</div><div>5</div><div>6</div></div></div> <div>MCONF060044-01</div> <div>IF EQPD</div>	<div>G36 (TO E74)</div> <div><div><div><div>11</div><div>10</div><div>9</div><div>8</div><div>7</div><div>6</div><div>5</div><div>4</div><div>3</div><div>2</div><div>1</div></div><div><div>22</div><div>21</div><div>20</div><div>19</div><div>18</div><div>17</div><div>16</div><div>15</div><div>14</div><div>13</div><div>12</div></div><div><div>32</div><div>31</div><div>30</div><div>29</div><div>28</div><div>27</div><div>26</div><div>25</div><div>24</div><div>23</div></div></div></div> <div>MCONF320001-01</div>	<div>G37 (TO E75)</div> <div><div><div><div>2</div></div><div><div>7</div><div>6</div><div>5</div><div>4</div><div>3</div></div><div><div>12</div><div>11</div><div>10</div><div>9</div><div>8</div></div></div><div>1</div></div> <div>MCONF120004-01</div>	<div>G38</div> <div><div><div>1</div></div></div> <div>MCONF010087-01</div>	
<div>G39</div> <div><div><div>1</div><div>2</div></div><div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div></div><div>3</div></div> <div>MCONF080014-01</div>	<div>G40</div> <div><div><div>1</div></div><div><div>3</div><div>4</div><div>5</div><div>6</div></div><div>2</div></div> <div>MCONF060046-01</div>	<div>G41</div> <div><div><div>1</div><div>2</div></div><div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div></div><div>3</div></div> <div>MCONF080014-01</div> <div>IF EQPD</div>	<div>G43</div> <div><div><div>1</div><div>2</div></div></div> <div>MCONF020151-01</div>		
<div>G44</div> <div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div><div>9</div><div>10</div><div>11</div><div>12</div><div>13</div><div>14</div><div>15</div><div>16</div><div>17</div><div>18</div><div>19</div><div>20</div></div><div><div>21</div><div>22</div><div>23</div><div>24</div><div>25</div><div>26</div><div>27</div><div>28</div><div>29</div><div>30</div><div>31</div><div>32</div><div>33</div><div>34</div><div>35</div><div>36</div><div>37</div><div>38</div><div>39</div><div>40</div></div></div></div> <div>MCONF400001-01</div>		<div>G45</div> <div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div><div>9</div><div>10</div></div></div></div> <div>MCONF100064-01</div> <div>IF EQPD</div>	<div>G46</div> <div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div></div><div><div>7</div><div>8</div><div>9</div><div>10</div></div><div><div>11</div><div>12</div><div>13</div><div>14</div><div>15</div><div>16</div></div></div></div> <div>MCONF160038-01</div> <div>IF EQPD</div>		
<div>G47</div> <div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div></div><div><div>9</div><div>10</div><div>11</div><div>12</div><div>13</div><div>14</div><div>15</div><div>16</div></div><div><div>17</div><div>18</div><div>19</div><div>20</div><div>21</div><div>22</div><div>23</div></div></div></div> <div>MCONF230001-01</div>	<div>G48</div> <div><div><div>1</div><div>3</div><div>4</div><div>5</div><div>6</div></div><div>2</div></div> <div>MCONF060046-01</div>	<div>G49</div> <div><div><div>1</div><div>2</div></div></div> <div>MCONF020084-01</div>	<div>G50</div> <div><div><div><div>1</div><div>2</div><div>3</div></div><div><div>4</div><div>5</div><div>6</div></div></div></div> <div>MCONF060044-01</div>		
<div>G51</div> <div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div></div><div><div>6</div><div>7</div><div>8</div><div>9</div></div></div><div><div>10</div><div>11</div><div>12</div><div>13</div><div>14</div><div>15</div><div>16</div><div>17</div><div>18</div><div>19</div><div>20</div><div>21</div><div>22</div><div>23</div><div>24</div></div></div> <div>MCONF240015-01</div>		<div>G52</div> <div><div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div><div>9</div><div>10</div><div>11</div><div>12</div><div>13</div><div>14</div><div>15</div><div>16</div></div><div><div>17</div><div>18</div><div>19</div><div>20</div><div>21</div><div>22</div><div>23</div><div>24</div><div>25</div><div>26</div><div>27</div><div>28</div><div>29</div><div>30</div><div>31</div><div>32</div></div></div></div></div> <div>MCONF320007-01</div>			
<div>G53</div> <div><div><div>1</div><div>2</div></div></div> <div>MCONF020151-01</div>	<div>G54</div> <div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div></div><div><div>7</div><div>8</div><div>9</div><div>10</div><div>11</div><div>12</div></div></div></div> <div>MCONF120034-01</div>	<div>G55 (TO L29)</div> <div><div><div>1</div><div>2</div><div>3</div><div>4</div></div></div> <div>MCONF040099-01</div>	<div>G56 (TO F01)</div> <div><div><div><div>3</div></div><div><div>8</div><div>7</div><div>6</div><div>5</div><div>4</div></div><div><div>13</div><div>12</div><div>11</div><div>10</div><div>9</div></div></div><div>2</div><div>1</div></div> <div>MCONF130003-01</div>	<div>G57 (TO F05)</div> <div><div><div><div>3</div></div><div><div>8</div><div>7</div><div>6</div><div>5</div><div>4</div></div><div><div>13</div><div>12</div><div>11</div><div>10</div><div>9</div></div></div><div>2</div><div>1</div></div> <div>MCONF130003-01</div>	<div>G58</div> <div><div><div>1</div><div>2</div></div></div> <div>MCONF020140-01</div>
<div>G59</div> <div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div></div></div></div> <div>MCONF060040-01</div>	<div>G60</div> <div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div></div></div></div> <div>MCONF050024-01</div> <div>IF EQPD</div>	<div>G62</div> <div><div><div><div>1</div><div>2</div><div>3</div></div><div><div>4</div><div>5</div><div>6</div></div></div></div> <div>MCONF060003-01</div>	<div>G63</div> <div><div><div>1</div></div></div> <div>MCONF010010-01</div>	<div>G64</div> <div><div><div><div>1</div><div>2</div><div>3</div></div></div></div> <div>MCONF030078-01</div> <div>IF EQPD</div>	<div>G67 (TO Q01)</div> <div><div><div><div>1</div><div>2</div><div>3</div><div>4</div></div></div></div> <div>MCONF040099-01</div>
<div>G69</div> <div><div><div><div>1</div><div>2</div><div>3</div></div></div></div> <div>MCONF030087-01</div> <div>IF EQPD</div>	<div>G71 (TO E90)</div> <div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div><div>9</div><div>10</div><div>11</div></div><div><div>12</div><div>13</div><div>14</div><div>15</div><div>16</div><div>17</div><div>18</div><div>19</div><div>20</div><div>21</div><div>22</div></div></div></div> <div>MCONF220009-01</div>		<div>G72 (TO L27)</div> <div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div></div><div><div>6</div><div>7</div><div>8</div><div>9</div></div></div><div><div>10</div><div>11</div><div>12</div><div>13</div><div>14</div><div>15</div><div>16</div><div>17</div></div></div> <div>MCONF170005-01</div>		
<div>G73 (TO L28)</div> <div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div><div>9</div></div><div><div>10</div><div>11</div><div>12</div><div>13</div><div>14</div><div>15</div><div>16</div><div>17</div><div>18</div></div></div></div> <div>MCONF180010-01</div>		<div>G74</div> <div><div><div><div>A</div><div>A</div><div>A</div><div>A</div><div>A</div><div>A</div></div><div><div>B</div><div>B</div><div>B</div><div>B</div><div>B</div><div>B</div></div></div></div> <div><div><div><div>•</div><div>•</div><div>•</div><div>•</div><div>•</div><div>•</div></div><div><div>•</div><div>•</div><div>•</div><div>•</div><div>•</div><div>•</div></div></div></div> <div>MCONF120031-01</div>		<div>G75</div> <div><div><div><div>A</div><div>A</div><div>A</div><div>A</div><div>A</div><div>A</div></div><div><div>B</div><div>B</div><div>B</div><div>B</div><div>B</div><div>B</div></div></div></div> <div><div><div><div>•</div><div>•</div><div>•</div><div>•</div><div>•</div><div>•</div></div><div><div>•</div><div>•</div><div>•</div><div>•</div><div>•</div><div>•</div></div></div></div> <div>MCONF120031-01</div>	

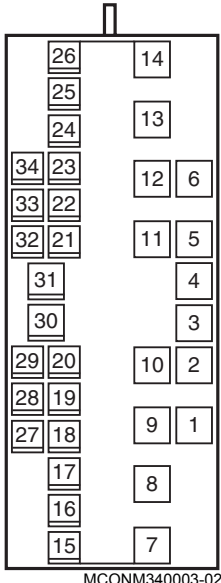


<div>G76</div> <div><div><div>A</div><div>A</div><div>A</div><div>B</div><div>B</div><div>B</div><div>C</div><div>C</div><div>C</div><div>C</div></div><div><div>D</div><div>D</div><div>D</div><div>D</div><div>E</div><div>E</div><div>E</div><div>E</div><div>E</div><div>E</div></div></div> <div><div><div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div></div></div> <div>MCONF220013-01</div>	<div>G77</div> <div><div><div>A</div><div>A</div><div>A</div></div><div><div>A</div><div>A</div><div>A</div><div>B</div><div>B</div><div>B</div><div>B</div></div></div> <div><div><div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div></div></div> <div>MCONF120032-01</div>	<div>G78</div> <div><div><div>A</div><div>A</div><div>A</div><div>B</div><div>B</div><div>B</div><div>C</div><div>C</div><div>C</div><div>C</div></div><div><div>D</div><div>D</div><div>D</div><div>D</div><div>E</div><div>E</div><div>E</div><div>E</div><div>E</div><div>E</div></div></div> <div><div><div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div></div></div> <div>MCONF220013-01</div>	
<div>G79</div> <div><div><div>A</div><div>A</div><div>A</div></div><div><div>A</div><div>A</div><div>A</div><div>A</div><div>A</div><div>A</div><div>A</div><div>A</div></div></div> <div><div><div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div></div></div> <div>MCONF120033-01</div>	<div>G80</div> <div><div><div>A</div><div>A</div><div>A</div><div>A</div></div></div> <div><div><div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div></div></div> <div>MCONF040071-01</div>	<div>G81</div> <div><div><div>A</div><div>A</div><div>A</div></div><div><div>A</div><div>A</div><div>A</div><div>A</div><div>A</div><div>A</div><div>A</div><div>A</div></div></div> <div><div><div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div></div></div> <div>MCONF130012-01</div>	
<div>G82</div> <div><div><div>1</div><div>2</div><div>3</div></div><div><div>6</div><div>7</div><div>8</div><div>9</div><div>10</div><div>11</div><div>12</div></div></div> <div><div><div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div><div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div></div></div> <div>MCONF120016-01</div>			

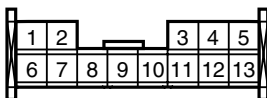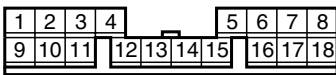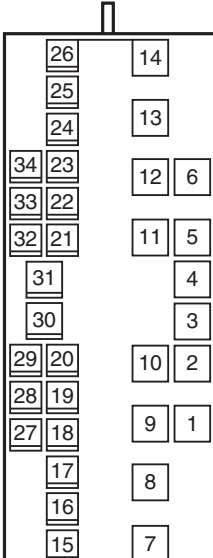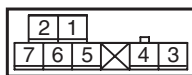J Connector

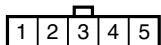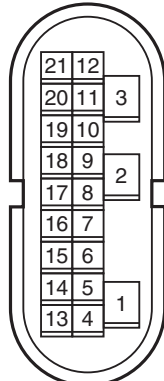S6JB0B910F007








<p>J01 (TO L07)</p>  <p>MCONM340003-02</p>	<p>J02</p>  <p>MCONF020159-01</p>	<p>J03</p>  <p>MCONM070004-01</p>	<p>J04</p>  <p>MCONF020008-01</p>	<p>J05</p>  <p>MCONF020236-01</p>	<p>J06</p>  <p>MCONF100061-01</p>
--	--	--	--	--	--

J07	 <p>MCONF130011-01</p>		J08	 <p>MCONF180006-01</p>		J09 (TO L31)	 <p>MCONM340003-02</p>		J10	 <p>MCONF020159-01</p>							
J11	 <p>MCONM070004-01</p>		J12	 <p>MCONF020008-01</p>		J13	 <p>MCONF100061-01</p>		J14	 <p>MCONF020236-01</p>		J15	 <p>MCONF050001-01</p>		J16 (TO L13)	 <p>MCONM210001-01</p>	
J17	 <p>MCONF020008-01</p>		J18	 <p>MCONF020236-01</p>		J19	 <p>MCONF050021-01</p>		J20	 <p>MCONF100061-01</p>		J21 (TO L37)	 <p>MCONM210001-01</p>		J22	 <p>MCONF020008-01</p>	
J23	 <p>MCONF020236-01</p>		J24	 <p>MCONF050001-01</p>		J25	 <p>MCONF100061-01</p>		J26	 <p>MCONM020018-01</p>		J27	 <p>MCONM020016-01</p>		J28	 <p>MCONM020018-01</p>	

J29  MCONM020016-01	J31  MCONM020051-01	J32  MCONM020051-01	
--	--	--	--

 
 


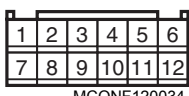
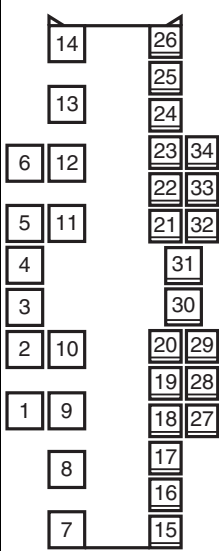
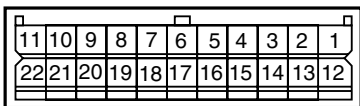
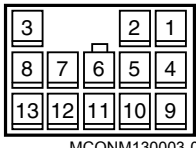



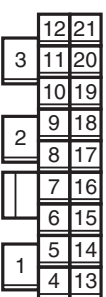

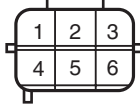

K Connector

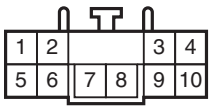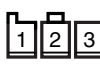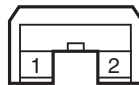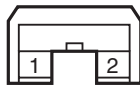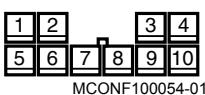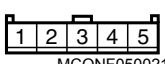
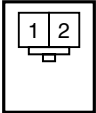
 
 
 



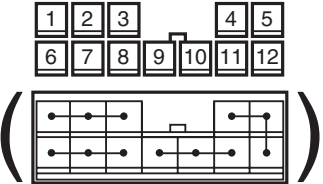
 
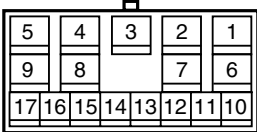
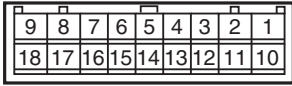
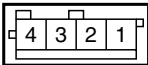
 
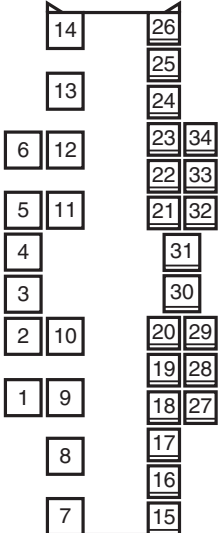
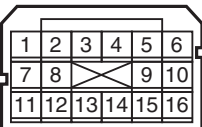



 
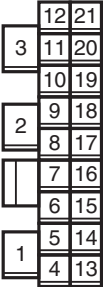

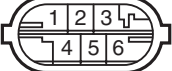

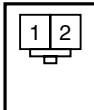
S6JB0B910F008

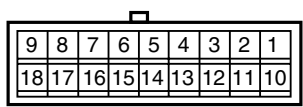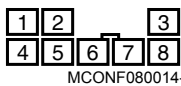K01  MCONF100062-01	K02  MCONF030102-01	K03  MCONF030102-01	K04  MCONF020233-01	K05  MCONF020233-01	K06  MCONF100054-01
K07  MCONF050021-01					




 




 



 
 

 








L Connector

S6JB0B910F009

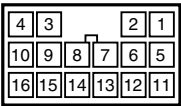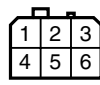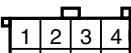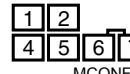L01 (TO E80)  MCONF180009-01	L03 (TO E79)  MCONF040095-01 IF EQPD	L04  MCONF080014-01	L05  MCONF130013-01		
L06  MCONF120034-01	L07 (TO J01)  MCONF340006-01	L08 (TO G07)  MCONM220004-01	L09 (TO G08)  MCONM130003-01	L10  MCONF010060-01	
L11  MCONF020022-01 IF EQPD	L12  MCONF020209-01	L13 (TO J16)  MCONF210001-01	L14  MCONM020027-01	L15 (TO R01)  MCONF060071-01	L16  MCONF010060-01

    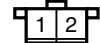

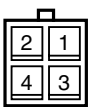
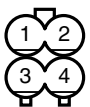
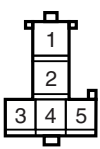


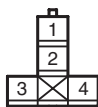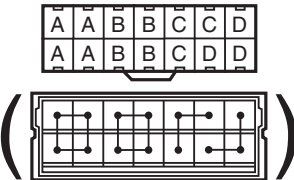

L17 (TO L66)  MCONM030009-01	L18  MCONF020207-01 IF EQPD	L19 (TO L68)  MCONF020151-01 3 dr	L19  MCONF020211-01 5 dr	L20  MCONF060044-01	L21  MCONF020232-01
L22  MCONF050038-01	L23  MCONF050038-01	L24  MCONF120035-01 IF EQPD	L25  MCONF020212-01 IF EQPD		
L27 (TO G72)  MCONM170001-01	L28 (TO G73)  MCONM180002-01	L29 (TO G55)  MCONM040015-01	L30  MCONF020212-01 IF EQPD		
L31 (TO J09)  MCONF340006-01	L32  MCONF160038-01 IF EQPD	L33  MCONF230001-01 IF EQPD	L34  MCONF010060-01	L35  MCONF020022-01 IF EQPD	
L36  MCONF020209-01	L37 (TO J27)  MCONF210001-01	L38  MCONM020027-01	L39  MCONF060072-01 IF EQPD	L40  MCONF010060-01	L41  MCONF020207-01 IF EQPD

9A-168 Wiring Systems:

L42 (TO O01)  MCONM160005-01	L43  MCONF060044-01	L44  MCONF040099-01	L45  MCONF020228-01 5 dr	L46  MCONF080014-01 IF EQPD	L47  MCONF010001-01
L48  MCONF010030-01	L49  MCONF020228-01 5 dr	L52  MCONF020013-01	L53  MCONF020013-01	L54  MCONM010017-01	L56  MCONF020151-01
L57  MCONF040095-01	L59  MCONF040095-01	L63  MCONF020008-01 3 dr	L64  MCONF020008-01 3 dr	L66 (TO L17)  MCONF030069-01	L67  MCONF030110-01
L68 (TO L19)  MCONM020005-01 3 dr	L69  MCONF020211-01 3 dr	L73  MCONF040054-01 IF EQPD	L79  MCONF140021-01	L80  MCONF020228-01	
L81  MCONF020228-01					

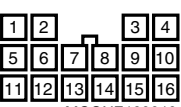
O Connector

S6JB0B910F010

O01 (TO L42)  MCONF160010-01	O02  MCONM010034-01	O03  MCONM040022-01	O04  MCONF040069-01	O05  MCONF050037-02	O06  MCONM010034-01
O07  MCONF020026-01	O08  MCONM020018-01	O09  MCONM020016-01			


Q Connector

S6JB0B910F011

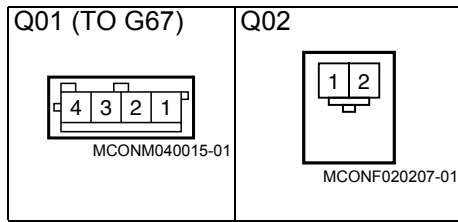

R Connector

S6JB0B910F012

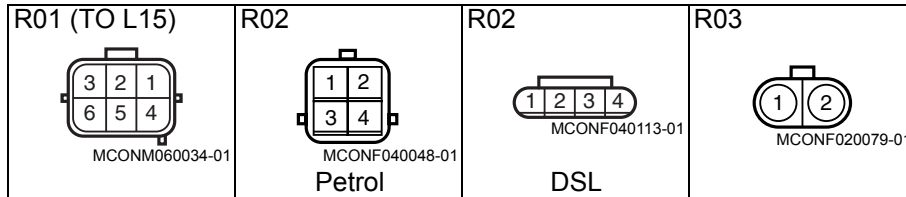

Lighting Systems

Precautions

Precautions for Discharge Headlight Service (If Equipped)

S6JB0B9200001

⚠ WARNING

- Do not touch igniter or ballast when lighting switch is at “HEAD” position to avoid possible electric shock.
- Do not measure voltage or resistance with tester connected to output connector of ballast or igniter to avoid possible electric shock.
- Do not perform work where exposed to water including rain or with wet hands to avoid possible electric shock.
- Disassembling igniter or ballast is strictly prohibited as it may cause an electric shock.
- Before inspecting or repairing discharge headlight or its peripheral parts, make sure that lighting switch is at OFF position and battery is disconnected at negative terminal to avoid possible electrical shock.
- Do not set lighting switch to “HEAD” position with connector disconnected or any part removed to avoid possible electric shock.
- Do not touch glass surface of headlight bulb. Oil or grease attached on it may not only make bulb service life shorter but also cause bulb to burst when lighting switch is turned on.
- Mercury, metal iodide and xenon gas are sealed in discharge headlight bulb. Be sure to dispose of used discharge headlight bulb properly according to applicable rules or regulations.

Precautions in Diagnosing Troubles (Vehicle Equipped with Auto Leveling Headlight System)

S6JB0B9200002


- Be sure to read “Precautions for Electrical Circuit Service in Section 00” before inspection and observe what is written there.
- Replacement of height sensor and headlight leveling control module. When height sensor and/or headlight leveling control module is replaced with new one, perform initialization of auto leveling headlight system according to “Initialization of Auto Leveling Headlight System”.

General Description

Discharge Headlight Description (If Equipped)

S6JB0B9201001

Discharge headlight provides more brightness and consumes less electricity as compared with the conventional halogen headlight. It consists of a ballast (1), igniter (2) and discharge headlight bulb (3).

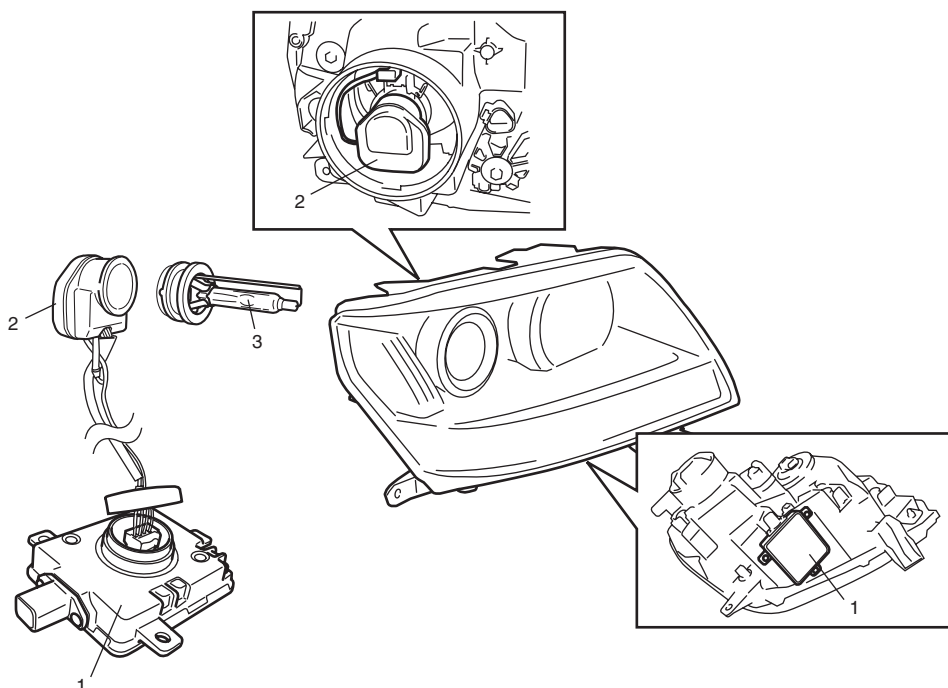

I5JB0A920002-01

Ballast


Ballast makes the voltage from the battery rise and converts the current from DC to AC. It also outputs high voltage to the igniter when the headlight is turned on and supplies to discharge headlight bulb with necessary voltage for continuous lighting while it is lit.

Igniter

Igniter generates high voltage needed to turn on the discharge headlight. It is charged with high voltage raised by the ballast and it applies voltage pulse as high as about 20,000 V to the tungsten electrode in the discharge headlight bulb. After the discharge headlights light up, the ballast supplies voltage to bulbs.

Discharge Headlight Bulb

Discharge headlight bulb is used for the low beam. It does not have a filament but xenon gas (1), mercury (2) and metal iodide sealed in it. It lights up when its tungsten electrodes (4) apply high voltage to these contents.

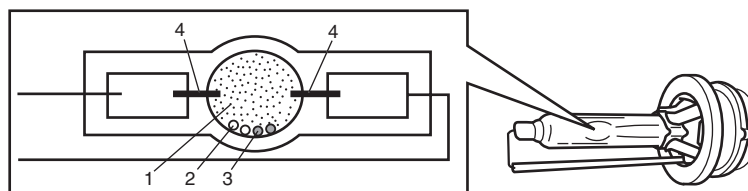

I5JB0A920001-01

Fail-safe Function of Discharge Headlight


As the ballast has a fail-safe function which stops supply of the voltage to the igniter when it detects any of the following condition.

- Ignition switch is set to "HEAD" position while igniter is not connected to discharge headlight bulb
- Discharge headlight does not light up even when lighting switch is set to "HEAD" position.
- Ballast detects a short in the circuit between discharge headlight bulb and ballast when lighting switch is at "HEAD" position.

Auto Leveling Headlight System Description (If Equipped)


S6JB0B9201002

Auto Leveling Headlight System adjusts the optical axis of the headlight automatically to be suitable for the varied vehicle position while the headlights are lit. It consists of front height sensor (1), rear height sensor (2), headlight leveling control module (3), headlight leveling actuator (4) and headlight leveling warning light (5).

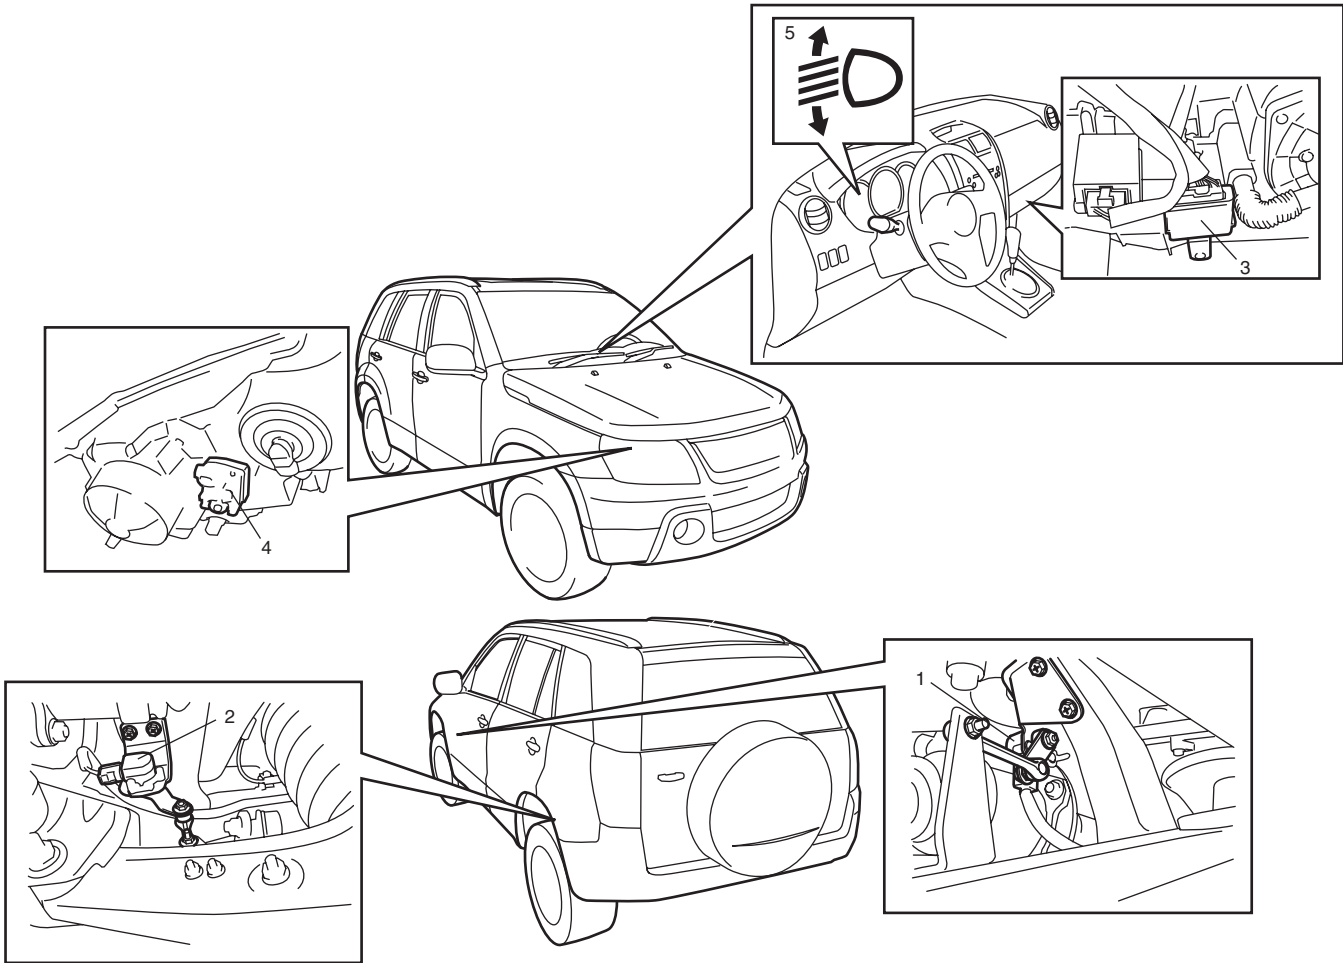

I5JB0A920036-02

With more passenger(s) or luggage in the vehicle, the vehicle position differs from that in such vehicle state with one person and no load in the vehicle and angle of the headlight optical axis varies accordingly. This system automatically adjusts the varied angle to maintain the optical axis properly.

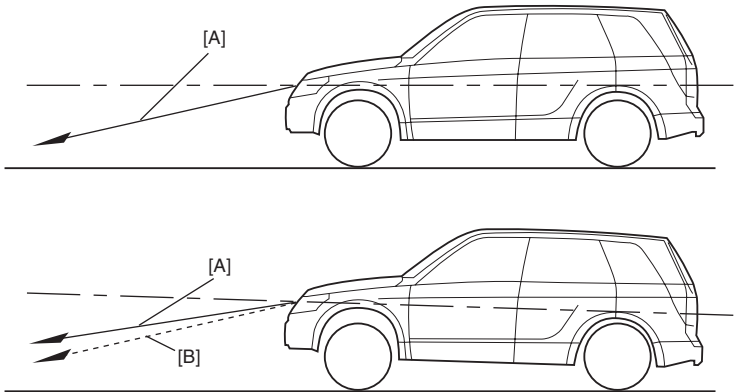


I5JB0A920004-01

[A]:	Optical axis of headlight in standard position
[B]:	Corrected optical axis of headlight

Front and Rear Height Sensors

Height sensor (1) is installed to the front and rear suspension frames respectively and connected to the lower arm (4) with the link (3). Each height sensor converts vertical movement of the lower arm into the resistance value and outputs the detected change in the vehicle position as a voltage signal to the headlight leveling control module.

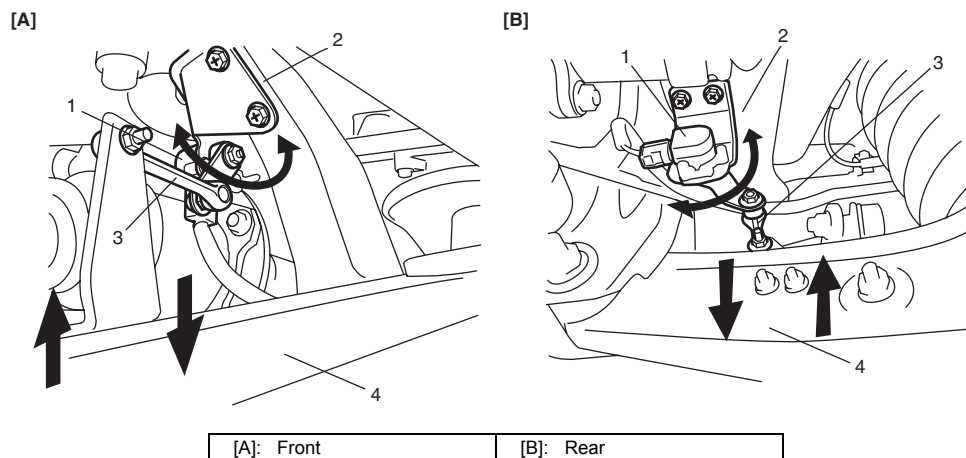

I5JB0A920005-01

Headlight Leveling Control Module

Headlight leveling control module is installed at the foot of the front passenger seat. It uses the headlight ON signal from the lighting switch, vehicle speed signal from BCM and vehicle position signal from height sensors to calculate the angle of the headlight optical axis to be corrected. Then it adjusts the optical axis angle of headlight based on the calculated angle value by driving the headlight leveling actuator so that proper headlight aiming is obtained. Also, when any abnormality is detected in the system, the headlight leveling control module makes the headlight leveling warning light in the combination meter light up to warn the driver of an abnormality in the system.

Fail-safe Function of Headlight Leveling Control Module


Headlight leveling control module has a fail-safe function which operates as follows.

Detecting condition	Fail-safe operation	Warning light
Power voltage supplied to headlight leveling control module is higher than 18.5 V	Stops headlight leveling actuator operation.	OFF
Power voltage supplied to headlight leveling control module is lower than 9 V	Stops headlight leveling actuator operation.	OFF
Vehicle speed is 180 km/h or higher	Stops headlight leveling actuator operation.	OFF
Voltage supplied to height sensor is lower than 4.6 V	Stops headlight leveling actuator operation.	ON
Signal voltage from height sensor is higher than 4.75 V or lower than 0.25 V	Stops headlight leveling actuator operation.	ON
Abnormality in headlight leveling control module is detected	Resets microcomputer in headlight leveling control module.	ON
Correction value calculated by headlight leveling control module exceeds operation range of headlight leveling actuator	Drives headlight leveling actuator within its operation range.	OFF

9B-5 Lighting Systems:

Headlight Leveling Actuator

Headlight leveling actuator is (1) located in the headlight housing (2). It moves the reflector (3) in the headlight housing according to the drive signal from the headlight leveling control module so as to adjust the optical axis of the headlight to the angle calculated by the headlight leveling control module.

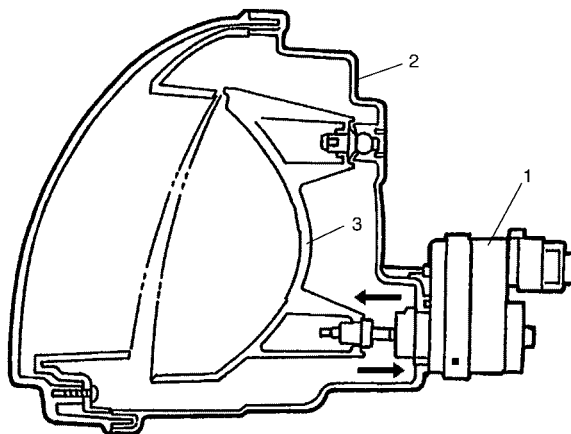


I5JB0A920006-06

Auto-On Headlight System Description (If Equipped)

S6JB0B9201003

The auto-on headlight is controlled by BCM (1) and works as follows. Under such conditions as the ignition switch turned ON, the lighting switch (2) turned to the “AUTO” position and the parking brake released, when illuminance to the auto-on headlight sensor (3) becomes lower than the specified value, the headlights and clearance lights are turned ON by BCM. On the other hand, when illuminance to the auto-on headlight sensor becomes higher than the specified value under the same conditions, the headlights and clearance lights are turned OFF by BCM.

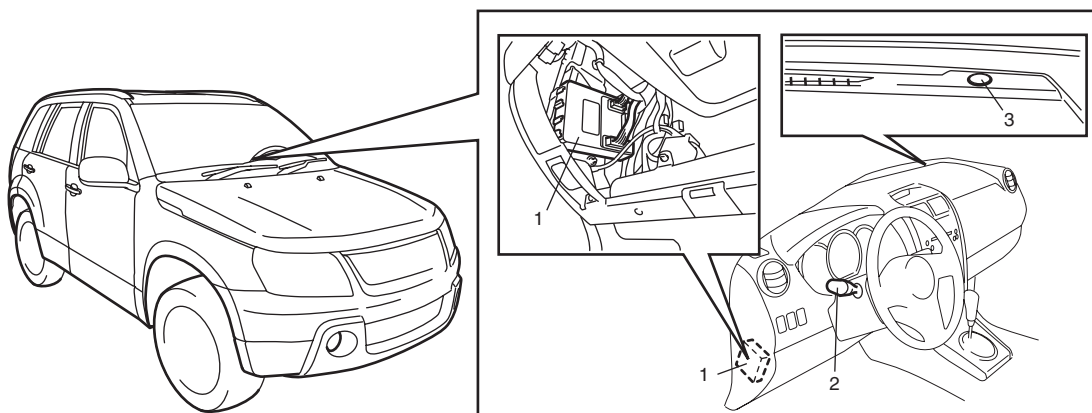


I5JB0A920007-01

D.R.L. System Description (If Equipped)

S6JB0B9201004

The D.R.L. system is controlled by BCM (1). It lights headlights when following two conditions are met. Conditions for D.R.L. operation:

- The engine is running
- The lighting switch is at “OFF” position

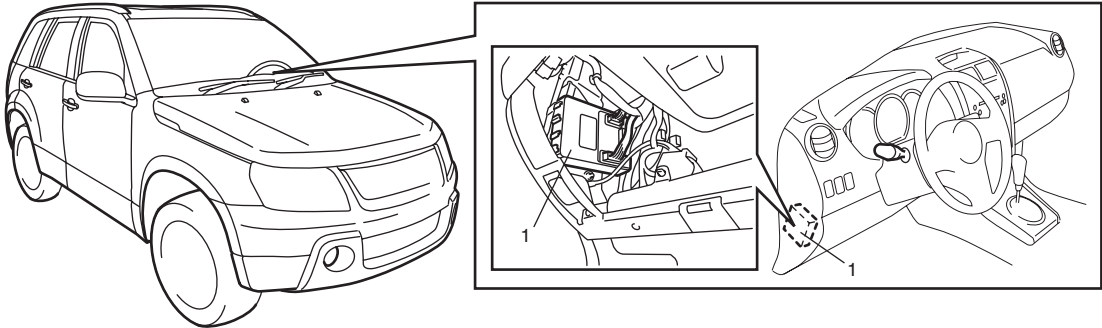


I5JB0A920008-01

Schematic and Routing Diagram

Headlight Auto Leveling System Wiring Circuit Diagram

S6JB0B9202001

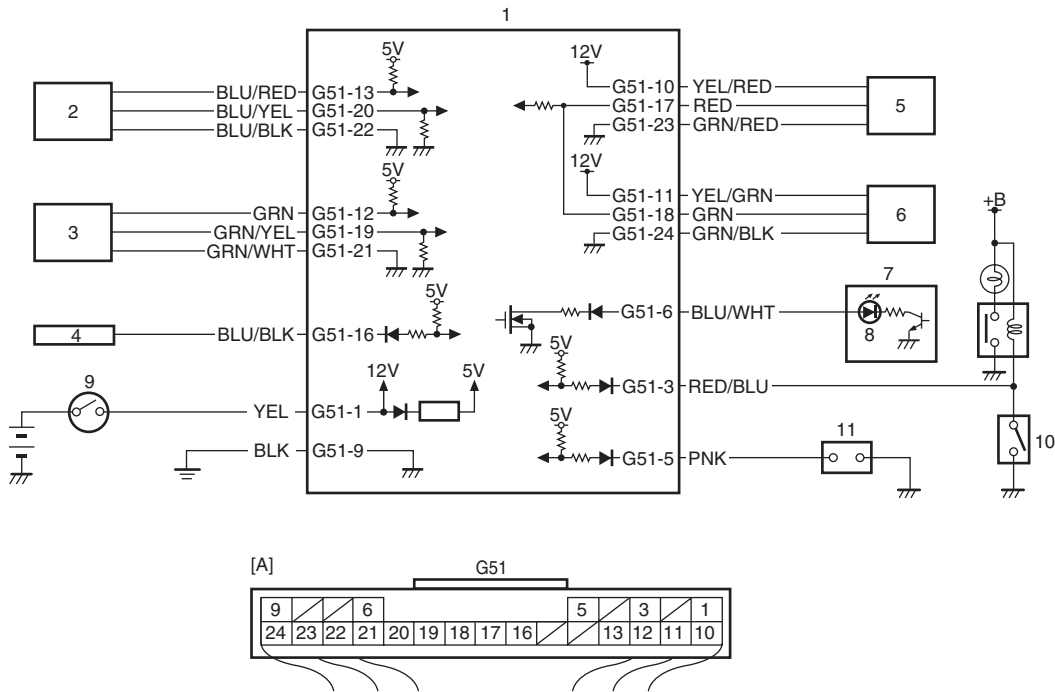

I5JB0D920001-01

[A]: Headlight leveling control module connector (viewed from harness side)	4. BCM	8. Headlight leveling warning light
1. Headlight leveling control module	5. Right headlight leveling actuator	9. Ignition switch
2. Front height sensor	6. Left headlight leveling actuator	10. Lighting switch
3. Rear height sensor	7. Combination meter	11. Diagnosis connector


Component Location

Lighting System Components Location

S6JB0B9203001

NOTE

The following figure shows left-hand steering vehicle. For right-hand steering vehicle, parts with (*) are installed at the opposite side.

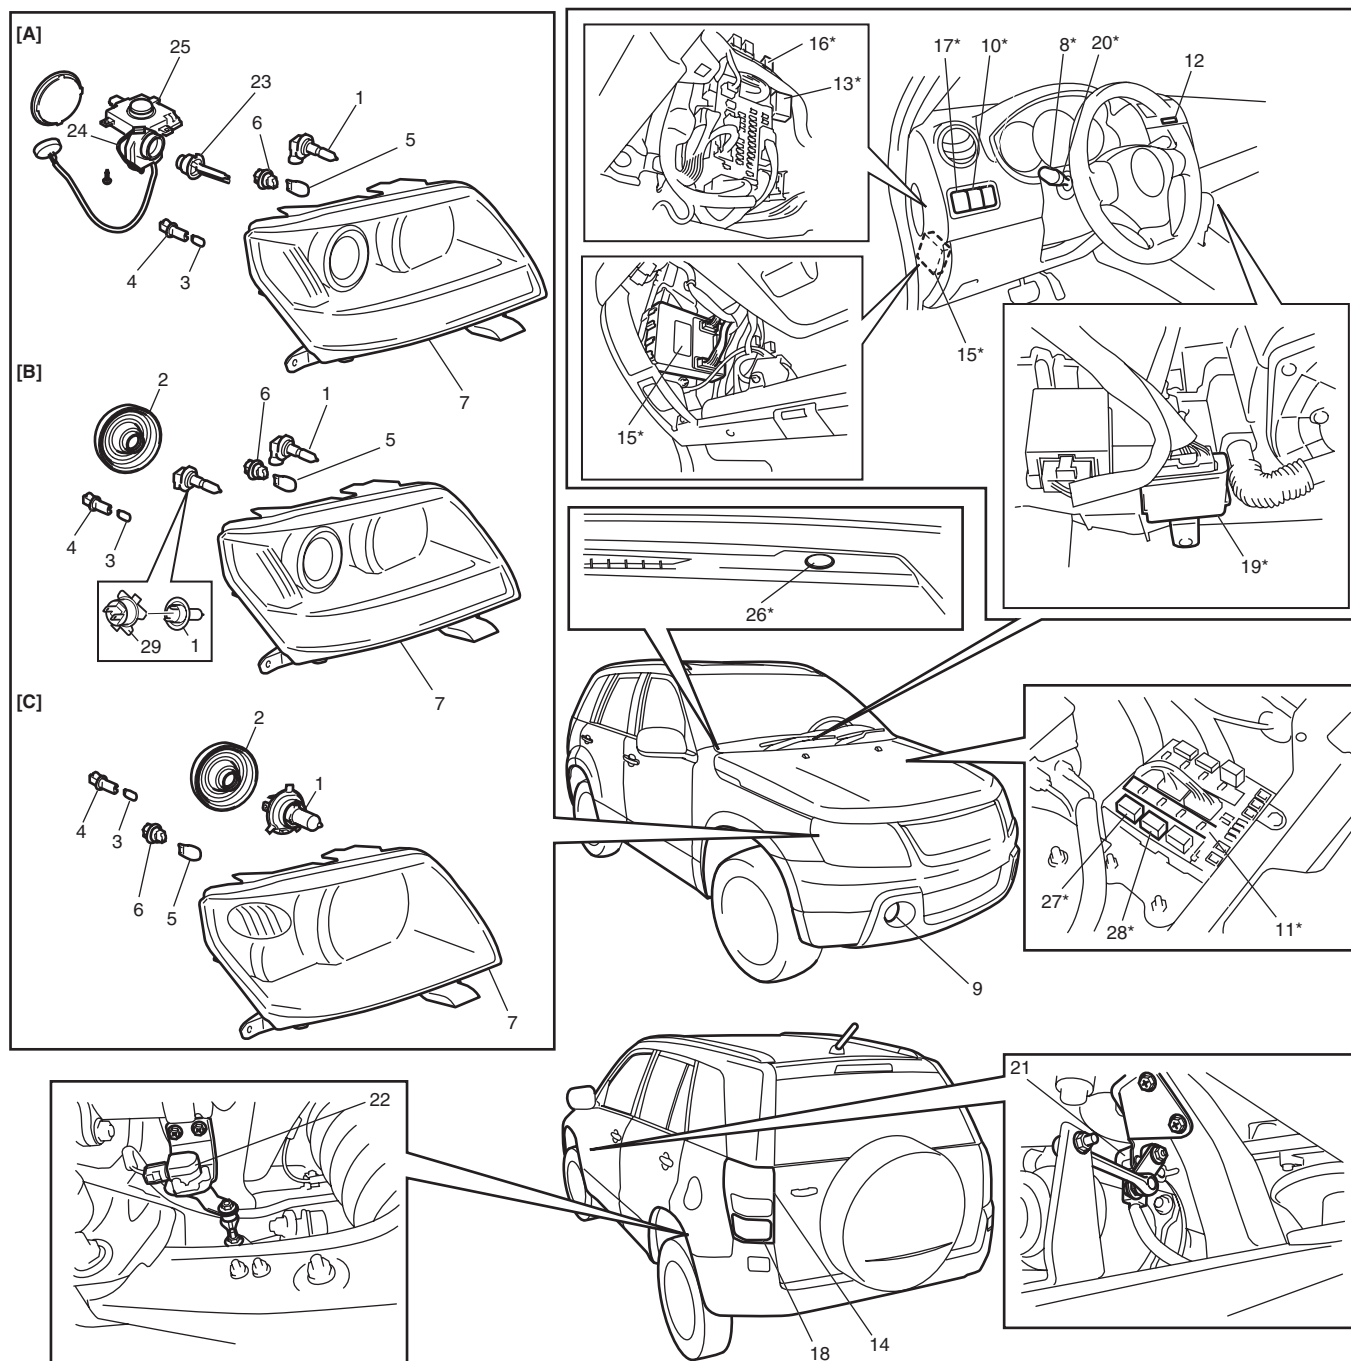


I6JB0B920001-02

[A]: Discharge headlight	9. Front fog light (if equipped)	20. Rear fog light switch (if equipped)
[B]: Halogen headlight of 5 door model	10. Front fog light switch (if equipped)	21. Front height sensor
[C]: Halogen headlight of 3 door model	11. Front fog light relay (if equipped)	22. Rear height sensor
1. Headlight bulb	12. Hazard warning switch	23. Discharge head light bulb
2. Socket cover	13. Turn signal / hazard warning relay	24. Igniter
3. Clearance light bulb	14. Rear combination light	25. Ballast
4. Clearance light bulb socket	15. BCM	26. Auto-on headlight sensor
5. Turn signal light bulb	16. Tail light relay	27. Headlight high beam relay

6. Turn signal light bulb socket	17. Headlight leveling switch (if equipped)	28. Headlight low beam relay
7. Headlight unit	18. Rear fog light (if equipped)	29. Headlight bulb socket
8. Lighting switch	19. Headlight auto leveling control module (if equipped)	

Interior Light System Location

S6JB0B9203002

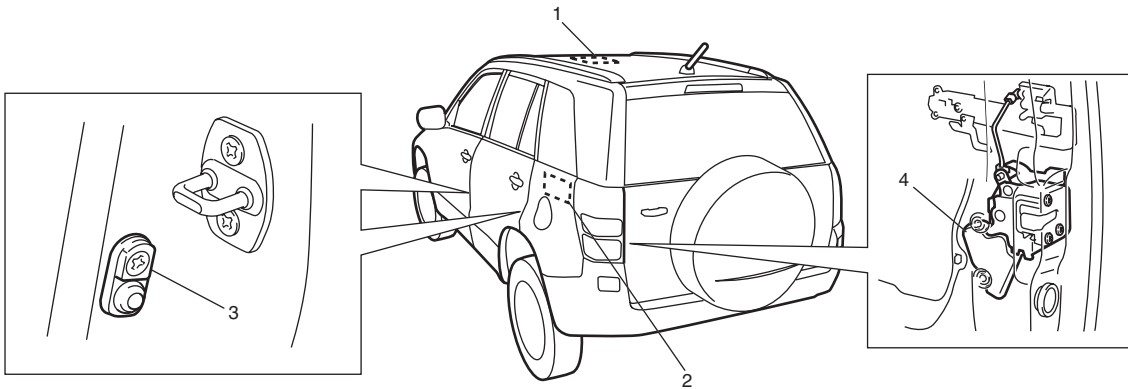

I5JB0A920010-01

1. Dome light	3. Door switches (both sides)
2. Luggage compartment light (if equipped)	4. Rear end door switch (included in lock assembly)

Diagnostic Information and Procedures

Self-Diagnosis Function for Auto Leveling Headlight System


S6JB0B9204001

The headlight leveling control module has self-diagnosis function to monitor the system components and circuits while the headlight auto leveling system is at work. When the headlight leveling control module detects an abnormality in the system, the headlight leveling warning light in the combination meter turns ON. However, the headlight leveling control module does not have a function to indicate location of such abnormality.

Headlight Leveling Warning Light Check

S6JB0B9204002

- 1) Turn ignition switch to ON position.
- 2) Check that headlight leveling warning light (1) lights for about 2 seconds and then goes OFF. If the headlight leveling warning light lights up again 10 seconds after it turned off, go to "Headlight Auto Leveling System Symptom Diagnosis (If Equipped)". If headlight leveling warning light flashes, go to "Initialization of Auto Leveling Headlight System".

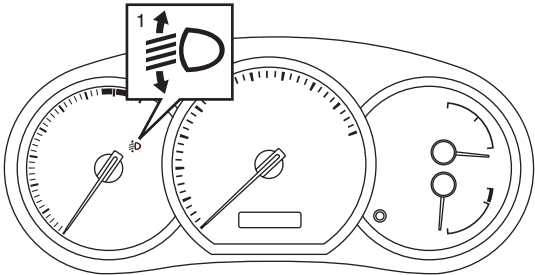

I5JB0A920012-02

Headlight Symptom Diagnosis (Vehicle Equipped with Discharge Headlight)

S6JB0B9204003

Condition	Possible cause	Correction / Reference Item
Only one low beam does not light up	Circuit fuse blown	Replace fuse and check for short circuit.
	Bulb faulty	Replace bulb.
	Igniter faulty	Replace igniter.
	Ballast faulty	Replace ballast.
	Wiring or ground faulty	Repair circuit.
Low beam does not light up	Circuit fuses blown	Replace fuses and check for short circuit.
	Headlight low beam relay faulty	Replace relay.
	Lighting or dimmer switch faulty	Check lighting and dimmer switch referring to "Headlight Switch (in Lighting Switch) Inspection".
	Bulbs faulty	Replace bulbs.
	Igniters faulty	Replace igniters.
	Ballasts faulty	Replace ballasts.
	Wiring or ground faulty	Repair circuit.
	BCM faulty	Check BCM for function referring to "Inspection of BCM and Its Circuits in Section 10B".
Only one high beam does not light up	Circuit fuse blown	Replace fuse and check for short circuit.
	Bulb blown	Replace bulb.
	Wiring or ground faulty	Repair circuit.
High beam does not light up	Circuit fuses blown	Replace fuses and check for short circuit.
	Headlight high beam relay faulty	Replace relay.
	Lighting or dimmer switch faulty	Check lighting and dimmer switch referring to "Headlight Switch (in Lighting Switch) Inspection".
	Bulbs blown	Replace bulbs.
	Wiring or ground faulty	Repair circuit.

Headlight Symptom Diagnosis (Vehicle Not Equipped with Discharge Headlight)

S6JB0B9204004

Condition	Possible cause	Correction / Reference Item
Only one low beam does not light up	Circuit fuse blown	Replace fuse and check for short circuit.
	Bulb blown	Replace bulb.
	Wiring or ground faulty	Repair circuit.
Low beam does not light up	Circuit fuse blown	Replace fuses and check for short circuit.
	Headlight low beam relay faulty	Replace relay.
	Lighting or dimmer switch faulty	Check lighting and dimmer switch referring to "Headlight Switch (in Lighting Switch) Inspection".
	Bulbs blown	Replace bulbs.
	Wiring or ground faulty	Repair circuit.
	BCM faulty (with DRL vehicle or auto-on headlight vehicle)	Check BCM for function referring to "Inspection of BCM and Its Circuits in Section 10B".
Only one high beam does not light up	Circuit fuse blown	Replace fuse and check for short circuit.
	Bulb blown	Replace bulb.
	Wiring or ground faulty	Repair circuit.
High beam does not light up	Circuit fuse blown	Replace fuses and check for short circuit.
	Headlight high beam relay faulty	Replace relay.
	Lighting or dimmer switch faulty	Check lighting and dimmer switch referring to "Headlight Switch (in Lighting Switch) Inspection".
	Bulbs blown	Replace bulbs.
	Wiring or ground faulty	Repair circuit.

Auto-On Headlight System Symptom Diagnosis (If Equipped)

S6JB0B9204005

NOTE

- Use of SUZUKI scan tool makes it easy to check whether a faulty condition is on the input side or output side of BCM. For checking procedure, refer to “Diagnosis Using Output Test Function of SUZUKI Scan Tool” under “Scan Tool Data in Section 10B”.
- Check each part in the order from the top of the following list.

Condition	Possible cause	Correction / Reference Item
Headlights are not turned ON or OFF automatically even after darkened or lightened	Circuit fuse blown	Replace fuse and check for short circuit.
	Parking brake switch faulty	Check parking brake switch referring to “Parking Brake Switch Inspection in Section 9C”.
	Lighting or dimmer switch faulty	Check lighting and dimmer switch referring to “Headlight Switch (in Lighting Switch) Inspection”.
	Auto-on headlight sensor faulty	Check auto-on headlight sensor referring to “Auto-On Headlight Sensor Inspection (If Equipped)”.
	Wiring or ground faulty	Repair circuit.
	BCM faulty	Check BCM for function referring to “Inspection of BCM and Its Circuits in Section 10B”.

DRL System Symptom Diagnosis (If Equipped)

S6JB0B9204006

NOTE

- Use of SUZUKI scan tool makes it easy to check whether a faulty condition is on the input side or output side of BCM. For checking procedure, refer to “Diagnosis Using Output Test Function of SUZUKI Scan Tool” under “Scan Tool Data in Section 10B”.
- Check each part in the order from the top of the following list.

Condition	Possible cause	Correction / Reference Item
Headlight does not light when lighting switch is in OFF position and engine is running	Lighting switch faulty	Check lighting switch referring to “Headlight Switch (in Lighting Switch) Inspection”.
	BCM faulty	Check BCM for function referring to “Inspection of BCM and Its Circuits in Section 10B”.
	Wiring or grounding faulty	Repair circuit.
Headlight lights even if engine stop and lighting switch is OFF position	Lighting switch faulty	Check system referring to “Headlight Switch (in Lighting Switch) Inspection”.
	Wiring or grounding faulty	Repair circuit.
	BCM faulty	Check BCM for function referring to “Inspection of BCM and Its Circuits in Section 10B”.

Headlight Auto Leveling System Symptom Diagnosis (If Equipped)

S6JB0B9204007

Condition	Possible cause	Correction / Reference Item
Headlight leveling Warning Light comes on steady	Height sensor faulty	Check height sensor referring to "Height Sensor and Its Circuit Inspection (If Equipped)".
	Wiring or ground faulty	Repair circuit.
	Headlight leveling control module faulty	Check headlight leveling control module for function referring to "Inspection of Headlight Leveling Control Module and Its Circuit (Vehicle Equipped with Auto Leveling Headlight System)".
Optical axes of both headlights do not change	Circuit fuse blown	Replace fuse and check for short circuit.
	Supply voltage too low or too high	Check charging system referring to "Generator Test (Undercharged Battery Check) in Section 1J" or "Generator Test (Overcharged Battery Check) in Section 1J".
	Wiring or ground faulty	Repair circuit.
	Headlight leveling control module faulty	Check headlight leveling control module for function referring to "Inspection of Headlight Leveling Control Module and Its Circuit (Vehicle Equipped with Auto Leveling Headlight System)".
Optical axis of only one headlight does not change	Headlight leveling actuator faulty	Check actuator referring to "Headlight Leveling Actuator Inspection (If Equipped)".
	Headlight housing deformed	Replace headlight housing.
	Wiring or ground faulty	Repair circuit.

Headlight Manual Leveling System Symptom Diagnosis (If Equipped)

S6JB0B9204008

Condition	Possible cause	Correction / Reference Item
Optical axes of both headlights do not change	Circuit fuse blown	Replace fuse and check for short circuit.
	Headlight manual leveling switch faulty	Check headlight manual leveling switch referring to "Headlight Manual Leveling Switch (If Equipped) Inspection".
	Supply voltage too low	Check charging system referring to "Generator Test (Undercharged Battery Check) in Section 1J".
	Wiring or grounding faulty	Repair circuit.
Optical axis of only one headlight does not change	Circuit fuse blown	Replace fuse and check for short circuit.
	Headlight leveling actuator faulty	Check actuator referring to "Headlight Leveling Actuator Inspection (If Equipped)".
	Headlight housing deformed	Replace headlight housing.
	Wiring or grounding faulty	Repair circuit.

Turn Signal and Hazard Warning Light Symptom Diagnosis

S6JB0B9204009

Condition	Possible cause	Correction / Reference Item
Flash rate high or one side only flashes	Bulb blown on "flash rate high"-side	Replace bulb.
	Incorrect bulb	Replace bulb.
	Turn signal / hazard warning relay faulty	Check turn signal / hazard warning relay referring to "Turn Signal and Hazard Warning Relay Inspection".
	Open circuit or high resistance existing either; between turn signal switch and non lighting bulb, or between hazard warning switch and non lighting bulb	Repair circuit.
	Wiring or grounding faulty	Repair circuit.
No flashing NOTE <ul style="list-style-type: none"> • Use of SUZUKI scan tool makes it easy to check whether a faulty condition is on the input side or output side of BCM. For checking procedure, refer to "Diagnosis Using Output Test Function of SUZUKI Scan Tool" under "Scan Tool Data in Section 10B". • Check each part in the order from the top of the following list. 	Circuit fuse(s) blown	Replace fuse(s) and check for short circuit.
	Turn signal / hazard warning relay faulty	Check turn signal / hazard warning relay referring to "Turn Signal and Hazard Warning Relay Inspection".
	Turn signal light switch faulty	Check turn signal light switch referring to "Turn Signal Light Switch (in Lighting Switch) Inspection".
	Hazard warning switch faulty	Check hazard warning switch referring to "Hazard Warning Switch Inspection".
	Open circuit or high resistance existing between battery and switch	Repair circuit.
	Wiring or grounding faulty	Repair circuit.
	BCM faulty	Replace after making sure that none of above parts is faulty.
Flash rate low	Supply voltage low	Check charging system.
	Turn signal / hazard warning relay faulty	Check turn signal / hazard warning relay referring to "Turn Signal and Hazard Warning Relay Inspection".

Clearance, Tail and License Plate Light Symptom Diagnosis

S6JB0B9204010

NOTE

- Use of SUZUKI scan tool makes it easy to check whether a faulty condition is on the input side or output side of BCM. For checking procedure, refer to "Diagnosis Using Output Test Function of SUZUKI Scan Tool" under "Scan Tool Data in Section 10B".
- Check each part in the order from the top of the following list.

Condition	Possible cause	Correction / Reference Item
All lights do not light up	Circuit fuse blown	Replace fuse and check for short circuit.
	Lighting and dimmer switch of combination switch faulty	Check lighting and dimmer switch referring to "Headlight Switch (in Lighting Switch) Inspection".
	Tail light relay faulty	Check tail light relay referring to "Tail Light Relay, Headlight Relay Inspection".
	Wiring or grounding faulty	Repair circuit.
	BCM faulty	Check BCM for function referring to "Inspection of BCM and Its Circuits in Section 10B".
Some lights do not light up	Bulb(s) blown	Replace bulb(s).
	Wiring or grounding faulty	Repair circuit.

Back-Up Light Symptom Diagnosis

S6JB0B9204011

Condition	Possible cause	Correction / Reference Item
Back-up lights do not light up	Bulb(s) blown	Replace bulb(s).
	Circuit fuse blown	Replace fuse and check for short circuit.
	Back-up light switch (M/T model) or transmission range sensor (A/T model) faulty	Check back-up light switch or transmission range sensor referring to "Back Up Light Switch Inspection in Section 5B" or "Transmission Range Sensor Inspection and Adjustment in Section 5A".
	Wiring or grounding faulty	Repair circuit.
Back-up lights stay on	Back-up light switch (M/T model) or transmission range sensor (A/T model) faulty	Check back-up light switch or transmission range sensor referring to "Back Up Light Switch Inspection in Section 5B" or "Transmission Range Sensor Inspection and Adjustment in Section 5A".

Brake Light Symptom Diagnosis

S6JB0B9204012

Condition	Possible cause	Correction / Reference Item
Brake light do not light up	Bulb(s) blown	Replace bulb(s).
	Circuit fuse blown	Replace fuse and check for short circuit.
	Brake light switch faulty	Check brake light switch referring to "Brake Light Switch Inspection".
	Wiring or grounding faulty	Repair circuit.
Brake light stay on	Brake light switch faulty	Check or adjust brake light switch referring to "Brake Light Switch Inspection" or "Brake Light Switch Adjustment in Section 4A".

Front Fog Light Symptom Diagnosis (If Equipped)

S6JB0B9204013

NOTE

- Use of SUZUKI scan tool makes it easy to check whether a faulty condition is on the input side or output side of BCM. For checking procedure, refer to "Diagnosis Using Output Test Function of SUZUKI Scan Tool" under "Scan Tool Data in Section 10B".
- Check each part in the order from the top of the following list.

Condition	Possible cause	Correction / Reference Item
Only one light does not light	Bulb blown	Replace bulb.
	Wiring or grounding faulty	Repair circuit.
Front fog lights do not light	Circuit fuse blown	Replace fuse and check for short circuit.
	Bulbs blown	Replace bulbs.
	Front fog light switch faulty	Check front fog light switch referring to "Front Fog Light Switch Inspection (If Equipped)".
	Front fog light relay faulty	Check front fog light relay referring to "Front Fog Light Relay Inspection (If Equipped)".
	Wiring or grounding faulty	Repair circuit.
	BCM faulty	Check BCM for function referring to "Inspection of BCM and Its Circuits in Section 10B".

Rear Fog Light Symptom Diagnosis (If Equipped)

S6JB0B9204014

Condition	Possible cause	Correction / Reference Item
Rear fog light do not light	Circuit fuse blown	Replace fuse and check for short circuit.
	Bulb blown	Replace bulb.
	Rear fog light switch faulty	Check rear fog light switch referring to "Rear Fog Light Switch Inspection (If Equipped)".
	Wiring or grounding faulty	Repair circuit.

Illumination Control System Symptom Diagnosis (If Equipped)

S6JB0B9204015

Condition	Possible cause	Correction / Reference Item
Illumination cancel do not normal operation	Combination meter faulty	Replace combination meter.
	Audio unit and/or information display (clock) faulty	Replace audio unit and/or information display (clock).
	Wiring or grounding faulty	Repair circuit.

Interior Light Symptom Diagnosis

S6JB0B9204016

NOTE


- Use of SUZUKI scan tool makes it easy to check whether a faulty condition is on the input side or output side of BCM. For checking procedure, refer to “Diagnosis Using Output Test Function of SUZUKI Scan Tool” under “Scan Tool Data in Section 10B”.
- Check each part in the order from the top of the following list.

Condition	Possible cause	Correction / Reference Item
Dome light does not light up	Bulb blown	Replace bulb.
	Circuit fuse blown	Replace fuse and check for short circuit.
	Dome light switch faulty	Check dome light switch.
	Door switch faulty	Check door switch referring to “Door Switch (Front / Rear / Rear End Door) Inspection in Section 9C”.
	Wiring or grounding	Repair circuit.
	BCM faulty	Replace after making sure that none of above parts is faulty.
Luggage compartment light does not light up (if equipped)	Bulb blown	Replace bulb.
	Back door switch faulty	Check switch referring to “Door Switch (Front / Rear / Rear End Door) Inspection in Section 9C”.
	Wiring or grounding faulty	Repair circuit.

Auto-On Headlight Operation Inspection (If Equipped)

S6JB0B9204017

- 1) Turn ignition switch to ON position and then turn lighting switch to “AUTO” position.
- 2) Release parking brake lever.
- 3) Check headlights for operation as follows. If headlights do not turn ON or OFF, go to “Auto-On Headlight System Symptom Diagnosis (If Equipped)”.
 - a) Cover auto-on headlight sensor by hand and check that headlights light up then.
 - b) Light over auto-on headlight sensor vertically with on incandescent light of approx. 100 W apart from about 100 mm (3.94 in.) (1) and check that headlights go off then.
 - c) In the state as described in Step a), pull up parking brake lever and check that headlights go off then.

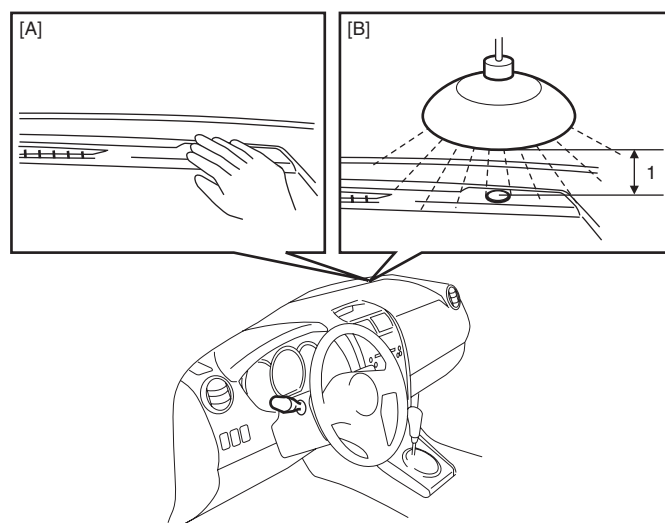

I5JB0A920013-02

[A]: Fig. for Step a)

[B]: Fig. for Step b)

DRL Operation Inspection (If Equipped)

S6JB0B9204018

- 1) Confirm that lighting switch is in OFF position.
- 2) Confirm that dimmer and passing switch is in low beam position.
- 3) Check DRL for operation as follows.
 - a) Turn ignition switch to ON position and check headlights remain OFF.
 - b) Start engine and run it at idle speed. Check headlights turn ON at low beam.
 - c) Switch dimmer and passing switch to high beam position and check headlights remain tuning ON at low beam.
- 4) If a malfunction is found, go to "DRL System Symptom Diagnosis (If Equipped)".

Inspection of Headlight Leveling Control Module and Its Circuit (Vehicle Equipped with Auto Leveling Headlight System)

S6JB0B9204019

Headlight auto leveling control module and its circuits can be checked at headlight auto leveling control module wiring couplers by measuring voltage and pulse signal.

⚠ CAUTION


Headlight auto leveling control module cannot be checked by itself. It is strictly prohibited to connect voltmeter or ohmmeter to headlight auto leveling control module with couplers disconnected from it.

Voltage Check

Check voltage between each terminal of headlight auto leveling control module and vehicle body ground under each condition. If measured voltage is out of standard value, check circuit (including switch and sensor) of terminal where voltage was measured.

NOTE

- As each terminal voltage is affected by the battery voltage, confirm that it is 11 V or more when ignition switch is ON.
- Voltage with asterisk (*) cannot be measured by voltmeter because it is pulse signal. Check it with oscilloscope if necessary.

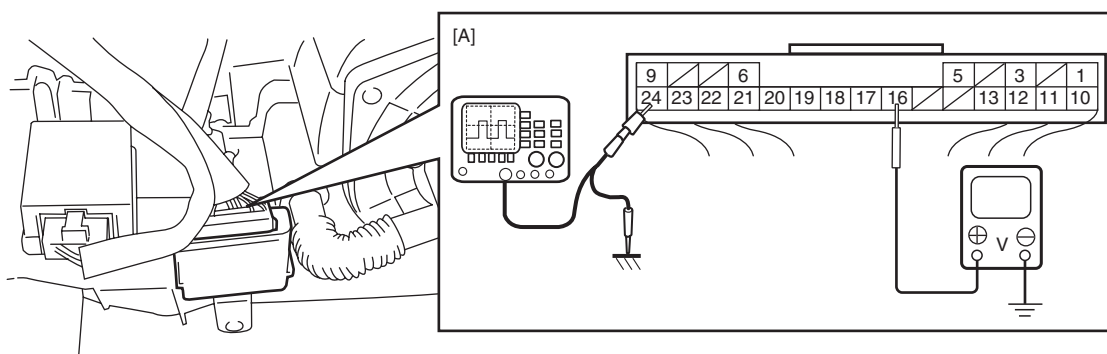

I5JB0A920014-02

[A]: Headlight leveling control module connector (viewed from harness side)


Terminal	Circuit	Specification	Condition
1	Power source	10 – 14 V	Ignition switch is at ON position.
2	—	—	—
3	Lighting switch	Less than 1.5 V	Lighting switch is at “HEAD” position.
		10 – 14 V	Lighting switch is at OFF position.
4	—	—	—
5	—	—	—
6	Headlight auto leveling indicator	Continuity	For about 3 seconds after ignition switch is turned on (i.e., headlight auto leveling indicator is lit up).
		No continuity	More than about 3 seconds after ignition switch is turned on (i.e., headlight auto leveling indicator is not lit up).
7	—	—	—
8	—	—	—
9	Ground for headlight auto leveling control unit	0 V	Ignition switch is at ON position.
10	Power supply for right headlight leveling actuator	10 – 14 V	Ignition switch is at ON position.
11	Power supply for left headlight leveling actuator	10 – 14 V	Ignition switch is at ON position.
12	Power supply for rear height sensor	About 5 V	Ignition switch is at ON position.
13	Power supply for front height sensor	About 5 V	Ignition switch is at ON position.
14	—	—	—
15	—	—	—
16	Vehicle speed signal	Refer to “Reference waveform No.1: ”.	
17	Signal for right headlight leveling actuator	Less than 1 V	Lighting switch is at OFF position.
		1.0 – 12.6 V	For 10 seconds after turning lighting switch to ON position.
18	Signal for left headlight leveling actuator	Less than 1 V	Lighting switch is at OFF position.
		1.0 – 12.6 V	For 10 seconds after turning lighting switch to ON position.
19	Input signal for rear height sensor	About 2.5 V	Ignition switch is at ON position.
20	Input signal for front height sensor	About 2.5 V	Ignition switch is at ON position.
21	Ground for rear height sensor	0 V	Ignition switch is at ON position.
22	Ground for front height sensor	0 V	Ignition switch is at ON position.
23	Ground for right headlight leveling actuator	0 V	Ignition switch is at ON position.
24	Ground for left headlight leveling actuator	0 V	Ignition switch is at ON position.

Reference waveform No.1

Vehicle speed signal (1).

Vehicle speed signal is pulse. Pulse frequency varies depending on vehicle speed.

Measurement terminal	CH 1: "G51-16" to "G51-9"
Oscilloscope setting	CH 1: 5 mV TIME: 200 ms/DIV
Measurement condition	Engine is running and vehicle speed 10 km/h (6 mph)

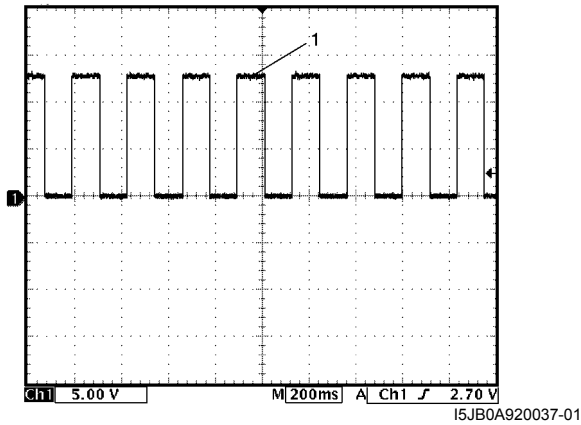

Repair Instructions

Headlight Housing Removal and Installation


S6JB0B9206001

⚠ WARNING

Be sure to read “Precautions for Discharge Headlight Service (If Equipped)” before starting to service work.
Neglecting them may result in personal injury.

Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Remove front bumper. Refer to “Front Bumper Components in Section 9K”.
- 3) Remove headlight mounting bolts.
- 4) Detach headlight housing (1) from vehicle.
- 5) Disconnect couplers from headlight housing (1).

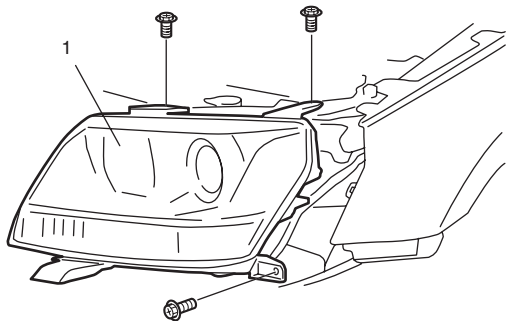

I5JB0A920015-01

Installation

Reverse removal procedure noting the following.

- After installation, be sure to inspect and adjust aiming referring to “Headlight Aiming Adjustment with Screen”.

Headlight Bulb Replacement


S6JB0B9206002

⚠ WARNING

- To avoid danger of being burned, don’t touch when the bulb is hot.
- Don’t touch glass surface of bulb, to avoid deteriorate as the case may be unclear when bulb light on at dirty condition.
- Be sure to read “Precautions for Discharge Headlight Service (If Equipped)” before starting to service work.


Discharge Headlight Bulb

- 1) Check to ensure that lighting switch is at OFF position.
- 2) Disconnect negative (–) cable at battery.
- 3) Remove headlight housing referring to “Headlight Housing Removal and Installation”.
- 4) Remove cover (1) from headlight housing by turning it counterclockwise.
- 5) Remove igniter (2) from discharge headlight bulb by turning it counterclockwise.

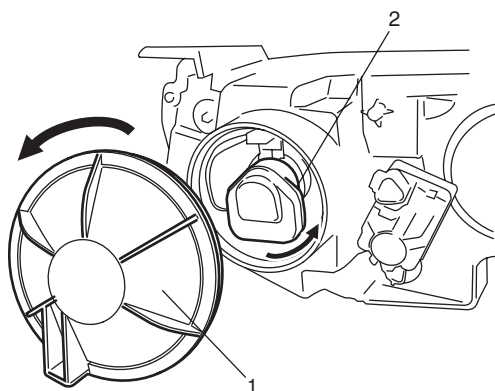

I5JB0A920016-01

- 6) Replace bulb (1) from headlight housing.

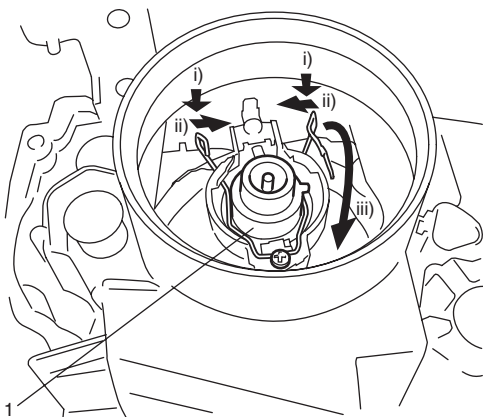


I5JB0A920017-01

- 7) Install igniter (2) to discharge headlight bulb by turning it clockwise.
- 8) Install cover to headlight housing by turning it clockwise.
- 9) Install headlight housing to vehicle body referring to “Headlight Housing Removal and Installation”.
- 10) Connect negative (–) cable at battery.
- 11) After installation, be sure to inspect and adjust aiming referring to “Headlight Aiming Adjustment with Screen”.

Other Than Discharge Headlight Bulb

- 1) Disconnect negative cable at battery.
- 2) Disconnect headlight coupler.
- 3) Remove socket cover (if equipped).
- 4) Remove headlight bulb (1) as shown.
- 5) Install new headlight bulb and assemble all removed parts.

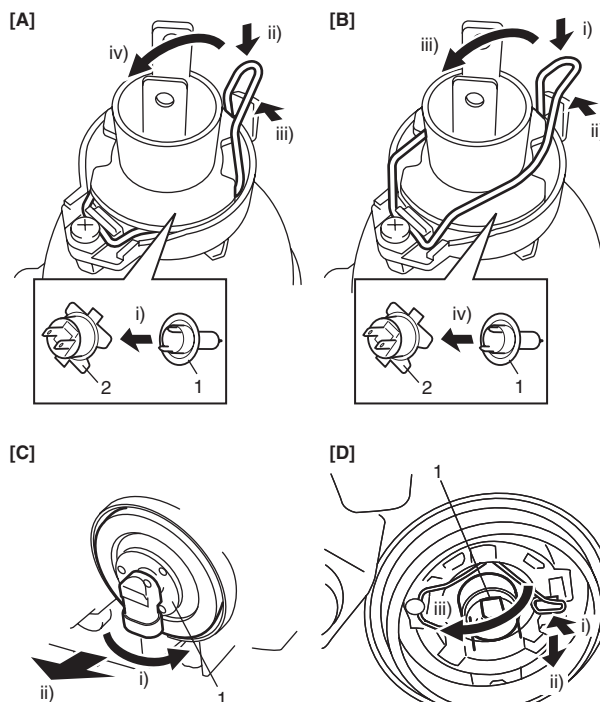

I5JB0D920017-01

- | |
|---|
| [A]: Low beam bulb of headlight in which low and high beam bulbs are separated (bulb lock type) |
| [B]: Low beam bulb of headlight in which low and high beam bulbs are separated (socket lock type) |
| [C]: High beam bulb of headlight in which low and high beam bulbs are separated |
| [D]: Bulb in which low and high beams are integrated |
| 2. Headlight bulb socket |

Ballast Removal and Installation


S6JB0B9206003

▲ WARNING

Be sure to read “Precautions for Discharge Headlight Service (If Equipped)” carefully before working. Neglecting them may result in personal injury.

Removal

- 1) Check to ensure that lighting switch is at OFF position.
- 2) Disconnect negative (–) cable at battery.
- 3) Remove headlight housing referring to “Headlight Housing Removal and Installation”.
- 4) Remove ballast (1) from headlight housing (2).
- 5) Disconnect connector (3) from ballast.

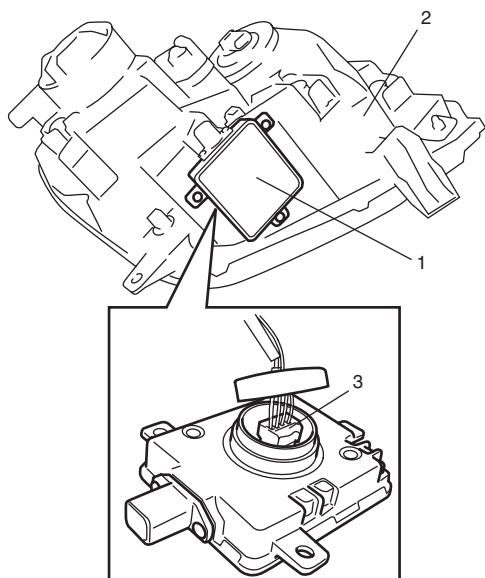

I5JB0A920019-01

Installation

Reverse removal procedure noting the following.

- Connect connectors securely.
- After installation, be sure to inspect and adjust aiming referring to “Headlight Aiming Adjustment with Screen”.

Igniter Removal and Installation


S6JB0B9206004

▲ WARNING

Be sure to read “Precautions for Discharge Headlight Service (If Equipped)” carefully before working. Neglecting them may result in personal injury.


Removal

- 1) Remove ballast referring to “Ballast Removal and Installation”.
- 2) Remove cover (1) from headlight housing by turning it counterclockwise.
- 3) Remove igniter (2) from discharge headlight bulb by turning it counterclockwise.

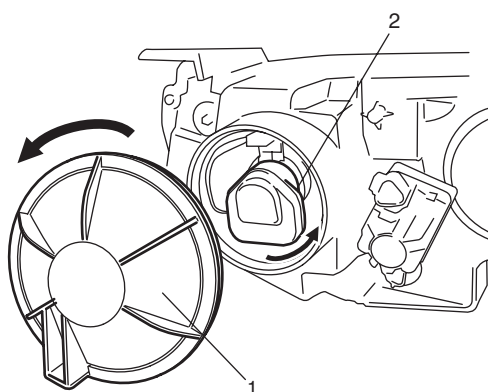

I5JB0A920020-01

- 4) After disconnecting ground wire (1), pull out igniter (2) from headlight housing.

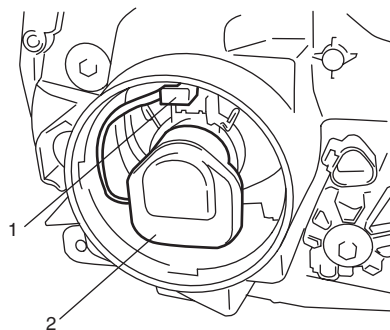

I5JB0A920021-01

Installation

Reverse removal procedure noting the following.

- Connect connectors securely.
- After installation, be sure to inspect and adjust aiming referring to “Headlight Aiming Adjustment with Screen”.

Headlight Aiming Adjustment with Screen

S6JB0B9206005

NOTE

- Unless otherwise obligated by local regulations, adjust headlight aiming according to the following procedure.
 - After replacing headlight housing, be sure to adjust aiming.
 - When inspecting and adjusting headlight with leveling system, make sure to set the leveling switch to "0" position with ignition switch turned ON.
-

1) Make sure the following items.

- Place vehicle on a flat surface in front of blank wall (screen) (1) ahead of headlight surface.

Distance "a"

10 m (32.8 ft.)

- Adjust air pressure of all tires to the specified value respectively.
- Bounce vehicle body up and down by hand to stabilize suspension.
- Carry out aiming with a driver aboard.

Driver's weight

75 kg (165 lb)

2) Check to see if hot spot (high intensity zone) of each low beam axis falls as shown in figure.

NOTE

If the headlights interfere each other and make it hard to see the cut line clearly, cover the headlight on one side. This helps to make aiming adjustment easier.

Hot spot specification

Angle "b": 0.75° (Specification)

Calculated distance "H": Approx. 130 mm (5.15 in.)

3) Align headlight aiming to specification by adjusting aiming gear if it is not set properly.

[E]

[F]

[C]

[E]

[D]

[E]


2. Headlight bulb	9. Turning (for right adjustment)	[A]: Left headlight
3. Cut line (bounding line)	10. Turning (for left adjustment)	[B]: Right headlight
4. Hot spot	11. Headlight housing	[C]: RH steering vehicle shown
5. Aiming gear (for up / down adjustment)	12. Headlight leveling actuator	[D]: LH steering vehicle shown
6. Turning (for up adjustment)	X-X: Horizontal center line of headlight bulbs	[E]: 3 door model
7. Turning (for down adjustment)	A-A: Vertical center line of left headlight bulb	[F]: 5 door model
8. Aiming gear (for right / left adjustment)	B-B: Vertical center line of right headlight bulb	

Headlight Switch (in Lighting Switch) Removal and Installation

S6JB0B9206006


Removal

- 1) Disconnect negative cable at battery.
- 2) Remove steering column hole cover (1).
- 3) Remove steering column covers (2).
Turn steering wheel to access steering column cover screws (3).

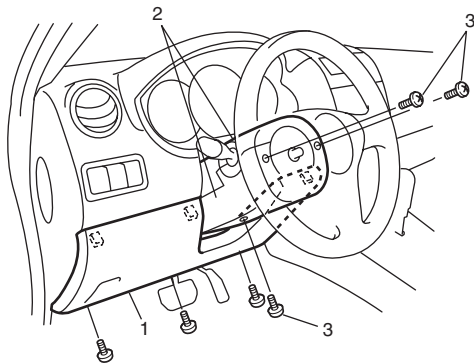

I5JB0A940020-02

- 4) Remove lighting switch (1) from combination switch assembly (2) and disconnect its coupler (3).

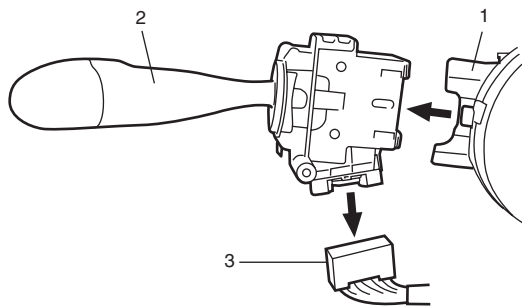

I4RS0B920005-01




Installation

Reverse removal procedure for installation.

Headlight Switch (in Lighting Switch) Inspection

S6JB0B9206007

Check for continuity between terminals at each switch position. If check result is not as specified, replace switch.

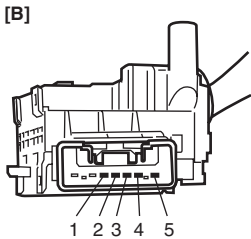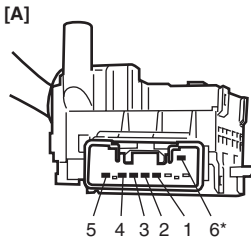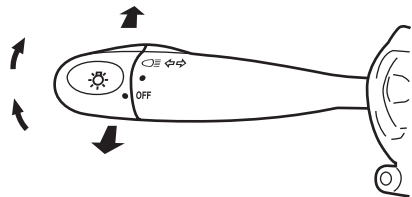

[D]		[C]		5	3	1	2	4	6*
OFF	LOW					○			○
	PASS						○	○	○
	HI						○		○
•	LOW	○	○	○					○
	PASS	○	○				○	○	○
	HI	○	○				○		○
☹	LOW	○	○			○		○	○
	PASS	○	○				○	○	○
	HI	○	○				○	○	○


I6JB0B920003-02

[A]: LHD	[D]: Shaft condition
[B]: RHD	*: If equipped
[C]: Terminal	

Tail Light Relay, Headlight Relay Inspection


S6JB0B9206030

- 1) Remove tail light relay (1), headlight low beam relay (2) and/or headlight high beam relay (3).

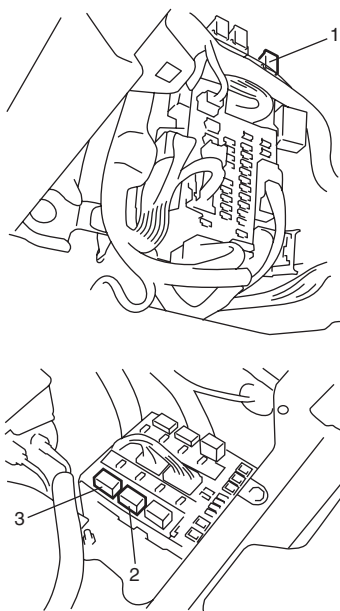

I7JB01920002-01

- 2) Check that there is no continuity between terminal “3” and “4”. If there is continuity, replace relay.
- 3) Connect battery positive (+) terminal to terminal “2” of relay and battery negative (–) terminal to terminal “1” of relay.
- 4) Check continuity between terminal “3” and “4”. If there is no continuity when relay is connected to the battery, replace relay.

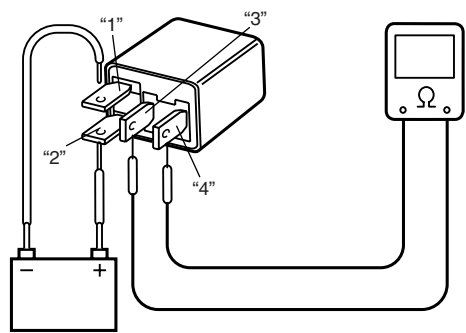

I4RS0A920022-01


Hazard Warning Switch Removal and Installation

S6JB0B9206008

Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Remove audio unit referring to “Audio Unit Removal and Installation in Section 9C”.
- 3) Remove center ventilation louver (1) referring to “Center Ventilation Louver Removal and Installation in Section 7A”.

- 4) Disconnect coupler, and then remove hazard warning switch (2) from center ventilation louver (1).

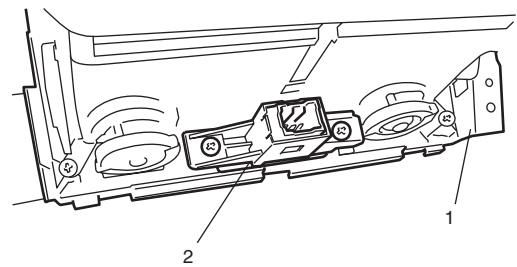

I5JB0A920024-01


Installation

Reverse removal procedure for installation.

Hazard Warning Switch Inspection

S6JB0B9206009

Check for continuity between terminals at each switch position. If check result is not as specified, replace switch.

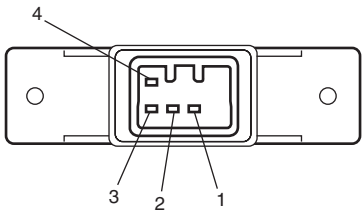

Terminal	1	2	3	4
Switch Position				
OFF				
ON				


I5JB0A920025-01

Brake Light Switch Inspection

S6JB0B9206010

Check brake light switch for continuity between terminals at each switch position.

If check result is not as specified, replace switch.

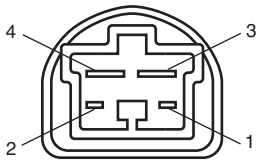

Terminal	1	2	3	4
Shaft condition				
FREE				
PUSH				

I5RS0A920001-01

Turn Signal Light Switch (in Lighting Switch)
Removal and Installation


S6JB0B9206011

For removal and Installation, refer to “Headlight Switch (in Lighting Switch) Removal and Installation”.

Turn Signal Light Switch (in Lighting Switch)
Inspection

S6JB0B9206012

Check for continuity between terminals at each switch position. If check result is not as specified, replace switch.

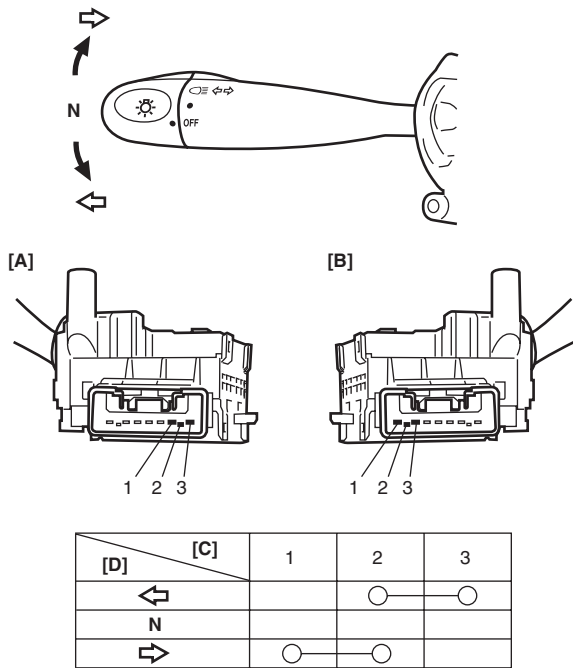

I5JB0D920018-01


[A]: LHD
[B]: RHD
[C]: Terminal
[D]: Switch position

Turn Signal and Hazard Warning Relay Removal
and Installation

S6JB0B9206013

Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Remove turn signal and hazard warning relay (1) from junction block (2).

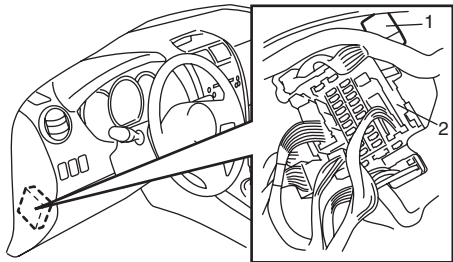

I5JB0A920026-01


Installation

Reverse removal procedure for installation.

Turn Signal and Hazard Warning Relay
Inspection

S6JB0B9206014

- 1) Remove turn signal and hazard warning relay (1) from junction block (2).
- 2) Connect connector to turn signal and hazard warning relay.
- 3) Turn ignition switch to ON position.
- 4) Check turn signal and hazard warning relay for operation.
 - Check that left side turn signal lights flash when 5 terminals of turn signal and hazard warning relay and vehicle body ground are connected using service wire (3).
 - Check that right side turn signal lights flash when 6 terminals of turn signal and hazard warning relay and vehicle body ground are connected using service wire.
 - Check that left and side turn signal lights flash when 8 terminals of turn signal and hazard warning relay and vehicle body ground are connected using service wire. If turn signal lights do not flash, check power supply and ground circuits of turn signal and hazard warning relay.

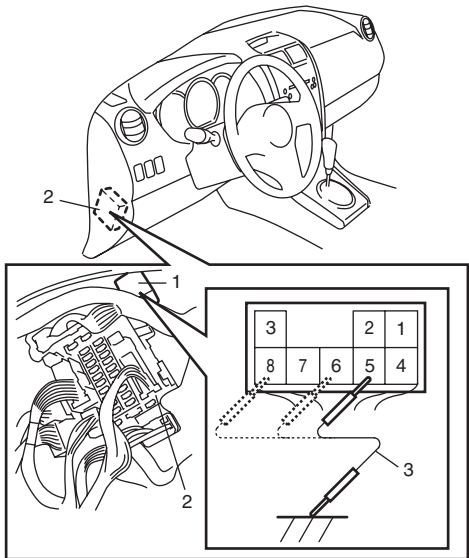


I5JB0A920027-01

License Light Assembly Removal and Installation

S6JB0B9206015

Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Disconnect coupler (1) from license light (2).
- 3) Push locking part to arrow direction, and then remove license light (2).

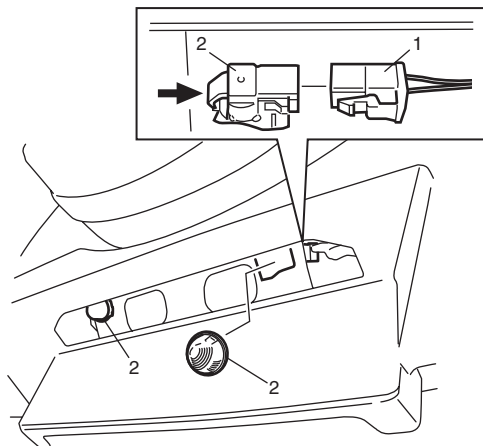

I5JB0A920028-01

Installation


Reverse removal procedure for installation.

Front Fog Light Assembly Removal and Installation (If Equipped)

S6JB0B9206016

Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Remove front bumper. Refer to “Front Bumper Components in Section 9K”.
- 3) Disconnect coupler (1) from fog light (2).
- 4) Remove fog light screws (3), and remove front fog light assembly (2).

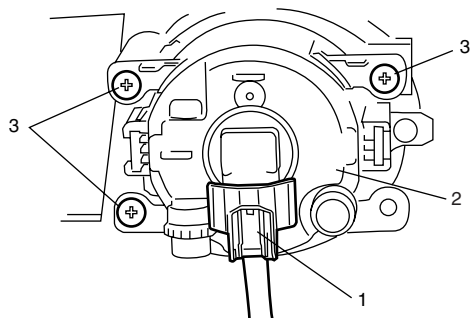

I4RS0A920019-01

Installation

Reverse removal procedure for installation nothing the following:

- After installing, adjust aiming referring to “Front Fog Light Aiming Adjustment with Screen (If Equipped)”.


Front Fog Light Bulb Replacement (If Equipped)

S6JB0B9206017

⚠ WARNING

- To avoid danger of being burned, don't touch when the bulb is hot.
- Don't touch glass surface of bulb to avoid deteriorate as the case may be unclear when bulb light on at dirty condition.

- 1) Remove front bumper referring to “Front Bumper Components in Section 9K”.
- 2) Remove fog light bulb (1) as shown.

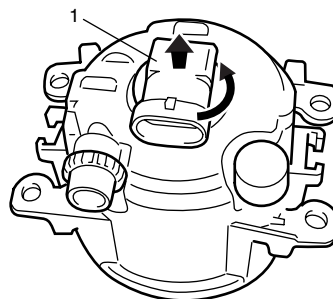

I4RS0A920020-01

- 3) Replace fog light bulb and assemble all removed parts.


Front Fog Light Switch Inspection (If Equipped)

S6JB0B9206018

NOTE

Front fog lights light up only when headlight switch is in HEADLIGHT position (low or high beams) or SMALL position. Front fog lights turn OFF automatically when headlight switch is turned to OFF position. If front fog light switch holds ON position, front fog lights turn ON automatically when headlight switch is tuned to HEADLIGHT position (low or high beams) or SMALL position again.

Check for continuity between terminals at each switch position. If check result is not as specified, replace switch.

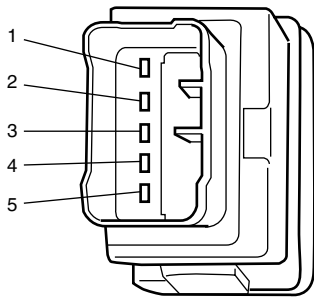


Terminal	2	3	1	5	4
Switch Position					
OFF					
ON (PUSH IN)					

I4RS0A920021-01

Front Fog Light Relay Inspection (If Equipped)



S6JB0B9206019

- 1) Disconnect negative (–) cable from battery.
- 2) Remove front fog light relay (included in integration relay) (1) from main fuse box (2).

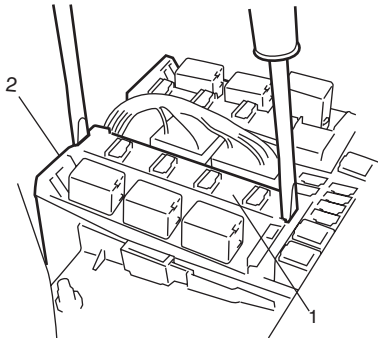

I5JB0A920029-01

- 3) Check that there is no continuity between terminals “a” and “b”.
If there is continuity, replace relay.
Check that there is continuity between terminals “a” and “b” when a 12 V battery is connected to terminal “c” and “d”.
If malfunction is found, replace integration relay.

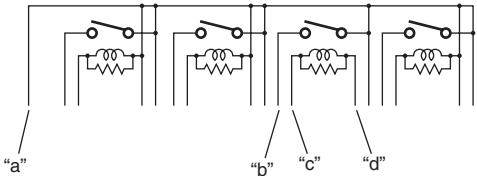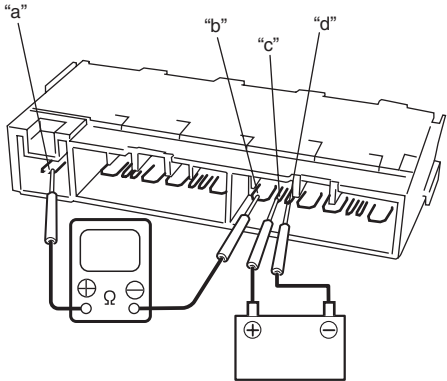

I5JB0A920030-03





Front Fog Light Aiming Adjustment with Screen
(If Equipped)

S6JB0B9206020

Basic Aiming

NOTE

- Unless otherwise obligated by local regulations, adjust front fog light aiming according to the following procedure.
- An example in case that the light-to-wall distance 10 m is shown in the illustration. The beam descending distance “H” is calculated when “a” is 10 m with the specification angle “b” (1.75°).

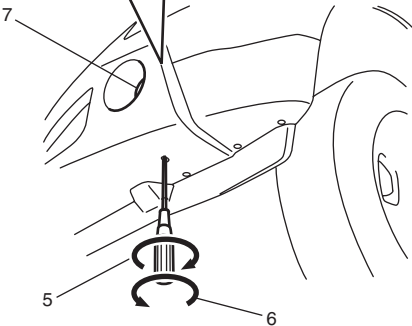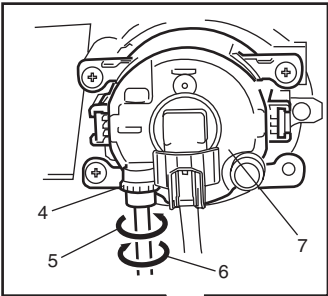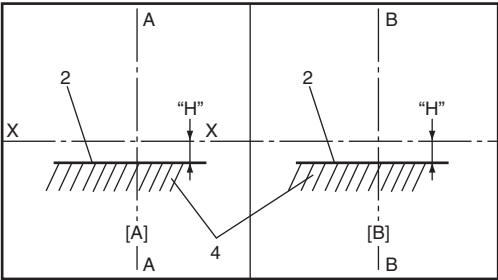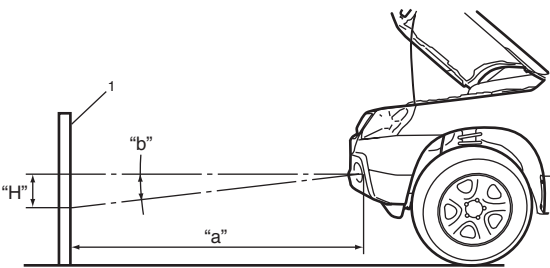

I5JB0A920031-03

**Distance between screen and front fog light
“a”: 10 m (32.8 ft.)**

- Adjust air pressure of all tired to the specified value respectively.
- Bounce vehicle body up and down by hand to stabilize suspension.
- Carry out aiming with a driver aboard.

**Driver's weight
75 kg (165 lb)**

- 2) Check to see if hot spot (high intensity zone) of each front fog light axis falls as shown in the figure.

NOTE

If the fog lights interfere each other and make it hard to see the cut line clearly, cover the fog light on one side. This helps to make aiming adjustment easier.

Hot spot specification

Angle “b”: 1.75° (Specification)

Calculated distance “H”: Approx. 300 mm (11.81 in.)

- 3) If it is not set properly, align front fog light to specification by rotating aiming gear.


2. Bounding line
3. Hot spot
4. Aiming gear (for up / down adjustment)
5. Turning (for up adjustment)
6. Turning (for down adjustment)
7. Front fog light assembly
X-X: Horizontal center line of front fog light bulb
A-A: Vertical center line of left front fog light bulb
B-B: Vertical center line of right front fog light bulb
[A]: Left front fog light
[B]: Right front fog light

Headlight Manual Leveling Switch (If Equipped)
Inspection

S6JB0B9206021

Check for continuity between terminals at each switch position.

If check result is not as specified, replace switch.

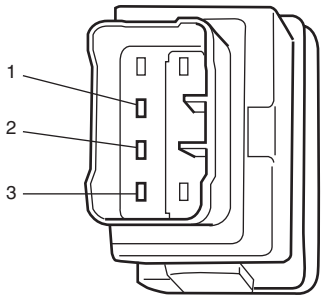

Switch Position	Terminal	Resistance (Ω)
-	1 and 2	4370 - 4830
0	1 and 3	646 - 714
	2 and 3	3724 - 4116
1	1 and 3	1292 - 1428
	2 and 3	3078 - 3402
2	1 and 3	1938 - 2142
	2 and 3	2432 - 2688
3	1 and 3	2584 - 2856
	2 and 3	1786 - 1974
4	1 and 3	3230 - 3570
	2 and 3	1140 - 1260


I4RS0B920012-01

Headlight Leveling Actuator Inspection (If Equipped)

S6JB0B9206022

Vehicle Equipped with Headlight Auto Leveling System

- 1) Make sure all couplers of headlight and leveling actuator are connected securely.
- 2) Park vehicle in front of blank wall (screen).
- 3) Turn ignition switch to ON position.
- 4) Perform "Headlight Leveling Warning Light Check".
- 5) Connect service wire (2) to terminals of diagnosis connector (1).
- 6) Perform Steps a) through c) described below within 20 seconds after Step 5).
 - a) Turn lighting switch (3) to "HEAD" position and then turn lighting switch to OFF position.
 - b) Repeat Step a) 2 times.
 - c) Turn lighting switch (3) to "HEAD" position.

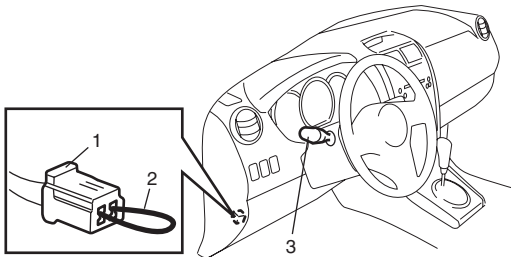

I5JB0A920032-01

- 7) Check that optical axes of headlights reflected on blank wall (screen) change. If not, go to "Headlight Auto Leveling System Symptom Diagnosis (If Equipped)".

Vehicle Equipped with Manual Leveling Headlight System


- 1) Make sure all couplers of headlight and leveling actuator are connected securely.
- 2) Park vehicle in front of blank wall (screen).
- 3) Turn ignition switch to ON position.
- 4) Turn lighting switch to "HEAD" position.
- 5) Move manual leveling headlight switch and check that optical axes of headlights reflected on blank wall (screen) change then. Also check that leveling actuator sounds slightly while moving leveling switch. If optical axes do not change, go to "Headlight Manual Leveling System Symptom Diagnosis (If Equipped)".

Rear Fog Light Switch Inspection (If Equipped)
S6JB0B9206023

NOTE

- Rear fog light switch can be turned to ON position only when headlight switch is turned to HEADLIGHT position (low or high beams).
- Rear fog light switch turns OFF automatically when headlight switch is turned to OFF position.

Check for continuity between terminals at each switch position.
If check result is not as specified, replace switch.

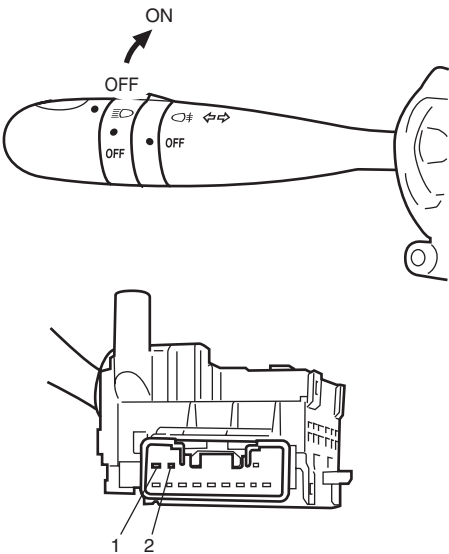

Terminal	1	2
Shaft condition		
OFF		
ON	○	○

I4RS0B920013-01



Height Sensor Removal and Installation (If Equipped)
S6JB0B9206024

Removal

⚠ CAUTION

- Do not remove bracket (4) and link (3) from height sensor (2). Removal will spoil its original function. If faulty condition is found, replace it with new one in a set.
- If height sensor was dropped from a height of 30 cm (0.9 ft) or more, replace it with new one.

- 1) Disconnect negative (–) cable at battery.
- 2) Disconnect height sensor connector (1) from height sensor (2).
- 3) Remove front height sensor with its bracket (4) from suspension frame (6) and lower arm (5).

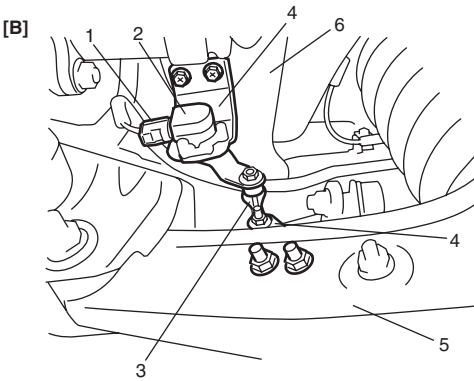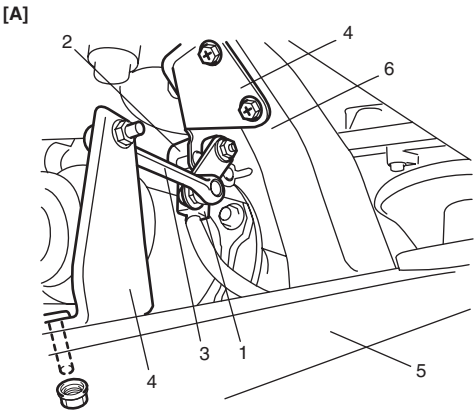

I5JB0A920033-02

[A]: Front	[B]: Rear
------------	-----------

Installation



For installation, reverse removal procedure noting the following.

- Check that bracket and link of height sensor are not deformed.
- Tighten height sensor bolts and nuts to specified torque.

Tightening torque

Height sensor bolt (a): 10 N·m (1.0 kgf-m, 7.5 lb-ft)

Height sensor nut (b): 10 N·m (1.0 kgf-m, 7.5 lb-ft)

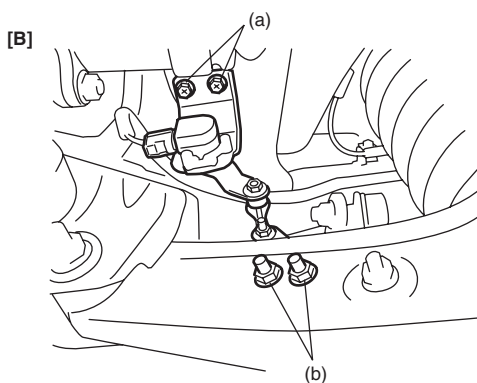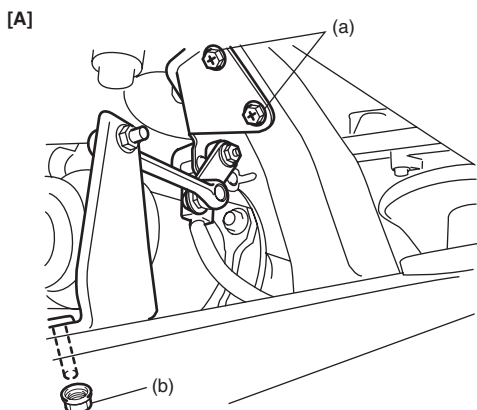

I5JB0A920040-01

[A]: Front

[B]: Rear

- Connect connector securely.
- After installation, initialize auto leveling headlight system referring to "Initialization of Auto Leveling Headlight System".

Height Sensor and Its Circuit Inspection (If Equipped)

S6JB0B9206025


- 1) Remove front or rear height sensor from vehicle referring to "Height Sensor Removal and Installation (If Equipped)".
- 2) Connect connector to height sensor.
- 3) Vary position of height sensor link (1) and measure voltage between terminals of headlight auto leveling control module (4) as described below.
 - For front height sensor
Between "G51-20" and "G51-22" terminals of headlight leveling control module.
 - For rear height sensor
Between "G51-19" and "G51-21" terminals of headlight leveling control module.

If check result is not as specified, perform inspections of power supply, ground and signal circuits of front or rear height sensor which is described under "Inspection of Headlight Leveling Control Module and Its Circuit (Vehicle Equipped with Auto Leveling Headlight System)". If circuits are OK, replace height sensor.

Height sensor output voltage

Full bound position (2): about 0.5 V

Full rebound position (3): about 4.5 V

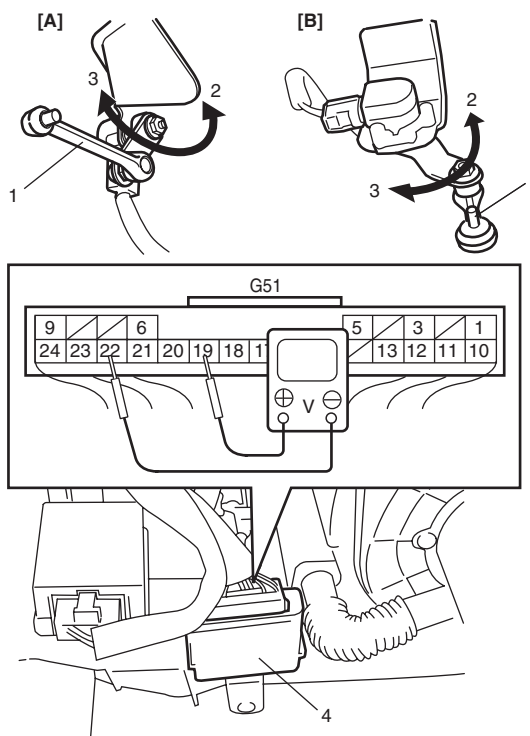

I5JB0A920034-02

[A]: Front


[B]: Rear

Leveling Control Module Removal and Installation (If Equipped)

S6JB0B9206026

Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Disconnect connector (1) from headlight leveling control module (2).
- 3) Remove headlight leveling control module with its bracket from heater unit (3).

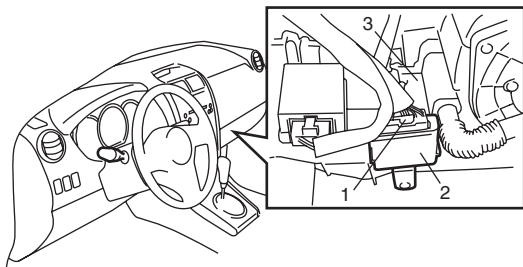

I5JB0A920035-01

Installation

For installation, reverse removal procedure noting the following.

- Connect connector securely.
- After replacing headlight leveling control module with new one, initialize auto leveling headlight system referring to “Initialization of Auto Leveling Headlight System”.

Initialization of Auto Leveling Headlight System


S6JB0B9206027

Initialization of the auto leveling headlight system is to make the headlight leveling control module learn signals which are fed from the height sensors when the vehicle is at the standard height. Standard height means the height of the vehicle with a driver but without load in it. Initialization of the auto leveling headlight system is required when any of the following works has been performed.

- Replacement of headlight leveling control module
- Removal of front and/or rear height sensor link from lower arm
- Removal of front and/or rear height sensor from suspension frame
- Replacement of front and/or rear height sensor


Without initialization of the auto leveling headlight system, it is not possible to obtain its proper function. Also, if the auto leveling headlight system is not initialized after replacing the headlight leveling control module, the headlight leveling warning light in the combination meter flashes.

- 1) Observe the following instructions.
 - Park vehicle on level ground.
 - Adjust air pressure of all tires to the specified value respectively.
 - Bounce vehicle body up and down by hand to stabilize suspension.
- 2) Turn ignition switch to ON position.
- 3) Perform “Headlight Leveling Warning Light Check”.
- 4) Connect service wire (2) to terminals of diagnosis connector (1).
- 5) Perform Steps a) through b) described below within 20 seconds after Step 4).
 - a) Turn lighting switch (3) to “HEAD” position and then turn lighting switch to OFF position.
 - b) Repeat Step a) 2 times.

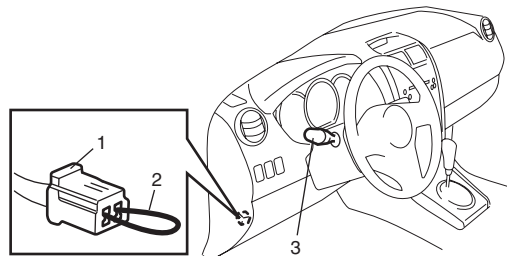

I5JB0A920032-01

- 6) Confirm that headlight leveling warning light flashes 3 times and turns off, which indicates that system initialization was completed properly. If it does not turn off after flashing 3 times, it means initialization was not successful. In such case, turn off ignition switch and perform Steps 1) to 6) again.

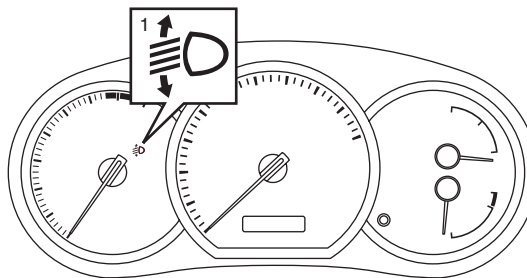


I5JB0A920012-02

Auto-On Headlight Sensor Inspection (If Equipped)

S6JB0B9206029

- 1) Disconnect negative (–) cable at battery.
- 2) Remove auto-on headlight sensor (1) located on the passenger side of the dashboard (2). Be careful not to damage the sensor (1) and dashboard by using rag (3).

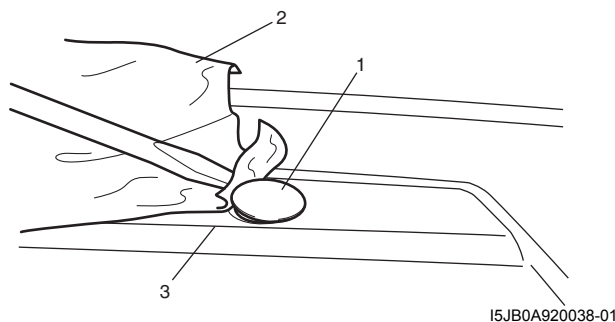


- 3) Measure voltage between white wire terminal and black wire terminal at the following condition.
If measured voltage is out of specification, replace sensor.

Auto-on headlight sensor voltage specifications

Cover the sensor lens with hand: 0.4 V

Light the sensor lens with incandescent light 100

W: 3 – 4.5 V

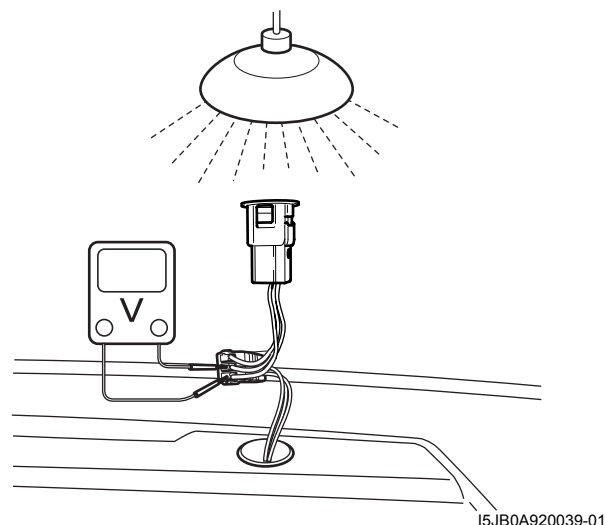

Specifications

Tightening Torque Specifications

S6JB0B9207001

Fastening part	Tightening torque			Note
	N·m	kgf-m	lb-ft	
Height sensor bolt	10	1.0	7.5	☞
Height sensor nut	10	1.0	7.5	☞

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Instrumentation / Driver Info. / Horn

Precautions

Precautions in Diagnosing Troubles for Combination Meter

S6JB0B9300001

Combination meter uses signals (information) from each control module by CAN communication to control speedometer, tachometer, fuel meter, engine coolant temp meter, warning light and indicator light (other than air bag warning light, headlight leveling warning light, rear fog light and turn signal indicator light). Therefore, check that no DTC is detected in each module before performing combination meter symptom diagnosis. If any DTC is detected, correct trouble indicated by that DTC troubleshooting first.


General Description

CAN Communication System Description

S6JB0B9301001

Refer to “CAN Communication System Description in Section 1A” for CAN communication system description. Combination meter communicates control data with each control module as follows.

Combination Meter Transmission Data

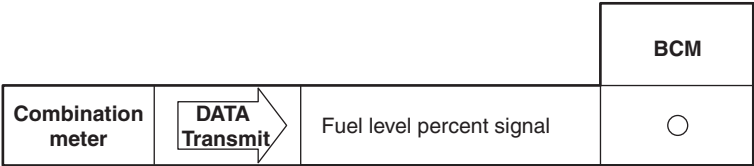

I6JB0B930001-03

Combination Meter Reception Data

			ECM	TCM (A/T model)	BCM	ABS/ESP® Control Module	4WD Control Module (if equipped)	Keyless Start Control Module (if equipped)
Combination Meter	DATA Receive	Engine revolution speed signal	○					
		Immobilizer indicator light control signal	○					
		Vehicle speed signal	○					
		Engine coolant temperature signal	○					
		Fuel level signal	○					
		"CRUSE" and "SET" indicator light control signal	○					
		Malfunction indicator lamp (MIL) control signal	○	○				
		Transmission warning light control signal		○				
		Transmission range sensor signal		○				
		Automatic transmission mode indicator light control signal			○			
		Diagnostic trouble code (DTC)			○			
		Brake fluid level switch signal (brake warning light control signal)			○			
		Driver side seat belt buckle switch signal (seat belt reminder light control signal)			○			
		Charging system warning light signal (charge warning light control signal)			○			
		Engine oil pressure switch signal (oil pressure warning light control signal)			○			
		Parking brake switch signal (brake warning light control signal)			○			
		Lighting switch signal			○			
		Door switch signal (open door warning light control signal)			○			
		Electric load signal			○			
		ABS warning light control signal				○		
		EBD warning light control signal (brake warning light control signal)				○		
		ESP® status signal				○ *		
		4WD mode indicator control signal					○	
		Key indicator light control signal						○

I6JB0B930002-02

NOTE


*: ESP® model

Auto Volume Control System Description (If Equipped)

S6JB0B9301002

Function of auto volume control system is to vary sound volume according to changes of vehicle speed. How much sound volume varies depends on selected level.


Reference Correlation Chart of Vehicle Speed and Sound Volume

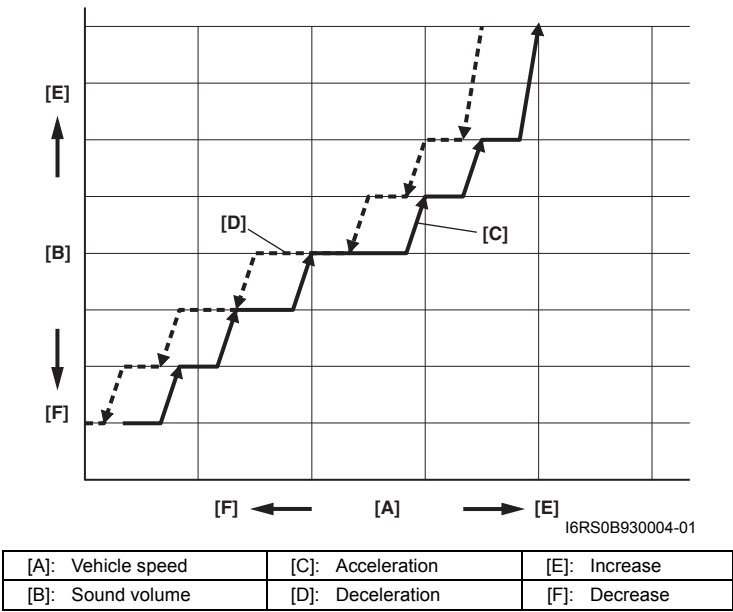

Schematic and Routing Diagram

Combination Meter Circuit Diagram

S6JB0B9302001

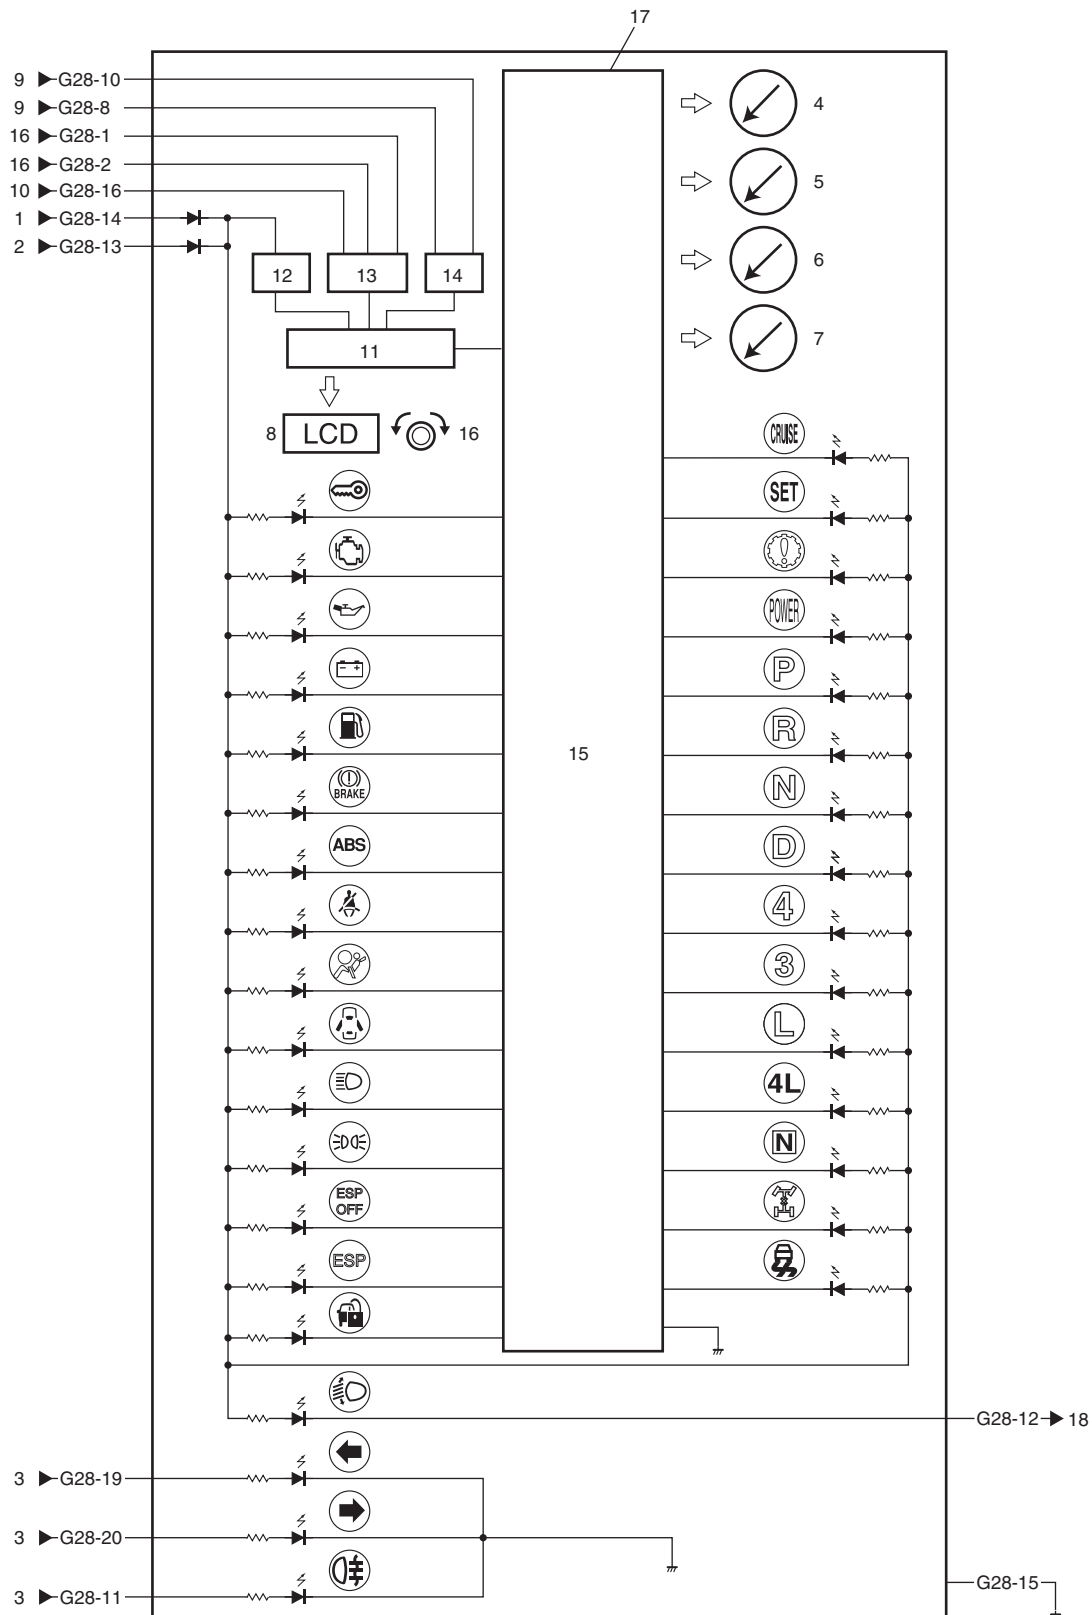


I6JB0B930003-02

1. Main fuse	6. Fuel meter	11. CPU	16. Illumination control switch (Odometer / Tripmeter selector) (if equipped)
2. METER fuse	7. ECT meter	12. Power supply	17. Combination meter

9C-5 Instrumentation / Driver Info. / Horn:

3. Combination switch	8. ODO-TRIP	13. Interface circuit	18. Headlight auto leveling control module (if equipped)
4. Tachometer	9. Junction connector	14. CAN driver	
5. Speedometer	10. SDM	15. Stepper motor and LED output driver	

Terminal arrangement of coupler viewed from combination meter side

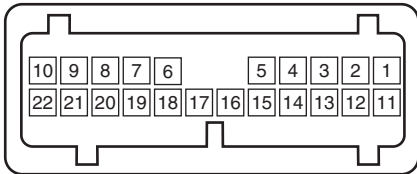


I5JB0A930002-01

Terminal	Circuit	Terminal	Circuit
G28-1	To audio unit (Illumination control output signal) (if equipped)	G28-12	To headlight auto leveling control module (if equipped)
G28-2	To information display (Illumination control output signal) (if equipped)	G28-13	Power source
G28-3	—	G28-14	Backup power source
G28-4	—	G28-15	GND
G28-5	—	G28-16	To SDM (Air bag warning light signal)
G28-6	—	G28-17	—
G28-7	—	G28-18	—
G28-8	CAN communication line (Active Low Signal)	G28-19	To turn signal light switch (turn L)
G28-9	—	G28-20	To turn signal light switch (turn R)
G28-10	CAN communication line (Active High Signal)	G28-21	—
G28-11	To rear fog light switch (if equipped)	G28-22	—


Component Location

Audio System Component Location

S6JB0B9303001

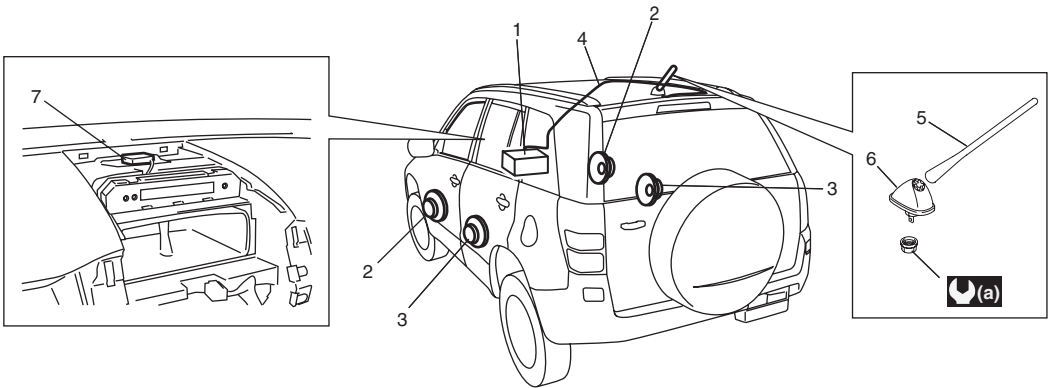

I5JB0A930003-01

1. Radio or navigation assembly	4. Antenna feeder	7. GPS antenna (if equipped)
2. Front speaker	5. Antenna	 (a) : 10 N·m (1.0 kgf-m, 7.5 lb-ft)
3. Rear speaker	6. Antenna base	

Diagnostic Information and Procedures

Speedometer Symptom Diagnosis

S6JB0B9304001

Condition	Possible cause	Correction / Reference Item
Speedometer shows no operation or incorrect operation	Circuit fuse blown	<i>Replace fuse and check for short circuit.</i>
	Data (information) can not be received by CAN communication	<i>Check ECM for DTC referring to "DTC Check in Section 1A".</i>
	Rear wheel speed sensor or sensor ring faulty	<i>Check rear wheel speed sensor or sensor ring referring to "Rear Wheel Speed Sensor On-Vehicle Inspection in Section 4E" or "Rear Wheel Encoder On-Vehicle Inspection in Section 4E".</i>
	Wiring or ground faulty	<i>Repair circuit.</i>
	Combination meter faulty	<i>Replace combination meter.</i>
	ECM faulty	<i>Replace after making sure that none of above parts is faulty.</i>

Tachometer Symptom Diagnosis

S6JB0B9304002

Condition	Possible cause	Correction / Reference Item
Tachometer shows no operation or incorrect operation	Circuit fuse blown	<i>Replace fuse and check for short circuit.</i>
	Data (information) can not be received by CAN communication	<i>Check ECM for DTC referring to "DTC Check in Section 1A".</i>
	Wiring or ground faulty	<i>Repair circuit.</i>
	Combination meter faulty	<i>Replace combination meter.</i>
	ECM faulty	<i>Replace after making sure that none of above parts is faulty.</i>

Engine Coolant Temperature (ECT) Meter Symptom Diagnosis

S6JB0B9304003

Condition	Possible cause	Correction / Reference Item
Engine coolant temperature (ECT) meter shows no operation or incorrect operation	Circuit fuse blown	<i>Replace fuse and check for short circuit.</i>
	Data (information) can not be received by CAN communication	<i>Check ECM for DTC referring to "DTC Check in Section 1A".</i>
	ECT sensor faulty	<i>Check ECT sensor referring to "Engine Coolant Temperature (ECT) Sensor Inspection in Section 1C".</i>
	Wiring or ground faulty	<i>Repair circuit.</i>
	Combination meter faulty	<i>Replace combination meter.</i>
	ECM faulty	<i>Replace after making sure that none of above parts is faulty.</i>

Fuel Meter Symptom Diagnosis

S6JB0B9304004

Condition	Possible cause	Correction / Reference Item
Fuel meter shows no operation or incorrect operation	Circuit fuse blown	<i>Replace fuse and check for short circuit.</i>
	Data (information) can not be received by CAN communication	<i>Check ECM for DTC referring to "DTC Check in Section 1A".</i>
	Fuel level sensor faulty	<i>Check fuel level sensor referring to "Fuel Level Sensor Inspection".</i>
	Wiring or ground faulty	<i>Repair circuit.</i>
	Combination meter faulty	<i>Replace combination meter.</i>
	ECM faulty	<i>Replace after making sure that none of above parts is faulty.</i>

Low Fuel Warning Light Symptom Diagnosis

NOTE

Confirm that fuel meter is in good condition before referring to the following possible causes.

- When fuel level meter circuit is open or short circuit, fuel level meter indicates empty even if fuel tank does not empty.
- The low fuel warning light comes ON when fuel level is lower than specification below.

Low fuel warning light operation:

Low fuel warning light operation:	Fuel amount:	Resistance of fuel level sensor:
ON	Approx. 8.3 liter (3 door model) Approx. 9.9 liter (5 door model)	250.8 – 255.8 Ω

Condition	Possible cause	Correction / Reference Item
Low fuel warning light does not come ON when fuel level is lower than specification	Circuit fuse blown	Replace fuse and check for short circuit.
	Data (information) can not be received by CAN communication	Check ECM for DTC referring to "DTC Check in Section 1A".
	Fuel level sensor faulty	Check fuel level sensor referring to "Fuel Level Sensor Inspection".
	Wiring or ground faulty	Repair circuit.
	Combination meter faulty	Replace combination meter.
	ECM faulty	Replace after making sure that none of above parts is faulty.
Low fuel warning light comes ON steady	Low fuel	Refill fuel.
	Data (information) can not be received by CAN communication	Check ECM for DTC referring to "DTC Check in Section 1A".
	Fuel level sensor faulty	Check fuel level sensor referring to "Fuel Level Sensor Inspection".
	Combination meter faulty	Replace combination meter.
	ECM faulty	Replace after making sure that none of above parts is faulty.

Oil Pressure Warning Light Symptom Diagnosis

Condition	Possible cause	Correction / Reference Item
Oil pressure warning light does not light up when ignition switch is turned to ON position at engine off	Circuit fuse blown	Replace fuse and check for short circuit.
	Data (information) can not be received by CAN communication	Check BCM for DTC referring to "DTC Check in Section 10B".
	Oil pressure switch faulty	Check oil pressure switch referring to "Oil Pressure Switch Inspection".
	Wiring or ground faulty	Repair circuit.
	Combination meter faulty	Replace combination meter.
	BCM faulty	Replace after making sure that none of above parts is faulty.
Oil pressure warning light stays ON	Data (information) can not be received by CAN communication	Check BCM for DTC referring to "DTC Check in Section 10B".
	Oil pressure switch faulty	Check oil pressure switch referring to "Oil Pressure Switch Inspection".
	Wiring or ground faulty	Repair circuit.
	Combination meter faulty	Replace combination meter.
	BCM faulty	Replace after making sure that none of above parts is faulty.

Brake and Parking Brake Warning Light Symptom Diagnosis

S6JB0B9304007

Condition	Possible cause	Correction / Reference Item
Brake warning light does not light up when brake fluid level is low or parking brake is pulled up or for 2 seconds after turning ON ignition switch	Circuit fuse blown	Replace fuse and check for short circuit.
	Data (information) can not be received by CAN communication	Check BCM for DTC referring to "DTC Check in Section 10B".
	Brake fluid level switch faulty	Check brake fluid level switch referring to "Brake Fluid Level Switch Inspection".
	Parking brake switch faulty	Check parking brake switch referring to "Parking Brake Switch Inspection".
	ABS system faulty	Refer to "ABS Check in Section 4E".
	Wiring or ground faulty	Repair circuit.
	Combination meter faulty	Replace combination meter.
	BCM faulty	Replace after making sure that none of above parts is faulty.
Brake warning light stays ON	Data (information) can not be received by CAN communication	Check BCM for DTC referring to "DTC Check in Section 10B".
	Brake fluid level switch faulty	Check brake fluid level switch referring to "Brake Fluid Level Switch Inspection".
	Parking brake switch faulty	Check parking brake switch referring to "Parking Brake Switch Inspection".
	EBD system faulty	Refer to "EBD Warning Light (Brake Warning Light) Check in Section 4E".
	Wiring or ground faulty	Repair circuit.
	Combination meter faulty	Replace combination meter.
	BCM faulty	Replace after making sure that none of above parts is faulty.

Seat Belt Reminder Light Symptom Diagnosis (If Equipped)

S6JB0B9304008

Condition	Possible cause	Correction / Reference Item
Seat belt reminder light does not light up	Circuit fuse blown	Replace fuse and check for short circuit.
	Data (information) can not be received by CAN communication	Check BCM for DTC referring to "DTC Check in Section 10B".
	Seat belt switch faulty	Check seat belt switch referring to "Front Seat Belt Inspection in Section 8A".
	Wiring or ground faulty	Repair circuit.
	Combination meter faulty	Replace combination meter.
	BCM faulty	Replace after making sure that none of above parts is faulty.
Seat belt reminder light stays ON	Data (information) can not be received by CAN communication	Check BCM for DTC referring to "DTC Check in Section 10B".
	Seat belt switch faulty	Check seat belt switch referring to "Front Seat Belt Inspection in Section 8A".
	Wiring or ground faulty	Repair circuit.
	Combination meter faulty	Replace combination meter.
	BCM faulty	Replace after making sure that none of above parts is faulty.

Illumination Indicator Symptom Diagnosis

S6JB0B9304009

Condition	Possible cause	Correction / Reference Item
<i>Illumination indicator does not light up</i>	Circuit fuse blown	<i>Replace fuse and check for short circuit.</i>
	Data (information) can not be received by CAN communication	<i>Check BCM for DTC referring to "DTC Check in Section 10B".</i>
	Lighting switch faulty	<i>Check lighting switch referring to "Headlight Switch (in Lighting Switch) Inspection in Section 9B".</i>
	Wiring or ground faulty	<i>Repair circuit.</i>
	Combination meter faulty	<i>Replace combination meter.</i>
	BCM faulty	<i>Replace after making sure that none of above parts is faulty.</i>
<i>Illumination indicator stays ON</i>	Lighting switch faulty	<i>Check lighting switch referring to "Headlight Switch (in Lighting Switch) Inspection in Section 9B".</i>
	Data (information) can not be received by CAN communication	<i>Check BCM for DTC referring to "DTC Check in Section 10B".</i>
	Wiring or ground faulty	<i>Repair circuit.</i>
	Combination meter faulty	<i>Replace combination meter.</i>
	BCM faulty	<i>Replace after making sure that none of above parts is faulty.</i>

Headlight Auto Leveling Indicator Symptom Diagnosis (If Equipped)

S6JB0B9304010

Condition	Possible cause	Correction / Reference Item
<i>Headlight auto leveling indicator does not light up</i>	Circuit fuse blown	<i>Replace fuse and check for short circuit.</i>
	Headlight auto leveling control module faulty	<i>Check headlight auto leveling control module referring to "Inspection of Headlight Leveling Control Module and Its Circuit (Vehicle Equipped with Auto Leveling Headlight System) in Section 9B".</i>
	Wiring or ground faulty	<i>Repair circuit.</i>
	Combination meter faulty	<i>Replace combination meter.</i>
<i>Headlight auto leveling indicator stays ON</i>	Headlight auto leveling control module faulty	<i>Check headlight auto leveling control module referring to "Inspection of Headlight Leveling Control Module and Its Circuit (Vehicle Equipped with Auto Leveling Headlight System) in Section 9B".</i>
	Wiring or ground faulty	<i>Repair circuit.</i>
	Combination meter faulty	<i>Replace combination meter.</i>

A/T Power Mode Indicator Symptom Diagnosis (A/T Model)

S6JB0B9304011

Condition	Possible cause	Correction / Reference Item
A/T power mode indicator does not light up	Circuit fuse blown	Replace fuse and check for short circuit.
	Data (information) can not be received by CAN communication	Check BCM for DTC referring to "DTC Check in Section 10B".
	A/T power mode switch faulty	Check mode select switch referring to "Mode Select Switch Inspection in Section 5A".
	Wiring or ground faulty	Repair circuit.
	Combination meter faulty	Replace combination meter.
	BCM faulty	Replace after making sure that none of above parts is faulty.
A/T power mode indicator stays ON	Data (information) can not be received by CAN communication	Check BCM for DTC referring to "DTC Check in Section 10B".
	A/T power mode switch faulty	Check mode select switch referring to "Mode Select Switch Inspection in Section 5A".
	Wiring or ground faulty	Repair circuit.
	Combination meter faulty	Replace combination meter.
	BCM faulty	Replace after making sure that none of above parts is faulty.

A/T Shift Position Indicator Symptom Diagnosis (A/T Model)

S6JB0B9304012

Condition	Possible cause	Correction / Reference Item
All A/T shift position indicator does not light up	Circuit fuse blown	Replace fuse and check for short circuit.
	Data (information) can not be received by CAN communication	Check TCM for DTC referring to "DTC Check in Section 5A".
	Transmission range sensor (shift switch) faulty	Check transmission range sensor referring to "Transmission Range Sensor Inspection and Adjustment in Section 5A".
	Wiring or ground faulty	Repair circuit.
	Combination meter faulty	Replace combination meter.
	TCM faulty	Replace after making sure that none of above parts is faulty.

Charge Warning Light Symptom Diagnosis

S6JB0B9304013

Condition	Possible cause	Correction / Reference Item
Charge warning light does not come ON	Circuit fuse blown	Replace fuse and check for short circuit.
	Data (information) can not be received by CAN communication	Check BCM for DTC referring to "DTC Check in Section 10B".
	Wiring or ground faulty	Repair circuit.
	Combination meter faulty	Replace combination meter.
	BCM faulty	Replace after making sure that none of above parts is faulty.
Charge warning light stay ON	Charging system faulty	Check charging system.
	Data (information) can not be received by CAN communication	Check BCM for DTC referring to "DTC Check in Section 10B".
	Wiring or ground faulty	Repair circuit.
	Combination meter faulty	Replace combination meter.
	BCM faulty	Replace after making sure that none of above parts is faulty.

Main Beam (High Beam) Indicator Symptom Diagnosis

Condition	Possible cause	Correction / Reference Item
Main beam (high beam) indicator does not come ON	Circuit fuse blown	Replace fuse and check for short circuit.
	Data (information) can not be received by CAN communication	Check BCM for DTC referring to "DTC Check in Section 10B".
	Relay faulty	Replace relay
	Combination switch faulty	Check combination switch referring to "Headlight Switch (in Lighting Switch) Inspection in Section 9B".
	Wiring or ground faulty	Repair circuit.
	Combination meter faulty	Replace combination meter.
	BCM faulty	Replace after making sure that none of above parts is faulty.
Main beam (high beam) indicator stay ON	Data (information) can not be received by CAN communication	Check BCM for DTC referring to "DTC Check in Section 10B".
	Combination switch faulty	Check combination switch referring to "Headlight Switch (in Lighting Switch) Inspection in Section 9B".
	Wiring or ground faulty	Repair circuit.
	Combination meter faulty	Replace combination meter.
	BCM faulty	Replace after making sure that none of above parts is faulty.

Warning Buzzer Circuit Symptom Diagnosis**NOTE**

- Use of SUZUKI scan tool makes it easy to check whether a faulty condition is on the input side or output side of BCM. For checking procedure, refer to "Diagnosis Using Output Test Function of SUZUKI Scan Tool" under "Scan Tool Data in Section 10B".
- Check each part in the order from the top of the following list.

Condition	Possible cause	Correction / Reference Item
Warning buzzer shows no sounding	Circuit fuse blown	Replace fuse and check for short circuit.
	Driver side door switch faulty	Check driver side door switch referring to "Door Switch (Front / Rear / Rear End Door) Inspection".
	Lighting switch faulty	Check lighting switch referring to "Headlight Switch (in Lighting Switch) Inspection in Section 9B".
	Key remainder switch faulty	Check key remainder switch referring to "Ignition Switch Inspection".
	Wiring or ground faulty	Repair circuit.
	BCM faulty	Replace after making sure that none of above parts is faulty.

Cigarette Lighter Symptom Diagnosis (If Equipped)

S6JB0B9304016

Condition	Possible cause	Correction / Reference Item
Cigarette lighter shows no operation	Circuit fuse blown	Replace fuse and check for short circuit.
	ACC relay faulty	Replace relay
	Cigarette lighter faulty	Check cigarette lighter.
	Ignition switch faulty	Check ignition switch referring to "Ignition Switch Inspection".
	Wiring or grounding faulty	Repair circuit.

Horn Symptom Diagnosis

S6JB0B9304017

Condition	Possible cause	Correction / Reference Item
Horn does not operate	Circuit fuse blown	Replace fuse and check for short circuit.
	Horn switch faulty	Check horn switch.
	Horn relay faulty	Check horn relay referring to "Horn Relay Inspection".
	Wiring or grounding faulty	Repair circuit.
	Horn faulty	Check horn referring to "Horn Inspection".

Information Display Symptom Diagnosis (If Equipped)

S6JB0B9304018

NOTE

This thermometer indicates the ambient temperature in back of front bumper. Under any one of the following listed conditions, however, even when the ambient temperature goes up, the thermometer display does not rise so as to correct the rise of the ambient temperature caused by the radiant heat of the engine. When the ambient temperature drops, the thermometer reading follows the change in the temperature.

Be sure to bear this in mind when diagnosing trouble.

- The vehicle speed is 30 km/h (18 mph) or lower.
- Vehicle speed signal is faulty.
- The ignition switch is turned on again within 2 hours.

Condition	Possible cause	Correction / Reference Item
No displaying of information display	Circuit fuse Blown	Replace fuse and check for short circuit.
	Wiring or grounding faulty	Repair as necessary.
	Information display unit faulty	Replace unit.
Incorrect thermometer display	Outside air temperature sensor faulty	Check outside air temperature sensor referring to "Outside Air Temperature Sensor Inspection (If Equipped)".
	Vehicle speed signal faulty	Check ECM for DTC referring to "DTC Check in Section 1A".
	Wiring or grounding faulty	Repair as necessary.
	Information display unit faulty	Replace unit.
	BCM faulty	Replace after making sure that none of above parts is faulty.
Display does not change at -30 °C	Outside air temperature is -30 °C (-22 °F) or less	—
	Outside air temperature sensor faulty	Check outside air temperature sensor referring to "Outside Air Temperature Sensor Inspection (If Equipped)".
	Information display unit faulty	Replace unit.
	BCM faulty	Replace after making sure that none of above parts is faulty.

Condition	Possible cause	Correction / Reference Item
Display does not change at 50 °C	Outside air temperature is 50 °C (122 °F) or more	—
	Outside air temperature sensor faulty	Check outside air temperature sensor referring to “Outside Air Temperature Sensor Inspection (If Equipped)”.
	Information display unit faulty	Replace unit.
	BCM faulty	Replace after making sure that none of above parts is faulty.
Display of thermometer does not change at “- - °C”	Outside air temperature sensor faulty	Check outside air temperature sensor referring to “Outside Air Temperature Sensor Inspection (If Equipped)”.
	Outside air temperature sensor circuit is open or short	Repair circuit.
	Wiring or grounding faulty	Repair circuit.
	Information display unit faulty	Replace unit.
	BCM faulty	Replace after making sure that none of above parts is faulty.
Display of fuel consumption does not change at “- - l / 100 km (km/l, MPG)”	Vehicle is not running (instantaneous fuel consumption mode)	—
	Fuel consumption was reset (average fuel consumption mode, if equipped)	Vehicle runs for a while.
	Vehicle speed signal faulty	Check ECM for DTC referring to “DTC Check in Section 1A”
	Wiring or grounding faulty	Repair circuit.
	ECM faulty	Check input and output signal of ECM referring to “Inspection of ECM and Its Circuits in Section 1A”
	Information display unit faulty	Replace unit.
	BCM faulty	Replace after making sure that none of above parts is faulty.

Clock Symptom Diagnosis (If Equipped)

S6JB0B9304019

Condition	Possible cause	Correction / Reference Item
No displaying of clock	Circuit fuse Blown	Replace fuse and check for short circuit.
	Wiring and/or grounding faulty	Repair as necessary.
	Clock unit faulty	Replace unit.

Audio System Symptom Diagnosis (If Equipped)

S6JB0B9304020

Radio

NOTE

Electronic part / system with undiagnosed problem may cause electromagnetic interference. Electromagnetic interference condition may have poor radio reception. To test for presence of electromagnetic interference in part / system, perform the following procedures.

1. Turn ignition switch to OFF.
2. Systematically disconnect the electronic part / system connector(s) one at a time.
3. Turn ignition switch to ON.
4. Check any improvement in radio reception.

Condition	Possible cause	Correction / Reference Item
Poor radio reception	Out of service area (Poor location)	—
	Antenna faulty	Replace antenna.
	Antenna amplifier faulty	Replace antenna amplifier.
	Electrical part / system faulty	Repair or replace electrical part / system referring to after-mentioned NOTE.
	Wiring and/or grounding faulty	Repair as necessary.
	Radio assembly faulty	Replace radio assembly.
Radio does not operate and speaker does not sound	Circuit fuse(s) blown	Replace fuse(s) and check for short circuit.
	Wiring and/or grounding faulty	Repair as necessary.
	Radio assembly faulty	Replace radio assembly.
Radio does not operate, but speaker sound	Wiring and/or grounding faulty	Repair as necessary.
	Radio assembly faulty	Replace radio assembly.
Radio is operative, but all speakers does not sound	Wiring and/or grounding faulty	Repair as necessary.
	Radio assembly faulty	Replace radio assembly.
Individual speaker is noisy or inoperative	Wiring and/or grounding faulty	Repair as necessary.
	Speaker faulty	Replace speaker.
	Radio assembly faulty	Replace radio assembly.
Sound quality is poor	Out of service area (Poor location)	—
	Speaker installed incorrectly	Install correctly.
	Wiring and/or grounding faulty	Repair as necessary.
	Speaker faulty	Replace speaker.
	Radio assembly faulty	Replace radio assembly.

CD Player

Condition	Possible cause	Correction / Reference Item
CD-ROM does not insert	Another CD-ROM already inserted	Eject CD-ROM.
	Circuit fuse blown	Replace fuse and check for short circuit.
	Wiring and/or grounding faulty	Repair as necessary.
	Extraneous material come to be mixed CD player	Clear extraneous material from CD player or replace radio assembly.
	Radio assembly faulty	Replace radio assembly.
CD-ROM does not eject	Circuit fuse blown	Replace fuse and check for short circuit.
	Wiring and/or grounding faulty	Repair as necessary.
	Extraneous material come to be mixed in CD player	Clear extraneous material from CD player or replace radio assembly.
	Radio assembly faulty	Replace radio assembly.
CD player does not load CD-ROM	CD-ROM faulty	—
	CD-ROM inserted with incorrect side up	Insert correctly.
	Temperature in cabin is too hot	—
	Water droplets form on internal lens	Dry about 1 hour with power on.
	Radio assembly faulty	Replace radio assembly.

Condition	Possible cause	Correction / Reference Item
Sound skips or is noisy	CD-ROM faulty	—
	Driving vibration	—
	Water droplets form on internal lens	<i>Dry about 1 hour with power on.</i>
	Radio assembly installed incorrectly	<i>Install correctly.</i>
	Radio assembly faulty	<i>Replace radio assembly.</i>
CD player is operative, but all speakers does not sound	Wiring and/or grounding faulty	<i>Repair as necessary.</i>
	Radio assembly faulty	<i>Replace radio assembly.</i>
Individual speaker is noisy or inoperative	Wiring and/or grounding faulty	<i>Repair as necessary.</i>
	Speaker faulty	<i>Replace speaker.</i>
	Radio assembly faulty	<i>Replace radio assembly.</i>
Sound quality or volume is poor	CD-ROM faulty	—
	Wiring and/or grounding faulty	<i>Repair as necessary.</i>
	Speaker installed incorrectly	<i>Install correctly.</i>
	Speaker faulty	<i>Replace speaker.</i>

Auto Volume Control System

Condition	Possible cause	Correction / Reference Item
Sound volume does not vary according to changes of vehicle speed	Auto volume control system is "OFF" mode	<i>Select auto volume control.</i>
	Vehicle speed signal faulty	<i>Check vehicle speed signal referring to "Vehicle Speed Signal Inspection (For Audio Unit) (If Equipped)".</i>
	Wiring or grounding faulty	<i>Repair circuit.</i>
	BCM faulty	<i>Check input and output signal of BCM referring to "Inspection of BCM and Its Circuits in Section 10B".</i>
	Radio assembly faulty	<i>Replace radio assembly.</i>

Remote Audio Control Switch Symptom Diagnosis (If Equipped)

S6JB0B9304021

Condition	Possible cause	Correction / Reference Item
Audio system is operative, but remote control switch does not control audio system	Remote audio control switch faulty	<i>Check remote audio control switch referring to "Remote Audio Control Switch Inspection (If Equipped)".</i>
	Contact coil faulty	<i>Replace contact coil.</i>
	Wiring and/or grounding faulty	<i>Repair as necessary.</i>
	Radio assembly faulty	<i>Replace radio assembly.</i>

Navigation Symptom Diagnosis (If Equipped)

S6JB0B9304022

Condition	Possible cause	Correction / Reference Item
No displaying of navigation	Circuit fuse Blown	<i>Replace fuse and check for short circuit.</i>
	Wiring and/or grounding faulty	<i>Repair circuit.</i>
	Navigation unit faulty	<i>Replace unit.</i>


Repair Instructions

Ignition Switch Removal and Installation

S6JB0B9306001


Removal

- 1) Disconnect negative cable at battery.
- 2) Confirm that ignition key is removed.
- 3) Remove steering column hole cover (1).
- 4) Turn steering wheel to remove steering column cover screws (3) and then remove steering column covers (2).

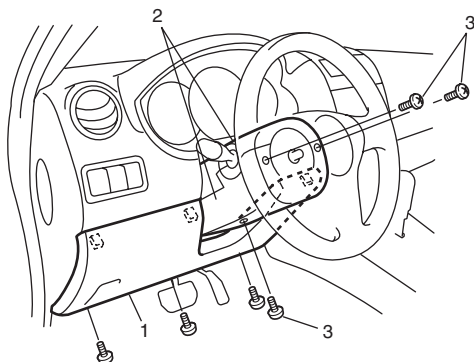

I5JB0A940020-02

- 5) Disconnect couplers (1) from ignition switch (2).
- 6) Remove ignition switch (2) from key cylinder (3).

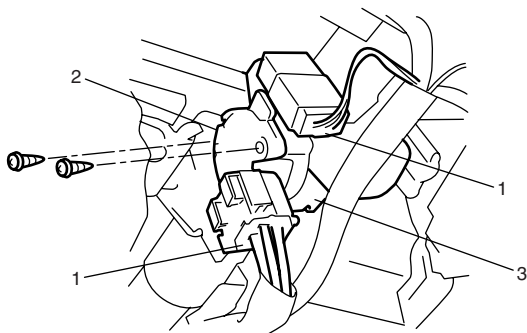

I4RS0A930008-01


Installation

Reverse removal procedure.

Ignition Switch Inspection

S6JB0B9306002

- Check for continuity between terminals at each switch position. If check result is not as specified, replace switch.

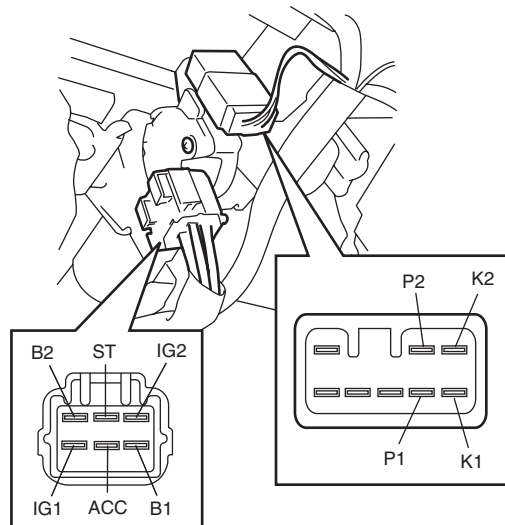

Terminal		B1	B2	ACC	IG1	IG2	ST	K1	K2
Key	Position								
	OUT								
IN	LOCK								
	ACC								
	ON								
	START								

Terminal		P1	P2
Ignition knob switch (with keyless start system only)			
OFF (ignition knob switch released)			
ON (ignition knob switch pushed)			


I5RS0D930003-02

Combination Meter Removal and Installation

S6JB0B9306003


Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Remove screws (1) fastening combination meter cluster panel.
- 3) Remove combination meter cluster panel (2) pulling it in arrow direction shown in figure.

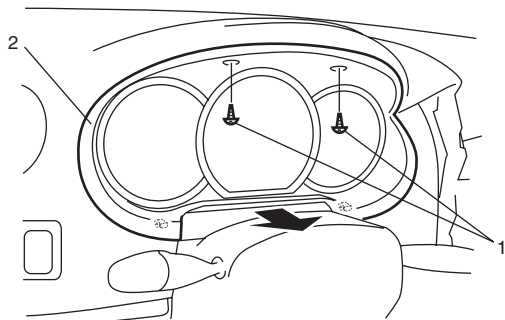

I5JB0A930005-04

- 4) Remove screws (1) fastening combination meter.
- 5) Remove combination meter (2) pulling it arrow direction as shown.

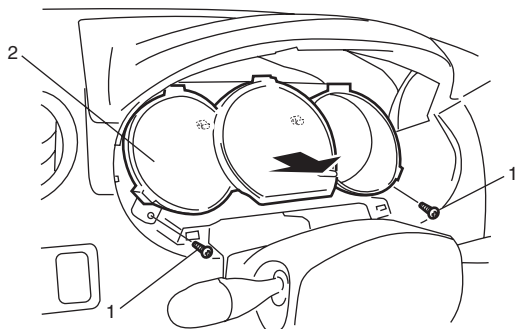

I5JB0A930006-04

Installation

Reverse removal procedure.

Fuel Level Sensor Removal and Installation

S6JB0B9306004

Main Fuel Level Sensor

For removal and installation, refer to "Fuel Pump Assembly Removal and Installation in Section 1G".

Sub Fuel Level Sensor

For removal and installation, refer to "Sub Fuel Level Gauge Removal and Installation in Section 1G".

Fuel Level Sensor Inspection

S6JB0B9306005



- Check that resistance between terminals "a" and "b" of fuel level sensor changes with change of float position.
- Check resistance between terminals "a" and "b" at each float position in the following.
If the measured value is out of specification, replace fuel pump and/or sub fuel level sensor.

Main fuel level sensor [A] specifications

	Float position		Resistance (Ω)
3 door model	Full Upper "C"	194 mm (7.64 in.)	19.0 – 21.0
	Full Lower "D"	42 mm (1.65 in.)	111.9 – 115.3
5 door model	Full Upper "C"	206 mm (8.11 in.)	19.0 – 21.0
	Full Lower "D"	38 mm (1.50 in.)	129.8 – 133.2

Sub fuel level sensor [B] specifications

	Float position		Resistance (Ω)
3 door model	Full Upper "C"	54 mm (2.13 in.)	19.0 – 21.0
	Full Lower "D"	256 mm (10.08 in.)	164.7 – 168.1
5 door model	Full Upper "C"	56 mm (2.20 in.)	19.0 – 21.0
	Full Lower "D"	240 mm (9.45 in.)	146.8 – 150.2

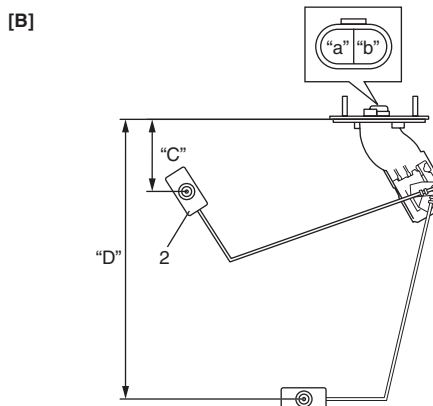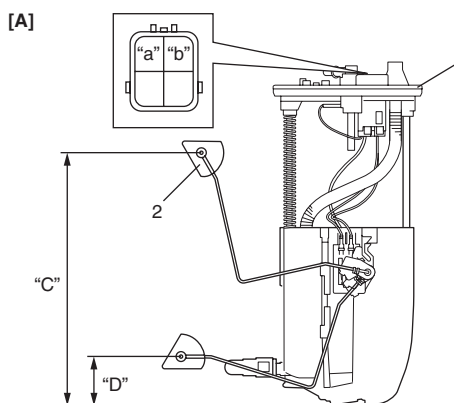

I6JB01930007-03

1. Fuel pump	2. Float
--------------	----------

Oil Pressure Switch Removal and Installation


S6JB0B9306006

For removal and installation, refer to "Oil Pressure Switch in Section 1E".

Oil Pressure Switch Inspection

S6JB0B9306007

- 1) Disconnect oil pressure switch (1) lead wire.
- 2) Check for continuity between oil pressure switch terminal (2) and cylinder block (3) as shown. If check result is not as specified, replace oil pressure switch (1).

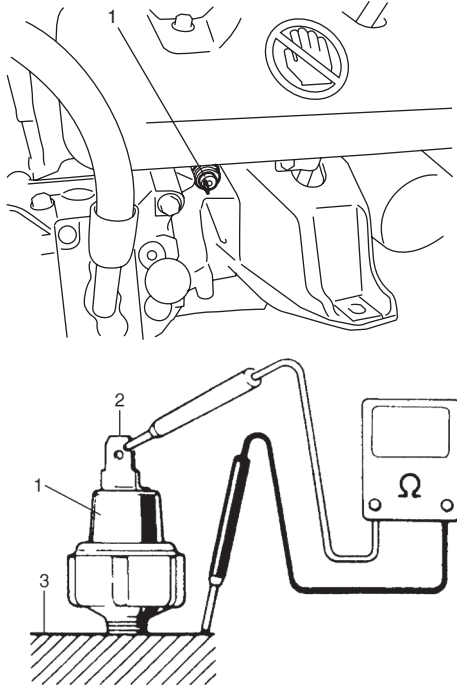Oil pressure sensor specification**During engine running: No continuity****At engine stop: Continuity**

I6JB01930004-01

Engine Coolant Temperature (ECT) Sensor Inspection


S6JB0B9306008

Check engine coolant temperature sensor for resistance, refer to "Engine Coolant Temperature (ECT) Sensor Inspection in Section 1C".

Brake Fluid Level Switch Inspection

S6JB0B9306009

Check for continuity between terminals of brake fluid level switch coupler (1). If found defective, replace switch.

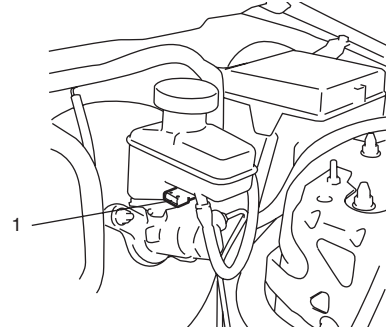
Brake fluid level switch specification**OFF position (float up): No continuity****ON position (float down): Continuity**

I5JB0A930008-01

Parking Brake Switch Inspection

S6JB0B9306010

Check for continuity between parking brake switch terminal and body ground as shown in figure. If found defective, replace switch.

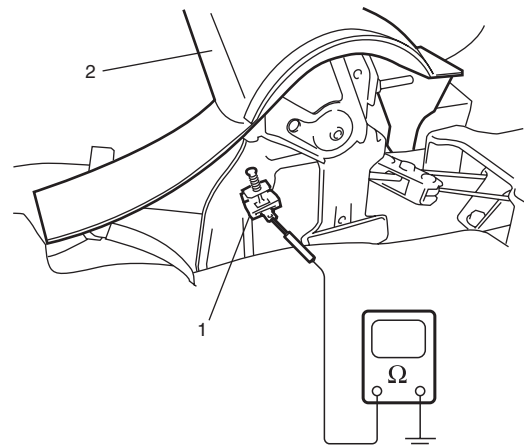Parking brake switch specification**OFF position (parking brake released): No continuity****ON position (parking brake lever pulled up): Continuity**

I5JB0A930009-01

1. Parking brake switch

2. Parking brake lever


Door Switch (Front / Rear / Rear End Door)
Inspection

S6JB0B9306011

Remove door switch from body and check switch for continuity. If found defective, replace switch.

Door switch (front / rear / rear end door)
specification

OFF position (Door closed): No continuity
ON position (Door open): Continuity

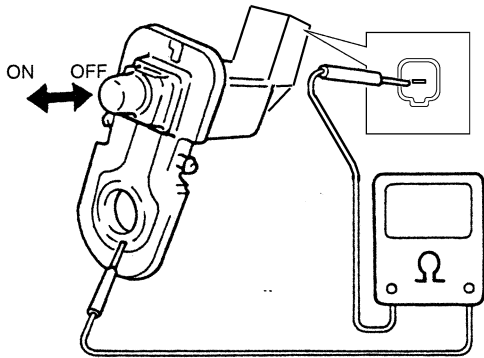


I3RH0A930004-01

Outside Air Temperature Sensor Removal and
Installation (If Equipped)

S6JB0B9306012

Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Remove front bumper referring to “Front Bumper Components in Section 9K”.
- 3) Disconnect connector (1) from outside air temperature sensor (2).
- 4) Remove outside air temperature sensor (2) from front bumper (3).

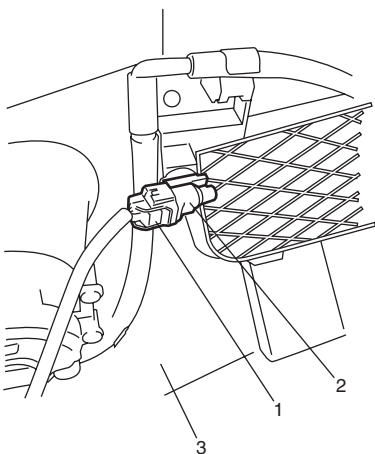

I5JB0A930010-01

Installation



Reverse removal procedure for installation.

Outside Air Temperature Sensor Inspection (If
Equipped)

S6JB0B9306013

Measure resistance of outside air temperature sensor using an ohmmeter.
If resistance is out of specification, replace outside air temperature sensor.

Outside air temperature sensor resistance
1.62 kΩ – 1.78 kΩ at 25 °C (77 °F)

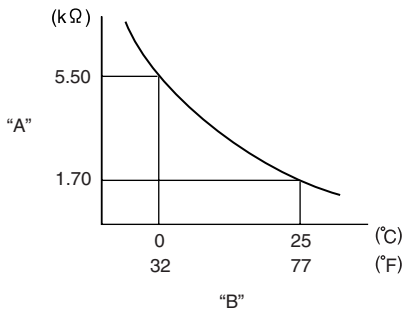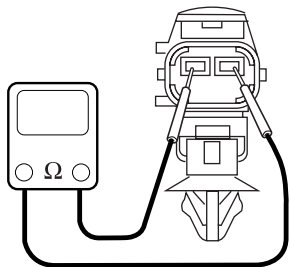

I4RS0A930017-01

"A": Resistance	"B": Temperature
-----------------	------------------

Instrument Panel Removal and Installation

S6JB0B9306014

⚠ WARNING


Refer to "Air Bag Warning in Section 00" before starting service work.

⚠ CAUTION

Position heat control mode into **FOOT MODE** before removing instrument panel to avoid the damage to air flow control door.


Removal

- 1) Disconnect negative cable at battery.
- 2) Remove driver side instrument panel under cover (1) and passenger side instrument panel under cover (2).

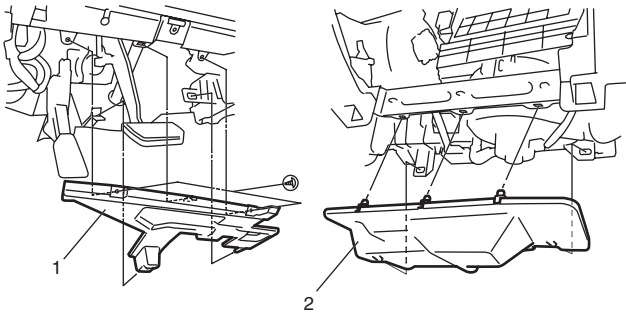


I5JB0A930011-02

- 3) Disable air bag system referring to "Disabling Air Bag System in Section 8B".
- 4) Remove steering column hole cover (1).
- 5) Turn steering wheel to remove steering column cover screws (3).
- 6) Remove steering column covers (2).

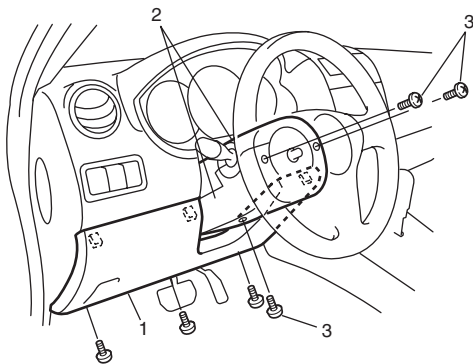


I5JB0A940020-02

- 7) Remove glove box (1).
- 8) Remove hood latch release lever (2).

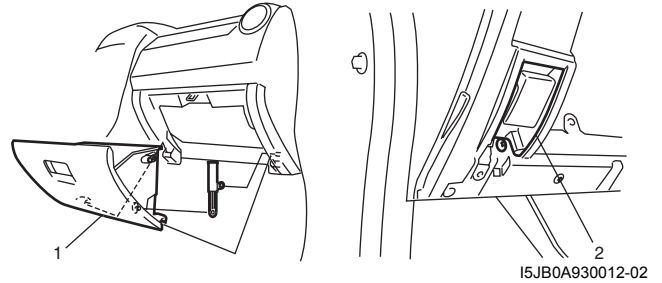


I5JB0A930012-02

- 9) Remove console box referring to "Console Box Components in Section 9H".
- 10) Remove front pillar trims (1) front side sill scuffs (2) and dash side trims (3).

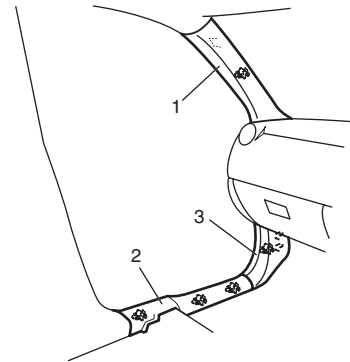

I5JB0A930013-02

- 11) Disconnect instrument panel harness connectors, inside air temperature sensor duct and antenna cable instrument panel removal.
- 12) Remove steering column mounting referring to "Steering Column Assembly Removal and Installation in Section 6B".
- 13) Remove instrument panel ground wire.
- 14) Remove instrument panel mounting bolts (1).
- 15) Remove instrument panel (2) with steering support member and instrument panel harness.

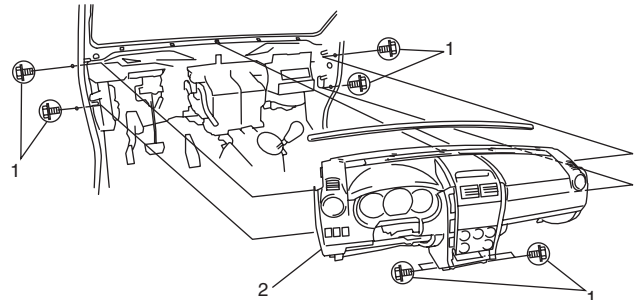

I5JB0A930014-01


Installation

Reverse removal procedure noting the following.

- When installing each part, be careful not to catch any cable or wiring harness.
- Tighten instrument panel mounting bolts to specified torque

Tightening torque

Instrument panel mounting bolt (a): 23 N·m (2.3 kgf-m, 17.0 lb-ft)

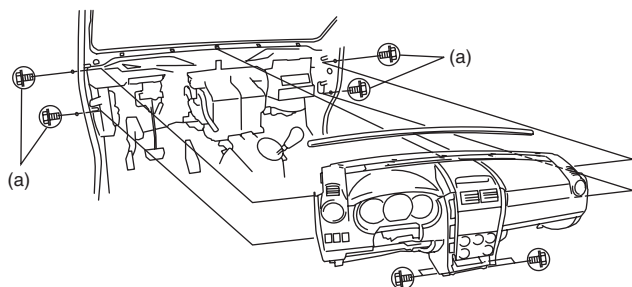

I5JB0A930015-01


- Tighten steering column mounting nuts referring to "Steering Column Assembly Removal and Installation in Section 6B".
- Enable air bag system referring to "Enabling Air Bag System in Section 8B".

Information Display (Clock) Removal and Installation

S6JB0B9306015

Removal


- 1) Remove audio unit referring to "Audio Unit Removal and Installation".
- 2) Remove center ventilation louver (1) from instrument panel (2) pulling it arrow direction as shown.
- 3) Disconnect hazard switch connector.

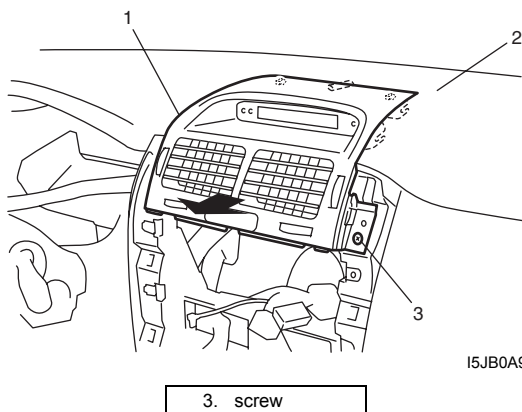

I5JB0A930016-01

3. screw

- 4) Remove information display (clock) (1) from instrument panel (2) pulling it in arrow direction shown in figure.
- 5) Disconnect information display (clock) coupler.

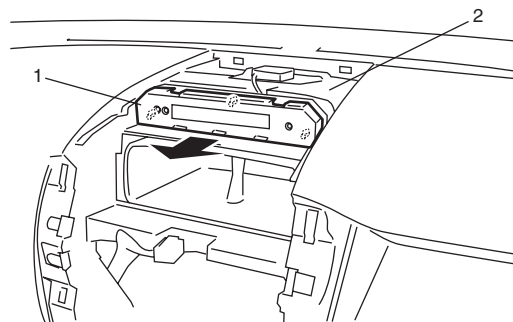

I5JB0A930017-01

Installation


Reverse removal procedure.

Audio Unit Removal and Installation

S6JB0B9306016


Removal

- 1) Disconnect negative (-) cable at battery.
- 2) Remove instrument panel center garnish trims (1).

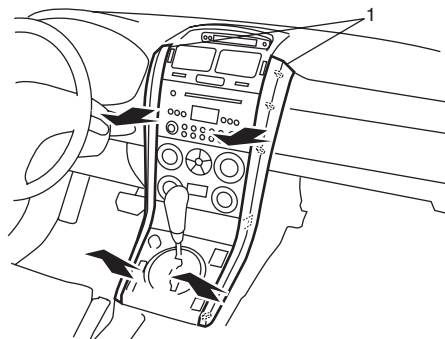

I5JB0A930018-03

- 3) Remove 6 mounting screws (1).
- 4) Disconnect electrical connectors from audio unit and HVAC control module.
- 5) Remove audio unit (2) with HVAC control module from instrument panel.

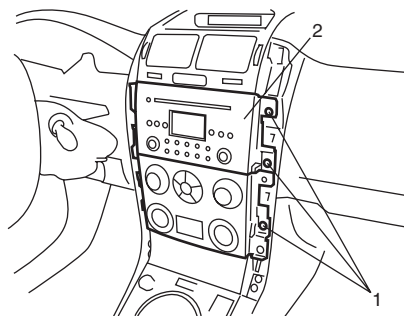

I5JB0A930019-04

- 6) Remove audio unit from HVAC control module.

Installation


Reverse removal procedure.

Front Speaker Removal and Installation

S6JB0B9306017

Removal

- 1) Remove door trim referring to Step 1) to 3) of "Front Door Glass Removal and Installation in Section 9E".
- 2) Remove 3 front speaker mounting screws (1).
- 3) Remove front speaker (2) from front door (3).
- 4) Disconnect front speaker coupler from front speaker (2).

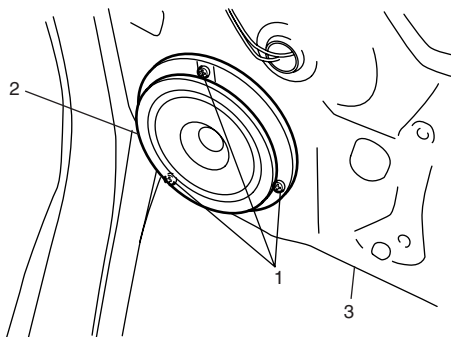

I4RS0A930027-01

Installation


Reverse removal procedure.

Rear Speaker Removal and Installation (5 Door Model)

S6JB0B9306018

Removal

- 1) Remove door trim referring to Step 1) to 3) of "Rear Door Glass Removal and Installation in Section 9E".
- 2) Remove 3 rear speaker mounting screws (1).
- 3) Remove rear speaker (2) from rear door (3).
- 4) Disconnect rear speaker coupler from rear speaker (2).

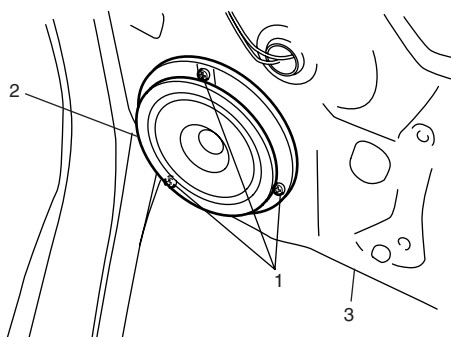

I4RS0A930027-01

Installation


Reverse removal procedure.

Rear Speaker Removal and Installation (3 Door Model)

S6JB0B9306019


Removal

- 1) Remove right and left lower anchor bolts (2) from body panel.
- 2) Remove quarter lower trim (1).

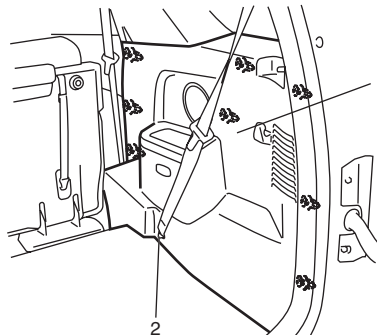

I5JB0A930020-02

- 3) Remove 3 rear speaker mounting screws (1) and rear speaker (2) from quarter panel.
- 4) Disconnect rear speaker coupler from rear speaker (2).

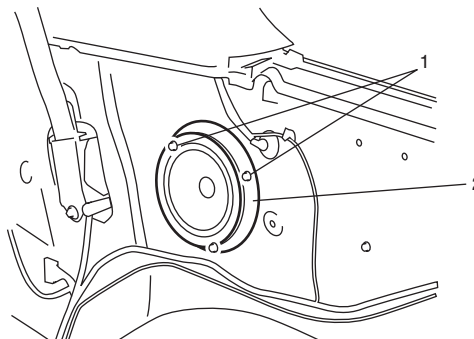


I5JB0A930021-02

Installation

Reverse removal procedure noting the following.

- Tighten lower anchor bolts to specified torque.

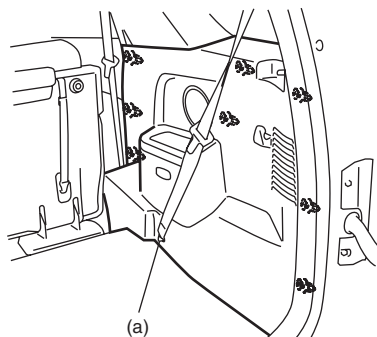Tightening torque**Lower anchor bolt (a): 35 N·m (3.5 kgf-m, 25.5 lb-ft)**


I5JB0A930022-02

GPS Antenna Removal and Installation (If Equipped)

S6JB0B9306020

Removal

- 1) Remove center ventilation louver referring to step 1) and 2) of "Information Display (Clock) Removal and Installation".
- 2) Disconnect GPS antenna connector from navigation unit referring to "Audio Unit Removal and Installation".
- 3) Remove GPS antenna (1).

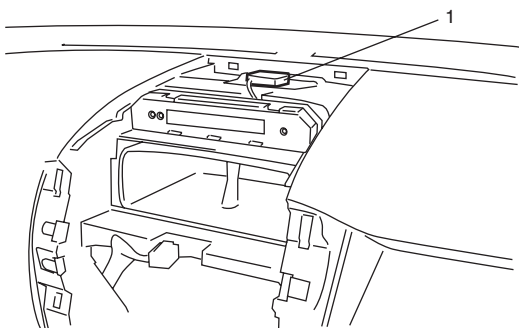

I5JB0A930023-01

Installation


Reverse removal procedure.

Horn Removal and Installation

S6JB0B9306021

Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Remove front bumper referring to "Front Bumper Components in Section 9K".
- 3) Disconnect horn connector (1).
- 4) Remove horn (2).

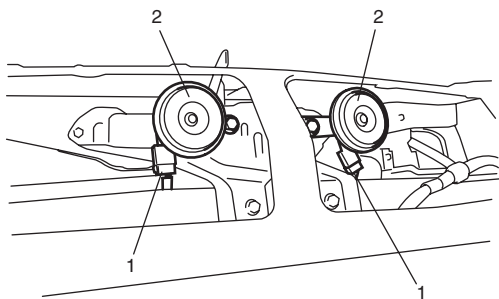

I5JB0A930029-01

Installation


Reverse removal procedure for installation.

Horn Inspection

S6JB0B9306022

- 1) Disconnect negative (–) cable at battery.
- 2) Remove front bumper referring to "Front Bumper Components in Section 9K".
- 3) Disconnect horn connector (1).
- 4) Connect battery positive (+) to terminal of horn connector (2) and negative (–) terminal to body ground.

If horn is not sounding, replace horn.

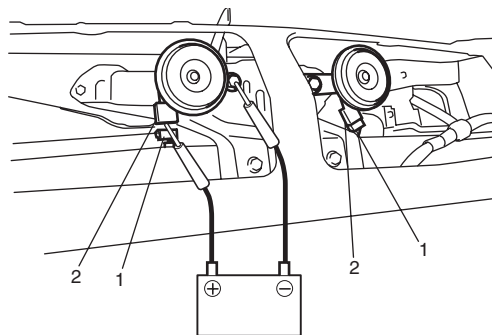


I5JB0A930024-01

Horn Relay Inspection



S6JB0B9306023

- 1) Disconnect negative (–) cable at battery.
- 2) Remove horn relay (included in integration relay) (1) from main fuse box (2).

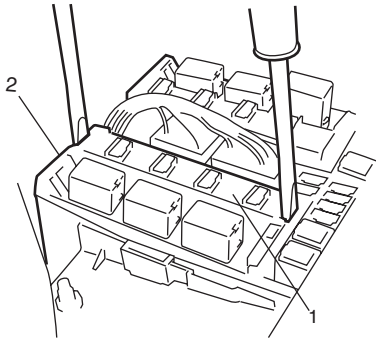

I5JB0A950031-01

- 3) Check that there is no continuity between terminal "a" and "b".
If there is continuity, replace relay.
- 4) Check that there is continuity between terminals "a" and "b" when a 12 V battery is connected to terminal "a" and "c".
If malfunction is found, replace integration relay.

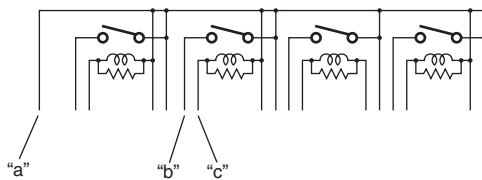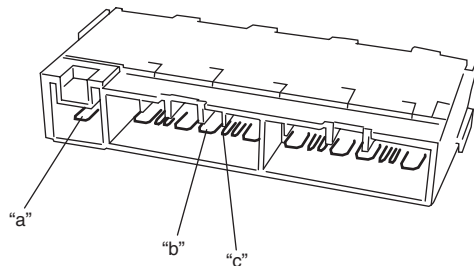

I5JB0A930025-03

Antenna Base Removal and Installation

S6JB0B9306024

Removal

- 1) Remove antenna (1) from antenna base (2).
- 2) Remove head lining referring to "Head Lining Removal and Installation in Section 9H".
- 3) Disconnect antenna feeder (3) from antenna base (2).
- 4) Remove antenna base (2) from vehicle.


Installation

Reverse removal procedure noting the following.

- Tighten antenna base mounting nut to specified torque.

Tightening torque

Antenna base mounting nut (a): 10 N·m (1.0 kgf-m, 7.5 lb-ft)

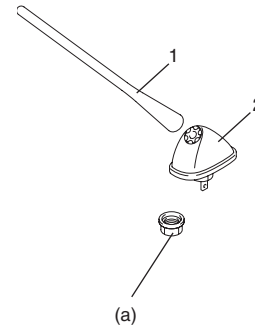


I4RH01930009-01

Remote Audio Control Switch Removal and Installation (If Equipped)

S6JB0B9306025


Removal

- 1) Remove steering wheel referring to “Steering Wheel Removal and Installation in Section 6B”.
- 2) Remove steering wheel cover (1) from steering wheel.

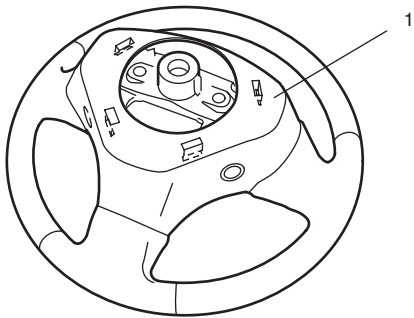

I5JB0A930026-04

- 3) Remove remote audio control switch (1) with cruise control switch (3) (if equipped).

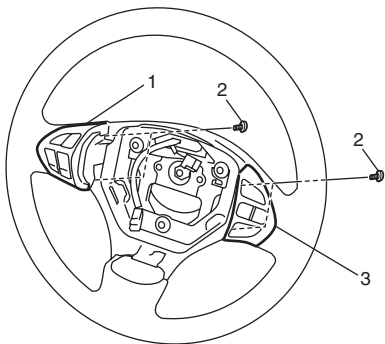

I5JB0A930027-01

2. screw

Installation

Reverse removal procedure for installation.

Remote Audio Control Switch Inspection (If Equipped)

S6JB0B9306026

- 1) Remove driver air bag (inflator) module referring to “Driver Air Bag (Inflator) Module Removal and Installation in Section 8B”.
- 2) Disconnect remote audio control switch connector from contact coil.
- 3) Check switch for resistance between “a” and “b” terminals under each condition below.
If check result is not satisfactory, replace remote audio control switch.

Remote audio control switch resistance

All switches released (OFF): 5119 – 5223 kΩ

“ENTER” switch (1) pushing on (ON): 55 – 57 Ω


“+” switch (2) pushing on (ON): 129 – 133 Ω

“–” switch (3) pushing on (ON): 238 – 244 Ω

“MODE” switch (4) pushing on (ON): 416 – 426 Ω

“^” witch (5) pushing on (ON): 743 – 759 Ω

“V” switch (6) pushing on (ON): 1555 – 1587 Ω

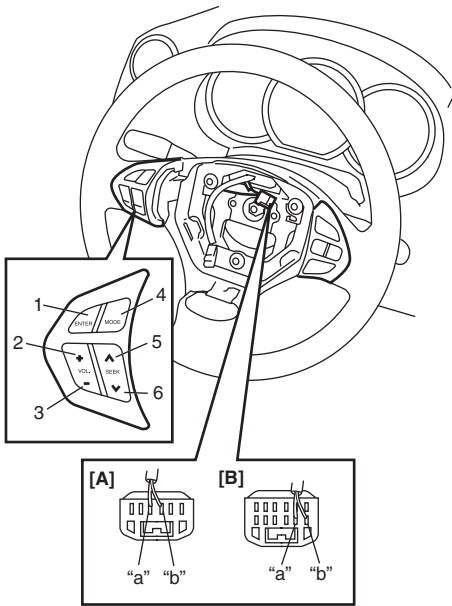

I6JB01930012-02

[A]:	Without cruise control system
[B]:	With cruise control system

Vehicle Speed Signal Inspection (For Audio Unit) (If Equipped)

S6JB0B9306027

Check vehicle speed pulse output signal of BCM referring to “Reference waveform No.5” under “Inspection of BCM and Its Circuits in Section 10B”.

Specifications

Tightening Torque Specifications

S6JB0B9307001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lb·ft	
Instrument panel mounting bolt	23	2.3	17.0	☞
Lower anchor bolt	35	3.5	25.5	☞
Antenna base mounting nut	10	1.0	7.5	☞

NOTE

The specified tightening torque is also described in the following.
“Audio System Component Location”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Wipers / Washers

Diagnostic Information and Procedures

Front Wiper and Washer Symptom Diagnosis

S6JB0B9404001

Condition	Possible cause	Correction / Reference Item
Wiper malfunctions	Circuit fuse blown	<i>Replace fuse and check for short circuit.</i>
	Wiper motor faulty	<i>Check wiper motor referring to "Windshield Wiper Motor Inspection".</i>
	Combination switch (wiper switch) faulty	<i>Check wiper switch referring to "Windshield Wiper and Washer Switch Inspection".</i>
	Wiring or grounding faulty	<i>Repair circuit.</i>
Washer malfunctions	Washer hose or nozzle clogged	<i>Clean or repair clogged hose or nozzle.</i>
	Circuit fuse blown	<i>Replace fuse and check for short circuit.</i>
	Washer motor faulty	<i>Check washer motor referring to "Washer Pump Inspection".</i>
	Combination switch (washer switch) faulty	<i>Check washer switch referring to "Windshield Wiper and Washer Switch Inspection".</i>
	Wiring or grounding faulty	<i>Repair circuit.</i>

Rear Wiper and Washer Symptom Diagnosis

S6JB0B9404002

Condition	Possible cause	Correction / Reference Item
Wiper malfunctions NOTE <ul style="list-style-type: none"> • Use of SUZUKI scan tool makes it easy to check whether a faulty condition is on the input side or output side of BCM. For checking procedure, refer to "Diagnosis Using Output Test Function of SUZUKI Scan Tool" under "Scan Tool Data in Section 10B". • Check each part in the order from the top of the following list. 	Circuit fuse blown	<i>Replace fuse and check for short circuit.</i>
	Wiper motor faulty	<i>Check wiper motor referring to "Rear Wiper Motor Inspection".</i>
	Combination switch (wiper switch) faulty	<i>Check wiper switch referring to "Rear Wiper and Washer Switch Inspection".</i>
	Rear wiper relay faulty	<i>Check rear wiper relay referring to "Rear Wiper Relay Inspection".</i>
	Wiring or grounding faulty	<i>Repair circuit.</i>
	BCM faulty	<i>Replace after making sure that none of above parts is faulty.</i>
Washer malfunctions	Washer hose or nozzle clogged	<i>Clean or repair clogged hose or nozzle.</i>
	Circuit fuse blown	<i>Replace fuse and check for short circuit.</i>
	Washer motor faulty	<i>Check washer motor referring to "Washer Pump Inspection".</i>
	Combination switch (washer switch) faulty	<i>Check washer switch referring to "Rear Wiper and Washer Switch Inspection".</i>
	Wiring or grounding faulty	<i>Repair circuit.</i>

Headlight Washer Symptom Diagnosis (If Equipped)

S6JB0B9404003

Condition	Possible cause	Correction / Reference Item
Headlight washer malfunction	Washer hose or nozzle clogged	<i>Clean or repair clogged hose or nozzle.</i>
	Circuit fuse blown	<i>Replace fuse and check for short circuit.</i>
	Headlight washer switch faulty	<i>Check headlight washer switch referring to "Headlight Washer Switch Inspection (If Equipped)".</i>
	Combination switch (washer switch) faulty	<i>Check washer switch referring to "Windshield Wiper and Washer Switch Inspection".</i>
	Headlight washer pump faulty	<i>Check headlight washer pump referring to "Washer Pump Inspection".</i>
	Wiring or ground faulty	<i>Repair circuit.</i>
	Headlight washer control module faulty	<i>Check headlight washer control module referring to "Inspection of Headlight Washer Control Module and Its Circuit (If Equipped)".</i>

Headlight Washer Operation Inspection (If Equipped)

S6JB0B9404004

- 1) Turn ignition switch to ON position.
- 2) Turn lighting switch to "HEAD" position.
- 3) Make sure that washer fluid is spouted out from the headlight washer nozzle to the headlight surface when the headlight washer switch or front washer switch is turned on.
If headlight washer does not operate, go to "Headlight Washer Symptom Diagnosis (If Equipped)".

NOTE


The headlight washer works only when the headlight is turned on. The headlight washer spouts washer fluid on the headlight surface when the headlight washer switch or front washer switch is turned on. In addition, in case using the front washer switch, the headlight washer works only once after the headlight on.

Inspection of Headlight Washer Control Module and Its Circuit (If Equipped)

S6JB0B9404005

- 1) Remove headlight washer control module from blower unit.
- 2) Connect connector to headlight washer control module.
- 3) Check that the voltage between the following terminals and vehicle body ground are specifications under each condition.

If measuring voltage is not within specification, first check related switch and applicable wire harness circuit for open or short. And if all wire harness circuits and connections are normal, replace headlight washer control module.

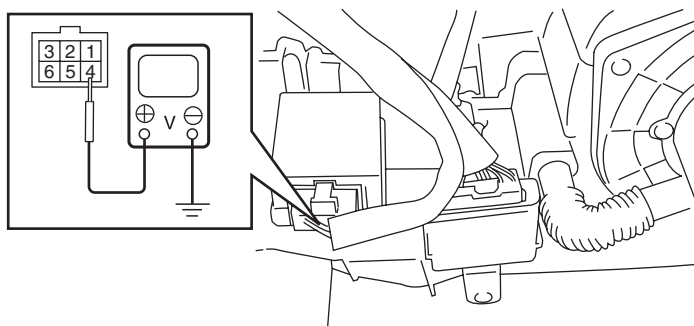


I5JB0A940001-01

Terminal	Circuit	Specification	Condition
1	To headlight washer switch	0 – 1 V	Ignition switch is at ON position, lighting switch is at HEAD position and headlight washer switch is pushed.
		4 – 6 V	Ignition switch is at ON position and headlight washer switch is not pushed.
2	Ground	0 – 1 V	—
3	To headlight washer motor	0 – 1 V	When headlight washer pump is in operation. The headlight washer pump works for 0.8 seconds in case that the following conditions are all satisfied. <ul style="list-style-type: none"> • Ignition switch is at ON position • Lighting switch is at HEAD position • Windshield washer switch is at ON position or headlight washer switch is pushed
		10 – 14 V	When headlight washer pump is not in operation.
4	To lighting switch	0 – 1 V	Lighting switch is at HEAD position.
		10 – 14 V	Lighting switch is at OFF position.
5	To windshield washer switch	0 – 1 V	Ignition switch is at ON position and windshield washer switch is at ON position.
		10 – 14 V	Ignition switch is at ON position and windshield washer switch is at OFF position.
6	To ignition switch	0 – 1 V	Ignition switch is at OFF position.
		10 – 14 V	Ignition switch is at ON position.

Repair Instructions

Wipers and Washers Components

S6JB0B9406001

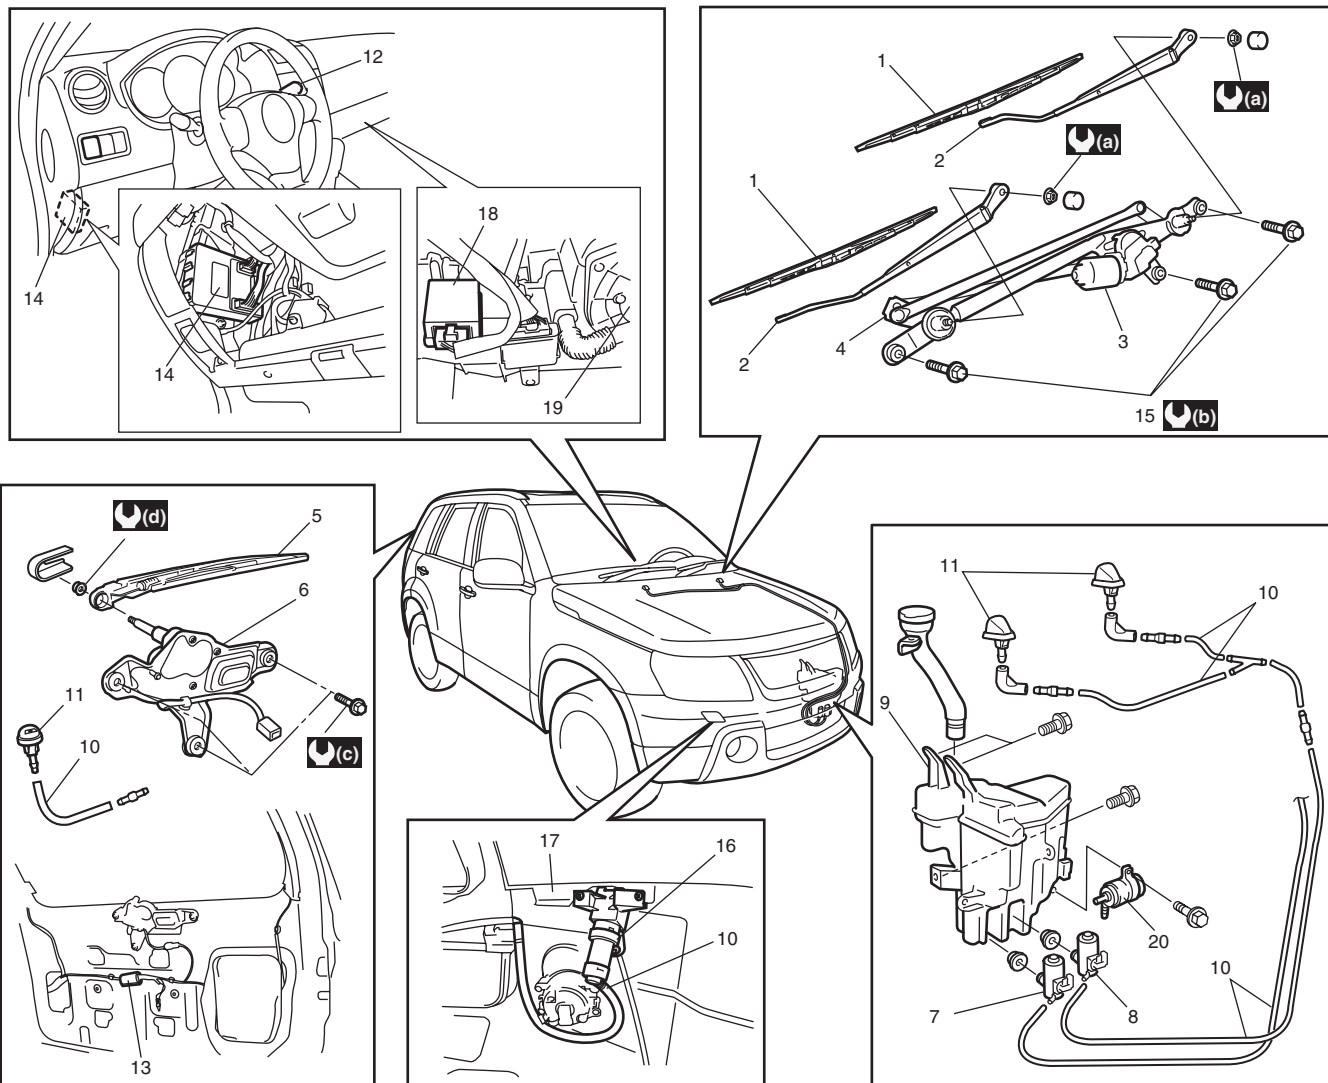

I6JB0B940001-01


1. Windshield wiper blade	7. Washer pump for windshield washer	13. Rear wiper relay	19. Blower fan motor
2. Windshield wiper arm	8. Washer pump for rear washer	14. BCM	20. Headlight washer pump (if equipped)
3. Windshield wiper motor	9. Washer tank	15. Windshield wiper bolt	(a) : 14 N·m (1.4 kgf-m, 10.5 lb-ft)
4. Windshield wiper link	10. Washer hose	16. Headlight washer nozzle (if equipped)	(b) : 8.5 N·m (0.85 kgf-m, 6.5 lb-ft)
5. Rear wiper arm with blade assembly	11. Washer nozzle	17. Front bumper	(c) : 7 N·m (0.7 kgf-m, 5.0 lb-ft)
6. Rear wiper motor	12. Wiper switch	18. Headlight washer control module (if equipped)	(d) : 8 N·m (0.8 kgf-m, 6.0 lb-ft)

Washer Tank and Washer Pump Removal and Installation

S6JB0B9406002


Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Remove front bumper referring to “Front Bumper Components in Section 9K”.
- 3) Remove right headlight housing from vehicle body referring to “Headlight Housing Removal and Installation in Section 9B”.
- 4) Remove grommet (1) and upper part (2) of washer tank.

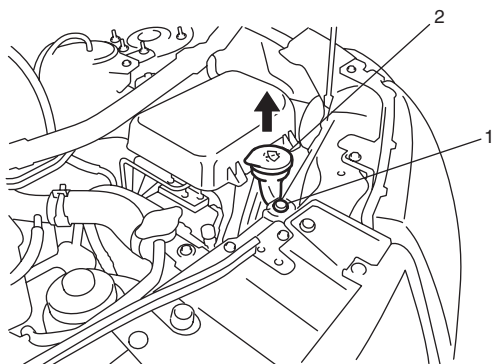

I5JB0A940003-01

- 5) Remove washer tank attaching bolts (4).
- 6) Disconnect washer pump lead wire couplers and hoses.
- 7) Remove washer tank (1).
- 8) Remove windshield washer pump (2), rear washer pump (3) and headlight washer pump (5) (if equipped) from washer tank (1).

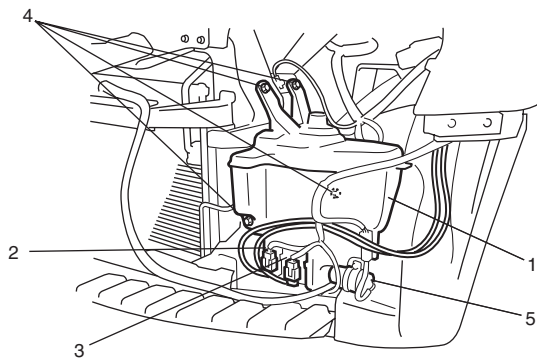

I5JB0A940005-01

Installation


Install washer tank and washer pump by reversing removal procedure, noting the following instructions.

- Connect washer pump connector(s) securely.
- After installing headlight housing be sure to inspect and adjust aiming referring to “Headlight Aiming Adjustment with Screen in Section 9B”.

Washer Pump Inspection

S6JB0B9406003

- 1) Connect battery positive (+) and negative (–) terminals to pump (+) and (–) terminals respectively.
 - 2) Check front, rear or headlight washer pump for operation.
- If pump does not operate, replace washer pump.

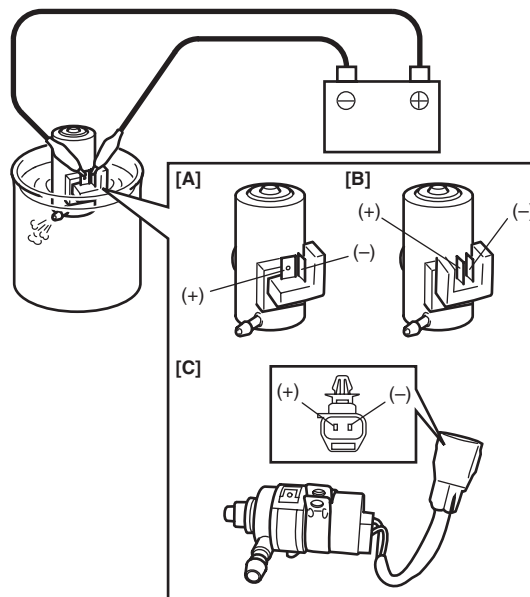

I5JB0A940006-01

[A]: Windshield washer pump

[B]: Rear washer pump


[C]: Headlight washer pump

Windshield Wiper Removal and Installation

S6JB0B9406004


Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Remove wiper pivot caps (1) and wiper arm nuts (2), and remove windshield wiper arms with wiper blades (3).

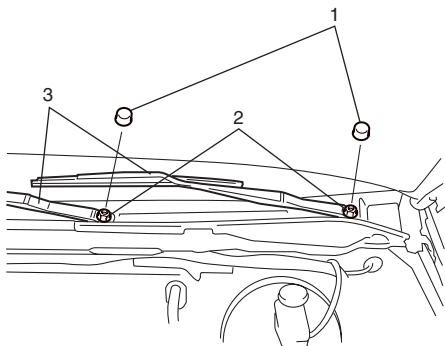

I5JB0A940007-01

- 3) Remove cowl top garnish referring to “Cowl Top Components in Section 9K”.
- 4) Disconnect coupler from windshield wiper motor.
- 5) Remove bolts (1), and remove windshield wiper assembly (2).

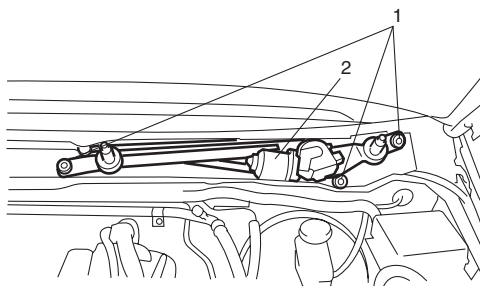


I5JB0A940008-01

Installation

- 1) Install windshield wiper assembly (1), and tighten bolts (“1” – “3”) according to numerical order as shown in figure.

Tightening torque

Windshield wiper bolt (a): 8.5 N·m (0.85 kgf-m, 6.5 lb-ft)

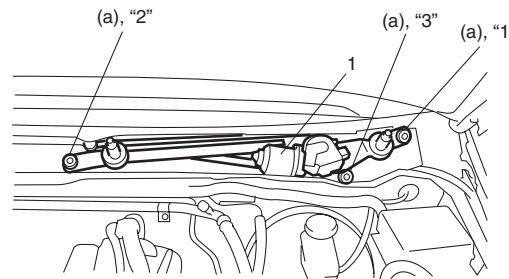


I5JB0A940026-01

- 2) Connect coupler to windshield wiper motor.
- 3) Install cowl top garnish referring to “Cowl Top Components in Section 9K”.
- 4) Install windshield wiper arms with wiper blades (1) to specified position as shown in figure, and then tighten windshield wiper nuts to specified torque.

Tightening torque

Windshield wiper arm nut (a): 14 N·m (1.4 kgf-m, 10.5 lb-ft)

- 5) Install wiper pivot caps (2) to windshield wiper arm nuts

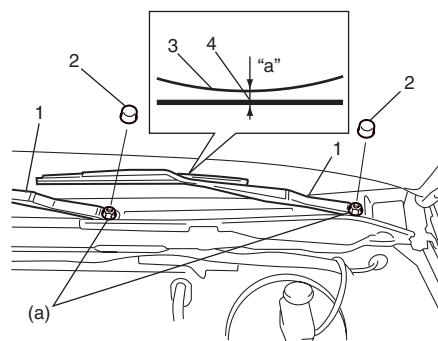

I5JB0A940009-01

"a": 5 mm (0.20 in.)
3. Ceramic line
4. Wiper blade center

- 6) Connect negative (–) cable to battery.

Windshield Wiper Motor Inspection

S6JB0B9406005


NOTE

Make sure that battery voltage is 12 V or more.

- 1) Disconnect negative (–) cable at battery.
- 2) Remove windshield wiper arms with wiper blades referring to “Windshield Wiper Removal and Installation”.
- 3) Remove cowl top garnish referring to “Cowl Top Components in Section 9K”.
- 4) Disconnect coupler from windshield wiper motor.
- 5) Reinstall windshield wiper arms with wiper blade. For details, refer to Step 4) of “Installation” in “Windshield Wiper Removal and Installation”.
- 6) Check windshield wiper motor for operation as follows

- For motor operation in low speed
 - a. Connect battery positive (+) terminal to terminal “1” and its negative (–) terminal to terminal “5”.
 - b. Check if wiper arm reciprocation speed is as specification. If check result is not as specified, replace motor.

Specification
44 – 52 r/min (rpm)

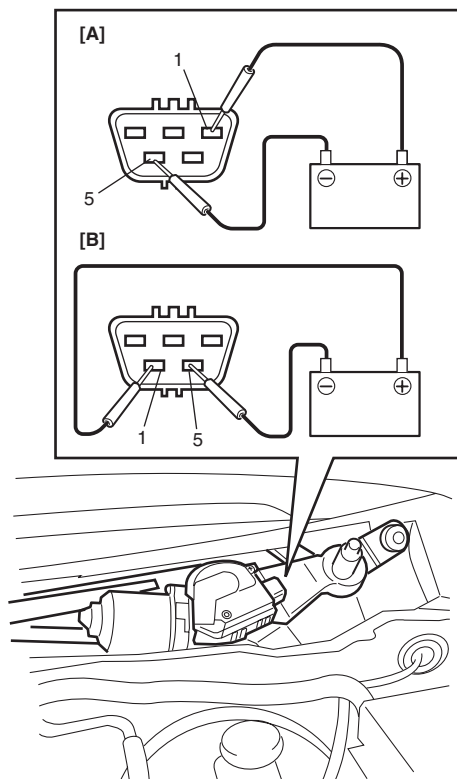


I5JB0A940010-01

[A]: Left-hand steering vehicle

[B]: Right-hand steering vehicle

- For motor operation in high speed
 - a. Connect battery positive (+) terminal to “2” and its negative (–) terminal to terminal “5”.
 - b. Check if motor revolution speed is as specification. If check result is not as specified, replace motor.

Specification
64 – 78 r/min (rpm)


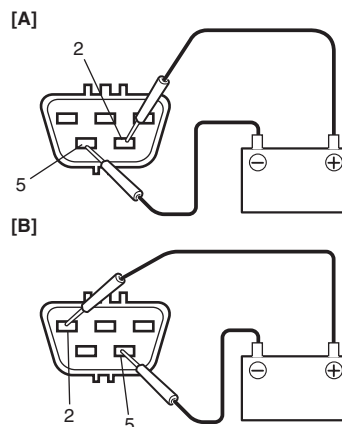


I5JB0A940011-01

[A]: Left-hand steering vehicle

[B]: Right-hand steering vehicle

- For automatic stop operation
 - a. Connect battery positive (+) terminal to terminal “1” and its negative (–) terminal to terminal “5” and let the motor turn.
 - b. Disconnect terminal “1” from battery positive (+) terminal, and let the motor stop.
 - c. Connect terminals “1” and “3” with a jumper wire, and connect terminal “4” to battery positive (+) terminal. Observe the motor turns once again then stops at a specified position as shown.

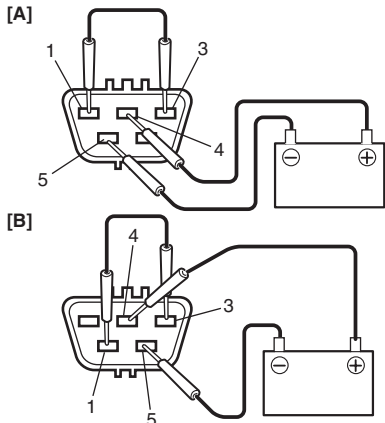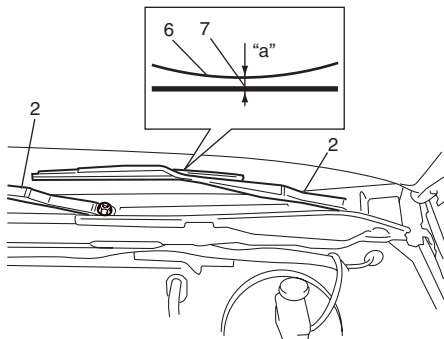

I5JB0A940012-01

[A]: Left-hand steering vehicle
[B]: Right-hand steering vehicle
“a”: 5 mm (0.20 in.)
2. Windshield wiper arms with wiper blades
6. Ceramic line
7. Wiper blade center


- d. Repeat Step 1) to 3) several times and check that the motor stops at the specified position every time. If check result is not satisfied, replace motor.

Rear Wiper Removal and Installation

S6JB0B9406006

Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Remove arm cover (1), rear wiper arm nut (2) and rear wiper arm with blade assembly (3).

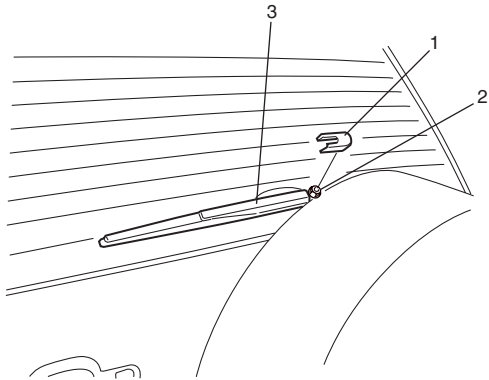

I5JB0A940013-02


- 3) Remove rear end door trim referring to “Rear End Door Lock Assembly Removal and Installation in Section 9F”.
- 4) Disconnect coupler from rear wiper motor.
- 5) Remove rear wiper motor.

Installation

- 1) Install rear wiper motor (1) and tighten rear wiper motor mounting bolts to specified torque.

Tightening torque


Rear wiper motor mounting bolt (a): 7 N·m (0.7 kgf-m, 5.0 lb-ft)

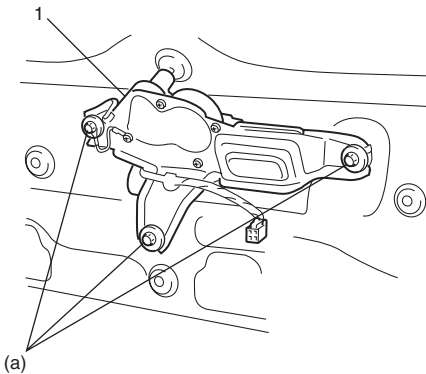

I5JB0A940014-01

9D-9 Wipers / Washers:

- 2) Connect coupler to rear wiper motor
- 3) Install rear end door trim referring to "Rear End Door Lock Assembly Removal and Installation in Section 9F".
- 4) Install rear wiper arm with blade assembly (1) to specified position as shown in figure.

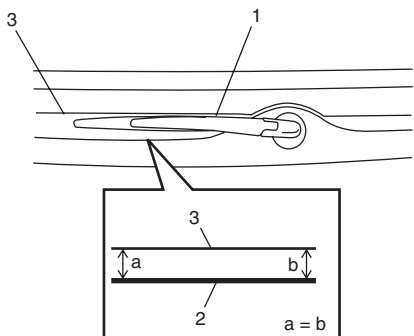


I5JB0A940015-01

- | |
|---------------------|
| 2. Rear wiper blade |
| 3. Defogger wire |

- 5) Tighten rear wiper arm nut to specified torque, and then install arm cover (1).

Tightening torque

Rear wiper arm nut (a): 8 N·m (0.8 kgf-m, 6.0 lb-ft)

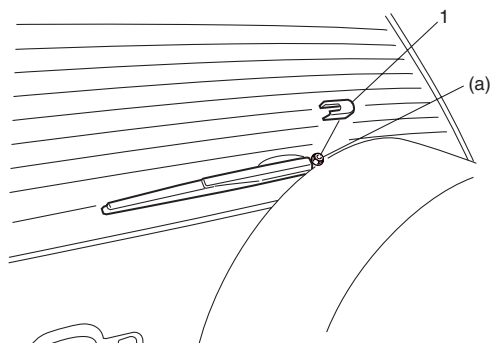

I5JB0A940016-01

- 6) Connect negative (-) cable to battery.


Rear Wiper Motor Inspection

S6JB0B9406007

NOTE

Make sure that battery voltage is 12 V or more.

- 1) Make a mark (1) on rear wiper motor (2) stop position as shown.

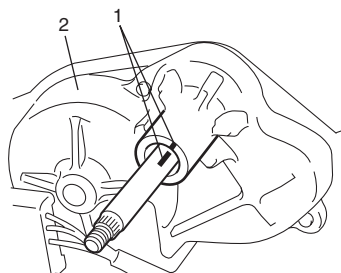


I5JB0A940017-01

- 2) Check rear wiper motor for operation as follows.

- For motor operation
 - a. Connect battery positive terminal to terminal "1" and its negative terminal to body ground.
 - b. Check motor revolution speed as specification. If check result is not as specified, replace motor.



Specification

33 – 43 r/min (rpm)

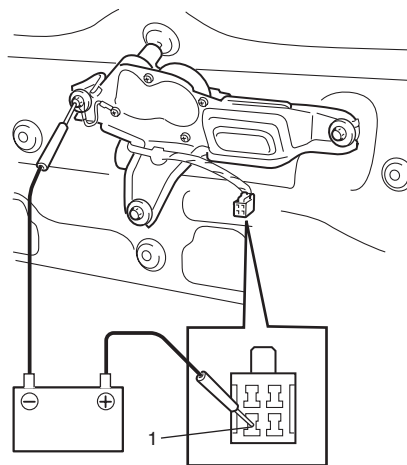

I5JB0A940018-01

- For automatic stop operation
 - a. Connect battery positive (+) terminal to terminal "1" and its negative (–) terminal to body ground and let the motor turn.
 - b. Connect terminal "2" and "3" by a jumper wire.
 - c. Observe the motor (4) turns once again then stops at a specified position as shown.

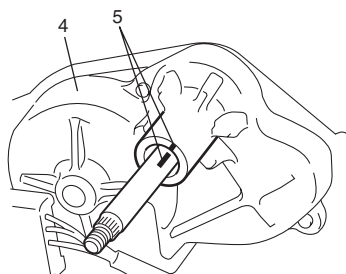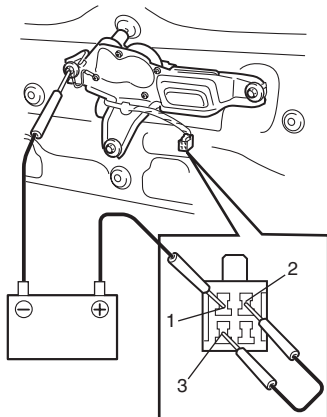

I5JB0A940019-01

5. Mark


- d. Repeat Step a. to c. several times and check that the motor stops at the specified position every time.
If check result is not satisfied, replace motor.

Windshield Wiper and Washer Switch Removal and Installation

S6JB0B9406008


Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Remove steering column hole cover (1).
- 3) Remove steering column covers (2).
Turn steering wheel to access steering column cover rear end screws (3).

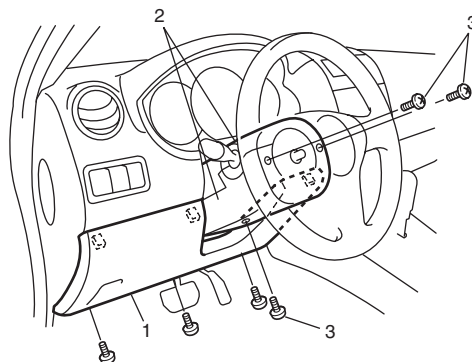

I5JB0A940020-02

- 4) Remove windshield wiper and washer switch (1) from combination switch assembly (2) and disconnect its coupler (3).

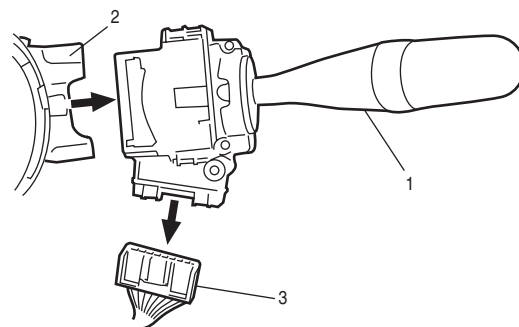

I4RS0B940008-01

Installation


Reverse removal procedure.

Windshield Wiper and Washer Switch Inspection

S6JB0B9406009

Windshield Wiper and Washer Switch

Check for continuity between terminals at each switch position. If check result is not as specified, replace switch.

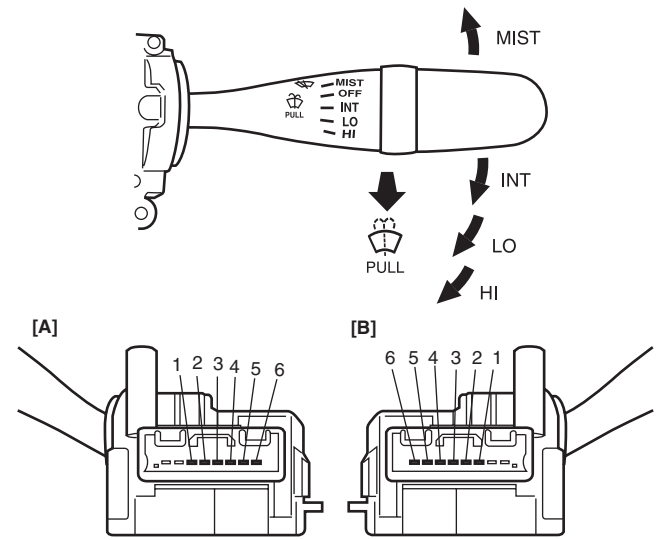

[D]	[C]	6	5	4	3
OFF				○	○
INT				○	○
LO			○	○	
HI		○	○		
MIST			○	○	


[E]	[C]	1	2
ON		○	○
OFF			

I5JB0D940001-01



[A]: RHD
[B]: LHD
[C]: Terminal
[D]: Wiper switch
[E]: Washer switch

Intermittent Wiper Relay Circuit

- 1) Turn the windshield wiper switch to “INT” position.
- 2) Connect battery positive (+) terminal to terminal “5” and its negative (–) terminal to terminal “2”.
- 3) Connect voltmeter positive lead to terminal “4” and its negative lead to terminal “2”.
- 4) Check that the voltmeter indicates the battery voltage (10 – 14 V).
- 5) Connect terminal “3” and terminal “5” by a jumper wire.

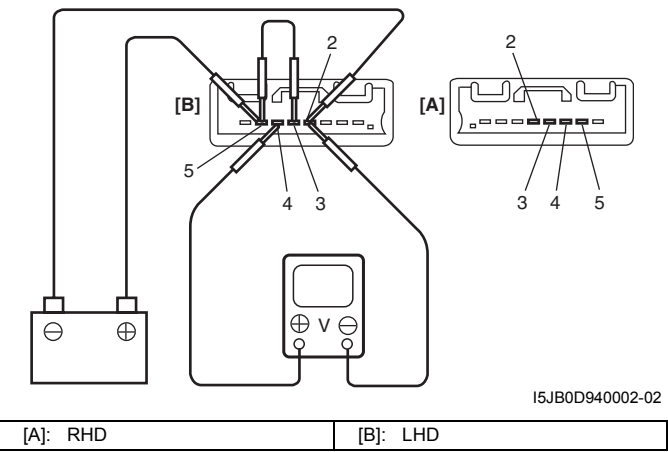



- 6) Disconnect end of the jumper wire from terminal “5”.
- 7) Connect disconnected jumper wire end to terminal “2”, then check that voltage between terminal “4” and terminal “2” changes as shown. If check result is not satisfied, replace switch.

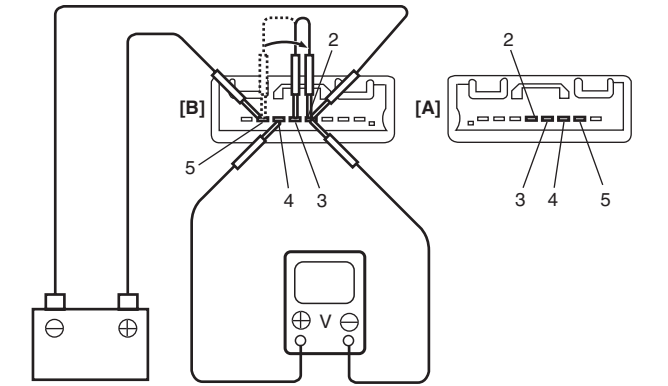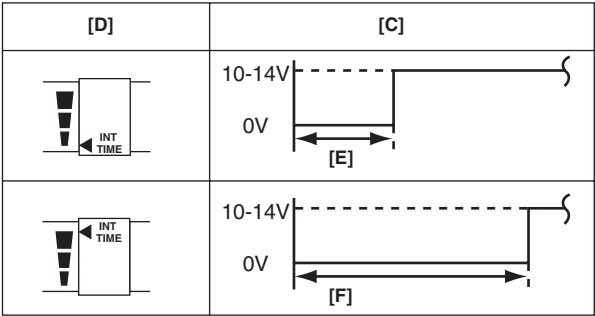

[A]: RHD	[D]: INT time control switch position
[B]: LHD	[E]: 1.6 ± 1 sec.
[C]: Voltage	[F]: 10.7 ± 5 sec.

Washer Linked Circuit

- 1) Make sure that front wiper switch is at “OFF” position.
 - 2) Connect battery positive (+) terminal to terminal “5” and its negative (–) terminal to terminal “2”.
 - 3) Connect voltmeter positive lead to terminal “4” and its negative lead to terminal “2”.
 - 4) When front washer switch is ON, check that voltage changes as shown in figure.
- If check result is not satisfied, replace switch.

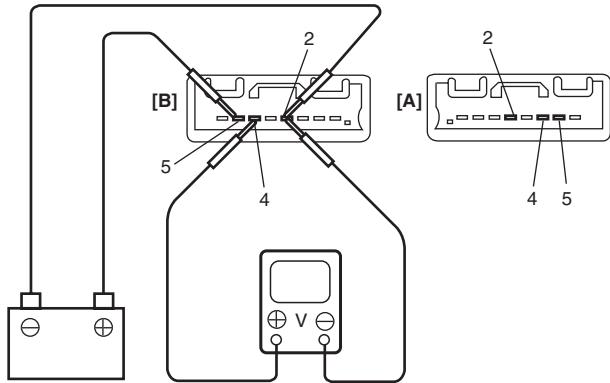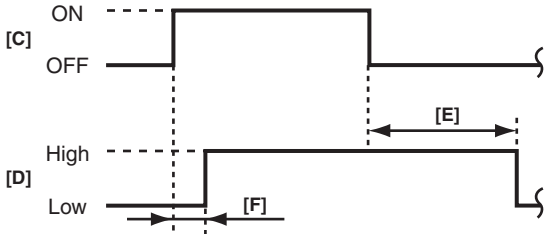

I5JB0D940004-02

[A]: RHD	[D]: Voltage
[B]: LHD	[E]: Approx. 2.2 sec.
[C]: Wiper switch	[F]: Approx. 0.3 sec.

Rear Wiper and Washer Switch Removal and Installation


S6JB0B9406010

For removal and installation, refer to “Windshield Wiper and Washer Switch Removal and Installation”.

Rear Wiper and Washer Switch Inspection

S6JB0B9406011

Check for continuity between terminals at each switch position. If check result is not as specified, replace switch.

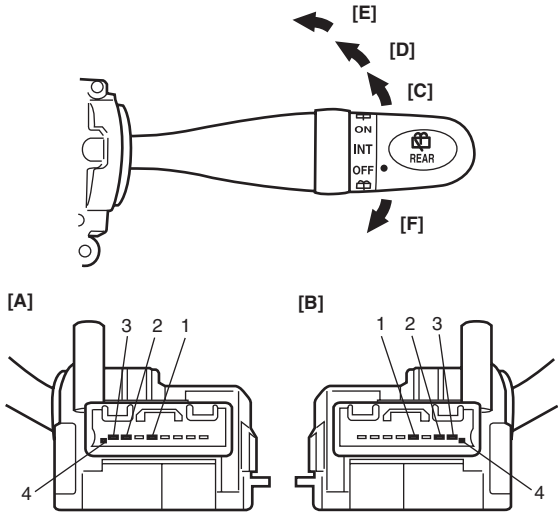

	1	2	3	4
OFF				
[C]	○			○
[D]	○		○	
[E]	○	○	○	
[F]	○	○		

I5JB0D940005-01


[A]: RHD	[B]: LHD
----------	----------

Rear Wiper Relay Removal and Installation

S6JB0B9406012

Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Remove rear end door trim from rear end door referring to “Rear End Door Lock Assembly Removal and Installation in Section 9F”.
- 3) Remove rear wiper relay (1).

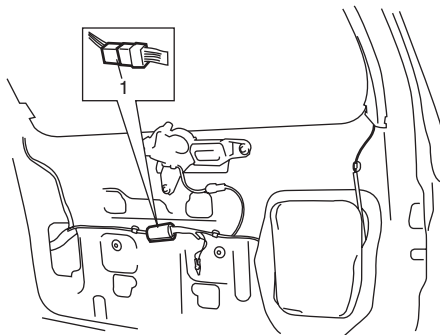

I5JB0A940021-01


Installation

Reverse removal procedure for installation.

Rear Wiper Relay Inspection

S6JB0B9406013

- 1) Check that there is no continuity between terminal “4” and “5”. If there is continuity, replace relay.
- 2) Check that there is continuity between terminal “3” and “5”. If there is no continuity, replace relay.
- 3) Connect battery positive (+) terminal to terminal “2” of relay.
- 4) Connect battery negative (–) terminal to terminal “1” of relay.
- 5) Check continuity between terminal “4” and “5”. If there is no continuity when relay is connected to the battery, replace relay.

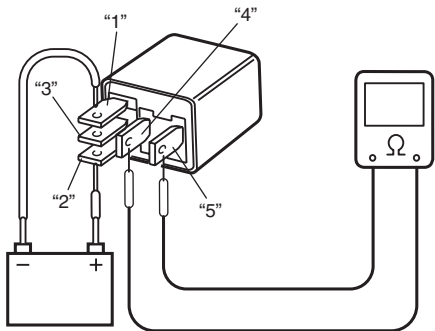


I5JB0A940022-01

Headlight Washer Switch Inspection (If Equipped)

S6JB0B9406014

Check for continuity between terminals at each switch position.

If check result is not as specified, replace switch.

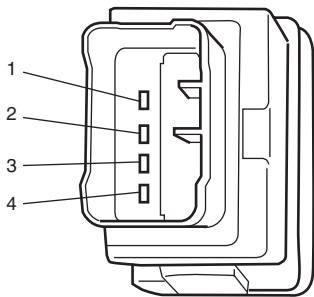

Terminal	1	2	3	4
Switch Position				
OFF	○		○ ⊕	○
ON (PUSH IN)		○	○ ⊕	○


I5JB0A940023-01

Headlight Washer Pump Removal and Installation (If Equipped)

S6JB0B9406015

Removal

- 1) Remove front bumper referring to “Front Bumper Components in Section 9K”.
- 2) Disconnect headlight washer hose (1) and washer pump connector (2) from headlight washer pump (3).
- 3) Remove headlight washer pump from washer tank.

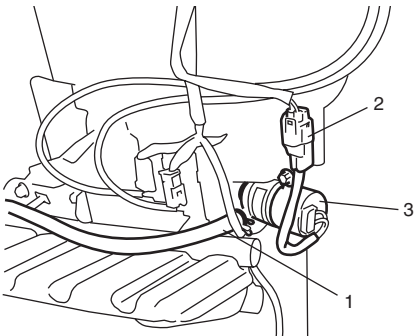

I5JB0A940024-01

Installation


Reverse removal procedure for installation.

Headlight Washer Nozzle Removal and Installation (If Equipped)

S6JB0B9406016

Removal

- 1) Remove front bumper referring to “Front Bumper Components in Section 9K”.
- 2) Disconnect headlight washer hose (1) from headlight washer nozzle (2).
- 3) Remove headlight washer nozzle from front bumper.

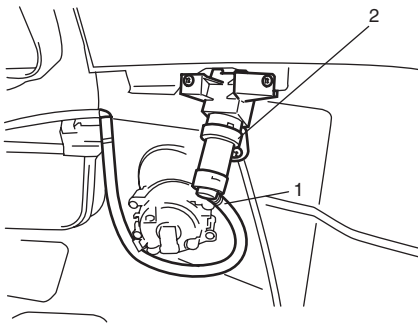

I5JB0A940025-01

Installation

Reverse removal procedure for installation.

Specifications

Tightening Torque Specifications

S6JB0B9407001

Fastening part	Tightening torque			Note
	N·m	kgf-m	lb-ft	
Windshield wiper bolt	8.5	0.85	6.5	☞
Windshield wiper arm nut	14	1.4	10.5	☞
Rear wiper motor mounting bolt	7	0.7	5.0	☞
Rear wiper arm nut	8	0.8	6.0	☞

NOTE

The specified tightening torque is also described in the following.
“Wipers and Washers Components”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Glass / Windows / Mirrors

General Description

Rear End Door Window Defogger System Description


S6JB0B9501001

The rear end door window defogger is controlled by BCM. For the BCM description refer to “BCM General Description in Section 10B”.

Windshield Construction

S6JB0B9501002

The windshield is installed by using a special type of adhesive (that is, one component urethane adhesive used with primer). For the windshield replacement, it is important to use an adhesive which provides sufficient adhesion strength and follow the proper procedure.

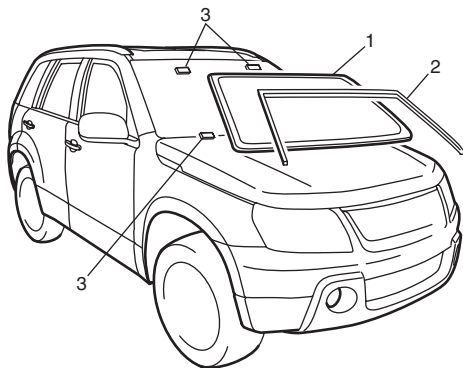

I5JB0A950001-01

1. Windshield glass	3. Fastener
2. Windshield molding	

CAUTION

- Described is the glass replacement by using 3 types of primers and 1 type of adhesive made by YOKOHAMA (one component urethane adhesive to be used with primer in combination). When using primer and adhesive made by other manufacturers, be sure to refer to handling instructions supplied with them. Negligence in following such procedure or misuse of the adhesive in any way hinders its inherent adhesive property. Therefore, before the work, make sure to read carefully the instruction and description given by the maker of the adhesive to be used and be sure to follow the procedure and observe each precaution throughout the work.
- Should coated surface be scratched or otherwise damaged, be sure to repair damaged part, or corrosion may start from there.

Use the specific adhesive which has the following property.

Glass adhesive shearing strength

40 kg/cm² (569 lb/in²) or more


Adhesive materials and tools required for removal and installation.

- One component urethane adhesive and primers used in combination (For one sheet of windshield).
 - Adhesive (470 g (15.7 oz.))
 - Primer for glass (30 g (1.0 oz.))
 - Primer for body (30 g (1.0 oz.))
 - Primer for molding (30 g (1.0 oz.))
- Eyeleteer
- Piano string
- Windshield knife
- Brush for primer application (2 pcs)
- Knife
- Rubber sucker grip
- Sealant gun (for filling adhesive)
- Putty spatula (for correcting adhered parts)

Rear Quarter Window Construction

S6JB0B9501003

The rear quarter window is installed by using a special type of adhesive (that is, one component urethane adhesive used with primer). For the rear quarter window replacement, it is important to use an adhesive which provides sufficient adhesion strength and follow the proper procedure.

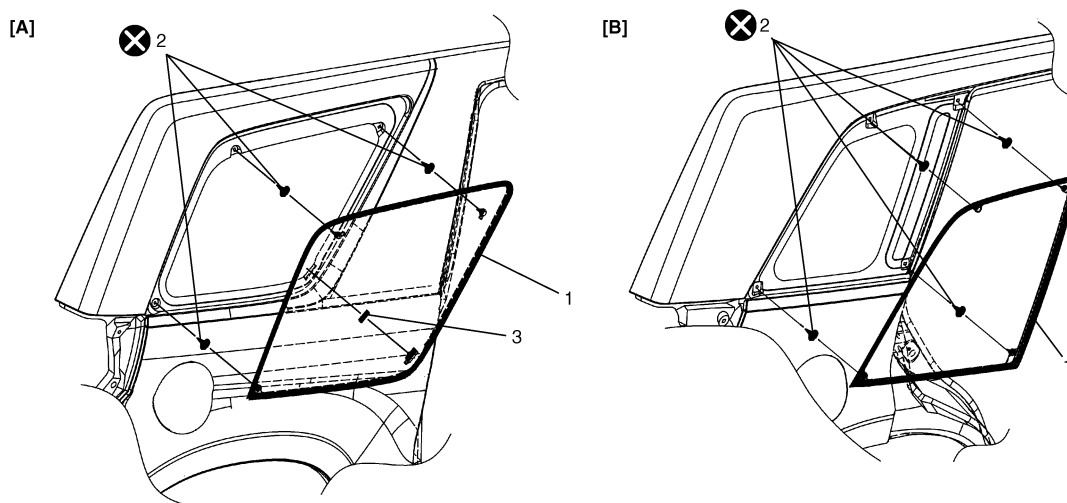

I5JB0A950002-01

[A]: 3 door model	1. Rear quarter window glass	3. Fastener
[B]: 5 door model	2. Rear quarter window glass clip	⊗: Do not reuse.

⚠ CAUTION

- Described is the glass replacement by using 3 types of primers and 1 type of adhesive made by YOKOHAMA (one component urethane adhesive to be used with primer in combination). When using primer and adhesive made by other manufacturers, be sure to refer to handling instructions supplied with them. Negligence in following such procedure or misuse of the adhesive in any way hinders its inherent adhesive property. Therefore, before the work, make sure to read carefully the instruction and description given by the maker of the adhesive to be used and be sure to follow the procedure and observe each precaution throughout the work.
- Should coated surface be scratched or otherwise damaged, be sure to repair damaged part, or corrosion may start from there.

9E-3 Glass / Windows / Mirrors:

Use the specific adhesive which has the following property.

Glass adhesive shearing strength
40 kg/cm² (569 lb/in²) or more

Adhesive materials and tools required for removal and installation.

- One component urethane adhesive and primers used in combination (For one sheet of rear quarter window).
 - Adhesive (470 g (15.7 oz.))
 - Primer for glass (30 g (1.0 oz.))
 - Primer for body (30 g (1.0 oz.))
 - Primer for molding (30 g (1.0 oz.))
- Eyeleteer
- Piano string
- Windshield knife
- Brush for primer application (2 pcs)
- Knife
- Rubber sucker grip
- Sealant gun (for filling adhesive)
- Putty spatula (for correcting adhered parts)

Diagnostic Information and Procedures

Rear End door Window Defogger Symptom Diagnosis

S6JB0B9504001

NOTE

- Use of SUZUKI scan tool makes it easy to check whether a faulty condition is on the input side or output side of BCM. For checking procedure, refer to “Diagnosis Using Output Test Function of SUZUKI Scan Tool” under “Scan Tool Data in Section 10B”.
- Check each part in the order from the top of the following list.

Condition	Possible cause	Correction / Reference Item
Rear end door window defogger does not operate	Circuit fuse blown	<i>Replace fuse and check for short circuit.</i>
	Rear end door window defogger relay faulty	<i>Check rear end door window defogger relay referring to “Rear End Door Window Defogger Relay Inspection”.</i>
	Defogger wire faulty	<i>Check defogger wire referring to “Rear End Door Window Defogger Wire Inspection”.</i>
	Wiring or grounding faulty	<i>Repair circuit.</i>
	HVAC control module faulty	<i>Check HVAC control module referring to “HVAC Control Module and Its Circuits Inspection in Section 7B”.</i>
	BCM faulty	<i>Replace after making sure that none of above parts is faulty.</i>

Power Window Control System Symptom Diagnosis

S6JB0B9504002

Condition	Possible cause	Correction / Reference Item
All power windows do not operate	Circuit fuse blown	Replace fuse and check for short circuit.
	Power window main switch faulty	Check power window main switch referring to "Power Window Main Switch Inspection".
	Ignition switch faulty	Check ignition switch referring to "Ignition Switch Inspection in Section 9C".
	Wiring or grounding faulty	Repair circuit.
Only one power window does not operate	Power window main switch faulty	Check power window main switch referring to "Power Window Main Switch Inspection".
	Power window sub switch faulty	Check power window sub switch referring to "Power Window Sub Switch Inspection".
	Wiring and/or coupler faulty	Check wiring and/or coupler.
	Power window regulator faulty	Check window regulator.
	Power window motor faulty	Check power window motor.
	Wiring or grounding faulty	Repair circuit.

Power Door Mirror Control System Symptom Diagnosis

S6JB0B9504003

Condition	Possible cause	Correction / Reference Item
All power mirrors do not operate	Circuit fuse blown	Replace fuse and check for short circuit.
	Power door mirror switch faulty	Check power door mirror switch referring to "Power Door Mirror Switch Inspection".
	Wiring or grounding faulty	Repair circuit.
One power mirror does not operate	Power door mirror switch faulty	Check power door mirror switch referring to "Power Door Mirror Switch Inspection".
	Power door mirror actuator faulty	Check actuator referring to "Power Door Mirror Actuator Inspection".
	Wiring or grounding faulty	Repair circuit.

Door Mirror Heater Symptom Diagnosis (If Equipped)

S6JB0B9504004

NOTE

- Use of SUZUKI scan tool makes it easy to check whether a faulty condition is on the input side or output side of BCM. For checking procedure, refer to "Diagnosis Using Output Test Function of SUZUKI Scan Tool" under "Scan Tool Data in Section 10B".
- Check each part in the order from the top of the following list.

Condition	Possible cause	Correction / Reference Item
All door mirror heaters does not operate	Circuit fuse blown	Replace fuse and check for short circuit.
	Mirror heater relay faulty	Check mirror heater relay referring to "Door Mirror Heater Relay Inspection (If Equipped)".
	Wiring or grounding faulty	Repair circuit.
	HVAC control module faulty	Check HVAC control module referring to "HVAC Control Module and Its Circuits Inspection in Section 7B".
	BCM faulty	Replace after making sure that none of above parts is faulty.
Only one door mirror heater does not operate	Door mirror heater faulty	Check door mirror heater referring to "Door Mirror Heater Inspection (If Equipped)".
	Wiring or grounding faulty	Repair circuit.


Repair Instructions

Windshield Removal and Installation

S6JB0B9506001

Removal

- 1) Clean both inside and outside of glass and around it.
- 2) Remove wiper arms and cowl top garnish.
- 3) Remove windshield side garnish.
- 4) Using tape, cover body surface around glass to prevent any damage.
- 5) Remove rear view mirror, sun visor and front pillar trims (right & left).
- 6) If necessary, remove instrument panel. Refer to "Instrument Panel Removal and Installation in Section 9C".
- 7) If necessary, remove head lining. Refer to "Head Lining Removal and Installation in Section 9H".
- 8) Remove (or cut) windshield molding.
- 9) Drill hole with eyeleteer (1) through adhesive and let piano string through it.


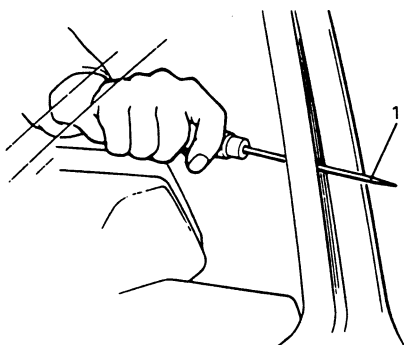


I2RH01950040-01

- 10) Cut adhesive all around windshield (1) with piano string (2). When using tool, windshield knife (3), to cut adhesive, be careful not to cause damage to windshield. Use wire to cut adhesive along lower part of windshield.

NOTE

Use piano string (2) as close to glass as possible so as to prevent damage to body and instrument panel.

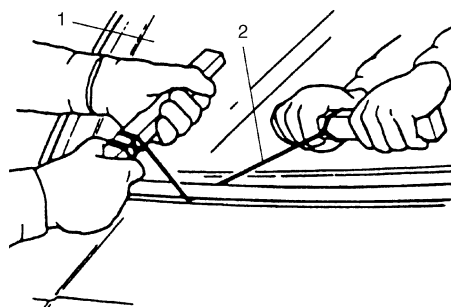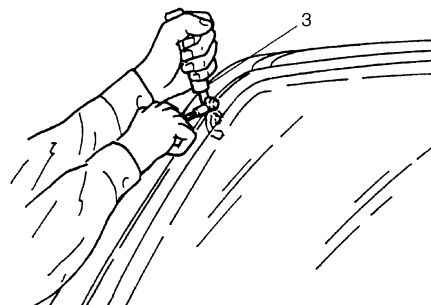


I3RH0A950006-01

- 11) Using knife (1), smoothen adhesive (2) remaining on body side (3) so that it is 1 – 2 mm (0.039 – 0.078 in.) thick all around.


NOTE

Before using knife (1), clean it with alcohol or the like to remove oil from it.

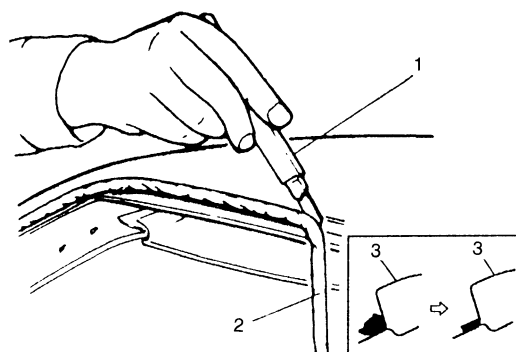

I2RH01950042-01

- 12) When reusing windshield, remove the adhesive (1) from it, using care not to damage primer coated surface (2).

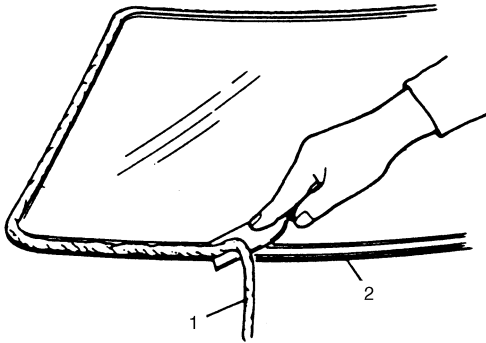


I2RH01950043-01

Installation

- 1) Using cleaning solvent, clean windshield edge where windshield glass is to be adhered. (Let it dry for more than 10 minutes.)
- 2) To determine installing position of glass (1) to body (2), position glass against body so that clearance between upper end of glass (1) and body (2) is approximately 5.5 mm (0.217 in.) and clearances between each side end (right & left) of glass (1) and body (2) are even. Then mark mating marks on glass (1) and body (2) as shown. Upper clearance can be adjusted by moving glass stoppers position.

Windshield clearance

"a": approx. 5.5 mm (0.217 in.)

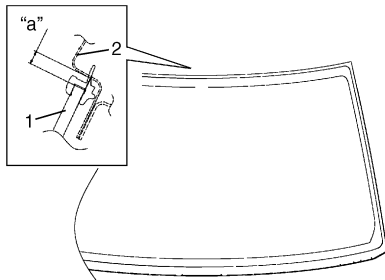


I5JB0A950003-01

- 3) Clean contact surfaces of old adhesive (4), paint or bare metal thoroughly. If surfaces of paint or bare metal come out, apply primer (2) for body with caution not to apply primer (2) to surface of adhesive remaining on body.

NOTE

- Be sure to refer to primer maker's instruction for proper handling and drying time.
- Do not touch body and old adhesive surfaces where glass is to be adhered.

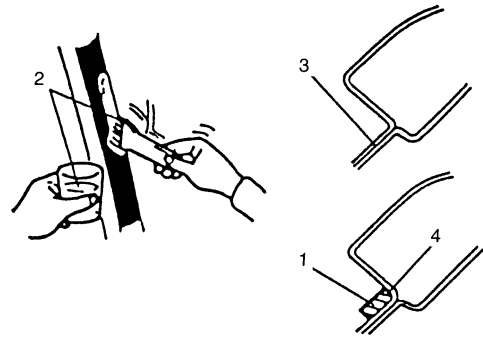

I2RH01950046-01


- | |
|------------------------|
| 1. Do not apply primer |
| 3. Apply primer |

- 4) Install new molding to glass.
- 5) Clean glass surface to be adhered to body with clean cloth. If cleaning solvent is used, let it dry for 10 minutes or more.

Cleaning Area for windshield (distance from the edge of glass or molding)

30 – 50 mm (1.18 – 1.97 in.)

- 6) Install new fastener (1) to windshield (2).

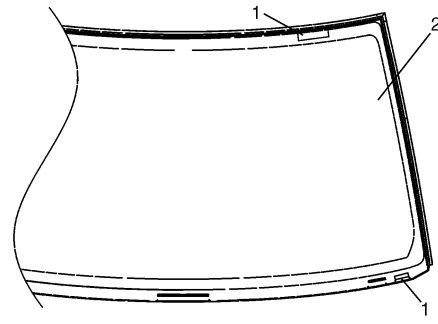

I5JB0A950004-02

- 7) Using new brush, apply sufficient amount of primer onto glass along glass edge.


NOTE

- Be sure to refer to maker's instruction for proper handling and drying time.
- Do not apply primer on outside of ceramic coated surface.
- Do not touch primer coated surface.

Width applied primer for windshield

"a": 15 mm (0.59 in.)

"b": 20 mm (0.79 in.)

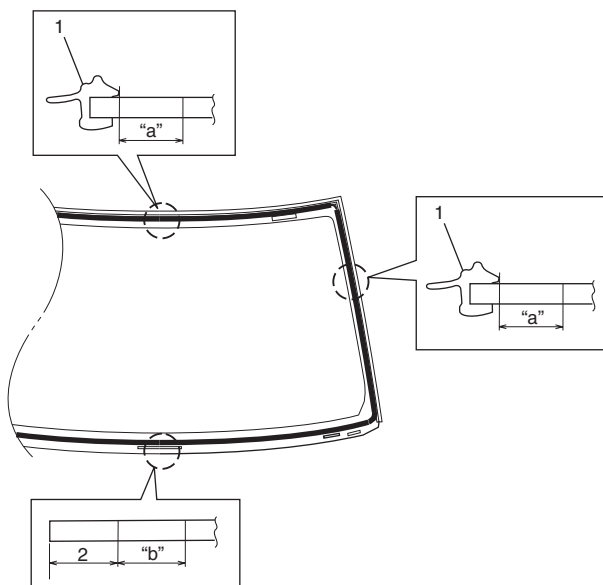

I5JB0A950005-01

- | |
|-----------------------|
| 1. Molding |
| 2. 22.4 mm (0.88 in.) |

- 8) Apply primer for molding along molding surface all around.

- 9) Apply adhesive (1) referring to figure.

NOTE

- Press glass (2) against fittings surface of body panel quickly after adhesive (1) is applied.
- Use of rubber sucker grip is helpful to hold and carry glass after adhesive (1) is applied.
- Perform steps 8) to 9) within 10 min. to ensure sufficient adhesion.
- Be sure to refer to adhesive maker's instruction for proper handling and drying time.
- Start from bottom side of glass (2).
- Be careful not to damage primer.


Adhesive amount specifications and position for windshield

Width "a": Approx. 7 mm (0.27 in.)

Height "b": Approx. 15 mm (0.59 in.)

Position "c": Approx. 4 mm (0.15 in.)


Position "d": Approx. 35 mm (1.38 in.) for bottom section

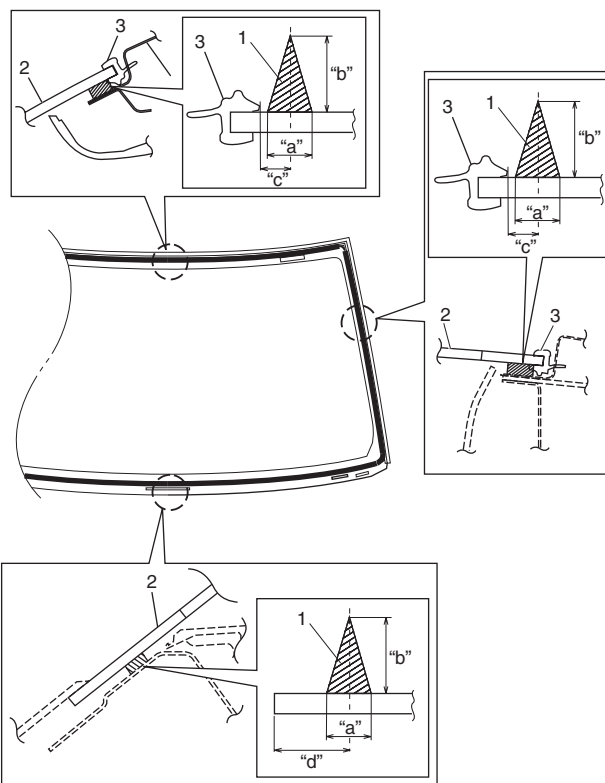

I5JB0A950006-02

- | |
|------------|
| 3. Molding |
|------------|

- 10) Holding rubber sucker grips (1), place glass onto body.

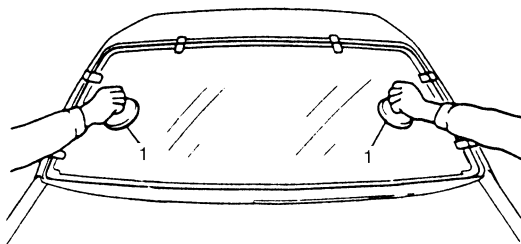

I2RH01950050-01

- 11) Check for water leakage by pouring water over windshield through hose. If leakage is found, dry windshield and fill leaky point with adhesive. If water still leaks even after that, remove glass and start installation procedure all over again.

NOTE

- Do not use high pressure water.
- Do not blow compressed air directly at adhesive applied part when drying.
- Do not use infrared light or like for drying.



I2RH01950051-01

⚠ CAUTION

Upon completion of installation, note the following.


- Sudden closing of door before adhesive is completely set may cause glass to become loose or to come off. Therefore, if door is opened or closed before adhesive is completely set, make sure to open all door glasses and use proper care.
- If molding is not securely in place, hold it down with a tape until adhesive is completely set.
- Each adhesive has its own setting time.
- Be sure to refer to its maker's instruction, check setting time of adhesive to be used and observe precautions to be taken before adhesive is set.
- Refrain from driving till adhesive is completely set so as to ensure proper and sufficient adhesion.

Rear Quarter Window Removal and Installation

S6JB0B9506002

Removal

- 1) Clean both inside and outside of glass and around it.
- 2) Using tape, cover body surface around glass to prevent any damage.
- 3) If necessary, remove instrument panel. Refer to "Instrument Panel Removal and Installation in Section 9C".
- 4) If necessary, remove quarter under trim, center pillar inner upper trim, rear pillar trim and head lining. Refer to "Head Lining Removal and Installation in Section 9H".
- 5) Drill hole with eyeleteer (1) through adhesive and let piano string through it.

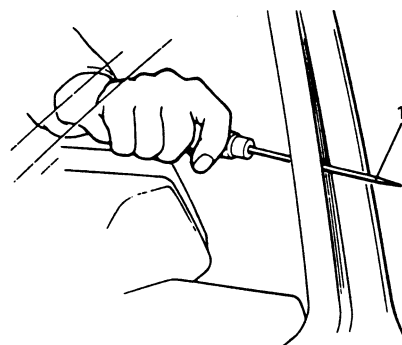


I2RH01950040-01

- 6) Cut adhesive all around rear quarter window (1) with piano string (2). When using tool, windshield knife (3), to cut adhesive, be careful not to cause damage to windshield. Use wire to cut adhesive along lower part of windshield.

NOTE

Use piano string (2) as close to glass as possible so as to prevent damage to body.

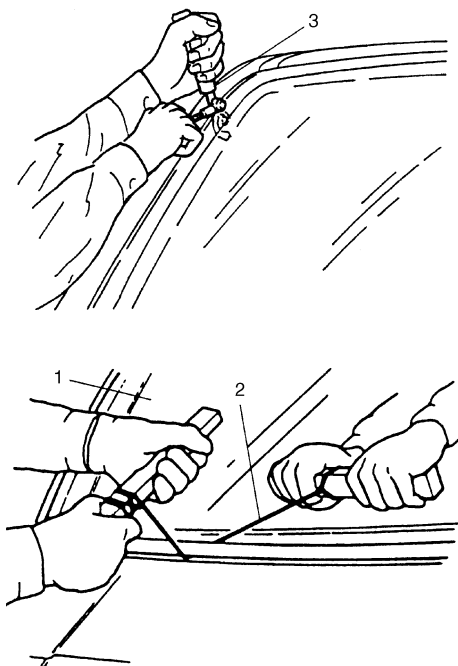


I3RH0A950006-01

- 7) Using knife (1), smoothen adhesive (2) remaining on body side (3) so that it is 1 – 2 mm (0.039 – 0.078 in.) thick all around.


NOTE

Before using knife (1), clean it with alcohol or the like to remove oil from it.

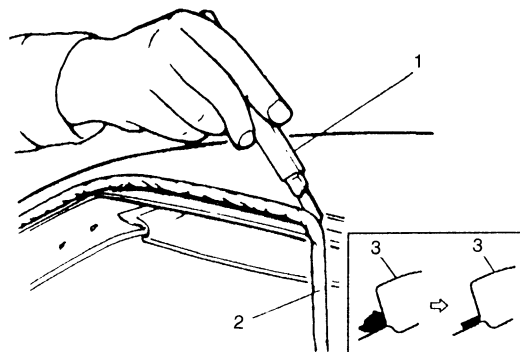

I2RH01950042-01

- 8) When reusing rear quarter window, remove the adhesive (1) from it, using care not to damage primer coated surface (2).

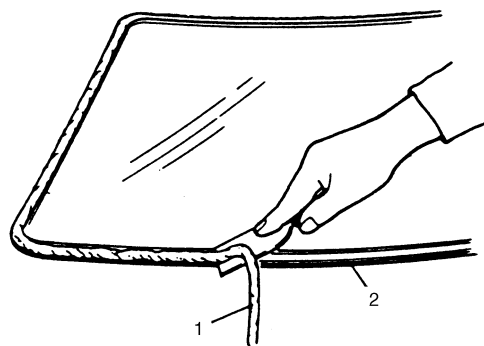


I2RH01950043-01

Installation

- 1) Using cleaning solvent, clean rear quarter window edge where rear quarter window glass is to be adhered. (Let it dry for more than 10 minutes.)
- 2) Clean contact surfaces of old adhesive (4), paint or bare metal thoroughly.
If surfaces of paint or bare metal come out, apply primer (2) for body with caution not to apply primer (2) to surface of adhesive remaining on body.

NOTE

- Be sure to refer to primer maker's instruction for proper handling and drying time.
- Do not touch body and old adhesive surfaces where glass is to be adhered.

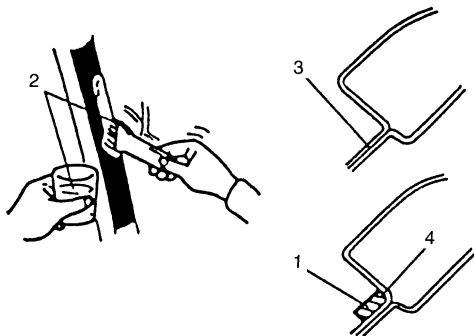

I2RH01950046-01

- | |
|------------------------|
| 1. Do not apply primer |
| 3. Apply primer |

- 3) Clean glass surface to be adhered to body with clean cloth. If cleaning solvent is used, let it dry for 10 minutes or more.



Cleaning Area for rear quarter window (distance from the edge of glass or molding)
30 – 50 mm (1.18 – 1.97 in.)

- 4) Using new brush, apply sufficient amount of primer onto glass along glass edge.

NOTE

- Be sure to refer to maker's instruction for proper handling and drying time.
- Do not apply primer on outside of ceramic coated surface.
- Do not touch primer coated surface.

Width applied primer for rear quarter window
"a": 14 mm (0.55 in.)

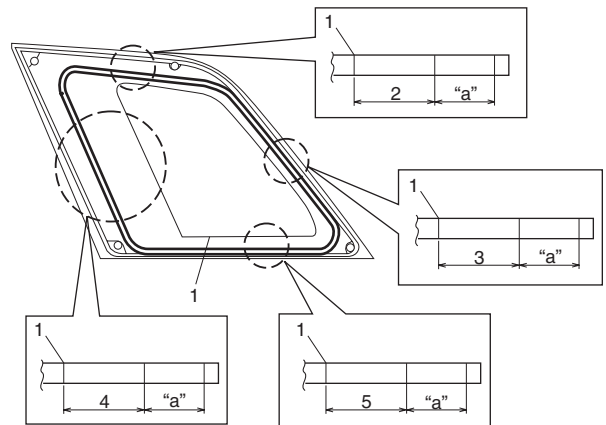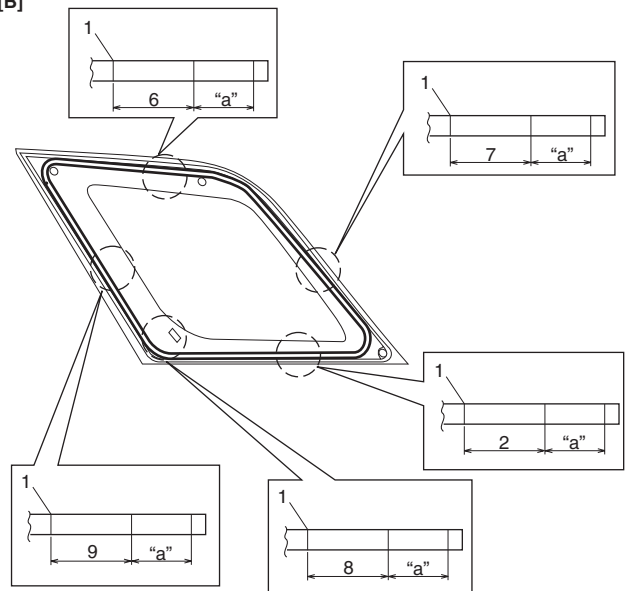[A]**[B]**

I5JB0A950007-01

[A]: 5 door model	5. 23 mm (0.91 in.)
[B]: 3 door model	6. 35 mm (1.48 in.)
1. Ceramic print line	7. 20 mm (0.79 in.)
2. 13 mm (0.51 in.)	8. 29 mm (1.41 in.)
3. 18 mm (0.71 in.)	9. 19 mm (0.75 in.)
4. 88 mm (3.46 in.)	

- 5) Apply primer for molding along molding surface all around.
- 6) Apply adhesive (1) referring to figure.

NOTE

- Press glass (2) against fittings surface of body panel quickly after adhesive (1) is applied.
- Use of rubber sucker grip is helpful to hold and carry glass after adhesive (1) is applied.
- Perform steps 4) to 5) within 10 min. to ensure sufficient adhesion.
- Be sure to refer to adhesive maker's instruction for proper handling and drying time.
- Start from bottom side of glass (2).
- Be careful not to damage primer.

Adhesive amount specifications and position for rear quarter window

Width "a": Approx. 7 mm (0.28 in.)

Height "b": Approx. 15 mm (0.59 in.)

Position "c": Approx. 20 mm (0.79 in.)

Position "d": Approx. 25 mm (0.98 in.)

Position "e": Approx. 30 mm (1.20 in.)

Position "f": Approx. 95 mm (3.75 in.)


Position "g": Approx. 42 mm (1.65 in.)

Position "h": Approx. 27 mm (1.06 in.)


Position "i": Approx. 36 mm (1.42 in.)

Position "j": Approx. 26 mm (1.02 in.)

[A]

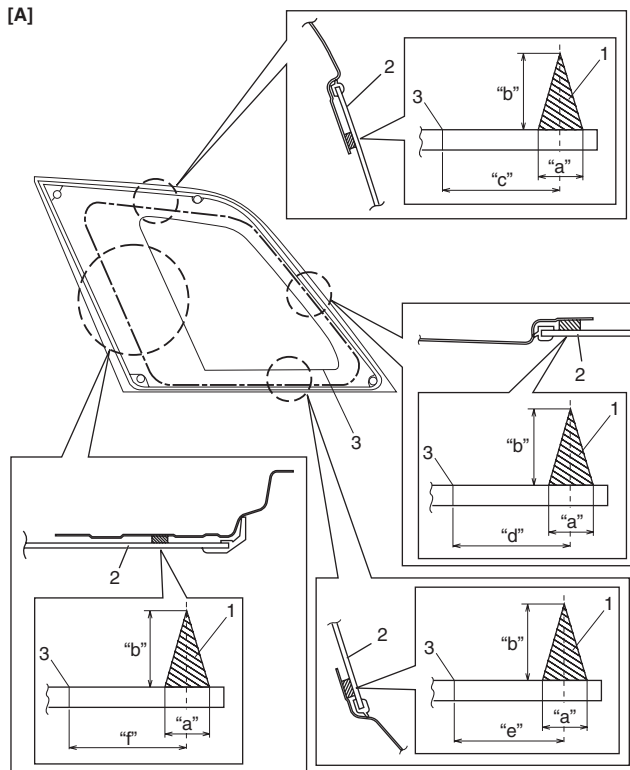


[B]

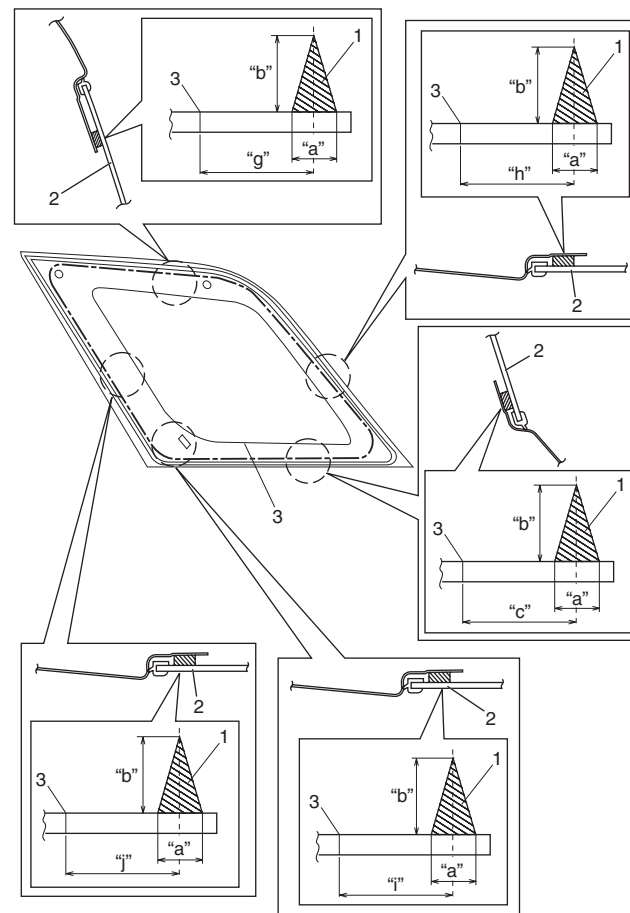

I5JB0A950008-01

[A]: 5 door model	3. Ceramic print line
[B]: 3 door model	

- 7) Holding rubber sucker grip (1), place glass onto body by aligning mating marks marked in step 3) and press it.

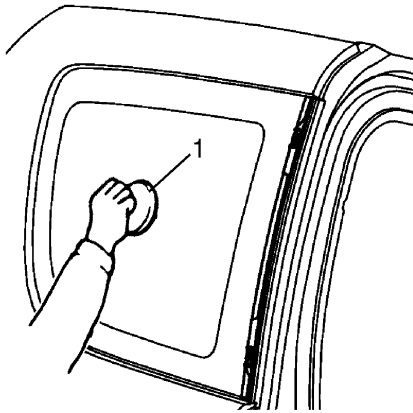


I4RS0B950004-01

- 8) Check for water leakage by pouring water over windshield through hose. If leakage is found, dry windshield and fill leaky point with adhesive. If water still leaks even after that, remove glass and start installation procedure all over again.

NOTE

- Do not use high pressure water.
- Do not blow compressed air directly at adhesive applied part when drying.
- Do not use infrared light or like for drying.

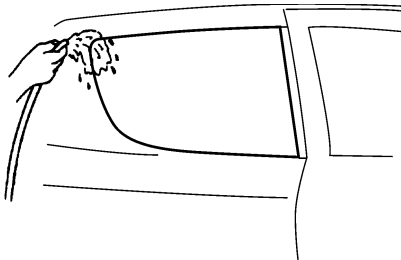

I4RS0B950005-01


⚠ CAUTION

Upon completion of installation, note the following.


 
- Sudden closing of door before adhesive is completely set may cause glass to become loose or to come off. Therefore, if door is opened or closed before adhesive is completely set, make sure to open all door glasses and use proper care.
- If molding is not securely in place, hold it down with a tape until adhesive is completely set.
- Each adhesive has its own setting time.
- Be sure to refer to its maker's instruction, check setting time of adhesive to be used and observe precautions to be taken before adhesive is set.
- Refrain from driving till adhesive is completely set so as to ensure proper and sufficient adhesion.

Front Door Window Components

S6JB0B9506003

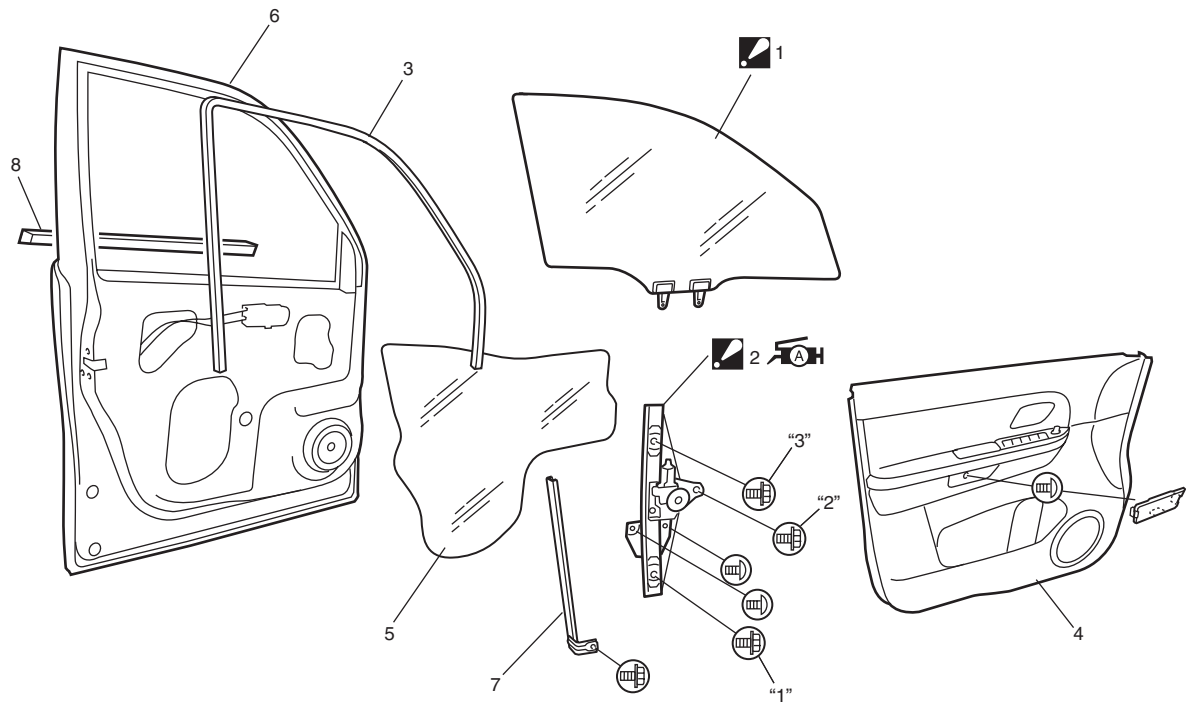

15JB0A950009-01


 1. Door glass : Tightening order rear to front.	4. Door trim	7. Front door sash
 2. Window regulator assembly : Apply lithium grease 99000-25011 to sliding part. : Tightening order "1" → "2" → "3".	5. Door sealing cover	8. Front door outer weather-strip
3. Glass run	6. Door panel	

Front Door Glass Removal and Installation

S6JB0B9506004

Removal

- 1) Remove door mirror trim (1), front door inner garnish (2) (3 door model only) and door trim screw cover (3).
- 2) Remove door trim screw (5).
- 3) Remove door trim (4) as shown.
And disconnect power window switch lead wire and door illumination light lead wire at coupler.

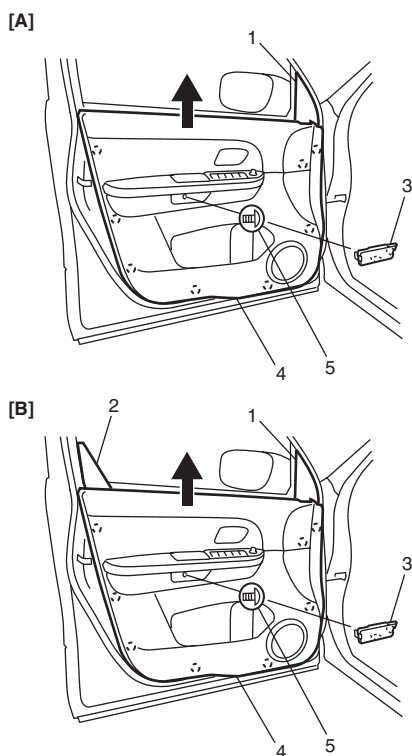


I5JB0A950010-01

[A]: 5 door model


[B]: 3 door model

- 4) Remove door sealing cover (1).

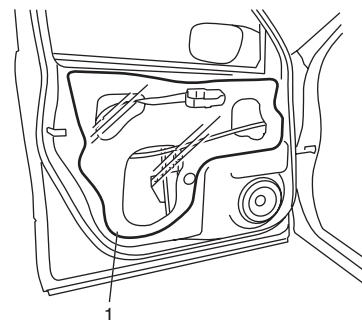

I5JB0A950011-02

- 5) Remove door glass mounting screws (1).
- 6) Remove door glass (2) while tilting it as shown.

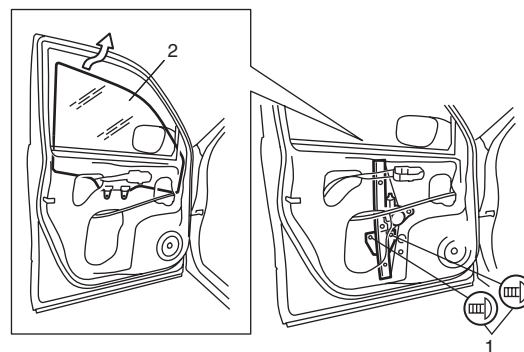


I5JB0A950012-02

Installation


Reverse removal procedure noting the following instructions.

- If there is deformity for glass run, replace it with a new one.
- Tighten door glass rear mounting screw (1) first, and then tighten door glass front mounting screw (2).

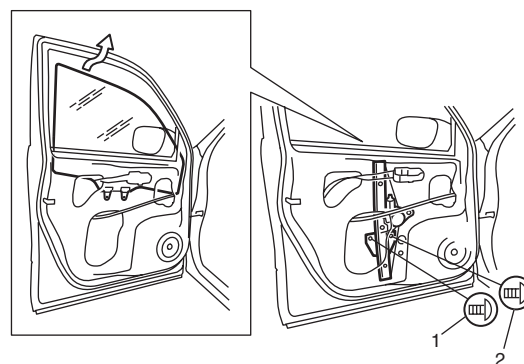

I5JB0A950013-02

- Secure door sealing cover (1) with adhesive (2).

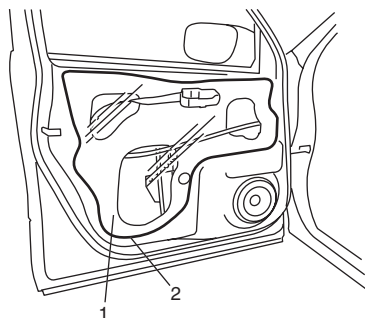


I5JB0A950014-02

- Install front door trim.


Front door trim attaching order

(1) → (2) → (3) → (4) → (5) → (6) → (7) → (8)

[A]

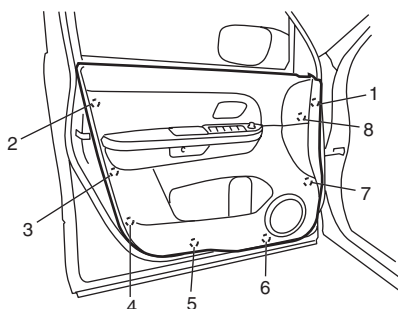

[B]

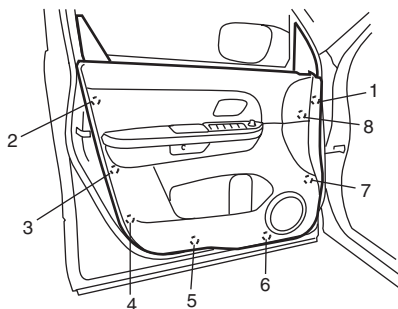

I5JB0A950015-03

[A]: 5 door model


[B]: 3 door model

Front Door Window Regulator Removal and Installation

S6JB0B9506005

Removal

- 1) Remove door glass referring to "Front Door Glass Removal and Installation".
- 2) Disconnect power window motor lead wire at coupler.
- 3) Remove regulator mounting screws (1), and then remove front door window regulator (2).

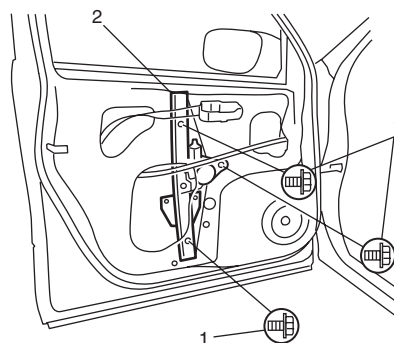

I5JB0A950016-01


Installation

Reverse removal procedure noting the following instruction.

- Apply grease to sliding portions of window regulator.
: Grease 99000-25011 (SUZUKI Super Grease A)
- Tighten front door window regulator attaching screws.

Front door window regulator screw tightening order

(a) → (c) → (b)

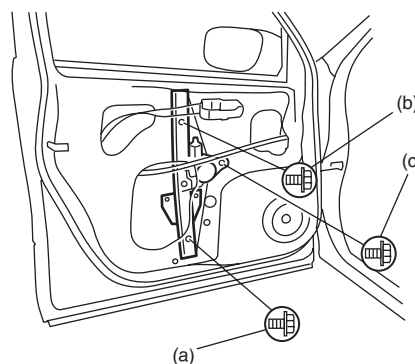

I5JB0A950017-01

Front Door Window Regulator Inspection


S6JB0B9506006

Check the following parts for wear, damage, smooth operation and lubrication:




- Check regulator sliding and rotating parts.
- Check rollers.

Rear Door Window Components

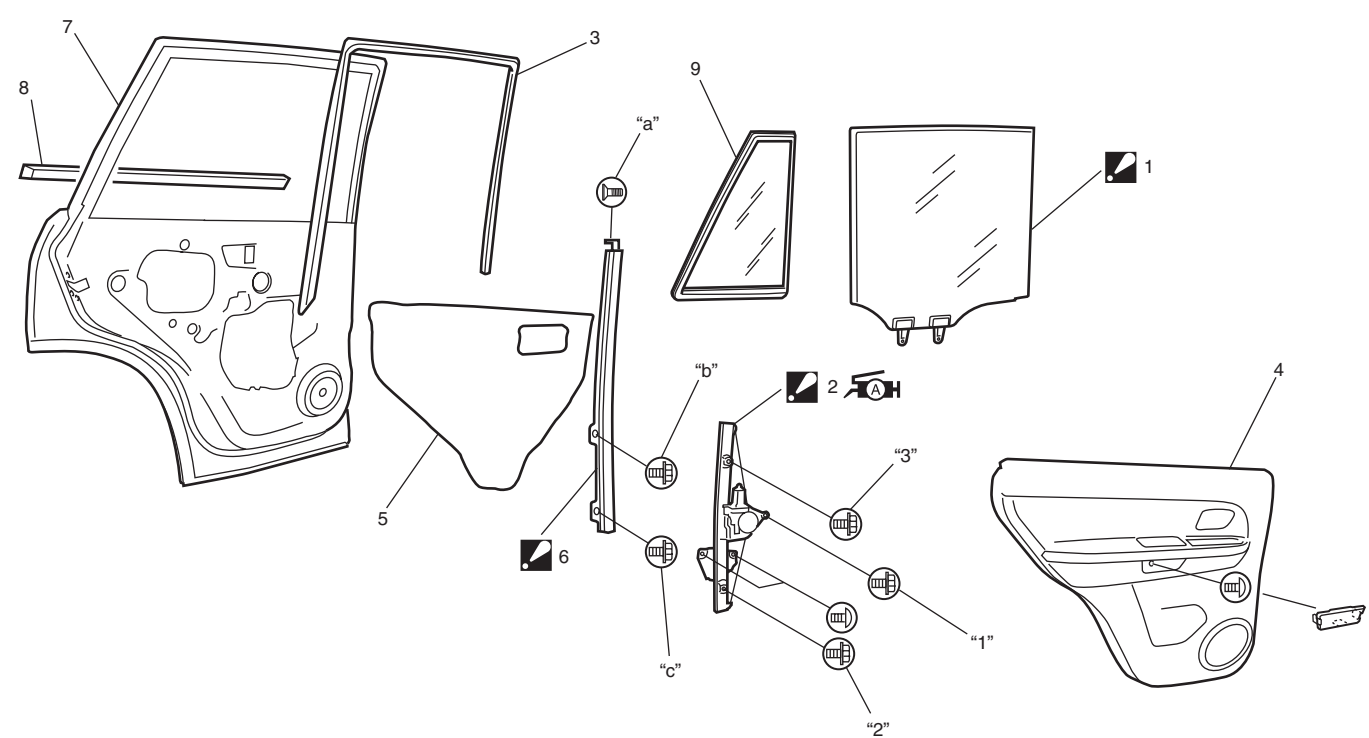S6JB0B9506007



I5JB0A950018-01


 1. Door glass : Tightening order rear to front.	4. Door trim	7. Door panel
 2. Window regulator assembly : Apply lithium grease 99000-25011 to sliding part. : Tightening order "1" → "2" → "3".	5. Door sealing cover	8. Rear door outer weather-strip
3. Glass run	 6. Door sash : Tightening order "a" → "b" → "c".	9. Rear door partition glass.

Rear Door Glass Removal and Installation

S6JB0B9506008


Removal

- 1) Remove door trim screw cover (1).
- 2) Remove door trim screw (2).

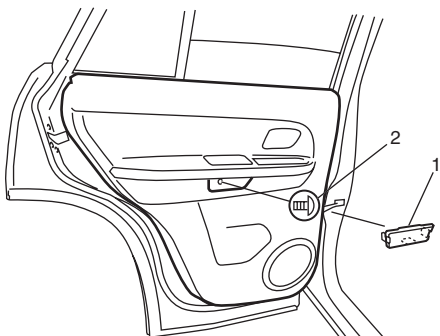


I5JB0A950019-01

- 3) Remove door trim (1) as shown.

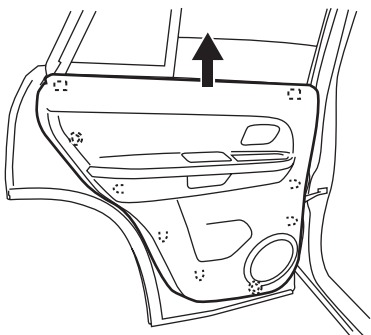


I5JB0A950020-01

- 4) Remove door sealing cover (1).

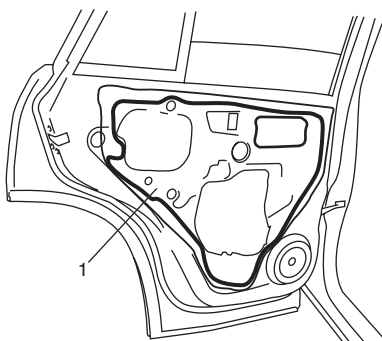

I5JB0A950021-01

- 5) Detach rear part of glass run from door sash (1), and remove door sash (1).
- 6) Remove door glass (2) as shown.

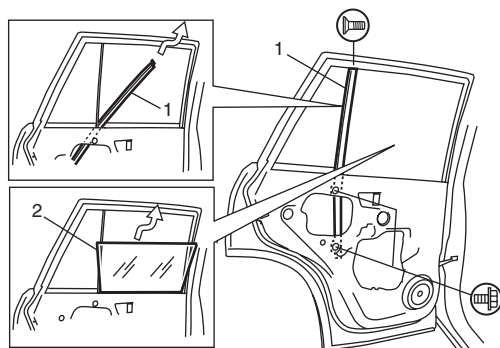


I5JB0A950022-01

Installation


Reverse removal procedure noting the following instructions.

- If there is deformity for glass run, replace it with a new one.
- Tighten rear door window mounting screw (a) first and then (b).

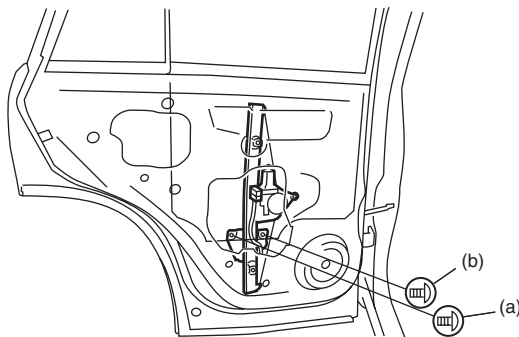


I5JB0A950023-01

- Tighten door sash mounting screw and bolts in order of (a), (b) and (c).

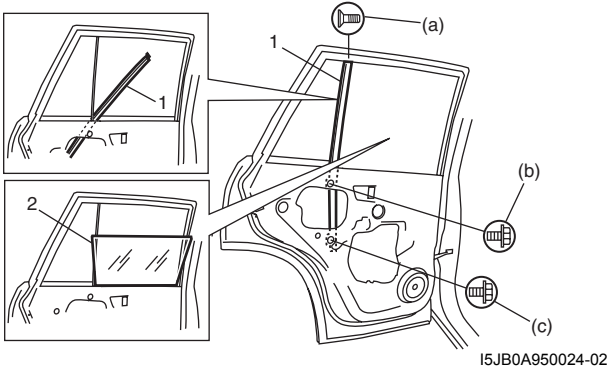


- Secure door sealing cover (1) with adhesive (2).

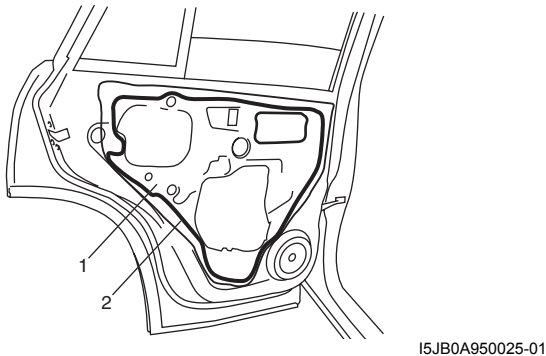

- Install rear door trim.

Rear door trim attaching order

(1) → (2) → (3) → (4) → (5) → (6) → (7)

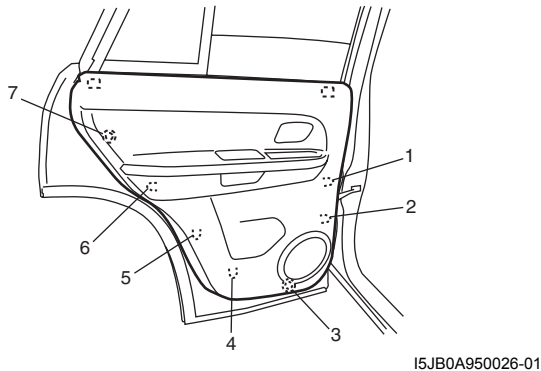


Rear Door Window Regulator Removal and Installation

S6JB0B9506009

Removal


- 1) Remove door glass referring to "Rear Door Glass Removal and Installation".
- 2) Disconnect power window motor lead wire at coupler and loosen clamp.
- 3) Loosen regulator mounting screws (1), and then remove rear window regulator (2).

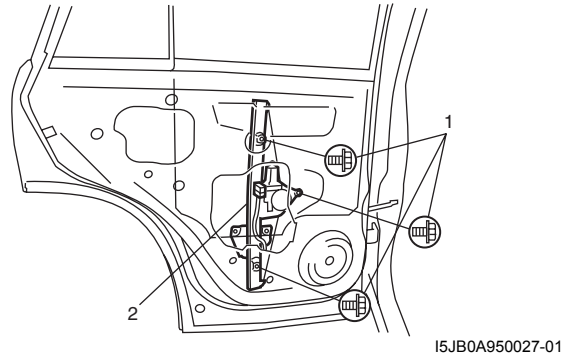

Installation

Reverse removal procedure noting the following.

- Apply grease to sliding and rotating portions of window regulator.
- : Grease 99000-25011 (SUZUKI Super Grease A)
- Tighten rear door window regulator mounting screws in order of (a), (b) and (c).
 - Tighten rear door window mounting screw (1) first and then (2).

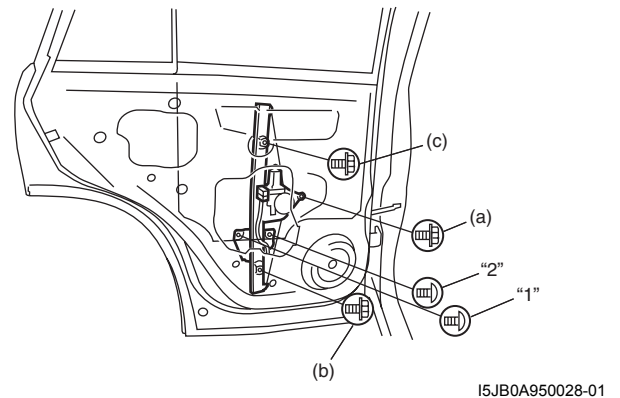

Rear Door Window Regulator Inspection


S6JB0B9506010

Check the following point:

- Check regulator sliding and rotating parts.
- Check rollers for wear and damage.

Rear End Door Window Components

S6JB0B9506011

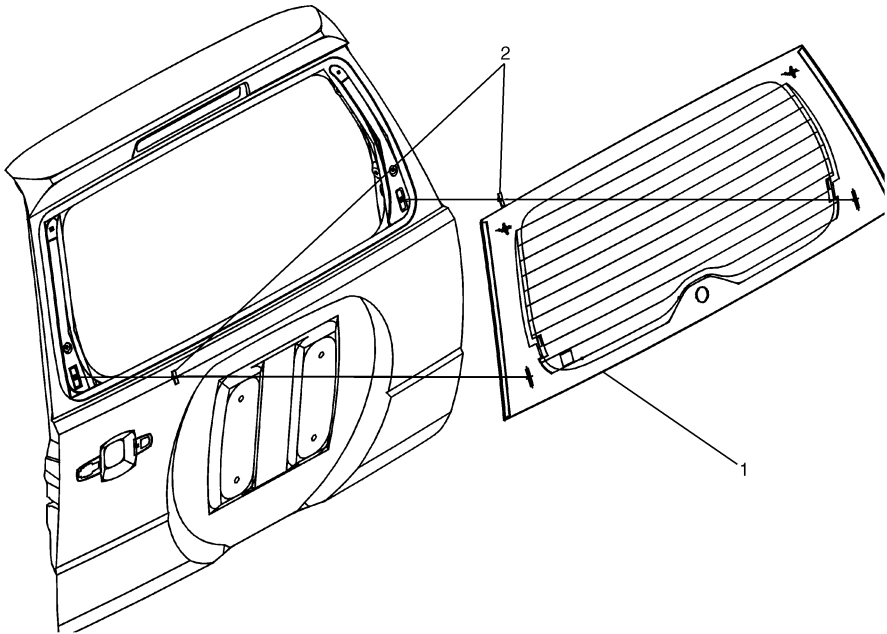

1. Rear end door glass	2. Fastener
------------------------	-------------

I5JB0A950029-01

Rear End Door Glass Removal and Installation

S6JB0B9506012

Refer to "Windshield Removal and Installation" as removal and installation procedures are basically the same. However, note the following.

- Observe the following precautions when applying adhesive (1) along glass (2) edge.
- Adhesive (1) should be applied evenly especially in height.
- Be careful not to damage primer (3).
- With the position of fastener (4) properly aligned, install glass (2) on rear end door panel (5).
- Press glass against body quickly after adhesive (1) is applied.

Adhesive amount specifications and position for rear end door glass


Width "a": 7 mm (0.28 in.)

Height "b": 14 mm (0.55 in.)

Width "c": 16 mm (0.63 in.)

Position "d": 15 mm (0.59 in.) for glass upper and bottom section

Position "e": 8 mm (0.31 in.)

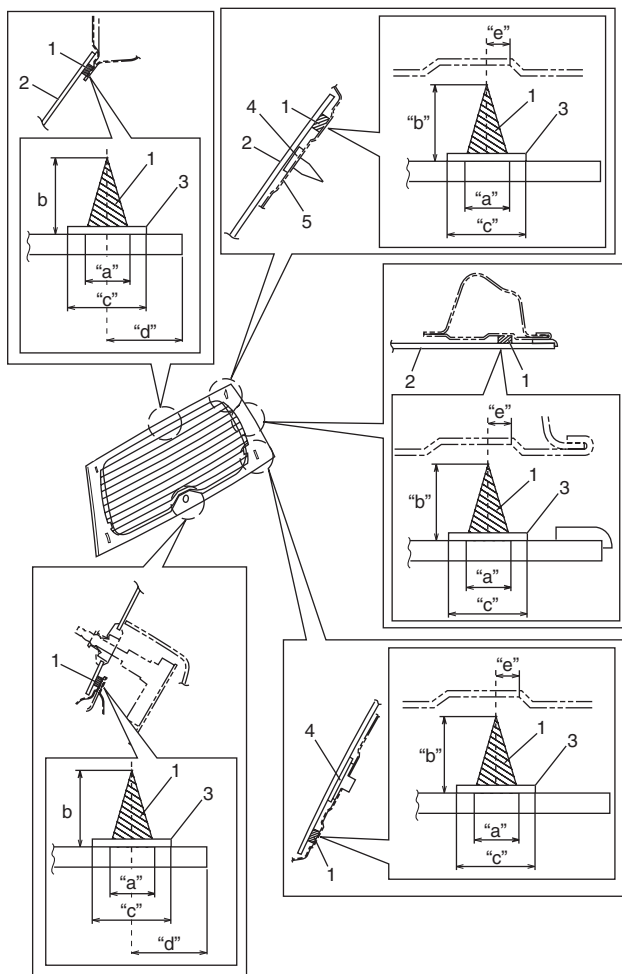


I5JB0A950030-01

Rear End Door Window Defogger Relay Inspection


S6JB0B9506013

- 1) Disconnect negative (–) cable from battery.
- 2) Remove rear end door window defogger relay (included in integration relay) (1) from main fuse box (2).

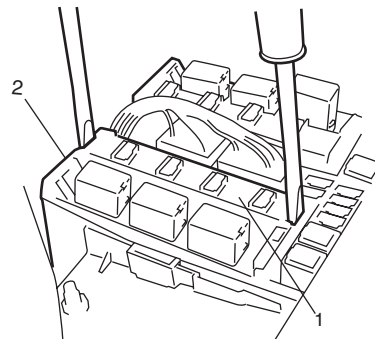

I5JB0A950031-01

- 3) Check that there is no continuity between terminal "a" and "b". If there is continuity, replace relay.
 - 4) Check that there is continuity between terminals "a" and "b" when a 12 V battery is connected to terminals "a" and "c".
- If malfunction is found, replace it with a new one.

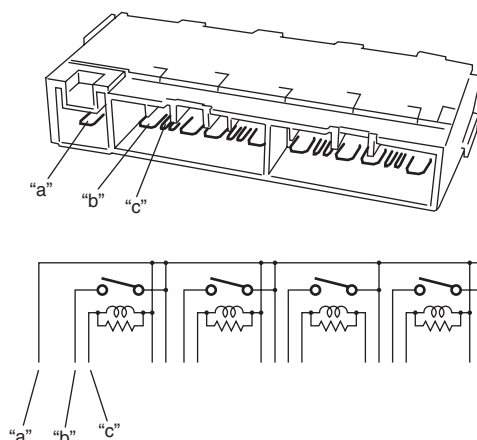


I5JB0A950032-02

Rear End Door Window Defogger Wire Inspection

S6JB0B9506014

NOTE

- When cleaning rear end door window glass, use a dry cloth to wipe it along heat wire (1) direction.
- When cleaning glass, do not use detergent or abrasive-containing glass cleaner.
- When measuring wire voltage, use a tester with positive probe (2) wrapped with a tin foil (3) which should be held down on wire by finger pressure.

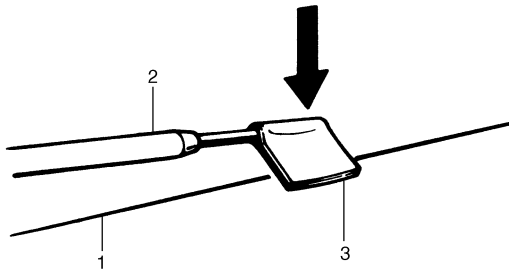


I2RH01950002-01

Wire Damage Inspection

- 1) Start engine.
- 2) Turn on defogger switch.
- 3) Measure voltage at the center of each defogger wire (1), and check defogger wire condition according to the following table.
If defogger wire open is found, go to next step.

Defogger wire voltage

Voltage	Circuit
0 – 1 V	Defogger wire open between its center and defogger wire power source terminal end (2)
4 – 6 V	Normal condition
10 – 12 V	Defogger wire open between its center and defogger wire ground terminal end (3)

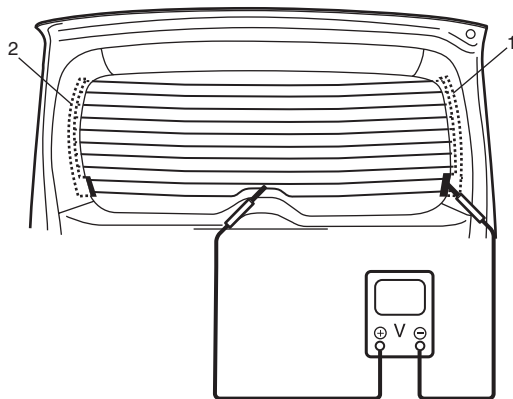


I5JB0A950033-01

- 4) Touch voltmeter negative (–) lead to defogger wire ground terminal end (1).
- 5) Touch voltmeter positive (+) lead with a foil strip to defogger wire power source terminal end (2), then move it along wire to defogger wire ground terminal end (1).

The place where voltmeter fluctuates from 10 – 12 V to 0 – 1 V is where there is open.

If found defective, repair defogger wire referring to “Rear End Door Window Defogger Wire Repair”.

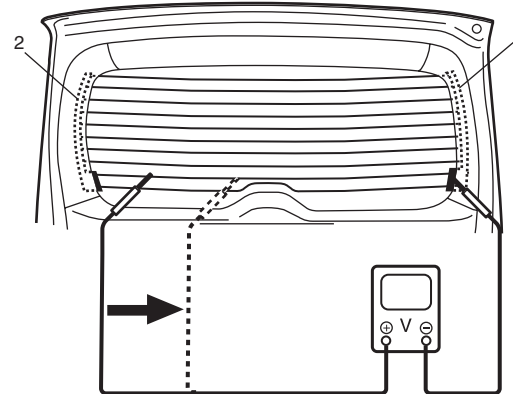


I5JB0A950034-01

Rear End Door Window Defogger Wire Repair

S6JB0B9506015

- 1) Use white gasoline for cleaning.
- 2) Apply masking tape (1) at both upper and lower sides of heat wire (2) to be repaired.
- 3) Apply commercially-available repair agent (3) with a fine-tip brush (4).
- 4) 2 to 3 minutes later, remove masking tapes (1).

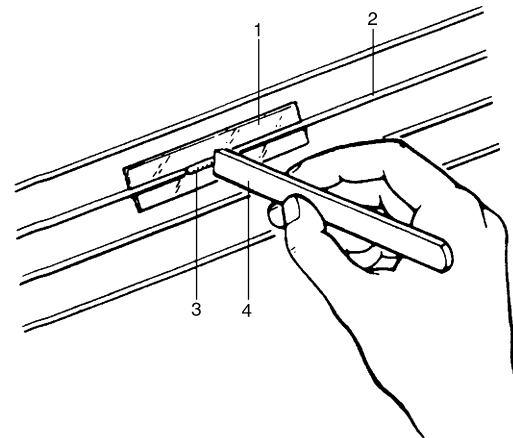

I2RH01950005-01

- 5) Leave repaired heat wire as it is for at least 24 hours before operating the defogger again.


Power Window Main Switch Inspection

S6JB0B9506016


Switch for driver side window

- 1) Remove driver side door trim referring to step 1) to 3) of “Front Door Glass Removal and Installation”.
- 2) Remove power window main switch from door trim.

- 3) Connect 12 V battery positive (+) terminal to terminal "IG" of power window main switch and its negative (–) terminal to terminal "E" of power window main switch.
- 4) Check for continuity between terminals as shown below.
If check result is not as specified, replace power window main switch.

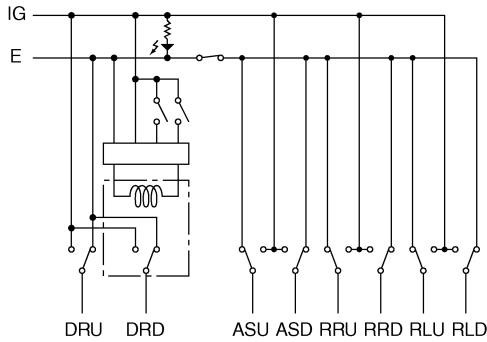

Driver side window switch (1)	IG	DRU	DRD	E
UP	○—○		○—○	
OFF		○—○	○—○	○—○
DOWN	○—○		○—○	○—○

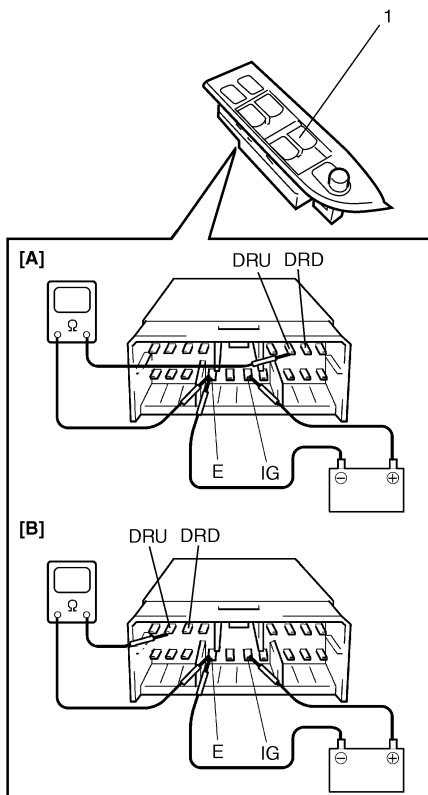

I5JB0A950035-03



[A]: LH steering vehicle
[B]: RH steering vehicle

Switch for other window than driver side

- 1) Remove driver side door trim referring to step 1) to 3) of "Front Door Glass Removal and Installation".
- 2) Remove power window main switch from door trim.
- 3) Check for continuity between terminals as shown below.

If check result is not as specified, replace power window main switch.

Passenger side window switch (1)	IG	ASU	ASD	E
Rear right side window switch (2)	IG	RRU	RRD	E
Rear left side window switch (3)	IG	RLU	RLD	E
UNLOCK (4)	UP	○—○		○—○
	OFF		○—○	○—○
	DOWN	○—○	○—○	○—○
LOCK (4)	UP	○—○		
	OFF		○—○	
	DOWN	○—○	○—○	

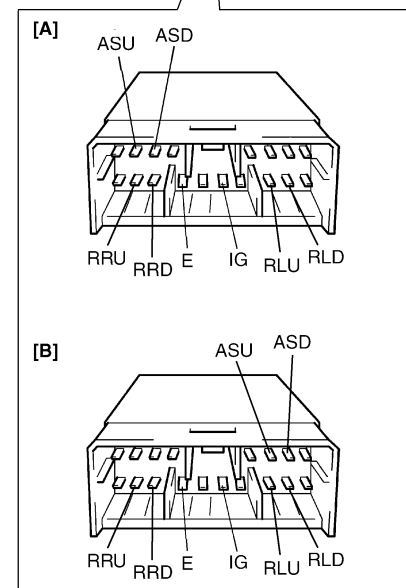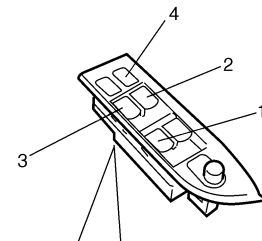

I5JB0A950036-02

[A]: LH steering vehicle
[B]: RH steering vehicle


Power Window Sub Switch Inspection

S6JB0B9506017

- 1) Remove front and/or rear door trim from door panel, refer to Step 1) to 3) of “Front Door Glass Removal and Installation” and/or “Rear Door Glass Removal and Installation”.
- 2) Remove power window sub switch from door trim.
- 3) Check for continuity between terminals at each switch condition.

If check result is not as specified, replace switch.


Terminal	A	B	C	D	E
Switch Position					
UP	○	○	○	○	○
OFF	○	○		○	○
DOWN		○	○	○	○

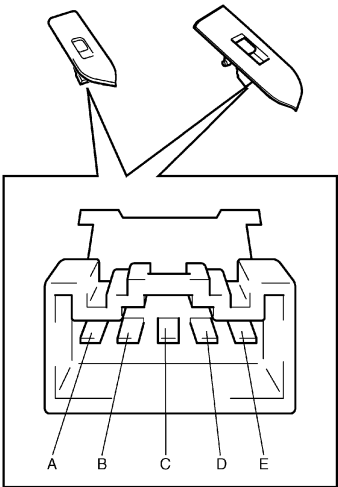

I5JB0A950037-01

Door Mirror Components

S6JB0B9506018

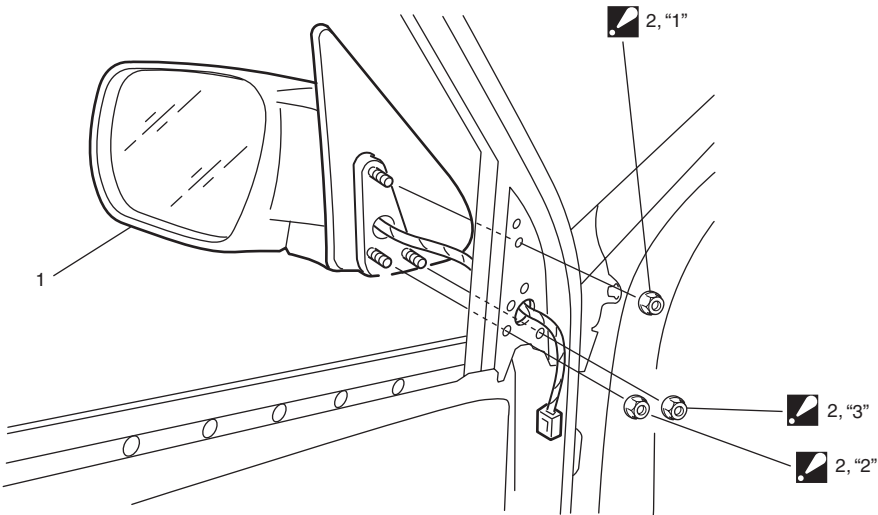

1. Door mirror
2. Door mirror mounting nut :Tighten nuts in such order as indicated in the figure.

I5JB0A950038-02

Door Mirror Removal and Installation

S6JB0B9506019

When removing or installing door mirror, refer to the figure in “Door Mirror Components”.


Power Door Mirror Switch Inspection

S6JB0B9506020

- 1) Remove driver side door trim referring to step 1) to 3) of “Front Door Glass Removal and Installation”.
- 2) Remove power window main switch from door trim.
- 3) Check for continuity between terminals at each switch position.

If check result is not as specified, replace door mirror switch.

L	A	C	D	E	G
R	B		F		
Up		○	○	○	○
Down		○	○	○	○
Left	○	○	○	○	
Right	○	○	○	○	

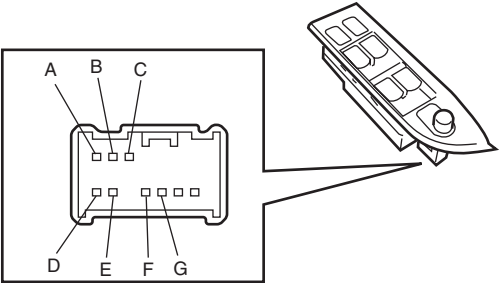



I5JB0A950039-01

Power Door Mirror Actuator Inspection

S6JB0B9506021

- 1) Remove door trim referring to step 1) to 3) of “Front Door Glass Removal and Installation”.
- 2) Disconnect door mirror coupler (1).
- 3) Check that door mirror operates properly when battery voltage is applied to connector terminals.
- 4) Connect battery positive (+) and negative (–) terminal to the door mirror terminals as shown. If it does not follow the table’s operation, replace door mirror assembly.

Terminal Operation	A	B	C
Up	⊕		⊖
Down	⊖		⊕
Left		⊕	⊖
Right		⊖	⊕

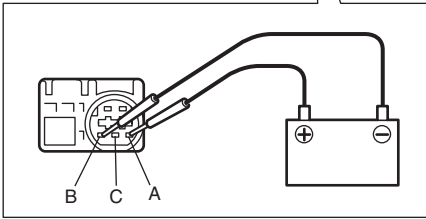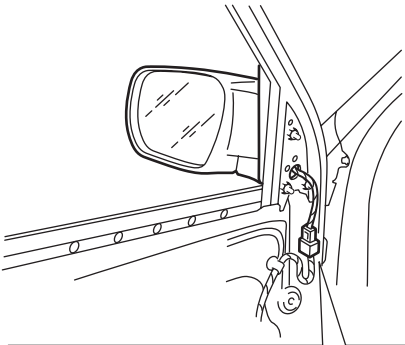


I5JB0A950040-01

Door Mirror Heater Inspection (If Equipped)

S6JB0B9506022

- 1) Remove door trim referring to step 1) to 3) of “Front Door Glass Removal and Installation”.
- 2) Disconnect door mirror connector (1).
- 3) Check for continuity between terminals “a” and “b”.
If no continuity, replace outside mirror.

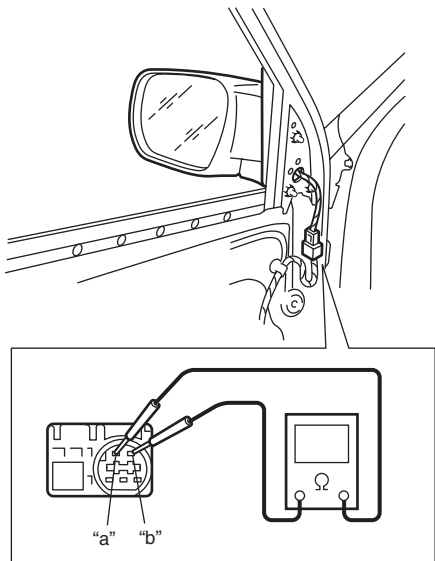


I5JB0A950041-01

Door Mirror Heater Relay Inspection (If Equipped)


S6JB0B9506023

- 1) Disconnect negative (–) cable from battery.
- 2) Remove door mirror heater relay (included in integration relay) (1) from main fuse box (2).

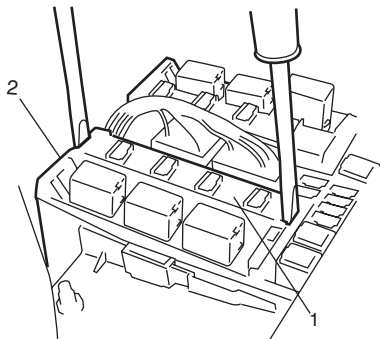

I5JB0A950031-01

- 3) Check that there is no continuity between terminals “a” and “b”.
If there is continuity, replace relay.
- 4) Check that there is continuity between terminals “a” and “b” when a 12 V battery is connected to terminal “a” and “c”.
If malfunction is found, replace integration relay.

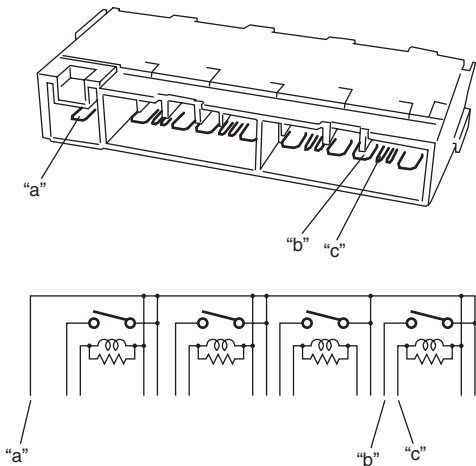

I5JB0A950042-02

Special Tools and Equipment

Recommended Service Material

S6JB0B9508001

Material	SUZUKI recommended product or Specification		Note
Grease	SUZUKI Super Grease A	P/No.: 99000–25011	Ⓕ / Ⓖ

NOTE

Required service material is also described in the following.

“Front Door Window Components”

“Rear Door Window Components”

Security and Locks

General Description

Key Coding Construction

S6JB0B9601001


Key Usage and Identification

Key is used for ignition and door lock cylinders. Key is cut on both edges to make them reversible. Key identification is obtained from five character key code stamped on key code tag. Using this key code, key code cutting combination can be determined from a code list (available to owners of key cutting equipment from suppliers).

Component Location

Power Door Lock and Keyless Entry System Component Location

S6JB0B9603001

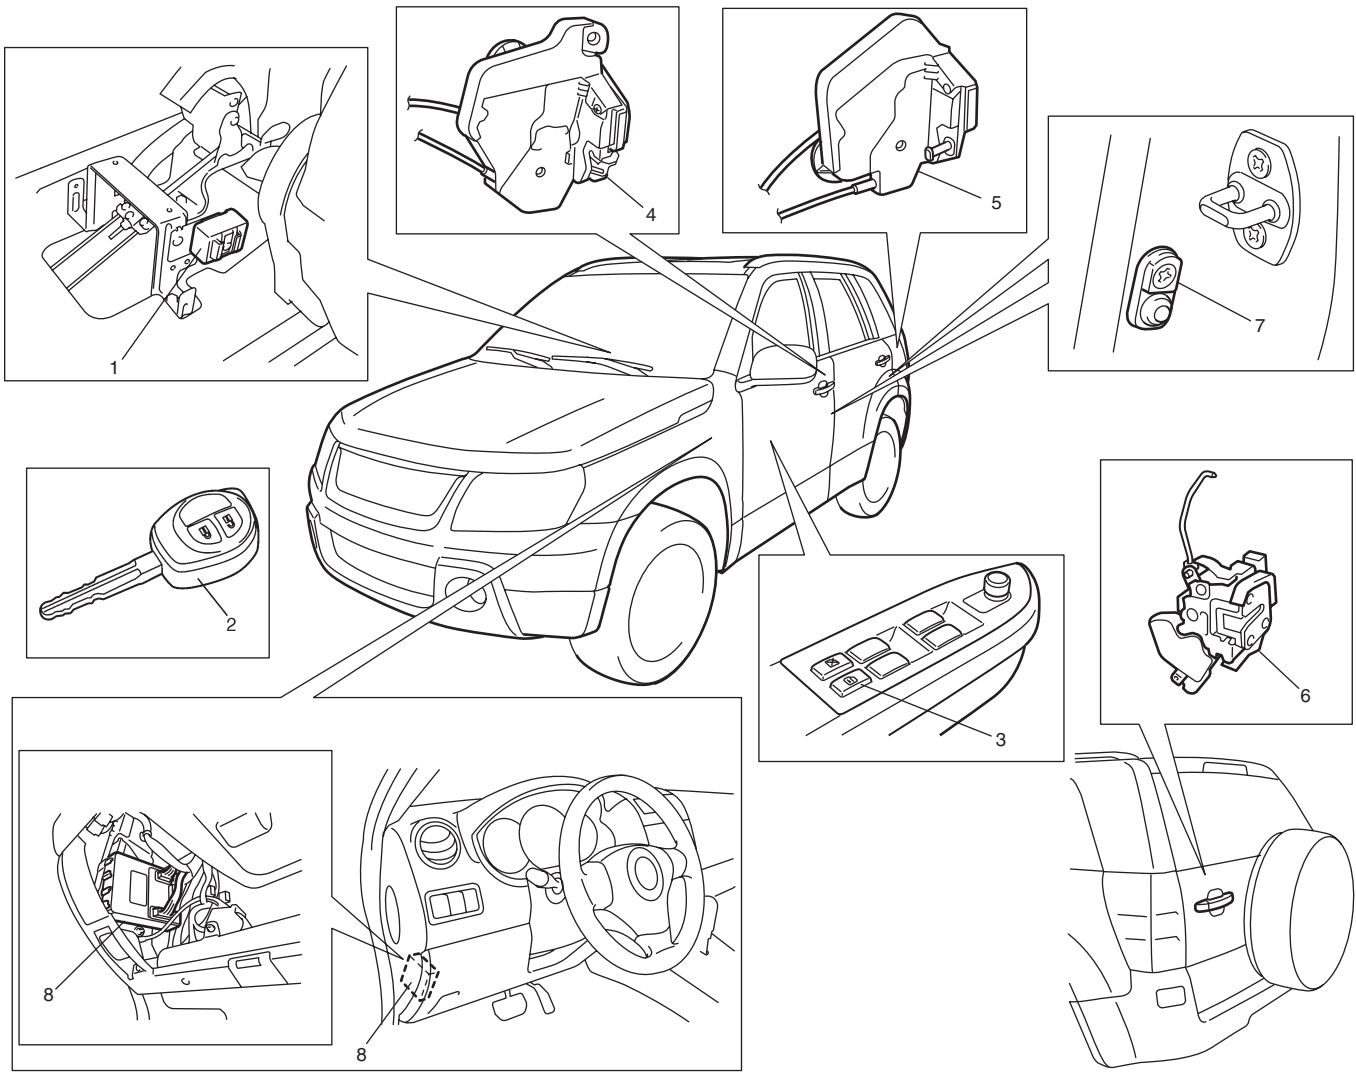

I5JB0A960001-03

1. Keyless entry receiver	3. Power door lock switch	5. Rear door actuator (5 door model only)	7. Door switch
2. Transmitter	4. Front door actuator	6. Rear end door actuator	8. BCM

Diagnostic Information and Procedures

Power Door Lock System Symptom Diagnosis

S6JB0B9604001

NOTE

- Use of SUZUKI scan tool makes it easy to check whether a faulty condition is on the input side or output side of BCM. For checking procedure, refer to “Diagnosis Using Output Test Function of SUZUKI Scan Tool” under “Scan Tool Data in Section 10B”.
- Check each part in the order from the top of the following list.

Condition	Possible cause	Correction / Reference Item
All door can not be locked / unlocked by all of switches	Circuit fuse blown	<i>Replace fuse and check for short circuit.</i>
	Wiring or grounding faulty	<i>Repair circuit.</i>
	BCM faulty	<i>Replace after making sure that none of above parts is faulty.</i>
All door can not be locked / unlocked by only power door lock switch	Circuit fuse blown	<i>Replace fuse and check for short circuit.</i>
	Power door lock switch faulty	<i>Check power door lock switch referring to “Power Door Lock Switch Inspection”.</i>
	Wiring harness connected to power door lock switch faulty	<i>Repair.</i>
	Wiring or grounding faulty	<i>Repair circuit.</i>
	BCM faulty	<i>Replace after making sure that none of above parts is faulty.</i>
All door can not be locked / unlocked by only key cylinder switch	Circuit fuse blown	<i>Replace fuse and check for short circuit.</i>
	Key cylinder switch faulty	<i>Check key cylinder switch referring to “Door Key Cylinder Switch Inspection”.</i>
	Wiring or grounding faulty	<i>Repair circuit.</i>
	BCM faulty	<i>Replace after making sure that none of above parts is faulty.</i>
Only one door can not be locked / unlocked	Power door lock actuator faulty	<i>Check actuator referring to “Power Door Lock Actuator Inspection”.</i>
	Wiring harness connected to applicable door lock actuator faulty	<i>Repair.</i>
	BCM faulty	<i>Replace after making sure that none of above parts is faulty.</i>

Power Door Lock System Operation Inspection

S6JB0B9604002

1) Check the following operation:

a) Turn the driver side key cylinder is turned LOCK once, check all doors lock.

b) Turn the driver side door key cylinder is turned UNLOCK position with door key twice, check all doors unlock.

If malfunction is found, go to “Power Door Lock System Symptom Diagnosis”.

Keyless Entry System Symptom Diagnosis (If Equipped)

S6JB0B9604003

NOTE

- Confirm that power door lock system is in good condition before referring to the following possible causes.
- Check each part in the order from the top of the following list.

Condition	Possible cause	Correction / Reference Item
All door can not be locked / unlocked by only keyless entry transmitter	Transmitter battery dead	Replace battery referring to "Replacement of Transmitter Battery (Other than Keyless Start Model)".
	Door switch faulty	Check door switch referring to "Door Switch (Front / Rear / Rear End Door) Inspection in Section 9C".
	Transmitter faulty	Replace transmitter.
	Key reminder switch in ignition switch faulty	Check ignition switch referring to "Ignition Switch Inspection in Section 9C".
	Wiring or grounding faulty	Repair circuit.
	Keyless entry receiver faulty	Check keyless entry receiver referring to "Keyless Entry Receiver and Its Circuit Inspection".
	BCM faulty	Replace after making sure that none of above parts is faulty.
Interior light does not light when doors are unlocked by keyless entry transmitter	Wiring or grounding faulty	Repair circuit.
	BCM faulty	Replace after making sure that none of above parts is faulty.
Hazard warning lights do not light when doors are locked/unlocked by keyless entry transmitter	Turn signal and hazard warning relay faulty	Check turn signal and hazard warning relay referring to "Turn Signal and Hazard Warning Relay Inspection in Section 9B".
	Wiring or grounding faulty	Repair circuit.
	BCM faulty	Replace after making sure that none of above parts is faulty.
Transmitter code can not be programmed to BCM	Door switch faulty	Check door switch referring to "Door Switch (Front / Rear / Rear End Door) Inspection in Section 9C".
	Keyless entry receiver faulty	Check keyless entry receiver referring to "Keyless Entry Receiver and Its Circuit Inspection".
	Key reminder switch in ignition switch faulty	Check ignition switch referring to "Ignition Switch Inspection in Section 9C".
	Wiring or grounding faulty	Repair circuit.
	BCM faulty	Replace after making sure that none of above parts is faulty.

Keyless Entry System Operation Inspection


S6JB0B9604004

NOTE

When performing this inspection, make sure to have any of the door once opened / closed after the ignition key has been removed from the ignition key cylinder.

- 1) Confirm that power door lock system operates normally, refer to “Power Door Lock System Operation Inspection”.
- 2) All doors are closed and unlocked.
- 3) Check the following operation:
 - a) Push “lock” button (1) on transmitter (2) or remote controller once, and check all doors lock and hazard warning lights flash once.
 - b) Push “unlock” button (3) on transmitter (2) or remote controller twice, and check all doors unlock and hazard warning lights flash twice and interior light turns on several seconds with the interior light switch in the middle position.

If malfunction is found, go to “Keyless Entry System Symptom Diagnosis (If Equipped)”.

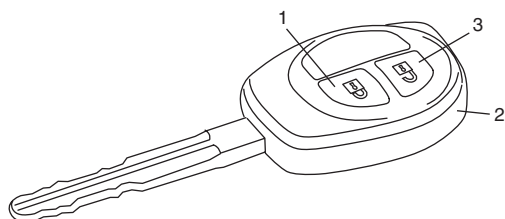

I6JB0B960001-01

Door Lock Function of Keyless Start System Symptom Diagnosis (If Equipped)


S6JB0B9604005

Proceed to “Keyless Start System Symptom Diagnosis in Section 10E” in case that doors cannot be locked and unlocked by operating the request switch at the outside door handle.






Repair Instructions

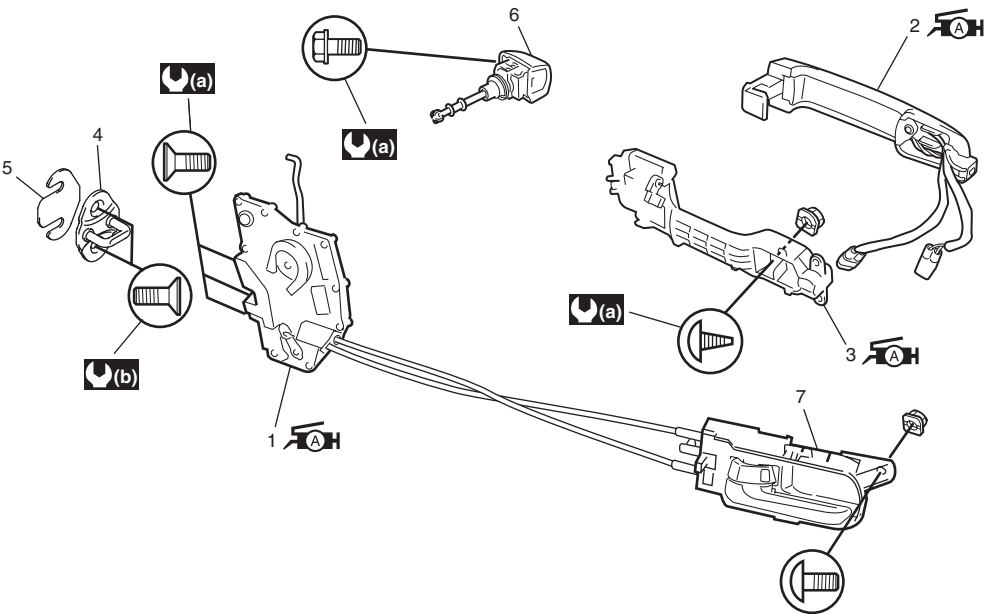Front Door Lock Assembly Components

S6JB0B9606001



I5JB0A960002-02


 1. Front door latch assembly : Apply lithium grease 99000-25011 to sliding and rotating parts and spring if any.	4. Latch striker	7. Inside handle bezel
 2. Outside handle assembly : Apply lithium grease 99000-25011 to sliding part.	5. Shim	 (a) : 5.0 N·m (0.5 kgf-m, 4.0 lb-ft)
 3. Outside handle frame : Apply lithium grease 99000-25011 to sliding part and spring.	6. Key cylinder	 (b) : 10 N·m (1.0 kgf-m, 7.5 lb-ft)

Front Door Lock Assembly Removal and Installation

S6JB0B9606002

Removal

- 1) Remove door mirror trim (1), front door inner garnish (2) (3 door model only) and door trim screw cover (3).
- 2) Remove door trim (4) after removing door trim screw (5) and clips.

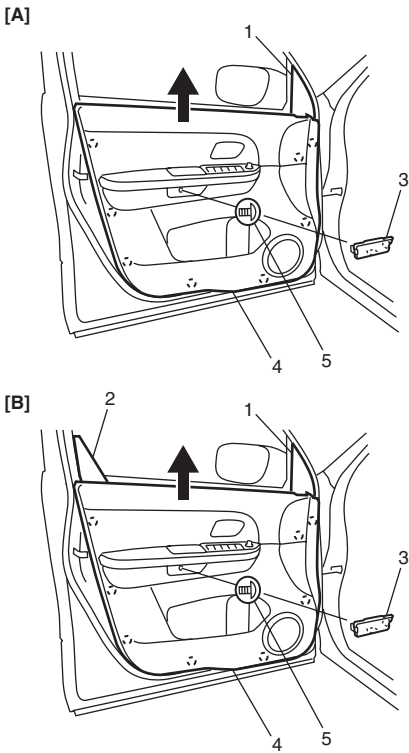


I5JB0A950010-01

[A]: 5 door model	[B]: 3 door model
-------------------	-------------------


9F-6 Security and Locks:

- 3) Disconnect door illumination light lead wire and power window switch and mirror switch lead wire at coupler.
- 4) Remove door sealing cover (1).

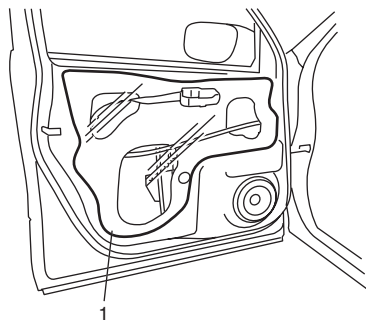


I5JB0A950011-02

- 5) Raise window all the way up.
- 6) Remove door sash (1).

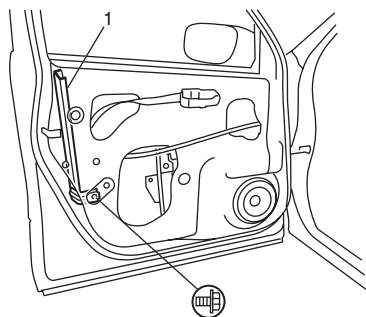


I5JB0A960003-01

- 7) Remove key cylinder mounting bolt (1), and then remove key cylinder (2).

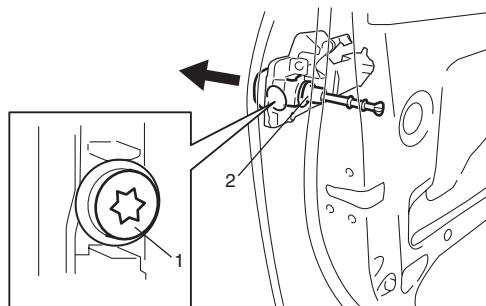

I4RS0B960005-01

- 8) Disconnect door opening control rod (1) from outside handle.
- 9) Disconnect door lock motor lead wire at coupler.
- 10) Remove door latch screws (2) and remove door lock assembly (3).

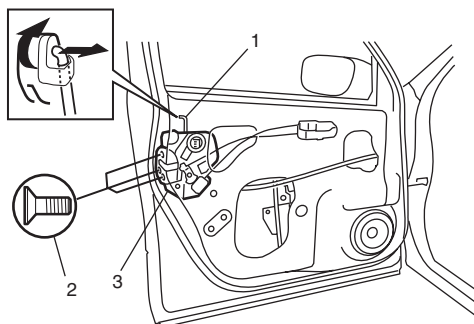

I5JB0A960004-01


Installation

Reverse removal procedure to install front door lock assembly noting the following instructions.

- Apply grease to sliding parts of door latch assembly.
: **Grease 99000-25011 (SUZUKI Super Grease A)**
- Tighten door latch screws to specified torque.

Tightening torque

Door latch screw (a): 5.0 N·m (0.5 kgf-m, 4.0 lb-ft)

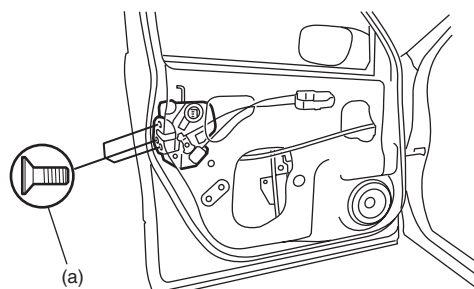


I5JB0A960005-01

- Move door latch striker (2) up or down so its center aligns with the center of groove "A" on the door lock assembly (1) as shown. Striker should be moved vertically and placed level. Do not adjust door lock.

Tightening torque


Door latch striker screw (a): 10 N·m (1.0 kgf-m, 7.5 lb-ft)

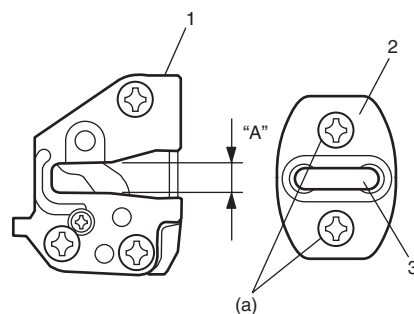

I5JB0A960006-01

3. Shaft

- Move door latch striker (1) sideways to adjust door outer panel surface (2) flush with rear door outer panel or body outer panel surface (3) as shown. In order to correctly obtain door lock operation increase or decrease number of shims inserted between body and striker (1) to adjust it.

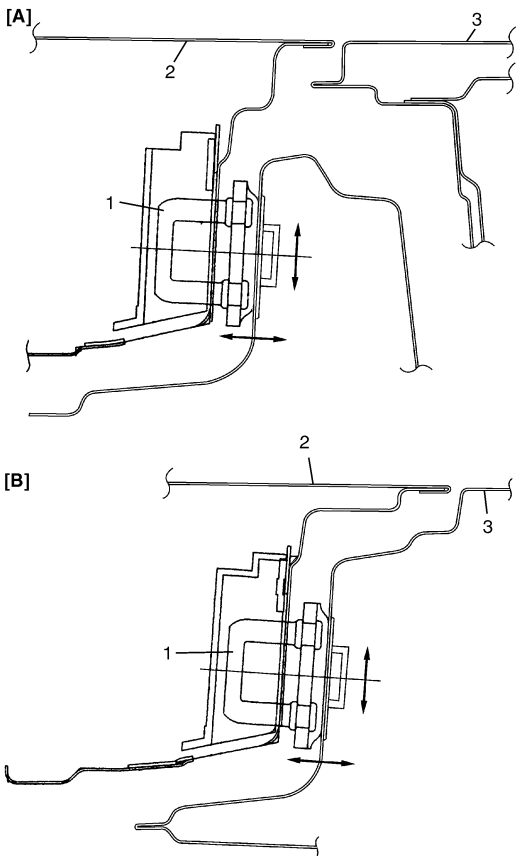

I3RM0A960013-01

[A]: Front door (5 door model)
[B]: Rear door (5 door model) or front door (3 door model)

Front Door Lock Assembly Inspection


S6JB0B9606003

- Check that door open and closes smoothly and properly.
- Check that door stops in the secondary latched position properly (preventing door from opening freely) and that door closed completely in the fully latched position.
- Adjust door latch striker position, if necessary.

Power Door Lock Switch Inspection

S6JB0B9606004

Check for continuity between terminals at each switch position. If check result is not as specified, replace switch.

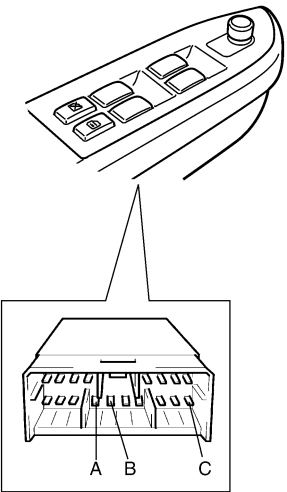

Terminal	A	B	C
Switch			
LOCK	○	—	○
OFF			
UNLOCK	○	○	


I5JB0A960007-01

1. Power door lock switch

Door Key Cylinder Switch Inspection

S6JB0B9606005

- 1) Remove front door trim referring to Step 1) to 3) of “Front Door Glass Removal and Installation in Section 9E”
- 2) Check for continuity between terminals at each switch position. If check result is not as specified, replace door lock assembly.

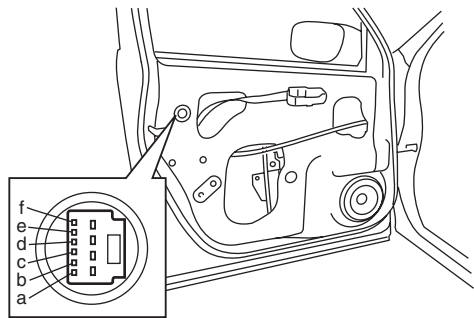

Right side switch terminals	d	a	b
Left side switch terminals	c	f	e
LOCK			
OFF			
UNLOCK			

I5JB0A960008-01


Power Door Lock Actuator Inspection

S6JB0B9606006

NOTE

If rear end door is closed and the rear end door lock actuator does not function in unlock position, follows the procedures to unlock the rear end door lock actuator.

1. Remove cap (1).
2. Penetrate door sealing cover (2) by jack lever (3) or whatever to insert jack lever, and push emergency lever (4) into unlock position “a”.

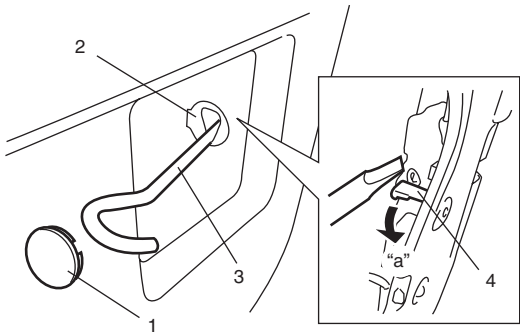


I5JB0A960022-01

3. After inspection replace door sealing cover.

- 1) Remove door trim from door panel.
For front door, refer to Step 1) to 3) of “Front Door Glass Removal and Installation in Section 9E”.
For rear door, refer to Step 1) to 3) of “Rear Door Glass Removal and Installation in Section 9E”.
For rear end door, refer to Step 1) of “Rear End Door Assembly Removal and Installation in Section 9J”.
- 2) Disconnect power door lock actuator coupler.
- 3) Connect battery positive (+) and negative (–) terminals to the door lock actuator terminals (a, b, c, d) as shown in figure.
If it does not operate as specified in the following table, replace door lock assembly.

For front door

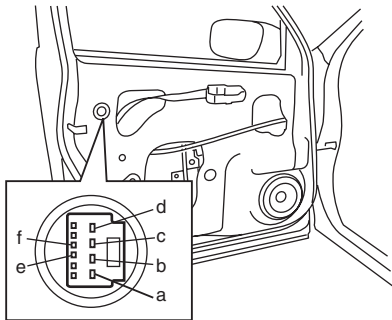

[A]

Terminals		a	d
Lock	→	Unlock	
Unlock	→	Lock	

Terminals	f	e
Lock		
Unlock		

[B]


Right side switch terminals	a	b	c	d
Left side switch terminals	c	d	a	b
Lock → Unlock				
Unlock → Lock				
Deadlock → Unlock				
Lock → Deadlock				

Terminals	f	e
Lock		
Unlock		

I5JB0A960009-02

[A]: Without deadlock	[B]: With deadlock
-----------------------	--------------------

For rear door

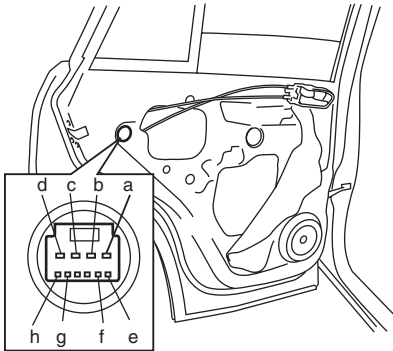

[A]

Terminals		a	d
Lock	→ Unlock	⊕	⊖
Unlock	→ Lock	⊖	⊕

Terminals	f	g
Lock		
Unlock	○	○

[B]


Right side switch terminals		c	d	a	b
Left side switch terminals		a	b	c	d
Lock	→ Unlock	⊕	⊖		
Unlock	→ Lock	⊖	⊕		
Deadlock	→ Lock			⊕	⊖
Lock	→ Deadlock			⊖	⊕

Right side switch terminals		g	h
Left side switch terminals		e	f
Lock			
Unlock		○	○

I5JB0A960010-01

[A]: Without deadlock	[B]: With deadlock
-----------------------	--------------------

For rear end door

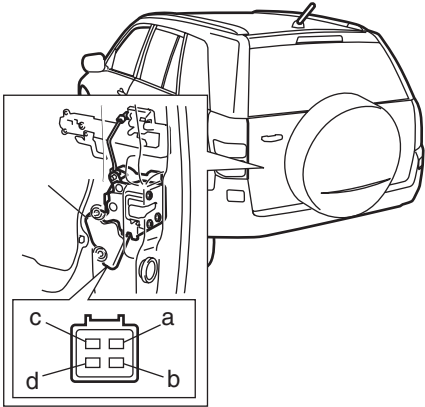


Terminals		a	b
Lock	→ Unlock	⊕	⊖
Unlock	→ Lock	⊖	⊕

Terminals	c	d
Lock		
Unlock	○	○






I5JB0A960011-02

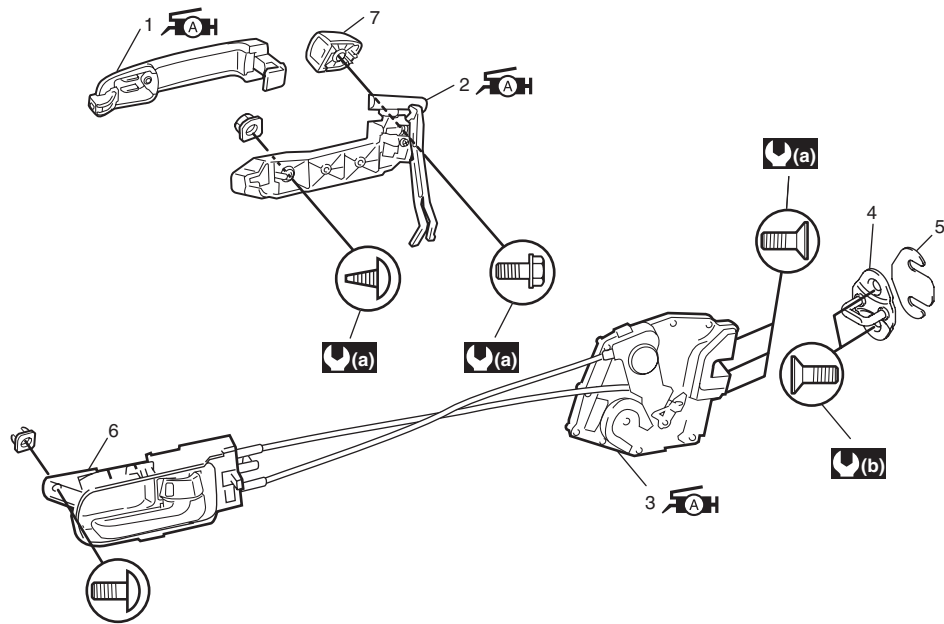Rear Door Lock Assembly Components

S6JB0B9606007



I5JB0A960012-03


 1. Outside handle : Apply lithium grease 99000-25011 to sliding part.	4. Latch striker	7. Out side handle cap
 2. Outside handle frame : Apply lithium grease 99000-25011 to sliding part and spring.	5. Shim	 : 5.0 N·m (0.5 kgf-m, 4.0 lb-ft)
 3. Rear door latch assembly : Apply lithium grease 99000-25011 to sliding part.	6. Inside handle bezel	 : 10 N·m (1.0 kgf-m, 7.5 lb-ft)

Rear Door Lock Assembly Removal and Installation

S6JB0B9606008

Removal

- 1) Remove rear door trim referring to step 1) to 3) of “Rear Door Glass Removal and Installation in Section 9E”.
- 2) Disconnect door lock motor lead wire.
- 3) Remove door latch mounting screws (1) and remove door latch assembly (2).

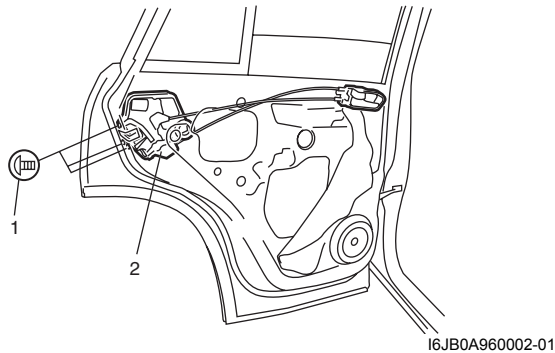


Installation

Reverse removal procedure to install rear door lock assembly referring to the following instruction and “Front Door Lock Assembly Removal and Installation”.

- Tighten door latch screw to specified torque.

Tightening torque

Door latch screw (a): 5.0 N·m (0.5 kgf-m, 4.0 lb-ft)

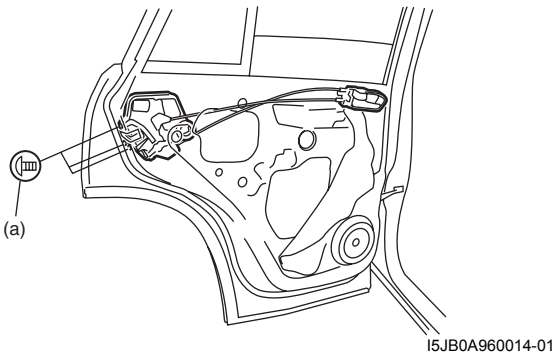


Rear Door Lock Assembly Inspection

S6JB0B9606009

- Check that door opens and closes smoothly and properly.
- Check that door stops in the secondary latched position properly (preventing door from opening freely) and that door closes completely in the fully latched position.
- Adjust door latch striker position, if necessary.

Rear End Door Lock Assembly Components

S6JB0B9606010

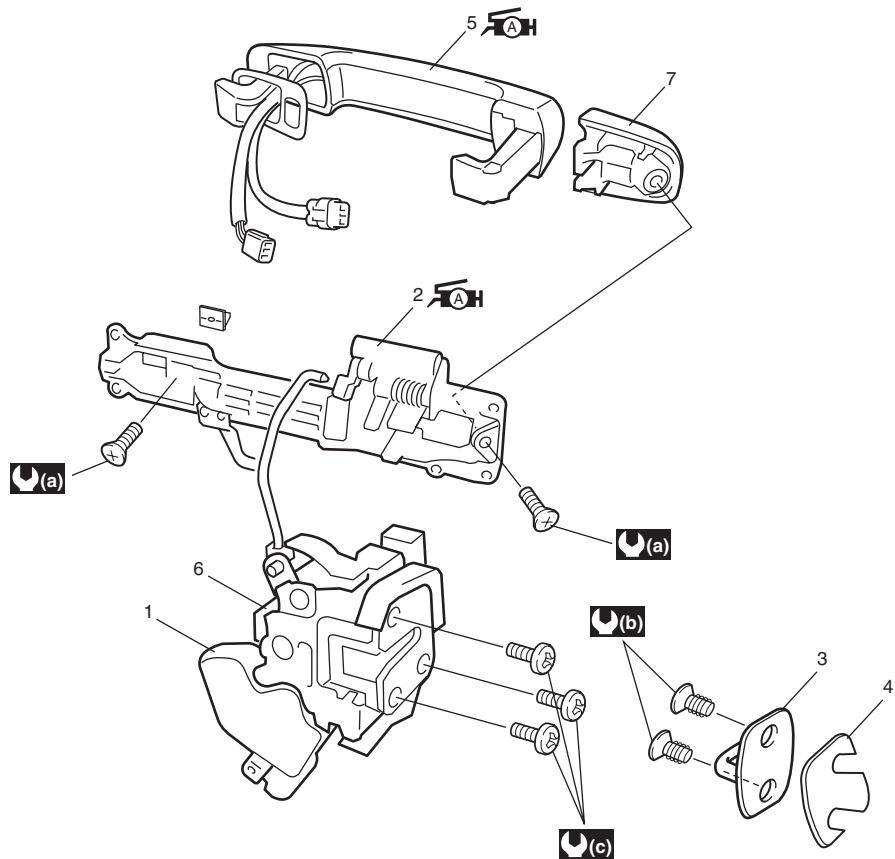

I6JB0A960003-01


1. Rear end door latch assembly (rear end door switch is built in this assembly)	5. Outside handle assembly : Apply lithium grease 99000-25011 to sliding part.	: 24 N·m (2.4 kgf-m, 17.5 lb-ft)
2. Outside handle frame : Apply lithium grease 99000-25011 to sliding part and spring.	6. Emergency lever	: 5 N·m (0.5 kgf-m, 4.0 lb-ft)
3. Latch striker	7. Outside handle cap	
4. Shim	: 6 N·m (0.6 kgf-m, 4.5 lb-ft)	

Rear End Door Lock Assembly Removal and Installation

S6JB0B9606011


Removal

- 1) Remove door trim (1) from rear end door panel (2).

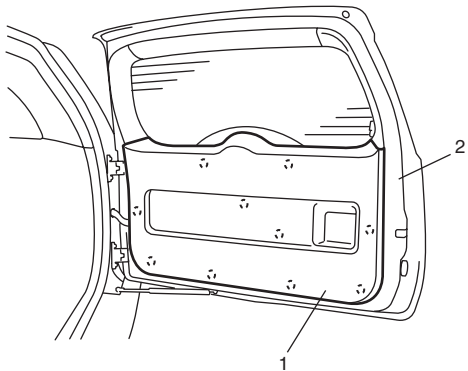

I6JB0A960004-02

- 2) Disconnect door lock motor lead wire and door opening control rod.
3) Loosen door latch bolts (1) and remove door latch assembly (2).

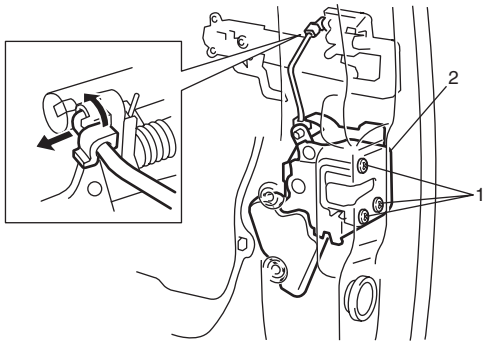

I5JB0A960017-01

9F-12 Security and Locks:


Installation

Reverse removal procedure to install rear end door lock assembly noting the following instruction.

- Tighten rear end door latch bolt to specified torque.

Tightening torque


Rear end door latch bolt (a): 5 N·m (0.5 kgf-m, 4.0 lb-ft)

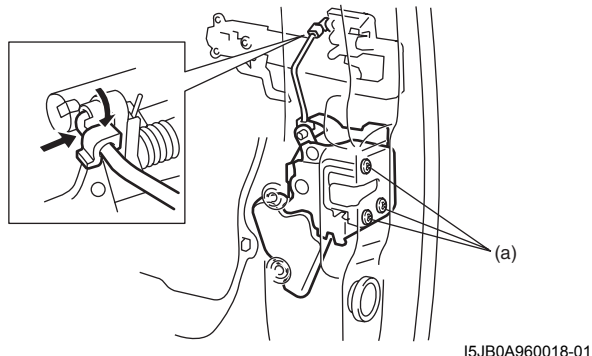

- Adjust door latch striker so that its center aligns with the center of groove in door latch base.

Tightening torque

Rear end door striker screw (a): 24 N·m (2.4 kgf-m, 17.5 lb-ft)

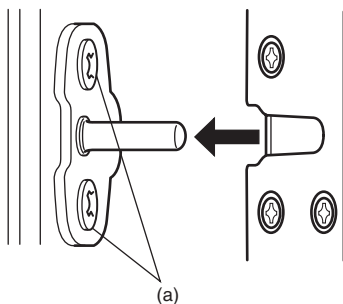

Rear End Door Lock Assembly Inspection

S6JB0B9606012

- Check that door opens and closes smoothly and properly.
- Check that door stops in the secondary latched position properly (preventing door from opening freely) and that door closes completely in the fully latched position.
- Adjust door latch striker position, if necessary.

Replacement of Transmitter Battery (Other than Keyless Start Model)

S6JB0B9606013

NOTE

For keyless start model, perform “Replacement of Remote Controller Battery in Section 10E” instead of “Replacement of Transmitter Battery (Other than Keyless Start Model)”.


If transmitter becomes unreliable, replace transmitter battery as follows.

- 1) Remove screw (1) and transmitter cover (2).
- 2) Remove transmitter (3) from transmitter holder (4).

⚠ CAUTION

Use care not to allow grease or dirt to be attached on the printed circuit board and the battery.

- 3) With tip of flat blade screwdriver put in slot of transmitter, pry it open.
- 4) Replace the battery (lithium disc-type CR 1620 or equivalent battery) so its (+) terminal faces “+” mark on transmitter.
- 5) Fit together transmitter (3) and install it into transmitter holder (4).
- 6) Install transmitter cover (2) and screw (1).
- 7) Make sure that door locks can be operated with transmitter.

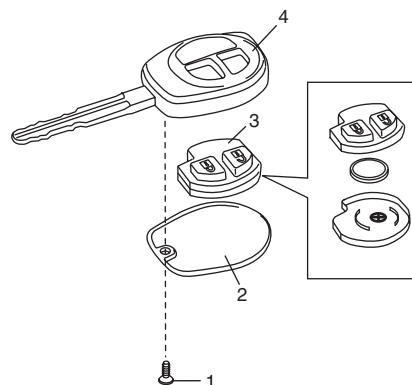

NOTE

- To prevent theft, be sure to break the transmitter before discarding it.
- Dispose of the used battery properly according to applicable rules or regulations. Do not dispose of lithium batteries with ordinary household trash.

Programming Transmitter Code for Keyless Entry System (Other than Keyless Start Model)


S6JB0B9606014

NOTE

- Three transmitter codes can be registered.
- When a new transmitter code is registered, the oldest one will be cleared.
- For keyless start model, perform “Registration Procedure for Remote Controller ID Code in Section 10E” instead of “Programming Transmitter Code for Keyless Entry System (Other than Keyless Start Model)”.

If transmitter or BCM is replaced or additional transmitter(s) is necessary, program transmitter code(s).

- 1) Confirm that all doors are closed and ignition key is out of ignition key cylinder
- 2) Open driver side door.
- 3) Turn ignition switch to ON position, and then drawn ignition key from ignition key cylinder within 10 seconds after that.
- 4) Push and release driver side door switch (1) at 3 times by hand within 20 seconds after removing ignition key from ignition key cylinder.
- 5) Turn ignition switch to ON position, and then drawn ignition key from ignition key cylinder within 10 seconds after that. All doors automatically lock and unlock once.
With this, registration mode.
- 6) Push “UNLOCK” button (2) on transmitter (3) within 20 seconds after Step 5). All doors automatically lock and unlock once.
With this, code registration is completed.
- 7) If an additional transmitter, needs to be programmed repeat the procedure of Step 1).

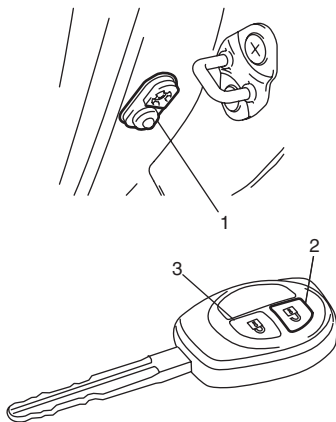


I4RS0B960010-01

Keyless Entry Receiver Removal and Installation

S6JB0B9606015

Removal

- 1) Disconnect negative cable at battery.
- 2) Remove console box from vehicle body referring to “Console Box Components in Section 9H”.
- 3) Disconnect keyless entry receiver coupler.
- 4) Remove keyless entry receiver (1).

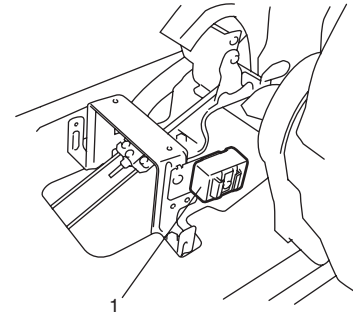

I5JB0A960020-01


Installation

Reverse removal procedure.

Keyless Entry Receiver and Its Circuit Inspection

S6JB0B9606016

- 1) Check that the voltage between the following terminals and body ground are specifications under each conditions.
If check result is not as specified, check applicable circuit for open or short. If circuit is normal, proceed to next step.

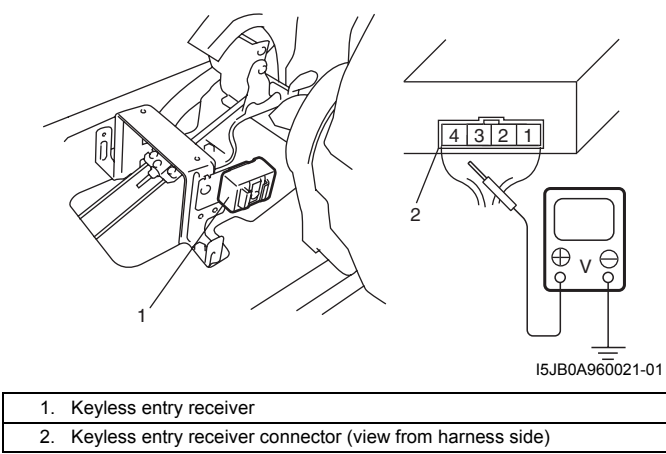


Terminal	Circuit	Specification	Condition
L44-1	Power source	Figure [A]	Push “Lock” or “Unlock” button on transmitter.
		0-1 V	Except the above-mentioned condition.
L44-3	Lock/Unlock output signal circuit	Figure [A]	Push “Lock” or “Unlock” button on transmitter.
		0-1 V	Except the above-mentioned condition.
L44-4	Ground	0-1 V	—

Oscilloscope setting

CH1: 2V/DIV

CH2: 2V/DIV

TIME: 200 ms/DIV

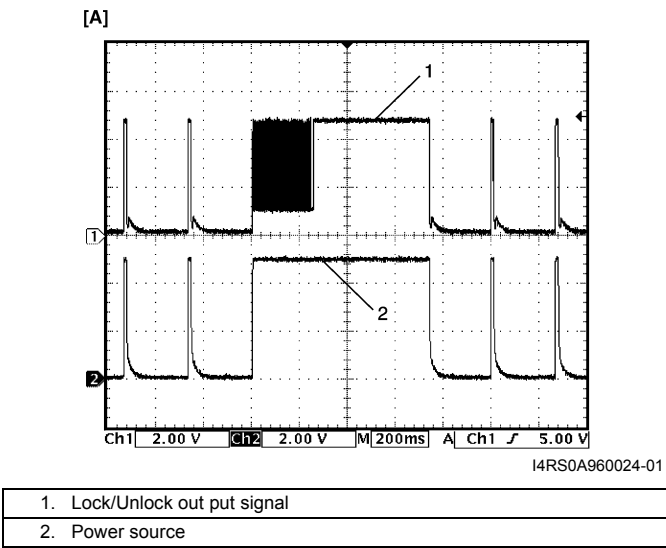

- 1) Recheck keyless entry receiver as follows.
 - a) Substitute a known-good keyless entry receiver.
 - b) Record key code referring to “Programming Transmitter Code for Keyless Entry System (Other than Keyless Start Model)”.
 - c) Recheck keyless entry receiver system.

Specifications

Tightening Torque Specifications

S6JB0B9607001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lb·ft	
Door latch screw	5.0	0.5	4.0	🔩 / 🔩
Door latch striker screw	10	1.0	7.5	🔩
Rear end door latch bolt	5	0.5	4.0	🔩
Rear end door striker screw	24	2.4	17.5	🔩

NOTE

The specified tightening torque is also described in the following.

“Front Door Lock Assembly Components”

“Rear Door Lock Assembly Components”

“Rear End Door Lock Assembly Components”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Special Tools and Equipment

Recommended Service Material

S6JB0B9608001

Material	SUZUKI recommended product or Specification		Note
Grease	SUZUKI Super Grease A	P/No.: 99000–25011	🔩

NOTE

Required service material is also described in the following.

“Front Door Lock Assembly Components”

“Rear Door Lock Assembly Components”

Seats

Diagnostic Information and Procedures

Front Seat Heater Symptom Diagnosis (If Equipped)


S6JB0B9704001

Condition	Possible cause	Correction / Reference Item
Both seat back and cushion do not become hot although seat heater switch is ON position	Wiring or grounding faulty	<i>Repair.</i>
	"IG2 SIG" fuse blown	<i>Replace fuse to check for short.</i>
	Seat heater switch faulty	<i>Replace switch.</i>
	Seat heater circuit in seat back and/or seat cushion faulty	<i>Replace heater front back and/or heater front cushion.</i>
Only seat back does not become hot although seat heater switch is ON position	Wiring faulty	<i>Repair.</i>
	Seat heater circuit in seat back and/or seat cushion faulty	<i>Replace heater front back and/or heater front cushion.</i>
Only seat cushion does not become hot although seat heater switch is ON position	Wiring faulty	<i>Repair.</i>
	Seat heater circuit in seat cushion	<i>Replace heater front cushion.</i>

Repair Instructions

Front Seat Components

S6JB0B9706001

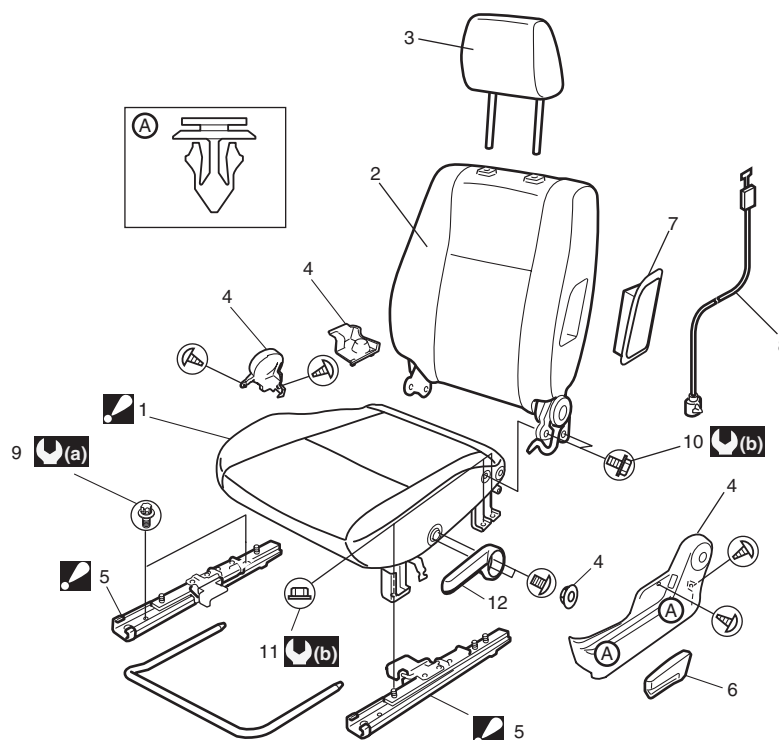

I6JB01970002-01

1. Seat cushion	5. Seat adjuster	9. Seat mounting bolt	: 23 N·m (2.3 kgf-m, 17.0 lb-ft)
2. Seat back	6. Knob	10. Seat back bolt	: 35 N·m (3.5 kgf-m, 25.5 lb-ft)
3. Headrest	7. Side air bag module (if equipped)	11. Seat cushion nut	: Non-disassemble (RH seat)
4. Cover	8. Side air bag harness (if equipped)	12. Seat lifter lever (if equipped)	

Front Seat Removal and Installation

S6JB0B9706002

⚠ WARNING

Do not disassemble seat cushion and adjuster of RH passenger seat since sensors for occupant classification system are equipped. Disassembling the seat cushion and adjuster may cause improper air bag deployment.

Removal

- 1) Disable air bag system referring to “Disabling Air Bag System in Section 8B”.
- 2) Disconnect seat harness coupler, seat heater coupler and side air bag coupler, if equipped.
- 3) Remove 4 mounting bolts to remove seat assembly.
- 4) Disassemble and repair seat as necessary.

Installation


Reverse removal procedure to install front seat.

- Torque to specifications as shown in “Front Seat Components”.
- Enable air bag system referring to “Enabling Air Bag System in Section 8B”.

Front Seat Heater Switch (Driver and Passenger Side) Inspection (If Equipped)

S6JB0B9706003

- 1) Confirm that ignition switch is OFF position.
- 2) Detach gear shift panel from front center console box.
- 3) Disconnect seat heater switch coupler.
- 4) Check for continuity between terminals at each switch position as shown below. If check result is not as specified, replace.

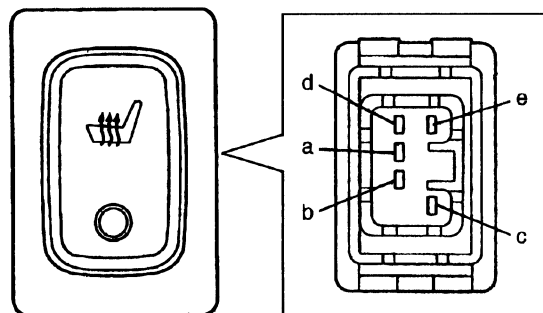

TERMINAL POSITION	a	b	c	d	e
OFF		○—○	○—○	○—○	○—○
ON	○—○	○—○	○—○	○—○	○—○

I5JA01970001-01

Front Seat Heater Wire Inspection (If Equipped)


S6JB0B9706004

- 1) Confirm that seat heater switch is OFF position.
- 2) Disconnect coupler of seat heater under the seat cushion.
- 3) Measure resistance between terminals as shown below. If resistance is out of specification, replace faulty seat cushion and/or seat back including seat heater.

Seat heater circuit resistance

Seat cushion side [A] (between terminal “B” and “C”, between terminal “A” and “C”): 4.7 – 5.7 Ω (at 20 °C, 68 °F)

Seat back side [B] (between terminal “F” and “D”): 10.7 – 13.1 Ω (at 20 °C, 68 °F)

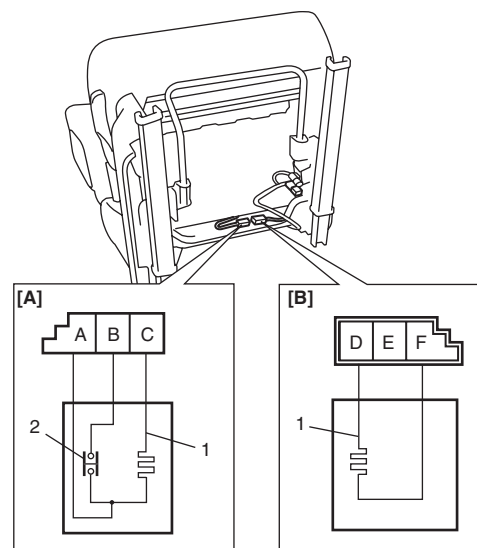


I5JB0A970002-01

1. Heater wire	[A]: Seat cushion side
2. Thermostat	[B]: Seat back side

Rear Seat Components

S6JB0B9706005

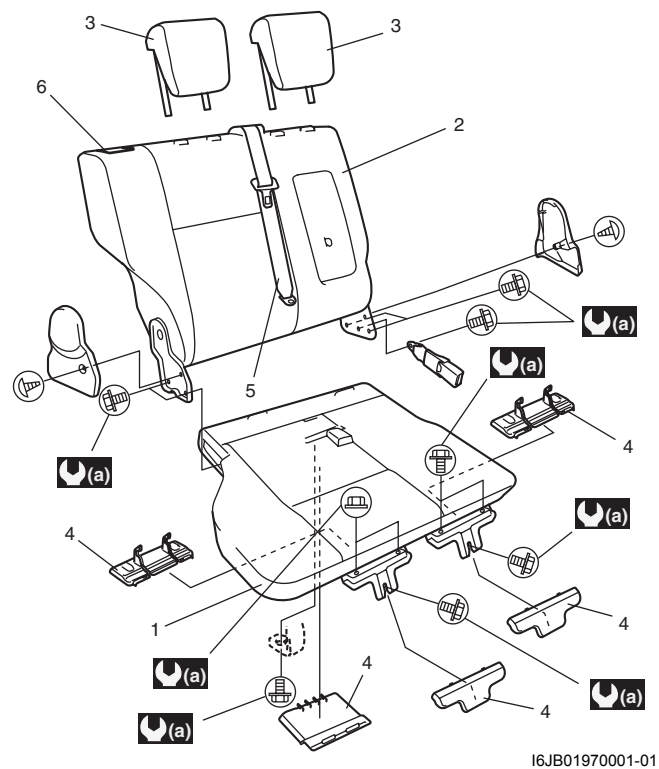

I6JB01970001-01

1. Seat cushion	3. Headrestraint	5. Rear center seat belt	(a) : 45 N·m (4.5 kgf·m, 32.5 lb·ft)
2. Seat back	4. Cover	6. Reclining lever	

Rear Seat Removal and Installation

S6JB0B9706006

Removal

- 1) Remove seat mounting bolt(s) in the bracket.
- 2) Fold rear seat back and unlock the seat cushion lock to pull forward the seat cushion.
- 3) Remove seat mounting nuts (bolts) to remove rear seat assembly.
- 4) Disassemble and repair seat as necessary.

Installation

- Reverse removal procedure to install rear seat.
- Torque to specifications in “Rear Seat Components”.

Specifications

Tightening Torque Specifications

S6JB0B9707001

NOTE

The specified tightening torque is also described in the following.

“Front Seat Components”

“Rear Seat Components”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Interior Trim


Repair Instructions

Floor Carpet Removal and Installation

S6JB0B9806001

Removal

- 1) Remove front seats and rear seats.
- 2) Remove seat belt lower anchor bolt.
- 3) Remove front and rear side sill scuffs (1), front pillar lower trims (2), center pillar inner lower trims (3), back panel trim (4), rear quarter lower trims (5).

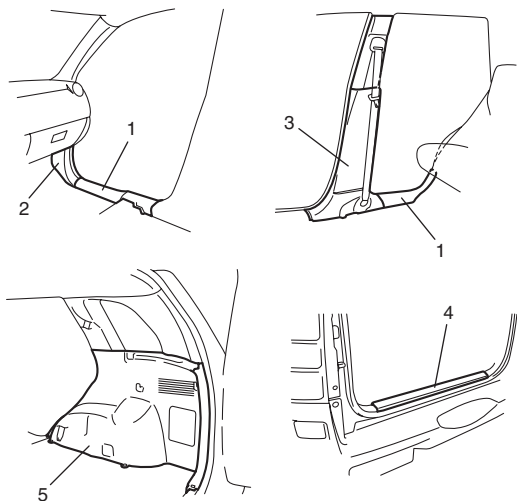

I5JB0A980001-01

- 4) Remove front and rear console boxes.
- 5) Remove floor carpet.

Installation

Reverse removal sequence to install front floor carpet, noting the following instruction.

- For tightening torque of rear seat mounting bolt and nut, refer to "Rear Seat Components in Section 9G".
- For tightening torque of front seat mounting bolt, refer to "Front Seat Components in Section 9G".
- For tightening torque of seat belt lower anchor bolt, refer to "Front Seat Belt Components in Section 8A" and "Rear Seat Belt Components in Section 8A".

Head Lining Removal and Installation


S6JB0B9806002

⚠ WARNING

Refer to "Air Bag Warning: in Section 00" before starting service work.


Removal

- 1) Remove overhead console (1) (if equipped) and sunvisor (2).

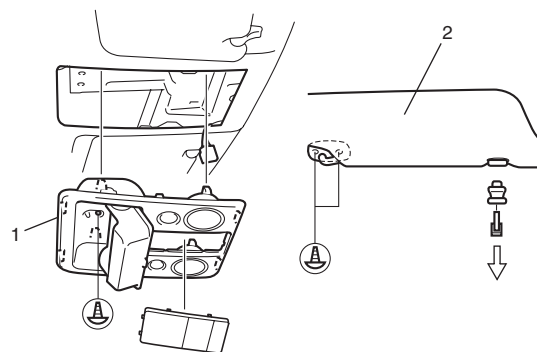

I5JB0A980002-02


- 2) Remove room light (2), luggage light (1) and spot light (3) (if equipped).

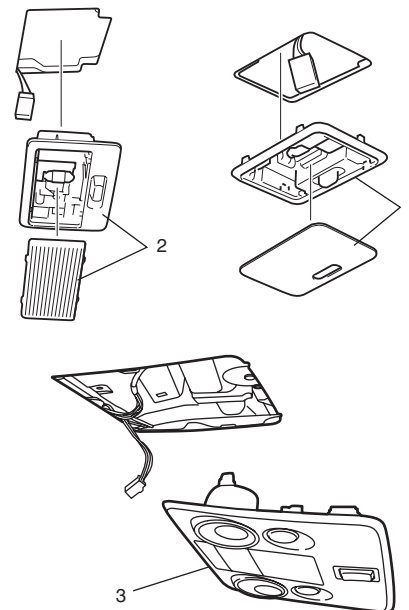

I5JB0A980003-01

9H-2 Interior Trim:


- 3) Remove front pillar upper trims (1), front and rear side sill scuffs (2), center pillar inner lower trims (3), center pillar inner upper trims (4), back panel trim (5), rear quarter lower trims (6) and rear quarter upper trims (7).

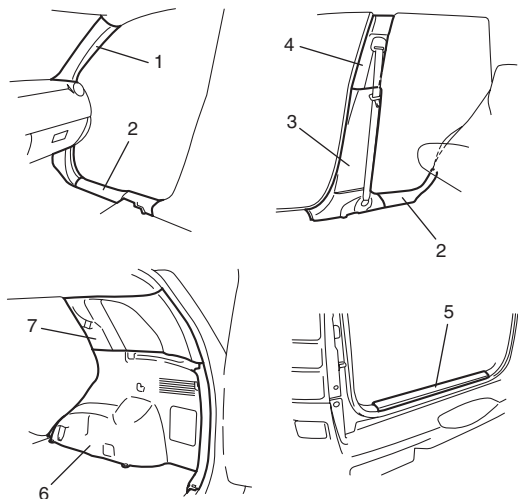

I5JB0A980004-01

- 4) Remove assistant grip (1).

- 5) Remove head lining clips (2) and remove head lining (3).


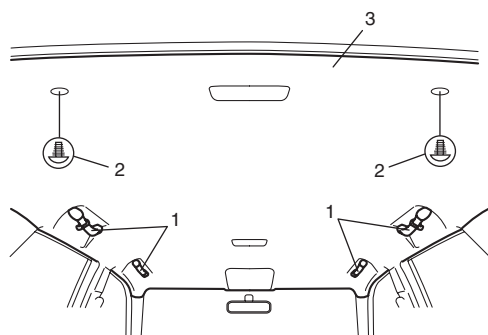


I5JB0A980005-01

Installation

Reverse removal procedure noting the following.

- Set roof harness (1), rear washer hose (2) and antenna feeder (3) to head lining with adhesive tape (4) as shown.

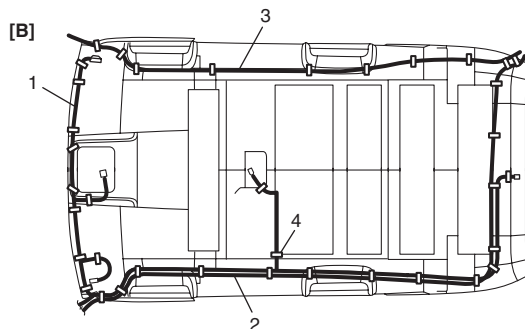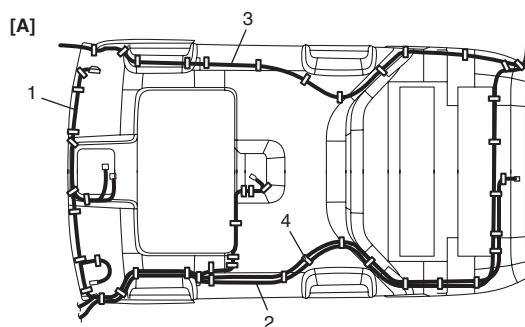


I6JB01980001-01


[A]: Vehicle with sun roof

[B]: Vehicle without sun roof

- For equipped with sun roof, hook on bracket (1) of roof lining to sun roof housing (2).

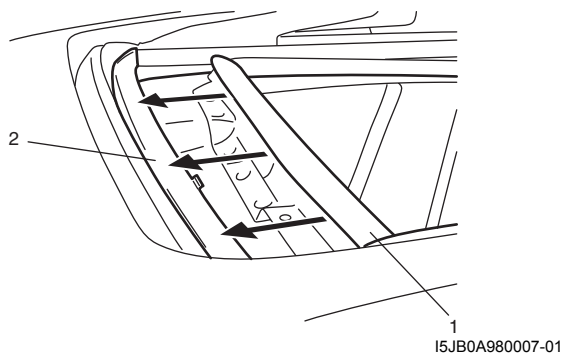


- For equipped with sun roof, adhere fasteners (1) on roof lining to fasteners of sun roof frame securely.

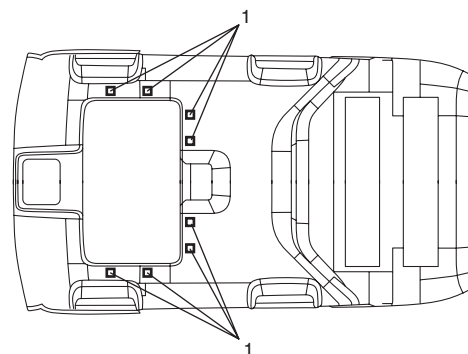

- For tightening torque of seat belt anchor bolt, refer to "Front Seat Belt Components in Section 8A" and "Rear Seat Belt Components in Section 8A".

Console Box Components

S6JB0B9806003

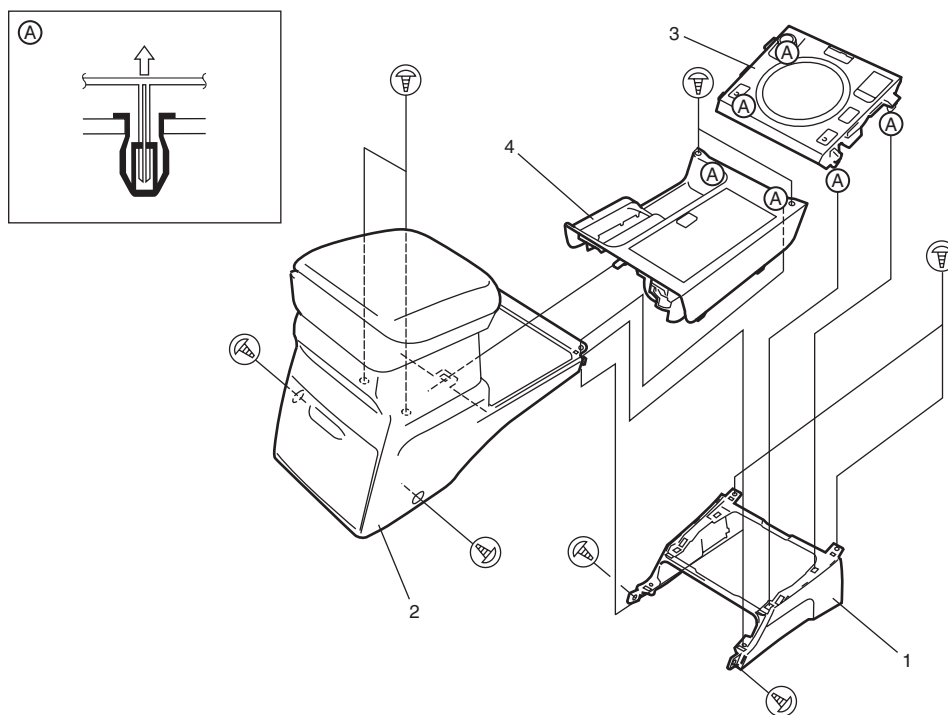

I5JB0A980008-02

1. Front console box	2. Rear console box	3. Gear shift panel	4. Console rear panel
----------------------	---------------------	---------------------	-----------------------

Sun Roof / T-Top / Convertible Top

General Description

Power Sun Roof System Description

S6JB0B9901001

The controller is included in the sun roof motor unit.
 The sun roof functions are controlled with the sun roof position data. Sun roof position and sliding direction are detected by the controller referring to pulse signals from motor.
 Initialization of the sun roof position data is required in the following situation to reset anti-pinching function: battery cable or motor connector is disconnected since the sun roof position data is deleted without power supply to the motor.
 Refer to “How to reactivate the system to prevent being pinched by the sunroof” in Sunroof section of Owner’s manual to initialize the sun roof position data.

Diagnostic Information and Procedures

Power Sun Roof System Symptom Diagnosis


S6JB0B9904001

Condition	Possible cause	Correction / Reference Item
Sun roof does not operate (sun roof motor runs OK)	Foreign object stuck in sun roof rail	<i>Remove or clean stuck object.</i>
	Mis-installation of sun roof rail	<i>Install correctly.</i>
	Conflicts of sun roof parts	<i>Fix conflicts.</i>
	Mis-installation of sun roof drive cable	<i>Install correctly.</i>
Sun roof does not operate (sun roof motor does not run)	Circuit fuse blown	<i>Replace fuse to check for short.</i>
	Sun roof switch faulty	<i>Check sun roof switch referring to “Sun Roof Switch Inspection”.</i>
	Wiring or grounding faulty	<i>Check circuit referring to “Sun Roof System Circuit and Motor Inspection”.</i>
	Sun roof motor faulty	<i>Check sun roof motor referring to “Sun Roof System Circuit and Motor Inspection”.</i>

Repair Instructions

Sun Roof Glass Components

S6JB0B9906001

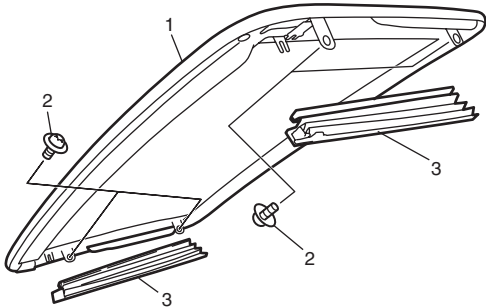

I5JB0A990001-01


1. Sun roof glass
2. Bolt
3. Sun roof cover

Sun Roof Glass Removal and Installation

S6JB0B9906002


Removal

- 1) Open sunshade (1) fully and tilt up sun roof.

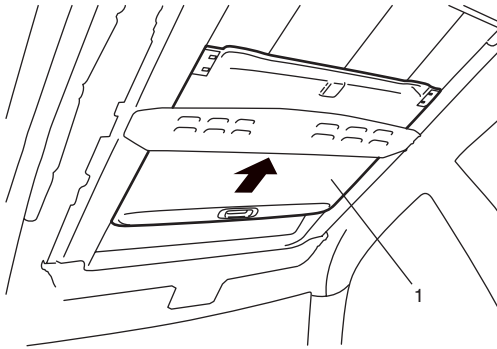

I5JB0A990002-01

- 2) Disconnect negative (–) cable at battery.
- 3) Remove sun roof covers.
- 4) Remove sun roof glass by removing bolts (TORX® T25) (1).

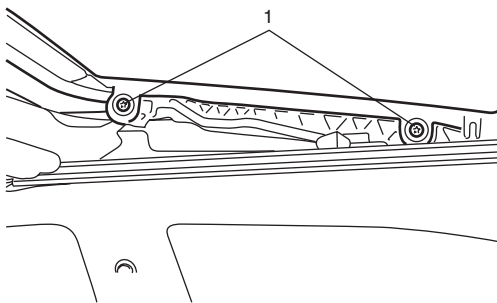

I5JB0A990003-01

Installation

For installation, reverse removal procedure, noting the following points.




- 1) Tighten glass fixing bolts temporarily.
- 2) Initialize sun roof position data referring to Owner's Manual.
- 3) Position sun roof glass by closing sun roof glass completely.
- 4) Tighten glass fixing bolts after sun roof glass adjustment referring to "Sun Roof Glass Adjustment".

Sun Roof Glass Adjustment

S6JB0B9906003

- 1) Loosen sun roof glass fixing screws (at 4 locations) and move sun roof glass (1) up and down 2 to 3 times. In this way, sun roof glass can be positioned in both vertical and horizontal directions by elasticity of sun roof weather strip.

- 2) Position sunroof glass by such dimensions with respect to roof panel surface as specified below.

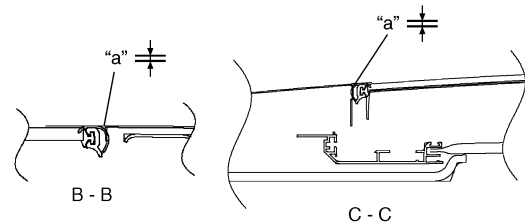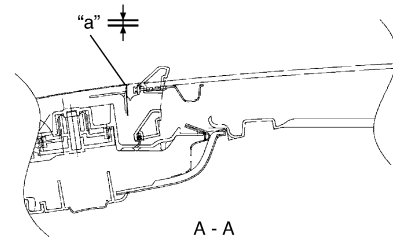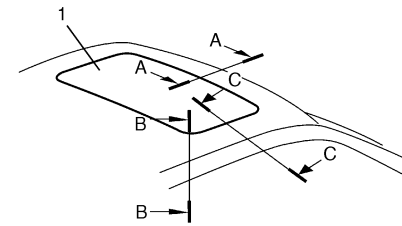Sun roof glass position (between glass roof and roof panel)**"a": 0 mm (0.0 in.)**


I5JB0A990004-01

- 3) After installing all parts and adjusting properly, check sunroof for proper operation (open, close and up).

Sun Roof Switch Inspection

S6JB0B9906004

Check switch for continuity between terminals as shown below.

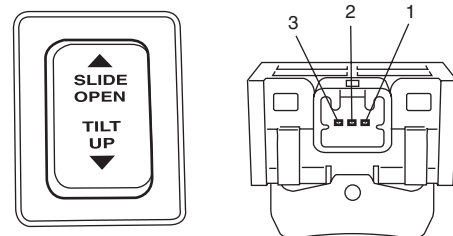

Switch Terminal	TILT UP	N	SLIDE OPEN
1	○		
2	○		○
3			○


I5JB0A990005-01

Sun Roof Motor Removal and Installation

S6JB0B9906005

Removal

- 1) Remove spot light assembly from head lining.
- 2) Disconnect coupler (3) and remove sun roof motor (1) by removing 2 bolts (2).

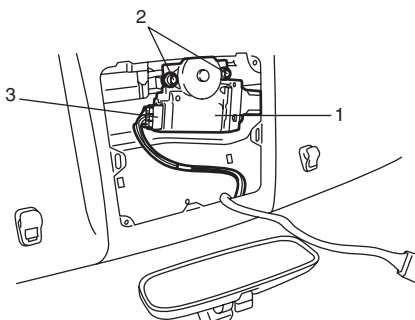

I5JB0A990006-01

Installation

For installation, reverse removal procedure, noting the following points.

- Connect coupler to sun roof motor securely.
- Initialize sun roof position data referring to “How to reactivate the system to prevent being pinched by the sunroof” in Sunroof section of Owner’s manual.

Sun Roof System Circuit and Motor Inspection


S6JB0B9906006

- 1) Check that sun roof switch is in good condition referring to “Sun Roof Switch Inspection”.
- 2) Connect connector to sun roof switch.
- 3) Disconnect connector from sun roof motor.
- 4) Measure voltage and resistance between each terminals of sun roof motor connector (1).
If each voltage and/or resistance are within specified value, sun roof system circuit is in good condition and proceed next step.
If each voltage and/or resistance are out of specified value, repair sun roof system circuit.

Sun roof system circuit specification with connector disconnected

Measurement terminal	Measurement condition	Reference value
5(+)-7(-)	Ignition switch turned OFF and ON	10 – 14 V
8(+)-7(-)	Ignition switch turned ON	10 – 14 V
9-7	Ignition switch turned OFF and sun roof switch from OFF to “SLIDE OPEN”	Infinity ↓ 0 – 1 Ω

Measurement terminal	Measurement condition	Reference value
10-7	Ignition switch turned OFF and sun roof switch from OFF to “TILT UP”	Infinity ↓ 0 – 1 Ω
7-vehicle body ground	Ignition switch turned OFF	0 – 1 Ω

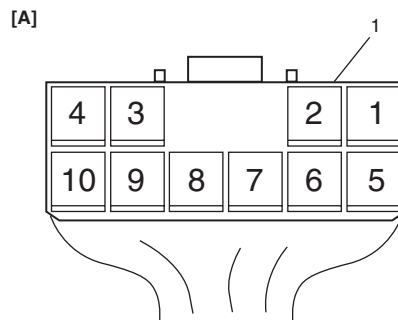


I5JB0A990007-01

[A]: Viewed from harness side

- 5) Connect connector to sun roof motor (1).
- 6) Measure each voltage between terminals of sun roof motor connector (2) with ignition switch ON.
If each voltage is out of specified value, replace sun roof motor.

Sun roof motor out put voltage

Measurement terminal	Measurement condition	Reference value
9(+)-7(-)	Sun roof switch from OFF to “SLIDE OPEN”	10 – 14 V (OFF) ↓ 0 V (“SLIDE OPEN”)
10(+)-7(-)	Sun roof switch from OFF to “TILT UP”	10 – 14 V (OFF) ↓ 0 V (“TILT UP”)

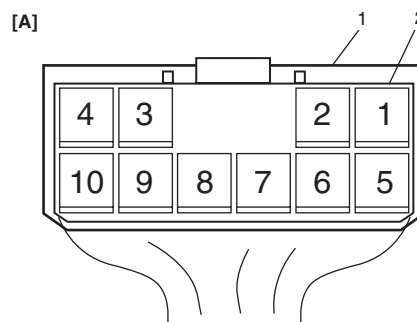


I5JB0A990008-01

[A]: Viewed from harness side

Sun Roof Assembly Components

S6JB0B9906007

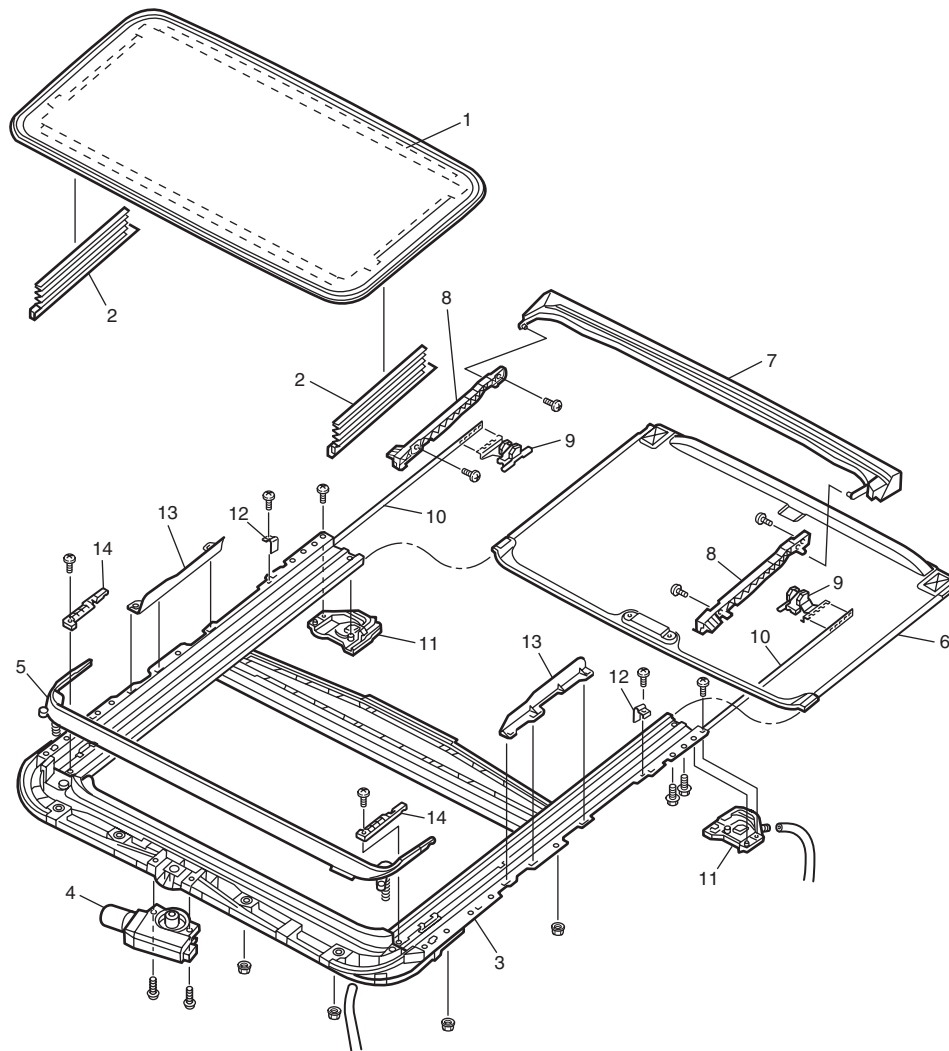

I5JB0A990009-02


1. Sun roof glass	6. Sunshade	11. No.1 peace
2. Sun roof cover	7. Drip channel	12. Rail stopper
3. Sun roof housing	8. Panel bracket	13. Housing cover
4. Sun roof motor	9. Shoe	14. Guide block
5. Deflector	10. Drive cable	

Sun Roof Assembly Removal and Installation

S6JB0B9906008


Removal

- 1) Remove head lining referring to "Head Lining Removal and Installation in Section 9H".
- 2) Remove sun roof glass referring to "Sun Roof Glass Removal and Installation".
- 3) Disconnect drain hoses (1) connected to sun roof assembly at 4 locations.

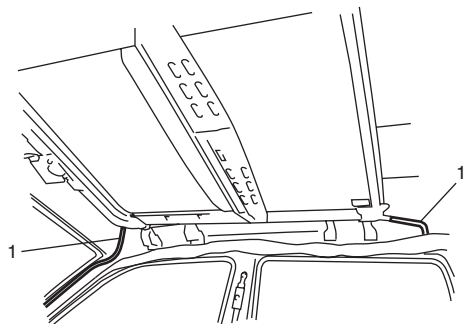


I5JB0A990010-01

- 4) Disconnect sun roof motor (1) at coupler (2).

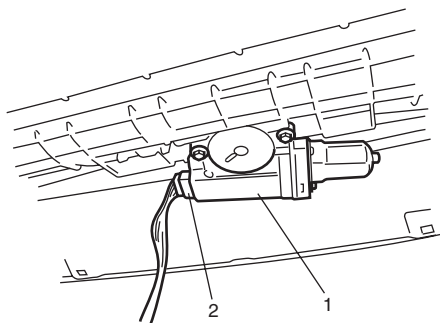

I5JB0A990011-01

- 5) Remove 8 nuts (1) and 4 bolts (2), then remove sun roof assembly (3).


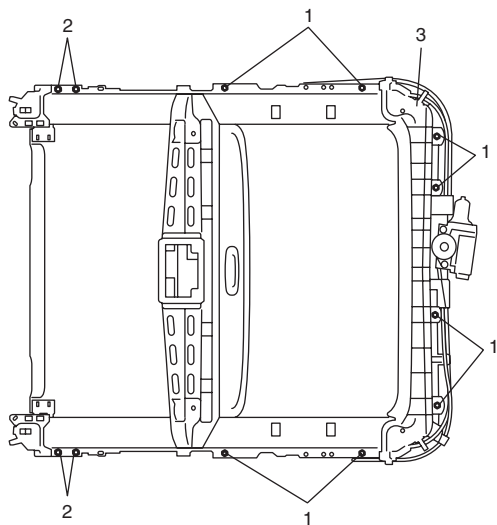


I5JB0A990012-01

Installation

For installation, reverse removal procedure, noting the following points.

- Connect drain hoses (1) to sun roof assembly at 4 locations. Clamp drain hose by each clamp securely.
- Pass rear drain hose between rib of outlet ventilator (2).

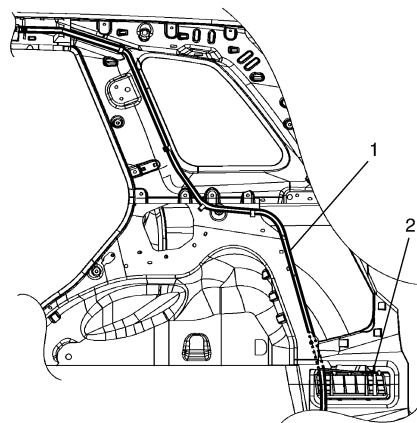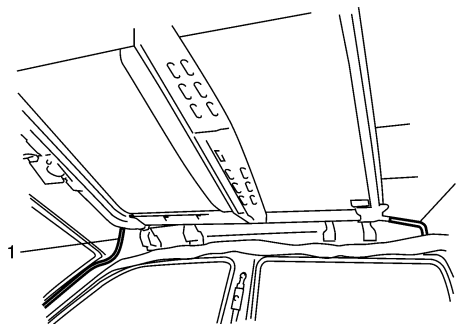

I5JB0A990013-01


- Initialize sun roof position data referring to "How to reactivate the system to prevent being pinched by the sunroof" in Sunroof section of Owner's manual.
- After reinstalling sun roof assembly, be sure to make glass adjustment. (Refer to "Sun Roof Glass Adjustment".)

Sun Roof Assembly Disassembly and Reassembly

S6JB0B9906009


Disassembly

- 1) Remove sun roof motor (1).

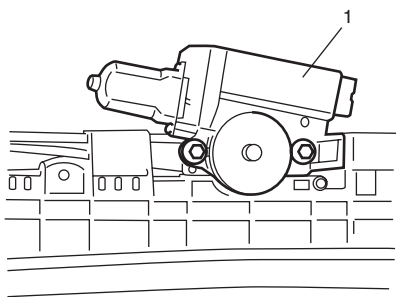


I5JB0A990014-01

- 2) Slide sunshade (1) to full-position.
- 3) Remove deflector (2) from holder (3) with holding deflector.

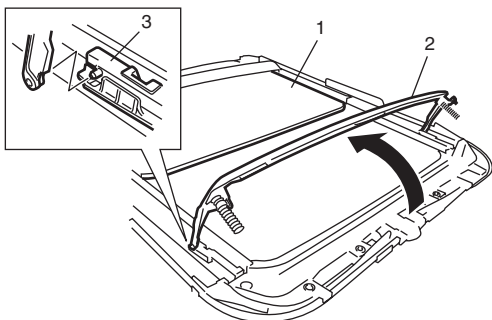


I5JB0A990015-01

- 4) Remove No.1 peaces (1) and then pull out sunshade (2) from guide rails (3).
- 5) Remove rail stoppers (4) from guide rails.

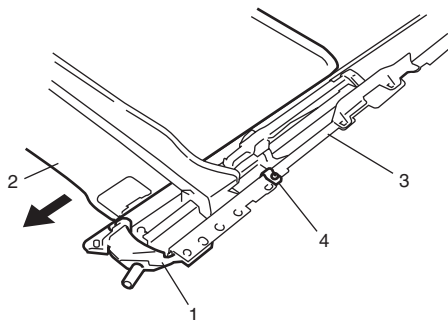

I5JB0A990016-01


- 6) Pull out drip channel (1), panel brackets (2), shoes (3) and drive cables (4) all together from guide rails.

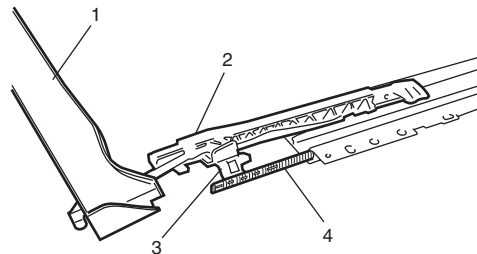

I5JB0A990017-01

- 7) Disassemble drip channel, panel brackets, shoes and drive cables.

- 8) Remove guide block (1) and housing covers (2) from rails.

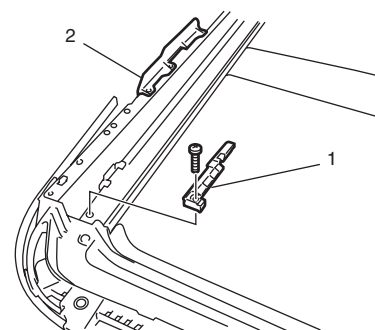


I5JB0A990018-01

Reassembly

Reverse disassembly procedure for reassembly, noting the following.

- Check wear and damage of drive cables and sun roof motor gear.
- Apply grease to sliding part.
- Slide shoes (1) to contact guide blocks (2) for positioning the sun roof to tilt up position and install sun roof motor.

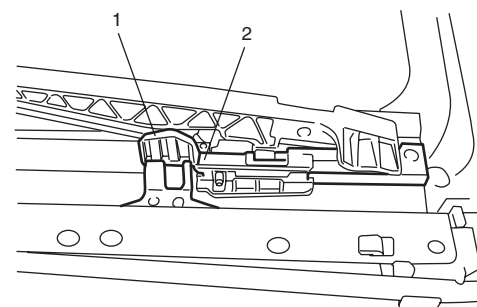

I5JB0A990019-01

Hood / Fenders / Doors

Repair Instructions

Hood Removal and Installation

S6JB0B9A06001

Removal

⚠ CAUTION

Place cloth to prevent body from any damage.

- 1) Remove hood silencer (4).
- 2) Disconnect window washer hose (1) from hood.
- 3) Remove 4 mounting bolts (3) to detach hood (2).


Installation

Reverse removal procedure noting the following.

- Apply sealant to contact face "A" of hood hinge.

"A": Sealant 99000-31110 (SUZUKI Bond No.1215)

- Adjust hood lock position if necessary referring to "Hood Inspection and Adjustment".

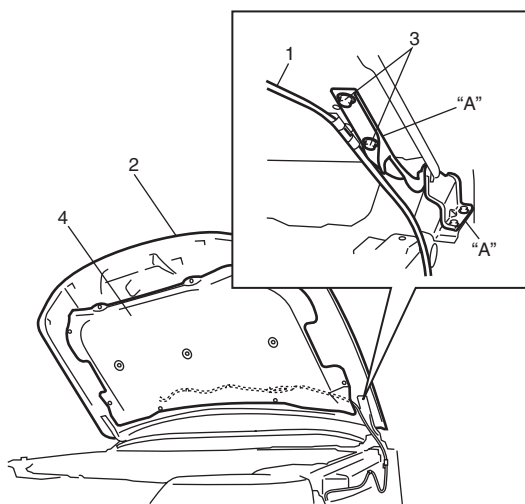

I5JB0A9A0001-01

Hood Inspection and Adjustment

S6JB0B9A06002


Inspection

- Check that hood opens and closes smoothly and properly. Lubricate if necessary.
- Check that hood stops in the secondary latched position properly (preventing hood from opening freely) and that hood closes completely in the fully latched position.
- Adjust hood lock position, if necessary.

Adjustment

Adjust the following point:

- Hood position adjustment.
Fore-and-aft and right-and-left adjustment.
Adjust hood clearance by loosening hood mounting bolts. Refer to "Panel Clearance in Section 9K".
- Vertical adjustment
If only one side (right or left) of hood is not level with front fender, make it level by tightening or loosening hood cushion (1).

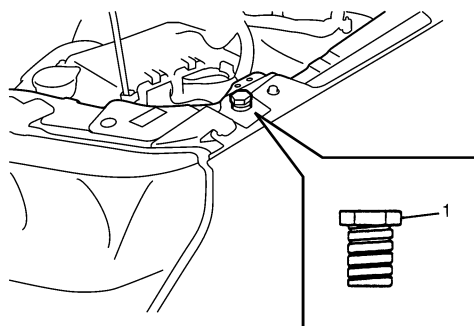


I5JB0A9A0002-01

- Hood lock position adjustment
 - a. Loosen hood lock bolts.
 - b. Adjust hood lock height position so the hood is locked without looseness.
 - c. Tighten hood latch bolts to specified torque.

Tightening torque

Hood latch bolt (a): 10 N·m (1.0 kgf-m, 7.5 lb-ft)

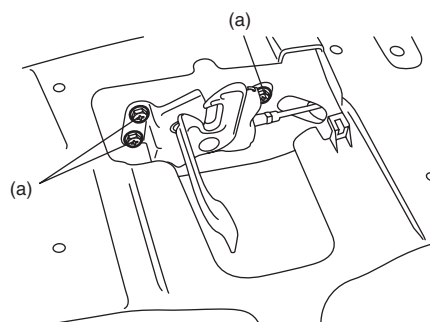


I5JB0A9A0003-01

- d. Make sure the hood is locked smoothly and securely.

Front Fender Components

S6JB0B9A06003

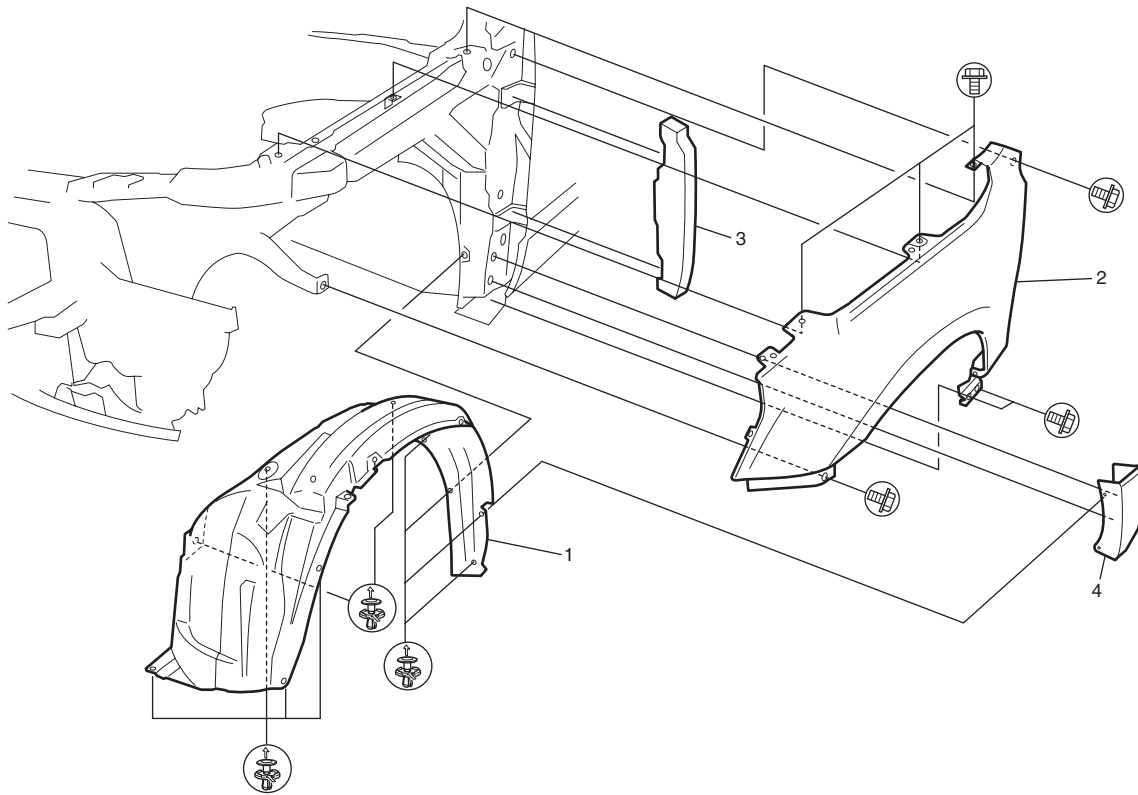

1. Front fender lining	3. Front fender rear pad
2. Front fender	4. Splash guard (if equipped)

I6JB019A0001-01

Front Fender Removal and Installation

S6JB0B9A06004

Removal

- 1) Remove splash guard (if equipped) referring to "Splash Guard Removal and Installation (If Equipped) in Section 9M".
- 2) Remove front fender lining.
- 3) Remove front bumper referring to "Front Bumper Components in Section 9K".
- 4) Remove headlight assembly referring to "Headlight Housing Removal and Installation in Section 9B".
- 5) Remove cowl top garnishes referring to "Cowl Top Components in Section 9K"
- 6) Remove front fender.


Installation

Reverse removal procedure to install front fender noting the following instruction.

- If paint on fender bolt is peeled off, be sure to apply paint again.
- Adjust panel clearance referring to "Panel Clearance in Section 9K".

Front Door Assembly Components

S6JB0B9A06005

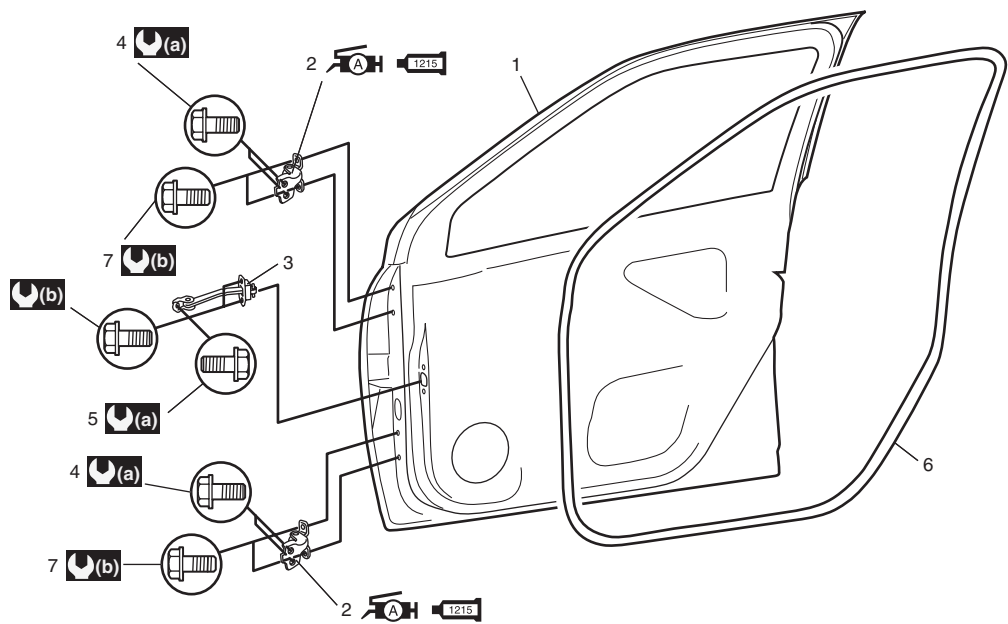

I5JB0A9A0005-01


1. Door panel	4. Front door hinge bolt (body side)	7. Front door hinge bolt (door side)
1215 2. Door hinge : Apply lithium grease 99000-25010 to rotating part. : Apply sealant 99000-31110 to contact face.	5. Door open stopper bolt	(a) : 27 N·m (2.7 kgf-m, 19.5 lb-ft)
3. Door open stopper	6. Front door opening weather-strip	(b) : 23 N·m (2.3 kgf-m, 17.0 lb-ft)

Front Door Assembly Removal and Installation

S6JB0B9A06006


Removal

- 1) Remove front fender referring to "Front Fender Components".
- 2) Disconnect door harness lead wires at each coupler.
- 3) Remove door open stopper (1).

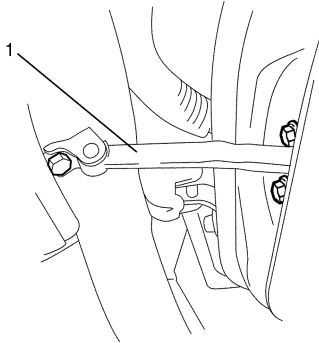


I4RS0A9A0005-01

- 4) Support door panel (1) using a jack (2) with rags (3) and a piece of wood (4) placed between jack (2) and panel (1) as shown.

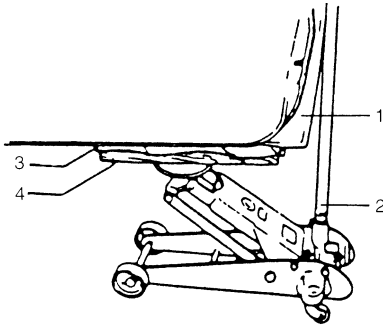

I2RH019A0003-01

- 5) Remove door assembly (1) by loosening hinge mounting bolts (2).

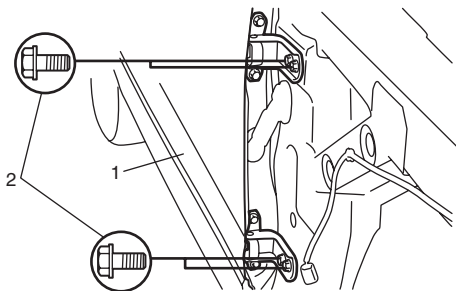

I5JB0A9A0006-01

Installation

Reverse removal procedure to install door assembly noting the following instructions.


- When replacing door, coat replacement door inside with wax for proper anti-corrosion treatment. Refer to "Sealant Application Areas in Section 9L".

- Apply sealant to contact face "A" of hinge (1) and apply grease to rotating part "B" of hinge (1).
"A": Sealant 99000-31110 (SUZUKI Bond No.1215)
"B": Grease 99000-25010 (SUZUKI Super Grease A)
- Tighten hinge bolt to specified torque.

Tightening torque

Door hinge mounting bolt (body side) (a): 27 N·m (2.7 kgf-m, 19.5 lb-ft)

Door hinge mounting bolt (door side) (b): 23 N·m (2.3 kgf-m, 17.0 lb-ft)

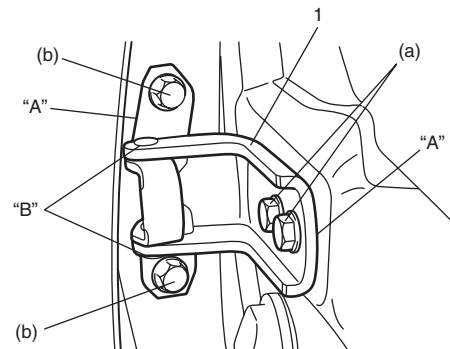

I5JB0A9A0007-01

- When door open stopper (1) is installed, make sure punch mark (2) is upward.

Door open stopper installing direction


Left side door: L punch mark is upward

Right side door: R punch mark is upward

- Tighten door open stopper bolt (3) to specified torque.

Tightening torque

Door open stopper bolt (a): 27 N·m (2.7 kgf-m, 19.5 lb-ft)

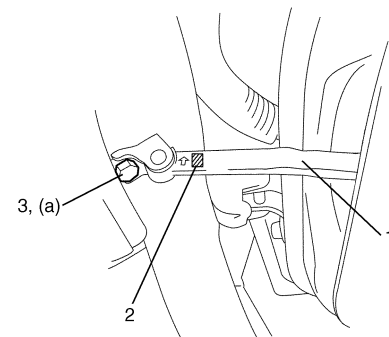


I4RS0A9A0008-01



- Adjust door latch striker position referring to "Front Door Lock Assembly Removal and Installation in Section 9F".
- Adjust front door cushion so that door becomes flush with side body.
- After installation, open and close the door to check looseness.

Rear Door Assembly Components

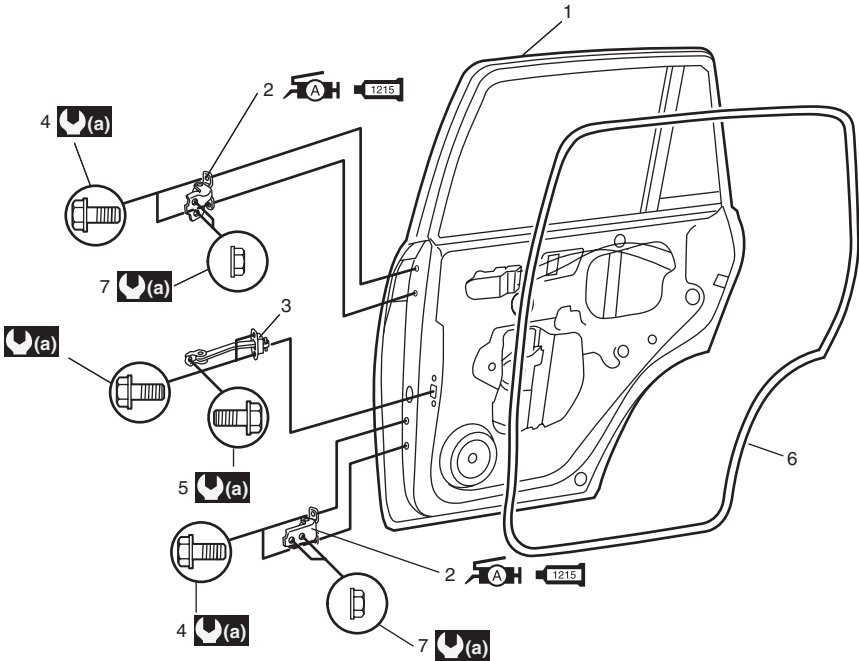S6JB0B9A06007



I5JB0A9A0008-01

1. Door panel	4. Rear door hinge bolt	7. Rear door hinge nut
 1215 2. Door hinge : Apply lithium grease 99000-25010 to rotating part. : Apply sealant 99000-31110 to contact face.	5. Door open stopper bolt	 (a) : 23 N·m (2.3 kgf·m, 17.0 lb·ft)
3. Door open stopper	6. Rear door opening weather-strip	

Rear Door Assembly Removal and Installation


S6JB0B9A06008

Refer to “Front Door Assembly Removal and Installation” as removal and installation procedures are basically the same. However, note the following.

- Tighten rear door hinge bolts and nuts to specified torque referring to “Rear Door Assembly Components”.

Rear End Door Assembly Components

S6JB0B9A06009

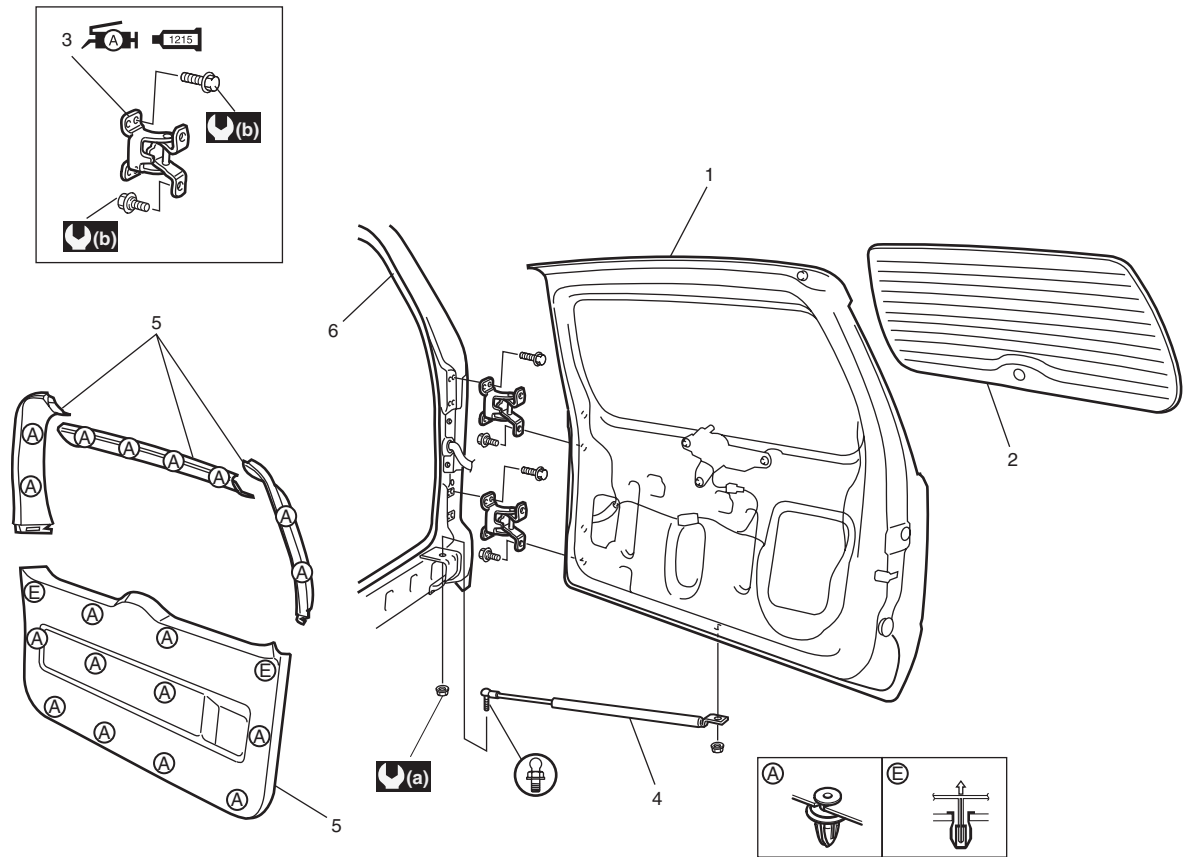

I6JB019A0002-01


1. Rear end door panel assembly	4. Rear end door balancer	⚙️(a) : 23 N·m (2.3 kgf-m, 17.0 lb-ft)
2. Rear end door window glass	5. Rear end door trim	⚙️(b) : 27 N·m (2.7 kgf-m, 19.5 lb-ft)
⚙️(A) 1215 3. Rear end door hinge : Apply lithium grease 99000-25010 to door hinge moving section. : Apply sealant 99000-31110 to contact face.	6. Rear end door opening wether-strip	

Rear End Door Assembly Removal and Installation

S6JB0B9A06010

Removal

- 1) Remove rear end door trims (1).
- 2) Remove spare tire.
- 3) Disconnect rear end door harness coupler (2) and washer hose (3).
- 4) Remove rear end door balancer (4).
- 5) Remove door hinge bolts (5) and remove rear end door assembly (6).

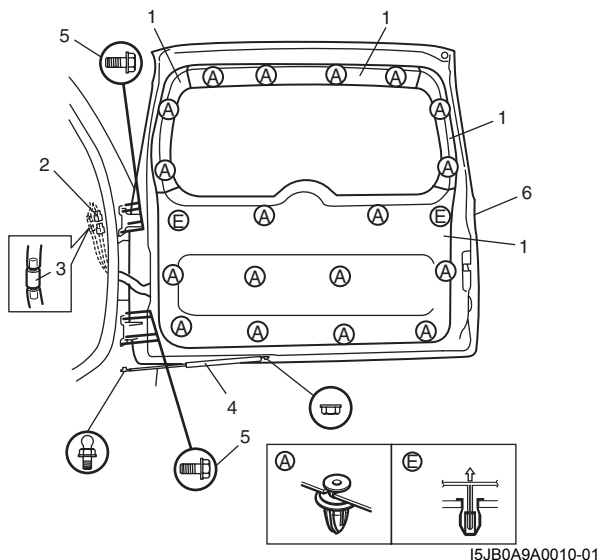


⚠ WARNING

Handling of Rear End Door Balancer (Damper)

- Handle balancer carefully. Do not scar or scratch exposed surface of its piston rod, and never allow any paint or oil to stick to its surface.
- Do not turn piston rod with balancer fully extended.
- Do not disassemble balancer (1) because its cylinder is filled with gas.

Discarding of Rear End Door Balancer (Damper)

- The gas itself in balancer is harmless but it may issue out of the hole together with chips generated by the drill (2). Therefore, be sure to wear goggle when drilling.
- Using a 2 to 3 mm (0.08 to 0.12 in.) drill (2), make a hole to remove gas inside as shown before discarding.

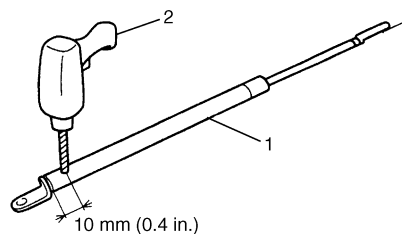


I2RH019A0010-01

Installation

Reverse removal procedure noting the following.

- Tighten rear end door hinge bolts and balancer nut to specified torque referring to "Rear End Door Assembly Components"
- Secure wiring harness (1).

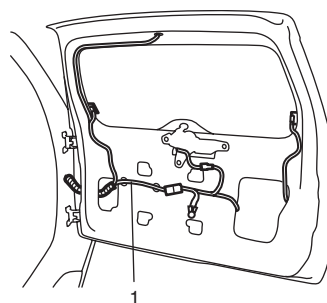


I5JB0A9A0011-01

- Adjust door latch striker position by referring to "Rear End Door Lock Assembly Removal and Installation in Section 9F".
- Adjust door cushion so that door contacts body when closed.
- Apply sealant to contact face "A" of door hinge (1) and apply grease to rotating part "B" of hinge (1).

"A": Sealant 99000-31110 (SUZUKI Bond No.1215)

"B": Grease 99000-25010 (SUZUKI Super Grease A)

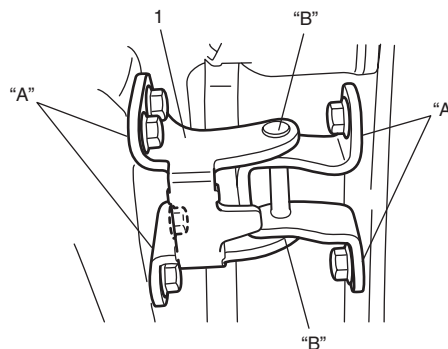

I5JB0A9A0012-01

Specifications

Tightening Torque Specifications

S6JB0B9A07001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lb·ft	
Hood latch bolt	10	1.0	7.5	🔩
Door hinge mounting bolt (body side)	27	2.7	19.5	🔩
Door hinge mounting bolt (door side)	23	2.3	17.0	🔩
Door open stopper bolt	27	2.7	19.5	🔩

NOTE

The specified tightening torque is also described in the following.

“Front Door Assembly Components”

“Rear Door Assembly Components”

“Rear End Door Assembly Components”

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Special Tools and Equipment

Recommended Service Material

S6JB0B9A08001

Material	SUZUKI recommended product or Specification		Note
Grease	SUZUKI Super Grease A	P/No.: 99000–25010	🔩 / 🔩
Sealant	SUZUKI Bond No.1215	P/No.: 99000–31110	🔩 / 🔩 / 🔩

NOTE

Required service material is also described in the following.

“Front Door Assembly Components”

“Rear Door Assembly Components”


“Rear End Door Assembly Components”

Body Structure

Repair Instructions

Front Bumper Components

S6JB0B9B06001

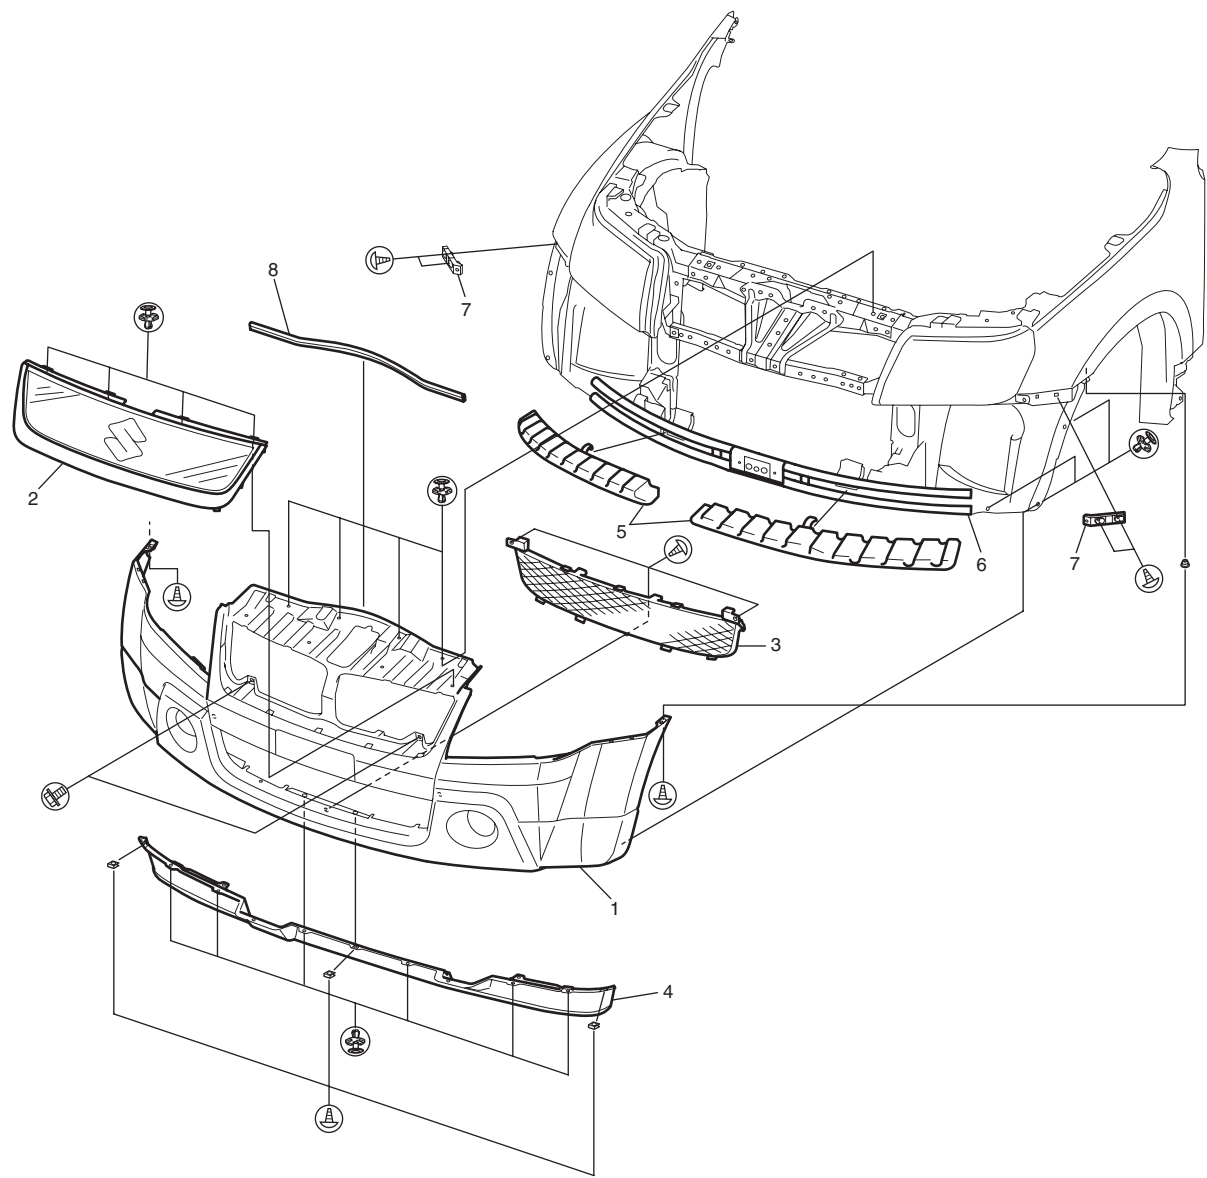


I5JB0A9B0001-02

1. Front bumper	3. Front bumper net	5. Front bumper absorber	7. Front bumper holder
2. Radiator grill	4. Front air dam skirt	6. Front bumper member	8. Seal

Rear Bumper Components

S6JB0B9B06002

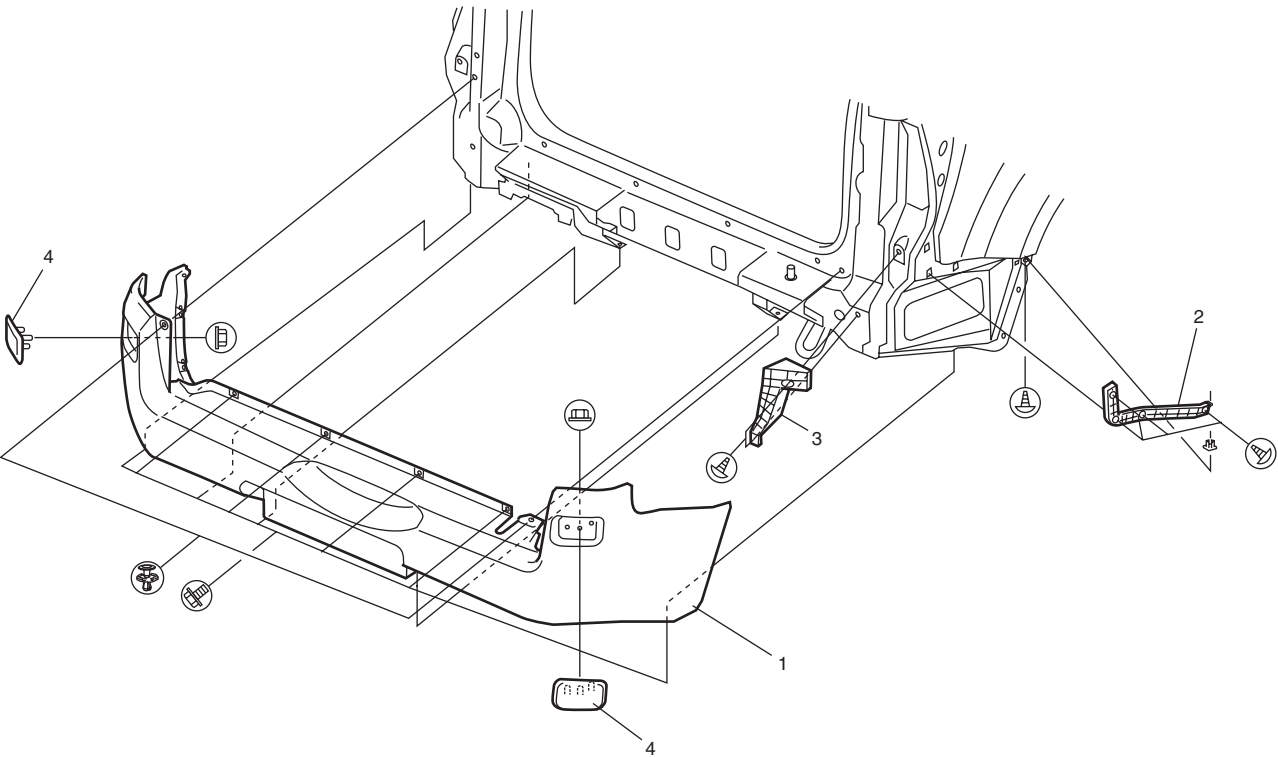


I6JB019B0001-01

1. Rear bumper	3. Rear bumper No.2 holder
2. Rear bumper No.1 holder	4. Reflector

Cowl Top Components

S6JB0B9B06003

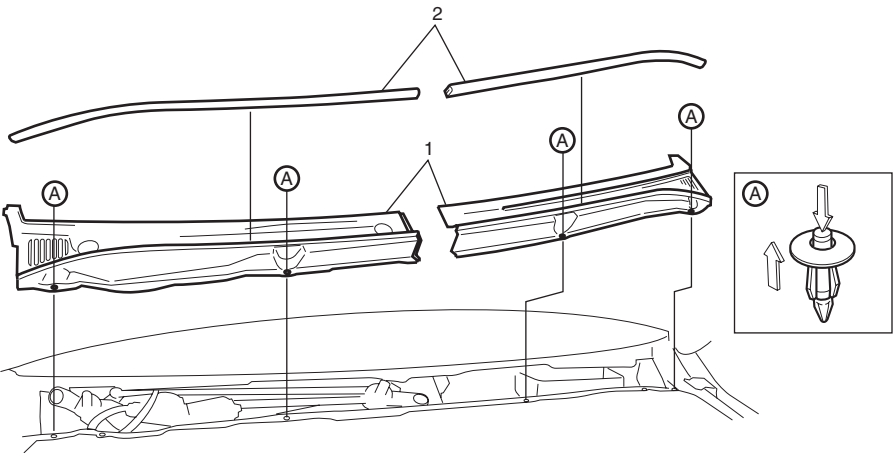

I5JB0A9B0003-01


1. Cowl top garnish	2. Hood rear seal
---------------------	-------------------

Specifications

Body Dimensions

S6JB0B9B07001

Engine Room

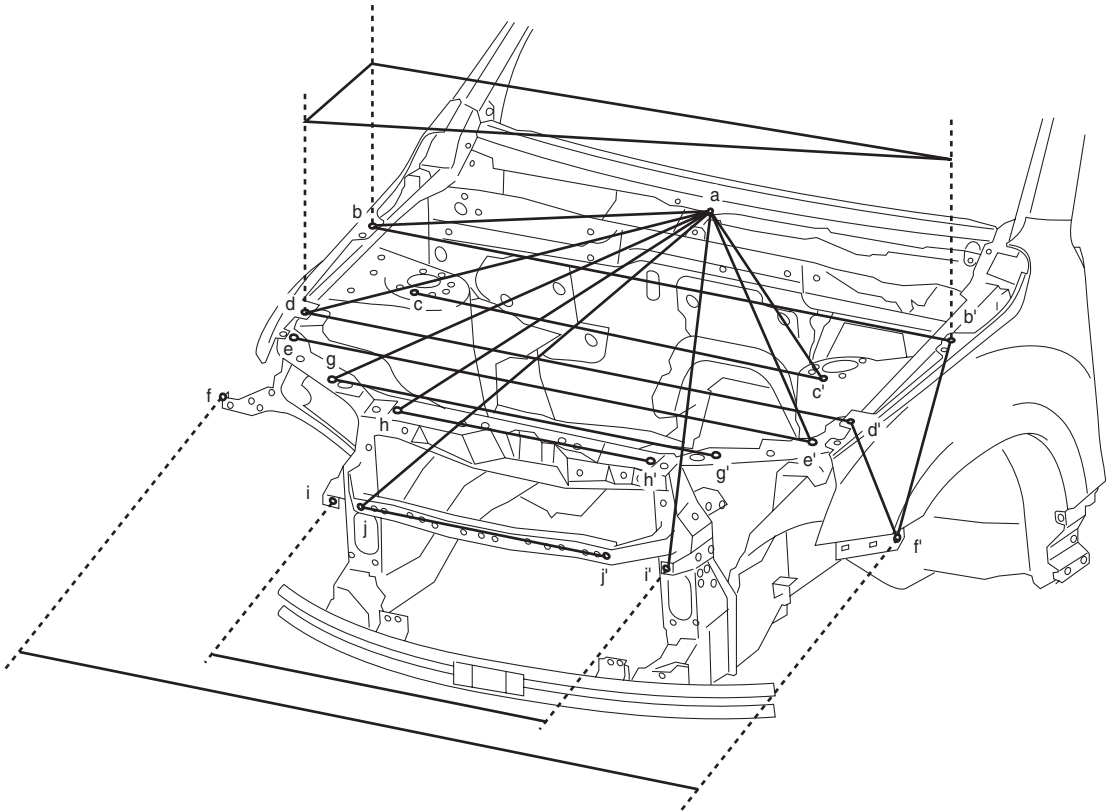


I5JB0A9B0004-01

a. Cowl top installation center hole	e (e'). Headlight installation hole	i (i'). Headlight installation hole
b (b'). Front fender installation hole	f (f'). Front fender installation hole	j (j'). Front upper member installation hole
c (c'). Jig hole (φ 8 mm)	g (g'). Headlight installation hole	
d (d'). Front fender installation hole	h (h'). Hood lock member installation hole	

Hole to hole distance

a-b(b'): 792 mm (31.18 in.)	a-j(j'): 1111 mm (43.74 in.)	d(d')-f(f'): 277 mm (10.91 in.)
a-c(c'): 697 mm (27.44 in.)	b-b': 1512 mm (59.53 in.)	e-e': 1384 mm (54.49 in.)
a-d(d'): 937 mm (36.89 in.)	b(b')-d(d'): 375 mm (14.76 in.)	f-f': 1750 mm (68.90 in.)
a-e(e'): 982 mm (38.66 in.)	b(b')-f(f'): 535 mm (21.06 in.)	g-g': 980 mm (38.58 in.)
a-g(g'): 970 mm (38.19 in.)	c-c': 1089 mm (42.87 in.)	h-h': 662 mm (26.06 in.)
a-h(h'): 910 mm (35.83 in.)	d-b': 1519 mm (59.80 in.)	i-i': 865 mm (34.06 in.)
a-i(i'): 1111 mm (43.74 in.)	d-d': 1432 mm (56.38 in.)	j-j': 630 mm (24.80 in.)

Rear End Door

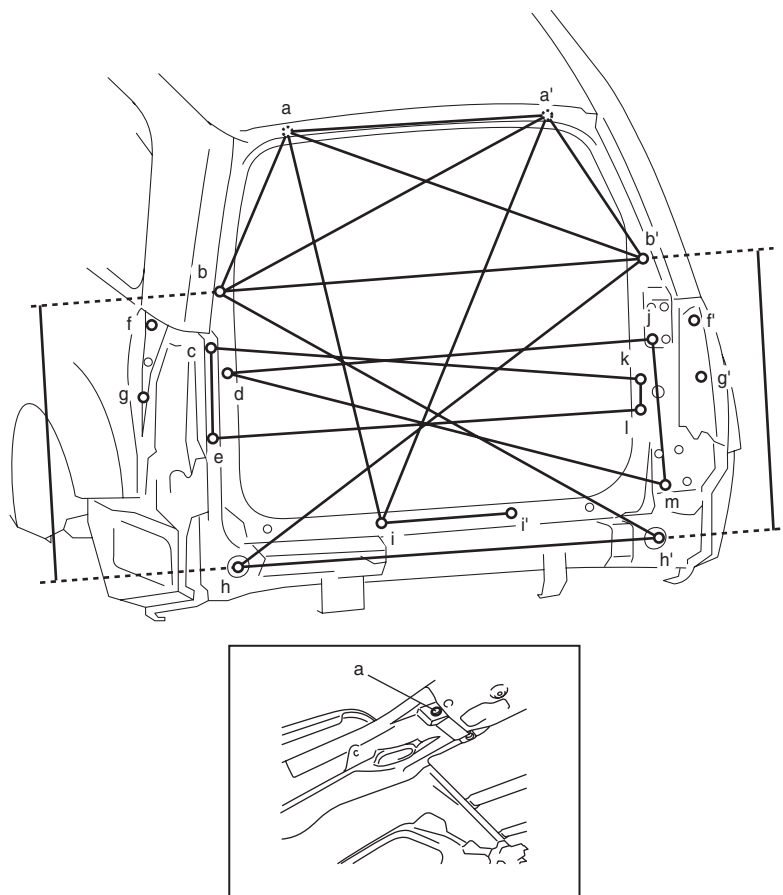


I6JB019B0002-01

a (a'). Roof back inner panel bolt installation hole	d (d'). Rear end door switch installation hole	g (g'). Rear combination light clip installation hole
b (b'). Jig hole (φ 15 mm)	e (e'). Rear combination light installation hole	h (h'). Jig hole (φ 15 mm)
c (c'). Rear combination light installation hole	f (f'). Rear combination light clip installation hole	i (i'). Rear bumper installation hole

Hole to hole distance

a-a': 718 mm (28.27 in.)	b-h: 729 mm (28.70 in.)	e-l: 1209 mm (47.60 in.)
a-b: 437 mm (17.20 in.)	b-h': 1355 mm (53.35 in.)	f-f': 1491 mm (58.70 in.)
a-b': 1002 mm (39.45 in.)	b'-h: 1347 mm (53.03 in.)	g-g': 1548 mm (60.94 in.)
a-i: 1021 mm (40.20 in.)	b'-h': 727 mm (28.62 in.)	h-h': 1138 mm (44.80 in.)
a'-b: 1007 mm (39.65 in.)	c-e: 264 mm (10.39 in.)	i-i': 300 mm (11.81 in.)
a'-b': 440 mm (17.32 in.)	c-k: 1214 mm (47.80 in.)	j-m: 385 mm (15.16 in.)
a'-i: 1122 mm (44.17 in.)	d-j: 1163 mm (45.79 in.)	k-l: 145 mm (5.71 in.)
b-b': 1138 mm (44.80 in.)	d-m: 1213 mm (47.76 in.)	

Side Body

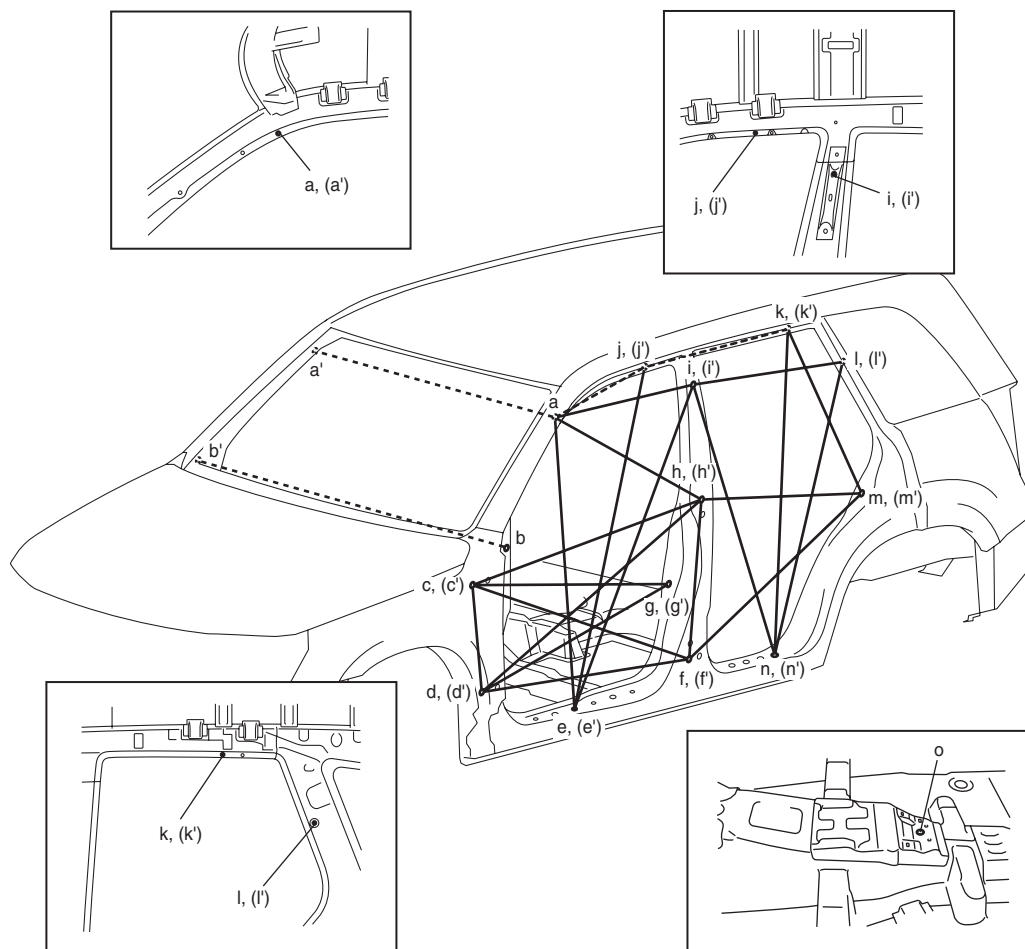

15JB0A9B0006-02


a (a'). Jig hole (ϕ 8 mm)	f (f'). Rear door lower hinge installation front side hole	k (k'). Jig hole (ϕ 8 mm)
b (b'). Steering support member installation hole	g (g'). Front door switch installation hole	l (l'). Rear quarter upper trim installation hole
c (c'). Front door upper hinge installation front side hole	h (h'). Rear door upper hinge installation upper side hole	m (m'). Rear door switch installation hole
d (d'). Front door lower hinge installation front side hole	i (i'). Jig hole (ϕ 8 mm)	n (n'). Rear side sill scuff installation hole
e (e'). Front side sill scuff installation hole	j (j'). Jig hole (ϕ 8 mm)	o. Jig hole (ϕ 10 mm)

Hole to hole distance

a-a': 1248 mm (49.13 in.)	d(d')-f(f'): 1085 mm (42.72 in.)	i-i': 1302 mm (51.26 in.)
a(a')-e(e'): 1093 mm (43.03 in.)	d(d')-g(g'): 1081 mm (42.56 in.)	i(i')-n(n'): 1063 mm (41.85 in.)
a(a')-h(h'): 731 mm (28.78 in.)	d(d')-h(h'): 1226 mm (44.33 in.)	i(i')-l(l'): 833 mm (32.80 in.)
a(a')-i(i'): 573 mm (22.56 in.)	e-e': 1567 mm (61.69 in.)	j-j': 1205 mm (47.44 in.)
a(a')-j(j'): 340 mm (13.39 in.)	e(e')-i(i'): 1248 mm (49.13 in.)	j(j')-k(k'): 733 mm (28.86 in.)
b-b': 1506 mm (59.29 in.)	e(e')-j(j'): 1239 mm (48.78 in.)	k-k': 1190 mm (46.85 in.)
c-c': 1594 mm (62.76 in.)	f-f'): 1621 mm (63.82 in.)	k(k')-m(m'): 713 mm (28.07 in.)
c (c')-d(d'): 345 mm (13.58 in.)	f(f')-h(h'): 391 mm (15.39 in.)	k(k')-n(n'): 1171 mm (46.10 in.)
c(c')-f(f'): 1123 mm (44.21 in.)	f(f')-m(m'): 979 mm (38.54 in.)	l-l': 1330 mm (52.36 in.)
c(c')-g(g'): 1049 mm (41.30 in.)	g-g': 1472 mm (57.95 in.)	l(l')-n(n'): 1069 mm (42.09 in.)
c(c')-h(h'): 1148 mm (45.20 in.)	h-h': 1580 mm (62.20 in.)	m-m': 1476 mm (58.11 in.)
d-d': 1630 mm (64.17 in.)	h(h')-m(m'): 859 mm (33.82 in.)	n-n': 1567 mm (61.69 in.)

NOTE

Use jig hole (o) as datum point to check symmetry of body structure.

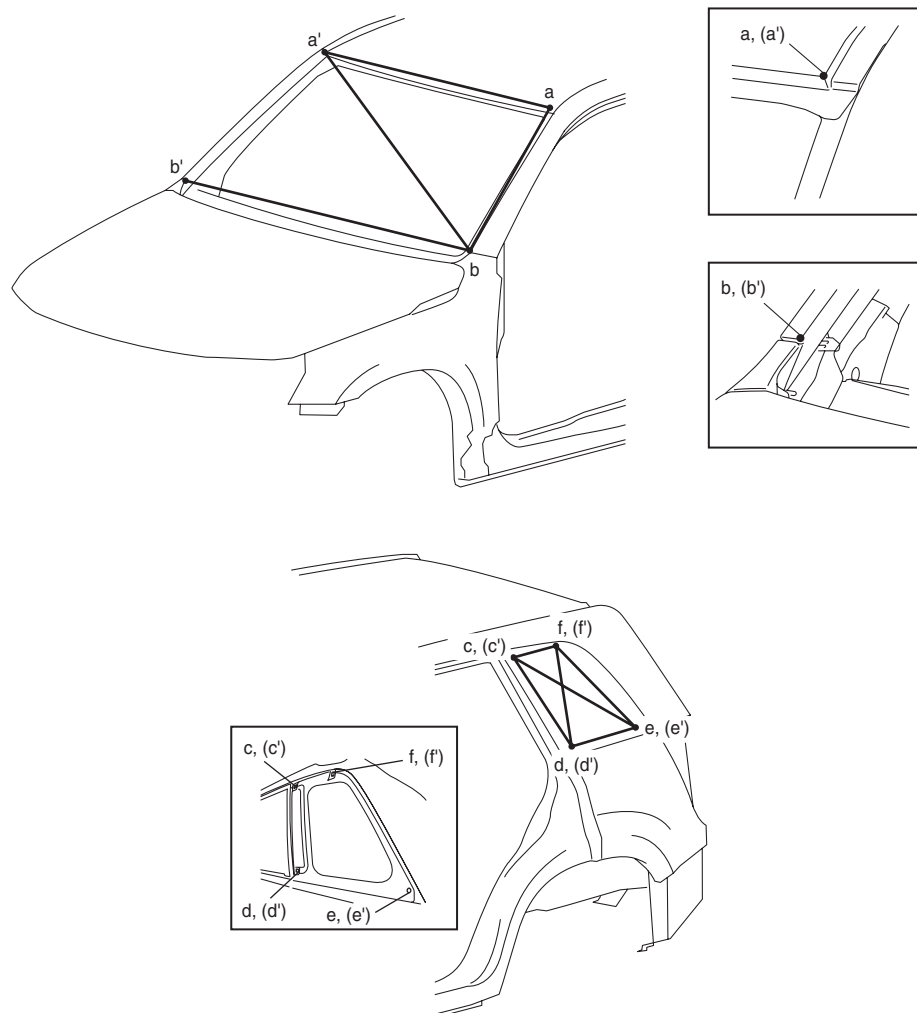

I6JB019B0003-02


a (a'). Roof panel end corner	c (c'). Rear quarter window installation hole	e (e'). Rear quarter window installation hole
b (b'). Front pillar end corner	d (d'). Rear quarter window installation hole	f (f'). Rear quarter window installation hole

Hole to hole distance

a-a': 1128 mm (44.41 in.)	c(c')-d(d'): 410 mm (16.14 in.)	d(d')-f(f'): 384 mm (15.12 in.)
a-b: 717 mm (28.23 in.)	c(c')-e(e'): 710 mm (27.95 in.)	e-e': 1458 mm (57.40 in.)
a'-b': 1477 mm (58.15 in.)	c(c')-f(f'): 268 mm (10.55 in.)	e(e')-f(f'): 496 mm (19.53 in.)
b-b': 1478 mm (58.19 in.)	d-d': 1509 mm (59.41 in.)	f-f': 1239 mm (48.78 in.)
c-c': 1252 mm (49.29 in.)	d(d')-e(e'): 443 mm (17.44 in.)	

9K-7 Body Structure:

Under Body

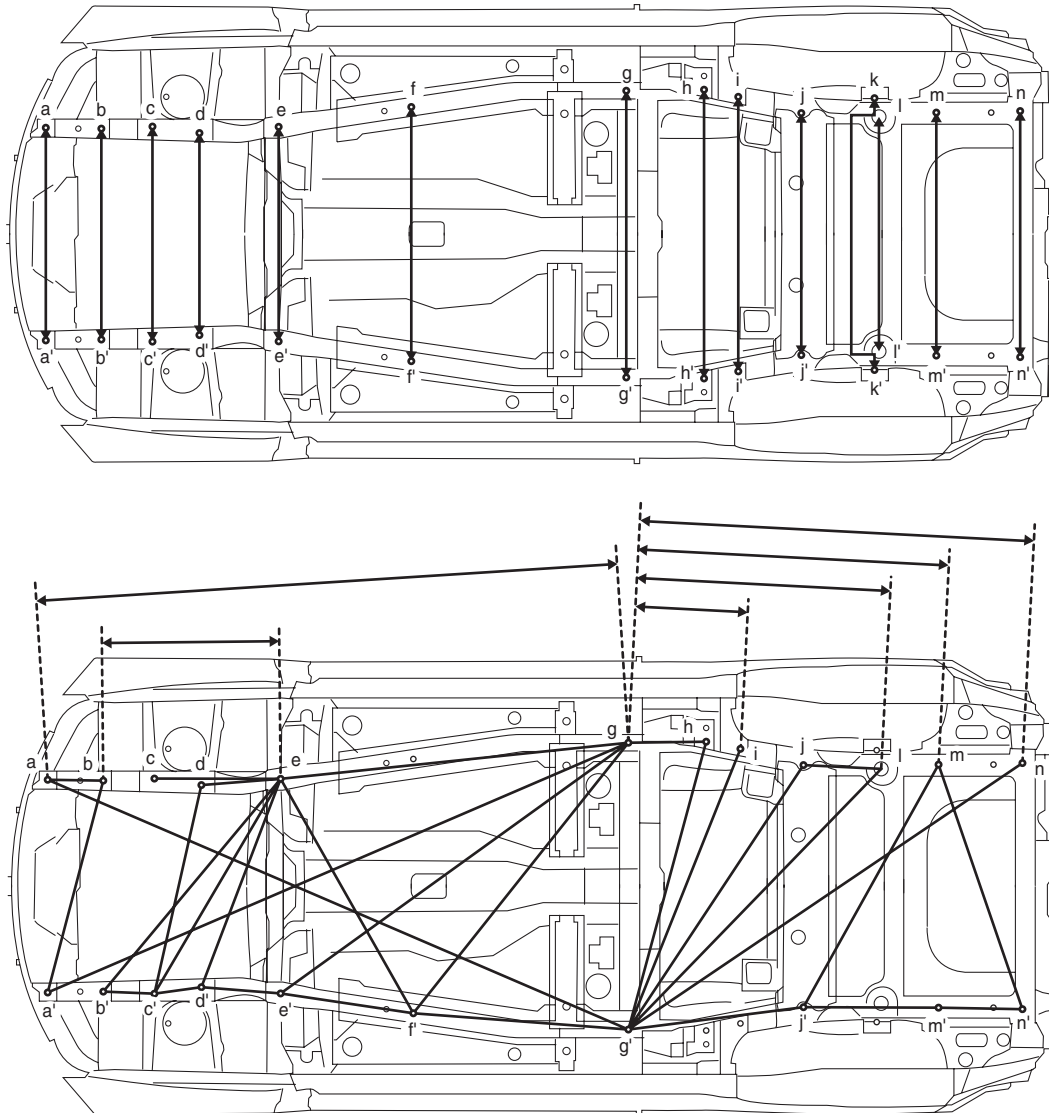

I5JB0A9B0009-01


a (a'). Jig hole (ϕ 16 mm)	f (f'). Engine rear mounting member installation hole	k (k'). Rear shock absorber installation hole
b (b'). Front suspension frame installation hole	g (g'). Jig hole (ϕ 25 mm)	l (l'). Rear coil spring hole
c (c'). Front suspension frame installation hole	h (h'). Trailing rod mount bracket installation front inner side hole	m (m'). Rear suspension frame installation rear side hole
d (d'). Front suspension frame installation hole	i (i'). Trailing rod mount bracket installation rear side hole	n (n'). Towing hook installation hole
e (e'). Front suspension frame installation hole	j (j'). Rear suspension frame installation front side hole	

Hole to hole distance

a-a': 860 mm (33.86 in.)	f-f': 1013 mm (39.88 in.)	k-k': 1079 mm (42.48 in.)
b-b': 830 mm (32.68 in.)	g-g': 1144 mm (45.04 in.)	l-l': 936 mm (36.85 in.)
c-c': 840 mm (33.07 in.)	h-h': 1134 mm (44.65 in.)	m-m': 955 mm (37.60 in.)
d-d': 794 mm (31.26 in.)	i-i': 1116 mm (43.94 in.)	n-n': 953 mm (37.52 in.)
e-e': 860 mm (33.86 in.)	j-j': 1000 mm (39.37 in.)	

Hole to hole distance

a-b: 199 mm (7.83 in.)	d-e: 384 mm (15.12 in.)	g'-h: 1177 mm (46.34 in.)
a-g: 2320 mm (91.34 in.)	d'-e: 911 mm (35.87 in.)	g'-i: 1214 mm (47.80 in.)
a-g': 2523 mm (99.33 in.)	d'-e': 384 mm (15.12 in.)	g'-j: 1289 mm (50.75 in.)
a'-b: 868 mm (34.17 in.)	e-f': 1068 mm (42.05 in.)	g'-j': 719 mm (28.31 in.)
a'-g: 2523 mm (99.33 in.)	e-g: 1381 mm (54.37 in.)	g'-l: 1446 mm (56.93 in.)
b-e: 751 mm (29.57 in.)	f'-g: 1380 mm (54.33 in.)	g'-n: 1892 mm (74.49 in.)
b'-c': 249 mm (9.80 in.)	f'-g': 864 mm (34.02 in.)	j-l: 314 mm (12.36 in.)
b'-e: 1130 mm (44.49 in.)	g-h: 295 mm (11.61 in.)	j'-m: 1078 mm (42.44 in.)
c-e: 532 mm (20.94 in.)	g-i: 445 mm (17.52 in.)	j'-m': 455 mm (17.91 in.)
c'-d: 833 mm (32.80 in.)	g-l: 1010 mm (39.76 in.)	m-n': 1046 mm (41.18 in.)
c'-d': 163 mm (6.42 in.)	g-m: 1158 mm (45.59 in.)	m'-n': 429 mm (16.89 in.)
c'-e: 1003 mm (39.49 in.)	g-n: 1577 mm (62.09 in.)	

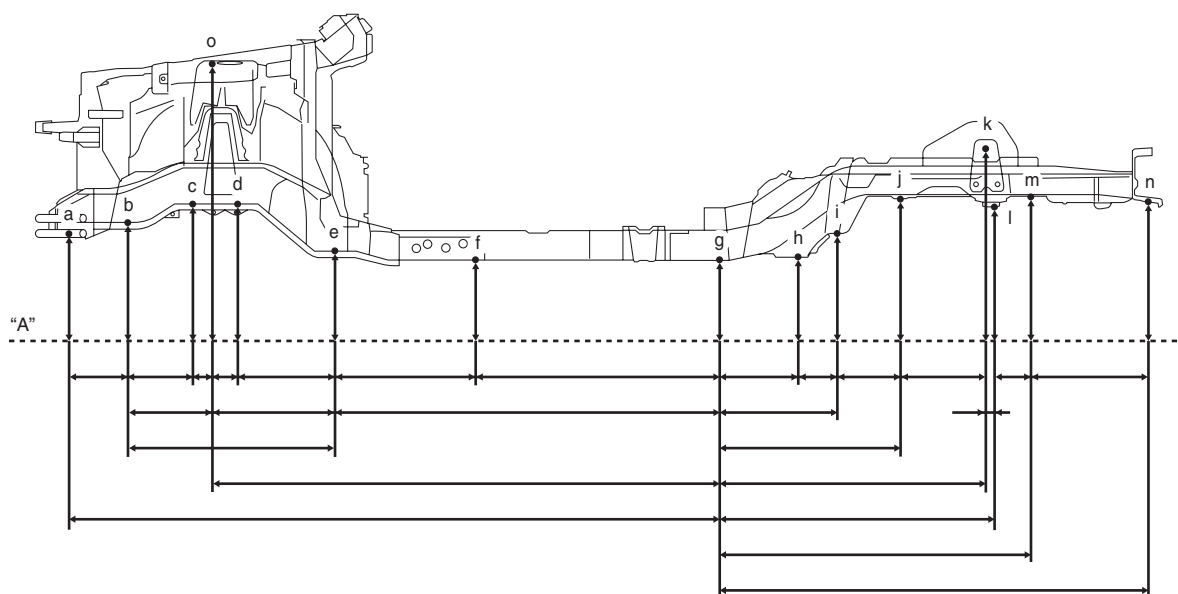

I5JB0A9B0011-01

a. Jig hole (φ 16 mm)	f. Engine rear mounting member installation hole	k. Rear shock absorber installation hole
b. Front suspension frame installation hole	g. Jig hole (φ 25 mm)	l. Rear coil spring hole
c. Front suspension frame installation hole	h. Trailing rod mount bracket installation front inner side hole	m. Rear suspension frame installation rear side hole
d. Front suspension frame installation hole	i. Trailing rod mount bracket installation rear side hole	n. Towing hook installation hole
e. Front suspension frame installation hole	j. Rear suspension frame installation front side hole	o. Jig hole (φ 10 mm)


Hole to hole distance

a-b: 196 mm (7.72 in.)	d-e: 344 mm (13.54 in.)	g-m: 1131 mm (44.53 in.)
a-g: 2313 mm (91.06 in.)	e-f: 512 mm (20.16 in.)	g-n: 1560 mm (61.42 in.)
b-c: 239 mm (9.41 in.)	e-g: 1373 mm (54.06 in.)	h-i: 139 mm (5.47 in.)
b-o: 289 mm (11.38 in.)	f-g: 862 mm (33.94 in.)	i-j: 243 mm (9.57 in.)
b-e: 744 mm (29.29 in.)	g-h: 295 mm (11.61 in.)	j-k: 294 mm (11.57 in.)
c-o: 50 mm (1.97 in.)	g-i: 434 mm (17.09 in.)	k-l: 15 mm (0.59 in.)
o-d: 111 mm (4.37 in.)	g-j: 677 mm (26.65 in.)	l-m: 145 mm (5.71 in.)
o-e: 455 mm (17.91 in.)	g'-k: 971 mm (38.23 in.)	m-n: 429 mm (16.89 in.)
o-g: 1828 mm (71.97 in.)	g-l: 987 mm (38.86 in.)	

Projection dimension from standard line "A"

a: 166 mm (6.54 in.)	f: 63 mm (2.48 in.)	k: 434 mm (17.097 in.)
b: 193 mm (7.60 in.)	g: 61 mm (2.40 in.)	l: 250 mm (9.84 in.)
c: 263 mm (10.35 in.)	h: 71 mm (2.80 in.)	m: 291 mm (11.46 in.)
d: 263 mm (10.35 in.)	i: 158 mm (6.22 in.)	n: 273 mm (10.75 in.)
e: 95 mm (3.74 in.)	j: 292 mm (11.50 in.)	o: 772 mm (30.39 in.)

Front Suspension Frame

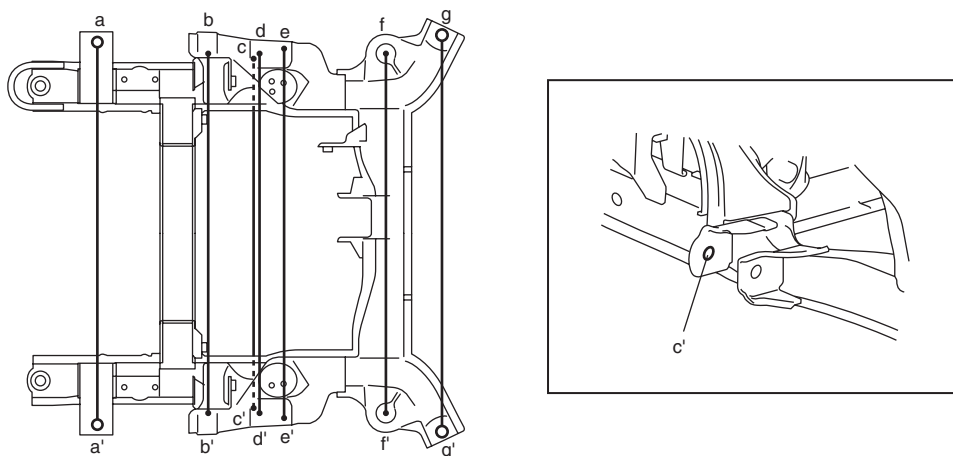


I5JB0A9B0013-01

a (a'). Front suspension frame installation front side bolt hole	d (d'). Front suspension frame stud	g (g'). Front suspension frame installation rear side bolt hole
b (b'). Front suspension frame installation bolt hole	e (e'). Front suspension frame installation bolt hole	
c (c'). Front suspension arm installation front side hole	f (f'). Front suspension arm installation rear side hole	

Hole to hole distance

a-a': 830 mm (32.68 in.)	d-d': 790 mm (31.10 in.)	g-g': 860 mm (33.86 in.)
b-b': 840 mm (33.07 in.)	e-e': 794 mm (31.26 in.)	
c-c': 780 mm (30.71 in.)	f-f': 780 mm (30.71 in.)	

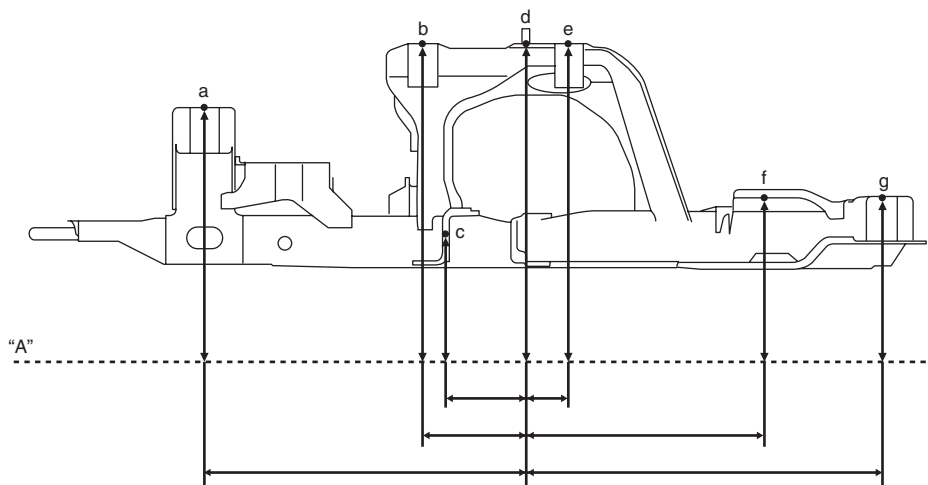

I5JB0A9B0014-01

a. Front suspension frame installation front side bolt hole	d. Front suspension frame stud	g. Front suspension frame installation rear side bolt hole
b. Front suspension frame installation bolt hole	e. Front suspension frame installation bolt hole	
c. Front suspension arm installation front side hole	f. Front suspension arm installation rear side hole	

Hole to hole distance




a-d: 349 mm (13.74 in.)	d-e: 51 mm (2.01 in.)
b-d: 110 mm (4.33 in.)	d-f: 275 mm (10.83 in.)
c-d: 80 mm (3.15 in.)	d-g: 395 mm (15.55 in.)

Projection dimension from standard line "A"

a: 193 mm (7.60 in.)	d: 263 mm (10.35 in.)	g: 95 mm (3.74 in.)
b: 263 mm (10.35 in.)	e: 263 mm (10.35 in.)	
c: 49 mm (1.93 in.)	f: 96 mm (3.78 in.)	

Panel Clearance

S6JB0B9B07002

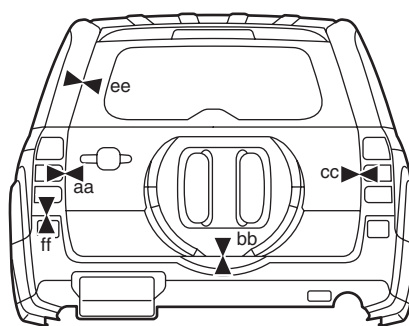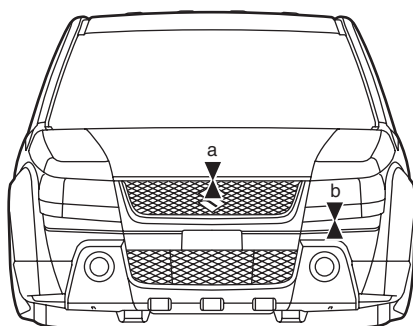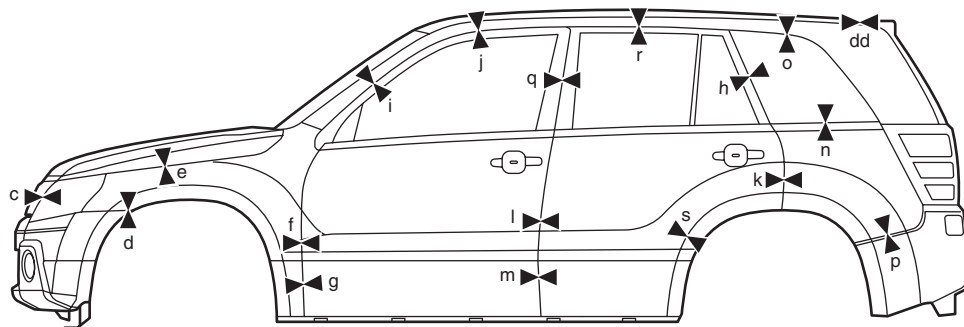

I6JB019B0004-01

Panel to panel distance

a: 7.5 – 9.5 mm (0.296 – 0.374 in.)	j: 4.0 – 6.0 mm (0.158 – 0.236 in.)	s: 16.8 – 18.8 mm (0.662 – 0.740 in.)
b: 1.0 – 3.0 mm (0.040 – 0.118 in.)	k: 3.0 – 5.0 mm (0.119 – 0.196 in.)	aa: 4.0 – 6.0 mm (0.158 – 0.236 in.)
c: 1.9 – 3.9 mm (0.075 – 0.153 in.)	l: 3.0 – 5.0 mm (0.119 – 0.196 in.)	bb: 6.3 – 8.3 mm (0.249 – 0.327 in.)
d: 0.5 – 1.0 mm (0.020 – 0.039 in.)	m: 4.0 – 6.0 mm (0.158 – 0.236 in.)	cc: 5.0 – 7.0 mm (0.197 – 0.275 in.)
e: 7.0 – 9.0 mm (0.275 – 0.354 in.)	n: 3.3 – 5.3 mm (0.120 – 0.208 in.)	dd: 6.2 – 8.2 mm (0.245 – 0.322 in.)
f: 3.0 – 5.0 mm (0.119 – 0.196 in.)	o: 1.8 – 3.8 mm (0.071 – 0.149 in.)	ee: 4.0 – 6.0 mm (0.158 – 0.236 in.)
g: 4.0 – 6.0 mm (0.158 – 0.236 in.)	p: 0.5 – 1.0 mm (0.020 – 0.039 in.)	ff: 1.0 – 3.0 mm (0.040 – 0.118 in.)
h: 6.0 – 8.0 mm (0.237 – 0.314 in.)	q: 3.0 – 5.0 mm (0.119 – 0.196 in.)	
i: 4.0 – 6.0 mm (0.158 – 0.236 in.)	r: 4.0 – 6.0 mm (0.158 – 0.236 in.)	

Paint / Coatings

General Description

Anti-Corrosion Treatment Construction

S6JB0B9C01001

▲ WARNING

Standard shop practices, particularly eye protection, should be followed during the performance of the following operations to avoid personal injury.

As rust proof treatment, steel sheets are given corrosion resistance on the interior and/or exterior.

These corrosion resistance steel sheet materials are called one of two-side galvanized steel sheets.

It is for the sake of rust protection that these materials are selected and given a variety of treatments as described blow.

- Steel sheets are treated with cathodic electro primer which is excellent in corrosion resistance.
- Rust proof wax coatings are applied to door and side sill insides where moisture is liable to stay.
- Vinyl coating is applied to body underside and wheel housing inside.
- Sealer is applied to door hem, engine compartment steel sheet-to-steel sheet joint, and the like portions to prevent water penetration and resulting in rust occurrence.

In panel replacement or collision damage repair, leaving the relevant area untreated as it is in any operation which does disturb the rust proof treatment will cause corrosion to that area. Therefore, it is the essential function of any repair operation to correctly recoat the related surfaces of the relevant area.

All the metal panels are coated with metal conditioners and primer coating during vehicle production. Following the repair and/or replacement parts installation, every accessible bare metal surface should be cleaned and coated with rust proof primer. Perform this operation prior to the application of sealer and rust proof wax coating.

Sealer is applied to the specific joints of a vehicle during production. The sealer is intended to prevent dust from entering the vehicle and serves also as an anticorrosion barrier. The sealer is applied to the door and hood hem areas and between panels. Correct and reseal the originally sealed joints if damaged. Reseal the attaching joints of a new replacement panel and reseal the hem area of a replacement door or hood.

Use a quality sealer to seal the flanged joints, overlap joints and seams. The sealer must have flexible characteristics and paint ability after it's applied to repair areas.

For the sealer to fill open joints, use caulking material. Select a sealer in conformance with the place and purpose of a specific use. Observe the manufacturer's label-stand instructions when using the sealer.

In many cases, repaired places require color painting. When this is required, follow the ordinary techniques specified for the finish preparation, color painting and undercoating build-up.

Rust proof wax, a penetrative compound, is applied to the metal-to-metal surfaces (door and side sill insides) where it is difficult to use ordinary undercoating material for coating. Therefore, when selecting the rust proof wax, it may be the penetrative type.

During the undercoating (vinyl coating) application, care should be taken that sealer is not applied to the engine-related parts and shock absorber mounting or rotating parts. Following the under coating, make sure that body drain holes are kept open.

The sequence of the application steps of the anti-corrosion materials are as follows:

- 1) Clean and prepare the metal surface.
- 2) Apply primer.
- 3) Apply sealer (all joints sealed originally).
- 4) Apply color in areas where color is required such as hem flanges, exposed joints and under body components.
- 5) Apply anticorrosion compound (penetrative wax).
- 6) Apply undercoating (rust proof material).

Plastic Parts Finishing

S6JB0B9C01002

Paintable plastic parts are ABS plastic parts.

Painting

Rigid or hard ABS plastic needs no primer coating. General acrylic lacquers can be painted properly over hard ABS plastic in terms of adherence.

- 1) Use cleaning solvent for paint finish to wash each part.
- 2) Apply conventional acrylic color lacquer to part surface.
- 3) Follow lacquer directions for required drying time. (Proper drying temperature range is 60 – 70 °C (140 – 158 °F)).

Reference

Plastic parts employ not only ABS (Acrylonitrile Butadiene Styrene) plastic but also polypropylene, vinyl, or the like plastic. Burning test method to identify ABS plastic is described below.


- 1) Use a sharp blade to cut off a plastic sliver from the part at its hidden backside.
- 2) Hold sliver with pincers and set it on fire.
- 3) Carefully observe condition of the burning plastic.
- 4) ABS plastic must raise readily distinguishable back smoke while burning with its residue suspended in air temporarily.
- 5) Polypropylene must raise no readily distinguishable smoke while burning.

Component Location

Sealant Application Areas

S6JB0B9C03001

Front Structure Panel

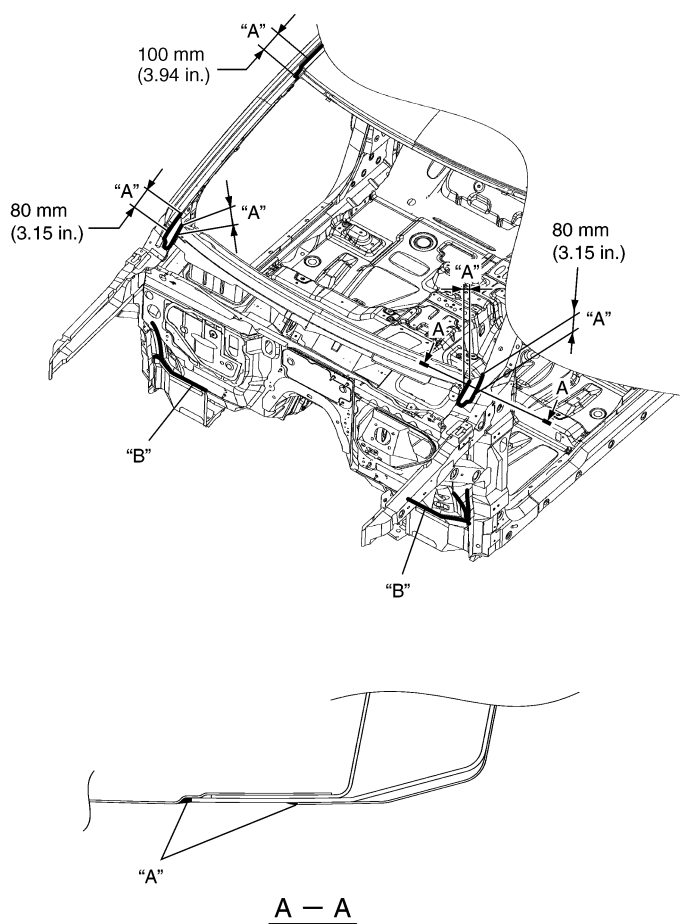


"A": Flatten sealant.

"B": Smooth out sealant with a brush.


I5JB0A9C0001-03

Dash Panel and Front Floor Panel

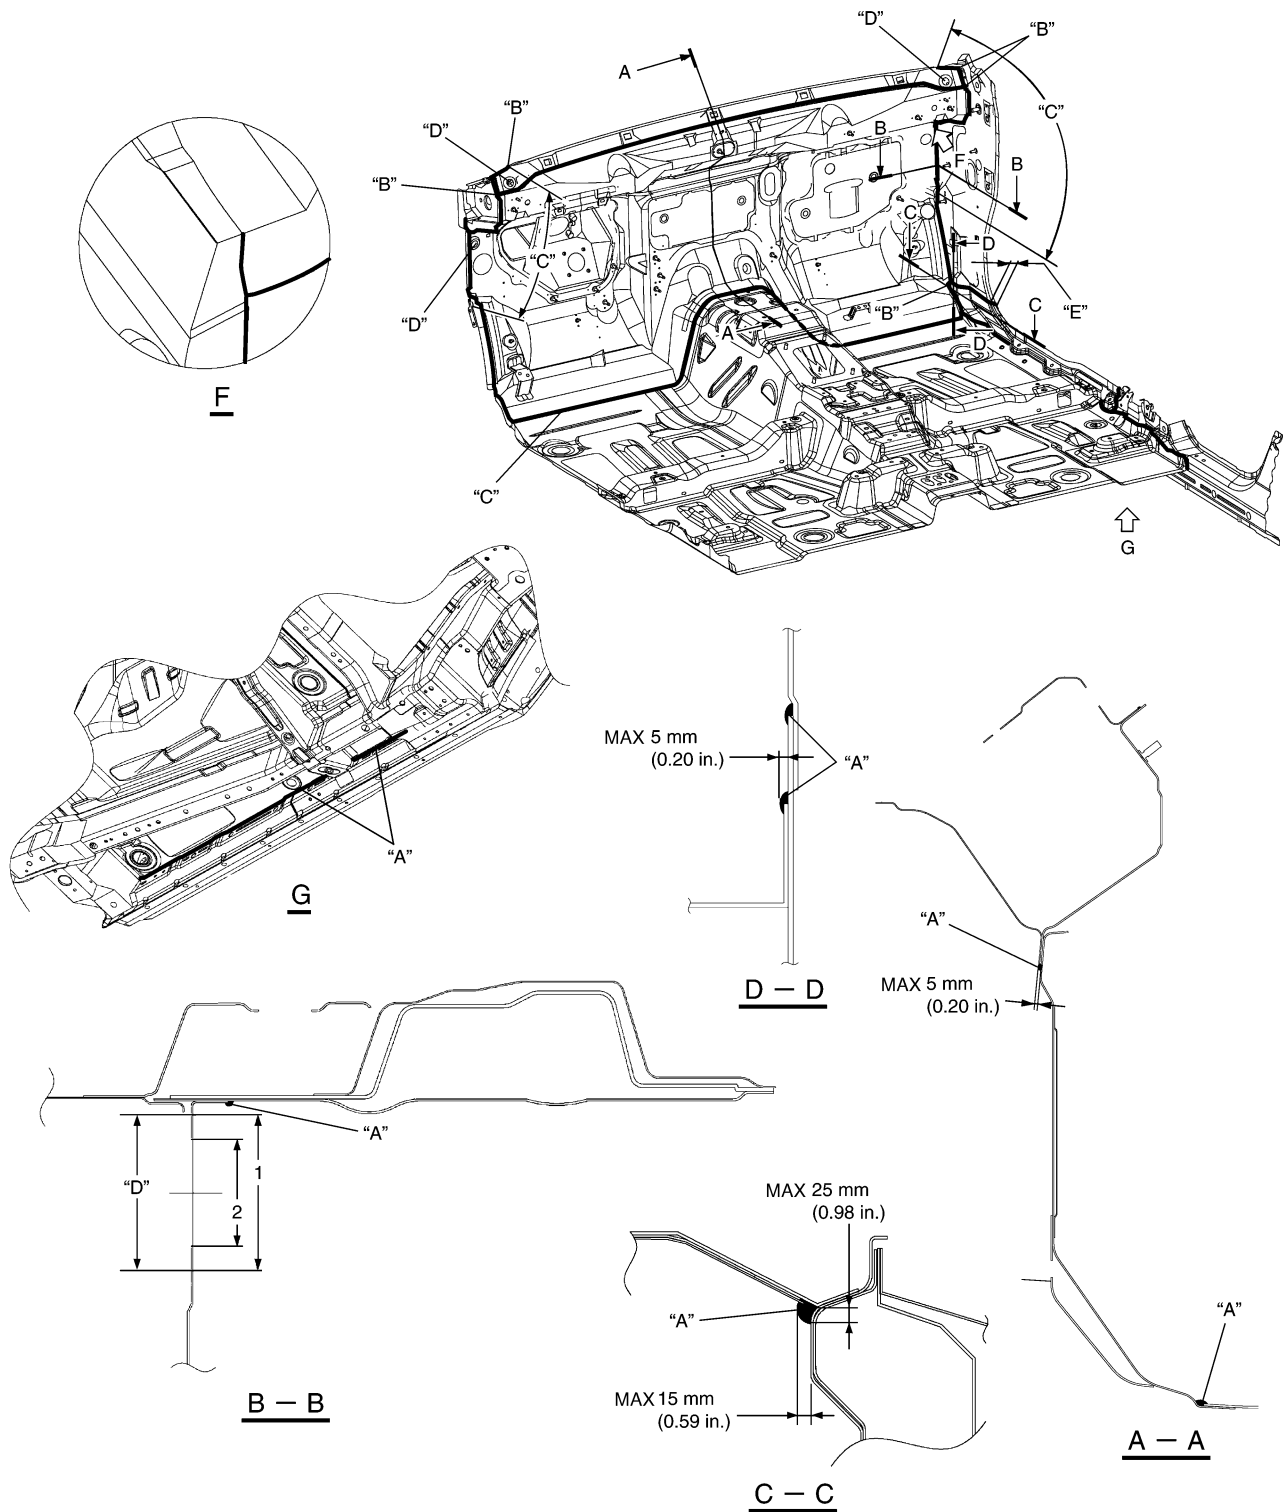

"A": Apply sealant.	"E": Flatten sealant.
"B": Fill gap / hole with sealant.	1. 88 mm (3.46 in.) diameter
"C": Smooth out sealant with a brush.	2. 60 mm (2.36 in.) diameter hole
"D": Do not apply sealant.	









Front and Rear Door Panels

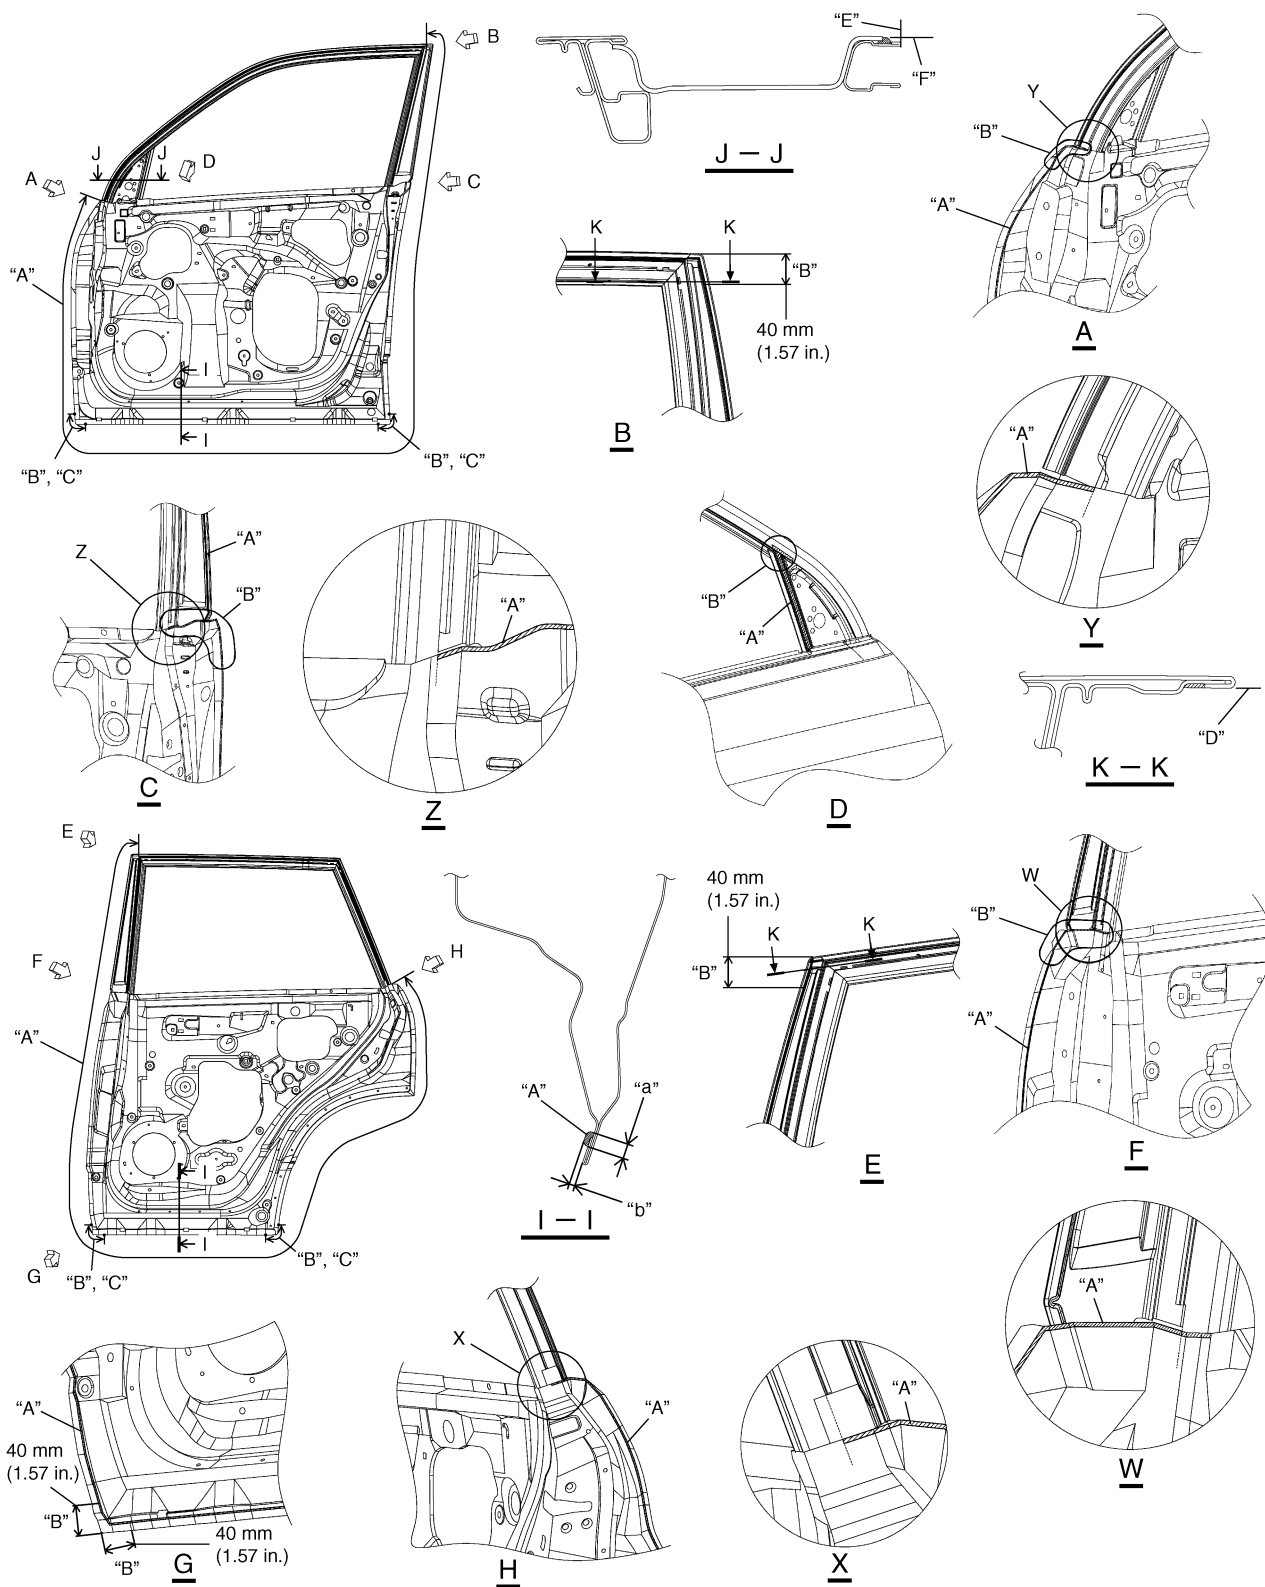

I6JB019C0004-01


"A": Apply sealant.	"D": Wipe off sealant so as not to protrude from this surface.	"a": Min. 6 mm (0.24 in.)
"B": Wipe off excess sealant after application.	"E": Do not protrude sealant backward from this line.	"b": Max. 3 mm (0.12 in.)
"C": Do not fill up drain hole.	"F": Do not protrude sealant outside from this line.	

 Rear End Door Panel and Hood Panel

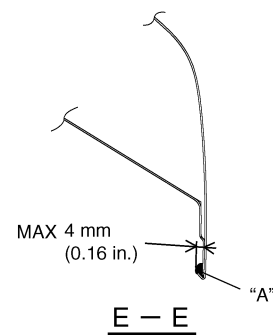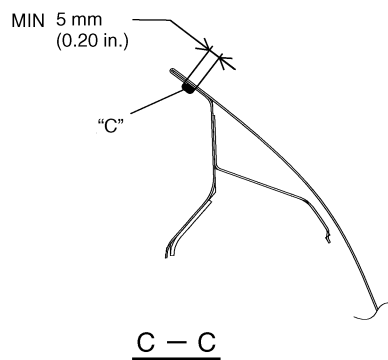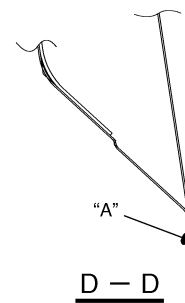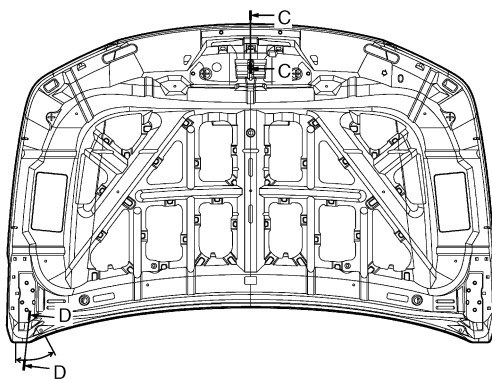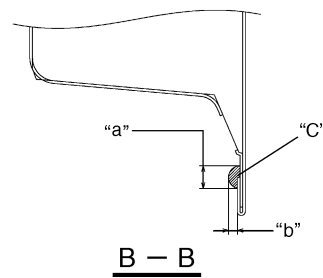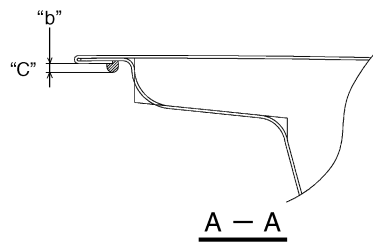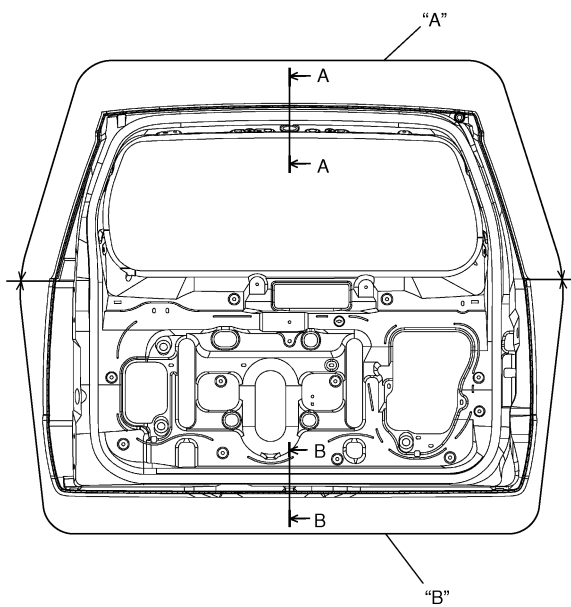


"A": Apply sealant.	"a": Min. 6 mm (0.24 in.)
"B": Apply wide sealant.	"b": Max. 3 mm (0.12 in.)
"C": Apply sealant covering flange end.	

Rear Structure Panel

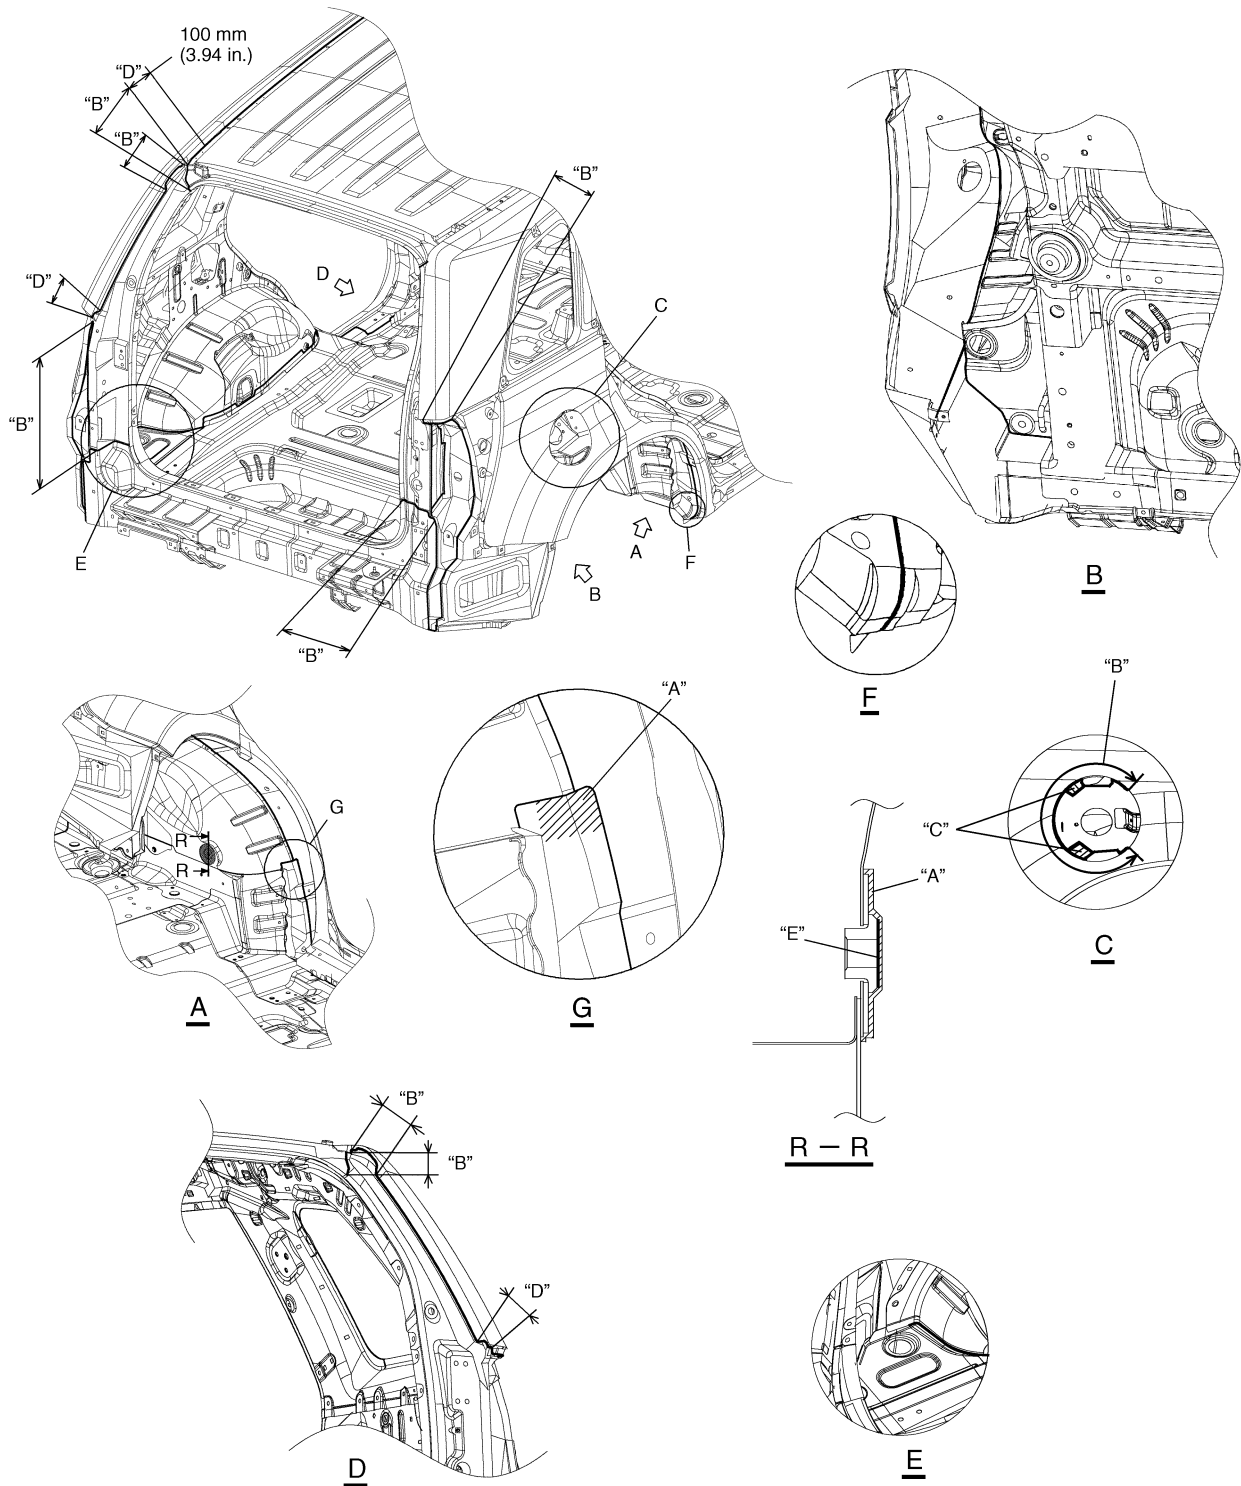

I5JB0A9C0007-04


"A": Apply sealant.	"C": Do not apply sealant.	"E": Apply masking tape
"B": Smooth out sealant with a brush.	"D": Flatten sealant	

 

"A": Apply sealant.	"C": Do not apply sealant.
"B": Smooth off sealant with a brush.	"D": Flatten sealant.


Under Coating Application Areas

S6JB0B9C03002

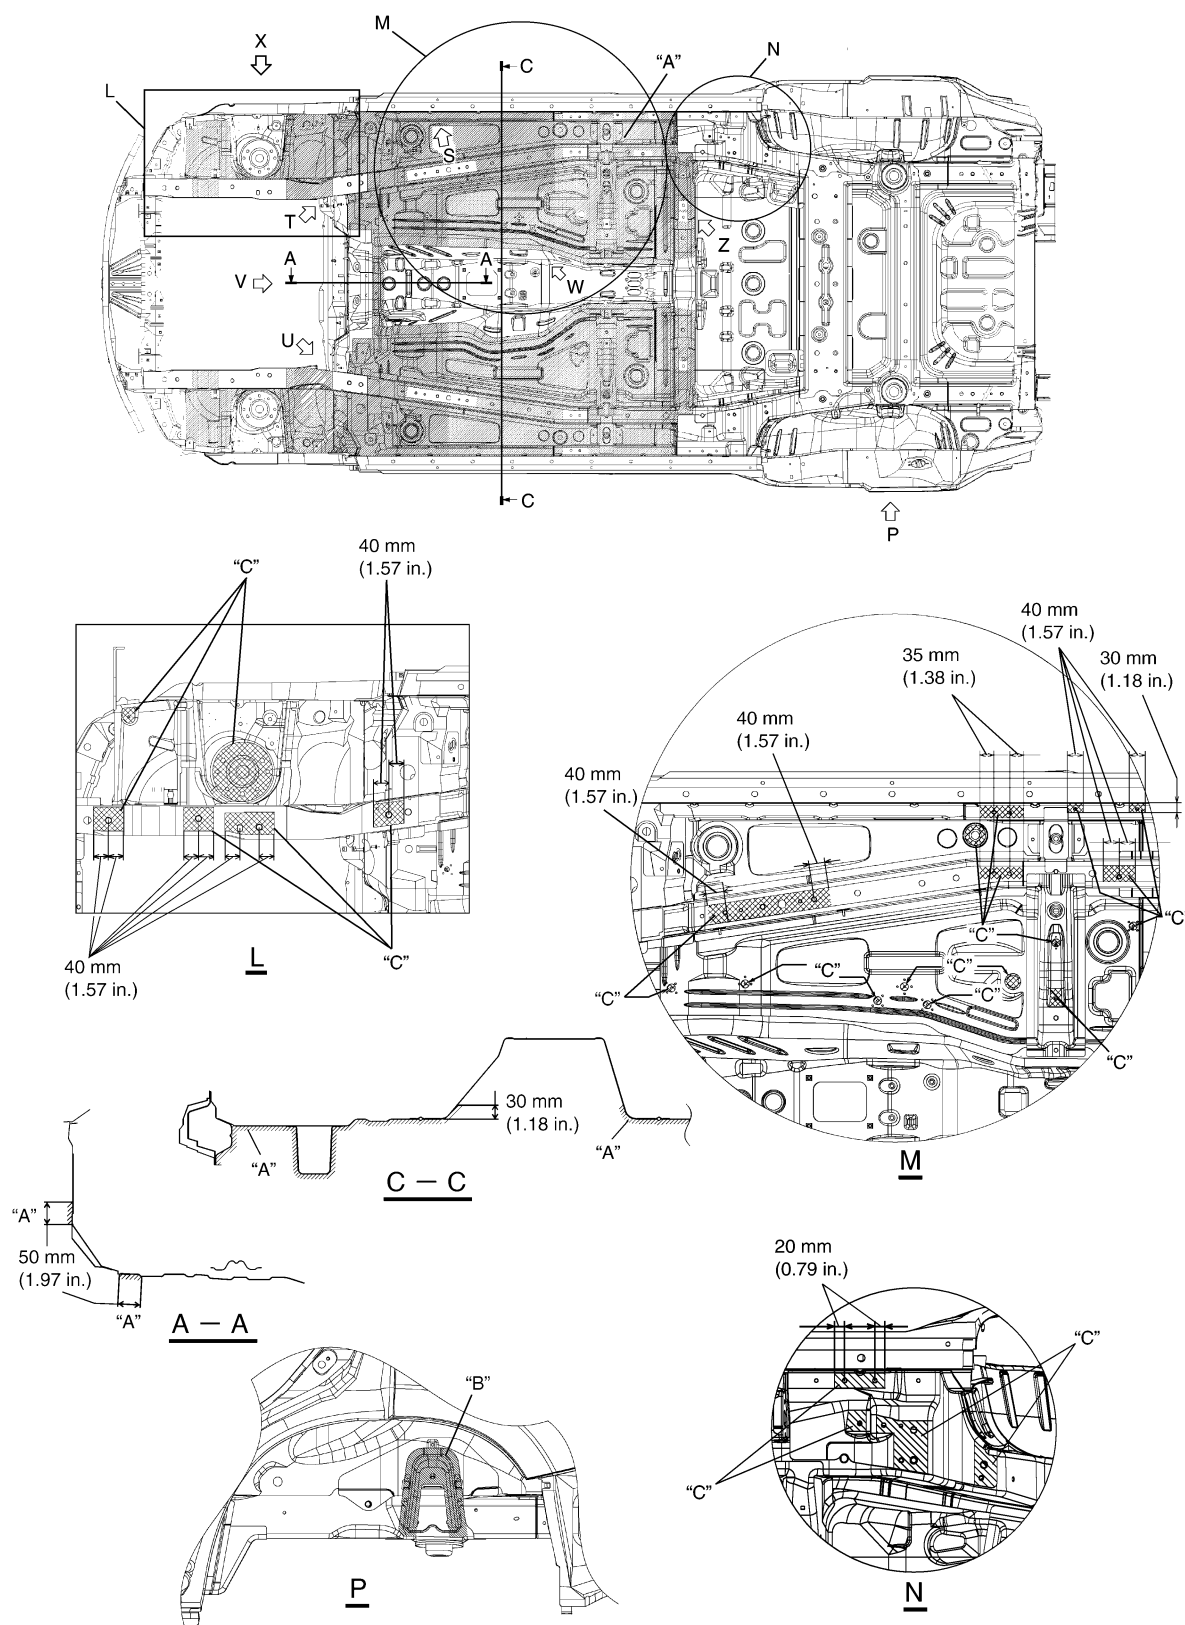

I6JB019C0008-01


"A": Apply undercoating (PVC, 400 μ m or more).	"C": Do not apply undercoating.
"B": Apply black painting.	"D": Apply undercoating (PVC, 400 μ m or more) covering flange end.

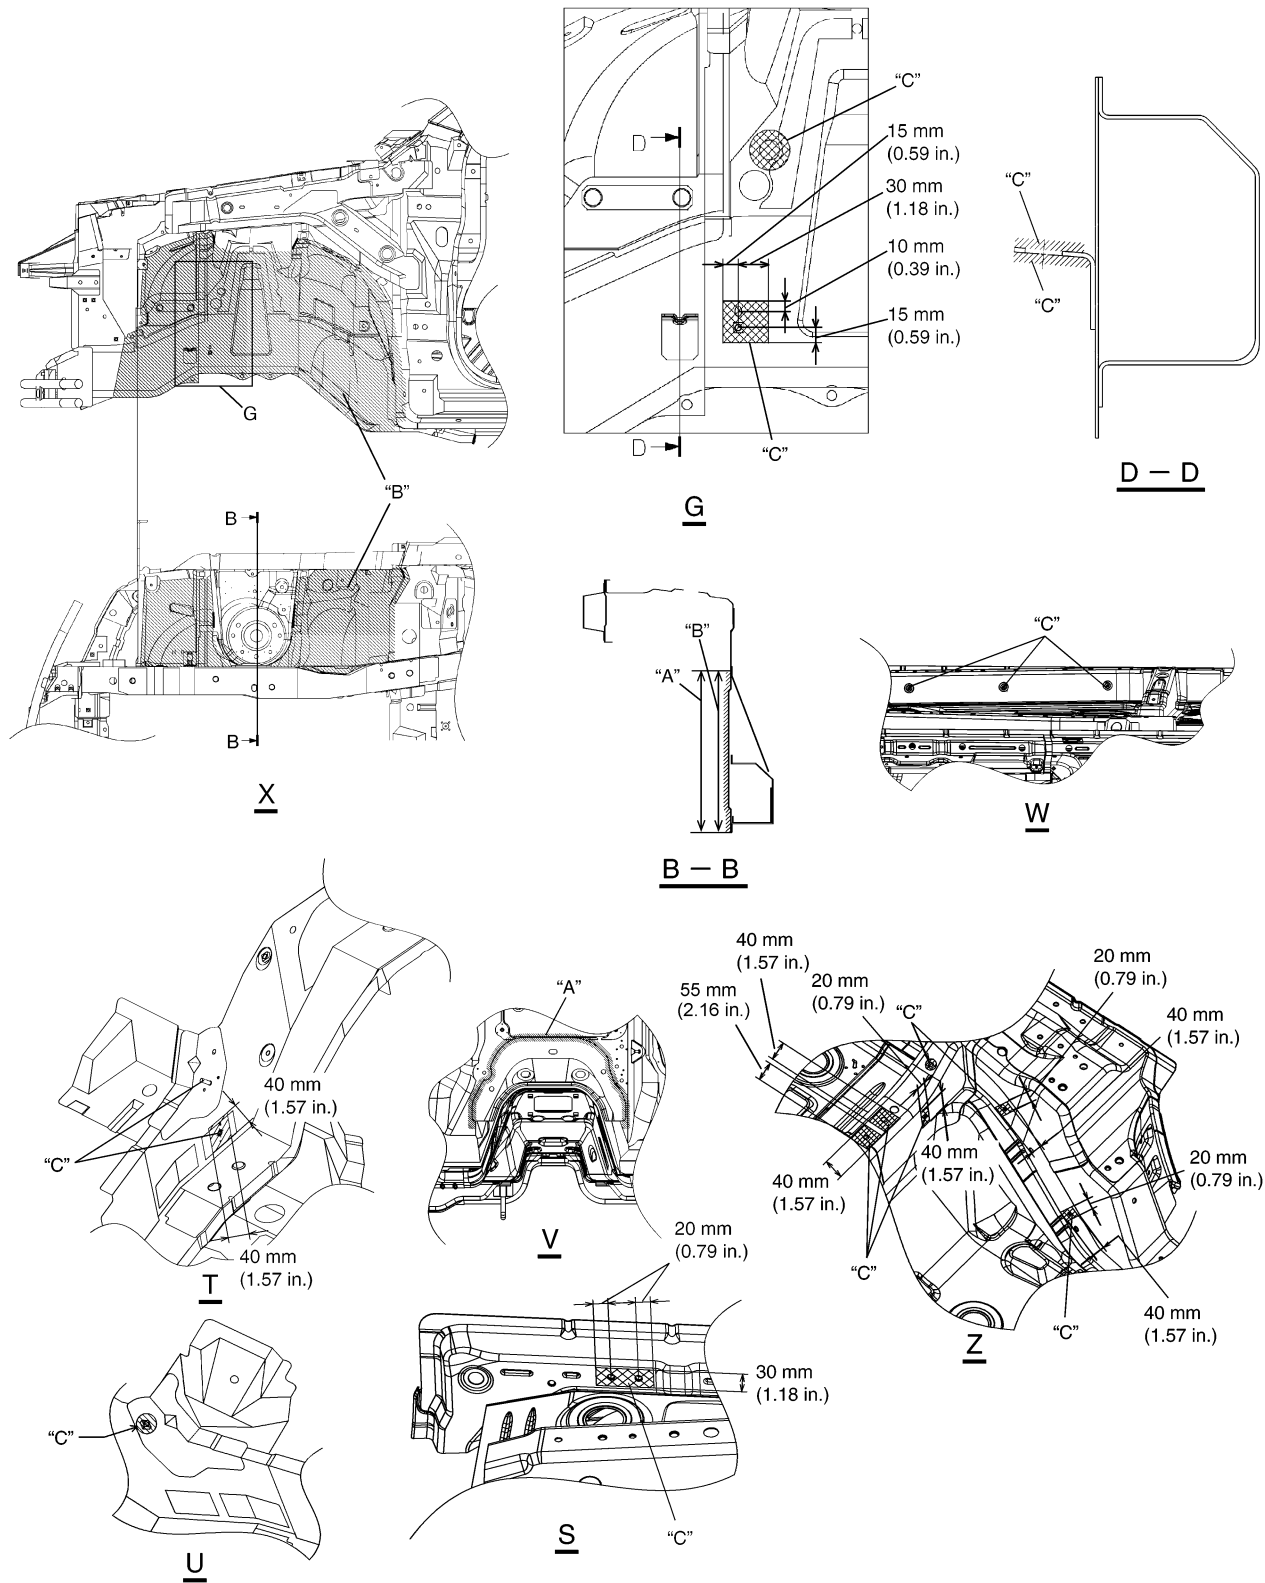

"A": Apply undercoating (PVC, 400 µm or more).	"C": Do not apply undercoating.
"B": Apply black painting.	

Anti-Corrosion Compound Application Area

S6JB0B9C03003

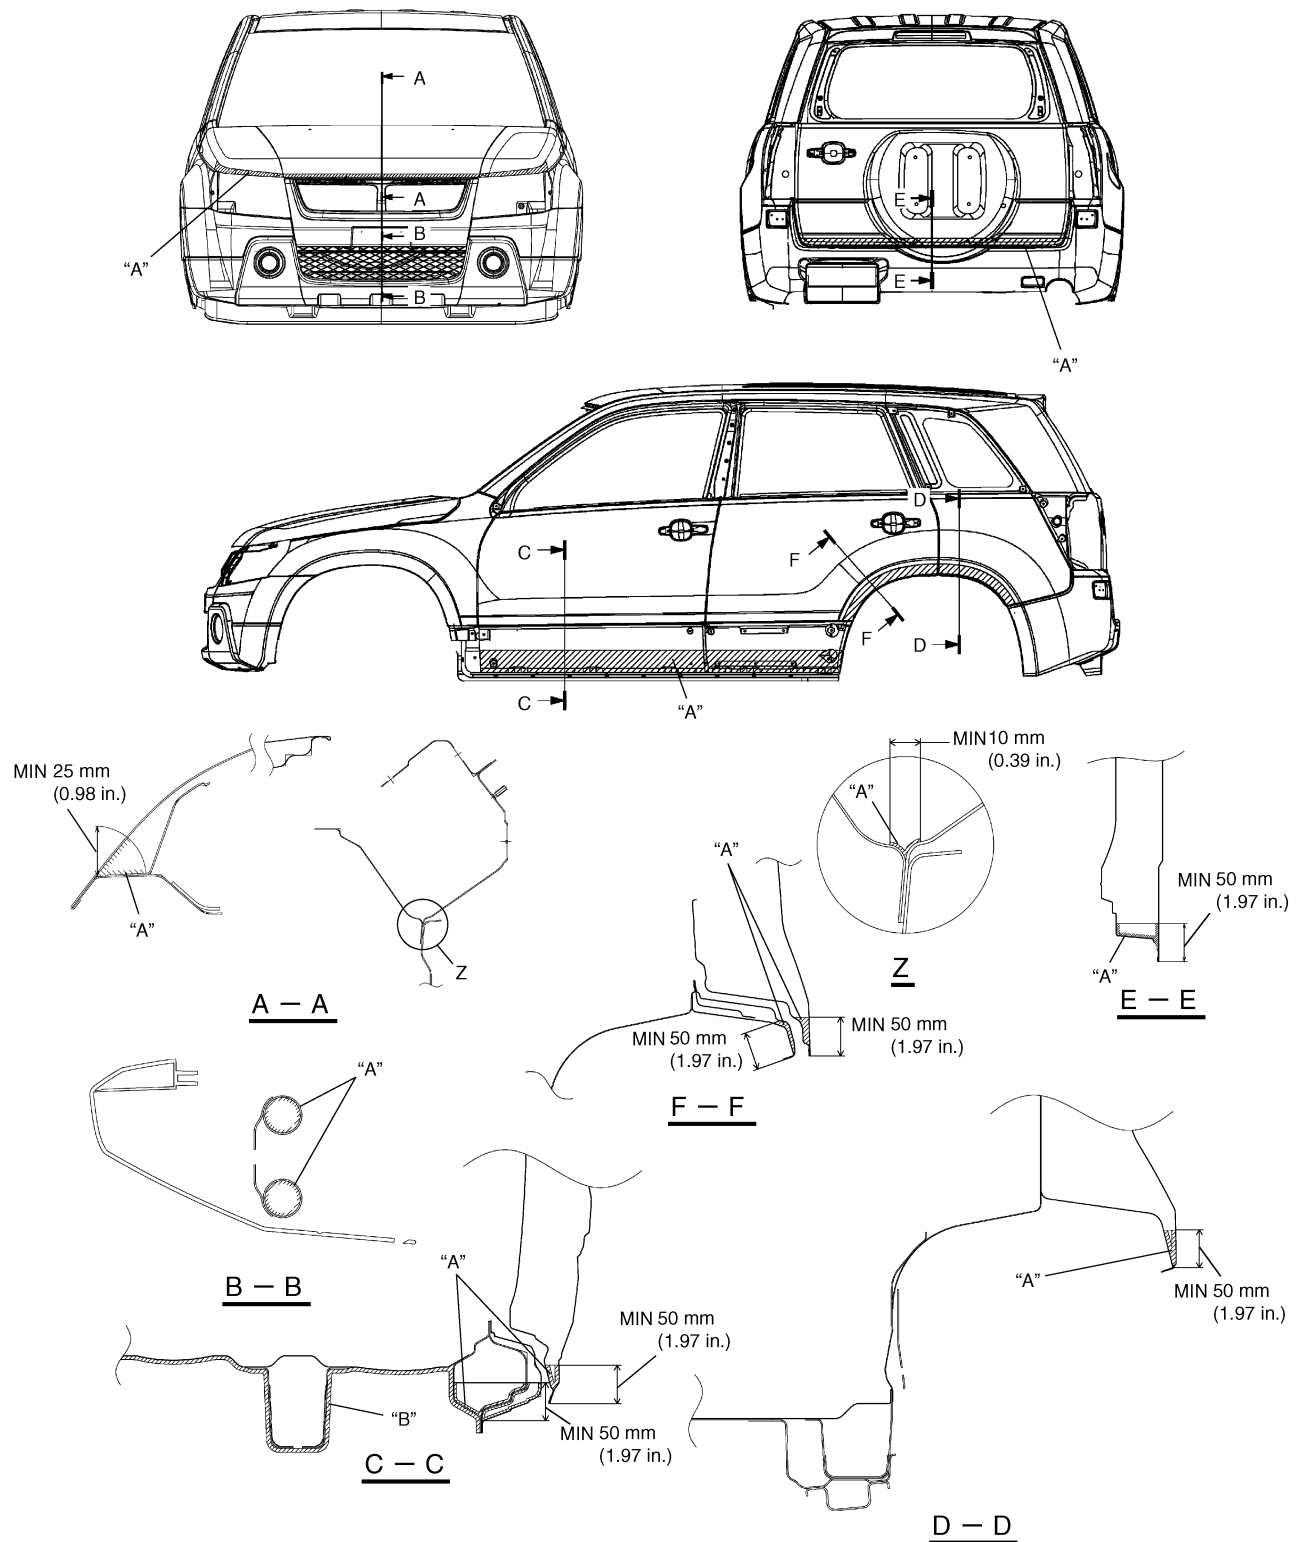"A": Apply rust proof wax (hot wax 50 μ m or more)."B": Apply rust proof wax (high viscosity wax 50 μ m or more).


I6JB019C0009-01

Exterior Trim

Repair Instructions

Roof Drip Molding Removal and Installation (If Equipped)

S6JB0B9D06001

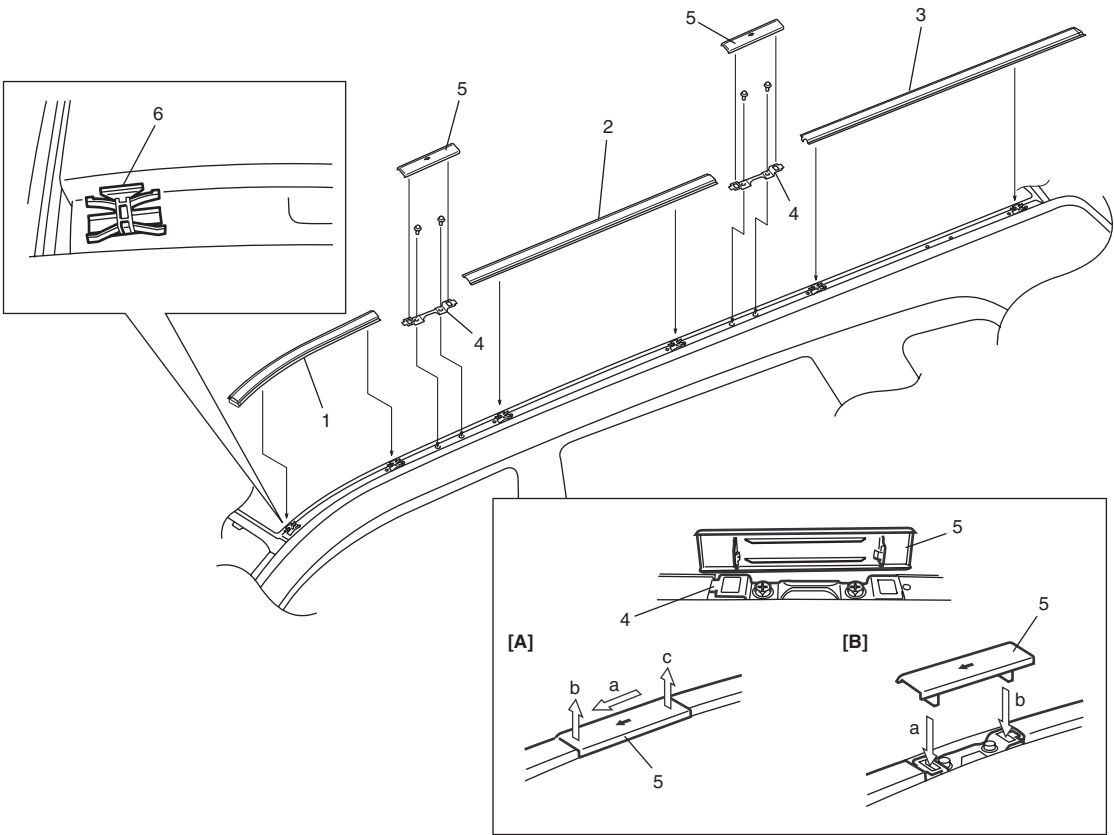


I6JB019D0001-01

[A]: Molding Cap Removal Remove cap by pushing in arrow direction shown on cap and then pulling in alphabetical order indicated in figure.	3. Roof drip rear molding
[B]: Molding Cap Installation Be sure to direct arrow mark of left side molding cap to vehicle forward and arrow mark of right side molding cap to vehicle rearward.	4. Roof carrier bracket
1. Roof drip front molding	5. Roof drip molding cap
2. Roof drip center molding	6. Roof drip molding clip (Push-in type)

Roof Rail Removal and Installation (If Equipped)

S6JB0B9D06002

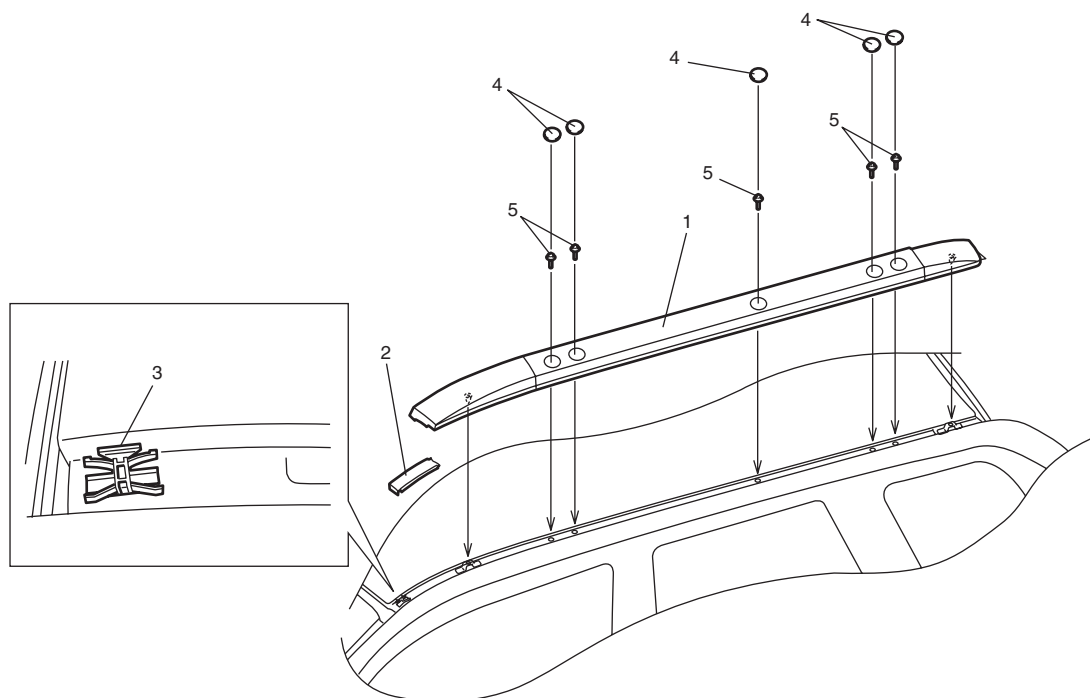


I6JB019D0002-01

1. Roof rail	3. Roof drip molding clip (Push-in type)	5. Roof rail bolt
2. Roof drip front molding	4. Roof rail cap	

Splash Guard Removal and Installation (If Equipped)

S6JB0B9D06003

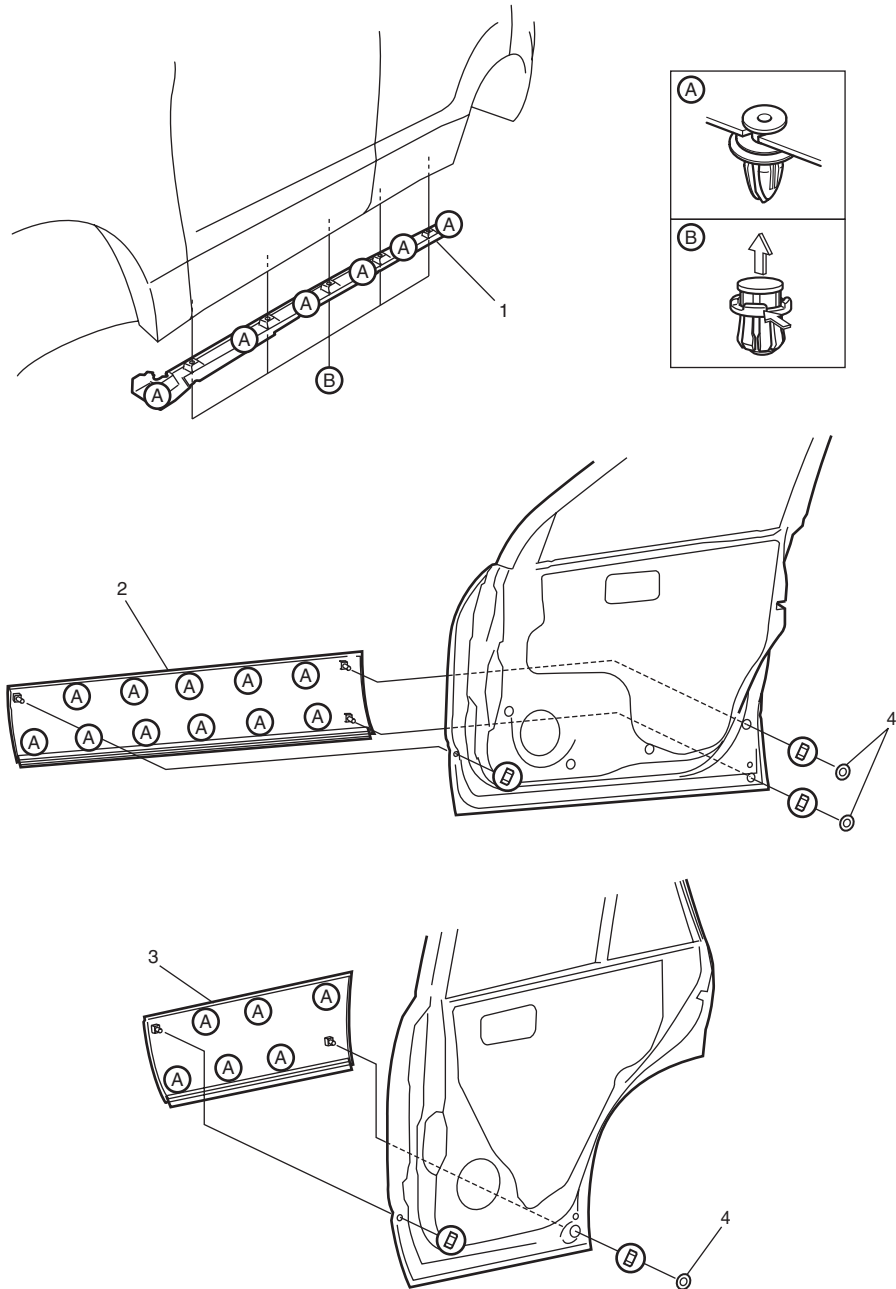

1. Side sill splash guard	3. Rear door splash guard
2. Front door splash guard	4. Cap

I6JB019D0003-01

Section 10

Control Systems

CONTENTS

Precautions	10-1	Precautions.....	10B-1
Precautions.....	10-1	Precautions in Diagnosing Trouble	10B-1
Precautions for Control Systems.....	10-1	General Description	10B-1
Cruise Control System.....	10A-1	BCM General Description	10B-1
Precautions.....	10A-1	CAN Communication System Description.....	10B-2
Precautions in Diagnosing Troubles	10A-1	Theft Deterrent Light Description	10B-3
General Description	10A-2	Schematic and Routing Diagram	10B-4
Cruise Control System Construction	10A-2	Body Electrical Control System Wiring Circuit	
Components and Functions of Cruise Control		Diagram.....	10B-4
System	10A-3	Connector Layout Diagram of BCM	10B-5
Cancel Conditions of Cruise Control System....	10A-4	Component Location	10B-6
On-Board Diagnostic System Description.....	10A-4	BCM and Related System Component	
Cruise Control System Diagnosis Introduction ..	10A-4	Location.....	10B-6
Schematic and Routing Diagram.....	10A-5	Diagnostic Information and Procedures	10B-7
Cruise Control System Input / Output Diagram ..	10A-5	BCM Self-Diagnosis Function	10B-7
Cruise Control System Wiring Diagram	10A-6	Body Electrical Control System Check.....	10B-9
Diagnostic Information and Procedures	10A-7	Scan Tool Data	10B-11
Cruise Control System Check.....	10A-7	DTC Table	10B-13
Customer Questionnaire (Example).....	10A-8	DTC Check.....	10B-14
DTC Check	10A-8	DTC Clearance	10B-15
DTC Clearance	10A-8	BCM Power Circuit and Ground Circuit Check	10B-16
DTC Table.....	10A-9	DTC B1133 (No. 1133): Battery Voltage Too	
Cruise Control System Symptom Diagnosis	10A-9	High.....	10B-17
DTC P0565: Cruise Control On Signal.....	10A-10	DTC B1141 / B1142 (No. 1141 / No. 1142):	
DTC P0566 / P0567 / P0568: Cruise Control		Outside Air Temperature (Ambient Temp.)	
Off Signal / Resume Signal / Set Signal	10A-12	Sensor Circuit Malfunction	10B-18
DTC P0571: Brake Switch Circuit	10A-13	DTC B1150 (No. 1150): Air Bag	
Inspection of Cruise Control System Circuit....	10A-15	Communication Circuit Malfunction.....	10B-19
Repair Instructions	10A-16	DTC B1157 (No. 1157): Air Bag Deployment	
Cruise Control Switch Removal and		Signal Input	10B-20
Installation	10A-16	DTC B1170 (No. 1170): EEPROM access	
Cruise Control Switch Inspection	10A-16	error.....	10B-20
CPP Switch (for Cruise Control) Removal and		DTC U0155 (No. 0155): Lost Communication	
Installation	10A-16	with Instrument Panel Cluster (IPC) Control	
Clutch Pedal Position (CPP) Switch (for		Module	10B-21
Cruise Control) Inspection and Adjustment ..	10A-17	DTC U1073 (No. 1073): Control Module	
Brake Light Switch Removal and Installation..	10A-17	Communication Bus Off	10B-23
Brake Light Switch Inspection	10A-17	DTC U1100 (No. 1100): Lost Communication	
ECM Removal and Installation.....	10A-17	with ECM.....	10B-25
Specifications	10A-17	DTC U1101 (No. 1101): Lost communication	
Tightening Torque Specifications.....	10A-17	with TCM.....	10B-26
Body Electrical Control System	10B-1	DTC U1144 (No. 1144): Lost Communication	
		with Keyless Start Control Module	10B-28
		Inspection of BCM and Its Circuits	10B-30
		Repair Instructions	10B-36

BCM Removal and Installation.....	10B-36	Procedure after ECM Replacement	10C-26
Outside Air Temperature Sensor Removal and Installation	10B-36	Special Tools and Equipment	10C-27
Outside Air Temperature Sensor Inspection ...	10B-36	Special Tool	10C-27
DRL Function Setting Procedure	10B-37		
Special Tools and Equipment	10B-37	Keyless Start System	10E-1
Special Tool	10B-37	Precautions.....	10E-1
		Precautions in Diagnosing Troubles	10E-1
Immobilizer Control System	10C-1	General Description	10E-2
Precautions.....	10C-1	Keyless Start System Description	10E-2
Precautions in Diagnosing Troubles	10C-1	Parts and Functions	10E-3
Precaution in Replacing ECM	10C-1	Keyless Engine Start Function	10E-4
Precautions in Handling Immobilizer Control System	10C-1	Door Lock Function of Keyless Start System ...	10E-5
General Description	10C-2	Operation Area of Remote Controller.....	10E-6
Immobilizer Control System Introduction	10C-2	Alarm Function	10E-7
On-Board Diagnostic System Description (Self-diagnosis Function)	10C-2	CAN Communication System Description.....	10E-7
Schematic and Routing Diagram	10C-3	Schematic and Routing Diagram	10E-8
Immobilizer Control System Wiring Circuit Diagram	10C-3	Keyless Start System Electric Wiring Circuit Diagram.....	10E-8
Component Location	10C-4	Diagnostic Information and Procedures	10E-9
Immobilizer Control System Components Location	10C-4	Self-Diagnosis Function	10E-9
Diagnostic Information and Procedures	10C-5	Keyless Start System Diagnosis Introduction ...	10E-9
Immobilizer Control System Check	10C-5	Keyless Start System Check.....	10E-9
Diagnostic Trouble Code (DTC) Check.....	10C-6	Customer Questionnaire (Example).....	10E-10
Diagnostic Trouble Code (DTC) Clearance	10C-6	Key Indicator Light Check	10E-11
Diagnostic Trouble Code (DTC) Table.....	10C-7	DTC Check.....	10E-11
Scan Tool Data	10C-7	DTC Table.....	10E-12
Immobilizer Indicator Light Does Not Come ON with Ignition Switch ON and Engine Stop ..	10C-8	DTC Clearance	10E-13
Immobilizer Indicator Light Remains ON after Engine Start	10C-9	Keyless Start System Symptom Diagnosis	10E-13
DTC P1614: Transponder Response Error.....	10C-10	Keyless Start System Operation Inspection ...	10E-14
DTC P1615: Steering Lock Unit Communication Error (for Vehicle with Keyless Start System).....	10C-11	Door Lock Operation Check (Keyless Start System).....	10E-15
DTC P1616: Unregistered Keyless Start Control Module (for Vehicle with Keyless Start System)	10C-13	Inspection of Keyless Start Control Module and Its Circuits	10E-16
DTC P1618: Keyless Start Control Module CAN Communication Error (for Vehicle with Keyless Start System).....	10C-14	No DTC Detection After Performing DTC Check	10E-21
DTC P1621: Immobilizer Communication Line Error	10C-16	Key Indicator Light Circuit Check (Key Indicator Light Doesn't Light when Ignition Knob Switch is Pushed)	10E-23
DTC P1622: EEPROM Error.....	10C-19	Keyless Start Control Module Power and Ground Circuit Check.....	10E-25
DTC P1623: Unregistered Transponder	10C-19	DTC No. 11: Communication Error with Steering Lock Unit.....	10E-26
DTC P1625: Immobilizer Antenna Error.....	10C-20	DTC No. 13 / No. 14: Release Signal Error from Steering Lock Unit / Steering Lock Unit Malfunction	10E-27
DTC P1636: Immobilizer Information Registration Failure	10C-21	DTC No. 21 / No. 22: Internal Error of Keyless Start Control Module (EEPROM Reading Error) / (EEPROM Writing Error).....	10E-27
DTC P1638: Immobilizer Information Mismatched.....	10C-22	DTC No. 31: Lost Communication with BCM ..	10E-28
Inspection of Immobilizer Control Module (ICM) and Its Circuit	10C-23	DTC No. 33: Control Module Communication Bus Off	10E-30
Repair Instructions	10C-26	DTC No. 51 / No. 52 / No. 53: Driver Side / Passenger Side / Rear End Door Request Switch Failure.....	10E-31
Immobilizer Control Module (ICM) Removal and Installation	10C-26	Repair Instructions	10E-33
Registration of the Ignition Key	10C-26	Antennas and Request Switches Removal and Installation	10E-33
		Front Door (Driver and Passenger Side), Rear End Door Request Switch Inspection.....	10E-34

Steering Lock Unit Removal and Installation ..	10E-34	Remote Controller Inspection.....	10E-35
Steering Lock Unit Inspection	10E-34	Replacement of Remote Controller Battery	10E-36
Front Door Lock Switch Inspection	10E-34	Registration Procedure for Remote Controller	
Keyless Start Control Module Removal and		ID Code	10E-36
Installation	10E-35	Keyless Start Registration	10E-37

Precautions

Precautions

Precautions for Control Systems

S6JB0BA000001

Air Bag Warning

Refer to “Air Bag Warning in Section 00”.

Cruise Control System

Precautions

Precautions in Diagnosing Troubles

S6JB0BA100001


- Before confirming the diagnostic trouble code (DTC), do not disconnect connector from ECM, battery cable from battery, ground wire harness, or main fuse. Such disconnection will erase DTC stored in ECM.
- DTC stored in ECM memory can be checked as well as cleared by using SUZUKI scan tool. Before using SUZUKI scan tool, read its operator's manual carefully to know how to use it and what functions are available.
- Be sure to read "Precaution for CAN Communication System in Section 00" before inspection.

General Description

Cruise Control System Construction

S6JB0BA101001

The cruise control system is a device which maintains a preset vehicle speed while driving at a high speed, e.g., on a highway. It allows the driver to drive his vehicle at a constant speed of 40 km/h (25 mile/h) or higher without depressing the accelerator pedal. The system also has such functions as to change the vehicle speed without operating the accelerator pedal (but using SET/COAST and RES/ACC switches), cancel cruise control (CANCEL switch) and resume the speed in memory automatically after cruise control is cancelled (RES/ACC switch). The system mainly consists of electric throttle body assembly, ECM, cruise control switch (MAIN (ON/OFF) switch, SET/COAST switch, RES/ACC switch and CANCEL switch), etc.

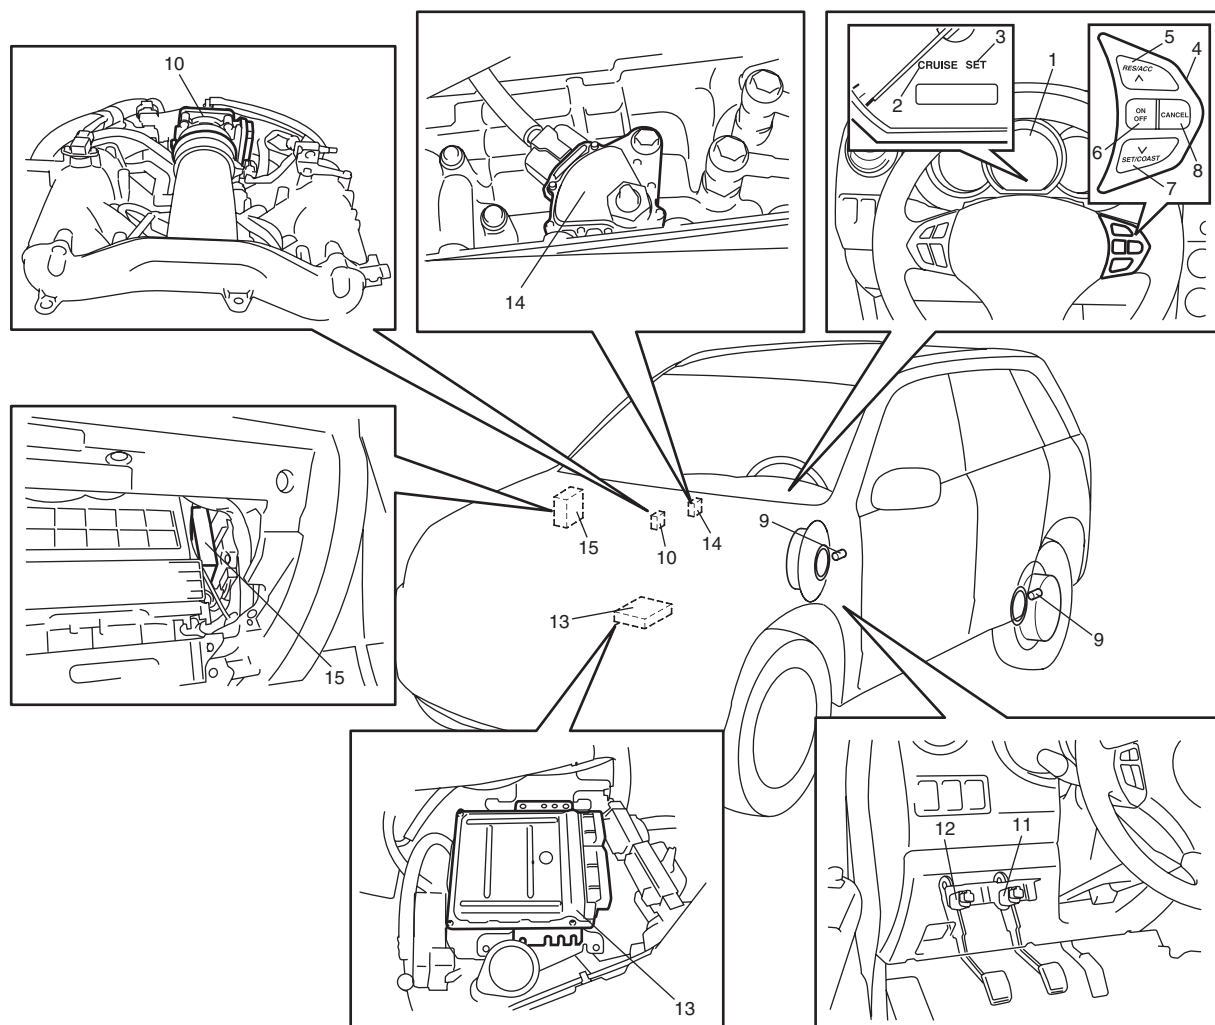

I6JB0BA10001-01

1. Combination meter	6. MAIN (ON/OFF) switch	11. Brake light switch with brake pedal position switch
2. "CRUISE" indicator light	7. SET/COAST switch	12. Clutch pedal position switch (M/T model)
3. "SET" indicator light	8. CANCEL switch	13. ECM
4. Cruise control switch	9. Wheel speed sensor (vehicle speed signal)	14. Transmission range switch (A/T model)
5. RES/ACC switch	10. Electric throttle body	15. TCM (A/T model)

Components and Functions of Cruise Control System

S6JB0BA101002

Component	Function
ECM and electric throttle body assembly	ECM executes centralized control over all functions including setting a constant speed, resuming it, setting coast, cancelling cruise control limiting minimum speed. ECM controls electric throttle valve opening to keep actual vehicle speed at set (target) speed.
MAIN (ON/OFF) switch	This switch has a momentary contact type button to press cruise control system ON and OFF.
SET/COAST switch	When this switch is pressed (ON) and then released (OFF) while vehicle is running at a speed 40 km/h (25 mile/h) or higher, vehicle speed at that OFF moment is stored in memory and it is maintained (constant cruising). Pressing this switch (ON) continuously during constant cruising keeps slowing down vehicle speed as long as it is ON. When it is released (OFF), vehicle speed at that moment is stored in memory and vehicle starts constant cruising.
RES/ACC switch	When this switch is pressed (ON) during constant cruising, vehicle speed keeps increasing as long as it is ON. When it is released (OFF), vehicle speed at that moment is stored in memory and vehicle starts constant cruising. If vehicle speed is higher than 40 km/h (25 mile/h) after cruise control is cancelled, pressing this switch ON momentarily will resume the speed at which vehicle was running before cancellation.
CANCEL switch	When this switch is pressed (ON), cruise control (throttle valve control) is cancelled.
Wheel speed sensor (vehicle speed signal)	ECM receives speed sensor signal from ABS or ESP® control module through CAN communication and calculates vehicle speed using that signal.
Brake light switch	Brake light switch has 2 contact points. One contact point closes when brake pedal is depressed to light brake light and provides a voltage signal to the ECM. The other contact point (brake pedal position switch) opens when brake pedal is depressed, to shut off power to cruise control of ECM, thereby cancelling cruise control (throttle valve control). This switch is installed to cancel cruise control (constant cruising).
Clutch pedal position switch (M/T model)	When clutch pedal is depressed, clutch pedal position switch closes and provides a ground signal to ECM. ECM cancels cruise control (throttle valve control) when this signal is inputted.
Transmission range switch (A/T model)	When selector lever is placed in either "P", "R" or "N" position, transmission range switch closes and provides a ground signal to TCM. TCM transmits signal from transmission range switch to ECM through CAN communication. When ECM receives a signal indicating that selector lever position is "P", "R" or "N", it cancels cruise control (throttle valve control).
TCM (A/T model)	TCM receives the SET signal for the cruise control from ECM through CAN communication. When TCM receives the SET signal from ECM, the gear shift control is performed by using the gear shift map for the cruise control changed from the one for normal gear shift. For details, refer to "Automatic Gear Shift Table in Section 5A".
"CRUISE" indicator light	In the state with ignition switch ON and cruise control system OFF, pressing MAIN (ON/OFF) switch once and releasing it will activate the cruise control system and ECM will cause indicator light to light up.
"SET" indicator light	It lights up when cruise control (throttle valve control) is functioning.

Cancel Conditions of Cruise Control System

S6JB0BA101003

Constant cruising is cancelled under the following conditions.

- *Ignition switch is turned OFF.
- MAIN (ON/OFF) switch is turned OFF.
- Vehicle speed becomes lower than minimum operating speed (40 km/h (25 mile/h)).
- *Vehicle speed varies beyond cancel speed range (–20 km/h (–12 mile/h)) from preset speed.
- *Brake pedal is depressed. (Brake light switch is turned ON).
- *Clutch pedal is depressed (Clutch pedal position switch is turned ON) (For M/T vehicle).
- *Selector lever is shifted to “P”, “R” or “N” range (For A/T vehicle).
- *CANCEL switch is turned ON.
- ESP® is operating (if equipped).

NOTE

When constant cruising is cancelled under any condition with * (asterisk), vehicle speed before cancellation can be resumed by operating RES/ACC switch, provided that vehicle speed is higher than 40 km/h (25 mile/h).

On-Board Diagnostic System Description

S6JB0BA101005

ECM diagnoses if there is any trouble in the cruise control system. When the ECM detects an abnormality in the cruise control system, it saves the area where such abnormality has occurred as a DTC in its memory but MIL does not light up. To read DTC, use SUZUKI scan tool referring to “DTC Check”.

Cruise Control System Diagnosis Introduction

S6JB0BA101006

To ensure that the trouble diagnosis is done accurately and smoothly, observe “Precautions in Diagnosing Troubles”, “Cancel Conditions of Cruise Control System” and follow “Cruise Control System Check”.

Schematic and Routing Diagram

Cruise Control System Input / Output Diagram

S6JB0BA102002

Input

Cruise control switch

MAIN (ON/OFF) switch
RES/ACC switch
SET/COAST switch
CANCEL switch

CPP switch
(M/T model)

Brake light switch

Transmission range switch
("P", "R" or "N" range signal)
(A/T model)

Wheel speed sensor
(vehicle speed signal)

ABS or ESP®
control module

ECM

Output

Electric throttle body
(throttle valve control)


Combination meter
(Indicator light control)

TCM (Shift control)
(A/T model)

I6JB0BA10002-01

Cruise Control System Wiring Diagram

S6JB0BA102001

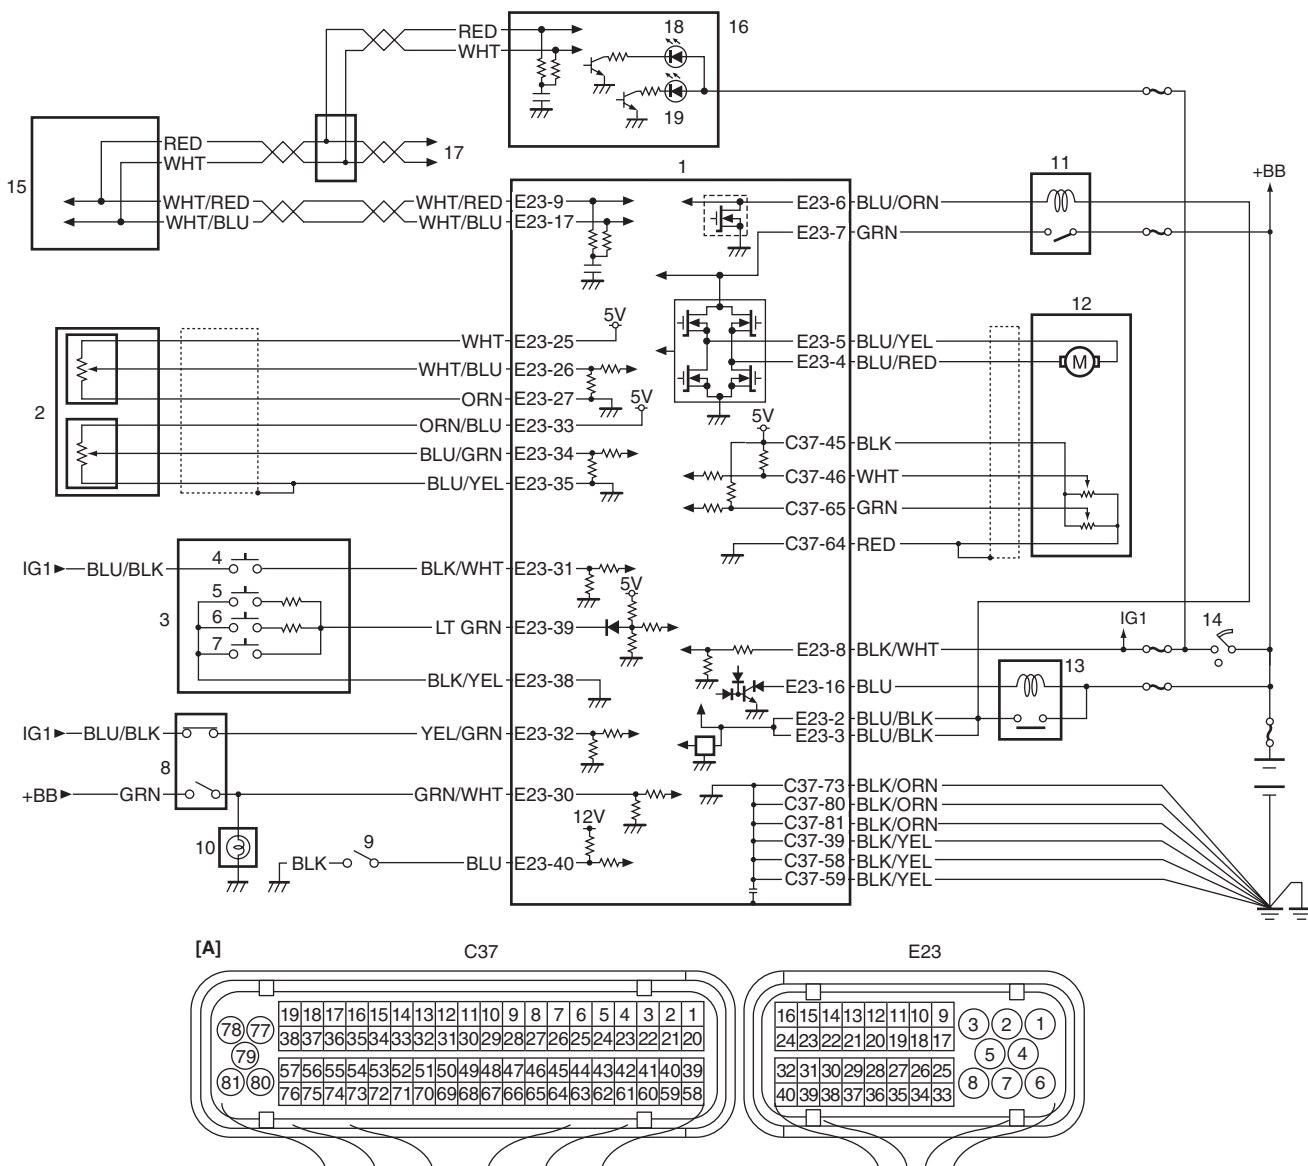

I6JB0BA10003-01

[A]: ECM connector (viewed from harness side)	7. CANCEL switch	14. Ignition switch
1. ECM	8. Brake light switch	15. ABS or ESP® control module
2. Accelerator pedal position sensor	9. CPP switch	16. Combination meter
3. Cruise control switch	10. Brake light	17. Other control modules
4. MAIN (ON/OFF) switch	11. Throttle actuator control relay	18. "CRUISE" indicator light
5. RES/ACC switch	12. Electric throttle body	19. "SET" indicator light
6. SET/COAST switch	13. Main relay	

Diagnostic Information and Procedures

Cruise Control System Check

S6JB0BA104003

Step	Action	Yes	No
1	1) Record details of the problem. For your record, use of a questionnaire form will facilitate collecting information for proper analysis and diagnosis. 2) Check if the problem described in "Customer Questionnaire (Example)" actually occurs in the vehicle. (This step should be performed with the customer if possible.) 3) Check ECM, ABS or ESP® control module and TCM (A/T model) for DTC, and then record DTC(s). <i>Is there any DTC(s) other than related to cruise control system (other than DTC P0565, P0566, P0567, P0568 and P0571)?</i>	Go to applicable DTC diag. flow.	Go to Step 2.
2	<i>Is there any DTC(s) related to cruise control system?</i>	Go to Step 3.	Go to Step 4.
3	1) Check and repair referring to applicable "DTC Table". <i>Are check and repair complete?</i>	Go to Step 6.	Check and repair malfunction part(s), and go to Step 6.
4	1) Inspect and repair basic parts referring to "Cruise Control System Symptom Diagnosis". <i>Is there faulty condition?</i>	Repair or replace malfunction part(s), and go to Step 6.	Go to Step 5.
5	1) Check for intermittent problems referring to "Intermittent and Poor Connection Inspection in Section 00". <i>Is there any faulty condition?</i>	Repair or replace malfunction part(s), and go to Step 6.	Go to Step 6.
6	1) Confirm if the problem is solved and the cruise control system is free from any abnormal conditions. If what has been repaired is related to the DTC, clear the DTC once and then confirm that no DTC is indicated. <i>Is there any problem symptom, DTC or abnormal condition?</i>	Go to 2) of Step 1 and perform trouble diagnosis again.	End.

Customer Questionnaire (Example)

S6JB0BA104004

Customer's name:	Model:	VIN:	
Date of issue:	Date Reg:	Date of problem:	Mileage:

Problem Symptoms	<input type="checkbox"/> Vehicle speed can not be set <input type="checkbox"/> Cruise control can not be cancelled <input type="checkbox"/> CRUISE or SET indicator lamp does not turn ON or OFF <input type="checkbox"/> Other_____
Frequency of Occurrence	<input type="checkbox"/> Continuous <input type="checkbox"/> Intermittent (times a day, a month) <input type="checkbox"/> Other_____
Vehicle Condition	<input type="checkbox"/> Vehicle speed: km/h(mph) <input type="checkbox"/> Shift position: <input type="checkbox"/> Other_____
Environmental Condition	<input type="checkbox"/> Weather: <input type="checkbox"/> Fine / <input type="checkbox"/> Cloudy / <input type="checkbox"/> Rain / <input type="checkbox"/> Snow / <input type="checkbox"/> Other_____ <input type="checkbox"/> Temperature: °C(° F)
Diagnostic Trouble Code	<input type="checkbox"/> First check: <input type="checkbox"/> No code / <input type="checkbox"/> malfunction code () <input type="checkbox"/> Second check: <input type="checkbox"/> No code / <input type="checkbox"/> malfunction code ()

I6JB01A10004-03

DTC Check

S6JB0BA104005

DTC related to cruise control system is detected by ECM. For DTC check, refer to "DTC Check in Section 1A".

DTC Clearance

S6JB0BA104006

For DTC clearance, refer to "DTC Clearance in Section 1A".

DTC Table

S6JB0BA104007

DTC No.	Detected item	Detecting condition (DTC will set when detecting)
P0565	Cruise Control On Signal	MAIN (ON/OFF) switch signal voltage is higher than specified value for 15 seconds continuously
P0566	Cruise Control Off Signal	CANCEL switch signal voltage is lower than specified value for 40 seconds continuously
P0567	Cruise Control Resume Signal	RES/ACC switch signal voltage is specified value for 120 seconds continuously
P0568	Cruise Control Set Signal	SET/COAST switch signal voltage is specified value for 120 seconds continuously
P0571	Brake Switch Circuit	Both brake light switch signal voltage and brake pedal position switch signal voltage remain at low level for specified time continuously

NOTE

During the engine running, DTC is detected by pushing the cruise control switch (MAIN (ON/OFF), CANCEL, RES/ACC, or SET/COAST) for more than specified period of time.

Cruise Control System Symptom Diagnosis

S6JB0BA104008

NOTE

- Before performing this Cruise Control System Symptom Diagnosis, perform cruise control system check referring to "Cruise Control System Check".
- Check each part in the order from the top of the following list.

Condition	Possible cause	Correction / Reference Item
CRUISE or SET indicator light does not turn ON or OFF	MAIN (ON/OFF) switch faulty	Check MAIN (ON/OFF) switch for function referring to "Cruise Control Switch Inspection".
	SET/COAST switch faulty	Check SET/COAST switch for function referring to "Cruise Control Switch Inspection".
	Brake light switch faulty	Check brake light switch for function referring to "Brake Light Switch Inspection".
	Wiring or grounding faulty	Repair.
	Combination meter faulty	Replace.
	ECM faulty	Replace after making sure that none of above parts is faulty.
Vehicle speed can not be set	MAIN (ON/OFF) switch faulty	Check MAIN (ON/OFF) switch for function referring to "Cruise Control Switch Inspection".
	SET/COAST switch faulty	Check SET/COAST switch for function referring to "Cruise Control Switch Inspection".
	Brake light switch faulty	Check brake light switch for function referring to "Brake Light Switch Inspection".
	CPP switch faulty (M/T model)	Check CPP switch for function referring to "Clutch Pedal Position (CPP) Switch (for Cruise Control) Inspection and Adjustment".
	Wiring or grounding faulty	Repair.
	ECM faulty	Replace after making sure that none of above parts is faulty.
Acceleration or deceleration is not available by using RES/ACC or SET/COAST switch	RES/ACC or SET/COAST switch faulty	Check RES/ACC or SET/COAST switch for function referring to "Cruise Control Switch Inspection".
	Wiring or grounding faulty	Repair.
	ECM faulty	Replace after making sure that none of above parts is faulty.


10A-10 Cruise Control System:

Condition	Possible cause	Correction / Reference Item
Cruise control cannot be cancelled	CANCEL switch faulty	Check CANCEL switch for function referring to "Cruise Control Switch Inspection".
	Brake light switch faulty	Check brake light switch for function referring to "Brake Light Switch Inspection".
	CPP switch faulty (M/T model)	Check CPP switch for function referring to "Clutch Pedal Position (CPP) Switch (for Cruise Control) Inspection and Adjustment".
	Wiring or grounding faulty	Repair.
	ECM faulty	Replace after making sure that none of above parts is faulty.
Cruise control at vehicle speed stored in memory cannot be resumed after cruise control was cancelled by means other than MAIN (ON/OFF) switch	RES/ACC switch faulty	Check RES/ACC switch for function referring to "Cruise Control Switch Inspection".
	Wiring or grounding faulty	Repair.
	ECM faulty	Replace after making sure that none of above parts is faulty.

DTC P0565: Cruise Control On Signal

S6JB0BA104009

Wiring Diagram

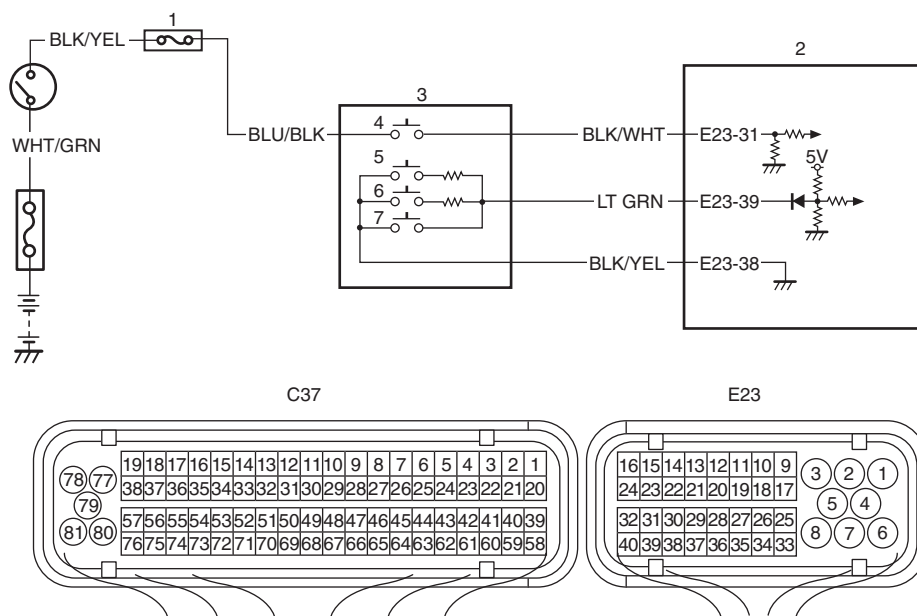

I6JB01A10005-01

1. Circuit fuse	3. Cruise control switch assembly	5. RES/ACC switch	7. CANCEL switch
2. ECM	4. MAIN (ON/OFF) switch	6. SET/COAST switch	

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
MAIN (ON/OFF) switch signal voltage is higher than specified value for 15 seconds continuously	<ul style="list-style-type: none"> Cruise control switch and/or its circuit ECM

DTC Confirmation Procedure

- 1) With ignition switch turned OFF, connect scan tool to DLC.
- 2) Turn ON ignition switch and clear DTC.
- 3) Start engine and warm up to normal operating temperature.
- 4) Press cruise main switch once.
- 5) Drive vehicle at 40 km/h (25 mph) or higher for 3 min. or more.
- 6) Stop vehicle.
- 7) Check DTC.

DTC Troubleshooting**NOTE**

Before this troubleshooting, read and observe "Precautions for DTC Troubleshooting in Section 1A"

Step	Action	Yes	No
1	Cruise control switch check 1) Check cruise control switch referring to "Cruise Control Switch Inspection". <i>Is it in good condition?</i>	Go to Step 2.	Replace cruise control switch.
2	Cruise control MAIN (ON/OFF) switch circuit check 1) Disconnect connectors from ECM with ignition switch turned OFF. 2) Check for proper connection of cruise control switch circuit terminal to ECM connector. 3) If connections are OK, check the following for cruise MAIN (ON/OFF) switch circuit. Voltage of between "BLK/WHT" wire terminal of cruise control switch connector and vehicle body ground is 0 V with ignition switch turned ON (power short check) <i>Is it in good condition?</i>	Substitute a known-good ECM and recheck.	Repair or replace wire circuit.

DTC P0566 / P0567 / P0568: Cruise Control Off Signal / Resume Signal / Set Signal

S6JB0BA104010

Wiring Diagram

Refer to "DTC P0565: Cruise Control On Signal".

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
P0566: CANCEL switch signal voltage is lower than specified value for 40 seconds continuously P0567: RES/ACC switch signal voltage is specified value for 120 seconds continuously P0568: SET/COAST switch signal voltage is specified value for 120 seconds continuously	<ul style="list-style-type: none"> Cruise control switch and/or its circuit ECM

DTC Confirmation Procedure

- 1) With ignition switch turned OFF, connect scan tool to DLC.
- 2) Turn ON ignition switch and clear DTC.
- 3) Start engine and warm up to normal operating temperature.
- 4) Press cruise main switch once.
- 5) Drive vehicle at 40 km/h (25 mph) or higher for 3 min. or more.
- 6) Stop vehicle.
- 7) Check DTC.

DTC Troubleshooting**NOTE**


Before this troubleshooting, read and observe "Precautions for DTC Troubleshooting in Section 1A".

Step	Action	Yes	No
1	Cruise control switch check 1) Check cruise control switch referring to "Cruise Control Switch Inspection". <i>Is it in good condition?</i>	Go to Step 2.	Replace cruise control switch.
2	Cruise control command switch circuit check 1) Disconnect connectors from ECM with ignition switch turned OFF. 2) Check for proper connection of cruise control switch circuit terminal to ECM connector. 3) If connections are OK, check the following for cruise command switch circuit. <ul style="list-style-type: none"> Resistance between "LT GRN" wire terminal and "BLK/YEL" wire terminal of cruise control switch connector are infinity (no continuity check) Resistance between "LT GRN" wire terminal of cruise control switch connector and vehicle body ground is infinity (ground short check) <i>Is it in good condition?</i>	Substitute a known-good ECM and recheck.	Repair or replace wire circuit.

DTC P0571: Brake Switch Circuit

S6JB0BA104011

Wiring Diagram

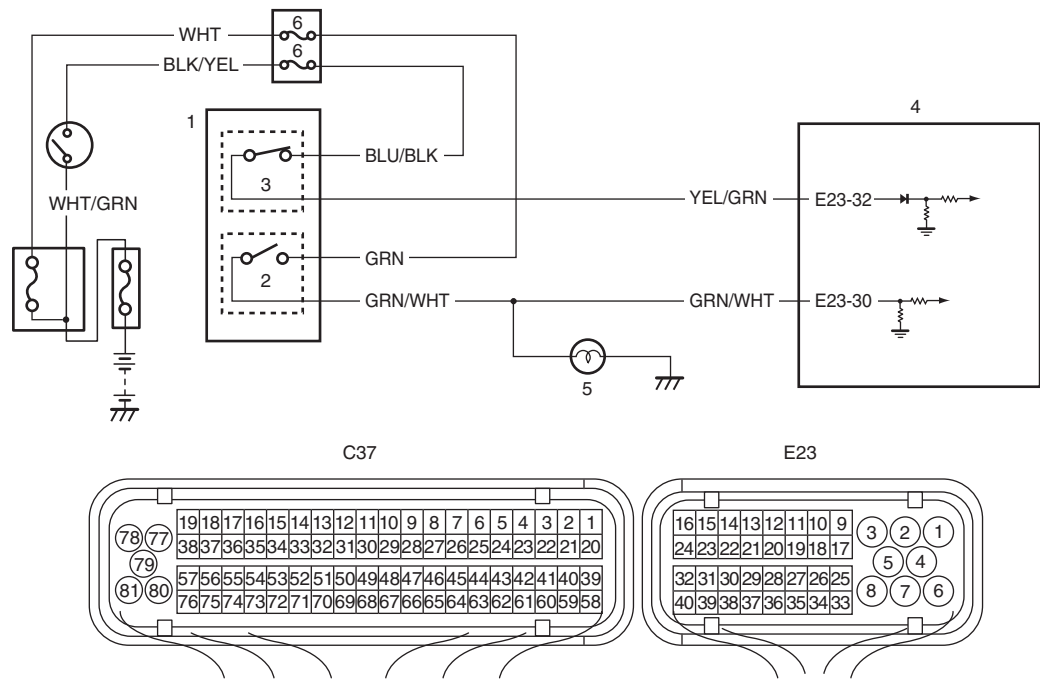

I6JB01A10006-01

1. Brake light switch	3. Brake pedal position switch	5. Brake light
2. Stop lamp switch	4. ECM	6. Circuit fuse

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Both brake light switch signal voltage and brake pedal position switch signal voltage remain at low level for specified time continuously	<ul style="list-style-type: none">Brake light switch and/or its circuitECM

DTC Confirmation Procedure

- 1) With ignition switch turned OFF, connect scan tool to DLC.
- 2) Turn ON ignition switch and clear DTC.
- 3) Start engine and warm up to normal operating temperature.
- 4) Drive vehicle at 50 km/h (31 mph) or higher for 3 min. or more.
- 5) Stop vehicle.
- 6) Depress brake pedal for 3 times.
- 7) Check DTC.

DTC Troubleshooting

NOTE

Before this trouble shooting, read and observe "Precautions for DTC Troubleshooting in Section 1A".

Step	Action	Yes	No
1	Brake light switch check 1) Check brake light switch referring to "Brake Light Switch Inspection in Section 9B". <i>Is it in good condition?</i>	Go to Step 2.	Replace brake light switch.
2	Brake light switch power circuit check 1) Disconnect connector from brake light switch connector with ignition switch turned OFF. 2) Check for proper connection to switch connector. 3) If connection are OK, measure voltage between each "BLU/BLK" wire terminal and "GRN" wire terminal of brake light switch connector and vehicle body ground with ignition switch tuned ON. <i>Is each measured voltage 10 – 14 V?</i>	Go to Step 3.	Check related fuse and repair defective circuit.
3	Brake light switch signal circuit check 1) Disconnect connectors from ECM with ignition switch turned OFF. 2) Check for proper connection of each switch circuit terminal to ECM connector. 3) If connections are OK, check brake light switch circuit for the following. <ul style="list-style-type: none"> Resistance of each "YEL/GRN" wire terminal and "GRN/WHT" wire terminal of brake light switch between brake light switch connector and ECM connector is less than 1 Ω (continuity check) Resistance between "YEL/GRN" wire terminal and "GRN/WHT" wire terminal of brake light switch connector are infinity (no continuity check) Resistance between each "YEL/GRN" wire terminal and "GRN/WHT" wire terminal of brake light switch connector and vehicle body ground is infinity (ground short check) Voltage of between each "YEL/GRN" wire terminal and "GRN/WHT" wire terminal of brake light switch connector and vehicle body ground is 0 V with ignition switch tuned ON (power short check) <i>Is it in good condition?</i>	Substitute a known-good ECM and recheck.	Repair or replace defective wire.

Inspection of Cruise Control System Circuit


S6JB0BA104012

Cruise control system is controlled by ECM. Each switch and circuit can be checked by taking measurement of terminal voltage and terminal to terminal resistance of ECM. When measuring these values, be sure to read precautions for measurement described under "Inspection of ECM and Its Circuits in Section 1A".

Voltage Check

Check voltage between the following terminals with ECM connector connected.

Terminal arrangement of ECM connector viewed from harness side

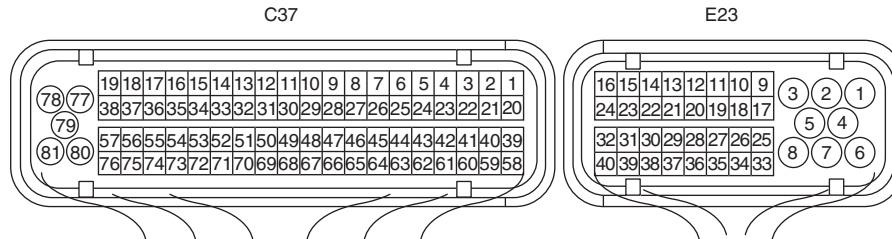

I6JB01A10007-01

Terminals	Circuit	Normal Voltage	Condition
E23-30 – ground	Brake light switch circuit	0 V	Ignition switch is at ON position and brake pedal is not depressed.
		10 – 14 V	Ignition switch is at ON position and brake pedal is depressed.
E23-31 – ground	Cruise control MAIN (ON/OFF) switch circuit	0 V	Ignition switch is at ON position and cruise control MAIN (ON/OFF) switch is not pushed.
		10 – 14 V	Ignition switch is at ON position and cruise control MAIN (ON/OFF) switch is kept in push.
E23-32 – ground	Brake pedal position switch circuit	10 – 14 V	Ignition switch is at ON position and brake pedal is not depressed.
		0 V	Ignition switch is at ON position and brake pedal is depressed.
E23-38 – ground	Ground circuit for cruise control command switch	Below 1.3 V	Ignition switch is at ON position.
E23-39 – ground	Cruise control command switch (SET/COAST, ACC/RES and CANCEL switch) circuit	0 – 0.1 V	Ignition switch is at ON position and cruise control CANCEL switch is kept in push.
		1.5 – 1.9 V	Ignition switch is at ON position and SET/COAST switch of cruise control is kept in push.
		3.2 – 3.7 V	Ignition switch is at ON position and ACC/RES switch of cruise control is kept in push.
		4.5 – 5.5 V	Ignition switch is at ON position and cruise control command switches are not pushed.
E23-40 – ground	CPP switch circuit	10 – 14 V	Ignition switch is at ON position and clutch pedal is not depressed.
		0 V	Ignition switch is at ON position and clutch pedal is depressed.

Repair Instructions

Cruise Control Switch Removal and Installation

S6JB0BA106001

For removal and installation, refer to "Remote Audio Control Switch Removal and Installation (If Equipped) in Section 9C".

Cruise Control Switch Inspection

S6JB0BA106002

NOTE

**Never disassemble cruise control switch.
Disassembly will spoil its original functions.**

- 1) Remove driver air bag (inflator) module referring to "Driver Air Bag (Inflator) Module Removal and Installation in Section 8B".
- 2) Disconnect cruise control switch connector (1) from control coil.
- 3) Check cruise control switch as follow.

For MAIN (ON/OFF) Switch

Check for continuity between "1" and "8" terminals under each condition below.

If check result is not satisfactory, replace cruise control switch (2).

Cruise MAIN (ON/OFF) switch (3) specification: [B]

Switch button released: Infinity

Switch button pressed: Continuity

For SET/COAST, RES/ACC and CANCEL Switch

Check for resistance between "7" and "9" terminals under each condition below.

If check result is not satisfactory, replace cruise control switch (2).

SET/COAST, RES/ACC and CANCEL switches


resistance: [C]

All switches released (OFF): Infinity

CANCEL switch (4) pressed (ON): About 0 Ω

SET/COAST switch (5) pressed (ON): 209 – 231 Ω

RES/ACC switch (6) pressed (ON): 864 – 956 Ω

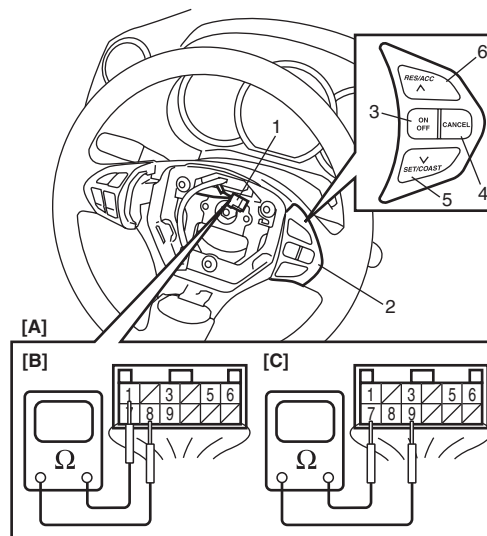

I6JB0BA10004-01


[A]: Cruise control switch connector viewed from harness side

CPP Switch (for Cruise Control) Removal and Installation

S6JB0BA106003

Removal

- 1) Disconnect connector of CPP switch (for cruise control) (1) with ignition switch OFF.
- 2) Remove CPP switch (for cruise control) (1) from pedal bracket.

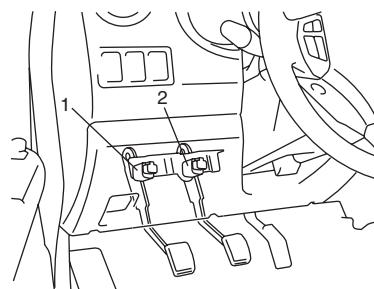

I5JB0AA10007-01

2. Brake light switch

Installation

- 1) Install CPP switch (for cruise control) (2) to pedal bracket.
- 2) With clutch pedal (1) released, adjust switch position so that clearance between end of thread and clutch pedal bracket is within specification.

Clearance between end of thread and clutch pedal bracket


“a”: 0.5 – 1.5 mm (0.02 – 0.06 in.) (LHD)

“a”: 2.0 – 3.0 mm (0.079 – 0.118 in.) (RHD)

- 3) Tighten lock nut (3) to specified torque.

Tightening torque

CPP switch lock nut: 7.5 N·m (0.75 kgf-m, 5.5 lb-ft)

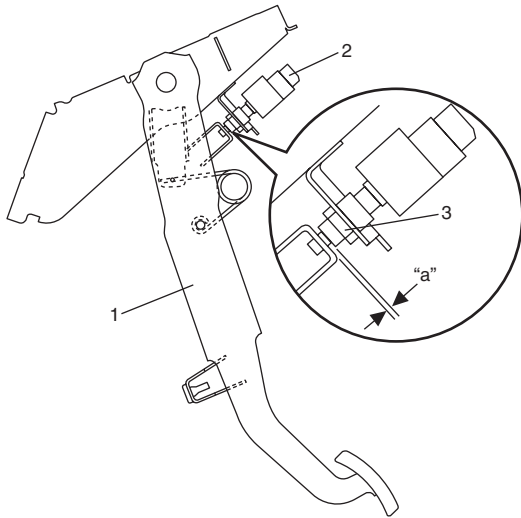

I5JB0AA10008-01

- 4) Connect connector to CPP switch (for cruise control) (2) securely.

Clutch Pedal Position (CPP) Switch (for Cruise Control) Inspection and Adjustment

S6JB0BA106004


Inspection

Check for resistance between terminals under each condition below. If check result is not satisfactory, replace.

CPP switch (for cruise control) resistance

When switch shaft is pushed [A]: No continuity

When switch shaft is free [B]: Continuity

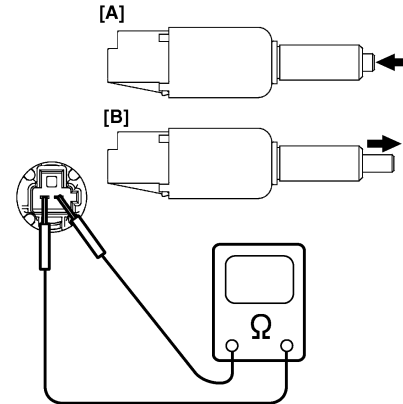

I5JB0AA10009-01

Adjustment

For adjustment, refer to “Installation” under “CPP Switch (for Cruise Control) Removal and Installation”.

Brake Light Switch Removal and Installation

S6JB0BA106005

For removal and installation, refer to “Brake Light Switch Adjustment in Section 4A”.

Brake Light Switch Inspection

S6JB0BA106006

Check for continuity between terminals referring to “Brake Light Switch Inspection in Section 9B”.

ECM Removal and Installation

S6JB0BA106007

For removal and installation, refer to “Engine Control Module (ECM) Removal and Installation in Section 1C”.

Specifications**Tightening Torque Specifications**

S6JB0BA107001

Fastening part	Tightening torque			Note
	N·m	kgf-m	lb-ft	
CPP switch lock nut	7.5	0.75	5.5	⌚

Reference:

For the tightening torque of fastener not specified in this section, refer to “Fastener Information in Section 0A”.

Body Electrical Control System

Precautions

Precautions in Diagnosing Trouble

S6JB0BA200001

- Diagnostic information stored in BCM memory can be cleared as well as checked by using SUZUKI scan tool. Before using scan tool, read its Operator's (Instruction) Manual carefully to have good understanding as to what functions are available and how to use it.
- Be sure to read "Precautions for Electrical Circuit Service in Section 00" before inspection and observe what is written there.
- Communication of ECM, TCM (if equipped), BCM, ABS or ESP® control module (if equipped), 4WD control module (if equipped), keyless start control module (if equipped), steering angle sensor (if equipped) and combination meter is established by CAN (Controller Area Network). Therefore, be sure to read "Precaution for CAN Communication System in Section 00" before inspection and handle CAN communication line.

General Description

BCM General Description

S6JB0BA201001

The BCM incorporates relays and controllers which are used for the following systems and controls them.

- Power door lock (if equipped)
- Keyless entry (if equipped)
- Door lock function of keyless start system (if equipped)
- Rear wiper
- Combination meter
- Interior light / luggage room light
- Warning buzzer
- Rear end door window defogger and door mirror heater (if equipped)
- DRL (if equipped)
- Auto-on headlight (if equipped)
- Front fog light (if equipped)
- Theft deterrent light
- Clearance light

Also, the BCM has a function to cause the interior light and open door warning light in the combination meter to turn off when any door is left open for longer than 15 minutes to reduce wasteful battery consumption.

In addition, it is possible to check operation of actuator which is controlled by BCM by using the output test function of SUZUKI scan tool to operate actuator simulatively.

CAN Communication System Description

S6JB0BA201002

Refer to “CAN Communication System Description in Section 1A” for CAN communication system description. BCM communication control data with each control module as follows.

BCM Transmission Data

				ECM	TCM (A/T model)	Combination Meter	ESP® Control Module (ESP® model)	Keyless Start Control Module (if equipped)
BCM	Transmit	DATA	A/C switch ON signal	○				
			Blower fan signal	○				
			DRL ON signal	○				
			A/T mode status signal	○	○	○		
			Electric load signal	○		○		
			Illumination ON signal			○		
			Diagnostic trouble code (DTC)			○		
			Seat belt buckle switch signal			○		
			Brake fluid level switch signal			○	○	
			Parking brake switch signal			○	○	
			Charging system signal			○		○
			Engine oil pressure switch signal			○		○
			Door switch status			○		○
			Door lock status					○

I6JB0BA20001-02

BCM Reception Data

				ECM	TCM (A/T model)	4WD Control Module (if equipped)	Keyless Start Control Module (if equipped)	Combination Meter
BCM	Receive	DATA	Engine speed signal	○				
			Engine coolant temperature signal	○				
			Vehicle speed signal	○				
			Brake pedal switch signal	○				
			A/C compressor clutch signal	○				
			A/C refrigerant pressure signal	○				
			Fuel consumption signal	○				
			Transmission range sensor signal (A/T select lever position)		○			
			Buzzer request signal			○	○	
			Door lock/unlock request signal				○	
			Ignition knob switch signal				○	
			Answer back request signal				○	
			Fuel level percent signal					○


I6JB0BA20002-02

Theft Deterrent Light Description

S6JB0BA201003

Theft deterrent light (2) is installed on the HVAC control module (1) for the theft preventive purpose.

The BCM makes the theft deterrent light flash at certain intervals after the ignition switch is turned off until it is turned on again. Also, DTCs stored in BCM can be checked by reading the flashing patterns of the theft deterrent light when diagnosing troubles.

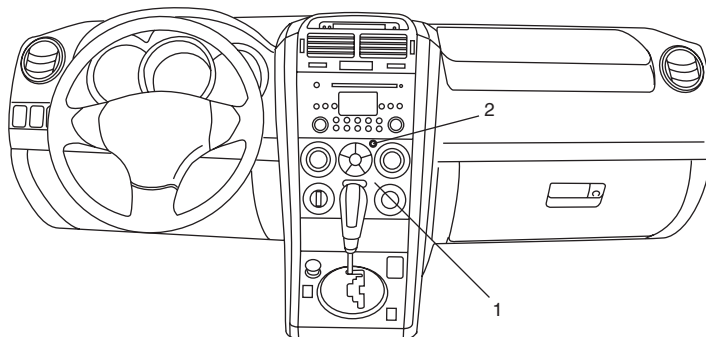


I5JB0AA20001-01

Schematic and Routing Diagram

Body Electrical Control System Wiring Circuit Diagram

S6JB0BA202001

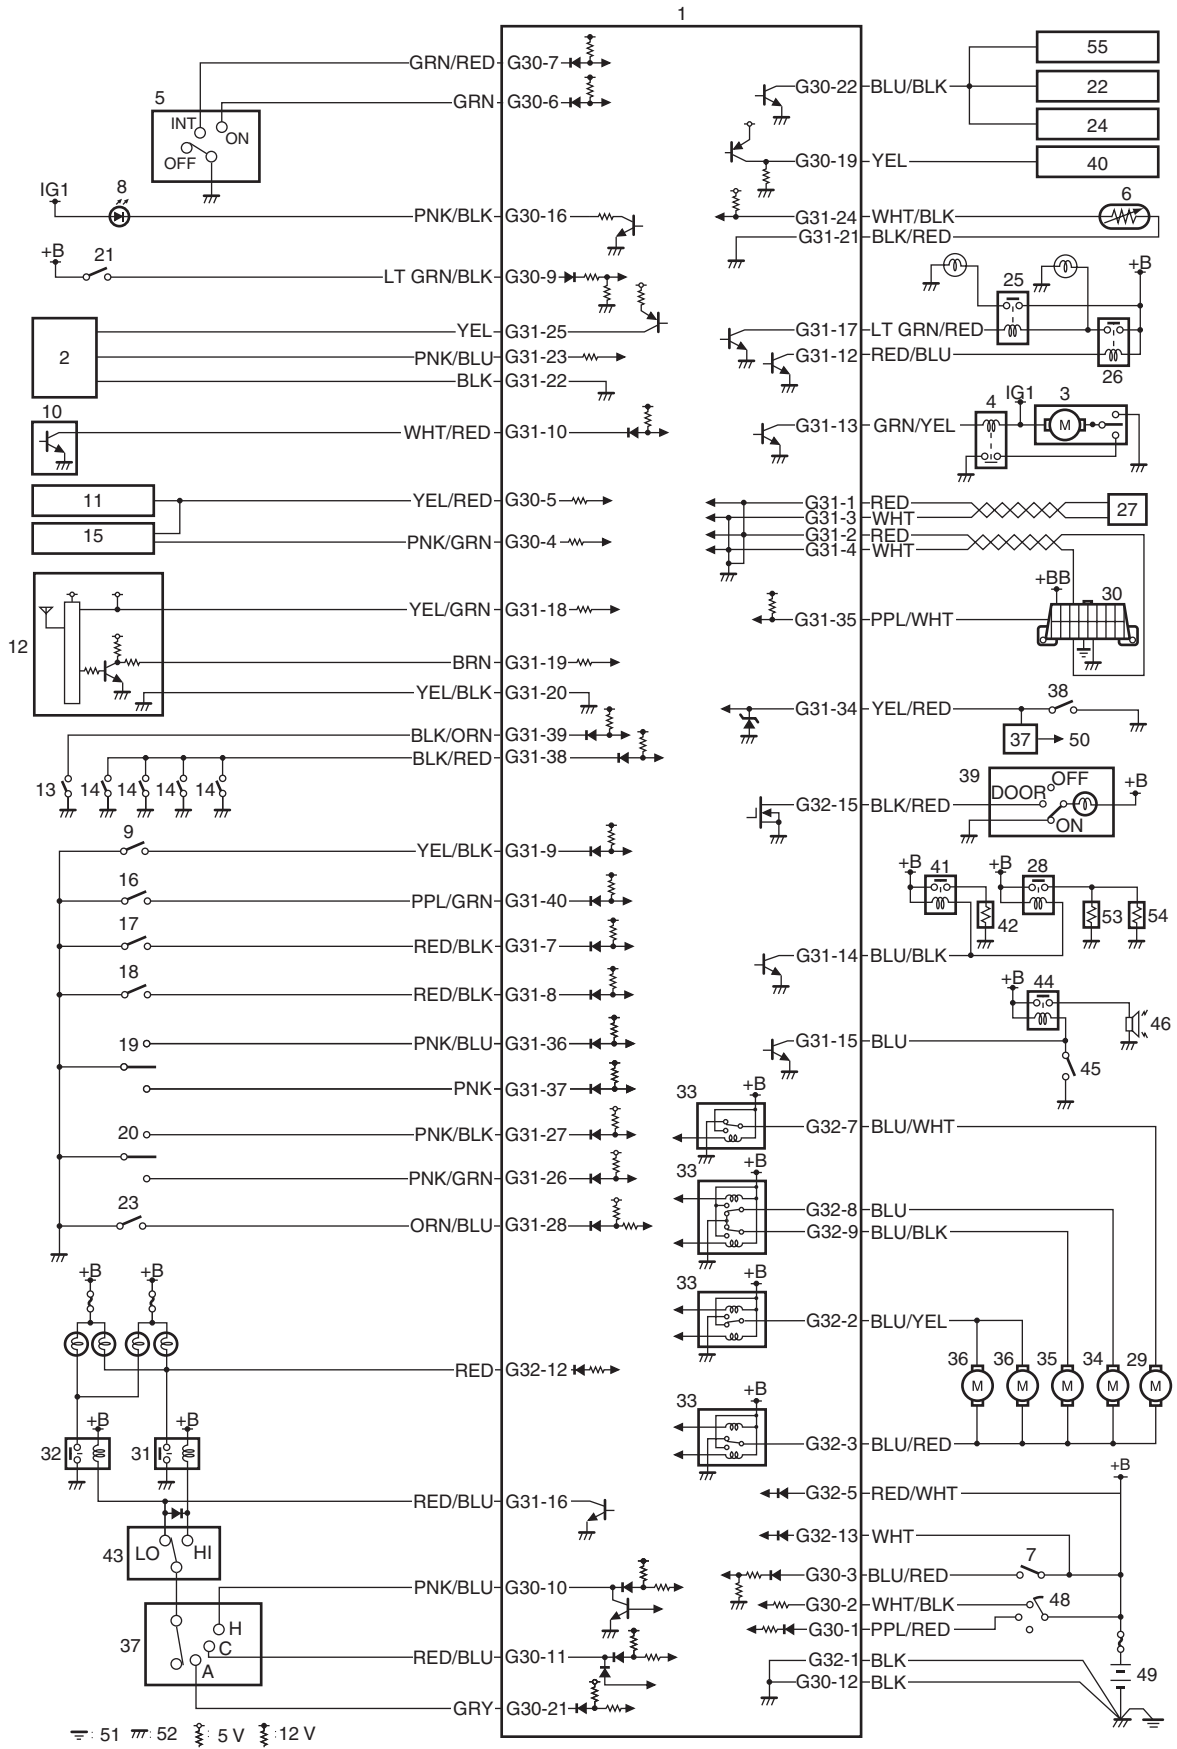

I6JB0BA20003-01


10B-5 Body Electrical Control System:

1. BCM	22. Navigation (if equipped)	43. Dimmer and passing switch
2. Auto-ON headlight sensor (if equipped)	23. POWER/NORMAL mode switch (if equipped)	44. Horn relay
3. Rear wiper motor	24. Headlight auto leveling control module (if equipped)	45. Horn switch
4. Rear wiper relay	25. Front fog light relay (if equipped)	46. Horn
5. Rear wiper and washer switch	26. Tail light relay	47. Lighting switch
6. Outside air temperature sensor	27. Junction connector	48. Ignition switch
7. Key reminder switch	28. Door mirror heater relay (if equipped)	49. Battery
8. Theft deterrent light	29. Rear end door lock actuator	50. To turn signal light
9. Oil pressure switch	30. Data link connector (DLC)	51. Body ground
10. Generator	31. Headlight high beam relay	52. Engine ground
11. Information display	32. Headlight low beam relay	53. Right side door mirror heater (if equipped)
12. Keyless entry receiver (if equipped)	33. Door lock motor relay	54. Left side door mirror heater (if equipped)
13. Driver side door switch	34. Driver side door lock actuator	55. Audio unit
14. Other than driver side door switch	35. Passenger side door lock actuator	INT: Intermittent position
15. HVAC control module	36. Rear door lock actuator	ON: Rear wiper ON position
16. Driver side seat belt switch	37. Turn signal and hazard warning relay	LO: Low beam position
17. Brake fluid level switch	38. Hazard warning switch	HI: High beam position
18. Parking brake switch	39. Interior light	A: Auto position (if equipped)
19. Door key cylinder switch (included in door lock actuator)	40. Air bag control module	C: Clearance position
20. Manual door lock switch	41. Rear window defogger relay	H: Head position
21. Front fog light switch (if equipped)	42. Rear window defogger	

Connector Layout Diagram of BCM

S6JB0BA202002

BCM connectors (viewed from harness side)

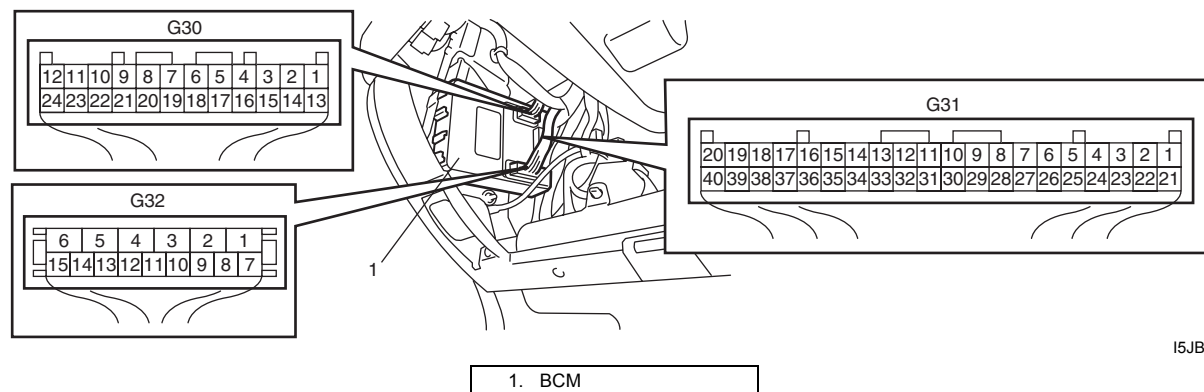


I5JB0AA20002-01

Component Location

BCM and Related System Component Location

S6JB0BA203001

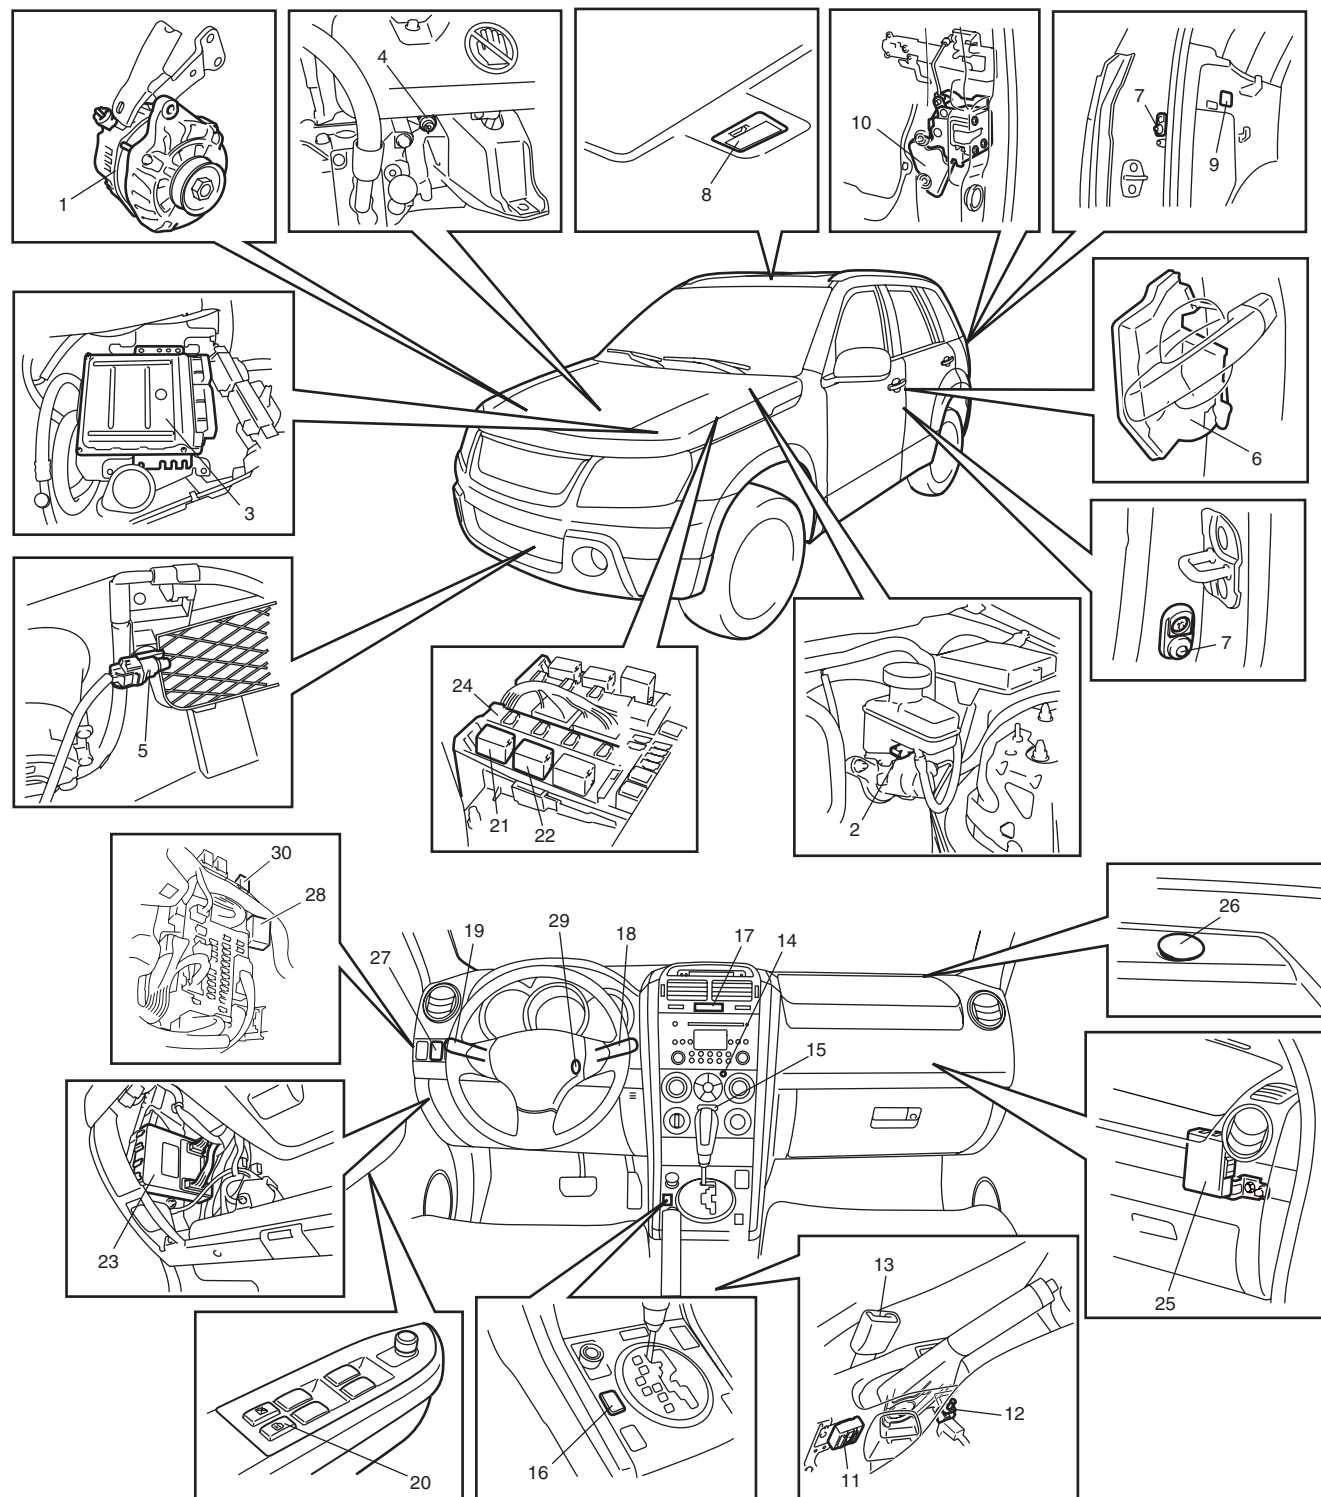

I6JB0BA20004-02

1. Generator	11. Keyless entry receiver (if equipped)	21. Headlight high beam relay
2. Brake fluid level switch	12. Parking brake switch	22. Headlight low beam relay
3. ECM	13. Seat belt buckle switch	23. BCM
4. Oil pressure switch	14. Theft deterrent light	24. Rear end window defogger, mirror heater, rear wiper and front fog light relays (included in integration relay)
5. Outside air temperature sensor	15. Rear end door window defogger switch	25. Keyless start control module (if equipped)
6. Door lock actuator (incorporated in key cylinder switch)	16. POWER/NORMAL mode select switch (A/T model)	26. Auto-on headlight sensor (if equipped)

10B-7 Body Electrical Control System:


7. Door switch	17. Hazard warning switch	27. Front fog light switch (if equipped)
8. Interior light	18. Rear wiper switch	28. Turn signal and hazard warning relay
9. Luggage room light	19. Lighting switch	29. Key reminder switch (included in ignition switch)
10. Rear end door lock actuator (incorporated in door switch)	20. Manual door lock switch	30. Tail light relay

Diagnostic Information and Procedures

BCM Self-Diagnosis Function

S6JB0BA204001

- BCM monitors conditions of the system components and its circuit with ignition switch turned to ON position. When an abnormality in the system occurs, the area where that abnormality lies is stored in the memory of EEPROM in BCM.
- DTC can be checked in either one of following ways.
 - DTC can be checked by SUZUKI scan tool (2) connected to DLC (1).
 - DTC can be read from flashing pattern of theft deterrent light (3). In addition, when theft deterrent light is flashing for DTC outputting DTC is displayed on combinations meter (4) at the same time.

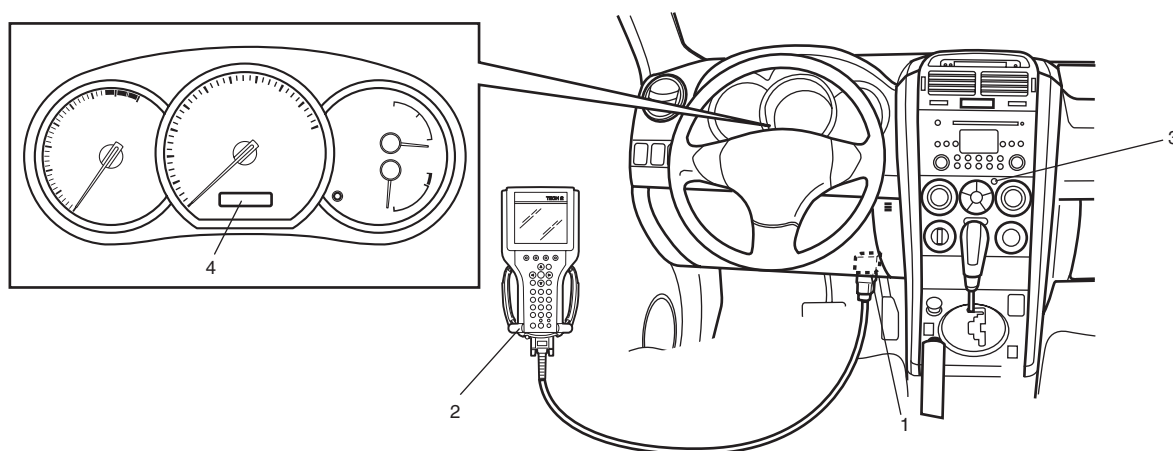

I5JB0AA20004-01

BCM input / output table

Control	Input	Output
Power door lock system	<ul style="list-style-type: none">• Key cylinder switch• Manual door lock switch	<ul style="list-style-type: none">• Driver side door lock actuator• Other than driver side door lock actuator
Keyless entry system	<ul style="list-style-type: none">• Key reminder switch• Keyless entry receiver• Driver side door switch	<ul style="list-style-type: none">• Driver side door lock actuator• Other than driver side door lock actuator• Turn signal and hazard warning relay• Interior light
Keyless start system (Door lock function)	<ul style="list-style-type: none">• Keyless start control module	<ul style="list-style-type: none">• Driver side door lock actuator• Other than driver side door lock actuator• Turn signal and hazard warning relay• Interior light
Rear wiper	<ul style="list-style-type: none">• Rear wiper INT switch• Rear wiper LO switch	<ul style="list-style-type: none">• Rear wiper relay

Control	Input	Output
Combination meter	<ul style="list-style-type: none"> • Lighting switch • Brake fluid level switch • Seat belt reminder light signal • Generator • Oil presser switch • Parking brake switch • Power/Normal mode select switch (A/T model) • Dimmer switch (high beam) • Illumination controller (for auto-on headlight model only) • Door switch • BCM DTC signal 	<ul style="list-style-type: none"> • Combination meter
Interior light	<ul style="list-style-type: none"> • Each door switch • Key reminder switch 	<ul style="list-style-type: none"> • Interior light • Luggage room light
Warning buzzer	<ul style="list-style-type: none"> • Key reminder switch • Tail light switch • Driver side door switch • ECM (vehicle speed signal) • TCM (reverse signal) (if equipped) • 4WD control module (if equipped) • Keyless start control module (if equipped) 	<ul style="list-style-type: none"> • Warning buzzer (located in BCM)
DRL system	<ul style="list-style-type: none"> • Lighting switch • ECM (engine ON, OFF signal) • Generator 	<ul style="list-style-type: none"> • Headlight low beam relay
Auto-on headlight system	<ul style="list-style-type: none"> • Lighting switch • Parking brake switch • Auto-on headlight sensor 	<ul style="list-style-type: none"> • Tail light relay • Headlight low beam relay
Front fog light	<ul style="list-style-type: none"> • Lighting switch • Front fog light switch 	<ul style="list-style-type: none"> • Front fog light relay
Rear end door window defogger and door mirror heater	<ul style="list-style-type: none"> • Rear end door window defogger switch (included in HVAC control module) • Generator • ECM (engine ON, OFF signal) 	<ul style="list-style-type: none"> • Rear end door defogger window relay • Mirror heater relay (if equipped)
Tail light	<ul style="list-style-type: none"> • Lighting switch 	<ul style="list-style-type: none"> • Tail light relay
Door lock canceller	<ul style="list-style-type: none"> • SDM (air bag deployment signal) 	<ul style="list-style-type: none"> • Driver side door lock actuator • Other than driver side door lock actuator
Theft deterrent light	<ul style="list-style-type: none"> • Key reminder switch 	<ul style="list-style-type: none"> • Theft deterrent light (located in HVAC control module)

Body Electrical Control System Check

S6JB0BA204002

Step	Action	Yes	No
1	☞ Customer complaint analysis 1) Perform customer complaint analysis. <i>Was customer complaint analysis performed?</i>	Go to Step 2.	Perform customer complaint analysis.
2	☞ Problem symptom confirmation 1) Perform problem symptom confirmation. <i>Does trouble recur?</i>	Go to Step 3.	Go to Step 7.
3	☞ DTC check 1) Check DTC. <i>Is it malfunction code?</i>	Go to Step 4.	Go to Step 5.
4	☞ Troubleshooting for DTC 1) Check and repair according to DTC diag. flow. <i>Are check and repair completed?</i>	Go to Step 7.	Check and repair malfunction part(s).
5	☞ Body electrical control system symptom diagnosis 1) Perform check and repair referring to "Symptom Diagnosis" of system having a trouble. <i>Is there faulty condition?</i>	Repair or replace malfunction part(s).	Go to Step 6.
6	☞ Check for intermittent problem 1) Check for intermittent problem. <i>Is there faulty condition?</i>	Repair or replace malfunction part(s).	Go to Step 7.
7	☞ Final confirmation test 1) Clear DTC referring to "DTC Clearance". 2) Check DTC referring to "DTC Check". <i>Is there any DTC?</i>	Go to Step 4.	End.

Customer Complaint Analysis

Record details of the problem (failure, complaint) and how it occurred as described by the customer.

For this purpose, use of such a questionnaire form as shown in the figure will facilitate collecting information to the point required for proper analysis and diagnosis.

Customer questionnaire (example)

Customer's name:	Model:	VIN:	
Date of issue:	Date Reg:	Date of problem:	Mileage:

Problem Symptoms	<ul style="list-style-type: none"> • Power door lock system does not operate • Keyless entry system does not operate • Rear end door window defogger does not operate • Rear wiper does not operate • Rear end door opener does not operate • Warning buzzer does not sound • Interior light does not light • Theft deterrent light does not flush • Other_____
Frequency of Occurrence	<ul style="list-style-type: none"> • Continuous / Intermittent (times a day, a month) / Other_____
Environmental Condition	<ul style="list-style-type: none"> • Weather: Fine / Cloudy / Rain / Snow / Other_____ • Temperature: °C(° F)
Diagnostic Trouble Code	<ul style="list-style-type: none"> • Normal code / Malfunction code ()

I5RS0DA20006-01

Problem Symptom Confirmation

Check if what the customer claimed in "Customer Questionnaire" is accurately found in the vehicle. If that symptom is found, check whether the symptom is identified as a failure. (This step should be shared with the customer if possible.)

DTC Check

Check DTC stored in BCM memory referring to "DTC Check", record it and then clear it referring to "DTC Clearance". DTC indicates malfunction that occurred in the system but does not indicate whether it exists now or it occurred in the past and the normal condition has been restored now. To check which case applies, clear DTC once and check whether or not any fault exists.

Troubleshooting for DTC

Based on the DTC indicated in Step 3 and referring to applicable DTC flow, locate the cause of the trouble, namely in a sensor, wire harness, connector, BCM or other part and repair or replace faulty parts.

Body Electrical Control System Symptom Diagnosis

Check the parts or system suspected as a possible cause referring to symptom diagnosis of each system.

Check for Intermittent Problem

Check parts where an intermittent trouble is easy to occur (e.g., wire harness, connector, etc.), referring to "Intermittent and Poor Connection Inspection in Section 00".

Final Confirmation Test

Confirm that the problem symptom has gone and the body electrical control system is free from any abnormal conditions. If what has been repaired is related to the malfunction DTC, check DTC again and confirm that no DTC is indicated.

Scan Tool Data

S6JB0BA204003

Scan tool Data	Condition	Normal condition / reference value
Vehicle Speed	At stop with ignition switch turned ON	0 km/h
Outside air Temp	Reference value is relative to outside air temperature	-40 °C – 70 °C (-40 °F – 158 °F)
Battery Voltage	At specified idle speed after warming up	10 – 14 V
Coolant Temp	At specified idle speed after warming up	80 °C – 100 °C (176 °F – 212 °F)
Engine Speed	Engine idling with no load applied after warming up	Desired idle speed ± 50 rpm
Fuel Consumption	At specified idle speed after warming up	0.0 km/l
Key Reminder Sw	Ignition key inserted in ignition key cylinder	Key in
	Ignition key pulled out from ignition key cylinder	Pulled
Door key Sw	Key cylinder switch of driver side door at lock position	LOCK
	Key cylinder switch of driver side door not turned	Neutral
	Key cylinder switch of driver side door at unlock position	Unlock
Door Lock Sw	Lock side of manual door lock switch pressed	LOCK
	Manual door lock switch not pressed	Neutral
	Unlock side of manual door lock switch pressed	Unlock
Driv Door Sw	Driver side door open	Open
	Driver side door closed	Close
Pass Door Sw	Doors other than driver side door open	Open
	Doors other than driver side door closed	Close
Brake Fluid Level	Brake fluid level at MIN level or higher	Normal
	Brake fluid level lower than MIN level	Low
Parking Brake Sw	Parking brake lever pulled	ON
	Parking brake lever released	OFF
Rear Defogger Sw	Rear end door window defogger switch turned ON with engine running	ON
	Rear end door window defogger switch turned OFF with engine running	OFF
Tail Light Sw	Lighting switch at HEAD or CLEARANCE position	ON
	Lighting switch at OFF position	OFF
Driv Seat belt Sw	Driver side seat belt fastened	Fasten
	Driver side seat belt unfastened	Unfasten
Charge Light	Engine at stop with ignition switch turned ON	ON
	Engine running	OFF
Oil pressure switch	Engine at stop with ignition switch turned ON	ON
	Engine running	OFF
A/C Switch	A/C and ignition switch turned ON	ON
	A/C switch turned OFF	OFF
Rear Wiper Sw	Rear wiper switch at ON position	ON
	Rear wiper switch at INT position	INT
	Rear wiper switch at OFF position	OFF
Front Fog Light Sw	Lighting switch at HEAD or CLEARANCE position and front fog light switch at ON position	ON
	Lighting switch at HEAD or CLEARANCE position and front fog light switch at OFF position	OFF
Headlight Sw	Lighting switch at HEAD position	ON
	Lighting switch at OFF position	OFF

Scan Tool Data Definitions

Vehicle Speed (km/h, mph): This parameter indicates the vehicle speed computed by ECM.

Outside air Temp (°C, °F): It is detected by outside air temperature sensor.

Battery Voltage (V): This parameter indicates battery positive voltage inputted to BCM.

Coolant Temp (Engine coolant temperature) (°C, °F): This parameter indicates the engine coolant temperature computed by ECM.

Engine Speed (RPM): This parameter indicates the engine speed computed by ECM.

Fuel Consumption (km/l): This parameter indicates the fuel consumption computed by ECM.

Key Reminder Sw (Key reminder switch) (Pulled / Key in): This parameter indicates the state of the key reminder switch.

Door key Sw (Door key cylinder switch) (Lock / Neutral / Unlock): This parameter indicates the state of the door key cylinder switch.

Door lock Sw (Manual door lock switch) (Lock / Neutral / Unlock): This parameter indicates the state of the manual door lock switch.

Driv Door Sw (Driver side door switch) (Open / Close): This parameter indicates the state of the driver side door switch.

Pass Door Sw (Other than driver side door switch) (Open / Close): This parameter indicates the state of the door switches other than driver side door switch.

Brake Fluid Level (Low / Normal): Low: Brake fluid level is lower than specified level.
Normal: Brake fluid level is higher than MIN level.

Parking Brake Sw (Parking brake switch) (ON / OFF): ON: Parking brake lever is pulled up.
OFF: Parking lever is released

Rear Defogger Sw (Rear end door window defogger switch) (ON / OFF): This parameter indicates the state of the rear end door window defogger switch.

Tail Light Sw (Lighting switch) (ON / OFF): This parameter indicates the state of the lighting switch.

Driv Seat belt Sw (Driver seat belt switch) (Fasten / Unfasten): This parameter indicates the state of the driver side seat belt buckle switch.

Charge light (ON / OFF): This parameter indicates the state of the charge system monitor switch.

Oil pressure switch (ON / OFF): This parameter indicates the state of the oil pressure switch.

A/C Switch (ON / OFF): This parameter indicates the state of the air conditioning switch.

Rear Wiper Sw (Rear wiper switch) (ON / INT / OFF): This parameter indicates the state of the rear wiper switch.

Front Fog Light Sw (Front fog light switch) (ON / OFF): This parameter indicates the state of the front fog light switch.












Headlight Sw (Headlight switch) (ON / OFF): This parameter indicates the state of the lighting switch.

Diagnosis Using Output Test Function of SUZUKI Scan Tool

SUZUKI scan tool has the output test function which can force operation of following actuators and relays of the system controlled by BCM. When a malfunction is found in the system controlled by BCM, execute the output test which enables easy judgment whether the malfunction is on the input side or output side of BCM. For detailed information on operation of SUZUKI scan tool, refer to "SUZUKI Scan Tool Operator's Manual".

Output Test Item	Controlled Parts
Hazard Warning Light	Turn signal and hazard warning relay
Interior (Dome) Light	Interior (Dome) light (when interior light switch is at DOOR position)
Parking/Tail Light	Tail light relay
Front Fog Light	Front fog light relay (when lighting switch is at CLEARANCE position)
Rear defogger	Rear defogger and mirror heater relays
D.R.L.	Headlight low beam relay
Auto on headlight	Headlight low beam and tail light relays
Door	Each door lock actuator
Warning buzzer	Warning buzzer (in BCM)
Rear wiper	Rear wiper relay
Alarm indicator	Theft deterrent light (in HVAC control module)

DTC Table

DTC (displayed on SUZUKI scan tool)	DTC (indicated by theft deterrent light)	DTC (displayed on odometer in combination meter)	Detected item	Detecting condition
NO DTC	0000	0000	—	No DTC detected
 B1133	1133	b1133	Battery voltage too high	Battery voltage too high
 B1141	1141	b1141	Outside air temperature (ambient temperature) sensor circuit open	Sensor output voltage too high
 B1142	1142	b1142	Outside air temperature (ambient temperature) sensor circuit short to ground	Sensor output voltage too low
 B1150	1150	b1150	Air bag communication circuit malfunction	Air bag communication circuit open or short to ground
 B1157	1157	b1157	Air bag deployment signal input	Air bag deployment signal inputted
 B1170	1170	b1170	EEPROM access error	Memory error
 U0155	0155	U0155	Lost communication with instrument panel cluster (IPC) control module	Receiving error of BCM from combination meter for specified time continuously
 U1073	1073	U1073	Control module communication bus off	Transmitting and receiving error of BCM for specified time continuously
 U1100	1100	U1100	Lost communication with ECM	Receiving error of BCM from ECM for specified time continuously
 U1101	1101	U1101	Lost communication with TCM	Receiving error of BCM from TCM for specified time continuously
 U1144	1144	U1144	Lost communication with keyless start control module	Receiving error of BCM from keyless start control module for specified time continuously

DTC Check


S6JB0BA204005

Using SUZUKI Scan Tool

- 1) Prepare SUZUKI scan tool.
- 2) With ignition switch turned OFF, connect it to data link connector (DLC) located on underside of instrument panel of driver's side.

Special tool

(A): SUZUKI scan tool

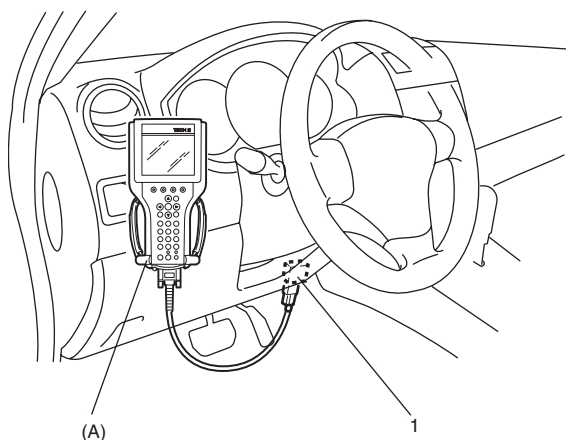

I5JB0AA20005-02


- 3) Turn ignition switch ON.
- 4) Read DTC according to instructions displayed on SUZUKI scan tool and print it or write it down.
Refer to SUZUKI scan tool operator's manual for further details.
If communication between SUZUKI scan tool and BCM is not possible, check if SUZUKI scan tool is communicable by connecting it to BCM in another vehicle. If communication is possible in this case, SUZUKI scan tool is in good condition. Then check data link connector and serial data line (circuit) in the vehicle with which communication was not possible.
- 5) After completing the check, turn ignition switch off and disconnect SUZUKI scan tool from data link connector.

Without Using SUZUKI Scan Tool

- 1) Turn ignition switch to OFF position.
- 2) Perform following Steps a) to d) within 10 seconds after ignition switch is turned ON and engine stops.
 - a) Turn lighting switch to "CLEARANCE" position.
 - b) Turn lighting switch to "OFF" position.
 - c) Repeat Steps a) and b) 2 times.
 - d) Press and release driver side door switch 3 times.

10B-15 Body Electrical Control System:

- 3) Check DTC displayed on odometer of combination meter or read flashing pattern of theft deterrent light which represents DTC as shown in the following example and write it down.
When more than 2 DTCs are stored in memory, flashing for each DTC starts with the smallest DTC number in increasing order. Also, DTC is indicated repeatedly until the ignition switch is turned OFF.

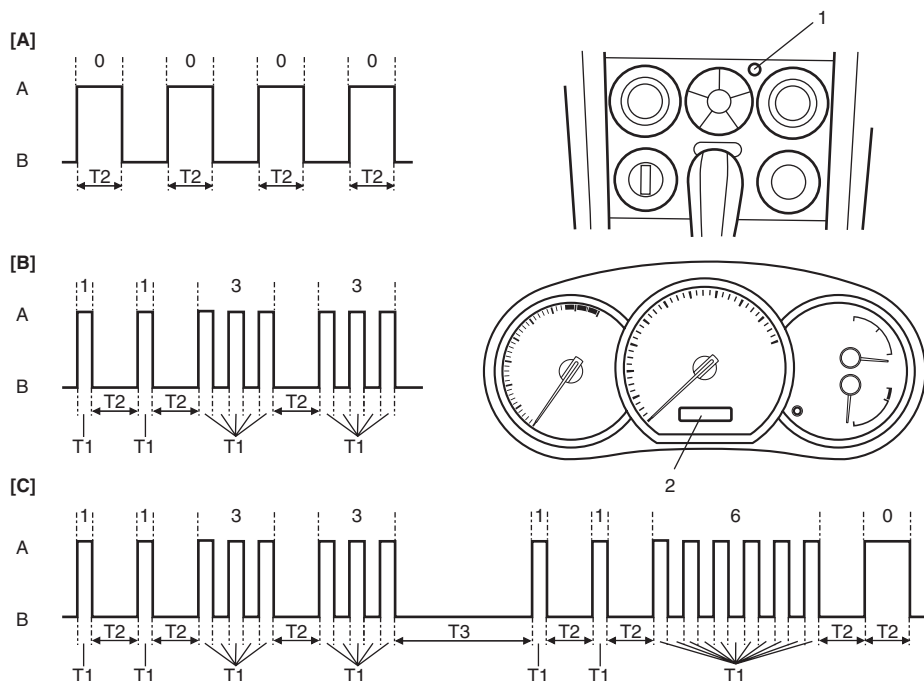

I5JB0AA20011-01

[A]: No DTC (No. 0000)	B: Indicator light turned OFF	1. Theft deterrent light
[B]: DTC B1133 (No. 1133)	T1: 0.3 seconds	2. Odometer
[C]: When 2 DTCs are detected	T2: 1.0 seconds	
A: Indicator light turned ON	T3: 3.0 seconds	

- 4) After completing the check, turn ignition switch to OFF position.

DTC Clearance

S6JB0BA204006

After repair or replace of malfunction part(s), clear all DTCs by performing the following procedure.

Using SUZUKI Scan Tool

- 1) Connect SUZUKI scan tool to data link connector in the same manner as when making this connection for DTC check.
- 2) Turn ignition switch ON and engine stops.
- 3) Erase DTC according to instructions displayed on scan tool. Refer to scan tool operator's manual for further details.
- 4) After completing the clearance, turn ignition switch off and disconnect scan tool from data link connector.


Without Using SUZUKI Scan Tool

- 1) Turn ignition switch to OFF position.
- 2) Perform following Steps a) to d) within 10 seconds after ignition switch is turned ON and engine stops.
 - a) Turn lighting switch to "CLEARANCE" position.
 - b) Turn lighting switch to "OFF" position.
 - c) Repeat Steps a) and b) 3 times.
 - d) Press and release driver side door switch 4 times.
- 3) After completing above Steps, confirm that no malfunction DTC is detected.

BCM Power Circuit and Ground Circuit Check

S6JB0BA204007

Wiring Diagram

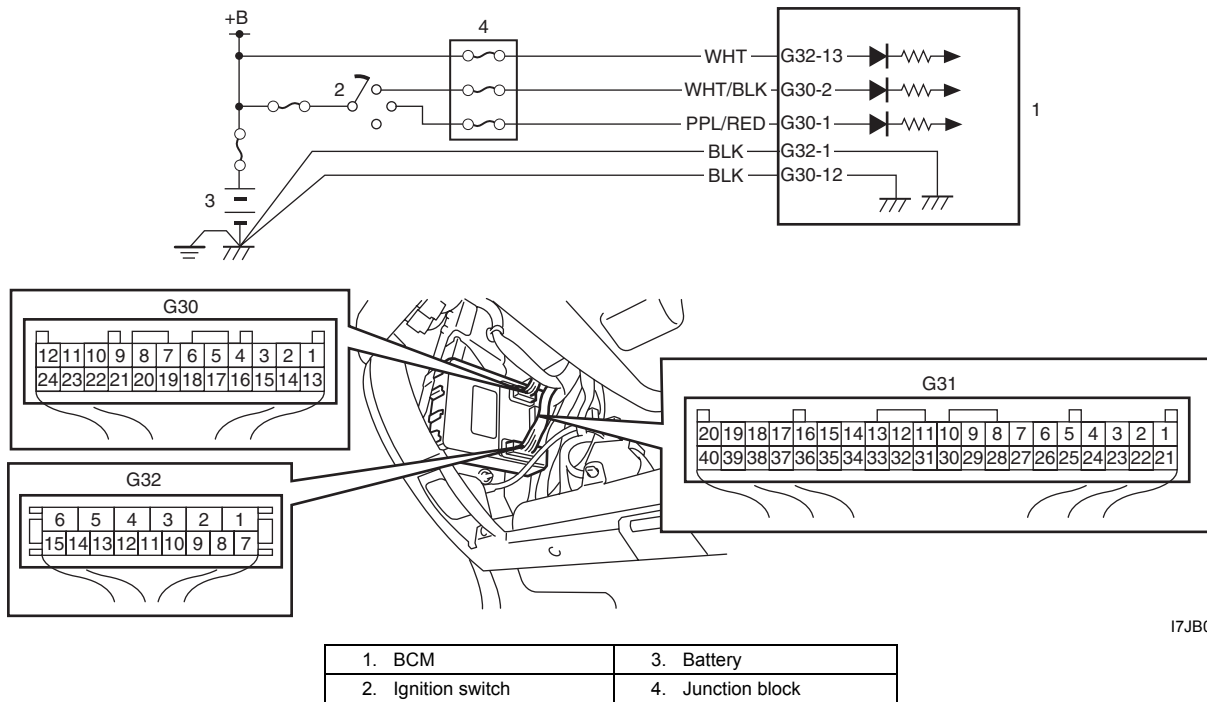

I7JB01A20008-01

Troubleshooting

Step	Action	Yes	No
1	Fuse check 1) Turn ignition switch to OFF position. 2) Check circuit fuses for condition. <i>Are circuit fuses in good condition?</i>	Go to Step 2.	Replace fuse and check for short circuit to ground.
2	Power supply circuit check 1) Disconnect connectors from BCM. 2) Check for proper connection to BCM connector at terminal "G32-13". 3) If OK, then measure voltage between "G32-13" terminal of BCM and vehicle body ground. <i>Is voltage 10 – 14 V?</i>	Go to Step 3.	Repair power supply circuit.
3	Power supply circuit check 1) Check for proper connection to BCM connector at terminals "G30-1" and "G30-2". 2) If OK, turn ignition switch ON. 3) Measure voltage between following terminals. <ul style="list-style-type: none"> Between "G30-1" terminal of BCM connector and vehicle body ground Between "G30-2" terminal of BCM connector and vehicle body ground <i>Is each voltage 10 – 14 V?</i>	Go to Step 4.	Repair power supply circuit.

10B-17 Body Electrical Control System:

Step	Action	Yes	No
4	Ground circuit check 1) Turn ignition switch to OFF position. 2) Check for proper connection to BCM connector at terminals "G30-12" and "G32-1". 3) If OK, then measure resistance between following terminals. <ul style="list-style-type: none">Between "G30-12" terminal of BCM connector and vehicle body groundBetween "G32-1" terminal of BCM connector and vehicle body ground <i>Is each resistance 2 Ω or less?</i>	BCM power supply circuit and ground circuit are in good condition.	Repair ground circuit.

DTC B1133 (No. 1133): Battery Voltage Too High

S6JB0BA204008

Wiring Diagram

Refer to "BCM Power Circuit and Ground Circuit Check".

DTC Detecting Condition and Possible cause


DTC detecting condition	Possible cause
Power voltage supplied from battery to BCM is higher than 16V.	<ul style="list-style-type: none">Charging system malfunctionBCM malfunction

Flow Test Description**Step 1: Check charging system****DTC troubleshooting**

Step	Action	Yes	No
1	Charging system operation check 1) Check generator for operation referring to "Generator Test (Overcharged Battery Check) in Section 1J". <i>Is it in good condition?</i>	Substitute a known-good BCM and recheck.	Repair charging system.

DTC B1141 / B1142 (No. 1141 / No. 1142): Outside Air Temperature (Ambient Temp.) Sensor Circuit Malfunction

S6JB0BA204009

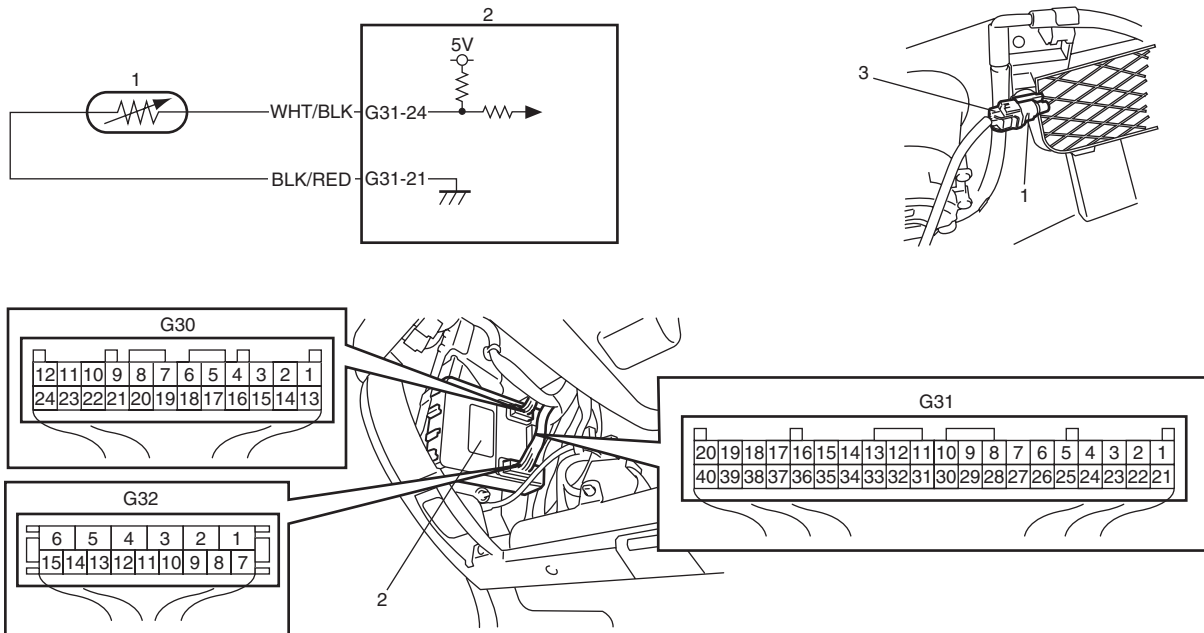Wiring Diagram

I5JB0AA20007-01

1. Outside air temperature sensor	3. Outside air temperature sensor connector
2. BCM	

DTC Detecting Condition and Possible Cause

DTC detecting condition	Possible cause
DTC B1141 (DTC No. 1141): Input signal from outside air temperature sensor is higher than 4.88 V.	<ul style="list-style-type: none"> Open in outside air temperature sensor circuit Outside air temperature sensor malfunction BCM malfunction
DTC B1142 (DTC No. 1142): Input signal from outside air temperature sensor is lower than 0.1 V.	<ul style="list-style-type: none"> Short in outside air temperature sensor circuit Outside air temperature sensor malfunction BCM malfunction

Flow Test Description**Step 1: Check whether malfunction is in outside air temperature sensor.****Step 2: Check outside air temperature sensor circuit.**

10B-19 Body Electrical Control System:


DTC troubleshooting

Step	Action	Yes	No
1	Check outside air temperature sensor 1) Turn ignition switch to OFF position. 2) Disconnect connector from outside air temperature sensor. 3) Check outside air temperature sensor for resistance referring to "Outside Air Temperature Sensor Inspection (If Equipped)" in Section 9C". <i>Is it in good condition?</i>	Go to Step 2.	Replace outside air temperature sensor.
2	Outside air temperature sensor circuit check 1) Disconnect connector from BCM and check for proper terminal connection to BCM connector. 2) If connections are OK, check outside air temperature sensor circuit for open, short and high resistance. <i>Is each circuit in good condition?</i>	Substitute a known-good BCM and recheck.	Repair circuit.

DTC B1150 (No. 1150): Air Bag Communication Circuit Malfunction

S6JB0BA204010

Wiring Diagram

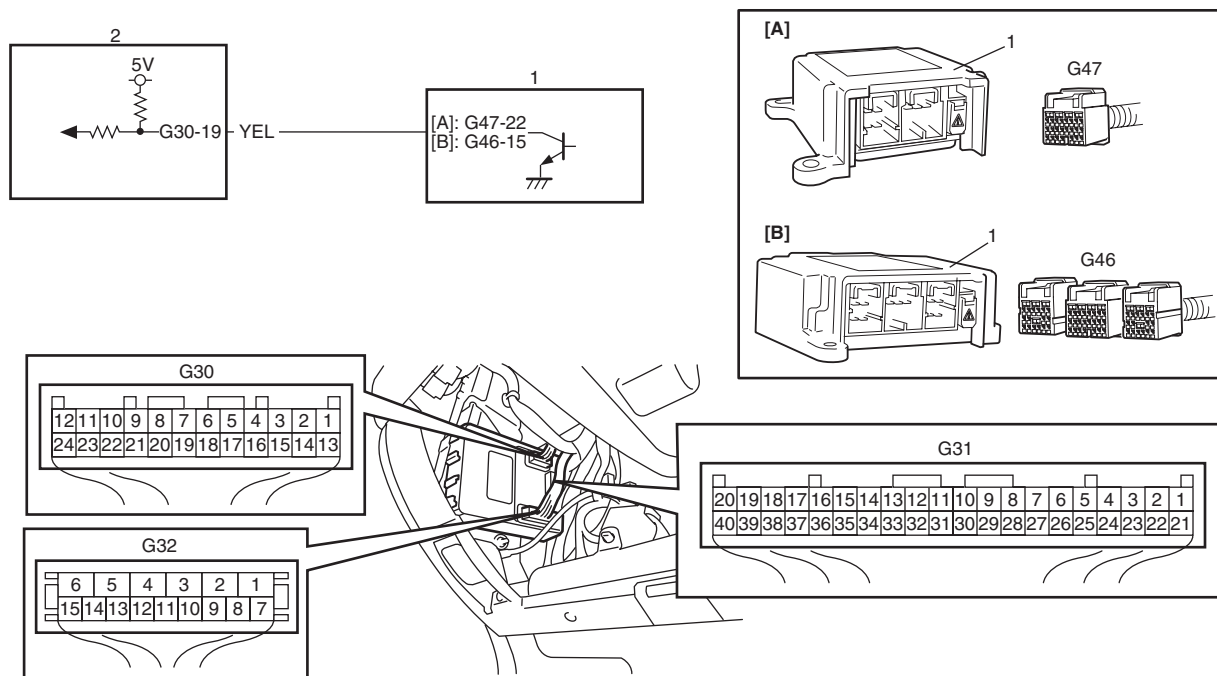

I5JB0AA20008-01

[A]: Vehicle not equipped with side-air bag	1. SDM
[B]: Vehicle equipped with side-air bag	2. BCM

DTC Detecting Condition and Possible Cause

DTC detecting condition	Possible cause
After ignition switch is turned on, abnormal signal is fed from SDM to BCM.	<ul style="list-style-type: none"> Air bag communication circuit open or short SDM malfunction BCM malfunction

Flow Test Description**Step 1: Check air bag communication circuit.****Step 2: Check air bag communication circuit.****DTC Troubleshooting**

Step	Action	Yes	No
1	Air bag communication circuit check 1) Turn ignition switch to OFF position. 2) Disconnect connector from SDM referring to "SDM Removal and Installation in Section 8B". 3) Disconnect connector from BCM. 4) Check air bag communication circuit for open, short and high resistance. <i>Is circuit in good condition?</i>	Go to Step 2.	Repair circuit.
2	Air bag communication circuit check 1) Turn ignition switch to OFF position. 2) Connect connectors to BCM. 3) Turn ignition switch to ON position. 4) Measure voltage between "G30-19" terminal of BCM connector and vehicle body ground. <i>Is voltage 4 – 6 V?</i>	Substitute a known-good SDM and recheck.	Substitute a known-good BCM and recheck.

DTC B1157 (No. 1157): Air Bag Deployment Signal Input

S6JB0BA204011

Wiring Diagram

Refer to "DTC B1150 (No. 1150): Air Bag Communication Circuit Malfunction".

DTC Detecting Condition and Possible cause

DTC detecting condition	Possible cause
Air bag deployment signal is fed from SDM to BCM.	<ul style="list-style-type: none"> Air bag component parts BCM malfunction

Flow Test Description**Step 1: Check DTC for SDM.****DTC troubleshooting**

Step	Action	Yes	No
1	Check DTC for SDM 1) Check DTC stored in SDM referring to "DTC Check in Section 8B". <i>Is DTC B1021 detected?</i>	Go to "DTC B1021: Air Bag Module Deployed in Section 8B".	Substitute a known-good BCM and recheck.

DTC B1170 (No. 1170): EEPROM access error

S6JB0BA204012

DTC Detecting Condition and Possible Cause

DTC detecting condition	Possible cause
Data write error or check sum error.	BCM malfunction

DTC Troubleshooting**NOTE**

Before performing steps below, be sure to perform "Body Electrical Control System Check".

- 1) Ignition switch OFF.
- 2) Replace BCM.


10B-21 Body Electrical Control System:

3) Repeat BCM Check Flow Table.

DTC U0155 (No. 0155): Lost Communication with Instrument Panel Cluster (IPC) Control Module

S6JB0BA204018

Wiring Diagram

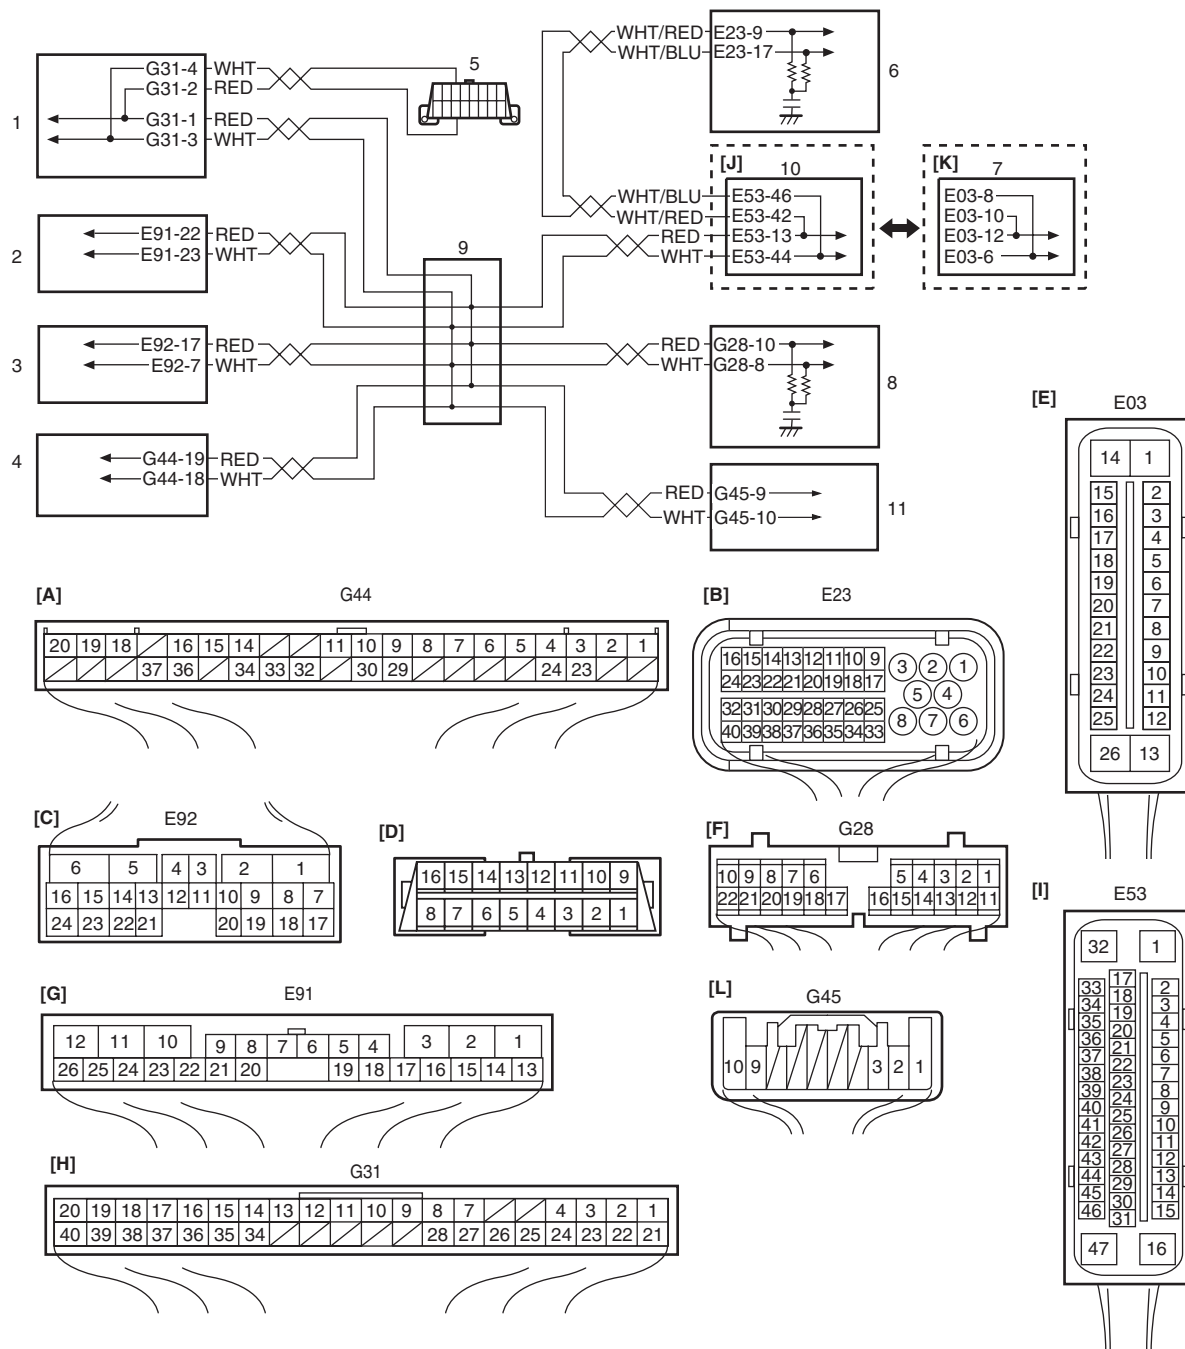

I6JB01A20004-02

[A]: Keyless start control module connector (viewed from harness side)	1. BCM
[B]: ECM connector (viewed from harness side)	2. 4WD control module (if equipped)
[C]: TCM connector (viewed from harness side)	3. TCM (A/T model)
[D]: DLC (viewed from terminal side)	4. Keyless start control module (if equipped)
[E]: ABS control module connector (viewed from terminal side)	5. DLC
[F]: Combination meter connector (viewed from harness side)	6. ECM
[G]: 4WD control module connector (viewed from harness side)	7. ABS control module
[H]: BCM connector (viewed from harness side)	8. Combination meter
[I]: ESP® control module connector (viewed from terminal side)	9. Junction connector
[J]: Vehicle equipped with ESP®	10. ESP® control module
[K]: Vehicle not equipped with ESP®	11. Steering angle sensor (if equipped)
[L]: Steering angle sensor connector (viewed from harness side)	

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
BCM can not receive CAN data from combination meter for longer than specified time continuously.	<ul style="list-style-type: none"> • CAN communication circuit • BCM • Combination meter

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch turned OFF.
- 2) Turn ON ignition switch and clear DTC by using scan tool.
- 3) Start engine and run it for 1 min. or more.
- 4) Check DTC.

DTC Troubleshooting

Step	Action	Yes	No
1	DTC check of BCM <i>Is DTC U0155 (No. 0155) and DTC U1073 (No. 1073) detected together?</i>	Go to "DTC U1073 (No. 1073): Control Module Communication Bus Off".	Go to Step 2.
2	Control module connector check 1) Check connection of connectors of all control modules communicating by means of CAN. 2) Recheck BCM for DTC. <i>Is DTC U0155 (No. 0155) detected?</i>	Go to Step 3.	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".
3	Combination meter power and ground circuit check 1) Turn ignition switch to ON position. <i>Do warning lights in combination meter other than key indicator light light up?</i>	Go to Step 4.	Check combination meter power and ground circuit. If circuit is OK, substitute a known-good combination meter and recheck.
4	CAN communication circuit check 1) Turn ignition switch to OFF position. 2) Disconnect connectors from BCM and combination meter. 3) Check CAN communication circuit between BCM and combination meter for open, short and high resistance. <i>Is each CAN communication circuit in good condition?</i>	Go to Step 5.	Repair circuit.
5	CAN communication circuit check 1) Disconnect connectors of all control modules communicating by means of CAN. 2) Check CAN communication circuit between control modules other than Step 4 for open, short and high resistance. <i>Is each CAN communication circuit in good condition?</i>	Go to Step 6.	Repair circuit.

Step	Action	Yes	No
6	DTC check of BCM 1) Connect connectors of disconnected control modules communicating by means of CAN. 2) Disconnect connector of any one of control module other than BCM. 3) Recheck BCM for DTC. <i>Is DTC U0155 (No.0155) detected?</i>	Disconnect connectors of control modules other than the one whose connector is disconnected in Step 2) one by one and check that DTC U0155 is detected by BCM each time connector is disconnected. When DTC U0155 is not detected by BCM while checking in this way, go to description under "NO" below. If DTC U0155 is detected by BCM even when connectors of all control modules that use CAN communication with BCM are disconnected, substitute a known-good BCM and recheck.	Check power and ground circuit of control module disconnected in Step 2). If circuit is OK, substitute a known-good control module disconnected in Step 2) and recheck.

DTC U1073 (No. 1073): Control Module Communication Bus Off

S6JB0BA204013

Wiring Diagram

Refer to "DTC U0155 (No. 0155): Lost Communication with Instrument Panel Cluster (IPC) Control Module".

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Transmission error that is inconsistent between transmission data and transmission monitor (CAN bus monitor) data is detected more than 7 times continuously. (1 driving detection logic)	<ul style="list-style-type: none"> • CAN communication circuit • Combination meter • BCM • 4WD control module (if equipped) • ABS or ESP® control module • TCM (A/T model) • Keyless start control module (if equipped) • ECM • Steering angle sensor (if equipped)

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch turned OFF.
- 2) Turn ON ignition switch and clear DTC by using scan tool.
- 3) Start engine and run it for 1 min. or more.
- 4) Check DTC.

DTC Troubleshooting

Step	Action	Yes	No
1	Control module connector check 1) Check connection of connectors of all control modules communicating by means of CAN and reconnect securely. 2) Recheck DTC and reconnect securely. <i>Is DTC U1073 detected?</i>	Go to Step 2.	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".
2	CAN communication circuit check 1) Turn ignition switch to OFF position. 2) Disconnect connectors of all control modules communicating by means of CAN. 3) Check CAN communication circuit between control modules for open, short and high resistance. <i>Is each CAN communication circuit in good condition?</i>	Go to Step 3.	Repair circuit.
3	DTC check of BCM 1) Turn ignition switch to OFF position. 2) Connect connectors of disconnected control modules communicating by means of CAN. 3) Disconnect connector from any one of control modules other than BCM. 4) Recheck DTC for BCM. <i>Is DTC U1073 detected?</i>	Disconnect connectors of control modules other than the one whose connector is disconnected in Step 3) one by one and check that DTC U1073 is detected by BCM each time connector is disconnected. When DTC U1073 is not detected by BCM while checking in this way, go to description under "NO" below. If DTC U1073 is detected by BCM even when connectors of all control modules that use CAN communication with BCM are disconnected, substitute a known-good BCM and recheck.	Check power and ground circuit of control module disconnect in Step 3). If circuit is OK, substitute a known-good control module disconnected in Step 3) and recheck.

DTC U1100 (No. 1100): Lost Communication with ECM**Wiring Diagram**

Refer to "DTC U0155 (No. 0155): Lost Communication with Instrument Panel Cluster (IPC) Control Module".

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
BCM can not receive CAN data from ECM for longer than specified time continuously.	<ul style="list-style-type: none"> CAN communication circuit BCM ECM

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch turned OFF.
- 2) Turn ON ignition switch and clear DTC by using scan tool.
- 3) Start engine and run it for 1 min. or more.
- 4) Check DTC.

DTC Troubleshooting

Step	Action	Yes	No
1	DTC check of BCM <i>Is DTC U1100 (No. 1100) and DTC U1073 (No. 1073) detected together?</i>	Go to "DTC U1073 (No. 1073): Control Module Communication Bus Off".	Go to Step 2.
2	DTC check of ECM 1) Check DTC for ECM. <i>Is DTC U0073 detected?</i>	Go to "DTC U0073: Control Module Communication Bus Off in Section 1A".	Go to Step 3.
3	DTC check of ABS or ESP® control module 1) Check DTC for ABS or ESP® control module. <i>Is DTC U1073 detected?</i>	Go to "DTC U1073: Control Module Communication Bus Off in Section 4E".	Go to Step 4.
4	Control module connector check 1) Check connection of connectors of all control modules communicating by means of CAN. 2) Recheck BCM for DTC. <i>Is DTC U1100 (No. 1100) detected?</i>	Go to Step 5.	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".
5	DTC check of ABS or ESP® control module 1) Check DTC for ABS or ESP® control module. <i>Is DTC U1100 detected?</i>	Go to Step 6.	Go to Step 7.
6	CAN communication circuit check 1) Disconnect connectors from ECM and ABS or ESP® control module. 2) Check CAN communication circuit between ECM and ABS or ESP® control module for open, short and high resistance. <i>Is each CAN communication circuit in good condition?</i>	Check ECM power and ground circuit. If circuit is OK, substitute a known-good ECM and recheck.	Repair circuit.
7	CAN communication circuit check 1) Disconnect connectors from BCM and ABS or ESP® control module. 2) Check CAN communication circuit between BCM and ABS or ESP® control module for open, short and high resistance. <i>Is each CAN communication circuit in good condition?</i>	Go to Step 8.	Repair circuit.

Step	Action	Yes	No
8	CAN communication circuit check 1) Disconnect connectors of all control modules communicating by means of CAN. 2) Check CAN communication circuit between control modules other than Step 7 for open, short and high resistance. <i>Is each CAN communication circuit in good condition?</i>	Go to Step 9.	Repair circuit.
9	DTC check of BCM 1) Connect connectors of disconnected control modules communicating by means of CAN. 2) Disconnect connector of any one of control module other than BCM. 3) Recheck BCM for DTC. <i>Is DTC U1100 (No.1100) detected?</i>	Disconnect connectors of control modules other than the one whose connector is disconnected in Step 2) one by one and check that DTC U1100 is detected by BCM each time connector is disconnected. When DTC U1100 is not detected by BCM while checking in this way, go to description under "NO" below. If DTC U1100 is detected by BCM even when connectors of all control modules that use CAN communication with BCM are disconnected, substitute a known-good BCM and recheck.	Check power and ground circuit of control module disconnected in Step 2). If circuit is OK, substitute a known-good control module disconnected in Step 2) and recheck.

DTC U1101 (No. 1101): Lost communication with TCM

S6JB0BA204015

Wiring Diagram

Refer to "DTC U0155 (No. 0155): Lost Communication with Instrument Panel Cluster (IPC) Control Module".

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
BCM can not receive CAN data from TCM for longer than specified time continuously.	<ul style="list-style-type: none"> • CAN communication circuit • BCM • TCM

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch turned OFF.
- 2) Turn ON ignition switch and clear DTC by using scan tool.
- 3) Start engine and run it for 1 min. or more.
- 4) Check DTC.

DTC Troubleshooting

Step	Action	Yes	No
1	DTC check of BCM <i>Is DTC U1101 (No. 1101) and DTC U1073 (No. 1073) detected together?</i>	Go to "DTC U1073 (No. 1073): Control Module Communication Bus Off".	Go to Step 2.
2	DTC check of TCM 1) Check DTC for TCM. <i>Is DTC U0073 detected?</i>	Go to "DTC U0073: Control Module Communication Bus Off in Section 5A".	Go to Step 3.
3	Control module connector check 1) Check connection of connectors of all control modules communicating by means of CAN. 2) Recheck BCM for DTC. <i>Is DTC U1101 (No. 1101) detected?</i>	Go to Step 4.	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".
4	CAN communication circuit check 1) Disconnect connectors from BCM and TCM. 2) Check CAN communication circuit between BCM and TCM for open, short and high resistance. <i>Is each CAN communication circuit in good condition?</i>	Go to Step 5.	Repair circuit.
5	CAN communication circuit check 1) Disconnect connectors of all control modules communicating by means of CAN. 2) Check CAN communication circuit between control modules other than Step 4 for open, short and high resistance. <i>Is each CAN communication circuit in good condition?</i>	Go to Step 6.	Repair circuit.
6	DTC check of ECM 1) Connect connectors of disconnected control modules communicating by means of CAN. 2) Check ECM for DTC. <i>Is DTC U1101 detected?</i>	Check TCM power and ground circuit. If circuit is OK, substitute a known-good TCM and recheck.	Go to Step 7.
7	DTC check of BCM 1) Turn ignition switch to OFF position. 2) Disconnect connector of any one of control module other than BCM. 3) Recheck BCM for DTC. <i>Is DTC U1101 (No. 1101) detected?</i>	Disconnect connectors of control modules other than the one whose connector is disconnected in Step 2) one by one and check that DTC U1101 is detected by BCM each time connector is disconnected. When DTC U1101 is not detected by BCM while checking in this way, go to description under "NO" below. If DTC U1101 is detected by BCM even when connectors of all control modules that use CAN communication with BCM are disconnected, substitute a known-good BCM and recheck.	Check power and ground circuit of control module disconnected in Step 2). If circuit is OK, substitute a known-good control module disconnected in Step 2) and recheck.

DTC U1144 (No. 1144): Lost Communication with Keyless Start Control Module

S6JB0BA204016

Wiring Diagram

Refer to "DTC U0155 (No. 0155): Lost Communication with Instrument Panel Cluster (IPC) Control Module".

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
BCM can not receive CAN data from keyless start control module for longer than specified time continuously.	<ul style="list-style-type: none"> CAN communication circuit Keyless start control module BCM

DTC Confirmation Procedure

- 1) Connect scan tool to DLC with ignition switch turned OFF.
- 2) Turn ON ignition switch and clear DTC by using scan tool.
- 3) Start engine and run it for 1 min. or more.
- 4) Check DTC.

DTC Troubleshooting

Step	Action	Yes	No
1	DTC check of BCM <i>Is DTC U1144 (No. 1144) and DTC U1073 (No. 1073) detected together?</i>	Go to "DTC U1073 (No. 1073): Control Module Communication Bus Off".	Go to Step 2.
2	DTC check of keyless start control module 1) Check DTC for keyless start control module. <i>Is DTC 33 detected?</i>	Go to "DTC No. 33: Control Module Communication Bus Off in Section 10E".	Go to Step 3.
3	Control module connector check 1) Check connection of connectors of all control modules communicating by means of CAN. 2) Recheck BCM for DTC. <i>Is DTC U1144 (No. 1144) detected?</i>	Go to Step 4.	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".
4	CAN communication circuit check 1) Turn ignition switch to OFF position. 2) Disconnect connectors of BCM and keyless start control module. 3) Check CAN communication circuit between BCM and keyless start control module for open, short and high resistance. <i>Is each CAN communication circuit in good condition?</i>	Go to Step 5.	Repair circuit.
5	CAN communication circuit check 1) Disconnect connectors of all control modules communicating by means of CAN. 2) Check CAN communication circuit between control modules other than Step 4 for open, short and high resistance. <i>Is each CAN communication circuit in good condition?</i>	Go to Step 6.	Repair circuit.
6	Key indicator light operation check 1) Connect connectors of disconnected control modules communicating by means of CAN. 2) Push ignition knob switch of steering lock unit. <i>Does key indicator light turn ON?</i>	Go to Step 7.	Check keyless start control module power and ground circuit. If circuit is OK, substitute a known-good keyless start control module and recheck.

10B-29 Body Electrical Control System:

Step	Action	Yes	No
7	DTC check of BCM 1) Disconnect connector of any one of control module other than BCM. 2) Recheck DTC for BCM. <i>Is DTC U1144 (No.1144) detected?</i>	Disconnect connectors of control modules other than the one whose connector is disconnected in Step 1) one by one and check that DTC U1144 is detected by BCM each time connector is disconnected. When DTC U1144 is not detected by BCM while checking in this way, go to description under "NO" below. If DTC U1144 is detected by BCM even when connectors of all control modules that use CAN communication with BCM are disconnected, substitute a known-good BCM and recheck.	Check power and ground circuit of control module disconnected in Step 1). If circuit is OK, substitute a known-good control module disconnected in Step 1) and recheck.

Inspection of BCM and Its Circuits


BCM and its circuits can be checked at BCM wiring couplers by measuring voltage and resistance.

⚠ CAUTION

BCM cannot be checked by itself. It is strictly prohibited to connect voltmeter or ohmmeter to BCM with couplers disconnected from it.

Voltage Check

- 1) Disconnect negative cable (–) at battery.
- 2) Remove steering column hole cover from instrument panel.
- 3) Check voltage at each terminal number of couplers connected.
For connector and terminal number, refer to “Connector Layout Diagram of BCM”.

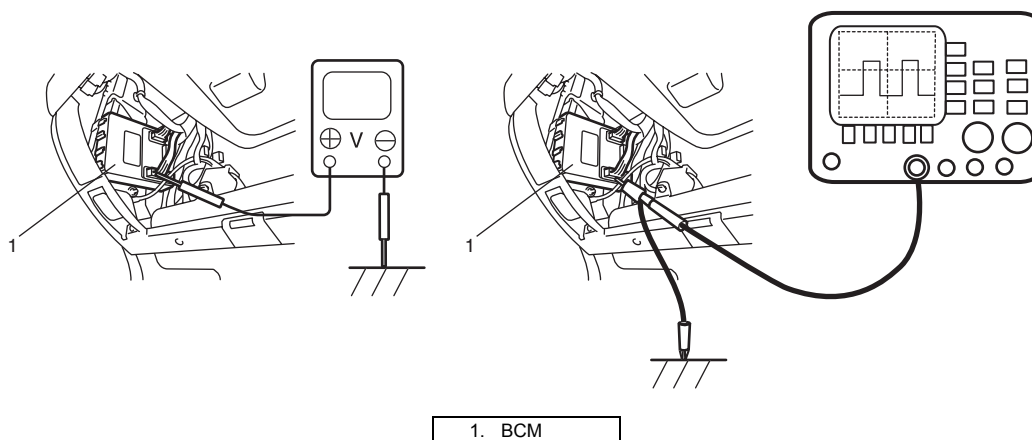

I5JB0AA20012-01

NOTE

- As each terminal voltage is affected by the battery voltage, confirm that it is 11 V or more when ignition switch is ON.
- Voltage with asterisk (*) can not be measured by voltmeter because it is pulse signal. Check it with oscilloscope if necessary.

BCM connector “G30”

Terminal	Circuit	Normal voltage	Condition
G30-1	Ignition switch signal (IG ON)	10 – 14 V	Ignition switch is at ON position
		0 V	Ignition switch is at any position other than ON position
G30-2	Power source (ACC)	10 – 14 V	Ignition switch is at ACC or ON position
		0 V	Ignition switch is at any position other than ACC or ON position
G30-3	Key reminder switch	10 – 14 V	Ignition key is inserted to ignition key cylinder
		0 V	Ignition key is pulled out from ignition key cylinder
G30-4	Serial communication line for HVAC control module	*0 – 1 V ↑↓ 10 – 14 V	Refer to “Reference waveform No. 1: ”
G30-5	Serial communication line for information display and HVAC control module	*0 – 1 V ↑↓ 10 – 14 V	Refer to “Reference waveform No. 2: ”
G30-6	Rear wiper switch	*0 – 1 V ↑↓ 10 – 14 V	Refer to “Reference waveform No. 3: ”
		0 V	Ignition switch is at ON position and rear wiper switch is at ON position

10B-31 Body Electrical Control System:

Terminal	Circuit	Normal voltage	Condition
G30-7	Rear wiper INT switch	*0 – 1 V ↑↓ 10 – 14 V	Refer to “Reference waveform No. 3: ”
		0 V	Ignition switch is at ON position and rear wiper switch is at INT position
G30-8	—	—	—
G30-9	Front fog light switch (if equipped)	10 – 14 V	Lighting switch is at CLEARANCE position and front fog light switch is at ON position
		0 V	Lighting switch is at CLEARANCE position and front fog light switch is at OFF position
G30-10	Lighting switch (HEAD)	10 – 14 V	Lighting switch is at any position other than HEAD position
		0 V	Lighting switch is at HEAD position
G30-11	Lighting switch (CLEARANCE)	10 – 14 V	Lighting switch is at OFF position
		0 V	Lighting switch is at any position other than OFF position
G30-12	Ground for BCM	0 V	Ignition switch is at each position
G30-13	—	—	—
G30-14	—	—	—
G30-15	—	—	—
G30-16	Theft deterrent light	10 – 14 V	Theft deterrent light is not lit up
		0 V	Theft deterrent light is lit up
G30-17	—	—	—
G30-18	—	—	—
G30-19	Serial communication line of SDM	*0 – 1 V ↑↓ 4 – 6 V	Refer to “Reference waveform No. 4: ”
G30-20	—	—	—
G30-21	Lighting switch (AUTO) (if equipped)	10 – 14 V	Lighting switch is at other than AUTO position
		0 V	Lighting switch is at AUTO position
G30-22	Vehicle speed signal output (if equipped)	*0 – 1 V ↑↓ 10 – 14 V	Refer to “Reference waveform No. 5: ”
G30-23	—	—	—
G30-24	—	—	—

BCM connector “G31”

Terminal	Circuit	Normal voltage	Condition
G31-1	CAN communication line (high) for each control module	*2.5 – 3.6 V	Refer to “Reference waveform No. 6: ”
G31-2	CAN communication line (high) for DLC	*2.5 – 3.6 V	
G31-3	CAN communication line (low) for each control module	*1.6 – 2.5 V	
G31-4	CAN communication line (low) for DLC	*1.6 – 2.5 V	
G31-5	—	—	—
G31-6	—	—	—
G31-7	Brake fluid level switch	*5 – 12 V	Refer to “Reference waveform No. 7: ”
		0 V	Ignition switch is at ON position and brake fluid level is lower than MIN level
G31-8	Parking brake switch	*5 – 12 V	Refer to “Reference waveform No. 7: ”
		0 V	Ignition switch is at ON position and parking brake lever is pulled up
G31-9	Oil pressure switch	*6 – 14 V	Refer to “Reference waveform No. 8: ”
		0 V	Ignition switch is at ON position and engine is at stop
G31-10	Generator “L” terminal	10 – 14 V	Engine is running
		0 V	Ignition switch is at ON position

Terminal	Circuit	Normal voltage	Condition
G31-11	—	—	—
G31-12	Tail light relay control	10 – 14 V	Lighting switch is at OFF position
		0 V	Lighting switch is at any position other than OFF position
G31-13	Rear wiper control	10 – 14 V	Ignition switch is at ON position and rear wiper is not in operation
		0 V	Ignition switch is at ON position and rear wiper is in operation
G31-14	Rear end door window defogger control	10 – 14 V	Engine is running and rear end door window defogger is not in operation
		0 V	Engine is running and rear end door window defogger is in operation
G31-15	Horn control	10 – 14 V	Horn is not in operation
		0 V	Horn is in operation
G31-16	DRL control (if equipped)	10 – 14 V	Engine is running and lighting switch is at CLEARANCE or OFF position
		0 V	Engine is running and lighting switch is at HEAD position
G31-17	Front fog light control (if equipped)	10 – 14 V	Lighting switch is at CLEARANCE position and front fog light switch is at OFF position
		0 V	Lighting switch is at CLEARANCE position and front fog light switch is at ON position
G31-18	Power supply for keyless entry receiver (if equipped)	4 – 6 V	Ignition switch is at ON position
G31-19	Signal for keyless entry receiver (if equipped)	*0 – 1 V ↑↓ 4 – 6 V	Refer to “Reference waveform No. 9: ”
G31-20	Ground for keyless entry receiver (if equipped)	0 V	Ignition switch is at each position
G31-21	Sensor ground for outside air temperature sensor	0 V	Ignition switch is at each position
G31-22	Sensor ground for auto light sensor (if equipped)	0 V	Ignition switch is at each position
G31-23	Auto-on headlight sensor (if equipped)	0.2 V	Ignition switch is at ON position and cover auto-on headlight sensor lens by hand
		3 – 4 V	Ignition switch is at ON position and light auto-on headlight sensor lens by 100 W lights
G31-24	Outside air temperature sensor	About 1.5 V	Ignition switch is at ON position and outside air temperature approx. 20 °C (68 °F)
G31-25	Power supply for auto light sensor (if equipped)	4 – 6 V	Ignition switch is at ON position
G31-26	Manual door lock switch (Unlock)	4 – 6 V	Manual door lock switch is at any position other than unlock position
		0 V	Manual door lock switch is at unlock position
G31-27	Manual door lock switch (Lock)	4 – 6 V	Manual door lock switch is at any position other than lock position
		0 V	Manual door lock switch is at lock position.
G31-28	Power/Normal mode switch (A/T model)	4 – 6 V	Ignition switch is at ON position and Power/Normal mode switch is at ON position
		0 V	Ignition switch is at ON position and Power/Normal mode switch is at OFF position
G31-29	—	—	—
G31-30	—	—	—
G31-31	—	—	—
G31-32	—	—	—
G31-33	—	—	—
G31-34	Turn signal / hazard warning relay control	0 V	Hazard warning switch is at ON position
		10 – 14 V	Hazard warning switch is at OFF position
G31-35	Serial communication line of DLC	7 – 12 V	Ignition switch is at ON position

10B-33 Body Electrical Control System:

Terminal	Circuit	Normal voltage	Condition
G31-36	Driver side door key cylinder switch (Unlock)	10 – 14 V	Driver side key cylinder switch is at any position other than unlock position
		0 V	Driver side key cylinder switch is at unlock position
G31-37	Driver side door key cylinder switch (lock)	10 – 14 V	Driver side key cylinder switch is at any position other than lock position
		0 V	Driver side key cylinder switch is at lock position
G31-38	Door switch (rear end door and other than driver side door)	10 – 14 V	Rear right and left side door, passenger side door and rear end door are closed
		0 V	Any one of the door is opened (except driver side door)
G31-39	Driver side door switch	10 – 14 V	Driver side door is closed
		0 V	Driver side door is opened
G31-40	Driver seat belt switch	*5 – 12 V	Refer to “Reference waveform No. 7: ”
		0 V	Ignition switch is at ON position and driver seat belt is unfastened


BCM connector “G32”

Terminal	Circuit	Normal voltage	Condition
G32-1	Ground for BCM	0 V	Ignition switch is at each position
G32-2	Rear door lock actuator control (Unlock)	10 – 14 V	Unlock signal is output for rear door lock actuators
		0 V	Unlock signal is not output for rear door lock actuators
G32-3	Door lock actuator control (Lock)	10 – 14 V	Lock signal is output for all door lock actuators
		0 V	Lock signal is not output for all door lock actuators
G32-4	—	—	—
G32-5	Power supply for door lock actuator	10 – 14 V	Ignition switch is at each position
G32-6	—	—	—
G32-7	Rear end door lock actuator control (Unlock)	10 – 14 V	Unlock signal is output for rear end door lock actuator
		0 V	Unlock signal is not output for rear end door lock actuator
G32-8	Driver side door lock actuator control (Unlock)	10 – 14 V	Unlock signal is output for driver side door lock actuator
		0 V	Unlock signal is not output for driver side door lock actuator
G32-9	Passenger side door lock actuator control (Unlock)	10 – 14 V	Unlock signal is output for passenger side door lock actuator
		0 V	Unlock signal is not output for passenger side door lock actuator
G32-10	—	—	—
G32-11	—	—	—
G32-12	Headlight high beam monitor signal	10 – 14 V	Lighting switch is at HEAD position and dimmer switch is at low beam position
		0 V	Lighting switch is at HEAD position and dimmer switch is at high beam position
G32-13	Power supply for BCM	10 – 14 V	Ignition switch is at each position
G32-14	—	—	—
G32-15	Interior light control	10 – 14 V	Interior light switch is at DOOR position and interior light is not lit up
		0 V	Interior light switch is at DOOR position and interior light is lit up

Reference waveform No. 1


HVAC control module serial communication signal (1)

Measurement terminal	CH1: "G30-4" to "G30-12"
Oscilloscope setting	CH1: 5 V / DIV TIME: 2 ms / DIV
Measurement condition	Ignition switch is at ON position

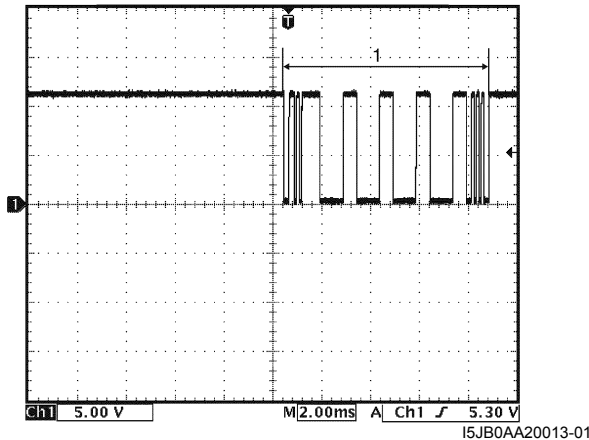**Reference waveform No. 2**


HVAC control module and information display serial communication signal (1)

Measurement terminal	CH1: "G30-5" to "G30-12"
Oscilloscope setting	CH1: 5 V/DIV TIME: 10 ms/DIV
Measurement condition	Ignition switch is at ON position

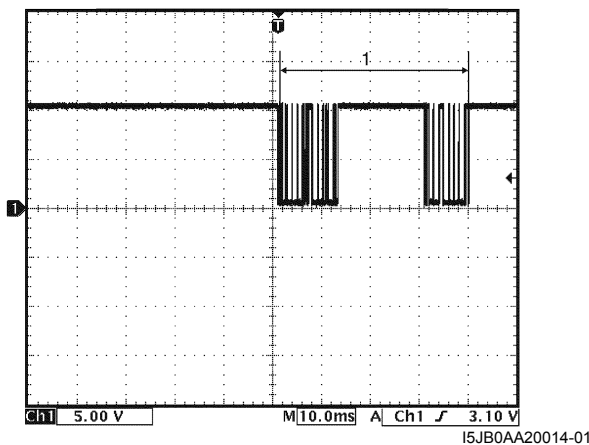**Reference waveform No. 3**


Rear wiper LOW or INT signal (1)

Measurement terminal	Rear wiper LOW signal: CH1: "G30-6" to "G30-12" Rear wiper INT signal: CH1: "G30-7" to "G30-12"
Oscilloscope setting	CH1: 5 V/DIV TIME: 10 ms/DIV
Measurement condition	Rear wiper LOW signal: <ul style="list-style-type: none"> Ignition switch is at ON position, rear wiper switch is at any position other than LOW position Rear wiper INT signal: <ul style="list-style-type: none"> Ignition switch is at ON position, rear wiper switch is at any position other than INT position

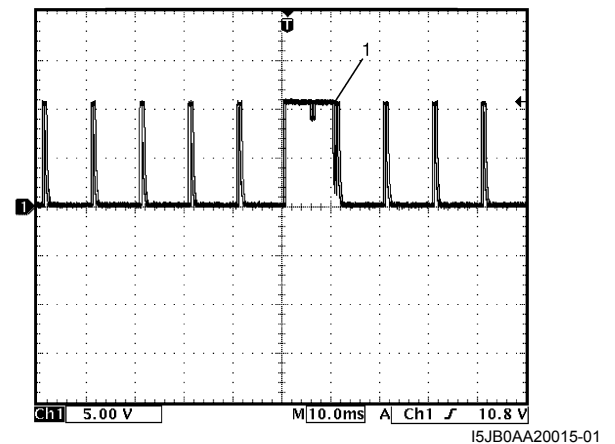**Reference waveform No. 4**

SDM communication signal (1)


Measurement terminal	CH1: "G30-19" to "G30-12"
Oscilloscope setting	CH1: 2 V/DIV TIME: 400 ms / DIV
Measurement condition	Ignition switch is at ON position

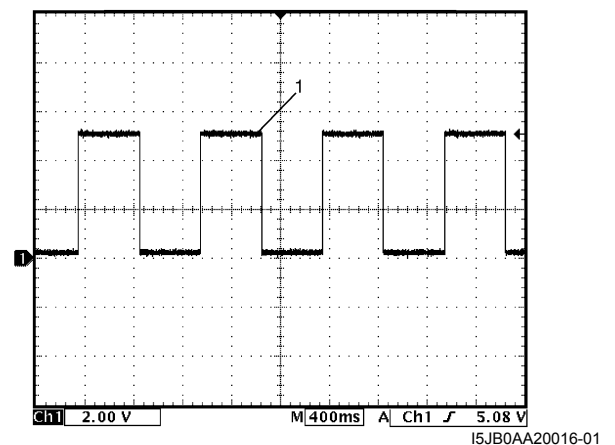

Reference waveform No. 5

Vehicle speed pulse output signal (1)


Measurement terminal	CH1: "G30-22" to "G30-12"
Oscilloscope setting	CH1: 5 V / DIV TIME: 200 ms / DIV
Measurement condition	Vehicle speed at 10 km/h (6 mph)

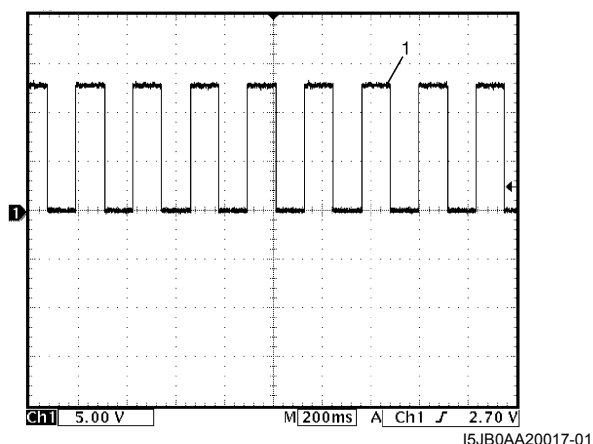

Reference waveform No. 6

CAN communication signal

Measurement terminal	CAN communication signal for each control module CH1: "G31-1" to "G30-12" CH2: "G31-3" to "G30-12" CAN communication signal for DLC CH1: "G31-2" to "G30-12" CH2: "G31-4" to "G30-12"
Oscilloscope setting	CH1: 1 V / DIV CH2: 1 V / DIV TIME: 40 μ s / DIV
Measurement condition	Ignition switch is at ON position

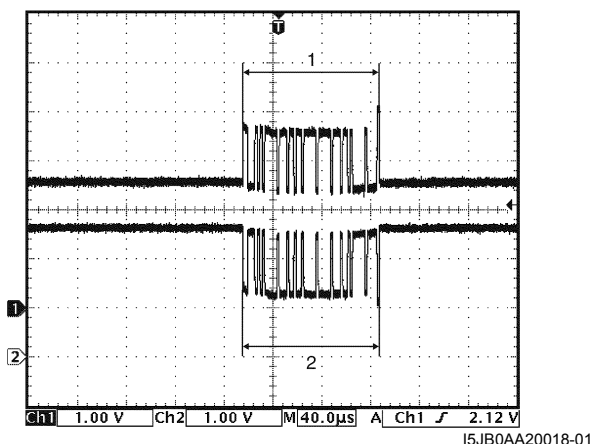


1. CAN communication line signal (High)
2. CAN communication line signal (Low)

Reference waveform No. 7

Brake fluid level, parking brake or driver seat belt switch signal (1)


Measurement terminal	Brake fluid level switch signal: CH1: "G31-7" to "G30-12" Parking brake switch signal: CH1: "G31-8" to "G30-12" Driver side seat belt switch signal: CH1: "G31-40" to "G30-12"
Oscilloscope setting	CH1: 2 V / DIV TIME: 20 ms / DIV
Measurement condition	Brake fluid level switch: <ul style="list-style-type: none"> Ignition switch is at ON position and brake fluid level is at specified level Parking brake switch: <ul style="list-style-type: none"> Ignition switch is at ON position and parking brake lever is released. Driver side seat belt switch: <ul style="list-style-type: none"> Ignition switch is at ON position and driver seat belt is fastened

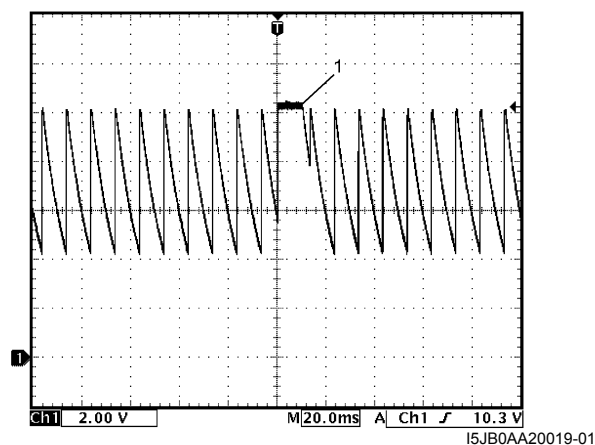

Reference waveform No. 8


Oil pressure switch signal (1)

Measurement terminal	CH1: "G31-9" to "G30-12"
Oscilloscope setting	CH1: 2 V / DIV TIME: 20 ms / DIV
Measurement condition	Engine is running and oil pressure is in normal condition

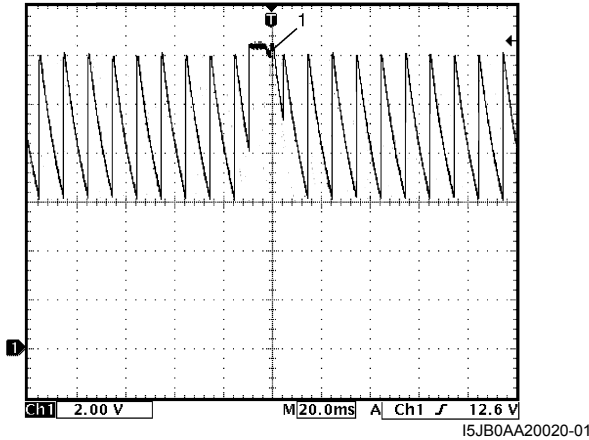**Reference waveform No. 9**

Keyless entry receiver signal (1)


Measurement terminal	CH1: "G31-19" to "G30-12"
Oscilloscope setting	CH1: 2 V / DIV TIME: 200 ms / DIV
Measurement condition	Lock or unlock button of keyless entry transmitter is pushed

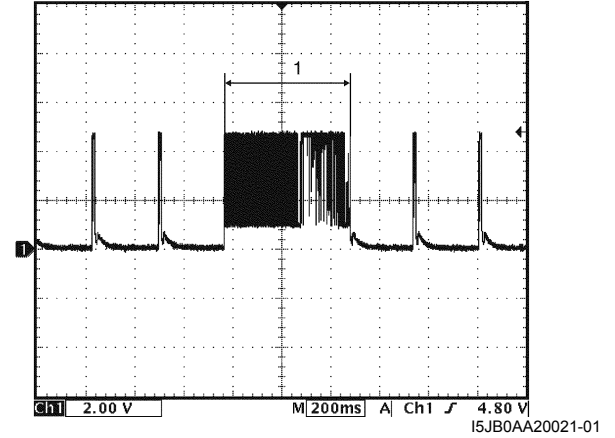**Repair Instructions****BCM Removal and Installation**

S6JB0BA206001

Removal

- 1) Disconnect negative cable from battery.
- 2) Remove steering column hole cover (1).
- 3) Disconnect connectors from BCM.
- 4) Remove BCM (2).

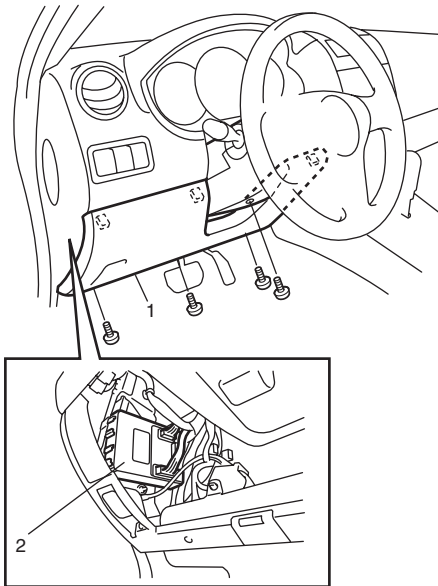

I5JB0AA20022-01

Installation

Reverse removal procedure for installation, noting following point.

- Connect connectors securely until it clicks.

Outside Air Temperature Sensor Removal and Installation

S6JB0BA206002

For removal and installation, refer to "Outside Air Temperature Sensor Removal and Installation (If Equipped)" in Section 9C".

Outside Air Temperature Sensor Inspection

S6JB0BA206003

For inspection, refer to "Outside Air Temperature Sensor Inspection (If Equipped)" in Section 9C".

DRL Function Setting Procedure

S6JB0BA206004

DRL is controlled by BCM which has a function to set operable / non-operable mode of DRL. With a new BCM, its DRL is set to the non-operable mode.

Therefore, when BCM has been replaced in the country where DRL operation is required by the statutory regulation, set DRL to the operable mode according to the procedure described below.

Also, performing the same procedure when DRL is in the operable mode will change DRL setting to the non-operable mode.

- 1) Turn ignition switch to ON position.
- 2) Perform Steps a) through f) described below within 15 seconds after Step 1).
 - a) Turn lighting switch to CLEARANCE position.

- b) Turn lighting switch to OFF position.
- c) Repeat Steps a) and b) five times.
- d) Turn lighting switch to HEAD position.
- e) Turn lighting switch to OFF position.
- f) Repeat Steps a) and e) five times.

- 3) After Step f), buzzer sounds twice which indicates that DRL has been set to operable mode.

NOTE

When DRL setting has been changed from operable mode to non-operable mode, buzzer sounds once.


- 4) After confirming buzzer, turn ignition switch to OFF position.


Special Tools and Equipment

Special Tool

S6JB0BA208001

SUZUKI scan tool

This kit includes following items. 1. Tech 2, 2. PCMCIA card, 3. DLC cable, 4. SAE 16/19 adapter, 5. Cigarette cable, 6. DLC loop back adapter, 7. Battery power cable, 8. RS232 cable, 9. RS232 adapter, 10. RS232 loop back connector, 11. Storage case, 12. 

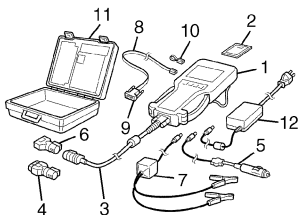

Immobilizer Control System

Precautions

Precautions in Diagnosing Troubles

S6JB0BA300001

- Before confirming the diagnostic trouble code (DTC), do not disconnect connector from ECM, battery cable from battery, ground wire harness, or main fuse. Such disconnection will erase DTC stored in ECM.
- DTC stored in ECM memory can be checked as well as cleared by using SUZUKI scan tool. Before using SUZUKI scan tool, read its operator's manual carefully to know how to use it and what functions are available.
- Be sure to read "Precautions for Electrical Circuit Service in Section 00" before inspection.
- Communication of ECM, BCM, combination meter, TCM, keyless start control module (if equipped), ABS/ESP® control module, 4WD control module (if equipped), Steering angle sensor (if equipped) and DLC is established by CAN (Computer Area Network). (For more detail of CAN communication, refer to "CAN Communication System Description in Section 1A") Therefore, handle CAN communication lines with care referring to "Precaution for CAN Communication System in Section 00".

Precaution in Replacing ECM

S6JB0BA300002

- If ECM is replaced with new or used one without the functionality for the immobilizer control system, the engine will not be started. In case of the above, check if the newly installed ECM has the functionality for the immobilizer control system referring to its part number.
- After ECM is replaced with new one or used one, the transponder code in the transponder built in the ignition key has to be registered with ECM. Or, the engine cannot be started up. For the registration procedure, refer to "Procedure after ECM Replacement".

Precautions in Handling Immobilizer Control System


S6JB0BA300003

- Do not turn ON ignition switch with ignition key in contact with another one or quite close to another one. Or, the immobilizer control system may detect some abnormal condition and prevent the engine from starting.



I3RH0AA30001-01


- Do not turn ON ignition switch by using ignition key with any type of metal (1) wrapped its grip or in contact with it. Or, the immobilizer control system may detect some abnormal condition and prevent the engine from starting.

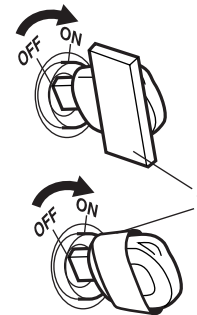

I3RH0AA30002-01


10C-2 Immobilizer Control System:

- Do not leave ignition key in a place where temperature is high. High temperature may cause damage to the transponder built in the ignition key.

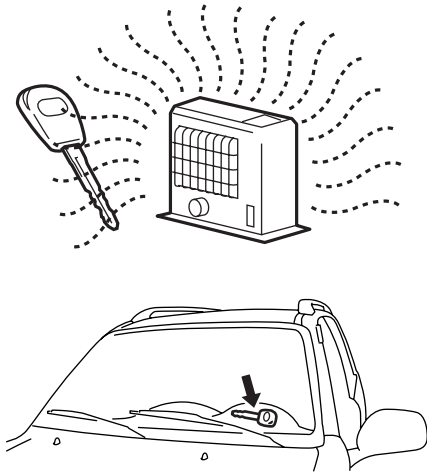

I3RH0AA30003-01

- Do not turn ignition switch to ON position by bringing radio antenna close to coil antenna. Or, the immobilizer control system may detect some abnormal condition and prevent the engine from starting.

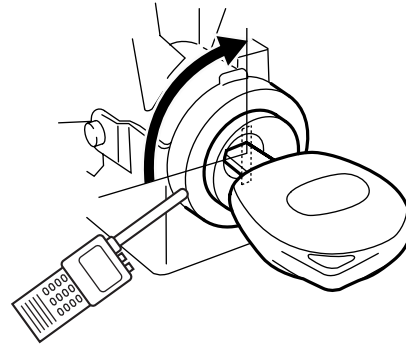

I3RH0AA30004-01

General Description

Immobilizer Control System Introduction

S6JB0BA301001

The immobilizer control system is an anti-theft device that immobilizes the vehicle. It stops the engine from working and prevents the vehicle from being stolen. It mainly consists of the following components.

- Engine Control Module (ECM)
- Immobilizer control module (ICM) with the built-in coil antenna
- Ignition key with the built-in transponder

A code called the transponder code is memorized in the transponder. And, the code is registered with ECM. Basically, when the ignition switch is turned ON, ECM reads the code by the coil antenna. Then, if the code in transponder in the ignition key does not match with the one registered with ECM, ECM stops the operation of the fuel injection so as not to start up the engine and turns the immobilizer indicator light ON and OFF using CAN communication lines. (In addition to the above operation, ECM also turns the immobilizer indicator light ON and OFF when some trouble is detected in the keyless start system.)

On-Board Diagnostic System Description (Self-diagnosis Function)

S6JB0BA301003

ECM diagnoses if there is any trouble with the immobilizer control system. The diagnostic information is stored as the diagnostic trouble code (DTC) in ECM. To read the diagnostic information, use SUZUKI scan tool referring to "Diagnostic Trouble Code (DTC) Check".


With the ignition switch turned ON (but the engine at stop) regardless of the condition of the engine and emission control system, ECM indicates whether there is any trouble with the immobilizer control system or not by either lighting ON or flashing ON and OFF the immobilizer indicator light.

Immobilizer indicator light lights ON:

No trouble exists in the immobilizer control system. (After starting up the engine, the light turns OFF.)

Immobilizer indicator light flashes ON and OFF:

There is some trouble in the immobilizer control system or in the keyless start system. Its diagnostic information is stored in ECM.

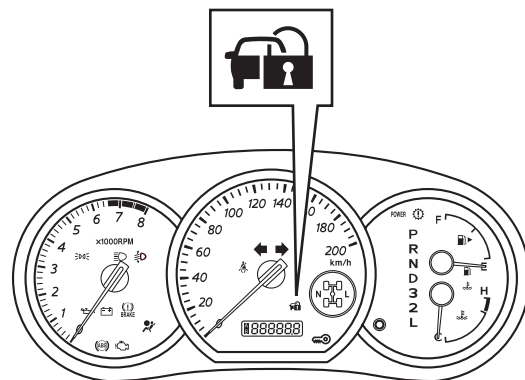

I5JB0AA30002-01


Schematic and Routing Diagram

Immobilizer Control System Wiring Circuit Diagram

S6JB0BA302001

NOTE

For more details about power supply and ground wire circuits for ECM, BCM, ABS/ESP® control module, keyless start control module and combination meter, refer to “System Circuit Diagram in Section 9A”.

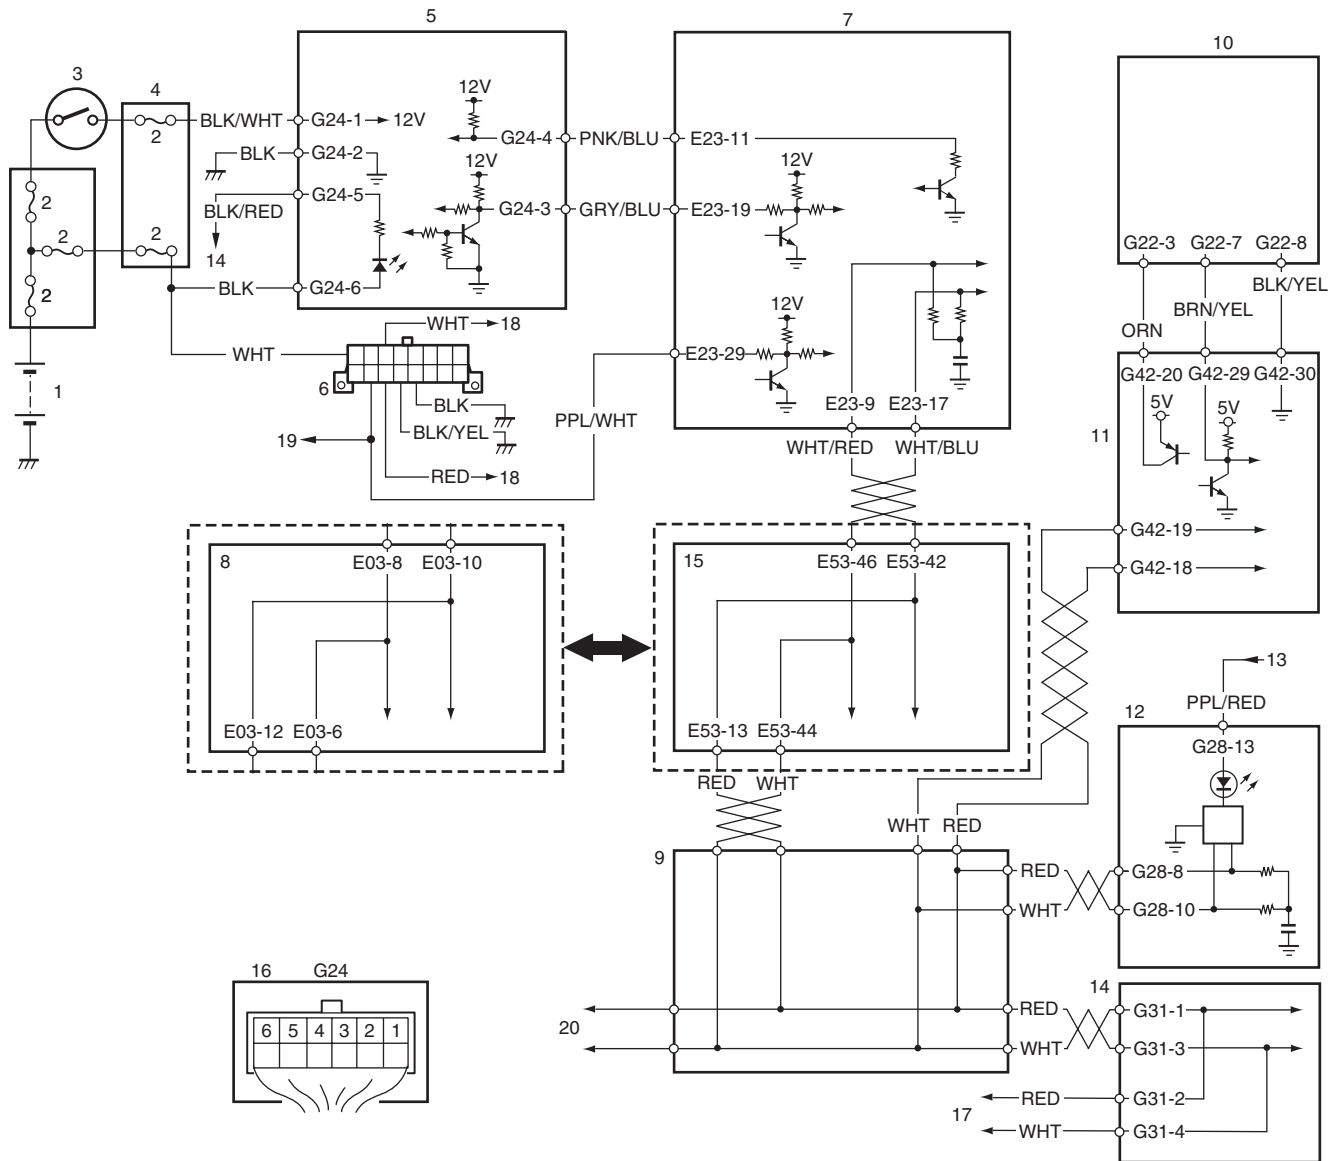


I5JB0DA30001-02

1. Battery	6. Data link connector (DLC)	11. Keyless start control module	16. Immobilizer control module (ICM) connector (harness side view)
2. Fuse	7. ECM	12. Combination meter	17. To DLC
3. Ignition switch	8. ABS control module	13. From fuse	18. To BCM
4. Junction block assembly	9. Junction connector	14. BCM	19. To BCM and ABS/ESP® control module
5. Immobilizer control module (ICM)	10. Steering lock unit	15. ESP® control module (Vehicle equipped with ESP® system)	20. To TCM, 4WD control module and steering angle sensor (if equipped)

Component Location

Immobilizer Control System Components Location

S6JB0BA303001

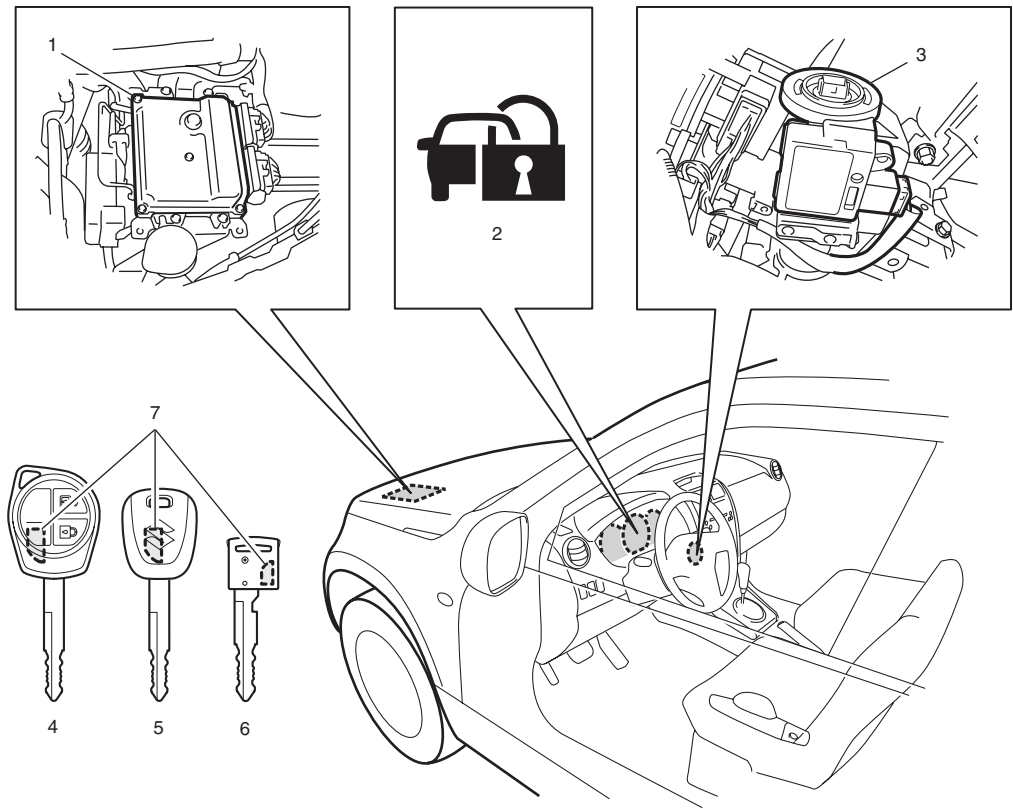


I5JB0AA30001-01

1. ECM	5. Ignition key without keyless entry system
2. Immobilizer indicator light	6. Ignition key with keyless start system
3. Immobilizer control module (ICM)	7. Transponder
4. Ignition key with keyless entry system	

Diagnostic Information and Procedures

Immobilizer Control System Check

S6JB0BA304001

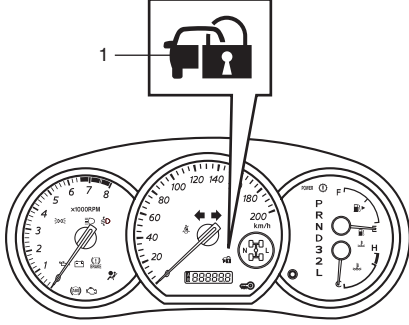Step	Action	Yes	No
1	Immobilizer indicator light ON check 1) Turn ignition switch to ON position using ignition key. <i>Does immobilizer indicator light (1) come on?</i>  <p style="text-align: right; font-size: small;">I5JB0AA30004-01</p>	Go to Step 2.	Check if DTC P1636 and/or P1638 are detected by ECM referring to “Diagnostic Trouble Code (DTC) Check”. If detected, perform the troubleshooting referring to the corresponding flowchart in this section. If not detected, go to “Immobilizer Indicator Light Does Not Come ON with Ignition Switch ON and Engine Stop”.
2	Immobilizer indicator light flash check <i>Does immobilizer indicator light flash on and off continuously in Step 1?</i>	Check what DTC is detected by ECM referring to “Diagnostic Trouble Code (DTC) Check”. Then, perform the troubleshooting referring to the corresponding flowchart in this section.	Go to Step 3.
3	Engine start check 1) Start engine using ignition key. <i>Does engine start?</i>	Go to Step 4.	Perform “Engine and Emission Control System Check in Section 1A”.
4	Immobilizer indicator light remain ON check 1) Check if immobilizer indicator light remains ON after engine start. <i>Does immobilizer indicator light remain ON after engine start?</i>	Go to “Immobilizer Indicator Light Remains ON after Engine Start”.	Immobilizer control system is in good condition. Then, go to “Keyless Start System Check in Section 10E” for the vehicle with keyless start system.

Diagnostic Trouble Code (DTC) Check

S6JB0BA304002


NOTE

To know how to use SUZUKI scan tool in detail, refer to its operator's manual.

- 1) Turn the ignition switch to OFF position.
- 2) Connect SUZUKI scan tool to data link connector (DLC) (1) located under instrument panel at driver's seat side.

Special tool

(A): SUZUKI scan tool

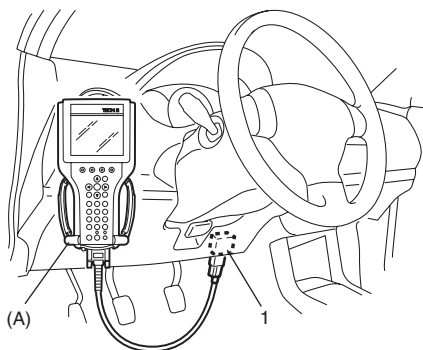

I4RS0BA30003-03

- 3) Turn the ignition switch to ON position.
- 4) Check if any DTC is stored in ECM according to the instructions displayed on SUZUKI scan tool.
- 5) After completing the check, turn ignition switch to OFF position, and then disconnect SUZUKI scan tool from DLC.

Diagnostic Trouble Code (DTC) Clearance

S6JB0BA304003


NOTE

To know how to use SUZUKI scan tool in detail, refer to its operator's manual.

- 1) Turn the ignition switch to OFF position,
- 2) Connect SUZUKI scan tool to data link connector (DLC) (1) located under instrument panel at driver's seat side.

Special tool

(A): SUZUKI scan tool

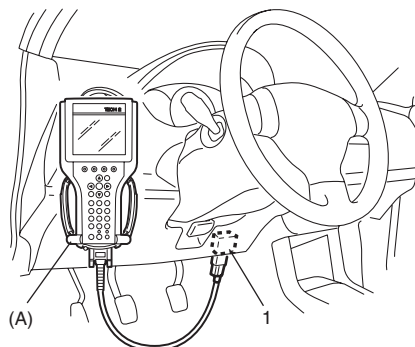

I4RS0BA30003-03

- 1) Turn the ignition switch to ON position.
- 2) Clear DTC(s) according to the instructions displayed on SUZUKI scan tool.
- 3) After completing the clearance, turn the ignition switch to OFF position, and then disconnect SUZUKI scan tool from DLC.

Diagnostic Trouble Code (DTC) Table

S6JB0BA304004

ECM

NOTE

ECM detects diagnostic trouble code (DTC). Immobilizer control module (ICM) does not.

DTC No.	Detecting Item	Detecting Condition	Immobilizer Indicator Light
P1614	Transponder response error	Transponder code in the transponder built in the ignition key cannot be read through immobilizer control module (ICM).	Flash
P1615	Steering lock unit communication error (for vehicle with keyless start system)	<ul style="list-style-type: none"> While registering the transponder code in the transponder built in the ignition key in ECM, the keyless start control module sent a signal to ECM indicating that the ID code could not be registered. The ID code could not be registered in the keyless start control module or ECM. 	Flash
P1616	Unregistered keyless start control module (for vehicle with keyless start system)	ECM detects different ID codes registered in ECM and keyless start system.	Flash
P1618	Keyless start control module CAN communication error (for vehicle with keyless start system)	Reception error of communication data for keyless start control module is detected for longer than specified time continuously.	Flash
P1621	Immobilizer communication line error	Communication error between immobilizer control module (ICM) and ECM is detected by ECM.	Flash
P1622	EEPROM read/write error	EEPROM in ECM is corrupted.	Flash
P1623	Unregistered transponder	Transponder code in the transponder built in the ignition key is invalid.	Flash
P1625	Immobilizer antenna error	Immobilizer control module (ICM) is faulty.	Flash
P1636	Immobilizer information registration failure	Communication error between ECM and BCM is detected by ECM.	No operation
P1638	Immobilizer information mismatched	<ul style="list-style-type: none"> Communication error between ECM and BCM is detected by ECM. Wrong ECM or BCM is used. 	No operation

NOTE

If any DTC other than the above DTCs is detected, refer to "DTC Table in Section 1A".

Scan Tool Data

S6JB0BA304005

The data listed below is the standard data obtained from the normal vehicle by using SUZUKI scan tool. Those are output from ECM. Use them as reference.

Scan Tool Data	Vehicle Condition	Normal Data
NUMBER OF LEARNT KEY	Ignition switch at ON position	0 – 4
INPUT YEAR	Ignition switch at ON position	2004 or later
INPUT MONTH	Ignition switch at ON position	1 – 12

Scan Tool Data Definitions

NUMBER OF LEARNT KEY

0 – 4 PCS: The number of the transponder code in the transponder built in the ignition key that is registered with ECM

NOTE

A maximum of four transponder codes can be registered with ECM. Therefore, the maximal value should be 4.

10C-8 Immobilizer Control System:

INPUT YEAR

20:** The year in which the transponder code in the transponder built in the ignition key is registered with ECM

INPUT MONTH

1 – 12: The month in which the transponder code in the transponder built in the ignition key is registered with ECM

Immobilizer Indicator Light Does Not Come ON with Ignition Switch ON and Engine Stop

S6JB0BA304006

Wiring Diagram

Refer to “Immobilizer Control System Wiring Circuit Diagram”.

Circuit Description

When the ignition switch is turned ON, ECM transmits the indication ON signal to the combination meter to turn ON the immobilizer indicator light in case that there is not any problem with the immobilizer control system. Then, the combination meter turns ON the light. When the engine is started up, ECM transmits the indication OFF signal to the combination meter to turn OFF the light. Then, the combination meter turns OFF the immobilizer indicator light. However, in case that there is some trouble with the immobilizer control system, the immobilizer indicator light flashes ON and OFF when the ignition switch is turned ON.

Troubleshooting

Step	Action	Yes	No
1	Immobilizer indicator light power supply check 1) Turn the ignition switch to ON position. <i>Do other warning lights come ON?</i>	Go to Step 2.	Go to Step 3.
2	Diagnostic Trouble Code (DTC) check 1) Check if DTC P1674, P1675, P1678 and/or P1685 are detected by ECM referring to “Diagnostic Trouble Code (DTC) Check”. <i>Is any of them detected?</i>	Perform the troubleshooting referring to the corresponding flowchart in Section 1A.	Replace combination meter with a known-good one and recheck. If the immobilizer indicator light still remains OFF, replace ECM with a known-good one and recheck.
3	Fuse check 1) Turn the ignition switch to OFF position. 2) Check if any related fuse is blown. <i>Is any fuse blown?</i>	Replace blown fuse, and then check for short.	Go to Step 4.
4	Combination meter power supply wire circuit check 1) Remove combination meter referring to “Combination Meter Removal and Installation in Section 9C”. 2) Check for proper connection at “G28-13” and “G28-15” wire terminals of combination meter connector. 3) If OK, turn the ignition switch to ON position and measure voltage between “G28-13” wire terminal of combination meter and vehicle body ground. <i>Is it 10 – 14 V?</i>	Go to Step 5.	Repair open in power supply wire circuit.
5	Combination meter ground wire circuit check 1) Turn ignition switch OFF position. 2) Measure resistance between “G28-15” terminal of combination meter connector and vehicle body ground. <i>Is resistance 1 Ω or less?</i>	Replace combination meter with a know-good one and recheck. If the immobilizer indicator light still remains OFF, replace ECM with a known-good one and recheck.	Repair open or high resistance in ground wire circuit.

Immobilizer Indicator Light Remains ON after Engine Start

S6JB0BA304007

Wiring Diagram

Refer to "Immobilizer Control System Wiring Circuit Diagram".

Circuit Description

When the ignition switch is turned ON, ECM transmits the indication ON signal to the combination meter to turn ON the immobilizer indicator light in case that there is not any problem with the immobilizer control system. Then, the combination meter turns ON the light. When the engine is started up, ECM transmits the indication OFF signal to the combination meter to turn OFF the light. Then, the combination meter turns OFF the immobilizer indicator light. However, in case that there is some trouble with the immobilizer control system, the immobilizer indicator light flashes ON and OFF when the ignition switch is turned ON.

Troubleshooting

Step	Action	Yes	No
1	Diagnostic Trouble Code (DTC) check 1) Start engine. 2) Check if any DTC is detected by ECM referring to "Diagnostic Trouble Code (DTC) Check". <i>Is any DTC detected?</i>	Go to "Immobilizer Control System Check".	Go to Step 2.
2	CAN communication wire circuits check 1) Check CAN communication wire circuits between combination meter and ECM referring to "DTC U0073: Control Module Communication Bus Off in Section 1A". <i>Are wire circuits in good condition?</i>	Replace combination meter with a known-good one and recheck. If the immobilizer indicator light remains OFF, replace ECM with a known-good one and recheck.	Repair the malfunctioning wire circuit.

DTC P1614: Transponder Response Error**Wiring Diagram**

Refer to "Immobilizer Control System Wiring Circuit Diagram"

Detecting Condition and Trouble Area

Detecting Condition	Trouble Area
Transponder code in the transponder built in the ignition key cannot be read through immobilizer control module (ICM).	<ul style="list-style-type: none"> • Use of the ignition key without the transponder • Use of the unregistered ignition key • Corruption of the transponder in the ignition key • Immobilizer control module (ICM) faulty • ECM faulty

Troubleshooting

Step	Action	Yes	No
1	Diagnostic Trouble Code (DTC) confirmation 1) Clear DTC(s) referring to "Diagnostic Trouble Code (DTC) Clearance". 2) Turn the ignition switch to OFF position. 3) Check if any DTC is detected referring to "Diagnostic Trouble Code (DTC) Check". <i>Is DTC P1614 still detected?</i>	Go to Step 2.	The troubleshooting is completed.
2	Diagnostic Trouble Code (DTC) check 1) Check if any DTC other than P1614 is detected referring to "Diagnostic Trouble Code (DTC) Check". <i>Is any DTC other than P1614 is detected?</i>	Perform troubleshooting referring to the corresponding flowchart in this section, and then go to Step 3.	Go to Step 3.
3	Registration of the ignition key in use with ECM and Diagnostic Trouble Code (DTC) Check 1) There is a possibility that the unregistered ignition key is used. Therefore, register the transponder code in the transponder in the ignition key with ECM referring to "Registration of the Ignition Key". 2) Check if DTC P1614 is detected referring to "Diagnostic Trouble Code (DTC) Check". <i>Is DTC P1614 detected?</i>	Go to Step 4.	The troubleshooting is completed.
4	Registration of the new ignition key with ECM and Diagnostic Trouble Code (DTC) check 1) The transponder in the ignition key is corrupted or the ignition key without the transponder is used. Therefore, prepare the new ignition key. 2) Register the transponder code in the transponder in the new ignition key with ECM referring to "Registration of the Ignition Key". 3) Check if that DTC P1614 is detected referring to "Diagnostic Trouble Code (DTC) Check". <i>Is DTC P1614 detected?</i>	Go to Step 5.	The troubleshooting is completed.
5	Immobilizer control module (ICM) check 1) Check immobilizer control module (ICM) referring to "Inspection of Immobilizer Control Module (ICM) and Its Circuit". <i>Is immobilizer control module (ICM) normal?</i>	Replace ECM with new one referring to "Engine Control Module (ECM) Removal and Installation in Section 1C", and then perform "Procedure after ECM Replacement".	Replace immobilizer control module (ICM) with new one referring to "Immobilizer Control Module (ICM) Removal and Installation".

DTC P1615: Steering Lock Unit Communication Error (for Vehicle with Keyless Start System)

S6JB0BA304009

Wiring Diagram

Refer to "Immobilizer Control System Wiring Circuit Diagram"

Circuit Description

When the transponder code in the ignition key is registered in ECM, the remote controller ID code is registered in both ECM and keyless start control module at the same time. This DTC is detected only in case that the remote controller ID code cannot be registered in both ECM and keyless start control module when the transponder code in the ignition key is registered in ECM.

NOTE

- Perform the troubleshooting for DTC P1618 first if both DTC P1615 and P1618 are detected at the same time.
- After replacing ECM, be sure to register the transponder code in the ignition key with ECM referring to "Registration of the Ignition Key". After replacing the keyless start control module of the vehicle equipped with the keyless start system, be sure to perform "Registration of the Ignition Key".

Detecting Condition and Trouble Area

Detecting Condition	Trouble Area
<ul style="list-style-type: none"> • While registering the transponder code in ECM, the keyless start control module sent a signal to ECM indicating that the remote controller ID code could not be registered. • The remote controller ID code could not be registered in the keyless start control module or ECM. And, the registration of the transponder code in ECM was terminated forcibly. 	<ul style="list-style-type: none"> • Wire circuits between steering lock unit and keyless start control unit open or shorted • CAN communication wire circuits faulty • Steering lock unit faulty • Keyless start control module faulty • ECM faulty

Troubleshooting

Step	Action	Yes	No
1	Diagnostic Trouble Code (DTC) confirmation 1) Clear DTC(s) referring to "Diagnostic Trouble Code (DTC) Clearance". 2) Turn the ignition switch to OFF position. 3) Check if any DTC is detected referring to "Diagnostic Trouble Code (DTC) Check". <i>Is DTC P1615 still detected?</i>	Go to Step 2.	The troubleshooting is completed.
2	Registration of the ignition key 1) Turn the ignition switch to OFF position. 2) Turn the ignition switch to ON position, and register the transponder code in the transponder in the ignition key with ECM referring to "Registration of the Ignition Key". <i>Was it possible to register the ignition key (transponder code) in ECM?</i>	The troubleshooting is completed.	Go to Step 3.
3	Diagnostic Trouble Code (DTC) check 1) Check if any DTC is detected referring to "Diagnostic Trouble Code (DTC) Check". <i>Is any DTC detected?</i>	Go to Step 4.	Replace ECM with a known-good one and recheck.
4	Diagnostic Trouble Code (DTC) check <i>Is any DTC other than P1615 detected in Step 3?</i>	Perform the troubleshooting referring to the corresponding flowchart.	Go to Step 5.

10C-12 Immobilizer Control System:

Step	Action	Yes	No
5	Steering lock unit check 1) Turn on the engine start knob of the keyless start system. <i>Is the engine start knob at ON position?</i>	Replace the steering lock unit with a known-good one and recheck.	Go to Step 6.
6	Steering lock unit operation check 1) Check the steering lock unit for operation referring to "Ignition Switch Inspection in Section 9C". <i>Does the engine start knob operate as specified?</i>	Go to Step 7.	Replace the steering lock unit referring to "Steering Lock Assembly (Ignition Switch) Removal and Installation in Section 6B".
7	Check for open in wire circuits between steering lock unit and keyless start control module 1) Disconnect steering lock unit connector "G22" and keyless start control module connector "G42". 2) Measure resistance at the following connector terminals. <ul style="list-style-type: none">Between "G22-3" terminal of steering lock unit connector and "G42-20" terminal of keyless start control module connector.Between "G22-7" terminal of steering lock unit connector and "G42-29" terminal of keyless start control module connector.Between "G22-8" terminal of steering lock unit connector and "G42-30" terminal of keyless start control module connector. <i>Is each resistance 1 Ω or less?</i>	Go to Step 8.	Repair open or high resistance in malfunctioning wire circuit.
8	Check for short of wire circuits between steering lock unit and keyless start control module 1) Measure resistance at the following connector terminals. <ul style="list-style-type: none">Between "G22-3", "G22-7" and "G22-8" terminal of steering lock unit connector.Between "G42-20", "G42-29" and "G42-30" terminal of keyless start control module. <i>Is each resistance infinity?</i>	Go to Step 9.	Make sure of insulation of each wire circuit.
9	Check for short to ground wire circuit in wire circuits between steering lock unit and keyless start control module 1) Measure resistance at the following connector terminals. <ul style="list-style-type: none">Between "G22-3" terminal of steering lock unit connector and vehicle body ground.Between "G22-7" terminal of steering lock unit connector and vehicle body ground.Between "G22-8" terminal of steering lock unit connector and vehicle body ground.Between "G42-20" terminal of keyless start control module connector and vehicle body ground.Between "G42-29" terminal of keyless start control module connector and vehicle body ground.Between "G42-30" terminal of keyless start control module connector and vehicle body ground. <i>Is each resistance infinity?</i>	Go to Step 10.	Repair short to ground wire circuit in malfunctioning wire circuit.

Step	Action	Yes	No
10	Check for short to power supply wire circuit in wire circuits between steering lock unit and keyless start control module 1) Measure voltage at the following connector terminals with ignition switch turned ON. <ul style="list-style-type: none"> Between "G22-3" terminal of steering lock unit connector and vehicle body ground. Between "G22-7" terminal of steering lock unit connector and vehicle body ground. Between "G22-8" terminal of steering lock unit connector and vehicle body ground. Between "G42-20" terminal of keyless start control module connector and vehicle body ground. Between "G42-29" terminal of keyless start control module connector and vehicle body ground. Between "G42-30" terminal of keyless start control module connector and vehicle body ground. <i>Is each voltage 0 – 1 V?</i>	Replace keyless start control module with a known-good one and recheck. If DTC P1615 is still detected, replace ECM with a known-good one and recheck.	Repair short to power supply wire circuit in malfunctioning wire circuit.

DTC P1616: Unregistered Keyless Start Control Module (for Vehicle with Keyless Start System)

S6JB0BA304010

Wiring Diagram

Refer to "Immobilizer Control System Wiring Circuit Diagram"

Circuit Description

P1616 is detected when ECM detects different ID codes registered in ECM and keyless control module after turning engine start knob to ON position. Normally, when keyless start control module is replaced with new one, ECM automatically registers the applicable code in keyless start control module after turning ignition switch to ON position. However, when keyless start control module is replaced with used one, ECM does not automatically register the applicable code in keyless start control module even if ignition switch is turned to ON position.

Detecting Condition and Trouble Area

Detecting Condition	Trouble Area
ECM detects different ID codes registered in ECM and keyless control module.	<ul style="list-style-type: none"> Keyless start control unit faulty ECM faulty

Troubleshooting

Step	Action	Yes	No
1	Diagnostic Trouble Code (DTC) confirmation 1) Clear DTC(s) referring to "Diagnostic Trouble Code (DTC) Clearance". 2) Turn the ignition switch to OFF position. 3) Check if any DTC is detected referring to "Diagnostic Trouble Code (DTC) Table". <i>Is DTC P1616 still detected?</i>	Go to Step 2.	The troubleshooting is completed.
2	Registration of the ignition key 1) Clear DTC referring to "Diagnostic Trouble Code (DTC) Clearance". 2) Register the transponder code in the transponder in the ignition key with ECM referring to "Registration of the Ignition Key". <i>Was it possible to register the ignition key (transponder code) in ECM?</i>	Go to Step 3.	Go to Step 4.

10C-14 Immobilizer Control System:

Step	Action	Yes	No
3	Keyless start system operation check 1) Start engine using keyless start system. <i>Does engine start?</i>	The troubleshooting is completed.	Check if any DTC is detected by ECM. If detected, perform the troubleshooting referring to the corresponding flowchart.
4	Diagnostic Trouble Code (DTC) check 1) Check ECM for DTC referring to "Diagnostic Trouble Code (DTC) Check". <i>Are DTC P1618 and/or P1615 detected other than P1616?</i>	Go to DTC P1618 troubleshooting.	Go to DTC P1615 troubleshooting.

DTC P1618: Keyless Start Control Module CAN Communication Error (for Vehicle with Keyless Start System)

S6JB0BA304011

Wiring Diagram

Refer to "Immobilizer Control System Wiring Circuit Diagram"

Detecting Condition and Trouble Area

Detecting Condition	Trouble Area
Reception error of communication data for keyless start control module is detected for longer than specified time continuously.	<ul style="list-style-type: none">• CAN communication wire circuits faulty• Steering angle sensor (if equipped) faulty• Keyless start control module faulty• 4WD control module (if equipped) faulty• TCM (if equipped) faulty• BCM faulty• ABS/ESP® control module faulty• Combination meter faulty• ECM faulty

Troubleshooting

Step	Action	Yes	No
1	Diagnostic Trouble Code (DTC) confirmation 1) Clear DTC(s) referring to "Diagnostic Trouble Code (DTC) Clearance". 2) Turn the ignition switch to OFF position. 3) Check if any DTC is detected referring to "Diagnostic Trouble Code (DTC) Check". <i>Is DTC P1618 still detected?</i>	Go to Step 2.	The troubleshooting is completed.
2	Diagnostic Trouble Code (DTC) check in ECM <i>Is any DTC other than P1618 detected in Step 1?</i>	Perform the troubleshooting referring to the corresponding flowchart.	Go to Step 3.
3	Poor connection check at ECM, ABS/ESP® control module and keyless start control module connectors 1) With the ignition key at OFF position, check each connector and wire terminal at ECM, ABS/ESP® control module and keyless control module for secure connection. <i>Is each connector and wire terminal connected securely?</i>	Go to Step 4.	Repair poor connection(s).

Step	Action	Yes	No
4	<p>Check for open and high resistance in CAN communication wire circuits between ABS/ESP® control module and keyless start control module</p> <ol style="list-style-type: none"> 1) Disconnect connector "E03" from ABS control module or "E53" from ESP® control module. 2) Disconnect connector "G42" from keyless start control module. 3) Measure resistance at the following wire terminals. Vehicle equipped without ESP® control module <ul style="list-style-type: none"> • Between "E03-12" wire terminal at ABS connector and "G42-19" wire terminal at keyless start control module connector • Between "E03-6" wire terminal at ABS connector and "G42-18" wire terminal at keyless start control module connector Vehicle equipped with ESP® control module <ul style="list-style-type: none"> • Between "E53-13" wire terminal at ESP® control module connector and "G42-19" wire terminal at keyless start control module connector • Between "E53-44" wire terminal at ESP® control module connector and "G42-18" wire terminal at keyless start control module connector <p><i>Is each resistance 1 Ω or less?</i></p>	Go to Step 5.	Repair open or high resistance in malfunctioning wire circuit.
5	<p>Check for short between CAN communication wire circuits between ABS/ESP® control module and keyless start control module</p> <ol style="list-style-type: none"> 1) Disconnect connector "G31" from BCM connector. 2) Disconnect connector "G28" from combination meter. 3) Measure resistance at the following wire terminals. Vehicle equipped without ESP® control module <ul style="list-style-type: none"> • Between "E03-12" wire terminal at ABS control module connector and "G42-18" wire terminal at keyless start control module connector. Vehicle equipped with ESP® system <ul style="list-style-type: none"> • Between "E53-13" wire terminal at ESP® control module connector and "G42-18" wire terminal at keyless start control module connector <p><i>Is resistance infinite?</i></p>	Go to Step 6.	Repair short between CAN communication wire circuits.
6	<p>Check for short to ground wire circuit in CAN communication wire circuits</p> <ol style="list-style-type: none"> 1) Measure resistance at the following wire terminals. Vehicle equipped without ESP® system <ul style="list-style-type: none"> • Between "E03-6" wire terminal at ABS control module connector and body ground • Between "E03-12" wire terminal at ABS control module connector and body ground Vehicle equipped with ESP® system <ul style="list-style-type: none"> • Between "E53-13" wire terminal at ESP® control module connector and body ground • Between "E53-44" wire terminal at ESP® control module connector and body ground <p><i>Is resistance infinite?</i></p>	Go to Step 7.	Repair short to ground wire circuit in CAN communication wire circuits.

10C-16 Immobilizer Control System:

Step	Action	Yes	No
7	Check for short to power supply wire circuit in CAN communication wire circuits 1) Measure resistance at the following wire terminals with the ignition switch at ON position. Vehicle equipped without ESP® system <ul style="list-style-type: none">Between “E03-6” wire terminal at ABS control module connector and body groundBetween “E03-12” wire terminal at ABS control module connector and body ground Vehicle equipped with ESP® system <ul style="list-style-type: none">Between “E53-13” wire terminal at ESP® control module connector and body groundBetween “E53-44” wire terminal at ESP® control module connector and body ground <i>Is voltage 0 V?</i>	Go to Step 8.	Repair short to power supply wire circuit in CAN communication wire circuits.
8	Check of keyless start control module power and ground wire circuits 1) Check keyless start control module power and ground wire circuits referring to “Keyless Start Control Module Power and Ground Circuit Check in Section 10E”. <i>Are they in normal?</i>	Replace keyless start control module with a known-good one and recheck.	Repair malfunctioning wire circuit.

DTC P1621: Immobilizer Communication Line Error

S6JB0BA304012

Wiring Diagram

Refer to “Immobilizer Control System Wiring Circuit Diagram”

Detecting Condition and Trouble Area

Detecting Condition	Trouble Area
Communication error between immobilizer control module (ICM) and ECM is detected by ECM.	<ul style="list-style-type: none">Related fuse(s) blownPoor connection at immobilizer control module (ICM) connectorPoor connection at ECM connectorOpen in power supply wire circuitOpen in ground wire circuitOpen in communication wire circuitsShort to ground wire circuit in communication wire circuitsShort to power supply wire circuit in communication wire circuitsShort of communication wire circuitsImmobilizer control module (ICM) faultyECM faulty

Troubleshooting

Step	Action	Yes	No
1	Diagnostic Trouble Code (DTC) confirmation 1) Clear DTC(s) referring to "Diagnostic Trouble Code (DTC) Clearance". 2) Turn the ignition switch to OFF position. 3) Check if any DTC is detected referring to "Diagnostic Trouble Code (DTC) Check". <i>Is DTC P1621 still detected?</i>	Go to Step 2.	The troubleshooting is completed.
2	Fuse check 1) Check if any related fuse is blown. <i>Is any fuse blown?</i>	Replace blown fuse(s) with new one(s).	Go to Step 3.
3	Immobilizer control module (ICM) poor connection check 1) Disconnect immobilizer control module (ICM) connector "G24" referring to "Immobilizer Control Module (ICM) Removal and Installation". 2) Check if wire connections are normal at immobilizer control module (ICM) connector "G24". <i>Is each wire connection normal?</i>	Go to Step 4.	Repair poor connection(s).
4	ECM poor connection check 1) Disconnect ECM connector "E23" referring to "Engine Control Module (ECM) Removal and Installation in Section 1C". 2) Check if wire connections at "E23-13" and "E23-28" wire terminals are normal. <i>Is each wire connection normal?</i>	Go to Step 5.	Repair poor connection(s).
5	Check for open in power supply wire circuit 1) Connect immobilizer control module (ICM) connector "G24" referring to "Immobilizer Control Module (ICM) Removal and Installation". 2) With the ignition switch at ON position, check voltage between "G24-1" wire terminal at immobilizer control module (ICM) and body ground. <i>Is voltage about 12 V?</i>	Go to Step 6.	Repair open in power supply wire circuit.
6	Check for open in ground wire circuit 1) With the ignition switch at ON position, check voltage between "G24-2" wire terminal at immobilizer control module (ICM) and body ground. <i>Is voltage 0?</i>	Go to Step 7.	Repair open in ground wire circuit.
7	Check for open in communication wire circuit 1) Disconnect immobilizer control module (ICM) connector "G24" referring to "Immobilizer Control Module (ICM) Removal and Installation". 2) Disconnect ECM connector "E23" referring to "Engine Control Module (ECM) Removal and Installation in Section 1C". 3) Check resistance between "G24-3" wire terminal at immobilizer control module (ICM) connector and "E23-28" wire terminal at ECM connector. <i>Is resistance infinite?</i>	Repair open in communication wire circuit.	Go to Step 8.

10C-18 Immobilizer Control System:

Step	Action	Yes	No
8	Check for short to ground circuit in communication wire circuit 1) With immobilizer control module (ICM) connector "G24" and ECM connector "E23" disconnected, check resistance between "G24-3" wire terminal at immobilizer control module (ICM) connector and body ground. <i>Is resistance infinite?</i>	Go to Step 9.	Repair short to ground wire circuit in communication wire circuit.
9	Check for short to power circuit in communication wire circuit 1) With immobilizer control module (ICM) connector "G24" and ECM connector "E23" disconnected, turn the ignition switch to ON position. 2) Check voltage between "G24-3" wire terminal at immobilizer control module (ICM) connector and body ground. <i>Is voltage 0 V?</i>	Go to Step 10.	Repair short to power supply wire circuit in communication wire circuit.
10	Check for open in communication wire circuit 1) With immobilizer control module (ICM) connector "G24" and ECM connector "E23" disconnected, check resistance between "G24-4" wire terminal at immobilizer control module (ICM) connector and "E23-13" wire terminal at ECM connector. <i>Is resistance infinite?</i>	Repair open in communication wire circuit.	Go to Step 11.
11	Check for short to ground wire circuit in communication wire circuit 1) With immobilizer control module (ICM) connector "G24" and ECM connector "E23" disconnected, check resistance between "G24-4" wire terminal at immobilizer control module (ICM) connector and body ground. <i>Is resistance infinite?</i>	Go to Step 12.	Repair short to ground wire circuit in communication wire circuit.
12	Check for short to power circuit in communication wire circuit 1) With immobilizer control module (ICM) connector "G24" and ECM connector "E23" disconnected, turn the ignition switch to ON position. 2) Check voltage between "G24-4" wire terminal at immobilizer control module (ICM) connector and body ground. <i>Is voltage 0 V?</i>	Go to Step 13.	Repair short to power supply wire circuit in communication wire circuit.
13	Check for short of communication wire circuit 1) With immobilizer control module (ICM) connector "G24" and ECM connector "E23" disconnected, check resistance between "G24-3" wire terminal and "G24-4" wire terminal at immobilizer control module (ICM) connector. <i>Is resistance infinite?</i>	Go to Step 14.	Repair short of communication wire circuits.

Step	Action	Yes	No
14	Immobilizer control module (ICM) check 1) Check immobilizer control module (ICM) referring to "Inspection of Immobilizer Control Module (ICM) and Its Circuit". <i>Is immobilizer control module (ICM) normal?</i>	Replace ECM with new one referring to "Engine Control Module (ECM) Removal and Installation in Section 1C", and then perform "Procedure after ECM Replacement".	Replace immobilizer control module (ICM) with new one referring to "Immobilizer Control Module (ICM) Removal and Installation".

DTC P1622: EEPROM Error

S6JB0BA304013

Wiring Diagram

Refer to "Immobilizer Control System Wiring Circuit Diagram"

Detecting Condition and Trouble Area

Detecting Condition	Trouble Area
EEPROM in ECM is corrupted.	Internal failure (EEPROM corruption) of ECM

Troubleshooting

- 1) Clear DTC(s) referring to "Diagnostic Trouble Code (DTC) Clearance".
- 2) Turn the ignition switch to OFF position.
- 3) Check if DTC P1622 is still detected referring to "Diagnostic Trouble Code (DTC) Check". If still detected, go to the next step. If not, the troubleshooting is completed.
- 4) Replace ECM with new one referring to "Engine Control Module (ECM) Removal and Installation in Section 1C".
- 5) Perform "Procedure after ECM Replacement".

DTC P1623: Unregistered Transponder

S6JB0BA304014

Wiring Diagram

Refer to "Immobilizer Control System Wiring Circuit Diagram"

Detecting Condition and Trouble Area

Detecting Condition	Trouble Area
Transponder code in the transponder built in the ignition key is invalid.	<ul style="list-style-type: none"> • Use of the unregistered ignition key • Immobilizer control module (ICM) faulty • ECM faulty

Troubleshooting

Step	Action	Yes	No
1	Diagnostic Trouble Code (DTC) confirmation 1) Clear DTC(s) referring to "Diagnostic Trouble Code (DTC) Clearance". 2) Turn the ignition switch to OFF position. 3) Check if any DTC is detected referring to "Diagnostic Trouble Code (DTC) Check". <i>Is DTC P1623 still detected?</i>	Go to Step 2.	The troubleshooting is completed.
2	Diagnostic Trouble Code (DTC) check <i>Is any DTC other than P1623 is detected in Step 1?</i>	Perform the troubleshooting referring to the corresponding flowchart, and then go to Step 3.	Go to Step 3.

10C-20 Immobilizer Control System:

Step	Action	Yes	No
3	Registration of the unregistered ignition key with ECM and Diagnostic Trouble Code (DTC) check 1) Register the transponder code in the transponder in the unregistered ignition key with ECM referring to "Registration of the Ignition Key". 2) Check if that DTC P1623 is detected referring to "Diagnostic Trouble Code (DTC) Check". <i>Is DTC P1623 detected?</i>	Go to Step 4.	The troubleshooting is completed.
4	Immobilizer control module (ICM) check 1) Check immobilizer control module (ICM) referring to "Inspection of Immobilizer Control Module (ICM) and Its Circuit". <i>Is immobilizer controller assembly normal?</i>	Replace ECM with new one referring to "Engine Control Module (ECM) Removal and Installation in Section 1C", and then perform "Procedure after ECM Replacement".	Replace immobilizer control module (ICM) with new one referring to "Immobilizer Control Module (ICM) Removal and Installation".

DTC P1625: Immobilizer Antenna Error

S6JB0BA304015

Wiring Diagram

Refer to "Immobilizer Control System Wiring Circuit Diagram"

Detecting Condition and Trouble Area

Detecting Condition	Trouble Area
Immobilizer control module (ICM) is faulty.	<ul style="list-style-type: none"> Immobilizer control module faulty ECM faulty

Troubleshooting

Step	Action	Yes	No
1	Diagnostic Trouble Code (DTC) confirmation 1) Clear DTC(s) referring to "Diagnostic Trouble Code (DTC) Clearance". 2) Turn the ignition switch to OFF position. 3) Check if any DTC is detected referring to "Diagnostic Trouble Code (DTC) Check". <i>Is DTC P1625 still detected?</i>	Go to Step 2.	The troubleshooting is completed.
2	Immobilizer control module (ICM) replacement and Diagnostic Trouble Code (DTC) check 1) Replace immobilizer control module (ICM) referring to "Immobilizer Control Module (ICM) Removal and Installation". 2) Check if DTC P1625 is still detected referring to "Diagnostic Trouble Code (DTC) Check". <i>Is DTC P1625 still detected?</i>	Replace ECM with new one referring to "Engine Control Module (ECM) Removal and Installation in Section 1C", and then perform "Procedure after ECM Replacement".	The troubleshooting is completed.

DTC P1636: Immobilizer Information Registration Failure

S6JB0BA304016

Wiring Diagram

Refer to "Immobilizer Control System Wiring Circuit Diagram"

DTC Detecting Condition and Trouble Area

Detecting Condition	Trouble Area
The registration of the immobilizer control system information in ECM is failed.	<ul style="list-style-type: none"> • CAN communication wire circuits faulty • Steering angle sensor (if equipped) faulty • Keyless start control module (if equipped) faulty • 4WD control module (if equipped) faulty • TCM (if equipped) faulty • BCM faulty • ABS/ESP® control module faulty • Combination meter faulty • ECM faulty

Troubleshooting

Step	Action	Yes	No
1	Diagnostic Trouble Code (DTC) confirmation 1) Clear DTC(s) referring to "Diagnostic Trouble Code (DTC) Clearance". 2) Turn the ignition switch to OFF position. 3) Check if any DTC is detected referring to "Diagnostic Trouble Code (DTC) Check". <i>Is DTC P1636 still detected?</i>	Go to Step 2.	The troubleshooting is completed.
2	Diagnostic Trouble Code (DTC) check in ECM <i>Is any DTC other than P1636 detected in Step 1?</i>	Perform the troubleshooting referring to the corresponding flowchart.	Go to Step 3.
3	Diagnostic Trouble Code (DTC) check in BCM 1) Check BCM for DTC referring to "DTC Check in Section 10B". <i>Is any DTC detected?</i>	Perform the troubleshooting referring to the corresponding flowchart in Section 10B.	Go to Step 4.
4	Replacement of BCM 1) Replace BCM with new one referring to "BCM Removal and Installation in Section 10B". 2) Check ECM for DTC referring to "Diagnostic Trouble Code (DTC) Check". <i>Is DTC P1636 still detected?</i>	Go to Step 5.	The troubleshooting is completed.
5	Replacement of ECM 1) Replace ECM with new one referring to "Engine Control Module (ECM) Removal and Installation in Section 1C". 2) Check ECM for DTC referring to "Diagnostic Trouble Code (DTC) Check". <i>Is DTC P1636 still detected?</i>	Recheck CAN communication wire circuits and poor connection at ECM, ABS/ESP® control module and BCM connectors.	The troubleshooting is completed.

DTC P1638: Immobilizer Information Mismatched

S6JB0BA304017

Wiring Diagram

Refer to "Immobilizer Control System Wiring Circuit Diagram"

DTC Detecting Condition and Trouble Area

Detecting Condition	Trouble Area
<ul style="list-style-type: none"> The immobilizer control system information in ECM and the one in BCM does not match. The registration of the immobilizer control system information in ECM is failed. 	<ul style="list-style-type: none"> Use of the wrong ECM Steering angle sensor (if equipped) faulty Keyless start control module (if equipped) faulty 4WD control module (if equipped) TCM (if equipped) faulty CAN communication wire circuits faulty BCM faulty Combination meter faulty ABS/ESP® control module faulty ECM faulty

Troubleshooting

Step	Action	Yes	No
1	Diagnostic Trouble Code (DTC) confirmation 1) Clear DTC(s) referring to "Diagnostic Trouble Code (DTC) Clearance". 2) Turn the ignition switch to OFF position. 3) Check if any DTC is detected referring to "Diagnostic Trouble Code (DTC) Check". <i>Is DTC P1638 still detected?</i>	Go to Step 2.	The troubleshooting is completed.
2	Diagnostic Trouble Code (DTC) confirmation 1) Disconnect negative (–) cable from battery for more than 5 seconds. 2) Connect negative (–) cable to battery. 3) Check if any DTC is detected referring to "Diagnostic Trouble Code (DTC) Check". <i>Is DTC P1638 still detected?</i>	Go to Step 3.	The troubleshooting is completed.
3	Check ECM specification 1) Check ECM part number to see if ECM is applicable to the vehicle in service. <i>Is a correct ECM used for the vehicle in service?</i>	Go to Step 2.	Replace ECM with the correct one and recheck if DTC P1638 is still detected by ECM.
4	Diagnostic Trouble Code (DTC) check in ECM <i>Is any DTC other than P1638 detected in Step 1?</i>	Perform the troubleshooting referring to the corresponding flowchart.	Go to Step 3.
5	Diagnostic Trouble Code (DTC) check in BCM 1) Check BCM for DTC referring to "DTC Check in Section 10B". <i>Is any DTC detected?</i>	Perform the troubleshooting referring to the corresponding flowchart in Section 10B.	Go to Step 5.

Step	Action	Yes	No
6	Replacement of BCM 1) Replace BCM with new one referring to “BCM Removal and Installation in Section 10B”. 2) Check ECM for DTC referring to “Diagnostic Trouble Code (DTC) Check”. <i>Is DTC P1638 still detected?</i>	Go to Step 6.	The troubleshooting is completed.
7	Replacement of ECM 1) Replace ECM with new one referring to “Engine Control Module (ECM) Removal and Installation in Section 1C”. 2) Check ECM for DTC referring to “Diagnostic Trouble Code (DTC) Check”. <i>Is DTC P1638 still detected?</i>	Recheck CAN communication wire circuits and poor connection at ECM, ABS/ESP® control module and BCM connectors.	The troubleshooting is completed.

Inspection of Immobilizer Control Module (ICM) and Its Circuit

S6JB0BA304018

Immobilizer control module (ICM) and its circuit can be checked at immobilizer control module (ICM) wiring connector by measuring voltage.

CAUTION



Immobilizer control module (ICM) cannot be checked by itself. It is strictly prohibited to connect voltmeter or ohmmeter to immobilizer control module (ICM) with connector disconnected from it.

Voltage Check

- 1) Remove immobilizer control module (ICM) (1) from steering lock assembly or steering lock unit referring to “Immobilizer Control Module (ICM) Removal and Installation”.
- 2) Connect immobilizer control module (ICM) connector (2) to immobilizer control module (ICM).
- 3) Check voltage at each terminal.

NOTE

As each terminal voltage is affected by the battery voltage, confirm that it is 11 V or more when the ignition switch is turned to ON position.

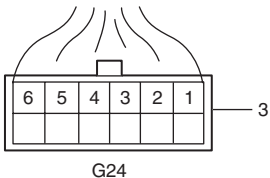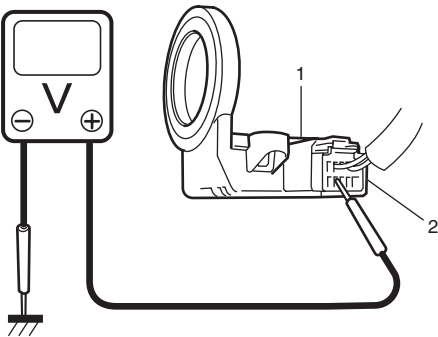


I5JB0AA30005-01

3. Immobilizer control module (ICM) connector (harness side view)

10C-24 Immobilizer Control System:

Connector	Terminal		Circuit	Normal Voltage	Condition
G24	1	BLK/ WHT	Power supply	About 12.0 V	Ignition switch at ON position
				0.0 V	Ignition switch at OFF position
	2	BLK	Ground	0.0 V	Ignition switch at ON position
				0.0 V	Ignition switch at OFF position
	3	GRY/ BLU	Serial communication line	See the reference waveform.	—
				0.0 V	Ignition switch at OFF position
	4	PNK/ BLU	Clock line	See the reference waveform.	—
				0.0 V	Ignition switch at OFF position
	5	BLK/ RED	Illumination ring ground	0 V	<ul style="list-style-type: none">Ignition key not inserted to the key cylinderDoor opened
				0 V → 12 V	<ul style="list-style-type: none">Ignition key at OFF positionFrom the time door is closed to the time interior light faded out completely (As the interior light fades out, the voltage increases.)
				0 V → 12 V	<ul style="list-style-type: none">Door closedFrom the ignition switch is turned ON to the time interior light is completely faded out (As the interior light fades out, the voltage increases.)
	6	WHT	Illumination ring power supply	About 12.0 V	Ignition switch at ON position
				About 12.0 V	Ignition switch at OFF position

Reference Waveform

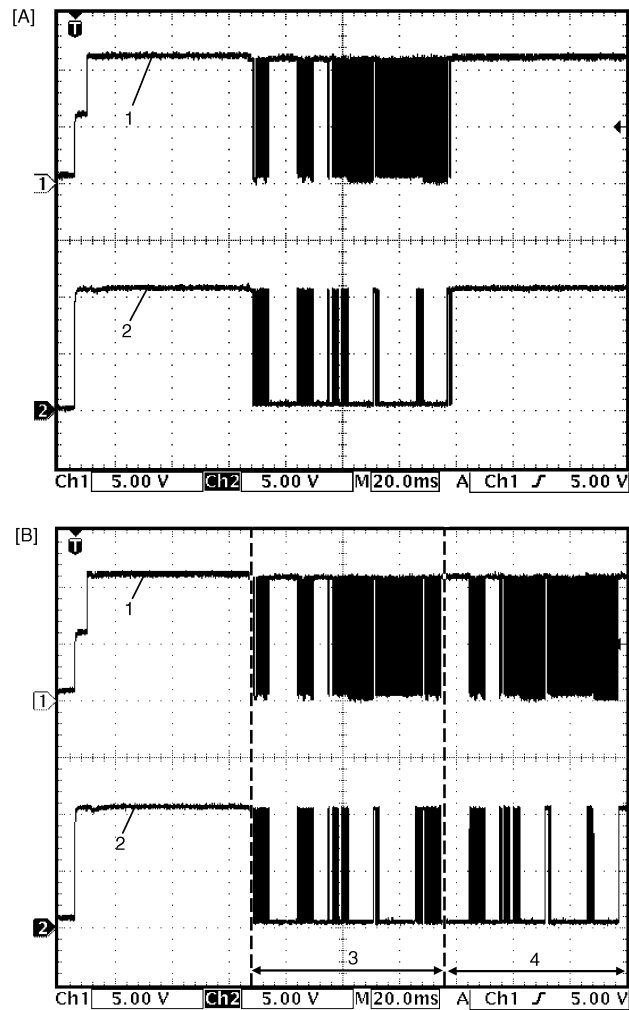

I4RS0AA30007-01

[A]:	The transponder code read successfully at the first try.
[B]:	The transponder code read successfully at the second try.
1.	Serial communication line
2.	Clock line
3.	First try
4.	Second try

NOTE

When ECM cannot read the transponder code at the first try, ECM tries to read the transponder code repeatedly up to 8 times. The second waveform is the example showing that ECM read the transponder code successfully at the second try.

Measurement terminals	CH1: G24-3 to G24-2 CH2: G24-4 to G24-2
Oscilloscope settings	CH1: 5 V/DIV CH2: 5 V/DIV TIME: 20 ms
Measurement condition	Right after the ignition switch is turned ON, the waveform can be read.


Repair Instructions

Immobilizer Control Module (ICM) Removal and Installation

S6JB0BA306001


Removal

- 1) Disconnect negative (–) cable from battery.
- 2) Disable air bag system referring to “Disabling Air Bag System in Section 8B”.
- 3) Remove driver air bag (inflator) module referring to “Driver Air Bag (Inflator) Module Removal and Installation in Section 8B”.
- 4) Remove steering wheel referring to “Steering Wheel Removal and Installation in Section 6B”.
- 5) Remove steering column lower and upper covers.
- 6) Remove engine start knob (1) if equipped with keyless start system.

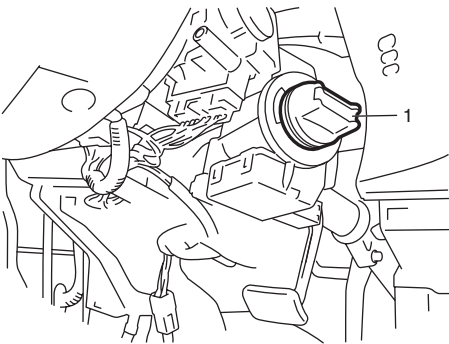

I5JB0AA30006-01

- 7) Disconnect connector (1) from immobilizer control module (ICM) (2).
- 8) Remove a screw (3) from immobilizer control module (ICM).

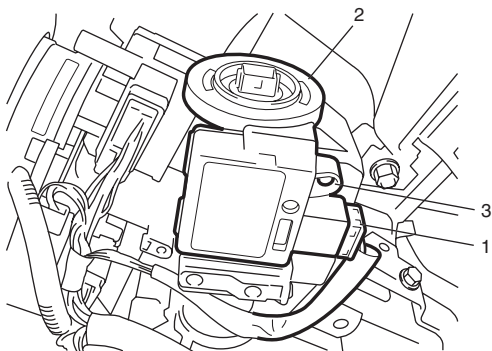

I4RS0BA30007-03

- 9) Remove immobilizer control module (ICM) from steering lock assembly or steering lock unit.

NOTE

The antenna part of immobilizer control module (ICM) is fragile. Therefore, do not add strong power to the part or twist the part.

Installation

Reverse the removal procedure.

Registration of the Ignition Key

S6JB0BA306002

To finish the registration of the ignition key, the transponder code memorized in the transponder built in the ignition key has to be registered with ECM. To register the transponder code with ECM, perform “Register Ig Key” mode of SUZUKI scan tool referring to “SUZUKI Tech 2 Operator’s Manual”.

NOTE

- A maximum of four transponder codes can be registered with ECM.
- At an early part of the registration process, all transponder codes of the ignition keys in use already registered with ECM are cleared. Therefore, before starting the registration, prepare all ignition keys in use in addition to the new ignition key(s) to be registered with ECM.

Procedure after ECM Replacement

S6JB0BA306003

After ECM is replaced with new one or used one, the transponder code in the transponder built in the ignition key has to be registered with ECM. To register transponder code in the ignition key with ECM, perform “Replace New ECM” mode of SUZUKI scan tool referring to “SUZUKI Tech 2 Operator’s Manual”.

NOTE



A maximum of four transponder codes can be registered with ECM.


Special Tools and Equipment

Special Tool

S6JB0BA308001

SUZUKI scan tool

—
This kit includes following items. 1. Tech 2, 2. PCMCIA card, 3. DLC cable, 4. SAE 16/19 adapter, 5. Cigarette cable, 6. DLC loop back adapter, 7. Battery power cable, 8. RS232 cable, 9. RS232 adapter, 10. RS232 loop back connector, 11. Storage case, 12.  / 

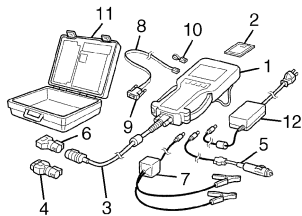

Keyless Start System

Precautions

Precautions in Diagnosing Troubles

S6JB0BA500001

- The keyless start system executes data transmission/reception by means of the radio wave. Therefore, proper operation may not be obtained if use of the door lock function and engine start function of the keyless start system is attempted near the place where strong radio wave is emitted (TV and radio broadcasting stations, etc.).
- Diagnostic information stored in keyless start control module memory can be checked only by key indicator light.
- Be sure to use the trouble diagnosis procedure as described in “Keyless Start System Check”. Failure to follow it may result in incorrect diagnosis. (Some other DTC may be stored by mistake in the memory of keyless start control module during inspection.)
- Be sure to read “Precautions for Electrical Circuit Service in Section 00” before inspection and observe what is written there.
- Communication of ECM, BCM, TCM (A/T model), 4WD control module (if equipped), ABS or ESP® control module, keyless start control module, steering angle sensor (if equipped) and combination meter is established by CAN (Controller Area Network). (For detail of CAN communication for keyless start control module, refer to “CAN Communication System Description”). Therefore, handle CAN communication line with care referring to “Precaution for CAN Communication System in Section 00”.
- Replacement of the keyless start control module
When keyless start control module is replaced with new one, make sure that register remote controller ID code to Keyless start control module correctly according to “Registration Procedure for Remote Controller ID Code”.
- Keyless start control module substitution
When the keyless start control module used in another vehicle was installed in the vehicle being serviced, register the ID code of the remote controller to the keyless start control module first and then the following code.
 - With immobilizer control system, register the ignition key transponder code for the immobilizer control system in ECM. For registration procedure of that, refer to “Registration of the Ignition Key in Section 10C”.
 - Without immobilizer control system, register the steering lock unit ID code in keyless start control module. For registration procedure of that, refer to “Keyless Start Registration”.


General Description

Keyless Start System Description

S6JB0BA501001

Keyless start system consisting of the parts shown below has three functions as described below.

- Keyless engine start function:
With the remote controller which has been registered in the keyless start control module carried with oneself, the engine can be started without using the ignition key.
- Door lock function:
Pushing the request switch incorporated in the outside handle of the driver side door, passenger side door or rear end door while carrying the remote controller which has been registered in the keyless start control module, doors can be locked or unlocked.
- Keyless entry system function:
It is possible to lock or unlock doors by pushing the lock or unlock button of remote controller.
The keyless start control module can accept registration of up to four remote controllers.

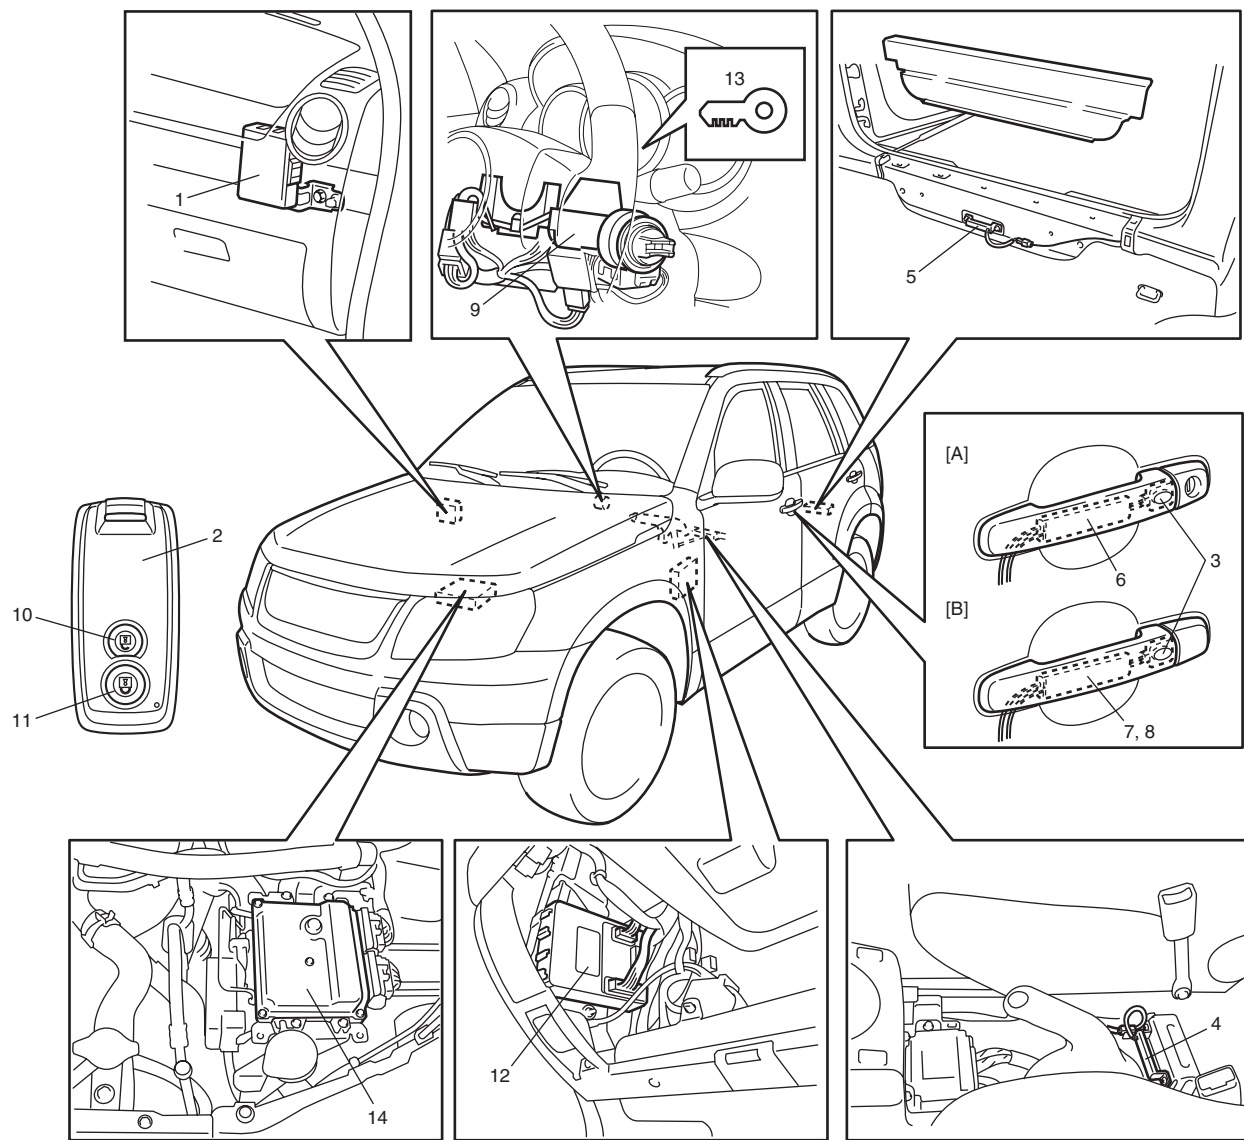

I5JB0DA50001-01

[A]: Driver side door outside handle	5. Luggage room antenna	11. Lock button
[B]: Passenger side or rear end door outside handle	6. Driver side door antenna	12. BCM
1. Keyless start control module	7. Passenger side door antenna	13. Key indicator light
2. Remote controller	8. Rear end door antenna	14. ECM
3. Request switch	9. Steering lock unit	
4. Center antenna	10. Unlock button	

Parts and Functions


Parts	Function
Keyless start control module	<ul style="list-style-type: none"> • Activates each antenna • Verifies ID code of remote controller • Requests steering lock unit to release steering lock • Requests BCM to lock or unlock doors • Controls key indicator light in combination meter • Transmits its ID code to ECM
Remote controller	<ul style="list-style-type: none"> • Receives request signal from each antenna • Transmits ID code and request signal to keyless start control module • Request keyless start control module to lock or unlock doors (keyless entry system function)
Request switch	<ul style="list-style-type: none"> • Requests keyless start control module to activate each antenna
Center antenna	<ul style="list-style-type: none"> • Transmits request signal to remote controller
Luggage room antenna	<ul style="list-style-type: none"> • Transmits request signal to remote controller
Driver side door antenna	<ul style="list-style-type: none"> • Transmits request signal to remote controller
Passenger side door antenna	<ul style="list-style-type: none"> • Transmits request signal to remote controller
Rear end door antenna	<ul style="list-style-type: none"> • Transmits request signal to remote controller
Steering lock unit	<ul style="list-style-type: none"> • Releases steering lock
Unlock button	<ul style="list-style-type: none"> • Transmits door unlock request signal (keyless entry system function)
Lock button	<ul style="list-style-type: none"> • Transmits door lock request signal (keyless entry system function)
BCM	<ul style="list-style-type: none"> • Controls each door lock actuator • Controls warning buzzer • Lights hazard warning light and interior (DOME) light (answer back)
Key indicator light	<ul style="list-style-type: none"> • Indicates operation state of keyless start system (indicates check result of remote controller ID code)
ECM	<ul style="list-style-type: none"> • Checks keyless start control module ID code • Transmits its ID code to keyless start control module • Starts engine

Keyless Engine Start Function

When the ignition knob switch (2) installed to the steering lock unit (1) is pushed, the keyless start control module (3) activates the center antenna (4) to send out the request signal in the vehicle compartment. When the remote controller (5) receives the request signal from the center antenna, it transmits the ID code to the keyless start control module. The keyless start control module compares the ID code sent by the remote controller with the ID code registered in the keyless start control module. When these ID codes match, the keyless start control module makes the key indicator light (7) in the combination meter (6) light in blue and unlocks the steering lock unit to enable the ignition knob switch to turn. When the ignition knob switch is turned to ON position in this state, ID codes of ECM and keyless start control module are compared through CAN communication (immobilizer function). When they match, turning the ignition knob switch to start position will start the engine.

NOTE

When ignition knob switch is at ACC or ON position (engine not running) and any door has been kept open for a certain time, it may happen that engine fails to start. In such a case, turn ignition knob switch to OFF position once and then try to start engine again.

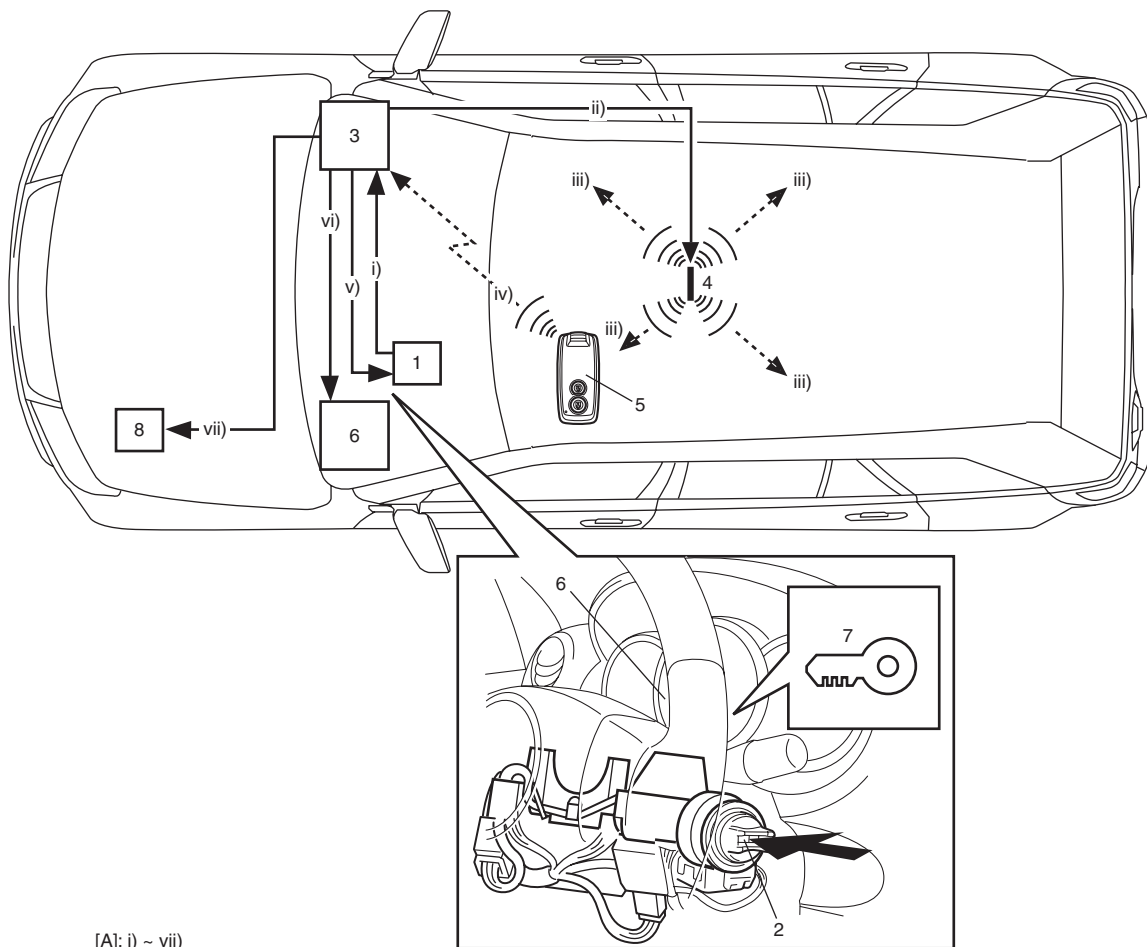

[A]: i) ~ vii)

[A]: Signal flow	8. ECM
------------------	--------

I6JB01A50002-01


When the ID code from the remote controller and the ID code registered in the keyless start control module do not match or when the remote controller is outside the operation area of the remote controller and the ignition knob switch is pushed, the steering lock unit cannot be unlocked and so the ignition knob switch cannot be turned. Then, the keyless start control module makes the key indicator light in the combination meter light in red to warn the driver that it is not possible to turn the ignition knob switch. Also, when the ID code of ECM and that of the keyless start control module do not match, the engine cannot be started even if the ignition knob switch is turned to the start position. Then ECM makes the immobilizer indicator light in the combination meter flash to warn the driver that it is not possible to start the engine.

Door Lock Function of Keyless Start System

When the request switch (1) incorporated in the outside handle of the driver side door, front passenger side door or rear end door is pushed, the keyless start control module (2) activates the center antenna (3) and luggage room antenna (4) to send out the radio wave in the vehicle compartment to check if the remote controller (5) is in the vehicle compartment or not. When the keyless start control module receives no signal from the remote controller (i.e., the remote controller does not exist in the vehicle compartment), it activates the antenna (6) of the door of which the request switch has been pushed to send the request signal out of the compartment. If the remote controller exists within the door lock operation area, it receives the request signal sent from the above said antenna, sends the ID code of the remote controller and the request signal to the keyless start control module and at the same time, it makes the operation indicator light (7) of the remote controller light up. Lighting of the operation indicator light indicates that the remote controller sent the ID code and the request signal.

The keyless start control module compares the ID code sent from the remote controller with the ID code registered in the keyless start control module. If both ID codes match, the keyless start control module outputs the lock or unlock request signal (depending on the door lock switch (8) state then) to BCM (9). When BCM receives such signal through CAN communication from the keyless start control module, it activates the door lock actuator to lock or unlock doors. When the keyless start control module receives a signal from the remote controller (i.e., the remote controller exists in the vehicle compartment), the function of the keyless start system to prevent the remote controller from being closed in the vehicle works and the keyless start control module sends a request signal to unlock doors to BCM. In this way, doors are kept unlocked.

Also, when the driver or passenger has left the vehicle with the remote controller left behind in the vehicle compartment and locked doors by using the door lock knob or manual door lock switch, the function to prevent the remote controller from being closed in the vehicle works to unlock doors.

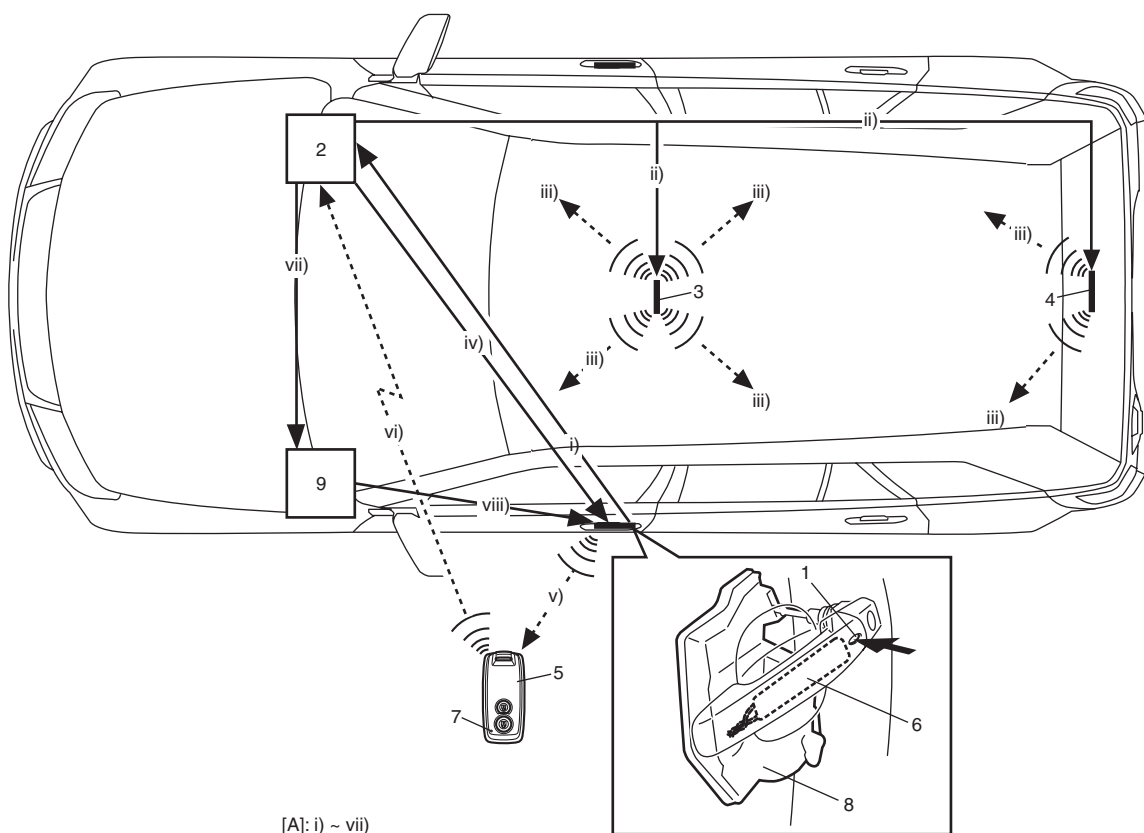

[A]: i) ~ vii)


[A]: Signal flow

15JB0AA50003-01

Furthermore, when ID codes of the remote controller and keyless start control module do not match or the remote controller exists outside of the operation area, doors are not locked or unlocked even if the request switch of the outside handle is operated.

Operation Area of Remote Controller

Shown below are the operation areas of the remote controller for the keyless engine start function and door lock function of the keyless start system.

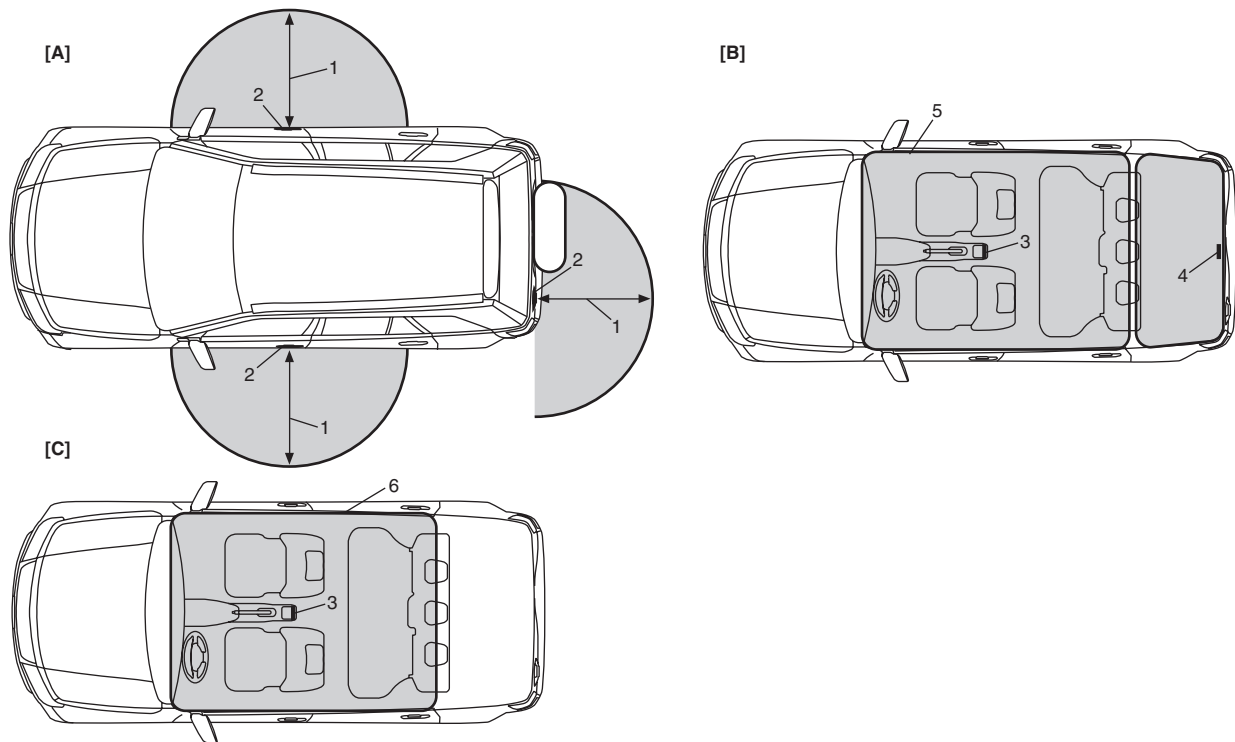

I5JB0AA50004-09

[A]: Door lock function of keyless start system	3. Center antenna
[B]: Function of keyless start system to prevent remote controller from being closed in vehicle compartment	4. Luggage room antenna
[C]: Keyless engine start function	5. Vehicle compartment including luggage room
1. About 80 cm (31.5 in, 2.6 ft)	6. Vehicle compartment excluding luggage room
2. Each door antenna	

However, even when the remote controller is within the operation area as shown above, there are cases where the keyless start system doesn't work under certain conditions as described below. And when the keyless engine start function doesn't work, the key indicator light in the combination meter may light up.

- Doors cannot be locked or unlocked using the door lock function of keyless start system when:
 - The remote controller which has been registered in the keyless start control module and another un-registered one are both carried at the same time
 - The remote controller is kept in some metallic container which disturb radio wave transmission/reception
 - One of doors is open
 - The ignition key is inserted in the ignition key cylinder
- The function of the keyless start system to prevent the remote controller from being closed in the vehicle compartment doesn't work when:
 - The remote controller is in the door pocket or in the glove box
 - The remote controller is kept in some metallic container which disturb radio wave transmission/reception
 - The remote controller is placed close to outside of the vehicle compartment (such as on the instrument panel beside the front window shield glass or in a corner of the luggage room)
- The ignition knob switch cannot be turned using the keyless engine start function fails to turn:
 - The remote controller which has been registered in the keyless start control module and another un-registered one are both carried at the same time
 - The remote controller is kept in some metallic container which disturbs radio wave transmission/reception
 - The ignition knob switch has been pushed for 5 seconds or longer
 - The remote controller is placed close to outside of the vehicle compartment (such as on the instrument panel beside the front window shield glass or in a corner of the luggage room)

10E-7 Keyless Start System:

Alarm Function

S6JB0BA501006

Under conditions as described in the table below, the keyless start control module makes the key indicator light flash in red and the buzzer sound to call the driver's attention.


Condition	Buzzer operation	Key indicator light operation
Ignition knob switch has stopped between ACC and OFF positions while driver side door is opened (ignition knob switch un-returned alarm)	Intermittent	—
Ignition switch has stopped between ACC and OFF positions while driver side door is closed (ignition knob switch un-returned alarm)	2 times	Flashing in red
Remote controller is carried out of vehicle and doors are closed while ignition switch is at ON position (remote controller carried-out alarm)	3 or 5 times	Flashing in red
Remote controller is carried out of vehicle through a window without opening door while ignition switch is at ON position (engine is running) and vehicle has been driven at 10 km/h (6 MPH) or more speed without remote controller in vehicle compartment (the first time 10 km/h (6 MPH) speed is exceeded only) (Remote controller carried-out alarm)	3 or 5 times	Flashing in red

CAN Communication System Description

S6JB0BA501007


Refer to “CAN Communication System Description in Section 1A” for CAN communication system description. Keyless start control module communicates control data with each control module as follows.

Keyless Start Control Module Transmission Data

				ECM	BCM	Combination Meter
Keyless Start Control Module		DATA	ID code of keyless start control module	○		
			ECM-keyless start control module code	○		
			Ignition knob switch signal		○	
			Door lock/unlock request signal		○	
			Buzzer request signal		○	
			Answer back request signal		○	
			Key indicator light control signal			○

I6JB0BA50001-01

Keyless Start Control Module Reception Data


				ECM	BCM
Keyless Start Control Module		DATA	Vehicle speed signal	○	
			ECM-keyless start control module code	○	
			Door switch status		○
			Door lock status		○
			Charging system signal		○
			Engine oil pressure switch signal		○

I5RW0BA50001-01

Schematic and Routing Diagram

Keyless Start System Electric Wiring Circuit Diagram

S6JB0BA502001

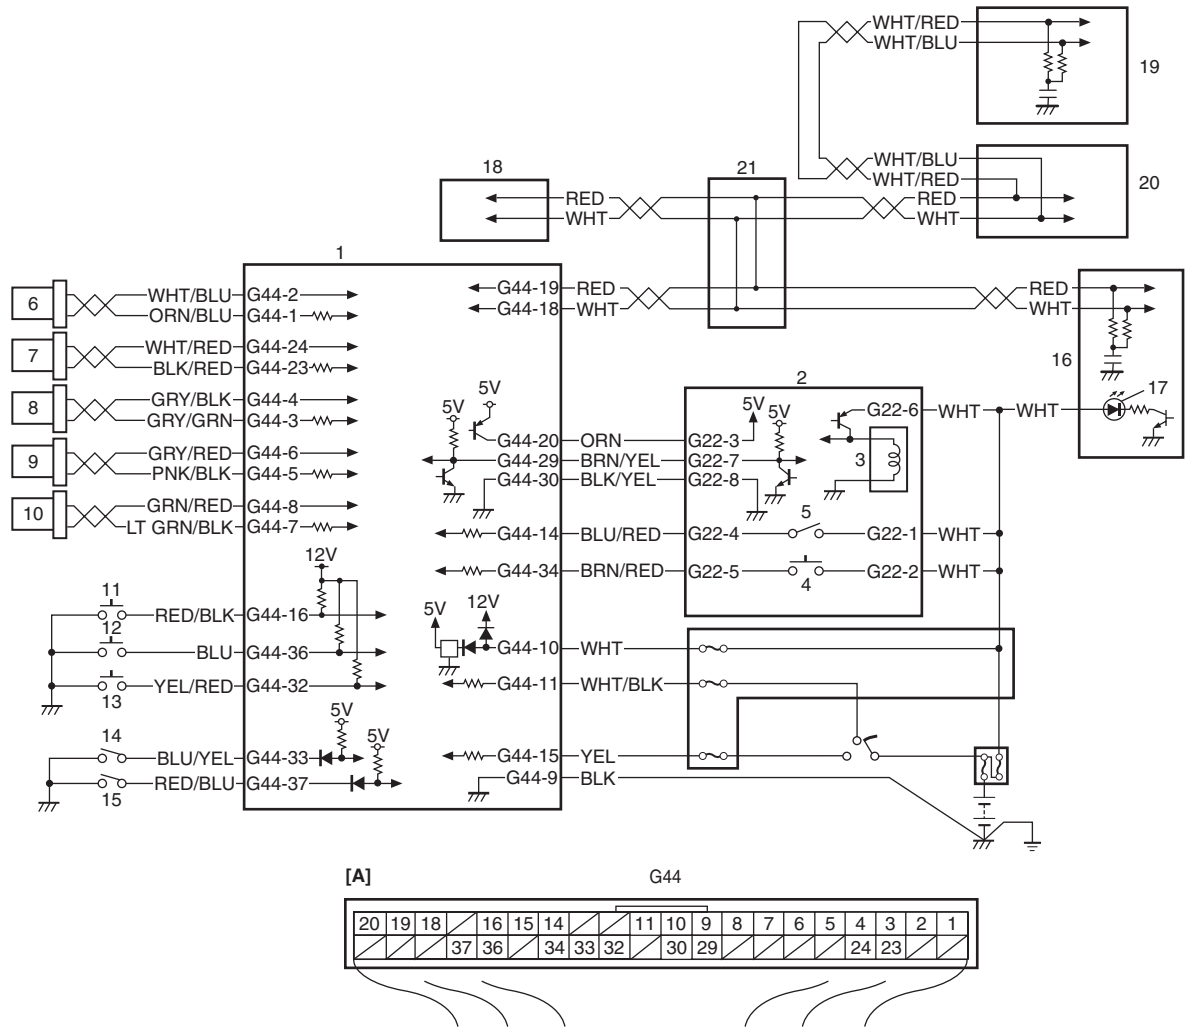

I5JB0DA50002-01

[A]: Keyless start control module connector (viewed from harness side)			8. Rear end door antenna	16. Combination meter
1. Keyless start control module			9. Center antenna	17. Key indicator light
2. Steering Lock unit			10. Luggage room antenna	18. BCM
3. Steering lock solenoid			11. Driver side door request switch	19. ECM
4. Ignition knob switch			12. Passenger side door request switch	20. ABS or ESP® control module
5. Key reminder switch			13. Rear end door request switch	21. Junction connector
6. Driver side door antenna			14. Driver side door lock switch	
7. Passenger side door antenna			15. Passenger side door lock switch	

Diagnostic Information and Procedures

Self-Diagnosis Function

S6JB0BA504002

The keyless start control module has self-diagnosis function to monitor the system components and circuits while the keyless start system is at work. When the keyless start control module detects an abnormality in the system, it saves the area where such abnormality has occurred as a DTC in its memory. The DTC stored in memory of the keyless start control module is indicated by the key indicator light in the combination meter

flashing in a specific pattern. For DTC indication, refer to “DTC Check” and for the clearing procedure, to “DTC Clearance”.

Keyless Start System Diagnosis Introduction

S6JB0BA504003

To ensure that the trouble diagnosis is done accurately and smoothly, observe “Precautions in Diagnosing Troubles” and follow “Keyless Start System Check”.

Keyless Start System Check

S6JB0BA504004

Step	Action	Yes	No
1	1) Record details of the problem. For your record, use of a questionnaire form will facilitate collecting information for proper analysis and diagnosis. 2) Check if the problem described in “Customer Questionnaire (Example)” actually occurs in the vehicle. (This step should be performed with the customer if possible.) Perform “Keyless Start System Operation Inspection” procedure to check if the symptom which has occurred is abnormal or not. 3) Check for DTC referring to “DTC Check”, and then record DTC(s). 4) Clear DTC referring to “DTC Clearance” if any DTC exists, and then recheck for DTC. <i>Is any DTC still detected?</i>	Go to Step 2.	Go to Step 3.
2	1) Check and repair referring to applicable “DTC Table”. <i>Are check and repair complete?</i>	Go to Step 5.	Check and repair malfunction part(s), and go to Step 5.
3	1) Inspect and repair basic parts referring to “Keyless Start System Symptom Diagnosis”. <i>Is there faulty condition?</i>	Repair or replace malfunction part(s), and go to Step 5.	Go to Step 4.
4	1) Check for intermittent problems referring to “Intermittent and Poor Connection Inspection in Section 00”. <i>Is there any faulty condition?</i>	Repair or replace malfunction part(s), and go to Step 5.	Go to Step 5.
5	1) Confirm if the problem is solved and the keyless start system is free from any abnormal conditions. If what has been repaired is related to the DTC, clear the DTC once and then confirm that no DTC is indicated. <i>Is there any problem symptom, DTC or abnormal condition?</i>	Go to 2) of Step 1 and perform trouble diagnosis again.	End.

Customer Questionnaire (Example)

S6JB0BA504005

Customer's name:	Model:	VIN:	
Date of issue:	Date Reg:	Date of problem:	Mileage:


Problem Symptoms	<ul style="list-style-type: none"> • Engine can not be started by turning Ignition knob switch • All doors can not be locked / unlocked by all of request switches • Other_____
Frequency of Occurrence	<ul style="list-style-type: none"> • Continuous / Intermittent (times a day, a month) / Other_____
Environmental Condition	<ul style="list-style-type: none"> • Weather: Fine / Cloudy / Rain / Snow / Other_____ • Temperature: °C(° F) • Stopping near area where intense radio waves are emitted such as TV station, radio station, etc. Yes / No
Diagnostic Trouble Code	<ul style="list-style-type: none"> • First check: Normal code / malfunction code () • Second check: Normal code / malfunction code ()

I4RS0BA50007-03

Key Indicator Light Check

S6JB0BA504006

Push the ignition knob switch (2) of the steering lock unit (1) and check that the key indicator light (3) in the combination meter lights up in red or blue. If it does not light, go to “Key Indicator Light Circuit Check (Key Indicator Light Doesn’t Light when Ignition Knob Switch is Pushed)”.

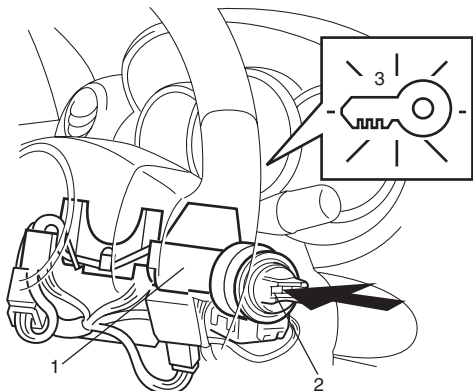


I5JB0AA50006-01

DTC Check

S6JB0BA504007

- 1) Check to make sure that all doors are closed.
- 2) Open driver side door window glass and door.
- 3) Check to make sure that ignition key is not inserted in ignition key cylinder. If it is, remove it.
- 4) Perform “Key Indicator Light Check”.
- 5) Close driver side door and within 15 seconds after that, perform Steps a) through e) described below.
 - a) Insert ignition key (1) in ignition key cylinder.
 - b) Remove ignition key from ignition key cylinder.
 - c) Repeat Steps a) and b) twice.
 - d) Insert ignition key in ignition key cylinder.
 - e) Push driver side door request switch (3) 4 times. At the end of Step e), buzzer sounds 4 times to inform that trouble diagnosis mode has started.


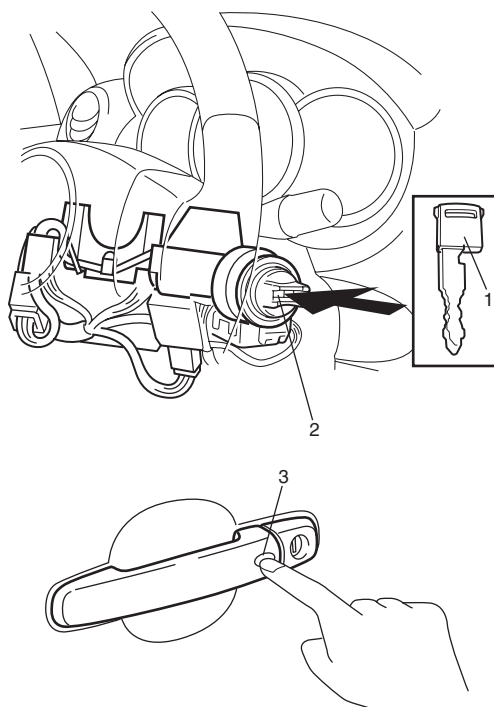


I5JB0AA50007-01

- 6) Read flashing pattern of key indicator light (1) which represents DTC as shown in example below and write it down. When more than 2 DTCs are stored in memory, flashing for each DTC is repeated three times starting with the smallest DTC number in increasing order.

NOTE

Go to “No DTC Detection After Performing DTC Check” in case that any DTC is detected after performing the procedure mentioned above.

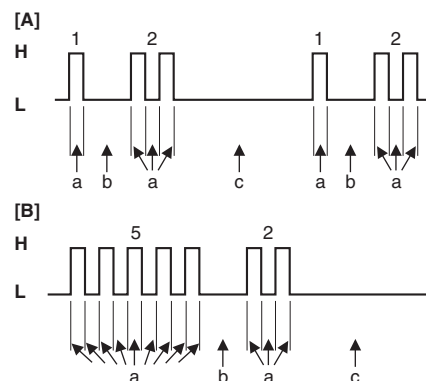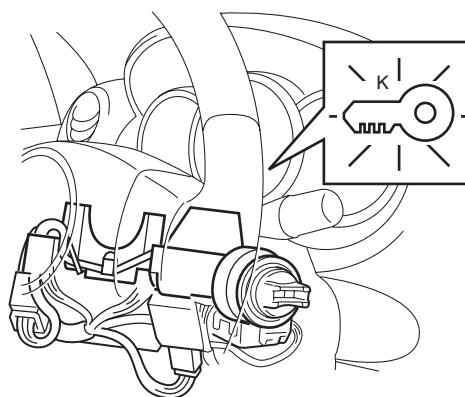

I6JB01A50004-01

[A]: DTC NO. 12 (Normal)	K: Key indicator light
[B]: DTC NO. 52	a: 0.3 seconds
H: Key indicator light turned ON	b: 1.0 second
L: Key indicator light turned OFF	c: 3.0 seconds

- 7) After completing the check, remove ignition key from ignition key cylinder.

DTC Table


S6JB0BA504008

DTC (Flashing pattern of key indicator light)	Detected parts item	Detecting condition
11	Communication Error With Steering Lock Unit	No communication is available between keyless start control module and steering lock unit
12	—	Normal (No malfunction DTC is detected)
13	Release Signal Error from Steering Lock Unit	Although lock release signal is output to steering lock unit, it is not inputted from steering lock unit
14	Steering Lock Unit Malfunction	Steering lock unit cannot be unlocked due to its temperature rise
21	Internal Error in Keyless Start Control Module (EEPROM Reading Error)	Data cannot be read from memory in keyless start control module
22	Internal Error in Keyless Start Control Module (EEPROM Writing Error)	Data cannot be written into memory in keyless start control module
31	Lost Communication With BCM	Keyless start control module cannot receive data sent by CAN from BCM
33	Control Module Communication Bus Off	No communication is available with all control modules connected by CAN
51	Driver Side Door Request Switch Malfunction	Input signal from driver side door request switch remains ON, unchanged
52	Passenger Side Door Request Switch Malfunction	Input signal from passenger side door request switch remains ON, unchanged
53	Rear end Door Request Switch Malfunction	Input signal from rear end door request switch remains ON, unchanged

DTC Clearance

S6JB0BA504009

- 1) Perform Steps 1) through 5) of DTC check procedure and have DTC indicated.
 - 2) Open driver side door.
 - 3) Close driver side door and within 10 seconds after that, perform Steps a) to c) described below.
 - a) Push unlock side (3) of driver side manual door lock switch (1).
 - b) Push lock side (2) of driver side manual door lock switch.
 - c) Repeat Steps a) and b) 3 times.
- At the end of Step c), DTCs are cleared and key indicator light indicates DTC No. 12 (Normal).

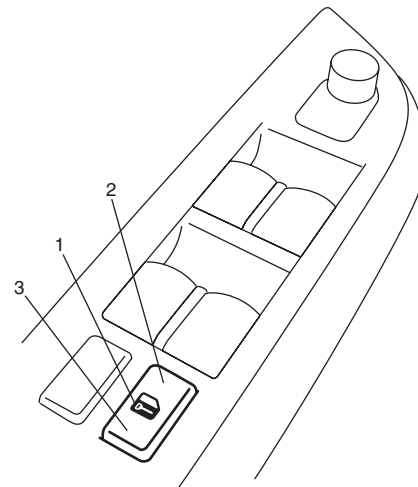

I5JB0AA50009-02

- 4) After completing DTC clearance, remove ignition key from ignition key cylinder.

Keyless Start System Symptom Diagnosis

S6JB0BA504010

Door Lock Function of Keyless Start System

NOTE

Before performing trouble diagnosis procedure for door lock function of keyless start system, check that power door lock system operates properly referring to “Power Door Lock System Operation Inspection in Section 9F”. If power door lock system does not operate properly, go to “Power Door Lock System Symptom Diagnosis in Section 9F”.

Condition	Possible cause	Correction / Reference Item
All doors can not be locked / unlocked by all of door request switches	Circuit fuse(s) blown	Replace fuse(s) and check for short circuit.
	Remote controller battery dead	Replace battery.
	Remote controller faulty	Check remote controller for operation referring to “Remote Controller Inspection”.
	Wiring or grounding faulty	Repair circuit.
	Antennas or keyless start control module faulty	Check input and output signals of keyless start control module referring to “Inspection of Keyless Start Control Module and Its Circuits”.
	BCM faulty	Check input and output signal of BCM referring to “Inspection of BCM and Its Circuits in Section 10B”.
All doors can not be locked / unlocked by any one of door request switch	Request switch faulty	Check request switch for operation referring to “Front Door (Driver and Passenger Side), Rear End Door Request Switch Inspection”.
	Wiring or grounding faulty	Repair circuit.
	Antennas or keyless start control module faulty	Check input and output signals of keyless start control module referring to “Inspection of Keyless Start Control Module and Its Circuits”.
	BCM faulty	Check input and output signal of BCM referring to “Inspection of BCM and Its Circuits in Section 10B”.

Keyless Engine Start Function

NOTE

Before performing symptom diagnosis procedure for keyless engine start system, check that engine starts by using ignition key. If it cannot be started by using ignition key, go to "Engine Symptom Diagnosis in Section 1A".

Condition	Possible cause	Correction / Reference Item
Engine can not be started by turning Ignition knob switch	Circuit fuse(s) blown	Replace fuse(s) and check for short circuit.
	Remote controller battery dead	Replace battery.
	Remote controller faulty	Check remote controller for operation referring to "Remote Controller Inspection".
	Steering lock unit faulty	Check steering lock unit for operation referring to "Steering Lock Unit Inspection".
	Wiring or grounding faulty	Repair circuit.
	Antennas or keyless start control module faulty	Check input and output signals of keyless start control module referring to "Inspection of Keyless Start Control Module and Its Circuits".
	ECM faulty	Check input and output signal of ECM referring to "Inspection of ECM and Its Circuits in Section 1A".

Keyless Start System Operation Inspection


S6JB0BA504011

Keyless engine start operation

- 1) Sit in driver seat with remote controller carried with you.
- 2) Check that all doors are closed and ignition key is not inserted in ignition key cylinder.
- 3) While pushing ignition knob switch (1) of steering lock unit, check if ignition knob switch can be turned from its lock position.
If key indicator light (2) in combination meter lights in blue and ignition knob switch can be turned from its lock position in this check, keyless engine start operation is in good condition.
If key indicator light in combination meter lights in red and ignition knob switch cannot be turned from its lock position in this check, go to "Keyless Start System Check".

NOTE

Pushing ignition knob switch for 5 seconds or longer causes function to protect steering lock releasing solenoid against heat to work. Then steering lock unit stops energizing solenoid, preventing ignition knob switch from turning. At the same time, key indicator light in combination meter turns off. In such case, take your hand off from ignition knob switch once and operate it again.

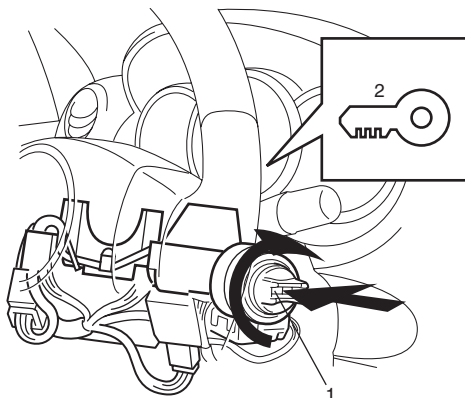


I5JB0AA50010-01

Door Lock Operation Check (Keyless Start System)

S6JB0BA504012

- 1) Check that all door locks are released and all doors are closed.
- 2) With remote controller of which ID code is registered in keyless start control module carried with yourself, check that pushing driver door request switch once locks all doors.
- 3) Check that pushing request switch of driver door, passenger door or rear end door once releases corresponding door lock.
- 4) Check that pushing again request switch pushed in Step 3) releases all door locks.

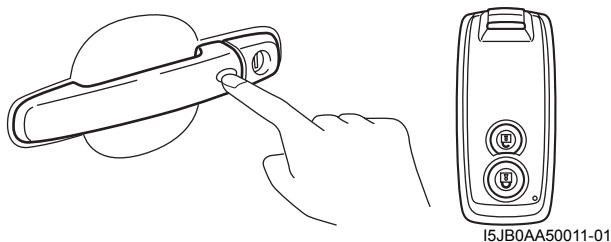

NOTE

If door of which request switch has been pushed is opened/closed before performing Step 4), all door locks will not be released even when Step 4) is performed. If Step 4) is performed after door is opened/closed, only the door of which request switch was pushed will be locked.

Inspection of Keyless Start Control Module and Its Circuits

Keyless start control module and its circuits can be checked at keyless start control module wiring couplers by measuring voltage and resistance.

⚠ CAUTION


Keyless start control module cannot be checked by itself. It is strictly prohibited to connect voltmeter or ohmmeter to keyless start control module with coupler disconnected from it.

Voltage Check

- 1) Disconnect negative cable (–) at battery.
- 2) Remove keyless start control module from vehicle body referring to “Keyless Start Control Module Removal and Installation”.
- 3) Connect connector to keyless start control module.
- 4) Check voltage at each terminal number of couplers connected.

NOTE

- As each terminal voltage is affected by the battery voltage, confirm that it is 11 V or more when ignition switch is ON.
- Voltage with asterisk (*) cannot be measured by voltmeter because it is pulse signal.

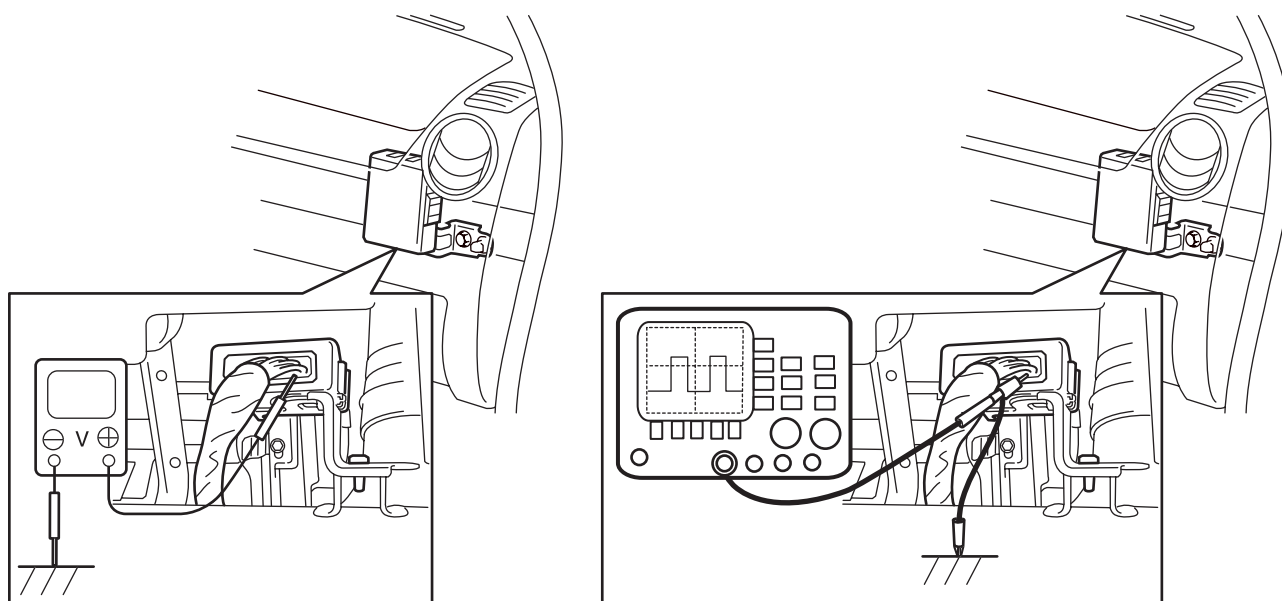

[A]

G44

20	19	18	16	15	14	11	10	9	8	7	6	5	4	3	2	1
37	36	34	33	32	30	29							24	23		

[A]: Keyless start control module connector (viewed from harness side)

I5JB0AA50012-02

Terminal Number	Circuit	Normal Voltage	Condition
G44-1	Driver side door antenna (–)	*0 – 5 V	Refer to “Reference waveform No. 1: ”
G44-2	Driver side door antenna (+)		
G44-3	Rear end door antenna (–)	*0 – 5 V	Refer to “Reference waveform No. 1: ”
G44-4	Rear end door antenna (+)		
G44-5	Center antenna (–)	*–1 – 1 V	Refer to “Reference waveform No. 2: ”
G44-6	Center antenna (+)	*–10 – 20 V	


10E-17 Keyless Start System:

Terminal Number	Circuit	Normal Voltage	Condition
G44-7	Luggage room antenna (–)	*10 – 10 V	Refer to “Reference waveform No. 3: ”
G44-8	Luggage room antenna (+)	*8 – 14 V	
G44-9	Ground for keyless start control module	0 – 1 V	Ignition switch is at all positions
G44-10	Power source	10 – 12 V	Ignition switch is at all positions
G44-11	Ignition switch (ACC signal)	10 – 12 V	Ignition switch is at ACC or ON position
		0 – 1 V	Ignition switch is at any position other than ACC or ON position
G44-12	—	—	—
G44-13	—	—	—
G44-14	Ignition switch (key reminder signal)	10 – 12 V	Insert ignition key to ignition key cylinder
		0 – 1 V	Pull out ignition key from ignition key cylinder
G44-15	Ignition switch (ON signal)	10 – 12 V	Ignition switch is at ON position
		0 – 1 V	Ignition switch is at any position other than ON position
G44-16	Driver side door request switch	10 – 12 V	Request switch of driver side door is released
		0 – 1 V	Request switch of driver side door is pushed
G44-17	—	—	—
G44-18	CAN communication line (low)	*1.6 – 2.5 V	Refer to “Reference waveform No. 4: ”
G44-19	CAN communication line (high)	*2.5 – 3.6 V	
G44-20	Power supply for steering lock unit	4 – 6 V	Full time
G44-21	—	—	—
G44-22	—	—	—
G44-23	Passenger side door antenna (–)	*0 – 5 V	Refer to “Reference waveform No. 1: ”
G44-24	Passenger side door antenna (+)		
G44-25	—	—	—
G44-26	—	—	—
G44-27	—	—	—
G44-28	—	—	—
G44-29	Signal for steering lock unit	4 – 6 V	Ignition knob switch is at any position other than ON and OFF position
		*0 – 5 V	Refer to “Reference waveform No. 5: ”
G44-30	Ground for steering lock unit	0 – 1 V	Full time
G44-31	—	—	—
G44-32	Rear end door request switch	10 – 12 V	Request switch of rear end door is at any position other than ON position
		0 – 1 V	Request switch of rear end door is at ON position
G44-33	Driver side door lock switch	*0 – 5 V	Refer to “Reference waveform No. 6: ”
G44-34	Ignition knob switch	10 – 12 V	When pushing ignition knob switch of steering lock unit
		0 – 1 V	When releasing ignition knob switch of steering lock unit
G44-35	—	—	—
G44-36	Passenger side door request switch	10 – 12 V	Request switch of passenger side door is at any position other than ON position
		0 – 1 V	Request switch of passenger side door is at ON position
G44-37	Passenger side door lock switch	*0 – 5 V	Refer to “Reference waveform No. 6: ”
G44-38	—	—	—
G44-39	—	—	—
G44-40	—	—	—

Reference waveform No. 1

Driver, passenger and rear end door antenna request signals (Request signal (1) transmitted by each door antenna when each door request switch is pushed)

Measurement terminal	Driver side door antenna <ul style="list-style-type: none"> CH1: "G44-2" to "G44-9" CH2: "G44-1" to "G44-9" Passenger side door antenna <ul style="list-style-type: none"> CH1: "G44-24" to "G44-9" CH2: "G44-23" to "G44-9" Rear end door antenna <ul style="list-style-type: none"> CH1: "G44-4" to "G44-9" CH2: "G44-3" to "G44-9"
Oscilloscope setting	CH1: 5 V/DIV, CH2: 5 V/DIV TIME: 40 ms/DIV
Measurement condition	Request switch of each door is pushed with remote controller carried

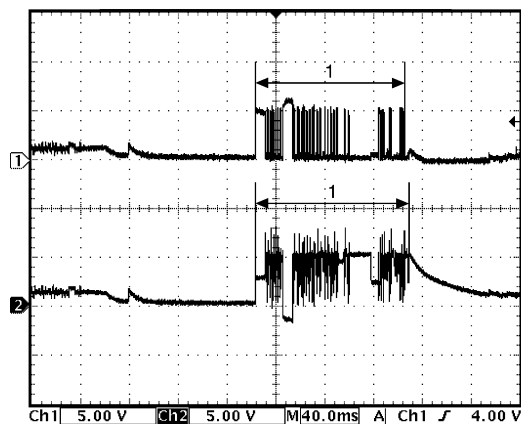


I4RS0BA50015-02

Reference waveform No. 2

Center antenna signal

(Request signal (1) transmitted by center antenna when each door request switch is pushed)

Measurement terminal	CH1: "G44-6" to "G44-9" CH2: "G44-5" to "G44-9"
Oscilloscope setting	CH1: 10 V/DIV, CH2: 2 V/DIV TIME: 20 ms/DIV
Measurement condition	<ul style="list-style-type: none"> Ignition knob switch of steering lock unit is pushed Request switch of each door is pushed with remote controller carried

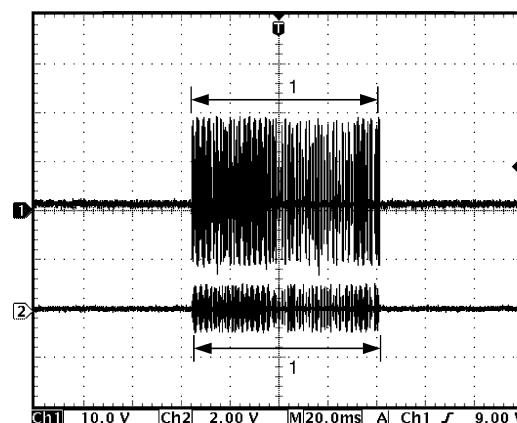


I5JB0AA50024-03

Reference waveform No. 3

Luggage room antenna signal

(Request signal (1) transmitted by luggage room antenna when each door request switch is pushed)

Measurement terminal	CH1: "G44-8" to "G44-9" CH2: "G44-7" to "G44-9"
Oscilloscope setting	CH1: 10 V/DIV, CH2: 10 V/DIV TIME: 20 ms/DIV
Measurement condition	Request switch of each door is pushed with remote controller carried

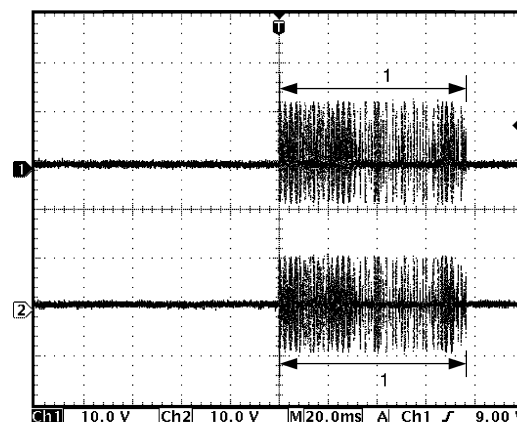


I5JB0AA50025-02

10E-19 Keyless Start System:

Reference waveform No. 4

CAN communication signals

Measurement terminal	CH1: "G44-19" to "G44-9" CH2: "G44-18" to "G44-9"
Oscilloscope setting	CH1: 1 V/DIV, CH2: 1 V/DIV TIME: 40 μ s/DIV
Measurement condition	Ignition switch is at ON position

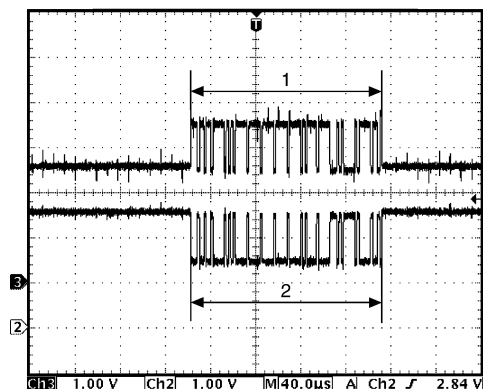

I4RS0BA50018-02


1. CAN communication line signal (high)
2. CAN communication line signal (low)

Reference waveform No. 5

Steering lock unit signal

(Signal (1) communicated between keyless start control module and steering lock unit when measurement condition described below applies)

Measurement terminal	CH1: "G44-29" to "G44-9"
Oscilloscope setting	CH1: 2 V/DIV TIME: 10 ms/DIV
Measurement condition	<ul style="list-style-type: none"> Ignition knob switch of steering lock unit is pushed Request switch of each door is pushed with remote controller carried

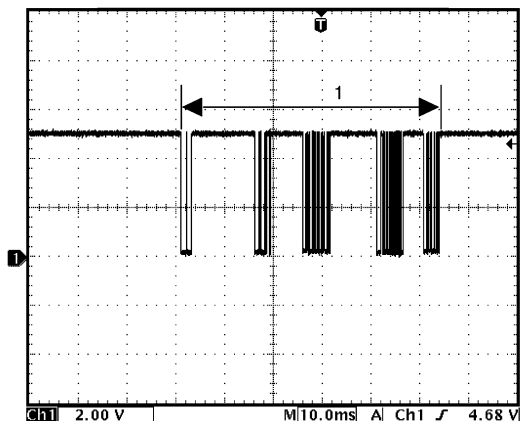

I5JB0AA50026-02


Reference waveform No. 6

Driver and passenger side door lock switch signals.

(This signal indicates door lock status.)

In case the position of driver and passenger side door lock is changed from the unlock to the lock.

Measurement terminal	Driver side door lock switch <ul style="list-style-type: none"> CH1: "G44-33" to "G44-9" Passenger side door lock switch <ul style="list-style-type: none"> CH2: "G44-37" to "G44-9"
Oscilloscope setting	CH1: 2 V/DIV CH2: 2 V/DIV TIME: 1 s/DIV
Measurement condition	Press lock side of manual door lock switch

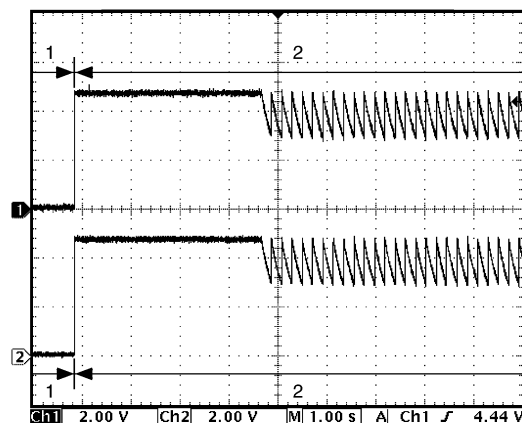


I5JB0AA50027-02

1. Unlock signal	2. Lock signal
------------------	----------------

In case the position of passenger side door lock is changed from the lock to the unlock when the position of driver and passenger side door is at the lock

Measurement terminal	Driver side door lock switch • CH1: "G44-33" to "G44-9" Passenger side door lock switch • CH2: "G44-37" to "G44-9"
Oscilloscope setting	CH1: 2 V/DIV CH2: 2 V/DIV TIME: 400 ms/DIV
Measurement condition	Driver door is at lock position and passenger side door is at unlock position

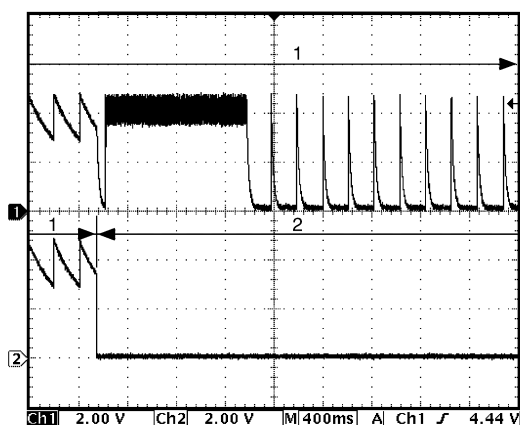


I5JB0AA50028-02

1. Lock signal

2. Unlock signal

In case the position of driver side door lock is changed from the lock to the unlock when the position of driver and passenger side door is at the lock.

Measurement terminal	Driver side door lock switch • CH1: "G44-33" to "G44-9" Passenger side door lock switch • CH2: "G44-37" to "G44-9"
Oscilloscope setting	CH1: 2 V/DIV CH2: 2 V/DIV TIME: 400 ms/DIV
Measurement condition	Driver door is at unlock position and passenger side door is at lock position

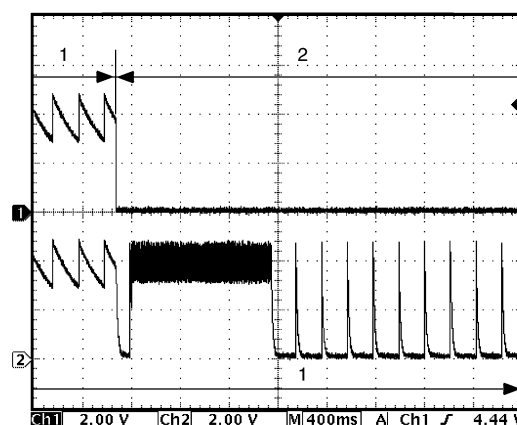


I5JB0AA50029-02

1. Lock signal

2. Unlock signal

In case the position of driver and passenger side door lock is changed from the lock to the unlock.

Measurement terminal	Driver side door lock switch • CH1: "G44-33" to "G44-9" Passenger side door lock switch • CH2: "G44-37" to "G44-9"
Oscilloscope setting	CH1: 2 V/DIV CH2: 2 V/DIV TIME: 400 ms/DIV
Measurement condition	Driver door is at unlock position and passenger side door is at lock position

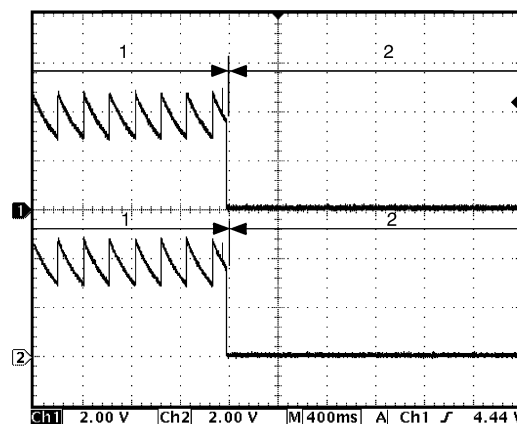


I5JB0AA50030-03

1. Lock signal

2. Unlock signal

Wiring Diagram

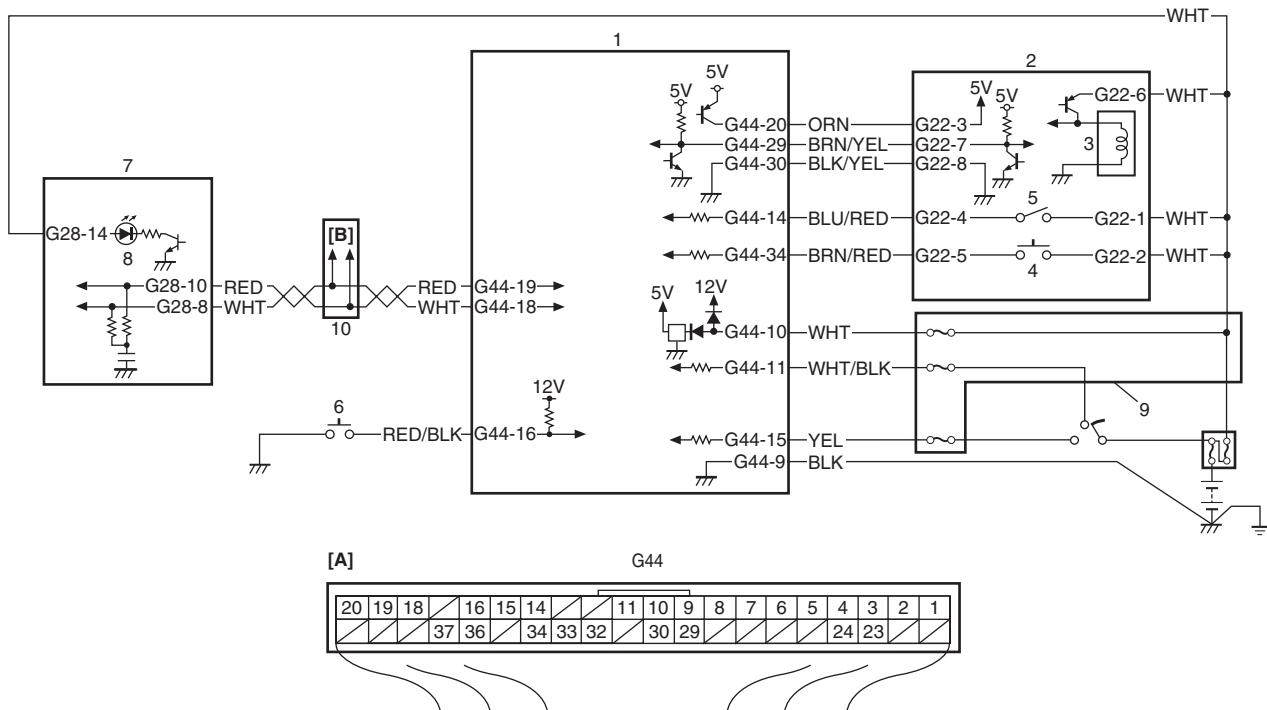

I6JB01A50005-01

[A]: Keyless start control module connector (viewed from harness side)	3. Steering lock solenoid	7. Combination meter
[B]: To each control module	4. Ignition knob switch	8. Key indicator light
1. Keyless start control module	5. Key reminder switch	9. Junction box
2. Steering lock unit	6. Driver side door request switch	10. Junction connector

Description

The keyless start control module detects DTC by using signals from the key reminder and driver side door request switches. The keyless start control module makes the key indicator light in the combination meter flash on and off by using CAN communication.

Troubleshooting

Step	Action	Yes	No
1	Combination meter power and ground circuit check 1) Turn ignition switch to ON position. <i>Do warning light in combination meter other than key indicator light light up?</i>	Go to Step 2.	Check main fuse, circuit fuse, combination meter power and ground circuit.
2	Driver side door request switch and its circuit check 1) Check driver side door request switch and its circuit referring to "DTC No. 51 / No. 52 / No. 53: Driver Side / Passenger Side / Rear End Door Request Switch Failure". <i>Is it in good condition?</i>	Go to Step 3.	Repair or replace malfunction part.
3	Key reminder switch and its circuit check 1) Turn ignition switch to OFF position. 2) Disconnect connector from ignition switch. 3) Check key reminder switch for operation referring to "Ignition Switch Inspection in Section 9C". 4) If OK, check for open, short and high resistance in key reminder switch circuit. <i>Is it in good condition?</i>	Go to Step 4.	Repair or replace malfunction part.
4	Keyless start control module power supply and ground circuit 1) Check keyless start control module power and ground circuit for condition referring to "Keyless Start Control Module Power and Ground Circuit Check". <i>Is it in good condition?</i>	Go to Step 5.	Repair circuit.
5	CAN communication circuit check 1) Turn ignition switch to OFF position. 2) Disconnect connectors of all control modules communicating by means of CAN. 3) Check CAN communication circuit between control modules for open, short and high resistance. <i>Is each CAN communication circuit in good condition?</i>	Substitute a known-good keyless start control module and recheck.	Repair circuit.


Troubleshooting

Step	Action	Yes	No
1	Combination meter power and ground circuit check 1) Turn ignition switch to ON position. <i>Do warning light in combination meter other than key indicator light light up?</i>	Go to Step 2.	Check main fuse, circuit fuse, combination meter power and ground circuit.
2	Keyless start control module power and ground circuit check 1) Check keyless start control module power and ground circuit for condition referring to "Keyless Start Control Module Power and Ground Circuit Check". <i>Is it in good condition?</i>	Go to Step 3.	Repair circuit.
3	Steering lock unit ignition knob switch check 1) Check ignition knob switch of steering lock unit for operation referring to "Steering Lock Unit Inspection". <i>Is it in good condition?</i>	Go to Step 4.	Replace steering lock unit.
4	Wire harness check 1) Turn ignition switch to OFF position. 2) Disconnect connector from keyless start control module, steering lock unit and combination meter. 3) Check for open, short and high resistance in following circuits. <ul style="list-style-type: none"> • Ignition knob switch signal circuit • Keyless start control module and combination meter CAN communication circuit <i>Is it in good condition?</i>	Go to Step 5.	Repair circuit.
5	Keyless start system operation check 1) With remote controller of which ID code is registered in keyless start control module carried with you, try to turn ignition knob switch. <i>Can it be turned to any position other than "LOCK" position?</i>	Replace combination meter.	Substitute a known-good keyless start control module and recheck.

Keyless Start Control Module Power and Ground Circuit Check

S6JB0BA504016

Wiring Diagram

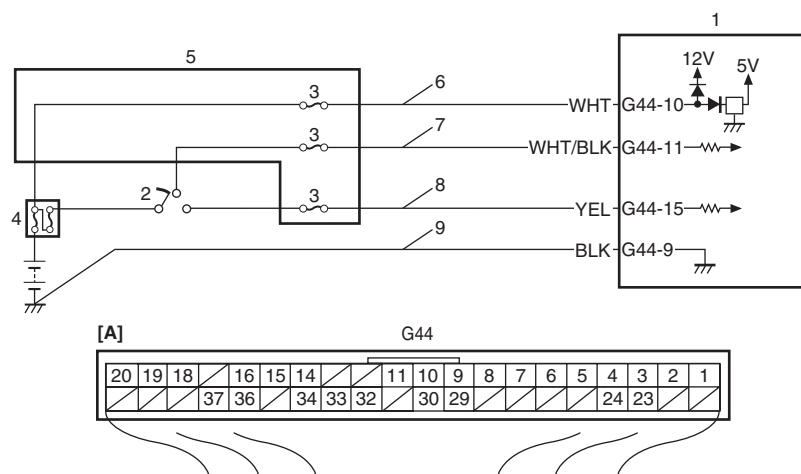

I7JB01A50003-01


[A]: Keyless start control module connector (viewed from harness side)	4. Main fuse	8. IG ON signal circuit
1. Keyless start control module	5. Junction block	9. Ground circuit
2. Ignition switch	6. Power source circuit	
3. Circuit fuse	7. ACC signal circuit	

Troubleshooting

Step	Action	Yes	No
1	Fuse check 1) Turn ignition switch to OFF position. 2) Check circuit fuse and main fuse for condition. <i>Are fuses in good condition?</i>	Go to Step 2.	Replace fuse(s) and check for short.
2	Power supply circuit check 1) Disconnect connector from keyless start control module. 2) Check for proper connection to "Power source", "ACC signal" and "IG ON signal" terminal of keyless start control module connector. 3) If OK, measure voltage between following terminals. <ul style="list-style-type: none"> "Power source" terminal of keyless start control module connector and vehicle body ground with ignition switch is at OFF position "ACC signal" terminal of keyless start control module connector and vehicle body ground with ignition switch is at ACC position "IG ON signal" terminal of keyless start control module connector and vehicle body ground with ignition switch is at ON position <i>Is each terminal voltage is 10 – 14 V?</i>	Go to Step 3.	Repair defective power supply circuit.
3	Ground circuit check 1) Check for proper connection to "Ground" terminal of keyless start control module connector. 2) If OK, measure resistance between "Ground" terminal of keyless start control module connector and vehicle body ground. <i>Is resistance 1 Ω or less?</i>	Power and ground circuit is in good condition.	Repair ground circuit.

DTC No. 11: Communication Error with Steering Lock Unit

S6JB0BA504017

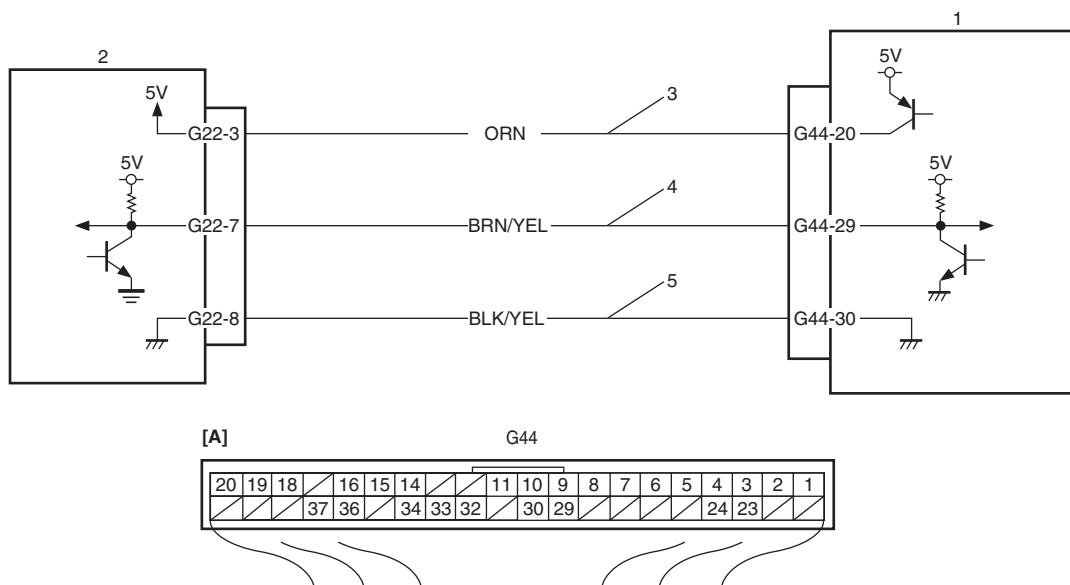Wiring Diagram

I7JB01A50004-01

[A]: Keyless start control module connector (viewed from harness side)	3. Steering lock unit power supply circuit
1. Keyless start control module	4. Steering lock unit signal circuit
2. Steering lock unit	5. Steering lock unit ground circuit

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
No communication is available between keyless start control module and steering lock unit.	<ul style="list-style-type: none"> Steering lock unit and its circuit Keyless start control module

DTC Confirmation Procedure

- 1) Clear DTC referring to "DTC Clearance".
- 2) Turn ignition knob switch pushing ignition knob switch.
- 3) Check DTC referring to "DTC Check".

Troubleshooting

Step	Action	Yes	No
1	Was "Keyless Start System Check" performed?	Go to Step 2.	Go to "Keyless Start System Check".
2	Steering lock unit circuit check <ol style="list-style-type: none"> 1) Disconnect connector from keyless start control module. 2) Check for proper connection to "Steering lock unit power supply", "Steering lock unit signal" and "Steering lock unit ground" terminals of keyless start control module connector. 3) If OK, check for open, short and high resistance in following circuits. <ul style="list-style-type: none"> Steering lock unit power supply circuit Steering lock unit signal circuit Steering lock unit ground circuit <p>Is each circuit in good condition?</p>	Go to Step 3.	Repair circuit.

10E-27 Keyless Start System:

Step	Action	Yes	No
3	Steering lock unit power supply voltage check 1) Connect connector to keyless start control module. 2) Measure voltage between "Steering lock unit power supply" terminal of steering lock unit connector and vehicle body ground. <i>Is voltage 4 – 6 V?</i>	Replace steering lock unit.	Substitute a known-good keyless start control module and recheck.

DTC No. 13 / No. 14: Release Signal Error from Steering Lock Unit / Steering Lock Unit Malfunction

S6JB0BA504018

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC No. 13: Although lock release signal is output to steering lock unit, no lock release signal is inputted from steering lock unit. (wire harness is normal) DTC No. 14: Although lock release signal is output to steering lock unit, steering lock is not released due to temperature rise of steering lock unit solenoid and no lock release signal is inputted. (wire harness is normal)	<ul style="list-style-type: none">Steering lock unit

DTC Confirmation Procedure

- 1) Clear DTC referring to "DTC Clearance".
- 2) Turn ignition knob switch pushing ignition knob switch.
- 3) Check DTC referring to "DTC Check".

Troubleshooting

Replace steering lock unit and recheck.

NOTE

Be sure to register the following code when a used keyless start control module is installed. Otherwise DTC No.13 is detected by keyless start control module though steering lock unit is normal.

- With immobilizer control system, ignition key transponder code is not registered in ECM.
- Without immobilizer control system, steering lock unit ID code is not registered in keyless start control module.

DTC No. 21 / No. 22: Internal Error of Keyless Start Control Module (EEPROM Reading Error) / (EEPROM Writing Error)

S6JB0BA504019

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC No. 21: Data cannot be read from memory in keyless start control module. DTC No. 22: Data cannot be written into memory in keyless start control module.	<ul style="list-style-type: none">Keyless start control module

DTC Confirmation Procedure


- 1) Clear DTC referring to "DTC Clearance".
- 2) Turn ignition knob switch pushing ignition knob switch.
- 3) Push request switch of each door.
- 4) Check DTC referring to "DTC Check".

Troubleshooting

Substitute a known-good keyless start control module and recheck.

DTC No. 31: Lost Communication with BCM

Wiring Diagram

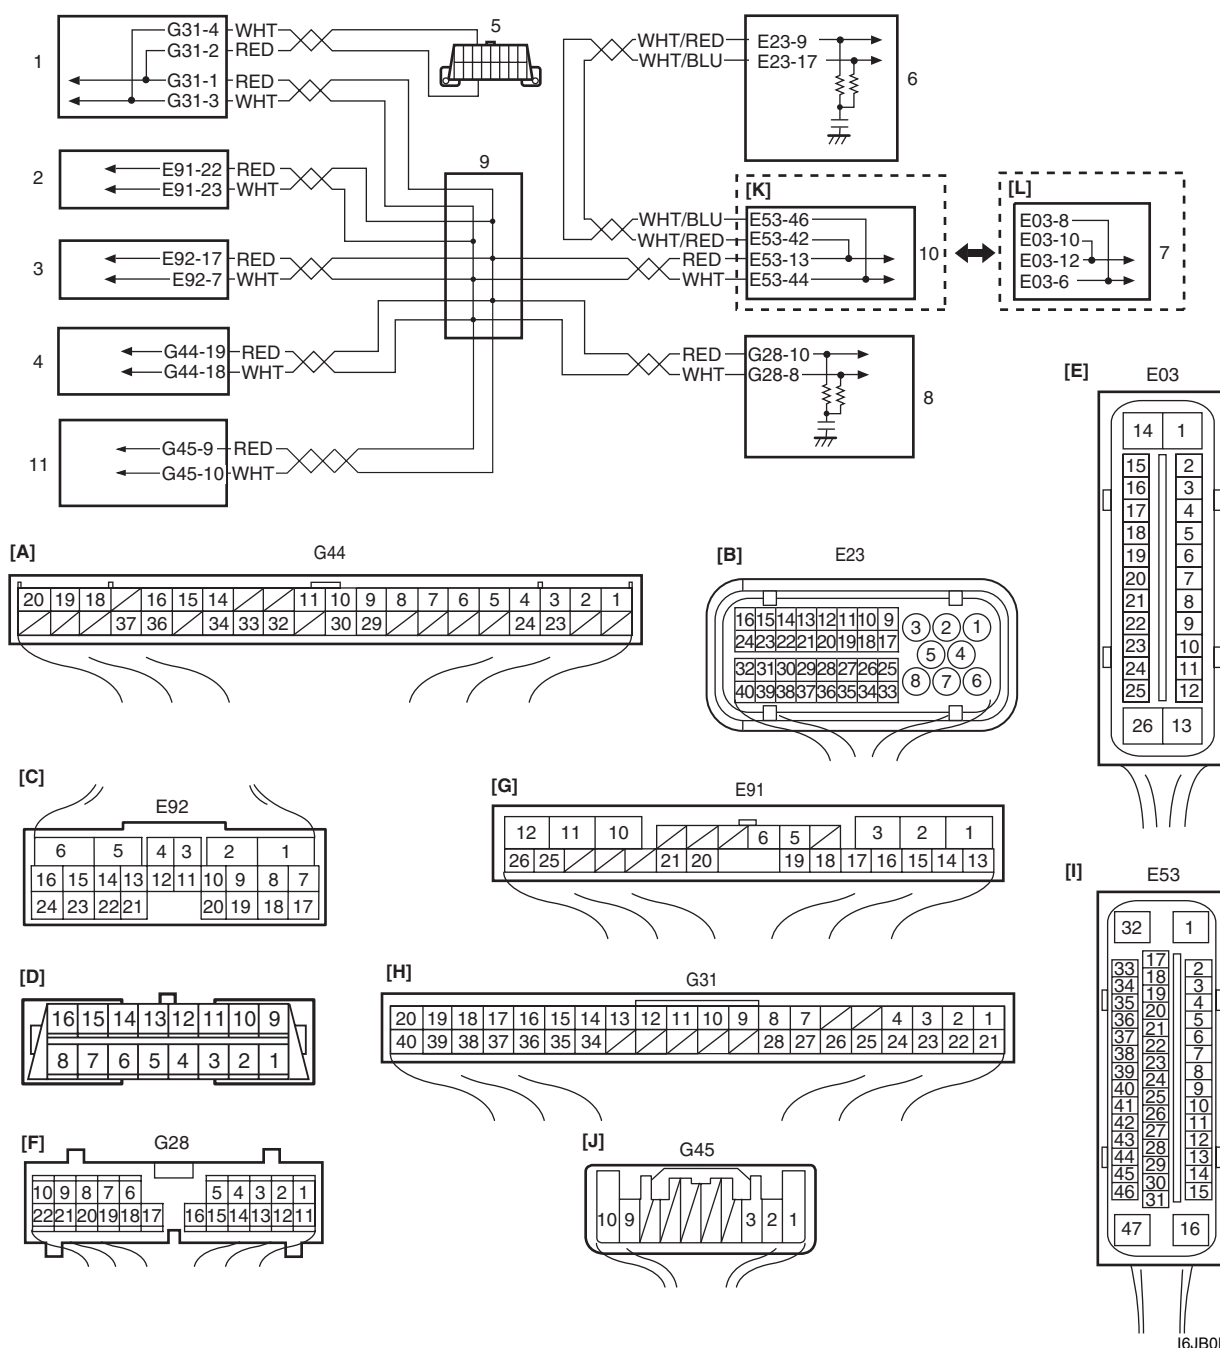

16JB0BA50002-01

[A]: Keyless start control module connector (viewed from harness side)	1. BCM
[B]: ECM connector (viewed from harness side)	2. 4WD control module (if equipped)
[C]: TCM connector (viewed from harness side)	3. TCM (A/T model)
[D]: DLC (viewed from terminal side)	4. Keyless start control module
[E]: ABS control module connector (viewed from terminal side)	5. DLC
[F]: Combination meter connector (viewed from harness side)	6. ECM
[G]: 4WD control module connector (viewed from harness side)	7. ABS control module
[H]: BCM connector (viewed from harness side)	8. Combination meter
[I]: ESP® control module connector (viewed from terminal side)	9. Junction connector
[J]: Steering angle sensor connector (viewed from harness side)	10. ESP® control module
[K]: ESP® model	11. Steering angle sensor (if equipped)
[L]: Other than ESP® model	

10E-29 Keyless Start System:**DTC Detecting Condition and Trouble Area**

DTC detecting condition	Trouble area
Keyless start control module cannot receive data sent by CAN from BCM.	<ul style="list-style-type: none"> • CAN communication circuit • Keyless start control module • BCM

DTC Confirmation Procedure

- 1) Clear DTC referring to “DTC Clearance”.
- 2) Turn ignition key knob by pushing ignition key knob.
- 3) Check DTC referring to “DTC Check”.

Troubleshooting

Step	Action	Yes	No
1	<i>Was “Keyless Start System Check” performed?</i>	Go to Step 2.	Go to “Keyless Start System Check”.
2	DTC Check of keyless start control module <i>Is DTC No. 33 detected?</i>	Go to “DTC No. 33: Control Module Communication Bus Off”.	Go to Step 3.
3	DTC Check of BCM 1) Check BCM for DTC referring to “DTC Check in Section 10B” <i>Is DTC U1073, DTC U1100 or DTC U1101 detected?</i>	Go to applicable DTC diag flow.	Go to Step 4.
4	CAN communication circuit check 1) Check connection of connectors of all control modules communicating by means of CAN. 2) Disconnect connectors from BCM and keyless start control module. 3) Check CAN communication circuit between BCM and keyless start control module for open, short and high resistance. <i>Is each CAN communication circuit in good condition?</i>	Go to Step 5.	Repair circuit.
5	CAN communication circuit check 1) Disconnect connectors of all control modules communicating by means of CAN. 2) Check CAN communication circuit between control modules other than Step 4 for open, short and high resistance. <i>Is each CAN communication circuit in good condition?</i>	Go to Step 6.	Repair circuit.
6	DTC check of ECM 1) Connect connectors of disconnected control modules communicating by means of CAN. 2) Check ECM for DTC. <i>Is DTC U0140 detected?</i>	Check BCM power and ground circuit. If circuit is OK, substitute a known-good BCM and recheck.	Go to Step 7.

Step	Action	Yes	No
7	DTC check of keyless start control module 1) Turn ignition switch to OFF position. 2) Disconnect connector of any one of control module other than keyless start control module. 3) Recheck keyless start control module for DTC. <i>Is DTC No.31 detected?</i>	Using same method, disconnect connectors of control module other than keyless start control module one by one to check if DTC No.31 is detected. If DTC No.31 is detected even through connector of control module other than keyless start control module is disconnected, substitute a known-good keyless start control module and recheck.	Check power and ground circuit of disconnected control module and recheck. If circuit is OK, substitute a known-good disconnected control module and recheck.

DTC No. 33: Control Module Communication Bus Off

S6JB0BA504021

Wiring Diagram

Refer to "DTC No. 31: Lost Communication with BCM".

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
Communication is not available with all control modules connected by CAN.	<ul style="list-style-type: none"> • CAN communication circuit • Combination meter • Keyless start control module • BCM • 4WD control module (if equipped) • ABS or ESP® control module • TCM (A/T model) • ECM • Steering angle sensor (if equipped)

DTC Confirmation Procedure

- 1) Clear DTC referring to "DTC Clearance".
- 2) Start engine and run it for 1 min. or more.
- 3) Check DTC referring to "DTC Check".

Troubleshooting

Step	Action	Yes	No
1	<i>Was "Keyless Start System Check" performed?</i>	Go to Step 2.	Go to "Keyless Start System Check".
2	Control module connector check 1) Check connection of connectors of all control modules communicating by means of CAN. 2) Recheck keyless start control module for DTC. <i>Is DTC No. 33 detected?</i>	Go to Step 3.	Intermittent trouble. Check for intermittent referring to "Intermittent and Poor Connection Inspection in Section 00".


10E-31 Keyless Start System:

Step	Action	Yes	No
3	CAN communication circuit check 1) Turn ignition switch to OFF position. 2) Disconnect connectors of all control modules communicating by means of CAN. 3) Check CAN communication circuit between control modules for open, short and high resistance. <i>Is each CAN communication circuit in good condition?</i>	Go to Step 4.	Repair circuit.
4	DTC check of keyless start control module 1) Turn ignition switch to OFF position. 2) Connect connectors of disconnected control modules communicating by means of CAN. 3) Disconnect connector of any one control module other than keyless start control module. 4) Recheck keyless start control module for DTC. <i>Is DTC No.33 detected?</i>	Using same method, disconnect connectors of control module other than keyless start control module and combination meter one by one to check if DTC No.33 is detected. If DTC No.33 is detected even though connector of control module other than keyless start control module and combination meter is disconnected, substitute a known-good keyless start control module and recheck.	Check power and ground circuit of disconnected control module. If circuit is OK, substitute a known-good disconnected control module and recheck.

DTC No. 51 / No. 52 / No. 53: Driver Side / Passenger Side / Rear End Door Request Switch Failure

S6JB0BA504022

Wiring Diagram

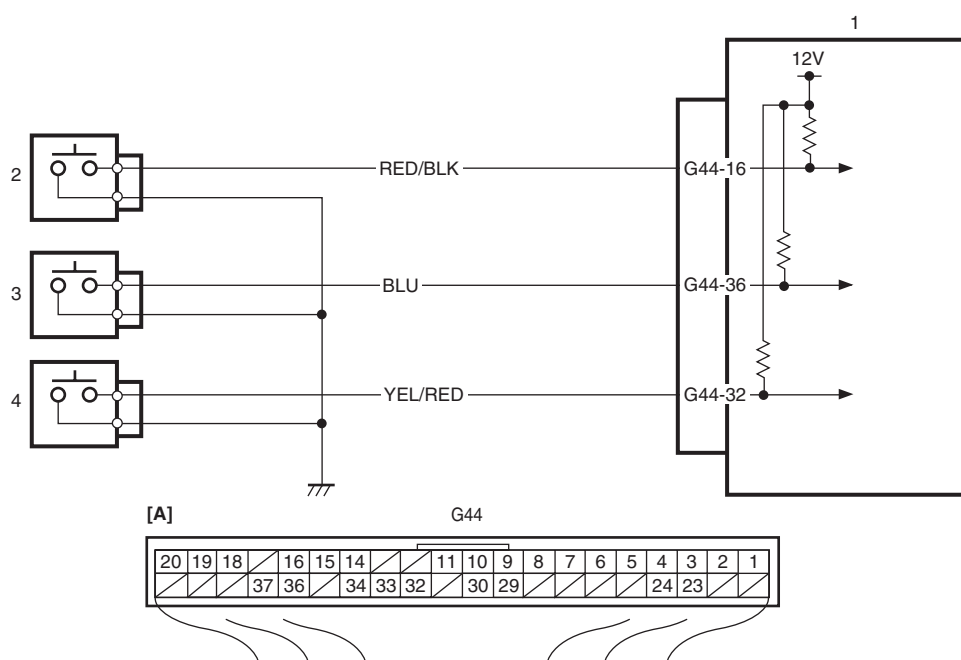

15JB0AA50018-02

[A]: Keyless start control module connector (viewed from harness side)	3. Passenger side door request switch
1. Keyless start control module	4. Rear end door request switch
2. Driver side door request switch	

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
DTC No. 51: Input signal from driver side door request switch remains ON, unchanged for 10 minutes or longer. DTC No. 52: Input signal from passenger side door request switch remains ON, unchanged for 10 minutes or longer. DTC No. 53: Input signal from rear end door request switch remains ON, unchanged for 10 minutes or longer.	<ul style="list-style-type: none"> • Driver side door request switch and its circuit • Passenger side door request switch and its circuit • Rear end door request switch and its circuit • Keyless start control module

DTC Confirmation Procedure

- 1) Clear DTC referring to "DTC Clearance".
- 2) Push request switch of each door.
- 3) Check DTC referring to "DTC Check".

Troubleshooting





Step	Action	Yes	No
1	Was "Keyless Start System Check" performed?	Go to Step 2.	Go to "Keyless Start System Check".
2	Request switch check 1) Check related door request switch for function referring to "Front Door (Driver and Passenger Side), Rear End Door Request Switch Inspection". <i>Is each switch in good condition?</i>	Go to Step 3.	Replace request switch.
3	Wire harness check 1) Disconnect connector from keyless start control module. 2) Check for open, short and high resistance in related door request switch circuit. <i>Is each circuit in good condition?</i>	Substitute a known-good keyless start control module and recheck.	Repair circuit.

Repair Instructions



Antennas and Request Switches Removal and Installation

S6JB0BA506001

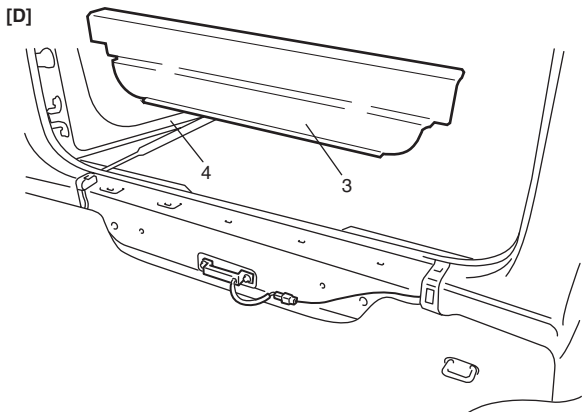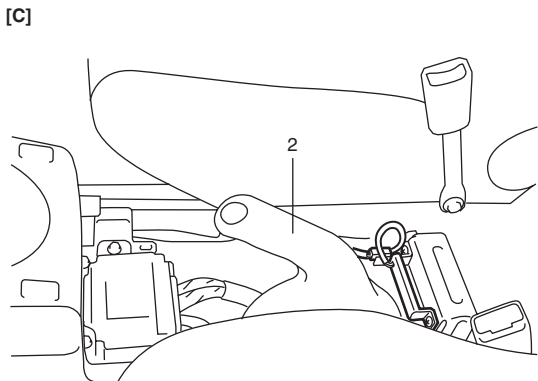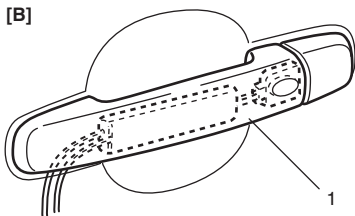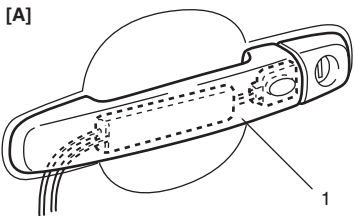Remove and install antennas and request switches referring to the following figures.



I5JB0AA50019-01

 [A]: Driver side door antenna and request switch (included in outside door handle assembly) : Antenna and request switch can not be removed from outside door handle assembly	1. Outside handle assembly
 [B]: Passenger side or rear end door antenna and request switch (included in outside door handle assembly) : Antenna and request switch can not be removed from outside door handle assembly	2. Parking brake lever
[C]: Center antenna	3. Tail end member trim
[D]: Luggage room antenna	4. Rear end door

Front Door (Driver and Passenger Side), Rear End Door Request Switch Inspection

S6JB0BA506002

- 1) Remove door trim from door panel.
For front door trim, refer to Step 1) to 3) of "Front Door Glass Removal and Installation in Section 9E".
For rear end door trim, refer to Step 1) of "Rear End Door Lock Assembly Removal and Installation in Section 9F".
- 2) Check for continuity between terminals "1" and "2" at each switch position as shown below. If check result is not as specified, replace.

Request switch (1) specification

ON position (request switch pushed): Continuity

OFF position (request switch released): No continuity



I5JB0AA50020-01

2. Outside handle

Steering Lock Unit Removal and Installation

S6JB0BA506003

For removal and installation, refer to "Steering Lock Assembly (Ignition Switch) Removal and Installation in Section 6B".

Steering Lock Unit Inspection

S6JB0BA506004

Check key reminder switch and ignition knob switch in steering lock unit for operation referring to "Ignition Switch Inspection in Section 9C".

Front Door Lock Switch Inspection


S6JB0BA506005

- 1) Remove door trim from door panel referring to Step 1) to 3) of "Front Door Glass Removal and Installation in Section 9E".
- 2) Check for continuity between terminals "1" and "2" at each switch position as shown below. If check result is not as specified, replace.

Door lock switch specification

LOCK position: No continuity

UNLOCK position: Continuity

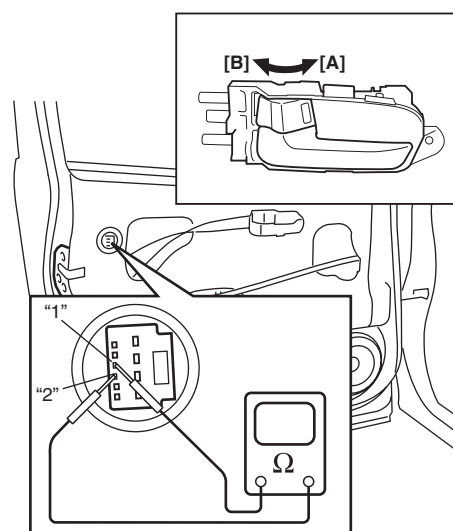

I5JB0AA50021-02

[A]: Lock


[B]: Unlock

Keyless Start Control Module Removal and Installation

S6JB0BA506006

Removal

- 1) Disconnect negative cable at battery.
- 2) Remove glove box from instrument panel.
- 3) Disconnect connector from keyless start control module (1).
- 4) Remove keyless start control module mounting bolt (2) and then remove keyless start control module with its bracket from steering support member.

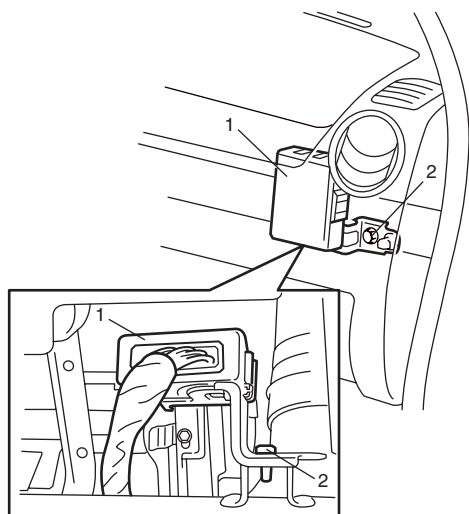

I5JB0AA50022-01

Installation

For installation, reverse removal procedure.

If keyless start control module is replaced, register ID code of remote controller into keyless start control module, referring to "Registration Procedure for Remote Controller ID Code".

Remote Controller Inspection


S6JB0BA506007

Check that remote controller operation indicator light (3) lights up when lock (1) or unlock (2) button of remote controller is pushed.

If it doesn't light up in this check, replace battery and then recheck. If it doesn't light up even after battery replacement, replace remote controller.

NOTE

When remote controller transmits lock or unlock signal, it makes operation indicator light light up.

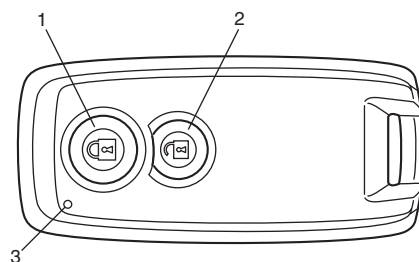


I4RS0BA50031-01

Replacement of Remote Controller Battery

S6JB0BA506008

If remote controller operation indicator light fails to light up when lock or unlock button of remote controller is pushed, replace its battery as follows.

- 1) If ignition key (1) is inserted in remote controller, remove it.
- 2) With tip of flat blade screwdriver (2) put in slot (3) of remote controller (4), pry it open.

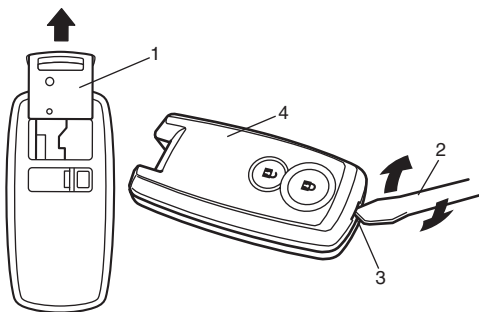


I4RS0BA50032-01

- 3) Remove battery (4) from lower case (5).

⚠ CAUTION

Use care not to allow grease or dirt to be attached on the printed circuit board and the battery.

- 4) Replace the battery (lithium disc-type CR 2032 or equivalent battery) so its (+) terminal faces on remote controller lower case.

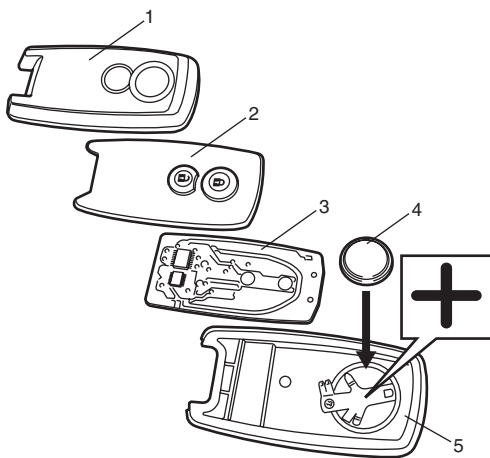

I4RS0BA50033-01

1. Upper case	3. Printed circuit board
2. Rubber switch	

- 5) Install printed circuit board and rubber switch to upper case and then fit lower case securely.

NOTE

- To prevent theft, be sure to break the remote controller before discarding it.
- Dispose of the used battery properly according to applicable rules or regulations. Do not dispose of lithium batteries with ordinary household trash.

Registration Procedure for Remote Controller ID Code

S6JB0BA506009



NOTE

- It is possible to register up to 4 remote controllers in keyless start control module.
- Setting keyless start control module to ID code registration mode of remote controller will erase all remote controller ID codes that have been registered in keyless start control module. Therefore, when registering remote controller ID codes in keyless start control module, have all of those to be registered ready and execute their registration at the same time.
- When registration of more than four remote controller ID codes is attempted, the oldest remote controller ID code will be erased and that inputted after the fourth one will be registered.
- When keyless start control module which was used in another vehicle has been installed, register the ID code of the remote controller to the keyless start control module first and then the following code.
 - With immobilizer control system, register the ignition key transponder code for the immobilizer control system in ECM. For registration procedure of that, refer to “Registration of the Ignition Key in Section 10C”.
 - Without immobilizer control system, register the steering lock unit ID code in keyless start control module. For registration procedure of that, refer to “Keyless Start Registration”.

10E-37 Keyless Start System:

If remote controller or keyless start control module is replaced with a new one or additional remote controller is necessary, register ID code(s) of remote controller.

- 1) Sit in driver seat and close all doors.
- 2) Check that door lock of driver seat is unlocked.
- 3) Insert ignition key (1) into ignition key cylinder.
- 4) Perform Steps a) through f) described below within 25 seconds after Step 3).
 - a) First push manual door lock switch (2) toward lock side (3) and then push it toward unlock side (4).
 - b) Repeat Step a) 2 more times.
 - c) Push lock side of manual door lock switch.
 - d) Remove ignition key from ignition key cylinder once and then insert it again.
 - e) Repeat Step d) 3 more times.
 - f) Start engine and wait for 3 seconds.

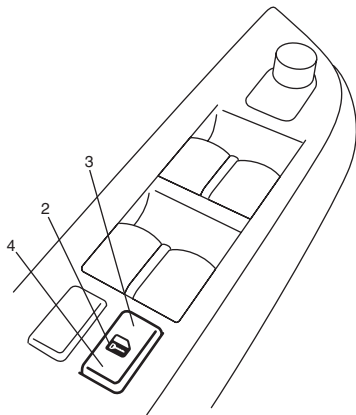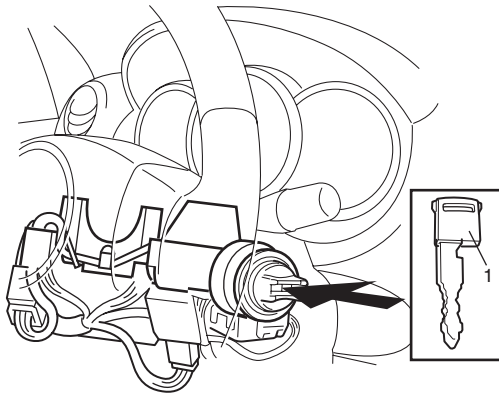

I5JB0AA50023-03

NOTE

When 60 seconds elapse after engine is started, the above process to enter registration mode will be cancelled. Therefore, be sure to proceed to the next step within 60 seconds.

- 5) Turn ignition switch to OFF position.
When ignition switch is turned to OFF position, buzzer sounds twice and door lock is activated from lock position to unlock position. This operation indicates that keyless start control module has entered registration mode.
- 6) Push lock or unlock button of remote controller within 30 seconds after Step 5) to be registered.
When lock or unlock button of remote controller is pushed, buzzer sounds twice, door lock is activated to lock position and then to unlock position. This operation indicates that remote controller ID code has been registered in keyless start control module. If an additional remote controller needs to be registered, repeat the procedure of Step 6) within 30 seconds after Step 5).
- 7) To end registration mode, remove ignition key from ignition key cylinder or turn it to ON position.
In case of vehicle equipped with immobilizer control system, if engine start function of keyless start system does not work after registration, check ECM if DTC P1615 is detected. If it is detected, go to "DTC P1615: Steering Lock Unit Communication Error (for Vehicle with Keyless Start System) in Section 10C". If it is not detected, perform registration procedure again.

Keyless Start Registration

S6JB0BA506010

In case of vehicle not equipped with immobilizer control system, register steering lock unit ID code in keyless start control module when keyless start control module which was used in another vehicle has been installed or steering lock unit was replaced, according to "Keyless start registration" of "Misc Test" under "Engine" mode of SUZUKI scan tool referring to "SUZUKI Tech 2 Operator's Manual".

Prepared by
SUZUKI MOTOR CORPORATION

1st Ed. Sep., 2007

32.5 mm

SUZUKI
GRAND
VITARA

SUZUKI

GRAND
VITARA

SUZUKI MOTOR CORPORATION

VOL.
1 OF 2

SERVICE MANUAL

JB627

VOLUME 1 OF 2

SERVICE MANUAL

99500-66J00-01E

SUZUKI
Caring for Customers
99500-66J00-01E
(英)

38.0 mm

SUZUKI
GRAND
VITARA

SUZUKI

GRAND
VITARA

SUZUKI MOTOR CORPORATION

VOL.
2 OF 2

SERVICE MANUAL

JB627

VOLUME 2 OF 2

SERVICE MANUAL

99500-66J00-01E

SUZUKI
Caring for Customers
99500-66J00-01E
(英)