

[A]: Hill descent control model	14. EBD warning light (Brake warning light)	29. Right-front wheel speed sensor
[B]: Non-Hill descent control model	15. ABS warning light	30. Left-rear wheel speed sensor
1. Battery	16. ESP® warning light	31. Right-rear wheel speed sensor
2. Main fuse	17. ESP® OFF light	32. ESP® hydraulic unit / control module assembly
3. Fuse box No.1	18. SLIP indicator light	33. ESP® OFF switch
4. Fuse box No.2	19. Hill descent control indicator light	34. Hill descent control switch
5. Ignition switch	20. Light driver module	35. CPU
6. Junction block assembly	21. Junction connector	36. Internal memory
7. Brake light switch	22. To other control modules	37. Pump motor driver (transistor)
8. Brake light relay	23. BCM	38. Solenoid valve power supply driver (transistor)
9. Brake light	24. DLC	39. Pump motor
10. ECM	25. Brake fluid level switch	40. Master cylinder pressure sensor
11. CAN driver	26. Parking brake switch	41. Solenoid valves
12. Steering angle sensor	27. Yaw rate / G sensor assembly	42. Solenoid valve driver (transistor)
13. Combination meter	28. Left-front wheel speed sensor	

E53

