

Interval	Km (x 1,000)	15	30	45	60	75	90
	Miles (x 1,000)	9	18	27	36	45	54
	Months	12	24	36	48	60	72
CHASSIS AND BODY							
Clutch (pedal height and travel)		–	I	–	I	–	I
Brake discs and pads (thickness, wear, damage)		I	I	I	I	I	I
Brake drums and shoes (wear, damage)		–	I	–	I	–	I
Brake hoses and pipes (leakage, damage, clamp)		–	I	–	I	–	I
Brake fluid		–	R	–	R	–	R
Brake lever and cable (damage, stroke, operation)		Inspect at first 15,000 km (9,000 miles) only.					
Tires (wear, damage, rotation)		I	I	I	I	I	I
Wheel discs (damage)		I	I	I	I	I	I
Suspension system (tightness, damage, rattle, breakage)		–	I	–	I	–	I
Propeller shafts		–	–	I	–	–	I
Manual transmission oil (leakage, level) (I: 1st 15,000 km only)		I	–	R	–	–	R
Automatic transmission	Fluid level	–	I	–	I	–	I
	Fluid change	Replace every 165,000 km (99,000 miles).					
	Fluid hose	–	–	–	R	–	–
Transfer oil (leakage, level)		I	–	I	–	I	–
Differential oil (leakage, level) (R: 1st 15,000 km only)		R or I	–	I	–	I	–
Steering system (tightness, damage, breakage, rattle)		–	I	–	I	–	I
Power steering (if equipped)		I	I	I	I	I	I
All latches, hinges and locks		–	I	–	I	–	I

NOTE:

“R”: Replace or change

“I”: Inspect and correct, replace or lubricate if necessary

Maintenance Recommended Under Severe Driving Conditions

If the vehicle is usually used under the conditions corresponding to any severe condition code given below, it is recommended that applicable maintenance operation be performed at the particular interval as shown in the following table.

Severe condition code

A : Repeated short trips

B : Driving on rough and/or muddy roads

C : Driving on dusty roads

D : Driving in extremely cold weather and/or salted roads

E : Repeated short trips in extremely cold weather

F : Leaded fuel use

G : -----

H : Trailer towing (if admitted)

Severe Condition Code	Maintenance	Maintenance Operation	Maintenance Interval	
- B C D -----	Drive belt (V-rib belt)	I	Every 15,000 km (9,000 miles) or 12 months	
		R	Every 45,000 km (27,000 miles) or 36 months	
A - C D E F - H	Engine oil and oil filter	R	Every 5,000 km (3,000 miles) or 4 months	
- B -----	Exhaust pipe mountings	I	Every 15,000 km (9,000 miles) or 12 months	
-- C -----	Air cleaner filter *1	I	Every 2,500 km (1,500 miles)	
		R	Every 30,000 km (18,000 miles) or 24 months	
A B C - E F - H	Spark plugs	Nickel spark plug	R	Every 10,000 km (6,000 miles) or 8 months
		Iridium spark plug	R	Every 30,000 km (18,000 miles) or 24 months
- B C D --- H	Wheel bearing	I	Every 15,000 km (9,000 miles) or 12 months	
- B -----	Suspension bolts and nuts	T	Every 15,000 km (9,000 miles) or 12 months	
- B - D E -- H	Propeller shafts	I	Every 15,000 km (9,000 miles) or 12 months	
- B -- E -- H	Manual transmission, transfer and differential oil	R	First time only: 15,000 km (9,000 miles) or 12 months	
			Second time and after: Every 30,000 km (18,000 miles) or 24 months reckoning from 0 km (0 mile) or 0 month	
- B -- E -- H	Automatic transmission fluid	R	Every 30,000 km (18,000 miles) or 24 months	
- B C D -----	Steering knuckle seal	I	Every 15,000 km (9,000 miles) or 12 months	

NOTE:

- "I": Inspect and correct, replace or lubricate if necessary
- "R": Replace or change
- "T": Tighten to the specified torque
- *1: Inspect or replace more frequently if necessary