


Body Electrical Control System Wiring Circuit Diagram

Reference: BCM General Description

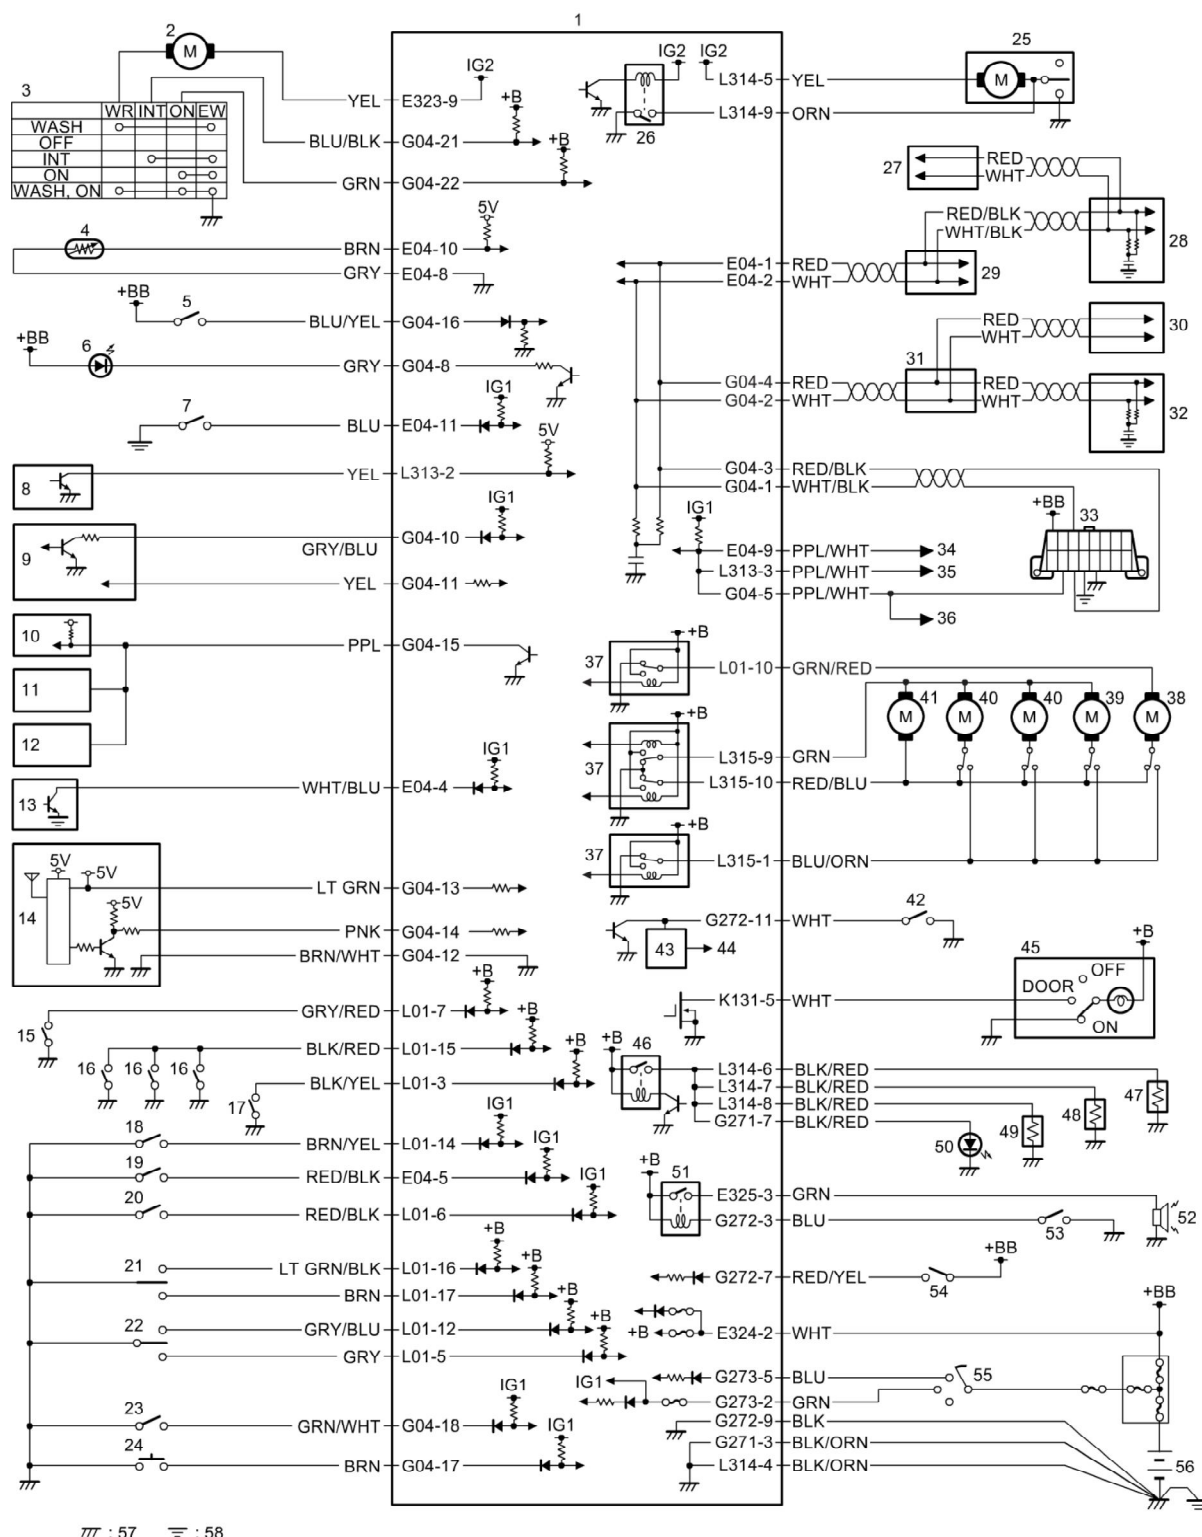

57 : 58



1. BCM (included in junction block)	21. Door key cylinder switch (include in door lock actuator) (if equipped)	41. Rear end door lock actuator (if equipped)
2. Rear washer motor	22. Manual door lock switch (if equipped)	42. Hazard warning switch

3. Rear wiper and washer switch	23. A/C switch	43. Turn signal and hazard warning relay
4. Outside air temperature sensor (if equipped)	24. Rear end door window defogger switch	44. To turn signal light
5. Key reminder switch	25. Rear wiper motor	45. Interior light
6. Theft deterrent light	26. Rear wiper relay	46. Rear end door window defogger relay
7. Oil pressure switch (petrol model)	27. TCM (A/T model)	47. Right side door mirror heater (if equipped)
8. SDM	28. ECM	48. Left side door mirror heater (if equipped)
9. Additional heater controller (if equipped)	29. ABS / ESP® control module	49. Rear end door window defogger
10. P/S control module	30. Steering angle sensor (ESP® model)	50. Rear end door window defogger indicator light
11. Navigation unit (if equipped)	31. Junction connector	51. Horn relay
12. Audio unit (if equipped)	32. Combination meter	52. Horn
13. Generator	33. DLC	53. Horn switch
14. Keyless entry receiver (if equipped)	34. To P/S control module and additional heater controller	54. Lighting switch
15. Driver side door switch	35. To SDM	55. Ignition switch
16. Other than driver side door switch	36. To immobilizer control module (Diesel model)	56. Battery
17. Rear end door switch	37. Door lock actuator relay (if equipped)	57. Body ground
18. Driver side seat belt switch	38. Driver side door lock actuator (if equipped)	58. Engine ground
19. Brake fluid level switch	39. Passenger side door lock actuator (if equipped)	
20. Parking brake switch	40. Rear door lock actuator (if equipped)	