
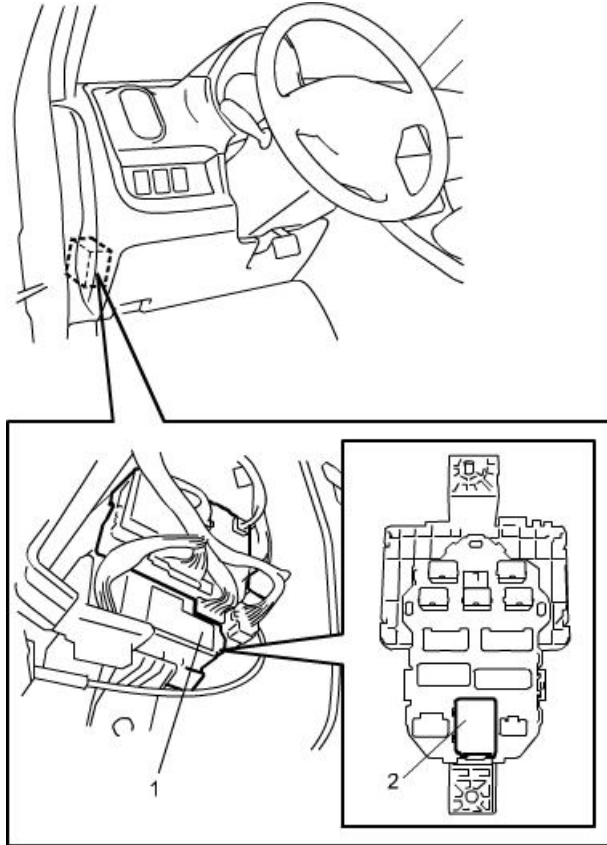


9B

Turn Signal and Hazard Warning Relay Removal and Installation

Removal

- 1) Disconnect negative (-) cable at battery.
- 2) Remove junction block assembly (1). 
- 3) Remove turn signal and hazard warning relay (2).



Installation

Reference: Turn Signal and Hazard Warning Relay Inspection

Reverse removal procedure for installation.


BCM (Included in Junction Block) Removal and Installation


CAUTION:

Do not attempt removal of BCM from junction block as it may cause contact failure.

If there is faulty condition in BCM, replace junction block assembly.

Removal

- 1) Disconnect negative cable from battery.
- 2) Disable air bag system. 
- 3) Remove dash side trim (1) and steering column hole cover (2).
- 4) Remove junction block mounting nuts (3).

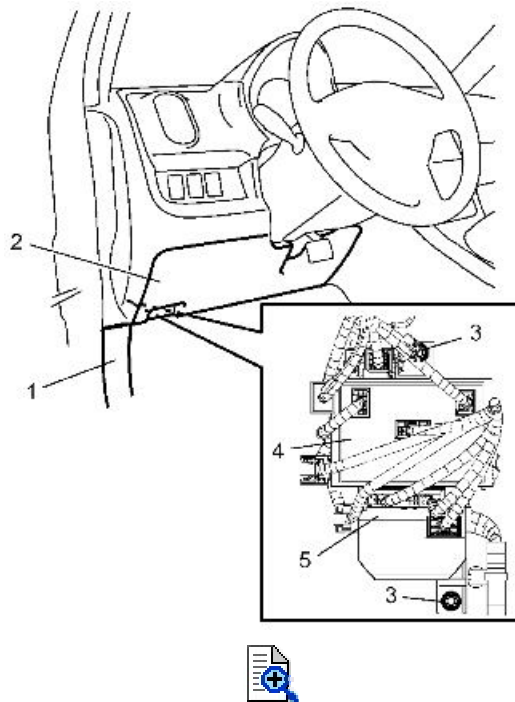


4. BCM

5. Junction block

- 5) Disconnect connectors from BCM and junction block.
- 6) Detach wiring harness clamp from junction block.

Installation

Reverse removal procedure for installation, noting following points.

- Connect connectors securely.
- Enable air bag system. 
- With keyless entry system, if BCM is replaced, register transmitter code into BCM. 