



# Air Bag System Wiring Circuit Diagram

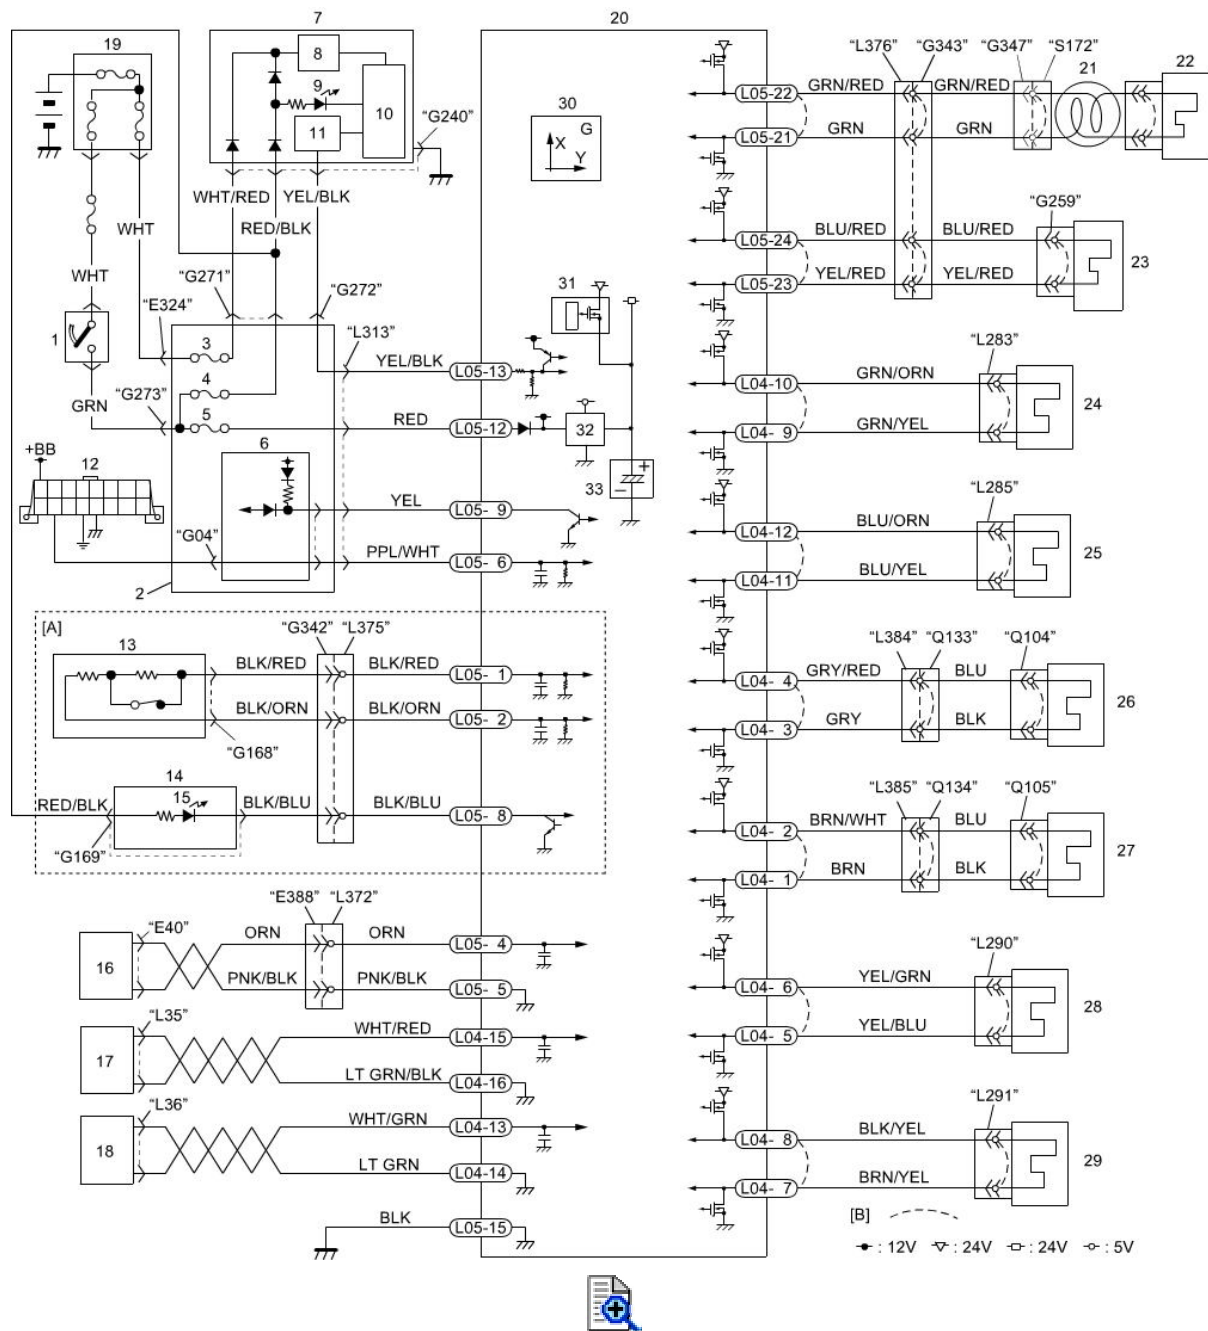

[A]: With air bag deactivation switch	11. Interface circuit	23. Passenger air bag (inflator) module
[B]: Shorting bar	12. Data link connector (DLC)	24. Driver seat belt pretensioner
1. Ignition switch	13. Air bag deactivation switch	25. Passenger seat belt pretensioner
2. Junction block assembly	14. Air Bag Deactivation Indicator	26. Driver side-air bag (inflator) module (6 and 8-channel system)
3. "RADIO" fuse	15. "Air Bag Deactivation Indicator" light	27. Passenger side-air bag (inflator) module (6 and 8-channel system)
4. "MTR" fuse	16. Forward impact-sensor	28. Driver side curtain-air bag (inflator) module (8-channel system)

5. "A/B" fuse	17. Driver side impact-sensor (6 and 8-channel system)	29. Passenger side curtain-air bag (inflator) module (8-channel system)
6. BCM	18. Passenger side impact-sensor (6 and 8-channel system)	30. X-Y-G (longitudinal / lateral acceleration)
7. Combination meter	19. Main fuse	31. Safing power driver
8. Power supply	20. SDM	32. DC / DC converter
9. "AIR BAG" warning light	21. Contact coil assembly	33. Back up capacitor
10. CPU	22. Driver air bag (inflator) module	

### Terminal arrangement of SDM (view A)

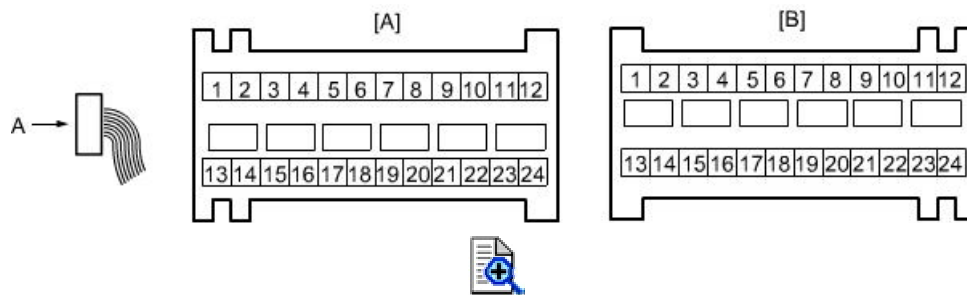

[A]: SDM Connector "L05" (GRY or BRN)

[B]: SDM Connector "L04" (BLK or BLU)

### Connector "L04"

Terminal	Circuit	Terminal	Circuit
L04-1	Passenger side-air bag (-) (6 and 8-channel system)	L04-13	Passenger side impact-sensor (+) (6 and 8-channel system)
L04-2	Passenger side-air bag (+) (6 and 8-channel system)	L04-14	Passenger side impact-sensor (-) (6 and 8-channel system)
L04-3	Driver side-air bag (-) (6 and 8-channel system)	L04-15	Driver side impact-sensor (+) (6 and 8-channel system)
L04-4	Driver side-air bag (+) (6 and 8-channel system)	L04-16	Driver side impact-sensor (-) (6 and 8-channel system)
L04-5	Driver side curtain-air bag (-) (8-channel system)	L04-17	—
L04-6	Driver side curtain-air bag (+) (8-channel system)	L04-18	—
L04-7	Passenger side curtain-air bag (-) (8-channel system)	L04-19	—
L04-8	Passenger side curtain-air bag (+) (8-channel system)	L04-20	—
L04-9	Driver seat belt pretensioner (-)	L04-21	—
L04-10	Driver seat belt pretensioner (+)	L04-22	—
L04-11	Passenger seat belt pretensioner (-)	L04-23	—
L04-12	Passenger seat belt pretensioner (+)	L04-24	—

### Connector: L05

<b>Terminal</b>	<b>Circuit</b>	<b>Terminal</b>	<b>Circuit</b>
L05-1	Air bag deactivation switch (+)	L05-13	"AIR BAG" warning light
L05-2	Air bag deactivation switch (-)	L05-14	—
L05-3	—	L05-15	Ground
L05-4	Forward impact-sensor (+)	L05-16	—
L05-5	Forward impact-sensor (-)	L05-17	—
L05-6	DLC	L05-18	—
L05-7	—	L05-19	—
L05-8	"Air Bag Deactivation Indicator" light	L05-20	—
L05-9	BCM communication line (air bag deployment signal)	L05-21	Driver air bag (-)
L05-10	—	L05-22	Driver air bag (+)
L05-11	—	L05-23	Passenger air bag (-)
L05-12	Ignition switch (power source)	L05-24	Passenger air bag (+)