
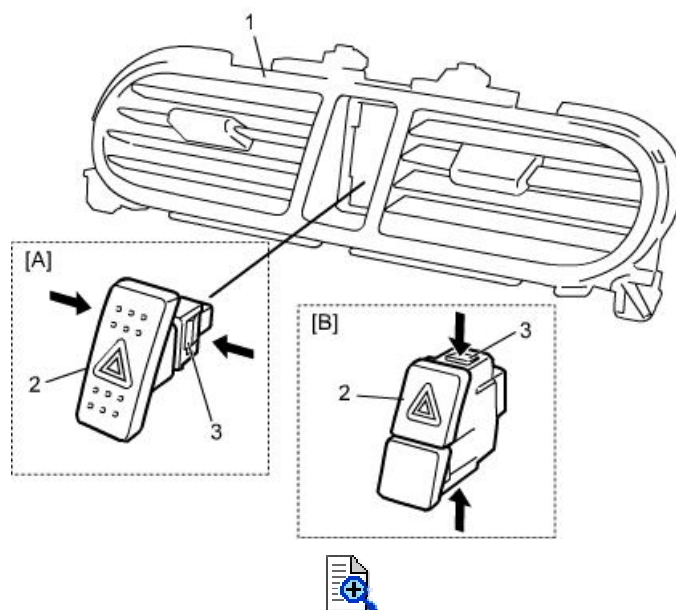


9B

## Hazard Warning Switch Removal and Installation

### Removal

- 1) Disconnect negative (–) cable at battery.
- 2) Remove center ventilation louver (1). 
- 3) Disconnect coupler, and then remove hazard warning switch (2) from center ventilation louver (1) while releasing the locks (3).



[A]: Without air bag deactivation indicator

[B]: With air bag deactivation indicator

### Installation


#### Reference: Hazard Warning Switch Inspection

Reverse removal procedure for installation.

7B


## Center Ventilation Louver Removal and Installation

### Removal


- 1) Disconnect negative (–) cable from battery.
- 2) Remove radio assembly from instrument panel. 
- 3) Remove center ventilation louver (1) with garnish (2) from instrument panel, and then disconnect connector from hazard switch.

**NOTE:**

**Garnish is fitted to instrument panel with four clips. When removing garnish from instrument panel, be careful not to break them.**

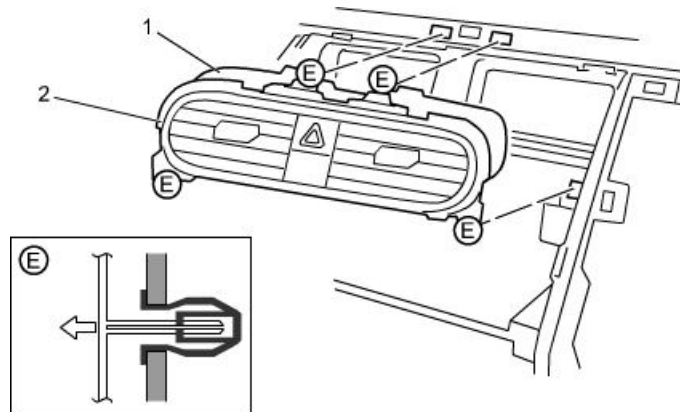

- 4) Release tub (3) and then separate center ventilation louver and garnish.

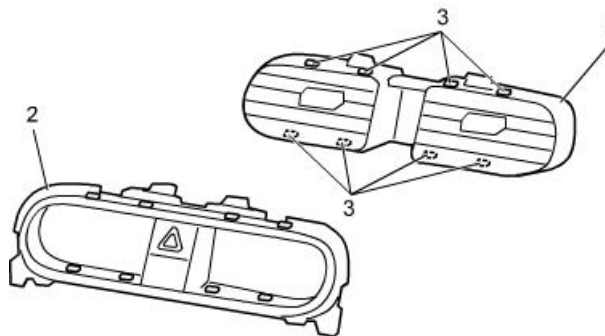

### Installation

Reverse removal procedure.