


Wiper and Washer Circuit Diagram


Windshield Wiper and Washer

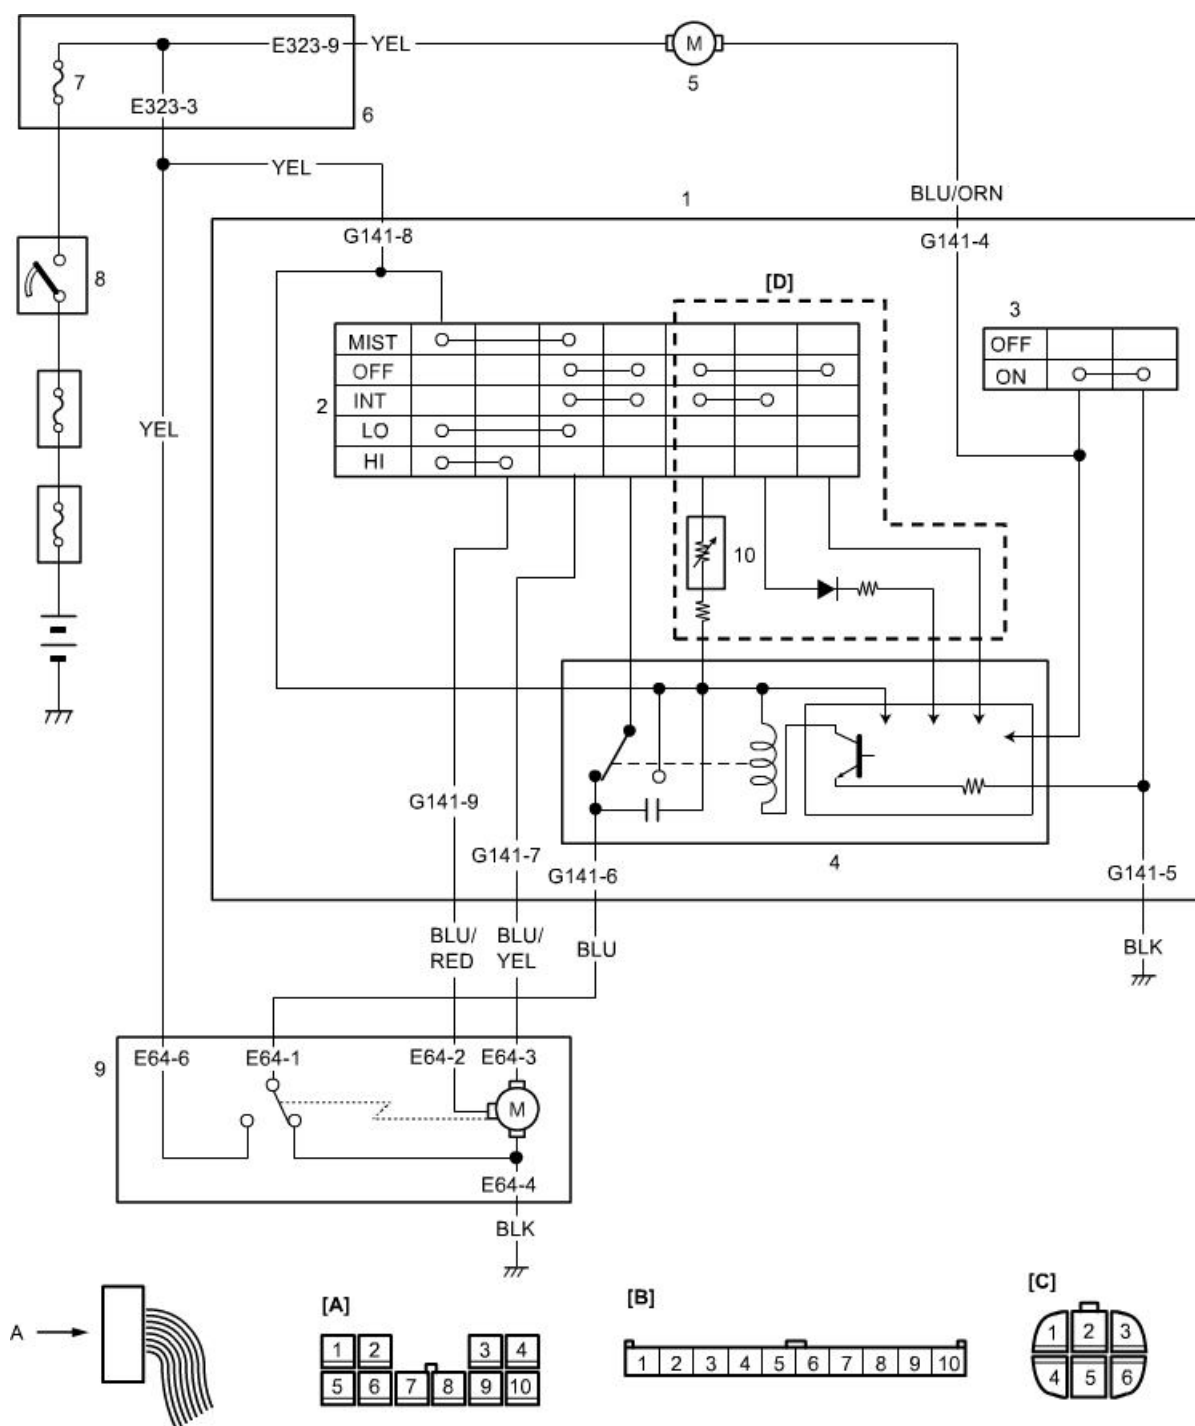

[A]: Junction block connector "E323" (viewed from A)	2. Windshield wiper switch	7. "WIPER" fuse
[B]: Wiper and washer switch connector "G141" (viewed from A)	3. Washer switch	8. Ignition switch
[C]: Windshield wiper motor connector "E64" (viewed from A)	4. "INT" control unit	9. Windshield wiper motor

[D]: With INT time control switch	5. Front washer motor	10. INT time control switch
1. Wiper and washer switch	6. Junction block assembly (included in BCM)	

Rear Wiper and Washer

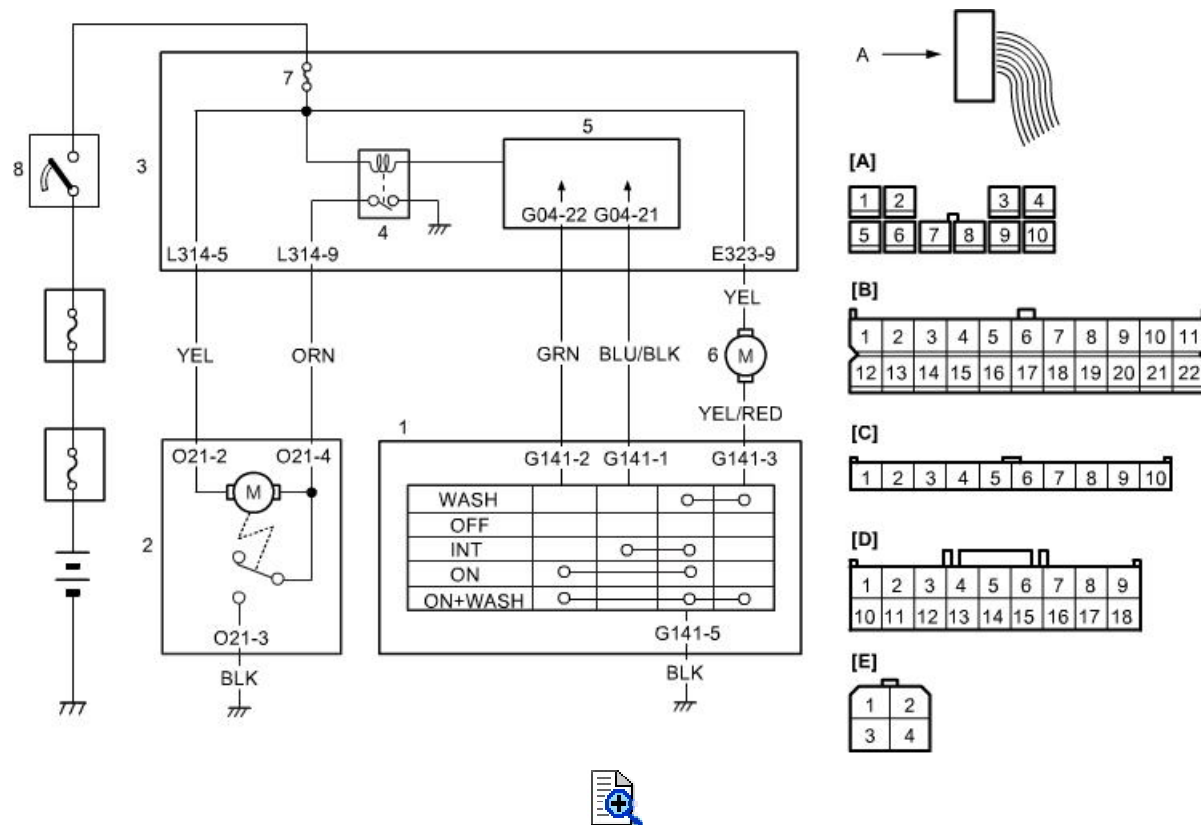

[A]: Junction block connector "E323" (viewed from A)	1. Wiper and washer switch	6. Rear washer motor
[B]: BCM connector "G04"	2. Rear wiper motor	7. "WIPER" fuse
[C]: Wiper and washer switch connector "G141" (viewed from A)	3. Junction block assembly (included in BCM)	8. Ignition switch
[D]: Junction block connector "L314" (viewed from A)	4. Rear wiper relay	
[E]: Rear wiper motor connector "O21" (viewed from A)	5. BCM	