


9A

Individual Circuit Fuse Box No. 1 (Petrol Model)

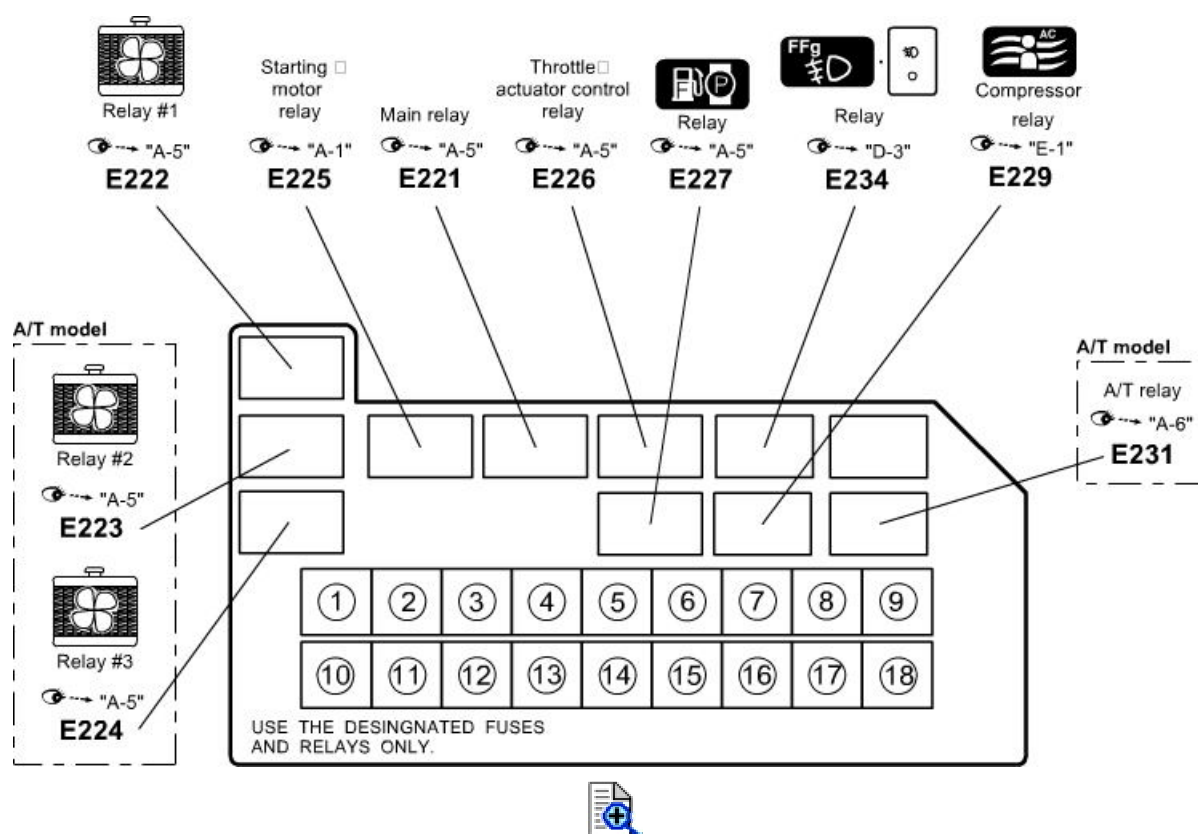

No.	Fuse	Description on the cover	Protected circuit
①	30 A	HTR FAN	J/B
②	15 A	FI	Main relay
③	10 A	A/C CPRSR	A/C compressor relay
④	15 A	AT	A/T relay
⑤	15 A	STOP LAMP	Brake light switch
⑥	30 A	ABS MOT	ABS control module ESP® control module
⑦	30 A	ST MOT	Starting motor relay
⑧	BLANK	BLANK	BLANK
⑨	50 A	EPS	Power steering control module

⑩	30 A	IG ACC	Ignition switch
⑪	30 A	RDTR FAN	Radiator cooling fan relay #1
			Radiator cooling fan relay #2
⑫	BLANK	BLANK	BLANK
⑬	30 A	ABS SOL	ABS control module
			ESP [®] control module
⑭	BLANK	BLANK	BLANK
⑮	15 A	THR MOT	Throttle actuator control relay
⑯	15 A	FR FOG	Front fog light relay
⑰	15 A	H/L L	Head light (L)
			Head light beam leveling actuator (L)
⑱	15 A	H/L R	Head light (R)
			Head light beam leveling actuator (R)