


9A

Individual Circuit Fuse Box No. 2 (In J/B)

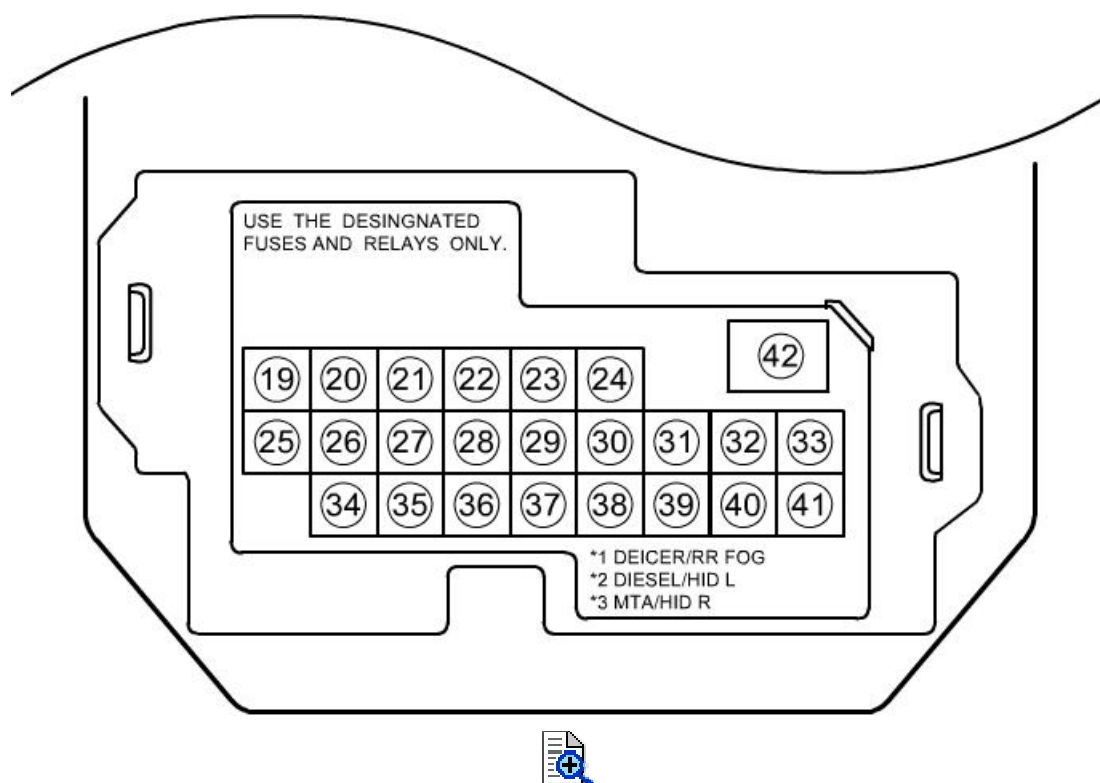

No.	Fuse	Description on the cover	Protected circuit
19	BLANK	BLANK	BLANK
20	15 A	IG COIL	A/C compressor relay ECM Fuel pump relay Generator Glow control module Immobilizer control module Ignition coil #1 Ignition coil #2 Ignition coil #3 Ignition coil #4 MAF and IAT sensor Brake light switch
21	10 A	BACK	Back-up light switch Transaxle range sensor WTP control module HVAC control unit
22	10 A	MTR	COMB meter Flasher relay BCM
	15 A	ACC	Cigar lighter Power mirror switch

23			Accessory socket
24	15 A	ACC 2	Audio
25	15 A	WIP	COMB switch
			Windshield washer motor
			Windshield wiper motor
			Rear wiper relay
			Rear wiper motor
			Rear washer motor
			DRL controller
26	10 A	IG1 SIG	Power steering control module
			A/T relay
27	15 A	A/B	A/B SDM
28	10 A	ABS	ABS control module
			ESP [®] control module
29	10 A	TAIL	COMB switch
			DRL controller
30	BLANK	BLANK	BLANK
31	20 A	D/L	BCM
32	10 A	(*2 DIESEL/HID L)	ECM
			Immobilizer control module
33	10 A	ST SIG	Starting motor relay
34	15 A	S/H	Seat heater switch (Driver side)
			Seat heater switch (Passenger side)
35	10 A	IG2 SIG	Blower motor relay
36	15 A	(*1 DEICER/RR FOG)	COMB switch
37	15 A	RADIO	Audio
			BCM
			COMB meter
			DLC
			ECM
			TACHO meter
			TCM
			Main switch (Key switch)
			Steering angle sensor

			Interior light
			Luggage compartment light
38	20 A	RR DEF	Rear defogger relay
39	15 A	HORN-HAZ	Horn relay
			Flasher relay
40	10 A	(*3 MTA/HID R)	BLANK
41	20 A	P/WT	BLANK
42	30 A	P/W	Power window main switch
			Power window sub switch