


11

Cranking System Circuit Diagram

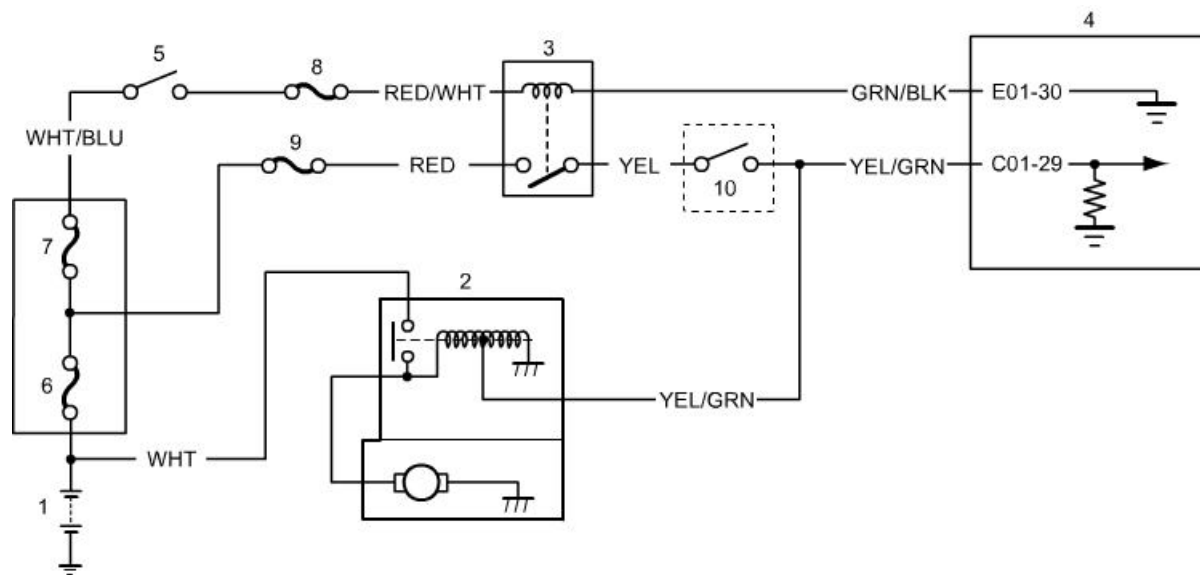

1. Battery	6. Main fuse
2. Starting motor	7. "IG" fuse
3. Starting motor control relay	8. "ST SIG" fuse
4. ECM	9. "ST MOT" fuse
5. Ignition switch (starter switch)	10. Transmission range sensor (shift switch) (A/T model)