


Headlight Leveling Actuator Inspection

Reference: Headlight Housing Removal and Installation

- 1)** Connect battery positive (+) terminal to "7" terminal of headlight levering actuator connector and connect battery negative (-) terminal to "3" terminal.
- 2)** Arrange 3 new 1.5 V batteries (1) in series (check that total voltage is 4.5 – 5.0 V), and connect it between "4" terminal of headlight levering actuator connector and battery negative (-) terminal. Then check that reflector of headlight moves downward then.

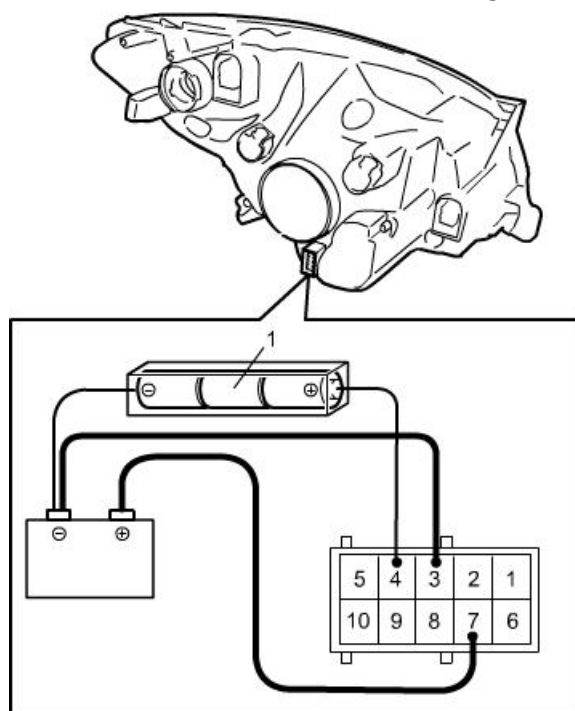

- 3)** Arrange 5 new 1.5 V batteries (1) in series (check that total voltage is 7.5 – 8.0 V) and connect it between "4" terminal of headlight levering actuator connector and battery negative (-) terminal. Then check that reflector of headlight moves upward then.

