


9A

Engine Compartment

A: Battery cable / C: Engine harness (K10B model)

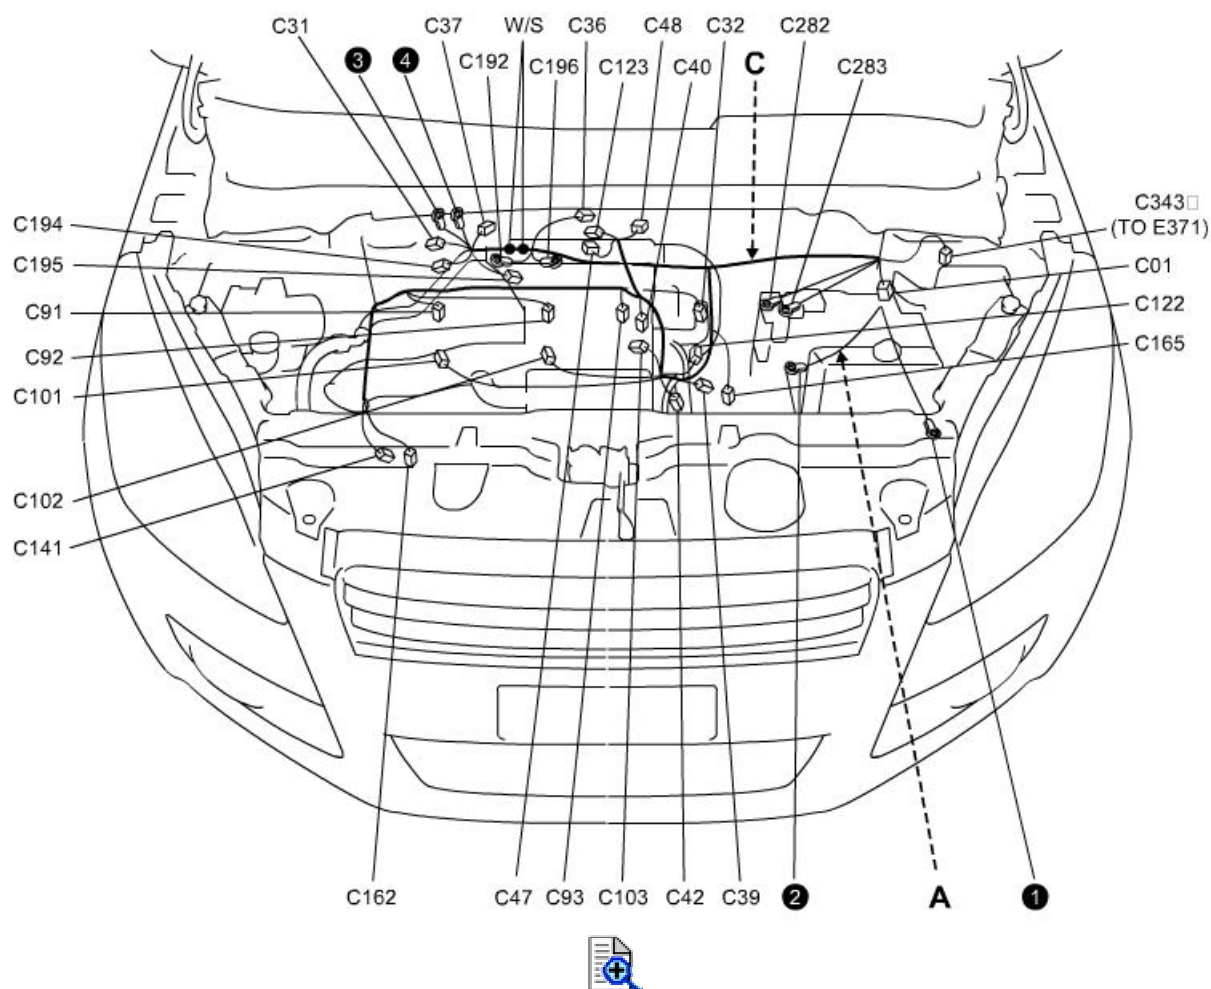


C: Engine harness


No.	Color	Connective position	Remarks
C01	GRY	ECM	
C31	GRY	CKP sensor	
C32	BLU	CMP sensor	
C36	BLK	MAP sensor	
C37	BLK	Knock sensor	
C39	BLK	ECT sensor	
C40	BLK	A/F sensor	
C42	GRY	Heated oxygen sensor	
C47	GRY	MAF and IAT sensor	
C48	BLK	Electric throttle body	
C91	GRY	Fuel injector #1	
C92	GRY	Fuel injector #2	
C93	GRY	Fuel injector #3	
C101	GRY	Ignition coil #1	
C102	GRY	Ignition coil #2	
C103	GRY	Ignition coil #3	

C122	GRY	EGR valve	
C123	BLK	EVAP canister purge valve	
C141	BLK	A/C compressor	
C162	N	Engine oil pressure switch	
C165	BLK	Back-up light switch	
C192	-	Generator (+B)	
C194	GRY	Generator	
C195	BLK	Starting motor	
C196	-	Starting motor (+B)	
C282	-	Main fuse box	
C283	-	Main fuse box	
C343	N	Main harness (To E371)	

A: Battery cable / C: Engine harness (K12B M/T model)

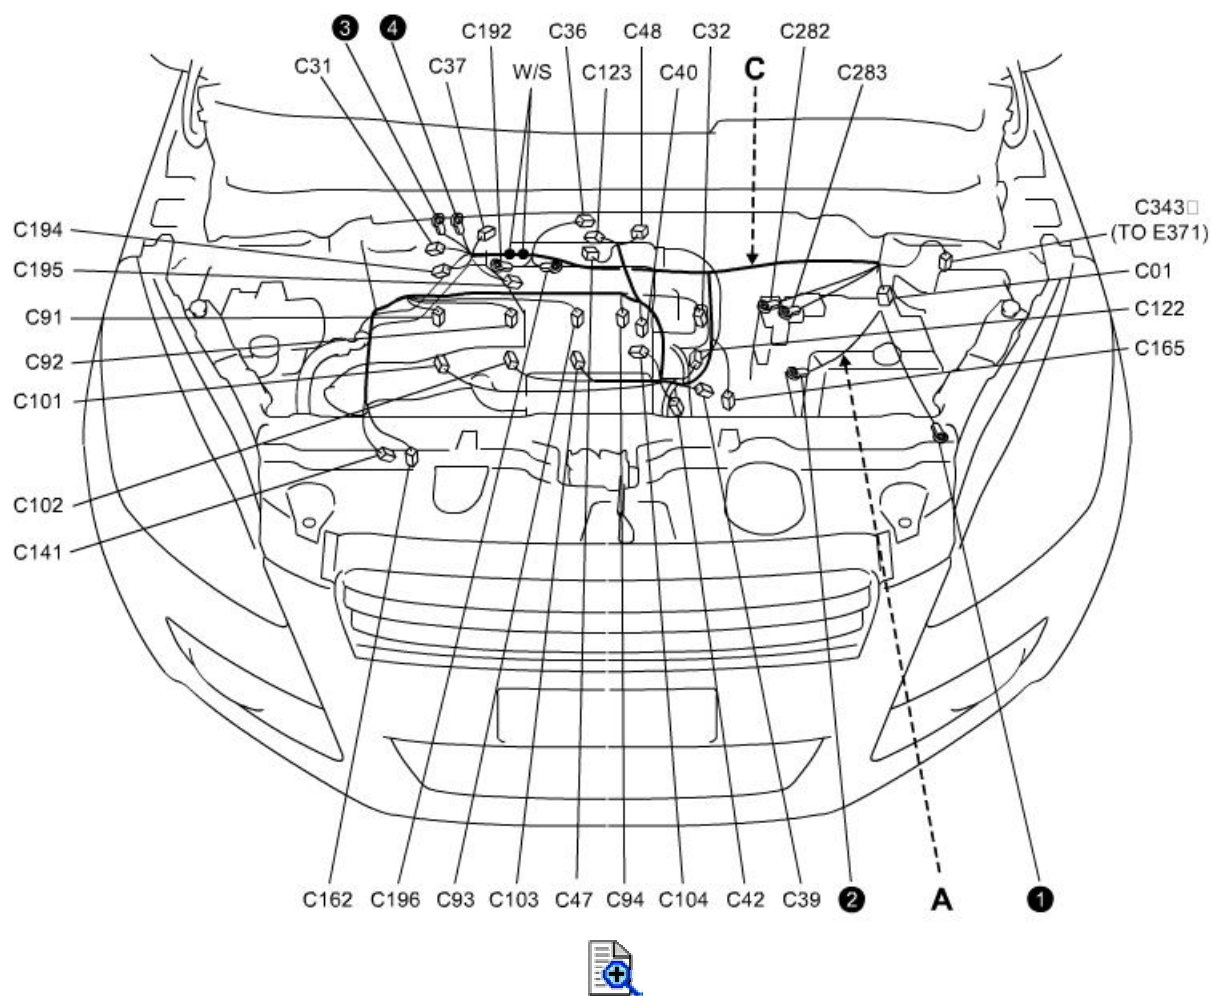

A: Battery cable / C: Engine harness (K12B A/T model)

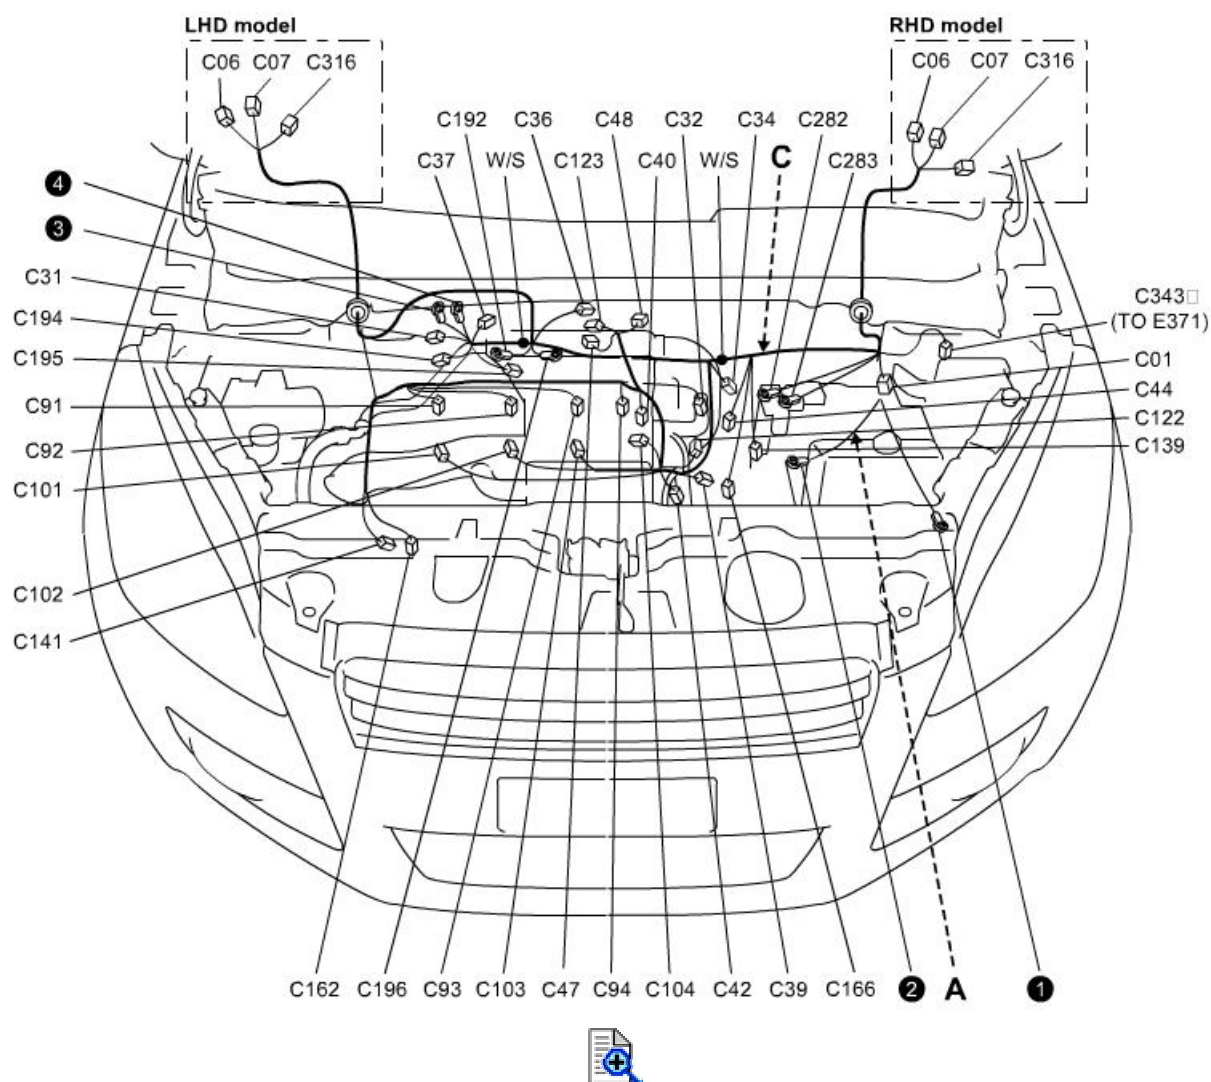


C: Engine harness

No.	Color	Connective position	Remarks
C01	GRY	ECM	
C06	N	TCM	A/T model
C07	N	TCM	A/T model
C31	GRY	CKP sensor	
C32	BLU	CMP sensor	
C34	GRY	VSS	A/T model
C36	BLK	MAP sensor	
C37	BLK	Knock sensor	
C39	BLK	ECT sensor	
C40	BLK	A/F sensor	
C42	GRY	Heated oxygen sensor	
C44	BLK	Input shaft speed sensor	A/T model
C47	GRY	MAF and IAT sensor	
C48	BLK	Electric throttle body	
C91	GRY	Fuel injector #1	
C92	GRY	Fuel injector #2	
C93	GRY	Fuel injector #3	

C94	GRY	Fuel injector #4	
C101	GRY	Ignition coil #1	
C102	GRY	Ignition coil #2	
C103	GRY	Ignition coil #3	
C104	GRY	Ignition coil #4	
C122	GRY	EGR valve	
C123	BLK	EVAP canister purge valve	
C139	GRY	Automatic transmission	A/T model
C141	BLK	A/C compressor	
C162	N	Engine oil pressure switch	
C165	BLK	Back-up light switch	M/T model
C166	GRY	Transaxle range sensor	A/T model
C192	-	Generator (+B)	
C194	GRY	Generator	
C195	BLK	Starting motor	
C196	-	Starting motor (+B)	
C282	-	Main fuse box	
C283	-	Main fuse box	
C316	BLK	J/C	A/T model
C343	N	Main harness (To E371)	

C: Engine harness (DSL model)

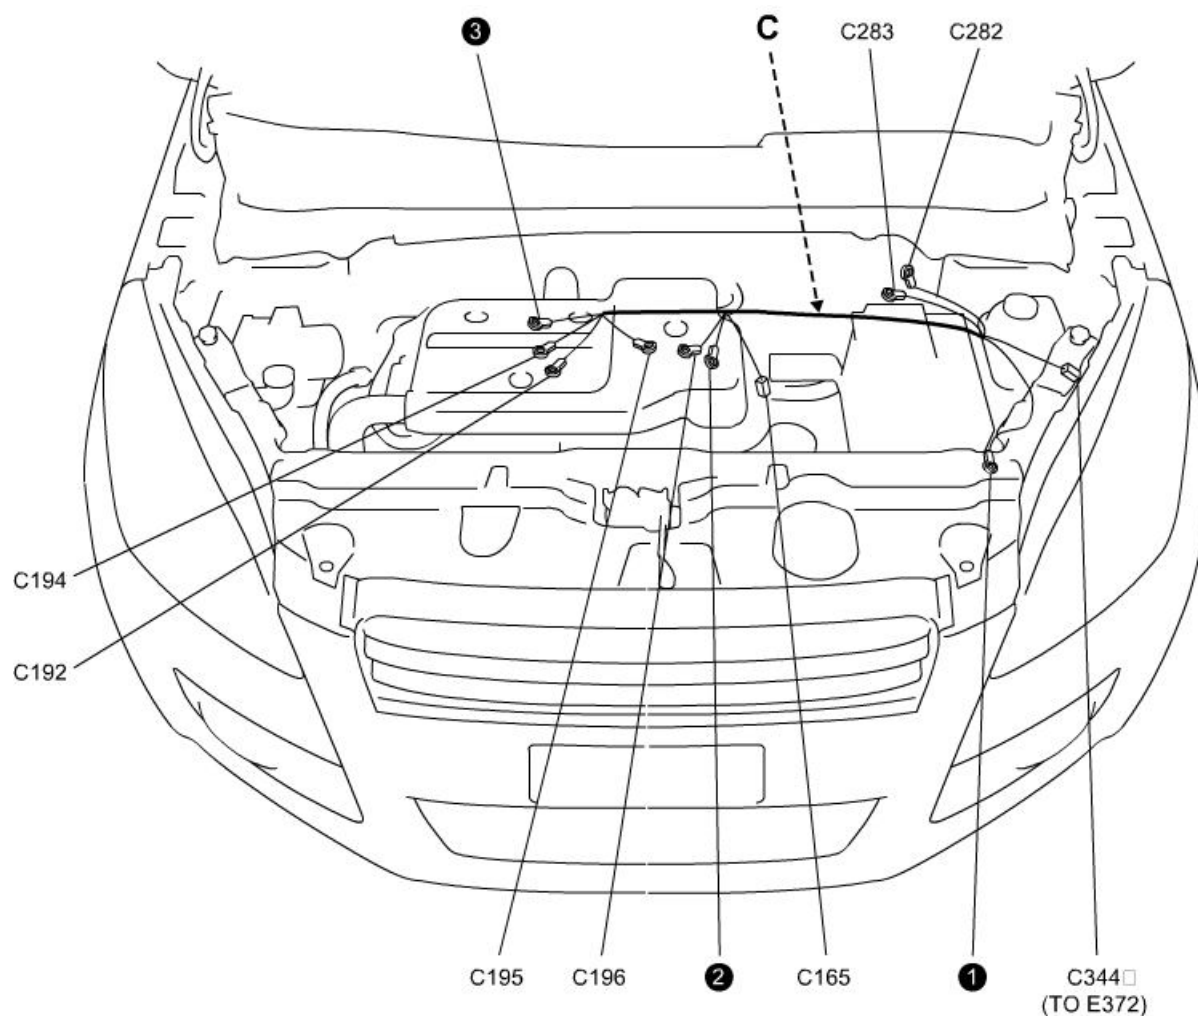





C: Engine harness

No.	Color	Connective position	Remarks
C165	BLK	Back-up light switch	
C192	-	Generator (+B)	
C194	-	Generator	
C195	-	Starting motor	
C196	-	Starting motor (+B)	
C282	-	Main fuse box	
C283	-	Main fuse box	
C344	GRY	Main harness (To E372)	

D: Injector harness (DSL RHD model)

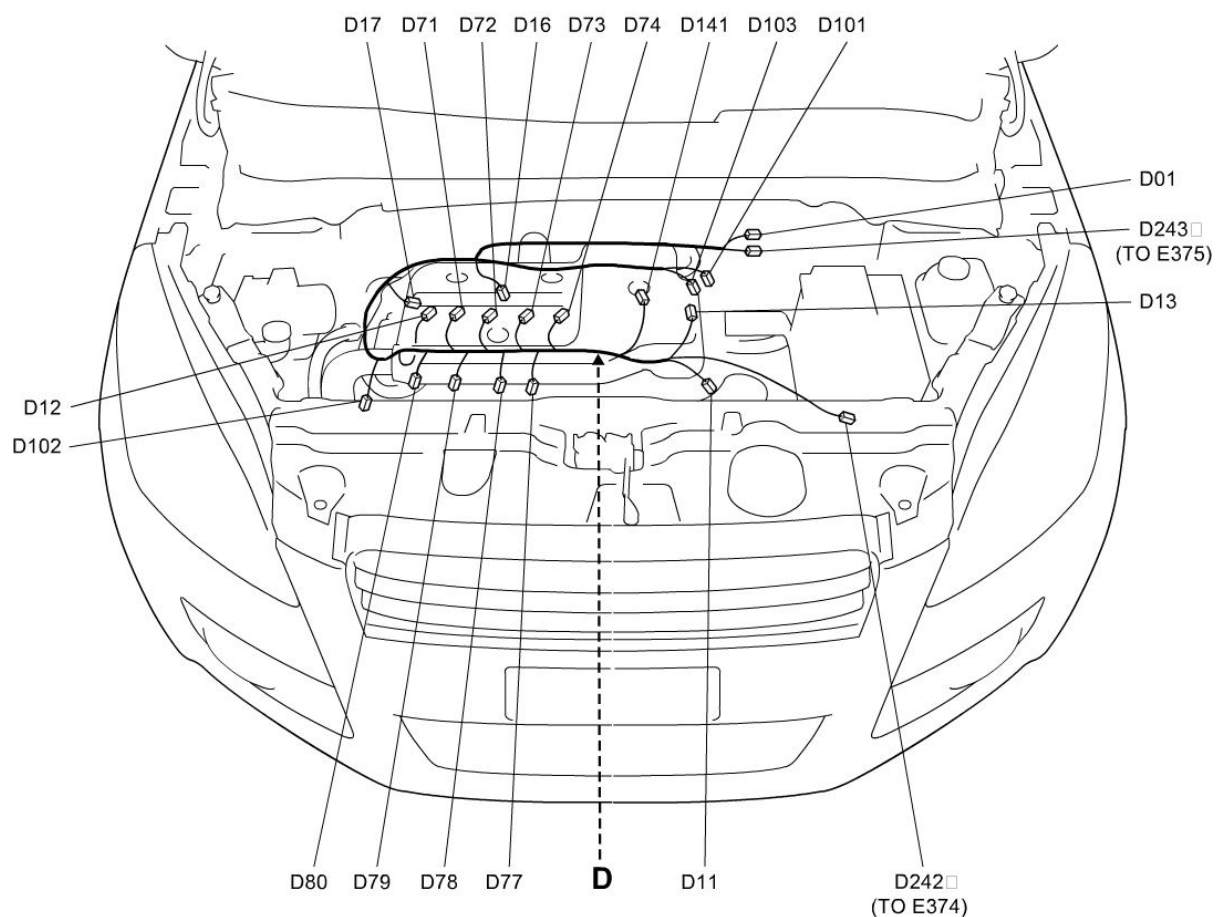

D: Injector harness (DSL LHD model)

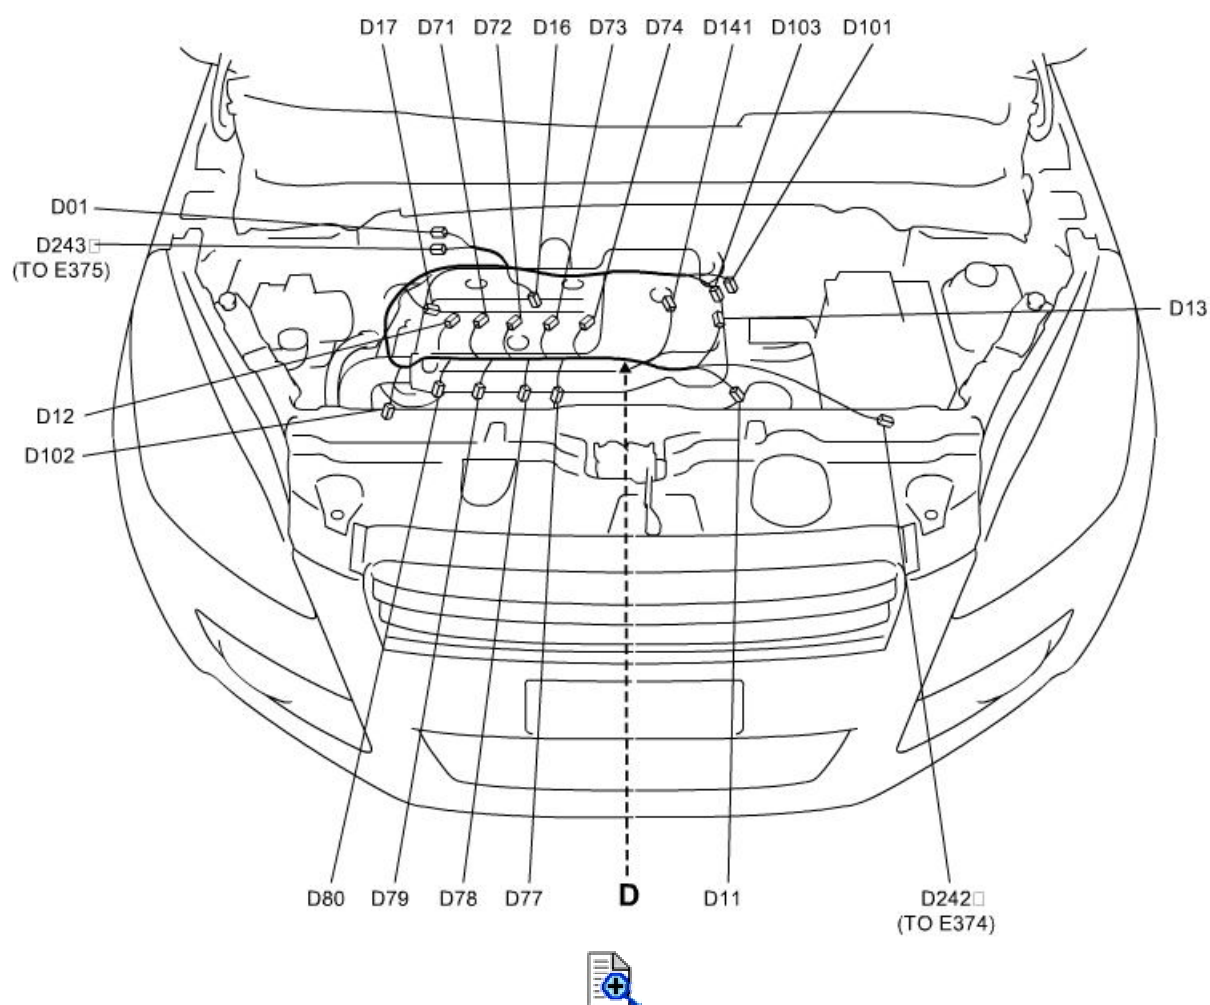


D: Injector harness


No.	Color	Connective position	Remarks
D01	BLK	ECM	
D11	BLK	CKP sensor	
D12	GRY	CMP sensor	
D13	GRN	ECT sensor	
D16	BLK	Boost pressure sensor	
D17	BLK	Fuel pressure sensor	
D71	BLK	Fuel injector #1	
D72	BLK	Fuel injector #2	
D73	BLK	Fuel injector #3	
D74	BLK	Fuel injector #4	
D77	BLK	Glow plug #1	
D78	BLK	Glow plug #2	
D79	BLK	Glow plug #3	
D80	BLK	Glow plug #4	
D101	GRY	EGR valve	
D102	GRY	A/C compressor	
D103	BLK	Fuel pressure regulator valve	
D141	BLK	Engine oil pressure switch	
D242	BLK	Main harness (To E374)	

D243	BLK	Main harness (To E375)	
------	-----	------------------------	--

E: Main harness (Petrol RHD model)

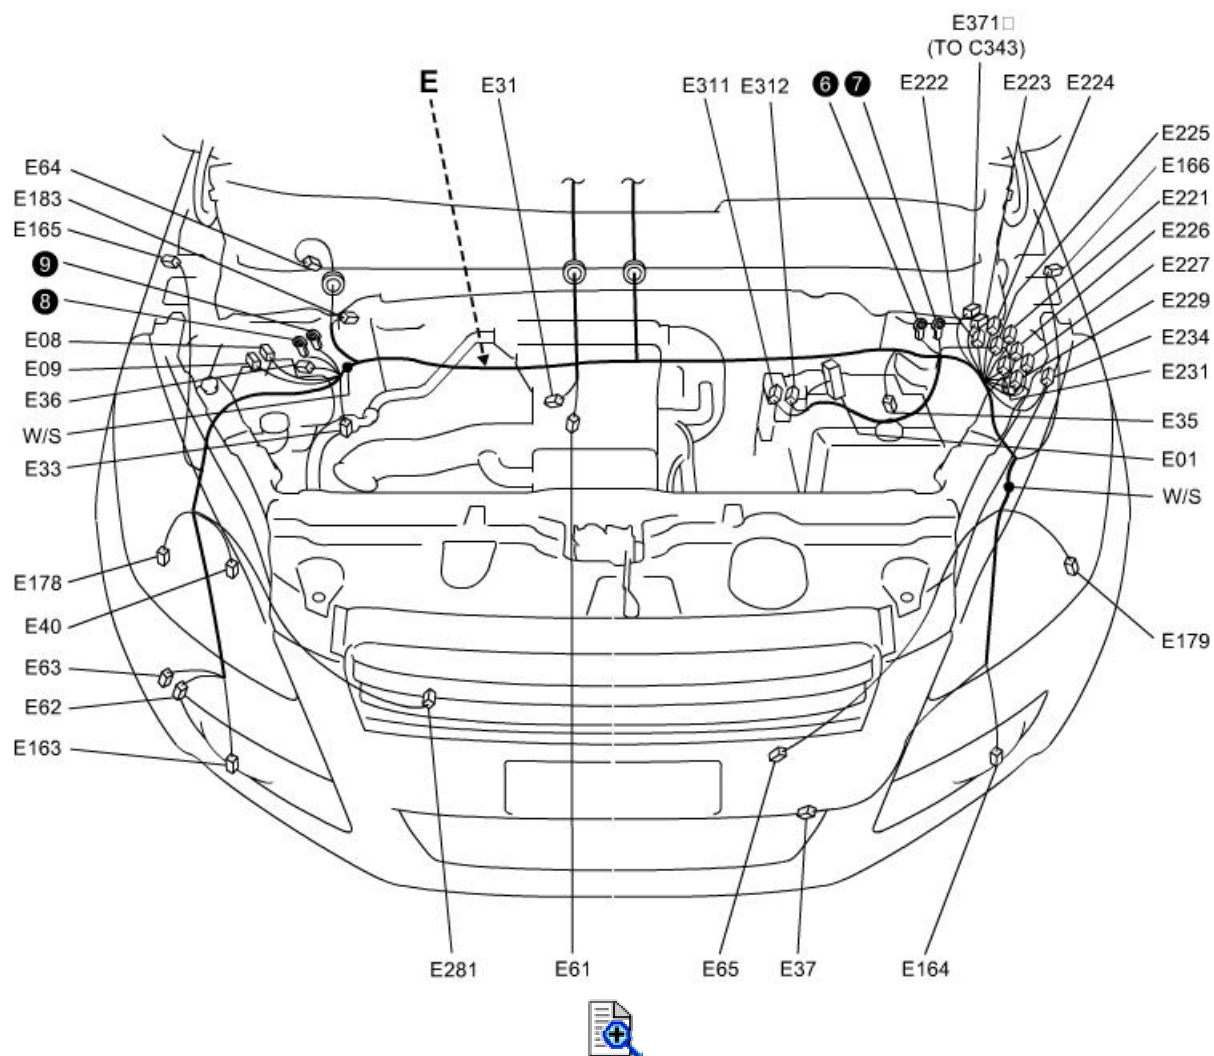

E: Main harness (Petrol LHD model)

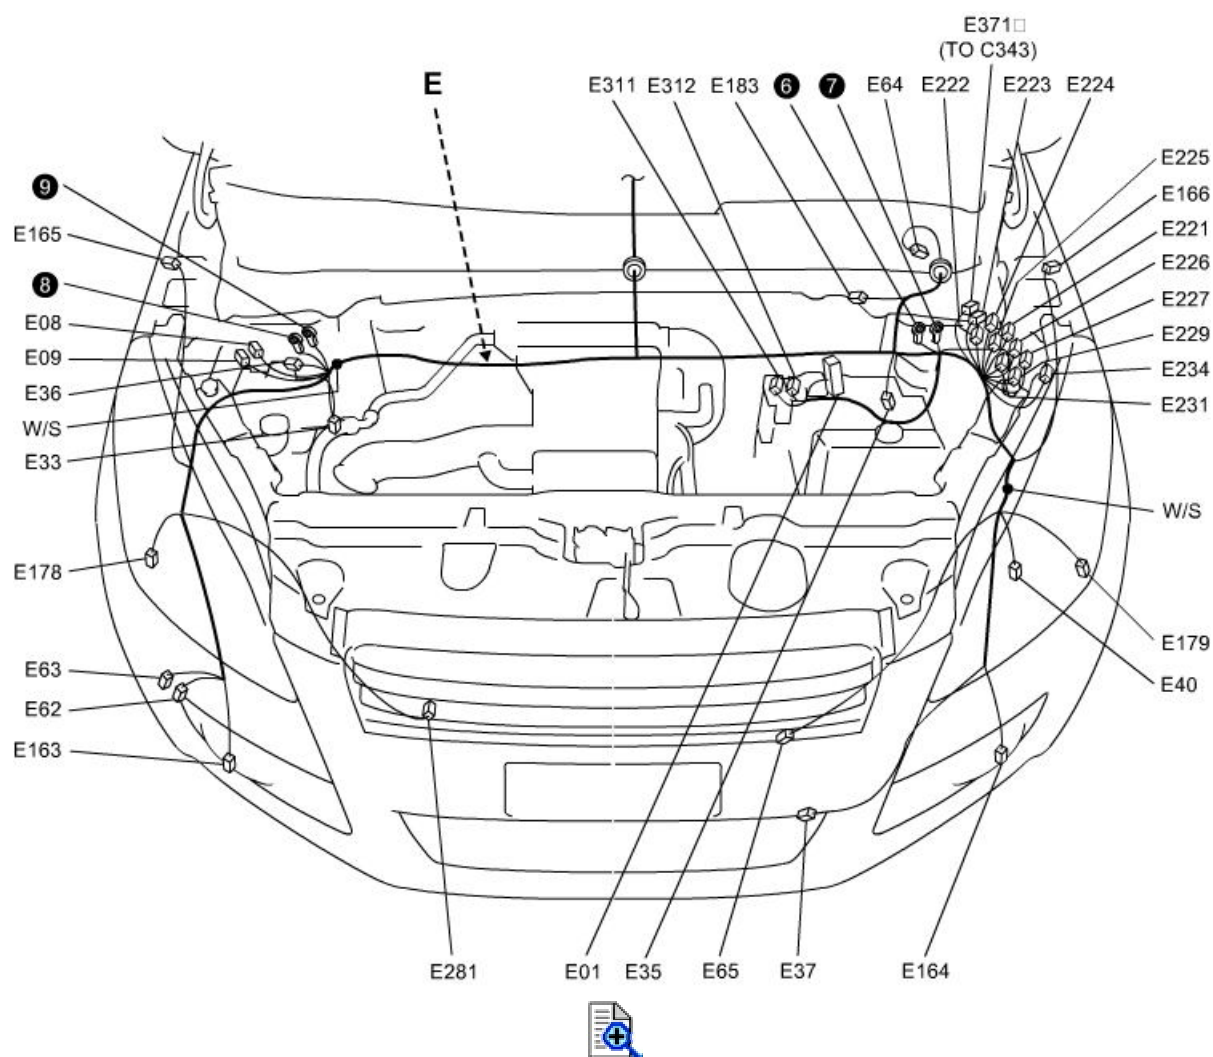


E: Main harness

No.	Color	Connective position	Remarks
E01	GRY	ECM	
E08	BLK	ABS control module	
E09	BLK	ESP [®] control module	IF EQPD
E31	BLK	Torque sensor	RHD model
E33	BLK	Wheel speed sensor (Front-right)	
E35	BLK	Wheel speed sensor (Front-left)	
E36	BLK	A/C refrigerant pressure sensor	
E37	BLK	Outside air temperature sensor	
E40	BLK	Forward impact-sensor	
E61	GRY	P/S motor	RHD model
E62	BLK	Windshield washer motor	
E63	BLK	Rear washer motor	
E64	GRY	Windshield wiper motor	
E65	GRY	Radiator cooling fan motor	
E163	BLK	Front fog light (R)	
E164	BLK	Front fog light (L)	
E165	N	Side turn signal light (R)	
E166	N	Side turn signal light (L)	

E178	BLK	Head light unit (R) (Head light, Front position light, Front turn signal light, Head light beam leveling actuator)	
E179	BLK	Head light unit (L) (Head light, Front position light, Front turn signal light, Head light beam leveling actuator)	
E183	BRN	Brake fluid level switch	
E221	BLK	Main relay	
E222	BLK	Radiator cooling fan relay #1	
E223	BLK	Radiator cooling fan relay #2	A/T model
E224	BLK	Radiator cooling fan relay #3	A/T model
E225	BLK	Starting motor relay	
E226	BLK	Throttle actuator control relay	
E227	BLK	Fuel pump relay	
E229	BLK	A/C compressor relay	
E231	BLK	A/T relay	A/T model
E234	BLK	Front fog light relay	
E281	BLK	Horn	
E311	BRN	Main fuse box	
E312	GRY	Main fuse box	
E371	N	Engine harness (To C343)	

E: Main harness, ECM GND wire (DSL RHD model)

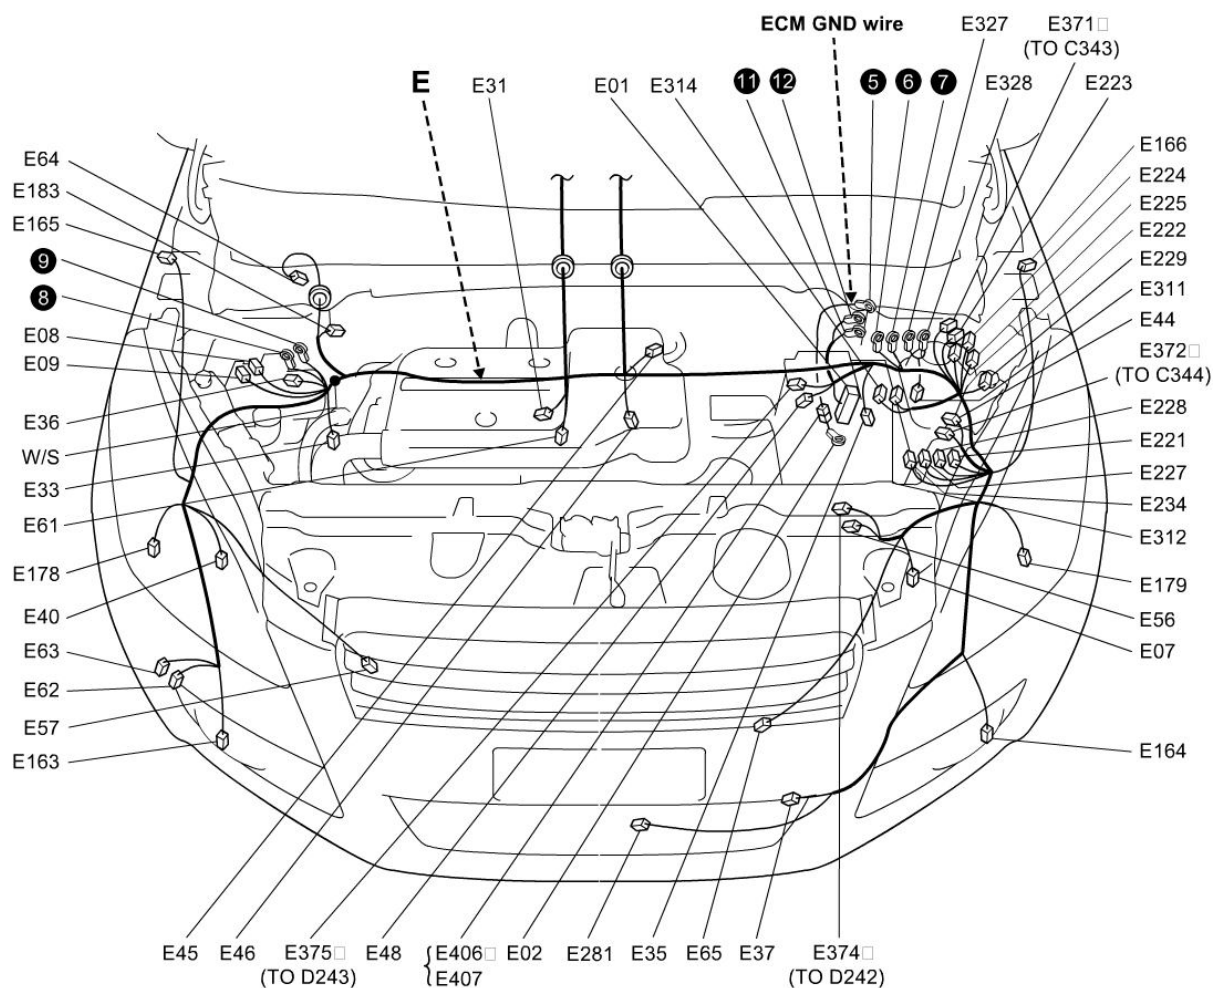



No.	Color	Connective position	Remarks
B121	-	WTP heater #1	LHD model
B122	-	WTP heater #2	LHD model
B123	-	WTP heater #3	LHD model
B152	GRY	Main harness (To E402)	LHD model
B153	GRY	Main harness (To E403)	LHD model

No.	Color	Connective position	Remarks
E01	BLK	ECM	
E07	BLK	Glow control module	
E08	BLK	ABS control module	
E09	BLK	ESP® control module	IF EQPD

E31	BLK	Torque sensor	RHD model
E33	BLK	Wheel speed sensor (Front-right)	
E35	BLK	Wheel speed sensor (Front-left)	
E36	BLK	A/C refrigerant pressure sensor	
E37	BLK	Outside air temperature sensor	
E40	BLK	Forward impact-sensor	
E44	BLK	Boost pressure control solenoid valve	
E45	BLK	DPF [®] differential pressure sensor	
E46	BLK	EGT sensor	
E48	ORN	Fuel heater with fuel temperature sensor	
E56	BLK	MAF and IAT sensor	
E57	BLK	A/F sensor	
E61	GRY	P/S motor	RHD model
E62	BLK	Windshield washer motor	
E63	BLK	Rear washer motor	
E64	GRY	Windshield wiper motor	
E65	BLK	Radiator cooling fan motor	
E163	BLK	Front fog light (R)	
E164	BLK	Front fog light (L)	
E165	N	Side turn signal light (R)	
E166	N	Side turn signal light (L)	
E178	BLK	Head light unit (R) (Head light, Front position light, Front turn signal light, Head light beam leveling actuator)	
E179	BLK	Head light unit (L) (Head light, Front position light, Front turn signal light, Head light beam leveling actuator)	
E183	BRN	Brake fluid level switch	
E221	BLK	Main relay	
E222	BLK	Radiator cooling fan relay #1	
E223	BLK	Radiator cooling fan relay #2	
E224	BLK	Radiator cooling fan relay #3	
E225	BLK	Starting motor relay	
E227	BLK	Fuel pump relay	
E228	BLK	Fuel heater relay	
E229	BLK	A/C compressor relay	
E234	BLK	Front fog light relay	
E238	BLK	WTP relay #1	LHD model
E239	BLK	WTP relay #2	LHD model
E240	BLK	WTP relay #3	LHD model
E281	BLK	Horn	
E311	BRN	Main fuse box	
E312	GRY	Main fuse box	
E313	GRY	Main fuse box	LHD model
E314	GRY	Main fuse box	
E327	-	Individual circuit fuse box No.1	
E328	-	Individual circuit fuse box No.2	
E372	GRY	Engine harness (To C344)	

E374	BLK	Fuel injector harness (To D242)	
E375	BLK	Fuel injector harness (To D243)	
E402	GRY	WTP wire (To B152)	LHD model
E403	GRY	WTP wire (To B153)	LHD model

E: ECM GND wire

No.	Color	Connective position	Remarks
E02	-	ECM	
E406	BLK	ECM GND wire (To E407)	
E407	BLK	ECM GND wire (To E406)	