


BCM and Related System Component Location

Reference: BCM General Description

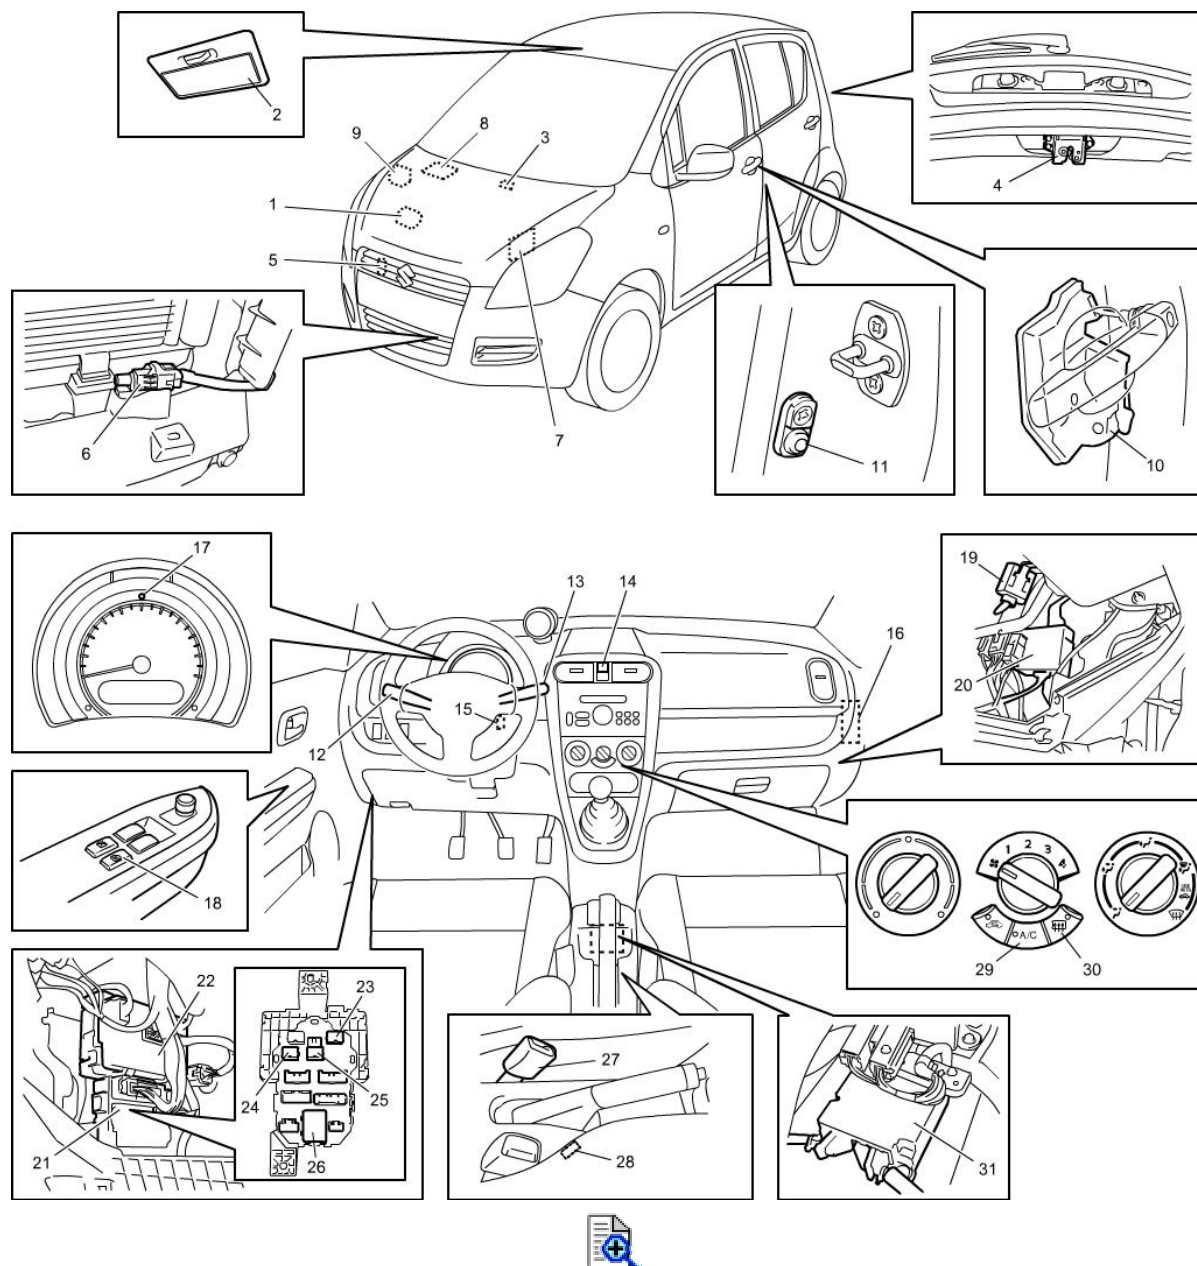

| | | |
|--|---|--|
| 1. Generator | 12. Lighting switch | 23. Horn relay |
| 2. Interior light | 13. Rear wiper switch | 24. Rear wiper relay |
| 3. Brake fluid level switch | 14. Hazard warning switch | 25. Rear end door window defogger relay |
| 4. Rear end door lock actuator (integrated with door switch) (if equipped) | 15. Key reminder switch (included in ignition switch) | 26. Turn signal and hazard warning relay |
| 5. Oil pressure switch (Petrol model) | 16. TCM (A/T model) | 27. Seat belt buckle switch |
| 6. Outside air temperature sensor (if equipped) | 17. Theft deterrent light | 28. Parking brake switch |
| 7. ECM (petrol model) | 18. Manual door lock switch (if equipped) | 29. A/C switch (if equipped) |

| | | |
|--|--|--|
| 8. ECM (diesel model) | 19. Keyless entry receiver (if equipped) | 30. Rear end door window defogger switch |
| 9. ABS/ESP [®] control module | 20. Additional heater controller (if equipped) | 31. SDM |
| 10. Door lock actuator (incorporated in key cylinder switch) | 21. Junction block | |
| 11. Door switch | 22. BCM | |