


ABS Schematic Diagram

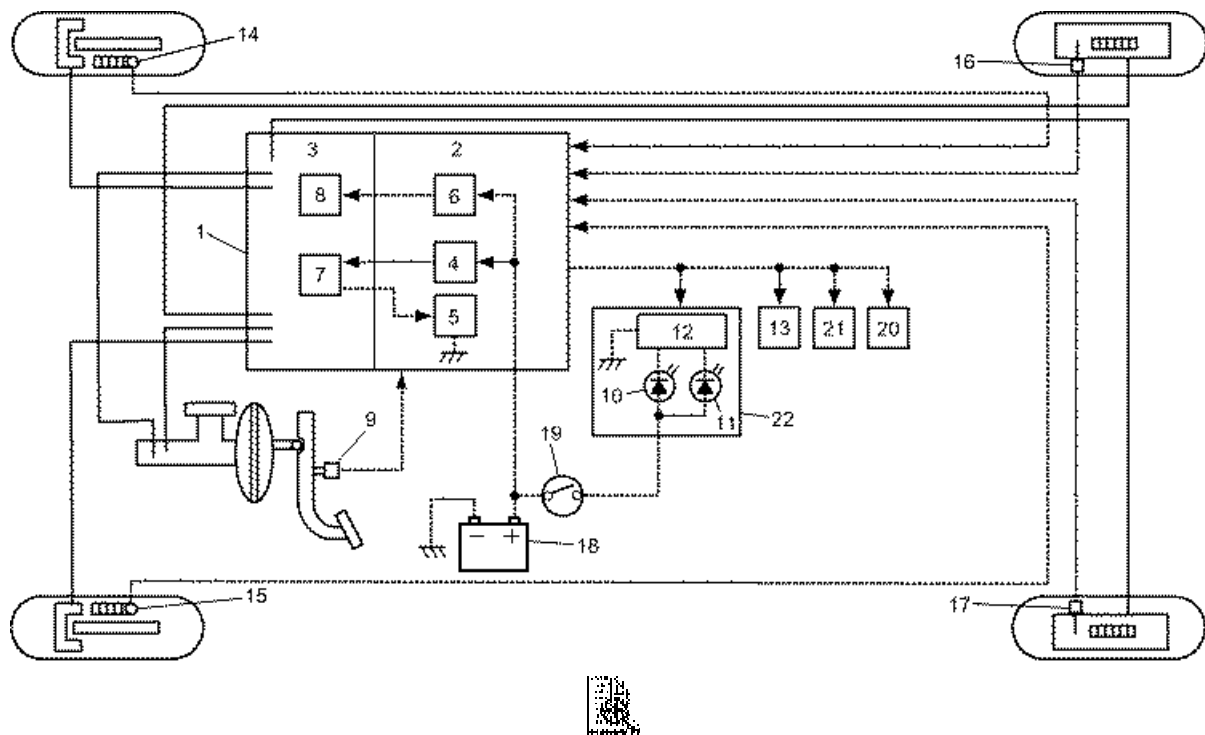

- | | | |
|--|---|------------------------------------|
| 1. ABS hydraulic unit / control module assembly | 9. Brake light switch | 17. Wheel speed sensor (Left-rear) |
| 2. ABS control module | 10. ABS warning light | 18. Battery |
| 3. ABS hydraulic unit | 11. EBD warning light (Brake warning light) | 19. Ignition switch |
| 4. Solenoid valve power supply driver (transistor) | 12. Light driver module | 20. BCM |
| 5. Solenoid valve driver (transistor) | 13. Data link connector (DLC) | 21. ECM |
| 6. Pump motor driver (transistor) | 14. Wheel speed sensor (Right-front) | 22. Combination meter |
| 7. Solenoid valve | 15. Wheel speed sensor (Left-front) | |
| 8. Pump motor | 16. Wheel speed sensor (Right-rear) | |