


9B

## DRL System Wiring Diagram (If Equipped)

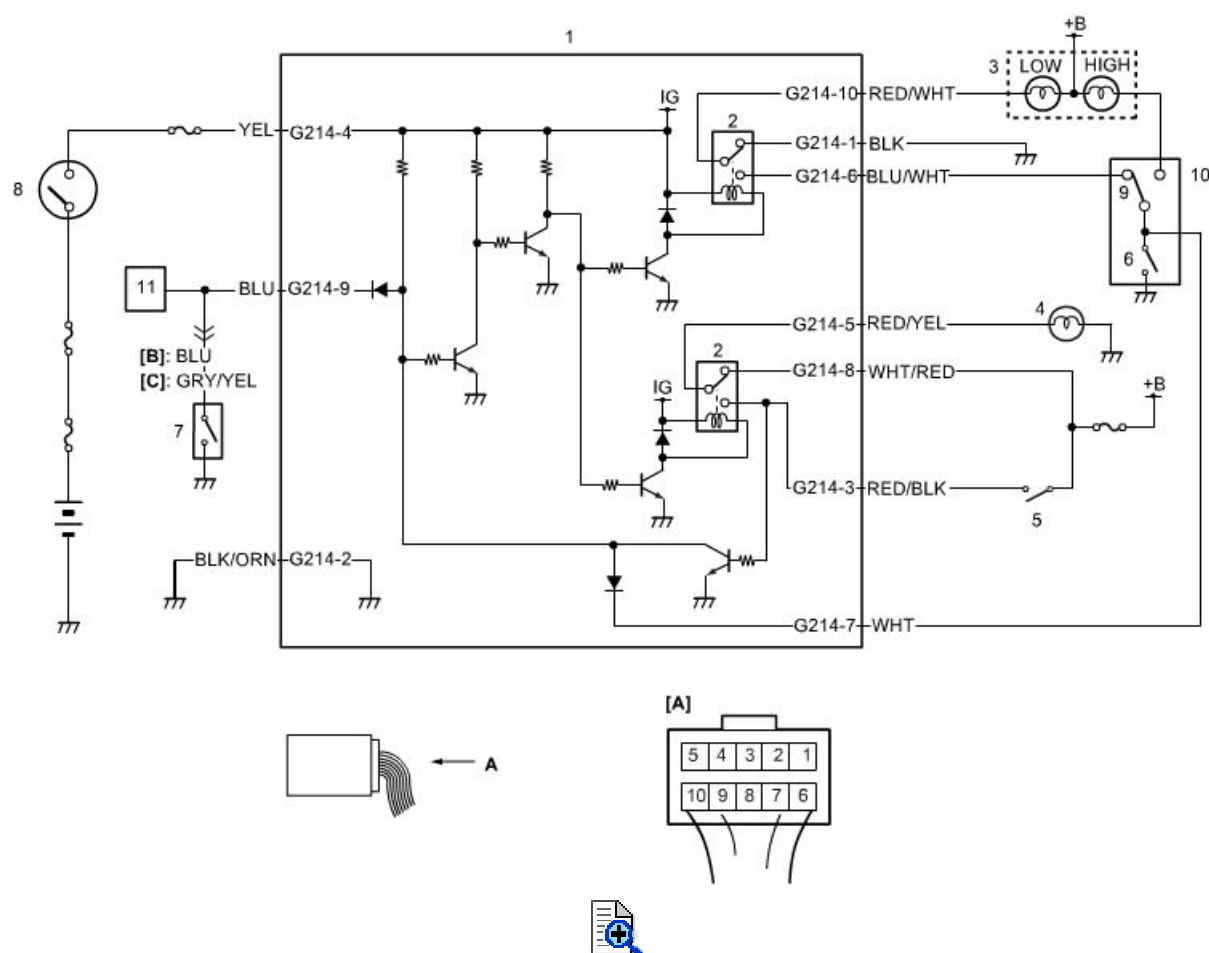

[A]: DRL controller connector (View: A)	5. Lighting switch (CLEARANCE position)
[B]: Petrol model	6. Lighting switch (HEAD position)
[C]: Diesel model	7. Engine oil pressure switch
1. DRL controller	8. Ignition switch
2. DRL relay	9. Dimmer switch
3. Headlight	10. Combination switch
4. Clearance, tail and license plate light	11. BCM (petrol model) or ECM (diesel model)